

---

# X-Series Signal Analyzers

LTE & LTE-A TDD Mode

E6680A E6680E E6681A E7515B  
M9410A M9411A M9415A M9416A M9421A  
M9410E M9411E M9415E M9416E  
M8920A M8920B  
N9000B N9010B N9020B N9021B N9030B N9032B N9040B N9041B N9042B  
S9100A S9101A S9110A



## Notices

### Copyright Notice

© Keysight Technologies 2016-2024

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

### Trademarks

WiMAX and Mobile WiMAX are US trademarks of the WiMAX Forum.

### Manual Part Number

N9082-90006

### Edition

Edition: 3, April 2024  
Published in USA

### Published by:

Keysight Technologies, Inc.  
1400 Fountaingrove Parkway  
Santa Rosa, CA 95403

### Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the US government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to US government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at

<http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the US government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the US government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

## Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

## Safety Information

### CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

## Table Of Contents

LTE & LTE-A TDD Mode User's & Programmer's Reference	1
Table Of Contents	3
1 Documentation Roadmap	99
1.1 Products Covered by this Document	100
1.2 Additional Documentation	101
2 User Interface	103
2.1 Screen Tabs	104
2.1.1 Mode/Meas/View Dialog	105
2.1.1.1 Mode	106
2.1.1.2 Application Mode Remote Commands	109
Application Mode Catalog Query (Remote Command Only)	109
Current Application Model (Remote Command Only)	110
Current Application Revision (Remote Command Only)	110
Current Application Options (Remote Command Only)	111
Application Catalog Number of Entries (Remote Command Only)	111
Application Catalog Model Numbers (Remote Command Only)	111
Application Catalog Revision (Remote Command Only)	112
Application Catalog Options (Remote Command Only)	112
ESA SA compatibility command (Remote Command only)	112
GSM Mode compatibility command (Remote Command only)	113
SA compatibility command for EMC (Remote Command only)	113
Receiver compatibility command for EMC (Remote Command only)	113
APD compatibility command for EMC (Remote Command only)	113
IF Mode compatibility command for EMC (Remote Command only)	114
2.1.1.3 Measurement	114
2.1.1.4 View	114
2.1.1.5 Sequencer	116
2.1.1.6 Screen Name	119
2.1.1.7 Delete This Screen	120
2.1.1.8 Delete All But This Screen	120
2.1.1.9 89600 VSA	121
2.1.2 Add Screen	122
2.2 Meas Bar	124
2.3 Measurement Display	128

## Table Of Contents

2.3.1 Window Title	128
2.3.2 Measurement Data	132
2.3.3 Annotation Hotspot	135
2.4 Menu Panel	137
2.4.1 Right-Click Menu	147
2.4.1.1 Add to User Menu	147
2.4.1.2 Help on this setting	147
2.4.1.3 Show SCPI Command	147
2.4.1.4 Add to SCPI Recorder	148
2.4.1.5 Start/Stop SCPI Recorder	148
2.4.1.6 Show SCPI Recorder	148
2.4.2 User Menu	148
2.5 Cancel key	149
2.6 Onscreen Keyboard key	150
2.7 Touch On/Off Key	151
2.8 Tab key	152
2.9 Local Button	153
2.10 Control Bar	154
2.11 Windows	155
2.12 Undo/Redo	156
2.13 File Functions	160
2.13.1 File Explorer	160
2.14 Help	161
2.15 Status Bar	162
2.16 Block Diagram	170
2.17 View Editor	172
2.17.1 To Create a User View	176
2.17.2 To Resize or Rearrange Windows in a View	181
2.17.3 To Delete a Window from a View	184
2.17.4 To Save a User View	185
2.17.5 To Rename a User View	190
2.17.6 To Delete a User View	190
2.17.7 To Delete All User Views	191

2.17.8 Use Case: Displaying Marker and Peak Tables	191
2.17.9 View Editor Remote Commands	192
2.18 Multiscreen	193
2.18.1 Select Screen	195
2.18.2 Screen List (Remote only command)	196
2.19 Fullscreen	197
<b>3 LTE &amp; LTE-A TDD Mode</b>	198
3.1 Measurement Commands	199
3.2 Channel Power Measurement	200
3.2.1 Views	206
3.2.1.1 Normal	207
3.2.1.2 Carrier Info	207
3.2.2 Windows	208
3.2.2.1 Graph	208
3.2.2.2 Metrics	209
3.2.2.3 Gate	212
3.2.2.4 Marker Table	213
3.2.3 Amplitude	213
3.2.3.1 Y Scale	213
Ref Value	213
Scale/Div	214
Scale Range	214
Ref Position	215
Auto Scaling	215
3.2.3.2 Attenuation	216
Full Range Atten	218
Mech Atten	219
Elec Atten	222
Adjust Atten for Min Clipping	226
Adjust Atten	226
Pre-Adjust for Min Clipping	226
Mech Atten Step	230
3.2.3.3 Range (Non-attenuator models)	231
Range	231
Adjust Range for Min Clipping	232
Pre-Adjust for Min Clipping	232
Peak-to-Average Ratio	233
Mixer Lvl Offset	234

## Table Of Contents

3.2.3.4 Signal Path	234
Presel Center	234
Preselector Adjust	236
Internal Preamp	237
LNA	238
$\mu$ W Path Control	240
Software Preselection	249
SW Preselection Type	250
SW Preselection BW	251
High Freq Prefilter	252
3.2.4 BW	253
3.2.4.1 Settings	253
Res BW	254
Video BW	256
RBW Filter Type	258
3.2.5 Display	259
3.2.5.1 Meas Display	259
Bar Graph On/Off	259
Carrier Frequency Type	259
3.2.5.2 Annotation	260
Graticule	260
Screen Annotation	260
Trace Annotation	261
Control Annotation	261
Meas Bar	261
Display Enable (Remote Command Only)	262
3.2.5.3 View	263
View	263
User View	263
Restore Layout to Default	264
Save Layout as New View	264
Re-Save User View	265
Rename User View	265
Delete User View	265
Delete All User Views	266
View Editor Remote Commands	266
View Listing Query	266
User View Listing Query	267
3.2.6 Frequency	267
3.2.6.1 Settings	267
Carrier Reference Frequency	267
Span	269
CF Step	272
Full Span (Remote Command Only)	273

3.2.7 Marker	273
3.2.7.1 Select Marker	274
3.2.7.2 Settings	274
Marker Frequency	274
Marker Mode	276
Delta Marker (Reset Delta)	277
Marker Settings Diagram	277
All Markers Off	277
3.2.7.3 Peak Search	277
Marker Frequency	277
Peak Search	277
Marker Delta	278
3.2.7.4 Properties	278
Marker Frequency	278
Relative To	278
Marker Trace	279
Marker Settings Diagram	280
3.2.8 Meas Setup	280
3.2.8.1 Settings	280
Avg/Hold Number	280
Averaging On/Off	281
Avg Mode	281
Integ BW	281
PSD Unit	282
IF Gain	283
Spur Avoidance	284
Meas Setup Summary Table	284
Auto Couple	284
Meas Preset	286
3.2.8.2 Radio	286
Direction	286
3.2.8.3 Component Carriers	287
Number of Component Carriers	287
Carrier Allocation	288
Non-Contiguous Break at	288
Configure Comp Carriers	289
Configure CCs	289
Number of Component Carriers	289
Carrier Allocation	289
Non-Contiguous Break at	290
System BW	290
Measure Carrier	290
Frequency Offset	290
Spectrum	291
UL/DL Configuration	291

## Table Of Contents

Dw/GP/Up Len	292
CHP Power Integ BW	293
ACP Power Integ BW	293
SEM Power Integ BW	294
Carrier Config Presets	295
3.2.8.4 Meas Standard	295
System BW	296
UL/DL Config	296
Dw/GP/Up Len	297
Analysis Slot	297
Meas Interval	298
CP Length	299
Measure PRACH/SRS	299
Reference Config	300
3.2.8.5 Advanced	300
Phase Noise Optimization	300
Noise Floor Extension	306
3.2.8.6 Global	310
Global Center Freq	310
Global EMC Std	311
Extend Low Band	311
Restore Defaults	312
3.2.9 Sweep	312
3.2.9.1 Sweep/Control	312
Sweep Time	313
Minimum Acquisition Time	315
Sweep/Measure	316
Restart	318
Pause/Resume	320
Abort (Remote Command Only)	321
Sweep Time Annotation (Remote Query Only)	321
3.2.9.2 Sweep Config	322
Sweep Time Rules	322
Points	322
IF Dithering	324
Image Protection	324
3.2.10 Trace	324
3.2.10.1 Select Trace	324
3.2.10.2 Trace Control	325
Trace Type	325
Clear and Write   Restart Averaging   Restart Max/Min Hold	331
View/Blank	331
3.2.10.3 Math	334
Math Function	334

Operand 1 / Operand 2	340
Offset	341
Reference	341
3.2.10.4 Detector	341
Detector	341
Detector Select Auto/Man	343
3.2.10.5 Trace Function	343
From Trace	343
To Trace	344
Copy	344
Exchange	344
Preset All Traces	345
Clear All Traces	345
3.2.10.6 Advanced	345
Measure Trace	346
3.3 Occupied BW Measurement	347
3.3.1 Views	349
3.3.1.1 OBW Results	350
3.3.1.2 OBW Boundaries	351
3.3.1.3 Gate	351
3.3.2 Windows	351
3.3.2.1 Graph	351
3.3.2.2 Metrics - OBW Results	352
3.3.2.3 Metrics - OBW Boundaries	354
3.3.2.4 Gate	355
3.3.3 Amplitude	356
3.3.3.1 Y Scale	356
Ref Value	356
Scale/Div	356
Scale Range	357
Ref Position	358
Auto Scaling	358
3.3.3.2 Attenuation	359
Full Range Atten	361
Mech Atten	362
Elec Atten	364
Adjust Atten for Min Clipping	368
Adjust Atten	368
Pre-Adjust for Min Clipping	369
Mech Atten Step	373
3.3.3.3 Range (Non-attenuator models)	374

## Table Of Contents

Range	374
Adjust Range for Min Clipping	375
Pre-Adjust for Min Clipping	375
Peak-to-Average Ratio	376
Mixer Lvl Offset	377
3.3.3.4 Signal Path	377
Presel Center	377
Preselector Adjust	379
Internal Preamp	380
LNA	381
$\mu$ W Path Control	383
Software Preselection	392
SW Preselection Type	393
SW Preselection BW	394
High Freq Prefilter	395
3.3.4 BW	396
3.3.4.1 Settings	396
Res BW	397
Video BW	398
RBW Filter Type	399
3.3.5 Display	400
3.3.5.1 Meas Display	400
x dB BW Boundaries On/Off	400
Boundary Frequency	401
3.3.5.2 Annotation	401
Graticule	401
Screen Annotation	402
Trace Annotation	402
Control Annotation	403
Meas Bar	403
Display Enable (Remote Command Only)	403
3.3.5.3 View	405
View	405
User View	405
Restore Layout to Default	406
Save Layout as New View	406
Re-Save User View	406
Rename User View	407
Delete User View	407
Delete All User Views	407
View Editor Remote Commands	408
View Listing Query	408
User View Listing Query	408
3.3.6 Frequency	409

3.3.6.1 Settings	409
Carrier Reference Frequency	409
Span	410
Full Span (Remote Command Only)	411
3.3.7 Marker	412
3.3.7.1 Select Marker	412
3.3.7.2 Settings	412
Marker Frequency	412
Marker Mode	414
Delta Marker (Reset Delta)	415
Marker Settings Diagram	415
All Markers Off	415
3.3.7.3 Peak Search	415
Marker Frequency	416
Peak Search	416
Marker Delta	416
3.3.7.4 Properties	416
Marker Frequency	417
Relative To	417
Marker Trace	417
Marker Settings Diagram	418
3.3.8 Meas Setup	418
3.3.8.1 Settings	418
Avg/Hold Num	418
Averaging On/Off	419
Average Mode	419
% of OBW Power	420
Power Ref	420
x dB	421
Power Integration Method	421
Spur Avoidance	422
Meas Setup Summary Table	423
Auto Couple	423
Meas Preset	425
Max Hold (Remote Command Only)	425
3.3.8.2 Limits	425
Limit Test	425
Bandwidth	426
3.3.8.3 Radio	426
Direction	426
eMTC Analysis	427
Interfering Signal Present	427
Freq Offset from Edge	428
Span	428

## Table Of Contents

Offset Side	428
Non-Contiguous Interference Region	429
3.3.8.4 Component Carriers	429
Number of Component Carriers	429
Carrier Allocation	430
Non-Contiguous Break at	430
Configure Comp Carriers	431
Configure CCs	431
Number of Component Carriers	431
Carrier Allocation	431
Non-Contiguous Break at	432
System BW	432
Measure Carrier	432
Frequency Offset	432
Spectrum	433
UL/DL Configuration	433
Dw/GP/Up Len	434
Sidelink Mode	435
CHP Power Integ BW	435
ACP Power Integ BW	436
SEM Power Integ BW	437
Carrier Config Presets	437
Max BTS RF Bandwidth	438
Carrier Spacing Delta	438
Preset ETC	438
ETC1 Attributes	439
Max Number of Component Carriers	439
Component Carrier System BW	439
Component Carrier Narrowest BW	440
ETC2 Attributes	440
Max Number of Component Carriers	440
Carrier Side (with BTS RF BW)	440
Component Carrier System BW	441
ETC3 CC Bandwidth	441
3.3.8.5 Meas Standard	442
System BW	442
UL/DL Config	443
Dw/GP/Up Len	443
Analysis Slot	444
Meas Interval	444
CP Length	445
Measure PRACH/SRS	446
Reference Config	446
3.3.8.6 Advanced	447
Noise Floor Extension	447
IF Gain	452
3.3.8.7 Global	453

Global Center Freq	453
Global EMC Std	454
Extend Low Band	454
Restore Defaults	455
3.3.9 Sweep	455
3.3.9.1 Sweep/Control	455
Sweep Time	455
Minimum Acquisition Time	457
Sweep/Measure	458
Restart	460
Pause/Resume	463
Abort (Remote Command Only)	463
Sweep Time Annotation (Remote Query Only)	464
3.3.9.2 Sweep Config	464
Sweep Time Rules	464
Points	465
IF Dithering	466
Image Protection	467
3.3.10 Trace	467
3.3.10.1 Select Trace	473
3.3.10.2 Trace Control	473
Trace Type	474
Clear and Write   Restart Averaging   Restart Max/Min Hold	479
View/Blank	479
3.3.10.3 Math	482
Math Function	482
Operand 1 / Operand 2	488
Offset	489
Reference	489
3.3.10.4 Detector	489
Detector	489
Detector Select Auto/Man	491
3.3.10.5 Trace Function	491
From Trace	492
To Trace	492
Copy	492
Exchange	493
Preset All Traces	493
Clear All Traces	493
3.3.10.6 Advanced	494
Measure Trace	494
3.4 ACP Measurement	495
3.4.1 Measurement Results for n = 1, or no Index Specified	498

## Table Of Contents

3.4.2	Measurement Results for n = 2	501
3.4.3	Measurement Results for n = 3	502
3.4.4	Measurement Results for n = 7	503
3.4.5	Measurement Results for n = 8	504
3.4.6	Views	506
3.4.6.1	Normal	507
3.4.6.2	Carrier Info	507
3.4.7	Windows	507
3.4.7.1	Graph	507
3.4.7.2	Metrics	508
3.4.7.3	Gate	511
3.4.7.4	Marker Table	511
3.4.8	Amplitude	511
3.4.8.1	Y Scale	512
	Ref Value	512
	Scale/Div	512
	Scale Range	513
	Ref Position	513
	Auto Scaling	514
3.4.8.2	Attenuation	514
	Full Range Atten	516
	Mech Atten	517
	Elec Atten	520
	Adjust Atten for Min Clipping	524
	Adjust Atten	524
	Pre-Adjust for Min Clipping	525
	Mech Atten Step	529
3.4.8.3	Range (Non-attenuator models)	530
	Range	530
	Adjust Range for Min Clipping	531
	Pre-Adjust for Min Clipping	531
	Peak-to-Average Ratio	532
	Mixer Lvl Offset	533
3.4.8.4	Signal Path	533
	Presel Center	533
	Preselector Adjust	535
	Internal Preamp	536
	LNA	537
	μW Path Control	539
	Software Preselection	548
	SW Preselection Type	549

SW Preselection BW	550
High Freq Prefilter	551
3.4.9 BW	552
3.4.9.1 Settings	552
Res BW	553
Video BW	555
RBW Filter Type	556
RBW Filter BW	557
3.4.10 Display	558
3.4.10.1 Meas Display	558
Bar Graph On/Off	558
Power Results	558
Carrier Frequency Type	559
3.4.10.2 Annotation	559
Graticule	559
Screen Annotation	560
Trace Annotation	560
Control Annotation	561
Meas Bar	561
Display Enable (Remote Command Only)	561
3.4.10.3 View	563
View	563
User View	563
Restore Layout to Default	564
Save Layout as New View	564
Re-Save User View	564
Rename User View	564
Delete User View	565
Delete All User Views	565
View Editor Remote Commands	565
View Listing Query	566
User View Listing Query	566
3.4.11 Frequency	566
3.4.11.1 Settings	567
Carrier Reference Frequency	567
Span	569
3.4.12 Marker	571
3.4.12.1 Select Marker	571
3.4.12.2 Settings	572
Marker Frequency	572
Marker Mode	573
Delta Marker (Reset Delta)	574
Marker Settings Diagram	574

## Table Of Contents

All Markers Off	574
Couple Markers	575
3.4.12.3 Peak Search	575
Marker Frequency	575
Peak Search	575
Next Peak	576
Next Pk Right	576
Next Pk Left	576
Minimum Peak	577
Pk-Pk Search	577
Marker Delta	578
3.4.12.4 Properties	578
Marker Frequency	578
Relative To	578
Marker Trace	579
Marker Settings Diagram	580
3.4.13 Meas Setup	580
3.4.13.1 Settings	580
Avg   Hold Number	580
Averaging On/Off	580
Avg Mode	581
Meas Method	582
Carrier/Offset/Limits Config	583
Number of Carriers	583
Couple to #1	583
Carrier Pwr Present	584
Carrier Spacing	585
Measurement Noise Bandwidth	586
Method for Carrier	587
Filter Alpha for Carrier	588
Component Carriers	588
Number of Component Carriers	588
Carrier Allocation	589
Non-Contiguous Break at	589
Configure Comp Carriers	590
Configure CCs	590
Number of Component Carriers	590
Carrier Allocation	590
Non-Contiguous Break at	591
System BW	591
Measure Carrier	591
Frequency Offset	591
Spectrum	592
UL/DL Configuration	592
Dw/GP/Up Len	593
Sidelink Mode	594
CHP Power Integ BW	594

ACP Power Integ BW	595
SEM Power Integ BW	596
Carrier Config Presets	596
Max BTS RF Bandwidth	597
Carrier Spacing Delta	597
Preset ETC	597
ETC1 Attributes	598
Max Number of Component Carriers	598
Component Carrier System BW	598
Component Carrier Narrowest BW	599
ETC2 Attributes	599
Max Number of Component Carriers	599
Carrier Side (with BTS RF BW)	599
Component Carrier System BW	600
ETC3 CC Bandwidth	600
Offset	601
Offset Frequency Define	601
Offset Freq	604
Integ BW	606
Offset Side	607
Method	608
Filter Alpha	609
Advanced (Offset)	609
Offset Freq	609
Res BW	610
Video BW	611
Filter Type	612
Filter BW	612
Limits	613
Limit Test	613
Offset Freq	613
Abs Limit	613
Rel Limit (Car)	614
Positive Offset Limit (Remote Command only)	615
Negative Offset Limit(Remote Command only)	616
Rel Limit (PSD)	617
Fail Mask	618
Inner Offset	619
Offset Frequency Define	619
Offset Freq	621
Integ BW	623
Offset Side	623
Method	624
Filter Alpha	625
Advanced (Inner Offset)	625
Offset Freq	625
Res BW	625
Video BW	626
Filter Type	627

## Table Of Contents

Filter BW	627
Power Ref Type	628
Inner Limits	630
Limit Test	630
Offset Freq	630
Abs Limit	630
Rel Limit (Car)	631
Rel Limit (PSD)	631
Fail Mask	632
Max Num of Offsets	633
Limit Test	633
Spur Avoidance	634
Meas Setup Summary Table	635
Auto Couple	635
Meas Preset	637
3.4.13.2 Reference	637
Carrier/Offset/Limits Config	637
Number of Carriers	637
Couple to #1	637
Carrier Pwr Present	638
Carrier Spacing	639
Measurement Noise Bandwidth	640
Method for Carrier	641
Filter Alpha for Carrier	641
Offset	642
Offset Frequency Define	642
Offset Freq	645
Integ BW	647
Offset Side	648
Method	649
Filter Alpha	650
Advanced (Offset)	650
Offset Freq	650
Res BW	651
Video BW	652
Filter Type	653
Filter BW	653
Limits	654
Limit Test	654
Offset Freq	654
Abs Limit	654
Rel Limit (Car)	655
Positive Offset Limit (Remote Command only)	656
Negative Offset Limit (Remote Command only)	657
Rel Limit (PSD)	658
Fail Mask	659
Inner Offset	660
Offset Frequency Define	660
Offset Freq	662

Integ BW	664
Offset Side	664
Method	665
Filter Alpha	666
Advanced (Inner Offset)	666
Offset Freq	666
Res BW	666
Video BW	667
Filter Type	668
Filter BW	668
Power Ref Type	669
Inner Limits	671
Limit Test	671
Offset Freq	671
Abs Limit	671
Rel Limit (Car)	672
Rel Limit (PSD)	672
Fail Mask	673
Reference Carrier (Carrier Index)	674
Measurement Type	676
Power Ref	676
Total Power Ref	680
PSD Ref	682
PSD Unit	684
<b>3.4.13.3 Radio</b>	<b>684</b>
Direction	684
eMTC Analysis	685
Interfering Signal Present	685
Freq Offset from Edge	686
Span	686
Offset Side	686
Non-Contiguous Interference Region	687
<b>3.4.13.4 Component Carriers</b>	<b>687</b>
Number of Component Carriers	687
Carrier Allocation	688
Non-Contiguous Break at	688
Configure Comp Carriers	689
Configure CCs	689
Number of Component Carriers	689
Carrier Allocation	689
Non-Contiguous Break at	689
System BW	689
Measure Carrier	690
Frequency Offset	690
Spectrum	691
UL/DL Configuration	691
Dw/GP/Up Len	692
CHP Power Integ BW	692

## Table Of Contents

ACP Power Integ BW	693
SEM Power Integ BW	694
Carrier Config Presets	695
Preset ETC	695
Max BTS RF Bandwidth	695
Carrier Spacing Delta	695
ETC1 Attributes	696
Max Number of Component Carriers	696
Component Carrier System BW	696
Component Carrier Narrowest BW	697
ETC2 Attributes	697
Max Number of Component Carriers	697
Carrier Side (with BTS RF BW)	697
Component Carrier System BW	698
ETC3 CC Bandwidth	698
3.4.13.5 Meas Standard	699
System BW	699
UL/DL Config	700
Dw/GP/Up Len	700
Analysis Slot	701
Meas Interval	701
CP Length	702
Measure PRACH/SRS	703
Reference Config	703
3.4.13.6 Advanced	704
Phase Noise Opt	704
Noise Correction	710
Noise Floor Extension	711
Fast Power RBW Mode	716
Fast Power IF Gain Offset	716
Integration BW	716
3.4.13.7 Global	717
Global Center Freq	717
Global EMC Std	718
Extend Low Band	718
Restore Defaults	719
3.4.13.8 Offset RRC Weighting (Backwards Compatibility SCPI)	719
3.4.13.9 Offset Filter Alpha (Backward Compatibility SCPI)	720
3.4.13.10 Method for Carrier (Backward Compatibility SCPI)	720
3.4.14 Sweep	721
3.4.14.1 Sweep/Control	721
Sweep Time	721
Minimum Acquisition Time	723
Sweep/Measure	724
Restart	726

Pause/Resume	729
Abort (Remote Command Only)	729
Sweep Time Annotation (Remote Query Only)	730
3.4.14.2 Sweep Config	730
Sweep Time Rules	730
Points	731
3.4.14.3 X Scale	732
Auto Scaling	732
3.4.15 Trace	733
3.4.15.1 Select Trace	733
3.4.15.2 Trace Control	734
Trace Type	734
Clear and Write   Restart Averaging   Restart Max/Min Hold	739
View/Blank	740
3.4.15.3 Math	742
Math Function	742
Operand 1 / Operand 2	749
Offset	750
Reference	750
3.4.15.4 Detector	750
Detector	750
Detector Select Auto/Man	752
3.4.15.5 Trace Function	753
From Trace	753
To Trace	753
Copy	753
Exchange	754
Preset All Traces	754
Clear All Traces	754
3.4.15.6 Advanced	755
Measure Trace	755
3.5 SEM Measurement	756
3.5.1 Results for n = 1	758
3.5.2 Results for n = 2-4	761
3.5.3 Results for n = 5	761
3.5.4 Results for n = 6	764
3.5.5 Results for n = 7-11	765
3.5.6 Results for n = 12	767
3.5.7 Results for n = 13	767
3.5.8 Results for n = 14	769

## Table Of Contents

3.5.9 Results for n = 15	770
3.5.10 Results for n = 16	771
3.5.11 Results for n = 17	771
3.5.12 Results for n = 18-20	771
3.5.13 Results for n = 21	771
3.5.14 Results for n = 22	777
3.5.15 Number of Offsets	777
3.5.16 Views	778
3.5.16.1 Abs Pwr Freq	779
3.5.16.2 Rel Pwr Freq	779
3.5.16.3 Integrated Power	780
3.5.16.4 Carrier Info	780
3.5.17 Windows	780
3.5.17.1 Graph	780
Graph Window in Abs Pwr Freq View	781
Graph Window in Rel Pwr Freq View	782
Graph Window in Integrated Power View	783
Graph Window in Carrier Info View	784
3.5.17.2 Table	785
Table Window in Abs Pwr Freq View	786
Table Window in Rel Pwr Freq View	788
Table Window in Integrated Power View	791
Table Window in Carrier Info View	794
3.5.17.3 Gate	795
3.5.18 Amplitude	796
3.5.18.1 Y Scale	796
Ref Value	796
Scale/Div	796
Scale Range	797
Ref Position	798
Auto Scaling	798
3.5.18.2 Attenuation	799
Full Range Atten	801
Mech Atten	802
Elec Atten	804
Adjust Atten for Min Clipping	808
Adjust Atten	808
Pre-Adjust for Min Clipping	809
Mech Atten Step	813

3.5.18.3 Range (Non-attenuator models)	814
Range	814
Adjust Range for Min Clipping	815
Pre-Adjust for Min Clipping	815
Peak-to-Average Ratio	816
Mixer Lvl Offset	817
3.5.18.4 Signal Path	817
Presel Center	817
Preselector Adjust	819
Internal Preamp	820
LNA	821
$\mu$ W Path Control	823
Software Preselection	832
SW Preselection Type	833
SW Preselection BW	834
High Freq Prefilter	835
3.5.19 BW	836
3.5.19.1 Settings	836
RBW Filter Type	837
3.5.20 Display	837
3.5.20.1 Meas Display	837
Limit Lines	837
Carrier Frequency Type	838
3.5.20.2 Annotation	838
Graticule	838
Screen Annotation	839
Trace Annotation	839
Control Annotation	840
Meas Bar	840
Display Enable (Remote Command Only)	840
3.5.20.3 View	842
3.5.21 Frequency	842
3.5.21.1 Settings	842
Carrier Reference Frequency	842
3.5.22 Marker	844
3.5.22.1 Select Marker	844
3.5.22.2 Settings	844
Marker Frequency	845
Marker Mode	846
All Markers Off	847
Couple Markers	847
3.5.22.3 Properties	847

## Table Of Contents

Marker Frequency	847
Marker Trace	847
3.5.23 Meas Setup	848
3.5.23.1 Settings	848
Avg/Hold Num	848
Averaging On/Off	849
Meas Method	849
RRC Filter Alpha	850
Non-Contiguous Meas Region	850
Sweep Type Rules	850
Spur Avoidance	851
Offset/Limits Config Table	852
Offset (Bandwidth)	853
Offset Freq Define	853
Offset Detector	857
Offset Average Type (Remote Command Only)	858
Start Freq	859
Stop Freq	863
Res BW	865
Meas BW	867
Video BW	868
VBW/RBW	869
Offset (Sweep)	870
Offset Freq Define	870
Offset Detector	871
Start Freq	871
Stop Freq	871
Sweep Time	871
Minimum Acquisition Time	872
Sweep Time Annotation (Remote Query Only)	873
Sweep Type	874
Offset Side	875
Limits	876
Start Freq	876
Stop Freq	877
Abs Start	877
Abs Stop	879
Rel Start	883
Rel Stop	885
Fail Mask	887
Show Abs2 Limit	889
Abs2 Start	889
Abs2 Stop	890
Fail Mask2	891
Inner Offset (BW)	892
Offset Freq Define	892
Offset Detector	895
Cumulate Mask	895

Cumulate Mask Stop Frequency	896
Start Freq	896
Stop Freq	897
Res BW	898
Meas BW	899
Video BW	900
VBW/RBW	901
Inner Offset (Sweep)	902
Offset Freq Define	902
Offset Detector	902
Cumulate Mask	902
Cumulate Mask Stop Frequency	902
Start Freq	902
Stop Freq	902
Sweep Time	902
Minimum Acquisition Time	904
Sweep Time Annotation (Remote Query Only)	905
Sweep Type	905
Offset Side	906
Inner Offset (Limits)	907
Start Freq	907
Stop Freq	907
Abs Start	908
Abs Stop	909
Rel Start	910
Rel Stop	911
Fail Mask	911
Show Abs2 Limit	912
Abs2 Start	912
Abs2 Stop	913
Fail Mask2	914
Meas Setup Summary Table	915
Auto Couple	915
Meas Preset	917
3.5.23.2 Carrier	917
Integ BW	917
Span	918
Sweep Time	920
Minimum Acquisition Time	922
Sweep Time Annotation (Remote Query Only)	923
Sweep Type	923
Res BW	924
Video BW	926
VBW/RBW	927
Channel Detector	928
Reference Carrier Average Type (Remote Command Only)	929
Offset/Limits Config Table	929
3.5.23.3 Reference	929

## Table Of Contents

Measurement Type	929
Power Ref	930
Carrier Index	936
Total Power Ref	936
PSD Ref	937
Spectrum Pk Ref	937
Measure All Ref Carriers	938
Offset/Limits Config Table	938
3.5.23.4 Radio	938
Direction	939
Interfering Signal Present	939
Freq Offset from Edge	940
Span	940
Offset Side	940
Non-Contiguous Interference Region	941
3.5.23.5 Component Carriers	941
Number of Component Carriers	941
Carrier Allocation	942
Non-Contiguous Break at	942
Configure Comp Carriers	943
Configure CCs	943
Number of Component Carriers	943
Carrier Allocation	943
Non-Contiguous Break at	943
System BW	943
Measure Carrier	944
Frequency Offset	944
Spectrum	945
UL/DL Configuration	945
Dw/GP/Up Len	946
CHP Power Integ BW	946
ACP Power Integ BW	947
SEM Power Integ BW	948
Carrier Config Presets	949
Preset ETC	949
Max BTS RF Bandwidth	949
Carrier Spacing Delta	949
ETC1 Attributes	950
Max Number of Component Carriers	950
Component Carrier System BW	950
Component Carrier Narrowest BW	951
ETC2 Attributes	951
Max Number of Component Carriers	951
Carrier Side (with BTS RF BW)	951
Component Carrier System BW	952
ETC3 CC Bandwidth	952
3.5.23.6 Meas Standard	953
System BW	953

UL/DL Config	954
Dw/GP/Up Len	954
Analysis Slot	955
Meas Interval	955
CP Length	956
Measure PRACH/SRS	957
Reference Config	957
3.5.23.7 Advanced	958
Noise Floor Extension	958
Enable Wideband IF for FFT	962
3.5.23.8 Global	962
Global Center Freq	963
Global EMC Std	963
Extend Low Band	964
Restore Defaults	964
3.5.24 Sweep	965
3.5.24.1 Sweep/Control	965
Sweep/Measure	965
Restart	967
Pause/Resume	969
Abort (Remote Command Only)	970
3.5.24.2 X Scale	970
Ref Value	970
Scale/Div	971
Ref Position	971
Auto Scaling	972
3.5.24.3 Sweep Config	972
Points	972
IF Dithering	973
Image Protection	973
3.5.25 Trace	973
3.5.25.1 Select Trace	974
3.5.25.2 Trace Control	974
Trace Type	975
Clear and Write   Restart Averaging   Restart Max/Min Hold	980
View/Blank	980
3.5.25.3 Math	983
Math Function	983
Operand 1 / Operand 2	989
Offset	990
Reference	990
3.5.25.4 Trace Function	990
From Trace	991

## Table Of Contents

To Trace	991
Copy	991
Exchange	992
Preset All Traces	992
Clear All Traces	992
3.5.25.5 Advanced	993
Measure Trace	993
3.6 Spurious Emissions Measurement	994
3.6.1 Views	996
3.6.1.1 Graph + Metrics	996
3.6.1.2 All Ranges	996
3.6.2 Windows	997
3.6.2.1 Graph	997
3.6.2.2 Table	998
3.6.2.3 All Range Table	999
3.6.2.4 Gate	1000
3.6.2.5 Marker Table	1000
3.6.3 Amplitude	1000
3.6.3.1 Y Scale	1000
Ref Value	1001
Scale/Div	1001
Scale Range	1002
Ref Position	1002
Auto Scaling	1002
3.6.3.2 Attenuation	1003
Full Range Atten	1005
Mech Atten	1006
Elec Atten	1009
Adjust Atten for Min Clipping	1013
Adjust Atten	1013
Pre-Adjust for Min Clipping	1014
Mech Atten Step	1018
3.6.3.3 Range (Non-attenuator models)	1019
Range	1019
Adjust Range for Min Clipping	1020
Pre-Adjust for Min Clipping	1020
Peak-to-Average Ratio	1021
Mixer Lvl Offset	1022
3.6.3.4 Signal Path	1022
Presel Center	1022
Preselector Adjust	1024

Internal Preamp	1025
LNA	1026
μW Path Control	1028
Software Preselection	1037
SW Preselection Type	1038
SW Preselection BW	1039
High Freq Prefilter	1040
3.6.4 BW	1041
3.6.5 Display	1041
3.6.5.1 Meas Display	1041
Center Frequency On/Off	1042
3.6.5.2 Annotation	1042
Graticule	1042
Screen Annotation	1042
Trace Annotation	1043
Control Annotation	1043
Meas Bar	1044
Display Enable (Remote Command Only)	1044
3.6.5.3 View	1045
Views	1045
Graph + Metrics	1046
All Ranges	1046
User View	1046
Restore Layout to Default	1047
Save Layout as New View	1047
Re-Save User View	1048
Rename User View	1048
Delete User View	1048
Delete All User Views	1049
View Editor Remote Commands	1049
View Listing Query	1049
User View Listing Query	1050
3.6.6 Frequency	1050
3.6.6.1 Settings	1050
Carrier Reference Frequency	1050
3.6.7 Marker	1052
3.6.7.1 Select Marker	1052
3.6.7.2 Settings	1053
Marker Frequency	1053
Marker Mode	1054
Delta Marker (Reset Delta)	1055
Marker Settings Diagram	1055
All Markers Off	1056
Couple Markers	1056

## Table Of Contents

3.6.7.3 Peak Search	1056
Marker Frequency	1057
Peak Search	1057
Next Peak	1057
Next Pk Right	1057
Next Pk Left	1058
Minimum Peak	1058
Pk-Pk Search	1058
Marker Delta	1059
3.6.7.4 Properties	1059
Marker Frequency	1059
Relative To	1059
Marker Trace	1060
Marker Settings Diagram	1061
3.6.8 Meas Setup	1061
3.6.8.1 Settings	1061
Avg/Hold Num	1061
Averaging On/Off	1061
Average Mode	1062
Average Type	1062
Meas Type	1063
Spur	1064
Range	1065
Spur Report Mode	1065
Apply Carrier Config to Range Table	1066
Range Settings	1066
Bandwidth	1066
Frequency Range	1066
Enabled	1067
Start Freq	1068
Stop Freq	1069
Span	1070
Res BW	1070
Meas BW	1072
Video BW	1073
Filter Type	1074
Enabled	1074
Frequency Type	1075
Abs Start Freq	1076
Abs Stop Freq	1076
Offset Start Freq	1077
Offset Stop Freq	1078
Offset Side	1079
Filter/Atten	1079
Frequency Range	1079
Enabled	1080
Start Freq	1080

Stop Freq	1080
Center Frequency	1080
Span	1080
Attenuation	1081
IF Gain	1081
Enabled	1083
Res BW	1083
Meas BW	1083
Video BW	1083
Filter Type	1084
Attenuation	1084
IF Gain	1085
Detector/Sweep	1085
Frequency Range	1085
Enabled	1086
Start Freq	1086
Stop Freq	1086
Center Frequency	1086
Span	1086
Sweep Time	1086
Points	1087
Detector 1	1088
Detector 2	1089
Limits	1090
Frequency Range	1090
Enabled	1090
Start Freq	1090
Stop Freq	1090
Center Frequency	1090
Span	1091
Abs Start Limit	1091
Abs Stop Limit	1092
Peak Excursion	1093
Pk Threshold	1094
Meas Setup Summary Table	1094
Auto Couple	1094
Meas Preset	1096
Fast Spurious Meas (Remote Command only)	1096
<b>3.6.8.2 Radio</b>	<b>1097</b>
Direction	1097
Interfering Signal Present	1098
Freq Offset from Edge	1098
Span	1098
Offset Side	1099
Non-Contiguous Interference Region	1099
<b>3.6.8.3 Component Carriers</b>	<b>1099</b>
Number of Component Carriers	1099
Carrier Allocation	1100

## Table Of Contents

Non-Contiguous Break at	1100
Configure Comp Carriers	1101
Configure CCs	1101
Number of Component Carriers	1101
Carrier Allocation	1101
Non-Contiguous Break at	1102
System BW	1102
Measure Carrier	1102
Frequency Offset	1102
Spectrum	1103
UL/DL Configuration	1103
Dw/GP/Up Len	1104
CHP Power Integ BW	1105
ACP Power Integ BW	1105
SEM Power Integ BW	1106
Carrier Config Presets	1107
Preset ETC	1107
Max BTS RF Bandwidth	1107
Carrier Spacing Delta	1108
ETC1 Attributes	1108
Max Number of Component Carriers	1108
Component Carrier System BW	1109
Component Carrier Narrowest BW	1109
ETC2 Attributes	1109
Max Number of Component Carriers	1110
Carrier Side (with BTS RF BW)	1110
Component Carrier System BW	1110
ETC3 CC Bandwidth	1111
3.6.8.4 Meas Standard	1111
System BW	1112
UL/DL Config	1112
Dw/GP/Up Len	1113
Analysis Slot	1114
Meas Interval	1114
CP Length	1115
Measure PRACH/SRS	1115
Reference Config	1116
3.6.8.5 Advanced	1116
Noise Floor Extension	1116
3.6.8.6 Global	1120
Global Center Freq	1120
Global EMC Std	1121
Extend Low Band	1122
Restore Defaults	1122
3.6.9 Sweep	1123
3.6.9.1 Sweep/Control	1123
Sweep/Measure	1123

Restart	1125
Pause/Resume	1127
Abort (Remote Command Only)	1128
3.6.9.2 Sweep Config	1128
Sweep Type	1128
Sweep Time Rules	1129
3.6.10 Trace	1130
3.6.10.1 Select Trace	1136
3.6.10.2 Trace Control	1136
Trace Type	1137
Clear and Write   Restart Averaging   Restart Max/Min Hold	1142
View/Blank	1142
3.6.10.3 Math	1145
Math Function	1145
Operand 1 / Operand 2	1151
Offset	1152
Reference	1152
3.6.10.4 Trace Function	1152
From Trace	1153
To Trace	1153
Copy	1153
Exchange	1154
Preset All Traces	1154
Clear All Traces	1154
3.6.10.5 Advanced	1155
Measure Trace	1155
3.7 Transmit On Off Power Measurement	1156
3.7.1 Views	1164
3.7.1.1 Burst	1165
3.7.1.2 Rise&Fall	1166
3.7.2 Windows	1166
3.7.2.1 RF Envelope	1166
3.7.2.2 Rise	1167
3.7.2.3 Fall	1167
3.7.2.4 Metrics	1167
3.7.3 Amplitude	1170
3.7.3.1 Y Scale	1170
Ref Value	1170
Scale/Div	1171
Ref Position	1172

## Table Of Contents

Auto Scaling	1173
3.7.3.2 Attenuation	1174
Full Range Atten	1176
Mech Atten	1177
Elec Atten	1180
Adjust Atten for Min Clipping	1184
Adjust Atten	1184
Pre-Adjust for Min Clipping	1185
Mech Atten Step	1189
3.7.3.3 Range (Non-attenuator models)	1190
Range	1190
Adjust Range for Min Clipping	1191
Pre-Adjust for Min Clipping	1191
Peak-to-Average Ratio	1192
Mixer Lvl Offset	1193
3.7.3.4 Signal Path	1193
Presel Center	1193
Preselector Adjust	1195
Internal Preamp	1196
LNA	1197
μW Path Control	1199
Software Preselection	1208
SW Preselection Type	1209
SW Preselection BW	1210
High Freq Prefilter	1211
3.7.4 BW	1212
3.7.4.1 Settings	1213
Info BW	1213
3.7.5 Display	1214
3.7.5.1 Meas Display	1214
Trigger Line	1214
Burst Line	1214
Burst Timing Indicator Line	1215
Ramp Lines	1215
3.7.5.2 Views	1216
Burst	1217
Rise&Fall	1217
3.7.5.3 Annotation	1217
Graticule	1217
Screen Annotation	1218
Trace Annotation	1218
Control Annotation	1219
Meas Bar	1219
Display Enable (Remote Command Only)	1220

3.7.6 Freq	1221
3.7.6.1 Settings	1221
Carrier Reference Frequency	1221
3.7.7 Marker	1222
3.7.7.1 Select Marker	1222
3.7.7.2 Settings	1223
Marker Time	1223
Marker Mode	1225
Delta Marker (Reset Delta)	1226
Marker Settings Diagram	1226
All Markers Off	1227
Couple Markers	1227
3.7.7.3 Peak Search	1228
Marker Time	1229
Peak Search	1229
Marker Delta	1229
3.7.7.4 Properties	1229
Marker Time	1230
Relative To	1230
Marker Trace	1230
Marker Settings Diagram	1231
3.7.8 Meas Setup	1231
3.7.8.1 Settings	1231
Average/Hold Number	1231
Averaging Mode	1232
Average Type	1233
Component Carrier	1233
Ramp Time Length	1234
Auto Timing Adjustment	1234
Off Power Meas Rules	1235
IF Gain	1235
Spur Avoidance	1237
Meas Setup Summary Table	1237
Meas Preset	1238
Ignore Burst Found (SCPI only)	1238
3.7.8.2 Radio	1238
Direction	1238
3.7.8.3 Component Carriers	1239
Number of Component Carriers	1239
Carrier Allocation	1240
Non-Contiguous Break at	1240
Configure Comp Carriers	1241
Configure CCs	1241
Number of Component Carriers	1241

## Table Of Contents

Carrier Allocation	1241
Non-Contiguous Break at	1241
System BW	1241
Measure Carrier	1242
Frequency Offset	1242
Spectrum	1243
UL/DL Configuration	1243
Dw/GP/Up Len	1244
CHP Power Integ BW	1244
ACP Power Integ BW	1245
SEM Power Integ BW	1246
Carrier Config Presets	1247
Max BTS RF Bandwidth	1247
Carrier Spacing Delta	1247
Preset ETC	1248
ETC1 Attributes	1248
Max Number of Component Carriers	1248
Component Carrier System BW	1248
Component Carrier Narrowest BW	1249
ETC2 Attributes	1249
Max Number of Component Carriers	1249
Carrier Side (with BTS RF BW)	1250
Component Carrier System BW	1250
ETC3 CC Bandwidth	1251
3.7.8.4 Meas Standard	1251
System BW	1252
UL/DL Config	1252
Dw/GP/Up Len	1253
Analysis Slot	1253
Meas Interval	1254
CP Length	1255
Measure PRACH/SRS	1255
Reference Config	1256
3.7.8.5 Limit	1256
Max Ramp Down Time	1257
Max Ramp Up Time	1257
Downlink Transient Period	1258
Downlink Off Power	1258
Uplink Off Power	1259
Uplink On Power Reference	1259
Uplink On Power Tolerance	1260
Uplink On Power Limit Test	1260
3.7.8.6 Threshold	1261
Ramp Up Start Level	1261
Ramp Up End Level	1261
Ramp Down Start Level	1262
Ramp Down End Level	1262

3.7.8.7 Advanced	1262
Noise Floor Extention	1263
Noise Correction	1263
Ramp Time Length	1264
Off Power Meas Rules	1264
IF Gain	1264
3.7.8.8 Global	1266
Global Center Freq	1266
Global EMC Std	1267
Extend Low Band	1268
Restore Defaults	1268
3.7.9 Sweep	1269
3.7.9.1 Sweep/Control	1269
Sweep/Measure	1269
Restart	1270
Pause/Resume	1272
Abort (Remote Command Only)	1273
3.7.9.2 X Scale	1273
Ref Value	1273
Scale/Div	1274
Ref Position	1275
Auto Scaling	1276
3.7.10 Trace	1277
3.7.10.1 Trace Control	1277
Max Hold Trace	1277
Min Hold Trace	1277
70us RMS Off Power Trace State	1278
Burst Trace State	1278
3.8 Modulation Analysis Measurement	1280
3.8.1 Modulation Analysis Measurement Results for LTE-A FDD/TDD	1280
3.8.2 Views	1287
3.8.2.1 Basic	1288
3.8.2.2 Meas Summary	1289
3.8.2.3 RB Slot Meas	1290
3.8.2.4 Subcarrier Meas	1291
3.8.2.5 MIMO Summary	1292
3.8.2.6 Cross-Carriers Summary	1292
3.8.3 Windows	1293
3.8.3.1 Pre Demod	1296
Spectrum	1296

## Table Of Contents

Inst Spectrum	1296
Search Time	1297
Time	1297
Raw Main Time	1297
3.8.3.2 Demod	1297
IQ Meas	1297
IQ Ref	1298
IQ Meas Time	1299
IQ Ref Time	1299
Uplink IQ Freq Meas	1300
Uplink IQ Freq Ref	1300
Detected Allocations	1301
3.8.3.3 Demod Error	1301
RMS Error Vector Time	1302
Error Vector Spectrum	1302
RMS Error Vector Spectrum	1303
Common Tracking Error	1303
RB Error Mag Spectrum	1304
RB Error Mag Time	1304
RB Power Spectrum	1304
RB Power Time	1305
Freq Error Per Slot	1306
Uplink IQ Offset Per Slot	1306
Uplink In-band Emission	1307
Uplink Cross CC In-band Emission	1307
3.8.3.4 Tables	1308
Error Summary for LTE-A FDD/TDD	1309
Error Summary for NB-IoT	1313
Error Summary for LTE V2X	1315
Freq Err Per Slot	1317
Frame Summary for LTE-A FDD/TDD	1317
Frame Summary for NB-IoT	1321
Frame Summary for LTE V2X	1323
Cross-Carrier Summary	1324
Symbols	1325
Symbols for NB-IoT	1326
Decoded Symbol Table	1326
Decoded Symbol Table for NB-IoT	1326
Decoded Symbol Table for LTE V2X	1327
Downlink Decode Info	1327
Downlink Decode Info for NB-IoT	1331
Uplink Decode Info	1334
Uplink Decode Info for NB-IoT	1338
Uplink Decode Info for LTE V2X	1339
Downlink UE-RS Weights	1340
Downlink Cross-Carrier Summary	1341
3.8.3.5 Response	1341

Eq Ch Frequency Response	1341
Inst Eq Ch Frequency Response	1342
Eq Ch Frequency Resp Diff	1342
Inst Eq Ch Freq Resp Diff	1343
Eq Impulse Response	1343
Eq Ch Freq Resp Per Slot	1343
3.8.3.6 MIMO (Downlink)	1344
MIMO Info Table	1344
MIMO Ch Freq Resp	1345
MIMO Ch Freq Resp Diff	1345
MIMO EQ Impulse Resp	1346
MIMO Common Tracking Error	1346
3.8.3.7 ACP	1346
3.8.3.8 OBW	1346
3.8.3.9 Marker Table	1347
3.8.3.10 No Data	1347
3.8.3.11 Config Window	1347
DigitalDemod	1347
Symbol Shape	1348
Ideal State Shape	1348
Ideal State Size	1349
Symbol Table Format	1349
Eye Length	1350
Time Unit	1350
Freq Unit	1351
Avg Line	1351
Phase/Trellis Offset	1352
Unwrap Phase Ref	1352
Group Delay Aperture	1353
ACPSetsup	1354
ACP On/Off	1355
Carrier Freq	1355
Carrier Meas Noise BW	1355
Carrier RRC Weighting	1356
Carrier Filter Alpha	1356
RRC Weighting (All Offsets)	1357
Offset Freq	1357
Offset Meas Noise BW	1358
Offset Filter Alpha	1358
Offset Relative Limit	1359
OBWSetup	1360
OBW On/Off	1361
% of OBW Power	1361
OBW Limit	1362
3.8.3.12 Format	1362

## Table Of Contents

3.8.3.13 Component Carrier (Display only)	1363
3.8.3.14 Trace Data Queries (Remote Commands only)	1363
3.8.4 Amplitude	1365
3.8.4.1 Y Scale	1365
Auto Scale	1365
Couple Ref to Range	1365
Ref Level	1366
Scale/Div	1366
Ref Position	1367
Ref Line	1367
Y Unit Preference	1368
Vector Horiz Center	1368
Log Ratio	1369
3.8.4.2 Attenuation	1369
Full Range Atten	1371
Mech Atten	1372
Elec Atten	1375
Adjust Atten for Min Clipping	1379
Adjust Atten	1379
Pre-Adjust for Min Clipping	1380
Mech Atten Step	1384
3.8.4.3 Range (Non-attenuator models)	1385
Range	1385
Adjust Range for Min Clipping	1386
Pre-Adjust for Min Clipping	1386
Peak-to-Average Ratio	1387
Mixer Lvl Offset	1388
3.8.4.4 Range (Baseband Input models)	1388
Range Auto/Man	1389
I Range	1390
Q Range	1391
Q Same as I	1392
3.8.4.5 Signal Path	1393
Presele Center	1393
Preselector Adjust	1394
Internal Preamp	1395
LNA	1397
μW Path Control	1398
Software Preselection	1407
SW Preselection Type	1409
SW Preselection BW	1410
High Freq Prefilter	1410
3.8.5 BW	1412
3.8.6 Display	1412

3.8.6.1 Meas Display	1412
3.8.6.2 View	1412
Views	1413
User View	1413
Restore Layout to Default	1414
Save Layout as New View	1414
Re-Save User View	1415
Rename User View	1415
Delete User View	1415
Delete All User Views	1416
View Editor Remote Commands	1416
View Listing Query	1416
User View Listing Query	1416
3.8.6.3 Annotation	1417
Graticule	1417
Screen Annotation	1417
Trace Annotation	1418
Control Annotation	1418
Meas Bar	1419
Display Enable (Remote Command Only)	1419
3.8.7 Frequency	1420
3.8.7.1 Settings	1421
Carrier Reference Frequency	1421
3.8.8 Marker	1421
3.8.8.1 Select Marker	1422
3.8.8.2 Markers	1422
Marker X	1422
Marker Z	1424
Marker Y	1425
Marker Y Imag	1426
Marker Mode	1426
Delta Marker (Reset Delta)	1429
3.8.8.3 Settings	1429
Marker X	1429
Marker Settings Diagram	1429
All Markers Off	1429
Couple Markers	1429
3.8.8.4 Peak Search	1431
Marker X	1431
Peak Search	1431
Next Peak (Next Lower Amp)	1431
Next Higher Amplitude	1432
Next Pk Right	1432
Next Pk Left	1432

## Table Of Contents

Minimum Peak	1433
Mkr->CF	1433
Mkr->Ref Lvl	1433
Continuous Peak Search	1433
3.8.8.5 Properties	1434
Marker X	1434
Relative To	1434
Complex Format	1435
Marker Window	1435
Marker Count	1436
3.8.8.6 Marker Function	1437
Band Center	1437
Band Function	1437
Band Span	1438
Band Left	1438
Band Right	1438
Calc Power	1439
Calc Density	1441
3.8.8.7 Marker To	1443
Marker X	1443
Mkr->CF	1443
Mkr->CF Step	1443
Mkr->Start	1444
Mkr->Stop	1444
Mkr->Ref Lvl	1444
Mkr Delta->CF	1445
Mkr Delta->Span	1445
3.8.9 Meas Setup	1445
3.8.9.1 Component Carrier	1445
Settings	1446
Avg/Hold Num	1446
Averaging On/Off	1447
Acquisition Mode	1447
CC For All Windows	1448
Adjust Atten For	1448
Copy CC To	1449
Eq Ch Freq Resp -> Memory	1449
Advanced Settings	1450
Average Type	1450
Fast Average	1450
Fast Average Update Rate	1451
Report EVM in DB	1451
Report Relative Power Levels	1452
Power Boost Normalize	1453
Phase Noise Optimization	1453
Number of Antenna Elements	1454
Antenna Element Spacing	1454

Compensate Chan Freq Response	1455
Display Weights in Real/Imag	1456
Weights Display Mode	1456
Spur Avoidance	1457
Meas Preset	1457
Advanced Limit Setup	1458
Channel Condition	1458
F_UL_CENTER (Center Frequency)	1459
F_UL_LOW (Lower Edge Freq)	1459
F_UL_HIGH (Upper Edge Freq)	1460
Meas Time	1460
Result Length	1460
Meas Interval Slot	1461
Meas Interval Symbol	1462
Meas Offset Slot	1463
Meas Offset Symbol	1463
Analysis Start Boundary	1464
Capture Time Diagram	1464
Sync/Format	1465
Sync Type (FDD/TDD Downlink)	1465
Sync Type (FDD/TDD Uplink)	1467
RS-PRS	1468
Cell ID	1469
Cell ID Mode	1470
MIMO Decoding	1470
PDSCH Cell Specific Ratio	1473
Serving Cell Index	1473
Half Subcarrier Shift	1474
PUSCH DFT Swap	1475
Carrier Allocated	1475
Tx Antenna (Downlink)	1475
Tx Antenna Tab	1475
Number of C-RS Ports	1476
Reference C-RS Port	1476
P-SS/S-SS Antenna	1479
Antenna Detect Threshold	1479
Inactive Antenna Path	1480
NB-IoT Tx Antenna Tab	1481
Inactive Antenna Path	1481
Advanced Sync Setup	1481
Cyclic Prefix Length	1481
Time Scale Factor	1482
Multi Carrier Filter	1483
Opposite Direction Active (TDD only)	1483
Extended Freq Lock Range	1484
Spectrum	1484
Sync Slot	1484
Exclude EVM Transient Time (TDD only)	1485
Advanced Demod Setup	1485

## Table Of Contents

Equalizer Training	1485
Equalizer Training Mode (Uplink only)	1488
Moving Average Filter (Downlink only)	1488
MIMO Channel Freq Normalize (Downlink only)	1489
Symbol Time Adjust	1490
% FFT Size	1491
EVM Window	1491
Custom Length	1492
EVM Minimization	1493
Timing	1495
Frequency	1495
Amplitude	1496
IQ Imbalance	1496
IQ Offset	1496
Higher Order Modulation	1497
PDSCH Modulation&TBS Index Table	1497
PDSCH IQ Ref Mode (Downlink only)	1498
Number of Blank RBs	1499
Channel Profile (Downlink)	1499
RB Auto Detect	1499
RB Auto Detect Mode	1500
Round to Standard Values	1501
Expected # Users	1502
Copy Auto -> Manual	1503
Control and User Channels	1503
Basic Control Channels	1503
Composite Include All	1503
Composite Exclude All	1504
Include P-SS	1505
Include S-SS	1505
Include PBCH	1505
Include PCFICH	1506
Include PHICH	1506
Include PDCCH	1507
Include C-RS	1507
Include Non-Allocated Symbols	1508
Edit Basic Control Channels	1508
Auto Detect Control Channel Pow Levels	1508
P-SS Power Boost	1509
S-SS Power Boost	1509
PBCH Power Boost	1509
PCFICH Power Boost	1510
C-RS Power Boost	1510
PHICH Power Boost	1511
PHICH +/- Increments	1512
Despread IQ Orthog Sequence Index	1512
PHICH Allocation (Ng)	1515
PHICH Duration	1515
Mi Definition (TDD only)	1516

Edit PDCCH Control Channels	1517
Auto Detect Control Channel Pow Levels	1517
PDCCH Allocation Auto Detect	1517
PDCCH Allocation Subframe 0	1517
PDCCH Allocation Subframe 1	1518
PDCCH Allocation Subframe 2	1518
PDCCH Allocation Subframe 3	1519
PDCCH Allocation Subframe 4	1519
PDCCH Allocation Subframe 5	1520
PDCCH Allocation Subframe 6	1520
PDCCH Allocation Subframe 7	1521
PDCCH Allocation Subframe 8	1521
PDCCH Allocation Subframe 9	1522
PDCCH Power Boost	1522
PDCCH +/- Increments	1523
Cross-carrier Scheduling	1524
CIF Presence	1524
Scheduling Cell Id	1524
PDSCH Start OFDM Symbol	1525
Add MPDCCH	1525
Delete MPDCCH	1525
Set Index (Display Only)	1526
Other Control Channels	1526
Composite Include All	1526
Composite Exclude All	1526
P-RS Include	1526
P-RS Active	1527
MBSFN-RS Include	1527
MBSFN-RS Active	1527
PMCH Include	1527
Include CSI-RS	1528
CSI-RS Active	1528
Edit P-RS/MBMS Control Channels	1528
RB Auto Detect	1528
MBSFN Active	1528
MBSFN-RS Power Boost	1529
MBSFN Area ID	1529
Non-MBSFN Region Length	1530
MBSFN Subframe3 Active	1530
MBSFN Subframe4 Active (TDD only)	1531
MBSFN Subframe7 Active	1531
MBSFN Subframe8 Active	1532
MBSFN Subframe9 Active (TDD only)	1532
PMCH Subframe3 Present	1532
PMCH Subframe4 Active (TDD only)	1533
PMCH Subframe7 Present	1533
PMCH Subframe8 Present	1534
PMCH Subframe9 Present (TDD only)	1534
PMCH Power Boost (RB Auto Detect On)	1535

## Table Of Contents

PMCH Subframe3 Power Boost	1535
PMCH Subframe4 Power Boost (TDD only)	1536
PMCH Subframe7 Power Boost	1536
PMCH Subframe8 Power Boost	1536
PMCH Subframe9 Power Boost (TDD only)	1537
PMCH Subframe3 Mod Type	1537
PMCH Subframe4 Mod Type (TDD only)	1538
PMCH Subframe7 Mod Type	1538
PMCH Subframe8 Mod Type	1539
PMCH Subframe9 Mod Type (TDD only)	1539
P-RS Active	1540
P-RS Bandwidth	1540
P-RS Power Boost	1541
P-RS Config Index	1541
N-PRS	1542
Edit CSI-RS Control Channels	1542
CSI-RS Active	1542
Num. of Antenna Ports	1543
CSI-RS Power Boost	1543
CSI-RS Config Index	1544
CSI-RS Subframe Config Index	1544
User Channels	1545
Composite Include All	1545
Composite Exclude All	1545
RB Auto Detect	1545
RB Auto Detect Mode	1545
Expected # Users	1545
Include PDSCH	1545
Include Decoded PDSCH	1546
Include QPSK	1547
Include 16QAM	1547
Include 64QAM	1548
Include 256QAM	1548
Include 1024QAM	1549
Edit User Mapping	1549
RB Auto Detect	1551
RB Auto Detect	1551
RB Auto Detect Mode	1551
Auto Detect Power Levels	1551
Use Per Antenna EPRE	1553
Multi-Frame Analysis (TDD only)	1554
Show Mapping (TDD only)	1554
User Channel Summary	1554
Add User	1555
Delete User	1555
Include PDSCH	1555
RNTI	1556
UE-RS Present	1559
Include UE-RS	1561

UE-RS Power Boost	1564
UE-RS Port	1567
UE-RS nSCID	1570
PDSCH	1572
Number of C-RS Ports	1573
Precoding	1573
# of Layers	1574
# of Codewords	1575
CDD	1576
Code Book Index	1577
Modulation Format (Display Only)	1578
User Index (Display Only)	1579
EPRE (Auto Detect Off)	1579
EPRE (Auto Detect On, Power Based Mode, QPSK)	1580
EPRE (Auto Detect On, Power Based Mode, 16QAM)	1581
EPRE (Auto Detect On, Power Based Mode, 64QAM)	1581
EPRE (Auto Detect On, Power Based Mode, 256QAM)	1581
EPRE (Auto Detect On, Power Based Mode, 1024QAM)	1582
EPRE (Auto Detect On, Decoded DCI Mode)	1582
CW0 Enable (Auto Detect Off)	1583
CW0 Enable (Auto Detect On, Power Based Mode, QPSK)	1583
CW0 Enable (Auto Detect On, Power Based Mode, 16QAM)	1584
CW0 Enable (Auto Detect On, Power Based Mode, 64QAM)	1584
CW0 Enable (Auto Detect On, Power Based Mode, 256QAM)	1585
CW0 Enable (Auto Detect On, Power Based Mode, 1024QAM)	1585
CW0 Enable (Auto Detect On, Decoded DCI Mode)	1585
CW0 Mod Type (Auto Detect Off)	1586
CW0 Power (dB) (Auto Detect Off)	1587
CW0 Power (dB) (Auto Detect On, Power Based Mode, QPSK)	1588
CW0 Power (dB) (Auto Detect On, Power Based Mode, 16QAM)	1588
CW0 Power (dB) (Auto Detect On, Power Based Mode, 64QAM)	1589
CW0 Power (dB) (Auto Detect On, Power Based Mode, 256QAM)	1589
CW0 Power (dB) (Auto Detect On, Power Based Mode, 1024QAM)	1590
CW0 Power (dB) (Auto Detect On, Decoded DCI Mode)	1590
CW1 Enable (Auto Detect Off)	1591
CW1 Enable (Auto Detect On, Power Based Mode, QPSK)	1591
CW1 Enable (Auto Detect On, Power Based Mode, 16QAM)	1592
CW1 Enable (Auto Detect On, Power Based Mode, 64QAM)	1592
CW1 Enable (Auto Detect On, Power Based Mode, 256QAM)	1593
CW1 Enable (Auto Detect On, Power Based Mode, 1024QAM)	1593
CW1 Enable (Auto Detect On, Decoded DCI Mode)	1593
CW1 Mod Type (Auto Detect Off)	1594
CW1 Power (dB) (Auto Detect Off)	1595
CW1 Power (dB) (Auto Detect On, Power Based Mode, QPSK)	1596
CW1 Power (dB) (Auto Detect On, Power Based Mode, 16QAM)	1597
CW1 Power (dB) (Auto Detect On, Power Based Mode, 64QAM)	1597
CW1 Power (dB) (Auto Detect On, Power Based Mode, 256QAM)	1598
CW1 Power (dB) (Auto Detect On, Power Based Mode, 1024QAM)	1598
CW1 Power (dB) (Auto Detect On, Decoded DCI Mode)	1598

## Table Of Contents

Frame Index (TDD only)	1599
CW0 MCS Index (Auto Detect Off)	1600
CW0 MCS Index (Auto Detect On, Power Based Mode, QPSK)	1601
CW0 MCS Index (Auto Detect On, Power Based Mode, 16QAM)	1601
CW0 MCS Index (Auto Detect On, Power Based Mode, 64QAM)	1602
CW0 MCS Index (Auto Detect On, Power Based Mode, 256QAM)	1602
CW0 MCS Index (Auto Detect On, Power Based Mode, 1024QAM)	1603
CW1 MCS Index (Auto Detect Off)	1603
CW1 MCS Index (Auto Detect On, Power Based Mode, QPSK)	1604
CW1 MCS Index (Auto Detect On, Power Based Mode, 16QAM)	1605
CW1 MCS Index (Auto Detect On, Power Based Mode, 64QAM)	1605
CW1 MCS Index (Auto Detect On, Power Based Mode, 256QAM)	1606
CW1 MCS Index (Auto Detect On, Power Based Mode, 1024QAM)	1606
PDSCH Per Allocation Parameters	1607
User Channel (Display Only)	1607
Allocation (Display Only)	1607
Add Allocation	1607
Delete Allocation	1607
RB Start	1608
RB End	1608
Slot Start	1609
Slot End	1610
EPRE	1610
CW0 Mod Type	1611
CW0 Power (dB)	1612
CW1 Mod Type	1612
CW1 Power (dB)	1613
Frame Index (TDD only)	1613
Count Number of Users (Remote Command Only)	1614
Count Number of PDSCH Allocations (Remote Command Only)	1614
CW0 MCS Index	1615
CW1 MCS Index	1615
Edit NB-IoT Channels (NB-IoT only)	1616
Cell ID	1616
Reference Component Carrier	1616
Carrier Freq Offset Auto Calc.	1616
MPDCCH	1617
Other Control Channels	1617
Channel Profile(Uplink)	1617
RB Auto Detect	1617
RB Auto Detect Mode	1617
Auto Detect Power Levels	1617
Non-Allocated Symbols	1618
Copy Auto -> Manual	1618
Edit User Mapping	1618
RB Auto Detect	1618
RB Auto Detect	1619
RB Auto Detect Mode	1619
Auto Detect Power Levels	1619

User Summary	1619
Add User	1619
Delete User	1619
Cell ID	1620
RNTI	1620
Frame No.	1621
Group Hop	1622
Seq Hop	1623
DMRS CSH ID	1624
DMRS CSH ID Enable	1625
User Channel Summary	1625
PUSCH Present	1626
Include PUSCH	1626
Include PUSCH DM-RS	1627
PUCCH Present	1628
Include PUCCH	1629
Include PUCCH DM-RS	1630
SRS Present	1631
Include SRS	1632
PRACH Present	1633
Include PRACH	1634
PUSCH	1634
User Channel (Display Only)	1634
Auto Sync	1634
Sync Slot	1635
Use CS from DCI	1636
CS Field	1637
Layer Index	1638
N DMRS(2)	1639
OCC	1640
Auto-calc. per-slot Params	1641
N DMRS(1)	1642
Delta SS	1643
N PUSCH ID Enable	1644
N PUSCH ID	1645
Frequency Hopping	1646
Hopping Mode	1647
Hopping Offset	1648
Number of SubBand	1649
PUSCH Per Slot Parameters	1650
User Channel (Display Only)	1650
Allocation (Display Only)	1650
Add Allocation	1651
Delete Allocation	1652
Slot Up	1652
Slot Down	1652
Slot Position (Remote Command Only)	1653
RB Start Common	1653
RB Start Couple	1655

## Table Of Contents

RB Start Slot	1655
RB End Common	1656
RB End Couple	1657
RB End Slot	1658
Mod Type Common	1659
Mod Type Couple	1660
Mod Type Slot	1660
Power Boost Common	1661
Power Boost Couple	1662
Power Boost Slot	1662
DMRS Group Common	1663
DMRS Group Couple	1664
DMRS Group Slot	1664
DMRS Sequence Common	1665
DMRS Sequence Couple	1666
DMRS Sequence Slot	1667
DMRS CS Common	1667
DMRS CS Couple	1668
DMRS CS Slot	1669
DMRS Power Common	1669
DMRS Power Couple	1671
DMRS Power Slot	1671
Mirror Common	1672
Mirror Couple	1672
Mirror Slot	1673
PUCCH	1673
User Channel (Display Only)	1673
Auto Sync	1673
Sync Slot	1674
Auto Detect PUCCH	1675
PUCCH Format 4/5 Active	1676
Auto-Calc. per-Slot Parameters	1677
N RB (2)	1678
N CS (1)	1679
N PUCCH (2)	1680
Delta Shift PUCCH	1681
N PUCCH ID Enable	1682
N PUCCH ID	1683
PUCCH Per Slot Parameters	1684
User Channel (Display Only)	1684
Allocation (Display Only)	1685
Add	1685
Delete	1686
Subframe Up	1686
Subframe Down	1687
Slot Position (Remote Command Only)	1687
First RB Common	1687
First RB Couple	1689
First RB Slot	1689

Format Common	1690
Format Couple	1691
Format Slot	1691
CS Common	1692
CS Couple	1693
CS Slot	1694
OS Common	1694
OS Couple	1696
OS Slot	1696
Power Common	1697
Power Couple	1698
Power Slot	1698
M(4) Common	1699
M(4) Couple	1700
M(4) Slot	1701
DMRS Group Common	1701
DMRS Group Couple	1702
DMRS Group Slot	1703
DMRS Power Common	1703
DMRS Power Couple	1704
DMRS Power Slot	1705
N PUCCH (1) Common	1706
N PUCCH (1) Couple	1707
N PUCCH (1) Slot	1707
N PUCCH (3) Common	1708
N PUCCH (3) Couple	1709
N PUCCH (3) Slot	1709
N PUCCH (4) Common	1710
N PUCCH (4) Couple	1711
N PUCCH (4) Slot	1712
N PUCCH (5) Common	1712
N PUCCH (5) Couple	1714
N PUCCH (5) Slot	1714
SRS	1715
User Channel (Display Only)	1715
Auto Sync	1715
Sync Slot	1716
Cyclic Shift	1717
Power (dB)	1718
SRS Bandwidth	1719
SRS BW Config	1720
Subframe Config	1721
Config Index	1722
SRS Hopping BW	1723
Tx Comb	1724
Frequency Domain Position	1725
SRS Max UpPTS (TDD only)	1726
S-RS Nra S1 (TDD only)	1727
S-RS Nra S6 (TDD only)	1728

## Table Of Contents

PRACH	1729
User Channel (Display Only)	1729
N RA PRB Offset	1729
Configuration Index	1730
Logical Root Seq Index	1731
Cyclic Shift Set	1733
NCS Configuration	1734
Preamble Index	1735
PRACH Power (dB)	1736
Sync Resource (TDD only)	1737
Edit eMTC Channels	1738
eMTC Analysis	1738
Decode	1738
PBCH Bits	1738
PCFICH Bits	1739
PDCCH Bits	1740
PDSCH Bits	1741
RNTI DCI Settings	1743
Transmission Mode Included in DCI Decoding	1743
DCI Format 1/1A Include	1744
Uplink Bandwidth	1744
RA-RNTI Range (Min Value)	1744
RA-RNTI Range (Max Value)	1745
TPC-RNTI Range (Min Value)	1746
TPC-RNTI Range (Max Value)	1746
Latest PMI Report on PUSCH	1747
PUSCH Bits	1749
PUCCH Bits	1751
PUSCH & PUCCH Decode Parameters	1751
PUSCH HARQ-ACK Info Size	1752
PUSCH HARQ-ACK Offset Index	1753
PUSCH RI Info Size	1753
PUSCH RI Offset Index	1754
PUSCH CQI/PMI Info Size	1755
PUSCH CQI/PMI Offset Index	1755
PUCCH HARQ-ACK Info Size	1756
PUCCH CQI/PMI Info Size	1757
TDD ACK/NACK Feedback Mode	1757
3.8.9.2 Radio	1758
Direction	1758
3.8.9.3 Component Carriers	1759
Number of Component Carriers	1759
Carrier Allocation	1759
Non-Contiguous Break at	1760
Configure Comp Carriers	1760
Configure CCs	1761
Number of Component Carriers	1761
Carrier Allocation	1761

Non-Contiguous Break at	1761
System BW	1761
Measure Carrier	1761
Frequency Offset	1762
Spectrum	1762
UL/DL Configuration	1763
Dw/GP/Up Len	1763
CHP Power Integ BW	1764
ACP Power Integ BW	1765
SEM Power Integ BW	1766
Carrier Config Presets	1766
Max BTS RF Bandwidth	1767
Preset ETC	1767
Carrier Spacing Delta	1767
ETC1 Attributes	1768
Max Number of Component Carriers	1768
Component Carrier System BW	1768
Component Carrier Narrowest BW	1769
ETC2 Attributes	1769
Max Number of Component Carriers	1769
Carrier Side (with BTS RF BW)	1769
Component Carrier System BW	1770
ETC3 CC Bandwidth	1770
3.8.9.4 Meas Standard	1771
System BW	1771
UL/DL Config	1772
Dw/GP/Up Len	1772
Analysis Slot	1773
Meas Interval	1773
CP Length	1774
Measure PRACH/SRS	1775
Reference Config	1775
3.8.9.5 Global	1776
Global Center Freq	1776
Global EMC Std	1777
Extend Low Band	1777
Restore Defaults	1778
3.8.10 Sweep	1778
3.8.10.1 Sweep/Control	1778
Sweep/Measure	1778
Restart	1780
Pause/Resume	1781
Abort (Remote Command Only)	1782
3.8.10.2 X Scale	1782
Auto Scaling	1783
Ref Value	1783
Width	1784

## Table Of Contents

Ref Position	1784
Freq Annotation	1785
All Frequency Points	1785
3.8.10.3 Recording	1786
3.8.10.4 Playback	1787
Playback Mode	1788
Playback Start	1788
Playback Stop	1790
Step Forward	1790
Sample Rate	1790
3.8.11 Trace	1791
3.9 Conformance EVM	1792
3.9.1 CEVM SCPI List	1805
3.9.2 Views	1811
3.9.2.1 Parameter List	1812
3.9.2.2 Measurement List	1812
3.9.2.3 Result Metrics	1812
3.9.2.4 RF Envelope	1812
3.9.3 Windows	1813
3.9.3.1 Measurement List	1813
3.9.3.2 Parameter List	1813
3.9.3.3 Result Metrics	1813
3.9.3.4 RF Envelope	1814
3.9.4 Amplitude	1814
3.9.4.1 Attenuation	1814
Full Range Atten	1816
Mech Atten	1817
Elec Atten	1820
Adjust Atten for Min Clipping	1824
Adjust Atten	1824
Pre-Adjust for Min Clipping	1824
Mech Atten Step	1828
3.9.4.2 Range (Non-attenuator models)	1829
Range	1829
Adjust Range for Min Clipping	1830
Pre-Adjust for Min Clipping	1830
Peak-to-Average Ratio	1831
Mixer Lvl Offset	1832
3.9.4.3 Range (Baseband Input models)	1832
Range Auto/Man	1833

I Range	1834
Q Range	1835
Q Same as I	1836
3.9.4.4 Signal Path	1837
Presel Center	1837
Preselector Adjust	1838
Internal Preamp	1839
LNA	1841
μW Path Control	1842
Software Preselection	1851
SW Preselection Type	1853
SW Preselection BW	1854
High Freq Prefilter	1854
3.9.5 BW	1856
3.9.6 Display	1856
3.9.6.1 Meas Display	1856
Selected Component Carrier	1856
Copy CC To	1856
Index	1857
Argument	1857
Value	1857
Immediate Action	1857
Show All Items	1857
3.9.6.2 View	1858
View	1858
User View	1858
Restore Layout to Default	1859
Save Layout as New View	1859
Re-Save User View	1859
Rename User View	1859
Delete User View	1860
Delete All User Views	1860
View Editor Remote Commands	1860
View Listing Query	1861
User View Listing Query	1861
3.9.6.3 Annotation	1861
Graticule	1862
Screen Annotation	1862
Trace Annotation	1863
Control Annotation	1863
Meas Bar	1863
Display Enable (Remote Command Only)	1864
3.9.7 Frequency	1865
3.9.7.1 Settings	1865
Carrier Reference Frequency	1865

## Table Of Contents

3.9.8 Marker	1866
3.9.9 Meas Setup	1866
3.9.9.1 Settings	1866
Average/Hold Number	1866
Averaging On/Off	1867
Meas Method	1867
Spur Avoidance	1869
Copy from Mod Analysis	1870
Meas Preset	1870
EVM Minimization by IQ Imbalance (Remote Command only)	1870
IQ Imbalance Frequency Compensation (Remote Command only)	1871
Result Values	1871
Downlink Result Output Selection (Remote Command only)	1871
Uplink Result Output Selection (Remote Command only)	1873
Downlink Set All Results (Remote Command only)	1875
Uplink Set All Results (Remote Command only)	1876
Get Measurement Item List (Remote Query only)	1876
3.9.9.2 Radio	1876
Direction	1876
eMTC Analysis	1877
Interfering Signal Present	1877
Freq Offset from Edge	1878
Span	1878
Offset Side	1878
Non-Contiguous Interference Region	1879
3.9.9.3 Component Carriers	1879
Number of Component Carriers	1879
Carrier Allocation	1880
Non-Contiguous Break at	1880
Configure Comp Carriers	1881
Configure CCs	1881
Number of Component Carriers	1881
Carrier Allocation	1881
Non-Contiguous Break at	1881
System BW	1881
Measure Carrier	1882
Frequency Offset	1882
Spectrum	1883
UL/DL Configuration	1883
Dw/GP/Up Len	1884
Sidelink Mode	1884
CHP Power Integ BW	1885
ACP Power Integ BW	1885
SEM Power Integ BW	1886
Carrier Config Presets	1887
Max BTS RF Bandwidth	1887
Carrier Spacing Delta	1888

Preset ETC	1888
ETC1 Attributes	1888
Max Number of Component Carriers	1888
Component Carrier System BW	1889
Component Carrier Narrowest BW	1889
ETC2 Attributes	1890
Max Number of Component Carriers	1890
Carrier Side (with BTS RF BW)	1890
Component Carrier System BW	1891
ETC3 CC Bandwidth	1891
3.9.9.4 Meas Standard	1891
System BW	1892
UL/DL Config	1893
Dw/GP/Up Len	1893
Analysis Slot	1894
Meas Interval	1894
CP Length	1895
Measure PRACH/SRS	1896
Reference Config	1896
3.9.10 Sweep	1897
3.9.10.1 Sweep/Control	1897
Sweep/Measure	1897
Restart	1898
Pause/Resume	1900
Abort (Remote Command Only)	1900
3.9.10.2 Recording	1901
Sample Rate (Display Only)	1901
Sample Points (Display Only)	1901
Sample Time (Display Only)	1901
3.9.10.3 Playback	1902
Playback Start	1902
Sample Rate	1902
Sample Points (Display Only)	1903
Sample Time (Display Only)	1903
Input Channels (Display Only)	1903
3.9.11 Trace	1903
3.10 Power Stat CCDF Measurement	1904
3.10.1 Views	1906
3.10.1.1 Normal	1907
3.10.1.2 Slot	1907
3.10.2 Windows	1907
3.10.2.1 Graph	1907
3.10.2.2 Slot	1909

## Table Of Contents

3.10.2.3 Metrics	1910
3.10.3 Amplitude	1911
3.10.3.1 Y Scale	1911
Minimum Probability	1911
3.10.3.2 Attenuation	1912
Full Range Atten	1914
Mech Atten	1915
Elec Atten	1918
Adjust Atten for Min Clipping	1922
Adjust Atten	1922
Pre-Adjust for Min Clipping	1923
Mech Atten Step	1927
3.10.3.3 Range (Baseband Input models)	1928
Range Auto/Man	1928
I Range	1929
Q Range	1931
Q Same as I	1932
3.10.3.4 Range (Non-attenuator models)	1932
Range	1933
Adjust Range for Min Clipping	1933
Pre-Adjust for Min Clipping	1933
Peak-to-Average Ratio	1934
Mixer Lvl Offset	1935
3.10.3.5 Signal Path	1935
Presel Center	1936
Preselector Adjust	1937
Internal Preamp	1938
LNA	1940
$\mu$ W Path Control	1941
Software Preselection	1950
SW Preselection Type	1952
SW Preselection BW	1953
High Freq Prefilter	1953
3.10.4 BW	1955
3.10.4.1 Settings	1955
Info BW	1955
3.10.5 Display	1956
3.10.5.1 Settings	1956
Slot View	1957
3.10.5.2 View	1957
View	1957
User View	1957
Restore Layout to Default	1958

Save Layout as New View	1958
Re-Save User View	1958
Rename User View	1959
Delete User View	1959
Delete All User Views	1960
View Editor Remote Commands	1960
View Listing Query	1960
User View Listing Query	1960
3.10.5.3 Annotation	1961
Graticule	1961
Screen Annotation	1961
Trace Annotation	1962
Control Annotation	1962
Meas Bar	1963
Display Enable (Remote Command Only)	1963
3.10.6 Frequency	1964
3.10.6.1 Settings	1964
Carrier Reference Frequency	1965
Center Frequency	1966
Center Frequency Offset	1972
Adjust Center Frequency to Carrier Config	1972
3.10.7 Marker	1972
3.10.7.1 Select Marker	1973
3.10.7.2 Settings	1973
Marker X-Axis Value	1973
Marker Mode	1974
Delta Marker (Reset Delta)	1975
Marker Settings Diagram	1975
All Markers Off	1975
Couple Markers	1976
3.10.7.3 Properties	1976
Marker X-Axis Value	1976
Relative To	1976
Marker Trace	1977
Marker Settings Diagram	1977
3.10.8 Meas Setup	1978
3.10.8.1 Settings	1978
Counts	1978
Meas Cycles	1978
Meas Interval	1979
Meas Offset	1979
Meas Setup Summary Table	1979
Auto Couple	1979
Meas Preset	1981

## Table Of Contents

3.10.8.2 Radio	1982
Direction	1982
3.10.8.3 Component Carriers	1982
Number of Component Carriers	1982
Carrier Allocation	1983
Non-Contiguous Break at	1983
Configure Comp Carriers	1984
Configure CCs	1984
Number of Component Carriers	1984
Carrier Allocation	1984
Non-Contiguous Break at	1985
System BW	1985
Measure Carrier	1985
Frequency Offset	1985
Spectrum	1986
UL/DL Configuration	1986
Dw/GP/Up Len	1987
CHP Power Integ BW	1988
ACP Power Integ BW	1988
SEM Power Integ BW	1989
Carrier Config Presets	1990
Preset ETC	1990
Max BTS RF Bandwidth	1990
Carrier Spacing Delta	1991
ETC1 Attributes	1991
Max Number of Component Carriers	1991
Component Carrier System BW	1992
Component Carrier Narrowest BW	1992
ETC2 Attributes	1992
Max Number of Component Carriers	1993
Carrier Side (with BTS RF BW)	1993
Component Carrier System BW	1993
ETC3 CC Bandwidth	1994
3.10.8.4 Meas Standard	1994
System BW	1995
UL/DL Config	1995
Dw/GP/Up Len	1996
Analysis Slot	1997
Meas Interval	1997
CP Length	1998
Measure PRACH/SRS	1998
Reference Config	1999
3.10.8.5 Advanced	1999
IF Gain	1999
IF Upsampling Ratio	2000
3.10.8.6 Global	2001
Global Center Freq	2001

Global EMC Std	2002
Extend Low Band	2002
Restore Defaults	2003
3.10.9 Sweep	2003
3.10.9.1 Sweep/Control	2003
Sweep/Measure	2003
Restart	2005
Pause/Resume	2008
Abort (Remote Command Only)	2008
3.10.9.2 X Scale	2009
Scale/Div	2009
3.10.10 Trace	2009
3.10.10.1 Trace Control	2009
Store Ref Trace	2009
Ref Trace	2010
Gaussian Line	2010
3.11 Monitor Spectrum Measurement	2011
3.11.1 Views	2011
3.11.1.1 Normal	2012
3.11.1.2 Carrier Info	2013
3.11.2 Windows	2013
3.11.2.1 Spectrum	2013
3.11.2.2 Carrier Info	2015
3.11.3 Amplitude	2018
3.11.3.1 Y Scale	2018
Ref Value	2019
Scale/Div	2019
Scale Range	2020
Ref Position	2020
Auto Scaling	2021
3.11.3.2 Attenuation	2021
Full Range Atten	2023
Mech Atten	2024
Elec Atten	2027
Adjust Atten for Min Clipping	2031
Adjust Atten	2031
Pre-Adjust for Min Clipping	2032
Mech Atten Step	2036
3.11.3.3 Range (Non-attenuator models)	2037
Range	2037
Adjust Range for Min Clipping	2038

## Table Of Contents

Pre-Adjust for Min Clipping	2038
Peak-to-Average Ratio	2039
Mixer Lvl Offset	2040
3.11.3.4 Signal Path	2040
Presel Center	2040
Preselector Adjust	2042
Internal Preamp	2043
LNA	2044
μW Path Control	2046
Software Preselection	2055
SW Preselection Type	2056
SW Preselection BW	2057
High Freq Prefilter	2058
3.11.4 BW	2059
3.11.4.1 Settings	2059
Res BW	2059
Video BW	2061
VBW:3dB RBW	2062
Span:3dB RBW	2064
3.11.5 Display	2065
3.11.5.1 Meas Display	2065
Carrier Attribute	2065
Sub-block Attribute	2066
Carrier Freq	2066
3.11.5.2 View	2067
View	2067
User View	2067
Restore Layout to Default	2068
Save Layout as New View	2068
Re-Save User View	2068
Rename User View	2068
Delete User View	2069
Delete All User Views	2069
View Editor Remote Commands	2069
View Listing Query	2070
User View Listing Query	2070
3.11.5.3 Annotation	2070
Graticule	2071
Screen Annotation	2071
Trace Annotation	2072
Control Annotation	2072
Meas Bar	2072
Display Enable (Remote Command Only)	2073
3.11.6 Frequency	2074

3.11.6.1 Settings	2074
Carrier Reference Frequency	2074
Center Frequency	2076
Center Frequency Offset	2083
Span	2083
CF Step	2086
Adjust Span to Carrier Config	2087
3.11.7 Marker	2087
3.11.7.1 Select Marker	2087
3.11.7.2 Settings	2088
Marker Frequency	2088
Marker Mode	2089
Delta Marker (Reset Delta)	2090
Marker Settings Diagram	2090
All Markers Off	2090
Couple Markers	2091
3.11.7.3 Peak Search	2091
Marker Frequency	2091
Peak Search	2091
Next Peak	2092
Marker Delta	2092
3.11.7.4 Properties	2093
Marker Frequency	2093
Relative To	2093
Marker Trace	2094
Marker Settings Diagram	2094
3.11.7.5 Marker Function	2094
Marker Frequency	2095
Marker Function	2095
Band Span	2095
Band Left	2096
Band Right	2096
3.11.8 Meas Setup	2097
3.11.8.1 Settings	2097
Avg Hold Num	2097
Averaging On/Off	2097
Average Mode	2098
Spur Avoidance	2098
Meas Setup Summary Table	2099
Auto Couple	2099
Meas Preset	2101
3.11.8.2 Radio	2101
Direction	2101
3.11.8.3 Component Carriers	2102

## Table Of Contents

Number of Component Carriers	2102
Carrier Allocation	2102
Non-Contiguous Break at	2103
Configure Comp Carriers	2103
Configure CCs	2104
Number of Component Carriers	2104
Carrier Allocation	2104
Non-Contiguous Break at	2104
System BW	2104
Measure Carrier	2104
Frequency Offset	2105
Spectrum	2105
UL/DL Configuration	2106
Dw/GP/Up Len	2106
CHP Power Integ BW	2107
ACP Power Integ BW	2108
SEM Power Integ BW	2109
Carrier Config Presets	2109
Preset ETC	2110
Max BTS RF Bandwidth	2110
Carrier Spacing Delta	2110
ETC1 Attributes	2111
Max Number of Component Carriers	2111
Component Carrier System BW	2111
Component Carrier Narrowest BW	2112
ETC2 Attributes	2112
Max Number of Component Carriers	2112
Carrier Side (with BTS RF BW)	2112
Component Carrier System BW	2113
ETC3 CC Bandwidth	2113
3.11.8.4 Meas Standard	2114
System BW	2114
UL/DL Config	2115
Dw/GP/Up Len	2115
Analysis Slot	2116
Meas Interval	2116
CP Length	2117
Measure PRACH/SRS	2118
Reference Config	2118
3.11.8.5 Advanced	2119
Noise Floor Extension	2119
Conversion	2121
Phase Noise Optimization	2122
3.11.8.6 Global	2122
Global Center Freq	2123
Global EMC Std	2123
Extend Low Band	2124
Restore Defaults	2125

3.11.9 Sweep	2125
3.11.9.1 Sweep/Control	2125
Sweep Time	2125
Minimum Acquisition Time	2127
Sweep/Measure	2128
Restart	2130
Pause/Resume	2133
Abort (Remote Command Only)	2133
Sweep Time Annotation (Remote Query Only)	2134
3.11.9.2 Sweep Config	2134
Points	2134
3.11.10 Trace	2136
3.11.10.1 Select Trace	2136
3.11.10.2 Trace Control	2136
Trace Type	2137
Clear and Write   Restart Averaging   Restart Max/Min Hold	2142
View/Blank	2142
Trace Settings Table	2145
Clear All Traces	2145
3.11.10.3 Detector	2145
Detector	2145
Detector Select Auto/Man	2147
3.12 IQ Waveform Measurement	2148
3.12.1 Views	2150
3.12.1.1 RF Envelope	2150
3.12.1.2 I/Q Waveform	2151
3.12.2 Windows	2151
3.12.2.1 RF Envelope	2151
3.12.2.2 Metrics	2152
3.12.2.3 I/Q Waveform	2152
3.12.3 Amplitude	2153
3.12.3.1 Y Scale	2153
Ref Value	2153
Scale/Div	2154
Scale Range	2155
Ref Position	2156
Auto Scaling	2157
3.12.3.2 Attenuation	2158
Full Range Atten	2160
Mech Atten	2161

## Table Of Contents

Elec Atten	2164
Adjust Atten for Min Clipping	2167
Adjust Atten	2168
Pre-Adjust for Min Clipping	2168
Mech Atten Step	2172
3.12.3.3 Range (Baseband Input models)	2173
Range Auto/Man	2173
I Range	2174
Q Range	2176
Q Same as I	2177
3.12.3.4 Range (Non-attenuator models)	2177
Range	2178
Adjust Range for Min Clipping	2178
Pre-Adjust for Min Clipping	2178
Peak-to-Average Ratio	2179
Mixer Lvl Offset	2180
3.12.3.5 Signal Path	2180
Presel Center	2181
Preselector Adjust	2182
Internal Preamp	2183
LNA	2185
$\mu$ W Path Control	2186
Software Preselection	2195
SW Preselection Type	2197
SW Preselection BW	2198
High Freq Prefilter	2198
3.12.4 BW	2200
3.12.4.1 Settings	2200
Digital IF BW	2200
Filter Type	2202
Filter BW	2204
Filter Alpha	2205
Channel Filter Bandwidth (Backwards Compatibility Remote Command Only)	2205
3.12.5 Display	2205
3.12.5.1 View	2205
View	2206
User View	2206
Restore Layout to Default	2206
Save Layout as New View	2207
Re-Save User View	2207
Rename User View	2207
Delete User View	2208
Delete All User Views	2208
View Editor Remote Commands	2208
View Listing Query	2209

User View Listing Query	2209
3.12.5.2 Annotation	2209
Graticule	2209
Screen Annotation	2210
Trace Annotation	2210
Control Annotation	2211
Meas Bar	2211
Display Enable (Remote Command Only)	2211
3.12.6 Frequency	2213
3.12.6.1 Settings	2213
Carrier Reference Frequency	2213
Center Frequency	2215
Center Frequency Offset	2220
Adjust Center Frequency to Carrier Config	2221
3.12.7 Marker	2221
3.12.7.1 Select Marker	2221
3.12.7.2 Settings	2222
Marker Time	2222
Marker Mode	2224
Delta Marker (Reset Delta)	2225
Marker Settings Diagram	2225
All Markers Off	2225
Couple Markers	2226
3.12.7.3 Peak Search	2226
Marker Time	2226
Peak Search	2226
Next Peak	2227
Minimum Peak	2227
Marker Delta	2228
3.12.7.4 Pk Search Config	2228
Peak Search Range	2228
Peak Search Range Start	2228
Peak Search Range Stop	2229
3.12.7.5 Marker Function	2229
Marker Time	2230
Interval Function	2230
Interval Span	2231
Interval Left	2231
Interval Right	2231
3.12.7.6 Properties	2232
Marker Time	2232
Relative To	2232
Marker Trace	2233
Marker Settings Diagram	2233

## Table Of Contents

3.12.8 Meas Setup	2233
3.12.8.1 Settings	2233
Avg/Hold Number (Averaging On/Off)	2234
Average Mode	2234
Average Type	2235
Time Avg Num	2236
Meas Time	2237
Sample Rate	2237
Meas Setup Summary Table	2238
Spur Avoidance	2239
Auto Couple	2242
Meas Preset	2244
3.12.8.2 Radio	2244
Direction	2244
3.12.8.3 Component Carriers	2245
Number of Component Carriers	2245
Carrier Allocation	2245
Non-Contiguous Break at	2246
Configure Comp Carriers	2246
Configure CCs	2247
Number of Component Carriers	2247
Carrier Allocation	2247
Non-Contiguous Break at	2247
System BW	2247
Measure Carrier	2247
Frequency Offset	2248
Spectrum	2248
UL/DL Configuration	2249
Dw/GP/Up Len	2249
CHP Power Integ BW	2250
ACP Power Integ BW	2251
SEM Power Integ BW	2252
Carrier Config Presets	2252
Preset ETC	2253
Max BTS RF Bandwidth	2253
Carrier Spacing Delta	2253
ETC1 Attributes	2254
Max Number of Component Carriers	2254
Component Carrier System BW	2254
Component Carrier Narrowest BW	2255
ETC2 Attributes	2255
Max Number of Component Carriers	2255
Carrier Side (with BTS RF BW)	2255
Component Carrier System BW	2256
ETC3 CC Bandwidth	2256
3.12.8.4 Meas Standard	2257
System BW	2257

UL/DL Config	2258
Dw/GP/Up Len	2258
Analysis Slot	2259
Meas Interval	2259
CP Length	2260
Measure PRACH/SRS	2261
Reference Config	2261
3.12.8.5 Advanced	2262
Phase Noise Optimization	2262
ADC Dither	2268
LO Dither	2269
IF Gain	2269
IF Gain Offset	2270
Other IF Gain	2271
Mixing Mode	2272
Invert Spectrum	2274
Power Reference Plane	2274
Mixing Mode State (Remote Command Only)	2275
IF Frequency (Remote Command Only)	2276
3.12.8.6 Global	2276
Global Center Freq	2276
Global EMC Std	2277
Extend Low Band	2278
Restore Defaults	2278
3.12.8.7 Sample Period (Aperture) Setting (Remote Query Only)	2278
3.12.9 Sweep	2279
3.12.9.1 Sweep/Control	2279
Restart	2279
Pause/Resume	2282
Sweep/Measure	2282
Abort (Remote Command Only)	2284
3.12.9.2 X Scale	2284
Ref Value	2284
Scale/Div	2285
Ref Position	2285
Auto Scaling	2286
3.12.10 Trace	2286
<b>4 System</b>	<b>2287</b>
4.1 System	2288
4.1.1 Show System	2288
4.1.1.1 Show System contents (Remote Query Only)	2289
4.1.1.2 Computer System description (Remote Query Only)	2289
4.1.2 Show Hardware	2289

## Table Of Contents

4.1.3 Show LXI	2289
4.1.4 Show Support Subscriptions	2290
4.1.5 Show Support ID	2290
4.1.6 Control Panel...	2291
4.1.7 Web Browser	2292
4.1.8 Application Controls	2292
4.1.9 Sounds	2292
4.2 I/O Config	2294
4.2.1 GPIB	2294
4.2.1.1 GPIB Address	2294
4.2.1.2 GPIB Controller	2294
4.2.2 SCPI LAN	2295
4.2.2.1 SCPI Telnet	2296
4.2.2.2 SCPI Socket	2296
4.2.2.3 SICL Server	2297
4.2.2.4 HiSLIP Server	2298
4.2.2.5 Verbose SCPI On/Off	2298
4.2.2.6 Device Clear on Disconnect	2299
4.2.2.7 SCPI Socket Control Port (Remote Query Only)	2300
4.2.2.8 SCPI Instrument Port (Remote Query Only)	2300
4.2.3 Web Password Reset	2300
4.2.4 System IDN Response	2301
4.2.4.1 System IDN Response	2301
4.2.4.2 User IDN	2302
4.2.4.3 SYSTem:PERSONa (Remote Commands Only)	2303
SYSTem:PERSONa:DEFault	2303
SYSTem:PERSONa:MANufacturer	2304
SYSTem:PERSONa:MANufacturer:DEFault	2304
SYSTem:PERSONa:MODEl	2304
SYSTem:PERSONa:MODEl:DEFault	2305
4.2.5 LXI	2305
4.2.5.1 LAN Reset	2305
4.2.5.2 Device Identification (Remote Command Only)	2305
4.2.6 Restore I/O Config Defaults	2306

4.2.7 Query USB Connection (Remote Query Only)	2306
4.2.8 USB Connection Status (Remote Query Only)	2307
4.2.9 USB Packet Count (Remote Query Only)	2307
4.2.10 Lock Remote I/O Session (Remote Command only)	2308
4.2.10.1 Lock Remote I/O Request (Remote Query only)	2309
4.2.10.2 Unlock Remote I/O Session (Remote Command only)	2310
4.2.10.3 Remote I/O Session Lock Name (Remote Query only)	2311
4.2.10.4 Remote I/O Session Lock Owner (Remote Query only)	2311
4.2.11 Multiple Network Interface Card Configuration (Remote Commands Only)	2312
4.2.11.1 Multiple Network Adapters Enabled (Remote Query Only)	2312
4.2.11.2 Config IPV4 Address (Remote Command Only)	2313
4.2.11.3 Config IPV6 Address (Remote Command Only)	2313
4.2.11.4 List All Physical Network Adapter IP Addresses (Remote Query Only)	2313
4.3 Preload / Unload Modes	2315
4.3.1 Power-On Mode	2315
4.3.2 Table of Modes	2316
4.3.3 Preload: Select All, Preload: Deselect All	2316
4.3.4 Move Up, Move Down	2316
4.3.5 Unload	2316
4.3.6 Loaded Modes (Remote Query Only)	2317
4.3.7 User Interface	2317
4.3.7.1 Menu Panel Position	2317
4.3.7.2 Menu Panel Tabs	2318
4.3.7.3 Annotations Local Settings/All Off	2318
4.3.7.4 Display Theme	2318
4.3.7.5 Backlight	2319
4.3.7.6 Backlight Intensity	2320
4.3.7.7 Hints	2320
4.3.7.8 Numeric Entry Auto Open	2320
4.3.7.9 Touch On/Off	2321
4.3.7.10 Control Size	2321

## Table Of Contents

4.3.7.11 Quick Save Mode	2321
4.3.7.12 Screen Tabs Left/Right	2322
4.3.7.13 Hide Screen Tabs in Full Screen	2323
4.3.7.14 2-Screen Orientation	2324
4.3.7.15 Clock Format	2325
4.3.7.16 Language	2326
4.3.7.17 Restore User Interface Defaults	2326
4.3.7.18 User Interface Type (Remote Query Only)	2327
4.4 Power On	2328
4.4.1 Power On State	2328
4.4.2 Power On Application	2330
4.4.3 FPGA Configuration	2330
4.4.3.1 FPGA Load Preference	2333
4.4.3.2 Load FPGA	2334
4.4.4 Restore Power On Defaults	2335
4.4.5 Configure Applications – Desktop application	2335
4.4.6 Configure Applications – Instrument boot-up	2338
4.4.7 Configure Applications – Remote Commands	2338
4.4.7.1 Configuration list (Remote Command Only)	2339
4.4.7.2 Configuration Memory Available (Remote Query Only)	2339
4.4.7.3 Configuration Memory Total (Remote Query Only)	2339
4.4.7.4 Configuration Memory Used (Remote Query Only)	2340
4.4.7.5 Configuration Application Memory (Remote Query Only)	2340
4.5 Restore Defaults	2341
4.5.1 Input/Output	2341
4.5.2 I/O Config	2342
4.5.3 User Interface	2342
4.5.4 Power On	2342
4.5.5 Alignments	2343
4.5.6 Misc	2343
4.5.7 All	2344
4.6 Alignments	2346
4.6.1 Auto Align	2346

4.6.1.1 Auto Align	2346
4.6.1.2 All but RF	2349
4.6.1.3 Alert	2349
4.6.2 Align Now	2351
4.6.2.1 Align Now All	2353
4.6.2.2 Align Now All but RF	2355
4.6.2.3 Align Now RF	2357
4.6.2.4 Align Now Expired	2358
4.6.2.5 Align Now Preselector	2359
4.6.2.6 Align Now All but RF Preselector	2360
4.6.2.7 Align Now RF Presel Only (20 Hz to 3.6 GHz)	2360
4.6.2.8 Align Now External Mixer	2361
4.6.2.9 Align Source	2362
4.6.2.10 Align Receiver	2363
4.6.2.11 Align Fast	2363
4.6.2.12 Align LO Leakage	2364
4.6.2.13 Align IF Cable	2364
4.6.2.14 Align RRH Amplitude	2364
4.6.2.15 Align Fast RRH Amplitude	2365
4.6.2.16 Align RRH LO Power	2365
4.6.2.17 Align LO Clock	2365
4.6.2.18 Align VXT Transceiver	2366
4.6.2.19 Align up down converter	2366
4.6.2.20 Align Selected Freq Ranges	2367
Enable Extended Freq Range	2368
Frequency Range	2368
Enable	2370
4.6.2.21 Align External Mixer Path	2370
4.6.2.22 Align Low Band	2371
4.6.2.23 Align High Band	2371
4.6.3 Path Delay Calibration	2372
4.6.3.1 Source Path Delay Calibration	2372
4.6.3.2 Path Delay Correction On/Off(Remote Command only)	2374
4.6.4 Show Alignment Statistics	2374

## Table Of Contents

4.6.5 Timebase DAC	2386
4.6.5.1 Timebase DAC	2386
4.6.5.2 User Value	2387
4.6.6 Advanced	2388
4.6.6.1 Characterize Preselector	2388
4.6.6.2 Characterize Reference Clock	2390
4.6.6.3 Characterize Noise Floor	2392
4.6.6.4 Calibration Temperature History	2394
4.6.6.5 TDS Alignment	2395
4.6.6.6 Backup or Restore Align Data...	2396
Alignment Data Wizard (without Flash)	2397
Perform Backup (without Flash) (Remote Command Only)	2406
Perform Restore (without Flash) (Remote Command Only)	2406
Alignment Data Wizard (with Flash)	2407
Perform Backup (with Flash) (Remote Command Only)	2412
Perform Restore (With Flash) (Remote Command Only)	2412
Restore Alignment Defaults	2412
4.6.6.7 oGRF Preselector	2413
Align Now, 20 Hz to 30 MHz	2413
Align Now, 30 MHz to 3.6 GHz	2414
Align Now, 20 Hz to 3.6 GHz	2415
Alert	2416
4.6.6.8 Scheduler	2417
Schedule Setup	2417
Task	2417
Date/Time	2418
Hour	2419
Minute	2419
Recurrence	2419
Number of Weeks	2419
Day	2420
4.7 Licensing	2421
4.7.1 License Manager	2421
4.7.2 System Software Version Date	2421
4.7.3 Software Support Expiration Date	2422
4.7.4 Network Licenses	2422
4.7.4.1 Application Licenses	2423
4.7.4.2 Instrument Software Options	2423
4.7.4.3 License Checked Out Query (Remote Query Only)	2423

4.7.4.4 List Licenses Checked Out (Remote Query Only)	2424
4.7.4.5 Borrowed Network Licenses	2424
4.7.4.6 Borrow a License	2425
4.7.4.7 Listing Borrowed Licenses and Return a Borrowed License	2426
List Borrowed Licenses (Remote Query Only)	2426
Return a Borrowed License (Remote Command Only)	2427
4.7.4.8 Enabling Network Checkouts While Borrowed	2427
4.7.5 USB Portable Licenses	2428
4.7.6 Configuring Network and USB Portable Licenses	2428
4.7.7 Floating License Manager	2428
4.7.8 Install License (Remote Command Only)	2429
4.7.9 Remove License (Remote Command Only)	2429
4.7.10 List Licenses (Remote Query Only)	2430
4.7.11 Validate License (Remote Query Only)	2431
4.7.12 Host ID Query (Remote Query Only)	2431
4.8 Security	2432
4.8.1 USB Write Protect	2432
4.8.2 Restore Security Defaults	2432
4.9 Diagnostics	2433
4.9.1 Show Hardware Statistics	2433
4.9.2 Pathwave Calibration Advisor...	2433
4.9.3 Query the Mechanical Relay Cycle Count (Remote Query Only)	2433
4.9.4 Query the Operating Temperature Extremes (Remote Query Only)	2434
4.9.5 Query the Elapsed Time since 1st power on (Remote Query Only)	2434
4.10 Service	2435
4.11 SCPI Recorder	2436
4.11.1 Continuous SCPI Recording	2436
4.11.2 Recording Limit	2437
4.11.3 Play All	2437
4.11.4 Play Selected	2437
4.11.5 Copy	2438
4.11.6 Insert *OPC? Below	2438
4.11.7 Move Up	2438
4.11.8 Move Down	2438

## Table Of Contents

4.11.9 Delete Row	2438
4.11.10 Delete All	2438
4.12 System Remote Commands (Remote Commands Only)	2439
4.12.1 List installed Options (Remote Query Only)	2439
4.12.2 Lock the Front-panel keys (Remote Command Only)	2440
4.12.3 Lock Workstation (Remote Command Only)	2440
4.12.4 List SCPI Commands (Remote Query Only)	2442
4.12.5 Front Panel activity history (Remote Query only)	2442
4.12.6 SCPI activity history (Remote Query only)	2443
4.12.7 Instrument start time (Remote Query only)	2443
4.12.8 SCPI Version Query (Remote Query Only)	2444
4.12.9 Date (Remote Command Only)	2444
4.12.10 Time (Remote Command Only)	2444
4.12.11 Input Overload Enable (Remote Command Only)	2445
4.12.12 Power Up (Remote Query Only)	2445
<b>5 Preset</b>	<b>2446</b>
5.1 Preset Dropdown	2449
5.2 Mode Preset	2450
5.3 Restore Mode Defaults	2452
5.4 Input/Output Preset	2453
5.5 Full Mode Preset	2454
5.6 User Preset	2455
5.7 Save User Preset	2457
5.8 User Preset All Modes	2458
5.9 Restore Defaults All Modes	2459
5.10 User Preset All Screens	2460
5.11 Save User Preset All Screens	2461
5.12 Restore Screen Defaults	2462
5.13 Preset Type (Remote Command Only)	2463
5.14 Restart Instrument (Shutdown)	2464
5.15 Restart Application (Application Shutdown)	2465
5.16 System Log Off (Remote Command Only)	2466
5.17 Power Standby (Instrument Shutdown)	2467

<b>6 Input/Output</b>	2468
6.1 RF Source	2469
6.1.1 RF Output	2469
6.1.2 RF Output Port	2469
6.1.3 Half Duplex Output Port	2471
6.1.4 RF Power	2472
6.1.5 T/R Port High Power Attenuator	2472
6.1.6 Amplitude Setup	2472
6.1.6.1 RF Power	2472
6.1.6.2 Set Reference Power	2476
6.1.6.3 Power Ref	2477
6.1.6.4 Power Unit	2477
6.1.6.5 Amptd Offset	2478
6.1.6.6 Amplitude Increment	2479
6.1.7 Frequency	2479
6.1.8 List Sequencer	2479
6.1.8.1 Sequencer	2480
6.1.8.2 Initiate Sequence	2480
6.1.8.3 Repetition	2481
6.1.8.4 Trig Out Type	2481
6.1.8.5 Select Data Marker	2481
6.1.8.6 Manual Trigger Now	2482
6.1.8.7 List Sequencer Setup	2482
Number of Steps	2482
Go To Step	2482
Insert Step Before	2483
Delete Step	2483
Clear List	2483
Step Trigger	2483
Transition Time	2484
Band	2485
Device	2489
Freq/Chan	2490
Power	2491
Waveform	2491
Waveform File	2492
Step Duration	2492
Duration Time	2493

## Table Of Contents

Play Count	2494
Trig Out	2495
Step Configuration (Remote Command Only)	2495
Step Configuration of Step Trigger parameter list (Remote Command Only)	2497
Step Configuration of Transition Time parameter list (Remote Command Only)	2498
Step Configuration of Radio Band parameter list (Remote Command Only)	2498
Step Configuration of Radio Band Link parameter list (Remote Command Only)	2499
Step Configuration of Frequency/Channel Number parameter list (Remote Command Only)	2500
Step Configuration of Power parameter list (Remote Command Only)	2500
Step Configuration of Waveform parameter list (Remote Command Only)	2501
Step Configuration of Step Duration parameter list (Remote Command Only)	2502
Step Configuration of Duration Time or Play Count parameter list (Remote Command Only)	2502
Step Configuration of Output Trigger parameter list (Remote Command Only)	2503
Clear List (Remote Command Only)	2503
6.1.8.8 Remote Software Trigger (Remote command Only)	2504
6.1.8.9 Query List Sequence Initiation Armed Status (Remote Query Only)	2504
6.1.9 Frequency Setup	2504
6.1.9.1 Frequency	2504
6.1.9.2 Channel	2507
6.1.9.3 Radio Setup	2511
Radio Standard/Radio Band	2512
Radio Band Link	2516
6.1.9.4 Set Reference Frequency	2516
6.1.9.5 Freq Reference	2517
6.1.9.6 Freq Offset	2518
6.1.9.7 Freq Increment	2519
6.1.9.8 Rx/Tx Coupling	2520
6.1.9.9 Rx/Tx Offset	2521
6.1.10 Modulation	2521
6.1.11 Modulation Setup	2522
6.1.11.1 AM	2522
6.1.11.2 AM Mod Depth	2522
6.1.11.3 AM Rate	2522
6.1.11.4 AM Rate Increment	2523
6.1.11.5 FM	2523
6.1.11.6 FM Deviation	2524

6.1.11.7 FM Rate	2524
6.1.11.8 FM Rate Increment	2524
6.1.11.9 PM	2525
6.1.11.10 PM Deviation	2525
6.1.11.11 PM Rate	2525
6.1.11.12 PM Rate Increment	2526
6.1.11.13 ARB Setup	2526
Basic Control	2526
ARB State	2526
Sample Rate	2527
Run-Time Scaling	2531
Baseband Freq Offs	2531
Baseband Power	2532
Mkr 1-4 Polarity	2532
Pulse/RF Blank	2532
ALC Hold	2533
Trigger Type	2534
Continuous trigger	2534
Single trigger	2535
Segment Advance trigger	2536
Trigger Source	2536
Bus Trigger Command (Remote Command Only)	2537
Sync to Trigger Source	2537
External Trigger Delay	2538
External Trigger Polarity	2540
Select PXI Line	2541
PXI Trigger Delay	2541
PXI Trigger Polarity	2542
I/Q Adjustments	2542
I/Q Gain	2543
I/Q Delay	2543
RMS	2544
RMS Calculation Mode	2544
Calculate	2545
Use Header RMS	2545
Real-Time 5G NR Compensation	2546
SCS	2547
Filter	2547
Filter Bandwidth	2547
Select Waveform	2548
Segments in ARB Memory	2549
Recall Waveform	2549
Delete Segment From ARB Mem	2549
Delete All From ARB Memory	2549
Query ARB Memory File List (Remote Query Only)	2549
Query ARB Memory Full File List (Remote Query Only)	2550

## Table Of Contents

Waveform Sequences	2550
Build New Sequence	2550
Segment	2551
Waveform	2551
Repetitions	2551
Marker 1 – Marker 4	2551
Sync Seq File	2551
Insert Waveform	2552
Segments in ARB Memory	2552
Delete Segment From ARB Mem	2553
Delete All From ARB Memory	2553
Delete Segment	2553
Save Sequence	2553
Build New Sequence (Remote Command Only)	2553
Edit Selected Sequence	2556
Segment	2556
Waveform	2556
Repetitions	2556
Marker 1 – Marker 4	2556
Sync Seq File	2557
Insert Waveform	2557
Segments in ARB Memory	2558
Delete Segment From ARB Mem	2558
Delete All From ARB Memory	2558
Delete Segment	2558
Waveform Utilities	2558
Add Waveform	2558
Replace Selected Waveform	2559
Clear Waveform from Slot	2560
Lock Waveform in Slot	2560
Slot Status Query (Remote Command Only)	2561
Slots Free Query (Remote Query Only)	2561
Slots Used Query (Remote Query Only)	2561
Slot Waveform Name Query (Remote Command Only)	2562
Slot Waveform Unique ID Query (Remote Command Only)	2562
Locked Waveform Name List Query (Remote Query Only)	2563
Locked Waveform Unique ID List Query (Remote Query Only)	2563
Multi-Pack License multi-module control state (Remote Command Only)	2563
Header Utilities	2564
Clear Header	2564
Save Header	2564
Query Waveform Unique ID (Remote Query Only)	2564
Query Selected Waveform Header info (Remote Query Only)	2565
6.1.12 Trigger Initiate	2566
6.1.13 Source Sync	2566
6.1.13.1 Sync Config	2566
6.1.13.2 Sync Type	2567

6.1.13.3 Sync Settings	2568
Secondary Module List	2568
Sync Settings	2569
Sync Segment 2	2570
Segment 2 Frequency	2570
IP Address	2571
SCPI Socket Port	2571
Add Secondary Module	2571
Delete Secondary Module	2571
Sync Runtime Settings (Remote Command Only)	2572
6.1.13.4 Sync Start	2572
6.1.13.5 Sync Stop	2572
6.1.13.6 Sync Connected (Remote Query Only)	2573
6.1.14 Source Preset	2573
6.2 Input	2574
6.2.1 Select Input	2574
6.2.2 RF Input Port	2583
6.2.3 SA Frequency Extender Firmware Update (Front Panel Only)	2593
6.2.4 SA Frequency Extender Cable Correction	2594
6.2.5 Half Duplex Input Port	2594
6.2.6 Port Information (Remote Command Only)	2595
6.2.7 RF Preselector	2595
6.2.8 Notch Filter	2597
6.2.9 RF Calibrator	2597
6.2.10 RF Coupling	2598
6.2.11 Input Z Correction	2600
6.2.12 All Screens Use Same Input	2601
6.2.13 External Mixer Setup	2601
6.2.13.1 Mixer Presets	2605
6.2.13.2 Mixer Bias	2610
6.2.13.3 Table Type	2611
6.2.13.4 Select VDI CCD Correction	2612
6.2.13.5 Delete All VDI CCD Corrections	2613
6.2.13.6 Harmonic	2613
6.2.13.7 LO Doubler	2614
6.2.13.8 Refresh USB Mixer Connection	2614

## Table Of Contents

6.2.14 Mixer Path	2615
6.2.15 User IF Freq	2616
6.2.16 Signal ID On/Off	2616
6.2.17 Signal ID Mode	2617
6.2.18 Cable IF Loss	2618
6.2.19 I/Q Path	2619
6.2.20 Reference Z	2621
6.2.21 I/Q Setup	2621
6.2.21.1 I Setup	2621
Differential	2621
Input Z	2622
Skew	2623
Combined Differential/Input Z (Remote Command Only)	2624
6.2.21.2 I Probe	2624
Attenuation	2625
Offset	2626
Coupling	2626
Clear Calibration	2627
6.2.21.3 Calibrate	2627
I/Q Isolation Calibration	2628
I/Q Isolation Calibration Time (Remote Query Only)	2629
I Port	2629
I Port Probe Calibration Time (Remote Query Only)	2629
I-bar Port	2630
I-bar Port Probe Calibration Time (Remote Query Only)	2630
6.2.21.4 Q Setup	2630
Q Same as I	2630
Differential	2631
Input Z	2632
Skew	2633
6.2.21.5 Q Probe	2633
Attenuation	2633
Offset	2634
Coupling	2634
Clear Calibration	2635
6.2.21.6 Calibrate	2635
Q Port	2636
Q Port Probe Calibration Time (Remote Query Only)	2636
Q-bar Port	2636
Q-bar Probe Calibration Time (Remote Query Only)	2637
6.2.22 I/Q Cable Calibrate	2637

6.2.22.1 I Port	2638
6.2.22.2 I-bar Port	2638
6.2.22.3 Q Port	2639
6.2.22.4 Q-bar Port	2639
6.2.22.5 I/Q Cable Calibration Time (Remote Query Only)	2640
6.2.23 Audio Input Channel	2640
6.2.24 Audio Calibrator	2640
6.2.25 Audio Coupling	2640
6.2.26 Audio Input Ground	2641
6.2.27 Audio In Impedance	2641
6.2.28 Input/Output Preset	2641
6.3 External Gain	2643
6.3.1 External Preamp	2643
6.3.2 External Gain - MS	2645
6.3.3 External Gain - BTS	2646
6.3.4 I Ext Gain	2647
6.3.5 Q Ext Gain	2648
6.3.6 Q Gain in I+jQ	2648
6.4 Data Source	2649
6.4.1 Data Source	2659
6.4.2 Current Meas -> Capture Buffer	2660
6.5 Corrections	2661
6.5.1 Select Correction	2662
6.5.2 Correction On/Off	2663
6.5.3 Correction Port	2663
6.5.4 Correction Direction	2665
6.5.5 Edit Correction	2666
6.5.5.1 Select Correction	2667
6.5.5.2 Frequency	2667
6.5.5.3 Amplitude	2668
6.5.5.4 Go to Row	2668
6.5.5.5 Insert Row Below	2668
6.5.5.6 Delete Row	2668

## Table Of Contents

6.5.5.7 Scale X Axis	2668
6.5.5.8 Delete Correction	2669
6.5.5.9 Correction Graph	2669
6.5.6 Edit Correction Settings	2670
6.5.6.1 Select Correction	2670
6.5.6.2 Freq Interpolation	2670
6.5.6.3 Transducer Unit	2672
6.5.6.4 Description	2673
6.5.6.5 Comment	2673
6.5.7 Complex Corrections	2674
6.5.7.1 Go To Row (Select Correction)	2675
6.5.7.2 Delete Row	2675
6.5.7.3 Delete All	2675
6.5.7.4 Correction On	2676
6.5.7.5 Correction Port	2676
6.5.7.6 Direction	2677
6.5.7.7 Description	2678
6.5.7.8 Comment	2678
6.5.7.9 File	2679
6.5.7.10 Freq Interpolation (Remote Command Only)	2679
6.5.7.11 Set Data (Remote Command Only)	2680
6.5.8 Apply Corrections	2680
6.5.9 Delete All Corrections	2681
6.5.10 Correction Group On/Off	2682
6.5.11 Break	2682
6.5.12 Reload Corrections From Files	2685
6.5.13 Edit Correction Group	2685
6.5.13.1 Go to Row	2685
6.5.13.2 Insert Row Below	2685
6.5.13.3 Delete Row	2686
6.5.13.4 Select File	2686
6.5.13.5 Specify File	2686
6.5.13.6 Remove File	2686

6.5.13.7 Correction Trace Display	2686
6.5.13.8 Description	2687
6.5.13.9 Comment	2687
6.5.13.10 Start Frequency	2687
6.5.13.11 Stop Frequency	2688
6.5.14 Merge Correction Data (Remote Command Only)	2688
6.5.15 Set (Replace) Data (Remote Command Only)	2689
6.5.16 Correction Group Range Data (Remote Command Only)	2689
6.5.17 Delete Correction Group Range (Remote Command Only)	2690
6.6 Freq Ref Input	2691
6.6.1 Freq Ref Input	2691
6.6.2 Ext Ref Freq	2696
6.6.3 Default External Ref Freq	2697
6.6.4 LO Ref Input	2697
6.6.5 Ref Lock BW	2698
6.6.6 Reference Oscillator On/Off (Remote Command Only)	2699
6.6.6.1 Select Ref	2699
6.6.6.2 Freq Ref In	2700
6.6.6.3 External Freq Ref	2700
6.6.6.4 Ext Ref Locked (Remote Query Only)	2700
6.7 Output	2702
6.7.1 Analog Out	2702
6.7.2 Screen Video Level	2706
6.7.3 Digital Bus Out	2707
6.7.4 Wideband Digital Bus	2707
6.7.5 Data Stream	2710
6.7.6 I/Q Cal Out	2710
6.7.7 Aux IF Out	2711
6.7.8 Arbitrary IF Freq	2713
6.7.9 Ext/Wide IF Out	2713
6.7.10 IF2 Out	2714
6.7.11 REF Out	2715
6.7.12 LO Ref Out	2715

## Table Of Contents

6.8 Trigger Output	2717
6.8.1 Trig 1 – 4 Out	2717
6.8.2 Trig 1 – 4 Out Polarity	2719
6.8.3 Trig 1 – 4 Out Device	2720
6.8.4 Src PXI Trig Out	2720
6.8.5 Src Trig Out Polarity	2721
6.8.6 Select Src PXI Line	2721
6.8.7 Analyzer PXI Trig Out	2722
6.8.8 Analyzer Trig Out Polarity	2723
6.8.9 Select Analyzer PXI Line	2723
6.8.10 Source Internal Trig Out	2723
6.8.11 Source Internal Trig Out Polarity	2724
6.9 Calibration	2726
6.9.1 Configuration	2726
6.9.1.1 Cal Group	2728
6.9.1.2 Calibrate Checked Rows	2728
6.9.1.3 Apply Cal Group	2729
6.9.1.4 Abort Calibration	2729
6.9.1.5 Copy From Cal Group	2730
6.9.1.6 Copy	2730
6.9.1.7 Cal Input	2731
6.9.1.8 Freq Offset	2731
6.9.1.9 Select Calibrator	2732
6.9.1.10 Identify RCal Module	2732
6.9.1.11 RCal Module Serial Number (Remote Query Only)	2732
6.9.1.12 RCal Reference	2732
6.9.1.13 RCal Status	2733
RCal Status (Remote Query Only)	2734
All RCal Status (Remote Query Only)	2734
6.9.1.14 Go to Row	2734
6.9.1.15 Insert Row Below	2735
6.9.1.16 Description	2735
6.9.1.17 Use Current Meas	2735

6.9.1.18 Duplicate Row	2736
6.9.1.19 Delete Row	2736
6.9.1.20 Delete All	2736
6.9.1.21 Calibrate	2736
6.9.1.22 Apply	2737
6.9.1.23 Name	2737
6.9.1.24 Last Cal	2738
6.9.1.25 Cal Applied	2738
6.9.1.26 Cal Type	2739
6.9.1.27 Start Freq	2739
6.9.1.28 Stop Freq	2740
6.9.1.29 Freq Step	2741
6.9.1.30 Freq Points	2741
6.9.1.31 Mech Atten Type	2742
6.9.1.32 Mech Atten Start	2742
6.9.1.33 Mech Atten Stop	2743
6.9.1.34 Mech Atten Step	2744
6.9.1.35 Elec Atten Type	2744
6.9.1.36 Elec Atten Start	2744
6.9.1.37 Elec Atten Stop	2745
6.9.1.38 Elec Atten Step	2746
6.9.1.39 Full Range Atten Type	2746
6.9.1.40 Full Range Atten Start	2747
6.9.1.41 Full Range Atten Stop	2747
6.9.1.42 Frequency Extender Attenuation Type	2748
6.9.1.43 Frequency Extender Attenuation Start	2749
6.9.1.44 Frequency Extender Attenuation Stop	2749
6.9.1.45 Frequency Extender Atten Step	2750
6.9.1.46 IF Path	2750
6.9.1.47 IF Gain	2751
6.9.1.48 Preamp	2752
6.9.1.49 Low Noise Amplifier (LNA)	2752
6.9.1.50 $\mu$ W Path Control	2753

## Table Of Contents

6.9.1.51	Coupling	2753
6.9.1.52	Phase Noise Optimization	2754
6.9.1.53	Phase Noise Optimization All Option	2759
6.9.1.54	Mixing Mode	2760
6.9.1.55	Match State	2760
6.9.2	Cal Group	2761
6.9.3	Apply Cal Group	2761
6.9.4	All Apply Cal Group Off	2761
6.9.5	Connection	2762
6.10	Calibrator Control	2763
6.10.1	Select Cal Source	2763
6.10.2	Cal Output	2763
6.10.3	Cal Frequency	2764
6.10.4	Cal Signal Type	2764
6.10.5	Cal Comb Spacing	2764
6.10.6	Calibrator Reference	2765
6.11	Advanced	2766
6.11.1	T/R Port High Power Attenuator	2766
6.12	Aux I/O Control	2768
6.12.1	Data 0 – Data 7	2768
6.12.2	Aux IO Control (Remote Command Only)	2768
<b>7</b>	<b>Save/Recall/Print</b>	<b>2769</b>
7.1	Quick Save	2770
7.2	Recall	2773
7.2.1	Recall From File / Open	2774
7.2.2	State	2775
7.2.2.1	Recall Type	2776
7.2.2.2	Register 1 thru Register 16	2777
7.2.2.3	Edit Register Names	2778
7.2.3	Trace+State	2778
7.2.3.1	Recall To Trace	2779
7.2.3.2	Register 1 thru Register 16	2779
7.2.3.3	Edit Register Names	2780

7.2.4	Screen Config + State	2780
7.2.5	Measurement Data	2781
7.2.5.1	Data Type	2781
	Trace	2781
7.2.6	Limit	2782
7.2.6.1	Select Limit	2783
7.2.7	Correction	2783
7.2.7.1	Select Correction	2784
7.2.8	Complex Correction	2784
7.2.8.1	Select Complex Correction	2785
7.2.9	Recall VDI CCD Correction	2785
7.2.10	SCPI Recorder	2785
7.2.10.1	Recall From File	2786
7.2.11	Mask	2786
7.2.12	Sequence	2786
7.2.13	Waveform	2786
7.2.13.1	Load Segment to ARB Memory	2789
7.2.13.2	Delete Segment From ARB Mem	2790
7.2.13.3	Delete All From ARB Memory	2790
7.2.13.4	Set Default Directory (Remote Command Only)	2791
7.2.13.5	Query ARB Memory File List (Remote Query Only)	2791
7.2.13.6	Query ARB Memory Full File List (Remote Query Only)	2791
7.2.14	Power Sensor Cal Factor	2792
7.2.15	Recording	2792
7.2.15.1	Data Type	2793
7.2.15.2	Channel	2794
7.2.15.3	Reset	2794
7.2.15.4	Recalled data channel table (Display only)	2795
7.2.16	Component Carrier Setup	2795
7.2.17	Loss Comp	2796
7.3	Save	2798
7.3.1	Save to File / Save As	2799
7.3.2	State	2801

## Table Of Contents

7.3.2.1 Register 1 thru Register 16	2802
7.3.2.2 Edit Register Names	2802
7.3.3 Trace+State	2803
7.3.3.1 Save From Trace	2805
7.3.3.2 Register 1 thru Register 16	2806
7.3.3.3 Edit Register Names	2806
7.3.4 Screen Config + State	2807
7.3.5 Measurement Data	2807
7.3.5.1 Save From	2808
7.3.5.2 Data Type	2808
Meas Results	2809
CHP Meas Results File Contents	2810
OBW Meas Results File Contents	2813
ACP Meas Results File Contents	2815
SPUR Meas Results File Contents	2822
SEM Meas Results File Contents	2826
CCDF Meas Results File Contents	2832
IQ Waveform Meas Results File Contents	2836
7.3.6 Limit	2837
7.3.6.1 Select Limit	2841
7.3.7 Correction	2841
7.3.7.1 Select Correction	2845
7.3.8 SCPI Recorder	2845
7.3.8.1 Save To File	2845
Saving a SCPI Recording as a Python Script	2845
7.3.9 Mask	2847
7.3.10 Waveform Sequence	2847
7.3.11 Screen Image	2847
7.3.11.1 Theme	2849
7.3.12 Power Sensor Cal Factor	2850
7.3.13 Recording	2850
7.3.13.1 Data Type	2851
7.3.13.2 Channel	2852
7.3.14 Component Carrier Setup	2853
7.3.15 Remote Only Commands	2854
7.3.15.1 Mass Storage Catalog (Remote Command Only)	2854

7.3.15.2	Mass Storage Change Directory (Remote Command Only)	2855
7.3.15.3	Mass Storage Copy (Remote Command Only)	2855
7.3.15.4	Mass Storage Device Copy (Remote Command Only)	2855
7.3.15.5	Mass Storage Delete (Remote Command Only)	2856
7.3.15.6	Mass Storage Data (Remote Command Only)	2856
7.3.15.7	Mass Storage Make Directory (Remote Command Only)	2856
7.3.15.8	Mass Storage Move (Remote Command Only)	2857
7.3.15.9	Mass Storage Remove Directory (Remote Command Only)	2857
7.3.15.10	Mass Storage Determine Removable Media (Remote Query Only)	2857
7.3.15.11	Mass Storage Determine Removable Media Label (Remote Command Only)	2858
7.3.15.12	Mass Storage Determine Removable Media Write-protect status (Remote Query Only)	2858
7.3.15.13	Mass Storage Determine Removable Media size (Remote Query Only)	2858
7.3.15.14	:SYSTem:SET (Remote Command Only)	2859
7.4	Print	2860
7.5	Page Setup	2861
<b>8</b>	<b>Trigger</b>	<b>2863</b>
8.1	Trigger	2864
8.1.1	Select Trig Source	2864
8.1.1.1	Free Run	2877
8.1.1.2	Video/ADC	2877
8.1.1.3	ADC Trigger	2878
8.1.1.4	Line	2879
8.1.1.5	External 1	2879
8.1.1.6	External 2	2880
8.1.1.7	External 3	2881
8.1.1.8	Audio External	2882
8.1.1.9	RF Burst	2882
8.1.1.10	Periodic	2883
8.1.1.11	I/Q Mag	2885
8.1.1.12	Input I	2885

## Table Of Contents

8.1.1.13 Input Q	2886
8.1.1.14 I (Demodulated)	2886
8.1.1.15 Q (Demodulated)	2887
8.1.1.16 Aux I/Q Mag	2887
8.1.1.17 PXI	2888
8.1.1.18 Internal	2888
8.1.1.19 Prot Channel Detection	2889
8.1.1.20 Prot Frame Aligned	2889
8.1.1.21 Prot Event	2890
8.1.2 Trigger Level	2890
8.1.3 Trigger Delay	2892
8.1.4 Trigger Slope	2896
8.1.5 Trigger Level Absolute/Relative	2897
8.1.6 Absolute Trigger Level	2898
8.1.7 Relative Trigger Level	2898
8.1.8 Period	2900
8.1.9 Offset	2901
8.1.10 Reset Offset Display	2902
8.1.11 Offset Adjust (Remote Command Only)	2902
8.1.12 Sync Source	2903
8.1.13 TV Line	2903
8.1.14 Field	2904
8.1.15 Standard	2905
8.1.16 Trigger Center Frequency	2906
8.1.17 Trigger BW	2906
8.1.18 Zero Span Delay Compensation On/Off	2907
8.1.19 Select PXI Line	2907
8.1.20 Reset Sync Monitor	2908
8.1.21 Trigger Optimization	2909
8.1.22 Trigger Settings Diagram	2910
8.2 Gate Source	2911
8.2.1 Select Gate Source	2911
8.2.2 Sync Holdoff	2912

8.3 Gate Settings	2914
8.3.1 Gate On/Off	2914
8.3.2 Gate View On/Off	2915
8.3.3 Gate Delay	2917
8.3.4 Gate Length	2918
8.3.5 Gate Method	2919
8.3.6 Control Edge/Level	2920
8.3.7 Gate Holdoff	2921
8.3.8 Gate View Sweep Time	2922
8.3.9 Gate View Start Time	2923
8.3.10 Gate Delay Compensation	2924
8.3.11 Min Fast Position Query (Remote Query Only)	2925
8.3.12 Gate Preset (Remote Command Only)	2926
8.3.13 Gate Level (Remote Command Only)	2926
8.3.14 Gate Polarity (Remote Command Only)	2926
8.4 Enables the hardware accelerated stepped FFT gating feature (Display only)	2928
8.5 Periodic Sync Src	2929
8.5.1 Select Periodic Timer Sync Source	2929
8.6 Auto/Holdoff	2930
8.6.1 Trig Holdoff	2930
8.6.2 Auto Trig	2930
8.6.3 Holdoff Type	2931
<b>9 Programming the Instrument</b>	<b>2933</b>
9.1 List of Supported SCPI Commands	2934
*	2934
A	2934
C	2935
D	2942
E	2945
F	2945
H	2946
I	2946

## Table Of Contents

L	2947
M	2947
O	2949
R	2949
S	2949
T	2986
U	2987
9.2 IEEE 488.2 Common Commands	2988
9.2.1 *CAL? - Calibration Query	2988
9.2.2 *CLS - Clear Status	2989
9.2.3 *ESE - Standard Event Status Enable	2989
9.2.4 *ESR? - Standard Event Status Register Query	2990
9.2.5 *IDN? - Identification Query	2990
9.2.6 *OPC? - Operation Complete	2991
9.2.7 *OPT? - Query Instrument Options	2992
9.2.8 *RCL - Recall Instrument State	2992
9.2.9 *RST - Reset	2992
9.2.10 *SAV - Save Instrument State	2993
9.2.11 *SRE - Service Request Enable	2993
9.2.12 *STB? - Status Byte Query	2994
9.2.13 *TRG - Trigger	2994
9.2.14 *TST? - Self Test Query	2994
9.2.15 *WAI - Wait-to-Continue	2995
9.3 SCPI Operation and Results Query	2996
9.3.1 Mode Control	2996
9.3.2 Measurement Control	2996
9.3.2.1 CONFigure	2997
9.3.2.2 INITiate	2998
9.3.2.3 FETCh	2998
9.3.2.4 READ	2999
9.3.2.5 MEASure	3000
9.3.3 Trace Formatting Commands	3001
9.3.3.1 Clear Trace (Remote Command Only)	3001

9.3.3.2	Send/Query Trace Data (Remote Command Only)	3002
9.3.3.3	Format Data: Numeric Data (Remote Command Only)	3004
9.3.3.4	Format Data: Byte Order (Remote Command Only)	3005
9.3.3.5	Calculate/Compress Trace Data Query (Remote Command Only)	3005
9.3.3.6	Calculate Peaks of Trace Data (Remote Command Only)	3011
9.3.3.7	Smooth Trace Data (Remote Command Only)	3013
9.3.3.8	Number of Points for Smoothing (Remote Command Only)	3014
9.3.3.9	Mean Trace Data (Remote Command Only)	3015
9.4	Status Register System & STATus Subsystem	3016
9.4.1	Status Register System Diagram	3016
9.4.2	Status Register Hierarchy	3018
9.4.3	Status Register SCPI Commands	3020
9.4.4	How to Use Status Registers	3021
9.4.4.1	Polling Method	3021
	Monitoring Options	3022
9.4.4.2	Service Request (SRQ) Method	3022
	Using the Service Request (SRQ) Method	3022
9.4.5	Status Register Bit Parameters	3024
9.4.6	Status Subsystem Registers and Commands	3025
9.4.6.1	Status Byte Register	3025
	Service Request Enable Register	3028
	Preset the Status Byte	3028
9.4.6.2	Standard Event Status Register	3029
	Standard Event Status Enable Register	3030
9.4.6.3	Operation Register	3031
	Operation Condition Query	3032
	Operation Enable	3033
	Operation Event Query	3033
	Operation Negative Transition	3034
	Operation Positive Transition	3034
9.4.6.4	Operation Instrument Register	3035
	Operation Instrument Condition	3035
	Operation Instrument Enable	3036
	Operation Instrument Event Query	3036
	Operation Instrument Negative Transition	3037
	Operation Instrument Positive Transition	3037
9.4.6.5	Questionable Register	3038

## Table Of Contents

Questionable Condition	3039
Questionable Enable	3039
Questionable Event Query	3040
Questionable Negative Transition	3040
Questionable Positive Transition	3040
9.4.6.6 Questionable Power Register	3041
Questionable Power Condition	3042
Questionable Power Enable	3042
Questionable Power Event Query	3043
Questionable Power Negative Transition	3043
Questionable Power Positive Transition	3043
9.4.6.7 Questionable Temperature Register	3044
Questionable Temperature Condition	3045
Questionable Temperature Enable	3045
Questionable Temperature Event Query	3046
Questionable Temperature Negative Transition	3046
Questionable Temperature Positive Transition	3046
9.4.6.8 Questionable Frequency Register	3047
Questionable Frequency Condition	3048
Questionable Frequency Enable	3048
Questionable Frequency Event Query	3049
Questionable Frequency Negative Transition	3049
Questionable Frequency Positive Transition	3050
9.4.6.9 Questionable Calibration Register	3050
Questionable Calibration Condition	3051
Questionable Calibration Enable	3052
Questionable Calibration Event Query	3052
Questionable Calibration Negative Transition	3053
Questionable Calibration Positive Transition	3053
9.4.6.10 Questionable Calibration Extended Needed Register	3054
Questionable Calibration Extended Needed Condition	3055
Questionable Calibration Extended Needed Enable	3055
Questionable Calibration Extended Needed Event Query	3056
Questionable Calibration Extended Needed Negative Transition	3056
Questionable Calibration Extended Needed Positive Transition	3056
9.4.6.11 Questionable Calibration Extended Failure Register	3057
Questionable Calibration Extended Failure Condition	3058
Questionable Calibration Extended Failure Enable	3058
Questionable Calibration Extended Failure Event Query	3059
Questionable Calibration Extended Failure Negative Transition	3059
Questionable Calibration Extended Failure Positive Transition	3060
9.4.6.12 Questionable Calibration Skipped Register	3060
Questionable Calibration Skipped Condition	3061
Questionable Calibration Skipped Enable	3062
Questionable Calibration Skipped Event Query	3062

Questionable Calibration Skipped Negative Transition	3062
Questionable Calibration Skipped Positive Transition	3063
9.4.6.13 Questionable Integrity Register	3063
Questionable Integrity Condition	3065
Questionable Integrity Enable	3065
Questionable Integrity Event Query	3066
Questionable Integrity Negative Transition	3066
Questionable Integrity Positive Transition	3066
9.4.6.14 Questionable Integrity Signal Register	3067
Questionable Integrity Signal Condition	3068
Questionable Integrity Signal Enable	3068
Questionable Integrity Signal Event Query	3069
Questionable Integrity Signal Negative Transition	3069
Questionable Integrity Signal Positive Transition	3070
9.4.6.15 Questionable Integrity Output Register	3070
Questionable Integrity Output Condition	3071
Questionable Integrity Output Enable	3071
Questionable Integrity Output Event Query	3072
Questionable Integrity Output Negative Transition	3072
Questionable Integrity Output Positive Transition	3073
9.4.6.16 Questionable Integrity Uncalibrated Register	3073
Questionable Integrity Uncalibrated Condition	3074
Questionable Integrity Uncalibrated Enable	3075
Questionable Integrity Uncalibrated Event Query	3075
Questionable Integrity Uncalibrated Negative Transition	3075
Questionable Integrity Uncalibrated Positive Transition	3076
<b>10 Hardware-Accelerated Fast Power Measurement (Remote Command Only)</b>	<b>3077</b>
10.1 Reset Fast Power Measurement (Remote Command Only)	3078
10.2 Reset Fast Power Measurement (Remote Command Only)	3079
10.2.1 Acquisition Time	3079
10.2.2 Center Frequency	3079
10.2.3 DC Coupled	3079
10.2.4 Detector Type	3080
10.2.5 Do Noise Correction	3080
10.2.6 Do Spur Suppression	3080
10.2.7 Electronic Attenuator Bypass	3081
10.2.8 Electronic Attenuation	3081
10.2.9 External Reference Frequency	3081
10.2.10 Frequency Reference Source	3082

## Table Of Contents

10.2.11 IF Gain	3082
10.2.12 IF Type	3082
10.2.13 Include Power Spectrum	3082
10.2.14 Mechanical Attenuation	3083
10.2.15 Preamp Mode	3083
10.2.16 Resolution Bandwidth Mode	3083
10.2.17 Resolution Bandwidth	3084
10.2.18 Trigger Delay	3084
10.2.19 Trigger Level	3084
10.2.20 Trigger Slope	3084
10.2.21 Trigger Source	3084
10.2.22 Trigger Timeout	3085
10.2.23 Signal Input	3085
10.2.24 Use Preselector	3085
10.2.25 Channel Bandwidth Array	3085
10.2.26 Channel Filter Type Array	3086
10.2.27 Channel Filter Alpha Array	3086
10.2.28 Channel Measurement Function Array	3086
10.2.29 Channel Offset Frequency Array	3087
10.2.30 Channel Occupied Bandwidth Percent Array	3087
10.2.31 Channel x-dB Bandwidth Array	3088
10.3 Define Fast Power Measurement Query (Remote Command Only)	3089
10.4 Configure Fast Power Measurement (Remote Command Only)	3090
10.5 Initiate Fast Power Measurement (Remote Command Only)	3091
10.6 Fetch Fast Power Measurement (Remote Command Only)	3092
10.7 Execute Fast Power Measurement (Remote Command Only)	3093
10.8 Binary Read Fast Power Measurement (Remote Command Only)	3094
10.9 Diagnostic Binary Read Fast Power Measurement (Remote Command Only)	3095

# 1 Documentation Roadmap

This section describes the Keysight products covered by this document, and provides links to related documentation.

- ["Products Covered by this Document" on page 100](#)
- ["Additional Documentation" on page 101](#)

- 1 Documentation Roadmap
- 1.1 Products Covered by this Document

## 1.1 Products Covered by this Document

For the full list of instrument models covered by this documentation, see the title page: ["LTE & LTE-A TDD Mode User's & Programmer's Reference" on page 1](#).

## 1.2 Additional Documentation

If your instrument or computer has an internet connection, then you can access the latest editions of all relevant X-Series documentation via the links below.

*This document is available in 3 formats:*

- **Embedded Help**, in the instrument
- **Online Help**, at Keysight's web site

For information on this Mode, browse to:

<http://rfmw.em.keysight.com/wireless/helpfiles/LTEATDDMode/FlexUI.htm>

- **Users & Programmers Reference**, in downloadable PDF format

For information on this Mode, download from:

<http://literature.cdn.keysight.com/litweb/pdf/N9082-90006.pdf>

The following documents are available online at keysight.com:

[X-Series Messages Guide](#)

The following documents are in downloadable PDF format:

### **Getting Started Guides & Security**

- [N90x0B Getting Started & Troubleshooting Guide](#)
- [N9041B Getting Started & Troubleshooting Guide](#)
- [X-Series Status Register System Diagram](#)
- [Security Features & Statement of Volatility](#)

### **Specifications Guides**

- [N9000B CXA Specifications Guide](#)
- [N9010B EXA Specifications Guide](#)
- [N9020B MXA Specifications Guide](#)
- [N9030B PXA Specifications Guide](#)
- [N9040B UXA Specifications Guide](#)

- 1 Documentation Roadmap
- 1.2 Additional Documentation

- [N9041B UXA Specifications Guide](#)

### **Measurement Guides**

- [Spectrum Analyzer Mode Measurement Guide](#)
- [Real-Time Spectrum Analyzer Measurement Guide](#)
- [Noise Figure Measurement Guide](#)
- [Analog Demod Measurement Application Measurement Guide](#)
- [Phase Noise Measurement Application Measurement Guide](#)
- [EMI Measurement Application Measurement Guide](#)
- [M9484C VXG Signal Generator and X-Series Signal Analyzers Measurement Guide](#)

### **Service Guides**

- [N9010B EXA Service Guide](#)
- [N9020B MXA Service Guide](#)
- [N9030B PXA Service Guide](#)
- [N9040B UXA Service Guide](#)

## 2 User Interface

Here are the basic elements of the Multitouch User Interface. For more information, tap a topic.

Included in this section are also topics for several front panel keys not described in other topics. Tap one of these topics for more information.



"Cancel key" on  
page 149



"Onscreen Keyboard key" on  
page 150



"Touch On/Off Key" on  
page 151



"Tab key" on  
page 152

## 2.1 Screen Tabs

In the X-Series Multitouch User Interface (or Multitouch UI), you can run many different Measurement Applications, or “Modes”. Examples are Spectrum Analyzer Mode, LTE-A FDD Mode, IQ Analyzer Mode, and Real Time Spectrum Analyzer Mode. Each Mode has its own set of controls, windows and SCPI commands.

Each Mode runs within a “Screen”. The Multitouch UI supports multiple “Screens” (see ["Multiscreen" on page 193](#) for more information). Each screen displays one Measurement in one Mode. The set of configured screens is shown across the top of the display as a set of Screen Tabs, with a + tab at the right for adding new Screens:



You can see up to six tabs at a time on the UXA, and 4 at a time on the CXA, EXA, MXA and PXA. If there are more Screens configured than this, arrows appear to the left and right of the Screen Tabs; pressing the arrows scrolls the Screen Tabs to the left or right. A scroll bar also appears at the bottom of the Screen Tabs, indicating that you can scroll the tabs by dragging them with your finger; you can also scroll them by dragging the scroll bar.

Pressing a Screen Tab selects that screen for operation. Pressing the blue (selected) Screen Tab is the same as pressing the Mode/Meas front panel key.



Both actions open the ["Mode/Meas/View Dialog" on page 105](#). In addition, if you have a PC keyboard plugged in, the sequence CTL-SHIFT-M will open up this dialog.


The + tab at the right of the Screen Tabs bar adds a new Screen by cloning the current screen. The new Screen has the identical setup and settings as the current Screen. You can then change the Mode, Measurement and/or settings of the new Screen.

You can define up to 16 screens at once.

### Example Multiscreen View

The example below shows a four-screen display in Multiscreen view.

The Screen called “Real-Time SA 2” is selected, as indicated by its blue tab. Touching any other screen or tab selects the screen for that tab and brings it to the foreground.

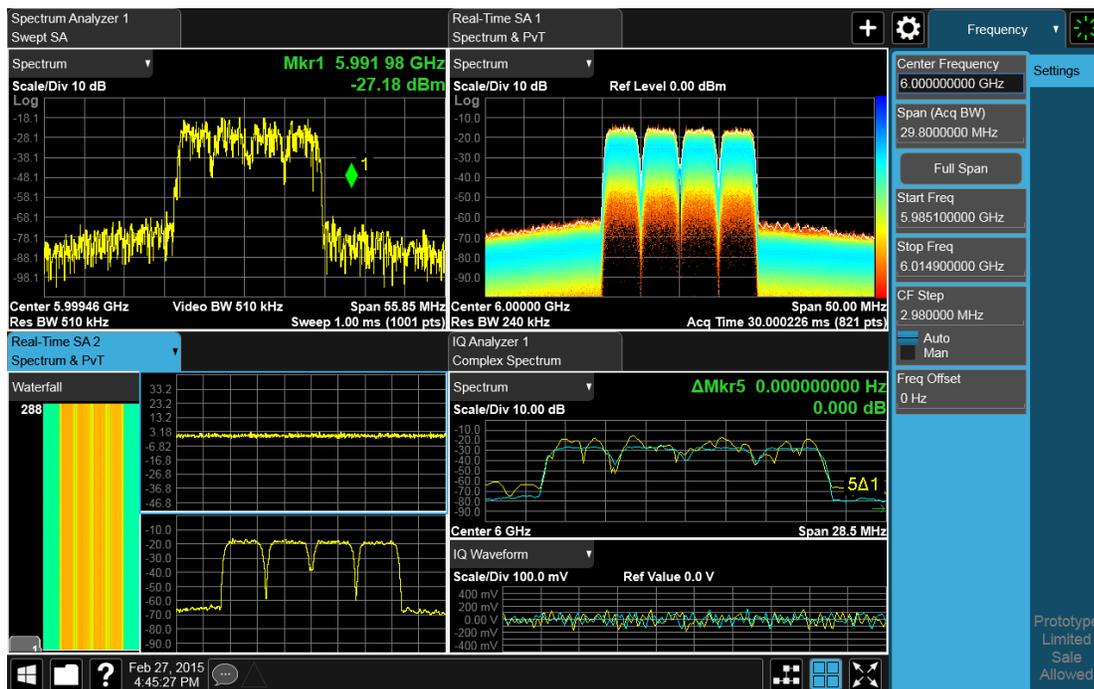

The following topics provide more information:

- "Mode/Meas/View Dialog" on page 105
- "Add Screen" on page 122
- "Multiscreen" on page 193


### 2.1.1 Mode/Meas/View Dialog

The Mode/Meas/View dialog opens when you press the selected (blue) Screen tab (see "Screen Tabs" on page 104) or the **Mode/Meas** front panel key.

This dialog displays lists of available Modes, Measurements and Views, as well as the "Sequencer" on page 116 control for configuring Screens.

## 2 User Interface

### 2.1 Screen Tabs

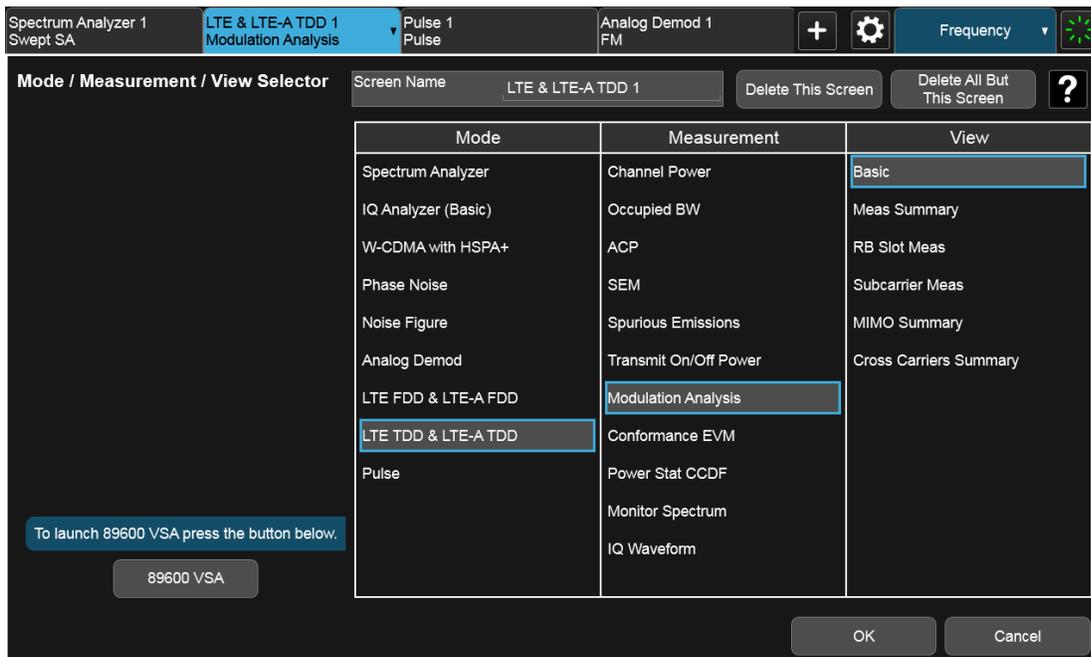

#### 2.1.1.1 Mode

The first column in the Mode/Meas/View dialog allows you to select the desired Mode from those currently licensed in your instrument.

Modes, also known as “measurement applications”, are collections of measurement capabilities packaged together to provide you with an instrument personality specific to your measurement needs. Each Mode is ordered separately by Model Number and must be licensed in order for it to be available in the instrument.

You select the Mode you want to run using the Mode/Meas/View dialog. Once a Mode is selected, only the commands that are valid for that mode can be executed

For more information on Modes, preloading Modes, and memory requirements for Modes, see ["More Information" on page 109](#)

The `:INSTRUMENT[:SElect]` command is used to remotely select a Mode by sending the instrument a parameter which represents the name of the desired Mode. The Mode Names may be found in the table under ["Index to Modes" on page 108](#).

The `:INSTRUMENT:NSElect` command is used to remotely select a Mode by sending the Mode Number of the desired Mode. See ["Instrument Number Select" on page 107](#). The Mode Numbers may be found in the table under ["Index to Modes" on page 108](#).

The `:INSTRUMENT:CONFigure` command causes a Mode and Measurement switch at the same time. This generally results in faster overall switching than sending the

`:INSTRument:SElect` and `CONFigure` commands separately. See "[Mode and Measurement Select](#)" on page 107.

Remote Command	<code>:INSTRument[:SElect] &lt;mode_id&gt;</code> where <code>&lt;mode_id&gt;</code> is one of the values listed in " <a href="#">Index to Modes</a> " on page 108 below <code>:INSTRument[:SElect]?</code>
Example	<code>:INST SA</code>
Notes	A list of the valid mode choices is returned by the <code>:INST:CAT?</code> query
Preset	The default Mode is set to <code>SA</code> on <b>Restore System Defaults-&gt;All</b> , unless noted below: For N8973B, N8974B, N8975B, or N8976B: <code>NFIG</code>
State Saved	Saved in instrument state
Annunciation	Application Title is in the Screen Tab

### Instrument Number Select

Remote Command	<code>:INSTRument:NSElect &lt;integer&gt;</code> <code>:INSTRument:NSElect?</code>
Example	<code>:INST:NSEL 1</code>
Notes	The Mode Numbers may be found in the table under " <a href="#">Index to Modes</a> " on page 108 SA mode is number 1 The command is sequential: that is, continued parsing of commands cannot proceed until the instrument select is complete and the resultant SCPI trees are available
Preset	The default Mode is set to <code>1</code> by <b>Restore System Defaults-&gt;All</b> , unless noted in the table above
State Saved	Saved in instrument state

### Mode and Measurement Select

Remote Command	<code>:INSTRument:CONFigure:&lt;mode_id&gt;:&lt;meas&gt;</code> where <code>&lt;mode_id&gt;</code> is a valid parameter for the <code>:INST:SEL</code> command and <code>&lt;meas&gt;</code> is a valid parameter for the <code>:CONF</code> command in the Mode specified by <code>&lt;mode&gt;</code>
Example	<code>:INST:CONF:SA:SAN</code> selects the Spectrum Analyzer mode and the Swept SA measurement <code>:INST:CONF:WCDMA:RHO</code> selects the WCDMA mode and the Mod Accuracy measurement
Notes	The available parameters for <code>&lt;mode_id&gt;</code> are dependent upon installed and licensed applications resident in the instrument. The available parameters for <code>&lt;meas&gt;</code> are dependent on the <code>&lt;mode_id&gt;</code> parameter and the valid measurements available for that mode, which can depend on model numbers and installed options In general this command will execute more quickly than sending the equivalent separate <code>:INST:SEL</code>

and **:CONF** commands


### Index to Modes

The Mode Number in the table below is the parameter for use with the **:INSTrument:NSElect** command. The Mode Parameter is the parameter for use with the **:INSTrument[:SElect]** command. Your actual choices will depend upon which applications are installed in your instrument.

Mode	Mode Number	Mode Parameter <mode_id>
5G NR	109	NR5G
89601 VSA	101	VSA89601
Analog Demod	234	ADEM0D
Avionics	232	AVIONIC
Bluetooth	228	BT00th
Channel Quality / Group Delay	161	CQM
EMI Receiver	141	EMI
GSM/EDGE/EDGE Evo	13	EDGE GSM
I/Q Analyzer (Basic)	8	BASIC
LTE FDD & LTE-A FDD	107	LTEAFDD
LTE TDD & LTE-A TDD	108	LTEATDD
Measuring Receiver	233	MRECEIVE
MSR	106	MSR
Noise Figure	219	NFIGure
Phase Noise	14	PNOISE
Power Amplifier	81	PA
Pulse	151	PULSEX
Radio Test	300	RTS
Real Time Spectrum Analyzer	2	RTSA
Remote Language Compatibility	266	RLC
SCPI Language Compatibility	270	SCPILC
Sequence Analyzer	123	SEQAN
Short Range Comms	218	SRCOMMS
Spectrum Analyzer	1	SA
Vector Modulation Analyzer	200	VMA
WCDMA with HSPA+	9	WCDMA
WLAN	217	WLAN

## More Information

The Mode name appears on the Screen Tab, followed by a number identifying which instance of the Mode appears on that screen. Each Screen contains one Mode. For example, in the image below, there is one Real-Time Spectrum Analyzer screen, and two Spectrum Analyzer screens. The current Screen contains **Real-Time SA 1**.



It is possible to specify the order in which the Modes appear in the Mode menu, using the **Configure Applications** utility on the Desktop. Using the same utility, it is also possible to specify a subset of the available applications to load into memory at startup time, which can decrease the startup time of the instrument and the amount of memory consumed.

Each application (Mode) that runs in an X-Series instrument consumes virtual memory. The various applications consume varying amounts of virtual memory, and as more applications run, the memory consumption increases. Keysight characterizes each Mode and assigns a memory usage quantity based on a conservative estimate. The **Configure Applications** utility shows an estimate for how much memory each Mode will consume.

You can still run a Mode even if it is not preloaded into memory – during runtime, the first time an application that is not loaded into memory is selected (either by pressing that application's **Mode** key or by sending that application's **:INST:SEL** command), the Application will be loaded, but this takes a few seconds. The instrument will pause while loading the application while displaying a message box that says “Loading application, please wait...” Preloading the application eliminates this wait time *but* consumes additional memory.

### 2.1.1.2 Application Mode Remote Commands

This section contains a number of remote commands that are provided for programming convenience and remote compatibility.

#### Application Mode Catalog Query (Remote Command Only)

Returns a string containing a comma-separated list of names of all the installed and licensed measurement modes (applications). These names can only be used with **:INSTrument[:SElect]**.

---

Remote Command	<b>:INSTrument:CATalog?</b>
----------------	-----------------------------

Example	<code>:INST:CAT?</code>
Notes	Query returns a quoted string of the installed and licensed modes separated with a comma. Example: <code>"SA,PNOISE,WCDMA"</code>
Backwards Compatibility Notes	VSA (E4406A): <code>:INSTrument:CATalog?</code> returned a list of installed <code>INSTrument:SELECT</code> items as a comma separated list of string values, for example: <code>"BASIC", "GSM", "EDGEgSM", "CDMA", "SERVICE"</code>  X-Series uses the ESA/PSA compatible query of a string contain comma separated values: <code>"SA,PNOISE,NFIG,BASIC"</code>

### Current Application Model (Remote Command Only)

Returns a string that is the Model Number of the currently selected application (mode). This information is also displayed in the **Show System** screen.

Remote Command	<code>:SYSTem:APPLication[:CURRent][:NAME]?</code>
Example	<code>:SYST:APPL?</code>
Notes	Query returns a quoted string that is the Model Number of the currently selected application (Mode). Example: <code>"N9060A"</code>  String length between 6 to 9 characters.
Preset	Not affected by Preset
State Saved	Not saved in state, the value will be the selected application when a Save is done.

### Current Application Revision (Remote Command Only)

Returns a string that is the Revision of the currently selected application (mode). This information is also displayed in the Show System screen

Remote Command	<code>:SYSTem:APPLication[:CURRent]:REVIision?</code>
Example	<code>:SYST:APPL:REV?</code>
Notes	Query returns a quoted string that is the Revision of the currently selected application (Mode). Example: <code>"1.0.0.0"</code>  String length is a maximum of 23 characters. (each numeral can be an integer + 3 decimal points) The format is Major.Minor.Build.Compile, where Major must correspond to the Integer portion of the Version in the license file for the application.
Preset	Not affected by a Preset
State Saved	Not saved in state, the value will be the selected application when a Save is done.

### Current Application Options (Remote Command Only)

Returns a string that is the Options list of the currently selected application (Mode). This information is also displayed in the Show System screen

Remote Command	<code>:SYSTem:APPLication[:CURRent]:OPTion?</code>
Example	<code>:SYST:APPL:OPT?</code>
Notes	Query returns a quoted string that is the Option list of the currently selected application (Mode). The format is the name as the *OPT? or SYSTem:OPTion command: a comma separated list of option identifiers. Example: "1FP,2FP" String length is a maximum of 255 characters.
Preset	Not affected by a Preset
State Saved	Not saved in state per se, the value will be the selected application when a Save is invoked.

### Application Catalog Number of Entries (Remote Command Only)

Returns the number of installed and licensed applications (Modes).

Remote Command	<code>:SYSTem:APPLication:CATalog[:NAME]:COUNT?</code>
Example	<code>:SYST:APPL:CAT:COUN?</code>
Preset	Not affected by Preset
State Saved	Not saved in instrument state.

### Application Catalog Model Numbers (Remote Command Only)

Returns a list of Model Numbers for the installed and licensed applications (Modes).

Remote Command	<code>:SYSTem:APPLication:CATalog[:NAME]?</code>
Example	<code>:SYST:APPL:CAT?</code>
Notes	Returned value is a quoted string of a comma separated list of Model Numbers. Example, if SAMS and Phase Noise are installed and licensed: "N9060A,N9068A" String length varies based on licenses. Licenses are between 6 and 9 characters. So the string length will be between COUNT * 7 - 1 and COUNT * 10 - 1. (7 & 10 = Model Number length + 1 for comma. -1 = no comma for the 1st entry.)
Preset	Not affected by a Preset
State Saved	Not saved in instrument state.

### Application Catalog Revision (Remote Command Only)

Returns the Revision of the provided Model Number.

Remote Command	<code>:SYSTem:APPLication:CATalog:REVision? &lt;model&gt;</code>
Example	<code>:SYST:APPL:CAT:REV? 'N9060A'</code>
Notes	Returned value is a quoted string of revision for the provided Model Number. The revision will be a null-string ("" ) if the provided Model Number is not installed, licensed, and loaded. Example, if SAMS is installed and licensed: "1.0.0.0" String length is a maximum of 23 characters. (each numeral can be an integer + 3 decimal points)
Preset	Not affected by a Preset.
State Saved	Not saved in instrument state.

### Application Catalog Options (Remote Command Only)

Returns a list of Options for the provided Model Number

Remote Command	<code>:SYSTem:APPLication:CATalog:OPTion? &lt;model&gt;</code>
Example	<code>:SYST:APPL:CAT:OPT? 'N9060A'</code>
Notes	Returned value is a quoted string of a comma separated list of Options, in the same format as *OPT? or :SYSTem:OPTion?. If the provided Model Number is not installed and licensed a null-string ("" ) will be returned. Example, if SAMS is installed and licensed: "2FP" String length is a maximum of 255 characters.
Preset	Not affected by a Preset
State Saved	Not saved in instrument state.

### ESA SA compatibility command (Remote Command only)

Provided for backwards compatibility with ESA. When this command is received, the analyzer aliases it to the appropriate Mode.

Remote Command	<code>:INSTrument[:SElect] 'SA'   'PNOISE'   'EDGE'   'GSM'   'BASIC'</code>
Example	<code>:INST 'SA'</code>
Notes	The query is not a quoted string. It is an enumeration as indicated in the Instrument Select table above

### GSM Mode compatibility command (Remote Command only)

Provided for backwards compatibility. When this command is received, the analyzer aliases it to the following:

```
:INST:SEL EDGEGSM
```

---

Remote Command	:INSTrument[:SElect] GSM
----------------	--------------------------

---

Example	:INST GSM
---------	-----------

### SA compatibility command for EMC (Remote Command only)

Provided for ESU compatibility. When this command is received, the analyzer aliases it to the following:

```
:INST:SEL SCPILC
```

This results in the analyzer being placed in SCPI Language Compatibility Mode, in order to emulate the ESU Spectrum Analyzer Mode.

---

Remote Command	:INSTrument[:SElect] SANalyzer
----------------	--------------------------------

---

Example	:INST SAN
---------	-----------

### Receiver compatibility command for EMC (Remote Command only)

Provided for ESU compatibility. When this command is received, the instrument aliases it to the following:

```
:INST:SEL EMI
```

```
:CONF FSC
```

This results in the instrument being placed in the EMI Receiver Mode, running the Frequency Scan measurement, in order to emulate the ESU Receiver Mode.

---

Remote Command	:INSTrument[:SElect] REceiver
----------------	-------------------------------

---

Example	:INST REC
---------	-----------

### APD compatibility command for EMC(Remote Command only)

Provided for ESU compatibility. When this command is received, the analyzer aliases it to the following:

```
:INST:SEL EMI
```

```
:CONF APD
```

2 User Interface  
2.1 Screen Tabs

This results in the analyzer being placed in the EMI Receiver Mode, running the APD measurement, in order to emulate the ESU APD Mode.

---

Remote Command	:INSTrument[:SElect] APDistribution
----------------	-------------------------------------

---

Example	:INST APD
---------	-----------

### IF Mode compatibility command for EMC (Remote Command only)

Provided for ESU compatibility. When this command is received, the analyzer aliases it to the following:

:INST:SEL EMI

:CONF MON

This results in the analyzer being placed in the EMI Receiver Mode, running the Monitor Spectrum measurement, in order to emulate the ESU IF Mode.

---

Remote Command	:INSTrument[:SElect] IFANalyzer
----------------	---------------------------------

---

Example	:INST IFAN
---------	------------


### 2.1.1.3 Measurement

The Measurement column of the Mode/Meas/View dialog shows all the Measurements available for the Mode which is selected in the first column. Select a Measurement in the second column and the View column will show all the Views available for that measurement. Once you have the Mode, Measurement and View selected, press OK to change the current Screen to that Mode, Measurement and View.

### 2.1.1.4 View

A View is a collection of Result Windows. The View column of the "Mode/Meas/View Dialog" on page 105 shows all the Views available for the Measurement which is selected in the second column. Once you have the Mode, Measurement and View selected, press OK to change the current Screen to that Mode, Measurement and View.

The View may also be set by using the View tab on the Display menu. The View tab is the last tab on the Display menu for every measurement. The Views are the same as those listed in the "Mode/Meas/View Dialog" on page 105.

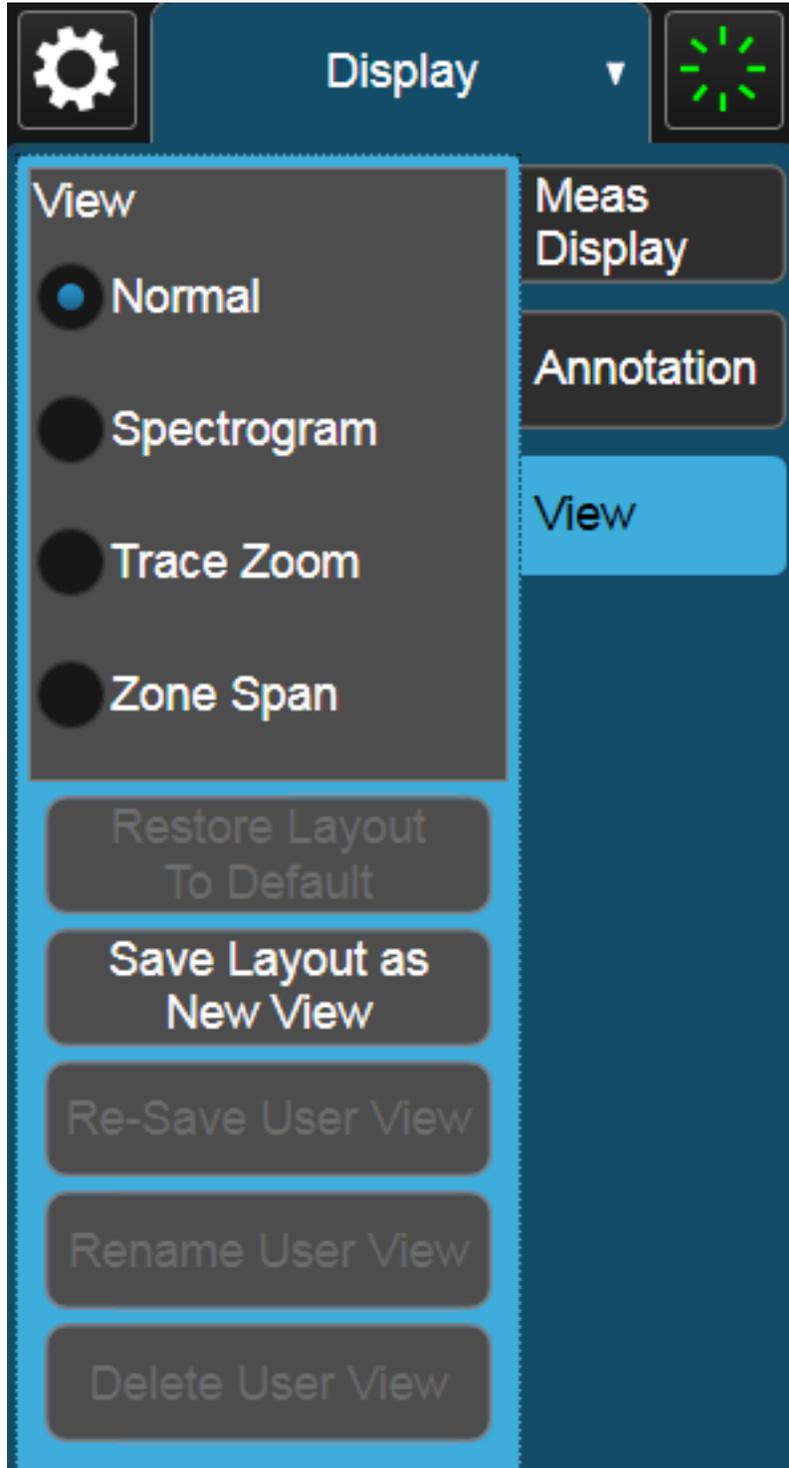

### 2.1.1.5 Sequencer

Allows multiple Screens to update sequentially while in "Multiscreen" on page 193 display mode. Each Screen updates in sequence, and when all have updated, the sequence will start again.

To start the Sequencer, you must have more than one Screen defined, and you must have Multiscreen selected (see "Screen Tabs" on page 104).

If you want each Screen to use a different input, you must turn off **All Screens Use Same Input** under **Input/Output**, **Input**.

**CAUTION**

Differences in hardware settings between the Screens may cause switches and/or attenuators to cycle as you go from one Screen to another. This could potentially reduce the life of these components. To avoid this, make sure **Attenuation**, **µW Path Control** and other switch settings are the same in each Screen.

**NOTE**

When the Sequencer is running, the destination of remote commands is unpredictable, so you should stop the Sequencer before sending any measurement-related commands. Once the Sequencer has stopped, select a specific Screen using `:INSTrument:SCREen:SElect`, before sending any further commands. See "Select Screen" on page 195

**NOTE**

When the Sequencer is running, Auto alignment is temporarily disabled. A pending auto alignment might be executed when the sequencer is stopped.


See "More Information" on page 116

Remote Command	<code>:SYSTem:SEQuencer ON   OFF   1   0</code> <code>:SYSTem:SEQuencer?</code>
Example	<code>:SYST:SEQ ON</code>
Notes	If the display is disabled (via <code>:DISP:ENAB OFF</code> ) then the error message "-221, Settings conflict; Screen SCPI cannot be used when Display is disabled" is generated
Dependencies	To start the Sequencer, you must have more than one Screen defined and you must have Multiscreen selected
Preset	<code>OFF</code>

#### More Information

To start the Sequencer, tap the current (blue) Screen tab to go into the Mode/Meas/View Dialog:

2 User Interface  
2.1 Screen Tabs

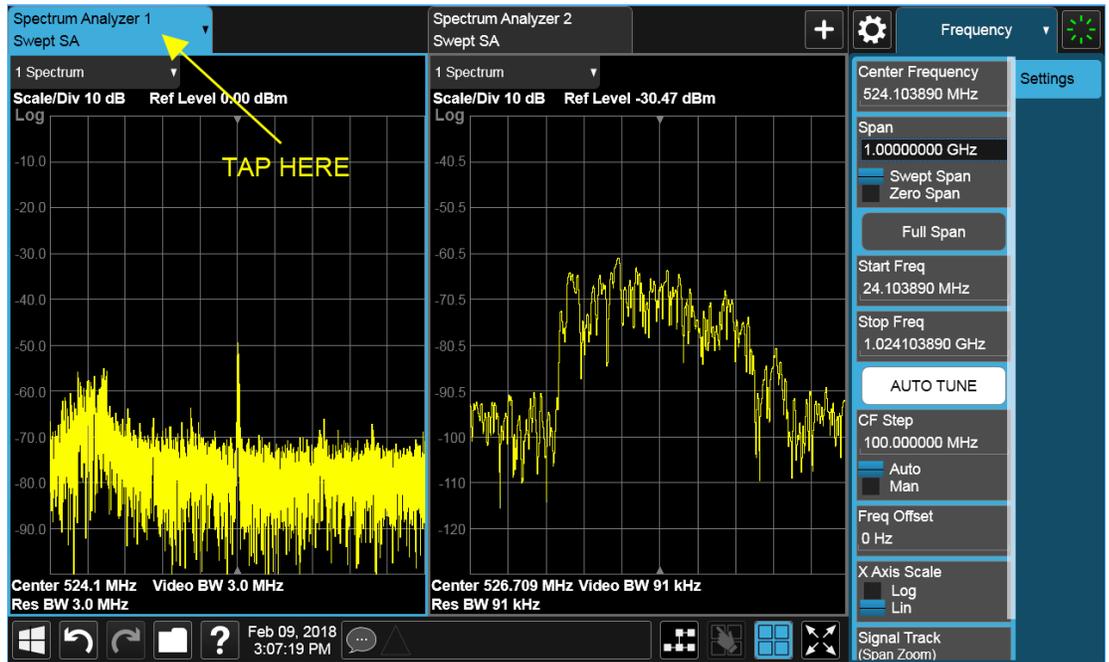

In the Sequencer block in the upper left hand corner, tap the Sequencing switch to turn it On:


The screenshot shows the 'Mode / Measurement / View Selector' dialog box. In the upper left corner, there is a 'Sequencer' section with a 'Sequencing' switch. The switch is currently set to 'Off'. A yellow arrow points to the switch with the text 'TAP HERE'. A text box below the switch explains: 'When Sequencing is On and there are multiple Screens, all Screens update in sequence. When Sequencing is Off, only the selected Screen updates.' Below this, there is a 'Launch VSA' button. The main part of the dialog is a table with three columns: Mode, Measurement, and View.

Mode	Measurement	View
Spectrum Analyzer	Swept SA	Normal
EMI Receiver	Channel Power	Spectrogram
IQ Analyzer (Basic)	Occupied BW	Trace Zoom
W-CDMA with HSPA+	ACP	Zone Span
GSM/EDGE /EDGE Evo	Power Stat CCDF	User View
Phase Noise	Burst Power	Normal 1
Noise Figure	Spurious Emissions	Normal 2
Analog Demod	SEM	
Bluetooth	TOI	
LTE FDD & LTE-A FDD	Harmonics	
LTE TDD & LTE-A TDD	List Sweep	
WLAN		


2 User Interface  
2.1 Screen Tabs

The instrument will immediately exit the Mode/Meas/View Dialog and begin making measurements in each of the screens, one after the other. When a measurement is being made in a particular Screen, that Screen's tab will be blue.

Measurement being made in Screen 1:

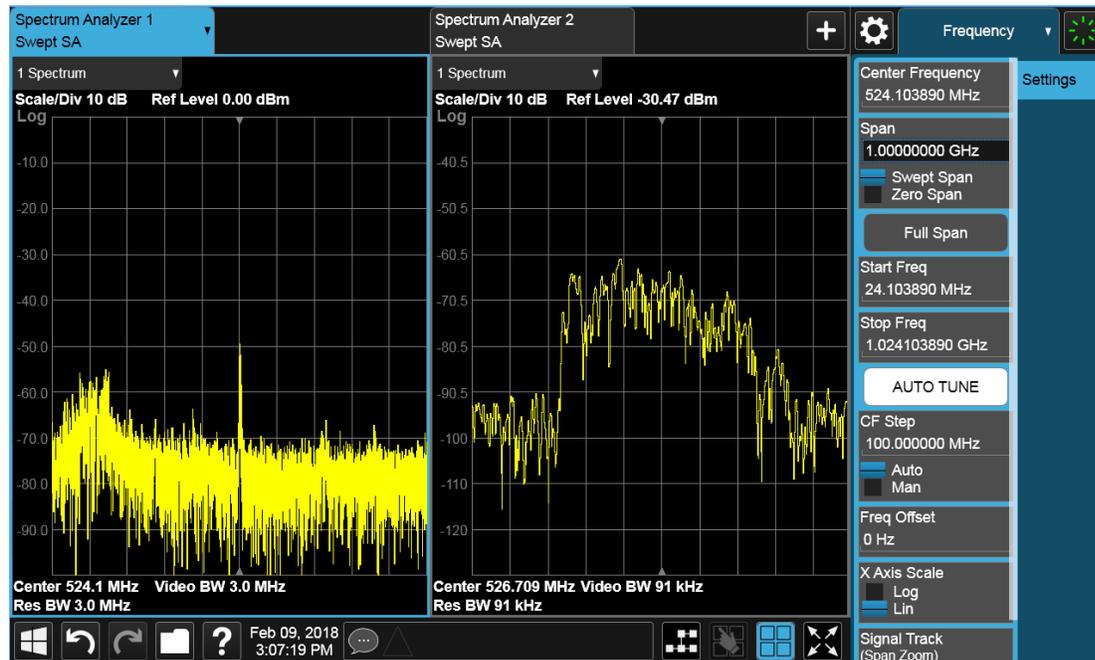

Measurement being made in Screen 2:

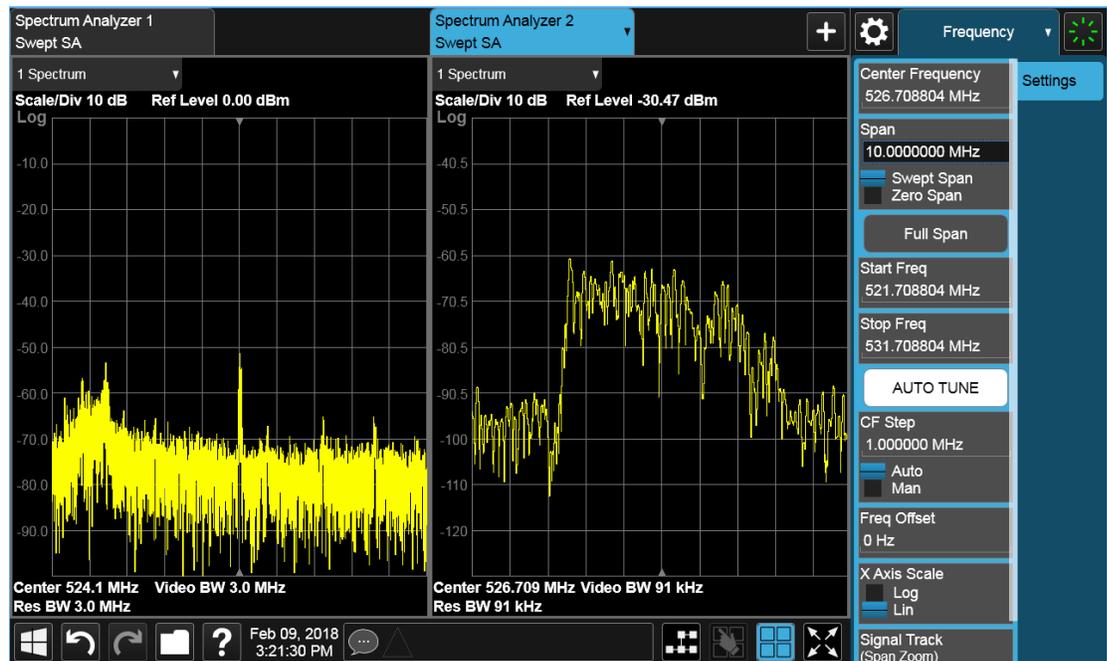

Touching any key or control on the display will cause the Sequencer to stop, so that you can make desired changes. When this happens, the message “Sequencer stopped” is displayed.


When the Sequencer is running, the screens update in the order in which they were created.

Each Screen takes one measurement then passes control to the next Screen. Each Screen updates as though it were in Single Sweep or Single Measurement mode. Thus, if Averaging is on, a Screen may take multiple sweeps before moving on to the next Screen.

### 2.1.1.6 Screen Name

By default, the screen name is the Mode (Application) name followed by a number indicating the instance of the application.

You may change the name displayed on the Screen Tab of any screen. The control to do this appears in the ["Mode/Meas/View Dialog" on page 105](#):



When you touch this control an onscreen keyboard appears, allowing you to change the name. Whatever you change it to appears on the Tab, even if you subsequently change the screen to a different Mode.



To reset the name, delete the screen name entirely.

Each Screen Name must be unique; you cannot give the same name to more than one screen.

Remote Command	<code>:INSTrument:SCReen:REName &lt;alphanumeric&gt;</code>
Example	<code>:INST:SCR:REN "Baseband"</code>
Notes	<p>The currently active screen is renamed.</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of screen names, the error message “-224, Illegal parameter value; New name &lt;name&gt; already exists” appears</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” appears</p>

### 2.1.1.7 Delete This Screen

Pressing this button deletes the current Screen (the one with the blue tab). Deleting a screen removes it from view and selects the next lower screen in the list of screens. If only one screen is configured, it cannot be deleted.

If you press the **Delete This Screen** button, a prompt appears:

“This function will delete the current screen and its settings. This action cannot be undone. Do you want to proceed?”

Pressing **OK** or Enter deletes the screen, pressing **Cancel** or **ESC** does not.

Remote Command	<code>:INSTrument:SCReen:DELeTe</code>
Example	<code>:INST:SCR:DEL</code>
Notes	<p>The currently active screen is deleted</p> <p>If the screen you are attempting to delete is the only configured screen, the error message “-221, Settings conflict; Last screen cannot be deleted” is displayed</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” is generated</p>

### 2.1.1.8 Delete All But This Screen

Pressing this control deletes all the Screens except the current Screen (the one with the blue tab).

If you press the **Delete All But This Screen** button, a prompt appears:

“This function will delete all defined screens and their settings, except for the current screen. This action cannot be undone. Do you want to proceed?”

Pressing **OK** or Enter deletes the screen, pressing **Cancel** or ESC does not.

Remote Command	<code>:INSTrument:SCReen:DELeTe:ALL</code>
Example	<code>:INST:SCR:DEL:ALL</code>
Notes	<p>You can reset the instrument to the power-on configuration by invoking <code>:INST:SCR:DEL:ALL</code> followed by <code>:SYSTem:DEFault ALL</code></p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” appears</p>

### 2.1.1.9 89600 VSA

Pressing this button launches the 89600 VSA software. The 89600 VSA software is powerful, PC-based software, offering the industry's most sophisticated general purpose and standards specific signal evaluation and troubleshooting tools for R&D engineers. Even for proprietary and non-standard signals in SATCOM or MILCOM applications, you can make signal quality measurements with customized IQ constellation.

The 89600 VSA software offers the following features:

- Over 35 general-purpose analog and digital demodulators ranging from 2FSK to 4096QAM
- Flexible and custom IQ and OFDM signal analysis for single carrier
- Standards specific modulation analysis including:
  - Cellular: GSM/EDGE, cdma2000, W-CDMA, TD-SCDMA, LTE(FDD/TDD),
  - LTE-Advanced and more
  - Wireless networking: 802.11a/b/g, 802.11n, 802.ac, 802.16 WiMAX (fixed/mobile), WiSUN (MR-FSK PHY)
  - RFID
  - Digital satellite video and other satellite signals, radar, LMDS
- Up to 400K bin FFT, for the highest resolution spectrum analysis
- A full suite of time domain analysis tools, including signal capture and playback, time gating, and CCDF measurements
- 20 simultaneous trace displays and the industry's most complete set of marker

functions

- Easy-to-use Microsoft Windows graphical user interface

For more information see the Keysight 89600 Series VSA web site at [www.keysight.com/find/89600vsa](http://www.keysight.com/find/89600vsa)

To learn more about how to use the 89600 VSA in the instrument, start the 89600 VSA software, then open the 89600 VSA Help and navigate to the topic "About Keysight X-Series Signal Analyzer with 89600 VSA Software".

---

Example            `:INST:SEL VSA89601`  
                      `:INST:NSEL 101`

## 2.1.2 Add Screen

On X-Series analyzers you can configure up to 16 different Screens at one time. Each Screen contains one Mode, each Mode contains one Measurement, and each Measurement contains a number of Windows.

You can add screens by pressing the “+” icon in the ["Screen Tabs" on page 104](#) panel. The icon is shown below:



Every time you add a Screen, the instrument “clones” or “copies” the current Screen into the new Screen. If desired, you can then use the ["Mode/Meas/View Dialog" on page 105](#) to change the Mode, Measurement and/or View of the new Screen, or simply operate a second copy of your previous Screen, thus preserving the settings of your previous Screen.

When you have defined the maximum number of Screens (16), the “+” icon disappears.

For more information about operating the instrument with multiple screens configured, see ["Multiscreen" on page 193](#).

---

Remote Command        `:INSTrument:SCReen:CREate`

---

Example                 `:INST:SCR:CRE`

---

Notes                    The maximum number of screens is 16. If an attempt to add a screen occurs when the maximum have been defined, the error message “-221, Settings conflict; Screen limit reached” appears  
When you create a new screen the Screen Name is the current Mode name followed by a number indicating the instance of the Mode.

---

If the display is disabled (via `:DISP:ENAB OFF`) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” appears

## 2.2 Meas Bar


The Meas Bar is used to display annotation for the current measurement. There are three primary uses for the Meas Bar:

1. To show annotation for the most important parameters in the measurement so you can see them at a glance
2. To show the annotation that you will most want to have recorded in a screen dump
3. To give you quick access to settings.



The Meas Bar is made up of a number of annotation panels, each of which, when pressed, opens up a dialog below it which contains controls for those settings.

For example, here is what the display looks like when you touch one of the regions of the Meas Bar:

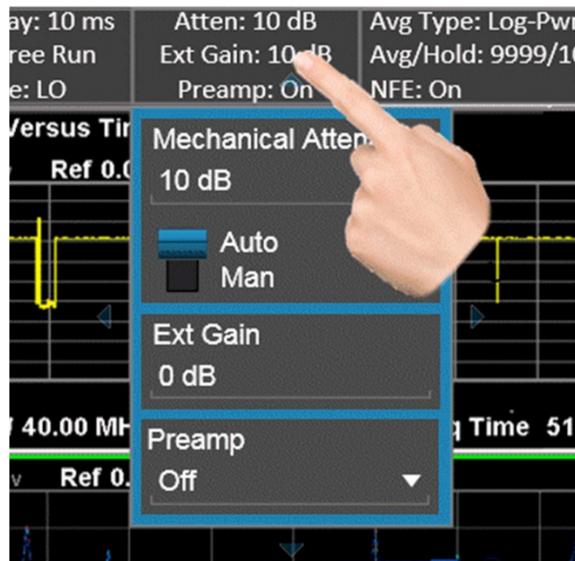

Touching anywhere off the hotspot panel or pressing any hardkey except **Save** or **Quick Save** closes the hotspot panel.

In a hotspot panel, the control in black with the blue border is the active function. Each panel may have its own default active function.

Settings that are colored amber are those that you need to be particularly aware of; for example, if Alignments are off, this is shown in amber, so you will know that you may not be meeting spec. Similarly, if DC coupling is on, this is shown amber, to alert you to be careful what voltage you put on the input.

You can turn the Meas Bar on and off with a switch on the Annotation tab of the Display menu.

### System Control Panel

The leftmost panel holds the GPIB/Remote annunciators, the Single/Continuous symbol/control, the LXI indicator and the PASS/FAIL indicator. Tapping this panel drops down controls for Single/Continuous, Pause/Resume and restart.



### GPIB/Remote annunciators

The GPIB/Remote annunciators are shown as the letters **KRLTS**. Each letter is shown if the state is true and is not shown if the state is false, as follows:

<b>K</b>	Keylock indicator	This is shown when the instrument is in the Keylock state (turned on and off by the <b>SYST:KLOCK</b> command)
<b>R</b>	Remote annunciator	Shown when the instrument is in the remote state, as when being controlled via the IEEE-488 bus (GPIB) or TCP/IP connections
<b>L</b>	GPIB Listen annunciator	Shown when addressed to listen via GPIB or TCP/IP
<b>T</b>	GPIB Talk annunciator	Shown when addressed to talk via GPIB or TCP/IP
<b>S</b>	GPIB SRQ annunciator	Shown when the instrument is asserting SRQ on GPIB. This annunciator is an amber color

### Single/Continuous symbol/control

This annunciator shows as an arrow on an oval line when in Continuous, or an arrow on a straight line when in Single.

## LXI indicator

This indicator displays in green when LAN is connected, in white when LAN is not connected, and in red when LAN is connected but has a connection problem.

## PASS/FAIL indicator

This annunciator displays when Limits are turned on. It is green if all Limits are passing, and a red FAIL if any limit is not passing.

The following command queries the status of the current measurement limit testing. It returns a 0 if the measured results pass when compared with the current limits. It returns a 1 if the measured results fail any limit tests.

---

Remote Command    `:CALCulate:CLIMits:FAIL?`

---

Example            `:CALC:CLIM:FAIL?`

queries the current measurement to see if it fails the defined limits  
Returns a 0 or 1: 0 it passes, 1 it fails

## Trace Detector Settings Panel

In the Swept SA and some other measurements, there is a special panel summarizing the settings for the traces in the measurement:



There is one column for each trace. The rows are as follows:


- The top row shows the Trace Number, in the trace color.
- The second row shows the Trace Type for each trace (W=Clear/Write, A=Trace Average, M=Max Hold, m=Min Hold); this letter is in white if the trace is Active, in gray if the trace is inactive; there is a bar through the letter if the trace is not being displayed
- The third row shows the detector for each trace (N=Normal, S=Sample, A=Average, P=peak, p=negative peak, Q=Quasi Peak, E=EMI Average, R=RMS Average, f=math function)

In the example above, trace 1 is active, visible, and in Average using the Sample detector, the other traces are inactive, blanked and in Clear/Write using the Normal detector.

Tapping this panel drops down controls for the Traces.

## 2.3 Measurement Display

The Measurement Display contains one or more data windows displaying the result of the current measurement. These may be graphical or textual windows.

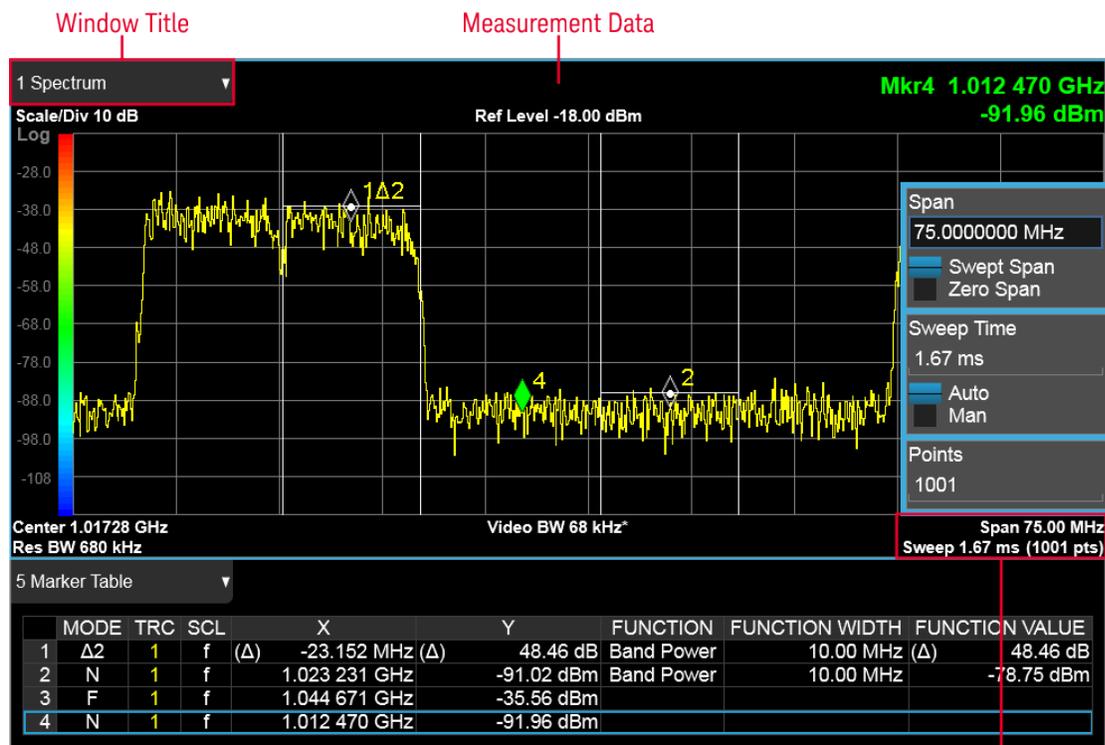

Each window in the Measurement display contains a "Window Title" on page 128, "Measurement Data" on page 132, and graphical windows also may contain "Annotation Hotspot" on page 135.

The selected window in the Measurement Display is indicated by a blue border. Window-dependent controls in the menu panel always refer to the selected window.

### 2.3.1 Window Title

The Window Title appears in the upper left hand corner of the window, and includes a title describing the measurement data currently being displayed in the window. The title may also contain additional information about the data in the window, for example in the LTE measurement supplication, the component carrier being displayed in the window will be indicated (e.g., "CC0").

Measurements that support User Views (see "View Editor" on page 172) also display the Window Number in the Window Title, to enable window addressing from SCPI. The number is the number that will be used in the SCPI command to address that window, for example, in the WCDMA Mod Accuracy measurement, Code Domain Power is assigned window number 6, so you address it with the following SCPI command:

```
:DISP:RHO:WIND6:TRAC:Y:RLEV 0.0
```




Note the arrow pointing down on the right side of the Window Title. This indicates that touching the Window Title will display a dropdown, which enables you to select the Measurement Data to be displayed in the window.

For example, if we wish to assign the results of the upper window in the display below to the Marker Table, we would touch the window title and then the "Data" control that is revealed, as shown:




And then select Marker Table, yielding the result below:

2 User Interface  
 2.3 Measurement Display

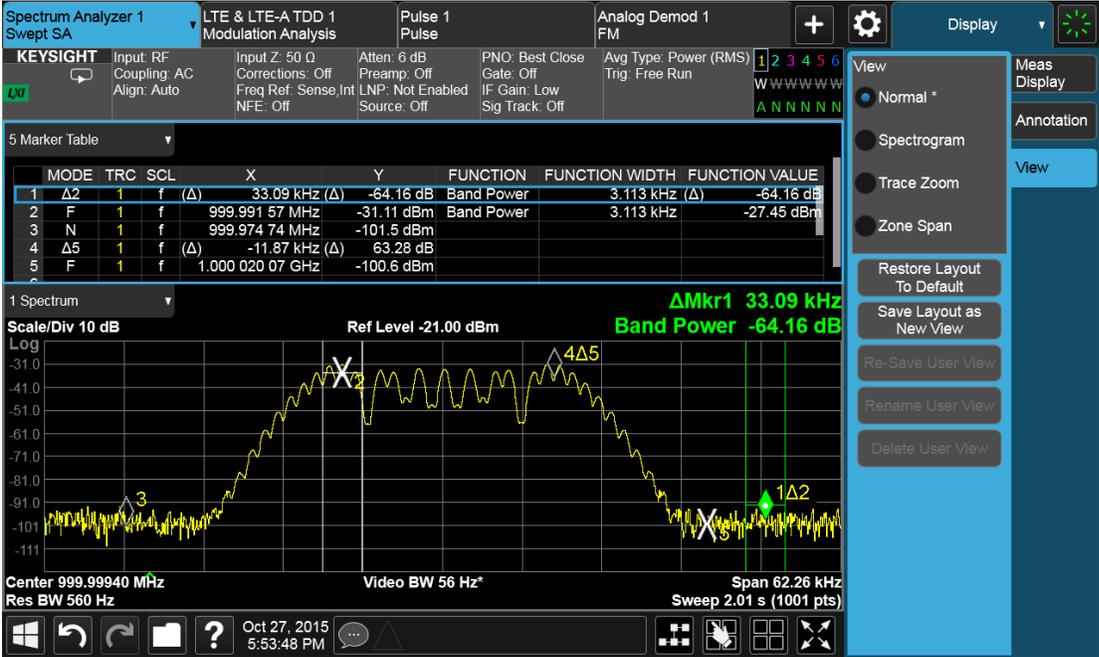


Note also that the Window Data dropdown can be a cascaded list, if the number of available results requires categorization to hold them all:

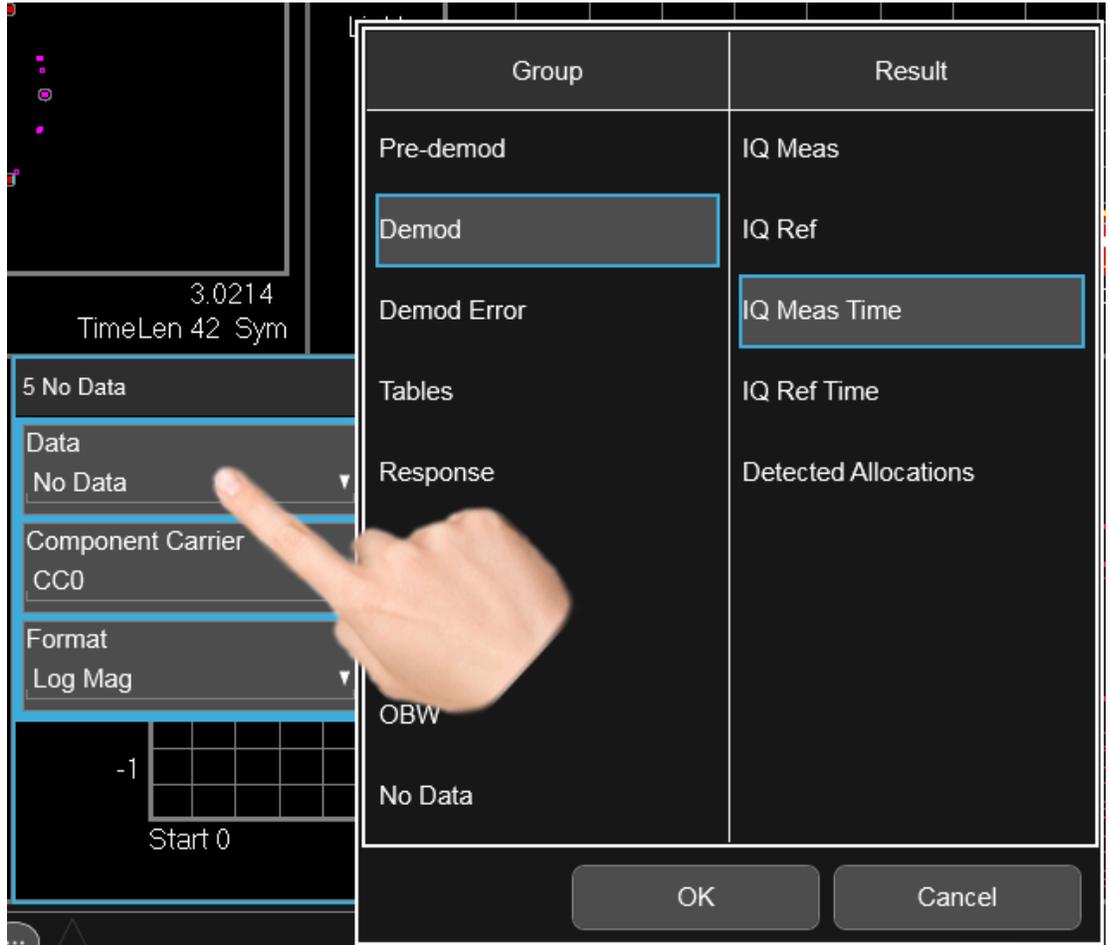

Note also that the Window Data dropdown sometimes includes controls for further configuring the window, for example, in LTE choosing the desired Component Carrier and Data format.

2 User Interface  
 2.3 Measurement Display

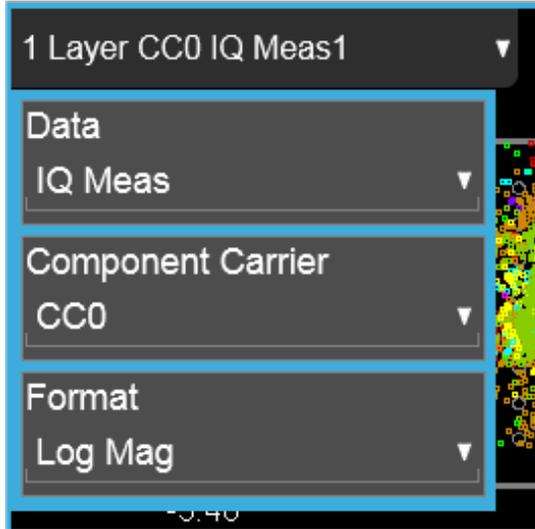

Touching a window's title dropdown also selects the window.

### 2.3.2 Measurement Data


The Measurement Data region shows graphical or textual data for the Data selected in the Window Title Data control. Below you can see examples of both graphical and textual windows in a four-window display.



There are many gestures which you can use to interact with a measurement display window. They are detailed below.

## Swipe

There are several swipe actions, as listed below. One of the most important actions is swiping a spectrum window to the left or right, or up or down, to adjust the frequency and level of the spectrum, as shown below.

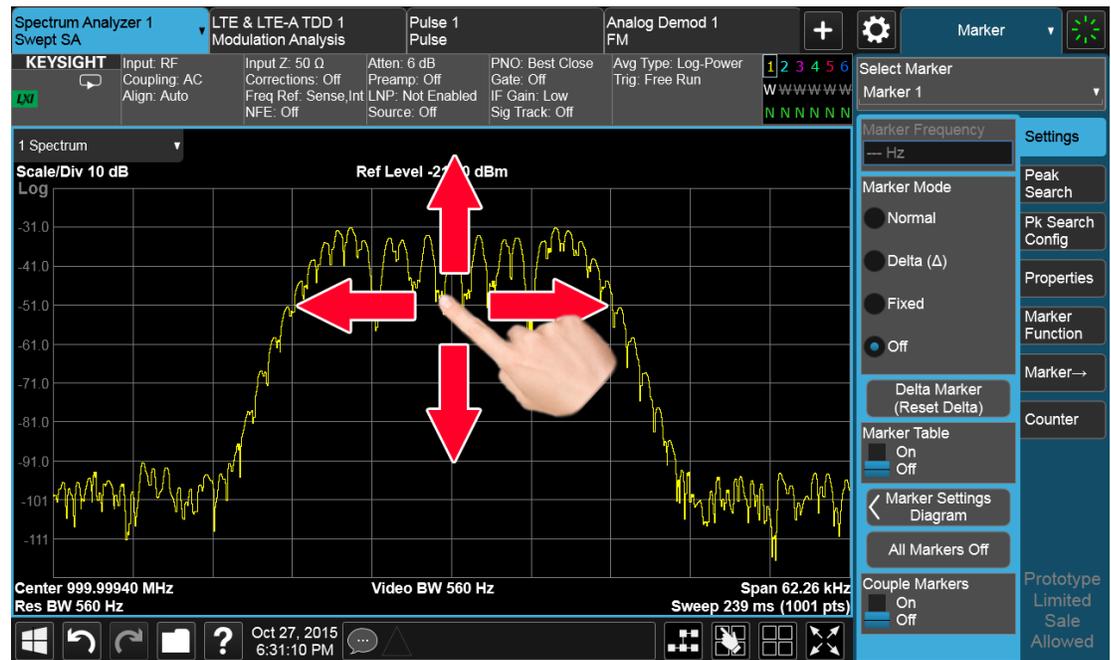

Swipe actions are summarized in the table below. Not all of these may be available, depending on the measurement.

Object	Action
Spectrum Trace Left/Right	Drag trace (change Center Frequency)
Spectrum Trace up/down	Drag trace (change Ref Level)
Marker Left/Right	Drag marker along trace
Fixed Marker Left/Right/Up/Down	Drag marker in space
Scrollable area	Scroll vertically or horizontally. Scrollable areas include the Menu Panel (if overfull), tables and lists. A scrollable area is indicated by a vertical or horizontal translucent white bar which can also be dragged by a mouse When scrolling a table: <ul style="list-style-type: none"> <li>– Row headers remain in place when the table is scrolled horizontally, and scroll with the table when the table is scrolled vertically</li> <li>– Column headers remain in place when the table is scrolled vertically, and scroll with the table when the table is scrolled horizontally</li> </ul>

2 User Interface  
 2.3 Measurement Display

Object	Action
Toggle control	Toggle in that direction


**Pinch**

You can also pinch in or out either horizontally or vertically to zoom in the x-axis or y-axis dimension. For example, a pinch horizontally lets you adjust the Span of the Spectrum window. Also, pinching on the wings of a Band Power or other Band Function allows you to widen or narrow that Band Function.

Pinching may sometimes be easier if you use the index finger of each hand, rather than pinching with one hand.

**Touch-and-Hold**

You can also touch-and-hold the display, that is, touch it and hold your finger on the display. A circle is drawn, and when the drawing completes, a right-click gesture is performed that depends on the screen feature touched, as listed in the table below.

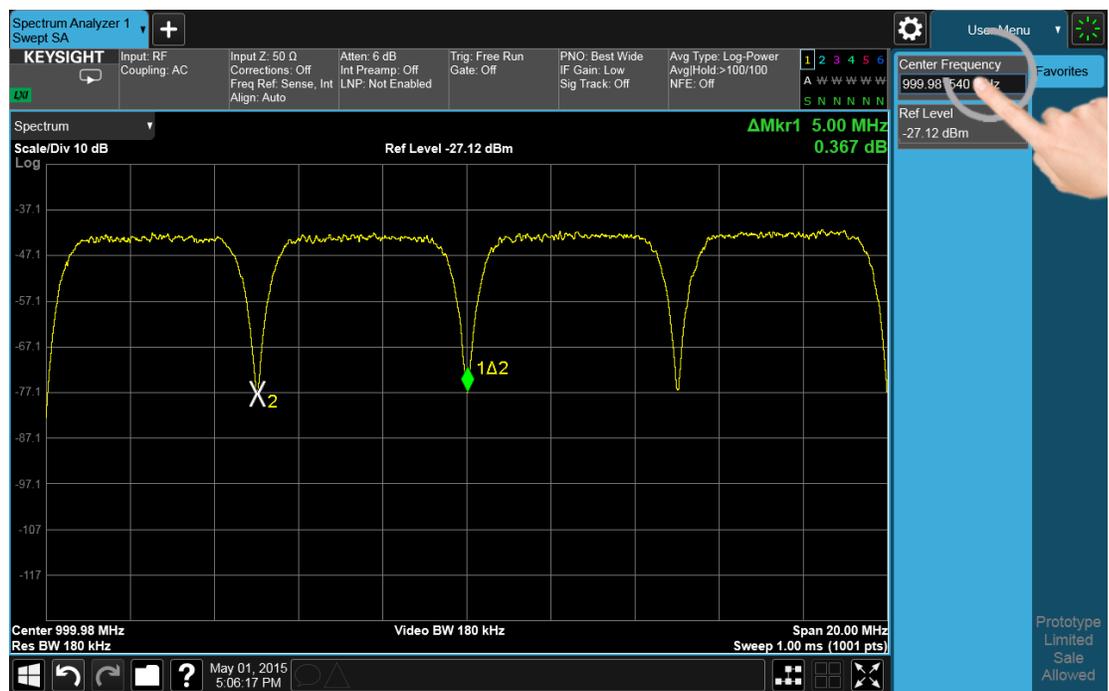

Right Click on a Trace	Peak Search, Trace Type (Clear/Write, Trace Average, Max Hold, Min Hold), Trace View/Blank (Active, View, Blank, Background). Not all of these may be available, depending on the measurement
Right Click on a Marker	Marker Mode (Normal, Delta, Fixed, Off), Peak Search, Next Peak, Next Pk Right, Next Pk Left). Not all of these may be available, depending on the measurement

Right Click on the Background	Lets you select Help
Right Click on a Menu Panel control	Lets you add or remove that control from the User Menu or get Help on that control

## Tap

Tapping an object causes the actions defined in the table below:

Object	Action
Marker	Select
Marker (repeated taps on stacked)	Cycle through stacked markers
Trace	Select. In addition if Marker is the active function, move the selected marker to the point where you tapped
Trace (repeated taps on stacked)	Cycle through stacked traces
Window	Select if unselected
Screen	Select if unselected

## Double Tap


Double-tapping an object causes the actions defined in the table below:

Object	Action
Window	Zoom/Unzoom

### 2.3.3 Annotation Hotspot

You can tap on a graticule annotation to modify one of the fields in that annotation. For example if you tap on the region with Center Freq and Res BW in it, a menu panel pops up with just those settings on it.

2 User Interface  
2.3 Measurement Display

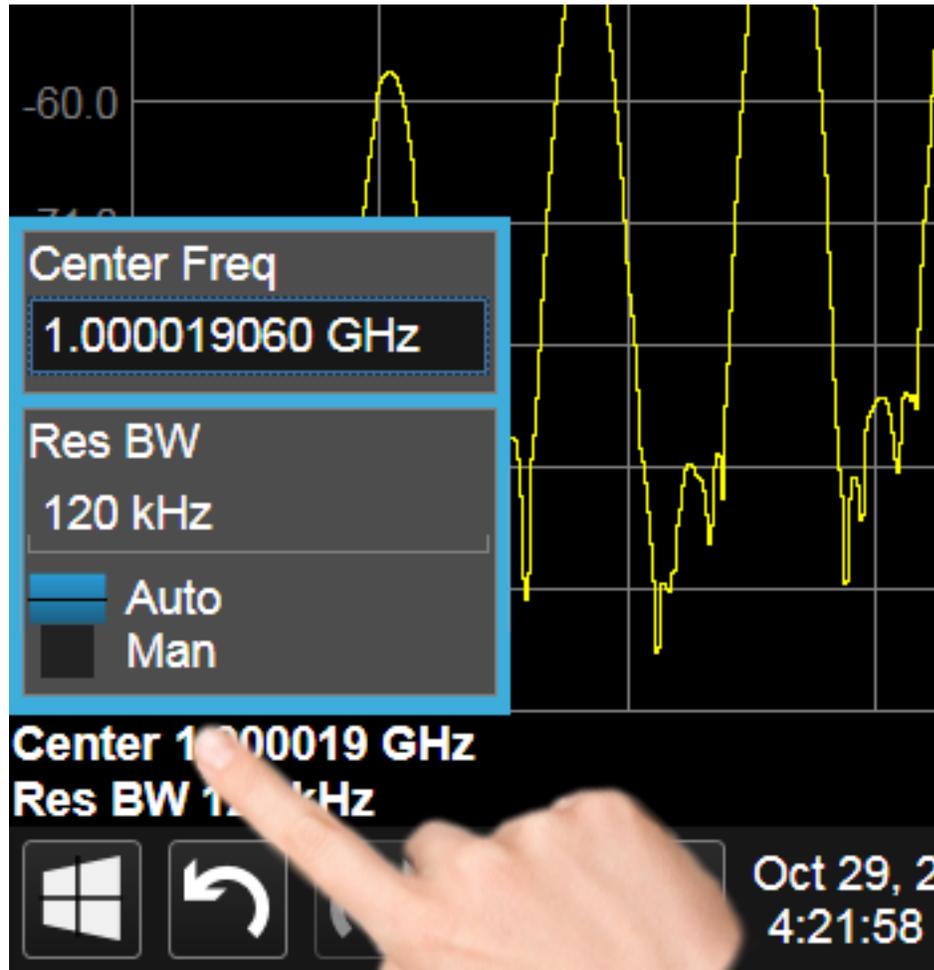


Touching anywhere off the hotspot panel or pressing any hardkey except **Save** or **Quick Save** closes the hotspot panel.

Annotation which is not currently able to be adjusted is not grayed out on the display, but the control in the hotspot that drops down or pops up is grayed out.

In a hotspot panel, the control in black with the blue border is the active function. Each panel may have its own default active function

## 2.4 Menu Panel

The menu panel is the main focus of the X-Series Multitouch user interface. The controls include active functions, dropdowns, action buttons, radio buttons and toggles.

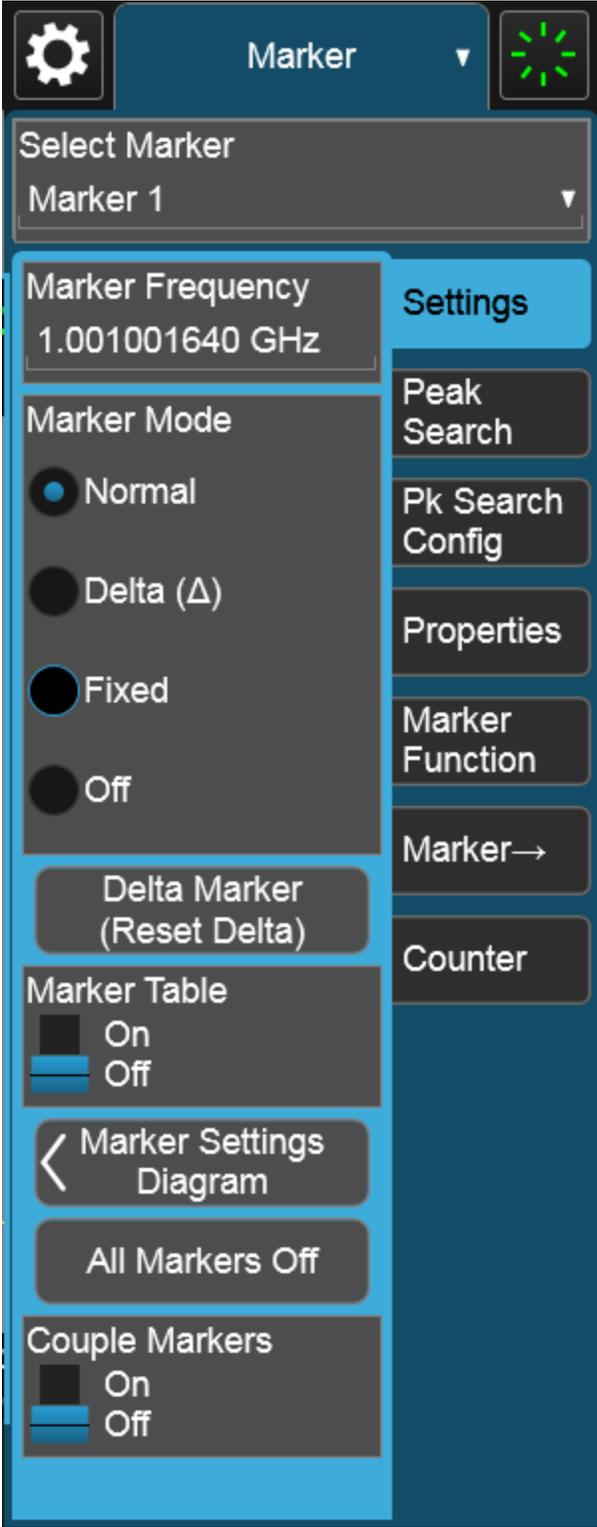


The menu panel normally appears on the right side of the display and consists of a rectangular panel with multiple “sub-panels” lying on top of each other, each sub-panel being accessed by a tab on the right.

You press a front panel key (or “hardkey”) to access a particular menu. On the front panel there are twelve “measurement hardkeys” (the ones in the shaded region in the figures below) – these are the hardkeys that open up menus in the menu panel.

With a menu open, tap a tab to access the controls on its sub-panel. Whenever you press the front panel key associated with a menu, the default (top) tab is selected.


If the number of controls on a panel exceeds the height of the panel, scrolling is enabled, which is indicated by a white bar on the left that fades away after a few seconds. You swipe up or down with your finger to scroll the panel, or you can grab the white bar with a mouse.

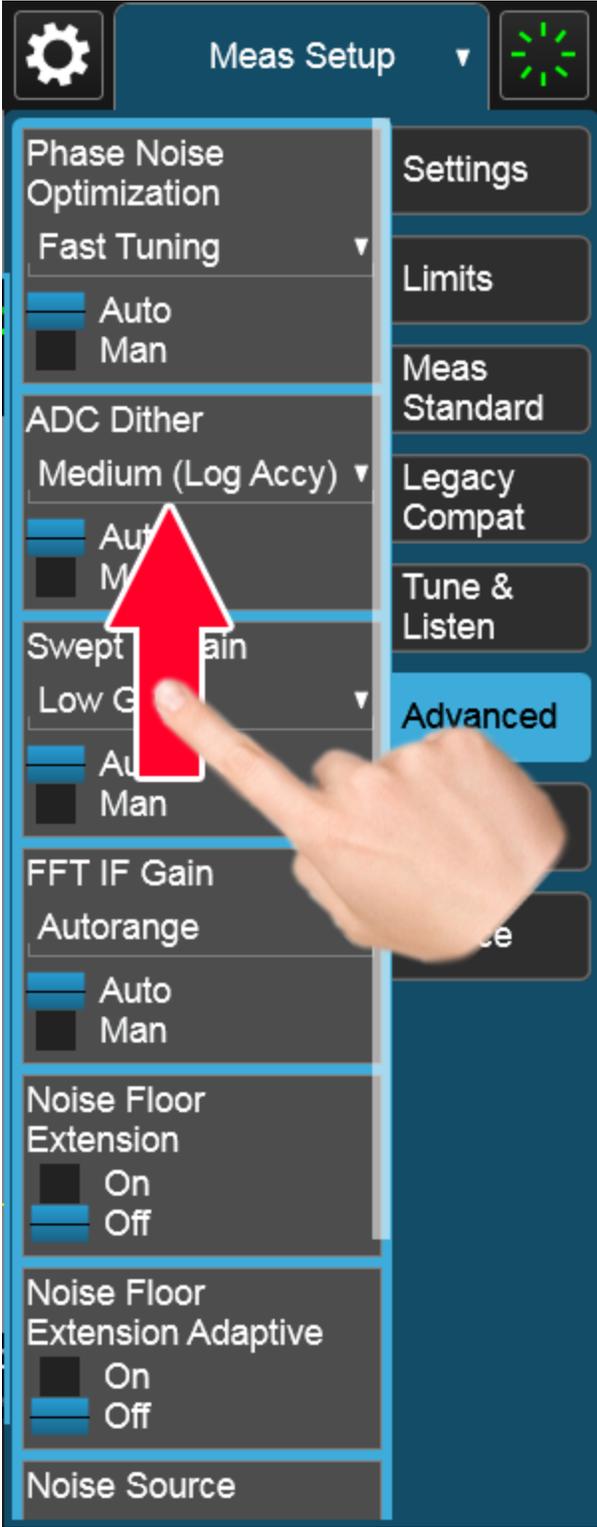

If you move to a different menu panel or sub-panel and then come back to a previous panel, the previous panel is always reset to be scrolled all the way back to the top.

### Accessing Menus Without Using Front-Panel Keys

You can access the menu panels without using the front panel keys, as you would need to do if you were operating the instrument using Remote Desktop. Touch or click on the menu title, as shown below. A dropdown containing the twelve measurement hardkeys appears. Selecting a hardkey from the dropdown displays the corresponding menu, and the dropdown disappears.

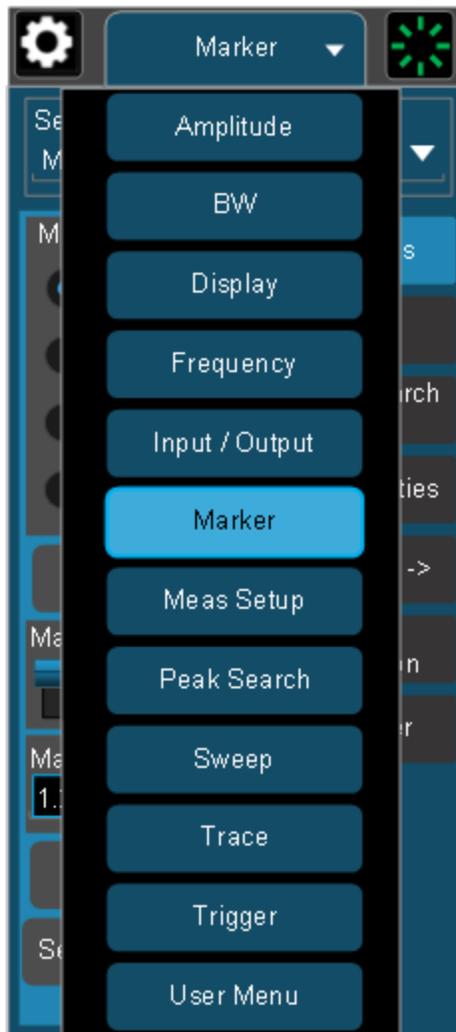


### Entering Numeric Values

Many controls on the menu panel allow you to enter numeric values. These are called “active functions.” An active function control displays a number and a suffix,

## 2 User Interface

### 2.4 Menu Panel

for example 13.255 GHz, as in the example below:

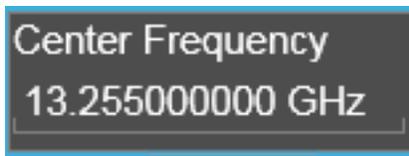

An active function is “active” if the numeric value is surrounded by a black background with a blue border, as below. In this state, it is ready to receive numeric input from the number pad on the front panel, the knob, or the step keys.



When an active function is in the active state, you can start typing or pressing the number keys on the front panel, which causes the Numeric Entry Panel to appear, as shown below. The Numeric Entry Panel displays the typed value, and the terminators to complete the entry.

Here we see a UXA with an active function control in the active state. Although no Numeric Entry Panel is displayed, you can just touch the “2” key:



This causes the Numeric Entry Panel to pop up to receive the numbers you are typing:



Type in as many digits as required, then touch one of the unit terminator buttons in the Numeric Entry Panel to complete the entry. In this case, 2 GHz was the desired entry, so you just touch the “GHz” terminator:

2 User Interface  
2.4 Menu Panel



The Numeric Entry Panel disappears and, in the example, the active function value becomes 2 GHz.



It is important to note that you can always pop up the Numeric Entry Panel by touching an active function control while it is active; for example, if you were to touch it in the figure above, the Numeric Entry Panel would pop up right next to the control:

2 User Interface  
2.4 Menu Panel



You can display the Numeric Entry Panel by touching any active function control while it is active, but you don't have to pop up the Numeric Entry Panel first, you can just start typing and it will pop up on its own, thus saving you a keystroke.

You can also adjust a value without displaying the Numeric Entry panel by turning the knob or using the step keys while an active function is active. If you turn the knob or use the step keys while the Numeric Entry Panel is displayed, it disappears, allowing you to see the entire screen while you are making the adjustment.

You can also drag the Numeric Entry Panel to another part of the display if it is covering something that you wish to see while it is on the screen.

## 2.4.1 Right-Click Menu

If you click with the right mouse button on any of the menus in measurements, a popup menu appears, which includes:

The items in this menu are:

- ["Add to User Menu" on page 147](#)
- ["Help on this setting" on page 147](#)
- ["Show SCPI Command" on page 147](#)
- ["Add to SCPI Recorder" on page 148](#)
- ["Start/Stop SCPI Recorder" on page 148](#)
- ["Show SCPI Recorder" on page 148](#)

### 2.4.1.1 Add to User Menu

For details, see ["User Menu" on page 148](#).

### 2.4.1.2 Help on this setting

For details, see ["Help" on page 161](#).

### 2.4.1.3 Show SCPI Command

Enabled/visible when the currently-active feature has an associated SCPI command or query. Displays a popup dialog that shows the active GUI selection's SCPI command.

To close the popup dialog, click **OK**

#### 2.4.1.4 Add to SCPI Recorder

Adds SCPI to the recorder from User Interface features that have equivalent SCPI.

This is the manual mode for adding SCPI to the recorder when you do not wish to add SCPI continuously. This control is enabled only when the current active feature has an associated SCPI command or query.

Irrespective of the continuous recording state, clicking this control adds the active entry into the recorder, including the active value if it is a setting.

#### 2.4.1.5 Start/Stop SCPI Recorder

Starts or stops continuous recording mode. After starting the recording, any changes to settings will be recorded.

After continuous recording is enabled, the button label changes to **Stop SCPI Recorder**, which is displayed while recording is in progress. Clicking **Stop SCPI Recorder** halts recording and switches the control label back to **Start SCPI Recorder**.

#### 2.4.1.6 Show SCPI Recorder

This shortcut opens the dialog "[SCPI Recorder](#)" on page 2436.

### 2.4.2 User Menu

Lets you create your own menu, to include controls that you frequently use. You can have one **User Menu** for each measurement, and all User Menus survive a power cycle.

You add a control to the User Menu for the current measurement by right-clicking on the control, then selecting "[Add to User Menu](#)" on page 147. You can also remove the control from the User Menu using the same right-click menu item.

**User Menu** appears at the bottom of the menu drop-down panel.

## 2.5 Cancel key



This front-panel key has the same functions as the Windows **Esc** (Escape) key. It does the following:

- Cancels dialogs
- Cancels active functions (unless there is an entry in progress, in which case it cancels that, and reverts to the previous value)
- Resets input overloads
- Aborts print operations
- Cancels certain other operations (such as alignments)
- Returns you to Local Control (if in Remote)
- If the backlight is off, turns on the backlight, and does nothing else

Most of this functionality is the same as earlier X-Series models and similar to ESA and PSA operation.

When the instrument is in Remote, any hardkey that is pressed on the front panel displays this message:

**Analyzer is in Remote. Press ESC to return to Local**

The exception is the **Cancel (ESC)** key, which takes the instrument out of Remote.

When the instrument is also in the LLO (local lockout state), the **Local** key is locked out as well. When this is the case, and the **Local** key is pressed, this message is displayed:

**Local key is locked out by remote computer. Cancel Local Lockout on computer or release remote control**

When you see this message, you should disconnect the remote computer, or use it to take the instrument out of the Local Lockout state.

## 2.6 Onscreen Keyboard key



This key turns the onscreen alpha keyboard (OSK) on and off.

There are two onscreen keyboards:

- The Multitouch OSK, which pops up automatically if, while using the analyzer application, a text field becomes the active function
- The Windows OSK, which you must open manually when a text field must be entered while interacting with Windows or other apps

## 2.7 Touch On/Off Key



This front-panel key turns the display touch functionality on and off. If off, you can turn it back on using the front panel **Touch On/Off** key. When the touch functionality is off, you can still use a mouse as a pointer.

When toggled, a dialog box appears midscreen that confirms “Touchscreen On” or “Touchscreen Off”.

This function remains in effect until it is turned off or until the app shuts down. The app always starts up with Touch enabled.

## 2.8 Tab key



This key has the same function as the **Tab** key on a PC keyboard. You can use this key to display the Windows Taskbar, as follows.


- Alt-Tab to the Desktop
- Touch the desktop
- Touch **TAB**
- The Taskbar appears

## 2.9 Local Button

Appears in the Menu Panel when the instrument is in remote, and can be brought back to local via the **Local (ESC)** Key. See also "[Cancel key](#)" on page 149.

## 2.10 Control Bar

The Control Bar contains controls and readouts that let you control instrument functions independent of the current measurement.

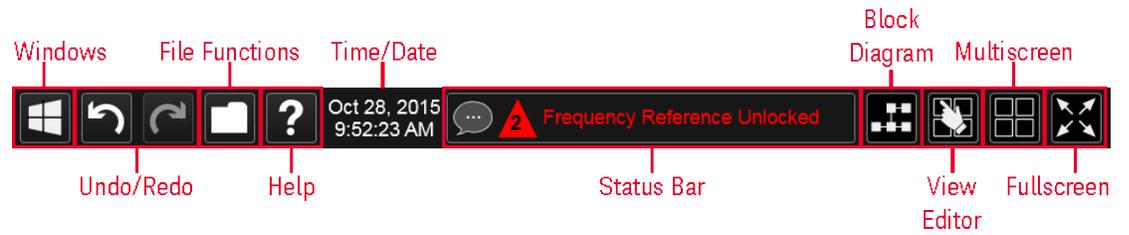

## 2.11 Windows

Pressing the Windows icon on the "Control Bar" on page 154 has the same effect as pressing the Windows icon on the Windows taskbar. It displays the Windows taskbar and Start Menu, which allows you to launch Windows programs and access features such as the Control Panel.

## 2.12 Undo/Redo

The Undo button in the "Control Bar" on page 154,



and the Undo front panel key,

**Ctrl=Redo**



are used to undo the most recently executed function.

If you Undo a function, and then decide you should not have done so, you can use the **Redo** button in the "Control Bar" on page 154 to put it back the way it was. The Redo function may also be executed by pressing **Ctrl+Undo** (holding the **Ctrl** key down while pressing the **Undo** front panel key).



Undo allows you to restore a setting, which you had previously set, back to its value before you changed it. When you press the Undo button or front panel key, the last setting you changed is "undone", that is, its previous setting is restored. You are notified of this fact with an advisory pop up message; for example, if the Center Frequency had been 300 MHz, and you changed it to 1 GHz and then pressed **Undo**, the message would show:

**UNDO: Center Freq 1 GHz -> 300 MHz**

The instrument can store 5 levels of action for Undo.

To truly understand Undo and Redo, it helps to think of two "stacks", an Undo stack and a Redo stack,

**UNDO stack**

**REDO stack**

Whenever you perform an action, it is placed on the Undo stack. So for example, if you set the Center Frequency to 1 GHz, then set the RBW to 1 MHz, then set the Detector to Peak, each of these actions gets "pushed" onto the Undo stack:

UNDO stack	REDO stack
Det = Peak	
RBW = 1MHz	
CF = 1 GHz	

When you press **Undo**, the top item on the Undo stack is removed, the action represented by that item is undone, and the item is placed on the Redo stack. So pressing **Undo** once in the above case would undo the setting of the peak detector, and the stacks would look like this:

UNDO stack	REDO stack
RBW = 1MHz	Det = Peak
CF = 1 GHz	

Now pressing **Undo** again would undo the RBW = 1 MHz action, and the stacks would look like this:

UNDO stack	REDO stack
CF = 1 GHz	RBW = 1MHz
	Det = Peak

Now pressing Redo would Redo the RBW = 1 MHz action, and the stacks would again look like this:

UNDO stack	REDO stack
RBW = 1MHz	Det = Peak
CF = 1 GHz	

Also, whenever you set a value, the Redo stack is cleared; you can't redo an action once you have interrupted the original flow of actions. Think of the Undo stack as the past, and the Redo stack as the future; if you have items in both stacks it means you have gone back to a time in the past; if you then *do* something you have changed the future, so the old future (the Redo stack) gets cleared.

For example, in the example above, if you now were to change another setting, such as VBW = 1 kHz, the Redo stack gets cleared, and the stacks would look like this:

<b>UNDO stack</b>	<b>REDO stack</b>
VBW = 1 kHz	
RBW = 1MHz	
CF = 1 GHz	

Undo can undo changes you make with the knob or step keys, however all contiguous events that affect the same parameter are aggregated into one event for the sake of Undo. For example, if CF is the active function and is 1 GHz, and you turn the knob back and forth, then enter a value, then use the step keys, when you press **Undo**, the instrument returns to CF = 1 GHz.

### **Actions that Cannot be Undone**

There are some actions that cannot be undone, because these clear the Undo/Redo stack:

- Restore Mode Defaults clears the stack for that Mode in that Screen
- Sending SCPI commands clears the stack for that Mode in that Screen
- Loading a state file (including User Preset) clears the stack for that Mode in that Screen
- Deleting a Screen clears all the stacks in that screen
- Changing Views

Undo/Redo works within the context of a Mode. Each Mode in each Screen keeps its own record. Settings in the Control Panel or System Settings menus are not undoable.

There are several actions that may change many parameters. Among these are Auto Tune, and Adjust Atten for Min Clipping. After executing such a function, Undo sets all parameters back to their value before the function was selected. Auto Tune appears to be a single action, even though the instrument executes it in several steps.

Redo reverses the effect of the last Undo action, assuming that no other settings have been changed since the last Undo. Changing a setting after an Undo clears memory of all settings after that Undo, that is, it clears the Redo stack, as explained above.

When you press the **Redo** icon or **Ctl** and the **Undo** hardkey, you are notified with an advisory popup message; for example, if the Center Frequency had been 300 MHz, and you changed it to 1 GHz and then pressed **Undo**, the message would say:

**UNDO: Center Freq 1 GHz -> 300 MHz**

If you then press **Redo**, the message will say:


**REDO: Center Freq 300 MHz -> 1 GHz**

Neither **Undo** nor **Redo** perform any navigation, and have no effect on which menu panel is displayed nor which function is active.

## 2.13 File Functions

The File Functions popup contains controls for executing Save, Recall, File and Print operations. You display the File Functions popup by tapping the File Functions icon in the "Control Bar" on page 154.

For more information on a control, tap an icon in the image below.

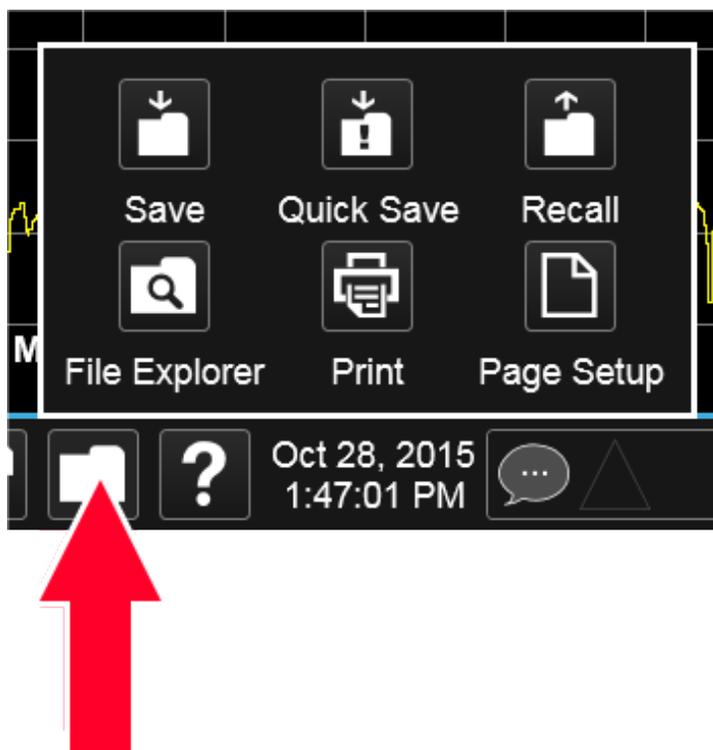

Tapping this folder icon displays the File Functions popup

### 2.13.1 File Explorer

Pressing the File Explorer button in the "File Functions" on page 160 dialog opens the Windows File Explorer, which allows you to perform operating system file functions such as Move, Copy and Delete.

File Explorer also allows you to map network drives to drive letters on your PC or intranet, in order to more easily save screen images, states and other data, and load them back into the instrument.

## 2.14 Help



Pressing the **Help** button in the "[Control Bar](#)" on [page 154](#), the **Help** front panel key, or the **F1** key if you have a PC keyboard connected, opens the context-sensitive help system. The **Help** button appears in the "[Control Bar](#)" on [page 154](#) and in the banner of full-screen dialogs

You can also use the Help window's Contents pane to navigate to Help for any function in the instrument

You can also touch-and-hold a specific control to display a "right-click" menu, in which one of the choices is **Help on this setting**

## 2.15 Status Bar

The Status Panel (or Status Bar) appears at the bottom of the display and contains three fields:



The Message Balloon appears on the left side of the Status Panel and lets you know when there is an unread message in the queue.



**No unread messages**

**Unread messages**

The Message Balloon has a gray outline and no fill if there are no unread messages; it has a gray fill and a white outline and displays a white ellipsis in the middle if there are unread messages.


The Condition Indicator appears to the right of the Message Balloon and shows the current number of open conditions. Below are some examples of what the Condition Indicator can look like:



The triangle is unfilled if there are no open conditions, filled with yellow if all open conditions are warnings, and filled with red if at least one open condition is an error. The number displayed is the total number of open conditions.

Touching the Condition Indicator opens up the Show Status dialog (see below) with the Current Conditions tab selected. Touching anywhere else on the Status Bar opens up the Show Status dialog with the History tab selected.

The Condition Message appears to the right of the Condition Indicator. In the example below, the Condition Message is “Align All, Now required”:

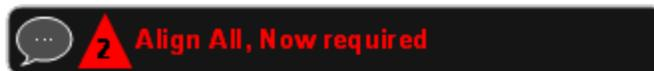

Warning condition messages display in yellow, error condition messages display in red.

If there is more than 1 open condition, the Condition Message cycles through the display of all of the open conditions, one at a time. Each message is displayed for 2 seconds, then the next for 2 seconds, and so on.

### Show Status Dialog

The Show Status dialog appears if you tap anywhere in the Status Bar. Touching the Condition Indicator (the triangle in the Status Bar) opens up the Show Status dialog with the Current Conditions tab selected. Touching anywhere else on the Status Bar opens up the Show Status dialog with the History tab selected.

## 2 User Interface

### 2.15 Status Bar

Status	History				
History	Type	ID	Message	Repeats	Time
Current Conditions	✓	1064	Align Now All required - CLEARED		6:37:49 PM 2/24/2015
Settings	✓	1301	Meas Uncal - CLEARED		6:37:37 PM 2/24/2015
	✗	64	Align Now All required - DETECTED		6:36:59 PM 2/24/2015
	⚠	301	Meas Uncal - DETECTED		6:33:27 PM 2/24/2015
	✓	1301	Meas Uncal - CLEARED		6:31:27 PM 2/24/2015
	⚠	301	Meas Uncal - DETECTED		6:33:27 PM 2/24/2015
	✓	1141	Input Overload - CLEARED,ADC over range	47	1:07:56 PM 2/24/2015
	✗	141	Input Overload - DETECTED,ADC over range	47	1:07:56 PM 2/24/2015
	✗	780	No Peak Found		1:03:55 PM 2/24/2015

ℹ Informational ⚠ Warning ✗ Error
Press any row for more info about that Message
Clear Message Queue

If the display fills up, scrolling is enabled just as in other X-Series Multi-touch UI displays.

The Status dialog automatically refreshes as new messages and conditions occur.

At the bottom of the screen is a Clear Message Queue button. This button clears all errors in all error queues.

Note the following:

- Clear Message Queue does not affect the current status conditions
- Mode Preset does not clear the message queue
- Restore System Defaults (Super Preset) will clear all message queues
- \*CLS only clears the queue if it is sent remotely and \*RST does not affect any error queue
- Switching Modes does not affect any error queues

See "[More Information](#)" on page 165

Remote Command	<code>:SYSTem:ERRor[:NEXT]?</code>
----------------	------------------------------------

Example	<code>:SYST:ERR?</code>
---------	-------------------------

Notes	The return string has the format:
-------	-----------------------------------

---

<Error Number>, <Error>

Where <Error Number> and <Error> are those shown on the Show Errors screen

---

Backwards  
Compatibility  
Notes

In some legacy analyzers, the Repeat field shows the number of times the message has repeated since the last time the error queue was cleared. In the X-Series, the Repeat field shows the number of times the error has repeated since the last intervening error. So the count may very well be different than in the past even for identical signal conditions

Unlike previous analyzers, in the X-Series all errors are reported through the Message or Status lines and are logged to the event queue. They never appear as text in the graticule area (as they sometimes do in previous analyzers) and they are never displayed in the settings panel at the top of the screen (as they sometimes do, by changing color, in previous analyzers)

As a consequence of the above, the user can only see one status condition (the most recently generated) without looking at the queue. In the past, at least in the Spectrum Analyzer, multiple status conditions might display on the right side of the graticule

In general, there is no backwards compatibility specified or guaranteed between the error numbers in the X-Series and those of earlier products. Error, event, and status processing code in customers' software will probably need to be rewritten to work with X-Series

In the legacy analyzers, some conditions report as errors and others simply turn on status bits. Conditions that report as errors often report over and over as long as the condition exists. In the X-series, all conditions report as start and stop events. Consequently, software that repeatedly queries for a condition error until it stops reporting will have to be rewritten for the X-series

## More Information

The Status Dialog has two screens, selectable by the tabs on the right: **History** and **Current Conditions**:

### History

**History** brings up a screen displaying the front panel message queue in chronological order, with the newest event at the top. Remember that the front panel queue contains all of the events generated by front panel actions as well as error events from all of the SCPI queues. A typical History display appears below:

## 2 User Interface

### 2.15 Status Bar

Status		History			
History	Type	ID	Message	Repeats	Time
Current Conditions		301	Meas Uncal - DETECTED		5:36:35 PM 2/24/2015
Settings		1141	Input Overload - CLEARED,ADC over range	49	1:07:56 PM 2/24/2015
		141	Input Overload - DETECTED,ADC over range	49	1:07:56 PM 2/24/2015
		1141	Input Overload - CLEARED,ADC over range		1:07:53 PM 2/24/2015

Legend:  Informational  Warning  Error

Press any row for more info about that Message

Clear Message Queue

The fields on the History display are:

<b>Type</b>	Displays the icon identifying the event or condition as an error or warning
<b>ID</b>	Displays the error number
<b>Message</b>	Displays the message text
<b>Repeat (RPT)</b>	<p>This field shows the number of consecutive instances of the event, uninterrupted by other events. In other words, if an event occurs 5 times with no other intervening event, the value of repeat will be 5</p> <p>If the value of Repeat is 1 the field does not display. If the value of Repeat is &gt;1, the time and date shown are those of the most recent occurrence. If the value of repeat reaches 999,999 it stops there. The Repeat field can run into some pretty large numbers when apps (like the GSM app) report things like “GSM sync burst not found” as events rather than conditions, which is actually fairly common</p> <p>Note that the repeat count is unavailable over SCPI</p>
<b>Time</b>	Shows the most recent time (including the date) at which the event occurred. Time is displayed to the second

To understand the History dialog, and to properly program the instrument’s messaging system, remember that there are two types of occurrences, events and conditions:

- An event is an occurrence of zero duration. Events generate messages which are displayed in the center of the display for a period of time and then fade away. These may be of an advisory nature or may represent errors, for example “No

peak found”

- A condition is an occurrence of finite duration, that is, it has a start and an end. Conditions are states of the analyzer characterized by some combination of settings or some kind of failure that the user needs to be told about while it is happening, but then can stop being told once it goes away; for example “Input overload; ADC over range”

The error queue contains error events as well as the DETECTED and CLEARED events for condition errors, as seen in the figure above.

DETECTED events have numbers less than 1000 and CLEARED events have the same number plus 1000. For example,

301, Meas Uncal – DETECTED

and later

1301, Meas Uncal – CLEARED

To detect a condition error over SCPI, you should read the error queue and note any DETECTED error which is not followed eventually by an associated CLEARED error. This means the condition is still in effect. It is not sufficient to simply read the error queue until you get “No Errors” back. You may still have the condition error; the condition may still be in effect, and if that is the case, all you have done by clearing the error queue is to remove the first event (the DETECTED event) from the queue. For a condition error, you have to read the error queue until you see the CLEARED event for that condition. THEN you know that the condition is gone.

### **Current Conditions**

The **Current Conditions** display shows all of the open conditions in the instrument. An open condition is a condition error or warning for which a start (detected) event has occurred but for which no corresponding stop (cleared) event has occurred.

An example of the Current Conditions screen appears below:

## 2 User Interface

### 2.15 Status Bar

Type	ID	Message	Time
	64	Align Now All required	6:36:59 PM 2/24/2015
	301	Meas Uncal	6:33:27 PM 2/24/2015

The fields on the Current Conditions display are:

<b>Type</b>	Displays the icon identifying the event or condition as an error or warning or informational
<b>ID</b>	Displays the error number
<b>Message</b>	Displays the message text
<b>Time</b>	Shows the most recent time (including the date) at which the event occurred. Time is displayed to the second

Touching a condition message expands the display of that message. Touching again collapses it. The description is the same as the one that appears on the message dialog. An example of this is shown in the History section, below.

When there are no open conditions, the display is as shown below:




## 2.16 Block Diagram

When you press the Block Diagram button in the "Control Bar" on page 154, the display changes to a stylized pictorial representation of the current internal hardware setup and signal processing path. When you touch one of the blocks on the Block Diagram, the corresponding menu panel opens.




When you press the Block Diagram button, the display changes to a stylized pictorial representation of the current internal hardware setup and signal processing path. When you touch one of the blocks on the Block Diagram, the corresponding menu panel opens.

While in the Block Diagram display, the button is blue colored, as:

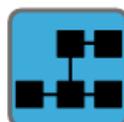


To exit the Block Diagram display, tap the button again.


The Block Diagram display is not meant to be a completely accurate representation, but one which can show differences as you change the hardware setup. For example, here is the basic RF Block Diagram:

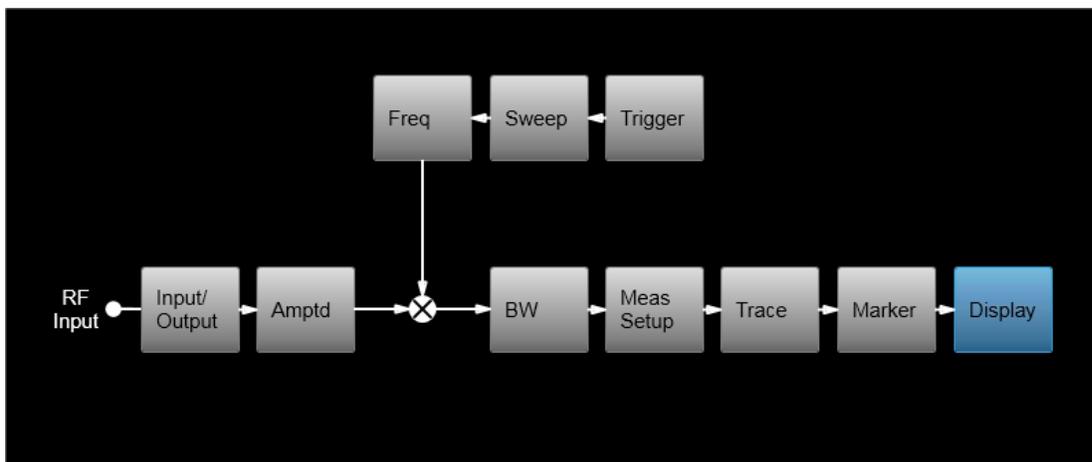

And here is the Block Diagram when External Mixing is selected:

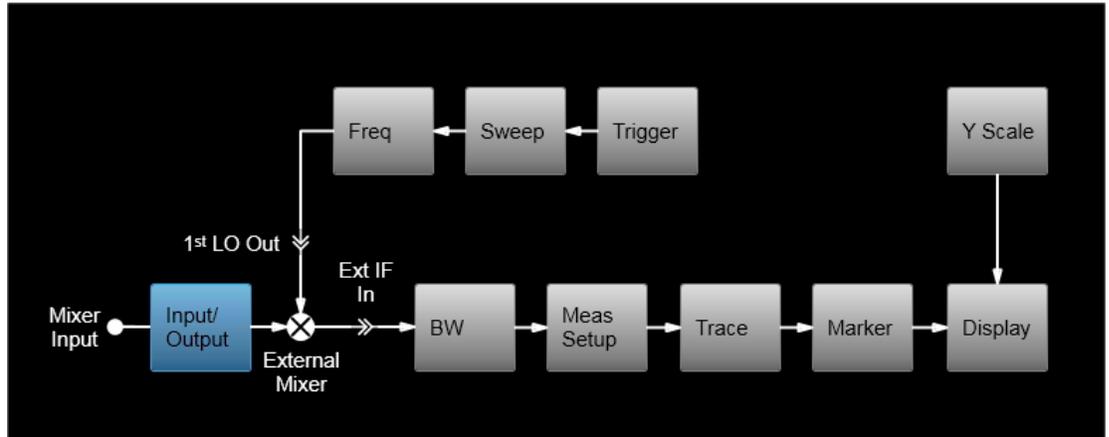

And here is the Block Diagram when the I/Q inputs are selected:

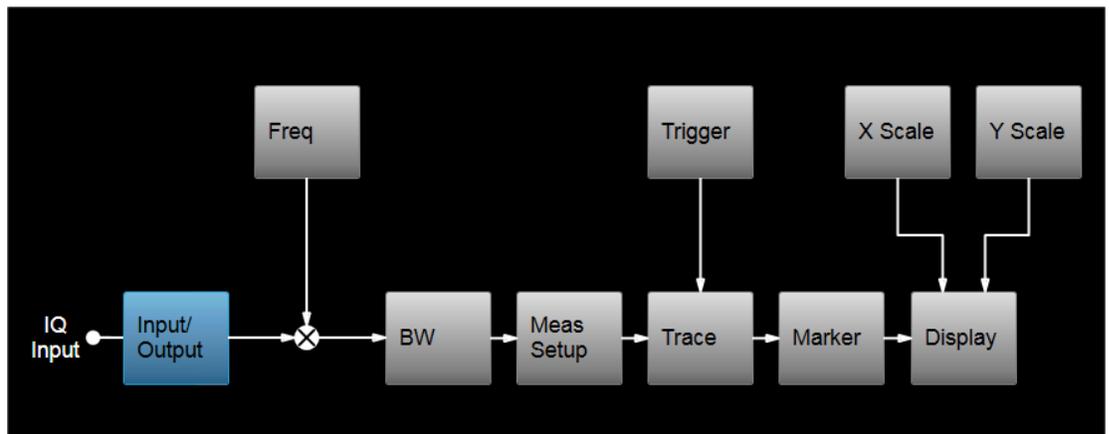


## 2.17 View Editor

This section describes the use of the View Editor, which allows you to:

- Add windows to and delete windows from the current measurement
- Resize and rearrange windows
- Create User Views

User Views are custom Views that you create by adding, deleting, rearranging, resizing, or changing the contents of the windows in an existing View, and then saving the edited View as a new View. The instrument lists the current User Views for a measurement after the Predefined Views, in the Mode/Meas dialog and on the View menu panel under Display:

ent	View
	Basic Meas Summary RB Slot Meas Subcarrier Meas MIMO Summary Cross Carriers Summary
	User View
	My New View

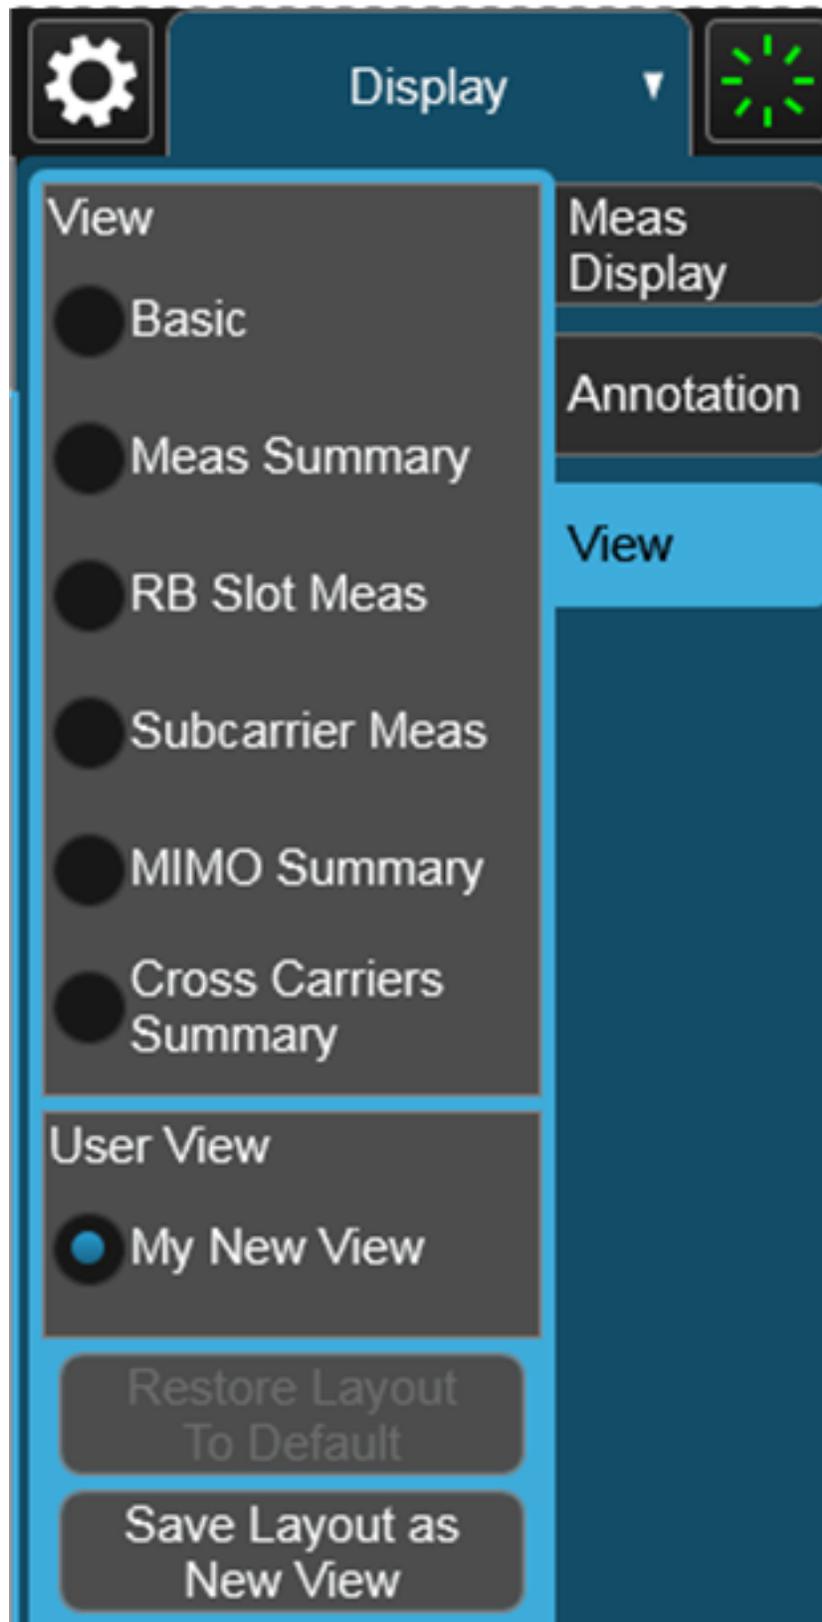


You can save an edited View using the **Save Layout as New View** control in the View menu (see ["To Save a User View" on page 185](#)).

On occasion, the instrument may automatically save an edited View for you. If you have edited a View, so that the \* is displaying next to the View name, you must save that View as a User View before you save State or switch measurements. If you forget that you have made changes to a View, then to keep from losing your edited View when you switch measurements, the instrument will save it for you. If you have an edited View that has not been saved and you try to do any of the following:

- Enter the "Save" menu
- Switch Measurements
- Switch Modes
- Switch Screens

the edited view will be saved for you with the name "Autosaved". When this happens, you will receive the following message:

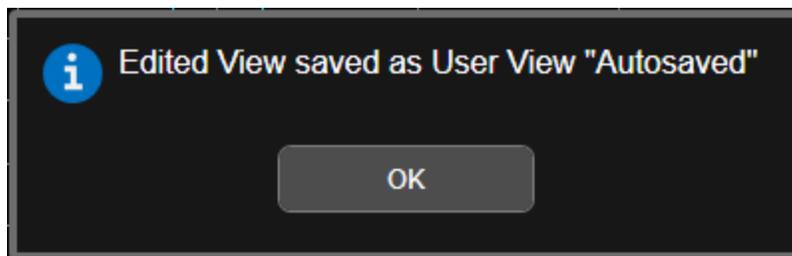

If an Autosaved User View already exists, the User View called "Autosaved" will be overwritten with the currently edited view. If you have multiple edited views, the selected edited view will be Autosaved. If there is not an edited view selected the last selected edited view will be Autosaved.

### To Open the View Editor



Pressing the View Editor button (shown above) in the ["Control Bar" on page 154](#), at the bottom right of the screen, opens the View Editor.

While in the View Editor, the icon is blue colored, as:



Pressing the View Editor button again exits the View Editor.

## To Close the View Editor

Tap the View Editor button again.

The user chooses the desired View through the use of the Mode/Meas/View dialog (see "[Mode/Meas/View Dialog](#)" on page 105) or the View menu (a tab under the **Display** key). The View menu allows the user to browse the views in the current measurement. The View menu contains a list of Predefined Views for you to use. If you wish to modify a Predefined View or create your own, new View, you use the View Editor.

### User Views & Predefined Views


A User View is any View that is not in the list of predefined Views for the current measurement. For example, the Swept SA measurement has four predefined Views: Normal, Spectrogram, Zone Span, and Trace Zoom.

User Views allow you to add, delete, change and rearrange the windows of a predefined View, creating a new custom view.


## 2.17.1 To Create a User View

Whenever you add or delete a window to/from a predefined View, or change what is being displayed in a Predefined View's window, the Predefined View is marked with an asterisk (\*), to show that it has been modified.

For example, to edit the View shown below, you press the Edit View icon.

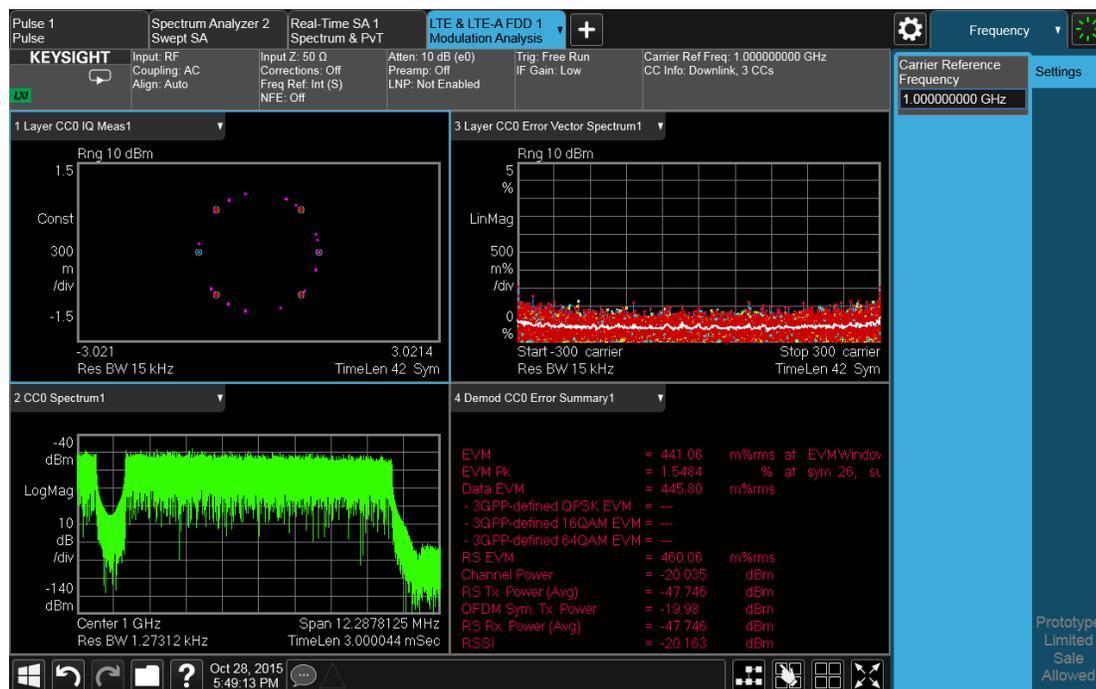

When you do this, you get the View Editor screen, which appears as below. The menu panel switches to the View menu. Here we see that we are in the Predefined View called “Basic”.

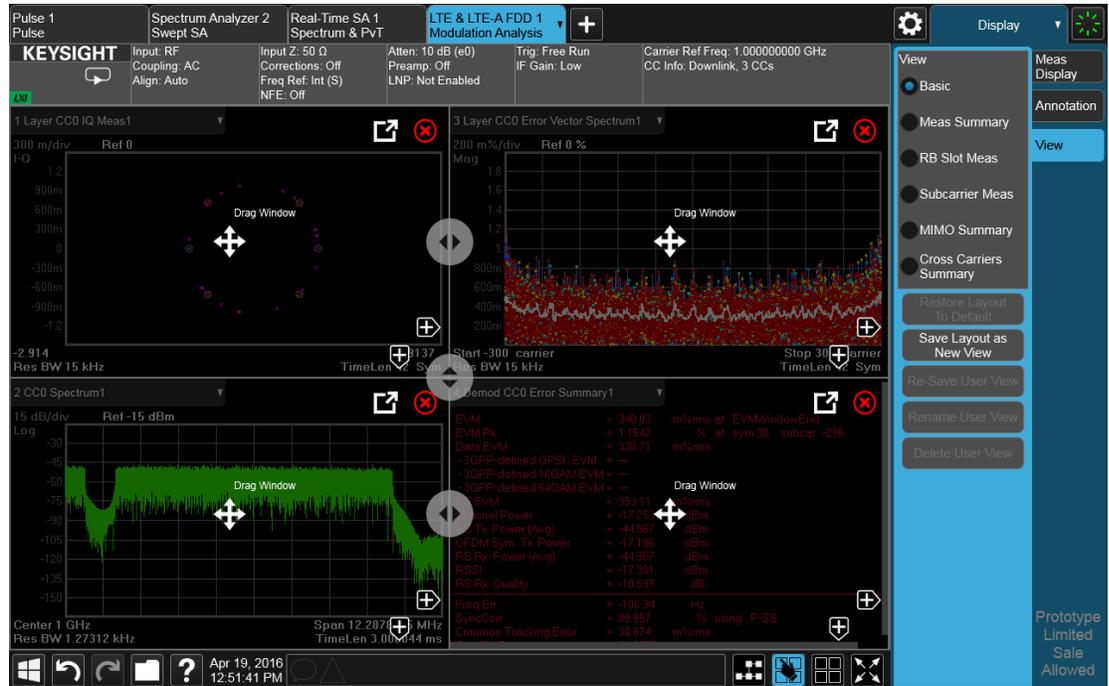

Each window has two arrows containing + signs. Pressing either of the “+” symbols adds a new window on that side. For example, let’s say you press the + symbol on the right of the lower left window:

You would then see this:

## 2 User Interface

### 2.17 View Editor



A fifth window has been added, and is automatically assigned the number 5. (The window number, which is displayed in the Window Title region, is used when sending SCPI commands to that window).

Note the \* that now appears next to Basic in the View menu, indicating that you are now in the **modified** Basic View. You see the \* if you add, delete or rearrange windows, but simply resizing windows does not display the \*. The \* means you are in a modified View, which must be saved as a User View before you leave the measurement (if you don't save it, the instrument will save it for you).

Note also that the Restore Layout to Default control is no longer grayed out. If you press this control it restores the Basic View to its default state. Restore Layout to Default becomes available when you add, delete or rearrange windows **and** when you resize them; otherwise it is grayed out.

You can add more windows with the "+" arrow symbols. Note that the "+" arrow symbols only appear if the current measurement has more windows available to display. If you are already displaying all the measurement's windows, the "+" symbols disappear.

You can exit the View Editor by again tapping the Edit View icon.


You can specify which result you want to see in the new window by tapping its title region.




A panel drops down, containing a Data control for specifying window results. Some measurements, such as LTE-A in this example, also provide controls on this dropdown for specifying other window parameters, such as the Component Carrier and Data Format, Tap the Data control and you will see a list of available results for the window. In some cases, as in LTE-A, this will be a cascading list, due to the number of results available:

## 2 User Interface

### 2.17 View Editor

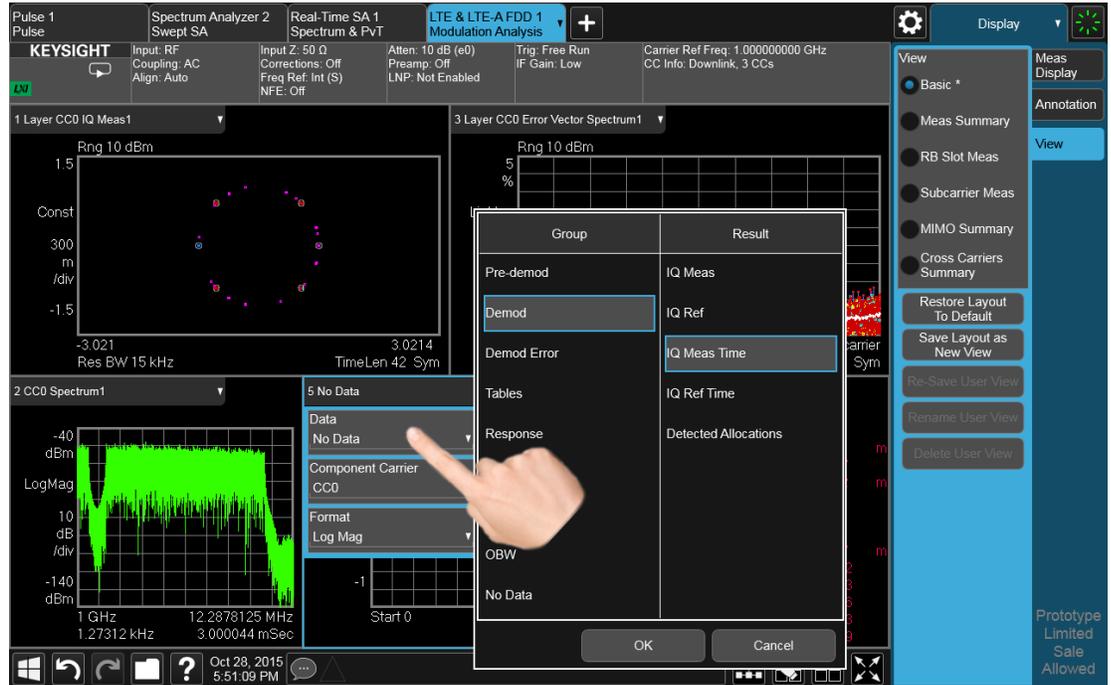


Choose the result you want and tap OK. Here we have chosen IQ Meas Time from the Demod group:

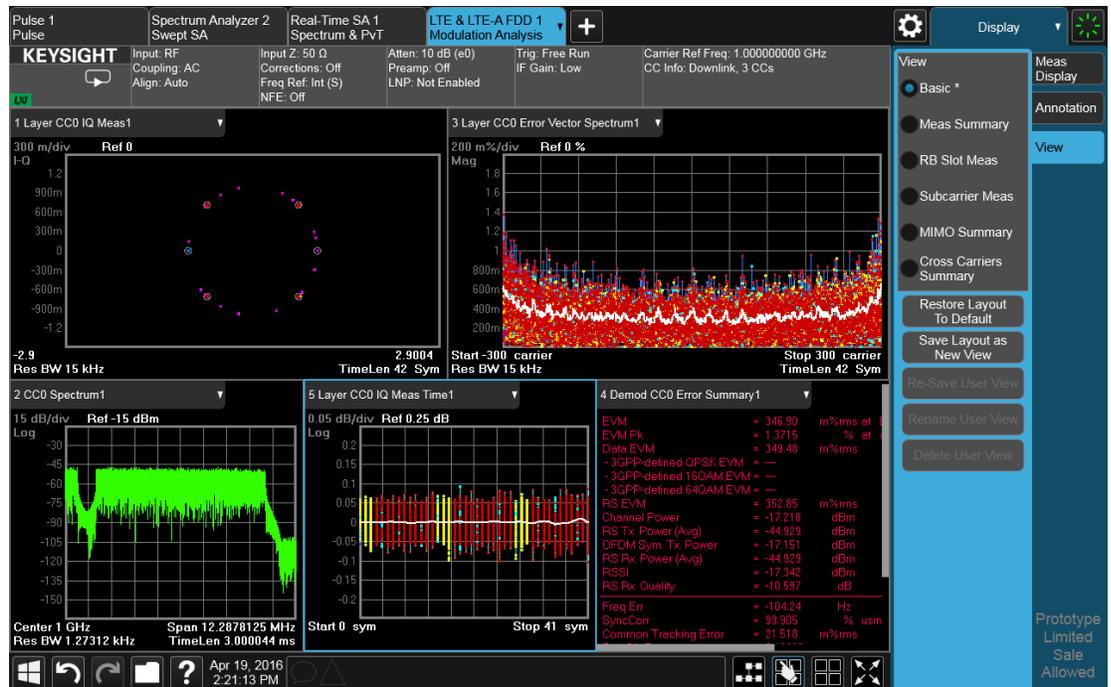

Your new, edited User View is now ready to use.

## 2.17.2 To Resize or Rearrange Windows in a View

Sometimes you may wish to resize a window. To do this go back into the View Editor and note the large, translucent white circles along the edges of the draggable borders. These are the “resize handles”. You can resize the windows by dragging these handles. Note that in their quiescent state they are slightly translucent; when you touch one it turns solid white, indicating that it is draggable. If you touch and drag one of them it moves the axis to which it is attached.

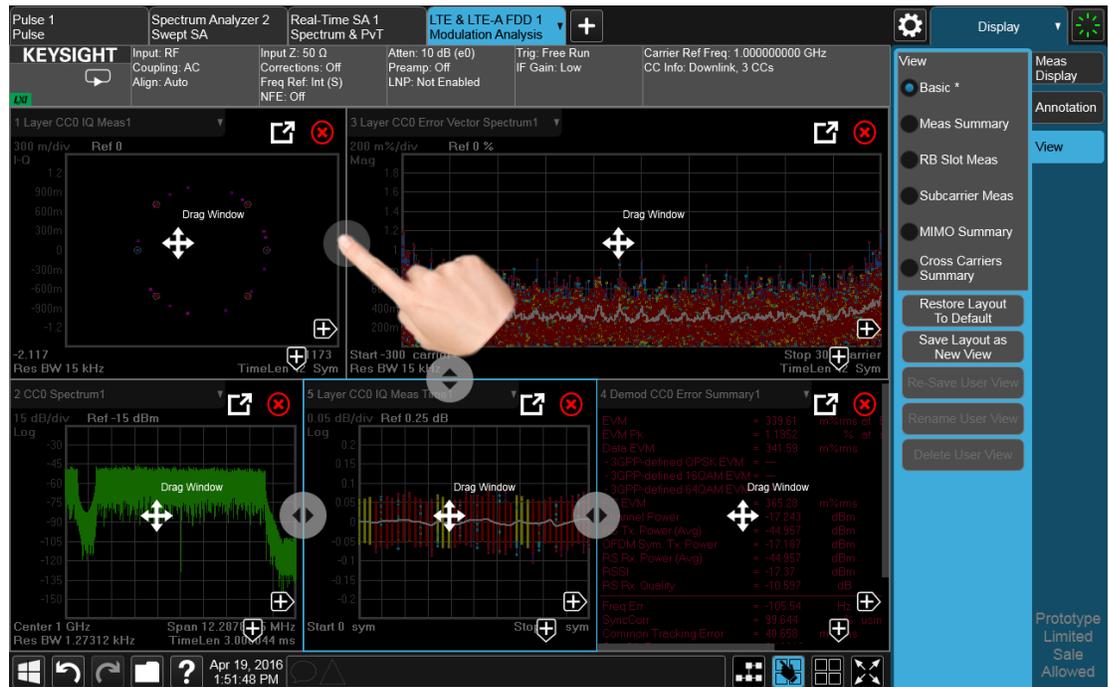

Another feature that comes with the View Editor is the ability to move windows around. You do this by dragging the four-arrow objects in the center of the window; the whole window goes along. Actually you can touch and drag anywhere in the window (except on one of the arrows or the delete circle) and it will drag, but the four-arrow objects give you an indication and a convenient finger target.




## 2 User Interface

### 2.17 View Editor



The outline of the window appears as it is being dragged. When you start to drag a window, target symbols appear in the other windows:



If you drop a window on one of the targets, it swaps positions with the target window. If you drag a window's center into another window, green stripes appear on the edges to show you where the window will go when you release it:

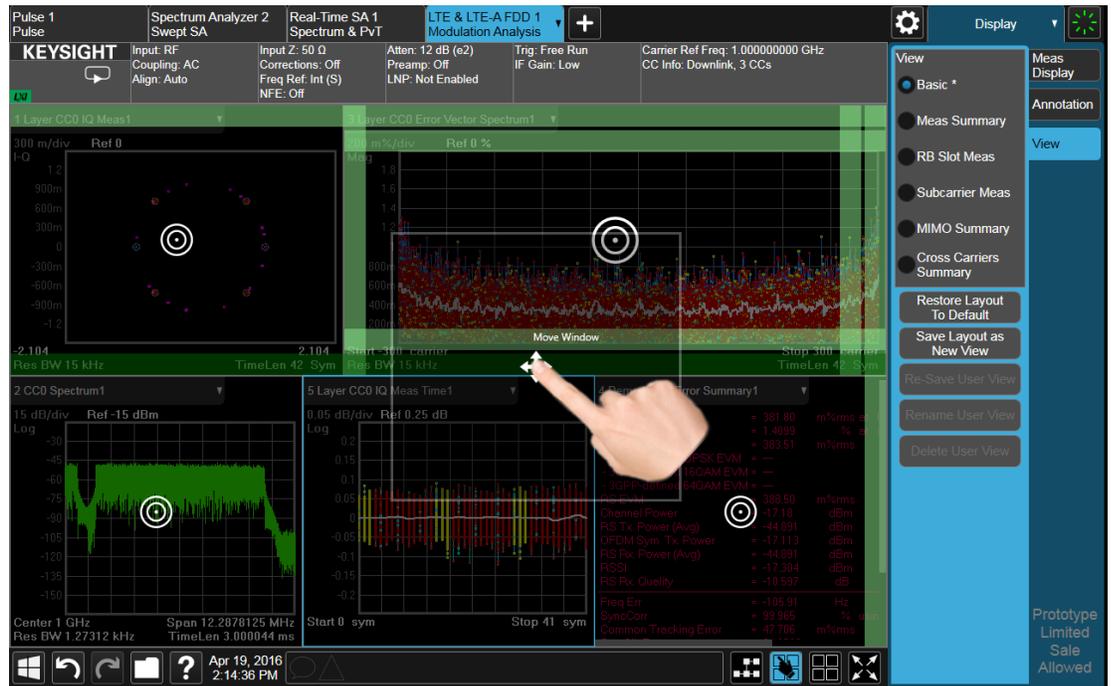

When you hover over one of the stripes it gets dimmer, to show the position the window being dragged will take on. If you release a window over an inner stripe, the window you are dragging and the window over which you were hovering resize to share the space the target window originally occupied. If you release a window over an outer stripe, as shown below, the window you are dragging takes on a new position outside the array of other windows:

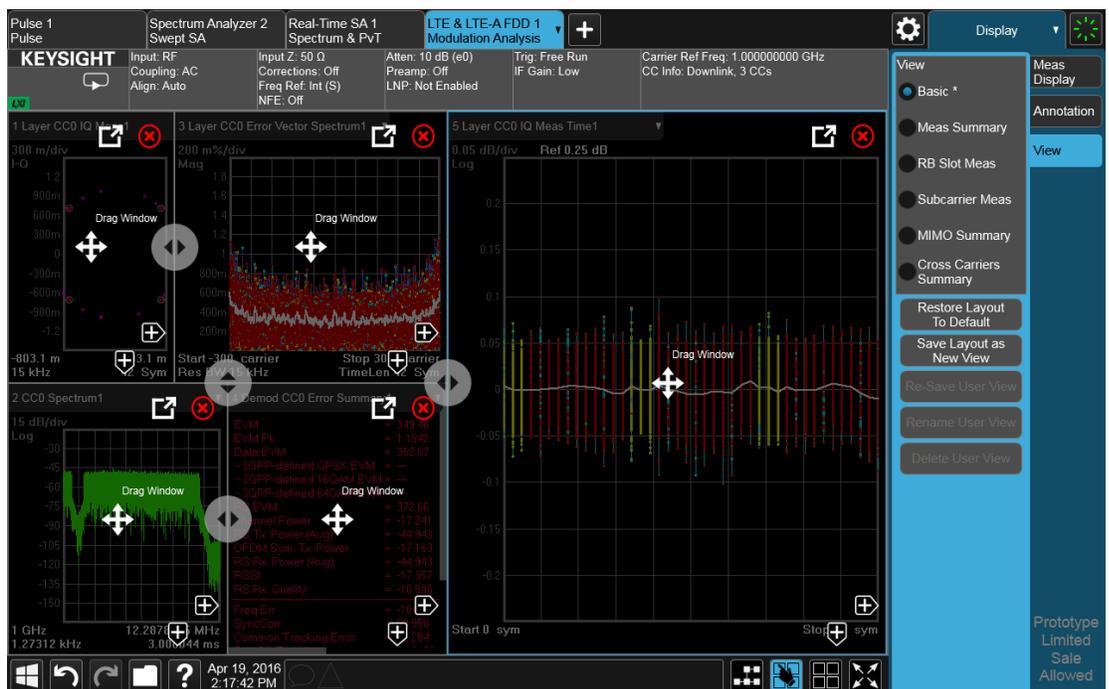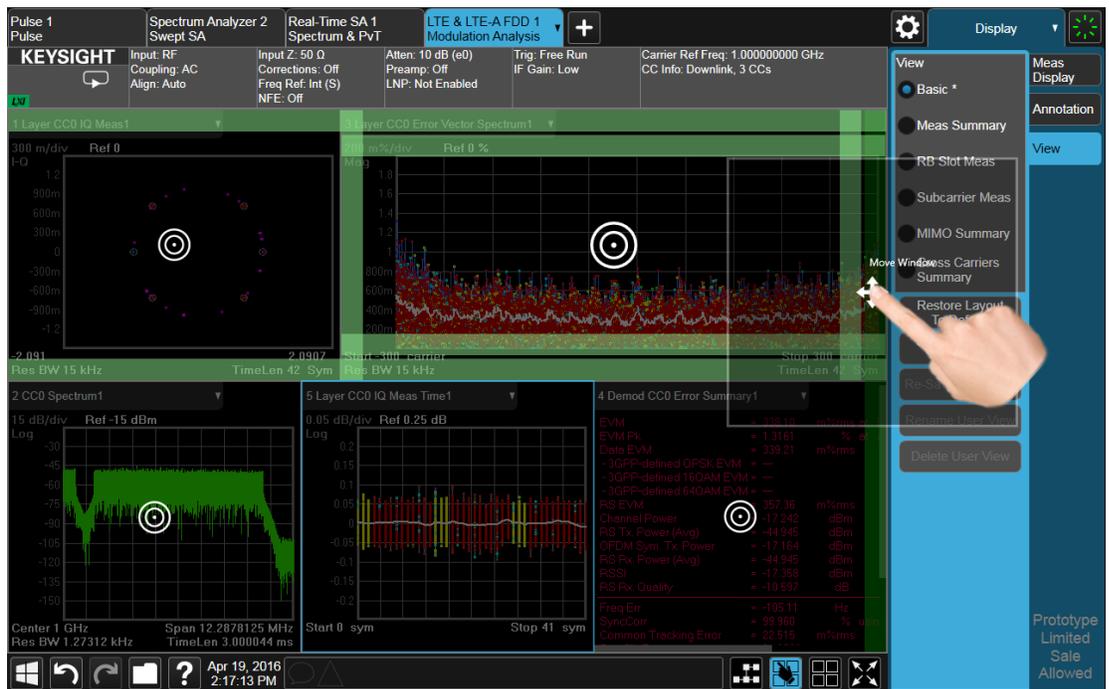

## 2 User Interface


### 2.17 View Editor

In either case, one or more of the remaining windows resize to occupy the space formerly occupied by the window you were dragging.


#### 2.17.3 To Delete a Window from a View

The View Editor also lets you delete a window. To do this, tap one of the circled red X's, as shown below.

There has to be more than one window for you to see the circled red Xs.

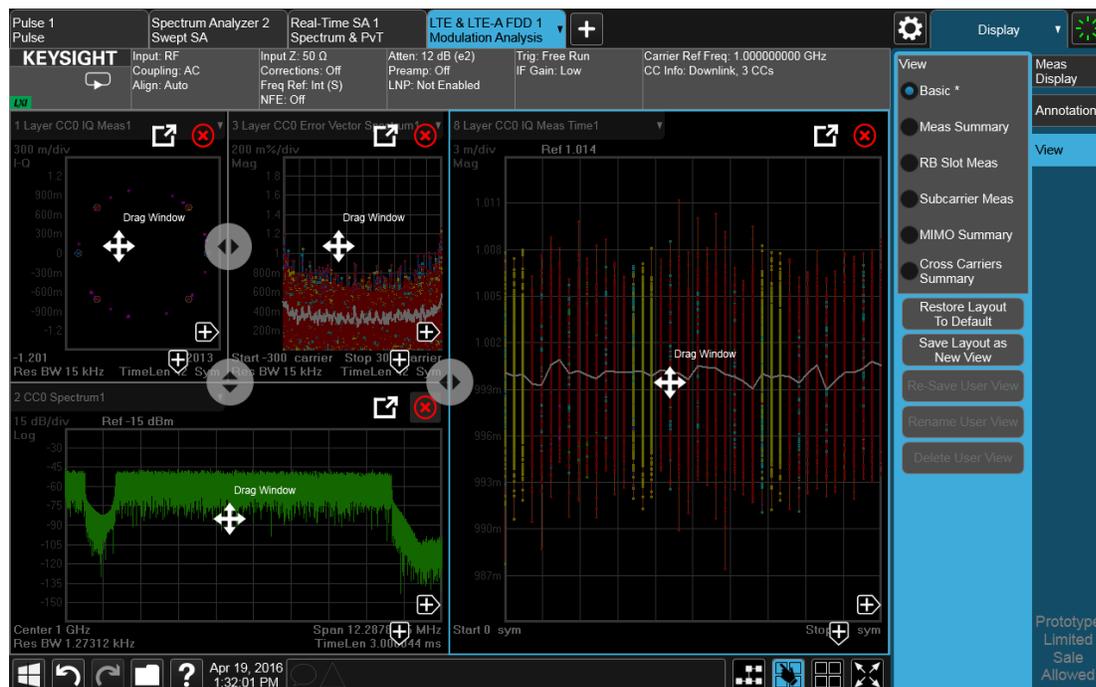

Now press the View Editor button (the blue hand) to exit the View Editor. At this point, you have an edited Predefined View, as shown by the \* next to Basic:

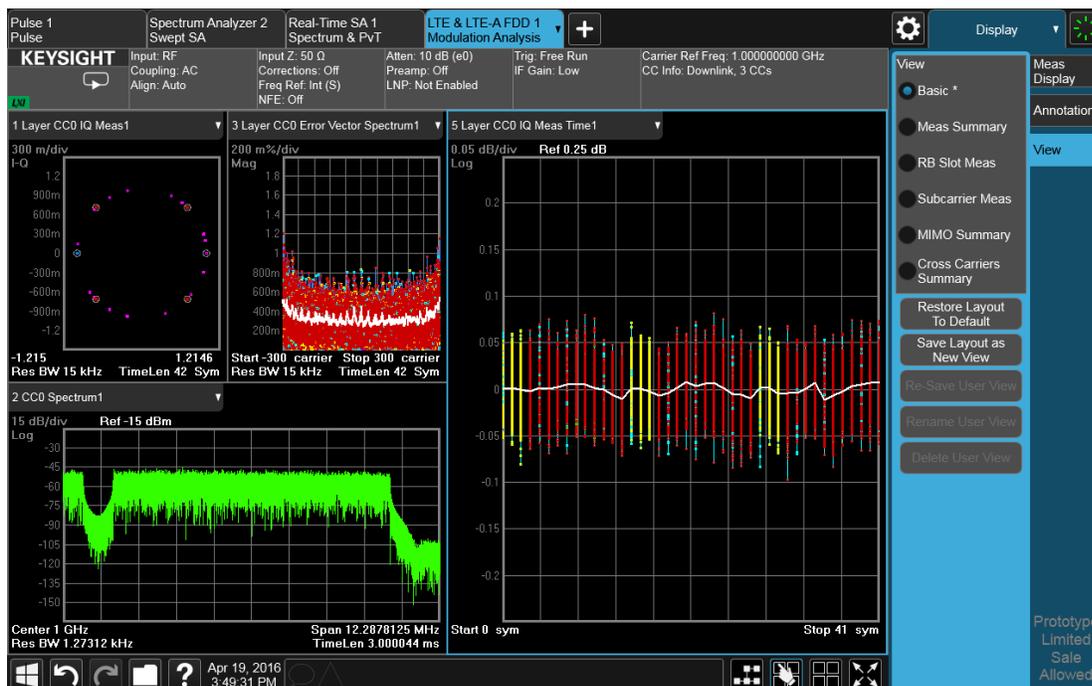

When you are finished with it, you can restore the Layout to the default for Basic by pressing “Restore Layout to Default”. Or you can save your edited View as a “User View” (if you exit the measurement without saving the edited View, the instrument will save it for you as a User View called “Autosaved”).

If you clone the current Screen by pressing the “+” tab, the modified Predefined View will be saved as a User View called “Autosaved”, and it will be available in the new Screen.


## 2.17.4 To Save a User View

See also "[Transferring User Views Between Instruments](#)" on page 187


To save your new View as a User View, tap the “Save Layout as New View” control. You will get an alpha keyboard that lets you name your new View; the default is the old View name with a number. Below, we have typed in “My New View”:

## 2 User Interface

### 2.17 View Editor

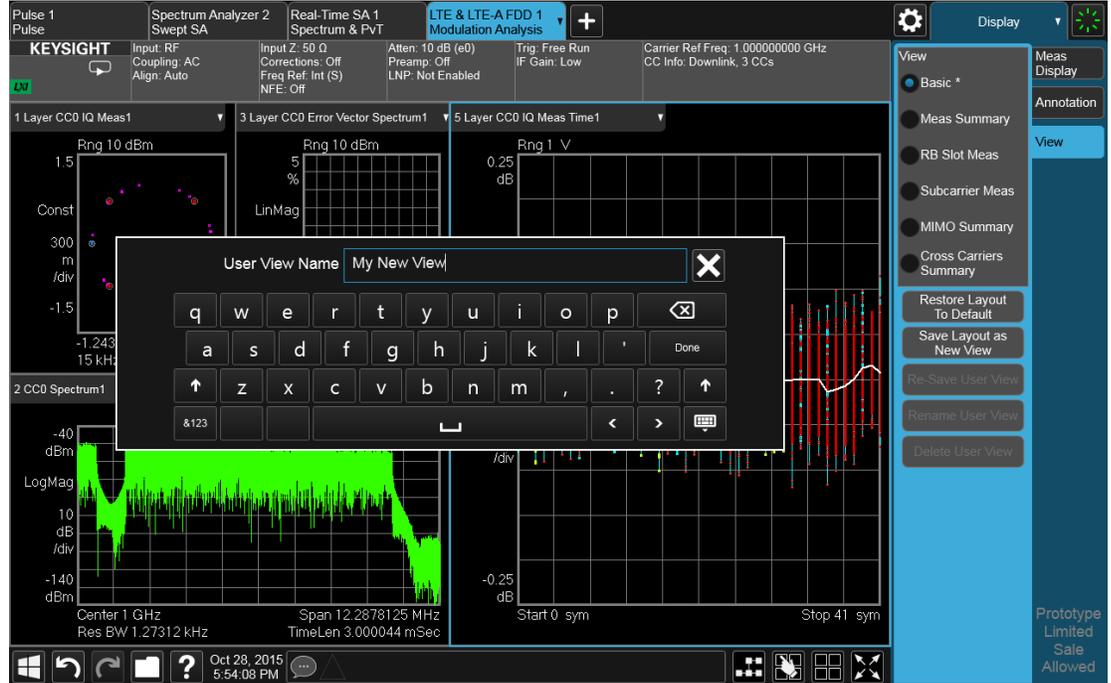


When you tap “Done”, the View is saved:

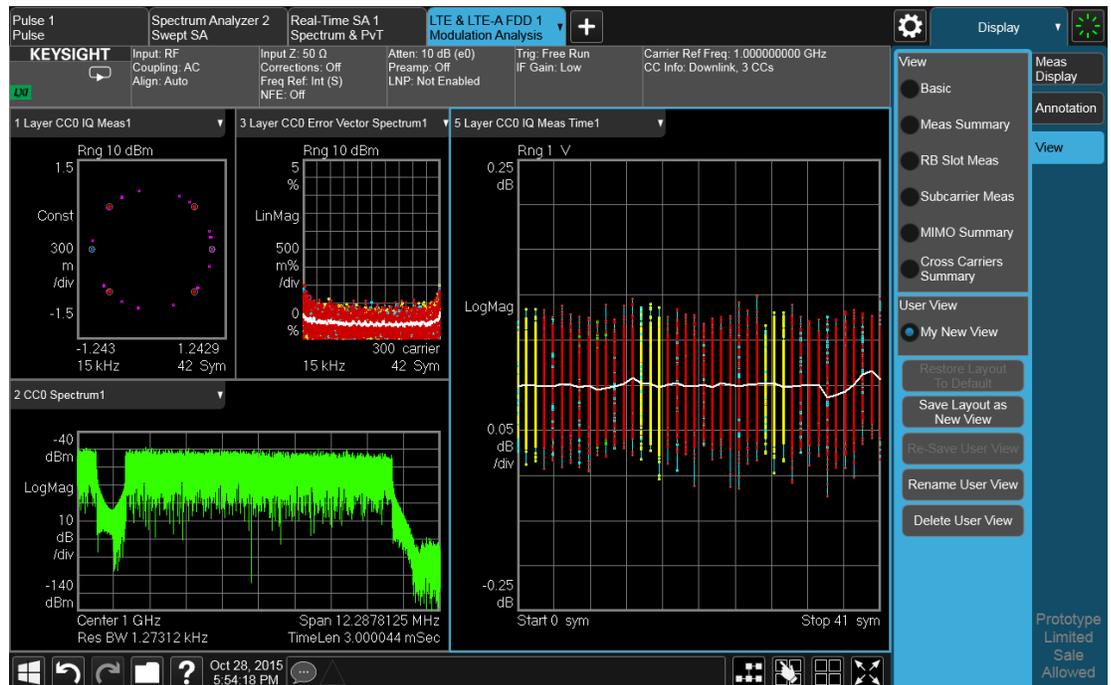

Notice the User View region which has appeared on the menu panel above, with the new User View called “My New View. Notice also that “Basic” has returned to its original, unedited state and the \* is gone from its name. Note also that “Restore

Layout to Default” is grayed out. Note also that if you go to the Mode/Meas dialog, you will see the User View there as well:

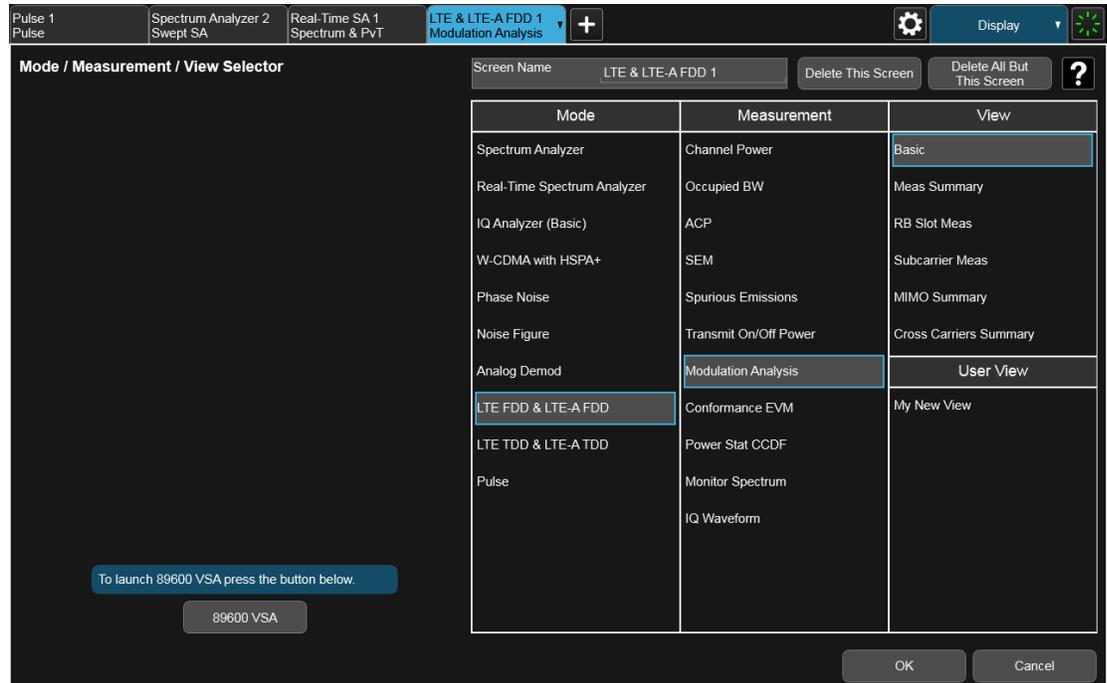

When naming a new View, you must choose a name that is not already in use for any User View in any measurement; this is because User Views get written to permanent memory and are available to all instances of the Measurement in any screen. They survive a Mode Preset and also survive shutdown and restart of the application.

### Transferring User Views Between Instruments

To transfer a User View to another instrument, you must copy the desired file to a portable drive or to your network and then copy it to the target instrument.

When you save a User View, a file is created (or updated if it already exists) containing all the User Views for the current measurement. All of these files are saved on the D: drive in the instrument, in the folder:

`D:\Users\Instrument\My Documents\UserViews`

(assuming you are logged in as Instrument, which is the default).

Look for the file for your measurement. The file naming convention is:

`ModeName.MeasName.layout`

Where **ModeName** is the long-form SCPI parameter for the `:INST:SEL` command for your Mode, and **MeasName** is the long-form SCPI parameter for the `:CONF` command for your Measurement.

For a full list of all [ModeName](#) parameters, see [Index to Modes](#) in "[Mode](#)" on page 106.

The following is a full list of all [MeasName](#) parameters.

Measurement Name	SCPI ID
ACP, Adjacent Channel Power	ACPower
AM	AM
AM Depth	AMD
Amplitude Probability Distribution	APD
Audio Distortion	AUDDist
Audio Frequency	AUDFreq
Audio Level	AUDLevel
Audio SINAD	AUDSinad
Automatic Direction Finder	ADF
Channel Power	CHPower
Code Domain	CDPower
Combined GSM	CGSM
Combined WCDMA	CWCDma
Complex Spectrum	SPECtrum
Conformance EVM	CEVM
Custom OFDM	OFDM
Digital Demod	DDEMod
Disturbance Analyzer	DANalyzer
EDR In-band Spurious Emissions	IBSPurious
EVM	EEVM
Fast Capture	FCAPture
Fast Spectrum	FSPectrum
FM	FM
FM Deviation	FMDeviation
FM Stereo	FMStereo
Frequency Counter	FCounter
Frequency Scan	FSCan
GMSK Phase & Freq Error	PFERror
Group Delay	GDElay
Harmonics	HARMonics
HRP UWB Demodulation	HUWB
Instrument Landing System	ILS

Measurement Name	SCPI ID
IQ Waveform	WAVeform
LE In-band Emissions	IBEMissions
List Power Step	LPSTep
List Sequencer	LSEQuencer
List Sweep	LIST
Log Plot	LPLot
LoRa (CSS) Demodulation	LORA
Marker Beacon	MBE
Mod Accuracy	RHO
Modulation Analysis	EVM
Modulation Distortion	MODDist
Modulation Rate	MODRate
Modulation SINAD	MODSinad
Monitor Spectrum	MONitor
Noise Figure	NFIGure
Occupied BW /	OBWidth
Output Spectrum BW	
Output RF Spectrum	EORFspectr
Phase and Amplitude vs Time	PAVTime
PM	PM
PM Deviation	PMDeviation
Power Amplifier	PAMplifier
Power Control	PCONtrol
Power Stat CCDF	PSTatistic
Power vs Time	EPVTime
Pulse	PULSe
QPSK EVM	EVMQpsk
Real Time Scan	RTSC
RF Power	RFPower
SEM	SEMAsk
Spectral Flatness	FLATness
Spectrum & PvT	RTSA
Spot Frequency	SFRequency
Spurious Emissions	SPURious
Streaming	STReaming

Measurement Name	SCPI ID
Strip Chart	<a href="#">SCHart</a>
Swept SA	<a href="#">SANalyzer</a>
TOI	<a href="#">TOI</a>
Transmit Analysis	<a href="#">TX</a>
Transmit On/Off Power	<a href="#">PVTime</a>
Transmit Power (Burst Power)	<a href="#">TXPower</a>
Tuned RF Level	<a href="#">TRFLevel</a>
Tuned RF Level with Tracking	<a href="#">TTRF</a>
Tx Band Spur	<a href="#">ETSPur</a>
VHF Omni-Directional Range	<a href="#">VOR</a>

Examples:

- The User View file for the Swept SA measurement is [SA.SANalyzer.layout](#)
- The User View file for the ACP measurement in the WCDMA mode is [WCDMA.ACPower.layout](#)

Copy the desired file to a thumb drive or to your network. Then go to the target instrument and copy the file into the [D:\Users\Instrument\My Documents\UserViews](#) directory on that instrument (again, assuming you are logged in as Instrument).

Note that copying this file to another instrument will overwrite the file already in that instrument, if any, and will destroy any User Views that might have been created on that instrument.

Note that when you delete the last User View for a measurement, the file is removed.

### 2.17.5 To Rename a User View

You can rename a User View by selecting that View and tapping “Rename User View.” You can also re-edit a User View; if you do this, an asterisk will appear next to the User View’s name. You can then tap “Re-Save User View to save it back to its existing name, or “Save Layout as New View” to add another, new User View.

### 2.17.6 To Delete a User View

You can delete a User View by doing the following:


1. From the "Mode/Meas/View Dialog" on page 105, or from the **View** menu, select the User View that you want to delete
2. Switch to the **Display** menu
3. Select the **View** tab
4. Tap **Delete User View**

### 2.17.7 To Delete All User Views

You can delete all User Views by tapping "Delete All User Views." The default view becomes the current view for the Measurement if a User View was the current view when this control was pressed.

### 2.17.8 Use Case: Displaying Marker and Peak Tables

One common application for User Views is to create a View that allows the Spectrum Analyzer to display both a Marker Table and a Peak Table at the same time. To do this, simply add a Marker Table Window and a Peak Table window to the Spectrum window of the Swept SA measurement. The result is shown below; note that the new View has been named "Marker Table & Peak Table":

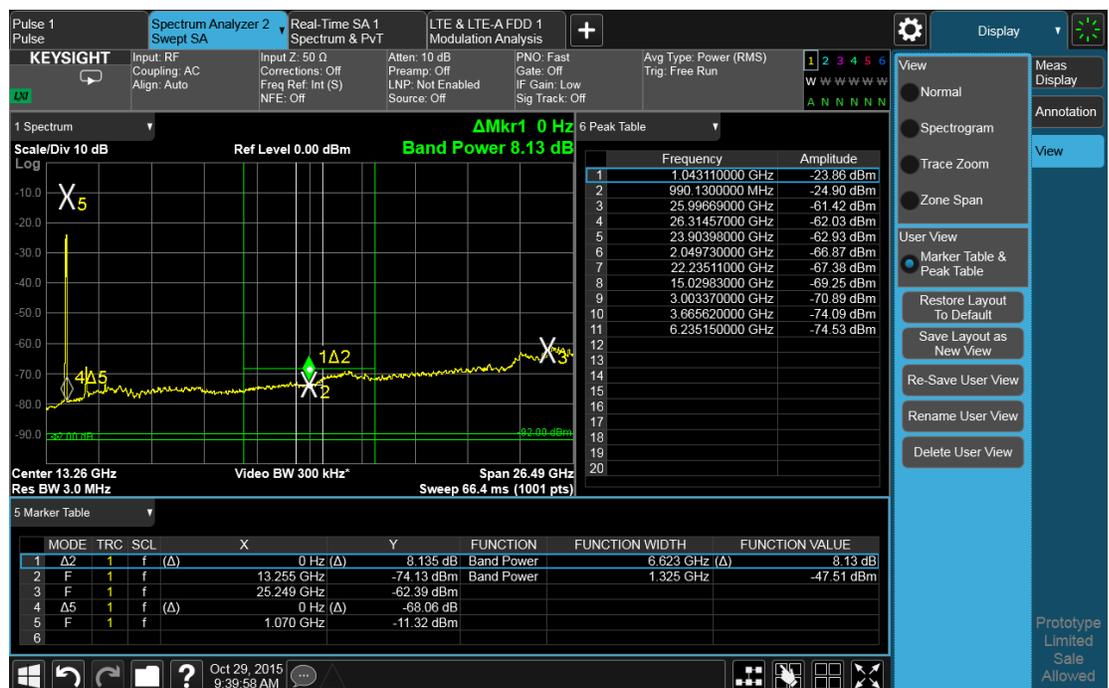

NOTE: There are legacy displays like Marker Table, Peak Table, Measure at Marker and Gate View, which are not Views but special display modes. These are retained for backwards compatibility, however they are turned on and off with switches and do not use the View system. Turning on one of these switches does not create a modified View, it merely adds the specified window to the current View; turning the switch back off removes the window. While the switch is on, NO View shows as selected in the View menu. These switches are grayed out if you are in a modified View or a User View. Since only one of these switches can be on at a time, and because these switches turn off on a Preset, User Views offer a superior way of adding windows than using the switches.


Some measurements do not support User Views; these do not allow adding, deleting or rearranging windows, however they do allow resizing windows. In these measurements you can get into the View Editor but the Add icons, Delete icons and Move icons will not appear. You can still resize the windows and in some cases (e.g. Noise Figure) you can still change window contents.

### 2.17.9 View Editor Remote Commands

Remote Commands for User Views can be found in the documentation for the **Display, View** tab.

## 2.18 Multiscreen

You can configure up to 16 different Screens at a time. Normally, you only see one Screen, and the set of configured screens is shown across the top of the display in a series of "Screen Tabs" on page 104. Touching any screen's tab brings it to the foreground, makes it the current Screen and starts it updating.

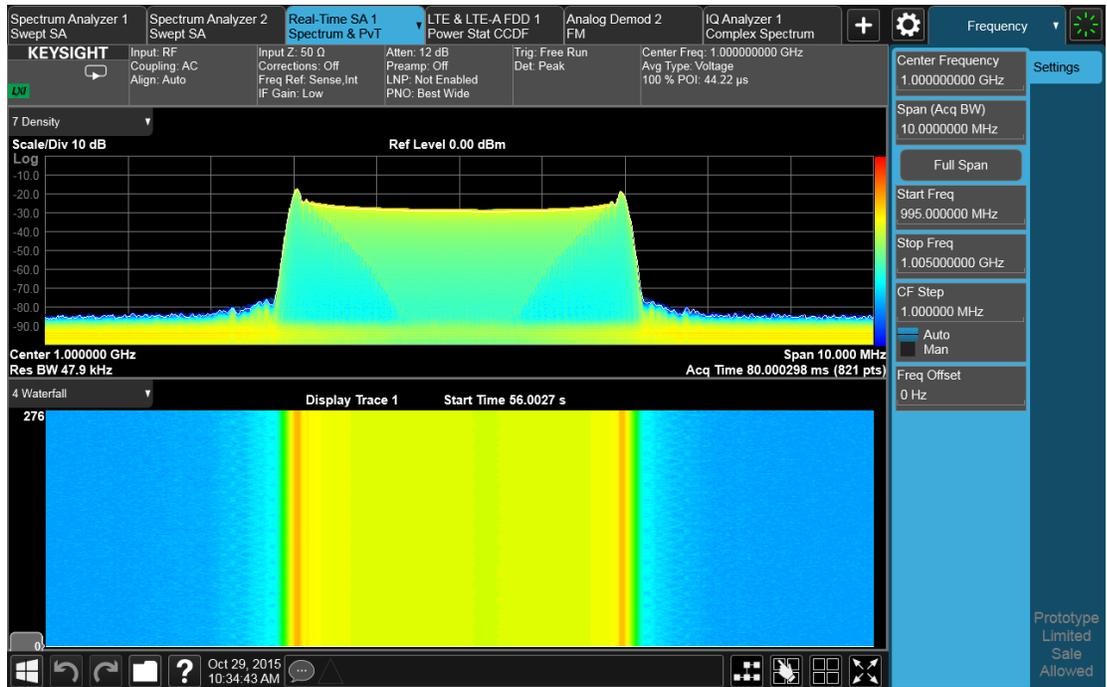

Multiscreen view lets you display all of the configured Screens at once.


You can switch to Multiscreen View by pressing this button in the "Control Bar" on page 154 at the bottom right of the screen:



Multiscreen View looks like this:

## 2 User Interface

### 2.18 Multiscreen

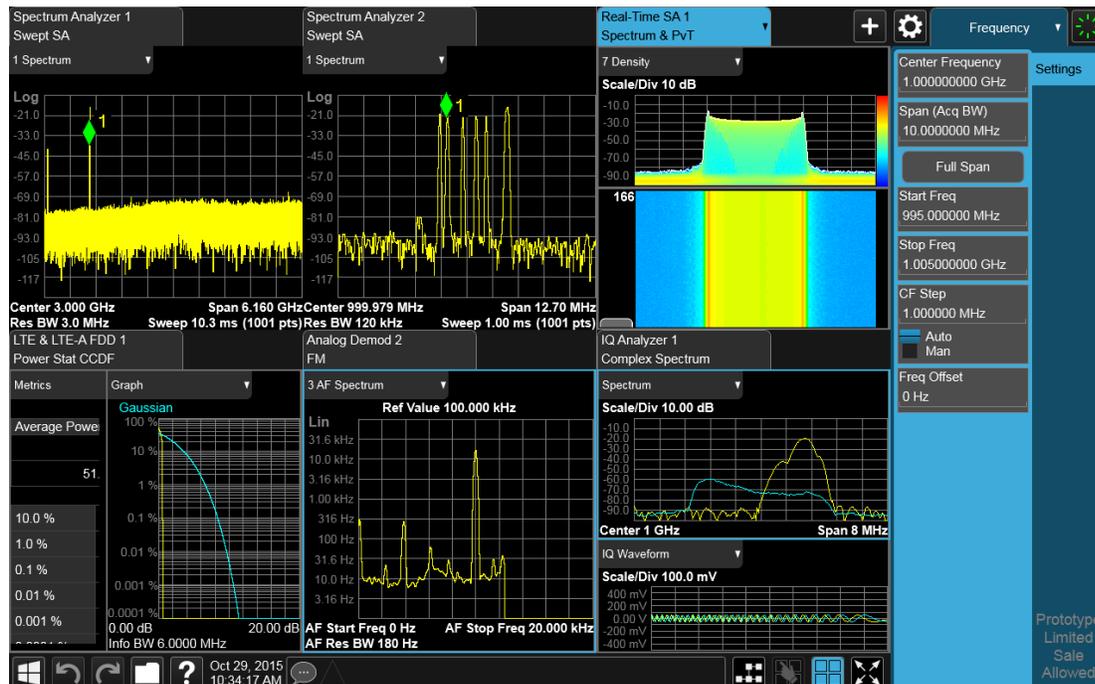

While in Multiscreen View, the button changes from a black background to a blue background:



To exit Multiscreen view, tap the button again.

Multiscreen View cannot be activated if only one screen is configured.

Each Screen contains one Mode, each Mode contains one Measurement, and each Measurement contains a number of Windows arranged in Views. You can configure multiple instances of the same Mode along with any combination of other Modes.

In Multiscreen View, just as in Single Screen View, only one screen is active.

You switch Screens by tapping the Screen Tab you want, or when in Multiscreen View, you can tap the Screen itself. When you switch Screens, the current Screen's state and measurement results are preserved, the new Screen's previous state and data are loaded, and the new Screen starts running its Mode.

In Multiscreen View:

- The Meas Bar does not display
- The Screens are presented in an array of equal size boxes, except where the number of Screens means some have to be different sizes (as when you have 3 Screens, 5 Screens, etc.).

- Each Screen has a tab that contains the name of the Mode and Measurement in the box and a number associated with the instance of that Mode. You can enter a custom Screen name that replaces the Mode name, by going into the Mode/Meas dialog
- There is always one and only one selected Screen. It is indicated by a blue tab. Only the selected Screen is actually running a measurement and updating its display
- The selected window in the selected screen is the context for the current menus. It is the only window on the display with a blue border
- As you go from screen to screen, each screen remembers the last menu that was active in that screen and restores it as the active menu

In Multiscreen View, as in Single Screen View, tapping the blue tab or pressing the Mode/Meas front panel key opens the ["Mode/Meas/View Dialog" on page 105](#) which allows you to change the Mode (or Measurement or View) being displayed in that Screen.

Remote Command	<code>:INSTrument:SCReen:MuLTiple[:STATe] OFF   ON   0   1</code> <code>:INSTrument:SCReen:MuLTiple?</code>
Example	<code>:INST:SCR:MuLT ON</code>
Notes	If only one screen is configured, attempting to set Multi-Screen ON generates the error “-221, Settings conflict; Multi-Screen requires >1 screen”
Preset	OFF

For more information, see the following:

- ["Select Screen" on page 195](#)
- ["Screen List \(Remote only command\)" on page 196](#)

## 2.18.1 Select Screen

You can select a screen by touching its tab or, in ["Multiscreen" on page 193](#) mode, touching the screen itself. Selecting the Screen activates the screen and suspends the previously selected screen (if any).

Remote Command	<code>:INSTrument:SCReen:SElect &lt;screen name&gt;</code> <code>:INSTrument:SCReen:SElect?</code>
Example	<code>:INST:SCR:SEL "Baseband"</code>
Notes	If the <screen name> is specified but not found in the list of Screens, the error message “-224, Illegal parameter value; Screen Name not found” is generated If the display is disabled (via <code>:DISP:ENAB OFF</code> ) then the error message “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” is generated

---

Preset	Returns the name of the active screen
--------	---------------------------------------

## 2.18.2 Screen List (Remote only command)

You can obtain a list of currently configured Screens. This permits your remote program to manage screens for selection, renaming, or deletion.

---

Remote Command	<code>:INSTRument:SCReen:CATalog?</code>
----------------	--

---

Example	<code>:INST:SCR:CAT?</code>
---------	-----------------------------

---

Notes	The query response is a comma separated list of Screen Names. If only 1 Screen is configured, there is no trailing comma
-------	--

For R&S compatibility, the following query is also available:

`:INSTRument:SCReen:LIST?`

---

Preset	Returns list of currently configured Screens
--------	--

## 2.19 Fullscreen

The Fullscreen button is in the "Control Bar" on page 154, at the lower right corner of the display.



When **Full Screen** is pressed the measurement window expands horizontally over the entire instrument display. The screen graticule area expands to fill the available display area.

It turns off the display of the menu panel, however the controls that drop down from the Meas Bar and on-screen annotation are still available, and you can still drag the trace and markers and perform a pinch zoom, so you can still operate the instrument.

Pressing **Full Screen** again while Full Screen is in effect cancels Full Screen.

You can get even more screen area for your data display by turning off the Meas Bar using the Annotation tab of the Display menu)

Full Screen is canceled by the **Preset** key.

Remote Command	<code>:DISPlay:FSCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:FSCReen[:STATe]?</code>
Notes	This was set to Off by :SYST:DEF MISC in MXA1, but not by Preset. It is no longer set Off by :SYST:DEF MISC, since it is now meas global instead of mode global
Preset	Unaffected by Preset but set to Off by Restore Misc Defaults or shutdown and restart
State Saved	Not saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:MENU[:STATe] OFF   ON   0   1</code> This emulates ESA full screen functionality, which is the same as the FSCReen command in PSA except that the sense of on/off is reversed (that is, OFF means the menus are OFF, so Fullscreen is ON) and the default is ON (meaning Fullscreen is OFF)
Backwards Compatibility Notes	In ESA/PSA, Full Screen was turned on with a softkey, so pressing any other key turned Full Screen off. In the X-Series, because a hardkey is provided to turn this function on and off, pressing any other key no longer turns off Full Screen

### 3 LTE & LTE-A TDD Mode

The LTE Advanced TDD Mode is targeted for testing the transmitter of both the Base Station and User Equipment according to the following 3GPP standards.

LTE-Advanced standards	Version	Date
36.101 (UE Radio Tx/Rx)	11.7.0	12/2013
36.104 (BS Radio Tx/Rx)	12.6.0	12/2014
36.141 (BS Conformance)	12.6.0	12/2014
36.521-1 (UE Conformance)	11.3.0	12/2013

The mode supports the following measurements:

- Channel Power
- Occupied BW
- ACP
- SEM
- Spurious Emissions
- Transmit On|Off Power
- Modulation Analysis
- Conformance EVM
- Power Stat CCDF
- Monitor Spectrum
- IQ Waveform

The display mode and supported command set depend on the installed licenses, as follows.

- N9082EM0E LTE and LTE-Advanced TDD measurement application

---

Example            `:INSTRument[:SElect] LTEATDD`  
                       `:INSTRument:NSElect 108`

---

Status Bits/OPC dependencies    Changing Modes resets all SCPI status registers and mask registers to their power-on defaults. Therefore, event or condition register masks must be re-established after a Mode change

## 3.1 Measurement Commands

The commands for selecting each measurement are shown below. The commands relating to the Views and Windows for each measurement are described in the documentation for each measurement.

Example	Channel Power measurement: <a href="#">:CONFigure:CHPower</a> Occupied Bandwidth measurement <a href="#">:CONFigure:OBWidth</a> Adjacent Channel Power measurement <a href="#">:CONFigure:ACPower</a> Spectrum Emissions Mask measurement <a href="#">:CONFigure:SEMask</a> Spurious Emissions measurement <a href="#">:CONFigure:SPURious</a> Transmit On Off measurement <a href="#">:CONFigure:PVTime</a> Modulation Analysis measurement <a href="#">:CONFigure:EVM</a> Conformance EVM measurement <a href="#">:CONFigure:CEVM</a> Power Stat CCDF measurement <a href="#">:CONFigure:PStatistic</a> Monitor Spectrum measurement <a href="#">:CONFigure:MONitor</a> IQ Waveform measurement <a href="#">:CONFigure:WAVEform</a>
Preset	MONitor
State Saved	Instrument State

## 3.2 Channel Power Measurement

This measurement is used to find the total power present in a specified bandwidth. Power Spectral Density (signal power normalized to 1 Hz) is also reported.

When in WLAN Mode, or when WLAN radio standard is selected in SA Mode, the peak Power Spectral Density for 1 MHz is reported.

### Measurement Commands

The general functionality of "CONFigure" on page 2997, "INITiate" on page 2998, "FETCh" on page 2998, "MEASure" on page 3000, and "READ" on page 2999 are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

Note that, in general, `:CONF: <Measurement>` resets the specified measurement settings to their defaults. X-Series permits the addition of the `NDEFault` node to the command, which prevents a measurement preset after a measurement switch.

The tables below list setup commands for this measurement and queries to retrieve results.

Command	Function
<code>:INITiate:CHPower</code>	Initiates a trigger cycle for the <b>CHP</b> measurement, but does not return any data. You must then use <code>:FETC:CHP[n]?</code> to retrieve data Does not change any measurement settings
<code>:CONFigure?</code>	Returns the long form name of current measurement, in this case, <b>CHPower</b>
<code>:CONFigure:CHPower</code>	Selects <b>CHP</b> measurement with <b>Meas Setup</b> settings in preset state – same as "Meas Preset" on page 286
<code>:CONFigure:CHPower:NDEFault</code>	Selects <b>CHP</b> measurement <i>without</i> affecting settings

The following queries are used to retrieve data. The type of data returned depends on the value of `n`.

Query	Function
<code>:FETCh:CHPower[n]?</code>	Retrieves the data defined by <code>n</code>
<code>:MEASure:CHPower[n]?</code>	Switches to <b>CHP</b> measurement, restores default values, starts the measurement, then retrieves the data defined by <code>n</code>
<code>:READ:CHPower[n]?</code>	Starts the measurement, then retrieves the data defined by <code>n</code>

### Backwards Compatibility Queries

Query	Return Value
:FETCh:CHPower:CHPower?	Returns the Channel Power (dBm)
:MEASure:CHPower:CHPower?	
:READ:CHPower:CHPower?	
:FETCh:CHPower:DENSity?	Returns the Power Spectral Density (dBm/Hz)
:MEASure:CHPower:DENSity?	
:READ:CHPower:DENSity?	

The results returned by the queries depend on the currently-selected Mode and the value of *n* (where required). The sections below provide mode-specific details for each Mode.

### SA Mode Measurement Results

n	Results Returned						
1 or not specified	Returns scalar results: <table border="1" data-bbox="354 972 1318 1142"> <tr> <td>1</td> <td>Channel Power</td> <td>A floating-point number representing the total channel power in the specified integration bandwidth</td> </tr> <tr> <td>2</td> <td>PSD (Power Spectral Density)</td> <td>The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz</td> </tr> </table>	1	Channel Power	A floating-point number representing the total channel power in the specified integration bandwidth	2	PSD (Power Spectral Density)	The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz
1	Channel Power	A floating-point number representing the total channel power in the specified integration bandwidth					
2	PSD (Power Spectral Density)	The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz					
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 269						
3	n/a						
4	n/a						
5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by <b>Span</b>						
6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by <b>Span</b>						
7	Returns Marker Table data as a series of comma separated values in the following form: <Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved> Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table						

### MSR Mode Measurement Results

n	Results Returned
1 or not specified	Returns scalar results:

**n Results Returned**

- 1 Channel Power A floating-point number representing the total channel power in the specified integration bandwidth
- 2 PSD (Power Spectral Density) The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz
- 2 Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 269
- 3 Returns [Carriers] comma-separated scalar results, in the following order

#	Item	Unit
1	Total Power of Carrier 1	dBm
2	Total Power of Carrier 2	dBm
...	...	
[Carriers]	Total Power of Carrier [Carriers]	dBm

If the result is not available, NaN (9.91E+37) is returned. Number of returned values might be changed in future releases

- 4 Returns comma-separated scalar results, in the following order

#	Item	Unit
1	Total Power of LTE FDD carriers	dBm
2	Total Power of W-CDMA carriers	dBm
3	Total Power of GSM/EDGE carriers	dBm
4	Total Power of cdma2000 carriers	dBm
5	Total Power of 1xEV-DO carriers	dBm
6	...	

The number of results is incremented by one when a new format is supported

If the result is not available, NaN (9.91E+37) is returned. Number of returned values will be changed in future releases if the number of supported radio format is increased

- 5 Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by the Span control
- 6 Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by the Span control
- 7 Returns Marker Table data as a series of comma separated values in the following form:  
<Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved>  
Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table

### LTE-Advanced FDD/TDD Mode Measurement Results

n	Results Returned																		
1 or not specified	Returns scalar results: <table border="1"> <tr> <td>1</td> <td>Channel Power</td> <td>A floating-point number representing the total channel power in the specified integration bandwidth</td> </tr> <tr> <td>2</td> <td>PSD (Power Spectral Density)</td> <td>The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz</td> </tr> </table>	1	Channel Power	A floating-point number representing the total channel power in the specified integration bandwidth	2	PSD (Power Spectral Density)	The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz												
1	Channel Power	A floating-point number representing the total channel power in the specified integration bandwidth																	
2	PSD (Power Spectral Density)	The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz																	
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 269																		
3	Returns comma-separated scalar results, in the following order <table border="1"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Total Power of Component Carrier 0</td> <td>dBm</td> </tr> <tr> <td>2</td> <td>Total Power of Component Carrier 1</td> <td>dBm</td> </tr> <tr> <td>3</td> <td>Total Power of Component Carrier 2</td> <td>dBm</td> </tr> <tr> <td>4</td> <td>Total Power of Component Carrier 3</td> <td>dBm</td> </tr> <tr> <td>5</td> <td>Total Power of Component Carrier 4</td> <td>dBm</td> </tr> </tbody> </table> <p>If the result is not available, NaN (9.91E+37) is returned</p>	#	Item	Unit	1	Total Power of Component Carrier 0	dBm	2	Total Power of Component Carrier 1	dBm	3	Total Power of Component Carrier 2	dBm	4	Total Power of Component Carrier 3	dBm	5	Total Power of Component Carrier 4	dBm
#	Item	Unit																	
1	Total Power of Component Carrier 0	dBm																	
2	Total Power of Component Carrier 1	dBm																	
3	Total Power of Component Carrier 2	dBm																	
4	Total Power of Component Carrier 3	dBm																	
5	Total Power of Component Carrier 4	dBm																	
4	Returns comma-separated scalar results, in the following order. The unit bandwidth is selected by "PSD Unit" on page 282, either dBm/Hz or dBm/MHz <table border="1"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Total Power Spectral Density of Component Carrier 0</td> <td>PSD Unit</td> </tr> <tr> <td>2</td> <td>Total Power Spectral Density of Component Carrier 1</td> <td>PSD Unit</td> </tr> <tr> <td>3</td> <td>Total Power Spectral Density of Component Carrier 2</td> <td>PSD Unit</td> </tr> <tr> <td>4</td> <td>Total Power Spectral Density of Component Carrier 3</td> <td>PSD Unit</td> </tr> <tr> <td>5</td> <td>Total Power Spectral Density of Component Carrier 4</td> <td>PSD Unit</td> </tr> </tbody> </table> <p>If the result is not available, NaN (9.91E+37) is returned</p>	#	Item	Unit	1	Total Power Spectral Density of Component Carrier 0	PSD Unit	2	Total Power Spectral Density of Component Carrier 1	PSD Unit	3	Total Power Spectral Density of Component Carrier 2	PSD Unit	4	Total Power Spectral Density of Component Carrier 3	PSD Unit	5	Total Power Spectral Density of Component Carrier 4	PSD Unit
#	Item	Unit																	
1	Total Power Spectral Density of Component Carrier 0	PSD Unit																	
2	Total Power Spectral Density of Component Carrier 1	PSD Unit																	
3	Total Power Spectral Density of Component Carrier 2	PSD Unit																	
4	Total Power Spectral Density of Component Carrier 3	PSD Unit																	
5	Total Power Spectral Density of Component Carrier 4	PSD Unit																	
5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by Span																		
6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by Span																		
7	Returns Marker Table data as a series of comma separated values in the following form: <Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved> Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table																		

## 5G NR Mode Measurement Results

n	Results Returned																		
1 or not specified	Returns scalar results: <table border="1"> <tr> <td>1</td> <td>Channel Power</td> <td>A floating-point number representing the total channel power in the specified integration bandwidth</td> </tr> <tr> <td>2</td> <td>PSD (Power Spectral Density)</td> <td>The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz</td> </tr> </table>	1	Channel Power	A floating-point number representing the total channel power in the specified integration bandwidth	2	PSD (Power Spectral Density)	The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz												
1	Channel Power	A floating-point number representing the total channel power in the specified integration bandwidth																	
2	PSD (Power Spectral Density)	The power in the specified unit bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282; either dBm/Hz or dBm/MHz																	
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 269																		
3	Returns comma-separated scalar results, in the following order <table border="1"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Total Power of Component Carrier 0</td> <td>dBm</td> </tr> <tr> <td>2</td> <td>Total Power of Component Carrier 1</td> <td>dBm</td> </tr> <tr> <td>3</td> <td>Total Power of Component Carrier 2</td> <td>dBm</td> </tr> <tr> <td>...</td> <td>...</td> <td></td> </tr> <tr> <td>16</td> <td>Total Power of Component Carrier 15</td> <td>dBm</td> </tr> </tbody> </table> <p>If the result is not available, NaN (9.91E+37) is returned</p>	#	Item	Unit	1	Total Power of Component Carrier 0	dBm	2	Total Power of Component Carrier 1	dBm	3	Total Power of Component Carrier 2	dBm	...	...		16	Total Power of Component Carrier 15	dBm
#	Item	Unit																	
1	Total Power of Component Carrier 0	dBm																	
2	Total Power of Component Carrier 1	dBm																	
3	Total Power of Component Carrier 2	dBm																	
...	...																		
16	Total Power of Component Carrier 15	dBm																	
4	Returns comma-separated scalar results, in the following order. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz <table border="1"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Total Power of Component Carrier 0</td> <td>PSD Unit</td> </tr> <tr> <td>2</td> <td>Total Power of Component Carrier 1</td> <td>PSD Unit</td> </tr> <tr> <td>3</td> <td>Total Power of Component Carrier 2</td> <td>PSD Unit</td> </tr> <tr> <td>...</td> <td>...</td> <td></td> </tr> <tr> <td>16</td> <td>Total Power of Component Carrier 15</td> <td>PSD Unit</td> </tr> </tbody> </table> <p>If the result is not available, NaN (9.91E+37) is returned</p>	#	Item	Unit	1	Total Power of Component Carrier 0	PSD Unit	2	Total Power of Component Carrier 1	PSD Unit	3	Total Power of Component Carrier 2	PSD Unit	...	...		16	Total Power of Component Carrier 15	PSD Unit
#	Item	Unit																	
1	Total Power of Component Carrier 0	PSD Unit																	
2	Total Power of Component Carrier 1	PSD Unit																	
3	Total Power of Component Carrier 2	PSD Unit																	
...	...																		
16	Total Power of Component Carrier 15	PSD Unit																	
5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by "Span" on page 269																		
6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by Span																		
7	Returns Marker Table data as a series of comma separated values in the following form: <Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved> Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table																		

## WLAN Channel Power Measurement Results

n	Results Returned
1 or not specified	<p>Returns scalar results:</p> <p>When the radio standard is <i>not</i> 802.11ac 80 + 80 MHz or 802.11ax 80 + 80 MHz:</p> <p><b>Channel Power</b>            A floating-point number representing the total channel power in the specified integration bandwidth</p> <p><b>Peak PSD (Power Spectral Density)</b>            The peak PSD over the integration bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282 in either dBm/Hz or dBm/MHz</p> <p><b>Mean PSD (Power Spectral Density)</b>            The mean PSD over the integration bandwidth. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p> <p>When the radio standard is 802.11ac 80 + 80 MHz or 802.11ax 80 + 80 MHz:</p> <p><b>Channel Power</b> of the carrier of which the center frequency is indicated by Freq Segment 1            A floating-point number representing the total channel power of the first segment in the specified integration bandwidth</p> <p><b>Peak PSD (Power Spectral Density)</b> of the carrier of which the center frequency is indicated by Freq Segment 1            The power in the specified unit bandwidth of the first segment. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p> <p><b>Channel Power</b> of the carrier of which the center frequency is indicated by Freq Segment 2            A floating-point number representing the total channel power of the second segment in the specified integration bandwidth</p> <p><b>Peak PSD (Power Spectral Density)</b> of the carrier of which the center frequency is indicated by Freq Segment 2            The power in the specified unit bandwidth of the second segment. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p> <p><b>Mean PSD (Power Spectral Density)</b> of the carrier of which the center frequency is indicated by Freq Segment 1            The power in the specified unit bandwidth of the first segment. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p> <p><b>Mean PSD (Power Spectral Density)</b> of the carrier of which the center frequency is indicated by Freq Segment 2            The power in the specified unit bandwidth of the second segment. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz</p>
2	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 1. The frequency span of the captured trace data is specified by "Span" on page 269
3	n/a
4	n/a

n	Results Returned
5	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 2. The frequency span of the captured trace data is specified by <b>Span</b>
6	Returns floating point numbers that are the captured trace data of the power (in dBm/resolution BW) of the signal for Trace 3. The frequency span of the captured trace data is specified by <b>Span</b>
7	Returns Marker Table data as a series of comma separated values in the following form: <Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved> Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table

Additionally, WLAN Mode supports an **n** parameter for the following queries:

```
:FETCh:CHPower:DENSity[n]?
:MEASure:CHPower:DENSity[n]?
:READ:CHPower:DENSity[n]?
```

For these queries *in WLAN Mode only*, the results returned depend on the value of **n** as follows:

n	Radio Standard	Results Returned
1 or not specified	Not 802.11ac 80 +80 MHz or 802.11ax80 +80 MHz	<b>Peak PSD (Power Spectral Density)</b> The Peak PSD over the integration bandwidth. The unit bandwidth is selected by "PSD Unit" on page 282 in either dBm/Hz or dBm/MHz
	802.11ac 80 +80 MHz or 802.11ax80 +80 MHz	The first value is the peak PSD for segment 1, the second value is the peak PSD for segment 2
2	Not 802.11ac 80 +80 MHz or 802.11ax80 +80 MHz	<b>Mean PSD (Power Spectral Density)</b> The Mean PSD over the integration bandwidth. The unit bandwidth is selected by PSD Unit in either dBm/Hz or dBm/MHz
	802.11ac 80 +80 MHz or 802.11ax80 +80 MHz	The first value is the mean PSD for segment 1, the second value is the mean PSD for segment 2

### 3.2.1 Views

In SA, WCDMA, WLAN, SRCOMMS, and VMA Modes, there is only one predefined view, the "Normal" on page 207 view.

In MSR, LTEAFDD, LTEATDD, and 5GNR Modes, this measurement has two predefined views:

View	SCPI	View Number
"Normal" on page 207	PRESult	1
"Carrier Info" on page 207	CINFormation	2

### View selection by name

Selects the results view by specifying the View name.

Remote Command	<code>:DISPlay:CHPower:VIEW[:SElect] PRESult   CINformation</code> <code>:DISPlay:CHPower:VIEW[:SElect]?</code>
Example	<code>:DISP:CHP:VIEW PRES</code> <code>:DISP:CHP:VIEW?</code>
Preset	<code>PRESult</code>
State Saved	Saved in instrument state
Range	Power Results   Carrier Info

### View selection by number

Selects the results view by specifying the View number.

Remote Command	<code>:DISPlay:CHPower:VIEW:NSElect &lt;integer&gt;</code> <code>:DISPlay:CHPower:VIEW:NSElect?</code>
Example	<code>:DISP:CHP:VIEW:NSEL 1</code> <code>:DISP:CHP:VIEW:NSEL?</code>
Preset	1
State Saved	Saved in instrument state
Min/Max	1 / 2

#### 3.2.1.1 Normal

Windows: "Graph" on page 208, "Metrics" on page 209

Dual window view: Channel Power graph and Channel Power metrics.

Example	<code>:DISP:CHP:VIEW PRES</code>
---------	----------------------------------

#### 3.2.1.2 Carrier Info

Windows: "Graph" on page 208, "Metrics" on page 209

Dual window view: Channel Power graph and Carrier Info table.

Example	<code>:DISP:CHP:VIEW CINF</code>
Dependencies	Only available in MSR, LTE-A FDD/TDD and 5G NR Modes

### 3.2.2 Windows

This section describes the windows that are available in the Channel Power measurement:

Window	Number
"Graph" on page 208	1
"Metrics" on page 209	2
"Gate" on page 212	3
"Marker Table" on page 213	4

#### 3.2.2.1 Graph


Window #1

Used to display the spectrum trace and power bars.

The results of the measurement can be displayed as a single spectrum trace view or displayed with a Bar Graph trace on the spectrum trace. The Bar Graph appears between the markers that indicate the measured output power level. The bar graph is activated when the "Bar Graph" control is set to ON under the Display menu. The Graph window appears in the following views.

View	Size	Position
Normal	Two thirds, full width	Top
Gate View	One third, full width	Middle


Spectrum View with Bar Graph Off

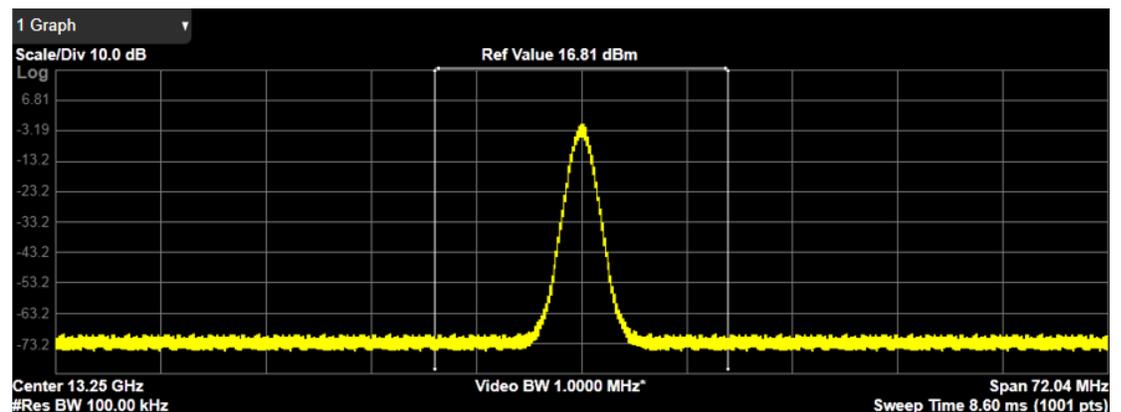

Spectrum View with Bar Graph On

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

This is the same as the **Spectrum** view, but has a blue bar between the markers that indicates the measured output power level. The bar graph is activated when the “Bar Graph” control is set to **ON** under the **Display** hardkey. The actual measured output power level is displayed on the display at the top of the bar.

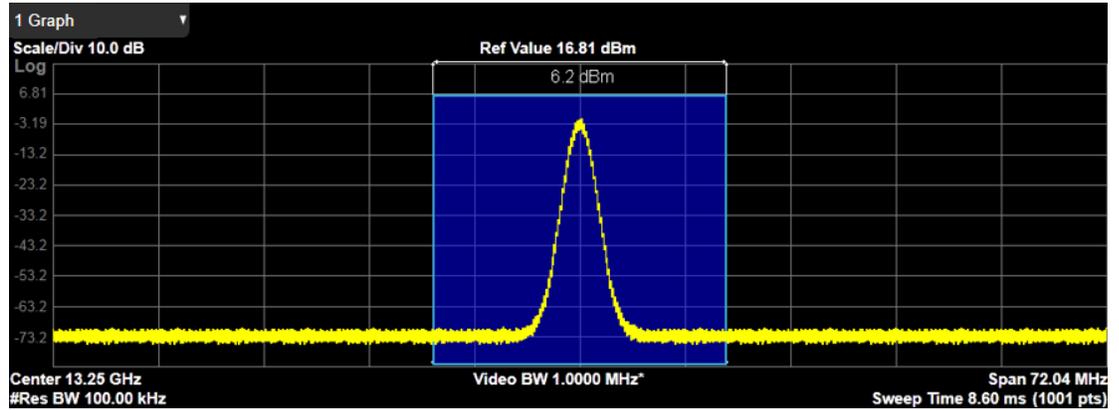

If the current Mode is WLAN and the format is WLAN 802.11ac 80+80 MHz, Spectrum View is slightly different so that the results of both carrier segments can be displayed.


### 3.2.2.2 Metrics

Window #2

The actual measured output power level is displayed in the Metrics window

The **Metrics** window appears in the following Views.

View	Size	Position
Normal	One third, full width	Bottom
Gate View	One third, full width	Bottom

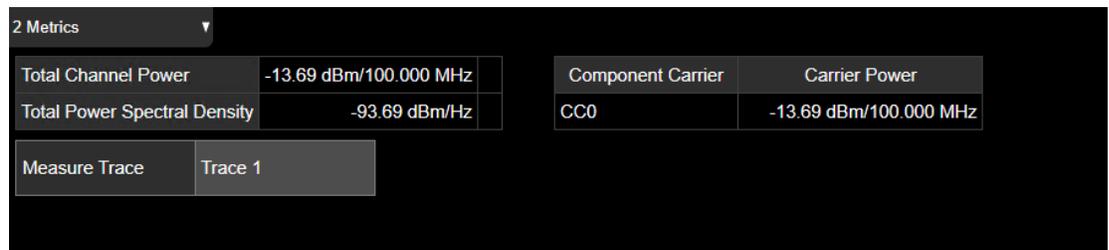

Measure Trace

See: "[Measure Trace](#)" on page 1155.

## Power Results

Total carrier power, total PSD and total format carrier power are displayed in the lower window. Total format carrier power is total power of carriers of the same Radio Format. If there is no carrier of the corresponding format, it is not displayed. Thus, items in the total format power table changes depending on the carrier configuration. Since the metrics window of MSR, LTE-Advanced FDD/TDD and 5G NR is slightly denser than that for common CHP, the vertical positions of total power and power spectral density are raised.

## Carrier Info: LTE-Advanced FDD/TDD and 5G NR Modes

The following diagram shows the Metrics Window in the Carrier Info view for LTE-Advanced FDD/TDD and 5G NR. The Power Results window is replaced by the carrier info table.

2 Carrier Info	
Total Car Pwr	-6.70 dBm/500.000 MHz
Total PSD	-93.69 dBm/Hz
RF-BW	99.970 MHz

	Carrier Power	Carrier PSD	Integ BW	Filter	Offset Freq	Measure
CC0	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On
CC1	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On
CC2	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On
CC3	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On
CC4	-13.69 dBm	-93.69 dBm/Hz	100.000 MHz	OFF	0.0 Hz	On

The text window displays the following results:

### Total Carrier Power

This is the total power of all the carriers with carrier measure state setting to On. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is  $(1 + \alpha)/T$  where  $T = 1/(\text{Carrier Integ Bw})$  multiplied by the number of carriers with carrier measure state setting to yes.

### RF-BW

Displays the total bandwidth from the lowest carrier to the highest carrier, whether their measurement states are on or off.

### Carrier Power

This is the power in all the currently defined carriers. If the carrier is with measurement state being on, the power will be absolute. If the carrier is defined as

### 3 LTE & LTE-A TDD Mode

#### 3.2 Channel Power Measurement

not having power present, the power will be shown up as dash. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for the carrier unless the RRC Filter is on, then the integration.

##### Integration Bandwidth

Displays the channel bandwidth of each carrier.

##### Filter

Displays whether RRC filter is used or not.

##### Offset Frequency

Shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

##### Sub-block (LTE-Advanced FDD/TDD Modes only)

For intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for transmission and reception in the intra-band non-contiguous aggregation mode. We support two sub-blocks. It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column is displayed when the carrier allocation mode is non-contiguous.

##### Measure

Shows whether the carrier power presents or not.

The highlighted row changes as either Carrier Result or Select Carrier is changed. The highlighted row and these keys are not coupled.

### Carrier Info: MSR Mode

The text window displays the following results:

##### Total Carrier Power

This is the total power of all the carriers with carrier measure state setting to On. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is  $(1 + \alpha)/T$  where  $T = 1/(\text{Carrier Integ Bw})$  multiplied by the number of carriers with carrier measure state setting to yes.

##### RF-BW

Displays the total bandwidth from the lowest carrier to the highest carrier, whether their measurement states are on or off.

#### Carrier Power

This is the power in all the currently defined carriers. If the carrier is with measurement state being on, the power will be absolute. If the carrier is defined as not having power present, the power will be shown up as dash. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for the carrier unless the RRC Filter is on, then the integration.

#### Integration Bandwidth

Displays the channel bandwidth of each carrier.

#### Filter

Displays whether RRC filter is used or not.

#### Offset Frequency

Shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

#### Sub-block

For intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for transmission and reception in the intra-band non-contiguous aggregation mode. We support two sub-blocks. It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column is displayed when the carrier allocation mode is non-contiguous.

#### Measure

Shows whether the carrier power presents or not.

The highlighted row changes according to whether Carrier Result or Select Carrier is changed. The highlighted row and these keys are not coupled.

#### Parameter Set

Displays which format parameter set is selected.

### 3.2.2.3 Gate

#### Window #3

Turning on **Gate View** displays the **Gate Window**, which allows you to see your gating signal at the same time as the measured data. See the description under "[Gate View On/Off](#)" on page 2915 in **Trigger, Gate Settings**.

View	Size	Position
Gate View	One third, full width	Top

### 3.2.2.4 Marker Table

Window #4

Displays a table containing detailed information about all the markers in the current measurement. It can be selected from the Data control on the Window Title. There is no specific view in which the **Marker Table** window turns on, it is on by demand.

## 3.2.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

### 3.2.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

### Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of "[Ref Position](#)" on page 215.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALe]:RLEVel &lt;real&gt;</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RLEV 10 dBm</code> <code>:DISP:CHP:WIND:TRAC:Y:RLEV?</code>
Couplings	When " <a href="#">Auto Scaling</a> " on page 215 is <b>ON</b> (default), this value is automatically determined by the measurement result. When you set a value manually, <b>Auto Scaling</b> changes to <b>OFF</b> Attenuation is not coupled to <b>Ref Value</b>

Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-/+250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel</code>

## Scale/Div

Sets the height of one division of the graticule in the current Y-Axis unit.

**Scale/Div** also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule divisions on the display, the total amplitude range of the graph is typically 10x this amount. For example, if **Scale/Div** is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:PDIVision &lt;rel_amp1&gt;</code> <code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:PDIVision?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:PDIV 5</code> <code>:DISP:CHP:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to "Scale Range" on page 1002 as follows: <b>Scale/Div = Scale Range/10</b> (number of divisions) When "Auto Scaling" on page 215 is <b>ON</b> , this value is automatically determined by the measurement result When you change a value, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIVision</code>

## Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALE]:RANGe &lt;rel_amp1&gt;</code>
----------------	---

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

	<code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALE]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to <b>Scale/Div</b> as follows <b>Scale Range = Scale/Div * 10</b> (number of divisions) When you change this value, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

### Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:RPOSition TOP   CENTer   BOTTom</code> <code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:RPOSition?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:CHP:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP   CENTer   BOTTom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position
Backwards Compatibility SCPI	<code>:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSition</code>

### Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:COUPle 0   1   OFF   ON</code> <code>:DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALE]:COUPle?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:CHP:WIND:TRAC:Y:COUP?</code>
Couplings	When <b>Auto Scaling</b> is <b>ON</b> , and the <b>Restart</b> front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results

---

	When you change the value of <b>Scale/Div</b> , <b>Ref Value</b> , or <b>Scale Range</b> , <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	1
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>
Backwards Compatibility SCPI	<b>:DISPlay:CHPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUPle</b>

---

### 3.2.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 216](#)
- See ["Single-Attenuator Configuration" on page 217](#)

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


---

Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the <b>Range</b> tab in that case
--------------	--


#### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

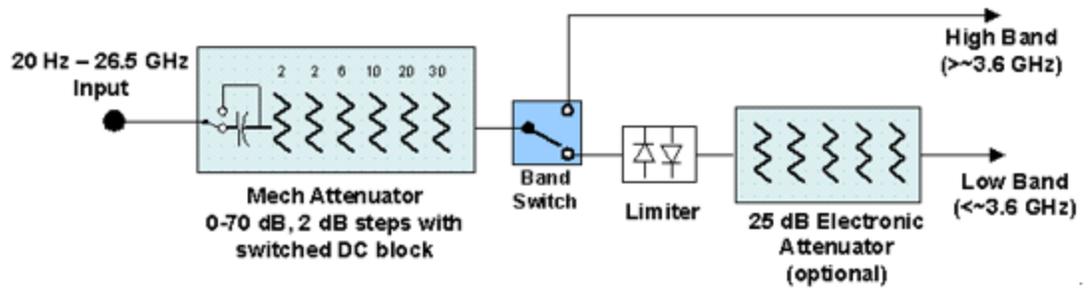


Configuration 2: Mechanical attenuator, no optional electronic attenuator

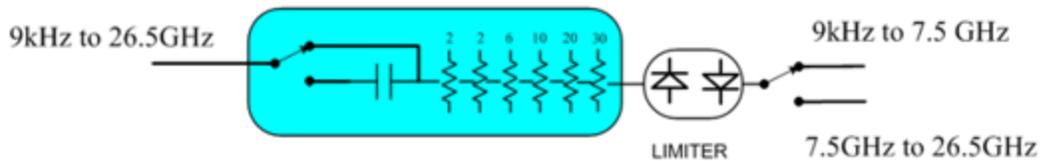

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


**Single-Attenuator Configuration**

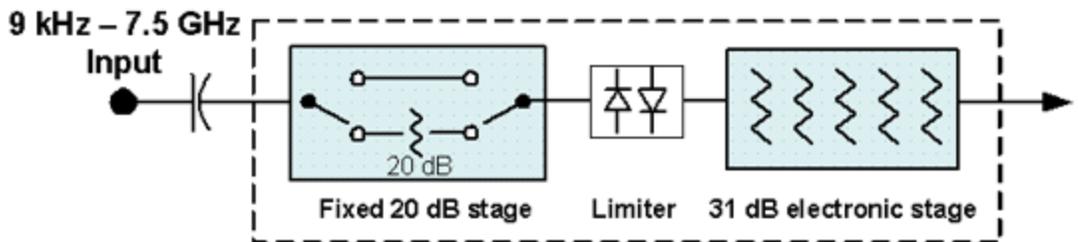

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



**Dual Attenuator**

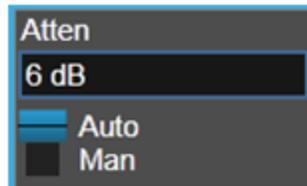

**Single Attenuator**

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

## Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and " <b>Mech Atten</b> " on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	When the <b>Input</b> is <b>RF</b> , and the <b>Input Port</b> is <b>RF Input 2</b> , and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows: <ul style="list-style-type: none"> <li>- If the sweep is entirely &lt; 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten</li> <li>- If the sweep is entirely &gt; 50 GHz, the value shown after "Atten:" is equal to Full Range Atten</li> <li>- If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol "&gt;=" and is equal to Full Range Atten</li> </ul>

---

In the **Amplitude**, "**Y Scale**" on page 2153 menu, and the **Atten Meas Bar** dropdown menu panel, a summary is displayed as follows:

"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten

"Total Atten above 50 GHz" followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "**Internal Preamp**" on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "**Attenuator Configurations and Auto/Man**" on page 221

---

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation &lt;rel_aml&gt;</code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code>  Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation)  In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available  In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of <b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " <b>Elec Atten</b> " on page 2164  See " <b>Attenuator Configurations and Auto/Man</b> " on page 221 for more information on the <b>Auto/Man</b> functionality
Couplings	If the RF Input Port is the RF Input:  - If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b>  - Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b> , <b>Int Preamp</b> ,

---

**External Gain, Ref Level Offset, Max Mixer Level,  $\mu$ W Path Control and IF Gain** settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)

- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "**Full Range Atten**" on page 2160 from the result to determine the **Mech Atten**. Limit the value so that it is never lower than 0 dB and so that total attenuation, including **Full Range Atten**, is never less than 6 dB (total attenuation, including **Full Range Atten** below 6 dB, can never be chosen by Auto)

In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when **Mech Atten** is in **Auto**, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input

For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is  $\leq 7.5$  GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB

Preset	<b>Auto</b> The Auto value is 10 dB						
State Saved	Saved in instrument state						
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased						
Max	<table border="1"> <tr> <td>CXA Option 503 or 507</td> <td>50 dB</td> </tr> <tr> <td>EXA</td> <td>60 dB</td> </tr> <tr> <td>All other models</td> <td>70 dB</td> </tr> </table>	CXA Option 503 or 507	50 dB	EXA	60 dB	All other models	70 dB
CXA Option 503 or 507	50 dB						
EXA	60 dB						
All other models	70 dB						

Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the "soft" attenuation is at 14 dB (see below for definition of "soft" attenuation)</p>
------------	--

---

When in Manual, a # sign appears in front of Atten in the annotation

Auto Function

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn <b>Auto Mech Atten</b> ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	ON

---

### Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 219 (or `:POW:ATT`) as the "main" attenuation; and the attenuation that is set by `:POW:EATT` as the "soft" attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about "soft" attenuation.

NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

---



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 224](#)

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the <b>Attenuation</b> control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is &gt; 3.6 GHz, then the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If <a href="#">"Internal Preamp" on page 2183</a> is <b>ON</b> (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the</p>

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamp** is unavailable

If "LNA" on page 2185 is **ON**, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <a href="#">Mechanical Attenuator Transition Rules</a> " on page 224
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description

Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	<b>OFF</b> (Disabled) for Swept SA measurement <b>ON</b> (Enabled) for all other measurements that support the electronic attenuator

**NOTE**

The maximum **Center Frequency** for Low Band can change based on the selected **IFBW** for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of

3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

---

### More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 225](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled

### 3 LTE & LTE-A TDD Mode

#### 3.2 Channel Power Measurement

- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

#### **Using the Electronic Attenuator: Pros and Cons**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

## Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "[Pre-Adjust for Min Clipping](#)" on page 2168.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

## Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 228

Selection	SCPI	Note
Off	<b>OFF</b>	This is the default setting
On	<b>ON</b>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <b>COMBined</b>
Elec Atten Only	<b>ELECtrical</b>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<b>COMBined</b>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECtrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>
Notes	The parameter option <b>ELECtrical</b> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <b>COMBined</b> is mapped to <b>ELECtrical</b> in Single-Attenuator models. If you send <b>COMBined</b> , it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBined</b>
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " <a href="#">Elec Atten</a> " on page 2164 is <b>OFF</b> or grayed-out, " <a href="#">Pre-Adjust for Min Clipping</a> " on page 226 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>
State Saved	Saved in instrument state
Range	Dual-Attenuator models: Off   Elec Atten Only   Mech + Elec Atten Single-Attenuator models: Off   On

### Backwards Compatibility Command

Notes	<b>ON</b> aliases to "Elec Atten Only" ( <code>:POW:RANG:OPT:ATT ELEC</code> ) <b>OFF</b> aliases to "Off" ( <code>:POW:RANG:OPT:ATT OFF</code> )
-------	--

---


	<code>:POW:RANG:AUTO?</code> returns true if <code>:POW:RANG:OPT:ATT</code> is not <code>OFF</code>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:RANGe:AUTO?</code>

---

## Adjustment Algorithm

The algorithms for the adjustment are documented below:


### Single-Attenuator Models

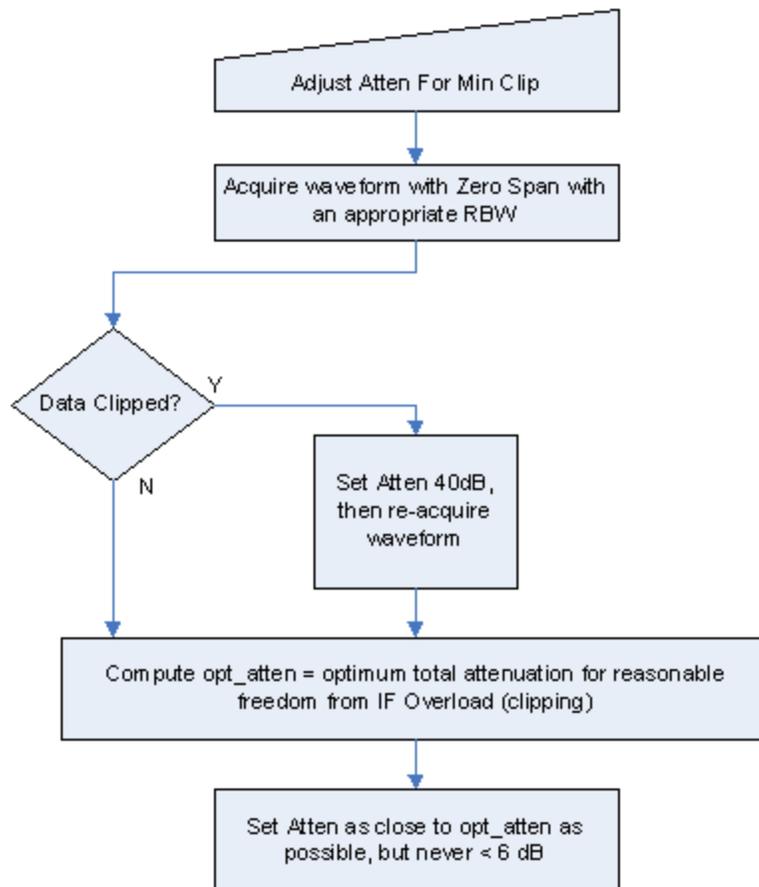

### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 226 selection is Mech + Elec Atten:


3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

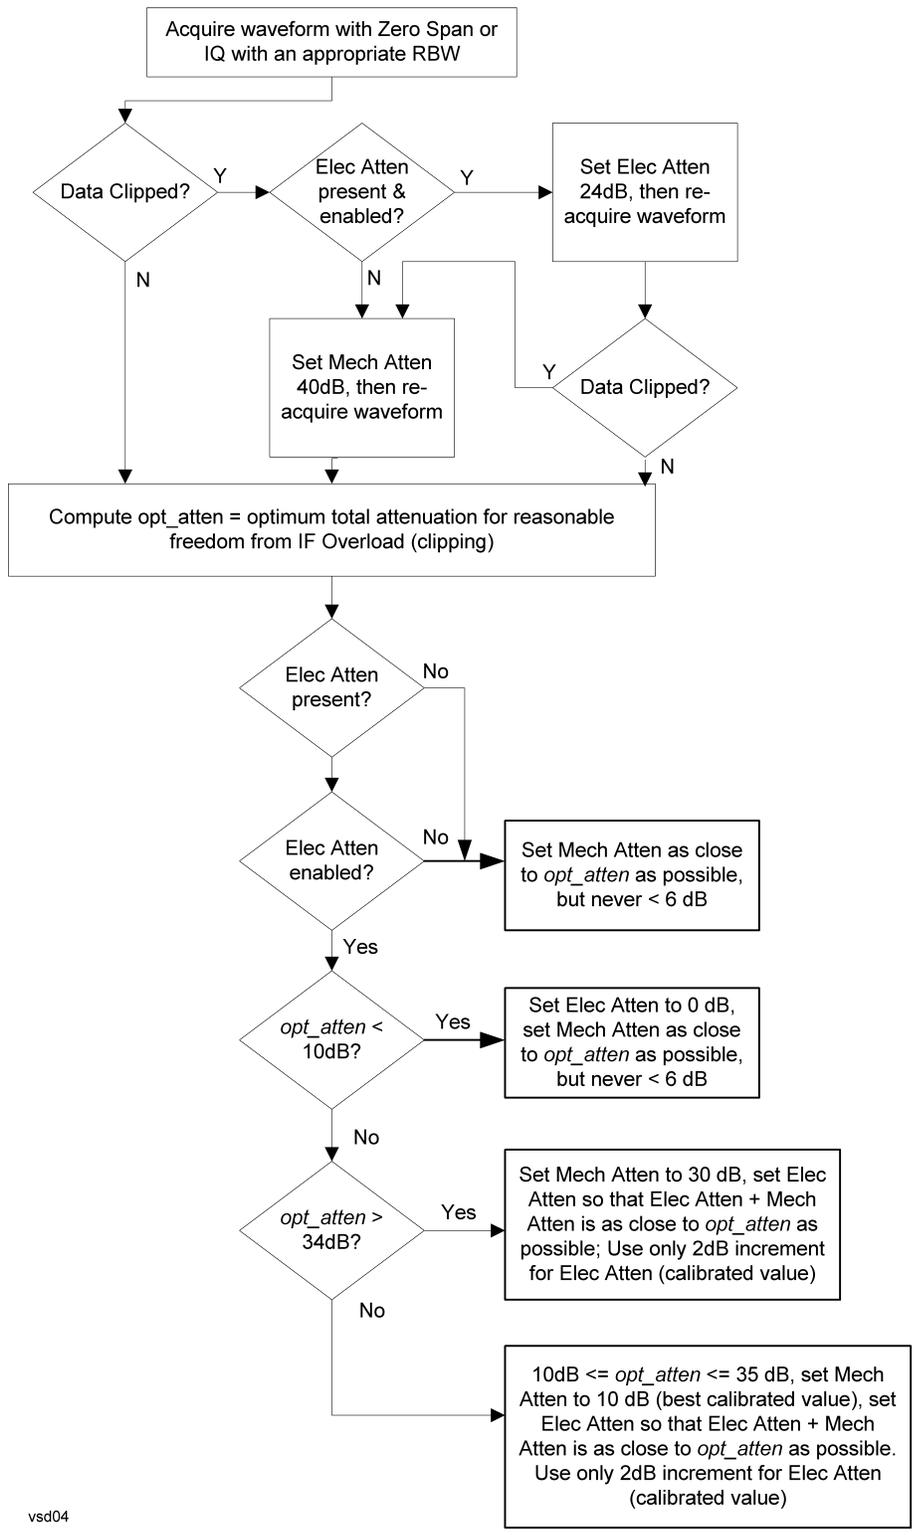

vsd04

"Pre-Adjust for Min Clipping" on page 226 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

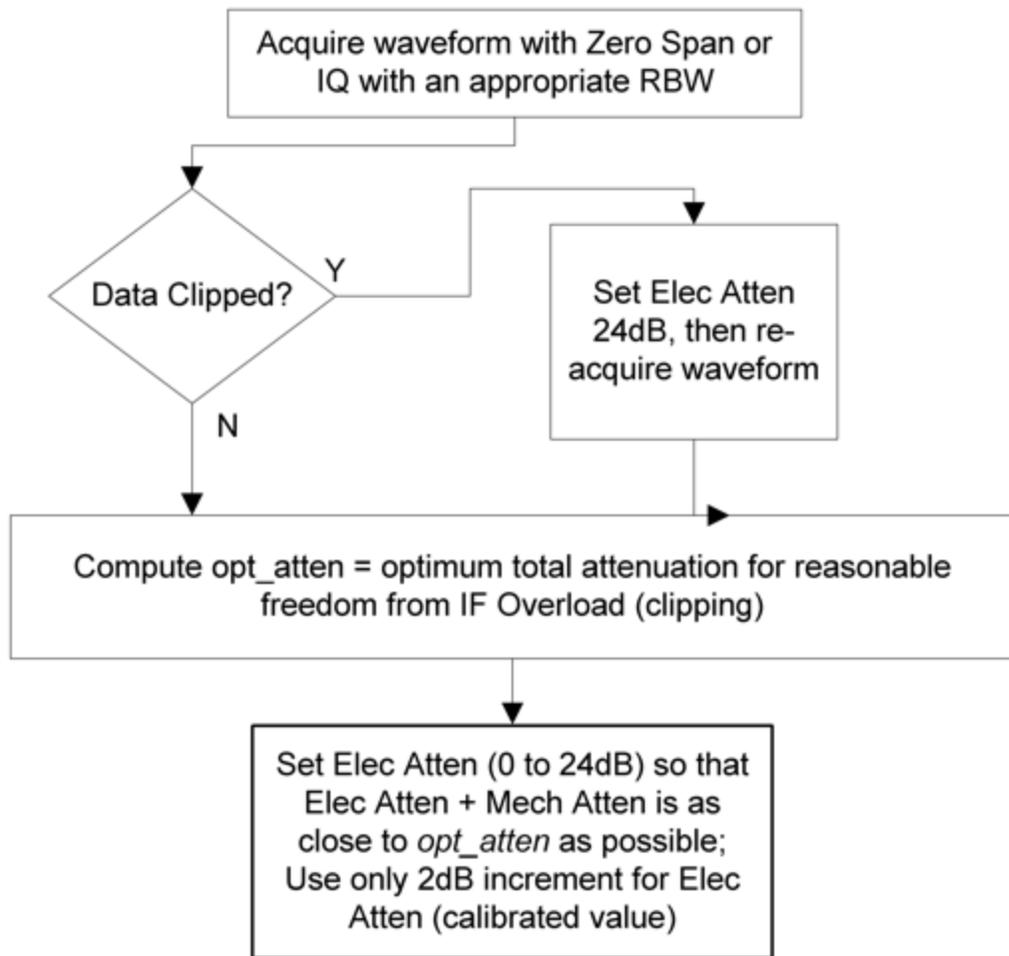

## Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.2.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

## Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

## Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

## Pre-Adjust for Min Clipping


If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

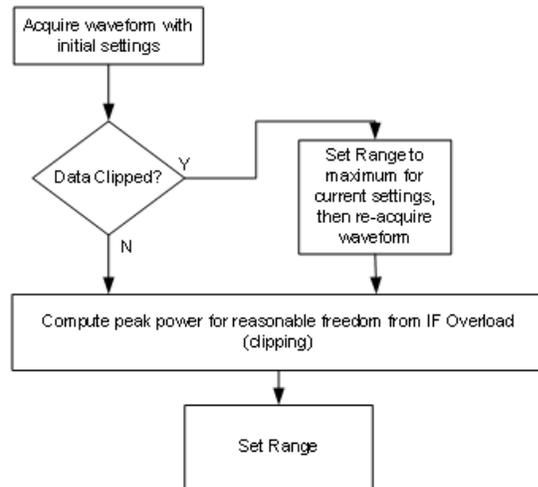

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.2.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because "[Software Preselection](#)" on page 2195 is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on "**Preselector Adjust**" on page 2182 changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in "**Proper Preselector Operation**" on page 235.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in " <b>Preselector Adjust</b> " on page 2182
Status Bits/OPC dependencies	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

### Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "**Presel Center**" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram</b> View</li> </ul>
Preset	0 MHz

State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] :POWer [ :RF ] :MW :PADJust</code> <code>[ :SENSe ] :POWer [ :RF ] :MMW :PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe ] :POWer [ :RF ] :PADJust :PRESelector MWAVE   MMWave   EXTERNAL</code> <code>[ :SENSe ] :POWer [ :RF ] :PADJust :PRESelector?</code>

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

**NOTE**

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<code>LOW</code>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)

Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<code>OFF</code>

## LNA

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to "Internal Preamp" on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with "Internal Preamp" on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "More Information" on page 239

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

## More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and Internal Preamp. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
µW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, **Internal Preamp** is switched off (even if you have its switch set to ON). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
µW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 244
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 246
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 247

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	When " <b>Presel Center</b> " on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b> The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b> . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled Alignment switching ignores the settings in this menu, and restores them when finished														
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul> <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are grayed-out if the current measurement does not support them</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>IQ Analyzer</td> <td>MPB option present and licensed: <b>MPB</b></td> </tr> <tr> <td>Pulse</td> <td>MPB option not present and licensed: <b>STD</b></td> </tr> <tr> <td>RTSA</td> <td></td> </tr> <tr> <td>Avionics</td> <td></td> </tr> <tr> <td>All other Modes</td> <td><b>STD</b></td> </tr> <tr> <td>-</td> <td></td> </tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: <b>MPB</b>	Pulse	MPB option not present and licensed: <b>STD</b>	RTSA		Avionics		All other Modes	<b>STD</b>	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: <b>MPB</b>														
Pulse	MPB option not present and licensed: <b>STD</b>														
RTSA															
Avionics															
All other Modes	<b>STD</b>														
-															
State Saved	Save in instrument state														
Range	Standard Path   Low Noise Path Enable   μW Presel Bypass   Full Bypass Enable														

Annotation In the Meas Bar, if the Standard path is chosen:  
 $\mu$ W Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 $\mu$ W Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 $\mu$ W Path: LNP,On  
 If the preselector is bypassed:  
 $\mu$ W Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 $\mu$ W Path: FByp,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 $\mu$ W Path: FByp,On

### $\mu$ W Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to  $\mu$ W Path Control:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	$\mu$ W Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

Measurement	$\mu$ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is presel bypass if presel bypass is enabled, auto $\mu$ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

Measurement	$\mu$ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	
Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 242 above
Preset	ON
Range	ON OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

### 3 LTE & LTE-A TDD Mode

#### 3.2 Channel Power Measurement

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

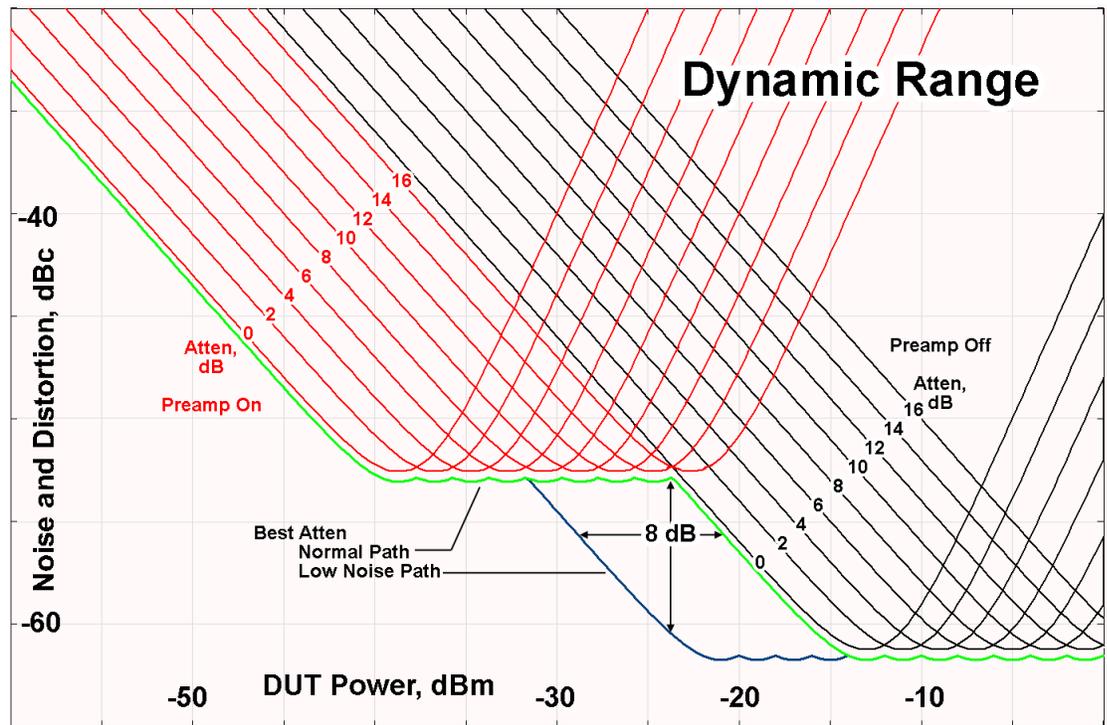

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **μW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

#### CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path ( <code>:POW:MW:PATH STD</code> ) The <b>OFF</b> parameter sets path <b>MPB</b> ( <code>:POW:MW:PATH MPB</code> )
Preset	<b>ON</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel:STATe 0   1   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel:STAT?</code>	
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state	
Preset	N9041B	<b>OFF</b>
	N9042B+V3050A	<b>ON</b>
	M9410A/11A	<b>ON</b>
State Saved	Saved in instrument state	

### SW Preselection Type

Specifies the algorithm used for software preselection.

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel NORMa1   ADVanced</code> <code>[ :SENSe]:POWer[:RF]:SWPResel?</code>	
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <a href="#">Software Preselection</a> " on page 2195 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	<b>ADVanced</b>
	N9042B+V3050A	<b>NORMa1</b>
State Saved	Saved in instrument state	

### SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from

wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPResel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <b>Prefilter Presets</b> " on page 253 below
State Saved	Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

## 3.2.4 BW

Opens the Bandwidth (**BW**) menu, which contains controls for the Resolution Bandwidth and Video Bandwidth functions of the instrument.

The Resolution BW functions control filter bandwidth and filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

### 3.2.4.1 Settings

Contains the basic bandwidth functions. In most measurements it is the only tab under Bandwidth.

## Res BW

Activates the resolution bandwidth active function, which allows you to manually set the resolution bandwidth (RBW) of the instrument.

Normally, **Res BW (Auto)** selects automatic coupling of **Res BW** to "**Span**" on page 269, using the ratio set by **Span:3 dB RBW** (some measurements do not have a Span:3 dB RBW control, in which case the measurement chooses the optimal ratio). To decouple the resolution bandwidth, press the **Auto/Man** toggle on **Res BW**, or simply enter a different value for **Res BW**.

When **Res BW** is manually selected, you can return it to the coupled state by pressing the **Auto/Man** toggle on **Res BW**. This may also be done by pressing "**Auto Couple**" on page 2242 or by performing a **Preset**.

For more details, see "**More Information**" on page 255

Remote Command	<code>[ :SENSe]:CHPower:BANDwidth[:RESolution] &lt;bandwidth&gt;</code> <code>[ :SENSe]:CHPower:BANDwidth[:RESolution]?</code>
Example	<code>:CHP:BAND 5 MHz</code> <code>:CHP:BAND?</code>
Notes	For numeric entries, all RBW Types choose the nearest (arithmetically, on a linear scale, rounding up) available RBW to the value entered The setting and querying of values depend on the current bandwidth type
Couplings	Sweep time is coupled to RBW. As RBW changes, the sweep time (if set to <b>Auto</b> ) is changed to maintain amplitude calibration Video bandwidth (VBW) is coupled to RBW. As the resolution bandwidth changes, the video bandwidth (if set to <b>Auto</b> ) changes to maintain the ratio of VBW/RBW (10:1) When Res BW is set to <b>Auto</b> , the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, and the bandwidths are entered manually, these bandwidths are used regardless of other instrument settings
Preset	See " <b>RBW Presets</b> " on page 255
State Saved	Saved in instrument state
Min	1 Hz
Max	8 MHz is the max equivalent -3 dB RBW, which means that the named RBW (the one shown on the control etc.) can actually exceed 8 MHz if using a filter other than -3 dB Gaussian
Annotation	A "#" mark appears before "RBW" in the annotation when it is switched from Auto to Manual coupling
Backwards Compatibility Notes	For backwards compatibility, this command supports both the <b>BANDwidth</b> and <b>BWIDth</b> forms
	Auto Function
Remote	<code>[ :SENSe]:CHPower:BANDwidth[:RESolution]:AUTO ON   OFF   1   0</code>

---

Command `[ :SENSe ]:CHPower:BANDwidth[:RESolution]:AUTO?`

---

Example `:CHP:BAND:AUTO ON`  
`:CHP:BAND:AUTO?`

### RBW Presets

Mode	Preset Value
LTEAFDD	Auto
LTEATDD	Auto
MSR	100 kHz
NR5G	Auto
SA	Auto
SRCOMMS	3.9 kHz
VMA	240 kHz
WCDMA	240 kHz
WLAN	100 kHz

### More Information

When **Res BW** is set to **Auto**, the bandwidth selected depends on "**RBW Filter Type**" on page 258.

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on **Filter Type** or **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

In some PowerSuite measurements, in the LTE-Advanced (both FDD and TDD) and 5G NR modes, when **Res BW** is in **Auto**, the resolution bandwidth is predefined based on the corresponding bandwidth of the single carrier, as shown in the table below. In the Multi-carrier case, the narrowest RBW among the active carriers is used.

#### LTE-A FDD/TDD Modes

Carrier BW	Auto RBW, kHz
1.4 MHz	20
3 MHz	43
5 MHz	68
10 MHz	150
15 MHz	220
20 MHz	270
200 kHz (NB-IoT in FDD)	10

#### 5G NR Mode

Bandwidth	Auto RBW, kHz
5 MHz	68
10 MHz	150
15 MHz	220
20 MHz	270
25 MHz	360
30 MHz	430
35 MHz	510
40 MHz	560
45 MHz	620
50 MHz	680
60 MHz	820
70 MHz	1000
80 MHz	1100
90 MHz	1300
100 MHz	1500
200 MHz	2700
400 MHz	3000
800 MHz	3000
1600 MHz	3000
2000 MHz	3000

## Video BW

Lets you change the instrument post-detection filter (VBW or “Video Bandwidth”) from 1 Hz to 8 MHz in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz. The VBW is annotated at the bottom of the display, in the center.

Normally, **Video BW (Auto)** selects automatic coupling of the Video BW to RBW using the ratio set by **VBW:3 dB RBW**. To decouple the resolution bandwidth, press the **Auto/Man** toggle on **Video BW**, or simply enter a different value for **Video BW**.

When the **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on **Video BW**. This may also be done by pressing **"Auto Couple"** on page 2242 or by performing a **Preset**.

---

Remote Command    `[ :SENSe ]:CHPower:BANDwidth:VIDeo <bandwidth>`  
                           `[ :SENSe ]:CHPower:BANDwidth:VIDeo?`

---

Example                `:CHP:BAND:VID 2.4 MHz`

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

:CHP:BAND:VID?	
Notes	For numeric entries, the instrument chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean "wide open" The values shown in this table reflect the conditions after a Mode Preset
Dependencies	Sometimes the displayed <b>Video BW</b> is not actually used to process the trace data: When the Average Detector is selected and <b>Sweep Type</b> is set to <b>Swept</b> , the video bandwidth filter cannot be used, because it uses the same hardware as the Average Detector When the Quasi-Peak, EMI Average or RMS Average detector is selected the VBW is implemented by the digital IF as part of the detector When this is the case, VBW still acts to change the Sweep Time, if " <b>Sweep Time</b> " on page 2125 is in <b>Auto</b> , and still affects the data on other traces for which this is not the case
Couplings	Video bandwidth (VBW) is normally coupled to " <b>Res BW</b> " on page 254. If <b>VBW</b> is set to <b>Auto</b> , then VBW is changed as RBW changes, to maintain the ratio set by <b>VBW:3 dB RBW</b> (usually 10:1 for measurements that do not have a <b>VBW:3 dB RBW</b> control)
Preset	Auto (unless noted in table below)
State Saved	Saved in instrument state
Min	1 Hz
Max	50 MHz
Annunciation	A "#" mark appears before "VBW" in the annotation when it is not coupled
Annotation	In the bottom center of the screen, "VBW <value> <units>" indicates the current video bandwidth value. Note that for some detectors this is not the value actually used for VBW (see above)
Backwards Compatibility Notes	For backwards compatibility, this command supports both the <b>BANDwidth</b> and <b>BWIDth</b> forms

### Auto Function

Remote Command	<code>[ :SENSe ] :CHPower :BANDwidth :VIDeo :AUTO ON   OFF   1   0</code> <code>[ :SENSe ] :CHPower :BANDwidth :VIDeo :AUTO?</code>
Example	<code>:CHP:BAND:VID:AUTO OFF</code> <code>:CHP:BAND:VID:AUTO?</code>
Preset	ON

### VBW Presets

Unless noted in the table below, the Preset value of VBW is **Auto**.

Mode	Preset Value
WCDMA	2.40 MHz

## RBW Filter Type

Selects the type for the resolution bandwidth filters. Historically, the Res BW filters in HP/Agilent/Keysight spectrum instruments were Gaussian filters, specified using the -3 dB bandwidth of the filter. That is, a 10 MHz Res BW filter was a Gaussian shape with its -3 dB points 10 MHz apart. In X-Series, the **RBW Filter BW** menu lets you choose between a Gaussian and Flat Top filter shape, for varying measurement conditions.

	<b>Filter Type</b>	<b>SCPI Example</b>														
	Gaussian	<code>:BAND:SHAP GAUS</code>														
	Flattop	<code>:BAND:SHAP FLAT</code>														
Remote Command	<code>[ :SENSe ]:CHPower:BANDwidth:SHAPE GAUSSian   FLATtop</code>															
	<code>[ :SENSe ]:CHPower:BANDwidth:SHAPE?</code>															
Example	<code>:CHP:BAND:SHAP GAUS</code>															
	<code>:CHP:BAND:SHAP?</code>															
Notes	<p><code>GAUSSian</code> = Gaussian</p> <p><code>FLATtop</code> = Flattop</p> <p>We use <code>SHAPE</code> instead of <code>TYPE</code> (even though the control name uses Type) because <code>TYPE</code> is used for backwards compatibility</p>															
Preset	"Auto Couple" on page 2242 selects the preset value															
State Saved	Saved in instrument state															
Annotation	<p>The annotation under RBW in the bottom left of the screen shows the type of filter or bandwidth that is being used. The following examples illustrate this:</p> <table border="1"> <tbody> <tr> <td>-3 dB (Normal) filter BW</td> <td>Res BW 300 Hz</td> </tr> <tr> <td>-6 dB filter BW</td> <td>Res BW (-6 dB) 422 Hz</td> </tr> <tr> <td>Noise filter BW</td> <td>Res BW (Noise) 317 Hz</td> </tr> <tr> <td>Impulse filter BW</td> <td>Res BW (Impulse) 444 Hz</td> </tr> <tr> <td>CISPR filter BW</td> <td>Res BW (CISPR) 200 Hz</td> </tr> <tr> <td>MIL filter BW</td> <td>Res BW (MIL) 1 kHz</td> </tr> <tr> <td>Flattop filter type</td> <td>Res BW (Flattop) 300 Hz</td> </tr> </tbody> </table>		-3 dB (Normal) filter BW	Res BW 300 Hz	-6 dB filter BW	Res BW (-6 dB) 422 Hz	Noise filter BW	Res BW (Noise) 317 Hz	Impulse filter BW	Res BW (Impulse) 444 Hz	CISPR filter BW	Res BW (CISPR) 200 Hz	MIL filter BW	Res BW (MIL) 1 kHz	Flattop filter type	Res BW (Flattop) 300 Hz
-3 dB (Normal) filter BW	Res BW 300 Hz															
-6 dB filter BW	Res BW (-6 dB) 422 Hz															
Noise filter BW	Res BW (Noise) 317 Hz															
Impulse filter BW	Res BW (Impulse) 444 Hz															
CISPR filter BW	Res BW (CISPR) 200 Hz															
MIL filter BW	Res BW (MIL) 1 kHz															
Flattop filter type	Res BW (Flattop) 300 Hz															
Backwards Compatibility SCPI	<code>[ :SENSe ]:CHPower:BWIDth:SHAPE</code>															

### 3.2.5 Display

Lets you configure display items for the current Mode, Measurement View or Window.

#### 3.2.5.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

#### Bar Graph On/Off

Turns the Bar Graph On or Off.

Remote Command	<code>:DISPlay:CHPower:WINDow[1]:BGRaph ON   OFF   1   0</code> <code>:DISPlay:CHPower:WINDow[1]:BGRaph?</code>
Example	<code>:DISP:CHP:WIND:BGR ON</code> <code>:DISP:CHP:WIND:BGR?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF
Backwards Compatibility SCPI	<code>:DISPlay:CHPower:VIEW[1]:WINDow[1]:BGRaph</code>

#### Carrier Frequency Type

Set the carrier frequency display type:

- **OFFSet**- The carrier center frequencies are displayed as offsets from Carrier Ref Freq
- **ABSolute**- The carrier center frequencies are displayed as absolute frequencies

Remote Command	<code>:DISPlay:CHPower:VIEW:WINDow:CINFormation:FREQuency OFFSet   ABSolute</code> <code>:DISPlay:CHPower:VIEW:WINDow:CINFormation:FREQuency?</code>
Example	<code>:DISP:CHP:VIEW:WIND:CINF:FREQ ABS</code> <code>:DISP:CHP:VIEW:WIND:CINF:FREQ?</code>
Dependencies	Only available in MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Preset	OFFSet

State Saved	Saved in instrument state
Range	<b>OFFSet</b>   <b>ABSolute</b>

### 3.2.5.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

#### Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<b>:DISPlay:GRATicule[:STATe]</b> <b>OFF</b>   <b>ON</b>   <b>0</b>   <b>1</b> <b>:DISPlay:GRATicule[:STATe]?</b>
Example	<b>:DISP:GRAT OFF</b>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<b>ON</b>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<b>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]</b> <b>OFF</b>   <b>ON</b>   <b>0</b>   <b>1</b> <b>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</b> This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

#### Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<b>:DISPlay:ANNotation:SCReen[:STATe]</b> <b>OFF</b>   <b>ON</b>   <b>0</b>   <b>1</b> <b>:DISPlay:ANNotation:SCReen[:STATe]?</b>
Example	<b>:DISP:ANN:SCR OFF</b>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>

Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

### Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state

### Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

### Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly

occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

### Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

Name	Command
Create User View	:DISPlay:VIEW:ADVanced:NAME
Select Screen	:INSTrument:SCReen:SElect
Delete Screen	:INSTrument:SCReen:DElete
Delete All But This Screen	:INSTrument:SCReen:DElete:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISPlay:ENABle OFF   ON   0   1 :DISPlay:ENABle?
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON, but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON Set by :SYST:DEF MISC, but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABle as it did in legacy analyzers

### 3.2.5.3 View

Contains controls for selecting the current **View**, and for editing User Views.

#### View

See "Views" on page 206.

#### User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	:DISPlay:VIEW:ADVanced:SElect <alphanumeric> :DISPlay:VIEW:ADVanced:SElect?
Example	Select Baseband as the current View :DISP:VIEW:ADV:SEL "Baseband"

---

Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre style="margin-left: 20px;">:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <b>TZOom</b>) with</p> <pre style="margin-left: 20px;">:DISP:VIEW:ADV:SEL</pre> <p>&lt;alphanumeric&gt; is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre style="margin-left: 20px;">:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre style="margin-left: 20px;">:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name &lt;alphanumeric&gt; does not exist"</p> <p>If the display is disabled (via <b>:DISP:ENAB OFF</b>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre style="margin-left: 20px;">:DISP:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

---

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a "User View".

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

---

Remote Command	<pre style="margin-left: 20px;">:DISP:VIEW:ADV:NAME &lt;alphanumeric&gt;</pre>
Example	<pre style="margin-left: 20px;">:DISP:VIEW:ADV:NAME "Baseband"</pre> <p>Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View</p>
Notes	<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case

---

---

If `<alphanumeric>` name already exists as a View, the error message “-224, Illegal parameter value; View `<alphanumeric>` already exists” is generated

If the display is disabled (via `:DISP:ENAB OFF`) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:REN “Baseband”</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message “-224, Illegal parameter value; View <code>&lt;alphanumeric&gt;</code> already exists” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot rename a Predefined View” is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

---

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p>

---

If the `<alphanumeric>` is not present in the list of View names, the error message “-224, Illegal parameter value; View `<alphanumeric>` does not exist” is generated

If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot delete a Predefined View” is generated

If the display is disabled (via `:DISP:ENAB OFF`) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated

### Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

### View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SELect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

### View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:  <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p> <p>If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined</p>

## User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	Returns a quoted string of the available User Views for the current measurement, separated by commas. Example: <code>"Baseband,myView1,yourView1"</code> If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a> ), then query the list of available Views, the result is undefined

## 3.2.6 Frequency

Contains controls that allow you to control the frequency and channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by ["Meas Preset" on page 286](#). For example, **Center Frequency** is the same for all measurements – it does not change as you change measurements.

### 3.2.6.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the horizontal axis.

### Carrier Reference Frequency

Sets **Carrier Reference Frequency**. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple **Center Frequency** parameter used in most measurements does not apply here. Instead, **Carrier Reference Frequency** is the key parameter. This must be distinct from the **Center Frequency** parameter used in other

measurements, because Center Frequency can be a global parameter. It makes no sense for **Carrier Reference Frequency** to use the global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- **Number of Component Carriers** is 1
- **Center Freq Offset** is 0 Hz
- **Center Frequency** mode is Auto

then **Center Frequency** is equivalent to **Carrier Ref Frequency**. When **Center Frequency** changes in such conditions, its mode remains **Auto**, and **Carrier Reference Frequency** changes to the same value. The main purpose of this coupling is to maintain backwards compatibility with legacy LTE/LTE TDD Modes, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

See "[More Information](#)" on page 268

Remote Command	For LTE-A, 5G NR Modes <code>[ :SENSe]:CCARrier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFerence?</code> For MSR Mode <code>[ :SENSe]:CARRier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CARRier:REFerence?</code>
Example	For LTE-A, 5G NR Modes <code>:CCAR:REF 2GHz</code> For MSR Mode <code>:CARR:REF 2GHz</code>
Dependencies	Only available in LTE-A FDD/TDD, 5G NR and MSR Modes
Preset	<code>1GHz</code>
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as <b>Center Frequency</b>

## More Information

In most applications, **Center Frequency** is generally the location of the carrier center, and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here is only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these three are general type measurements and

focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers or a range far away from the component carriers to see spurious. The **Center Frequency** in these three measurements has a different meaning, therefore it should be a separate setting from **Carrier Reference Frequency**.

Carrier center frequencies are defined using offsets from **Carrier Reference Frequency**, which determines absolute frequency locations, and which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in those three measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the **Frequency** menu of these measurements.

## Span

Changes the displayed frequency range symmetrically about the center frequency. While adjusting **Span**, **Center Frequency** is held constant, which means that both Start Frequency and Stop Frequency will change.

If **Span** is set to a value greater than the maximum allowable span of the instrument, an error message is generated indicating the data is out of range and was clipped to upper limit.

The default (and minimum) **Span** is calculated using the number of carriers and the carrier width where;

$$\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$$

If the RRC Filter is on, then span is increased by a factor of 1 + Filter Alpha.

See "[Span Presets](#)" on page 271

Remote Command	<code>[ :SENSe ] :CHPower:FREQuency:SPAN &lt;freq&gt;</code> <code>[ :SENSe ] :CHPower:FREQuency:SPAN?</code>
Example	<code>:CHP:FREQ:SPAN 10 MHz</code> <code>:CHP:FREQ:SPAN?</code>
Dependencies	<p>If the electrical attenuator is enabled, any attempt to set Span such that the Stop Frequency would be &gt;3.6 GHz results in an error</p> <p>In instruments with an RF Preselector, such as MXE, you cannot sweep across the band break at 3.6 GHz while the RF Preselector is on in Continuous sweep, as there is a mechanical switch which bypasses the RF Preselector above 3.6 GHz. See the Stop Frequency control description for details of this limitation</p> <p>For MSR Mode, this control is not shown</p> <p>For WLAN 802.11ac (80 MHz + 80 MHz), the control is not enabled, and its value is coupled with the spacing between the center frequencies of the two carriers</p> $\text{Span} =  \text{Center Frequency 1} - \text{Center Frequency 2}  + \text{Integ BW} + 40 \text{ MHz Margin}$

	When the calculated span is over 1 GHz, it is still coupled to its maximum value, which is 1 GHz
Couplings	<p><b>Span</b> affects "<a href="#">Res BW</a>" on page 254, Sweep Time, FFT &amp; Sweep choice (including FFT Width, Phase Noise Optimization and ADC Dither auto couplings)</p> <p>Any value of <b>Center Frequency</b> or <b>Span</b> that is within the frequency range of the instrument is allowed <i>when</i> the value is being set through the front panel numeric keypad or the SCPI command. The other parameter is forced to a different value if needed, to keep the Start and the Stop Frequencies within the instrument's frequency range</p> <p>When using the knob or the step up/down keys or the <b>UP</b>   <b>DOWN</b> keywords in SCPI, the value that is being changed, that is, <b>Center Frequency</b> or <b>Span</b>, is limited so that the other parameter is not forced to a new value</p> <p>When <b>Res BW</b> is set to <b>Auto</b>, the resolution bandwidth is auto-coupled to span. The ratio of span /RBW is approximately 106:1. When <b>Res BW</b> is set to <b>Man</b>, bandwidths are entered by the user, and these bandwidths are used regardless of other instrument settings</p> <p>Since <b>Span</b> is coupled to <b>Integ BW</b> in the factory default condition, if you change the Integ BW setting, the span setting changes by a proportional amount until a limit value is reached. However, the span can be individually set. The minimum value of the span is coupled with the integration bandwidth</p> <p><b>Span</b> cannot be set less than the <b>Integ BW</b> value. When <b>Span</b> is changed, the ratio of Span/Integ BW is set, and retained when Integ BW is changed</p>
Preset	Depends on instrument maximum frequency, mode, measurement, and selected input See " <a href="#">Span Presets</a> " on page 271
State Saved	Saved in instrument state
Min	100 Hz In 5G NR, LTEAFDD, and LTEATDD Modes, this value is the minimum value required for the measurement, which depends on the Component Carrier configuration
Max	Depends on instrument maximum frequency, mode, measurement, and selected input. See " <a href="#">Span Presets</a> " on page 271 If the knob or step keys are being used, depends on the value of the other three interdependent parameters Center Frequency, Start Frequency, Stop Frequency
Annunciation	Data out of range, value clipped to upper limit
Annotation	Span <value> appears on the first line of the annotation in the lower right corner of display
	LTE, 5G NR Modes only:
Remote Command	<code>[ :SENSe ] :CHPower:FREQuency:SPAN:AUTO ON   OFF   1   0</code> <code>[ :SENSe ] :CHPower:FREQuency:SPAN:AUTO?</code>
Example	<code>:CHP:FREQ:SPAN:AUTO OFF</code> <code>:CHP:FREQ:SPAN:AUTO?</code>
Notes	The span value is adjusted when the relevant carrier parameters such as bandwidth, integration bandwidth, number of component carriers etc., are changed, whatever the span state ( <b>Auto</b> or <b>Man</b> ) When in <b>Man</b> state, if the input value is less than the required sum of total integration bandwidths and gaps of the multi-carriers, the required span value is set
Dependencies	Only available in LTE/LTE-Advanced FDD/TDD Modes and 5G NR Mode, CHP measurement

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

### Span Presets

The following table provides the Max Span, for the various frequency options:

Freq Option	Max Span (can't set higher than this)
503 (all but CXA)	3.7 GHz
503, F03 (CXA, CXA-m)	3.08 GHz
507 (all but CXA)	7.1 GHz
507 (CXA, CXA-m)	7.575 GHz
508 (all but MXE)	8.5 GHz
508 (MXE)	8.5 GHz
513, F13	13.8 GHz
526 (all but CXA and MXE)	27.0 GHz
526 (MXE)	27.0 GHz
526, F26 (CXA, CXA-m)	26.55 GHz
544	44.5 GHz
550	52 GHz
F06 (VXT models M9410A/11A)	5.75 GHz
F06 & EP6 (VXT models M9410A/11A)	6.27 GHz
F06 & LFE & EP6 (VXT models M9411A)	6.5999935 GHz
M9415A-F06	6.27 GHz
M9415A-F08	8.27 GHz
M9415A-F12	12.57 GHz

Input 2:

Model	Max Span (can't set higher than this)
CXA opt C75	1.58 GHz
MXE	1.000025 GHz

Note that if you are in External Mixing, the maximum Span will be equal to the Maximum Stop Frequency – Minimum Start Frequency for the currently selected mixer.

Span Presets by Mode

Mode	Radio Std	Preset Value
SA		3 MHz
WCDMA		7.5 MHz
LTE		7.5 MHz
LTETDD		7.5 MHz
5G NR		150 MHz
WLAN	802.11a/g(OFDM/DSSS-OFDM)	30 MHz
	802.11b	37.5 MHz
	802.11n/ac/ax/be 20MHz	30 MHz
	802.11n/ac/ax/be 40MHz	60 MHz
	802.11n/ac/ax/be 80 MHz	120 MHz
	802.11n/ac/ax/be 160 MHz	240 MHz
	802.11n/ac/ax/be 80 MHz + 80 MHz	360 MHz
	802.11be 320 MHz	480MHz
	802.11be 160MHz + 160MHz	440MHz

## CF Step

Changes the step size for **Center Frequency** and start and stop frequency functions. Once a step size has been selected and the center frequency function is active, the step keys (and the **UP | DOWN** parameters for **Center Frequency** from remote commands) change the center frequency by the step-size value. The step size function is useful for finding harmonics and sidebands beyond the current frequency span of the instrument.

Note that the start and stop frequencies also step by the **CF Step** value.

---

Remote Command `[ :SENSe ] :FREQuency :CENTer :STEP [ :INCRement ] <freq>`  
`[ :SENSe ] :FREQuency :CENTer :STEP [ :INCRement ] ?`

### 3 LTE & LTE-A TDD Mode

#### 3.2 Channel Power Measurement

Example	Increase the current center frequency value by 500 MHz: <code>:FREQ:CENT:STEP 500 MHz</code> <code>:FREQ:CENT UP</code>
Notes	Preset and Max values depend on Hardware Options
Dependencies	If the electronic/soft attenuator is enabled, any attempt to change the value of the center frequency >3.6 GHz by pressing the Up-arrow key, fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning Not available in the MSR, LTE-A FDD/TDD and 5G NR Modes
Couplings	When auto-coupled, the center frequency step size is set to 10% of the span
Preset	Auto
State Saved	Saved in instrument state
Min/Max	-/+ (the maximum frequency of the instrument) That is, 27 GHz max freq instrument has a CF step range of $\pm 27$ GHz. Note that this is the maximum frequency given the current settings of the instrument, so in External Mixing, for example, it is the maximum frequency of the current mixer band
Status Bits/OPC dependencies	non-overlapped  Auto Function
Remote Command	<code>[ :SENSe ] :FREQuency:CENTer:STEP:AUTO OFF   ON   0   1</code> <code>[ :SENSe ] :FREQuency:CENTer:STEP:AUTO?</code>
Example	<code>:FREQ:CENT:STEP:AUTO ON</code> <code>:FREQ:CENT:STEP:AUTO?</code>

#### Full Span (Remote Command Only)

Changes the span to show the full frequency range of the instrument. It maximizes the span within a range not changing the center frequency.

Remote Command	<code>[ :SENSe ] :CHPower:FREQuency:SPAN:FULL</code>
Example	<code>:CHP:FREQ:SPAN:FULL</code>
Couplings	Selecting full span changes the measurement span value

### 3.2.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is

set to Normal and placed it at the center of the screen on the trace determined by the **Marker Trace** rules.

### 3.2.7.1 Select Marker

Specifies the *selected marker*. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

This control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. If you select a tab whose controls do *not* depend on the selected marker (for example, Counter), then this control is blanked.

For any menu that includes **Select Marker**, the first control is always **Marker Frequency**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for <b>Normal</b> , <b>Delta</b> and <b>Fixed</b> markers

### 3.2.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (**Normal**, **Delta**, or **Off**) for the selected marker, as well as additional functions that help you use markers.

#### Marker Frequency

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:X &lt;freq&gt;</code>
Example	<code>:CALC:CHP:MARK3:X 0</code> <code>:CALC:CHP:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error “Invalid suffix” is generated The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker’s reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and Inverse Time, seconds for Period and Time

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

Preset	After a preset, all markers are turned <b>OFF</b> , so Marker X-Axis Value query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

### Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta**, except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:X:POStion &lt;real&gt;</code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:X:POStion?</code>
Example	<code>:CALC:CHP:MARK10:X:POS 0</code> <code>:CALC:CHP:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points. When a marker is turned on, it is placed at the center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is <b>Off</b> , the response is Not A Number

Preset	After a preset, all markers are turned <b>Off</b> , so the query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37

### Marker Y Axis Value (Remote Query only)

Returns the marker Y Axis value in the current marker Y-Axis unit.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:CHP:MARK11:Y?</code>
Notes	Returns the marker Y-Axis result if the control mode is <b>Normal</b> or <b>Delta</b> If the marker is <b>Off</b> , then the response is Not A Number
Preset	Result dependent on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:FUNction:RESult?</code>

## Marker Mode

Sets the marker control mode to **POSition (Normal)**, **DELTA**, or **OFF**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **POSition** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:MODE POSition   DELTa   OFF</code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:CHP:MARK3:MODE POS</code> <code>:CALC:CHP:MARK3:MODE?</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>POSition DELTA OFF</b>
Annotation	Mkr # <X value> and <Marker value> upper right on graph When Marker Trace is Polar in WCDMA mode: Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

## Backwards Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON (1)** puts it in **POSition (Normal)** mode and places it at the center of the screen.

Example	<code>:CALC:CHP:MARK3:STAT ON</code> <code>:CALC:CHP:MARK3:STAT?</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>OFF ON</b>
Backwards Compatibility SCPI	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:STATe OFF   ON   0   1</code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:STATe?</code>

### Delta Marker (Reset Delta)

This control has the same effect as pressing **Delta** in "**Marker Mode**" on page 276. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

### Marker Settings Diagram

Lets you configure the Marker system using a visual utility.

### All Markers Off

Turns off all markers.

---

Remote Command    :CALCuLate:CHPower:MARKer:AOff

---

Example             :CALC:CHP:MARK:AOff

### 3.2.7.3 Peak Search

The controls on this tab let you move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with "**Marker Delta**" on page 278.

**NOTE**

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a peak search.

---

### Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "**Marker Frequency**" on page 274 in the **Settings** tab.

### Peak Search

Moves the selected marker to the trace point that has the maximum Y-Axis value for that marker's trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Remote Command	:CALCulate:CHPower:MARKer[1] 2 ... 12:MAXimum
Example	:CALC:CHP:MARK2:MAX :SYST:ERR?  can be used to query the errors to determine if a peak is found. Following an unsuccessful search, the message "No peak found" is returned
Notes	Sending this command selects the subcoded marker In W-CDMA Mode, this command does not work when the selected marker is located on the polar trace. In this case, the command is ignored

## Marker Delta

Pressing this button has the same effect as pressing **Delta** in "**Marker Mode**" on [page 276](#) on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search and change the marker's control mode to **Delta** without having to access two separate menus.

### 3.2.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "**Marker Frequency**" on [page 274](#) in the **Settings** tab.

## Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:REFerence &lt;integer&gt;</code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:REFerence?</code>
Example	<code>:CALC:CHP:MARK:REF 5</code> <code>:CALC:CHP:MARK:REF?</code>
Notes	Causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried a single value is returned (the specified marker numbers relative marker)
Couplings	If the reference marker is <b>Off</b> , it is turned on in <b>Normal</b> mode at the delta marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then its default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using <b>Restore Mode Defaults</b> . Not reset by <b>Marker Off</b> , <b>All Markers Off</b> , or <b>Preset</b>
State Saved	Saved in instrument state. Not affected by Marker Off, and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a <b>Delta</b> marker

## Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become **Normal** or **Delta** markers.

Specifying a **Marker Trace** manually or with this command associates the marker with the specified trace. If the marker is not **Off**, it moves the marker from the trace it was on to the new trace. If the marker is **Off**, it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:CHPower:MARKer[1] 2 ... 12:TRACe 1   2   3</code> <code>:CALCulate:CHPower:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:CHP:MARK2:TRAC 2</code> <code>:CALC:CHP:MARK2:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number

Couplings	The state of <b>Marker Trace</b> is not affected by " <a href="#">Auto Couple</a> " on page 2242 Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state

## Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility. It is the same as "[Marker Settings Diagram](#)" on page 277 in the **Settings** tab.

## 3.2.8 Meas Setup

Contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the Mode.

### 3.2.8.1 Settings

Contains frequently used **Meas Setup** functions to which you will want the fastest access.

### Avg/Hold Number

Specifies the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep. After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

Remote Command	<code>[ :SENSe ] :CHPower:AVERage:COUNT &lt;integer&gt;</code> <code>[ :SENSe ] :CHPower:AVERage:COUNT?</code>
Example	<code>:CHP:AVER:COUN 15</code> <code>:CHP:AVER:COUN?</code>
Preset	SA, WLAN: 10 WCDMA, LTEAFDD, LTEATDD, 5G NR, MSR: 200
State Saved	Saved in instrument state
Min/Max	1 / 10000
Annotation	The average count is displayed in the measurement bar on the front panel display. The annotation appears in the format <code>n/N</code> where <code>n</code> is the current average and <code>N</code> is the average count

## Averaging On/Off

Turns averaging on or off for this measurement.

**NOTE**

In this measurement, the **Average Type** is preset to the **Log-Pwr Avg (Video)** method. Other averaging methods are not available.

Remote Command	<code>[ :SENSe]:CHPower:AVERage[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:CHPower:AVERage[:STATe]?</code>
Example	<code>:CHP:AVER ON</code> <code>:CHP:AVER?</code>
Preset	ON
State Saved	Yes
Range	ON OFF

## Avg Mode

Allows you to select the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached. Options are:

- **EXPonential**: The measurement averaging continues using the specified number of averages to compute each exponentially-weighted averaged value. The average is displayed at the end of each sweep
- **REPeat**: The measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[ :SENSe]:CHPower:AVERage:TCONtrol EXPonential   REPeat</code> <code>[ :SENSe]:CHPower:AVERage:TCONtrol?</code>
Example	<code>:CHP:AVER:TCON EXP</code> <code>:CHP:AVER:TCON?</code>
Preset	EXP
State Saved	Yes
Range	EXPonential REPeat

## Integ BW

Specifies the range of integration used in calculating the power in the channel. The integration bandwidth (IBW) is displayed on the trace as two markers connected by

an arrow.

Remote Command	<code>[ :SENSe]:CHPower:BANDwidth:INTEgration &lt;bandwidth&gt;</code> <code>[ :SENSe]:CHPower:BANDwidth:INTEgration?</code>																																
Example	<code>:CHP:BAND:INT 10MHz</code> <code>:CHP:BAND:INT?</code>																																
Dependencies	For LTE-Advanced FDD/TDD, 5G NR and MSR Modes, this control is not shown																																
Couplings	The minimum value of the span is coupled with Integ BW When you change Integ BW, the span changes accordingly by keeping the same ratio of Span/Integ BW																																
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Radio Std</th> <th>Integ BW</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td></td> <td>2 MHz</td> </tr> <tr> <td>WCDMA</td> <td></td> <td>5 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD</td> <td></td> <td>5 MHz</td> </tr> <tr> <td rowspan="8">WLAN</td> <td>802.11a/g(OFDM/DSSS-OFDM)</td> <td>20 MHz</td> </tr> <tr> <td>802.11b</td> <td>25 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (20MHz)</td> <td>20 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (40MHz)</td> <td>40 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (80MHz)</td> <td>80 MHz</td> </tr> <tr> <td>802.11ax/be (80 MHz + 80 MHz)</td> <td>80 MHz</td> </tr> <tr> <td>802.11ac/ax/be (160 MHz)</td> <td>160 MHz</td> </tr> <tr> <td>802.11be (160 MHz + 160MHz)</td> <td>160 MHz</td> </tr> <tr> <td></td> <td>802.11be (320MHz)</td> <td>320 MHz</td> </tr> </tbody> </table>	Mode	Radio Std	Integ BW	SA		2 MHz	WCDMA		5 MHz	LTEAFDD, LTEATDD		5 MHz	WLAN	802.11a/g(OFDM/DSSS-OFDM)	20 MHz	802.11b	25 MHz	802.11n/ac/ax/be (20MHz)	20 MHz	802.11n/ac/ax/be (40MHz)	40 MHz	802.11n/ac/ax/be (80MHz)	80 MHz	802.11ax/be (80 MHz + 80 MHz)	80 MHz	802.11ac/ax/be (160 MHz)	160 MHz	802.11be (160 MHz + 160MHz)	160 MHz		802.11be (320MHz)	320 MHz
Mode	Radio Std	Integ BW																															
SA		2 MHz																															
WCDMA		5 MHz																															
LTEAFDD, LTEATDD		5 MHz																															
WLAN	802.11a/g(OFDM/DSSS-OFDM)	20 MHz																															
	802.11b	25 MHz																															
	802.11n/ac/ax/be (20MHz)	20 MHz																															
	802.11n/ac/ax/be (40MHz)	40 MHz																															
	802.11n/ac/ax/be (80MHz)	80 MHz																															
	802.11ax/be (80 MHz + 80 MHz)	80 MHz																															
	802.11ac/ax/be (160 MHz)	160 MHz																															
	802.11be (160 MHz + 160MHz)	160 MHz																															
	802.11be (320MHz)	320 MHz																															
State Saved	Saved in instrument state																																
Min/Max	100 Hz / Hardware Maximum Span																																
Backwards Compatibility SCPI	<code>[ :SENSe]:CHPower:BWIDth:INTEgration</code>																																

## PSD Unit

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz (**DBMHZ**) and dBm/MHz (**DBMMHZ**).

Remote Command	<code>:UNIT:CHPower:POWer:PSD DBMHZ   DBMMHZ</code> <code>:UNIT:CHPower:POWer:PSD?</code>
Example	<code>:UNIT:CHP:POW:PSD DBMMHZ</code> <code>:UNIT:CHP:POW:PSD?</code>

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

Couplings	When the PSD unit is changed, the response to <code>:MEAS READ FETCH:CHP1?</code> also changes by the PSD unit basis (either dBm/Hz or dBm/MHz)
Preset	WLAN mode or SA mode with WLAN radio standard: <code>DBMMHZ</code> Otherwise: <code>DBMHZ</code>
State Saved	Saved in instrument state
Range	dBm/Hz   dBm/MHz

## IF Gain

Sets **IF Gain** to Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

Remote Command	<code>[ :SENSe]:CHPower:IF:GAIN[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:CHPower:IF:GAIN[:STATe]?</code>
Example	<code>:CHP:IF:GAIN ON</code> <code>:CHP:IF:GAIN?</code>
Notes	<b>ON</b> = high gain <b>OFF</b> = low gain
Dependencies	The IF Gain controls (FFT IF Gain and Swept IF Gain) have no effect when the U7227A USB Preamp-lifier is connected. This is not annotated or reflected on any control; there are no controls grayed out nor any SCPI locked out. The instrument simply behaves as though both FFT IF Gain and Swept IF Gain are set to Low regardless of the setting on the controls Not available in VXT model M9421A
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	Low Gain   High Gain

### Auto Function

Remote Command	<code>[ :SENSe]:CHPower:IF:GAIN:AUTO[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:CHPower:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:CHP:IF:GAIN:AUTO ON</code> <code>:CHP:IF:GAIN:AUTO?</code>
Couplings	Auto sets IF Gain to High Gain if the input attenuator is set to 0 dB, or if the preamp is turned on and the frequency range is under 3.6 GHz For other conditions, Auto sets IF Gain to Low Gain
Preset	<b>OFF</b>

## Spur Avoidance

Because VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed.

When **Spur Avoidance** is **Enabled** (the default), the instrument uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates in the multiple capture case.

You can disable this function to speed up your measurement by setting **Spur Avoidance** to **Disabled (OFF)**.

Note that when **Spur Avoidance** is not in effect, either because you have disabled it or because you are not in multiple capture, the following warning message will appear in the status bar:

**Settings Alert;Spur Avoidance Off**

This is to alert you that measurement accuracy might be negatively impacted.

Remote Command	<code>[ :SENSe]:CHPower:SAVoid[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:CHPower:SAVoid[:STATe]?</code>
Example	<code>:CHP:SAV ON</code> <code>:CHP:SAV?</code>
Dependencies	Only appears in VXT models M9410A/11A/15A
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>ON OFF</b>

## Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

## Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate

action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 285 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL   NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** does *not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

## Measurement-Specific Details

### TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

#### **Harmonics (SA Mode only)**

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

### **Meas Preset**

Restores all measurement parameters to their default values.

---

Remote Command	<code>:CONFigure:CHPower</code>
----------------	---------------------------------

---

Example	<code>:CONF:CHP</code>
---------	------------------------

### **3.2.8.2 Radio**

Contains controls to select link direction.

#### **Direction**

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

Remote Command	<code>[ :SENSe]:RADio:STANdard:DIRection DLINK   ULINK</code> <code>[ :SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

### 3.2.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1

State Saved	Yes
Min	1
Max	5

## Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:

- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured


Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

## Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

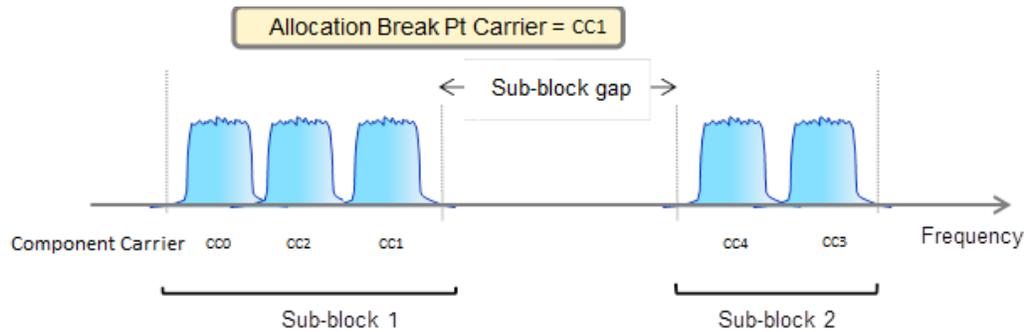

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint CC0   ...   CC4</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

### Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

### Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

### Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

### Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

## Non-Contiguous Break at

See "Non-Contiguous Break at" on page 2246.

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:BANdwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:CCARrier0 ... 4[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

Remote Command	<code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMal   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD)

	CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe ] : RADio : STANdard : ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe ] : CCARrier0   ...   4 : RADio : STANdard : DGPU CONF0   ...   CONF9</code> <code>[ :SENSe ] : CCARrier0   ...   4 : RADio : STANdard : DGPU?</code>
Example	<code>:CCAR0 : RAD : STAN : DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe ] : RADio : STANdard : DGPU</code>

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>																
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>																
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SELEct to set the mode																
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>CHP Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.4 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>3 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>10 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>15 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>20 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>200 kHz</td> </tr> </tbody> </table>	System Bandwidth	CHP Integ BW	1.4 MHz (B1M4)	1.4 MHz	3 MHz (B3M)	3 MHz	5 MHz (B5M)	5 MHz	10 MHz (B10M)	10 MHz	15 MHz (B15M)	15 MHz	20 MHz (B20M)	20 MHz	200 kHz(B200K)	200 kHz
System Bandwidth	CHP Integ BW																
1.4 MHz (B1M4)	1.4 MHz																
3 MHz (B3M)	3 MHz																
5 MHz (B5M)	5 MHz																
10 MHz (B10M)	10 MHz																
15 MHz (B15M)	15 MHz																
20 MHz (B20M)	20 MHz																
200 kHz(B200K)	200 kHz																
Preset	5 MHz																
State Saved	Saved in instrument state																
Min	100 kHz																
Max	20 MHz																
Backwards Compatibility SCPI	<code>[ :SENSe]:CHPower:BANDwidth:INTEgration</code> <code>[ :SENSe]:CHPower:BWIDth:INTEgration</code>																

## ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>

Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRUMENT:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS ACP Meas Noise BW</th> <th>MS ACP Meas Noise BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Yes																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:BANDwidth[:INTEgration]</code> <code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:BWIDth[:INTEgration]</code>																								

### SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRUMENT:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

	<b>System Bandwidth</b>	<b>BTS SEM Integ BW</b>	<b>MS SEM Integ BW</b>
	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
	3 MHz (B3M)	2.715 MHz	2.7 MHz
	5 MHz (B5M)	4.515 MHz	4.5 MHz
	10 MHz (B10M)	9.015 MHz	9.0 MHz
	15 MHz (B15M)	13.515 MHz	13.5 MHz
	20 MHz (B20M)	18.015 MHz	18.0 MHz
	200 kHz(B200K)	180 kHz	180 kHz
Preset	4.515 MHz 4.5 MHz		
State Saved	Saved in instrument state		
Min	100 kHz		
Max	20 MHz		
Backwards Compatibility SCPI	[:SENSe]:SEMAsk:BAWdth[1] 2:INtegration		

### Carrier Config Presets

Lets you configure the Component Carrier presets.

#### 3.2.8.4 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

## System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command RAD:STAN:PRES B5M or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote Command	<code>[ :SENSE ] :RADio:STANdard:PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSE ] :RADio:STANdard:PRESet:ULDL CONF0   ...   CONF6</code> <code>[ :SENSE ] :RADio:STANdard:PRESet:ULDL ?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUUDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD)

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

	CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

### Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe ] :RADio :STANdard :PRESet :DGPU CONF0   ...   CONF9</code> <code>[ :SENSe ] :RADio :STANdard :PRESet :DGPU?</code>
Example	<code>:RAD :STAN :PRES :DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

### Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote	<code>[ :SENSe ] :RADio :SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8  </code>
--------	--

Command	TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19 [:SENSe]:RADio:SLOT?
Example	:RAD:SLOT TS0
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

## Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	[:SENSe]:RADio:MINTErval <integer> [:SENSe]:RADio:MINTErval						
Example	:RAD:MINT 1						
Notes	The backwards compatible command [:SENSe]:PVTime:MINTErval is available in LTE FDD & LTE-A FDD Modes						
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>						
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH: <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Meas NPRACH</th> <th>Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

Preset	1
State Saved	Yes
Min	1
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise
Backwards Compatibility SCPI	LTE: <code>[ :SENSe ] :PVTime :MINTerval</code>

### CP Length

Specifies whether the cyclic prefix is configured as NORMal or EXTended for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe ] :RADio :CPLength NORMal   EXTended</code> <code>[ :SENSe ] :RADio :CPLength?</code>
Example	<code>:RAD:CPL NORM</code>
Notes	The backwards compatible SCPI command <code>[ :SENSe ] :PVTime :CPLength</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to "200 kHz (NB-IoT)" and Direction is "uplink"
Couplings	Set to NORMal when System BW is set to "200 kHz (NB-IoT)"
Preset	NORMal
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: <code>[ :SENSe ] :PVTime :CPLength</code>

### Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe ] :RADio :MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe ] :RADio :MEASure?</code>
----------------	---

Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

### Reference Config

Specifies which component carrier's ULDL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code> <code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.2.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

Does not appear in VXT.

### Phase Noise Optimization

Lets you select the LO (local oscillator) phase noise behavior for various operating conditions. When in Auto, selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions.

For full details, see "[Parameter Options, Installed Options & Ranges](#)" on page 301 below.

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

Remote Command	<code>[ :SENSe]:CHPower:FREQuency:SYNThesis[:STATe] 1   ...   5</code> For the meaning of each numeric option value, see " <a href="#">Parameter Options, Installed Options &amp; Ranges</a> " on page 301 below <code>[ :SENSe]:CHPower:FREQuency:SYNThesis[:STATe]?</code>
Example	<code>:CHP:FREQ:SYNT 1</code> <code>:CHP:FREQ:SYNT?</code>
Dependencies	Does not appear in all models. For models in which the control is not displayed, the SCPI command is accepted for compatibility, although no action is taken
Preset	3
State Saved	Saved in instrument state
Range	See " <a href="#">Ranges</a> " on page 306 below
Auto Function	
Remote Command	<code>[ :SENSe]:CHPower:FREQuency:SYNThesis:AUTO[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:CHPower:FREQuency:SYNThesis:AUTO[:STATe]?</code>
Example	<code>:CHP:FREQ:SYNT:AUTO 1</code> <code>:CHP:FREQ:SYNT:AUTO?</code>
Preset	OFF

### Parameter Options, Installed Options & Ranges

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster without regard to noise or with optimum noise characteristics without regard to speed.

#### Parameter Values Summary

Option	#	Description
"Balanced" on page 302	1	<ul style="list-style-type: none"> <li>- In instruments with EPO, balances close-in phase noise with spur avoidance</li> <li>- In instruments without EPO optimizes phase noise for small frequency offsets from the carrier</li> </ul>
"Best Wide-offset" on page 303	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 303	3	Optimizes LO for tuning speed
"Best Close-in" on page 302	4 or 1*	<ul style="list-style-type: none"> <li>- In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance</li> </ul>

Option	#	Description
		- In instruments without EPO, this setting is accepted but no action is taken
"Best Spurs" on page 303	5	- In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance
		- In instruments without EPO, this setting is accepted but no action taken
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

\*Dependent on Option EPO installation. See "Best Close-in" on page 302 below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, "Fast Tuning" on page 303 is identical in effect to "Best Close-in" on page 302.

### Best Close-in

Without option EPO

:FREQ:SYNT 1

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset <20 kHz]

With option EPO

:FREQ:SYNT 4

In instruments with Option EPO, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for close-in measurements than the "Balanced" on page 302 setting, parameter 1 selects "Balanced" on page 302 in EPO instruments, in the interests of optimizing code compatibility across the family. Parameter 4 selects "Best Close-in" on page 302, which is usually not as good a choice as "Balanced" on page 302.

### Balanced

:FREQ:SYNT 1

In instruments with EPO, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO

is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within  $\pm 1$  octave around 400 kHz offset. The spurs will always be below  $-70$  dBc.

### Best Spurs

`:FREQ:SYNT 5`

In instruments with EP0, the LO is configured for better phase noise than the "[Best Wide-offset](#)" on page 303 case close to the carrier, but the configuration has 11 dB worse phase noise than the "[Best Close-in](#)" on page 302 case mostly within  $\pm 1$  octave around 300 kHz offset. Spurs are even lower than in the "[Balanced](#)" on page 302 case at better than  $-90$  dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

### Best Wide-offset

`:FREQ:SYNT 2`

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within  $\pm 1$  octave around 400 kHz offset. The spurs will always be below  $-70$  dBc.

### Fast Tuning

`:FREQ:SYNT 3`

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term "[Fast Tuning](#)" on page 303 refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EP0, this is the same configuration as "Best Spurs" on page 303. It is available with the "Fast Tuning" on page 303 label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a "Fast Tuning" on page 303 option, the settings for "Best Close-in" on page 302 are used if "Fast Tuning" on page 303 is selected. This gives the fastest possible tuning for that hardware set.)

### Auto

`:FREQ:SYNT:AUTO ON`

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

### Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
EPO Models with option EPO have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)	Center frequency is < 699.9 kHz Span > 114.1 MHz, <i>or</i> RBW > 800 kHz RBW > 290 kHz, <i>or</i> Span > 4.2 MHz Other conditions	"Balanced" on page 302 "Fast Tuning" on page 303 "Best Wide-offset" on page 303 "Balanced" on page 302
EP1 Models with option EP1 have a two-loop local oscillator, which switches to a single loop for fast tuning (available in PXA)	Span > 44.44 MHz, <i>or</i> RBW > 1.9 MHz, <i>or</i> Source Mode is set to "Tracking" Center frequency is < 195 kHz, <i>or</i> CF >= 1 MHz and Span <= 1.3 MHz and RBW <= 75 kHz All other conditions	"Fast Tuning" on page 303 "Best Close-in" on page 302 "Best Wide-offset" on page 303
EP2 Models with option EP2 use a different	CF < 130 kHz, <i>or</i> CF > 12 MHz and Span < 495 kHz and RBW < 40 kHz	"Best Close-in" on page 302

3 LTE & LTE-A TDD Mode  
3.2 Channel Power Measurement

Models with Option	Conditions	Selection
<p>loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 302; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)</p>	<p>Span &gt; 22 MHz, <i>or</i>            RBW &gt; 400 kHz, <i>or</i>            CF ≤ 12 MHz <i>and</i> Span &lt; 495 kHz <i>and</i>            RBW &lt; 23 kHz            All other conditions</p>	<p>"Fast Tuning" on page 303             "Best Wide-offset" on page 303</p>
<p>EP4 (available in CXA for improved phase noise)</p>	<p>Span &gt; 101 MHz <i>or</i>            RBW &gt; 1.15 MHz <i>or</i>            Source Mode is set to "Tracking"            CF is &lt; 109 kHz <i>or</i>            CF ≥ 4.95 MHz <i>and</i> Span ≤ 666 kHz <i>and</i>            RBW &lt; 28 kHz            All other conditions</p>	<p>"Fast Tuning" on page 303             "Best Close-in" on page 302             "Best Wide-offset" on page 303</p>
<p>All Other Models            Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 303 are actually the same as "Best Close-in" on page 302, but the rules are implemented this way so that the user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning</p>	<p>Span &gt; 12.34 MHz, <i>or</i>            RBW &gt; 250 kHz, <i>or</i>            Source Mode is set to "Tracking"             Center frequency is &lt; 25 kHz, <i>or</i>            CF ≥ 1 MHz <i>and</i> Span ≤ 141.4 kHz <i>and</i>            RBW ≤ 5 kHz             All other conditions</p>	<p>"Fast Tuning" on page 303             "Best Close-in" on page 302             "Best Wide-offset" on page 303</p>

In all the above cases:

- The RBW to be used in the calculations is the equivalent -3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

## Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP0	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
	2	Best Wide-offset	[offset > 800 kHz]
EP1	3	Fast Tuning	[same as Best Close-In]
	1	Best Close-in	[offset < 140 kHz]
	2	Best Wide-offset	[offset > 160 kHz]
EP2, EP3, EP5	3	Fast Tuning	[single loop]
	1	Best Close-in	[offset < 70 kHz]
	2	Best Wide-offset	[offset > 100 kHz]
EP4	3	Fast Tuning	[medium loop bw]
	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

## Noise Floor Extension

Lets you turn on/configure the **Noise Floor Extension** (NFE) function. Some Modes (such as Spectrum Analyzer Mode), support two states of NFE, Full and Adaptive. The **ON** state (in Modes which do not support Adaptive NFE) matches the **FULL** state (in Modes that *do* support Adaptive NFE).

In **ON** or **FULL** NFE, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

In Adaptive NFE, there is not the same dramatic visual impact on the noise floor as there is in Full NFE. Adaptive NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the NFE-off case; and when lots of averaging is being performed, the signal displays more like the full-NFE case.

Adaptive NFE (in Modes which support it) is recommended for general-purpose use. For fully ATE (automatic test equipment) applications, where the distraction of a person using the instrument is not a risk, Full NFE is recommended.

NFE works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to Average or Peak). It works best with extreme amounts of smoothing, and with the average detector, with the Average Type set to Power.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages. When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

**NOTE**

**Noise Floor Extension** has no effect unless the RF Input is selected, so it does nothing when **External Mixing** is selected.

In Modes that support Adaptive NFE, the default state of NFE is Adaptive (**ON**). In Modes that do not support Adaptive NFE, the default state of NFE is **OFF**. Prior to the introduction of Adaptive NFE (firmware version A.18.00), the default state of NFE was **OFF** for all Modes.

With the introduction of Adaptive NFE, the menu control is changed from **On|Off** to **Full|Adaptive|Off**. For SCPI Backwards Compatibility, the existing SCPI command to turn NFE on or off was retained, and a new command was added to set the state to turn Adaptive On or Off:

- `[ :SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0` is retained, default changed to On for modes that support Adaptive NFE
- `[ :SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0` is added (for certain Modes), default = On
- **FULL** = `:CORRection:NOISe:FLOor ON` plus `:CORRection:NOISe:FLOor:ADAPtive ON`

See "[More Information](#)" on page 308

Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOor ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, does not appear, but

	the SCPI command will be accepted without error but has no effect
Couplings	When NFE is enabled in any mode manually, a prompt will be displayed reminding you to perform the Characterize Noise Floor operation if it is needed. If NFE is enabled through SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by <b>Mode Preset</b> . Turned <b>ON</b> at startup and by <b>Restore Mode Defaults</b> in Modes that support Adaptive. Turned <b>OFF</b> at startup and by <b>Restore Mode Defaults</b> in Modes that do not support Adaptive
State Saved	No
Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOOr:ADAPtive ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOOr:ADAPtive?</code>
Example	Turn NFE <b>ON</b> (Full mode): <code>:CORR:NOIS:FLO ON</code>  Set to Adaptive: <code>:CORR:NOIS:FLO:ADAP ON</code>
Dependencies	Only available in Modes that support Adaptive NFE Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, but the SCPI command is accepted without error (but has no effect)
Couplings	For backwards compatibility, sending <code>:CORR:NOIS:FLO ON</code> turns NFE Adaptive <b>OFF</b> . To turn Adaptive <b>ON</b> , you must issue the commands in the proper order, as shown in the example above
Preset	Not affected by <b>Mode Preset</b> , but set to <b>ON</b> at startup and by <b>Restore Mode Defaults</b>
State Saved	No

### More Information

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus instrument noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is Average, and the Average Type is set to Power.

### 3 LTE & LTE-A TDD Mode

#### 3.2 Channel Power Measurement

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the instrument noise.

For best operation, the average detector and the power scale are recommended, as already stated. Peak detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals, so this combination is not recommended. Negative peak detection is not very useful, either. Sample detection works well, but is never better than the average detector because it doesn't smooth as well. The Normal detector is a combination of peak and negative peak behaviors, and works about as well as these.

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points will make the buckets longer.

For best operation, the power scale (Average Type = Power) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE, the NFE does an even better job than using the log scale ever could. Using NFE with the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of  $-174$  dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that is in excess of the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

Adaptive NFE provides an alternative to fully-on and -off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement—those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the NFE-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

On instruments with the NF2 license installed, the calibrated Noise Floor used by Noise Floor Extensions should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, *and* once every calendar year. The control to perform this is located in the **System, Alignments, Advanced** menu. If you have not done this yourself at the recommended interval, then when you turn on Noise Floor Extensions, the instrument will prompt you to do so with a dialog that says:

*“This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week”*

If you **Cancel**, you will be prompted again the next time you turn NFE **ON**. If you **Postpone**, you will be prompted again after a week passes and you then turn NFE **ON**.

### 3.2.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, **"Global Center Freq"** on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

### Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "Restore Defaults" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:CENTer ALL   NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE
Preset	OFF
Backwards Compatibility SCPI	:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF :GLOBal:FREQuency:CENTer[:STATe]?

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "Restore Defaults" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:EMC:STANdard ALL   NONE :INSTrument:COUPle:EMC:STANdard?
Example	:INST:COUP:EMC:STAN ALL :INST:COUP:EMC:STAN?
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	<b>ON OFF</b>

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTRument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

## 3.2.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

### 3.2.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

## Sweep Time

Controls the time the instrument takes to sweep the current frequency span in swept measurements, displays the sweep time in swept measurements, and displays the equivalent Sweep Time in FFT measurements.

When **Sweep Time** is in Auto, the instrument computes a time that will give accurate measurements based on other settings, such as RBW and VBW.

You can select a shorter sweep time to improve the measurement throughput (with some potential unspecified accuracy reduction), but the **Meas Uncal** indicator will appear if the sweep time you set is less than the calculated Auto Sweep time.

You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters.

---

NOTE

Significantly faster sweep times are available with Option FS1.

---

NOTE

The **Meas Uncal** (measurement uncalibrated) warning is displayed in the Status Bar at the bottom of the screen when the manual Sweep time entered is faster than the time computed by the instrument's Sweep time equations, that is, the Auto Sweep Time. The instrument's computed Sweep time will provide accurate measurements; if you sweep faster than this your measurements may be inaccurate. A **Meas Uncal** condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW.

---

NOTE

On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate. It is the measurement's turnaround time, which is the sum of signal acquisition time, FFT time, and other overhead time, to complete the entire span of the measurement. If you need to specify the same "Sweep Time" as you would for sweeping hardware, send `[ :SENSe ] : <meas> : SWEep : TIME <time>`. The measurement emulates the "Sweep Time" effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using Minimum Acquisition Time, which provides better control.

---

Remote Command `[ :SENSe ] : <meas> : SWEep : TIME <time>`

`[ :SENSe ] : <meas> : SWEep : TIME ?`

Example Channel Power measurement:

`:CHP : SWE : TIME 25ms`

`:CHP : SWE : TIME ?`

Notes In the ACP measurement in WCDMA Mode, this parameter is preset by **Meas Method** selection. Preset

---

	<p>values are as follows:</p> <ul style="list-style-type: none"> <li>- IBW: 29 ms</li> <li>- IBWR: 108 ms</li> <li>- FAST 7.5 ms</li> </ul>				
Dependencies	<p>On non-sweeping hardware, this control is grayed out, and the Auto/Man toggle disappears. The read-only control shows estimated sweep time</p> <p>In those instruments, "<a href="#">Minimum Acquisition Time</a>" on page 2127 is available</p>				
Couplings	<p>Coupled to <b>Span</b>, <b>RBW</b>, <b>VBW</b>, and <b>Sweep Time Rules</b> when <b>Sweep Time</b> is set to Auto; <b>Sweep Time</b> changes when these parameters are changed</p> <p>When you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b></p>				
Preset	<p>Automatically Calculated unless noted below</p> <p>WCDMA Mode</p> <ul style="list-style-type: none"> <li>- Channel Power: 1.0 msOBW: 32.6 ms</li> <li>- ACP: 29 ms</li> </ul>				
State Saved	Saved in instrument state				
Min	<p>Other than non-sweeping hardware: Typically, 1 ms</p> <p>Non-sweeping hardware: N/A</p> <p>In the ACP measurement, when <b>Meas Method</b> is <b>Fast Power</b>, the minimum sweep time is span-dependent and automatically calculated</p>				
Max	<p>Other than non-sweeping hardware: 4000 s</p> <p>Non-sweeping hardware: N/A</p>				
Annotation	<p>The sweep time is displayed in the lower-right corner of the screen. The number of points is displayed parenthetically, as:</p> <p>Sweep 13.3 ms (1001 points)</p> <p>A “#” mark appears before “Sweep” in the annotation when it is switched from Auto to Manual coupling</p>				
Status Bits/OPC dependencies	<p>Meas Uncal is Bit 0 in the register:</p> <p><b>STATus:QUESTionable:INTEgrity:UNCalibrated</b></p> <p>Auto Function</p>				
Remote Command	<p><b>[ :SENSe]:&lt;meas&gt;:SWEep:TIME:AUTO OFF   ON   0   1</b></p> <p><b>[ :SENSe]:&lt;meas&gt;:SWEep:TIME:AUTO?</b></p>				
Example	<p>Channel Power measurement:</p> <p><b>:CHP:SWE:TIME:AUTO OFF</b></p> <p><b>:CHP:SWE:TIME:AUTO?</b></p>				
Preset	<table border="0"> <tr> <td>WCDMA Mode</td> <td><b>OFF</b></td> </tr> <tr> <td>All others</td> <td><b>ON</b></td> </tr> </table>	WCDMA Mode	<b>OFF</b>	All others	<b>ON</b>
WCDMA Mode	<b>OFF</b>				
All others	<b>ON</b>				

## Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides Span into multiple chunks if needed. Therefore, the total signal acquisition time for the entire Span is:

$$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$$

When in Auto, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<pre>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME &lt;time&gt; [ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME? &lt;meas&gt; is the identifier for the current measurement; any one of CHPower-  ACPower OBWidth MONitor</pre>
Example	<pre>Channel Power measurement :CHP:SWE:ACQ:TIME 500 ms :CHP:SWE:ACQ:TIME?</pre>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to <b>Span</b> , <b>RBW</b> , and <b>VBW</b> when in the Auto state When you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b>
Preset	Automatically calculated
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks
	Auto Function
Remote Command	<pre>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME:AUTO OFF   ON   0   1 [ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME:AUTO?</pre>

---

	<code>&lt;meas&gt;</code> is the identifier for the current measurement; any one of <code>CHPower-</code> <code> ACPower OBWidth MONitor</code>
Example	Channel Power measurement: <code>:CHP:SWE:ACQ:TIME:AUTO OFF</code>
Preset	<code>ON</code>

---

## Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 316

---

Remote Command	<code>:INITiate:CONTinuous OFF   ON   0   1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into <b>Single</b> measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code>  Put instrument into <b>Continuous</b> measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	<code>ON</code>  Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to <code>ON</code> , but <code>*RST</code> sets <code>:INIT:CONT</code> to <code>OFF</code>
State Saved	Saved in instrument state
Annunciation	The <b>Single/Continuous</b> icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> <li>- A line with an arrow is <b>Single</b></li> <li>- A loop with an arrow is <b>Continuous</b></li> </ul>
Backwards Compatibility Notes	X-Series A-models had <b>Single</b> and <b>Cont</b> hardkeys in place of the <b>SweepSingleCont</b> softkey. In the X-Series A-models, if in single measurement, the <b>Cont</b> hardkey (and <code>INIT:CONT ON</code> ) switched to continuous measurement, but never restarted a measurement and never reset a sweep  X-Series B-models have a <b>Cont/Single</b> toggle control instead of <b>Single</b> and <b>Cont</b> hardkeys, but it is still true that, if in single measurement, the <b>Cont/Single</b> toggle control never restarts a measurement and never resets a sweep

### More Information

Continuous Mode	The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the <b>Average/Hold Num</b> , the count stops incrementing, but the instrument
-----------------	---

### 3 LTE & LTE-A TDD Mode

#### 3.2 Channel Power Measurement

	keeps sweeping
	See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used both before and after the <b>Average/Hold Num</b> is reached. The trigger condition must be met prior to each sweep
	The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b> , <b>Max Hold</b> , or <b>Min Hold</b>
Single Mode	The instrument takes a single sweep when in <b>Single</b> mode, or if in average or Max/Min Hold, or if there is a <b>Waterfall</b> window displayed, it takes multiple sweeps until the average/hold count reaches the <b>Average/Hold Num</b> , then the count stops incrementing, and the instrument stops sweeping
	See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used. The trigger condition must be met prior to the sweep
	The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b> , <b>Max Hold</b> , or <b>Min Hold</b>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- `:INIT:CONT 1` has no effect
- `:INIT:CONT 0` places the instrument in Single Sweep but has no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state

See "[Restart](#)" on page 2279 for details of `:INIT:IMMEDIATE`.

If the instrument is already in **Single** sweep, `:INIT:CONT OFF` has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

## Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See "[More Information](#)" on page 318

Remote Command	<code>:INITiate[:IMMediate]</code> <code>:INITiate:REStart</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATUS:QUEStionable</code> register bit 9 ( <code>INTegrity</code> sum) is cleared The <code>SWEEPING</code> bit is set The <code>MEASURING</code> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the <b>Restart</b> hardkey and the <code>:INIT:REST</code> command restarted trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> In X-Series, the <b>Restart</b> hardkey and the <code>:INIT:REST</code> command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command `:CALC:AVER:TCON UP`.

## Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
<b>Clear/Write</b> pressed (even if already in Clear/Write)	Set to mintracevalue
<b>Max Hold</b> pressed (even if already in Max Hold)	Set to mintracevalue

Event	Trace Effect
<b>Min Hold</b> pressed (even if already in Min Hold)	Set to maxtracevalue
<b>Trace Average</b> pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
<b>Restart</b> pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

## Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count  $k$  to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

## Averaging

The weighting factor used for averaging is  $k$ . This  $k$  is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This  $k$  is used for comparisons with  $N$ , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold,  $K$ , shows the count for the sweep (data acquisition) in progress.  $K = k + 1$ , with a limit of  $N$ . The displayed value  $K$  changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

### Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>
Notes	<p>If <code>:INIT:CONT</code> is <b>ON</b>, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If <code>:INIT:CONT</code> is <b>OFF</b>, then <code>:INIT:IMM</code> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, <code>:ABORT</code> is equivalent to the <b>Restart</b> key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared, <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The <code>STATUS:QUEStionable</code> register bit 9 (<b>INTEgrity</b> sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by <code>:ABORT</code>, the Abort command will cause the <code>*OPC</code> query to return true</p>

### Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

This value is also displayed in the result trace window.

The value returned is the estimated turnaround time of each measurement cycle, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire span of each measurement cycle.

Remote Command	<code>[ :SENSe]:&lt;meas&gt;:SWEep:ETIME?</code>
	<code>&lt;meas&gt;</code> is the identifier for the current measurement; any one of <code>CHPower- ACPower OBwidth MONitor</code>
Example	Channel Power measurement

	<code>:CHP:SWE:ETIME?</code>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

### 3.2.9.2 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument, such as Sweep Rules.

#### Sweep Time Rules

Switches the instrument between **NORMa1** and **ACCuracy** sweep states.

Setting **Auto Sweep Time** to **ACCuracy** results in slower sweep times (usually about three times as long) but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **ACCuracy**.

Additional amplitude errors that occur when **Auto Sweep Time** is set to **NORMa1** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **NORMa1** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **NORMa1** on a **Preset**. This means that in the **Preset** state, instrument amplitude accuracy specifications do not apply.

Remote Command	<code>[ :SENSe ] :CHPower :SWEep :TIME :AUTO :RULes NORMa1   ACCuracy</code> <code>[ :SENSe ] :CHPower :SWEep :TIME :AUTO :RULes?</code>
Example	<code>:CHP:SWE:TIME:AUTO:RUL NORM</code> <code>:CHP:SWE:TIME:AUTO:RUL?</code>
Dependencies	Does not appear in Spectrum Analyzer Mode in VXT model M9421A
Preset	<b>NORMa1</b>
State Saved	Saved in instrument state
Range	<b>NORMa1</b>   <b>ACCuracy</b>

#### Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of **Points** is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time. However, it can slightly impact the trace processing time and therefore the overall measurement

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available to the user will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the instrument. Since markers are read at the point location, the marker reading may change. The sweep time resolution will change. Trace data for all the traces will be cleared and, if **"Sweep/Measure" on page 2282** is **Cont**, a new trace taken. If any trace is in average or hold, the averaging starts over.

Due to sweep time quantization issues, the knob and up/down keys cannot be used to adjust the number of points.

When in a split screen display each window may have its own value for points.

When sweep points is changed, an informational message is displayed, "Sweep points changed, all traces cleared."

Remote Command	<code>[ :SENSe]:CHPower:SWEEp:POINts &lt;integer&gt;</code> <code>[ :SENSe]:CHPower:SWEEp:POINts?</code>
Example	<code>:CHP:SWE:POIN 501</code> <code>:CHP:SWE:POIN?</code>
Dependencies	Not available when Signal ID is <b>ON</b> in External Mixing Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given Not displayed in Modes that do not support Swept
Couplings	Whenever the number of sweep points change: <ul style="list-style-type: none"> <li>- All trace data is erased</li> <li>- Any traces with Update Off also switch to Display Off (equivalent to switching from View to Blank in older instruments)</li> <li>- Sweep time is re-quantized</li> <li>- Any limit lines that are on will be updated</li> <li>- If averaging/hold is on, averaging/hold starts over</li> </ul> <p>The resolution of setting the sweep time depends on the number of points selected</p>
Preset	1001
State Saved	Saved in instrument state
Min	11
Max	20001
Annotation	On second line of annotations, in lower right corner in parenthesis behind the sweep annotation

## IF Dithering

Lets you turn IF Dithering on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to enhance the rejection of images and internally-generated spurious signals.

Remote Command	<code>[ :SENSe]:SWEep:IF:DITHer OFF   ON   0   1</code> <code>[ :SENSe]:SWEep:IF:DITHer?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	<b>OFF</b>
State Saved	Saved in instrument state

## Image Protection

Lets you turn IF Protection on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to detect and suppress images and spurs that may be present in non-preselected hardware.

IF Protection takes two sweeps and by correlating the data between them, provides a single, correct power-versus-frequency trace.

Remote Command	<code>[ :SENSe]:SWEep:IMAGeProt OFF   ON   0   1</code> <code>[ :SENSe]:SWEep:IMAGeProt?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	<b>ON</b>
State Saved	Saved in instrument state

## 3.2.10 Trace

Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces. The Trace Control tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

### 3.2.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

**Select Trace** appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the <b>Trace</b> menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none"> <li>- In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View</li> <li>- When you turn on Image Suppress, Update turns off for all traces except the selected trace</li> </ul> For the ACP measurement, when <b>Meas Method</b> is <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> , <b>Select Trace</b> is disabled
Preset	Trace 1
State Saved	Yes

### 3.2.10.2 Trace Control

The controls on this tab allow you to set the "**Trace Type**" on page 2137 and its update mode.

There are four Trace Types:

- **Clear/Write**
- **Trace Average**
- **Max Hold**
- **Min Hold**

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "**View/Blank**" on page 2142 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

### Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	<b>WRITE</b>	:TRAC2:TYPE <b>WRIT</b>	See: " <b>Clear/Write</b> " on page 328
Trace Average	<b>AVERage</b>	:TRAC2:TYPE <b>AVER</b>	See: " <b>Trace Average</b> " on page 329

Option	Parameter	SCPI Example	Details
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: "Max Hold" on page 330
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: "Min Hold" on page 330

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "**View/Blank**" on page 2142 state must be set to **Active** (**Update: ON, Display: ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "**Trace Mode Backwards Compatibility Commands**" on page 326

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITE   AVERage   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE WRITE   AVERage   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<pre>:TRAC:TYPE WRIT</pre> <pre>:TRAC:TYPE?</pre>
Couplings	<p>Selecting a <b>Trace Type</b> (by pressing any of the Trace Type selections or sending <b>:TRAC:TYPE</b>) sets the Trace to <b>Active</b> (<b>Update: ON, Display: OFF</b>), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<b>[ :SENSe ]:&lt;meas&gt;:DETEctor:AUTO?</b>), Detector (<b>[ :SENSe ]:&lt;meas&gt;:DETEctor[:FUNction]?</b>) switches aligning with the switch of this parameter: "<b>NORMal</b>" with <b>WRITE</b> (Clear Write), "<b>AVERage</b>" with <b>AVERage</b>, "<b>POSitive</b> (peak)" with <b>MAXHold</b>, and "<b>NEGative</b> (peak)" with <b>MINHold</b></p>
Preset	<p>Swept SA and Monitor Spectrum: <b>WRITE</b></p> <p>All other measurements: <b>AVERage</b></p> <p>Following <b>Preset</b>, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

### Trace Mode Backwards Compatibility Commands

In earlier instruments, the "Trace Modes" were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under "[View/Blank](#)" on page 2142.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The `:TRACe:MODE` command is retained for backwards compatibility, and the `:TRACe:TYPE`, `:TRACe:UPDate` and `:TRACe:DISPlay` commands introduced for ongoing use. The old Trace Modes are selected using `:TRAC:MODE`, whose parameters are mapped into calls to `:TRACe:TYPE`, `:TRACe:UPDate` and `:TRACe:DISPlay`, and the old global Averaging command `[ :SENSe ]:AVERage[ :STATe ]` is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or `:INIT:IMM`, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	<code>WRITE</code>
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	<code>:TRACe[1] 2 ... 6:MODE WRITE   MAXHold   MINHold   VIEW   BLANK</code> <code>:TRACe[1] 2 ... 6:MODE?</code>
Backwards Compatibility Notes	<p>The legacy <code>:TRACe:MODE</code> command is retained for backwards compatibility. In conjunction with the legacy <code>:AVERage</code> command, it works as follows:</p> <ul style="list-style-type: none"> <li>- <code>:AVERage ON OFF</code> sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the <code>[ :SENSe ]:AVERage[ :STATe ]</code> command description below</li> <li>- <code>:TRACe:MODE WRITE</code> sets <code>:TRACe:TYPE WRITE</code> (Clear/Write) unless average is true, in which case it sets it to <code>:TRACe:TYPE AVERage</code>. It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> <li>- <code>:TRACe:MODE MAXHold</code> sets <code>:TRACe:TYPE MAXHold</code> (Max Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> <li>- <code>:TRACe:MODE MINHold</code> sets <code>:TRACe:TYPE MINHold</code> (Min Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> <li>- <code>:TRACe:MODE VIEW</code> sets <code>:TRACe:UPDate OFF</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> </ul>

- `:TRACe:MODE BLANK` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay OFF`, for the selected trace

The query returns the same value as `:TRACe:TYPE?`, meaning that if you set `:TRACe:MODE:VIEW` or `:TRACe:MODE:BLANK`, the query response will not be what you sent

`:TRACe[n]:MODE` was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new `:TRACe:TYPE` command should be used in the future, but `:TRACe:MODE` is retained to provide backwards compatibility

In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has

As the **Average/Hold Number** now affects **Min Hold** and **Max Hold**, the operations that restart Averaging (for example, the **Restart** key) now also restart **Min Hold** and **Max Hold**

As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does

Also, previous to X-Series:

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	<code>OFF</code>
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[ :SENSe]:AVERage[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:AVERage[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[ :SENSe]:AVERage[:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[ :SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

## Trace Type Details

### Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

### Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count  $k$  is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated
- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

## Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending `:TRAC:TYPE MAXH` for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

## Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending `:TRAC:TYPE MINH` for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

## Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 2137 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:


- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold

## View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

<b>Active</b>	Update and Display both <b>ON</b>
<b>View</b>	Update <b>OFF</b> ; Display <b>ON</b>
<b>Blank</b>	Update <b>OFF</b> ; Display <b>OFF</b>
<b>Background</b>	Update <b>ON</b> , Display <b>OFF</b> Allows a trace to be blanked <i>and</i> continue to update "in the background", which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

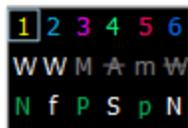

See: "[More Information](#)" on page 333

---

Notes	For the commands to control the two variables, Update and Display, see " <a href="#">Trace Update State On/Off</a> " on page 332 and " <a href="#">Trace Display State On/Off</a> " on page 332 below
Dependencies	When Signal ID is on, this key is grayed-out

---

**Couplings**

Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in **Active** (Update **ON** and Display **ON**), even if that trace type was already selected

Selecting a detector for a trace (pressing the key or sending [ :SENS ] :DET :TRAC) puts the trace in **Active** (Update**ON** and Display**ON**), even if that detector was already selected

Selecting a "Math Function" on page 1145 other than **OFF** for a trace (pressing the key or sending the equivalent command) puts the trace in **Active** (Update**ON** and Display**ON**), even if that Math Mode was already selected

Loading a trace from a file puts that trace in **View** regardless of the state it was in when it was saved; as does being the target of a **Copy** or a participant in an **Exchange**

### Trace Update State On/Off

**Remote Command**

For Swept SA Measurement (in SA Mode):  
`:TRACe[1]|2|...|6:UPDate[:STATe] ON | OFF | 1 | 0`  
`:TRACe[1]|2|...|6:UPDate[:STATe]?`

For all other measurements:  
`:TRACe[1]|2|3:<meas>:UPDate[:STATe] ON | OFF | 1 | 0`  
`:TRACe[1]|2|3:<meas>:UPDate[:STATe]?`

where <meas> is the identifier for the current measurement

**Example**

Make trace 2 inactive (stop updating):  
`:TRAC2:UPD 0`

**Couplings**

Whenever you set **Update** to **ON** for any trace, the **Display** is set to **ON** for that trace

**Preset**

For Swept SA Measurement (in SA Mode):  
`1|0|0|0|0|0`

**ON** for Trace 1; **OFF** for 2–6

For all other measurements:  
`1|0|0`

**ON** for Trace 1; **OFF** for 2 & 3

**State Saved**

Saved in instrument state

### Trace Display State On/Off

**Remote Command**

For Swept SA Measurement (in SA Mode):  
`:TRACe[1]|2|...|6:DISPlay[:STATe] ON | OFF | 1 | 0`  
`:TRACe[1]|2|...|6:DISPlay[:STATe]?`

For all other measurements:  
`:TRACe[1]|2|3:<meas>:DISPlay[:STATe] ON | OFF | 1 | 0`  
`:TRACe[1]|2|3:<meas>:DISPlay[:STATe]?`

where <meas> is the identifier for the current measurement

Example	Make trace 1 visible: <code>:TRAC2:DISP 1</code>  Blank trace 3: <code>:TRAC3:DISP 3</code>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	For Swept SA Measurement (in SA Mode): <code>1 0 0 0 0 0</code> <b>ON</b> for Trace 1; <b>OFF</b> for 2–6 For all other measurements: <code>1 0 0</code> <b>ON</b> for Trace 1; <b>OFF</b> for 2 & 3
State Saved	Saved in instrument state

### More Information

When a trace becomes inactive, any update from the `:SENSe` system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

### 3.2.10.3 Math

Lets you turn on and configure Trace Math functions.

#### Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "Operand 1 / Operand 2" on page 1151 controls.

- See "How trace math is processed" on page 338

---

Remote Command For option details, see "[Trace Math Options](#)" on page 336

For Swept SA Measurement (in SA Mode):

```
:CALCulate:MATH <trace_num>, PDIFference | PSUM | LOFFset | LDIFference |
OFF, <trace_num>, <trace_num>, <real>,<real>
:CALCulate:MATH? <trace_num>
```

where <trace\_num> is any one of:

```
TRACE1|...|TRACE6
```

For all other measurements:

```
:CALCulate:<meas>:MATH <trace_num>, PDIFference | PSUM | LOFFset |
LDIFference | OFF, <trace_num>, <trace_num>, <real>,<real>
:CALCulate[:<meas>]:MATH? <trace_num>
```

where:

<meas> is the identifier for the current measurement, and

<trace\_num> is any one of:

```
TRACe1|TRACe2|TRACe3
```

Note that the format of the **TRACe<n>** parameter differs from that for the Swept SA Measurement

---

Example

```
:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0
```

Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2

```
:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0
```

Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2

```
:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0
```

Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB

```
:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00
```

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

	<p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <p><code>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</code></p> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> <li>- Set 1 defines the “result trace”: <code>TRACE1  ...  TRACE6</code></li> <li>- Set 2 defines the “function”: <code>PDIFference  PSUM LOFFset  LDIFference OFF</code></li> <li>- Set 3 is a “trace operand” (1): <code>TRACE1  ...  TRACE6</code></li> <li>- Set 4 is a “trace operand” (2): <code>TRACE1  ...  TRACE6</code></li> <li>- Set 5 defines the “Log Offset” (in dB)</li> <li>- Set 6 defines the “Log Difference Reference” (in dBm)</li> </ul> <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if <b>Normalize</b> is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	<p>When a math function is changed for a trace, that trace is set to Display = <b>ON</b>; and Update = <b>ON</b></p>
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p><code>OFF,TRACE5,TRACE6,0,0   OFF,TRACE6,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0  </code>  <code>OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE4,0,0   OFF,TRACE4,TRACE5,0,0</code></p> <p>For all other measurements:</p> <p><code>OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0</code></p>
State Saved	<p>The trace math function for each trace is saved in instrument state</p>
Annunciation	<p>An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on; and the function is annotated on the trace if Trace Annotation is on</p>
Status Bits/OPC dependencies	<p><b>*OPC</b> can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep</p>

## Trace Math Options

### IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

---

The Trace Math functions are:

### Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log_{10}(1/10)(\text{FirstTrace}) - 10(1/10)(\text{SecondTrace})$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

### Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$DestinationTrace = 10 \log_{10}(1/10)(FirstTrace) + 10(1/10)(SecondTrace)$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

### Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$DestinationTrace = FirstTrace + Offset$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

*Example:* If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

### Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$DestinationTrace = (FirstTrace - SecondTrace) + Reference$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

*Example:* If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at -5 dBm, and the reference is -25 dBm, then the destination trace will be -15 dBm.

*Example:* If the first operand trace 1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

If neither of the above is true for a given point, then:


- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

### How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

3 LTE & LTE-A TDD Mode  
 3.2 Channel Power Measurement

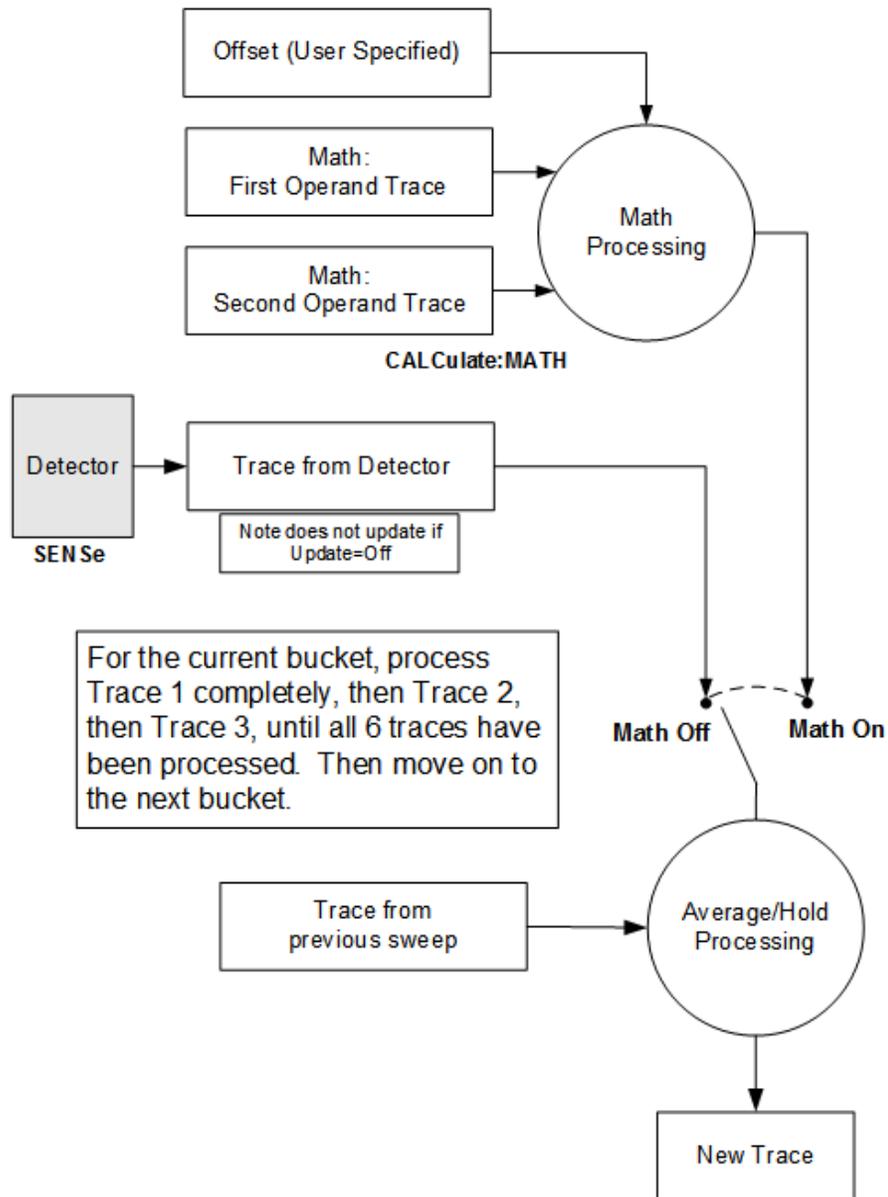

**NOTE ABOUT OFFSETS:** When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

## Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <pre><b>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</b></pre> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <pre><b>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</b></pre>
Notes	See " <a href="#">Math Function</a> " on page 1145 for how to specify Operands 1 and 2 using <b>:CALCulate:MATH</b>
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

## Offset

Used by the Log Offset math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

## Reference

Used by the Log Diff math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

### 3.2.10.4 Detector

Lets you choose and configure detectors for the selected trace.

## Detector

Selects a detector to be used by the instrument for the current measurement. The following choices are available:

Option	Parameter	Detector Behavior
Auto	n/a	The detector selected depends on marker functions, trace

Option	Parameter	Detector Behavior
		functions, average type, and the trace averaging function This option is set using " <a href="#">Detector Select Auto/Man</a> " on page 343
Normal	<code>NORMa1</code>	The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
Average	<code>AVERAge</code>	The detector determines the average of the signal within the sweep points, using RMS averaging
Peak (Positive)	<code>POSitive</code>	The detector determines the maximum of the signal within the sweep points
Sample	<code>SAMPle</code>	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
Negative Peak	<code>NEGative</code>	The detector determines the minimum of the signal within the sweep points
RMS	<code>RMS</code>	Equivalent to <b>Average</b> . See Notes below

Because they may not find a spectral component's true peak, neither **Average** nor **Sample** detectors measure amplitudes of CW signals as accurately as **Peak** or **Normal**, but they do measure noise without the biases of peak detection.

Remote Command `[ :SENSe]:CHPower:DETEctor[:FUNction] NORMa1 | AVERAge | POSitive | SAMPle | NEGative | RMS`  
`[ :SENSe]:CHPower:DETEctor[:FUNction]?`

Example `:CHP:DET NORM`  
`:CHP:DET?`  
Set the detector to **Average**, which uses RMS averaging, so this is equivalent to selecting an **RMS** detector:  
`:CHP:DET RMS`

Notes The query returns a name that corresponds to the detector type, as shown below  
The **RMS** selection sets the detector type to **AVERAge** with **RMS** averaging. Therefore, if **RMS** has been selected, the query returns **AVER**

String Returned	Definition
<code>NORM</code>	Normal
<code>AVER</code>	Average (RMS)
<code>POS</code>	Peak
<code>SAMP</code>	Sample
<code>NEG</code>	Negative Peak

Couplings When the **Detector** setting is **Auto**, switches to align with "[Trace Type](#)" on page 2137:  
– `NORMa1` with Clear Write  
– `AVERAge` with `AVERAge`

---

- POSitive (peak) with MAXHold
- NEGative (peak) with MINHold

---

Preset	AVERage
State Saved	Saved in instrument state
Range	NORMal   AVERage   POSitive   SAMPlE   NEGative   RMS

### Detector Select Auto/Man

Sets the Detector mode to **Auto** or **Manual**. In **Auto**, the proper detector is chosen based on rules that take into account the measurement settings and other instrument settings.

When you select any detector explicitly, this setting switches automatically to **Man** (manual).

---

Remote Command	[ :SENSe ] :CHPower:DETEctor:AUTO ON   OFF   1   0
Example	:CHP:DET:AUTO ON :CHP:DET:AUTO?
Couplings	When the <b>Detector</b> setting is <b>Auto</b> , switches to align with " <a href="#">Trace Type</a> " on page 2137: <ul style="list-style-type: none"> <li>- NORMal with Clear Write</li> <li>- AVERage with AVERage</li> <li>- POSitive (peak) with MAXHold</li> <li>- NEGative (peak) with MINHold</li> </ul>
Preset	ON
State Saved	Yes

### 3.2.10.5 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

### From Trace

Selects the trace to be copied to or exchanged with the "[To Trace](#)" on page 1153 when a "[Copy](#)" on page 1153 or "[Exchange](#)" on page 1154 is performed

---

Preset 1

## To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 2

## Copy

Executes a Trace Copy based on the **"From Trace" on page 1153** and **"To Trace" on page 1153** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

---

Remote Command For Swept SA Measurement (in SA Mode):  
`:TRACe:COPIY TRACE1 | ... | TRACE6, TRACE1 | ... | TRACE6`  
 For all other measurements:  
`:TRACe:<meas>:COPIY TRACe1 | TRACe2 | TRACe3, TRACe1 | TRACe2 | TRACe3`  
 where **<meas>** is the identifier for the current measurement  
 Note that the format of the **TRACe<n>** parameter differs from that for the Swept SA Measurement

---

Example Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On  
`:TRAC:COPIY TRACE1,TRACE3`

---

Notes The command is of the form:  
`:TRACe:COPIY <source_trace>,<dest_trace>`

---

Dependencies When Signal ID is on, this key is grayed-out

---

Couplings The destination trace is put in **View** (Update = Off, Display = On) after the copy

---

Preset For Swept SA Measurement (in SA Mode):  
`TRACE1, TRACE2`  
 For all other measurements:  
`TRACe1, TRACe2`

## Exchange

Executes a Trace Exchange based on the **"From Trace" on page 1153** and **"To Trace" on page 1153** parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

### 3 LTE & LTE-A TDD Mode

#### 3.2 Channel Power Measurement

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	For Swept SA Measurement (in SA Mode): <code>:TRACe:EXCHange TRACE1   ...   TRACE6, TRACE1   ...   TRACE6</code> For all other measurements: <code>:TRACe:&lt;meas&gt;:EXCHange TRACe1   TRACe2   TRACe3, TRACe1   TRACe2   TRACe3</code> where <meas> is the identifier for the current measurement Note that the format of the <code>:TRACe&lt;n&gt;</code> parameter differs from that for the Swept SA Measurement
Example	Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON: <code>:TRAC:EXCH TRACE1,TRACE2</code>
Notes	The command is of the form: <code>:TRACe:EXCHange &lt;trace_1&gt;,&lt;trace_2&gt;</code>
Couplings	Both traces are put in <b>View</b> (Update=Off, Display=On) after the exchange

#### Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<code>:TRACe[:&lt;meas&gt;]:PRESet:ALL</code>
Example	<code>:TRAC:PRE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

#### Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads `mintracevalue` into all of the points for all traces, except traces in **Min Hold**, in which case it loads `maxtracevalue`, even if **Update = OFF**.

Remote Command	<code>:TRACe[:&lt;meas&gt;]:CLEar:ALL</code>
Example	<code>:TRAC:CLE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

#### 3.2.10.6 Advanced

Contains controls for setting advanced trace functions of the instrument.

## Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCh** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<pre>:CALCulate:&lt;meas&gt;:MTRace TRACe1   TRACe2   TRACe3 :CALCulate:&lt;meas&gt;:MTRace? &lt;meas&gt; is the identifier for the current measurement; any one of CHPower   ACPower   OBWidth   SEMask   SPURious   PVTime</pre>
Example	<pre>Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?</pre>
Dependencies	In the ACP measurement, this control is grayed-out when <b>Meas Method</b> is set to <b>RBW</b> or <b>FAST</b> , and only Trace 1 is enabled
Preset	<b>TRACe1</b>
State Saved	No
Range	Trace 1   Trace 2   Trace 3

## 3.3 Occupied BW Measurement

This measurement computes and displays the bandwidth occupied by a given percentage of the total mean power of a signal.

### Measurement Commands

The general functionality of "CONFigure" on page 2997, "INITiate" on page 2998, "FETCh" on page 2998, "MEASure" on page 3000, and "READ" on page 2999 are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

Note that, in general, `:CONF:<Measurement>` resets the specified measurement settings to their defaults. X-Series permits the addition of the `NDEFault` node to the command, which prevents a measurement preset after a measurement switch.

The tables below list setup commands for this measurement and queries to retrieve results.

Command	Function
<code>:INITiate:OBwidth</code>	Initiates a trigger cycle for the <b>OBW</b> measurement, but does not return any data. You must then use <code>:FETC:OBW[n]?</code> to retrieve data
<code>:CONFigure?</code>	Does not change any measurement settings
<code>:CONFigure:OBwidth</code>	Returns the long form name of current measurement, in this case, <b>OBwidth</b>
<code>:CONFigure:OBwidth</code>	Selects <b>OBW</b> measurement with Meas Setup settings in preset state – same as Meas Preset
<code>:CONFigure:OBwidth:NDEFault</code>	Selects <b>OBW</b> measurement <i>without</i> affecting settings

The following queries are used to retrieve data. The type of data returned depends on the value of *n*, as detailed in "Remote Command Results" on page 348.

Command	Function
<code>:FETCh:OBwidth[n]?</code>	Retrieves the data defined by <i>n</i>
<code>:MEASure:OBwidth[n]?</code>	Switches to <b>OBW</b> measurement, restores default values, starts the measurement, then retrieves the data defined by <i>n</i>
<code>:READ:OBwidth[n]?</code>	Starts the measurement, then retrieves the data defined by <i>n</i>

### Backwards Compatibility Queries

Command	Return Value
<code>:FETCh:OBwidth:OBwidth?</code>	Returns the Occupied Bandwidth (Hz)
<code>:MEASure:OBwidth:OBwidth?</code>	
<code>:READ:OBwidth:OBwidth?</code>	

Command	Return Value
:FETCh:OBWidth:FERRor?	Returns the Transmit Frequency Error (Hz)
:MEASure:OBWidth:FERRor?	
:READ:OBWidth:FERRor?	
:FETCh:OBWidth:XDB?	Returns the xdB Bandwidth (Hz)
:MEASure:OBWidth:XDB?	
:READ:OBWidth:XDB?	

### Remote Command Results

The following table describes the results returned by the **FETCh**, **MEASure**, and **READ** queries listed above, according to the index value **n**.

n	Results Returned																								
1, or not specified	Returns scalar results, in the following order: <table border="1" data-bbox="381 882 1404 1281"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Occupied Bandwidth</td> <td>Hz</td> </tr> <tr> <td>2</td> <td>Total Power or OBW Power Power reference type can be changed with "Power Ref" on page 420 in Meas Setup</td> <td>dBm</td> </tr> <tr> <td>3</td> <td>Span</td> <td>Hz</td> </tr> <tr> <td>4</td> <td>Spectrum Trace Points</td> <td>points</td> </tr> <tr> <td>5</td> <td>Res BW</td> <td>Hz</td> </tr> <tr> <td>6</td> <td>Transmit Frequency Error</td> <td>Hz</td> </tr> <tr> <td>7</td> <td>7. x dB Bandwidth</td> <td>Hz</td> </tr> </tbody> </table>	#	Item	Unit	1	Occupied Bandwidth	Hz	2	Total Power or OBW Power Power reference type can be changed with "Power Ref" on page 420 in Meas Setup	dBm	3	Span	Hz	4	Spectrum Trace Points	points	5	Res BW	Hz	6	Transmit Frequency Error	Hz	7	7. x dB Bandwidth	Hz
#	Item	Unit																							
1	Occupied Bandwidth	Hz																							
2	Total Power or OBW Power Power reference type can be changed with "Power Ref" on page 420 in Meas Setup	dBm																							
3	Span	Hz																							
4	Spectrum Trace Points	points																							
5	Res BW	Hz																							
6	Transmit Frequency Error	Hz																							
7	7. x dB Bandwidth	Hz																							
2	Returns the frequency-domain spectrum trace (data array) for the entire frequency range being measured for Trace 1																								
3	Only available in LTEAFDD, LTEATDD, 5GNR Modes 1. Number of active carriers Returns number of active carriers within Span in Auto detected mode, otherwise the command is out of scope																								
4	Returns OBW Boundaries table results in the following order: <table border="1" data-bbox="381 1575 1404 1795"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit, if any</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Occupied bandwidth</td> <td>Hz</td> </tr> <tr> <td>2</td> <td>Total Power or OBW Power Power reference type can be changed with "Power Ref" on page 420 in Meas Setup</td> <td>dBm</td> </tr> </tbody> </table>	#	Item	Unit, if any	1	Occupied bandwidth	Hz	2	Total Power or OBW Power Power reference type can be changed with "Power Ref" on page 420 in Meas Setup	dBm															
#	Item	Unit, if any																							
1	Occupied bandwidth	Hz																							
2	Total Power or OBW Power Power reference type can be changed with "Power Ref" on page 420 in Meas Setup	dBm																							

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

n Results Returned			
#	Item		Unit, if any
3	x dB Reference Power		dBm
4	x dB Reference Power Frequency - offset frequency		Hz
5	x dB Reference Power Frequency - absolute frequency		Hz
6	NaN (9.91E+37)		-
7	NaN (9.91E+37)		-
8	NaN (9.91E+37)		-
9	Lower OBW boundary - offset frequency		Hz
10	Lower OBW boundary - absolute frequency		Hz
11	Lower OBW boundary - absolute power		dBm
12	Lower OBW boundary - relative power		dBc
13	Upper OBW boundary - offset frequency		Hz
14	Upper OBW boundary - absolute frequency		Hz
15	Upper OBW boundary - absolute power		dBm
16	Upper OBW boundary - relative power		dBc
17	Lower x dB BW boundary - offset frequency		Hz
18	Lower x dB BW boundary - absolute frequency		Hz
19	Lower x dB BW boundary - absolute power		dBm
20	NaN (9.91E+37)		-
21	Upper x dB BW boundary - offset frequency		Hz
22	Upper x dB BW boundary - absolute frequency		Hz
23	Upper x dB BW boundary - absolute power		dBm
24	NaN (9.91E+37)		-
Results 6, 7, 8, 20 and 24 always return NaN (9.91E+37)			
5	Returns the frequency-domain spectrum trace (data array) for the entire frequency range being measured for Trace 2		
6	Returns the frequency-domain spectrum trace (data array) for the entire frequency range being measured for Trace 3		

### 3.3.1 Views

This measurement has three predefined views:

Name	SCPI Name	SCPI #
"OBW Results" on page 350	OBWResults	1

Name	SCPI Name	SCPI #
"OBW Boundaries" on page 351	BOUNDaries	2
"Gate" on page 351	See "Gate View On/Off" on page 2915	

These are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the **View** changes, the default menu is **Frequency**, unless otherwise specified in the **View** description.

The following SCPI commands can be used to select any view other than **Gate**.

### View Selection by Name

Remote Command	<code>:DISPlay:OBwidth:VIEW[:SElect] OBWResults   BOUNDaries</code> <code>:DISPlay:OBwidth:VIEW[:SElect]?</code>
Example	<code>:DISP:OBW:VIEW OBWR</code> <code>:DISP:OBW:VIEW?</code>
Preset	<code>OBWResults</code>
State Saved	Saved in instrument state
Range	<code>OBWResults BOUNDaries</code>

### View Selection by Number

Remote Command	<code>:DISPlay:OBwidth:VIEW:NSElect &lt;integer&gt;</code> <code>:DISPlay:OBwidth:VIEW:NSElect?</code>
Example	<code>:DISP:OBW:VIEW:NSEL 2</code> <code>:DISP:OBW:VIEW:NSEL?</code>
Preset	1
State Saved	Saved in instrument state
Min/Max	1/2

#### 3.3.1.1 OBW Results

Windows: "Graph" on page 351, "Metrics - OBW Results" on page 352

The spectrum trace is displayed in the upper window. Measurement results such as Occupied Bandwidth or Power are displayed in the lower window.

Example	<code>:DISP:OBW:VIEW OBWR</code>
---------	----------------------------------

### 3.3.1.2 OBW Boundaries

Windows: "Graph" on page 351, "Metrics - OBW Boundaries" on page 354

The spectrum trace is displayed in the upper window. The lower window of OBW Results view is replaced by the OBW boundaries table in this view. Occupied bandwidth and X dB bandwidth for both lower and upper boundaries are displayed.

---

Example `:DISP:OBW:VIEW BOUN`

### 3.3.1.3 Gate

See "Gate View On/Off" on page 2915

## 3.3.2 Windows

There are four available window types. The **Gate** window is available only when "Gate View On/Off" on page 2915 is **ON** in the **Gate Settings** menu under **Trigger**.

View	#
"Graph" on page 351	1
"OBW Results" on page 350	2
"OBW Boundaries" on page 351	3
"Gate" on page 355	4

### 3.3.2.1 Graph


Window #1

Appears in two Views, as follows:


View	Size	Position
"OBW Results" on page 350	Three fifth, full width	Top
"OBW Boundaries" on page 351	Half, full width	Top

### Spectrum View

For SA, WCDMA, WLAN mode:

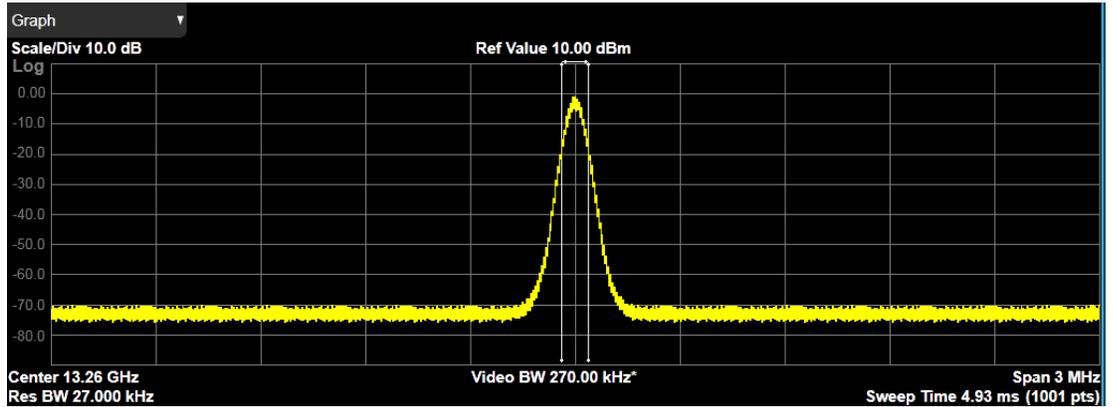

For LTE-Advanced FDD/TDD mode only

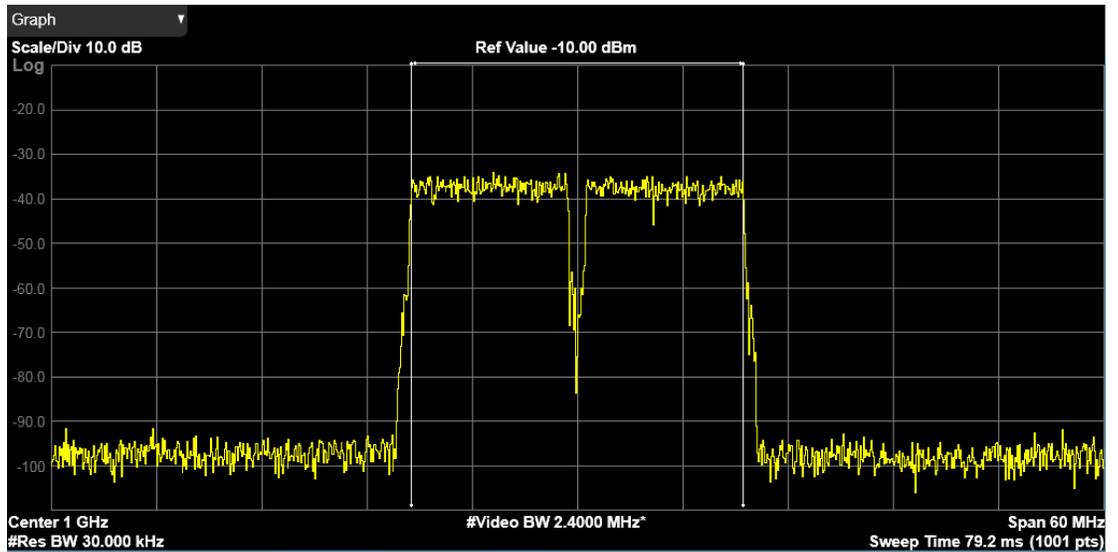

### 3.3.2.2 Metrics - OBW Results

Window #2

Displays the textual results of the Occupied BW measurement.

View	Size	Position
"OBW Results" on page 350	Two fifth, full width	Bottom
Gate	One third, full width	Bottom

### 3 LTE & LTE-A TDD Mode

#### 3.3 Occupied BW Measurement

Metrics	
Occupied Bandwidth	2.9730 MHz
Transmit Freq Error	0 Hz
x dB Bandwidth	3.000 MHz
Total Power	20.2 dBm
% of OBW Power	99.00 %
x dB	-26.00 dB

For the LTE-Advanced FDD/TDD and 5G NR modes, the metric result is shown as below:

Metrics	
Occupied Bandwidth	2.9730 MHz
Transmit Freq Error	0 Hz
x dB Bandwidth	3.000 MHz
Total Power	20.2 dBm
% of OBW Power	99.00 %
x dB	-26.00 dB

#### Occupied Bandwidth

The occupied bandwidth result is  $f_2 - f_1$ , where  $f_1$  and  $f_2$  are the lower and upper carrier boundary point.  $f_1$  and  $f_2$  are calculated with Occupied Bandwidth algorithms.

#### Total Power or OBW Power

The total power is the power integrated in the specified span setting. The OBW power is calculated from multiplying the total power by OBW percent power. The user can select the total power or the OBW power with the Power Ref control in Meas Setup.

#### Transmit Freq Error

The transmit freq error (transmit frequency error) result is calculated as the difference between  $(f_2+f_1)/2$  and the tuned center frequency of the signal, where  $f_1$  and  $f_2$  are the lower and upper carrier boundary point.

#### x dB Bandwidth

The x dB result is a bandwidth measured between two points on the signal which are a certain number of dBs down from the highest signal point within the OBW Span. For example, If the 'x dB' parameter is set to -26 dB, and the 'Occupied BW Span' is set to 10 MHz, then the maximum signal power level is first determined from the 10 MHz wide trace sweep. Next, the two furthest frequencies below ( $x_{db\_f_1}$ ) and above ( $x_{db\_f_2}$ ) the frequency of the maximum level occurrence are found where the signal level is 26 dB below the peak level. This calculation also uses linear interpolation to find the lower and upper carrier boundary point within the width of a sweep point (the span divided by the number of sweep points).

The x dB bandwidth is calculated to be  $x_{db\_f_2} - x_{db\_f_1}$ .

#### % of OBW Power

This is the setting parameter. See "[% of OBW Power](#)" on page 420

x dB

This is the setting parameter. See "[x dB](#)" on page 421.

Active Carriers

In the LTE-Advanced FDD/TDD and 5G NR modes, the number of active carriers is displayed to show how many carriers are identified as active in auto detected mode of span, otherwise “-” is displayed to indicate that it is out of scope. When there is one active carrier, Transmit Freq Error is displayed. Otherwise, “---” is displayed.

Measure Trace

See "[Measure Trace](#)" on page 1155.

### 3.3.2.3 Metrics - OBW Boundaries

Window #3

Displays occupied bandwidth and X dB bandwidth for both lower and upper boundaries.

View	Size	Position
<a href="#">"OBW Boundaries" on page 351</a>	Half, full width	Bottom
Gate	One third, full width	Bottom

Metrics		Occupied Bandwidth			x dB Reference		
		2.9730 MHz			x dB	-26.00 dB	
	Total Power	20.2 dBm			Power	0.00 dBm	
					Offset Frequency	-1.5000 MHz	
		Lower Boundary			Upper Boundary		
		Offset Freq	Abs Power	Rel Power	Offset Freq	Abs Power	Rel Power
	Occupied Bandwidth	-1.4865 MHz	0.00 dBm	-20.2 dBc	1.4865 MHz	0.00 dBm	-20.2 dBc
	x dB Bandwidth	-1.5000 MHz	-26.0 dBm		1.5000 MHz	-26.0 dBm	

Occupied Bandwidth

The occupied bandwidth result is  $f_2 - f_1$ , where  $f_1$  and  $f_2$  are the lower and upper carrier boundary point.  $f_1$  and  $f_2$  are calculated with Occupied Bandwidth algorithms.

Total Power or OBW Power

Total Power is the power integrated in the specified span setting. OBW Power is calculated from multiplying the total power by OBW percent power. The user can select the total power or the OBW power with the Power Ref control in Meas Setup.

x dB

This is the setting parameter. See "[x dB](#)" on page 421.

x dB Ref Pwr

3 LTE & LTE-A TDD Mode  
 3.3 Occupied BW Measurement

The x dB reference power result shows the power of the highest signal point within the OBW Span.

x dB At Freq

The x dB reference power frequency result shows the frequency of the highest signal point within the OBW Span. The frequency display type, either Offset or Absolute, can be selected with the Boundary Frequency control under Display.

OBW Boundary Results

Name	Unit	Corresponding Results
Lower OBW boundary - offset frequency	Hz	Offset frequency of the lower OBW boundary from center frequency
Lower OBW boundary - absolute power	dB	Absolute power on the point of lower OBW boundary
Lower OBW boundary - relative power	dBc	Relative power on the point of lower OBW boundary
Upper OBW boundary - offset frequency	Hz	Offset frequency of the upper OBW boundary from center frequency
Upper OBW boundary - absolute power	dB	Absolute power on the point of upper OBW boundary
Upper OBW boundary - relative power	dBc	Relative power on the point of upper OBW boundary
Lower x dB BW boundary - offset frequency	Hz	Offset frequency of the lower x dB BW boundary from center frequency
Lower x dB BW boundary - absolute power	dB	Absolute power on the point of lower x dB BW boundary
Upper x dB BW boundary - offset frequency	Hz	Offset frequency of the lower x dB BW boundary from center frequency
Upper x dB BW boundary - absolute power	dB	Absolute power on the point of lower x dB BW boundary

**3.3.2.4 Gate**

Window #4

Turning on **Gate** View shows the **Gate** Window, which lets you see your Gating signal at the same time as the measured data. See the description in "[Gate View On/Off](#)" on page 2915 under **Trigger, Gate Settings**.

Views in which this window appears:

View	Size	Position
Gate	One third, full width	Top

### 3.3.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

#### 3.3.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

#### Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of the Ref Position function.

Remote Command	<code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RLEVel &lt;real&gt;</code> <code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?</code>
Example	<code>:DISP:OBW:WIND:TRAC:Y:RLEV 125</code> <code>:DISP:OBW:WIND:TRAC:Y:RLEV?</code>
Couplings	When " <b>Auto Scaling</b> " on page 358 is <b>ON</b> (default), this value is automatically determined by the measurement result. When you set a value manually, <b>Auto Scaling</b> changes to <b>OFF</b> " <b>Attenuation</b> " on page 2158 is not coupled to <b>Ref Value</b>
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-250.00 dBm / 250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel</code>

#### Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

**Scale/Div** also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if Scale/Div is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:PDIVision &lt;rel_ampl&gt;</code> <code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:OBW:WIND:TRAC:Y:PDIV 5</code> <code>:DISP:OBW:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to Scale Range as follows Scale/Div = Scale Range/10 (number of divisions) When the Auto Scaling is On, this value is automatically determined by the measurement result When you change a value, Auto Scaling automatically changes to Off
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision</code>

## Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALe]:RANGe &lt;rel_ampl&gt;</code> <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to <b>Scale/Div</b> as follows <b>Scale Range = Scale/Div * 10</b> (number of divisions) When you change this value, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

## Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom</code> <code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:OBW:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:OBW:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP   CENTER   BOTTOM
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition</code>

## Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON</code> <code>:DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:COUPlE?</code>
Example	<code>:DISP:OBW:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:OBW:WIND:TRAC:Y:COUP?</code>
Couplings	When <b>Auto Scaling</b> is <b>ON</b> , and the <b>Restart</b> front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you change a value of " <b>Scale/Div</b> " on page 356, " <b>Ref Value</b> " on page 356, or " <b>Scale Range</b> " on page 1002, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	1
State Saved	Saved in instrument state
Range	OFF   ON
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPlE</code>

### 3.3.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations"](#) on page 359
- See ["Single-Attenuator Configuration"](#) on page 360

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.


Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.

---


Dependencies      In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

#### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

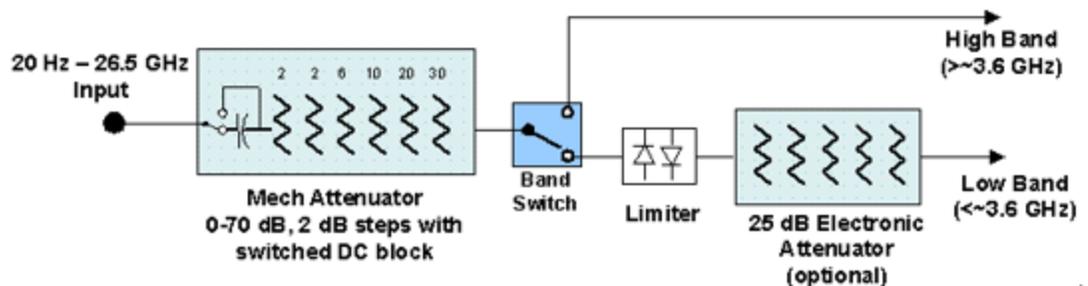


Configuration 2: Mechanical attenuator, no optional electronic attenuator

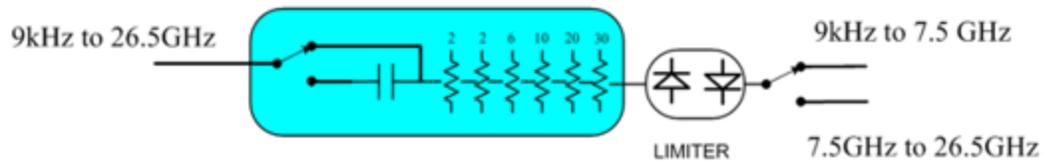

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


### Single-Attenuator Configuration

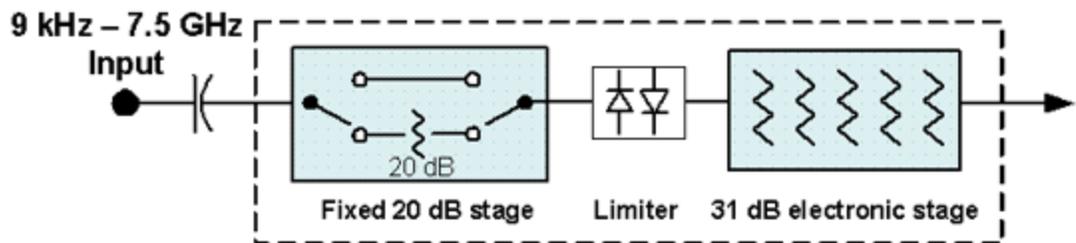

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



**Dual Attenuator**

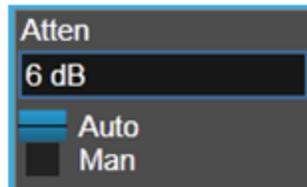

**Single Attenuator**

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

## Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and <b>"Mech Atten"</b> on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the <b>Input</b> is <b>RF</b>, and the <b>Input Port</b> is <b>RF Input 2</b>, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> <li>- If the sweep is entirely &lt; 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten</li> <li>- If the sweep is entirely &gt; 50 GHz, the value shown after "Atten:" is equal to Full Range Atten</li> <li>- If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol "&gt;=" and is equal to Full Range Atten</li> </ul> <p>In the <b>Amplitude</b>, <b>"Y Scale"</b> on page 2153 menu, and the Atten <b>Meas Bar</b> dropdown menu panel, a summary is displayed as follows:</p> <p>"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten        "Total Atten above 50 GHz" followed by the value of Full Range Atten</p> <p>For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> <li>- Attenuator summary:</li> <li>- Total Atten below 50 GHz: 30 dB</li> <li>- Total Atten above 50 GHz: 20 dB</li> </ul>

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "[Internal Preamp](#)" on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "[Attenuator Configurations and Auto/Man](#)" on page 364

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation &lt;rel_amp&gt;</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code>  Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation)  In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available  In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of <b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " <a href="#">Elec Atten</a> " on page 2164  See " <a href="#">Attenuator Configurations and Auto/Man</a> " on page 364 for more information on the <b>Auto/Man</b> functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none"> <li>- If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>- Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>, <b>External Gain</b>, <b>Ref Level Offset</b>, <b>Max Mixer Level</b>, <b>μW Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "<a href="#">Full Range Atten</a>" on page 2160 from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul> <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when <b>Mech Atten</b> is in <b>Auto</b>, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is &lt;= 7.5 GHz. So, when the frequency is changed from below</p>

3 LTE & LTE-A TDD Mode  
 3.3 Occupied BW Measurement

	7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB	
Preset	<b>Auto</b>	The Auto value is 10 dB
State Saved	Saved in instrument state	
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB	
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)</p> <p>When in Manual, a # sign appears in front of Atten in the annotation</p>	

Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn <b>Auto Mech AttenON</b> : <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	<b>ON</b>

## Attenuator Configurations and Auto/Man

As described under "Attenuation" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "Mech Atten" on page 362 (or `:POW:ATT`) as the "main" attenuation; and the attenuation that is set by `:POW:EATT` as the "soft" attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "Elec Atten" on page 2164 for more about "soft" attenuation.

### NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

---

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

3 LTE & LTE-A TDD Mode  
 3.3 Occupied BW Measurement

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 366](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the <b>Attenuation</b> control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is &gt; 3.6 GHz, then the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If <a href="#">"Internal Preamp" on page 2183</a> is <b>ON</b> (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the <b>Stop Freq</b> of the instrument is limited to 3.6 GHz and <b>Internal Preamp</b> is unavailable</p> <p>If <a href="#">"LNA" on page 2185</a> is <b>ON</b>, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> <li>- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes</li> <li>- Transmit On Off Power measurement in 5G NR Mode</li> <li>- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode</li> <li>- Burst Power measurement in Spectrum Analyzer Mode</li> </ul> <p>The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in <a href="#">"Mechanical Attenuator</a>

	<a href="#">Transition Rules" on page 367</a>
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description
Auto Function	
Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	<b>OFF</b> (Disabled) for Swept SA measurement <b>ON</b> (Enabled) for all other measurements that support the electronic attenuator

**NOTE**

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

**More Information**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 368](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

## Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

## Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "[Pre-Adjust for Min Clipping](#)" on page 2168.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

## Adjust Atten

Allows you to select;

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

### Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 370

Selection	SCPI	Note
Off	<code>OFF</code>	This is the default setting
On	<code>ON</code>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <code>COMBined</code>
Elec Atten Only	<code>ELECTrical</code>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<code>COMBined</code>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>

Notes	<p>The parameter option <b>ELECTRICAL</b> sets this function to <b>ON</b> in Single-Attenuator models</p> <p>The parameter option <b>COMBINED</b> is mapped to <b>ELECTRICAL</b> in Single-Attenuator models. If you send <b>COMBINED</b>, it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query</p> <p>For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBINED</b></p>				
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed</p> <p>In instruments with Dual-Attenuator model, when "<b>Elec Atten</b>" on page 2164 is <b>OFF</b> or grayed-out, "<b>Pre-Adjust for Min Clipping</b>" on page 369 is grayed-out</p> <p>Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements</p> <p>Appears in the Waveform measurement in BASIC and 5G NR Modes</p>				
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>				
State Saved	Saved in instrument state				
Range	<table border="1"> <tr> <td>Dual-Attenuator models:</td> <td>Off   Elec Atten Only   Mech + Elec Atten</td> </tr> <tr> <td>Single-Attenuator models:</td> <td>Off   On</td> </tr> </table>	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten	Single-Attenuator models:	Off   On
Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten				
Single-Attenuator models:	Off   On				


#### Backwards Compatibility Command

Notes	<p><b>ON</b> aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC)</p> <p><b>OFF</b> aliases to "Off" (:POW:RANG:OPT:ATT OFF)</p> <p>:POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF</p>
Backwards Compatibility SCPI	<pre>[ :SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0 [:SENSe]:POWer[:RF]:RANGe:AUTO?</pre>

### Adjustment Algorithm


The algorithms for the adjustment are documented below:

### Single-Attenuator Models

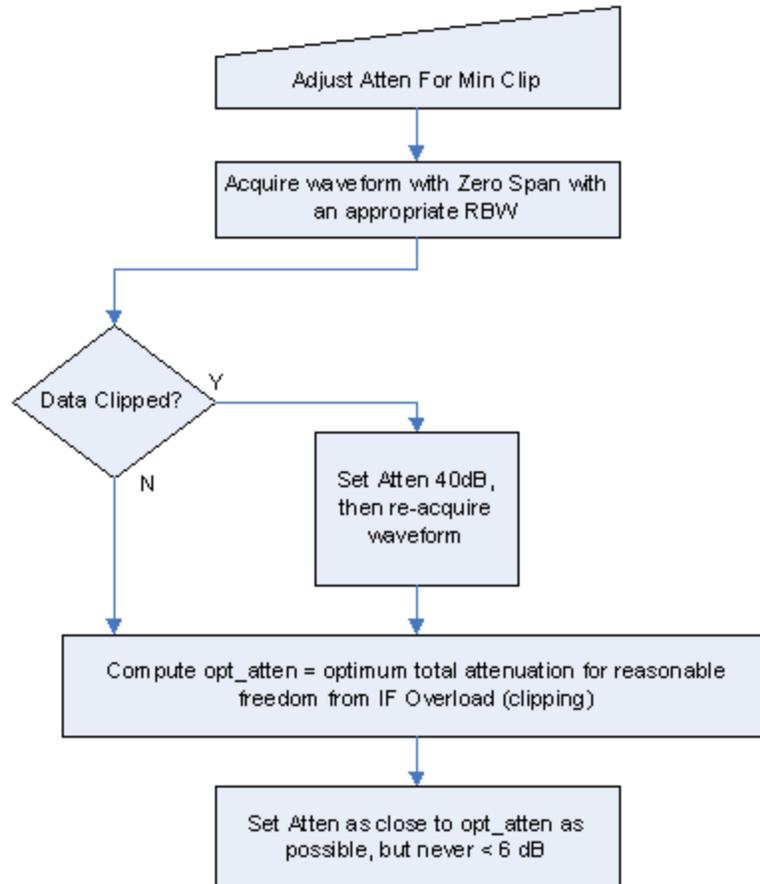


### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 369 selection is Mech + Elec Atten:

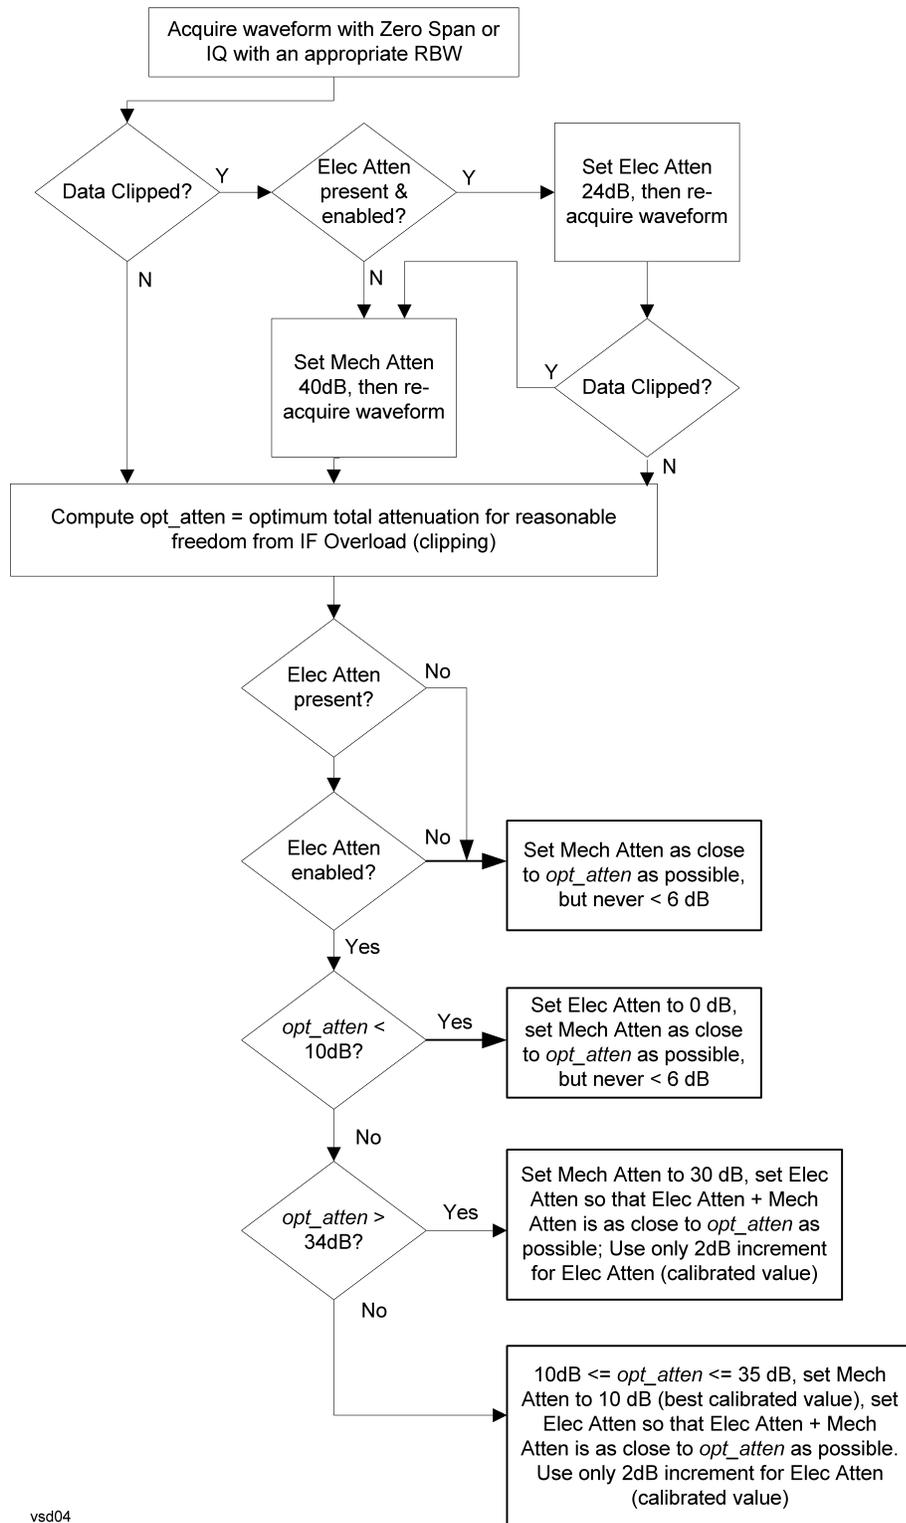

"Pre-Adjust for Min Clipping" on page 369 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

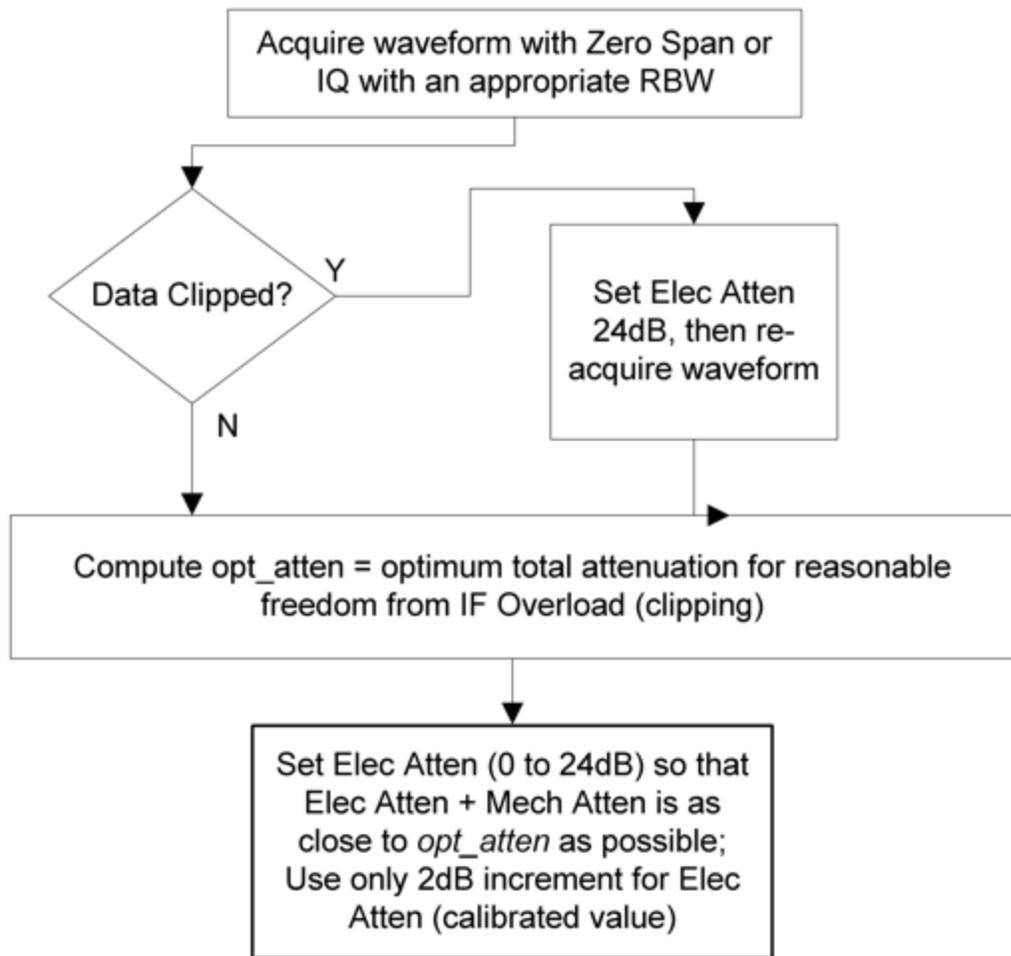

## Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.3.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

## Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> . The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

### Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements


### Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

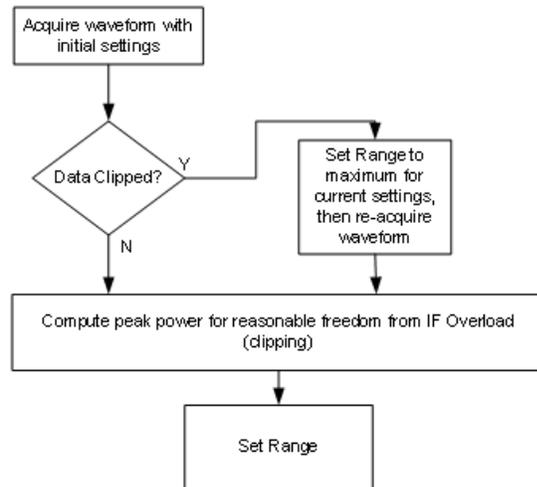

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:PARatio &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet &lt;real&gt;</code>	
	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.3.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because "[Software Preselection](#)" on page 2195 is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on "[Preselector Adjust](#)" on page 2182 changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in "[Proper Preselector Operation](#)" on page 378.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram</b> View</li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in " <a href="#">Preselector Adjust</a> " on page 2182
Status Bits/OPC dependencies	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

## Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "**Presel Center**" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Preset	0 MHz

State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PADJust</code> <code>[ :SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXTERNAL</code> <code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

**NOTE**

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <b>LOW</b> instead of <b>FULL</b> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<b>LOW</b>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)

Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<b>OFF</b>

## LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to ["Internal Preamp" on page 2183](#). LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with ["Internal Preamp" on page 2183](#), although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see ["More Information" on page 382](#)

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

## More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and Internal Preamp. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
µW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, Internal Preamp is switched off (even if you have its switch set to ON). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the Internal Preamp annotation displays in amber, to warn you that the actual state of Internal Preamp does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
µW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 387
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 389
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 390

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "<b>Presel Center</b>" on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b></p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b>. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul> <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are grayed-out if the current measurement does not support them</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, “Setting Conflict; Feature not supported for this measurement”</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>IQ Analyzer</td> <td>MPB option present and licensed: <b>MPB</b></td> </tr> <tr> <td>Pulse</td> <td>MPB option not present and licensed: <b>STD</b></td> </tr> <tr> <td>RTSA</td> <td></td> </tr> <tr> <td>Avionics</td> <td></td> </tr> <tr> <td>All other Modes</td> <td><b>STD</b></td> </tr> <tr> <td>-</td> <td></td> </tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: <b>MPB</b>	Pulse	MPB option not present and licensed: <b>STD</b>	RTSA		Avionics		All other Modes	<b>STD</b>	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: <b>MPB</b>														
Pulse	MPB option not present and licensed: <b>STD</b>														
RTSA															
Avionics															
All other Modes	<b>STD</b>														
-															
State Saved	Save in instrument state														
Range	Standard Path   Low Noise Path Enable   μW Presel Bypass   Full Bypass Enable														

Annotation In the Meas Bar, if the Standard path is chosen:  
 μW Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 μW Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 μW Path: LNP,On  
 If the preselector is bypassed:  
 μW Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 μW Path: FByp,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 μW Path: FByp,On

### μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Measurement	$\mu$ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is presel bypass if presel bypass is enabled, auto $\mu$ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

Measurement	$\mu$ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	
Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 385 above
Preset	ON
Range	ON OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

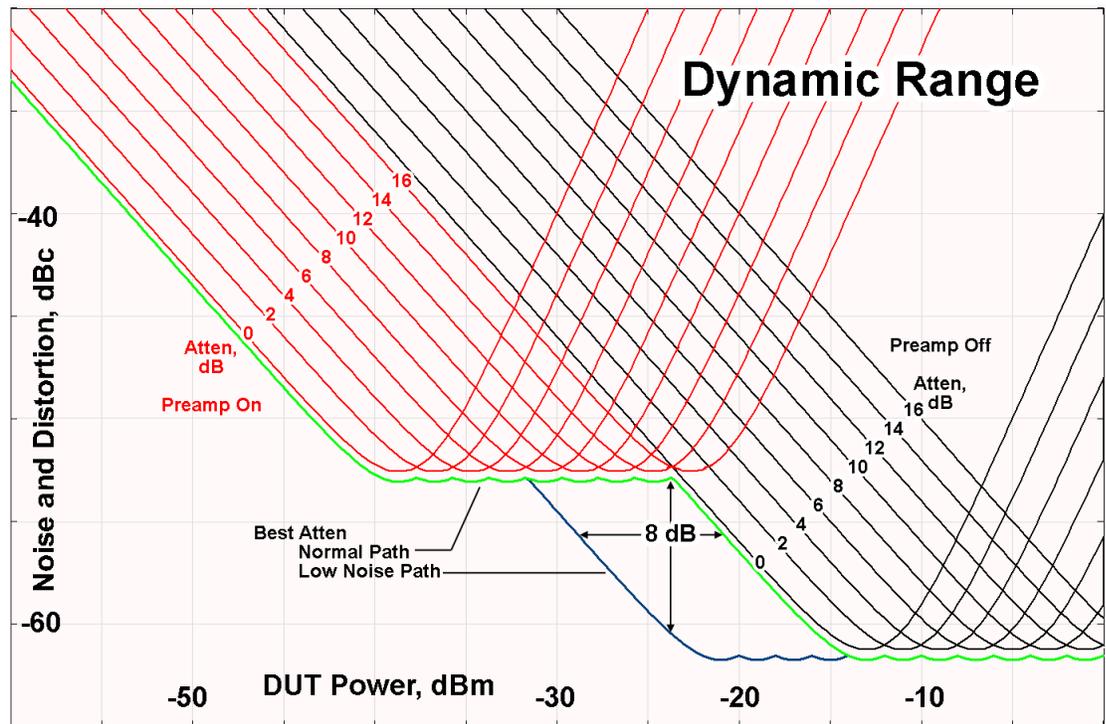

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### μW Preselector Bypass

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

#### CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

---

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path ( <code>:POW:MW:PATH STD</code> ) The <b>OFF</b> parameter sets path <b>MPB</b> ( <code>:POW:MW:PATH MPB</code> )
Preset	<b>ON</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel:STATe 0   1   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel:STAT?</code>
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state
Preset	N9041B <b>OFF</b> N9042B+V3050A <b>ON</b> M9410A/11A <b>ON</b>
State Saved	Saved in instrument state

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel NORMa1   ADVanced</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel?</code>
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is “Unavailable unless SW Presel enabled”
Preset	N9041B <b>ADVanced</b> N9042B+V3050A <b>NORMa1</b>
State Saved	Saved in instrument state

## SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from

3 LTE & LTE-A TDD Mode  
 3.3 Occupied BW Measurement

wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPResel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method  Grayed-out when " <a href="#">Software Preselection</a> " on <a href="#">page 2195</a> is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled"  For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code>  Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code>  Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <a href="#">Prefilter Presets</a> " on <a href="#">page 396</a> below

State Saved      Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

## 3.3.4 BW

Opens the Bandwidth (**BW**) menu, which contains controls for ["Res BW" on page 397](#) and ["Video BW" on page 398](#).

The **Resolution BW** functions control filter bandwidth and filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

### 3.3.4.1 Settings

Contains the basic bandwidth functions. In this measurement, it is the only tab under **BW**.

## Res BW

Activates the resolution bandwidth active function, which allows you to manually set the resolution bandwidth (RBW) of the instrument.

Normally, **Res BW** (Auto) selects automatic coupling of the **Res BW** to "**Span**" on [page 410](#) using the ratio set by **Span:3 dB RBW** (some measurements do not have a **Span:3 dB RBW** control, in which case the measurement chooses the optimal ratio). To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Res BW** control, or simply enter a different value for **Res BW**.

When the **Res BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Res BW** control. This may also be done by pressing "**Auto Couple**" on [page 2242](#) or by performing a **Preset**.

When **Res BW** is set to **Auto**, the bandwidth selected depends on "**RBW Filter Type**" on [page 399](#).

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on **Filter Type** or **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<pre>[ :SENSe]:OBwidth:BANDwidth[:RESolution] &lt;bandwidth&gt; [:SENSe]:OBwidth:BANDwidth[:RESolution]? [:SENSe]:OBwidth:BANDwidth[:RESolution]:AUTO ON   OFF   1   0 [:SENSe]:OBwidth:BANDwidth[:RESolution]:AUTO?</pre>
Example	<pre>:OBW:BAND 5 MHz :OBW:BAND? :OBW:BAND:AUTO ON :OBW:BAND:AUTO?</pre>
Notes	<p>For numeric entries, all RBW Types choose the nearest (arithmetically, on a linear scale, rounding up) available RBW to the value entered</p> <p>The setting and querying of values depend on the current bandwidth type</p>
Couplings	<p>Sweep time is coupled to RBW. As RBW changes, the sweep time (if set to <b>Auto</b>) is changed to maintain amplitude calibration</p> <p><b>"Video BW"</b> on <a href="#">page 398</a> is coupled to RBW. As the resolution bandwidth changes, the video bandwidth (if set to <b>Auto</b>) changes to maintain the ratio of VBW/RBW (10:1)</p> <p>When <b>Res BW</b> is set to <b>Auto</b>, the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When <b>Res BW</b> is set to <b>Man</b>, and the bandwidths are entered manually, these bandwidths are used regardless of other instrument settings</p>
Preset	<p><b>Auto</b>, unless noted in "<b>RBW Presets</b>" on <a href="#">page 398</a> below</p> <p>See table below</p>
State Saved	<p>Saved in instrument state</p>

Min	1 Hz
Max	8 MHz is the max equivalent -3 dB RBW, which means that the named RBW (the one shown on the control etc.) can exceed 8 MHz if using a filter other than -3 dB Gaussian
Annotation	A “#” mark appears before “RBW” in the annotation when it is switched from Auto to Manual coupling
Backwards Compatibility Notes	For backwards compatibility, this command supports both <b>BANDwidth</b> and <b>BWIDth</b> forms For ESA, the maximum Res BW was 5 MHz; for X-Series it is 8 MHz

### RBW Presets

Unless noted in the table below, the Preset value of RBW is **Auto**.

Mode	Preset Value
WCDMA	30 kHz
BT	10 kHz
WLAN	100 kHz
MSR	30 kHz
LTE, LTETDD, LTEAFDD, LTEATDD, 5G NR	30 kHz

### Video BW

Lets you change the instrument post-detection filter (VBW or “video bandwidth”) from 1 Hz to 8 MHz, in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz. The VBW is annotated at the bottom of the display, in the center.

**Video BW (Auto)** selects automatic coupling of **Video BW** to **"Res BW"** on page 397. To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Video BW** control, or simply enter a different value for **Video BW**.

When **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on **Video BW**. This may also be done by pressing **"Auto Couple"** on page 2242 or by performing a **Preset**.

Remote Command	<pre>[ :SENSe]:OBwidth:BANDwidth:VIDeo &lt;bandwidth&gt; [ :SENSe]:OBwidth:BANDwidth:VIDeo? [ :SENSe]:OBwidth:BANDwidth:VIDeo:AUTO ON   OFF   1   0 [ :SENSe]:OBwidth:BANDwidth:VIDeo:AUTO?</pre>
Example	<pre>:OBW:BAND:VID 2.4 MHz :OBW:BAND:VID? :OBW:BAND:VID:AUTO ON :OBW:BAND:VID:AUTO?</pre>

### 3 LTE & LTE-A TDD Mode

#### 3.3 Occupied BW Measurement

Notes	For numeric entries, the instrument chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open” The values shown in this table reflect the conditions after a Mode Preset
Dependencies	Sometimes the displayed <b>Video BW</b> is not actually used to process the trace data: When the <b>Average</b> detector is selected, and <b>Sweep Type</b> is set to <b>Swept</b> , the video bandwidth filter cannot be used, because it uses the same hardware as the <b>Average</b> detector When the <b>Quasi-Peak</b> , <b>EMI Average</b> , or <b>RMS Average</b> detector is selected, <b>Video BW</b> is implemented by the digital IF as part of the detector In this case, <b>Video BW</b> still acts to change the Sweep Time, if Sweep Time is in <b>Auto</b> , and still affects the data on other traces for which this is not the case
Couplings	Normally coupled to <b>Res BW</b> . If <b>Video BW</b> is set to <b>Auto</b> , then video bandwidth is changed as <b>Res BW</b> changes, to maintain the preset ratio (normally 10:1)
Preset	<b>Auto</b> , unless noted in " <b>Video BW Presets</b> " on page 399 below <b>ON</b>
State Saved	Saved in instrument state
Min	1 Hz
Max	50 MHz
Annunciation	A “#” mark appears before “VBW” in the annotation when it is not coupled
Annotation	In the bottom center of the screen, “VBW <value> <units>” indicates the current video bandwidth value. Note that for some detectors this is not the value used for VBW (see above)
Backwards Compatibility Notes	For backwards compatibility, this command supports both <b>BANDwidth</b> and <b>BWIDTH</b> forms

#### Video BW Presets

Unless noted in the table below, the Preset value is **Auto**.

Mode ID	Preset Value
WCDMA	300 kHz
BT	30 kHz

#### RBW Filter Type

Selects the type for the resolution bandwidth filters. Historically, the **Res BW** filters in HP/Agilent/Keysight spectrum analyzers were Gaussian filters, specified using the –3 dB bandwidth of the filter. That is, a 10 MHz **Res BW** filter was a Gaussian shape with its –3 dB points 10 MHz apart. In X-Series, you can choose between a Gaussian and Flat Top filter shape, for varying measurement conditions.

	<b>Filter Type</b>	<b>SCPI</b>
	Gaussian	GAUSSian
	Flattop	FLATtop
Remote Command	[:SENSe]:OBwidth:BANDwidth:SHAPE GAUSSian   FLATtop [:SENSe]:OBwidth:BANDwidth:SHAPE?	
Example	:OBW:BAND:SHAP GAUS :OBW:BAND:SHAP?	
Preset	"Auto Couple" on page 2242 selects the preset value	
State Saved	Saved in instrument state	
Annotation	The annotation under RBW in the bottom left of the screen shows the type of filter or bandwidth that is being used. The following examples illustrate this:	
	-3 dB (Normal) filter BW	Res BW 300 Hz
	-6 dB filter BW	Res BW (-6 dB) 422 Hz
	Noise filter BW	Res BW (Noise) 317 Hz
	Impulse filter BW	Res BW (Impulse) 444 Hz
	CISPR filter BW	Res BW (CISPR) 200 Hz
	MIL filter BW	Res BW (MIL) 1 kHz
	Flattop filter type	Res BW (Flattop) 300 Hz
Backwards Compatibility SCPI	[:SENSe]:OBwidth:BWIDth:SHAPE	

### 3.3.5 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, Measurement View or Window.

#### 3.3.5.1 Meas Display

Contains controls for setting the display for the current Measurement, View or Window.

#### x dB BW Boundaries On/Off

Turns the x dB BW Boundaries On or Off.

Remote Command	:DISPlay:OBwidth:WINDow[1]:XDB 0   1   OFF   ON :DISPlay:OBwidth:WINDow[1]:XDB?
----------------	--

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

Example	<code>:DISP:OBW:WIND:XDB 1</code> <code>:DISP:OBW:WIND:XDB?</code>
Preset	0
State Saved	Saved in instrument state
Range	OFF   ON
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW:WINDow[1]:XDB</code>

### Boundary Frequency

Selects frequency display type:

- **OFFSet**: offsets from Center Freq to OBW boundary frequency are displayed
- **ABSolute**: absolute frequencies are displayed

Remote Command	<code>:DISPlay:OBWidth:WINDow2:BOUNDaries:FREQuency OFFSet   ABSolute</code> <code>:DISPlay:OBWidth:WINDow2:BOUNDaries:FREQuency?</code>
Example	<code>:DISP:OBW:WIND2:BOUN:FREQ ABS</code> <code>:DISP:OBW:WIND2:BOUN:FREQ?</code>
Preset	OFFSet
State Saved	Saved in instrument state
Range	OFFSet   ABSolute
Backwards Compatibility SCPI	<code>:DISPlay:OBWidth:VIEW2:WINDow2:BOUNDaries:FREQuency</code>

### 3.3.5.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

### Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>

Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<b>ON</b>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

## Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

	<code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state

### Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

### Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When `OFF`, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

### Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DELeTe</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DELeTe</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DELeTe:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF   ON   0   1</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight <b>OFF</b> and <code>:DISP:ENAB ON</code> turns Backlight <b>ON</b> , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	<b>ON</b>

	Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

### 3.3.5.3 View

Contains controls for selecting the current **View**, and for editing User Views.

#### View

See "Views" on page 349

#### User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect &lt;alphanumeric&gt;</code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOom</code>) with</p> <pre><code>:DISP:VIEW:ADV:SEL</code></pre> <p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre><code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code></pre> <pre><code>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</code></pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name &lt;alphanumeric&gt; does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

---

Backwards Compatibility SCPI	The legacy node <code>:DISPlay:VIEW[:SElect]</code> is retained for backwards compatibility, but it only supports predefined views
------------------------------	--

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:NAME "Baseband"</code> Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View
Notes	<code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <code>&lt;alphanumeric&gt;</code> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via <code>:DISP:ENAB OFF</code> ) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> is not present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

## Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
----------------	--

Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

## View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

### View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:  <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p> <p>If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined</p>

### User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example:  <code>"Baseband,myView1,yourView1"</code></p> <p>If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a>), then query the list of available Views, the result is undefined</p>

### 3.3.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

#### 3.3.6.1 Settings

Contains controls that pertain to the X-Axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

#### Carrier Reference Frequency

Sets **Carrier Reference Frequency**. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the Center Frequency parameter used in other measurements, as Center Frequency can be a global parameter, and it would not make sense for Carrier Reference Frequency to take on this global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- the Number of Component Carriers is 1
- the Center Freq Offset is 0 Hz
- the mode of the Center Freq is Auto

then Center Freq is equivalent to Carrier Ref Freq. When Center Freq changes in such conditions, the mode of Center Freq remains as Auto and Carrier Ref Freq will be changed to same value. The major purpose of this coupling is to keep BWCC with legacy LTE/LTE TDD, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

See ["More Information" on page 410](#).

Remote Command	For LTE-A, 5G NR [:SENSe]:CCARrier:REFerence <freq> [:SENSe]:CCARrier:REFerence? For MSR [:SENSe]:CARRier:REFerence <freq> [:SENSe]:CARRier:REFerence?
Example	For LTE-A, 5G NR :CCAR:REF 2GHz :CCAR:REF? For MSR :CARR:REF 2GHz :CARR:REF?
Dependencies	Only available in LTEAFDD/LTEATDD, 5GNR and MSR Modes
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as <b>Center Frequency</b>

## More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced TDD/FDD mode, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

Carrier center frequencies are defined using offsets from **Carrier Reference Frequency**, which determine absolute frequency locations, which can be set as both absolute and relative frequency from the carrier reference frequency.

## Span

Set the frequency of the occupied bandwidth span for the current measurement.

Remote Command	[:SENSe]:OBWidth:FREQuency:SPAN <freq> [:SENSe]:OBWidth:FREQuency:SPAN? [:SENSe]:OBWidth:FREQuency:SPAN:AUTO ON   OFF   0   1 [:SENSe]:OBWidth:FREQuency:SPAN:AUTO?
Example	:OBW:FREQ:SPAN 2.4 MHz :OBW:FREQ:SPAN?

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

	<code>:OBW:FREQ:SPAN:AUTO 0</code>																																
	<code>:OBW:FREQ:SPAN:AUTO?</code>																																
Notes	Span Auto Detector ( <code>[ :SENSe]:OBwidth:FREQuency:SPAN:AUTO</code> ) is only available in the MSR, LTEAFDD/LTEATDD and 5GNR modes																																
Dependencies	The Auto Detect functionality is only available in the MSR, LTEAFDD/LTEATDD and 5GNR modes																																
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>3 MHz</td> </tr> <tr> <td>WCDMA</td> <td>10 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD</td> <td>10 MHz</td> </tr> <tr> <td>BT</td> <td>2 MHz</td> </tr> <tr> <td>5GNR</td> <td>Automatically calculated</td> </tr> <tr> <td>RTS</td> <td>27 kHz</td> </tr> <tr> <td>MSR</td> <td>10 MHz</td> </tr> <tr> <td>WLAN</td> <td> <table border="1"> <thead> <tr> <th>Radio Std</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>802.11b</td> <td>30MHz</td> </tr> <tr> <td>802.11a/g/n/ac/ax/be (20MHz)</td> <td>25 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (40MHz)</td> <td>50 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (80MHz)</td> <td>100 MHz</td> </tr> <tr> <td>802.11ac/ax/be (160MHz)</td> <td>200 MHz</td> </tr> <tr> <td>802.11be (320MHz)</td> <td>400 MHz</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Mode	Value	SA	3 MHz	WCDMA	10 MHz	LTEAFDD, LTEATDD	10 MHz	BT	2 MHz	5GNR	Automatically calculated	RTS	27 kHz	MSR	10 MHz	WLAN	<table border="1"> <thead> <tr> <th>Radio Std</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>802.11b</td> <td>30MHz</td> </tr> <tr> <td>802.11a/g/n/ac/ax/be (20MHz)</td> <td>25 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (40MHz)</td> <td>50 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (80MHz)</td> <td>100 MHz</td> </tr> <tr> <td>802.11ac/ax/be (160MHz)</td> <td>200 MHz</td> </tr> <tr> <td>802.11be (320MHz)</td> <td>400 MHz</td> </tr> </tbody> </table>	Radio Std	Value	802.11b	30MHz	802.11a/g/n/ac/ax/be (20MHz)	25 MHz	802.11n/ac/ax/be (40MHz)	50 MHz	802.11n/ac/ax/be (80MHz)	100 MHz	802.11ac/ax/be (160MHz)	200 MHz	802.11be (320MHz)	400 MHz
Mode	Value																																
SA	3 MHz																																
WCDMA	10 MHz																																
LTEAFDD, LTEATDD	10 MHz																																
BT	2 MHz																																
5GNR	Automatically calculated																																
RTS	27 kHz																																
MSR	10 MHz																																
WLAN	<table border="1"> <thead> <tr> <th>Radio Std</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>802.11b</td> <td>30MHz</td> </tr> <tr> <td>802.11a/g/n/ac/ax/be (20MHz)</td> <td>25 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (40MHz)</td> <td>50 MHz</td> </tr> <tr> <td>802.11n/ac/ax/be (80MHz)</td> <td>100 MHz</td> </tr> <tr> <td>802.11ac/ax/be (160MHz)</td> <td>200 MHz</td> </tr> <tr> <td>802.11be (320MHz)</td> <td>400 MHz</td> </tr> </tbody> </table>	Radio Std	Value	802.11b	30MHz	802.11a/g/n/ac/ax/be (20MHz)	25 MHz	802.11n/ac/ax/be (40MHz)	50 MHz	802.11n/ac/ax/be (80MHz)	100 MHz	802.11ac/ax/be (160MHz)	200 MHz	802.11be (320MHz)	400 MHz																		
Radio Std	Value																																
802.11b	30MHz																																
802.11a/g/n/ac/ax/be (20MHz)	25 MHz																																
802.11n/ac/ax/be (40MHz)	50 MHz																																
802.11n/ac/ax/be (80MHz)	100 MHz																																
802.11ac/ax/be (160MHz)	200 MHz																																
802.11be (320MHz)	400 MHz																																
State Saved	Yes																																
Min	100 Hz																																
Max	Hardware Maximum Span																																
Backwards Compatibility SCPI	<code>[ :SENSe]:EBwidth:FREQuency:SPAN</code>																																

### Full Span (Remote Command Only)

Changes the Occupied Bandwidth Span to show the full frequency range of the instrument. It maximizes the span within a range but does not change **Center Frequency**. When using external mixing, it changes the displayed frequency span to the frequency range specified for the selected external mixing band.

Remote Command	<code>[ :SENSe]:OBwidth:FREQuency:SPAN:FULL</code>
----------------	--

Example	:OBW:FREQ:SPAN:FULL
Couplings	Selecting full span changes the measurement span value

### 3.3.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to **Normal** mode (see "[Marker Mode](#)" on page 414), and places it at the center of the display. If the selected marker is **Off**, it is set to **Normal** and placed at the center of the screen, on the trace determined by the Marker Trace rules.

#### 3.3.7.1 Select Marker

Specifies the selected marker. The term "selected marker" is used throughout this document to specify which marker will be affected when you change marker settings, perform a **Peak Search**, etc.

This control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, **Counter**).

For any menu that includes **Select Marker**, the first control is always **Marker Frequency | Time**.

Notes	The selected marker is remembered even when not in the <b>Marker</b> menu and is used if a search is done, or a Band Function is turned on, or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for <b>Normal</b> and <b>Delta</b> markers

#### 3.3.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection for the marker control mode (**Normal/POsition**, **Delta** or **Off**; see "[Marker Mode](#)" on page 414) for the selected marker, as well as additional functions that help you use markers.

#### Marker Frequency

Sets the marker X-Axis value in the current marker X-Axis Scale unit. It has no effect if the control mode (see "[Marker Mode](#)" on page 414) is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:X &lt;freq&gt;</code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:OBW:MARK3:X 0</code> <code>:CALC:OBW:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker's reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b> , seconds for <b>Period</b> and <b>Time</b>
Preset	After a preset, all markers are turned <b>OFF</b> , so Marker X Axis Value query returns Not a Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

### Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** – except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:X:POSition &lt;real&gt;</code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:X:POSition?</code>
Example	<code>:CALC:OBW:MARK10:X:POS 0</code> <code>:CALC:OBW:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points . When a marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition If the marker is <b>Off</b> , the query response is Not A Number
Preset	After a preset, all markers are turned <b>Off</b> , so the query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37

### Marker Y Axis Value (Remote Query only)

Returns the marker Y-Axis value in the current marker Y-Axis unit.

Remote Command	:CALCulate:OBWidth:MARKer[1] 2 ... 12:Y?
Example	:CALC:OBW:MARK11:Y?
Notes	Returns the marker Y-Axis result, if the control mode is <b>Normal</b> or <b>Delta</b> If the marker is <b>Off</b> , the response is Not A Number
Preset	Result dependent on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:OBWidth:MARKer[1] 2 ... 12:FUNCTION:RESult?

## Marker Mode

Sets the marker control mode to **Normal** (**POSition**), **Delta**, or **Off**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **Normal** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **Off**, there is no active function, and the active function is turned off.

Remote Command	:CALCulate:OBWidth:MARKer[1] 2 ... 12:MODE POSition   DELTa   OFF :CALCulate:OBWidth:MARKer[1] 2 ... 12:MODE?
Example	:CALC:OBW:MARK:MODE POS :CALC:OBW:MARK:MODE?
Preset	OFF
State Saved	Saved in instrument state
Range	POSition DELTA OFF
Annotation	Mkr # <X value> and <Marker value> upper right on graph When Marker Trace is Polar in WCDMA mode: Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

### Backwards Compatibility SCPI Command

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1), puts it in **Normal** mode, and places it at the center of the screen.

Example	<code>:CALC:OBW:MARK3:STAT ON</code> <code>:CALC:OBW:MARK3:STAT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	OFF   ON
Backwards Compatibility	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:STATe OFF   ON   0   1</code>
SCPI	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:STATe?</code>

### Delta Marker (Reset Delta)

Pressing this button has the same effect as pressing **Delta** in **Marker Mode**. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

### Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility.

### All Markers Off

Turns off all markers.

Remote Command	<code>:CALCulate:OBWidth:MARKer:AOff</code>
Example	<code>:CALC:OBW:MARK:AOff</code>

### 3.3.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with "[Marker Delta](#)" on page 416.

**NOTE**

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a peak search.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as **"Marker Frequency" on page 412** on the **Settings** tab.

## Peak Search

Moves the selected marker to the trace point which has the maximum y-axis value for that marker's trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:MAXimum</code>
Example	<code>:CALC:OBW:MARK2:MAX</code> <code>:SYST:ERR?</code> can be used to query the errors to determine if a peak is found. The message "No peak found" (-200) will be returned after an unsuccessful search
Notes	Sending this command selects the subopcoded marker In WCDMA Mode, this command does not work when the selected marker is located on the polar trace. In this case, the command is ignored

## Marker Delta

Pressing this button has the same effect as pressing **Delta** in **"Marker Mode" on page 414** on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search and change the marker's control mode to **Delta** without having to access two separate menus.

### 3.3.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as **"Marker Frequency" on page 412** on the **Settings** tab.

## Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:REFerence &lt;integer&gt;</code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:REFerence?</code>
Example	<code>:CALC:OBW:MARK:REF 2</code> <code>:CALC:OBW:MARK:REF?</code>
Notes	Causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded, the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" The query returns a single value (the specified marker number's relative marker)
Couplings	The act of specifying the selected marker's reference marker makes the selected marker a <b>Delta</b> marker If the reference marker is <b>Off</b> , it is turned on in <b>Normal</b> mode at the <b>Delta</b> marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using <b>Restore Mode Defaults</b> . This is not reset by <b>Marker Off</b> , <b>All Markers Off</b> , or <b>Preset</b>
State Saved	Saved in instrument state. Not affected by <b>Marker Off</b> and hence not affected by <b>Preset</b> or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a <b>Delta</b> marker

## Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-

Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become **Normal** or **Delta** markers (see "[Marker Mode](#)" on page 414).

Specifying a **Marker Trace** manually or with this command associates the marker with the specified trace. If the marker is not **Off**, it moves from the trace it was on to the new trace. If the marker is **Off**, it stays off, but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:TRACe 1   2   3</code> <code>:CALCulate:OBWidth:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:OBW:MARK2:TRAC 2</code> <code>:CALC:OBW:MARK2:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of <b>Marker Trace</b> is not affected by " <a href="#">Auto Couple</a> " on page 2242 Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state

## Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility. It is the same as "[Marker Settings Diagram](#)" on page 415 on the **Settings** tab.

## 3.3.8 Meas Setup

Contains functions for setting up the measurement parameters and contains functions for setting up parameters global to all measurements in the mode.

### 3.3.8.1 Settings

Contains frequently used **Meas Setup** functions to which you will want the fastest access.

### Avg/Hold Num

Specifies the number of measurement averages used when calculating the measurement result. The average is displayed at the end of each sweep.

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

Initiates an averaging routine that averages the sweep points in several successive sweeps, resulting in trace smoothing.

After the specified number of average counts, "[Average Mode](#)" on page 419 (termination control) determines the average action.

Remote Command	<code>[ :SENSe]:OBWidth:AVERage:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:OBWidth:AVERage:COUNT?</code>
Example	<code>:OBW:AVER:COUN 1500</code> <code>:OBW:AVER:COUN?</code>
Preset	10
State Saved	Yes
Min/Max	1/10000
Annotation	The average count is displayed in the measurement bar on the front panel display. The annotation appears in the format n/N where n is the current average and N is the average count
Backwards Compatibility SCPI	<code>[ :SENSe]:EBWidth:AVERage:COUNT</code>

## Averaging On/Off

Turns averaging on or off.

**NOTE**

In this measurement, **Average Type** is always preset to the [Log-Pwr Avg \(Video\)](#) method. Other averaging methods are not available.

Remote Command	<code>[ :SENSe]:OBWidth:AVERage[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:OBWidth:AVERage[:STATe]?</code>
Example	<code>:OBW:AVER ON</code> <code>:OBW:AVER?</code>
Couplings	<b>Averaging</b> state is coupled to " <a href="#">Max Hold (Remote Command Only)</a> " on page 425. If <b>Max Hold</b> is changed from <b>OFF</b> to <b>ON</b> , <b>Averaging</b> state is automatically set to <b>ON</b>
Preset	<b>ON</b>
State Saved	Yes
Range	<b>ON OFF</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:EBWidth:AVERage[:STATe]</code>

## Average Mode

Lets you set the averaging mode.

<b>EXPOnential</b>	Measurement averaging continues using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep
<b>REPeat</b>	The measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[ :SENSe]:OBWidth:AVERage:TCONtrol EXPOnential   REPeat</code> <code>[ :SENSe]:OBWidth:AVERage:TCONtrol?</code>
Example	<code>:OBW:AVER:TCON REP</code> <code>:OBW:AVER:TCON?</code>
Preset	EXP
State Saved	Yes
Range	EXPOnential REPeat

### % of OBW Power

Assigns the percentage of the total power that is measured within the Occupied Bandwidth for the current measurement. The resulting Occupied Bandwidth limits are displayed by markers placed on the frequencies of the specified percentage.

Remote Command	<code>[ :SENSe]:OBWidth:PERCent &lt;real&gt;</code> <code>[ :SENSe]:OBWidth:PERCent?</code>
Example	<code>:OBW:PERC 75</code> <code>:OBW:PERC?</code>
Preset	99.00
State Saved	Yes
Min/Max	10/99.99

### Power Ref

Lets you select Power Ref type:

Total Power	<b>TPOWer</b>	Total power in the current span is displayed
OBW Power	<b>OBWPower</b>	Occupied power is displayed

When **Power Ref** type is changed, the annotation in the lower window and Remote Command SCPI Results also change.

Remote Command	<code>[ :SENSe]:OBWidth:PREFerence   OBWPower</code> <code>[ :SENSe]:OBWidth:PREFerence?</code>
Example	<code>:OBW:PREF TPOW</code>

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

	<code>:OBW:PREF?</code>
Preset	<code>TPOWer</code>
State Saved	Saved in instrument state
Range	<code>TPOWer</code>   <code>OBWPower</code>

### x dB

Sets the x dB value used for the "x dB bandwidth" result that measures the bandwidth between two points on the signal that is x dB down from the highest signal point within the OBW Span.

Remote Command	<code>[ :SENSe]:OBwidth:XDB &lt;rel_amp1&gt;</code> <code>[ :SENSe]:OBwidth:XDB?</code>
Example	<code>:OBW:XDB -20</code> <code>:OBW:XDB?</code>
Preset	BT Mode: -20.0 dB All other Modes: -26.0 dB
State Saved	Yes
Min/Max	-100.0 dB/-0.1 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EBwidth:XDB</code>

### Power Integration Method

Selects the power integration method:

Normal	<code>NORMal</code>	By integrating the linear power bucket values from the lower edge of the trace, and interpolating to find the point where the integrated power equals $(1 - [\text{Occ BW \% Pwr}]) / 2$ (0.5% if, for example, the 99% occupied bandwidth is to be found) of the total power, frequency f1 is obtained. This procedure is repeated from the upper trace edge to find frequency f2. This calculation uses linear interpolation to find the lower and upper carrier boundary point within the width of a sweep point (the span divided by the number of sweep points), f1 and f2
From Center	<code>ICENter</code>	Measures the power spectrum distribution within two times or more frequency range over the requirement for Occupied Bandwidth specification centering on the current carrier frequency

Remote Command	<code>[ :SENSe]:OBwidth:INTEgration[:METHod] NORMal   ICENter</code> <code>[ :SENSe]:OBwidth:INTEgration[:METHod]?</code>
Example	<code>:OBW:INT NORM</code>

	<b>:OBW:INT?</b>	
Preset	For 5GNR Mode, Uplink:	<b>ICENter</b>
	All other Modes	<b>NORMal</b>
State Saved	Yes	
Range	<b>NORMal   ICENter</b>	

## Spur Avoidance

Because VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed.

When **Spur Avoidance** is enabled (the default), the instrument uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates in the multiple capture case.

You can disable this function to speed up your measurement by setting **Spur Avoidance** to “Disabled.”

Note that when **Spur Avoidance** is not in effect, either because you have disabled it or because you are not in multiple capture, the following warning message will appear in the status bar:

**Settings Alert;Spur Avoidance Off**

This is to alert you that measurement accuracy might be impacted by the fact that **Spur Avoidance** is not in effect.

The spur avoidance function is not available for:

- M9410A/11A with EP6 option at frequency above 6 GHz
- M9415A/16A at frequency below 380 MHz and above 12.3 GHz
- M9410E/11E/15E/16E at frequency below 380 MHz and above 25.9 GHz

Remote Command	<b>[ :SENSe]:OBWidth:SAVoid[:STATe] OFF   ON   0   1</b> <b>[ :SENSe]:OBWidth:SAVoid[:STATe]?</b>
Example	<b>:OBW:SAV ON</b> <b>:OBW:SAV?</b>
Dependencies	Only appears in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	<b>OFF</b>

State Saved	Saved in instrument state
Range	OFF   ON

### Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

### Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 424 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL   NONE
Backwards Compatibility Notes	: COUP :NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

## Measurement-Specific Details

### TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

### Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

## Meas Preset

Restores all measurement parameters to their default values.

---

Remote Command    `:CONFigure:OBWidth`

---

Example            `:CONF:OBW`

## Max Hold (Remote Command Only)

When **ON**, **Max Hold** displays and holds the maximum responses of the current measurement. Turn **Max Hold****OFF** to disable the maximum hold feature.

---

Remote Command    `[ :SENSe]:OBWidth:MAXHold ON | OFF | 1 | 0`

`[ :SENSe]:OBWidth:MAXHold?`

---

Example            `:OBW:MAXH ON`

`:OBW:MAXH?`

---

Couplings         **Max Hold** is coupled to "**Averaging On/Off**" on page 419. **Max Hold** is activated only if **Average** state is **ON**. If **Max Hold** is changed to **ON** when **Average** state is **OFF**, **Average** state is automatically set to **ON**

---

Preset             **OFF**

---

State Saved        Yes

---

Range              **OFF | ON**

---

Backwards         `[ :SENSe]:EBWidth:MAXHold`

Compatibility  
 SCPI

### 3.3.8.2 Limits

Lets you set measurement limits and be alerted when they have been exceeded.

## Limit Test

Toggles the limit test.

---

Remote Command    `:CALCulate:OBWidth:LIMit[:TEST] ON | OFF | 1 | 0`

`:CALCulate:OBWidth:LIMit[:TEST]?`

---

Example            `:CALC:OBW:LIM 0`

`:CALC:OBW:LIM?`

---

Dependencies       Only appears in LTEAFDD/LTEATDD and 5GNR Modes

---

Preset             **ON**

State Saved	Saved in instrument state
Range	ON OFF

## Bandwidth

Sets the limit bandwidth for OBW measurement.

Remote Command	<code>:CALCulate:OBWidth:LIMit:FBLimit &lt;freq&gt;</code> <code>:CALCulate:OBWidth:LIMit:FBLimit?</code>
Example	<code>:CALC:OBW:LIM:FBL 10</code> <code>:CALC:OBW:LIM:FBL?</code>
Dependencies	Only appears in LTEAFDD/LTEATDD and 5GNR Modes
Preset	Automatically calculated
State Saved	Saved in instrument state
Min/Max	1 kHz/Depends on instrument maximum frequency
Remote Command	<code>:CALCulate:OBWidth:LIMit:FBLimit:AUTO ON   OFF   1   0</code> <code>:CALCulate:OBWidth:LIMit:FBLimit:AUTO?</code>
Example	<code>:CALC:OBW:LIM:FBL:AUTO OFF</code> <code>:CALC:OBW:LIM:FBL:AUTO?</code>
Dependencies	Only available in LTE-A and 5G NR Modes
Couplings	When the state of limit bandwidth is <b>ON</b> , the bandwidth value is automatically determined by multi-carrier configuration (system bandwidth and freq offset of each component carrier). Otherwise, the bandwidth value depends on user input When the bandwidth value is set manually, the state of limit bandwidth automatically changes to <b>OFF</b>
Preset	<b>ON</b>
State Saved	Yes
Range	Auto   Man

### 3.3.8.3 Radio

Contains controls to select link direction.

## Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace

### 3 LTE & LTE-A TDD Mode

#### 3.3 Occupied BW Measurement

results available and the default traces presented change based on the link direction parameter.

Remote Command	<code>[ :SENSe]:RADio:STANdard:DIRection DLINK   ULINK</code> <code>[ :SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

## eMTC Analysis

Enable/Disables the eMTC analysis function.

Remote Command	<code>[ :SENSe]:RADio:STANdard:EMTC[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:RADio:STANdard:EMTC[:STATe]?</code>
Example	<code>:RAD:EMTC:STAT OFF</code>
Dependencies	This parameter requires N9080EM3E license
Preset	OFF
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:EMTC[:STATe]</code>

## Interfering Signal Present

Sets whether interfering signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in ACP, SEM and Spurious Emissions.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:RADio:IMODulation:INTerference[:STATe]?</code>
Example	<code>:RAD:IMOD:INT 1</code>

	<code>:RAD:IMOD:INT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	Yes No

## Freq Offset from Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min/Max	0 Hz / 20.0 MHz

## Span

Sets the span of the interference signal for intermodulation tests.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min/Max	200 kHz / 20.0 MHz

## Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE NEGative   POSitive</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code>

---

	<code>:RAD:IMOD:INT:SIDE?</code>
Preset	POSitive
State Saved	Saved in instrument state

---

### Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- INNER – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- OUTER – The interfering signal exists at either of the outer regions

---

Remote Command	<code>[ :SENSe ]:RADio:IMODulation:INTerference:REGion INNER   OUTER</code> <code>[ :SENSe ]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	OUTer
State Saved	Saved in instrument state

---

### 3.3.8.4 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

---

Remote Command	<code>[ :SENSe ]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe ]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1

---

State Saved	Yes
Min	1
Max	5

## Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:

- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured


Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

## Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

3 LTE & LTE-A TDD Mode  
 3.3 Occupied BW Measurement

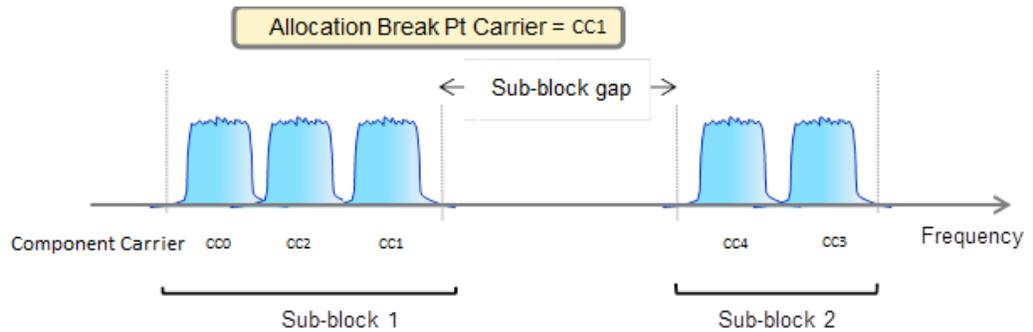

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint CC0   ...   CC4</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

### Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

### Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

### Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

### Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

## Non-Contiguous Break at

See "Non-Contiguous Break at" on page 2246.

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:BANdwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:CCARrier0 ... 4[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

### 3 LTE & LTE-A TDD Mode

#### 3.3 Occupied BW Measurement

Remote Command	<code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMal   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD)

	CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUDDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe ] :RADio :STANdard :ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :DGPU CONF0   ...   CONF9</code> <code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :DGPU?</code>
Example	<code>:CCAR0 :RAD :STAN :DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe ] :RADio :STANdard :DGPU</code>

## Sidelink Mode

Set the sidelink mode per uplink component carrier. The setting is used to indicate whether the component carrier is cellular LTE or sidelink V2X. There are two modes listed as below:

- None: The component carrier is legacy LTE uplink carrier. The lte uplink parameters per carrier are in scope
- V2X: The component carrier is sidelink V2X carrier. The sidelink parameters per carrier are in scope

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:SLINK:MODE NONE   V2X</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:SLINK:MODE?</code>
Example	<code>:CCAR4:RAD:SLIN:MODE V2X</code>
Notes	The setting is available when Direction is Uplink with the required license
State Saved	Yes
Range	None   V2X

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

System Bandwidth	CHP Integ BW
1.4 MHz (B1M4)	1.4 MHz
3 MHz (B3M)	3 MHz
5 MHz (B5M)	5 MHz
10 MHz (B10M)	10 MHz
15 MHz (B15M)	15 MHz
20 MHz (B20M)	20 MHz
200 kHz(B200K)	200 kHz

Preset	5 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] :CHPower :BANDwidth :INTEgration</code>
	<code>[ :SENSe ] :CHPower :BWIDth :INTEgration</code>

### ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :ACPpower :BANDwidth [ 1 ]   2 :INTEgration &lt;freq&gt;</code>
	<code>[ :SENSe ] :CCARrier0   ...   4 :ACPpower :BANDwidth [ 1 ]   2 :INTEgration ?</code>
Example	<code>:CCAR0 :ACP :BAND :INT 20MHz</code>
	<code>:CCAR0 :ACP :BAND :INT ?</code>

Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRument:SElect to set the mode
-------	--

Couplings When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
3 MHz (B3M)	2.715 MHz	2.7 MHz
5 MHz (B5M)	4.515 MHz	4.5 MHz
10 MHz (B10M)	9.015 MHz	9.0 MHz
15 MHz (B15M)	13.515 MHz	13.5 MHz
20 MHz (B20M)	18.015 MHz	18.0 MHz
200 kHz (B200K)	180 kHz	180 kHz

Preset	4.515 MHz 4.5 MHz
State Saved	Yes
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BANDwidth [ :INTEgration ]</code>
	<code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BWIDth [ :INTEgration ]</code>

## SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration?</code>																								
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>																								
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS SEM Integ BW</th> <th>MS SEM Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Saved in instrument state																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:SEMAsk:BANDwidth[1] 2:INTEgration</code>																								

## Carrier Config Presets

Lets you configure the Component Carrier presets.

## Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

## Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code> <code>:CCAR:CONF:SPAC:DELTA?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

## Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

### ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BAWdth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BAWdth?</code>
Example	<code>:CCAR:CONF:ETC1:BAWd B5M</code> <code>:CCAR:CONF:ETC1:BAWd?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

## Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

## ETC2 Attributes

Sets ETC2 carrier configuration.

## Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

## Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

3 LTE & LTE-A TDD Mode  
 3.3 Occupied BW Measurement

- NEGative – Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive – Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG</code> <code>:CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

### Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M</code> <code>:CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	---

	<code>[ :SENSe ] :CCARrier:CONFig:ETC3:BANdwidth?</code>
Example	<code>:CCAR:CONF:ETC3:BANd B5M</code> <code>:CCAR:CONF:ETC3:BANd?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### 3.3.8.5 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

### System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command `RAD:STAN:PRES B5M` or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote	<code>[ :SENSe ] :RADio:STANdard:PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
--------	--

### 3 LTE & LTE-A TDD Mode

#### 3.3 Occupied BW Measurement

Command	
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section "Values for each Preset To Standard". And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

### UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:RADio:STANdard:PRESet:ULDL?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

### Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
----------------	---

Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

## Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[ :SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

## Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>						
Example	<code>:RAD:MINT 1</code>						
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes						
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>						
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH: <table border="1" data-bbox="406 1102 1404 1228"> <thead> <tr> <th>Meas NPRACH</th> <th>Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						
Preset	1						
State Saved	Yes						
Min	1						
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise						
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTime:MINInterval</code>						

### CP Length

Specifies whether the cyclic prefix is configured as NORMAL or EXTENDED for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:CPLength NORMal   EXTended</code> <code>[ :SENSe]:RADio:CPLength?</code>
Example	<code>:RAD:CPL NORM</code>
Notes	The backwards compatible SCPI command <code>[ :SENSe]:PVTIme:CPLength</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to “200 kHz (NB-IoT)” and Direction is “uplink”
Couplings	Set to NORMAL when System BW is set to “200 kHz (NB-IoT)”
Preset	NORMAL
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTIme:CPLength</code>

## Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe]:RADio:MEASure?</code>
Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

## Reference Config

Specifies which component carrier’s UL DL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code>
----------------	--

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

	<a href="#">[:SENSe]:RADio:RCONfig?</a>
Example	<a href="#">:RAD:RCON CC0</a>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.3.8.6 Advanced

Contains controls for setting advanced functions of the instrument. This tab does not appear in EXM, nor in VXT models M9420A/10A/11A.

### Noise Floor Extension

Lets you configure **Noise Floor Extension** (NFE). All Modes that support NFE let you set it on or off. Additionally, some Modes support two “on” states for NFE, **Full** and **Adaptive**, as described below.

### Adaptive Option Support

At present (Release: X-Apps 2024), support for **Adaptive** NFE is as follows:

Mode	Measurements	Supports Adaptive NFE?
BT	ACP, IBEM, IBSP	No
CQM	MON	Yes
EDGE GSM	EORF, ETSP, MON	No
EMI	APD, DAN, FSC, MON, RTSC, SCH	Yes
LTEAFDD	PVT	No
LTEATDD	PVT	No
MSR	ACP, CHP, MON, OBW, SEM, SPUR	Yes
NR5G	PVT	No
PNOISE	LPL, MON, SFR	No
SA	SAN	Yes
SRCOMMS	ACP, CHP, MON, OBW, SEM, SPUR	Yes
VMA	ACP, CHP, OBW, SEM, SPUR	Yes
WCDMA	ACP, CHP, MON, OBW, SEM, SPUR	Yes
WLAN	CHP, MON, OBW, SEM, SPUR	Yes

The menus and command options are as follows:

NFE State	Modes with Adaptive NFE	Modes without Adaptive NFE	SCPI
Off	Off	Off	See "NFE On/Off Command" on page 449
On	Full	On	
Adaptive	Adaptive	n/a	See "Adaptive NFE Command" on page 450

As shown in the table above, the **On** state (in Modes that do not support **Adaptive NFE**) matches the **Full** state in Modes that *do* support **Adaptive NFE**.

To maintain SCPI backwards compatibility, the existing command to turn NFE on or off is retained, and a new command is added to set the state to turn **AdaptiveON** or **OFF**:

- `[[:SENSe]:CORRection:NOISe:FLOOr ON|OFF|1|0]` is retained, with the default changed to **ON** for Modes that support **Adaptive NFE**
- `[[:SENSe]:CORRection:NOISe:FLOOr:ADAPtive ON|OFF|1|0]` is added (for certain Modes), default = **ON**

When NFE is **On** or **Full**, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

NFE works with any RBW, VBW, detector, any setting of **Average Type**, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to **Average** or **Peak**). It works best with extreme amounts of smoothing, and with the average detector, with the **Average Type** set to **Power**.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the **Average** detector, results are better with long sweep times and fewer trace averages. When using the **Sample** detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

NOTE

**Noise Floor Extension** has no effect unless the RF Input is selected, so when External Mixing is selected, it does nothing.

For more details, see "Optimal Detector & Averaging Selections" on page 450 and "Recalibration of Noise Floor" on page 451.

## Pros & Cons of Adaptive NFE

**Adaptive** NFE provides an alternative to fully-on or fully-off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. **Adaptive** NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement—those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the fully-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

In **Adaptive** NFE, there is not the same dramatic visual impact on the noise floor as there is in **Full** NFE. **Adaptive** NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. **Adaptive** NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the fully-off case; and when lots of averaging is being performed, the signal displays more like the **Full** NFE case.

**Adaptive** NFE is recommended for general-purpose use. For fully-ATE (automatic test equipment) applications, where possible distraction of the instrument user is not a risk, **Full** NFE is recommended.

## NFE On/Off Command

Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOor ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear. In those cases, the SCPI command is accepted without error, but has no effect
Couplings	When NFE is enabled in any Mode manually, a prompt is displayed reminding you to perform the <b>Characterize Noise Floor</b> operation if it is needed When NFE is enabled through SCPI, and a <b>Characterize Noise Floor</b> operation is needed, an error is entered in the system error queue
Preset	Unaffected by <b>Mode Preset</b> . Turned <b>ON</b> at startup and by <b>Restore Mode Defaults</b> in Modes that support <b>Adaptive</b> . Turned <b>OFF</b> at startup and by <b>Restore Mode Defaults</b> in Modes that do <i>not</i> support <b>Adaptive</b> In Modes that support <b>Adaptive</b> NFE, the default (preset) state of NFE is <b>Adaptive</b> . In Modes that do not support <b>Adaptive</b> NFE, the default state of NFE is <b>Off</b>
State Saved	No

## Adaptive NFE Command

Only effective in instruments with the NFE or NF2 license installed, and in Modes that support **Adaptive** NFE. For coverage, see "[Adaptive Option Support](#)" on page 447 above.

For all other cases, the SCPI command below is accepted without error, but has no effect.

Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOOr:ADAPtive ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOOr:ADAPtive?</code>
Example	First turn NFE on, this is <b>Full</b> mode <code>:CORR:NOIS:FLO ON</code>  Then set it to <b>Adaptive</b> <code>:CORR:NOIS:FLO:ADAP ON</code>
Couplings	To maintain backwards compatibility, sending <code>:CORR:NOIS:FLO ON</code> turns NFE <b>AdaptiveOFF</b> . To turn <b>Adaptive</b> on, you must issue the commands in the proper order, as shown in the example above
Preset	Not affected by <b>Mode Preset</b> , but set to <b>ON</b> at startup and by <b>Restore Mode Defaults</b>
State Saved	No

### Optimal Detector & Averaging Selections

Note that some measurements do not allow you to switch the **Detector** type (which is set by default to **Average**), so the discussion of detector types here is irrelevant for those measurements. Similarly, some measurements do not allow you to set **Average Type** (set by default to **LOG**), so that discussion here is irrelevant in those cases.

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to obtain the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power,

leaving just the signal power. This is the operation when **Detector** is **Average** and **Average Type** is set to **Power (RMS)**.

For best operation, **AverageDetector** (default) and **Average Type. = Power** are recommended, as already stated. In other cases, operation is often not quite as good but still highly effective. Other **Detector** options, when available, behave as follows:

<b>Positive Peak</b>	The noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage <b>Positive Peak</b> is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise For pulsed-RF, <b>Positive Peak</b> can still give excellent effectiveness FFT analysis does not work well, and does not perform NFE well, with pulsed-RF signals, so this combination is <i>not</i> recommended
<b>Negative Peak</b>	Not very useful
<b>Sample</b>	Works well, but never better than <b>Average</b> , because it does not smooth as well
<b>Normal</b>	A combination of peak and negative peak behaviors, and works about as well as these

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points makes the buckets longer.

For best operation, **Average Type = Power (RMS)** is optimal (when this option is available). When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. Using NFE with **Average Type = Log-Power (LOG)** is not synergistic, though; NFE with **Average Type = Power (RMS)** works a little better than NFE with **LOG**.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of -174 dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that exceeds the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

### Recalibration of Noise Floor

In instruments with the NF2 license installed, the calibrated noise floor used by **Noise Floor Extension** should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, *and* once every calendar year. To do this, use "**Characterize Noise Floor**" on page 2392, under **System, Alignments, Advanced**. If you have not done this

yourself at the recommended interval, then when you turn on **Noise Floor Extension**, the instrument will prompt you to do so with a dialog stating:

*This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week*

If you cancel, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

## IF Gain

Sets the **IF Gain** function to one of:

Setting	SCPI	Comments
Auto	<code>AUTO = ON</code>	Auto
Low	<code>OFF</code>	Low Gain
High	<code>AUTO = OFF</code> <code>ON</code>	High Gain
	<code>AUTO = OFF</code>	

This setting affects sensitivity and IF overloads. It only applies to the RF input; not to the baseband I/Q input.

Remote Command	<code>[ :SENSe]:OBWidth:IF:GAIN[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:OBWidth:IF:GAIN[:STATe]?</code> <code>[ :SENSe]:OBWidth:IF:GAIN:AUTO[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:OBWidth:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:OBW:IF:GAIN ON</code> <code>:OBW:IF:GAIN?</code> <code>:OBW:IF:GAIN:AUTO OFF</code> <code>:OBW:IF:GAIN:AUTO?</code>
Dependencies	Has no effect when the U7227A USB Preamplifier is connected. This is not annotated or reflected on any control; there are no controls grayed-out nor any SCPI locked out. The instrument simply behaves as though both IF Gain is set to Low regardless of the setting on the control Not available in VXT models M9420A/10A/11A, EXM, or UXM
Couplings	<b>Auto</b> sets <b>IF Gain</b> to High ( <b>ON</b> ) under any of the following conditions: <ul style="list-style-type: none"> <li>- The input attenuator is set to 0 dB, or</li> <li>- The preamp is turned on and the frequency range is under 3.6 GHz</li> </ul> For other conditions, <b>Auto</b> sets <b>IF Gain</b> to Low ( <b>OFF</b> )

Preset	OFF OFF
State Saved	Saved in instrument state
Range	Low Gain   High Gain

### 3.3.8.7 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "[Global Center Freq](#)" on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

### Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "[Restore Defaults](#)" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:CENTer ALL   NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE

Preset	OFF
Backwards Compatibility SCPI	:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF :GLOBal:FREQuency:CENTer[:STATe]?

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTRument:COUPlE:EMC:STANdard ALL   NONE :INSTRument:COUPlE:EMC:STANdard?
Example	:INST:COUP:EMC:STAN ALL :INST:COUP:EMC:STAN?
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

### 3 LTE & LTE-A TDD Mode

#### 3.3 Occupied BW Measurement

Remote Command	:INSTrument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF
Example	:INST:COUP:FREQ:BAND:EXT 1 :INST:COUP:FREQ:BAND:EXT?
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	ON OFF

### Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	:INSTrument:COUPle:DEFault
Example	:INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault

### 3.3.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time, Continuous/Single, Pause/Resume, X Scale** and **Number of Points**.

#### 3.3.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

### Sweep Time

Controls the time the instrument takes to sweep the current frequency span in swept measurements, displays the sweep time in swept measurements, and displays the equivalent Sweep Time in FFT measurements.

When **Sweep Time** is in Auto, the instrument computes a time that will give accurate measurements based on other settings, such as RBW and VBW.

You can select a shorter sweep time to improve the measurement throughput (with some potential unspecified accuracy reduction), but the **Meas Uncal** indicator will appear if the sweep time you set is less than the calculated Auto Sweep time.

You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters.

**NOTE** Significantly faster sweep times are available with Option FS1.

**NOTE** The **Meas Uncal** (measurement uncalibrated) warning is displayed in the Status Bar at the bottom of the screen when the manual Sweep time entered is faster than the time computed by the instrument's Sweep time equations, that is, the Auto Sweep Time. The instrument's computed Sweep time will provide accurate measurements; if you sweep faster than this your measurements may be inaccurate. A **Meas Uncal** condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW.

**NOTE** On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate. It is the measurement's turnaround time, which is the sum of signal acquisition time, FFT time, and other overhead time, to complete the entire span of the measurement. If you need to specify the same "Sweep Time" as you would for sweeping hardware, send `[ :SENSe ] :<meas> :SWEEp:TIME <time>`. The measurement emulates the "Sweep Time" effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using Minimum Acquisition Time, which provides better control.

Remote Command	<code>[ :SENSe ] :&lt;meas&gt; :SWEEp:TIME &lt;time&gt;</code> <code>[ :SENSe ] :&lt;meas&gt; :SWEEp:TIME?</code>
Example	Channel Power measurement: <code>:CHP:SWE:TIME 25ms</code> <code>:CHP:SWE:TIME?</code>
Notes	In the ACP measurement in WCDMA Mode, this parameter is preset by <b>Meas Method</b> selection. Preset values are as follows: <ul style="list-style-type: none"> <li>- IBW: 29 ms</li> <li>- IBWR: 108 ms</li> <li>- FAST 7.5 ms</li> </ul>
Dependencies	On non-sweeping hardware, this control is grayed out, and the Auto/Man toggle disappears. The read-only control shows estimated sweep time In those instruments, " <a href="#">Minimum Acquisition Time</a> " on page 2127 is available
Couplings	Coupled to <b>Span</b> , <b>RBW</b> , <b>VBW</b> , and <b>Sweep Time Rules</b> when <b>Sweep Time</b> is set to Auto; <b>Sweep Time</b> changes when these parameters are changed When you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b>
Preset	Automatically Calculated unless noted below

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

	WCDMA Mode
	<ul style="list-style-type: none"> <li>- Channel Power: 1.0 msOBW: 32.6 ms</li> <li>- ACP: 29 ms</li> </ul>
State Saved	Saved in instrument state
Min	Other than non-sweeping hardware: Typically, 1 ms Non-sweeping hardware: N/A In the ACP measurement, when <b>Meas Method</b> is <b>Fast Power</b> , the minimum sweep time is span-dependent and automatically calculated
Max	Other than non-sweeping hardware: 4000 s Non-sweeping hardware: N/A
Annotation	The sweep time is displayed in the lower-right corner of the screen. The number of points is displayed parenthetically, as: Sweep 13.3 ms (1001 points) A “#” mark appears before “Sweep” in the annotation when it is switched from Auto to Manual coupling
Status Bits/OPC dependencies	Meas Uncal is Bit 0 in the register: <b>STATus:QUESTionable:INTEgrity:UNCalibrated</b>
	Auto Function
Remote Command	<b>[ :SENSe]:&lt;meas&gt;:SWEep:TIME:AUTO OFF   ON   0   1</b> <b>[ :SENSe]:&lt;meas&gt;:SWEep:TIME:AUTO?</b>
Example	Channel Power measurement: <b>:CHP:SWE:TIME:AUTO OFF</b> <b>:CHP:SWE:TIME:AUTO?</b>
Preset	WCDMA Mode <b>OFF</b> All others <b>ON</b>

### Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides Span into multiple chunks if needed. Therefore, the total signal acquisition time for the entire Span is:

$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$

When in Auto, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<code>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME &lt;time&gt;</code> <code>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME?</code> <code>&lt;meas&gt;</code> is the identifier for the current measurement; any one of <code>CHPower- ACPower OBWidth MONitor</code>
Example	Channel Power measurement <code>:CHP:SWE:ACQ:TIME 500 ms</code> <code>:CHP:SWE:ACQ:TIME?</code>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to <b>Span</b> , <b>RBW</b> , and <b>VBW</b> when in the Auto state When you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b>
Preset	Automatically calculated
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks
Auto Function	
Remote Command	<code>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME:AUTO?</code> <code>&lt;meas&gt;</code> is the identifier for the current measurement; any one of <code>CHPower- ACPower OBWidth MONitor</code>
Example	Channel Power measurement: <code>:CHP:SWE:ACQ:TIME:AUTO OFF</code>
Preset	ON

## Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 459

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

Remote Command	<code>:INITiate:CONTinuous OFF   ON   0   1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into <b>Single</b> measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into <b>Continuous</b> measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	<b>ON</b> Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to <b>ON</b> , but <code>*RST</code> sets <code>:INIT:CONT</code> to <b>OFF</b>
State Saved	Saved in instrument state
Annunciation	The <b>Single/Continuous</b> icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> <li>- A line with an arrow is <b>Single</b></li> <li>- A loop with an arrow is <b>Continuous</b></li> </ul>
Backwards Compatibility Notes	X-Series A-models had <b>Single</b> and <b>Cont</b> hardkeys in place of the <b>SweepSingleCont</b> softkey. In the X-Series A-models, if in single measurement, the <b>Cont</b> hardkey (and <code>INIT:CONT ON</code> ) switched to continuous measurement, but never restarted a measurement and never reset a sweep X-Series B-models have a <b>Cont/Single</b> toggle control instead of <b>Single</b> and <b>Cont</b> hardkeys, but it is still true that, if in single measurement, the <b>Cont/Single</b> toggle control never restarts a measurement and never resets a sweep

### More Information

Continuous Mode	The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the <b>Average/Hold Num</b> , the count stops incrementing, but the instrument keeps sweeping See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used both before and after the <b>Average/Hold Num</b> is reached. The trigger condition must be met prior to each sweep The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b> , <b>Max Hold</b> , or <b>Min Hold</b>
Single Mode	The instrument takes a single sweep when in <b>Single</b> mode, or if in average or Max/Min Hold, or if there is a <b>Waterfall</b> window displayed, it takes multiple sweeps until the average/hold count reaches the <b>Average/Hold Num</b> , then the count stops incrementing, and the instrument stops sweeping See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used. The trigger condition must be met prior to the sweep The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b> , <b>Max Hold</b> , or <b>Min Hold</b>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- `:INIT:CONT 1` has no effect
- `:INIT:CONT 0` places the instrument in Single Sweep but has no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state

See "[Restart](#)" on page 2279 for details of `:INIT:IMMEDIATE`.

If the instrument is already in **Single** sweep, `:INIT:CONT OFF` has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

## Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See "[More Information](#)" on page 461

3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

Remote Command	:INITiate[:IMMEDIATE]
Example	:INIT:IMM :INIT:REST
Notes	:INIT:REST and :INIT:IMM perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <b>STATUS:OPERation</b> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <b>STATUS:QUESTionable</b> register bit 9 ( <b>INTEGRity</b> sum) is cleared The <b>SWEEPING</b> bit is set The <b>MEASURING</b> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command restarted trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> In X-Series, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well

### More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC: AVER: TCON UP**.

## Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
<b>Clear/Write</b> pressed (even if already in Clear/Write)	Set to mintracevalue
<b>Max Hold</b> pressed (even if already in Max Hold)	Set to mintracevalue
<b>Min Hold</b> pressed (even if already in Min Hold)	Set to maxtracevalue
<b>Trace Average</b> pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
<b>Restart</b> pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

## Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count k to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

## Averaging

The weighting factor used for averaging is  $k$ . This  $k$  is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This  $k$  is used for comparisons with  $N$ , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold,  $K$ , shows the count for the sweep (data acquisition) in progress.  $K = k + 1$ , with a limit of  $N$ . The displayed value  $K$  changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

---

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

---

## Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

---

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>

---

Notes	<p>If <b>:INIT:CONT</b> is <b>ON</b>, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If <b>:INIT:CONT</b> is <b>OFF</b>, then <b>:INIT:IMM</b> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, <b>:ABORT</b> is equivalent to the <b>Restart</b> key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The <b>STATUS:OPERation</b> register bits 0 through 8 are cleared, <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The <b>STATUS:QUEStionable</b> register bit 9 (<b>INTEgrity</b> sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by <b>:ABORT</b>, the Abort command will cause the <b>*OPC</b> query to return true</p>

### Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

This value is also displayed in the result trace window.

The value returned is the estimated turnaround time of each measurement cycle, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire span of each measurement cycle.

Remote Command	<p><b>[ :SENSe ] : &lt;meas&gt; : SWEep : ETIME?</b></p> <p><b>&lt;meas&gt;</b> is the identifier for the current measurement; any one of <b>CHPower-   ACPower   OBWidth   MONitor</b></p>
Example	<p>Channel Power measurement</p> <p><b>:CHP:SWE:ETIME?</b></p>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

### 3.3.9.2 Sweep Config

Accesses controls that let you configure the sweep and control functions of the instrument, such as "[Sweep Time Rules](#)" on page 464.

#### Sweep Time Rules

Switches the instrument between normal and accuracy sweep states:

Accy	<b>ACCuracy</b>
Norm	<b>NORMal</b>

Setting **Auto Sweep Time** to **Accy** results in slower sweep times, usually about three times as long, but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **Accy**.

Additional amplitude errors which occur when **Auto Sweep Time** is set to **Norm** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **Norm** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **Norm** on a **Preset**. This means that in the Preset state, instrument amplitude accuracy specifications do not apply.

Remote Command	<code>[ :SENSe]:OBWidth:SWEep:TIME:AUTO:RULes NORMa1   ACCuracy</code> <code>[ :SENSe]:OBWidth:SWEep:TIME:AUTO:RULes?</code>
Example	<code>:OBW:SWE:TIME:AUTO:RUL NORM</code> <code>:OBW:SWE:TIME:AUTO:RUL?</code>
Dependencies	Does not appear in Spectrum Analyzer Mode in VXT model M9420A
Preset	<code>NORMa1</code>
State Saved	Saved in instrument state
Range	<code>NORMa1   ACCuracy</code>

## Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time. However, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available to the user will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the instrument. Since markers are read at the point location, the marker reading may change. The sweep time resolution will change. Trace data for all the traces will be cleared and, if **Sweep** is in **Cont**, a new trace taken. If any trace is in average or hold, the averaging starts over.

Due to sweep time quantization issues, the knob and up/down keys *cannot* be used to adjust the number of points.

When in a split-screen display, each window may have its own value for points.

When sweep **Points** is changed, an informational message "Sweep points changed, all traces cleared" is displayed, and in 5G NR Mode, **Auto Sweep Points** is set to **OFF** (0).

Remote Command	<code>[ :SENSe]:OBWidth:SWEep:POINTs &lt;integer&gt;</code> <code>[ :SENSe]:OBWidth:SWEep:POINTs?</code>								
Example	<code>:OBW:SWE:POIN 501</code> <code>:OBW:SWE:POIN?</code>								
Dependencies	Not available when <b>Signal ID</b> is set to On in External Mixing Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given Not displayed in Modes that do not support Swept								
Couplings	Whenever the number of sweep points change: <ul style="list-style-type: none"> <li>- All trace data is erased</li> <li>- Any traces with <b>Update Off</b> will also go to <b>Display Off</b>Sweep time is re-quantized</li> <li>- Any limit lines that are on will be updated</li> <li>- If averaging/hold is on, averaging/hold starts over</li> <li>- <b>Auto Sweep Points</b> is set to <b>OFF</b> (5G NR Mode only)</li> </ul> <p>The resolution of setting the sweep time depends on the number of points selected</p>								
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>MSR, LTEAFDD, LTEATDD</td> <td>2001</td> </tr> <tr> <td>5GNR</td> <td>Automatically calculated</td> </tr> <tr> <td>All Others</td> <td>1001</td> </tr> </tbody> </table>	Mode	Value	MSR, LTEAFDD, LTEATDD	2001	5GNR	Automatically calculated	All Others	1001
Mode	Value								
MSR, LTEAFDD, LTEATDD	2001								
5GNR	Automatically calculated								
All Others	1001								
State Saved	Saved in instrument state								
Min	101								
Max	20001								
Annotation	On second line of annotations, in lower right corner in parenthesis behind the sweep annotation								

## IF Dithering

Lets you turn IF Dithering on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to enhance the rejection of images and internally-generated spurious signals.

Remote Command	<code>[ :SENSe]:SWEep:IF:DITHer OFF   ON   0   1</code> <code>[ :SENSe]:SWEep:IF:DITHer?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models

Preset	OFF
State Saved	Saved in instrument state

### Image Protection

Lets you turn IF Protection on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to detect and suppress images and spurs that may be present in non-preselected hardware.

IF Protection takes two sweeps and by correlating the data between them, provides a single, correct power-versus-frequency trace.

Remote Command	<code>[ :SENSe ] :SWEep:IMAGeprot OFF   ON   0   1</code> <code>[ :SENSe ] :SWEep:IMAGeprot?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	ON
State Saved	Saved in instrument state

### 3.3.10 Trace


Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces.

The "**Trace Control**" on page 2136 tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

A trace is a series of data points, each having an x and a y value. The x value is frequency (or time, in zero span) and the y value is amplitude. Each data point is referred to as a *trace point*. In any given trace, trace point 0 is the first point, and trace point (*sweep\_points* - 1) is the last. For example, in a 1001 point trace, the first point is 0 and the last is 1000. Another term sometimes used to describe traces is *bucket*. A bucket is the frequency span of a trace point, equal to the point spacing. For swept analysis, the y value in each bucket is measured while the instrument is sweeping across the bucket. The selected detector determines how it is measured.

When in **Single** Mode, Measurements and their Views save the trace data from the last acquisition. This is true on multiple screens. The marker and trace data will be present whenever the measurement is brought back into focus. The measurement switches for these measurements do not clear the traces, so the data will be present until the next acquisition is completed.

## Invalid Data Indicator

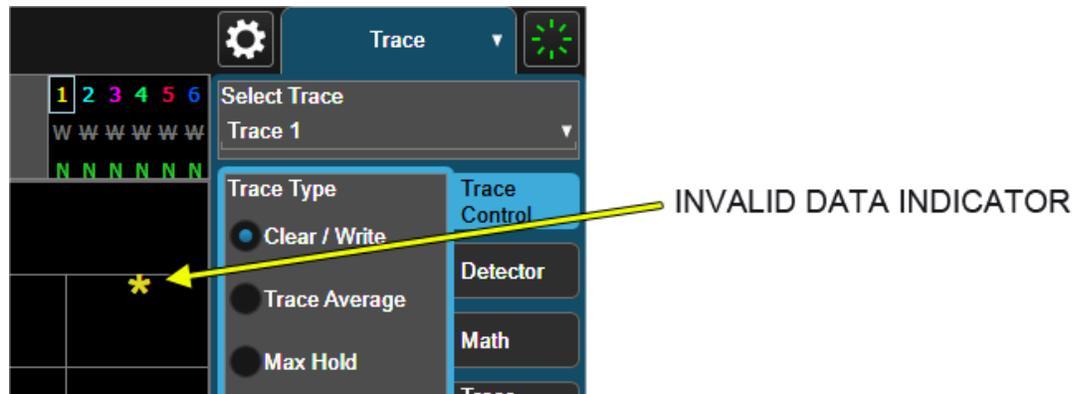

The Invalid Data Indicator is displayed whenever the data on the display does not match the settings of the instrument. The most common example of this is when instrument settings have changed in the time since the data in the traces on the display was taken. This means that the screen annotation cannot be guaranteed to match the trace data. For example, if you change **Center Frequency**, the Invalid Data Indicator will display until the trace has been retaken.

If any Trace is in View mode (displaying but not updating) and instrument settings are changed, the Invalid Data Indicator will display as long as that trace remains in View. Traces that are blanked do not turn on the Invalid Data Indicator.

Not all instrument settings require display of the invalid data indicator when they change; only changes that require a new acquisition will cause it to display. For example, changing the Y-Axis scale of the instrument does not cause the invalid data indicator to display, unless the attenuation changes.

The Invalid Data Indicator is also turned on:

- When the counter is turned on, until the completion of the first count
- When a trace is imported from mass storage and the trace's parameters do not match the current instrument settings
- When a trace is sent to the instrument from a remote interface (since there is no way to know if its settings match)


### NOTE

**The Invalid Data Indicator has an associated status bit that can be checked at any time to determine whether the indicator is on.**

## Trace right-click menu

If you right-click on a trace (or touch and hold a trace and wait for the circle to close) you will see the Trace Right-Click Menu:


3 LTE & LTE-A TDD Mode  
3.3 Occupied BW Measurement

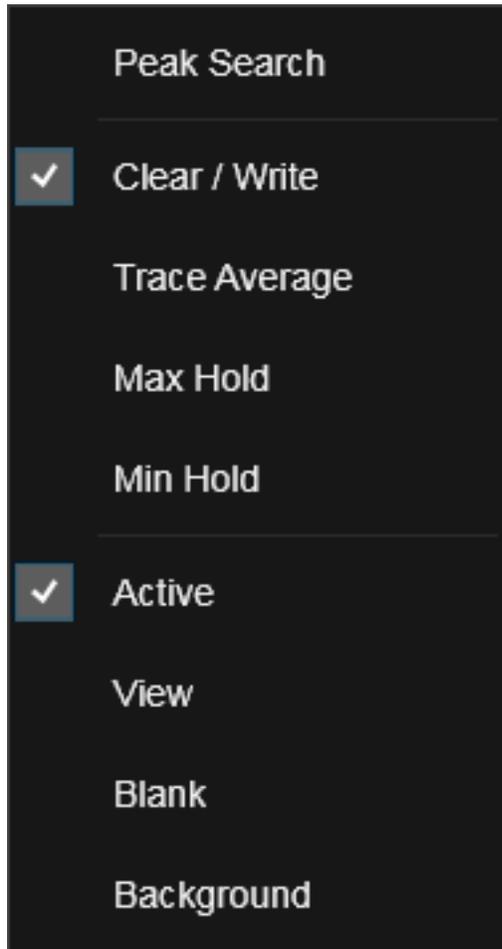

If you now tap or click on one of the items in this menu, the instrument will perform the corresponding function. **Peak Search** finds the highest peak on the selected Trace. **Clear/Write**, **Trace Average**, **Max Hold** and **Min Hold** set the "Trace Type" on [page 2137](#). **Active**, **View**, **Blank**, and **Background** set the "View/Blank" on [page 2142](#) type.

#### Waterfall Window

If you right-click on the trace (or touch and hold the trace and wait for the circle to close) in the **Waterfall** window (for example, in the Spectrogram View) you will see the Waterfall Trace Right-Click Menu:

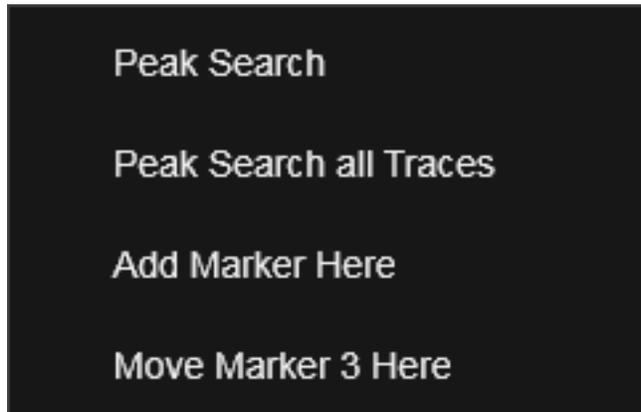

In this menu, **Peak Search** works as above. **Peak Search all Traces** finds the highest peak in the Waterfall window. **Add Marker Here** takes the lowest numbered Marker that is currently Off and turns it On as a **Normal** marker in the Waterfall window at the point where you right-clicked (or touched-and-held). **Move Marker n Here** moves the currently selected Marker to the point in the Waterfall window where you right-clicked (or touched-and-held).

### Trace Update Indicator

Trace updates can take one of two forms:

1. The trace is updated in a single operation that affects all of the points in the trace at once. This happens, for example, in the case of very fast (< 200 ms) sweeps, single-chunk FFT's, and the initial math operation after a math function is set for a trace
2. The trace is updated in a series of discrete steps, with measurement data being gathered between each step. This will be the case for slow sweeps, multi-chunk FFTs, gated sweeps, etc.

In the first case, no update indicator is required. In the second case, however, a visual indicator exists on the trace where the new data is being written. The indicator is a green caret (^), which moves across the bottom of the graticule showing the current trace point.




### Trace Annunciator Panel

This panel appears on the right hand side of the Meas Bar. Here is an explanation of the fields in this panel, as shown below:

### 3 LTE & LTE-A TDD Mode

#### 3.3 Occupied BW Measurement

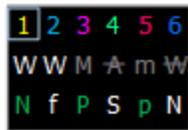

#### Top Line

On the top line, each trace number is shown, in the trace color. A box is drawn around the currently selected trace.

#### Middle Line

Below each trace number, is a letter signifying the trace type for that trace number, where

W	Clear/Write
A	Trace Average
M	Max Hold
m	Min Hold

If the letter is white, it means the trace is being updated (**Update = ON**); if the letter is dimmed, it means the trace is not being updated (**Update = OFF**). A strikethrough indicates that the trace is blanked (**Display = OFF**). Note that it is possible for a trace to be updating *and* blanked, which is useful if the trace is a trace math component.

#### Bottom Line

The third line shows the detector type for each trace, or, if trace math is on for that trace, it shows “f” (for “math function”). It is not always possible to have a unique detector for each trace, but the instrument hardware provides the maximum flexibility of detector selection in order to maintain the highest accuracy. The letters used for this readout are

N	Normal
A	Average
P	peak
p	negative peak
S	Sample
Q	Quasi Peak
E	EMI Average
R	RMS Average
f	math function

If the letter is green, the detector is in Auto. If white, the detector has been manually selected.

In the example above, the panel is indicating the following:

- Trace 1: Visible, being updated, in Clear/Write, with Normal detector auto selected
- Trace 2: Visible, being updated, in Clear/Write, being written to with a math function
- Trace 3: Visible, not updating, data was taken in Max Hold, with the peak detector auto selected
- Trace 4: Blanked, not updating, data was taken with Averaging turned on, Sample detector manually selected
- Trace 5: Visible, not updating, data was taken in Min Hold with Negative Peak detector auto selected
- Trace 6: Blanked, not updating, in Clear/Write, with Normal detector manually selected

### Trace Annotation

When **Trace Annotation** (see **Display**) is **ON**, each non-blanked trace is labeled on the trace with the detector used to take it, unless a Trace Math function is on for that trace, in which case it is labeled with the **"Math Function"** on page 1145.

The detector labels are:

<b>NORM</b>	Normal
<b>PEAK</b>	Peak
<b>SAMP</b>	Sample
<b>NPEAK</b>	Negative Peak
<b>RMS</b>	Average detector with Power Average (RMS)
<b>LG AVG</b>	Average detector with Log-Pwr Average
<b>VAVG</b>	Average detector with Voltage Average
<b>QPEAK</b>	Quasi Peak
<b>EMI AVG</b>	EMI Average
<b>RMS AVG</b>	RMS Average

The trace math labels are:

<b>PDIF</b>	Power Difference
<b>PSUM</b>	Power Sum
<b>LOFF</b>	Log Offset
<b>LDIF</b>	Log Difference

### 3.3.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

**Select Trace** appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the <b>Trace</b> menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none"><li>- In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View</li><li>- When you turn on Image Suppress, Update turns off for all traces except the selected trace</li></ul> For the ACP measurement, when <b>Meas Method</b> is <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> , <b>Select Trace</b> is disabled
Preset	Trace 1
State Saved	Yes

### 3.3.10.2 Trace Control

The controls on this tab allow you to set the "**Trace Type**" on page 2137 and its update mode.

There are four Trace Types:

- **Clear/Write**
- **Trace Average**
- **Max Hold**
- **Min Hold**

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "**View/Blank**" on page 2142 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

## Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITE	:TRAC2:TYPE WRIT	See: " <a href="#">Clear/Write</a> " on page 477
Trace Average	AVERAge	:TRAC2:TYPE AVER	See: " <a href="#">Trace Average</a> " on page 477
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: " <a href="#">Max Hold</a> " on page 478
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: " <a href="#">Min Hold</a> " on page 478

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "[View/Blank](#)" on page 2142 state must be set to **Active** (**Update: ON**, **Display: ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "[Trace Mode Backwards Compatibility Commands](#)" on page 475

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITe   AVERAge   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE WRITe   AVERAge   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<pre>:TRAC:TYPE WRIT</pre> <pre>:TRAC:TYPE?</pre>
Couplings	<p>Selecting a <b>Trace Type</b> (by pressing any of the Trace Type selections or sending <code>:TRAC:TYPE</code>) sets the Trace to <b>Active</b> (<b>Update: ON</b>, <b>Display: OFF</b>), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<code>[ :SENSe ]: &lt;meas&gt;:DETector:AUTO?</code>), Detector (<code>[ :SENSe ]: &lt;meas&gt;:DETector[ :FUNCTION ]?</code>) switches aligning with the switch of this parameter: "<b>NORMAL</b>" with <b>WRITE</b> (Clear Write), "<b>AVERAge</b>" with <b>AVERAge</b>, "<b>POSitive</b> (peak)" with <b>MAXHold</b>, and "<b>NEGative</b> (peak)" with <b>MINHold</b></p>
Preset	<p>Swept SA and Monitor Spectrum: <b>WRITE</b></p> <p>All other measurements: <b>AVERAge</b></p> <p>Following <b>Preset</b>, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

## Trace Mode Backwards Compatibility Commands

In earlier instruments, the “Trace Modes” were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under "[View/Blank](#)" on page 2142.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The **:TRACe:MODE** command is retained for backwards compatibility, and the **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay** commands introduced for ongoing use. The old Trace Modes are selected using **:TRAC:MODE**, whose parameters are mapped into calls to **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay**, and the old global Averaging command **[ :SENSe]:AVERage[ :STATe]** is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	<b>WRITE</b>
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	<b>:TRACe[1] 2 ... 6:MODE WRITE   MAXHold   MINHold   VIEW   BLANK</b> <b>:TRACe[1] 2 ... 6:MODE?</b>
Backwards Compatibility Notes	<p>The legacy <b>:TRACe:MODE</b> command is retained for backwards compatibility. In conjunction with the legacy <b>:AVERage</b> command, it works as follows:</p> <ul style="list-style-type: none"> <li>– <b>:AVERage ON OFF</b> sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the <b>[ :SENSe]:AVERage[ :STATe]</b> command description below</li> <li>– <b>:TRACe:MODE WRITE</b> sets <b>:TRACe:TYPE WRITE</b> (Clear/Write) unless average is true, in which case it sets it to <b>:TRACe:TYPE AVERage</b>. It also sets <b>:TRACe:UPDate ON</b>, <b>:TRACe:DISPlay ON</b>, for the selected trace</li> <li>– <b>:TRACe:MODE MAXHold</b> sets <b>:TRACe:TYPE MAXHold</b> (Max Hold). It also sets <b>:TRACe:UPDate ON</b>, <b>:TRACe:DISPlay ON</b>, for the selected trace</li> </ul>

- `:TRACe:MODE MINHold` sets `:TRACe:TYPE MINHold` (Min Hold). It also sets `:TRACe:UPDate ON`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE VIEW` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE BLANK` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay OFF`, for the selected trace

The query returns the same value as `:TRACe:TYPE?`, meaning that if you set `:TRACe:MODE:VIEW` or `:TRACe:MODE:BLANK`, the query response will not be what you sent

`:TRACe[n]:MODE` was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new `:TRACe:TYPE` command should be used in the future, but `:TRACe:MODE` is retained to provide backwards compatibility

In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has

As the **Average/Hold Number** now affects **Min Hold** and **Max Hold**, the operations that restart Averaging (for example, the **Restart** key) now also restart **Min Hold** and **Max Hold**

As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does

Also, previous to X-Series:

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	<code>OFF</code>
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[ :SENSe]:AVERage[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:AVERage[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[ :SENSe]:AVERage[:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[ :SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

## Trace Type Details

### Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

### Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count  $k$  is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated

- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

### Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending `:TRAC:TYPE MAXH` for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

### Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending `:TRAC:TYPE MINH` for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

### Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 2137 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again

- the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:


- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold

### View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

<b>Active</b>	Update and Display both <b>ON</b>
<b>View</b>	Update <b>OFF</b> ; Display <b>ON</b>
<b>Blank</b>	Update <b>OFF</b> ; Display <b>OFF</b>
<b>Background</b>	Update <b>ON</b> , Display <b>OFF</b> Allows a trace to be blanked <i>and</i> continue to update "in the background", which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

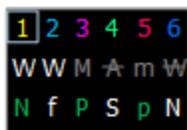

See: "[More Information](#)" on page 481

Notes	For the commands to control the two variables, Update and Display, see " <a href="#">Trace Update State On/Off</a> " on page 480 and " <a href="#">Trace Display State On/Off</a> " on page 480 below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	<p>Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in <b>Active</b> (Update <b>ON</b> and Display <b>ON</b>), even if that trace type was already selected</p> <p>Selecting a detector for a trace (pressing the key or sending [ :SENS ] :DET :TRAC) puts the trace in <b>Active</b> (Update<b>ON</b> and Display<b>ON</b>), even if that detector was already selected</p> <p>Selecting a "<a href="#">Math Function</a>" on page 1145 other than <b>OFF</b> for a trace (pressing the key or sending the equivalent command) puts the trace in <b>Active</b> (Update<b>ON</b> and Display<b>ON</b>), even if that Math Mode was already selected</p> <p>Loading a trace from a file puts that trace in <b>View</b> regardless of the state it was in when it was saved; as does being the target of a <b>Copy</b> or a participant in an <b>Exchange</b></p>

### Trace Update State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):</p> <pre>:TRAC2:UPD 0</pre>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

### Trace Display State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe]?</pre> <p>For all other measurements:</p>
----------------	--

---

	<pre>:TRACe[1] 2 3:&lt;meas&gt;:DISPlay[:STATe] ON   OFF   1   0 :TRACe[1] 2 3:&lt;meas&gt;:DISPlay[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 1 visible:  <pre>:TRAC2:DISP 1</pre></p> <p>Blank trace 3:  <pre>:TRAC3:DISP 3</pre></p>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):  <pre>1 0 0 0 0 0</pre></p> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:  <pre>1 0 0</pre></p> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

---

### More Information

When a trace becomes inactive, any update from the **:SENSe** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

### 3.3.10.3 Math

Lets you turn on and configure Trace Math functions.

#### Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "[Operand 1 / Operand 2](#)" on [page 1151](#) controls.

- See "[How trace math is processed](#)" on [page 486](#)

---

Remote Command For option details, see "[Trace Math Options](#)" on [page 484](#)  
For Swept SA Measurement (in SA Mode):  
:CALCulate:MATH <trace\_num>, PDifference | PSUM | LOFFset | LDifference | OFF, <trace\_num>, <trace\_num>, <real>,<real>  
:CALCulate:MATH? <trace\_num>  
where <trace\_num> is any one of:  
TRACE1|...|TRACE6  
For all other measurements:  
:CALCulate:<meas>:MATH <trace\_num>, PDifference | PSUM | LOFFset | LDifference | OFF, <trace\_num>, <trace\_num>, <real>,<real>  
:CALCulate[:<meas>]:MATH? <trace\_num>  
where:  
<meas> is the identifier for the current measurement, and  
<trace\_num> is any one of:  
TRACe1|TRACe2|TRACe3  
Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement

---

Example :CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0  
Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2  
:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0  
Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2  
:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0

3 LTE & LTE-A TDD Mode  
 3.3 Occupied BW Measurement

	<p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p> <p><code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code></p> <p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <p><code>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</code></p> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> <li>- Set 1 defines the “result trace”: <code>TRACE1  ...  TRACE6</code></li> <li>-Set 2 defines the “function”: <code>PDIFference PSUM LOFFset LDIFference OFF</code></li> <li>- Set 3 is a “trace operand” (1): <code>TRACE1  ...  TRACE6</code></li> <li>- Set 4 is a “trace operand” (2): <code>TRACE1  ...  TRACE6</code></li> <li>- Set 5 defines the “Log Offset” (in dB)</li> <li>- Set 6 defines the “Log Difference Reference” (in dBm)</li> </ul> <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if <b>Normalize</b> is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	When a math function is changed for a trace, that trace is set to Display = <b>ON</b> ; and Update = <b>ON</b>
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p><code>OFF,TRACE5,TRACE6,0,0   OFF,TRACE6,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0  </code>  <code>OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE4,0,0   OFF,TRACE4,TRACE5,0,0</code></p> <p>For all other measurements:</p> <p><code>OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0</code></p>
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on;

---

	and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

---

## Trace Math Options

### IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

---

The Trace Math functions are:

### Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log_{10}(10^{(1/10)(\text{FirstTrace})} - 10^{(1/10)(\text{SecondTrace})})$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

### Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

### Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

*Example:* If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

### Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-

B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

*Example:* If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at -5 dBm, and the reference is -25 dBm, then the destination trace will be -15 dBm.

*Example:* If the first operand trace 1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

If neither of the above is true for a given point, then:


- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

### How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

3 LTE & LTE-A TDD Mode  
 3.3 Occupied BW Measurement

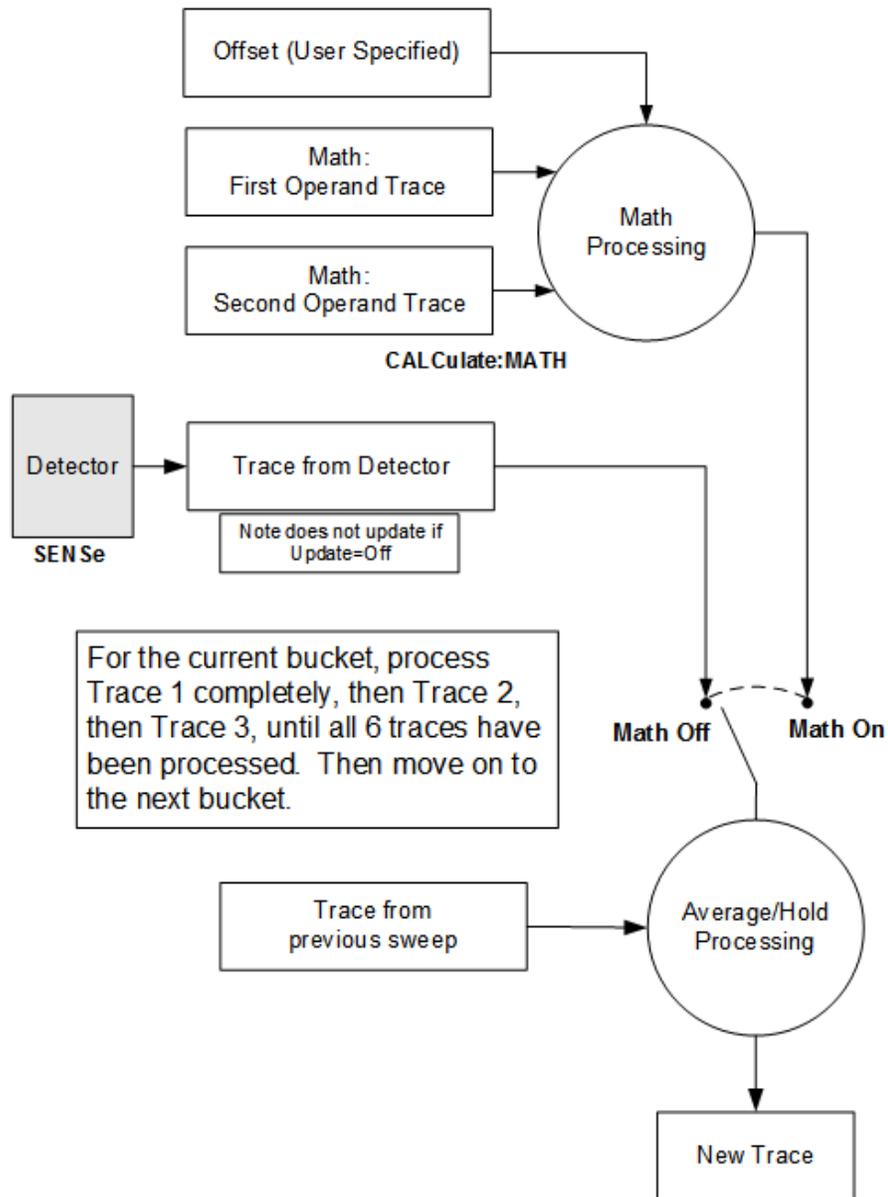

**NOTE ABOUT OFFSETS:** When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

## Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <pre><b>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</b></pre> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <pre><b>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</b></pre>
Notes	See " <a href="#">Math Function</a> " on page 1145 for how to specify Operands 1 and 2 using <b>:CALCulate:MATH</b>
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

## Offset

Used by the Log Offset math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

## Reference

Used by the Log Diff math function.

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

### 3.3.10.4 Detector

Lets you select and configure detectors for the specified trace.

## Detector

Selects a detector to be used by the instrument for the current measurement. The following selections are available:

Option	Behavior
AUTO	The detector selected depends on marker functions, trace functions, average type,

Option	Behavior
	and the trace averaging function For details, see " <a href="#">Detector Select Auto/Man</a> " on page 491
<b>NORMal</b>	The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
<b>AVERage</b>	The detector determines the average of the signal within the sweep points, using RMS averaging
<b>POSitive</b> Peak	The detector determines the maximum of the signal within the sweep points
<b>SAMPle</b>	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
<b>NEGative</b> Peak	The detector determines the minimum of the signal within the sweep points
<b>RMS</b>	Equivalent to <b>AVERage</b>

Because they may not find a spectral component's true peak, neither **AVERage** nor **SAMPle** detectors measure amplitudes of CW signals as accurately as **POSitivePeak** or **NORMal**, but they do measure noise without the biases of peak detection.

---

Remote Command `[[:SENSe]:OBWidth:DETEctor[:FUNction] NORMal | AVERage | POSitive | SAMPle | NEGative | RMS  
[:SENSe]:OBWidth:DETEctor[:FUNction]?`

---

Example `:OBW:DET NORM`  
`:OBW:DET?`

Set the detector to **Average**. **Average** uses RMS averaging, so this is equivalent to selecting an **RMS** detector:  
`:OBW:DET RMS`

---

Notes The query returns a name that corresponds to the detector type, as follows  
The **RMS** selection sets the detector type to **AVERage**, with RMS averaging. Therefore, if **RMS** had been selected, the query returns **AVER**

String Returned	Definition
<b>NORM</b>	Normal
<b>AVER</b>	Average (RMS)
<b>POS</b>	Peak
<b>SAMP</b>	Sample
<b>NEG</b>	Negative Peak

---

Couplings When "[Detector Select Auto/Man](#)" on page 491 is **ON**, the values returned by the query depend on the setting of "[Trace Type](#)" on page 2137 as follows:

	Trace Type	Query Returns:
	WRITE	NORMAL
	AVERAGE	AVERAGE
	MAXHOLD	POSITIVE
	MINHOLD	NEGATIVE
Preset	AVERAGE	
State Saved	Saved in instrument state	
Range	NORMAL   AVERAGE   POSITIVE   SAMPLE   NEGATIVE   RMS	

### Detector Select Auto/Man

Sets the Detector mode to **Auto (ON)** or **Man (OFF)**. In **Auto**, the proper detector is chosen based on rules that take into account the measurement settings and other instrument settings.

When you select any "Detector" on page 489 manually, this setting reverts automatically to **Man** (manual).

Remote Command	[:SENSe]:OBWidth:DETECTOR:AUTO ON   OFF   1   0	
	[:SENSe]:OBWidth:DETECTOR:AUTO?	
Example	:OBW:DET:AUTO ON	
	:OBW:DET:AUTO?	
Couplings	When <b>ON</b> , the query "Detector" on page 489 returns values that depend on the setting of "Trace Type" on page 2137 as follows:	
	Trace Type	Query Returns:
	WRITE	NORMAL
	AVERAGE	AVERAGE
	MAXHOLD	POSITIVE
	MINHOLD	NEGATIVE
Preset	ON	
State Saved	Yes	

### 3.3.10.5 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

## From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 1

## To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 2

## Copy

Executes a Trace Copy based on the **"From Trace" on page 1153** and **"To Trace" on page 1153** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

---

Remote Command For Swept SA Measurement (in SA Mode):  
`:TRACe:COPIY TRACE1 | ... | TRACE6, TRACE1 | ... | TRACE6`  
 For all other measurements:  
`:TRACe:<meas>:COPIY TRACe1 | TRACe2 | TRACe3, TRACe1 | TRACe2 | TRACe3`  
 where **<meas>** is the identifier for the current measurement  
 Note that the format of the **TRACe<n>** parameter differs from that for the Swept SA Measurement

---

Example Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On  
`:TRAC:COPIY TRACE1, TRACE3`

---

Notes The command is of the form:  
`:TRACe:COPIY <source_trace>, <dest_trace>`

---

Dependencies When Signal ID is on, this key is grayed-out

---

Couplings The destination trace is put in **View** (Update = Off, Display = On) after the copy

---

Preset For Swept SA Measurement (in SA Mode):  
`TRACE1, TRACE2`  
 For all other measurements:  
`TRACe1, TRACe2`

## Exchange

Executes a Trace Exchange based on the "From Trace" on page 1153 and "To Trace" on page 1153 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	<p>For Swept SA Measurement (in SA Mode):  <code>:TRACe:EXCHange TRACE1   ...   TRACE6, TRACE1   ...   TRACE6</code></p> <p>For all other measurements:  <code>:TRACe:&lt;meas&gt;:EXCHange TRACe1   TRACe2   TRACe3, TRACe1   TRACe2   TRACe3</code></p> <p>where <code>&lt;meas&gt;</code> is the identifier for the current measurement</p> <p>Note that the format of the <code>:TRACe&lt;n&gt;</code> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON:  <code>:TRAC:EXCH TRACE1, TRACE2</code></p>
Notes	<p>The command is of the form:  <code>:TRACe:EXCHange &lt;trace_1&gt;, &lt;trace_2&gt;</code></p>
Couplings	Both traces are put in <b>View</b> (Update=Off, Display=On) after the exchange

## Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<code>:TRACe[ :&lt;meas&gt; ]:PRESet:ALL</code>
Example	<code>:TRAC:PRE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

## Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads `mintracevalue` into all of the points for all traces, except traces in **Min Hold**, in which case it loads `maxtracevalue`, even if **Update = OFF**.

Remote Command	<code>:TRACe[ :&lt;meas&gt; ]:CLEAr:ALL</code>
Example	<code>:TRAC:CLE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

### 3.3.10.6 Advanced

Contains controls for setting advanced trace functions of the instrument.

#### Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCH** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<pre>:CALCulate:&lt;meas&gt;:MTRace TRACe1   TRACe2   TRACe3 :CALCulate:&lt;meas&gt;:MTRace? &lt;meas&gt; is the identifier for the current measurement; any one of CHPower   ACPower   OBWidth   SEMask   SPURious   PVTime</pre>
Example	<pre>Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?</pre>
Dependencies	In the ACP measurement, this control is grayed-out when <b>Meas Method</b> is set to <b>RBW</b> or <b>FAST</b> , and only Trace 1 is enabled
Preset	<b>TRACe1</b>
State Saved	No
Range	Trace 1   Trace 2   Trace 3

## 3.4 ACP Measurement

ACP is a measurement of the amount of interference, or power, in an adjacent frequency channel. The results are displayed as a bar graph or as spectrum data, with measurement data at specified offsets.

### Measurement Commands

The general functionality of ["CONFigure" on page 2997](#), ["INITiate" on page 2998](#), ["FETCh" on page 2998](#), ["MEASure" on page 3000](#), and ["READ" on page 2999](#) are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

The following measurement commands and queries are used to configure the measurement:

<code>:INITiate:ACPower</code>	Initiates a trigger cycle for the <b>ACPower</b> measurement, but does not return any data. You must then use <code>:FETC:ACP[n]?</code> to retrieve data
<code>:CONFigure?</code>	Does not change any measurement settings Returns the long form name of current measurement, in this case, <b>ACPower</b>
<code>:CONFigure:ACPower</code>	Selects <b>ACP</b> measurement with Meas Setup settings in preset state – same as <a href="#">"Meas Preset" on page 637</a>
<code>:CONFigure:ACPower:NDEFault</code>	Selects <b>ACP</b> measurement <i>without</i> affecting settings

The following queries are used to retrieve the results:

<code>:FETCh:ACPower?</code>	Retrieves the data specified by <b>n</b>
<code>:MEASure:ACPower[n]?</code>	Switches to <b>ACP</b> measurement, restores default values, starts the measurement, then retrieves the data specified by <b>n</b>
<code>:READ:ACPower[n]?</code>	Starts the measurement, then retrieves the data specified by <b>n</b>

### Remote Command Results

The following table describes the results returned by the `:FETCh`, `:MEASure`, and `:READ` queries listed above, according to the index value **n**.

<b>n</b>	<b>Results Returned</b>
1, or not specified	Dependent on <b>Mode</b> , <a href="#">"Meas Method" on page 582</a> , <a href="#">"Power Ref" on page 676</a> , and <a href="#">"Measurement Type" on page 676</a> See <a href="#">"Measurement Results for n = 1, or no Index Specified" on page 498</a>
2	Dependent on <a href="#">"Measurement Type" on page 676</a> . See <a href="#">"Measurement Results for n = 2" on page 501</a>
3	Dependent on <b>Mode</b> and <a href="#">"Measurement Type" on page 676</a> . See <a href="#">"Measurement Results for n = 3" on page</a>

**n Results Returned**

- 502
- 4 Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 1
- 5 Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 2
- 6 Returns <Num Pts> comma-separated scalar values representing the Y values in Trace 3
- 7 Dependent on **Mode** and "Measurement Type" on page 676. See "Measurement Results for n = 7" on page 503
- 8 Only available in LTEAFDD, LTEATDD, 5GNR, MSR Modes  
Dependent on "Measurement Type" on page 676, "PSD Unit" on page 684, and "Power Ref" on page 676. See "Measurement Results for n = 8" on page 504
- 9 Only available in LTEAFDD, LTEATDD, 5GNR, MSR Modes  
Returns scalar pass/fail values (0 = passed, or 1 = failed) for the trace specified by "Measure Trace" on page 1155, determined by comparing the relative to the reference carrier and by testing the absolute power limit of the offset frequencies

#	Item
1	Inner Lower offset A - relative limit result
2	Inner Lower offset A - absolute limit result
3	Inner Upper offset A - relative limit result
4	Inner Upper offset A - absolute limit result
5	Inner Lower offset B - relative limit result
6	Inner Lower offset B - absolute limit result
7	Inner Upper offset B - relative limit result
8	Inner Upper offset B - absolute limit result
...	...

- When "Max Num of Offsets" on page 633 is 6, returns 24 results (Offset A-F: 24 = 4\*6) and when set to 12, returns 48 results (Offset A-L: 48 = 4 \* 12)
- 10 Only available in LTEAFDD, LTEATDD, 5GNR, MSR Modes  
Returns scalar values of offset results for the trace specified by "Measure Trace" on page 1155  
Numbers returned in this trace are 10 x the actual measured offsets. Note that upper and lower sides of an offset are returned separately. For example, when only outer offset A is measured with offset side both, 10 x 2 = 20 values are returned  
In the table below, f is the Number of Offsets. See "Max Num of Offsets" on page 633

#	Measurement Type	Item	Unit, if any
1		Inner = 1 or Outer = 2	
2		Offset A~L. (A = 1, B = 2, ... L = 12)	
3		Offset Side. Lower = 1 or Upper = 2	

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

n Results Returned			
#	Measurement Type	Item	Unit, if any
4	TPRef	Relative power or	dBc
	PSDRef	Relative PSD	dB
5	TPRef	Absolute power	dBm
	PSDRef	Absolute PSD	dBm/Hz, dBm/MHz*
6	TPRef	Reference power	dBm
	PSDRef	Reference PSD	dBm/Hz, dBm/MHz*
7		Reference Index 1	
8		Reference Index 2	
9		0 (Reserved)	
10		0 (Reserved)	
...			
10(f - 1) + 1		Inner = 1 or Outer = 2	
10(f - 1) + 2		Offset A~L. (A = 1, B = 2, ... L = 12)	
10(f - 1) + 3		Offset Side. Lower = 1 or Upper = 2	
10(f - 1) + 4	TPRef	Relative power	dBc
	PSDRef	Relative PSD	dB
10(f - 1) + 5	TPRef	Absolute power	dBm
	PSDRef	Absolute PSD	dBm/Hz, dBm/MHz*
10(f - 1) + 6	TPRef	Reference power	dBm
	PSDRef	Reference PSD	dBm/Hz, dBm/MHz*
10(f - 1) + 7		Reference Index 1	
10(f - 1) + 8		Reference Index 2	
10(f - 1) + 9		0 (Reserved)	
10(f - 1) + 10		0 (Reserved)	

"Measurement Type" on page 676 determines which type of power result is returned: Total Pwr Ref (TPRef) or PSD Ref (PSDRef)

\*For PSD results, the unit is determined by "PSD Unit" on page 684: DBMHZ or DBMMHZ

If any result is not available, 9.91E+37 (NaN) is returned

11 Returns Marker Table data as a series of comma separated values in the following form:

<Marker Number>,<Marker Trace>,<X>,<Y>,<Reserved>,<Reserved>

Only markers that are enabled are included. <Reserved> are returned as NaN ("Not a Number", 9.91e+37). The data is returned in the current sort order as displayed in the Marker Table

### 3.4.1 Measurement Results for n = 1, or no Index Specified

**Mode = SA, Radio Std = None, Number of carriers = 1, Only Offset A is On**

Returns 3 comma-separated values that correspond to:

#	Item	Unit, if any
1	Reference carrier power	
2	Lower-adjacent channel power of the trace specified by "Measure Trace" on page 1155	dBc
3	Upper-adjacent channel power of the trace specified by "Measure Trace" on page 1155	dBc

The values are in the current Y Axis Unit of the instrument

**Meas Method = FAST**

See also "Meas Method" on page 582

For the trace specified by "Measure Trace" on page 1155, returns 5 comma-separated scalar results in the following order:

#	Item	Result	Unit, if any
1	Reference carrier	Absolute power	dBm
2	Lower offset A	Absolute power	dBm
3	Upper offset A	Absolute power	dBm
4	Lower offset B	Absolute power	dBm
5	Upper offset B	Absolute power	dBm

**Measurement Type = Total Power Reference**

Conditions	Results															
<b>Mode:</b> LTEAFDD, LTEATDD, 5GNR, MSR <b>"Power Ref" on page 676:</b> LRCarriers LRSubblocks MPCSubblock MINSubblock	For the trace specified by "Measure Trace" on page 1155, returns comma-separated scalar results in the following order:  <table border="1"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit, if any</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0.0</td> <td></td> </tr> <tr> <td>2</td> <td>Total carrier power</td> <td>dBm</td> </tr> <tr> <td>3</td> <td>Left Reference power</td> <td>dBm</td> </tr> <tr> <td>4</td> <td>Right Reference power</td> <td>dBm</td> </tr> </tbody> </table>	#	Item	Unit, if any	1	0.0		2	Total carrier power	dBm	3	Left Reference power	dBm	4	Right Reference power	dBm
#	Item	Unit, if any														
1	0.0															
2	Total carrier power	dBm														
3	Left Reference power	dBm														
4	Right Reference power	dBm														
For all other <b>Power Ref</b> settings, see All other Modes row below																

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Conditions	Results
------------	---------

#	Item	Unit, if any
5	Lower offset A - relative power	dB
6	Lower offset A - absolute power	dBm
7	Upper offset A - relative power	dB
8	Upper offset A - absolute power	dBm
9	Lower offset B - relative power	dB
10	Lower offset B - absolute power	dBm
11	Upper offset B - relative power	dB
12	Upper offset B - absolute power	dBm
...	...	

When "Max Num of Offsets" on page 633 is 6, returns 28 results (Offset A-F:  $28 = 4 + 4 * 6$ ) and when set to 12, returns 52 results (Offset A-L:  $52 = 4 + 4 * 12$ )

If any result is not available, -999.0 is returned

This trace includes only outer offset results and their reference value(s)

All other Modes and Power Ref settings

For the trace specified by "Measure Trace" on page 1155, returns comma-separated scalar results in the following order:

#	Item	Unit, if any
1	0.0	
2	Total carrier power	dBm
3	0.0	
4	Reference power	dBm
5	Lower offset A - relative power	dB
6	Lower offset A - absolute power	dBm
7	Upper offset A - relative power	dB
8	Upper offset A - absolute power	dBm
9	Lower offset B - relative power	dB
10	Lower offset B - absolute power	dBm
11	Upper offset B - relative power	dB
12	Upper offset B - absolute power	dBm
...	...	

When "Max Num of Offsets" on page 633 is 6, returns 28 results (Offset A-F:  $28 = 4 + 4 * 6$ ) and when set to 12, returns 52 results (Offset A-L:  $52 = 4 + 4 * 12$ )

If any result is not available, -999.0 is returned

For SA Mode, the values are in the current Y Axis Unit of the instrument

### Measurement Type = Power Spectral Density Reference

Conditions	Results																																							
<b>Mode:</b> LTEAFDD, LTEATDD, 5GNR, MSR  <b>"Power Ref" on page 676:</b>  LRCarriers LRSubblocks MPCSubblock MINSubblock	<p>For the trace specified by "Measure Trace" on page 1155, returns comma-separated scalar results in the following order:</p> <table border="1"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit, if any</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0.0</td> <td></td> </tr> <tr> <td>2</td> <td>Total carrier power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>3</td> <td>Left reference power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>4</td> <td>Right reference power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>5</td> <td>Lower offset A - relative power</td> <td>dB</td> </tr> <tr> <td>6</td> <td>Lower offset A - absolute power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>7</td> <td>Upper offset A - relative power</td> <td>dB</td> </tr> <tr> <td>8</td> <td>Upper offset A - absolute power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>9</td> <td>Lower offset B - relative power</td> <td>dB</td> </tr> <tr> <td>10</td> <td>Lower offset B - absolute power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>11</td> <td>Upper offset B - relative power</td> <td>dB</td> </tr> <tr> <td>12</td> <td>Upper offset B - absolute power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> </tbody> </table> <p>When "Max Num of Offsets" on page 633 is 6, returns 28 results (Offset A-F: 28 = 4 + 4*6) and when set to 12, returns 52 results (Offset A-L: 52 = 4 + 4 * 12)</p> <p>*The unit is determined by "PSD Unit" on page 684: DBMHZ or DBMMHZ</p> <p>If any result is not available, -999.0 is returned</p> <p>This trace includes only outer offset results and their reference value(s)</p>	#	Item	Unit, if any	1	0.0		2	Total carrier power	dBm/Hz or dBm/MHz*	3	Left reference power	dBm/Hz or dBm/MHz*	4	Right reference power	dBm/Hz or dBm/MHz*	5	Lower offset A - relative power	dB	6	Lower offset A - absolute power	dBm/Hz or dBm/MHz*	7	Upper offset A - relative power	dB	8	Upper offset A - absolute power	dBm/Hz or dBm/MHz*	9	Lower offset B - relative power	dB	10	Lower offset B - absolute power	dBm/Hz or dBm/MHz*	11	Upper offset B - relative power	dB	12	Upper offset B - absolute power	dBm/Hz or dBm/MHz*
#	Item	Unit, if any																																						
1	0.0																																							
2	Total carrier power	dBm/Hz or dBm/MHz*																																						
3	Left reference power	dBm/Hz or dBm/MHz*																																						
4	Right reference power	dBm/Hz or dBm/MHz*																																						
5	Lower offset A - relative power	dB																																						
6	Lower offset A - absolute power	dBm/Hz or dBm/MHz*																																						
7	Upper offset A - relative power	dB																																						
8	Upper offset A - absolute power	dBm/Hz or dBm/MHz*																																						
9	Lower offset B - relative power	dB																																						
10	Lower offset B - absolute power	dBm/Hz or dBm/MHz*																																						
11	Upper offset B - relative power	dB																																						
12	Upper offset B - absolute power	dBm/Hz or dBm/MHz*																																						
All other Modes and <b>Power Ref</b> settings	<p>For the trace specified by "Measure Trace" on page 1155, returns comma-separated scalar results in the following order:</p> <table border="1"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit, if any</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0.0</td> <td></td> </tr> <tr> <td>2</td> <td>Total carrier power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>3</td> <td>0.0</td> <td></td> </tr> <tr> <td>4</td> <td>Reference power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>5</td> <td>Lower offset A - relative power</td> <td>dB</td> </tr> <tr> <td>6</td> <td>Lower offset A - absolute power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>7</td> <td>Upper offset A - relative power</td> <td>dB</td> </tr> <tr> <td>8</td> <td>Upper offset A - absolute power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>9</td> <td>Lower offset B - relative power</td> <td>dB</td> </tr> <tr> <td>10</td> <td>Lower offset B - absolute power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> </tbody> </table>	#	Item	Unit, if any	1	0.0		2	Total carrier power	dBm/Hz or dBm/MHz*	3	0.0		4	Reference power	dBm/Hz or dBm/MHz*	5	Lower offset A - relative power	dB	6	Lower offset A - absolute power	dBm/Hz or dBm/MHz*	7	Upper offset A - relative power	dB	8	Upper offset A - absolute power	dBm/Hz or dBm/MHz*	9	Lower offset B - relative power	dB	10	Lower offset B - absolute power	dBm/Hz or dBm/MHz*						
#	Item	Unit, if any																																						
1	0.0																																							
2	Total carrier power	dBm/Hz or dBm/MHz*																																						
3	0.0																																							
4	Reference power	dBm/Hz or dBm/MHz*																																						
5	Lower offset A - relative power	dB																																						
6	Lower offset A - absolute power	dBm/Hz or dBm/MHz*																																						
7	Upper offset A - relative power	dB																																						
8	Upper offset A - absolute power	dBm/Hz or dBm/MHz*																																						
9	Lower offset B - relative power	dB																																						
10	Lower offset B - absolute power	dBm/Hz or dBm/MHz*																																						

Conditions	Results												
	<table border="1"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit, if any</th> </tr> </thead> <tr> <td>11</td> <td>Upper offset B - relative power</td> <td>dB</td> </tr> <tr> <td>12</td> <td>Upper offset B - absolute power</td> <td>dBm/Hz or dBm/MHz*</td> </tr> <tr> <td>...</td> <td>...</td> <td>...</td> </tr> </table>	#	Item	Unit, if any	11	Upper offset B - relative power	dB	12	Upper offset B - absolute power	dBm/Hz or dBm/MHz*	...	...	...
#	Item	Unit, if any											
11	Upper offset B - relative power	dB											
12	Upper offset B - absolute power	dBm/Hz or dBm/MHz*											
...	...	...											

When "[Max Num of Offsets](#)" on [page 633](#) is 6, returns 28 results (Offset A-F:  $28 = 4 + 4*6$ ) and when set to 12, returns 52 results (Offset A-L:  $52 = 4 + 4 * 12$ )

\*The unit is determined by "[PSD Unit](#)" on [page 684](#): **DBMHZ** or **DBMMHZ**

If any result is not available, -999.0 is returned

For SA Mode, the values are in the current Y Axis Unit of the instrument

### 3.4.2 Measurement Results for n = 2

- For SA Mode, the values are in the current Y Axis Unit of the instrument
- For MSR, LTE Advanced FDD/TDD, and 5G NR Modes, this trace includes only outer offset results and their reference value(s)

#### Measurement Type = Total power reference

For the trace specified by "[Measure Trace](#)" on [page 1155](#), returns comma-separated scalar results in the following order:

#	Item	Result	Unit, if any
1	Channel (1)	Relative power	dB
2	Channel (1)	Absolute power	dBm
3	Channel (2)	Relative power	dB
4	Channel (2)	Absolute power	dBm
...	...	...	...
23	Channel (12)	Relative power	dB
24	Channel (12)	Absolute power	dBm
25	Lower offset A	Relative power	dB
26	Lower offset A	Absolute power	dBm
27	Upper offset A	Relative power	dB
28	Upper offset A	Absolute power	dBm
29	Lower offset B	Relative power	dB
30	Lower offset B	Absolute power	dBm
31	Upper offset B	Relative power	dB

#	Item	Result	Unit, if any
32	Upper offset B	Absolute power	dBm
...	...	...	

When "Max Num of Offsets" on page 633 is 6, returns 48 results (Offset A-F:  $48 = 24 + 4 * 6$ ) and when set to 12, returns 72 results (Offset A-L:  $72 = 24 + 4 * 12$ )

If any result is not available, -999.0 is returned

### Measurement Type = Power spectral density reference

For the trace specified by "Measure Trace" on page 1155, returns comma-separated scalar results in the following order:

#	Channel	Item	Unit, if any
1	Channel (1)	Relative power	dB
2	Channel (1)	Absolute power	dBm/Hz or dBm/MHz*
3	Channel (2)	Relative power	dB
4	Channel (2)	Absolute power	dBm/Hz or dBm/MHz*
...	...	...	
23	Channel (12)	Relative power	dB
24	Channel (12)	Absolute power	dBm/Hz or dBm/MHz*
25	Lower offset A	Relative power	dB
26	Lower offset A	Absolute power	dBm/Hz or dBm/MHz*
27	Upper offset A	Relative power	dB
28	Upper offset A	Absolute power	dBm/Hz or dBm/MHz*
29	Lower offset B	Relative power	dB
30	Lower offset B	Absolute power	dBm/Hz or dBm/MHz*
31	Upper offset B	Relative power	dB
32	Upper offset B	Absolute power	dBm/Hz or dBm/MHz*
...	...	...	

When "Max Num of Offsets" on page 633 is 6, returns 48 results (Offset A-F:  $48 = 24 + 4 * 6$ ) and when set to 12, returns 72 results (Offset A-L:  $72 = 24 + 4 * 12$ )

\*The unit is determined by "PSD Unit" on page 684: DBMHZ or DBMMHZ

If any result is not available, -999.0 is returned

### 3.4.3 Measurement Results for n = 3

For the trace specified by "Measure Trace" on page 1155, returns scalar pass/fail values (0 = passed, or 1 = failed) determined by comparing the relative to the

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

reference carrier and by testing the absolute power limit of the offset frequencies (measured as total power in dB if "Measurement Type" on page 676 is Total Pwr Ref, or as power spectral density in dB if Measurement Type is PSD Ref).

When "Max Num of Offsets" on page 633 is 6, returns 24 results (Offset A-F: 24 = 4\*6). When set to 12, returns 48 results (Offset A-L: 48 = 4 \* 12).

For MSR, LTE-Advanced FDD/TDD, and 5G NR Modes, this trace includes only outer offset results.

#	Item
1	Lower offset A - relative limit result
2	Lower offset A - absolute limit result
3	Upper offset A - relative limit result
4	Upper offset A - absolute limit result
5	Lower offset B - relative limit result
6	Lower offset B - absolute limit result
7	Upper offset B - relative limit result
8	Upper offset B - absolute limit result
...	...

If any result is not available, 1 is returned.

### 3.4.4 Measurement Results for n = 7

In all cases below:

- for SA Mode, the values are in the current Y Axis Unit of the instrument
- if any result is not available, 9.91E+37 (NaN) is returned

Mode	Max Number of Carriers
MSR	100
LTEAFDD, LTEATDD	5
5G NR	16
All Others	18

#### Measurement Type = Total power reference

For the trace specified by "Measure Trace" on page 1155, returns (2 \* Number of Carriers) comma-separated scalar results in the following order:

#	Channel	Result	Unit, if any
1	Channel (1)	Relative power	dB
2	Channel (1)	Absolute power	dBm

#	Channel	Result	Unit, if any
3	Channel (2)	Relative power	dB
4	Channel (2)	Absolute power	dBm
...	...		
2 * Number of Carriers - 1	Channel (Number of Carriers)	Relative power	dB
2 * Number of Carriers	Channel (Number of Carriers)	Absolute power	dBm

### Measurement Type = Power spectral density reference

For the trace specified by "Measure Trace" on page 1155, returns (2 \* Number of Carriers) comma-separated scalar results in the following order:

#	Channel	Result	Unit, if any
1	Channel (1)	Relative power	dB
2	Channel (1)	Absolute power	dBm/Hz or dBm/MHz*
3	Channel (2)	Relative power	dB
4	Channel (2)	Absolute power	dBm/Hz or dBm/MHz*
...	...		
2 * Number of Carriers - 1	Channel (Number of Carriers)	Relative power	dB
2 * Number of Carriers	Channel (Number of Carriers)	Absolute power	dBm/Hz or dBm/MHz*

\*The unit is determined by "PSD Unit" on page 684: DBMHZ or DBMMHZ

### 3.4.5 Measurement Results for n = 8

Only available in LTEAFDD, LTEATDD, 5GNR, MSR Modes

For the trace specified by "Measure Trace" on page 1155, returns scalar results in the following order:

#	Item	Unit, if any
1	0.0	
2	Total carrier power	dBm
3	Reference Power #1 (See "Reference Power Result Details" on page 505)	
4	Reference Power #2 (See "Reference Power Result Details" on page 505)	
5	Inner Lower offset A - relative power	dB
6	Inner Lower offset A - absolute power	dBm, dBm/Hz or dBm/MHz*
7	Inner Upper offset A - relative power	dB

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

#	Item	Unit, if any
8	Inner Upper offset A - absolute power	dBm, dBm/Hz or dBm/MHz*
9	Inner Lower offset B - relative power	dB
10	Inner Lower offset B - absolute power	dBm, dBm/Hz or dBm/MHz*
11	Inner Upper offset B - relative power	dB
12	Inner Upper offset B - absolute power	dBm, dBm/Hz or dBm/MHz*
...	...	

This trace includes only inner offset results

When "Max Num of Offsets" on page 633 is 6, returns 28 results (Offset A-F:  $24 = 4 + 4*6$ ) and when set to 12, returns 52 results (Offset A-L:  $52 = 4 + 4 * 12$ )

### Absolute Power Units

\*For Absolute power results, the units depend on the "Measurement Type" on page 676 and "PSD Unit" on page 684 settings as follows:

Measurement Type	PSD Unit	Unit
Total Pwr Ref	All	dBm
PSD Reference	dBm/Hz, DBMHZ	dBm/Hz
	dBm/MHz, DBMMHZ	dBm/MHz

### Reference Power Result Details

The values returned as Reference Power #1 and Reference Power #2 depend on "Power Ref" on page 676:

Power Ref Setting	Option	Reference Power #1	Reference Power #2
Left & Right Carriers	LRCarriers	Left or Max Power Carrier in the lower sub-block	Right or Max Power Carrier in the upper sub-block
Max Power Carriers in Sub-block	MPCSubblock	dBm, dBm/Hz or dBm/MHz*	dBm, dBm/Hz or dBm/MHz*
Left & Right Sub-blocks	LRSubblocks	Integrated Power of the lower sub-block	Integrated Power of the upper sub-block
		dBm, dBm/Hz or dBm/MHz*	dBm, dBm/Hz or dBm/MHz*
Others		0.0	Reference carrier power
			dBm, dBm/Hz or dBm/MHz*

\*For PSD results, the unit is determined by "PSD Unit" on page 684. See "Absolute Power Units" on page 505 above

If any result is not available, 9.91E+37 (NaN) is returned

### 3.4.6 Views

This measurement has two predefined views:

View	Enumerated Parameter	SCPI Number
"Normal" on page 507	PRESult	1
"Carrier Info" on page 507	CINFormation	2

These are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the view changes, the default menu is **Frequency**, unless otherwise specified in the view description.

**NOTE**

Y Scale/Div, Y Ref Position, Y Auto Scale, Y Ref Value and Bar Graph affect both views. For example, power bars on the traces in both views appear or disappear when Bar Graph is toggled.

#### View Selection by Name

Selects the results view. The following command allows you to select the desired measurement view by enumerated parameter.

Remote Command	<code>:DISPlay:ACPower:VIEW[:SElect] PRESult   CINFormation</code> For view names, see table above <code>:DISPlay:ACPower:VIEW[:SElect]?</code>
Example	<code>:DISP:ACP:VIEW PRES</code> <code>:DISP:ACP:VIEW?</code>
Preset	<code>PRESult</code>
State Saved	Saved in instrument state
Range	<code>PRESult CINFormation</code>

#### View Selection by Number (Remote Command Only)

Selects the results view. The following command allows you to select the desired measurement view numerically.

### 3 LTE & LTE-A TDD Mode

#### 3.4 ACP Measurement

---

Remote Command	<code>:DISPlay:ACPower:VIEW:NSElect &lt;integer&gt;</code> For view numbers, see table above <code>:DISPlay:ACPower:VIEW:NSElect?</code>
Example	<code>:DISP:ACP:VIEW:NSEL 1</code> <code>:DISP:ACP:VIEW:NSEL?</code>
Dependencies	Available only for LTEAFDD, LTEATDD and 5G NR Modes
Preset	1
State Saved	Saved in instrument state
Min/Max	1 / 2

---

##### 3.4.6.1 Normal

Windows: "Graph" on page 507, "Metrics" on page 508,  
Dual window view of the graph and the metrics.

---

Example `:DISP:ACP:VIEW PRES`

##### 3.4.6.2 Carrier Info

Windows: "Graph" on page 507, "Metrics" on page 508,  
Dual window view of the graph and the metrics.

---

Example `:DISP:ACP:VIEW CINF`

### 3.4.7 Windows

This section describes the windows that are available in this measurement.

#### 3.4.7.1 Graph


Window #1

Used to display the spectrum being measured by the ACP measurement.

The results of the measurement can be displayed as a single spectrum trace view or displayed with a Bar Graph trace on the spectrum trace.

The Graph window appears in several Views, as follows:

View	Size	Position
Normal	Half, full width	Top
Carrier Info	Half, full width	Top
Gate View	One third, full width	Middle

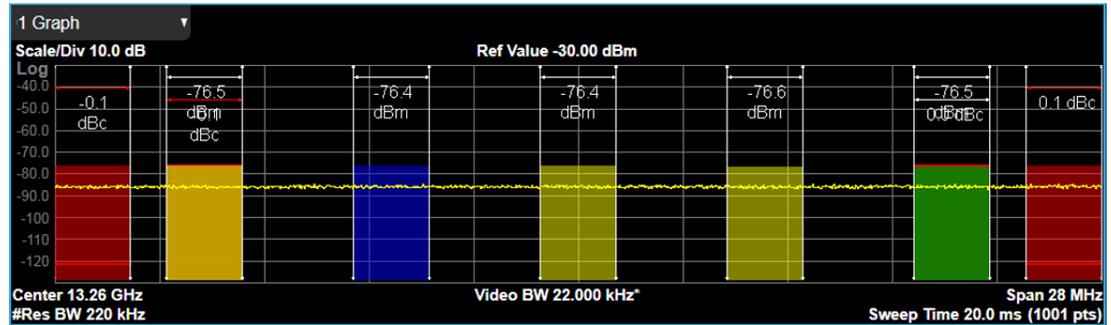

When the Bar Graph is **ON** and Limit Test is **ON**, the color of each bar graph reflects the limit test result. When the limit test fails, the bar color is red, and when limit test passes, the bar color is green.

When RBW is selected as the measurement method, the spectrum trace is not displayed, only the bar graph is displayed. In addition, the Bar Graph control (under the Display front-panel key) is set to **ON** and is grayed-out.

### 3.4.7.2 Metrics

Window # 2 & 3

Displays the textual results of the ACP measurement.

Views in which the Metrics window appears:

View	Size	Position
Normal	Half, full width	Bottom
Carrier Info	Half, full width	Bottom
Gate View	One Third, full width	Bottom

Metrics Window in Normal view:

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

2 Metrics		Total Car Pwr		36.66 dBm/491.400 MHz		Measure Trace		Trace 1			
Total PSD		---				Trace Type		Trace Average (Active)			
		Lower				Upper					
	Offs Freq	Integ BW	ACP		Reference		ACP		Reference		
			dBc	dBm	dBm	Car #	dBc	dBm	dBm	Car #	Filter
A	100.000 MHz	98.280 MHz	-47.03	-75.67	-28.64	1	-53.80	-82.43	-28.64	1	-3 dB
B	200.000 MHz	98.280 MHz	-45.32	-73.96	-28.64	1	-55.30	-83.94	-28.64	1	-3 dB
C	0.0 Hz	98.280 MHz	0.0	-28.64	-28.64	1	0.0	-28.64	-28.64	1	-3 dB
D	0.0 Hz	98.280 MHz	0.0	-28.64	-28.64	1	0.0	-28.64	-28.64	1	-3 dB
E	0.0 Hz	98.280 MHz	0.0	-28.64	-28.64	1	0.0	-28.64	-28.64	1	-3 dB

Metrics Window in Carrier Info view:

3 Carrier Info		Total Car Pwr		-66.97 dBm/22.58 MHz		Ref Pwr		-28.87 dBm/98.280 MHz		---	
Total PSD		---		RF-BW		5.000 MHz		Ref PSD		---	
						Reference		Carrier#6: Sub-block Left		Carrier#---: Sub-block Right	
	Carrier Power	Carrier PSD	Integ BW	Filter	Offset Freq	Measure					
CC0	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On					
CC1	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On					
CC2	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On					
CC3	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On					
CC4	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On					
CC5	-28.50 dBm	---	98.280 MHz	-3 dB	0.0 Hz	On					

The text window displays the following results:

Total Carrier Power

This is the total power of all the carriers with carrier power present set to yes. The power is calculated by integrating across the bandwidth declared by the Carrier Integ BW parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is  $(1 + \alpha)/T$  where  $T = 1/(\text{Carrier Integ BW})$  multiplied by the number of carriers with carrier power present set to yes.

Ref Power

This is the power of the reference. The power is calculated by integrating across the bandwidth defined by the Reference Type. The integration bandwidth is shown as a part of the result. For some Power Reference Type, this is the value of the Carrier Integ BW for that carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is  $(1 + \alpha)/T$  where  $T = 1/(\text{Carrier Integ BW})$ .

Reference

In multi-carrier applications, this row displays what is used as a reference power.

Carrier Power

This is the power in all the currently defined carriers. If the carrier has carrier power present, the power will be absolute. If the carrier is defined as not having power

present, the power will be relative to the reference carrier. The power is calculated by integrating across the bandwidth declared by the Carrier Integ BW parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ BW for the carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is  $(1 + \alpha)/T$  where  $T = 1/(\text{Carrier Integ BW})$ .

#### Offset Relative Power

This is the power in the offsets relative to the reference carrier. The power is calculated by integrating across the bandwidth declared by the Offset Integ BW parameter. The offset integration bandwidth is shown as part of the result. This is the value on the Offset Integ BW menu unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is  $(1 + \alpha)/T$  where  $T = 1/(\text{Offset Integ BW})$ .

#### Offset Absolute Power

This is the absolute power in the offsets. The power is calculated by integrating across the bandwidth declared by the Offset Integ BW parameter. The offset integration bandwidth is shown as part of the result. This is the value on the Offset Integ BW menu unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is  $(1 + \alpha)/T$  where  $T = 1/(\text{Offset Integ BW})$ .

#### RF-BW

Displays the total bandwidth from the lowest carrier to the highest carrier whatever their measurement states are on or off.

#### Integration Bandwidth

Displays the noise bandwidth of each carrier to be measured in the ACP measurement

#### Measure Trace

See "[Measure Trace](#)" on page 1155.

#### Trace Type

This is the trace type (and view/blank parameter) of a trace specified by Measure Trace.

Measure Trace and Trace Type are displayed only when Meas Method is set to "Integration BW", "Filtered IBW", or "Fast Power"

#### Filter

Indicates whether RRC filter is used for ACP measurement or not.

#### Offset Frequency

Shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

Sub-block

For intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for transmission and reception in the intra-band non-contiguous aggregation mode. So far we support the two sub-blocks. It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column will be displayed when the carrier allocation mode is non-contiguous.

Measure

Shows whether the carrier power presents or not.

### 3.4.7.3 Gate

Window # 4

Turning on Gate View displays the Gate Window, which allows you to see your gating signal at the same time as the measured data. See the description under **Gate View** in the **Trigger, Gate Settings** section.

View	Size	Position
Gate View	One third, full width	Top

### 3.4.7.4 Marker Table

Window# 5

Displays a table containing detailed information about all the markers in the current measurement. It can be selected from the Data control on the Window Title. There is no specific view in which the **Marker Table** window turns on, it is on by demand.

## 3.4.8 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

### 3.4.8.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

#### Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of the **Ref Position** function.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:RLEVel &lt;real&gt;</code> <code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:RLEVel?</code>
Example	<code>:DISP:ACP:WIND:TRAC:Y:RLEV 100</code> <code>:DISP:ACP:WIND:TRAC:Y:RLEV?</code>
Couplings	When "Auto Scaling" on page 514 is ON (default), this value is automatically determined by the measurement result. When you set a value manually, <b>Auto Scaling</b> changes to OFF "Attenuation" on page 2158 is not coupled to <b>Ref Value</b>
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-250.00 dBm / 250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel</code>

#### Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

**Scale/Div** also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if Scale/Div is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:PDIVision &lt;rel_amp&gt;</code> <code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:PDIVision?</code>
Example	<code>:DISP:ACP:WIND:TRAC:Y:PDIV 5</code> <code>:DISP:ACP:WIND:TRAC:Y:PDIV?</code>

Couplings	Coupled to <b>"Scale Range" on page 1002</b> as follows: <b>Scale/Div = Scale Range/10</b> (number of divisions) When <b>"Auto Scaling" on page 514</b> is <b>ON</b> , this value is automatically determined by the measurement result When you change a value, <b>Auto Scaling</b> automatically changes to Off
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision</code>

## Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALe]:RANGe &lt;rel_amp1&gt;</code> <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to <b>Scale/Div</b> as follows <b>Scale Range = Scale/Div * 10</b> (number of divisions) When you change this value, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

## Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom</code> <code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:ACP:WIND:TRAC:Y:RPOS CENT</code>

	<code>:DISP:ACP:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP CENTer BOTTom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSition</code>

## Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALE]:COUPle 0   1   OFF   ON</code>
Example	<code>:DISP:ACP:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:ACP:WIND:TRAC:Y:COUP?</code>
Couplings	When <b>Auto Scaling</b> is <b>ON</b> , and the <b>Restart</b> front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you change the value of " <b>Scale/Div</b> " on page 512, " <b>Ref Value</b> " on page 512, or " <b>Scale Range</b> " on page 1002, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	1
State Saved	Saved in instrument state
Range	OFF ON
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUPle</code>

### 3.4.8.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See "Dual-Attenuator Configurations" on page 515
- See "Single-Attenuator Configuration" on page 516


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

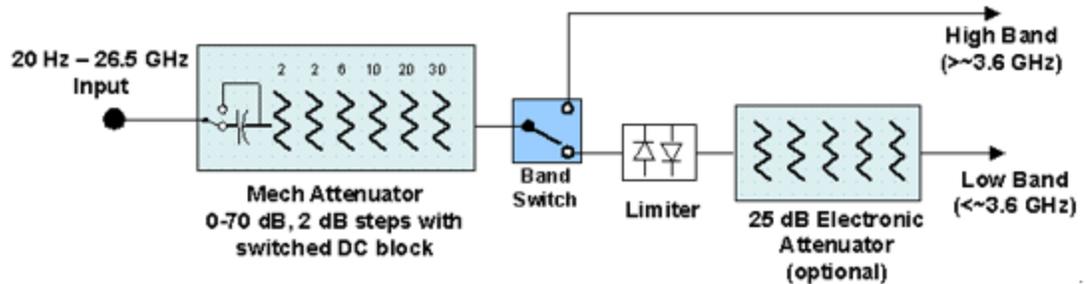


Configuration 2: Mechanical attenuator, no optional electronic attenuator

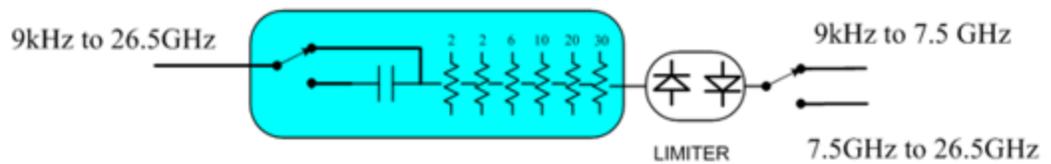

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


### Single-Attenuator Configuration

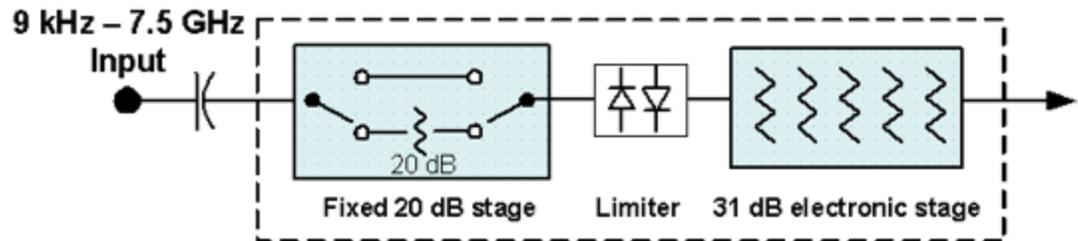

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



**Dual Attenuator**

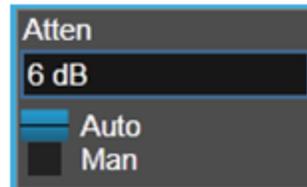

**Single Attenuator**

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

### Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

---

Remote Command `[:SENSe]:POWer[:RF]:FRATten <rel_amp1>`  
`[:SENSe]:POWer[:RF]:FRATten?`

---

Example `:POW:FRAT 14`

:POW:FRAT?	
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and " <b>Mech Atten</b> " on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the <b>Input</b> is <b>RF</b>, and the <b>Input Port</b> is <b>RF Input 2</b>, and the Full Range Attenuator is installed:            On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> <li>- If the sweep is entirely &lt; 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten</li> <li>- If the sweep is entirely &gt; 50 GHz, the value shown after "Atten:" is equal to Full Range Atten</li> <li>- If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol "&gt;=" and is equal to Full Range Atten</li> </ul> <p>In the <b>Amplitude</b>, "<b>Y Scale</b>" on page 2153 menu, and the Atten <b>Meas Bar</b> dropdown menu panel, a summary is displayed as follows:            "Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten            "Total Atten above 50 GHz" followed by the value of Full Range Atten            For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> <li>- Attenuator summary:</li> <li>- Total Atten below 50 GHz: 30 dB</li> <li>- Total Atten above 50 GHz: 20 dB</li> </ul>

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "**Internal Preamp**" on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "**Attenuator Configurations and Auto/Man**" on page 519

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation &lt;rel_ampl&gt;</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code>  Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation)  In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available  In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of <b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " <a href="#">Elec Atten</a> " on page 2164  See " <a href="#">Attenuator Configurations and Auto/Man</a> " on page 519 for more information on the <b>Auto/Man</b> functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none"> <li>- If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>- Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>, <b>External Gain</b>, <b>Ref Level Offset</b>, <b>Max Mixer Level</b>, <b>μW Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "<a href="#">Full Range Atten</a>" on page 2160 from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul> <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when <b>Mech Atten</b> is in <b>Auto</b>, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is &lt;= 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>
Preset	<b>Auto</b> The Auto value is 10 dB
State Saved	Saved in instrument state
Min	0 dB  The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Max	CXA Option 503 or 507 EXA All other models	50 dB 60 dB 70 dB
Annotation	<p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p> <p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)</p> <p>When in Manual, a # sign appears in front of Atten in the annotation</p> <p>Auto Function</p>	
Remote Command	<pre>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1 [:SENSe]:POWer[:RF]:ATTenuation:AUTO?</pre>	
Example	<p>Turn <b>Auto Mech AttenON</b>:</p> <pre>:POW:ATT:AUTO ON</pre>	
Dependencies	<pre>:POW:ATT:AUTO</pre> <p>is only available in measurements that support <b>Auto</b>, such as Swept SA</p>	
Preset	<pre>ON</pre>	

### Attenuator Configurations and Auto/Man

As described under ["Attenuation" on page 2158](#), there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using ["Mech Atten" on page 517](#) (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in

the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about "soft" attenuation.

NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see "[More Information](#)" on page 522

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_ampl&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
----------------	--

Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
---------	--

Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
-------	---

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no “electronic attenuator”; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a “soft” attenuation. The “soft” attenuation is treated as an addition to the “main” attenuation value set by the <b>Attenuation</b> control or <b>:POW:ATT</b>, and affects the total attenuation displayed on the <b>Attenuation</b> control and the Meas Bar</p> <p>The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is &gt; 3.6 GHz, then the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If "<b>Internal Preamp</b>" on page 2183 is <b>ON</b> (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the <b>Stop Freq</b> of the instrument is limited to 3.6 GHz and <b>Internal Preamp</b> is unavailable</p> <p>If "<b>LNA</b>" on page 2185 is <b>ON</b>, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> <li>- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes</li> <li>- Transmit On Off Power measurement in 5GNR Mode</li> <li>- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode</li> <li>- Burst Power measurement in Spectrum Analyzer Mode</li> </ul> <p>The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <b>Mechanical Attenuator Transition Rules</b> " on page 522
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the <b>Mech Atten</b> control description

### Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	<code>OFF</code> (Disabled) for Swept SA measurement <code>ON</code> (Enabled) for all other measurements that support the electronic attenuator

#### NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

### More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 523](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or

### 3 LTE & LTE-A TDD Mode

#### 3.4 ACP Measurement

knob, and it behaves as it normally would in manual mode

- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

#### **Using the Electronic Attenuator: Pros and Cons**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-

decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

## Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "[Pre-Adjust for Min Clipping](#)" on page 2168.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

## Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code>

	<code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

### Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 526

Selection	SCPI	Note
Off	<code>OFF</code>	This is the default setting
On	<code>ON</code>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <code>COMBined</code>
Elec Atten Only	<code>ELECTrical</code>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<code>COMBined</code>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>
Notes	The parameter option <code>ELECTrical</code> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <code>COMBined</code> is mapped to <code>ELECTrical</code> in Single-Attenuator models. If you send <code>COMBined</code> , it sets the function to <b>ON</b> and returns <code>ELEC</code> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <code>COMBined</code>
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " <a href="#">Elec Atten</a> " on page 2164 is <b>OFF</b> or grayed-out, " <a href="#">Pre-Adjust for Min Clipping</a> " on page 525 is grayed-out

	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten
	Single-Attenuator models:	Off   On


#### Backwards Compatibility Command

Notes	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF	
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0 [:SENSe]:POWer[:RF]:RANGe:AUTO?	

### Adjustment Algorithm


The algorithms for the adjustment are documented below:

### Single-Attenuator Models

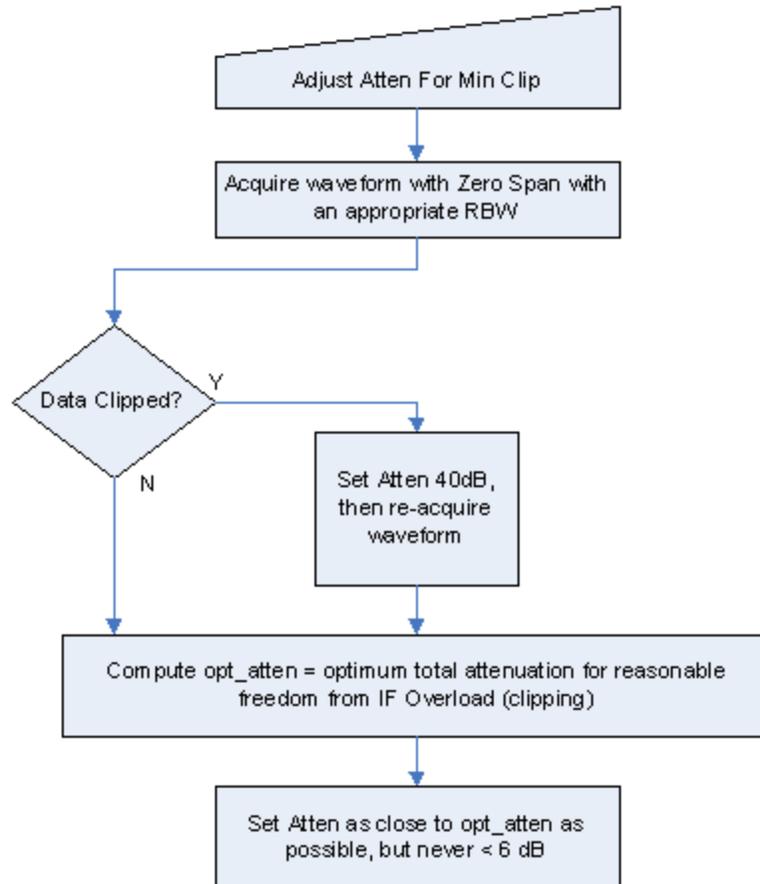


### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 525 selection is Mech + Elec Atten:

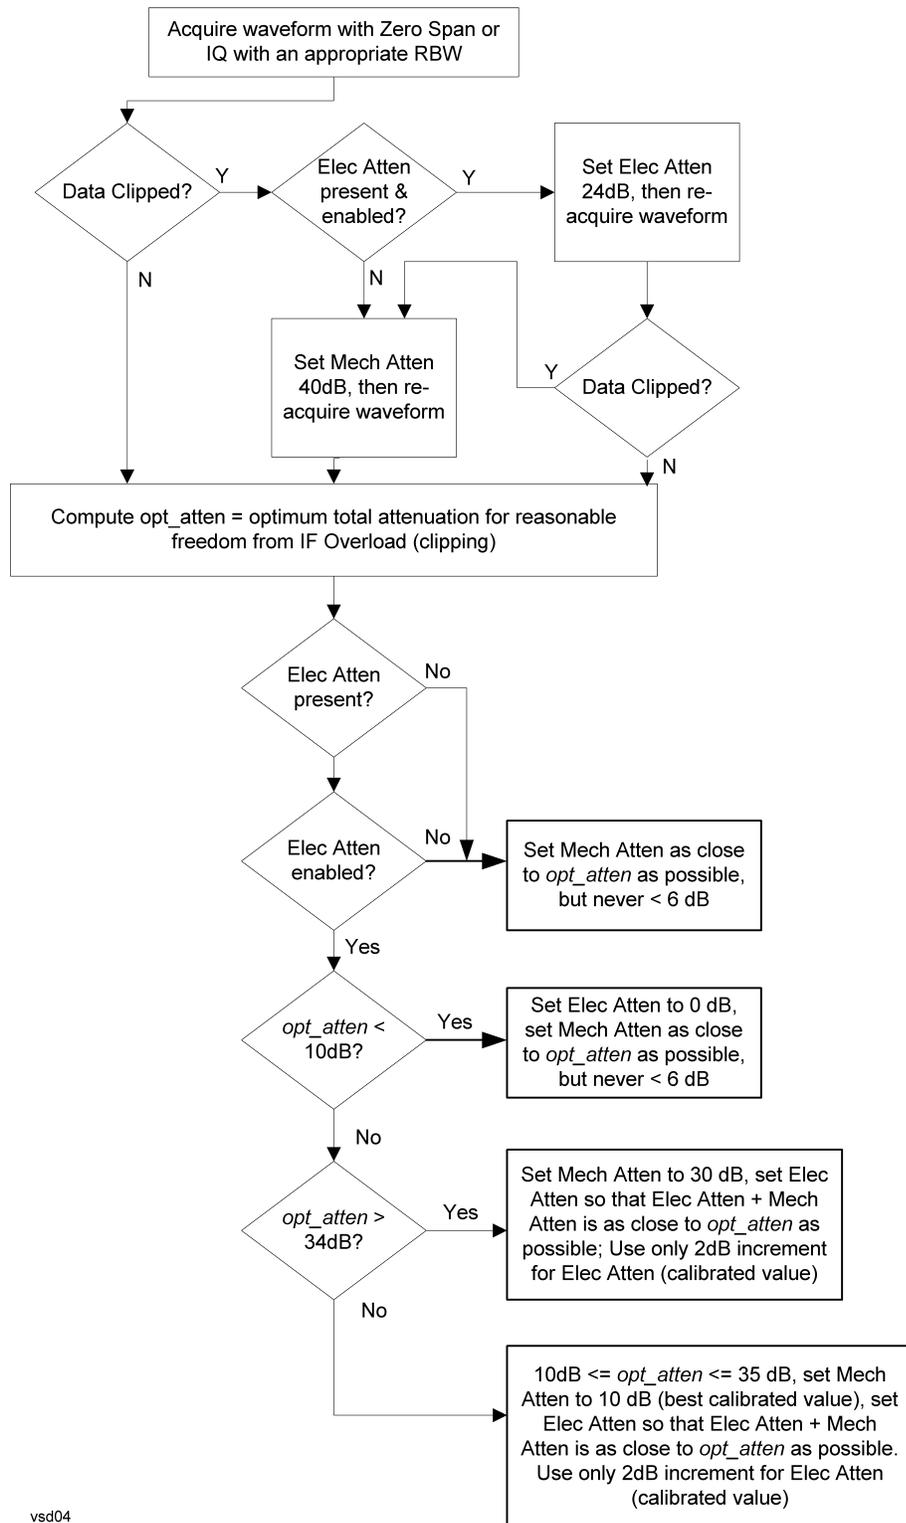

"Pre-Adjust for Min Clipping" on page 525 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

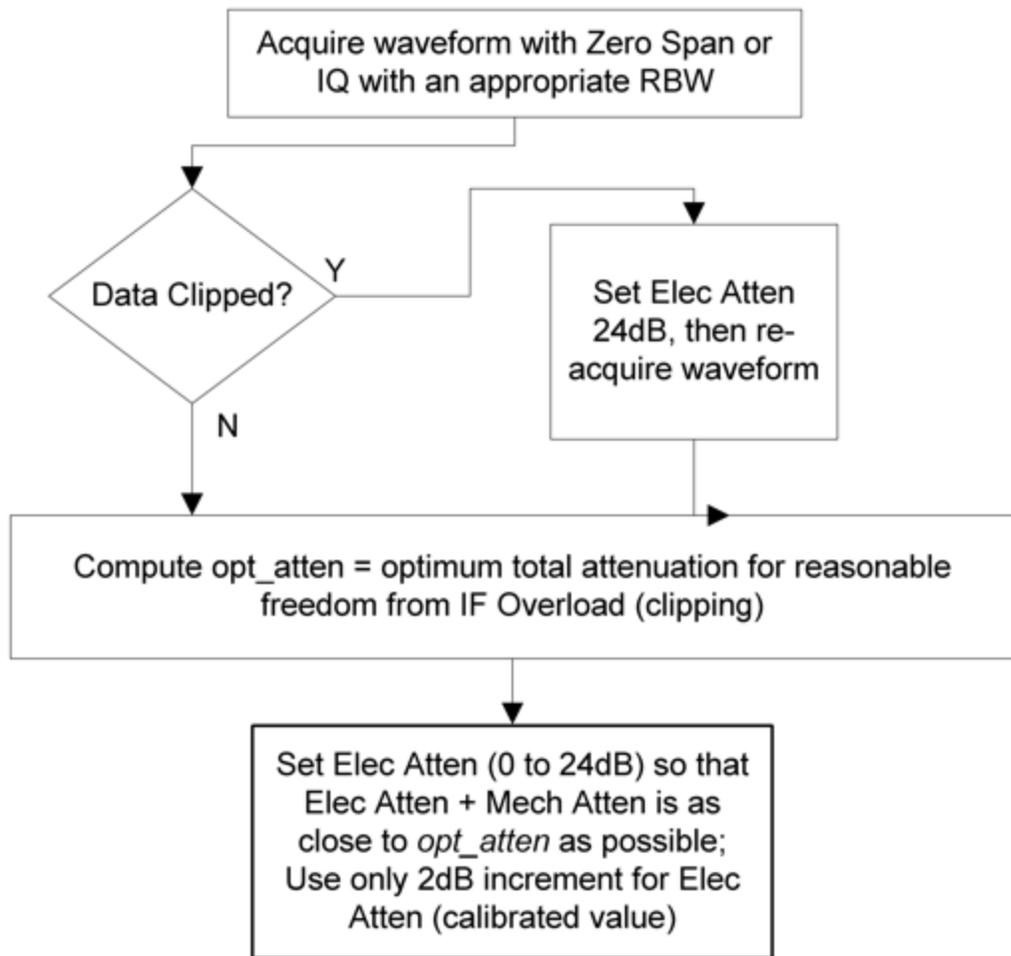

## Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.4.8.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

### Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGE &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGE?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

### Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements


### Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

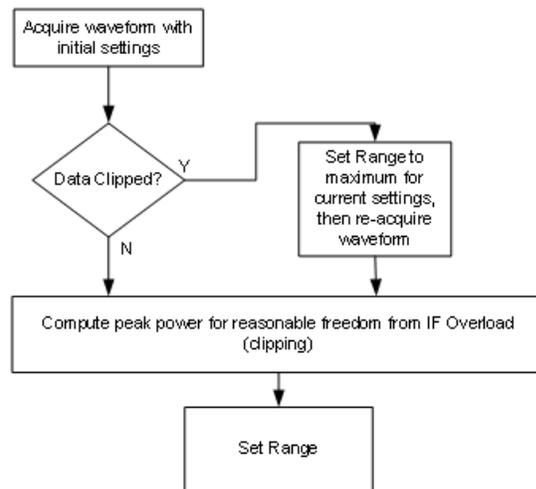

## Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:PARatio &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.4.8.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because "[Software Preselection](#)" on page 2195 is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on "**Preselector Adjust**" on page 2182 changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in "**Proper Preselector Operation**" on page 534.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in " <b>Preselector Adjust</b> " on page 2182
Status Bits/OPC dependencies	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

## Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "[Presel Center](#)" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Preset	0 MHz

State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PADJust</code> <code>[ :SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXTERNAL</code> <code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

**NOTE**

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <b>LOW</b> instead of <b>FULL</b> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<b>LOW</b>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)
Auto Function	

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<b>OFF</b>

## LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to **"Internal Preamp"** on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with **"Internal Preamp"** on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see **"More Information"** on page 538

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATE] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATE]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

## More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and **Internal Preamp**. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
µW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
µW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 543
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 545
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 546

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "<b>Presel Center</b>" on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b></p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b>. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul> <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are grayed-out if the current measurement does not support them</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, “Setting Conflict; Feature not supported for this measurement”</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>IQ Analyzer</td> <td>MPB option present and licensed: <b>MPB</b></td> </tr> <tr> <td>Pulse</td> <td>MPB option not present and licensed: <b>STD</b></td> </tr> <tr> <td>RTSA</td> <td></td> </tr> <tr> <td>Avionics</td> <td></td> </tr> <tr> <td>All other Modes</td> <td><b>STD</b></td> </tr> <tr> <td>-</td> <td></td> </tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: <b>MPB</b>	Pulse	MPB option not present and licensed: <b>STD</b>	RTSA		Avionics		All other Modes	<b>STD</b>	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: <b>MPB</b>														
Pulse	MPB option not present and licensed: <b>STD</b>														
RTSA															
Avionics															
All other Modes	<b>STD</b>														
-															
State Saved	Save in instrument state														
Range	Standard Path   Low Noise Path Enable   μW Presel Bypass   Full Bypass Enable														

Annotation In the Meas Bar, if the Standard path is chosen:  
 μW Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 μW Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 μW Path: LNP,On  
 If the preselector is bypassed:  
 μW Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 μW Path: FByp,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 μW Path: FByp,On

**μW Path Control Auto**

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Measurement	$\mu$ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is presel bypass if presel bypass is enabled, auto $\mu$ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

Measurement	$\mu$ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	
Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 541 above
Preset	ON
Range	ON OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

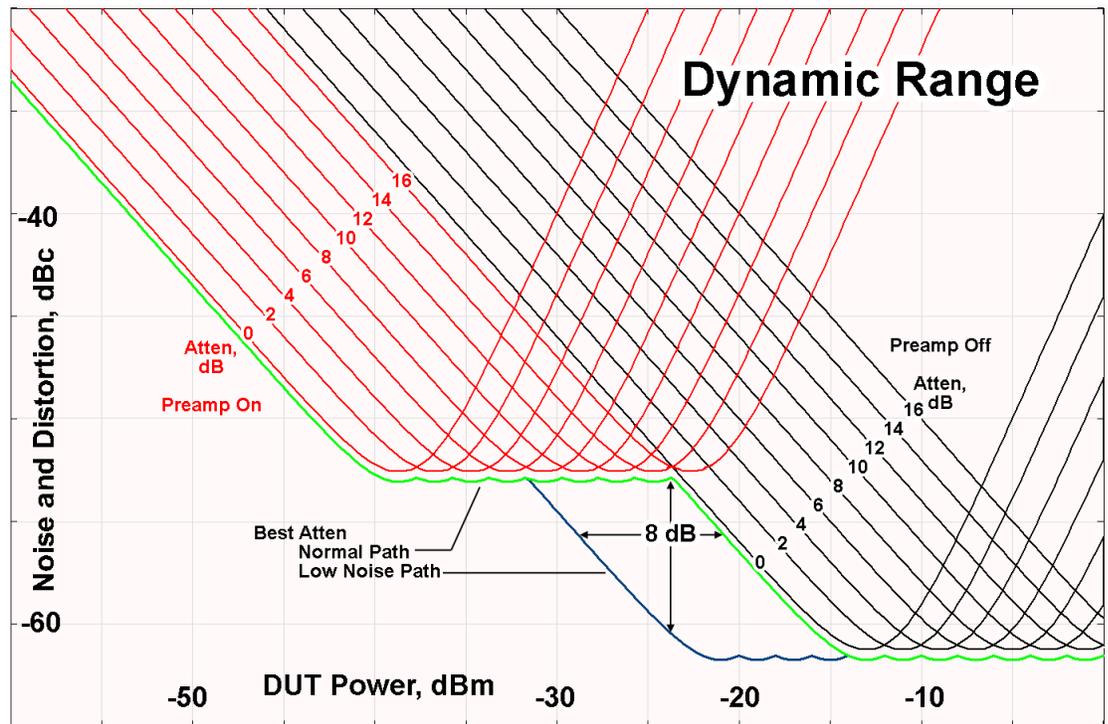

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **$\mu$ W Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

#### CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

---

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path ( <code>:POW:MW:PATH STD</code> ) The <b>OFF</b> parameter sets path <b>MPB</b> ( <code>:POW:MW:PATH MPB</code> )
Preset	<b>ON</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPrese1:STATe 0   1   ON   OFF</code>	
	<code>[ :SENSe]:POWer[:RF]:SWPrese1:STAT?</code>	
Example	<code>:POW:SWPR:STAT 1</code>	
	<code>:POW:SWPR:STAT?</code>	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state	
Preset	N9041B	<b>OFF</b>
	N9042B+V3050A	<b>ON</b>
	M9410A/11A	<b>ON</b>
State Saved	Saved in instrument state	

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel NORMa1   ADVanced</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel?</code>
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is “Unavailable unless SW Presel enabled”
Preset	N9041B <b>ADVanced</b> N9042B+V3050A <b>NORMa1</b>
State Saved	Saved in instrument state

## SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPResel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <a href="#">Software Preselection</a> " on <a href="#">page 2195</a> is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <a href="#">Prefilter Presets</a> " on <a href="#">page 552</a> below

State Saved      Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

## 3.4.9 BW

Opens the **BW** menu, which contains controls for the Resolution Bandwidth and Video Bandwidth functions of the instrument.

The Resolution BW functions control filter bandwidth and filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

### 3.4.9.1 Settings

Contains the basic Bandwidth functions. In most measurements it is the only tab under Bandwidth.

## Res BW

Activates the resolution bandwidth active function, which allows you to manually set the resolution bandwidth (RBW) of the instrument.

Normally, **Res BW (Auto)** selects automatic coupling of **Res BW** to **"Span"** on page 569. To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Res BW** control, or simply enter a different value for **Res BW**.

When **Res BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Res BW** control. This may also be done by pressing **"Auto Couple"** on page 2242 or by performing a **Preset**.

For more Mode-specific details, see: **"More Information"** on page 554

Remote Command	<code>[ :SENSe]:ACPower:BANDwidth[:RESolution] &lt;bandwidth&gt;</code> <code>[ :SENSe]:ACPower:BANDwidth[:RESolution]?</code>												
Example	<code>:ACP:BAND 5 MHz</code> <code>:ACP:BAND?</code>												
Notes	<p>For numeric entries, all <b>Res BW</b> Types choose the nearest (arithmetically, on a linear scale, rounding up) available <b>Res BW</b> to the value entered</p> <p>The setting and querying of values depend on the current bandwidth type</p> <p>This parameter is preset by <b>"Meas Method"</b> on page 582. Preset values are:</p> <table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td rowspan="2">5GNR, LTEAFDD/TDD, MSR, VMA, SRCOMM</td> <td>IBW 100 kHz</td> </tr> <tr> <td>IBWR 30 kHz</td> </tr> <tr> <td rowspan="2">SA</td> <td>IBW 220 kHz</td> </tr> <tr> <td>IBWR 30 kHz</td> </tr> <tr> <td rowspan="3">WCDMA</td> <td>IBW 100 kHz</td> </tr> <tr> <td>IBWR 27 kHz</td> </tr> <tr> <td>FAST 390 kHz</td> </tr> </tbody> </table> <p>When <b>Meas Method</b> is <b>FPOwer</b> and Fast Power RBW mode is "Best Speed," RBW is calculated as follows:  <math>RBW = \text{Span} \times 2.442 \times 10^{-3}</math></p>	Modes	Values	5GNR, LTEAFDD/TDD, MSR, VMA, SRCOMM	IBW 100 kHz	IBWR 30 kHz	SA	IBW 220 kHz	IBWR 30 kHz	WCDMA	IBW 100 kHz	IBWR 27 kHz	FAST 390 kHz
Modes	Values												
5GNR, LTEAFDD/TDD, MSR, VMA, SRCOMM	IBW 100 kHz												
	IBWR 30 kHz												
SA	IBW 220 kHz												
	IBWR 30 kHz												
WCDMA	IBW 100 kHz												
	IBWR 27 kHz												
	FAST 390 kHz												
Dependencies	Disabled when <b>Meas Method</b> is <b>RBW</b> , <b>FAST</b> , or <b>FPOwer</b> , and Fast Power RBW mode is Best Speed If pressed, an advisory message is generated. If the equivalent SCPI command is sent, a "Setting conflict" warning is generated												
Couplings	Sweep time is coupled to RBW. As RBW changes, the sweep time (if set to <b>Auto</b> ) is changed to maintain amplitude calibration <b>"Video BW"</b> on page 555 is coupled to <b>Res BW</b> . As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1)												

	When <b>Res BW</b> is set to <b>Auto</b> , the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When <b>Res BW</b> is set to <b>Man</b> , and the bandwidths are entered manually, these bandwidths are used regardless of other instrument settings
Preset	Auto, unless noted in " <a href="#">RBW Presets</a> " on page 554
State Saved	Saved in instrument state
Min	1 Hz
Max	8 MHz is the max equivalent -3 dB RBW, which means that the named RBW (the one shown on the control etc.) can actually exceed 8 MHz if using a filter other than -3 dB Gaussian
Annotation	A "#" mark appears before "RBW" in the annotation when it is switched from Auto to Manual coupling
Backwards Compatibility	For backwards compatibility, this command accepts both the <b>BANDwidth</b> and <b>BWIDth</b> forms
Notes	For ESA, the maximum Res BW was 5 MHz; for X-Series it is 8 MHz The following command is supported [:SENSe]:ACP:SWEp:BANDwidth BWIDth[:RESolution]
	Auto Function
Remote Command	[:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO ON   OFF   1   0 [:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO?
Example	:ACP:BAND:AUTO ON :ACP:BAND:AUTO?
Preset	See " <a href="#">RBW Presets</a> " on page 554

## RBW Presets

Unless noted in the table below, the Preset value of **Res BW** is **Auto**.

Mode	Preset Value
WCDMA	100 kHz
MSR	100 kHz
SA	220 kHz
5G NR	100 kHz

## More Information

When **Res BW** is set to **Auto**, the bandwidth selected depends on "[RBW Filter Type](#)" on page 556.

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on the **RBW Filter Type** or the **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

In some PowerSuite measurements, in the LTE-Advanced (both FDD and TDD) Modes, when **Res BW** is **Auto**, the resolution bandwidth is predefined based on the

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

corresponding bandwidth of the single LTE carrier, as shown in the table below. In the Multi-carrier case, the narrowest **Res BW** among the active carriers is used.

LTEAFDD, LTEATDD Modes

Carrier BW	Auto Res BW, kHz
1.4 MHz	51
3 MHz	51
5 MHz	100
10 MHz	100
15 MHz	100
20 MHz	100
200 kHz (NB-IoT in FDD)	10

5G NR Mode

100 kHz for all carrier bandwidths.

## Video BW

Lets you change the instrument post-detection filter (VBW or “video bandwidth”) from 1 Hz to 8 MHz in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz. The VBW is annotated at the bottom of the display, in the center.

Normally, **Video BW (Auto)** selects automatic coupling of the Video BW to **“Res BW”** on page 553. To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Video BW** control, or simply enter a different value for **Video BW**.

When the **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Video BW** control. This may also be done by pressing **“Auto Couple”** on page 2242 or by performing a **Preset**.

For more information, see **“VBW Presets”** on page 556

Remote Command	<code>[ :SENSe]:ACPower:BANDwidth:VIDeo &lt;bandwidth&gt;</code> <code>[ :SENSe]:ACPower:BANDwidth:VIDeo?</code>
Example	<code>:ACP:BAND:VID 2.4 MHz</code> <code>:ACP:BAND:VID?</code>
Notes	For numeric entries, the instrument chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open” The values shown in this table reflect the conditions after <b>Mode Preset</b>
Dependencies	Sometimes the displayed <b>Video BW</b> is not actually used to process the trace data: <ul style="list-style-type: none"> <li>– When the Average Detector is selected and <b>Sweep Type</b> is set to <b>Swept</b>, the video bandwidth filter</li> </ul>

---

cannot be used, because it uses the same hardware as the Average Detector

- When the Quasi-Peak, EMI Average or RMS Average detector is selected the VBW is implemented by the digital IF as part of the detector

When this is the case, the VBW still acts to change the sweep time, if **Sweep Time** is in **Auto**, and still affects the data on other traces for which this is not the case

Disabled when "**Meas Method**" on page 582 is **RBW**, **FAST**, **FPOwer**

If pressed, an advisory message is generated. If the equivalent command is sent, a "Setting conflict" warning is generated

---

Couplings	Video bandwidth (VBW) is normally coupled to RBW. If <b>VBW</b> is set to <b>Auto</b> , then the VBW is changed as the RBW changes, to maintain the ratio (usually 10:1)
Preset	See " <b>VBW Presets</b> " on page 556 below
State Saved	Saved in instrument state
Min	1 Hz
Max	50 MHz
Annunciation	A "#" mark appears before "VBW" in the annotation when it is not coupled
Annotation	In the bottom center of the screen, "VBW <value> <units>" indicates the current video bandwidth value. Note that for some detectors this is not the value actually used for VBW (see above)
Backwards Compatibility Notes	For backwards compatibility this command accepts both the <b>BANDwidth</b> and <b>BwIDth</b> forms

### Auto Function

---

Remote Command	<code>[ :SENSe]:ACPower:BANDwidth:VIDeo:AUTO ON   OFF   1   0</code>
Example	<code>:ACP:BAND:VID:AUTO ON</code>

### VBW Presets

Unless noted in the table below, the Preset value of **Video BW** is **Auto**.

Mode	Preset Value
WCDMA	1 MHz

### RBW Filter Type

Selects the type for the resolution bandwidth filters. Historically, the Res BW filters in HP/Agilent/Keysight spectrum analyzers were Gaussian filters, specified using the –3 dB bandwidth of the filter. That is, a 10 MHz Res BW filter was a Gaussian shape with its –3 dB points 10 MHz apart. In X-Series, the **RBW Filter BW** menu lets you choose between a Gaussian and Flat Top filter shape, for varying measurement conditions.

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

	<b>Filter Type</b>	<b>SCPI Example</b>
	Gaussian	:BAND:SHAP GAUS
	Flattop	:BAND:SHAP FLAT
Remote Command	[:SENSe]:ACPower:BANDwidth:SHAPE GAUSSian   FLATtop [:SENSe]:ACPower:BANDwidth:SHAPE?	
Example	:ACP:BAND:SHAP GAUS :ACP:BAND:SHAP?	
Notes	GAUSSian= Gaussian FLATtop = Flattop	
Dependencies	Disabled when "Meas Method" on page 582 is FAST or FPOwer If pressed, an advisory message is generated. If the equivalent command is sent, a "Setting conflict" warning is generated	
Preset	"Auto Couple" on page 2242 selects the preset value	
State Saved	Saved in instrument state	
Annotation	The annotation under RBW in the bottom left of the screen shows the type of filter or bandwidth that is being used	
Backwards Compatibility SCPI	[:SENSe]:ACPower:BWIDth:SHAPE	

## RBW Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	[:SENSe]:ACPower:BANDwidth:TYPE DB3   DB6 [:SENSe]:ACPower:BANDwidth:TYPE?	
Example	:ACP:BAND:TYPE DB3 :ACP:BAND:TYPE?	
Dependencies	Disabled when "RBW Filter Type" on page 556 is FLATtop or "Meas Method" on page 582 is RBW, FAST, or Fast Power If pressed, an advisory message is generated. If the equivalent command is sent, a "Setting conflict" warning is generated	
Preset	DB3	
State Saved	Saved in instrument state	
Range	–3 dB (Normal) –6 dB	
Backwards Compatibility SCPI	[:SENSe]:ACPower:BWIDth:TYPE	

## 3.4.10 Display

Lets you configure display items for the current Mode, Measurement, View, or Window.

### 3.4.10.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

#### Bar Graph On/Off

Turns the Bar Graph On or Off.

Remote Command	<code>:DISPlay:ACPower:WINDow[1]:BGRaph OFF   ON   0   1</code> <code>:DISPlay:ACPower:WINDow[1]:BGRaph?</code>
Example	<code>:DISP:ACP:WIND:BGR OFF</code> <code>:DISP:ACP:WIND:BGR?</code>
Dependencies	Always set to <b>ON</b> and grayed-out when the method is <b>RBW</b>
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>
Backwards Compatibility SCPI	<code>:DISPlay:ACPower:VIEW[1]:WINDow[1]:BGRaph</code>

#### Power Results

Lets you select Power Result Type:

- **OUTer** – Results of outer offsets and carrier powers are shown in this view. Inner offset results are not shown even when Carrier Allocation is Non-Contiguous
- Outer & Inner (**OINner**) – Results of both inner and outer offsets are shown in this view

Remote Command	<code>:DISPlay:ACPower:VIEW:RTYPe OUTer   OINner</code> <code>:DISPlay:ACPower:VIEW:RTYPe?</code>
Example	<code>:DISP:ACP:VIEW:RTYP OUT</code> <code>:DISP:ACP:VIEW:RTYP?</code>
Dependencies	Only available in MSR, LTEAFDD, LTEATDD and 5G NR Modes

Preset	<b>OUTer</b>
State Saved	Saved in instrument state
Range	Outer   Outer & Inner

### Carrier Frequency Type

Sets the carrier frequency display type:

- **OFFSet** - The carrier center frequencies are displayed as offset from Carrier Ref Freq
- **ABSolute** - The carrier center frequencies are displayed as absolute frequency

Remote Command	<b>:DISPlay:ACPower:VIEW:WINDow:CINFormation:FREQuency OFFSet   ABSolute</b> <b>:DISPlay:ACPower:VIEW:WINDow:CINFormation:FREQuency?</b>
Example	<b>:DISP:ACP:VIEW:WIND:CINF:FREQ ABS</b> <b>:DISP:ACP:VIEW:WIND:CINF:FREQ?</b>
Dependencies	Only available in MSR, LTEAFDD, LTEATDD and 5G NR Modes
Preset	<b>OFFSet</b>
State Saved	Saved in instrument state
Range	<b>OFFSet   ABSolute</b>

### 3.4.10.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

### Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<b>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</b> <b>:DISPlay:GRATicule[:STATe]?</b>
Example	<b>:DISP:GRAT OFF</b>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<b>ON</b>
State Saved	Saved in instrument state

---

Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code>
	This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

## Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

---

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

---

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state

## Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DElete</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DElete:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF   ON   0   1</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight <b>OFF</b> and <code>:DISP:ENAB ON</code> turns Backlight <b>ON</b> , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	<b>ON</b> Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

### 3.4.10.3 View

Contains controls for selecting the current **View**, and for editing User Views.

#### View

See "Views" on page 506.

#### User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect &lt;alphanumeric&gt;</code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOOM</code>) with</p> <pre>:DISP:VIEW:ADV:SEL</pre> <p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name &lt;alphanumeric&gt; does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre>:DISPlay:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:NAME “Baseband”</code> Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View
Notes	<code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <code>&lt;alphanumeric&gt;</code> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via <code>:DISP:ENAB OFF</code> ) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
----------------	---

---

Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

---

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> is not present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

---

## Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

---

## View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy

nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

## View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:</p> <p><code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p> <p>If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined</p>

## User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example:</p> <p><code>"Baseband,myView1,yourView1"</code></p> <p>If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a>), then query the list of available Views, the result is undefined</p>

## 3.4.11 Frequency

Contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the

**Center Frequency** setting is the same for all measurements - it does not change as you change measurements.

### 3.4.11.1 Settings

Contains controls that pertain to the X-Axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

#### Carrier Reference Frequency

The center frequencies of carriers are defined as offsets from the **Carrier Reference Frequency** value. This frequency is also the reference for carrier configuration preset.

Because LTEAFDD, LTEATDD, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the **Center Frequency** parameter used in other measurements, because **Center Frequency** can be a global parameter, and it would not make sense for **Carrier Reference Frequency** to take on this global value.

In LTEAFDD, LTEATDD and 5G NR Modes, if the following conditions are satisfied at the same time:

- **Number of Component Carriers** is 1
- Center Freq Offset is 0 Hz
- mode of **Center Frequency** is Auto

then **Center Frequency** is equivalent to **Carrier Reference Frequency**. When **Center Frequency** changes in such conditions, the mode of **Center Frequency** remains as Auto, and **Carrier Reference Frequency** changes to the same value. The major purpose of this coupling is to maintain backwards compatibility with legacy LTE/LTE TDD, in which `:SENSe:FREQUENCY:CENTer` is used to set up the frequency of the measurement.

See "[More Information](#)" on page 568.

---

Remote Command	For LTEAFDD, LTEATDD, 5G NR Modes: <code>[ :SENSe]:CCARrier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFerence?</code> For MSR Mode: <code>[ :SENSe]:CARRier:REFerence &lt;freq&gt;</code>
----------------	--

[:SENSe]:CARRier:REFerence?	
Example	For LTEAFDD, LTEATDD, 5G NR Modes: :CCAR:REF 2GHz :CCAR:REF? For MSR Mode: :CARR:REF 2GHz :CARR:REF?
Dependencies	Only available in LTEAFDD, LTEATDD, 5G NR and MSR Modes
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency

## More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTEAFDD and LTEATDD Modes, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here is only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these three are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers or a range far away from the component carriers to see spurious. The **Center Frequency** in these three measurements has a different meaning, therefore it should be a separate setting from Carrier Reference Frequency.

Carrier center frequencies are defined using offsets from Carrier Reference Frequency which determines absolute frequency locations, which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in those three measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the **Frequency** menu of these measurements.

When the mode of **Center Frequency** is Auto, **Number of Component Carriers** is 1, and **Center Frequency Offset** is 0 Hz, the Center Frequency is equivalent to Carrier Reference Frequency, which is used to set up the Frequency of all the measurements.

## Span

Changes the displayed frequency range symmetrically about **Center Frequency**. While adjusting **Span**, **Center Frequency** is held constant, which means that both start and stop frequencies will change.

If **Span** is set to a value greater than the maximum allowable span of the instrument, an error message is generated indicating the data is out of range and was clipped to upper limit.

The default (and minimum) **Span** is calculated using the number of carriers and the carrier width where;

$$\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$$

**Span** is increased by a factor of 1 + Filter Alpha if the RRC Filter is on.

Remote Command	<code>[ :SENSe]:ACPower:FREQUENCY:SPAN &lt;freq&gt;</code> <code>[ :SENSe]:ACPower:FREQUENCY:SPAN?</code>
Example	<code>:ACP:FREQ:SPAN 10 MHz</code> <code>:ACP:FREQ:SPAN?</code>
Notes	In Bluetooth Mode, the value of <b>Span</b> has to be an odd MHz
Dependencies	If the electrical attenuator is enabled, any attempt to set <b>Span</b> such that the Stop Frequency would be >3.6 GHz results in an error  In instruments with an RF Preselector, such as MXE, you cannot sweep across the band break at 3.6 GHz while the RF Preselector is on in <b>Continuous</b> sweep, as there is a mechanical switch that bypasses the RF Preselector above 3.6 GHz
Couplings	<b>Span</b> affects RBW, sweeptime, FFT & Sweep choice (including FFT Width, Phase Noise Optimization and ADC Dither auto couplings) <ul style="list-style-type: none"> <li>- Any value of <b>Center Frequency</b> or <b>Span</b> that is within the frequency range of the instrument is allowed <i>when</i> the value is being set through the front panel numeric keypad or the SCPI command. The other parameter is forced to a different value if needed, to keep the start and stop frequencies within the instrument's frequency range</li> <li>- When using the knob or the step up/down keys or the <b>UP</b>   <b>DOWN</b> keywords in SCPI, the value that is being changed, that is, <b>Center Frequency</b> or <b>Span</b>, is limited so that the other parameter is not forced to a new value</li> <li>- In Bluetooth Mode, if <b>Meas Method</b> is FFT, the max value of <b>Span</b> is coupled to the MAX IFBW of the platform</li> </ul> <p>The <b>Span</b> value is clipped when the carrier settings and/or the offset settings are changed. The value is changed to satisfy following formula:</p> $\text{Span} = (\text{Upper Carrier Freq} + (\text{max offset IBW} * (1 + \alpha)) / 2) - (\text{Lower Carrier Freq} - (\text{max offset IBW} * (1 + \alpha)) / 2)$

	This parameter is unavailable when <b>Meas Method</b> is Fast Power. In that case, the span is fixed by the formula above
Preset	Depends on instrument maximum frequency, mode, measurement, and selected input See <a href="#">"Span Presets" on page 570</a>
State Saved	Saved in instrument state
Min/Max	Depends on instrument maximum frequency, mode, measurement, and selected input. See <a href="#">"Span Presets" on page 570</a>
Annotation	Span <value> appears on the first line of the annotation in the lower right corner of display

### Span Presets

The following table provides the Max Span, for the various frequency options:

Freq Option	Max Span (can't set higher than this)
503 (all but CXA)	3.7 GHz
503, F03 (CXA, CXA-m)	3.08 GHz
507 (all but CXA)	7.1 GHz
507 (CXA, CXA-m)	7.575 GHz
508 (all but MXE)	8.5 GHz
508 (MXE)	8.5 GHz
513, F13	13.8 GHz
526 (all but CXA and MXE)	27.0 GHz
526 (MXE)	27.0 GHz
526, F26 (CXA, CXA-m)	26.55 GHz
544	44.5 GHz
550	52 GHz
F06 & EP6 (VXT models M9410A/11A)	6.27 GHz
F06 & LFE & EP6 (VXT models M9411A)	6.5999935 GHz
M9415A-F06	6.27 GHz
M9415A-F08	8.27 GHz
M9415A-F12	12.57 GHz

Input 2:

Model	Max Span (can't set higher than this)
CXA opt C75	1.58 GHz
MXE	1.000025 GHz

Note that if you are in External Mixing, the maximum Span will be equal to the Maximum Stop Frequency – Minimum Start Frequency for the currently selected mixer.

### Span Presets by Mode

Mode	Preset Value
SA	8 MHz
WCDMA	24.6848 MHz
LTE, LTETDD, LTEAFDD, LTEATDD, MSR	25 MHz
5G NR	500 MHz
Radio Test	175 kHz

## 3.4.12 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to **POSition** (Normal) and places it at the center of the display. If the selected marker is **OFF**, it is set to **POSition** and placed at the center of the screen on the trace determined by the **Marker Trace** rules.

Note that this hard key and all sub keys are unavailable when "Meas Method" on page 582 is RBW.

### 3.4.12.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

The **Select Marker** control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, **Counter**).

On any menu tab in which **Select Marker** appears, the first control is always **Marker Frequency | Time**.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for <b>Normal</b> , <b>Delta</b> and <b>Fixed</b> markers

### 3.4.12.2 Settings

The controls on this tab include the **Marker** active function and a radio button selection of the marker control mode (**POSition**, **DELTA**, or **OFF**) for the selected marker, as well as additional functions that help you use markers.

#### Marker Frequency

Sets the marker X-Axis value in the current marker X-Axis Scale unit. Has no effect if the control mode is **OFF**, but is the SCPI equivalent of entering an X value if the control mode is **POSition** or **DELTA**.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:X &lt;freq&gt;</code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:ACP:MARK3:X 0</code> <code>:CALC:ACP:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X-Axis Scale. If a suffix is sent that does not match the current marker X-Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X Axis value if the control mode is <b>POSition</b> , or the offset from the marker's reference marker if the control mode is <b>DELTA</b> . The query is returned in the fundamental units for the current marker X-Axis scale: Hz for <b>Frequency and Inverse Time</b> , seconds for <b>Period and Time</b>
Dependencies	Unavailable when " <b>Meas Method</b> " on page 582 is <b>RBW</b>
Preset	After a preset, all markers are turned <b>OFF</b> , so the query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

#### Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **OFF**, but is the SCPI equivalent of entering a value if the control mode is **POSition** or **DELTA**, except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:X:POSition &lt;real&gt;</code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:X:POSition?</code>
Example	<code>:CALC:ACP:MARK10:X:POS 0</code> <code>:CALC:ACP:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is

	<b>POSition</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>DELTA</b> . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points. When a Marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is <b>OFF</b> , the response is Not A Number
Dependencies	Unavailable when <b>Meas Method</b> is RBW
Preset	After a preset, all markers are turned <b>OFF</b> , so the query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37

### Marker Y Axis Value (Remote Query only)

Returns the marker Y-Axis value in the current marker Y-Axis unit.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:ACP:MARK11:Y?</code>
Notes	Returns the marker Y-axis result, if the control mode is <b>POSition</b> or <b>DELTA</b> . If the marker is <b>OFF</b> , the response is Not A Number
Dependencies	Unavailable when " <b>Meas Method</b> " on page 582 is <b>RBW</b>
Preset	Depends on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:FUNCTION:RESult?</code>

### Marker Mode

Sets the marker control mode to **POSition** (Normal), **DELTA**, or **OFF**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **POSition**, and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MODE POSition   DELTA   OFF</code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:ACP:MARK3:MODE POS</code>

	<code>:CALC:ACP:MARK3:MODE?</code>
Dependencies	Unavailable when <b>Meas Method</b> is <b>RBW</b>
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<code>POSition DELTA OFF</code>
Annotation	Mkr # <X value> and <Marker value> upper right on graph

### Backwards Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1) puts it in **POSition** mode and places it at the center of the screen.

Example	<code>:CALC:ACP:MARK2:STAT ON</code> <code>:CALC:ACP:MARK2:STAT?</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<code>OFF ON</code>
Backwards Compatibility SCPI	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:STATE OFF   ON   0   1</code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:STATE?</code>

### Delta Marker (Reset Delta)

Pressing this button has exactly the same effect as pressing **DELTA** in **Marker Mode**. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

### Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility.

### All Markers Off

Turns off all markers.

Remote Command	<code>:CALCulate:ACPower:MARKer:AOFF</code>
Example	<code>:CALC:ACP:MARK:AOFF</code>
Dependencies	Unavailable when " <b>Meas Method</b> " on page 582 is <b>RBW</b>

## Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **OFF**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental X-Axis units of the trace that marker is on), and the X-Axis value of the marker being moved (in the same fundamental X-Axis units).

This may result in markers going off screen.

Remote Command	<code>:CALCulate:ACPower:MARKer:COUPle[:STATe] ON   OFF   1   0</code> <code>:CALCulate:ACPower:MARKer:COUPle[:STATe]?</code>
Example	<code>:CALC:ACP:MARK:COUP ON</code> <code>:CALC:ACP:MARK:COUP?</code>
Dependencies	Unavailable when " <b>Meas Method</b> " on page 582 is <b>RBW</b>
Preset	<b>OFF</b> Presets on <b>Mode Preset</b> and <b>All Markers Off</b>
State Saved	Saved in instrument state

### 3.4.12.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

**NOTE**

Pressing the **Peak Search** hardkey automatically moves you to the Peak Search page of the **Marker** menu *and* performs a Peak Search.

Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a Peak Search.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "**Marker Frequency**" on page 572 on the **Settings** tab.

## Peak Search

Pressing the **Peak Search** control moves the selected marker to the trace point which has the maximum Y-Axis value for that marker’s trace.

**NOTE**

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MAXimum</code>
Example	<code>:CALC:ACP:MARK2:MAX</code> <code>:SYST:ERR?</code> can be used to query the errors to determine if a peak is found. The message “No peak found” will be returned after an unsuccessful search
Notes	Sending this command selects the subopcoded marker

### Next Peak

Moves the selected marker to the peak that is next lower in amplitude than the current marker value.

If the selected marker was **OFF**, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MAXimum:NEXT</code>
Example	<code>:CALC:ACP:MARK2:MAX:NEXT</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Next Pk Right

Moves the selected marker to the nearest peak right of the current marker.

If the selected marker was **OFF**, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:MAXimum:RIGHT</code>
Example	<code>:CALC:ACP:MARK2:MAX:RIGH</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Next Pk Left

Moves the selected marker to the nearest peak left of the current marker.

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

If the selected marker was **OFF**, then it is turned on as a normal marker and a peak search is performed.

Remote Command	:CALCulate:ACPower:MARKer[1] 2 ... 12:MAXimum:LEFT
Example	:CALC:ACP:MARK2:MAX:LEFT
State Saved	Not part of saved state

### Minimum Peak

Moves the selected marker to the minimum Y-Axis value on the current trace.

If the selected marker is **OFF**, it is turned on before the minimum search is performed.

Remote Command	:CALCulate:ACPower:MARKer[1] 2 ... 12:MINimum
Example	:CALC:ACP:MARK:MIN
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Pk-Pk Search

Finds and displays the amplitude and frequency (or time, if in zero span) differences between the highest and lowest Y-Axis value. It places the selected marker on the minimum value on its selected trace, and places that marker's reference marker on the peak of its selected trace.

This function turns on the reference marker and sets its mode to **POSITION** if it is not already on. (These markers may be on two different traces.)

If the selected marker is **OFF**, a delta type marker is turned on and the peak-to-peak search is done. If the selected marker is on, but it is not a delta marker, then it is changed to delta, which turns on the reference marker if needed, and then it performs the peak-to-peak function.

Remote Command	:CALCulate:ACPower:MARKer[1] 2 ... 12:PTPeak
Example	:CALC:ACP:MARK:PTP
Notes	Turns on the Marker D active function Sending this command selects the subopcoded marker
Dependencies	<b>Pk-Pk Search</b> is not available when <b>Coupled Markers</b> is on
Couplings	The selected marker becomes a delta marker if not already in delta mode
State Saved	Not part of saved state

## Marker Delta

Pressing this button has exactly the same effect as pressing **DELTA** in **Marker Mode** on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search and change the marker's control mode to **Delta** without having to access two separate menus.

### 3.4.12.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "**Marker Frequency**" on page 572 on the **Settings** tab.

## Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:REference &lt;integer&gt;</code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:REference?</code>
Example	<code>:CALC:ACP:MARK2:REF 6</code> <code>:CALC:ACP:MARK2:REF?</code>
Notes	Causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried a single value is returned (the specified marker numbers relative marker)
Dependencies	Unavailable when " <b>Meas Method</b> " on page 582 is <b>RBW</b>
Couplings	If the reference marker is <b>OFF</b> , it is turned on in <b>POSition</b> mode at the delta marker location

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Preset	The preset default “Relative To” marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then its default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1  Set to the defaults by using <b>Restore Mode Defaults</b> . This is not reset by <b>Marker Off</b> , <b>All Markers Off</b> , or <b>Preset</b>
State Saved	Saved in instrument state. Not affected by <b>Marker Off</b> and hence not affected by <b>Preset</b> or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a <b>Delta</b> marker

### Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal markers.

Specifying a **Marker Trace** manually or with this command associates the marker with the specified trace. If the marker is not **OFF**, it moves the marker from the trace it was on to the new trace. If the marker is **OFF**, it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:ACPower:MARKer[1] 2 ... 12:TRACe 1   2   3</code> <code>:CALCulate:ACPower:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:ACP:MARK2:TRAC 2</code> <code>:CALC:ACP:MARK2:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating  An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of <b>Marker Trace</b> is not affected by " <a href="#">Auto Couple</a> " on page 2242  Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state
Min	1
Max	3

## Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility. It is the same as "[Marker Settings Diagram](#)" on page 574 on the **Settings** tab.

### 3.4.13 Meas Setup

Contains functions for setting up the measurement parameters, and for setting up parameters global to all measurements in the Mode.

#### 3.4.13.1 Settings

Contains frequently-used functions to which you will want the fastest access.

#### Avg | Hold Number

Specifies the number of measurement averages used to calculate the measurement result. The average will be displayed at the end of each sweep. After the specified number of average counts, the average mode (termination control) setting determines the average action.

Remote Command	<code>[ :SENSe ] :ACPower :AVERage :COUNT &lt;integer&gt;</code> <code>[ :SENSe ] :ACPower :AVERage :COUNT?</code>
Example	<code>:ACP :AVER :COUN 250</code> <code>:ACP :AVER :COUN?</code>
Notes	The BAF backwards Compatibility SCPI command, <code>[ :SENSe ] :ACPR :AVERage [ :STATe ]</code> , is provided to support same functionality as <code>[ :SENSe ] :ACPr :AVERage [ :STATe ]</code> (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to ACPr node conflicts with ACPower node
Preset	10
State Saved	Saved in instrument state
Min/Max	1/1000
Annotation	Avg Number is displayed in the Measurement Bar
Backwards Compatibility SCPI	<code>[ :SENSe ] :ACPR :AVERage :COUNT</code> <code>[ :SENSe ] :MCPower :AVERage :COUNT</code> Power Suite, W-CDMA

#### Averaging On/Off

Turns averaging on or off.

**NOTE**

In this measurement, the **Average Type** is preset to the **Log-Pwr Avg (Video)** method. Other averaging methods are not available.

Remote Command	<code>[ :SENSe]:ACPower:AVERage[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:ACPower:AVERage[:STATe]?</code>
Example	<code>:ACP:AVER OFF</code> <code>:ACP:AVER?</code>
Preset	ON
State Saved	Yes
Range	OFF   ON
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPR:AVERage[:STATe]</code> <code>[ :SENSe]:MCPower:AVERage[:STATe]</code> Power Suite, W-CDMA

### Avg Mode

Sets the Averaging Mode. This determines the averaging action after the specified number of data acquisitions (average count) is reached.

- When set to **EXponential**, the measurement averaging continues using the specified number of averages to compute each averaged value. The average will be displayed at the end of each sweep
- When set to **REPeat**, the measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[ :SENSe]:ACPower:AVERage:TCONtrol EXPonential   REPeat</code> <code>[ :SENSe]:ACPower:AVERage:TCONtrol?</code>
Example	<code>:ACP:AVER:TCON EXP</code> <code>:ACP:AVER:TCON?</code>
Notes	The backwards-compatibility SCPI command, <code>[ :SENSe]:ACPR:AVERage:TCONtrol</code> , is provided to support same functionality as <code>[ :SENSe]:ACPr:AVERage:TCONtrol</code> (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to <b>ACPr</b> node conflicts with <b>ACPower</b> node
Preset	EXPonential
State Saved	Saved in instrument state
Range	EXPonential   REPeat
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPR:AVERage:TCONtrol</code> Power Suite, W-CDMA: <code>[ :SENSe]:MCPower:AVERage:TCONtrol</code>

## Meas Method

Sets the desired method to measure ACP. The options are:

<p><b>Integration BW</b> IBW</p>	<p>One sweep of the trace is taken, and the band power for each offset is computed. Depending on "Measurement Type" on page 676 (Total Power Reference or PSD Reference), results are displayed relative to the total power or the power spectral density. The display reflects either the current trace or a bar graph view</p>
<p><b>Filtered IBW</b> IBWRange (max dynamic range)</p>	<p>The ACP Path is used to compute ACP when an ACP path is available. This method increases dynamic range, but increases measurement time as it limits the resolution bandwidth. This method is useful for improving dynamic range on a W-CDMA signal because a sharp cutoff bandpass filter is used. The accuracy of the adjacent channel power ratio is not degraded by this method, but the absolute accuracy of both adjacent channel power and carrier power are degraded by up to about 0.5 dB</p>
<p><b>RBW</b> RBW</p>	<p>The algorithm uses zero-span and an appropriate RBW setting to capture all of the power in the carrier channel and the offsets. The zero-span algorithm (RBW method) is slower than the IBW method, but greatly improves repeatability</p>
<p><b>Fast</b> FAST</p>	<p>WCDMA Mode or SA Mode with 3GPP WCDMA radio standard selected: Provides the same method as the Integration BW method, but is optimized for speed to measure a W-CDMA signal</p> <p>SA Mode with CDMA2K radio standard selected: Provides faster measurement using the FFT method with a limited parameter flexibility. When this is selected, CDMA2K preset offsets are given and control of the following are unavailable:</p> <ul style="list-style-type: none"> <li>- BW menu</li> <li>- Sweep/Control menu except Pause/Resume</li> <li>- Trace/Detector menu</li> <li>- Carrier Setup, Offset Limit, RRC Weighting, Filter Alpha, and Noise Correction in Meas Setup menu</li> </ul>
<p><b>Fast Power</b> FPower (Option FP2 required)</p>	<p>This provides faster measurement using the Hardware accelerated FFT method with a limited parameter flexibility. When this is selected, the following parameters are not available:</p> <ul style="list-style-type: none"> <li>- Points and Auto Sweep Points under Sweep <ul style="list-style-type: none"> <li>- When changing Meas Method to Fast Power, Auto Sweep Points is turned on and grayed-out (Sweep Points will change according to the Fast Power setting)</li> <li>- When returning Meas Method to any setting other than Fast Power, Auto Sweep Points stays on and becomes available (Sweep Points will change according to the auto sweep points calculation algorithm)</li> </ul> </li> <li>- Trace Type, Restart Averaging and View/Blank under Trace when Select Trace is Trace 2 or Trace3</li> <li>- Span under Frequency</li> <li>- Res BW, Video BW, Filter Type and Filter BW of Offset &gt; Advanced dialog of Carr/Offset/Limits Config control under Meas Setup</li> <li>- For Trigger, only Free Run, External 1 and External 2 are supported</li> </ul>

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

When in microwave frequency and measurement span is > 40MHz, RF preselector must be turned off

Remote Command	<code>[ :SENSe ] :ACPower :METHod IBW   IBWRange   FAST   RBW   FPOwer</code> <code>[ :SENSe ] :ACPower :METHod?</code>
Example	<code>:ACP:METH IBW</code> <code>:ACP:METH?</code>
Notes	<b>FAST</b> mode is only supported for WCDMA and C2K signals. You must be in WCDMA or SA Modes, with 3GPP WCDMA or CDMA2K radio standard. Otherwise, a setting conflict error message is reported MSR, LTEAFDD, LTEATDD and 5G NR Modes support only Integration BW, Filtered IBW and Fast Power methods
Dependencies	When <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> is selected, <b>Gate</b> function is not available. If you try to turn <b>GateON</b> while <b>Meas Method</b> is <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> , an error is generated When <b>Gate</b> function is <b>ON</b> , <b>RBW</b> , <b>FAST</b> and <b>FPOwer</b> are not available. If you try to change <b>Meas Method</b> to <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> , an error is generated VXT Models M9420A/10A/11A support only the Integration BW method
Couplings	IBW (Range) restricts the <b>Res BW</b> available for making this measurement to 30 kHz. When selected, <b>Res BW</b> is clipped to this value if required and an error number displayed
Preset	<b>IBW</b>
State Saved	Saved in instrument state
Range	<b>IBW   IBWRange   FAST   RBW   FPOwer</b>
Backwards Compatibility SCPI	<code>[ :SENSe ] :ACPR :SWEp :TYPE</code> (Power Suite, WCDMA) <code>[ :SENSe ] :MCPower :METHod</code>

### Carrier/Offset/Limits Config

Opens a dialog that lets you set Carriers, Offset, and Limits parameters.

### Number of Carriers

This is the same as **Number of Carriers [Mode: all but LTEAFDD, LTEATDD, MSR, 5GNR]** under **Reference**.

### Couple to #1

Couples carrier settings to carrier #1. The coupled parameters are:

- "Carrier Pwr Present" on page 638
- "Carrier Spacing" on page 639
- "Measurement Noise Bandwidth" on page 640
- "Method for Carrier " on page 641
- "Filter Alpha for Carrier" on page 641

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:COUPle OFF   ON   0   1, ...</code> <code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:COUPle?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:LIST:COUP OFF</code> <code>:ACP:CARR:LIST:COUP?</code>
Notes	Some modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored For LTEAFDD or LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD, the SCPI command is supported in LTE & LTE-A converged applications
Couplings	When <b>ON</b> , the carrier settings are coupled to carrier #1. Coupled parameters are: Carrier Power Present, Carrier Spacing, Measurement Noise Bandwidth, Method and Filter Alpha When a setting is changed, coupling is switched off automatically Carrier #1 is always set to <b>ON</b> and cannot be changed
Preset	<b>ON</b>
State Saved	Saved in instrument state

## Carrier Pwr Present

Configures the carriers for this measurement. Allows spaces to be inserted between carriers. Carriers with the power present parameter set to **YES** are carriers, and those with the power present parameter set to **NO** are spaces. Each carrier power present is set to **YES** or **NO**. The individual carrier can be set by selecting the desired carrier.

The query returns the current values for all of the carriers. If a carrier is defined as having no power present, the power displayed is relative to the reference carrier, otherwise the absolute power is displayed.

If you change the carrier power present to **NO**, and that carrier is currently configured as the reference carrier, the next carrier to the left (or the right if there are no carriers to the left) is assigned as the reference carrier. This also applies to the scenario where there are only two carriers configured as having power present, and you configure only one carrier to have no power present.

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Remote Command	<pre>[ :SENSe]:ACPower:CARRier[1] 2:LIST:PPresent YES   NO, ...</pre> <pre>[ :SENSe]:ACPower:CARRier[1] 2:LIST:PPresent?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR2:LIST:PPR YES</pre> <pre>:ACP:CARR2:LIST:PPR?</pre>
Notes	<p>Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored</p> <p>When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, so if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored</p> <p>For LTEAFDD or LTEATDD Modes, this control is not shown. To maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE &amp; LTE-A converged applications</p>
Couplings	Coupled to number of carriers. When the SCPI command is sent, the number of carriers is set to the number of entries in the parameter list
Preset	YES
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<pre>[ :SENSe]:MCPower:CARRier[1] 2:LIST:PPresent</pre>

### Carrier Spacing

Sets the width of the carrier spacing. This is the value applied to all the current slots, whether they are carriers or spaces.

Enter each carrier spacing value individually by selecting the desired carrier, and then enter the carrier width.

Remote Command	<pre>[ :SENSe]:ACPower:CARRier[1] 2:LIST:WIDTh &lt;freq&gt;, ...</pre> <pre>[ :SENSe]:ACPower:CARRier[1] 2:LIST:WIDTh?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR2:LIST:WIDTh 25kHz</pre> <pre>:ACP:CARR2:LIST:WIDTh?</pre>
Notes	<p>Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored</p> <p>When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, so if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored</p> <p>For LTEAFDD or LTEATDD Modes, this control is not shown. To maintain backwards compatibility with</p>

	legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications
Couplings	Coupled to number of carriers. When the SCPI command is sent, the number of carriers is set to the number of entries in the parameter list Changing Carrier Spacing might affect " <a href="#">Span</a> " on page 569
Preset	SA, WCDMA, LTE, LTE-TDD Modes 5 MHz Radio Test Mode 25 kHz
State Saved	Saved in instrument state
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as the Max Span of Swept SA Measurement
Backwards Compatibility SCPI	<code>[ :SENSe ] :MCPower :CARRier [ 1 ]   2 :LIST :WIDTH</code>

## Measurement Noise Bandwidth

Specifies the **Measurement Noise Bandwidth** used to calculate the power in the carriers.

Each **Measurement Noise Bandwidth** value is entered individually by selecting the desired carrier. Enter the measurement noise bandwidth on the **Carrier** page of the **Carr/Offset/Limits Config** dialog.

Remote Command	<code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BANDwidth [ :INTEgration ] &lt;freq&gt;, ...</code> <code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BANDwidth [ :INTEgration ] ?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR2:LIST:BAND 25kHz</code> <code>:ACP:CARR2:LIST:BAND?</code>
Notes	In WCDMA Mode, the preset/default value is defined as 3.84 MHz, but internally, 4.6848 MHz is used as the default value Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, so if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored For LTEAFDD or LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications
Couplings	Coupled to number of carriers. When the SCPI command is sent, the number of carriers is set to the number of entries in the parameter list

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Preset	Modes	Value
	SA	2 MHz
	WCDMA	3.84 MHz
	LTE, LTETDD	4.515 MHz 4.5 MHz
	Radio Test	25 kHz

---

State Saved	Saved in instrument state
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement
Backwards Compatibility SCPI	<pre>[ :SENSe]:ACPower:BAWIDth:INTEgration</pre> <pre>[ :SENSe]:ACPower:BWIDth:INTEgration</pre> <pre>[ :SENSe]:ACPower:CARRier[1] 2:LIST:BWIDth[:INTEgration]</pre> <pre>[ :SENSe]:MCPower:CARRier[1] 2:LIST:BAWIDth[:INTEgration]</pre> <pre>[ :SENSe]:MCPower:CARRier[1] 2:LIST:BWIDth[:INTEgration]</pre>

### Method for Carrier

Accesses the carrier configuration method settings.

Remote Command	<pre>[ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer[:RRC][:STATE] ON   OFF   1   0, ...</pre> <pre>[ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer[:RRC][:STATE]?</pre>				
Example	<pre>:ACP:CARR:LIST:FILT 0,0,0,0</pre> <pre>:ACP:CARR:LIST:FILT?</pre>				
Notes	<p>The binary values translate as follows:</p> <table border="1"> <tbody> <tr> <td>1 ON</td> <td>RRC Weighted</td> </tr> <tr> <td>0 OFF</td> <td>Integ BW</td> </tr> </tbody> </table> <p>Maximum of Array length depends on the number of carriers Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored For LTEAFDD or LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE &amp; LTE-A converged applications</p>	1 ON	RRC Weighted	0 OFF	Integ BW
1 ON	RRC Weighted				
0 OFF	Integ BW				

Preset	Modes	Value
	SA, LTE, LTETDD	OFF
	WCDMA	ON
	Radio Test	OFF

---

State Saved	Saved in instrument state
Range	Integration BW   RRC Weighted

## Filter Alpha for Carrier

Inputs the alpha value for the filter used in the current carrier configuration.

---

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer:ALPHa &lt;real&gt;, ...</code> <code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer:ALPHa?</code>
Example	<code>:ACP:CARR2:LIST:FILT:ALPH 0.5</code> <code>:ACP:CARR2:LIST:FILT:ALPH?</code>
Notes	Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored For LTEAFDD or LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications
Preset	0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.0

## Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

---

Remote Command	<code>[ :SENSe]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license

Preset	1
State Saved	Yes
Min	1
Max	5

### Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

### Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

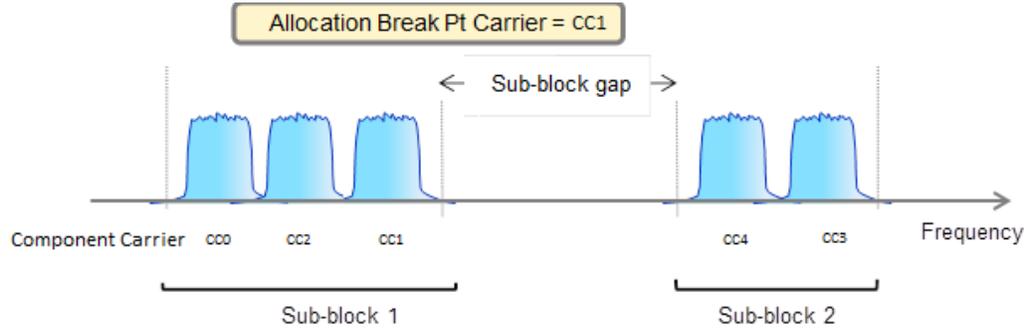

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0   ...   CC4</code> <code>[ :SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

## Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

## Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

## Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

## Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

## Non-Contiguous Break at

See "Non-Contiguous Break at" on page 2246.

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:BANdwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:CCARrier0 ... 4[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe]:CCARrier&lt;n&gt;:FREQUency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier&lt;n&gt;:FREQUency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMal   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD)

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

	CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe ]:RADio:STANdard:ULDL</code>

### Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe ]:CCARrier0 ... 4:RADio:STANdard:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe ]:CCARrier0 ... 4:RADio:STANdard:DGPU?</code>
Example	<code>:CCAR0:RAD:STAN:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe ]:RADio:STANdard:DGPU</code>

## Sidelink Mode

Set the sidelink mode per uplink component carrier. The setting is used to indicate whether the component carrier is cellular LTE or sidelink V2X. There are two modes listed as below:

- None: The component carrier is legacy LTE uplink carrier. The lte uplink parameters per carrier are in scope
- V2X: The component carrier is sidelink V2X carrier. The sidelink parameters per carrier are in scope

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:SLINK:MODE NONE   V2X</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:SLINK:MODE?</code>
Example	<code>:CCAR4:RAD:SLIN:MODE V2X</code>
Notes	The setting is available when Direction is Uplink with the required license
State Saved	Yes
Range	None   V2X

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

System Bandwidth	CHP Integ BW
1.4 MHz (B1M4)	1.4 MHz
3 MHz (B3M)	3 MHz
5 MHz (B5M)	5 MHz
10 MHz (B10M)	10 MHz
15 MHz (B15M)	15 MHz
20 MHz (B20M)	20 MHz
200 kHz(B200K)	200 kHz

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Preset	5 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] :CHPower :BANDwidth :INTEgration</code> <code>[ :SENSe ] :CHPower :BWIDth :INTEgration</code>

### ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :ACPpower :BANDwidth [ 1 ]   2 :INTEgration &lt;freq&gt;</code> <code>[ :SENSe ] :CCARrier0   ...   4 :ACPpower :BANDwidth [ 1 ]   2 :INTEgration ?</code>																								
Example	<code>:CCAR0 :ACP :BAND :INT 20MHz</code> <code>:CCAR0 :ACP :BAND :INT ?</code>																								
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS ACP Meas Noise BW</th> <th>MS ACP Meas Noise BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Yes																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BANDwidth [ :INTEgration ]</code> <code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BWIDth [ :INTEgration ]</code>																								

## SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BAWdwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BAWdwidth[1] 2:INTEgration?</code>																								
Example	<code>:CCAR0:SEM:BAWd:INT 20MHz</code> <code>:CCAR0:SEM:BAWd:INT?</code>																								
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS SEM Integ BW</th> <th>MS SEM Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Saved in instrument state																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:SEMAsk:BAWdwidth[1] 2:INTEgration</code>																								

## Carrier Config Presets

Lets you configure the Component Carrier presets.

## Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

## Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code> <code>:CCAR:CONF:SPAC:DELTA?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

## Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
----------------	---

Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

## ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe ]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe ]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe ]:CCARrier:CONFig:ETC1:BA NDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe ]:CCARrier:CONFig:ETC1:BA NDwidth?</code>
Example	<code>:CCAR:CONF:ETC1:BA ND B5M</code> <code>:CCAR:CONF:ETC1:BA ND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

### Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative - Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive - Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive [:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG :CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

## Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K [:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M :CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

## ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	---

	<code>[ :SENSe ] :CCARrier :CONFig :ETC3 :BANDwidth ?</code>
Example	<code>:CCAR :CONF :ETC3 :BAND B5M</code> <code>:CCAR :CONF :ETC3 :BAND ?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

## Offset

Lets you configure the spacing of the offset regions.

### Offset Frequency Define

Lets you select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “From Carrier Center to Integ BW Closer Edge” definition. LTE conformance test requires “From Carrier Edge to Integ BW Center” and/or “From Carrier Edge to Integ BW Closer Edge” definition.

<b>CTOCenter</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
<b>CTOEdge</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
<b>ETOCenter</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
<b>ETOEdge</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge of each Offset Integ BW
<b>RTOCenter</b> 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the center frequency of each Offset Integ BW
<b>RTOEdge</b> 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the closest edge frequency of each Offset Integ BW
<b>RCTOCenter</b> 5G NR Mode only	From the center frequency of RF BW** to the center frequency of each Offset Integ BW
<b>SCTOCenter</b> 5G NR Mode only	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

\*\* RF BW =  $BW_{channel,CA}$  which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or

Disabled. When the Number of Component Carrier = 1,  $RF\ BW = BW_{channel} = 2 \times F_{offset,RAT}$

\*\* sub-block (bandwidth) =  $BW_{channel,block}$  which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) =  $BW_{channel} = 2 \times F_{offset,RAT}$ .

See "Diagrams for Offset Freq Define" on page 603.

### Modes other than MSR, LTEAFDD, LTEATDD, 5G NR

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

### Mode: MSR, LTEAFDD, LTEATDD

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

### Mode: 5G NR

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   RTOCenter   RTOEdge   RCTOCenter   SCTOCenter</code>
----------------	---

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

	<code>[ :SENSe ] :ACPower:OFFSet[1]   2 [ :OUTer ] :TYPE?</code>
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter   CTOEdge   ETOCenter   ETOEdge   RTOCenter   RTOEdge   RCTOCenter</code> <code>  SCTOCenter</code>

### Diagrams for Offset Freq Define

Details depend on the selected mode.

#### Diagram for Modes other than MSR, LTEAFDD, LTEATDD, 5G NR


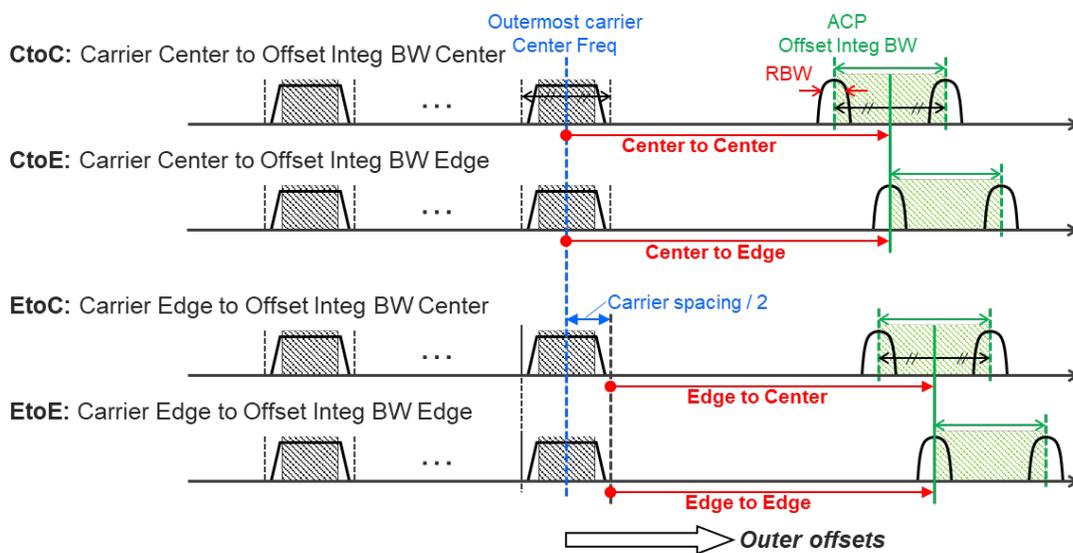


Diagram for MSR, LTEAFDD, LTEATDD, 5G NR

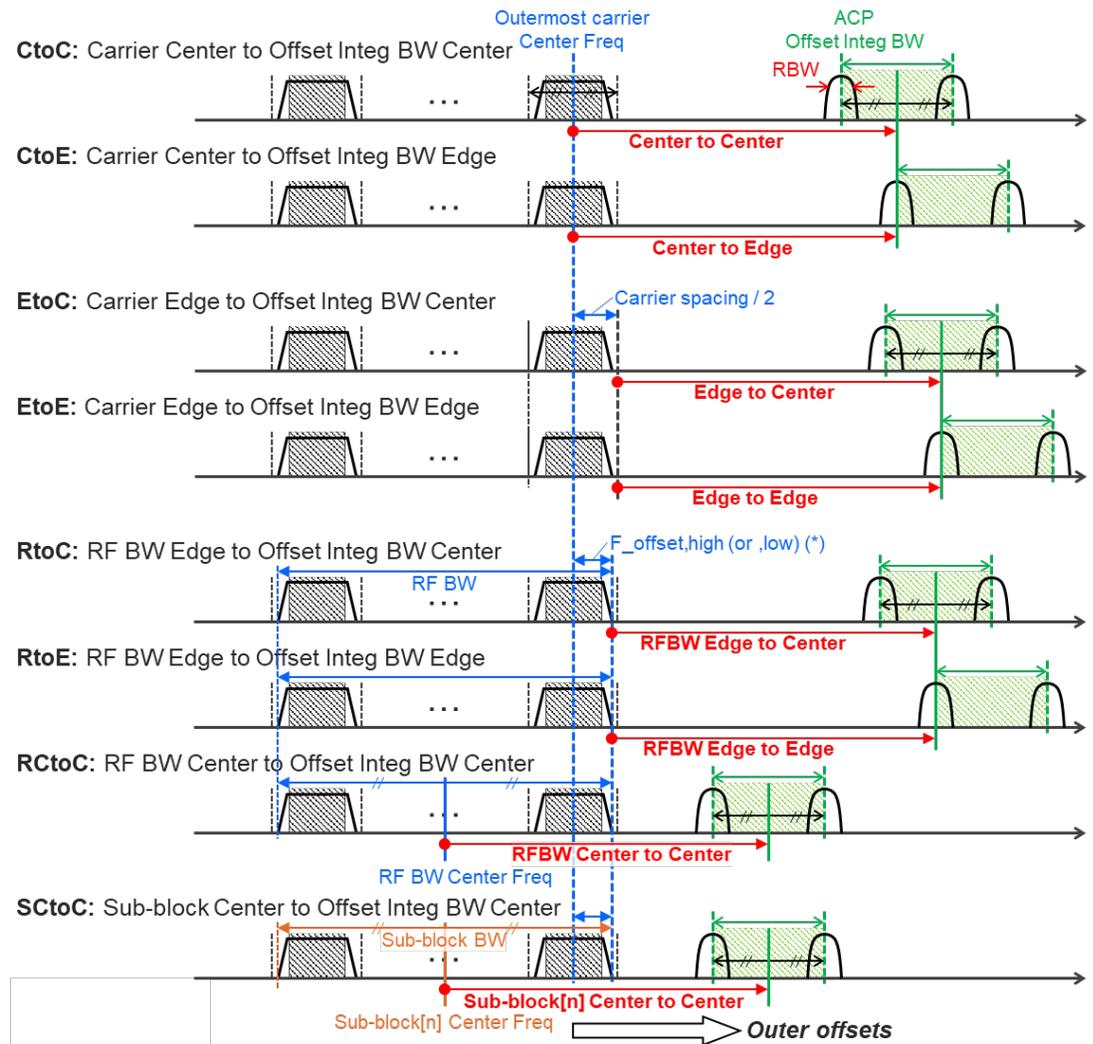

Note:

RF BW Edge and Outermost Carrier Edge are not always the same.  
e.g.) 5G NR (3GPP) defines BW\_channel, CA which calculates F\_offset,high and F\_offset,low asymmetrically with SCS shift.

(\*) For MSR, F\_offset,high (or ,low) = F\_offset,RAT,high (or ,low)

Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier.

Each **Offset Freq** state value is entered individually by selecting the desired carrier.

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

The list contains up to six (6) entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[ :SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST[:FREQuency]`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency] &lt;freq&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS1:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:LIST?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, in which case subsequent values are ignored												
Couplings	Changing Offset Frequency might affect " <a href="#">Span</a> " on page 569												
Preset	When " <a href="#">Max Num of Offsets</a> " on page 633 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value												
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>WCDMA</td> <td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>5G NR</td> <td>100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>Radio Test</td> <td>25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz</td> </tr> </tbody> </table>	Modes	Values	SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz
Modes	Values												
SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz												
State Saved	Saved in instrument state												
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement												
Backwards Compatibility SCPI	<code>[ :SENSe]:MCPower:OFFSet[1] 2:LIST[:FREQuency]</code>  Auto Function												
Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe OFF   ON   0   1,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe?</code>												

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:LIST:STAT?</code>												
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value												
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>ON, OFF, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>WCDMA</td> <td>ON, ON, OFF, OFF, OFF, OFF   ON, ON, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>5G NR</td> <td>ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>Radio Test</td> <td>ON, ON, ON, OFF, OFF, OFF</td> </tr> </tbody> </table>	Modes	Values	SA	ON, OFF, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF	WCDMA	ON, ON, OFF, OFF, OFF, OFF   ON, ON, OFF, OFF, OFF, OFF	LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF	5G NR	ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF	Radio Test	ON, ON, ON, OFF, OFF, OFF
Modes	Values												
SA	ON, OFF, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF												
WCDMA	ON, ON, OFF, OFF, OFF, OFF   ON, ON, OFF, OFF, OFF, OFF												
LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF												
5G NR	ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF												
Radio Test	ON, ON, ON, OFF, OFF, OFF												
State Saved	Yes												
Range	OFF   ON												

## Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[ :SENSe]:ACP:OFFSet[n] [ :OUTer]:LIST[:FREquency]`.

Enter each value individually by selecting the desired offset, then enter the Offset Integration Bandwidth.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n] [ :OUTer]:LIST:STATe`.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:BANDwidth[:INTEgration] &lt;freq&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:BANDwidth[:INTEgration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:LIST:BAND?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value, you must send all values up to that. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values is ignored
Couplings	Changing <b>Integ BW</b> might affect "Span" on page 569

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Preset	When "Max Num of Offsets" on page 633 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value												
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz</td> </tr> <tr> <td>WCDMA</td> <td>3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz</td> </tr> <tr> <td>5G NR</td> <td>98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz</td> </tr> <tr> <td>Radio Test</td> <td>25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz</td> </tr> </tbody> </table>	Modes	Values	SA	2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz	WCDMA	3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz	LTEAFDD, LTEATDD, MSR	4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz	5G NR	98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz	Radio Test	25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz
Modes	Values												
SA	2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz												
WCDMA	3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz												
LTEAFDD, LTEATDD, MSR	4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz												
5G NR	98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz												
Radio Test	25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz												
State Saved	Saved in instrument state												
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement												
Backwards Compatibility SCPI	<pre>[ :SENSe]:ACPower:OFFSet[1]   2:LIST:BWIDth[:INTEgration] [:SENSe]:ACPR:OFFSet[1]   2:LIST:BANDwidth [:SENSe]:ACPR:OFFSet[1]   2:LIST:BWIDth [:SENSe]:MCPower:OFFSet[1]   2:LIST:BANDwidth[:INTEgration] [:SENSe]:MCPower:OFFSet[1]   2:LIST:BWIDth[:INTEgration]</pre>												


## Offset Side

Specifies which offset side to measure.

You can turn off (not use) specific offsets with `[ :SENSe]:ACPower:OFFSet[1] | 2[:OUTer]:LIST:SIDE`.

<b>NEGative</b>	Negative (lower) sideband only
<b>BOTH</b>	Both of the negative (lower) and positive (upper) sidebands
<b>POSitive</b>	Positive (upper) sideband only

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in MSR, LTEAFDD and LTEATDD Modes.

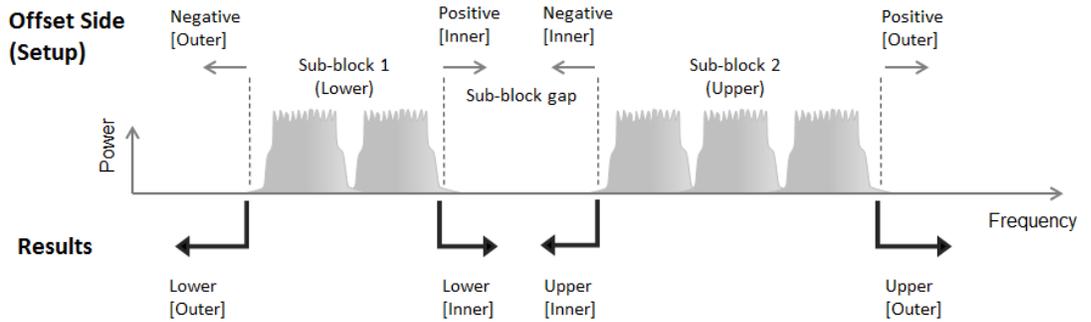

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:SIDE NEGative   BOTH   POSitive, ...</code> <code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:SIDE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:LIST:SIDE BOTH</code> <code>:ACP:OFFS:LIST:SIDE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored If you set <b>POS</b> or <b>NEG</b> in an offset, result of the inactive side returns -999
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is <b>BOTH</b> <b>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH   BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</b>
State Saved	Saved in instrument state
Range	<b>NEGative BOTH POSitive</b>

## Method

Allows you to turn RRC filtering of each offset on or off. The value (roll off) for the filter will be set to the value of the **Filter Alpha** parameter.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:FILTer[:RRC][:STATE] ON   OFF   1   0, ...</code> <code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:FILTer[:RRC][:STATE]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:LIST:FILT 1,0,0</code> <code>:ACP:OFFS:LIST:FILT?</code>
Notes	<b>1 ON</b> = RRC Weighted, <b>0 OFF</b> = Integ BW Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

	Mode	Values
	SA	0, 0, 0, 0, 0, 0   0, 0, 0, 0, 0, 0
	WCDMA	1, 1, 1, 1, 1, 1   1, 1, 1, 1, 1, 1
	LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0   0, 0, 0, 0, 0, 0
	Radio Test	0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state	
Range	Integ BW   RRC Weighted	

## Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer:ALPHA <real>, ... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer:ALPHA?	
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	:ACP:OFFS:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5 :ACP:OFFS:LIST:FILT:ALPH?	
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored	
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value	
	SA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	WCDMA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	LTEAFDD, LTEATDD, 5G NR, MSR	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state	
Min/Max	0.01/1.00	

## Advanced (Offset)

Opens a further menu page, which lets you set advanced properties of the Inner Offset, such as Res BW, Video BW, and Filter parameters.

## Offset Freq

This column is the same as "**Offset Freq**" on page 645 in the main **Offset** menu.

## Res BW

Sets the resolution bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution &lt;freq&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz</code> <code>:ACP:OFFS2:LIST:BAND:RES?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Dependencies	When " <b>Meas Method</b> " on page 582 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent SCPI remote command is sent, a "Setting conflict" warning is generated
Couplings	When <b>Res BW</b> Mode is <b>Auto</b> , this value is exactly same as <b>Res BW</b> . When you change this value, <b>Res BW</b> Mode also changes to <b>Man</b>
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value
	SA 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz
	WCDMA 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz
	LTEAFDD, LTEATDD, 5G NR, MSR 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz   100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz
State Saved	Saved in instrument state
Min/Max	1 Hz/8 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:RESolution</code>
	Auto Function
Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution:AUTO ON   OFF   1   0,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:RES:AUTO 1,1,1,1,1,1</code> <code>:ACP:OFFS2:LIST:BAND:RES:AUTO?</code>
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is 1 1, 1, 1, 1, 1, 1
State Saved	Yes

Backwards Compatibility SCPI  
[:SENSe]:ACPower:OFFSet[1]|2[:LIST:BWIDth:RESolution:AUTO

## Video BW

Enables you to change the instrument post-detection filter (VBW).

Remote Command  
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo <freq>,...  
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo?  
Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink

Example  
:ACP:OFFS2:LIST:BAND:VID 5MHz, 5MHz, 5MHz, 5MHz, 5MHz, 5MHz  
:ACP:OFFS2:LIST:BAND:VID?

Notes  
The values shown in this table reflect the conditions after **Mode Preset**  
Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored

Dependencies  
When "**Meas Method**" on page 582 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated

Preset  
When "**Max Num of Offsets**" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz
WCDMA	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz
LTEAFDD, LTEATDD, 5G NR, MSR	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz

State Saved  
Saved in instrument state

Min/Max  
1 Hz/50 MHz

Backwards Compatibility SCPI  
[:SENSe]:ACPower:OFFSet[1]|2[:LIST:BWIDth:VIDeo

## Auto Function

Remote Command  
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO OFF | ON | 0 | 1, ...  
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO?  
Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink

Example  
:ACP:OFFS2:LIST:BAND:VID:AUTO 0, 0, 0, 0, 1, 1  
:ACP:OFFS2:LIST:BAND:VID:AUTO?

Preset  
When "**Max Num of Offsets**" on page 633 is 12, the preset value of Offset G ~ L is ON  
ON, ON, ON, ON, ON, ON

State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:BWIDth:VIDeo:AUTO</code>

## Filter Type

Selects the type of bandwidth filter that is used.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:BAWIDth:SHAPE GAUSSian   FLATtop,...</code> <code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:BAWIDth:SHAPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS</code> <code>:ACP:OFFS2:LIST:BAND:SHAP?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Dependencies	When " <b>Res BW</b> " on page 553 Mode for the offset is <b>Auto</b> , this cell is grayed out and disabled. Since <b>Res BW</b> Mode for the offset is preset to <b>Auto</b> on changing " <b>Meas Method</b> " on page 582 to RBW, FAST or Fast Power, this cell is grayed-out and disabled too. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is <b>GAUSSian</b> <b>GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian</b>
State Saved	Saved in instrument state
Range	<b>GAUSSian</b>   <b>FLATtop</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1]   2[:LIST:BWIDth:SHAPE</code>

## Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:BAWIDth:TYPE DB3   DB6,...</code> <code>[ :SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:BAWIDth:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3</code> <code>:ACP:OFFS2:LIST:BAND:TYPE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored

Dependencies	When "RBW Filter Type" on page 556 is Flattop, or "Res BW" on page 553 Mode for the offset is <b>Auto</b> , this cell is grayed-out and disabled. Since <b>Res BW</b> Mode for the offset is preset to <b>Auto</b> on changing "Meas Method" on page 582 to RBW, FAST or Fast Power, this cell is grayed-out and disabled too. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>DB3</b> <b>DB3, DB3, DB3, DB3, DB3, DB3</b>
State Saved	Saved in instrument state
Range	-3 dB (Normal)  -6 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:TYPE</code>

## Limits

Lets you configure the limits that are used to determine whether the offset regions **PASS** or **FAIL** the limit test.

## Limit Test

This checkbox is the same as "Limit Test" on page 613 in the **Meas Setup, Settings** tab.

## Offset Freq

This column is the same as "Offset Freq" on page 645 in the **Offset** index tab.

## Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. `[ :SENSe]:ACP:OFFSet[n][ :OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the `[ :SENSe]:ACP:OFFSet[n][ :OUTer]:LIST:STATE` command.

The query returns the six (6) sets of real numbers that are the current absolute amplitude test limits.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute &lt; real&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute?</code>
----------------	---

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink										
Example	<code>:ACP:OFFS2:LIST:ABS -10, -10, -10, -10, -10</code> <code>:ACP:OFFS2:LIST:ABS?</code>										
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored										
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value										
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm   0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</td> </tr> <tr> <td>WCDMA</td> <td>50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm   50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td> </tr> <tr> <td>5G NR</td> <td>4.92, 4.92, 4.92, 4.92, 4.92, 4.92   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td> </tr> </tbody> </table>	Modes	Values	SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm   0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm	WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm   50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm	LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0	5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0
Modes	Values										
SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm   0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm										
WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm   50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm										
LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
State Saved	Saved in instrument state										
Min/Max	-200.0 dBm/50.0 dBm										
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPR:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA <code>[ :SENSe]:MCPower:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA										

## Rel Limit (Car)

Enters a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[ :SENSe]:ACP:OFFSet[n][ :OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n][ :OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote	<code>[ :SENSe]:ACP:OFFSet[1] 2[:OUTer]:LIST:RCARrier &lt;real&gt;,...</code>
--------	---

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:LIST:RCAR?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored												
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value												
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0</td> </tr> <tr> <td>WCDMA</td> <td>-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td> </tr> <tr> <td>5G NR</td> <td>-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td> </tr> <tr> <td>Radio Test</td> <td>-60, -60, -60, 0, 0, 0</td> </tr> </tbody> </table>	Modes	Values	SA	-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0	WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2	LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	Radio Test	-60, -60, -60, 0, 0, 0
Modes	Values												
SA	-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0												
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2												
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
Radio Test	-60, -60, -60, 0, 0, 0												
State Saved	Saved in instrument state												
Min/Max	-150/50.0												
Backwards Compatibility SCPI	<code>[ :SENSe]:MCPower:OFFSet[1] 2[:LIST:RCARrier</code>												

### Positive Offset Limit (Remote Command only)

Enables you to set the upper limit for the upper segment of the specified offset pair.

Remote Command	<code>:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:POSitive[:UPPer]:DATA &lt;real&gt;,...</code> <code>:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:POSitive[:UPPer]:DATA?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:CALC:ACP:OFFS:LIST:LIM:POS:DATA 0,0,0,0,0,0</code> <code>:CALC:ACP:OFFS:LIST:LIM:POS:DATA?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Radio Test	-60, -60, -60, 0, 0, 0

State Saved Saved in instrument state

Min/Max -150.0/50.0

Backwards Compatibility SCPI :CALCulate:MCPower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA (Power Suite)

### Negative Offset Limit(Remote Command only)

Enables you to set the upper limit for the lower segment of the specified offset pair.

Remote Command	:CALCulate:ACPower:OFFSet[1]   2[:OUTer]:LIST:LIMit:NEGative[:UPPer]:DATA <real>, ... :CALCulate:ACPower:OFFSet[1]   2[:OUTer]:LIST:LIMit:NEGative[:UPPer]:DATA? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:CALC:ACP:OFFS:LIST:LIM:NEG:DATA 0,0,0,0,0,0 :CALC:ACP:OFFS:LIST:LIM:NEG:DATA?
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Radio Test	-60, -60, -60, 0, 0, 0

State Saved	Saved in instrument state
Min/Max	-150.0/50.0
Backwards Compatibility SCPI	<code>:CALCulate:MCPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA</code> (Power Suite, WCDMA)

## Rel Limit (PSD)

Enters a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RPSDensity &lt;rel_amp&gt;,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RPSDensity?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:LIST:RPSD?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB   -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB
WCDMA	-44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB   -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB
LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0   0, 0, 0, 0, 0, 0
Radio Test	-60, -60, -60, 0, 0, 0

State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

## Fail Mask

Accesses a menu that lets you select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[ :SENSe]:ACP:OFFSet[n] [ :OUTer]:LIST:ABSolute`, or the relative values defined with `[ :SENSe]:ACP:OFFSet[n]:OUTer]:LIST:RPSDensity` and `[ :SENSe]:ACP:OFFSet[n] [ :OUTer]:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n] [ :OUTer]:LIST:STATE`.

<b>Absolute</b>	<b>ABSolute</b>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for <b>Abs Limit</b>
<b>Relative</b>	<b>RELative</b>	Fail is shown if one of the relative ACP measurement results is larger than the limit for <b>Rel Lim (Car)</b> or <b>Rel Lim (PSD)</b>
<b>Abs AND Rel</b>	<b>AND</b>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for <b>Abs Limit</b> and one of the relative ACP measurement results is larger than the limit for <b>Rel Lim (Car)</b> or <b>Rel Lim (PSD)</b>
<b>Abs OR Rel</b>	<b>OR</b>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for <b>Abs Limit</b> or one of the relative ACP measurement results is larger than the limit for <b>Rel Lim (Car)</b> or <b>Rel Lim (PSD)</b>

Remote Command	<code>[ :SENSe]:ACP:Power:OFFSet[1]   2 [ :OUTer]:LIST:TEST ABSolute   AND   OR   RELative,...</code> <code>[ :SENSe]:ACP:Power:OFFSet[1]   2 [ :OUTer]:LIST:TEST?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
----------------	--

Example	<code>:ACP:OFFS2:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:LIST:TEST?</code>
---------	---

Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
-------	--

Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value
--------	--

Modes	Values
SA, WCDMA	<code>REL, REL, REL, REL, REL, REL   REL, REL, REL, REL, REL, REL</code>
LTEAFDD, LTEATDD, 5G NR, MSR	<code>AND, AND, AND, AND, AND, AND   AND, AND, AND, AND, AND, AND</code>

Modes	Values
Radio Test	REL, REL, REL, REL, REL, REL
State Saved	Saved in instrument state
Range	ABSolute AND OR RELative
Backwards Compatibility SCPI	[ :SENSe ] :MCPower :OFFSet [ 1 ]   2 :LIST :TEST

## Inner Offset

Accesses a menu of functions that contains Offset, Offset Freq/Offset To Edge, Offset Integ BW, Upper Offset Limit and Lower Offset parameters.

## Offset Frequency Define

Allows you to select "Offset" definition:

<b>CTOCenter</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
<b>CTOEdge</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
<b>ETOCenter</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
<b>ETOEdge</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge frequency of each Offset Integ BW
<b>STOCenter</b>	From either the lower or upper sub-block edge frequency to the center frequency of each Offset Integ BW
<b>STOEdge</b>	From either the lower or upper sub-block edge frequency to the closest edge frequency of each Offset Integ BW
<b>SCTOCenter</b>	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

5G NR Mode only

\*\* sub-block (bandwidth) =  $BW_{\text{channel,block}}$  which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) =  $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$ .

See "Diagram for Offset Freq Define" on page 621


### Mode: MSR, LTEAFDD, LTEATDD

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   STOCenter   STOEdge</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:TYPE ETOC</code> <code>:ACP:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge STOCenter STOEdge</code>

### Mode: 5G NR

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   STOCenter   STOEdge   SCTOCenter</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:TYPE ETOC</code> <code>:ACP:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter   CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter   CTOEdge   ETOCenter   ETOEdge   STOCenter   STOEdge   SCTOCenter</code>

### Diagram for Offset Freq Define

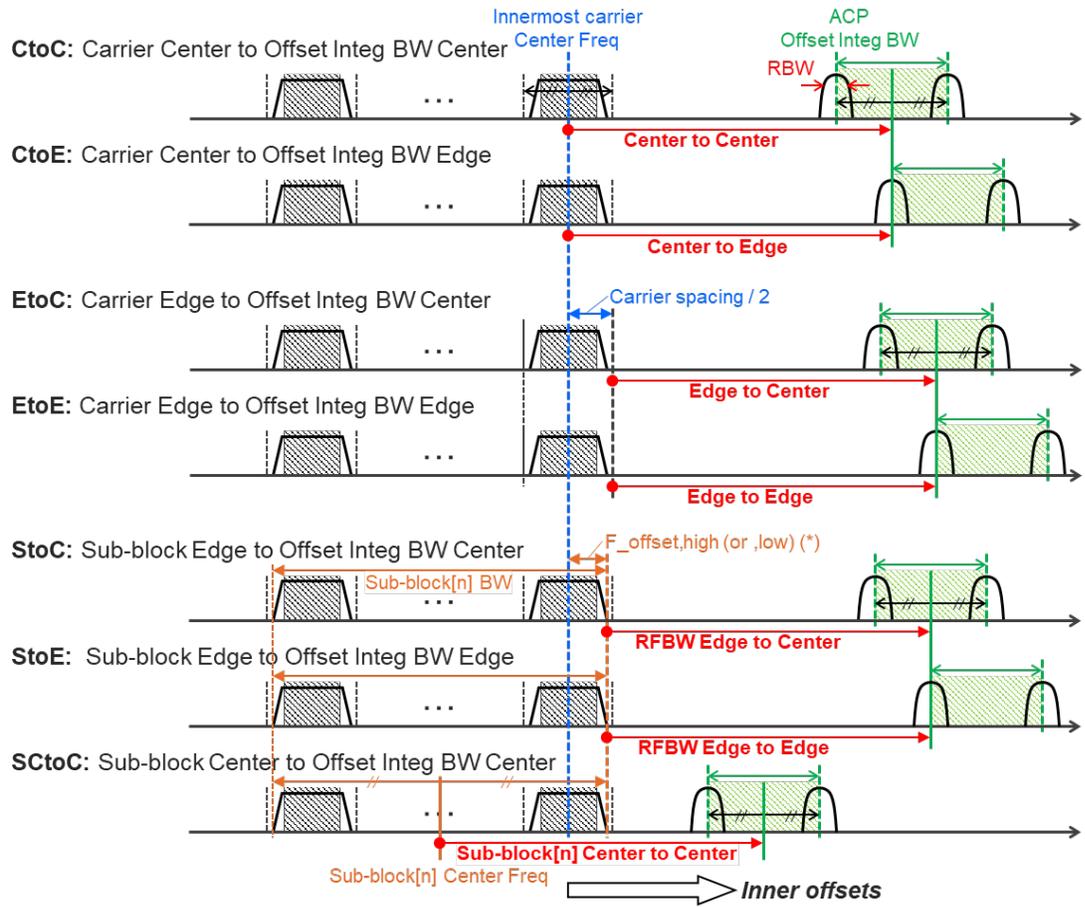

Note:

RF BW Edge and Outermost Carrier Edge are not always same.  
 e.g.) 5G NR (3GPP) defines  $BW_{\text{channel,CA}}$  which calculates  $F_{\text{offset,high}}$  and  $F_{\text{offset,low}}$  asymmetrically with SCS shift

(\*) For MSR,  $F_{\text{offset,high (or ,low)}} = F_{\text{offset,RAT,high (or ,low)}}$

### Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier. When set to Offset to Edge, this parameter determines the frequency difference between the center of the main channel and the near edge of the offset.

Each **Offset Freq** state value is entered individually by selecting the desired carrier. Use the **Enabled** checkbox to turn the **Offset Freq** State on or off.

The list contains up to 6 entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[ :SENSe ] :ACP:OFFSet[n] :INNeR:LIST:STATe`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[ :SENSe ] :ACP:OFFSet[1]   2:INNeR:LIST[:FREQuency] &lt;freq&gt;,...</code> <code>[ :SENSe ] :ACP:OFFSet[1]   2:INNeR:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS1:INN:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:INN:LIST?</code>						
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored						
Couplings	Changing Offset Frequency might affect <a href="#">"Span" on page 569</a>						
Preset	When <a href="#">"Max Num of Offsets" on page 633</a> is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>5G NR</td> <td>10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>All Others</td> <td>2.5MHz,7.5MHz,0,0,0,0   2.5MHz,7.5MHz,0,0,0,0</td> </tr> </tbody> </table>	Modes	Values	5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	All Others	2.5MHz,7.5MHz,0,0,0,0   2.5MHz,7.5MHz,0,0,0,0
Modes	Values						
5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz						
All Others	2.5MHz,7.5MHz,0,0,0,0   2.5MHz,7.5MHz,0,0,0,0						
State Saved	Saved in instrument state						
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement Auto Function						
Remote Command	<code>[ :SENSe ] :ACP:OFFSet[1]   2:INNeR:LIST:STATe OFF   ON   0   1,...</code> <code>[ :SENSe ] :ACP:OFFSet[1]   2:INNeR:LIST:STATe?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:STAT?</code>						
Preset	When <a href="#">"Max Num of Offsets" on page 633</a> is 12, the preset value of Offset G ~ L is the same as the Offset F value <code>ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF</code>						
State Saved	Yes						

## Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[ :SENSe]:ACPower:OFFSet [n]:INNER:LIST[:FREQUENCY]`.

Enter each value individually by selecting the desired offset on the **Offset** menu key using the up down arrows, the knob, or the numeric keypad, then enter the Offset Integration Bandwidth using the **Offset Integration Bandwidth** menu key.

You can turn off (not use) specific offsets with `[ :SENSe]:ACPower:OFFSet [n]:INNER:LIST:STATE`.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth[:INTEgration] &lt;freq&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth[:INTEgration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink								
Example	<code>:ACP:OFFS2:INN:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND?</code>								
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value you must send all values up to it. Subsequent values remain unchanged								
Couplings	Changing Integ BW might affect " <a href="#">Span</a> " on page 569								
Preset	When " <a href="#">Max Num of Offsets</a> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value								
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>LTEAFDD</td> <td>3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz   3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz</td> </tr> <tr> <td>MSR, LTEATDD</td> <td>4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz   4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz</td> </tr> <tr> <td>5G NR</td> <td>19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz   98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz</td> </tr> </tbody> </table>	Modes	Values	LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz   3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz	MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz   4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz	5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz   98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz
Modes	Values								
LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz   3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz								
MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz   4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz								
5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz   98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz								
State Saved	Saved in instrument state								
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement								


## Offset Side

Lets you turn off (not use) specific offsets with `[ :SENSe]:ACPower:OFFSet [1]|2:INNER:LIST:SIDE`.

- **NEGative** - The upper side in the sub-block gap only (that is, negative sideband of the upper sub-block) is enabled

- **BOTH** - Both sides in the sub-block gap are enabled
- **POSitive** - The lower side in the sub-block gap only (that is, positive sideband of the lower sub-block) is enabled

The diagram below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR, LTEAFDD and LTEATDD Modes.

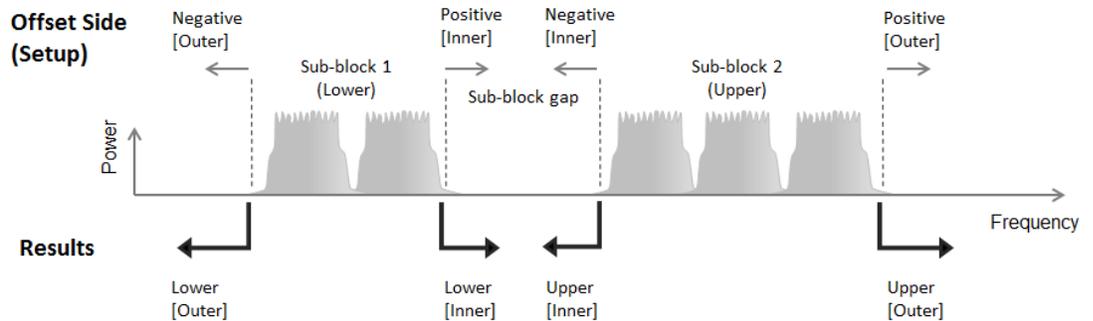

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE NEGative   BOTH   POSitive, ...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:SIDE BOTH</code> <code>:ACP:OFFS:INN:LIST:SIDE?</code>
Notes	If you set <b>POS</b> or <b>NEG</b> in an offset, result of the inactive side returns -999
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is <b>BOTH BOTH, BOTH, BOTH, BOTH, BOTH, BOTH   BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</b>
State Saved	Saved in instrument state
Range	<b>NEGative BOTH POSitive</b>

## Method

Lets you turn RRC filtering of each offset on or off. The value (roll off) for the filter is set to the value of the Filter Alpha parameter.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe] ON   OFF   1   0, ...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:FILT 1,0,0</code> <code>:ACP:OFFS:INN:LIST:FILT?</code>
Notes	<b>1 ON</b> = RRC Weighted, <b>0 OFF</b> = Integ BW

Preset	When " <a href="#">Max Num of Offsets</a> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>LTEAFDD</td> <td>1,1,1,1,1,1   1,1,1,1,1,1</td> </tr> <tr> <td>MSR, LTEATDD, 5G NR</td> <td>0,0,0,0,0,0   0,0,0,0,0,0</td> </tr> </tbody> </table>	Modes	Values	LTEAFDD	1,1,1,1,1,1   1,1,1,1,1,1	MSR, LTEATDD, 5G NR	0,0,0,0,0,0   0,0,0,0,0,0
Modes	Values						
LTEAFDD	1,1,1,1,1,1   1,1,1,1,1,1						
MSR, LTEATDD, 5G NR	0,0,0,0,0,0   0,0,0,0,0,0						
State Saved	Saved in instrument state						
Range	Integ BW   RRC Weighted						

## Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	<pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:FILTer:ALPHa &lt;real&gt;,...</pre> <pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:FILTer:ALPHa?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5</pre> <pre>:ACP:OFFS:INN:LIST:FILT:ALPH?</pre>
Preset	When " <a href="#">Max Num of Offsets</a> " on page 633 is 12, the preset value of Offset G ~ L is 0.22 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.00

## Advanced (Inner Offset)

Opens a further menu page that lets you set advanced properties of the Inner Offset, such as Res BW, Video BW, Filter and "[Power Ref](#)" on page 676 parameters.

## Offset Freq

The same as "[Offset Freq](#)" on page 662 in the main **Inner Offset** menu.

## Res BW

Sets the Resolution Bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:RESolution &lt;freq&gt;,...</pre> <pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:RESolution?</pre>
----------------	---

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz</code> <code>:ACP:OFFS2:INN:LIST:BAND:RES?</code>
Dependencies	When " <b>Meas Method</b> " on page 582 is RBW, FAST or Fast Power, this control is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent SCPI remote command is sent, a "Setting conflict" warning is generated
Couplings	When " <b>Res BW</b> " on page 553 Mode is <b>Auto</b> , this value is exactly the same as <b>Res BW</b> . When you change this value, <b>Res BW</b> Mode also changes to <b>Man</b>
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is 100 kHz 100 kHz, 100 kHz, 100k Hz, 100 kHz   100 kHz,100 kHz, 100 kHz,100 kHz, 100 kHz, 100 kHz
State Saved	Saved in instrument state
Min/Max	1 Hz/8 MHz

### Auto Function

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:RESolution:AUTO ON   OFF   1   0,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:RESolution:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:RES:AUTO 1,1,1,1,1,1</code> <code>:ACP:OFFS2:INN:LIST:BAND:RES:AUTO?</code>
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is 1 1, 1, 1, 1, 1, 1
State Saved	Yes

## Video BW

Lets you change the instrument post-detection filter (VBW).

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo &lt;freq&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:VID 5MHz,5MHz,5MHz,5MHz,5MHz,5MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND:VID?</code>
Notes	The values shown in this table reflect the conditions after <b>Mode Preset</b>
Dependencies	When " <b>Meas Method</b> " on page 582 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is 1 MHz 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

State Saved	Yes
Min/Max	1 Hz/50 MHz
Auto Function	
Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo:AUTO OFF   ON   0   1,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:VIDeo:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:VID:AUTO 0,0,0,0,1,1</code> <code>:ACP:OFFS2:INN:LIST:BAND:VID:AUTO?</code>
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>ON</b> <b>ON, ON, ON, ON, ON, ON</b>
State Saved	Yes

## Filter Type

Selects the type of bandwidth filter that is used.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:SHAPE GAUSSian   FLATtop,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:SHAPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS</code> <code>:ACP:OFFS2:INN:LIST:BAND:SHAP?</code>
Dependencies	When "Res BW" on page 553 Mode for the offset is <b>Auto</b> , this cell is grayed-out and disabled. Since <b>Res BW</b> Mode for the offset is preset to <b>Auto</b> on changing "Meas Method" on page 582 to RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>GAUSSian</b> <b>GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian</b>
State Saved	Saved in instrument state
Range	<b>GAUSSian FLATtop</b>

## Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:TYPE DB3   DB6,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:TYPE?</code>
----------------	---

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3</code> <code>:ACP:OFFS2:INN:LIST:BAND:TYPE?</code>
Dependencies	When "RBW Filter Type" on page 556 is <b>FLATtop</b> or "Res BW" on page 553 Mode for the offset is <b>Auto</b> , this cell is grayed-out and disabled. Since <b>Res BW</b> Mode for the offset is preset to <b>Auto</b> on changing "Meas Method" on page 582 to RBW, FAST or Fast Power, this cell is also grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>DB3</b> <b>DB3, DB3, DB3, DB3, DB3, DB3</b>
State Saved	Saved in instrument state
Range	-3 dB (Normal)   -6 dB

## Power Ref Type

Lets you set reference types of inner offsets.

**CUMulative** Cumulated power of the upper and lower sub-block carriers is the reference level. This selection is effective only when one of the following "Power Ref" on page 676 values is selected:

Left & Right Carriers	<b>LRCarriers</b>
Max Power Carrier in Sub-block	<b>MPCSubblock</b>
Min Power Carrier in Sub-block	<b>MINSubblock</b>
Left & Right Sub-blocks	<b>LRSubblocks</b>
Manual	<b>MANual</b>

When one of the other **Power Ref** values is selected, carrier powers are not cumulated, and the reference level is equivalent to Normal

**NORMal** Power of specified carrier or the manual reference level is the reference level

Remote Command	<code>[ :SENSe]:ACPpower:OFFSet[1] 2:INNER:LIST:PREference CUMulative   NORMal, ...</code> <code>[ :SENSe]:ACPpower:OFFSet[1] 2:INNER:LIST:PREference?</code>
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:PREF CUM,CUM,NORM,NORM,NORM,NORM</code> <code>:ACP:OFFS:INN:LIST:PREF?</code>
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>NORMal</b> <b>NORMal, NORMal, NORMal, NORMal, NORMal, NORMal</b>
State Saved	Saved in instrument state
Range	<b>CUMulative NORMal</b>
	Auto Function

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Remote Command	<pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFeRence:AUTO OFF   ON   0   1, ... [:SENSe]:ACPower:OFFSet[1]   2:INNeR:LIST:PREFeRence:AUTO?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>																												
Example	<pre>:ACP:OFFS:INN:LIST:PREF:AUTO OFF,OFF,OFF,OFF,OFF,OFF :ACP:OFFS:INN:LIST:PREF:AUTO?</pre>																												
Dependencies	Available only in LTEAFDD, LTEATDD and 5G NR Modes																												
Couplings	<p>When in the LTEAFDD, LTEATDD Modes, the inner power ref type is set automatically when the power ref type state is auto according to the scopes of the sub-block gap in the following table</p> <table border="1"> <thead> <tr> <th>Sub-block Gap</th> <th>Inner ACP offset</th> <th>Power Ref Type</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Wgap &lt;5MHz</td> <td>1st (2.5MHz)</td> <td>Normal</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Normal</td> </tr> <tr> <td rowspan="2">5MHz ≤ Wgap &lt;10MHz</td> <td>1st (2.5MHz)</td> <td>Cumulative</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Normal</td> </tr> <tr> <td rowspan="2">10MHz ≤ Wgap &lt;15MHz</td> <td>1st (2.5MHz)</td> <td>Cumulative</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Cumulative</td> </tr> <tr> <td rowspan="2">15MHz ≤ Wgap &lt;20MHz</td> <td>1st (2.5MHz)</td> <td>Normal</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Cumulative</td> </tr> <tr> <td rowspan="2">20MHz ≤ Wgap</td> <td>1st (2.5MHz)</td> <td>Normal</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Normal</td> </tr> </tbody> </table> <p>When in 5G NR Mode, Power Ref Type “Auto” sets the power reference type of inner-ACLR offset automatically</p> <p>Downlink: “Cumulative” or “Normal” is selected accordingly when the inner-offsets are configured to meet the test requirements as follows:</p> <p>FR1, 3GPP TS 38.141-1 v16.5.0 (2020-09) Section 6.6.3.5.3 BS type 1-C:</p> <ul style="list-style-type: none"> <li>- Table 6.6.3.5.2-3: Base Station ACLR limit in non-contiguous spectrum or multiple bands</li> <li>- Table 6.6.3.5.2-4: Base station CAACLR limit</li> </ul> <p>FR2, 3GPP TS 38.141-2 v16.5.0 (2020-09) Section 6.7.3.5.3 BS type 2-O:</p> <ul style="list-style-type: none"> <li>- Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum</li> <li>- Table 6.7.3.5.2-4: BS type 2-O CAACLR limit in non-contiguous spectrum</li> </ul> <p>Uplink: “Normal” is always selected</p>	Sub-block Gap	Inner ACP offset	Power Ref Type	Wgap <5MHz	1st (2.5MHz)	Normal	2nd (7.5MHz)	Normal	5MHz ≤ Wgap <10MHz	1st (2.5MHz)	Cumulative	2nd (7.5MHz)	Normal	10MHz ≤ Wgap <15MHz	1st (2.5MHz)	Cumulative	2nd (7.5MHz)	Cumulative	15MHz ≤ Wgap <20MHz	1st (2.5MHz)	Normal	2nd (7.5MHz)	Cumulative	20MHz ≤ Wgap	1st (2.5MHz)	Normal	2nd (7.5MHz)	Normal
Sub-block Gap	Inner ACP offset	Power Ref Type																											
Wgap <5MHz	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Normal																											
5MHz ≤ Wgap <10MHz	1st (2.5MHz)	Cumulative																											
	2nd (7.5MHz)	Normal																											
10MHz ≤ Wgap <15MHz	1st (2.5MHz)	Cumulative																											
	2nd (7.5MHz)	Cumulative																											
15MHz ≤ Wgap <20MHz	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Cumulative																											
20MHz ≤ Wgap	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Normal																											
Preset	<p>When "<b>Max Num of Offsets</b>" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value</p> <pre>ON, ON, ON, ON, ON, ON   OFF, OFF, OFF, OFF, OFF, OFF</pre>																												
State Saved	Saved in instrument state																												
Range	Auto Man																												

## Inner Limits

Accesses a menu of functions that contains Select Offset, Abs Limit, Rel Limit and Fail Mask parameters.

## Limit Test

This checkbox is the same as "Limit Test" on page 654 in the **Settings** tab.

## Offset Freq

This column is the same as "Offset Freq" on page 662 in the **Offset** tab.

## Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current absolute amplitude test limits.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:ABSolute &lt; real&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:ABSolute?</code>						
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:ABS -10,-10,-10,-10,-10,-10</code> <code>:ACP:OFFS2:INN:LIST:ABS?</code>						
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>5G NR</td> <td>-2.2, -2.2, -2.2, -2.2, -2.2, -2.2   -50.0,-50.0,-50.0,-50.0,-50.0,-50.0</td> </tr> <tr> <td>All Others</td> <td>-8.45,-8.45,-8.45,-8.45,-8.45,-8.45   -50.0,-50.0,-50.0,-50.0,-50.0,-50.0</td> </tr> </tbody> </table>	Modes	Values	5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2   -50.0,-50.0,-50.0,-50.0,-50.0,-50.0	All Others	-8.45,-8.45,-8.45,-8.45,-8.45,-8.45   -50.0,-50.0,-50.0,-50.0,-50.0,-50.0
Modes	Values						
5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2   -50.0,-50.0,-50.0,-50.0,-50.0,-50.0						
All Others	-8.45,-8.45,-8.45,-8.45,-8.45,-8.45   -50.0,-50.0,-50.0,-50.0,-50.0,-50.0						
State Saved	Saved in instrument state						
Min/Max	-200.0 dBm/50.0 dBm						

## Rel Limit (Car)

Specifies a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list. `[ :SENSe]:ACP:OFFSet[n]:INNeR:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n]:INNeR:LIST:STATe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[ :SENSe]:ACP:Power:OFFSet[1] 2:INNeR:LIST:RCARrier &lt;real&gt;,...</code> <code>[ :SENSe]:ACP:Power:OFFSet[1] 2:INNeR:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:RCAR?</code>						
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1" data-bbox="389 1165 1404 1291"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>5G NR</td> <td>-43.8, -43.8, 43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td> </tr> <tr> <td>All Others</td> <td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td> </tr> </tbody> </table>	Modes	Values	5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Modes	Values						
5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
State Saved	Saved in instrument state						
Min/Max	-150/50.0						

## Rel Limit (PSD)

Specifies a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[ :SENSe]:ACP:OFFSet[n]:INNeR:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n]:INNeR:LIST:STATe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:RPSDensity &lt;rel_amp1&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:RPSDensity?</code>
Example	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink <code>:ACP:OFFS2:INN:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:INN:LIST:RPSD?</code>
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is 0 0, 0, 0, 0, 0, 0   0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

## Fail Mask

Accesses a menu that enables you to select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:ABSolute`, or the relative values defined with `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:RPSDensity` and `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:STATE`.

Option	SCPI	Description
Absolute	<code>ABSolute</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit
Relative	<code>RELative</code>	Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs AND Rel	<code>AND</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>and</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs OR Rel	<code>OR</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>or</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:TEST ABSolute   AND   OR   RELative,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:TEST?</code>
----------------	--

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:INN:LIST:TEST?</code>
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>AND</b> <b>AND, AND, AND, AND, AND, AND   AND, AND, AND, AND, AND, AND</b>
State Saved	Saved in instrument state
Range	<b>ABSolute AND OR RELative</b>

## Max Num of Offsets

Sets the max number of offsets: either 6 or 12.

This setting applies only to SCPI operations. To specify the same behavior as that of the previous version, selecting 6 offsets is recommended. If you select 12 offsets, the results returned by the **:READ|:FETCH** queries increase accordingly.

Example:

When you select 6 offsets, querying the offset state returns 6 values, as below.

```
-> :SENSe:ACPower:OFFSet:LIST:STATe?
```

```
<- 1,0,0,0,0,0
```

When you select 12 offsets, sending the same query returns 12 values, as below.

```
-> :SENSe:ACPower:OFFSet:LIST:STATe?
```

```
<- 1,0,0,0,0,0,0,0,0,0,0,0
```

If your program depends on the number of returned values, you should select 6 offsets, or else change your program.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet:MAXNumber NUM6   NUM12</code> <code>[ :SENSe]:ACPower:OFFSet:MAXNumber?</code>
Example	<code>:ACP:OFFS:MAXN NUM12</code> <code>:ACP:OFFS:MAXN?</code>
Preset	<b>NUM6</b>
State Saved	Saved in instrument state
Range	6 12

## Limit Test

Turns limit checking for each offset On or Off. The limits may be specified in the **Offset** menu, for each offset, both sides of the carrier. For results that fail the limit, a red F is appended. In the **Combined** view, the bar turns red.

Remote Command	<code>:CALCulate:ACPower:LIMit:STATe OFF   ON   0   1</code> <code>:CALCulate:ACPower:LIMit:STATe?</code>
Example	<code>:CALC:ACP:LIM:STAT OFF</code> <code>:CALC:ACP:LIM:STAT?</code>
Preset	SA <span style="float:right">OFF</span> WCDMA, LTEAFDD, LTEATDD, 5G NR, MSR <span style="float:right">ON</span>
State Saved	Saved in instrument state
Range	ON OFF
Backwards Compatibility SCPI	<code>[ :SENSe ]:MCPower:LIMit[ :STATe ]</code> <code>[ :SENSe ]:ACPower:LIMit[ :STATe ]</code>

## Spur Avoidance

Because VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed.

When **Spur Avoidance** is enabled (the default), the instrument uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates in multiple capture case.

You can disable this function to speed up your measurement by setting **Spur Avoidance** to **Disabled**.

Note that when **Spur Avoidance** is not in effect, either because you have disabled it or because you are not in multiple capture, the following warning message appears in the status bar:

`Settings Alert;Spur Avoidance Off`

This is to alert you that measurement accuracy might be impacted by the fact that **Spur Avoidance** is not in effect.

Remote Command	<code>[ :SENSe ]:ACPower:SAVoid[ :STATe ] ON   OFF   0   1</code> <code>[ :SENSe ]:ACPower:SAVoid[ :STATe ]?</code>
Example	<code>:ACP:SAVoid ON</code> <code>:ACP:SAVoid?</code>
Dependencies	Only appears in VXT models M9410A/11A/15A
Preset	OFF

State Saved	Saved in instrument state
Range	ON OFF

### Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

### Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 636 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL   NONE
Backwards Compatibility Notes	: COUP :NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

## Measurement-Specific Details

### TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

### Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

## Meas Preset

Restores all measurement parameters to their default values.

---

Remote Command	:CONFigure:ACPower
----------------	--------------------

---

Example	:CONF:ACP
---------	-----------

---

Couplings	Selecting <b>Meas Preset</b> restores all measurement parameters to their default values
-----------	--

### 3.4.13.2 Reference

All ACP measurements are taken relative to a specific carrier frequency, relative to whose power the offset channel power is measured.

The controls on this tab let you specify the reference carrier frequency and other parameters relevant to the reference carrier.

## Carrier/Offset/Limits Config

This is the same dialog as "[Carrier/Offset/Limits Config](#)" on page 583 in the **Settings** menu.

## Number of Carriers

This is the same as **Number of Carriers** [Mode: all but LTEAFDD, LTEATDD, MSR, 5G NR] under **Reference**.

## Couple to #1

Couples carrier settings to carrier #1. The coupled parameters are:

- "[Carrier Pwr Present](#)" on page 638
- "[Carrier Spacing](#)" on page 639
- "[Measurement Noise Bandwidth](#)" on page 640
- "[Method for Carrier](#)" on page 641
- "[Filter Alpha for Carrier](#)" on page 641

---

Remote Command	[ :SENSe]:ACPower:CARRier[1] 2:LIST:COUple OFF   ON   0   1, ... [ :SENSe]:ACPower:CARRier[1] 2:LIST:COUple?
----------------	---

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:LIST:COUP OFF</code> <code>:ACP:CARR:LIST:COUP?</code>
Notes	Some modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored For LTEAFDD or LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD, the SCPI command is supported in LTE & LTE-A converged applications
Couplings	When <b>ON</b> , the carrier settings are coupled to carrier #1. Coupled parameters are: Carrier Power Present, Carrier Spacing, Measurement Noise Bandwidth, Method and Filter Alpha When a setting is changed, coupling is switched off automatically Carrier #1 is always set to <b>ON</b> and cannot be changed
Preset	<b>ON</b>
State Saved	Saved in instrument state

## Carrier Pwr Present

Configures the carriers for this measurement. Allows spaces to be inserted between carriers. Carriers with the power present parameter set to **YES** are carriers, and those with the power present parameter set to **NO** are spaces. Each carrier power present is set to **YES** or **NO**. The individual carrier can be set by selecting the desired carrier.

The query returns the current values for all of the carriers. If a carrier is defined as having no power present, the power displayed is relative to the reference carrier, otherwise the absolute power is displayed.

If you change the carrier power present to **NO**, and that carrier is currently configured as the reference carrier, the next carrier to the left (or the right if there are no carriers to the left) is assigned as the reference carrier. This also applies to the scenario where there are only two carriers configured as having power present, and you configure only one carrier to have no power present.

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:PPresent YES   NO, ...</code> <code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:PPresent?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR2:LIST:PPR YES</code> <code>:ACP:CARR2:LIST:PPR?</code>
Notes	Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, so if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged, unless the number of values sent is greater than the number of

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

	carriers, then subsequent values are ignored For LTEAFDD or LTEATDD Modes, this control is not shown. To maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications
Couplings	Coupled to number of carriers. When the SCPI command is sent, the number of carriers is set to the number of entries in the parameter list
Preset	YES
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>[ :SENSe ] :MCPower :CARRier [ 1 ]   2 :LIST :PPresent</code>

### Carrier Spacing

Sets the width of the carrier spacing. This is the value applied to all the current slots, whether they are carriers or spaces.

Enter each carrier spacing value individually by selecting the desired carrier, and then enter the carrier width.

Remote Command	<code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :WIDTh &lt;freq&gt;, ...</code> <code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :WIDTh?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP :CARR2 :LIST :WIDTh 25kHz</code> <code>:ACP :CARR2 :LIST :WIDTh?</code>
Notes	Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, so if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored For LTEAFDD or LTEATDD Modes, this control is not shown. To maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications
Couplings	Coupled to number of carriers. When the SCPI command is sent, the number of carriers is set to the number of entries in the parameter list Changing Carrier Spacing might affect <a href="#">"Span" on page 569</a>
Preset	SA, WCDMA, LTE, LTE-TDD Modes <span style="float: right;">5 MHz</span> Radio Test Mode <span style="float: right;">25 kHz</span>

State Saved	Saved in instrument state
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as the Max Span of Swept SA Measurement
Backwards Compatibility SCPI	<code>[ :SENSe ] :MCPower :CARRier [ 1 ]   2 :LIST :WIDTh</code>

## Measurement Noise Bandwidth

Specifies the **Measurement Noise Bandwidth** used to calculate the power in the carriers.

Each **Measurement Noise Bandwidth** value is entered individually by selecting the desired carrier. Enter the measurement noise bandwidth on the **Carrier** page of the **Carr/Offset/Limits Config** dialog.

Remote Command	<code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BANDwidth [ :INTEgration ] &lt;freq&gt;, ...</code> <code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BANDwidth [ :INTEgration ] ?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink										
Example	<code>:ACP :CARR2 :LIST :BAND 25kHz</code> <code>:ACP :CARR2 :LIST :BAND ?</code>										
Notes	In WCDMA Mode, the preset/default value is defined as 3.84 MHz, but internally, 4.6848 MHz is used as the default value Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the carrier. Missing values are not permitted, so if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored For LTEAFDD or LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications										
Couplings	Coupled to number of carriers. When the SCPI command is sent, the number of carriers is set to the number of entries in the parameter list										
Preset	<table border="1"> <thead> <tr> <th>Modes</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>2 MHz</td> </tr> <tr> <td>WCDMA</td> <td>3.84 MHz</td> </tr> <tr> <td>LTE, LTETDD</td> <td>4.515 MHz 4.5 MHz</td> </tr> <tr> <td>Radio Test</td> <td>25 kHz</td> </tr> </tbody> </table>	Modes	Value	SA	2 MHz	WCDMA	3.84 MHz	LTE, LTETDD	4.515 MHz 4.5 MHz	Radio Test	25 kHz
Modes	Value										
SA	2 MHz										
WCDMA	3.84 MHz										
LTE, LTETDD	4.515 MHz 4.5 MHz										
Radio Test	25 kHz										
State Saved	Saved in instrument state										
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement										

---

Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:BANDwidth:INTEgration</code>
	<code>[ :SENSe]:ACPower:BWIDth:INTEgration</code>
	<code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:BWIDth[:INTEgration]</code>
	<code>[ :SENSe]:MCPower:CARRier[1] 2:LIST:BANDwidth[:INTEgration]</code>
	<code>[ :SENSe]:MCPower:CARRier[1] 2:LIST:BWIDth[:INTEgration]</code>

## Method for Carrier

Accesses the carrier configuration method settings.

---

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer[:RRC][:STATe] ON   OFF   1   0, ...</code> <code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer[:RRC][:STATe]?</code>
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink

---

Example	<code>:ACP:CARR:LIST:FILT 0,0,0,0</code> <code>:ACP:CARR:LIST:FILT?</code>
---------	---

---

Notes	The binary values translate as follows:				
	<table border="1"> <tr> <td>1   ON</td> <td>RRC Weighted</td> </tr> <tr> <td>0   OFF</td> <td>Integ BW</td> </tr> </table>	1   ON	RRC Weighted	0   OFF	Integ BW
1   ON	RRC Weighted				
0   OFF	Integ BW				
	Maximum of Array length depends on the number of carriers				
	Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored				
	For LTEAFDD or LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications				

---

Preset	Modes	Value
	SA, LTE, LTETDD	OFF
	WCDMA	ON
	Radio Test	OFF

---

State Saved	Saved in instrument state
Range	Integration BW   RRC Weighted

## Filter Alpha for Carrier

Inputs the alpha value for the filter used in the current carrier configuration.

---

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:FILTer:ALPHA &lt;real&gt;, ...</code>
----------------	---

	<code>[ :SENSe]:ACP:Power:CARRier[1] 2:LIST:FILT:ALPHa?</code>
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR2:LIST:FILT:ALPH 0.5</code> <code>:ACP:CARR2:LIST:FILT:ALPH?</code>
Notes	Some Modes do not support Carrier subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored For LTEAFDD or LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications
Preset	0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.0

## Offset

Lets you configure the spacing of the offset regions.

### Offset Frequency Define

Lets you select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “From Carrier Center to Integ BW Closer Edge” definition. LTE conformance test requires “From Carrier Edge to Integ BW Center” and/or “From Carrier Edge to Integ BW Closer Edge” definition.

<b>CTOCenter</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
<b>CTOEdge</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
<b>ETOCenter</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
<b>ETOEdge</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge of each Offset Integ BW
<b>RTOCenter</b> 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the center frequency of each Offset Integ BW
<b>RTOEdge</b> 5G NR Mode only	From either the lower or upper RF BW** edge frequency to the closest edge frequency of each Offset Integ BW
<b>RCTOCenter</b>	From the center frequency of RF BW** to the center frequency of each Offset Integ BW

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

5G NR Mode only

**SCTOCenter**

From the center frequency of sub-block\*\* to the center frequency of each Offset Integ BW

5G NR Mode only

\*\* RF BW =  $BW_{channel,CA}$  which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier = 1, RF BW =  $BW_{channel} = 2 \times F_{offset,RAT}$

\*\* sub-block (bandwidth) =  $BW_{channel,block}$  which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) =  $BW_{channel} = 2 \times F_{offset,RAT}$ .

See "Diagrams for Offset Freq Define" on page 644.

**Modes other than MSR, LTEAFDD, LTEATDD, 5G NR**

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>

**Mode: MSR, LTEAFDD, LTEATDD**

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code> <code>:ACP:OFFS:TYPE?</code>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter CTOEdge ETOCenter ETOEdge</code>


## Mode: 5G NR

Remote Command	<code>[[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   RTOCenter   RTOEdge   RCTOCenter   SCTOCenter</code>  <code>[[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:TYPE?</code>  Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:TYPE ETOC</code>  <code>:ACP:OFFS:TYPE?</code>
Preset	<code>CTOCenter</code>
State Saved	Saved in instrument state
Range	<code>CTOCenter   CTOEdge   ETOCenter   ETOEdge   RTOCenter   RTOEdge   RCTOCenter   SCTOCenter</code>


## Diagrams for Offset Freq Define

Details depend on the selected mode.

### Diagram for Modes other than MSR, LTEAFDD, LTEATDD, 5G NR

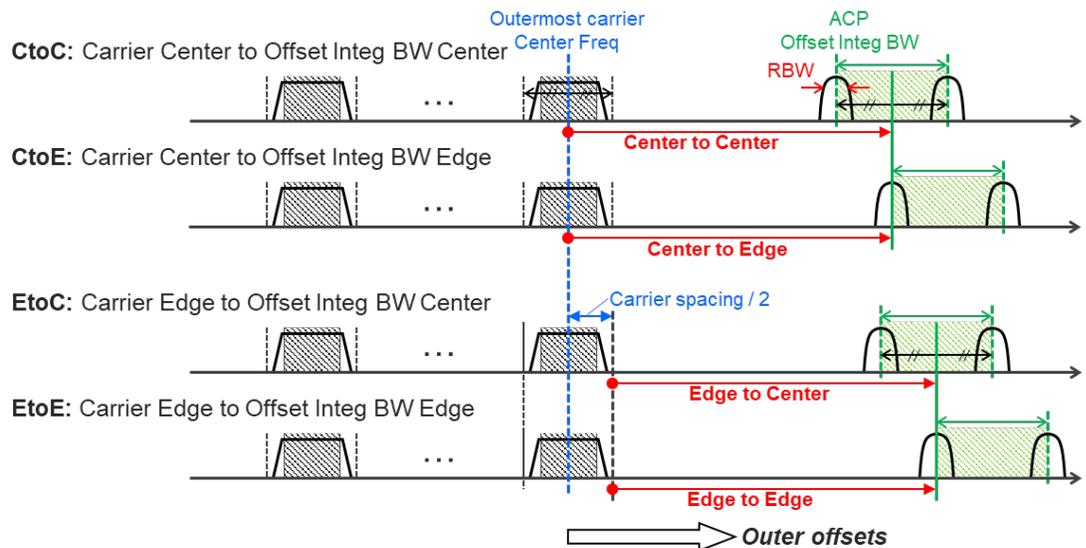

**Diagram for MSR, LTEAFDD, LTEATDD, 5G NR**

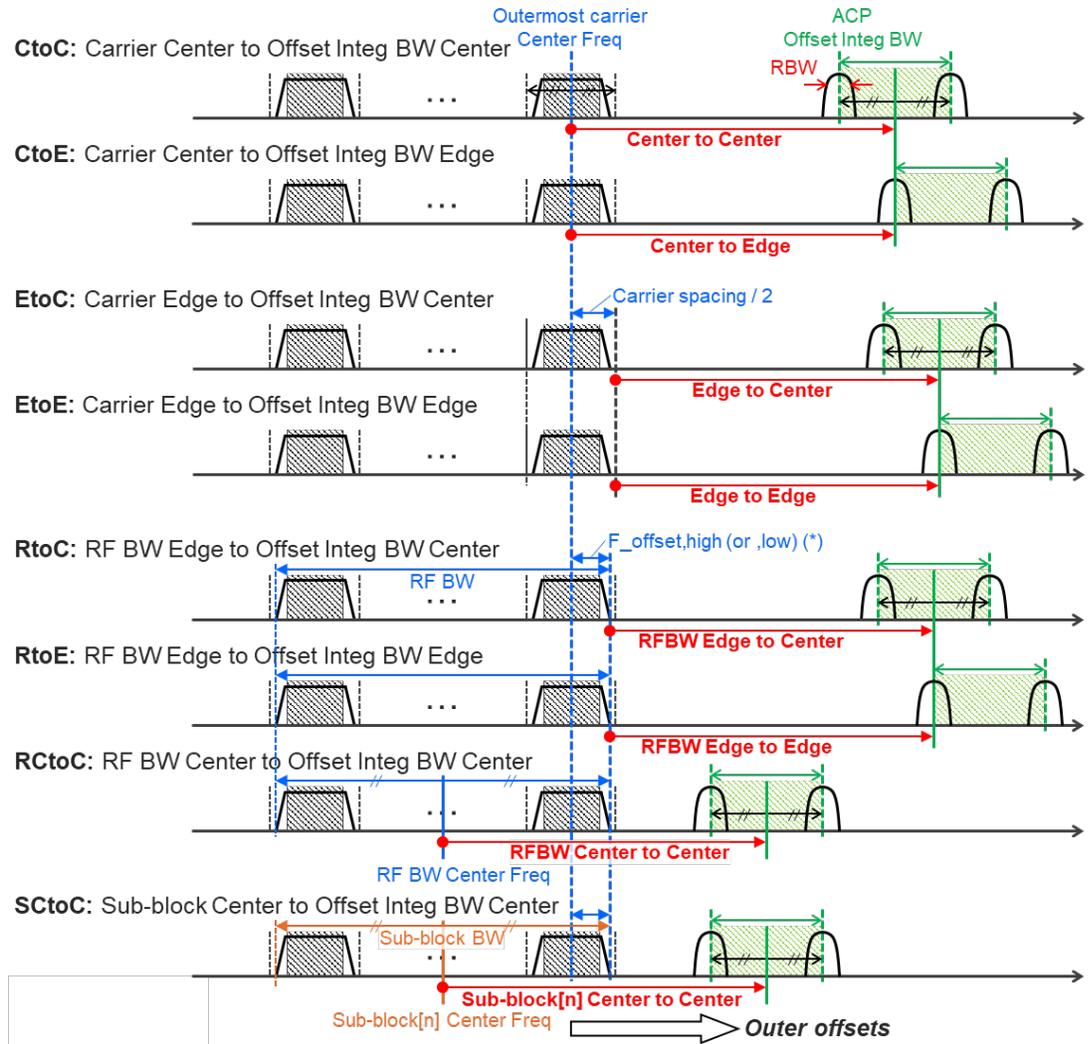

Note:

RF BW Edge and Outermost Carrier Edge are not always the same.  
 e.g.) 5G NR (3GPP) defines BW\_channel, CA which calculates F\_offset,high and F\_offset,low asymmetrically with SCS shift.

(\*) For MSR, F\_offset,high (or ,low) = F\_offset,RAT,high (or ,low)

**Offset Freq**

Determines the frequency difference between the center of the main channel and the center of the carrier.

Each **Offset Freq** state value is entered individually by selecting the desired carrier.

The list contains up to six (6) entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet:LIST:STATe`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency] &lt;freq&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST[:FREQuency]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS1:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:LIST?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, in which case subsequent values are ignored												
Couplings	Changing Offset Frequency might affect " <a href="#">Span</a> " on page 569												
Preset	When " <a href="#">Max Num of Offsets</a> " on page 633 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value												
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>WCDMA</td> <td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>5G NR</td> <td>100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>Radio Test</td> <td>25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz</td> </tr> </tbody> </table>	Modes	Values	SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz
Modes	Values												
SA	3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   3 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
WCDMA	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
LTEAFDD, LTEATDD, MSR	5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   5.0 MHz, 10.0 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
5G NR	100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz												
Radio Test	25 kHz, 50 kHz, 75 kHz, 0 Hz, 0 Hz, 0 Hz												
State Saved	Saved in instrument state												
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement												
Backwards Compatibility SCPI	<code>[ :SENSe]:MCPower:OFFSet[1] 2:LIST[:FREQuency]</code>  Auto Function												
Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe OFF   ON   0   1,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:STATe?</code>												

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:LIST:STAT?</code>												
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value												
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>ON, OFF, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>WCDMA</td> <td>ON, ON, OFF, OFF, OFF, OFF   ON, ON, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>5G NR</td> <td>ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>Radio Test</td> <td>ON, ON, ON, OFF, OFF, OFF</td> </tr> </tbody> </table>	Modes	Values	SA	ON, OFF, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF	WCDMA	ON, ON, OFF, OFF, OFF, OFF   ON, ON, OFF, OFF, OFF, OFF	LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF	5G NR	ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF	Radio Test	ON, ON, ON, OFF, OFF, OFF
Modes	Values												
SA	ON, OFF, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF												
WCDMA	ON, ON, OFF, OFF, OFF, OFF   ON, ON, OFF, OFF, OFF, OFF												
LTEAFDD, LTEATDD, MSR	ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF												
5G NR	ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF												
Radio Test	ON, ON, ON, OFF, OFF, OFF												
State Saved	Yes												
Range	OFF   ON												

## Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[ :SENSe]:ACP:OFFSet[n] [ :OUTer]:LIST[:FREQuency]`.

Enter each value individually by selecting the desired offset, then enter the Offset Integration Bandwidth.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n] [ :OUTer]:LIST:STATe`.

Remote Command	<code>[ :SENSe]:ACP:Power:OFFSet[1]   2[:OUTer]:LIST:BANDwidth[:INTEgration] &lt;freq&gt;,...</code> <code>[ :SENSe]:ACP:Power:OFFSet[1]   2[:OUTer]:LIST:BANDwidth[:INTEgration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:LIST:BAND?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value, you must send all values up to that. Subsequent values remain unchanged, unless the number of values sent is greater than the number of carriers, then subsequent values is ignored
Couplings	Changing <b>Integ BW</b> might affect "Span" on page 569

Preset	When "Max Num of Offsets" on page 633 is set to 12, the preset value of Offset G ~ L is the same as the Offset F value												
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz</td> </tr> <tr> <td>WCDMA</td> <td>3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz</td> </tr> <tr> <td>5G NR</td> <td>98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz</td> </tr> <tr> <td>Radio Test</td> <td>25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz</td> </tr> </tbody> </table>	Modes	Values	SA	2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz	WCDMA	3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz	LTEAFDD, LTEATDD, MSR	4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz	5G NR	98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz	Radio Test	25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz
Modes	Values												
SA	2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz, 2 MHz												
WCDMA	3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz, 3.84 MHz												
LTEAFDD, LTEATDD, MSR	4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz, 4.515 MHz 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz, 4.5 MHz												
5G NR	98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz, 98.28 MHz 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz												
Radio Test	25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz, 25 kHz												
State Saved	Saved in instrument state												
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement												
Backwards Compatibility SCPI	<pre>[ :SENSe]:ACPower:OFFSet[1]   2:LIST:BWIDth[:INTEgration] [:SENSe]:ACPR:OFFSet[1]   2:LIST:BANDwidth [:SENSe]:ACPR:OFFSet[1]   2:LIST:BWIDth [:SENSe]:MCPower:OFFSet[1]   2:LIST:BANDwidth[:INTEgration] [:SENSe]:MCPower:OFFSet[1]   2:LIST:BWIDth[:INTEgration]</pre>												

## Offset Side


Specifies which offset side to measure.

You can turn off (not use) specific offsets with `[ :SENSe]:ACPower:OFFSet[1] | 2[:OUTer]:LIST:SIDE`.

<b>NEGative</b>	Negative (lower) sideband only
<b>BOTH</b>	Both of the negative (lower) and positive (upper) sidebands
<b>POSitive</b>	Positive (upper) sideband only

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in MSR, LTEAFDD and LTEATDD Modes.

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

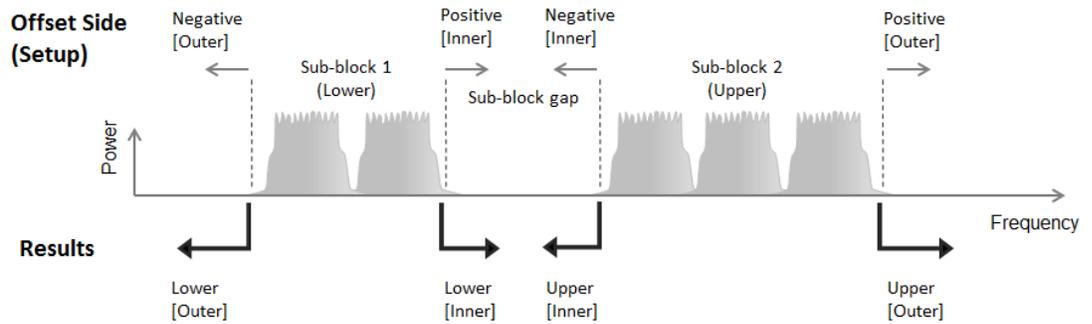

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:SIDE NEGative   BOTH   POSitive, ...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:SIDE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:LIST:SIDE BOTH</code> <code>:ACP:OFFS:LIST:SIDE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored If you set <b>POS</b> or <b>NEG</b> in an offset, result of the inactive side returns -999
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is <b>BOTH</b> <b>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH   BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</b>
State Saved	Saved in instrument state
Range	<b>NEGative BOTH POSitive</b>

## Method

Allows you to turn RRC filtering of each offset on or off. The value (roll off) for the filter will be set to the value of the **Filter Alpha** parameter.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer[:RRC][:STATE] ON   OFF   1   0,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:FILTer[:RRC][:STATE]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:LIST:FILT 1,0,0</code> <code>:ACP:OFFS:LIST:FILT?</code>
Notes	<b>1 ON</b> = RRC Weighted, <b>0 OFF</b> = Integ BW Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

	Mode	Values
	SA	0, 0, 0, 0, 0, 0   0, 0, 0, 0, 0, 0
	WCDMA	1, 1, 1, 1, 1, 1   1, 1, 1, 1, 1, 1
	LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0   0, 0, 0, 0, 0, 0
	Radio Test	0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state	
Range	Integ BW   RRC Weighted	

## Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	[:SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:FILTer:ALPHA <real>, ... [:SENSe]:ACPower:OFFSet[1]   2[:OUTer]:LIST:FILTer:ALPHA?	
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink	
Example	:ACP:OFFS:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5 :ACP:OFFS:LIST:FILT:ALPH?	
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored	
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value	
	SA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	WCDMA	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
	LTEAFDD, LTEATDD, 5G NR, MSR	0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state	
Min/Max	0.01/1.00	

## Advanced (Offset)

Opens a further menu page, which lets you set advanced properties of the Inner Offset, such as Res BW, Video BW, and Filter parameters.

## Offset Freq

This column is the same as "**Offset Freq**" on page 645 in the main **Offset** menu.

## Res BW

Sets the resolution bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution &lt;freq&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz</code> <code>:ACP:OFFS2:LIST:BAND:RES?</code>						
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored						
Dependencies	When " <b>Meas Method</b> " on page 582 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent SCPI remote command is sent, a "Setting conflict" warning is generated						
Couplings	When <b>Res BW</b> Mode is <b>Auto</b> , this value is exactly same as <b>Res BW</b> . When you change this value, <b>Res BW</b> Mode also changes to <b>Man</b>						
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table border="1"> <tr> <td>SA</td> <td>220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz</td> </tr> <tr> <td>WCDMA</td> <td>100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td> <td>100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz   100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz</td> </tr> </table>	SA	220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz	WCDMA	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz	LTEAFDD, LTEATDD, 5G NR, MSR	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz   100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz
SA	220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz, 220 kHz						
WCDMA	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz						
LTEAFDD, LTEATDD, 5G NR, MSR	100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz   100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz						
State Saved	Saved in instrument state						
Min/Max	1 Hz/8 MHz						
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:RESolution</code>						
	Auto Function						
Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution:AUTO ON   OFF   1   0,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:RESolution:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:LIST:BAND:RES:AUTO 1,1,1,1,1,1</code> <code>:ACP:OFFS2:LIST:BAND:RES:AUTO?</code>						
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is 1 1, 1, 1, 1, 1, 1						
State Saved	Yes						

Backwards Compatibility SCPI  
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BWIDth:RESolution:AUTO

## Video BW

Enables you to change the instrument post-detection filter (VBW).

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BWIDth:RESolution:AUTO [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BWIDth:RESolution:AUTO? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink								
Example	:ACP:OFFS2:LIST:BAND:VID 5MHz, 5MHz, 5MHz, 5MHz, 5MHz, 5MHz :ACP:OFFS2:LIST:BAND:VID?								
Notes	The values shown in this table reflect the conditions after <b>Mode Preset</b> Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored								
Dependencies	When " <b>Meas Method</b> " on page 582 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated								
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value								
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz</td> </tr> <tr> <td>WCDMA</td> <td>1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td> <td>1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz</td> </tr> </tbody> </table>	Modes	Values	SA	22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz	WCDMA	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz	LTEAFDD, LTEATDD, 5G NR, MSR	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz
Modes	Values								
SA	22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz, 22 kHz								
WCDMA	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz								
LTEAFDD, LTEATDD, 5G NR, MSR	1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz								
State Saved	Saved in instrument state								
Min/Max	1 Hz/50 MHz								
Backwards Compatibility SCPI	[:SENSe]:ACPower:OFFSet[1] 2[:LIST:BWIDth:VIDeo								

## Auto Function

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BWIDth:VIDeo:AUTO OFF   ON   0   1, ... [:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BWIDth:VIDeo:AUTO? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:ACP:OFFS2:LIST:BAND:VID:AUTO 0, 0, 0, 0, 1, 1 :ACP:OFFS2:LIST:BAND:VID:AUTO?
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is ON ON, ON, ON, ON, ON, ON

State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BWIDth:VIDeo:AUTO</code>

## Filter Type

Selects the type of bandwidth filter that is used.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:SHAPE GAUSSian   FLATtop,...</code>  <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:SHAPE?</code>  Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS</code>  <code>:ACP:OFFS2:LIST:BAND:SHAP?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Dependencies	When " <b>Res BW</b> " on page 553 Mode for the offset is <b>Auto</b> , this cell is grayed out and disabled. Since <b>Res BW</b> Mode for the offset is preset to <b>Auto</b> on changing " <b>Meas Method</b> " on page 582 to RBW, FAST or Fast Power, this cell is grayed-out and disabled too. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is <b>GAUSSian</b> <b>GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian</b>
State Saved	Saved in instrument state
Range	<b>GAUSSian FLATtop</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BWIDth:SHAPE</code>

## Filter BW

Selects a Gaussian filter based on its -3 dB (Normal) bandwidth or its -6 dB bandwidth.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:TYPE DB3   DB6,...</code>  <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:BANDwidth:TYPE?</code>  Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3</code>  <code>:ACP:OFFS2:LIST:BAND:TYPE?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored

Dependencies	When "RBW Filter Type" on page 556 is Flattop, or "Res BW" on page 553 Mode for the offset is <b>Auto</b> , this cell is grayed-out and disabled. Since <b>Res BW</b> Mode for the offset is preset to <b>Auto</b> on changing "Meas Method" on page 582 to RBW, FAST or Fast Power, this cell is grayed-out and disabled too. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>DB3</b> <b>DB3, DB3, DB3, DB3, DB3, DB3</b>
State Saved	Saved in instrument state
Range	-3 dB (Normal)   -6 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1] 2:LIST:BWIDth:TYPE</code>

## Limits

Lets you configure the limits that are used to determine whether the offset regions **PASS** or **FAIL** the limit test.

## Limit Test

This checkbox is the same as "Limit Test" on page 654 in the **Meas Setup, Settings** tab.

## Offset Freq

This column is the same as "Offset Freq" on page 645 in the **Offset** index tab.

## Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. `[ :SENSe]:ACPower:OFFSet[n][ :OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with the `[ :SENSe]:ACPower:OFFSet[n][ :OUTer]:LIST:STATE` command.

The query returns the six (6) sets of real numbers that are the current absolute amplitude test limits.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute &lt; real&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:ABSolute?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink										
Example	<code>:ACP:OFFS2:LIST:ABS -10, -10, -10, -10, -10</code> <code>:ACP:OFFS2:LIST:ABS?</code>										
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored										
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value										
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm   0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm</td> </tr> <tr> <td>WCDMA</td> <td>50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm   50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td> </tr> <tr> <td>5G NR</td> <td>4.92, 4.92, 4.92, 4.92, 4.92, 4.92   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td> </tr> </tbody> </table>	Modes	Values	SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm   0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm	WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm   50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm	LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0	5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0
Modes	Values										
SA	0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm   0dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm, 0 dBm										
WCDMA	50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm   50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm, 50 dBm										
LTEAFDD, LTEATDD, MSR	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
5G NR	4.92, 4.92, 4.92, 4.92, 4.92, 4.92   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0										
State Saved	Saved in instrument state										
Min/Max	-200.0 dBm/50.0 dBm										
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPR:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA <code>[ :SENSe]:MCPower:OFFSet[1] 2:LIST:ABSolute</code> SA, W-CDMA										

### Rel Limit (Car)

Enters a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[ :SENSe]:ACP:OFFSet[n][ :OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n][ :OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote	<code>[ :SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RCARrier &lt;real&gt;,...</code>
--------	---

Command	<code>[ :SENSe]:ACPpower:OFFSet[1]   2[:OUTer]:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink												
Example	<code>:ACP:OFFS2:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:LIST:RCAR?</code>												
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored												
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value												
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0</td> </tr> <tr> <td>WCDMA</td> <td>-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td> </tr> <tr> <td>5G NR</td> <td>-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td> </tr> <tr> <td>Radio Test</td> <td>-60, -60, -60, 0, 0, 0</td> </tr> </tbody> </table>	Modes	Values	SA	-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0	WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2	LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	Radio Test	-60, -60, -60, 0, 0, 0
Modes	Values												
SA	-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0												
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2												
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2												
Radio Test	-60, -60, -60, 0, 0, 0												
State Saved	Saved in instrument state												
Min/Max	-150/50.0												
Backwards Compatibility SCPI	<code>[ :SENSe]:MCPower:OFFSet[1]   2:LIST:RCARrier</code>												

### Positive Offset Limit (Remote Command only)

Enables you to set the upper limit for the upper segment of the specified offset pair.

Remote Command	<code>:CALCulate:ACPpower:OFFSet[1]   2[:OUTer]:LIST:LIMit:POSitive[:UPPer]:DATA &lt;real&gt;,...</code> <code>:CALCulate:ACPpower:OFFSet[1]   2[:OUTer]:LIST:LIMit:POSitive[:UPPer]:DATA?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:CALC:ACP:OFFS:LIST:LIM:POS:DATA 0,0,0,0,0,0</code> <code>:CALC:ACP:OFFS:LIST:LIM:POS:DATA?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Radio Test	-60, -60, -60, 0, 0, 0
State Saved	Saved in instrument state
Min/Max	-150.0/50.0
Backwards Compatibility SCPI	:CALCulate:ACPower:OFFSet:LIST:LIMit:POSitive[:UPPer]:DATA (Power Suite)

### Negative Offset Limit(Remote Command only)

Enables you to set the upper limit for the lower segment of the specified offset pair.

Remote Command	:CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:NEGative[:UPPer]:DATA <real>, ...  :CALCulate:ACPower:OFFSet[1] 2[:OUTer]:LIST:LIMit:NEGative[:UPPer]:DATA?  Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:CALC:ACP:OFFS:LIST:LIM:NEG:DATA 0,0,0,0,0,0 :CALC:ACP:OFFS:LIST:LIM:NEG:DATA?
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-45, -60, 0, 0, 0, 0   -45, -60, 0, 0, 0, 0
WCDMA	-44.2, -49.2, -49.2, -49.2, -49.2, -49.2   -32.2, -42.2, -42.2, -42.2, -42.2, -42.2
LTEAFDD, LTEATDD, MSR	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
5G NR	-43.8, -43.8, -43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Radio Test	-60, -60, -60, 0, 0, 0

State Saved	Saved in instrument state
Min/Max	-150.0/50.0
Backwards Compatibility SCPI	<code>:CALCulate:MCPower:OFFSet:LIST:LIMit:NEGative[:UPPer]:DATA</code> (Power Suite, WCDMA)

## Rel Limit (PSD)

Enters a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[:SENSe]:ACP:OFFSet[n][:OUTer]:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RPSDensity &lt;rel_ampl&gt;,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2[:OUTer]:LIST:RPSDensity?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:LIST:RPSD?</code>
Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value

Modes	Values
SA	-28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB   -28.87 dB, -43.87 dB, 0 dB, 0 dB, 0 dB, 0 dB
WCDMA	-44.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB, -49.2 dB   -32.2 dB, -42.2 dB, -42.2 dB, -42.2 dB, -42.2 dB
LTEAFDD, LTEATDD, 5G NR, MSR	0, 0, 0, 0, 0, 0   0, 0, 0, 0, 0, 0
Radio Test	-60, -60, -60, 0, 0, 0

State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

## Fail Mask

Accesses a menu that lets you select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[ :SENSe ]:ACP:OFFSet[n]` `[ :OUTer ]:LIST:ABSolute`, or the relative values defined with `[ :SENSe ]:ACP:OFFSet[n]` `[ :OUTer ]:LIST:RPSDensity` and `[ :SENSe ]:ACP:OFFSet[n]` `[ :OUTer ]:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[ :SENSe ]:ACP:OFFSet[n]` `[ :OUTer ]:LIST:STATe`.

<b>Absolute</b>	<b>ABSolute</b>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for <b>Abs Limit</b>
<b>Relative</b>	<b>RELative</b>	Fail is shown if one of the relative ACP measurement results is larger than the limit for <b>Rel Lim (Car)</b> or <b>Rel Lim (PSD)</b>
<b>Abs AND Rel</b>	<b>AND</b>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for <b>Abs Limit</b> and one of the relative ACP measurement results is larger than the limit for <b>Rel Lim (Car)</b> or <b>Rel Lim (PSD)</b>
<b>Abs OR Rel</b>	<b>OR</b>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for <b>Abs Limit</b> or one of the relative ACP measurement results is larger than the limit for <b>Rel Lim (Car)</b> or <b>Rel Lim (PSD)</b>

Remote Command	<code>[ :SENSe ]:ACP:Power:OFFSet[1]   2 [ :OUTer ]:LIST:TEST ABSolute   AND   OR   RELative,...</code> <code>[ :SENSe ]:ACP:Power:OFFSet[1]   2 [ :OUTer ]:LIST:TEST?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
----------------	--

Example	<code>:ACP:OFFS2:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:LIST:TEST?</code>
---------	---

Notes	Some Modes do not support Offset subopcode 2. In those cases, commands with subopcode 2 are accepted without error but ignored
-------	--

Preset	When <b>"Max Num of Offsets"</b> on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value
--------	--

Modes	Values
SA, WCDMA	<code>REL, REL, REL, REL, REL, REL   REL, REL, REL, REL, REL, REL</code>
LTEAFDD, LTEATDD, 5G NR, MSR	<code>AND, AND, AND, AND, AND, AND   AND, AND, AND, AND, AND, AND</code>

Modes	Values
Radio Test	REL, REL, REL, REL, REL, REL
State Saved	Saved in instrument state
Range	ABSolute  AND OR RELative
Backwards Compatibility SCPI	[ :SENSe ] :MCPower :OFFSet [ 1 ]   2 :LIST :TEST

## Inner Offset

Accesses a menu of functions that contains Offset, Offset Freq/Offset To Edge, Offset Integ BW, Upper Offset Limit and Lower Offset parameters.

## Offset Frequency Define

Allows you to select “Offset” definition:

<b>CTOCenter</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center frequency of each Offset Integ BW
<b>CTOEdge</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the closest edge frequency of each Offset Integ BW
<b>ETOCenter</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of each Offset Integ BW
<b>ETOEdge</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the closest edge frequency of each Offset Integ BW
<b>STOCenter</b>	From either the lower or upper sub-block edge frequency to the center frequency of each Offset Integ BW
<b>STOEdge</b>	From either the lower or upper sub-block edge frequency to the closest edge frequency of each Offset Integ BW
<b>SCTOCenter</b>	From the center frequency of sub-block** to the center frequency of each Offset Integ BW

5G NR Mode only

\*\* sub-block (bandwidth) =  $BW_{\text{channel,block}}$  which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or Disabled. When the Number of Component Carrier within each sub-block = 1, sub-block (bandwidth) =  $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$ .

See ["Diagram for Offset Freq Define" on page 662](#)

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement


**Mode: MSR, LTEAFDD, LTEATDD**

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2:INNER:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   STOCenter   STOEdge [:SENSe]:ACPower:OFFSet[1] 2:INNER:TYPE? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:ACP:OFFS:INN:TYPE ETOC :ACP:OFFS:INN:TYPE?
Preset	STOCenter
State Saved	Saved in instrument state
Range	CTOCenter   CTOEdge   ETOCenter   ETOEdge   STOCenter   STOEdge

**Mode: 5G NR**

Remote Command	[:SENSe]:ACPower:OFFSet[1] 2:INNER:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   STOCenter   STOEdge   SCTOCenter [:SENSe]:ACPower:OFFSet[1] 2:INNER:TYPE? Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	:ACP:OFFS:INN:TYPE ETOC :ACP:OFFS:INN:TYPE?
Preset	STOCenter   CTOCenter
State Saved	Saved in instrument state
Range	CTOCenter   CTOEdge   ETOCenter   ETOEdge   STOCenter   STOEdge   SCTOCenter

### Diagram for Offset Freq Define

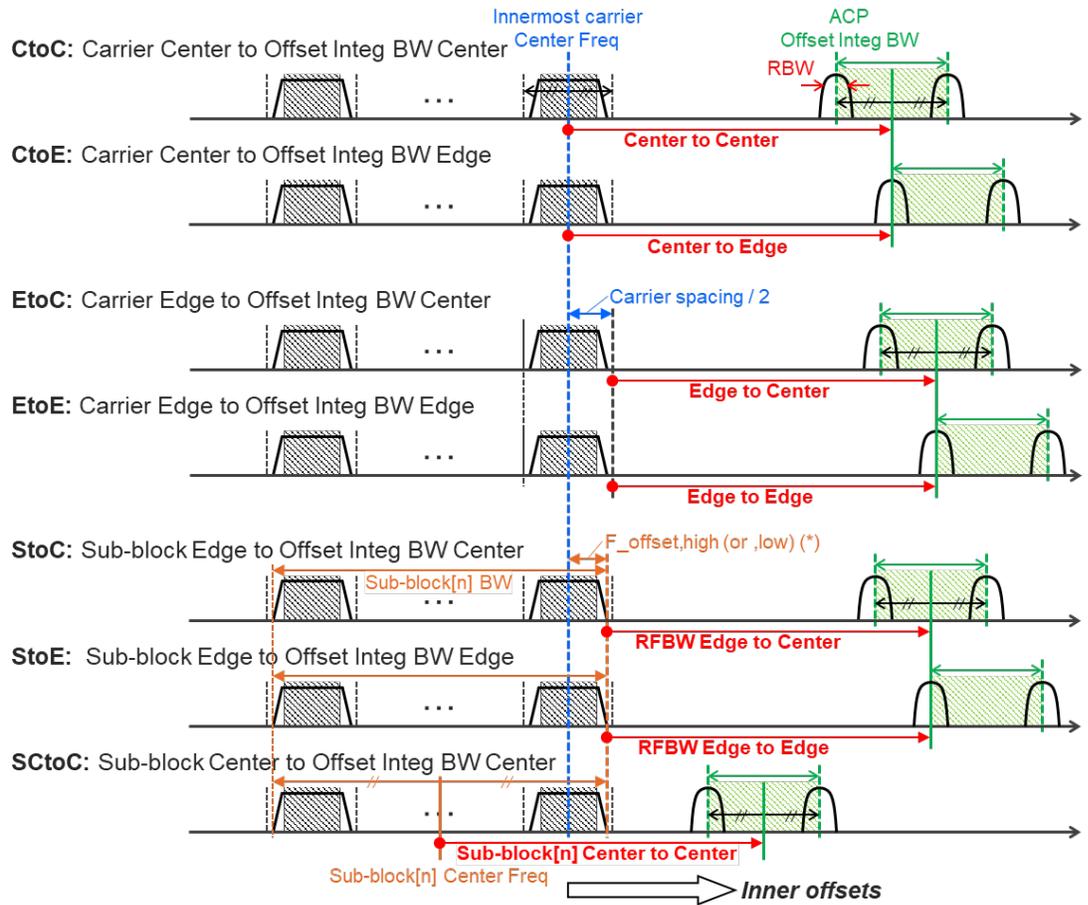

Note:

RF BW Edge and Outermost Carrier Edge are not always same.  
e.g.) 5G NR (3GPP) defines BW\_channel,CA which calculates F\_offset,high and F\_offset,low asymmetrically with SCS shift

(\*) For MSR, F\_offset,high (or ,low) = F\_offset,RAT,high (or ,low)

### Offset Freq

Determines the frequency difference between the center of the main channel and the center of the carrier. When set to Offset to Edge, this parameter determines the frequency difference between the center of the main channel and the near edge of the offset.

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

Each **Offset Freq** state value is entered individually by selecting the desired carrier. Use the **Enabled** checkbox to turn the **Offset Freq** State on or off.

The list contains up to 6 entries, depending on the mode selected, for offset frequencies. Each offset frequency in the list corresponds to a reference bandwidth in the bandwidth list.

An offset frequency of zero turns the display of the measurement for that offset off, but the measurement is still made and reported. You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:STATE`.

Turning the offset off has the same effect as setting the frequency of the offset to 0 Hz, and causes it to be removed from the results screen.

Remote Command	<code>[ :SENSe]:ACP:OFFSet[1] 2:INNER:LIST[:FREQUENCY] &lt;freq&gt;,...</code> <code>[ :SENSe]:ACP:OFFSet[1] 2:INNER:LIST[:FREQUENCY]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS1:INN:LIST 0,0,0,0,0,0</code> <code>:ACP:OFFS1:INN:LIST?</code>						
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, unless the number of values sent is greater than the number of carriers, then subsequent values are ignored						
Couplings	Changing Offset Frequency might affect <a href="#">"Span" on page 569</a>						
Preset	When <a href="#">"Max Num of Offsets" on page 633</a> is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>5G NR</td> <td>10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz</td> </tr> <tr> <td>All Others</td> <td>2.5MHz,7.5MHz,0,0,0,0   2.5MHz,7.5MHz,0,0,0,0</td> </tr> </tbody> </table>	Modes	Values	5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz	All Others	2.5MHz,7.5MHz,0,0,0,0   2.5MHz,7.5MHz,0,0,0,0
Modes	Values						
5G NR	10 MHz, 30 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz   100 MHz, 200 MHz, 0 Hz, 0 Hz, 0 Hz, 0 Hz						
All Others	2.5MHz,7.5MHz,0,0,0,0   2.5MHz,7.5MHz,0,0,0,0						
State Saved	Saved in instrument state						
Min/Max	0 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement  Auto Function						
Remote Command	<code>[ :SENSe]:ACP:OFFSet[1] 2:INNER:LIST:STATE OFF   ON   0   1,...</code> <code>[ :SENSe]:ACP:OFFSet[1] 2:INNER:LIST:STATE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:STAT 1,1,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:STAT?</code>						
Preset	When <a href="#">"Max Num of Offsets" on page 633</a> is 12, the preset value of Offset G ~ L is the same as the Offset F value  <code>ON, ON, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, OFF, OFF</code>						
State Saved	Yes						

## Integ BW

Sets the Integration Bandwidth for the offsets. Each resolution bandwidth in the list corresponds to an offset frequency in the list defined by `[ :SENSe]:ACP:OFFSet [n]:INNeR:LIST[:FREQuency]`.

Enter each value individually by selecting the desired offset on the **Offset** menu key using the up down arrows, the knob, or the numeric keypad, then enter the Offset Integration Bandwidth using the **Offset Integration Bandwidth** menu key.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet [n]:INNeR:LIST:STATE`.

Remote Command	<code>[ :SENSe]:ACP:OFFSet[1] 2:INNeR:LIST:BANDwidth[:INTEgration] &lt;freq&gt;,...</code> <code>[ :SENSe]:ACP:OFFSet[1] 2:INNeR:LIST:BANDwidth[:INTEgration]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink								
Example	<code>:ACP:OFFS2:INN:LIST:BAND 2MHz,2MHz,2MHz,2MHz,2MHz,2MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND?</code>								
Notes	When setting these values remotely, the position in the list sent corresponds to the offset. Missing values are not permitted, so, if you want to change the second value you must send all values up to it. Subsequent values remain unchanged								
Couplings	Changing Integ BW might affect " <a href="#">Span</a> " on page 569								
Preset	When " <a href="#">Max Num of Offsets</a> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value								
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>LTEAFDD</td> <td>3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz   3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz</td> </tr> <tr> <td>MSR, LTEATDD</td> <td>4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz   4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz</td> </tr> <tr> <td>5G NR</td> <td>19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz   98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz</td> </tr> </tbody> </table>	Modes	Values	LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz   3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz	MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz   4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz	5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz   98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz
Modes	Values								
LTEAFDD	3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz   3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz, 3.84MHz								
MSR, LTEATDD	4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz, 4.515MHz   4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz, 4.5MHz								
5G NR	19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz, 19.08 MHz   98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz, 98.31 MHz								
State Saved	Saved in instrument state								
Min/Max	10 Hz/Depends on instrument maximum frequency. Same as Max Span of the Swept SA Measurement								

## Offset Side


Lets you turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet [1]|2:INNeR:LIST:SIDE`.

- **NEGative** - The upper side in the sub-block gap only (that is, negative sideband of the upper sub-block) is enabled

3 LTE & LTE-A TDD Mode  
 3.4 ACP Measurement

- **BOTH** - Both sides in the sub-block gap are enabled
- **POSitive** - The lower side in the sub-block gap only (that is, positive sideband of the lower sub-block) is enabled

The diagram below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR, LTEAFDD and LTEATDD Modes.

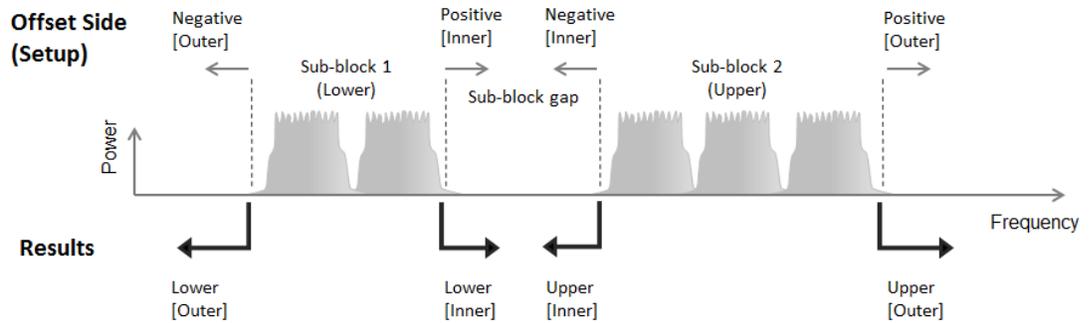

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE NEGative   BOTH   POSitive, ...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:SIDE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:SIDE BOTH</code> <code>:ACP:OFFS:INN:LIST:SIDE?</code>
Notes	If you set <b>POS</b> or <b>NEG</b> in an offset, result of the inactive side returns -999
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is <b>BOTH</b> <b>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH   BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</b>
State Saved	Saved in instrument state
Range	<b>NEGative BOTH POSitive</b>

### Method

Lets you turn RRC filtering of each offset on or off. The value (roll off) for the filter is set to the value of the Filter Alpha parameter.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe] ON   OFF   1   0,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer[:RRC][:STATe]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:FILT 1,0,0</code> <code>:ACP:OFFS:INN:LIST:FILT?</code>
Notes	<b>1 ON</b> = RRC Weighted, <b>0 OFF</b> = Integ BW

Preset	When " <a href="#">Max Num of Offsets</a> " on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value						
	<table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>LTEAFDD</td> <td>1,1,1,1,1,1   1,1,1,1,1,1</td> </tr> <tr> <td>MSR, LTEATDD, 5G NR</td> <td>0,0,0,0,0,0   0,0,0,0,0,0</td> </tr> </tbody> </table>	Modes	Values	LTEAFDD	1,1,1,1,1,1   1,1,1,1,1,1	MSR, LTEATDD, 5G NR	0,0,0,0,0,0   0,0,0,0,0,0
Modes	Values						
LTEAFDD	1,1,1,1,1,1   1,1,1,1,1,1						
MSR, LTEATDD, 5G NR	0,0,0,0,0,0   0,0,0,0,0,0						
State Saved	Saved in instrument state						
Range	Integ BW   RRC Weighted						

## Filter Alpha

Sets the alpha value for the RRC Filter for each offset.

Remote Command	<pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer:ALPHa &lt;real&gt;,...</pre> <pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:FILTer:ALPHa?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:OFFS:INN:LIST:FILT:ALPH 0.5,0.5,0.5,0.5,0.5,0.5</pre> <pre>:ACP:OFFS:INN:LIST:FILT:ALPH?</pre>
Preset	When " <a href="#">Max Num of Offsets</a> " on page 633 is 12, the preset value of Offset G ~ L is 0.22 0.22,0.22,0.22,0.22,0.22,0.22 0.22,0.22,0.22,0.22,0.22,0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.00

## Advanced (Inner Offset)

Opens a further menu page that lets you set advanced properties of the Inner Offset, such as Res BW, Video BW, Filter and "[Power Ref](#)" on page 676 parameters.

## Offset Freq

The same as "[Offset Freq](#)" on page 662 in the main **Inner Offset** menu.

## Res BW

Sets the Resolution Bandwidth. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

Remote Command	<pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:RESolution &lt;freq&gt;,...</pre> <pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:BANDwidth:RESolution?</pre>
----------------	---

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:RES 220kHz,220kHz,220kHz,220kHz,220kHz,220kHz</code> <code>:ACP:OFFS2:INN:LIST:BAND:RES?</code>
Dependencies	When " <b>Meas Method</b> " on page 582 is RBW, FAST or Fast Power, this control is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent SCPI remote command is sent, a "Setting conflict" warning is generated
Couplings	When " <b>Res BW</b> " on page 553 Mode is <b>Auto</b> , this value is exactly the same as <b>Res BW</b> . When you change this value, <b>Res BW</b> Mode also changes to <b>Man</b>
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is 100 kHz 100 kHz, 100 kHz, 100k Hz, 100 kHz   100 kHz,100 kHz, 100 kHz,100 kHz, 100 kHz, 100 kHz
State Saved	Saved in instrument state
Min/Max	1 Hz/8 MHz

Auto Function

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:RESolution:AUTO ON   OFF   1   0,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:RESolution:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:RES:AUTO 1,1,1,1,1,1</code> <code>:ACP:OFFS2:INN:LIST:BAND:RES:AUTO?</code>
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is 1 1, 1, 1, 1, 1, 1
State Saved	Yes

Video BW

Lets you change the instrument post-detection filter (VBW).

Remote Command	<code>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:VIDeo &lt;freq&gt;,...</code> <code>[:SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:VIDeo?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:VID 5MHz,5MHz,5MHz,5MHz,5MHz,5MHz</code> <code>:ACP:OFFS2:INN:LIST:BAND:VID?</code>
Notes	The values shown in this table reflect the conditions after <b>Mode Preset</b>
Dependencies	When " <b>Meas Method</b> " on page 582 is RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is 1 MHz 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz, 1 MHz

State Saved	Yes
Min/Max	1 Hz/50 MHz
	Auto Function
Remote Command	<code>[ :SENSE]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:VIDeo:AUTO OFF   ON   0   1,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:VIDeo:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:VID:AUTO 0,0,0,0,1,1</code> <code>:ACP:OFFS2:INN:LIST:BAND:VID:AUTO?</code>
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is <b>ON</b> <b>ON, ON, ON, ON, ON, ON</b>
State Saved	Yes

## Filter Type

Selects the type of bandwidth filter that is used.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:SHAPE GAUSSian   FLATtop,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:SHAPE?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:SHAP FLAT,GAUS,GAUS,GAUS,GAUS,GAUS</code> <code>:ACP:OFFS2:INN:LIST:BAND:SHAP?</code>
Dependencies	When " <b>Res BW</b> " on page 553 Mode for the offset is <b>Auto</b> , this cell is grayed-out and disabled. Since <b>Res BW</b> Mode for the offset is preset to <b>Auto</b> on changing " <b>Meas Method</b> " on page 582 to RBW, FAST or Fast Power, this cell is grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When " <b>Max Num of Offsets</b> " on page 633 is 12, the preset value of Offset G ~ L is <b>GAUSSian</b> <b>GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian, GAUSSian</b>
State Saved	Saved in instrument state
Range	<b>GAUSSian FLATtop</b>

## Filter BW

Selects a Gaussian filter based on its –3 dB (Normal) bandwidth or its –6 dB bandwidth.

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:TYPE DB3   DB6,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:BANDwidth:TYPE?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:BAND:TYPE DB3,DB3,DB3,DB3,DB3</code> <code>:ACP:OFFS2:INN:LIST:BAND:TYPE?</code>
Dependencies	When "RBW Filter Type" on page 556 is <b>FLATtop</b> or "Res BW" on page 553 Mode for the offset is <b>Auto</b> , this cell is grayed-out and disabled. Since <b>Res BW</b> Mode for the offset is preset to <b>Auto</b> on changing "Meas Method" on page 582 to RBW, FAST or Fast Power, this cell is also grayed-out and disabled. If the cell is pressed, an advisory message is generated. If the equivalent remote command is sent, a "Setting conflict" warning is generated
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>DB3</b> <b>DB3, DB3, DB3, DB3, DB3, DB3</b>
State Saved	Saved in instrument state
Range	-3 dB (Normal)   -6 dB

## Power Ref Type

Lets you set reference types of inner offsets.

**CUMulative** Cumulated power of the upper and lower sub-block carriers is the reference level. This selection is effective only when one of the following "Power Ref" on page 676 values is selected:

Left & Right Carriers	<b>LRCarriers</b>
Max Power Carrier in Sub-block	<b>MPCSubblock</b>
Min Power Carrier in Sub-block	<b>MINSubblock</b>
Left & Right Sub-blocks	<b>LRSubblocks</b>
Manual	<b>MANual</b>

When one of the other **Power Ref** values is selected, carrier powers are not cumulated, and the reference level is equivalent to Normal

**NORMal** Power of specified carrier or the manual reference level is the reference level

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:PREference CUMulative   NORMal, ...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:PREference?</code>
	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS:INN:LIST:PREF CUM,CUM,NORM,NORM,NORM,NORM</code> <code>:ACP:OFFS:INN:LIST:PREF?</code>
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>NORMal</b> <b>NORMal, NORMal, NORMal, NORMal, NORMal, NORMal</b>
State Saved	Saved in instrument state
Range	<b>CUMulative NORMal</b>
	Auto Function

Remote Command	<pre>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:PREFeRence:AUTO OFF   ON   0   1, ... [:SENSe]:ACPower:OFFSet[1]   2:INNeR:LIST:PREFeRence:AUTO?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>																												
Example	<pre>:ACP:OFFS:INN:LIST:PREF:AUTO OFF,OFF,OFF,OFF,OFF :ACP:OFFS:INN:LIST:PREF:AUTO?</pre>																												
Dependencies	Available only in LTEAFDD, LTEATDD and 5G NR Modes																												
Couplings	<p>When in the LTEAFDD, LTEATDD Modes, the inner power ref type is set automatically when the power ref type state is auto according to the scopes of the sub-block gap in the following table</p> <table border="1"> <thead> <tr> <th>Sub-block Gap</th> <th>Inner ACP offset</th> <th>Power Ref Type</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Wgap &lt;5MHz</td> <td>1st (2.5MHz)</td> <td>Normal</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Normal</td> </tr> <tr> <td rowspan="2">5MHz ≤ Wgap &lt;10MHz</td> <td>1st (2.5MHz)</td> <td>Cumulative</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Normal</td> </tr> <tr> <td rowspan="2">10MHz ≤ Wgap &lt;15MHz</td> <td>1st (2.5MHz)</td> <td>Cumulative</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Cumulative</td> </tr> <tr> <td rowspan="2">15MHz ≤ Wgap &lt;20MHz</td> <td>1st (2.5MHz)</td> <td>Normal</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Cumulative</td> </tr> <tr> <td rowspan="2">20MHz ≤ Wgap</td> <td>1st (2.5MHz)</td> <td>Normal</td> </tr> <tr> <td>2nd (7.5MHz)</td> <td>Normal</td> </tr> </tbody> </table> <p>When in 5G NR Mode, Power Ref Type “Auto” sets the power reference type of inner-ACLR offset automatically</p> <p>Downlink: “Cumulative” or “Normal” is selected accordingly when the inner-offsets are configured to meet the test requirements as follows:</p> <p>FR1, 3GPP TS 38.141-1 v16.5.0 (2020-09) Section 6.6.3.5.3 BS type 1-C:</p> <ul style="list-style-type: none"> <li>- Table 6.6.3.5.2-3: Base Station ACLR limit in non-contiguous spectrum or multiple bands</li> <li>- Table 6.6.3.5.2-4: Base station CACLR limit</li> </ul> <p>FR2, 3GPP TS 38.141-2 v16.5.0 (2020-09) Section 6.7.3.5.3 BS type 2-O:</p> <ul style="list-style-type: none"> <li>- Table 6.7.3.5.2-3: BS type 2-O ACLR limit in non-contiguous spectrum</li> <li>- Table 6.7.3.5.2-4: BS type 2-O CACLR limit in non-contiguous spectrum</li> </ul> <p>Uplink: “Normal” is always selected</p>	Sub-block Gap	Inner ACP offset	Power Ref Type	Wgap <5MHz	1st (2.5MHz)	Normal	2nd (7.5MHz)	Normal	5MHz ≤ Wgap <10MHz	1st (2.5MHz)	Cumulative	2nd (7.5MHz)	Normal	10MHz ≤ Wgap <15MHz	1st (2.5MHz)	Cumulative	2nd (7.5MHz)	Cumulative	15MHz ≤ Wgap <20MHz	1st (2.5MHz)	Normal	2nd (7.5MHz)	Cumulative	20MHz ≤ Wgap	1st (2.5MHz)	Normal	2nd (7.5MHz)	Normal
Sub-block Gap	Inner ACP offset	Power Ref Type																											
Wgap <5MHz	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Normal																											
5MHz ≤ Wgap <10MHz	1st (2.5MHz)	Cumulative																											
	2nd (7.5MHz)	Normal																											
10MHz ≤ Wgap <15MHz	1st (2.5MHz)	Cumulative																											
	2nd (7.5MHz)	Cumulative																											
15MHz ≤ Wgap <20MHz	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Cumulative																											
20MHz ≤ Wgap	1st (2.5MHz)	Normal																											
	2nd (7.5MHz)	Normal																											
Preset	<p>When "<b>Max Num of Offsets</b>" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value</p> <pre>ON, ON, ON, ON, ON, ON   OFF, OFF, OFF, OFF, OFF, OFF</pre>																												
State Saved	Saved in instrument state																												
Range	Auto Man																												

## Inner Limits

Accesses a menu of functions that contains Select Offset, Abs Limit, Rel Limit and Fail Mask parameters.

## Limit Test

This checkbox is the same as "Limit Test" on page 654 in the **Settings** tab.

## Offset Freq

This column is the same as "Offset Freq" on page 662 in the **Offset** tab.

## Abs Limit

Specifies an absolute limit value, which sets the absolute amplitude levels to test against for each of the custom offsets. The list must contain 6 entries. If there is more than one offset, the offset closest to the carrier channel is the first one in the list. `[ :SENSe ]:ACP:OFFSet[n]:INNER:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[ :SENSe ]:ACP:OFFSet[n]:INNER:LIST:STATE`.

The query returns the 6 sets of real numbers that are the current absolute amplitude test limits.

Remote Command	<code>[ :SENSe ]:ACP:OFFSet[1] 2:INNER:LIST:ABSolute &lt; real&gt;,...</code> <code>[ :SENSe ]:ACP:OFFSet[1] 2:INNER:LIST:ABSolute?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:ABS -10,-10,-10,-10,-10,-10</code> <code>:ACP:OFFS2:INN:LIST:ABS?</code>						
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1" data-bbox="389 1570 1406 1696"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>5G NR</td> <td>-2.2, -2.2, -2.2, -2.2, -2.2, -2.2   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td> </tr> <tr> <td>All Others</td> <td>-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0</td> </tr> </tbody> </table>	Modes	Values	5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0	All Others	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0
Modes	Values						
5G NR	-2.2, -2.2, -2.2, -2.2, -2.2, -2.2   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0						
All Others	-8.45, -8.45, -8.45, -8.45, -8.45, -8.45   -50.0, -50.0, -50.0, -50.0, -50.0, -50.0						
State Saved	Saved in instrument state						
Min/Max	-200.0 dBm/50.0 dBm						

## Rel Limit (Car)

Specifies a relative limit value for the carrier level. This sets the amplitude levels to test against for the specified offsets.

The amplitude level is relative to the carrier amplitude. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list. `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:STATe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the carrier, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:RCARrier &lt;real&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNER:LIST:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink						
Example	<code>:ACP:OFFS2:INN:LIST:RCAR 0,0,0,0,0,0</code> <code>:ACP:OFFS2:INN:LIST:RCAR?</code>						
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is the same as the Offset F value <table border="1"> <thead> <tr> <th>Modes</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>5G NR</td> <td>-43.8, -43.8, 43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td> </tr> <tr> <td>All Others</td> <td>-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2</td> </tr> </tbody> </table>	Modes	Values	5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2	All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2
Modes	Values						
5G NR	-43.8, -43.8, 43.8, -43.8, -43.8, -43.8   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
All Others	-44.2, -44.2, -44.2, -44.2, -44.2, -44.2   -29.2, -29.2, -29.2, -29.2, -29.2, -29.2						
State Saved	Saved in instrument state						
Min/Max	-150/50.0						

## Rel Limit (PSD)

Specifies a relative limit value for the level of the power spectral density. This sets the amplitude levels to test against for any custom offsets. The amplitude level is relative to the power spectral density. If multiple offsets are available, the list contains 6 entries. The offset closest to the carrier channel is the first one in the list.

`[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:TEST` selects the type of testing to be done at each offset.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet[n]:INNER:LIST:STATe`.

The query returns the 6 sets of real numbers that are the current amplitude test limits, relative to the power spectral density, for each offset.

Offset[n] n = 1 is base station and n = 2 is mobiles. The default is base station (1).

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RPSDensity &lt;rel_amp1&gt;,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:RPSDensity?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:RPSD 10,10,10,10,10,10</code> <code>:ACP:OFFS2:INN:LIST:RPSD?</code>
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is 0 0, 0, 0, 0, 0, 0 0, 0, 0, 0, 0, 0
State Saved	Saved in instrument state
Min/Max	-150.0 dB/50.0 dB

## Fail Mask

Accesses a menu that enables you to select one of the logics for the fail conditions between the measurement results and the test limits. The setting defines the type of testing to be done at any custom offset frequencies. The measured powers are tested against the absolute values defined with `[ :SENSe]:ACP:OFFSet [n]:INNeR:LIST:ABSolute`, or the relative values defined with `[ :SENSe]:ACP:OFFSet[n]:INNeR:LIST:RPSDensity` and `[ :SENSe]:ACP:OFFSet[n]:INNeR:LIST:RCARrier`.

You can turn off (not use) specific offsets with `[ :SENSe]:ACP:OFFSet [n]:INNeR:LIST:STATe`.

Option	SCPI	Description
Absolute	<code>ABSolute</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit
Relative	<code>RELative</code>	Fail is shown if one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs AND Rel	<code>AND</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>and</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)
Abs OR Rel	<code>OR</code>	Fail is shown if one of the absolute ACP measurement results is larger than the limit for Abs Limit <i>or</i> one of the relative ACP measurement results is larger than the limit for Rel Lim (Car) or Rel Lim (PSD)

Remote Command	<code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:TEST ABSolute   AND   OR   RELative,...</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:INNeR:LIST:TEST?</code>
----------------	--

	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:OFFS2:INN:LIST:TEST ABS,ABS,ABS,ABS,ABS,ABS</code> <code>:ACP:OFFS2:INN:LIST:TEST?</code>
Preset	When "Max Num of Offsets" on page 633 is 12, the preset value of Offset G ~ L is <b>AND</b> <b>AND, AND, AND, AND, AND, AND   AND, AND, AND, AND, AND, AND</b>
State Saved	Saved in instrument state
Range	<b>ABSolute AND OR RELative</b>

### Reference Carrier (Carrier Index)

Sets the reference carrier. Relative power measurements are made from the reference carrier.

If set to **Auto**, the measurement selects the carrier with the highest power as the reference carrier and the Ref Carrier parameter is updated. If a value is entered when Ref Carrier Mode is set to **Auto**, the mode changes to **Man**.

If set to **Man**, the value that you enter for the Ref Carrier is used as the reference carrier.

In MSR, LTEAFDD, LTEATDD and 5G NR Modes, this control is called **Carrier Index** and has a different SCPI command. In these Modes, it sets the carrier index of the reference power. The power of the carrier selected by this index becomes reference power when "Power Ref" on page 676 is **Carrier Index**. Any value up to the MAX can be set, though the measurement only deals with number of carriers specified by Carrier. If the index is larger than Carrier, reference power in this measurement becomes **NaN** and therefore all relative power results are **NaN**.

For more information, see "Carrier Index (Modes: MSR, LTEAFDD, LTEATDD, and 5G NR)" on page 675.

Remote Command	<code>[[:SENSe]:ACPower:CARRier[1] 2:RCARrier &lt;integer&gt;</code> <code>[[:SENSe]:ACPower:CARRier[1] 2:RCARrier?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:RCAR 1</code> <code>:ACP:CARR:RCAR?</code>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored. For LTEAFDD and LTEATDD Modes, this control is not shown. In order to maintain backwards compatibility with legacy LTE FDD/TDD Modes, the SCPI command is supported in the LTE & LTE-A converged applications.
Dependencies	Grayed-out if there is only one carrier Does not appear in MSR, LTEAFDD, LTEATDD and 5G NR Modes

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Couplings	If you enter a carrier value that is currently configured as having no power present, that carrier changes to having power present
Preset	Auto determined
State Saved	Saved in instrument state
Min/Max	1/Number of available carriers
Backwards Compatibility SCPI	<code>[ :SENSe]:MCPower:RCARrier[1] 2</code>  Auto Function
Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2:RCARrier:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:ACPower:CARRier[1] 2:RCARrier:AUTO?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:RCAR:AUTO OFF</code> <code>:ACP:CARR:RCAR:AUTO?</code>
Couplings	If you enter a ref carrier this parameter will be set to manual
Preset	1
State Saved	Yes
Range	Auto   Man
Backwards Compatibility SCPI	<code>[ :SENSe]:MCPower:RCARrier[1] 2:AUTO</code> (Power Suite)

### Carrier Index (Modes: MSR, LTEAFDD, LTEATDD, and 5G NR)

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2:INDex &lt;integer&gt;</code> <code>[ :SENSe]:ACPower:CARRier[1] 2:INDex?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:IND 1</code> <code>:ACP:CARR:IND?</code>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Only appears in MSR, LTEAFDD, LTEATDD and 5G NR Modes
Preset	1
State Saved	Saved in instrument state
Min/Max	LTEAFDD, LTEATDD: 1/Dependent on Num Component Carriers 5G NR: 1/Dependent on Num Component Carriers MSR: 1/100

## Carrier Index Zero Base (Remote Command Only)

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2:RCARrier:ZBASe &lt;integer&gt;</code> <code>[ :SENSe]:ACPower:CARRier[1] 2:RCARrier:ZBASe?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:RCAR:ZBAS 1</code> <code>:ACP:CARR:RCAR:ZBAS?</code>
Notes	Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Not available in multicarrier applications (MSR, 5GNR, LTE Modes)
Couplings	Coupled with: <code>[ :SENSe]:ACPower:CARRier[1] 2:RCARrier &lt;integer&gt;</code>
Preset	0
State Saved	Saved in instrument state
Min	0
Max	9

## Measurement Type

Changes the reference used for the measurement. This allows you to make absolute and relative power measurements of either total power or the power normalized to the measurement bandwidth.

- Total Pwr Ref (**TPRef**) sets the reference to the total carrier power
- PSD Ref (**PSDRef**) sets the reference to the power spectral density of the carrier

Remote Command	<code>[ :SENSe]:ACPower:TYPE TPRef   PSDRef</code> <code>[ :SENSe]:ACPower:TYPE?</code>
Example	<code>:ACP:TYPE PSDR</code> <code>:ACP:TYPE?</code>
Preset	<b>TPRef</b>
State Saved	Saved in instrument state
Range	Total Power Ref   PSD Ref

## Power Ref

Selects the power reference type. This control has two different forms, depending on the currently-selected Mode:

- "Power Ref (Modes: SA, WCDMA, VMA, SRComms)" on page 677
- "Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)" on page 677

### Power Ref (Modes: SA, WCDMA, VMA, SRComms)

Type	Option	Description
Ref Carrier	<code>RCARrier</code>	Power of the specified carrier is the reference of measurement. Use the Reference Carrier control to select Carrier Index
Manual Power	<code>MANual</code>	Power or PSD specified by the user is the reference of measurement
Total Multicarriers	<code>TMCarrriers</code>	Total Power of multi carriers is the power reference of measurement. Each carrier power is calculated with its own carrier configuration settings
Remote Command	<code>[ :SENSe ] :ACP:Power:CARRier[1]   2 :PREF:ence:TYPE RCARrier   MANual   TMCarrriers</code> <code>[ :SENSe ] :ACP:Power:CARRier[1]   2 :PREF:ence:TYPE?</code>	Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR:PREF:TYPE RCARrier</code> <code>:ACP:CARR:PREF:TYPE?</code>	
Notes		Available only in SA, WCDMA, VMA and Short-Range Comms Modes Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Preset	<code>RCARrier</code>	
State Saved		Saved in instrument state
Range	<code>RCARrier   MANual   TMCarrriers</code>	

### Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)


Selects the power reference type:

Type	Option	Description
Left & Right Carriers	<code>LRCarrriers</code>	Powers of leftmost and rightmost carriers with Measure Carrier On in a sub-block are the references of left and right sides respectively. Left and right carriers are determined based on the carrier center frequencies. If Measure Carriers of all the carriers in a sub-block are off, the reference power in a sub-block and all the relative power results are NaN. Relative limits are not evaluated
Max Power Carrier	<code>MPCarrier</code>	Maximum carrier power among the carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are <b>NaN</b> . Relative limits are not evaluated
Min Power	<code>MINPcarrier</code>	Minimum carrier power among the carriers of Measure Carrier On is the


Type	Option	Description
Carrier 5G NR only		reference of measurement. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are <b>NAN</b> . Relative limits are not evaluated
Carrier Index	<b>CINdex</b>	Power of the specified carrier is the reference of measurement. If Measure Carriers of this carrier index is off, the reference power and all the relative power results are <b>NAN</b> . Relative limits are not evaluated
Manual	<b>MANual</b>	Power or PSD specified by the user is the reference of measurement
Aggregated Chan BW LTEAFDD, LTEATDD, 5G NR only	<b>ACBandwidth</b>	The assigned aggregated channel bandwidth power which is measured with a rectangular filter with measurement bandwidth specified as aggregated channel bandwidth based on the definition of each 3GPP standard. Calculated from the carrier configuration including SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier. If Measure Carriers of all the carriers are off, the reference power and all the relative power results are <b>NAN</b> . Relative limits are not evaluated
Max Power Carrier in Sub- block	<b>MPCSubblock</b>	Maximum carrier power among the sub-block carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are <b>NAN</b> , and these relative limits are not evaluated
Total Multicarriers MSR only	<b>TMCarriers</b>	Total power of multi carriers is the power reference of measurement. Each carrier power is calculated with its own carrier configuration settings
Min Power Carrier in Sub- block 5G NR only	<b>MINSubbloc</b>	Minimum carrier power among the sub-block carriers of Measure Carrier On is the reference of measurement. If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are <b>NAN</b> , and these relative limits are not evaluated
Left & Right Sub- blocks 5G NR only	<b>LRSubblocks</b>	The reference depends on the number of Component Carriers (CC) and Carrier Allocation as follows: <ul style="list-style-type: none"> <li>- Num of CC is 1: the carrier power is the reference</li> <li>- Num of CC is 2 or more &amp; Carrier Allocation is Contiguous: Aggregated Channel power is the reference</li> <li>- Num of CC is 2 or more &amp; Carrier Allocation is Non-Contiguous: Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration</li> </ul>

The powers of carriers are not included in the reference power when their Measure Carriers are Off. When Measure Carriers of all the carriers in a sub-block are Off, the reference power and all the relative power results are **NAN**. Therefore, relative limits are not evaluated.

### Measurement Type = Total Power Ref

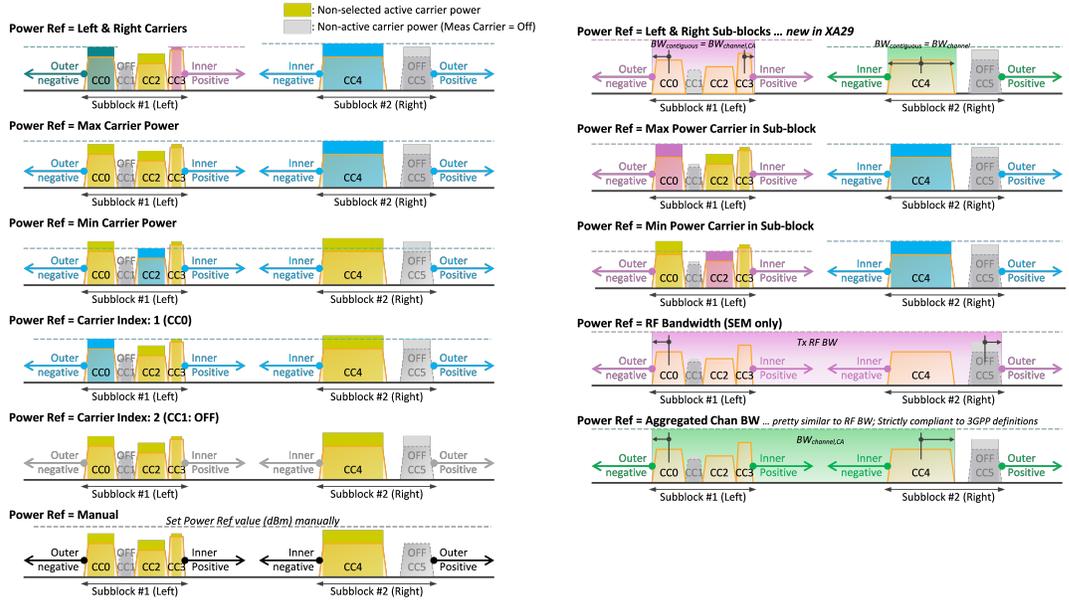

### Measurement Type = PSD Ref

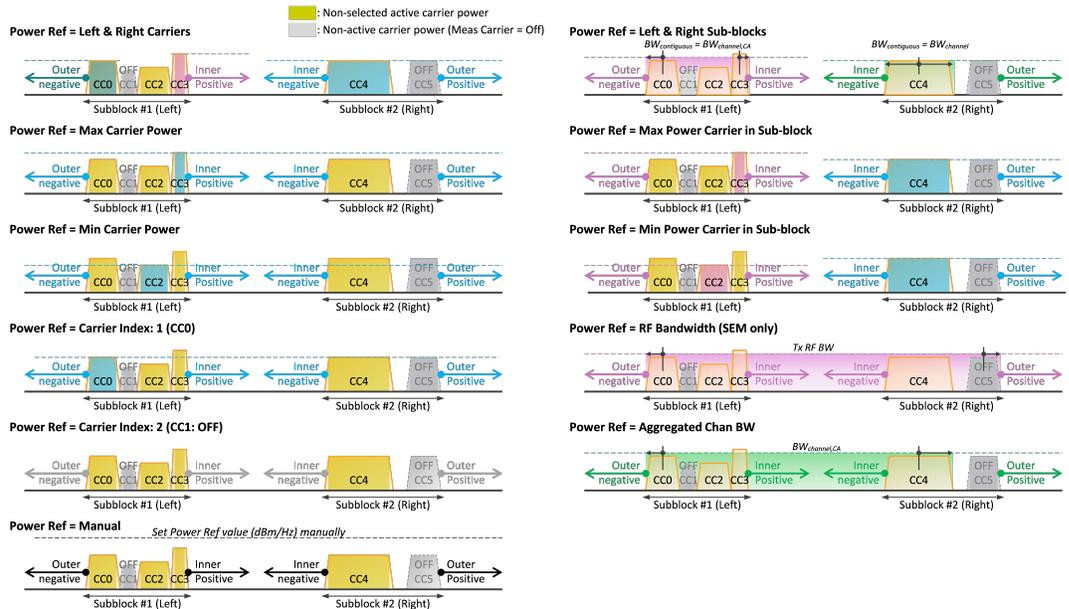

Remote

[ :SENSe ] :ACPower:CARRIER[1]:2:PREference:TYPE LRCarriers | MPCarrier | CINDEX

Command	<p>  MANual   MPCSubblock   ACBandwidth   TMCarrriers   MINPcarrier   MINSubblock   LRSubblocks</p> <p>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :PREFERENCE :TYPE ?</p> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<p>:ACP:CARR:PREF:TYPE CIND</p> <p>:ACP:CARR:PREF:TYPE?</p>
Notes	<p>Available only in MSR, LTEAFDD, LTEATDD and 5G NR Modes</p> <p><b>ACBandwidth</b> is available only in LTEAFDD, LTEATDD and 5G NR Modes</p> <p><b>TMCarrriers</b> is available only in MSR Mode</p> <p><b>MINPcarrier</b>, <b>MINSubblock</b>, and <b>LRSubblocks</b> are available only in 5G NR Mode</p> <p>Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored</p>
Preset	<b>MPCCarrier</b>
State Saved	Saved in instrument state

### Power Ref State (Remote Command Only)

Remote Command	<p>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :AUTO [ :STATE ] OFF   ON   0   1</p> <p>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :AUTO [ :STATE ] ?</p> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<p>:ACP:CARR:AUTO OFF</p> <p>:ACP:CARR:AUTO?</p>
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	Auto   Man
Backwards Compatibility SCPI	[ :SENSe ] :MCPower :CARRier [ 1 ]   2 :AUTO [ :STATE ]

### Total Power Ref

Sets manual total power reference.

This control has two different forms, depending on the currently-selected Mode:

- "Total Power Ref (Modes: SA, WCDMA, VMA, SRComms)" on page 681
- "Total Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)" on page 681

### Total Power Ref (Modes: SA, WCDMA, VMA, SRComms)

This is used when Power Ref is Manual and "[Measurement Type](#)" on page 676 is Total Power.

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2[:POWer] &lt;real&gt;</code> <code>[ :SENSe]:ACPower:CARRier[1] 2[:POWer]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR 10</code> <code>:ACP:CARR?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after measurement Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored The Unit Terminators differ depending on whether or not the mode supports Y Axis Unit and also which Y Axis Unit is selected
Dependencies	Available only when <b>Measurement Type</b> is <b>TPRef</b> , otherwise grayed-out
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-200 dBm/200 dBm
Backwards Compatibility SCPI	<code>[ :SENSe]:MCPower:CARRier[1] 2[:POWer]</code>

### Total Power Ref (Modes: LTEAFDD, LTEATDD, 5G NR, MSR)

Sets the multi-carrier power reference. This is used when Power Ref is Manual and "[Measurement Type](#)" on page 676 is Total Power.

When set to **Auto**, the carrier power result reflects the measured power value in the selected reference carrier.

When set to **Man**, the result is referenced to the last measured value, or you may specify the reference for the multi-carrier power measurement. Relative values are displayed, referenced to the "Power Reference" value.

Remote Command	<code>[ :SENSe]:ACPower:CARRier[1] 2[:POWer] &lt;real&gt;</code> <code>[ :SENSe]:ACPower:CARRier[1] 2[:POWer]?</code> Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink
Example	<code>:ACP:CARR 10</code> <code>:ACP:CARR?</code>

Notes	<p>Although the default value is defined, the value is recalculated by the measurement result just after measurement</p> <p>Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored</p> <p>The Unit Terminators differ depending on whether or not the mode supports Y Axis Unit and also which Y Axis Unit is selected</p>
Dependencies	Enabled when " <a href="#">Measurement Type</a> " on page 676 is Total Power and " <a href="#">Power Ref</a> " on page 676 is Manual
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-200 dBm/200 dBm
Backwards Compatibility SCPI	<code>[ :SENSe]:MCPower:CARRier[1] 2[:POWer]</code>

## PSD Ref

Sets manual PSD reference.

This control has two different forms, depending on the currently-selected Mode:

- "[PSD Ref \(Modes: SA, WCDMA, VMA, SRComms\)](#)" on page 682
- "[PSD Ref \(Modes: LTEAFDD, LTEATDD, 5GNR, MSR\)](#)" on page 683

### PSD Ref (Modes: SA, WCDMA, VMA, SRComms)

This is used when "[Power Ref](#)" on page 676 is Manual and "[Measurement Type](#)" on page 676 is PSD.

Sets the power spectral density in the carrier (main channel) that is used to compute the relative power spectral density values for the offsets when **Measurement Type** is PSD Ref.

Remote Command	<pre>[ :SENSe]:ACPPower:CARRier[1] 2:CPSD &lt;real&gt; [ :SENSe]:ACPPower:CARRier[1] 2:CPSD?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR:CPSD 25 :ACP:CARR:CPSD?</pre>
Notes	<p>Although the default value is defined, the value is recalculated by the measurement result just after measurement</p> <p>Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored</p>

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Dependencies	Available only when Measurement Type is <b>PSDRef</b> , otherwise grayed-out
Couplings	The value of PSD Ref is automatically converted when PSD Unit is changed
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-999/999

### Power Ref State (Backwards Compatibility SCPI)

Sets the Power Reference State to auto or manual.

Example	<pre>:ACP:CARR:AUTO OFF :ACP:CARR:AUTO? :MCP:CARR:AUTO ON :MCP:CARR:AUTO?</pre>
Notes	<p>For backwards compatibility with legacy SA and WCDMA, this command is supported</p> <p>When <b>ON</b>, corresponds to the Ref Carrier of the "Power Ref" on page 676 selection</p> <p>When <b>OFF</b>, corresponds to the Manual of the <b>Power Ref</b> selection</p>
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	<b>Auto Man</b>
Backwards Compatibility SCPI	<pre>[ :SENSe]:ACPower:CARRier[1] 2:AUTO[:STATE] OFF   ON   0   1 [:SENSe]:ACPower:CARRier[1] 2:AUTO[:STATE]? [:SENSe]:MCPower:CARRier[1] 2:AUTO[:STATE] OFF   ON   0   1 [:SENSe]:MCPower:CARRier[1] 2:AUTO[:STATE]?</pre>

### PSD Ref (Modes: LTEAFDD, LTEATDD, 5GNR, MSR)

Sets manual PSD reference. This is used when "Power Ref" on page 676 is **Manual** and "Measurement Type" on page 676 is **PSD**.

Sets the power spectral density in the carrier (main channel) that is used to compute the relative power spectral density values for the offsets when **Measurement Type** is set to **PSD Ref**. When the **PSD Ref** state is set to **Auto**, this will be set to the measured carrier power spectral density.

Remote Command	<pre>[ :SENSe]:ACPower:CARRier[1] 2:CPSD &lt;real&gt; [:SENSe]:ACPower:CARRier[1] 2:CPSD?</pre> <p>Subopcode: 1 = BTS/Downlink (Default), 2 = MS/Uplink</p>
Example	<pre>:ACP:CARR:CPSD 25</pre>

	<code>:ACP:CARR:CPSD?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after measurement  Note that Carrier subopcode 2 is not supported in some Modes. In those cases, Carrier subopcode 1 is used for both BTS and MS and commands with subopcode 2 are accepted without error but ignored
Dependencies	Enabled when " <a href="#">Measurement Type</a> " on page 676 is PSD Reference and <b>Power Ref</b> is Manual
Couplings	The value of PSD is automatically converted when PSD Unit is changed
Preset	0.0
State Saved	Saved in instrument state
Min/Max	-/+999

## PSD Unit

Sets the unit bandwidth for Power Spectral Density. The available units are dBm/Hz ([DBMHZ](#)) and dBm/MHz ([DBMMHZ](#)).

Remote Command	<code>:UNIT:ACPower:POWer:PSD DBMHZ   DBMMHZ</code> <code>:UNIT:ACPower:POWer:PSD?</code>
Example	<code>:UNIT:ACP:POW:PSD DBMMHZ</code> <code>:UNIT:ACP:POW:PSD?</code>
Dependencies	Enabled when " <a href="#">Measurement Type</a> " on page 676 is PSD Reference
Couplings	When the PSD unit is changed, the PSD reference result of <code>:MEAS READ FETCH:ACP[n]?</code> is also changed by the PSD unit basis (in either dBm/Hz or dBm/MHz)
Preset	<a href="#">DBMHZ</a>
State Saved	Saved in instrument state
Range	dBm/Hz   dBm/MHz

### 3.4.13.3 Radio

Contains controls to select link direction.

## Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Remote Command	<code>[ :SENSe]:RADio:STANdard:DIRectioN DLINK   ULINK</code> <code>[ :SENSe]:RADio:STANdard:DIRectioN?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

## eMTC Analysis

Enable/Disables the eMTC analysis function.

Remote Command	<code>[ :SENSe]:RADio:STANdard:EMTC[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:RADio:STANdard:EMTC[:STATe]?</code>
Example	<code>:RAD:EMTC:STAT OFF</code>
Dependencies	This parameter requires N9080EM3E license
Preset	OFF
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:EMTC[:STATe]</code>

## Interfering Signal Present

Sets whether interfering signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in ACP, SEM and Spurious Emissions.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:RADio:IMODulation:INTerference[:STATe]?</code>
Example	<code>:RAD:IMOD:INT 1</code> <code>:RAD:IMOD:INT?</code>
Preset	OFF

State Saved	Saved in instrument state
Range	Yes No

### Freq Offset from Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min/Max	0 Hz / 20.0 MHz

### Span

Sets the span of the interference signal for intermodulation tests.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min/Max	200 kHz / 20.0 MHz

### Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE NEGative   POSitive</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code> <code>:RAD:IMOD:INT:SIDE?</code>
Preset	POSitive
State Saved	Saved in instrument state

### Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- INNER – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- OUTER – The interfering signal exists at either of the outer regions

Remote Command	<code>[ :SENSe ]:RADio:IMODulation:INTerference:REGion INNER   OUTER</code> <code>[ :SENSe ]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	OUTer
State Saved	Saved in instrument state

#### 3.4.13.4 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe ]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe ]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

## Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

## Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

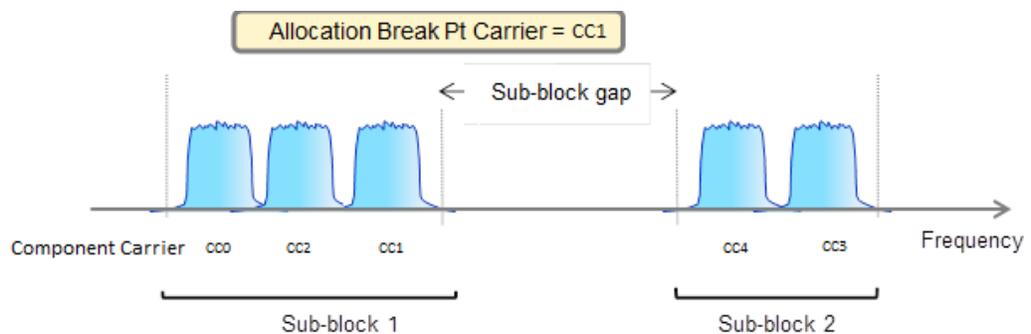

Remote Command `[[:SENSe]:CCARrier:CONFig:ALLocation:NCONTiguous:ABPoint CC0 | ... | CC4`

	<code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

### Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

### Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

### Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

### Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

### Non-Contiguous Break at

See ["Non-Contiguous Break at" on page 2246](#).

### System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0[...]:4:RADIo:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	--

	<code>[ :SENSe ] : CCARrier0   ...   4 : RADio : STANdard : BANDwidth ?</code>
Example	<code>:CCAR4 : RAD : STAN : BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe ] : RADio : STANdard : BANDwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe ] : CCARrier0   ...   4 [ :STATe ] OFF   ON   0   1</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0 ?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe ] : CCARrier&lt;n&gt; : FREQuency : OFFSet &lt;freq&gt;</code> <code>[ :SENSe ] : CCARrier&lt;n&gt; : FREQuency : OFFSet ?</code>
Example	<code>:CCAR4 : FREQ : OFFS 10MHz</code> <code>:CCAR4 : FREQ : OFFS ?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMAl   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:DGPU?</code>
Example	<code>:CCAR0:RAD:STAN:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:DGPU</code>

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

	<b>System Bandwidth</b>	<b>CHP Integ BW</b>
	1.4 MHz (B1M4)	1.4 MHz
	3 MHz (B3M)	3 MHz
	5 MHz (B5M)	5 MHz
	10 MHz (B10M)	10 MHz
	15 MHz (B15M)	15 MHz
	20 MHz (B20M)	20 MHz
	200 kHz(B200K)	200 kHz
Preset	5 MHz	
State Saved	Saved in instrument state	
Min	100 kHz	
Max	20 MHz	
Backwards Compatibility SCPI	[:SENSe]:CHPower:BANDwidth:INTEgration [:SENSe]:CHPower:BWIDth:INTEgration	

### ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	[:SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration <freq> [:SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration?
Example	:CCAR0:ACP:BAND:INT 20MHz :CCAR0:ACP:BAND:INT?
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

<b>System Bandwidth</b>	<b>BTS ACP Meas Noise BW</b>	<b>MS ACP Meas Noise BW</b>
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
3 MHz (B3M)	2.715 MHz	2.7 MHz
5 MHz (B5M)	4.515 MHz	4.5 MHz
10 MHz (B10M)	9.015 MHz	9.0 MHz
15 MHz (B15M)	13.515 MHz	13.5 MHz
20 MHz (B20M)	18.015 MHz	18.0 MHz
200 kHz(B200K)	180 kHz	180 kHz

Preset	4.515 MHz 4.5 MHz
State Saved	Yes
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:BANDwidth[:INTEgration]</code> <code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:BWIDth[:INTEgration]</code>

## SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ...   4:SEMAsk:BANDwidth[1]   2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ...   4:SEMAsk:BANDwidth[1]   2:INTEgration?</code>																								
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>																								
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS SEM Integ BW</th> <th>MS SEM Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Saved in instrument state																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:SEMAsk:BANDwidth[1]   2:INTEgration</code>																								

## Carrier Config Presets

Lets you configure the Component Carrier presets.

### Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

### Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

### Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code> <code>:CCAR:CONF:SPAC:DELTA?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

### ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:Bandwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:Bandwidth?</code>
Example	<code>:CCAR:CONF:ETC1:Band B5M</code> <code>:CCAR:CONF:ETC1:Band?</code>
Preset	B5M

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

### Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative - Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive - Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG</code> <code>:CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

### Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M</code> <code>:CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	---

	<code>[ :SENSe ] :CCARrier :CONFig :ETC3 :BANDwidth ?</code>
Example	<code>:CCAR :CONF :ETC3 :BAND B5M</code> <code>:CCAR :CONF :ETC3 :BAND ?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### 3.4.13.5 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

### System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command `RAD:STAN:PRES B5M` or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote	<code>[ :SENSe ] :RADio :STANdard :PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
--------	--

Command	
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:RADio:STANdard:PRESet:ULDL?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

## Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

### Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[:SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[:SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

### Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>						
Example	<code>:RAD:MINT 1</code>						
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes						
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>						
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH: <table border="1" data-bbox="407 1104 1406 1234" style="margin-left: 20px;"> <thead> <tr> <th>Meas NPRACH</th> <th>Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						
Preset	1						
State Saved	Yes						
Min	1						
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise						
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTime:MINInterval</code>						

## CP Length

Specifies whether the cyclic prefix is configured as NORMAL or EXTENDED for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:CPLength NORMal   EXTended</code> <code>[ :SENSe]:RADio:CPLength?</code>
Example	<code>:RAD:CPL NORM</code>
Notes	The backwards compatible SCPI command <code>[ :SENSe]:PVTIme:CPLength</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to “200 kHz (NB-IoT)” and Direction is “uplink”
Couplings	Set to NORMal when System BW is set to “200 kHz (NB-IoT)”
Preset	NORMal
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTIme:CPLength</code>

### Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe]:RADio:MEASure?</code>
Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

### Reference Config

Specifies which component carrier’s ULDL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code>
----------------	--

	<code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.4.13.6 Advanced

Contains controls for setting advanced functions of the instrument.

This tab does *not* appear in the following instruments:

- EXM
- VXT model M9420A

### Phase Noise Opt

Selects the LO (local oscillator) phase noise behavior for various operating conditions.

Remote Command	<code>[ :SENSe]:ACPower:FREQuency:SYNThesis[:STATe] 1   ...   5</code> For the meaning of each numeric option value, see " <a href="#">Parameter Options, Installed Options, Auto Rules &amp; Ranges</a> " on page 705 below <code>[ :SENSe]:ACPower:FREQuency:SYNThesis[:STATe]?</code>
Example	<code>:ACP:FREQ:SYNT 1</code> <code>:ACP:FREQ:SYNT?</code>
Dependencies	Does not appear in all models. For models that do not display this control, the SCPI command is accepted for compatibility (although no action is taken) Not available in VXT models M9410A/11A/15A
Preset	Because this function is in <b>Auto</b> after preset, the state of this function after <b>Preset</b> will be automatically calculated
State Saved	Saved in instrument state
Range	See " <a href="#">Ranges</a> " on page 709 below  Auto Function
Remote Command	<code>[ :SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe]?</code>

Example	<code>:ACP:FREQ:SYNT:AUTO 1</code> <code>:ACP:FREQ:SYNT:AUTO?</code>
Preset	ON

### Parameter Options, Installed Options, Auto Rules & Ranges

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster without regard to noise or with optimum noise characteristics without regard to speed.

#### Parameter Values Summary

Option	#	Description
"Balanced" on page 706	1	<ul style="list-style-type: none"> <li>- In instruments with EPO, balances close-in phase noise with spur avoidance</li> <li>- In instruments without EPO optimizes phase noise for small frequency offsets from the carrier</li> </ul>
"Best Wide-offset" on page 706	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 707	3	Optimizes LO for tuning speed
"Best Close-in" on page 706	4 or 1*	<ul style="list-style-type: none"> <li>- In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance</li> <li>- In instruments without EPO, this setting is accepted but no action is taken</li> </ul>
"Best Spurs" on page 706	5	<ul style="list-style-type: none"> <li>- In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance</li> <li>- In instruments without EPO, this setting is accepted but no action taken</li> </ul>
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

\*Dependent on Option EPO installation. See "Best Close-in" on page 706 below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, "Fast Tuning" on page 707 is identical in effect to "Best Close-in" on page 706.

## Best Close-in

Without option EPO

:FREQ:SYNT 1

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset <20 kHz]

With option EPO

:FREQ:SYNT 4

In instruments with Option EPO, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for close-in measurements than the "Balanced" on page 706 setting, parameter 1 selects "Balanced" on page 706 in EPO instruments, in the interests of optimizing code compatibility across the family. Parameter 4 selects "Best Close-in" on page 706, which is usually not as good a choice as "Balanced" on page 706.

## Balanced

:FREQ:SYNT 1

In instruments with EPO, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within  $\pm 1$  octave around 400 kHz offset. The spurs will always be below  $-70$  dBc.

## Best Spurs

:FREQ:SYNT 5

In instruments with EPO, the LO is configured for better phase noise than the "Best Wide-offset" on page 706 case close to the carrier, but the configuration has 11 dB worse phase noise than the "Best Close-in" on page 706 case mostly within  $\pm 1$  octave around 300 kHz offset. Spurs are even lower than in the "Balanced" on page 706 case at better than  $-90$  dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

## Best Wide-offset

:FREQ:SYNT 2

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within  $\pm 1$  octave around 400 kHz offset. The spurs will always be below  $-70$  dBc.

### Fast Tuning

`:FREQ:SYNT 3`

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term "[Fast Tuning](#)" on page 707 refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EP0, this is the same configuration as "[Best Spurs](#)" on page 706. It is available with the "[Fast Tuning](#)" on page 707 label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a "[Fast Tuning](#)" on page 707 option, the settings for "[Best Close-in](#)" on page 706 are used if "[Fast Tuning](#)" on page 707 is selected. This gives the fastest possible tuning for that hardware set.)

### Auto

`:FREQ:SYNT:AUTO ON`

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

## Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
EPO Models with option EPO have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)	Center frequency is < 699.9 kHz Span > 114.1 MHz, <i>or</i> RBW > 800 kHz RBW > 290 kHz, <i>or</i> Span > 4.2 MHz  Other conditions	"Balanced" on page 706 "Fast Tuning" on page 707 "Best Wide-offset" on page 706 "Balanced" on page 706
EP1 Models with option EP1 have a two-loop local oscillator, which switches to a single loop for fast tuning (available in PXA)	Span > 44.44 MHz, <i>or</i> RBW > 1.9 MHz, <i>or</i> Source Mode is set to "Tracking" Center frequency is < 195 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 1.3 MHz <i>and</i> RBW <= 75 kHz All other conditions	"Fast Tuning" on page 707 "Best Close-in" on page 706 "Best Wide-offset" on page 706
EP2 Models with option EP2 use a different loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 706; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)	CF < 130 kHz, <i>or</i> CF > 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 40 kHz Span > 22 MHz, <i>or</i> RBW > 400 kHz, <i>or</i> CF ≤ 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 23 kHz All other conditions	"Best Close-in" on page 706 "Fast Tuning" on page 707 "Best Wide-offset" on page 706
EP4 (available in CXA for improved phase noise)	Span > 101 MHz <i>or</i> RBW > 1.15 MHz <i>or</i> Source Mode is set to "Tracking" CF is < 109 kHz <i>or</i> CF >= 4.95 MHz <i>and</i> Span <= 666 kHz <i>and</i> RBW < 28 kHz	"Fast Tuning" on page 707 "Best Close-in" on page 706

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Models with Option	Conditions	Selection
	All other conditions	"Best Wide-offset" on page 706
All Other Models Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 707 are actually the same as "Best Close-in" on page 706, but the rules are implemented this way so that the user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning	Span > 12.34 MHz, <i>or</i> RBW > 250 kHz, <i>or</i> Source Mode is set to "Tracking"	"Fast Tuning" on page 707
	Center frequency is < 25 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 141.4 kHz <i>and</i> RBW <= 5 kHz	"Best Close-in" on page 706
	All other conditions	"Best Wide-offset" on page 706

In all the above cases:

- The RBW to be used in the calculations is the equivalent -3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

## Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP0	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
	2	Best Wide-offset	[offset > 800 kHz]
	3	Fast Tuning	[same as Best Close-In]
EP1	1	Best Close-in	[offset < 140 kHz]
	2	Best Wide-offset	[offset > 160 kHz]
	3	Fast Tuning	[single loop]

Option	Option #	Phase Noise Option	Range
EP2, EP3, EP5	1	Best Close-in	[offset < 70 kHz]
	2	Best Wide-offset	[offset > 100 kHz]
	3	Fast Tuning	[medium loop bw]
EP4	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

## Noise Correction

Sets the measurement noise floor correction function to On or Off. On enables measurement noise correction when the measured power in the reference channel or any offset is close to the noise floor of the instrument. Off turns these corrections off.

In instruments with the noise floor extensions option (option NFE) enabled, there are two ways to compensate for the analyzer noise floor: through the NFE and through this noise corrections control. The techniques and results are similar but not identical. NFE uses a model of the analyzer noise floor, adapted to the current conditions such as center frequency, RBW and ambient temperature. The parameters of this model are measured in the factory or field calibration in a highly averaged measurement. So, they are consistent. However, because the model is imperfect, the corrections are imperfect. Using NFE is very convenient; the user need not wait for the ACP noise corrections calibration to occur. The ACP NC calibration, though, has advantages of being measured very recently, at the current ambient, and the exact center frequency, with no requirement that the model be perfect. So, it will often (but not always) have slightly better dynamic range. If both ACP NC is turned on and NFE is turned on, the instrument uses only the ACP NC. When ACP NC is turned off, but NFE is on, NFE is used, and performance should still be excellent.

When **Meas Method** is Fast Power, HW supported noise correction works when either or both of Noise Correction and NFE is on.

Remote Command	<code>[ :SENSe ] :ACPower:CORRection:NOISe [ :AUTO ] OFF   ON   0   1</code> <code>[ :SENSe ] :ACPower:CORRection:NOISe [ :AUTO ] ?</code>
Example	<code>:ACP:CORR:NOIS OFF</code> <code>:ACP:CORR:NOIS?</code>
Dependencies	Not available when " <b>Meas Method</b> " on page 582 is RBW or Fast
Preset	0
State Saved	Saved in instrument state
Range	OFF   ON

## Noise Floor Extension

Lets you configure **Noise Floor Extension** (NFE). All Modes that support NFE let you set it on or off. Additionally, some Modes support two “on” states for NFE, **Full** and **Adaptive**, as described below.

## Adaptive Option Support

At present (Release: X-Apps 2024), support for **Adaptive** NFE is as follows:

Mode	Measurements	Supports Adaptive NFE?
BT	ACP, IBEM, IBSP	No
CQM	MON	Yes
EDGE GSM	EORF, ETSP, MON	No
EMI	APD, DAN, FSC, MON, RTSC, SCH	Yes
LTEAFDD	PVT	No
LTEATDD	PVT	No
MSR	ACP, CHP, MON, OBW, SEM, SPUR	Yes
NR5G	PVT	No
PNOISE	LPL, MON, SFR	No
SA	SAN	Yes
SRCOMMS	ACP, CHP, MON, OBW, SEM, SPUR	Yes
VMA	ACP, CHP, OBW, SEM, SPUR	Yes
WCDMA	ACP, CHP, MON, OBW, SEM, SPUR	Yes
WLAN	CHP, MON, OBW, SEM, SPUR	Yes

The menus and command options are as follows:

NFE State	Modes with Adaptive NFE	Modes without Adaptive NFE	SCPI
Off	Off	Off	See <a href="#">"NFE On/Off Command" on page 713</a>
On	Full	On	
Adaptive	Adaptive	n/a	See <a href="#">"Adaptive NFE Command" on page 713</a>

As shown in the table above, the **On** state (in Modes that do not support **Adaptive** NFE) matches the **Full** state in Modes that *do* support **Adaptive** NFE.

To maintain SCPI backwards compatibility, the existing command to turn NFE on or off is retained, and a new command is added to set the state to turn **AdaptiveON** or **OFF**:

- `[ :SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0` is retained, with the default changed to **ON** for Modes that support **Adaptive** NFE
- `[ :SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0` is added (for certain Modes), default = **ON**

When NFE is **On** or **Full**, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

NFE works with any RBW, VBW, detector, any setting of **Average Type**, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to **Average** or **Peak**). It works best with extreme amounts of smoothing, and with the average detector, with the **Average Type** set to **Power**.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the **Average** detector, results are better with long sweep times and fewer trace averages. When using the **Sample** detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

NOTE

**Noise Floor Extension** has no effect unless the RF Input is selected, so when **External Mixing** is selected, it does nothing.

---

For more details, see "[Optimal Detector & Averaging Selections](#)" on page 714 and "[Recalibration of Noise Floor](#)" on page 715.

### Pros & Cons of Adaptive NFE

**Adaptive** NFE provides an alternative to fully-on or fully-off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. **Adaptive** NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement—those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the fully-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

In **Adaptive** NFE, there is not the same dramatic visual impact on the noise floor as there is in **Full** NFE. **Adaptive** NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. **Adaptive** NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the fully-off case; and when lots of averaging is being performed, the signal displays more like the **Full** NFE case.

**Adaptive** NFE is recommended for general-purpose use. For fully-ATE (automatic test equipment) applications, where possible distraction of the instrument user is not a risk, **Full** NFE is recommended.

### NFE On/Off Command

Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOor ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear. In those cases, the SCPI command is accepted without error, but has no effect
Couplings	When NFE is enabled in any Mode manually, a prompt is displayed reminding you to perform the <b>Characterize Noise Floor</b> operation if it is needed When NFE is enabled through SCPI, and a <b>Characterize Noise Floor</b> operation is needed, an error is entered in the system error queue
Preset	Unaffected by <b>Mode Preset</b> . Turned <b>ON</b> at startup and by <b>Restore Mode Defaults</b> in Modes that support <b>Adaptive</b> . Turned <b>OFF</b> at startup and by <b>Restore Mode Defaults</b> in Modes that do <i>not</i> support <b>Adaptive</b> In Modes that support <b>Adaptive</b> NFE, the default (preset) state of NFE is <b>Adaptive</b> . In Modes that do not support <b>Adaptive</b> NFE, the default state of NFE is <b>Off</b>
State Saved	No

### Adaptive NFE Command

Only effective in instruments with the NFE or NF2 license installed, and in Modes that support **Adaptive** NFE. For coverage, see "[Adaptive Option Support](#)" on page 711 above.

For all other cases, the SCPI command below is accepted without error, but has no effect.

Remote	<code>[ :SENSe]:CORRection:NOISe:FLOor:ADApTive ON   OFF   1   0</code>
--------	---

Command	<code>[ :SENSe ] :CORRection:NOISe:FLOor:ADAPtive?</code>
Example	First turn NFE on, this is <b>Full</b> mode <code>:CORR:NOIS:FLO ON</code>  Then set it to <b>Adaptive</b> <code>:CORR:NOIS:FLO:ADAP ON</code>
Couplings	To maintain backwards compatibility, sending <code>:CORR:NOIS:FLO ON</code> turns NFE <b>AdaptiveOFF</b> . To turn <b>Adaptive</b> on, you must issue the commands in the proper order, as shown in the example above
Preset	Not affected by <b>Mode Preset</b> , but set to <b>ON</b> at startup and by <b>Restore Mode Defaults</b>
State Saved	No

### Optimal Detector & Averaging Selections

Note that some measurements do not allow you to switch the **Detector** type (which is set by default to **Average**), so the discussion of detector types here is irrelevant for those measurements. Similarly, some measurements do not allow you to set **Average Type** (set by default to **LOG**), so that discussion here is irrelevant in those cases.

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to obtain the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when **Detector** is **Average** and **Average Type** is set to **Power (RMS)**.

For best operation, **AverageDetector** (default) and **Average Type. = Power** are recommended, as already stated. In other cases, operation is often not quite as good but still highly effective. Other **Detector** options, when available, behave as follows:

**Positive Peak** The noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage

**Positive Peak** is one example of processing that varies with detector to give good

### 3 LTE & LTE-A TDD Mode

#### 3.4 ACP Measurement

	estimates of the signal level without the analyzer noise
	For pulsed-RF, <b>Positive Peak</b> can still give excellent effectiveness
	FFT analysis does not work well, and does not perform NFE well, with pulsed-RF signals, so this combination is <i>not</i> recommended
<b>Negative Peak</b>	Not very useful
<b>Sample</b>	Works well, but never better than <b>Average</b> , because it does not smooth as well
<b>Normal</b>	A combination of peak and negative peak behaviors, and works about as well as these

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points makes the buckets longer.

For best operation, **Average Type = Power (RMS)** is optimal (when this option is available). When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. Using NFE with **Average Type = Log-Power (LOG)** is not synergistic, though; NFE with **Average Type = Power (RMS)** works a little better than NFE with **LOG**.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of  $-174$  dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that exceeds the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

#### Recalibration of Noise Floor

In instruments with the NF2 license installed, the calibrated noise floor used by **Noise Floor Extension** should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, *and* once every calendar year. To do this, use "**Characterize Noise Floor**" on page 2392, under **System, Alignments, Advanced**. If you have not done this yourself at the recommended interval, then when you turn on **Noise Floor Extension**, the instrument will prompt you to do so with a dialog stating:

*This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week*

If you cancel, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

## Fast Power RBW Mode

Specifies RBW behavior of Fast Power under **Meas Method**.

Option	SCPI	Description
Best Speed	<code>SPEed</code>	The acquisition RBW is set to be configured for best speed. The RBW is automatically calculated, and is not configurable
Explicit	<code>EXPLicit</code>	You can configure RBW manually

---

Remote Command	<code>[ :SENSe]:ACPower:BANDwidth[:RESolution]:FPOWer:MODE SPEed   EXPLicit</code> <code>[ :SENSe]:ACPower:BANDwidth[:RESolution]:FPOWer:MODE?</code>	
Example	<code>:ACP:BAND:FPOW:MODE EXPL</code> <code>:ACP:BAND:FPOW:MODE?</code>	
Dependencies	Grayed-out when " <b>Meas Method</b> " on page 582 is not Fast Power Not available in VXT models M9410A/11A/15A	
Couplings	If <code>EXPLicit</code> is selected, " <b>Res BW</b> " on page 553 is configurable. If not, <b>Res BW</b> is grayed-out	
Preset	<code>SPEed</code>	
State Saved	Saved in instrument state	

## Fast Power IF Gain Offset

Lets you optimize for dynamic range versus input signal level.

Remote Command	<code>[ :SENSe]:ACPower:IF:GAIN:FPOWer &lt;integer&gt;</code> <code>[ :SENSe]:ACPower:IF:GAIN:FPOWer?</code>	
Example	<code>:ACP:IF:GAIN:FPOW 10</code> <code>:ACP:IF:GAIN:FPOW?</code>	
Dependencies	Grayed-out when " <b>Meas Method</b> " on page 582 is not Fast Power Not available in VXT models M9410A/11A/15A	
Preset	0	
State Saved	Saved in instrument state	
Min/Max	-20/20	

## Integration BW

Selects an Integration BW passband from either -3 dB (**DB3**) or -6 dB (**DB6**).

Remote Command	<code>[ :SENSe]:ACPower:FILTer:BANDwidth[:INTegration] DB3   DB6</code> <code>[ :SENSe]:ACPower:FILTer:BANDwidth[:INTegration]?</code>	
----------------	---	--

Example	<code>:ACP:FILT:BAND DB3</code> <code>:ACP:FILT:BAND?</code>
Dependencies	Applicable for carriers and offsets whose filter method is not RRC, and when <a href="#">"Meas Method" on page 582</a> is other than <b>RBW</b>
Preset	<b>DB3</b>
State Saved	Saved in instrument state
Range	-3 dB -6 dB

### 3.4.13.7 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, ["Global Center Freq" on page 2276](#)) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

### Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when ["Restore Defaults" on page 2278](#) is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENTer ALL   NONE</code> <code>:INSTrument:COUPle:FREQuency:CENTer?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code>

	<code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL   NONE</b>
Preset	<b>OFF</b>
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:EMC:STANdard ALL   NONE</code> <code>:INSTrument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL   NONE</b>

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF :INSTrument:COUPle:FREQuency:BAND:EXTend?
Example	:INST:COUP:FREQ:BAND:EXT 1 :INST:COUP:FREQ:BAND:EXT?
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	ON OFF

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	:INSTrument:COUPle:DEFault
Example	:INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault

### 3.4.13.8 Offset RRC Weighting (Backwards Compatibility SCPI)

Example	:ACP:FILT OFF :ACP:FILT?
Couplings	This command is an alias of: [:SENSe]:ACPower:OFFSet[1] 2:LIST:FILTer[:RRC][:STATe]  Sending the command sets values of all offsets for BS and MS, but the query always returns a value of BS Offset A
Preset	SA, LTEAFDD, LTEATDD, MSR <b>OFF</b> WCDMA <b>ON</b>
State Saved	Yes
Backwards Compatibility SCPI	[:SENSe]:ACPower:FILTer[:RRC][:STATe] OFF   ON   0   1 [:SENSe]:ACPower:FILTer[:RRC][:STATe]? [:SENSe]:ACPR:FILTer[:RRC][:STATe] [:SENSe]:MCPower:FILTer[:RRC][:STATe]

### 3.4.13.9 Offset Filter Alpha (Backward Compatibility SCPI)

Example	<code>:ACP:FILT:ALPH 0.5</code> <code>:ACP:FILT:ALPH?</code>
Couplings	This command is an alias of: <code>[ :SENSe]:ACPower:OFFSet[1]   2:LIST:FILTer:ALPHa</code> Sending the command sets values of all offsets for BS and MS, but the query always returns a value of BS Offset A
Preset	0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.00
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:FILTer[:RRC]:ALPHa &lt;real&gt;</code> <code>[ :SENSe]:ACPower:FILTer[:RRC]:ALPHa?</code> <code>[ :SENSe]:ACPR:FILTer[:RRC]:ALPHa</code> <code>[ :SENSe]:MCPower:FILTer[:RRC]:ALPHa</code>

### 3.4.13.10 Method for Carrier (Backward Compatibility SCPI)

Example	<code>:ACP:CARR2:LIST:METH RRC</code> <code>:ACP:CARR2:LIST:METH?</code>								
Notes	Maximum of Array length depends on the number of carriers								
Couplings	This command is an alias of: <code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:FILTer[:RRC][:STATE]</code> The enum value translates as follows: <ul style="list-style-type: none"> <li>- RRC Weighted = <b>1   ON</b></li> <li>- Integ BW = <b>0   OFF</b></li> </ul> Maximum of Array length depends on the number of carriers								
Preset	<table border="1"> <thead> <tr> <th>Modes</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>IBW</td> </tr> <tr> <td>WCDMA</td> <td>RRC</td> </tr> <tr> <td>LTEAFDD, LTEATDD, MSR</td> <td>IBW</td> </tr> </tbody> </table>	Modes	Value	SA	IBW	WCDMA	RRC	LTEAFDD, LTEATDD, MSR	IBW
Modes	Value								
SA	IBW								
WCDMA	RRC								
LTEAFDD, LTEATDD, MSR	IBW								
State Saved	Saved in instrument state								
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:METHod IBW   RRC, ...</code> <code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:METHod?</code>								

### 3.4.14 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

#### 3.4.14.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

#### Sweep Time

Controls the time the instrument takes to sweep the current frequency span in swept measurements, displays the sweep time in swept measurements, and displays the equivalent Sweep Time in FFT measurements.

When **Sweep Time** is in Auto, the instrument computes a time that will give accurate measurements based on other settings, such as RBW and VBW.

You can select a shorter sweep time to improve the measurement throughput (with some potential unspecified accuracy reduction), but the **Meas Uncal** indicator will appear if the sweep time you set is less than the calculated Auto Sweep time.

You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters.

---

NOTE

Significantly faster sweep times are available with Option FS1.

---

NOTE

The **Meas Uncal** (measurement uncalibrated) warning is displayed in the Status Bar at the bottom of the screen when the manual Sweep time entered is faster than the time computed by the instrument's Sweep time equations, that is, the Auto Sweep Time. The instrument's computed Sweep time will provide accurate measurements; if you sweep faster than this your measurements may be inaccurate. A **Meas Uncal** condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW.

---

NOTE

On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate. It is the measurement's turnaround time, which is the sum

---

of signal acquisition time, FFT time, and other overhead time, to complete the entire span of the measurement. If you need to specify the same “Sweep Time” as you would for sweeping hardware, send `[ :SENSe ] : <meas> : SWEep : TIME <time>`. The measurement emulates the “Sweep Time” effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using Minimum Acquisition Time, which provides better control.

Remote Command	<code>[ :SENSe ] : &lt;meas&gt; : SWEep : TIME &lt;time&gt;</code> <code>[ :SENSe ] : &lt;meas&gt; : SWEep : TIME ?</code>
Example	Channel Power measurement: <code>:CHP : SWE : TIME 25ms</code> <code>:CHP : SWE : TIME ?</code>
Notes	In the ACP measurement in WCDMA Mode, this parameter is preset by <b>Meas Method</b> selection. Preset values are as follows: <ul style="list-style-type: none"> <li>- IBW: 29 ms</li> <li>- IBWR: 108 ms</li> <li>- FAST 7.5 ms</li> </ul>
Dependencies	On non-sweeping hardware, this control is grayed out, and the Auto/Man toggle disappears. The read-only control shows estimated sweep time In those instruments, " <a href="#">Minimum Acquisition Time</a> " on page 2127 is available
Couplings	Coupled to <b>Span</b> , <b>RBW</b> , <b>VBW</b> , and <b>Sweep Time Rules</b> when <b>Sweep Time</b> is set to Auto; <b>Sweep Time</b> changes when these parameters are changed When you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b>
Preset	Automatically Calculated unless noted below WCDMA Mode <ul style="list-style-type: none"> <li>- Channel Power: 1.0 msOBW: 32.6 ms</li> <li>- ACP: 29 ms</li> </ul>
State Saved	Saved in instrument state
Min	Other than non-sweeping hardware: Typically, 1 ms Non-sweeping hardware: N/A In the ACP measurement, when <b>Meas Method</b> is <b>Fast Power</b> , the minimum sweep time is span-dependent and automatically calculated
Max	Other than non-sweeping hardware: 4000 s Non-sweeping hardware: N/A
Annotation	The sweep time is displayed in the lower-right corner of the screen. The number of points is displayed parenthetically, as: Sweep 13.3 ms (1001 points)

	A “#” mark appears before “Sweep” in the annotation when it is switched from Auto to Manual coupling
Status Bits/OPC dependencies	Meas Uncal is Bit 0 in the register: <code>STATus:QUEStionable:INTEgrity:UNCalibrated</code>  Auto Function
Remote Command	<code>[ :SENSe]:&lt;meas&gt;:SWEep:TIME:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:&lt;meas&gt;:SWEep:TIME:AUTO?</code>
Example	Channel Power measurement: <code>:CHP:SWE:TIME:AUTO OFF</code> <code>:CHP:SWE:TIME:AUTO?</code>
Preset	WCDMA Mode <code>OFF</code> All others <code>ON</code>

### Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides Span into multiple chunks if needed. Therefore, the total signal acquisition time for the entire Span is:

$$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$$

When in Auto, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<code>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME &lt;time&gt;</code> <code>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME?</code>  <code>&lt;meas&gt;</code> is the identifier for the current measurement; any one of <code>CHPower- ACPower OBwidth MONitor</code>
Example	Channel Power measurement <code>:CHP:SWE:ACQ:TIME 500 ms</code>

	<code>:CHP:SWE:ACQ:TIME?</code>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to <b>Span</b> , <b>RBW</b> , and <b>VBW</b> when in the Auto state When you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b>
Preset	Automatically calculated
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks
Auto Function	
Remote Command	<code>[[:SENSe]:&lt;meas&gt;:SWEep:ACQquisition:TIME:AUTO OFF   ON   0   1</code> <code>[[:SENSe]:&lt;meas&gt;:SWEep:ACQquisition:TIME:AUTO?</code> <code>&lt;meas&gt;</code> is the identifier for the current measurement; any one of <code>CHPower-</code> <code>ACPower OBWidth MONitor</code>
Example	Channel Power measurement: <code>:CHP:SWE:ACQ:TIME:AUTO OFF</code>
Preset	<code>ON</code>

## Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 725

Remote Command	<code>:INITiate:CONTinuous OFF   ON   0   1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into <b>Single</b> measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into <b>Continuous</b> measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	<code>ON</code> Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to <code>ON</code> , but <code>*RST</code> sets <code>:INIT:CONT</code> to <code>OFF</code>
State Saved	Saved in instrument state
Annunciation	The <b>Single/Continuous</b> icon in the Meas Bar changes depending on the setting:

- 
- A line with an arrow is **Single**
  - A loop with an arrow is **Continuous**
- 

Backwards  
Compatibility  
Notes

X-Series A-models had **Single** and **Cont** hardkeys in place of the **SweepSingleCont** softkey. In the X-Series A-models, if in single measurement, the **Cont** hardkey (and **INIT:CONT ON**) switched to continuous measurement, but never restarted a measurement and never reset a sweep

X-Series B-models have a **Cont/Single** toggle control instead of **Single** and **Cont** hardkeys, but it is still true that, if in single measurement, the **Cont/Single** toggle control never restarts a measurement and never resets a sweep

### More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the <b>Average/Hold Num</b>, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used both before and after the <b>Average/Hold Num</b> is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>
Single Mode	<p>The instrument takes a single sweep when in <b>Single</b> mode, or if in average or Max/Min Hold, or if there is a <b>Waterfall</b> window displayed, it takes multiple sweeps until the average/hold count reaches the <b>Average/Hold Num</b>, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state

See "**Restart**" on page 2279 for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single**

does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC:AVER:TCON UP**.

## Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending **:INIT:IMM**
- Sending **:INIT:REST**

See "[More Information](#)" on page 727

Remote Command	<b>:INITiate[:IMMEDIATE]</b> <b>:INITiate:REStart</b>
Example	<b>:INIT:IMM</b> <b>:INIT:REST</b>
Notes	<b>:INIT:REST</b> and <b>:INIT:IMM</b> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <b>STATUS:OPERation</b> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <b>STATUS:QUESTionable</b> register bit 9 ( <b>INTegrity</b> sum) is cleared The <b>SWEEPING</b> bit is set The <b>MEASURING</b> bit is set
Backwards	For Spectrum Analysis Mode in ESA and PSA, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command

---

Compatibility Notes	restarted trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> In X-Series, the <b>Restart</b> hardkey and the <code>:INIT:REST</code> command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well
---------------------	---

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command `:CALC:AVER:TCON UP`.

## Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
<b>Clear/Write</b> pressed (even if already in Clear/Write)	Set to mintracevalue
<b>Max Hold</b> pressed (even if already in Max Hold)	Set to mintracevalue
<b>Min Hold</b> pressed (even if already in Min Hold)	Set to maxtracevalue
<b>Trace Average</b> pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
<b>Restart</b> pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

## Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count  $k$  to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

## Averaging

The weighting factor used for averaging is  $k$ . This  $k$  is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This  $k$  is used for comparisons with  $N$ , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold,  $K$ , shows the count for the sweep (data acquisition) in progress.  $K = k + 1$ , with a limit of  $N$ . The displayed value  $K$  changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

## Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>
Notes	If <code>:INIT:CONT</code> is <b>ON</b> , then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met If <code>:INIT:CONT</code> is <b>OFF</b> , then <code>:INIT:IMM</code> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, <code>:ABORT</code> is equivalent to the <b>Restart</b> key Not all measurements support this command
Status Bits/OPC dependencies	The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared, <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATUS:QUESTionable</code> register bit 9 ( <b>INTEGRity</b> sum) is cleared Since all the bits that feed into OPC are cleared by <code>:ABORT</code> , the Abort command will cause the <code>*OPC</code> query to return true

### Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

This value is also displayed in the result trace window.

The value returned is the estimated turnaround time of each measurement cycle, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire span of each measurement cycle.

Remote Command	<code>[ :SENSe ] : &lt;meas&gt; : SWEep : ETIME?</code>  <code>&lt;meas&gt;</code> is the identifier for the current measurement; any one of <code>CHPower -   ACPower   OBwidth   MONitor</code>
Example	Channel Power measurement <code>:CHP : SWE : ETIME?</code>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

### 3.4.14.2 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument.

### Sweep Time Rules

Switches the instrument between **NORMa1** and **ACCuracy** sweep states.

Setting **Auto Sweep Time** to **ACCuracy** results in slower sweep times, usually about three times as long, but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **ACCuracy**.

Additional amplitude errors that occur when **Auto Sweep Time** is set to **NORMa1** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **NORMa1** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **NORMa1** on a **Preset**. This means that in the Preset state, instrument amplitude accuracy specifications do not apply.

Remote Command	<code>[ :SENSe ] : ACPower : SWEep : TIME : AUTO : RULEs NORMa1   ACCuracy</code>  <code>[ :SENSe ] : ACPower : SWEep : TIME : AUTO : RULEs?</code>
Example	<code>:ACP : SWE : TIME : AUTO : RUL NORM</code>  <code>:ACP : SWE : TIME : AUTO : RUL?</code>

Dependencies	Does not appear in Spectrum Analyzer Mode in VXT model M9420A	
Preset	<b>Modes, Instruments</b>	<b>Value</b>
	SA, WCDMA, LTEAFDD, LTEATDD, MSR	ACCuracy
	5G NR	NORMal
	5G NR in VXT models M9410A/11A/15A	ACCuracy
State Saved	Saved in instrument state	
Range	NORMal   ACCuracy	

## Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time. However, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the instrument. Since markers are read at the point location, the marker reading may change. The sweep time resolution changes. Trace data for all the traces is cleared and, if **Sweep** is in **Cont**, a new trace is taken. If any trace is in average or hold, the averaging starts over.

Because of sweep time quantization issues, the knob and up/down keys cannot be used to adjust the number of points.

When in a split screen display each window may have its own value for points.

When sweep points is changed, an informational message "Sweep points changed, all traces cleared" is displayed and in 5G NR Mode, **Auto Sweep Points** is set to **OFF** (0).

Remote Command	<code>[ :SENSe]:ACPower:SWEEp:POINts &lt;integer&gt;</code> <code>[ :SENSe]:ACPower:SWEEp:POINts?</code>
Example	<code>:ACP:SWE:POIN 500</code>

:ACP:SWE:POIN?					
Dependencies	<p>Not available when Signal ID is On in External Mixing</p> <p>Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given</p> <p>Not displayed in Modes that do not support <b>Swept</b></p> <p>This parameter is automatically calculated and not configurable when <b>Meas Method</b> is set to Fast Power</p>				
Couplings	<p>Whenever the number of sweep points change:</p> <ul style="list-style-type: none"> <li>- All trace data is erased</li> <li>- Any traces with Update Off will also go to Display OffSweep time is re-quantized</li> <li>- Any limit lines that are on will be updated</li> <li>- If averaging/hold is on, averaging/hold starts over</li> <li>- <b>Auto Sweep Points</b> is set to <b>OFF</b> (5G NR Mode only)</li> </ul> <p>The resolution of setting the sweep time depends on the number of points selected</p>				
Preset	<table border="1"> <tbody> <tr> <td>5G NR Mode, in all models except M9410A/11A/15A</td> <td>5001</td> </tr> <tr> <td>All others</td> <td>1001</td> </tr> </tbody> </table>	5G NR Mode, in all models except M9410A/11A/15A	5001	All others	1001
5G NR Mode, in all models except M9410A/11A/15A	5001				
All others	1001				
State Saved	Saved in instrument state				
Min	1				
Max	20001				
Annotation	On second line of annotations, in lower right corner in parenthesis behind the sweep annotation				

### 3.4.14.3 X Scale

Accesses controls that enable you to set the horizontal scale parameters.

#### Auto Scaling

Toggles the scale coupling function On or Off.

Remote Command	:DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPle 0   1   OFF   ON
Example	:DISP:ACP:WIND:TRAC:X:COUP ON :DISP:ACP:WIND:TRAC:X:COUP?
Couplings	When <b>Auto Scaling</b> is <b>ON</b> and the " <b>Restart</b> " on page 2279 front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results

	When you set a value to either <b>Scale/Div</b> or <b>Ref Value</b> manually, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>
Backwards Compatibility SCPI	<b>:DISPPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUPlE</b>

### 3.4.15 Trace

Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces. The Trace Control tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

For the Spectrum Analyzer Mode, when in **Single** Mode, Measurements and their Views save the trace data from the last acquisition. This is true for multiple screens. The marker and trace data will be present whenever the measurement is brought back into focus. The measurement switches for these measurements do not clear the traces, so the data will be present until the next acquisition is completed.

#### 3.4.15.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

**Select Trace** appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the <b>Trace</b> menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none"> <li>- In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View</li> <li>- When you turn on Image Suppress, Update turns off for all traces except the selected trace</li> </ul> For the ACP measurement, when <b>Meas Method</b> is <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> , <b>Select Trace</b> is disabled
Preset	Trace 1
State Saved	Yes

### 3.4.15.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 2137 and its update mode.

There are four Trace Types:

- Clear/Write
- Trace Average
- Max Hold
- Min Hold

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "View/Blank" on page 2142 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

#### Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITE	:TRAC2:TYPE WRIT	See: "Clear/Write" on page 737
Trace Average	AVERage	:TRAC2:TYPE AVER	See: "Trace Average" on page 738
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: "Max Hold" on page 738
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: "Min Hold" on page 739

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "View/Blank" on page 2142 state must be set to **Active** (**Update: ON**, **Display: ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "Trace Mode Backwards Compatibility Commands" on page 735

Remote

For Swept SA Measurement (in SA Mode):

Command	<pre>:TRACe[1] 2 ... 6:TYPE WRITe   AVERAge   MAXHold   MINHold :TRACe[1] 2 ... 6:TYPE?  For all other measurements: :TRACe[1] 2 3:&lt;meas&gt;:TYPE WRITe   AVERAge   MAXHold   MINHold :TRACe[1] 2 3:&lt;meas&gt;:TYPE?  where &lt;meas&gt; is the identifier for the current measurement</pre>
Example	<pre>:TRAC:TYPE WRIT :TRAC:TYPE?</pre>
Couplings	<p>Selecting a <b>Trace Type</b> (by pressing any of the Trace Type selections or sending <code>:TRAC:TYPE</code>) sets the Trace to <b>Active</b> (<b>Update: ON, Display: OFF</b>), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<code>[ :SENSe]:&lt;meas&gt;:DETECTOR:AUTO?</code>), Detector (<code>[ :SENSe]:&lt;meas&gt;:DETECTOR[:FUNCTION]?</code>) switches aligning with the switch of this parameter: "NORMAL" with <code>WRITe</code> (Clear Write), "AVERAge" with <code>AVERAge</code>, "POSitive (peak)" with <code>MAXHold</code>, and "NEGative (peak)" with <code>MINHold</code></p>
Preset	<p>Swept SA and Monitor Spectrum: <code>WRITe</code></p> <p>All other measurements: <code>AVERAge</code></p> <p>Following <b>Preset</b>, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

### Trace Mode Backwards Compatibility Commands

In earlier instruments, the "Trace Modes" were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under "[View/Blank](#)" on page 2142.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The `:TRACe:MODE` command is retained for backwards compatibility, and the `:TRACe:TYPE`, `:TRACe:UPDate` and `:TRACe:DISPly` commands introduced for ongoing use. The old Trace Modes are selected using `:TRAC:MODE`, whose parameters are mapped into calls to `:TRACe:TYPE`, `:TRACe:UPDate` and `:TRACe:DISPly`, and the old global Averaging command `[ :SENSe]:AVERAge[:STATe]` is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	<code>WRITE</code>
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	<code>:TRACe[1] 2 ... 6:MODE WRITE   MAXHold   MINHold   VIEW   BLANK</code> <code>:TRACe[1] 2 ... 6:MODE?</code>
Backwards Compatibility Notes	<p>The legacy <code>:TRACe:MODE</code> command is retained for backwards compatibility. In conjunction with the legacy <code>:AVERage</code> command, it works as follows:</p> <ul style="list-style-type: none"> <li>– <code>:AVERage ON OFF</code> sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the <code>[ :SENSe ]:AVERage[ :STATe ]</code> command description below</li> <li>– <code>:TRACe:MODE WRITE</code> sets <code>:TRACe:TYPE WRITE</code> (Clear/Write) unless average is true, in which case it sets it to <code>:TRACe:TYPE AVERage</code>. It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> <li>– <code>:TRACe:MODE MAXHold</code> sets <code>:TRACe:TYPE MAXHold</code> (Max Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> <li>– <code>:TRACe:MODE MINHold</code> sets <code>:TRACe:TYPE MINHold</code> (Min Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> <li>– <code>:TRACe:MODE VIEW</code> sets <code>:TRACe:UPDate OFF</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> <li>– <code>:TRACe:MODE BLANK</code> sets <code>:TRACe:UPDate OFF</code>, <code>:TRACe:DISPlay OFF</code>, for the selected trace</li> </ul> <p>The query returns the same value as <code>:TRACe:TYPE?</code>, meaning that if you set <code>:TRACe:MODE:VIEW</code> or <code>:TRACe:MODE:BLANK</code>, the query response will not be what you sent</p> <p><code>:TRACe[n]:MODE</code> was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new <code>:TRACe:TYPE</code> command should be used in the future, but <code>:TRACe:MODE</code> is retained to provide backwards compatibility</p> <p>In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has</p> <p>As the <b>Average/Hold Number</b> now affects <b>Min Hold</b> and <b>Max Hold</b>, the operations that restart Averaging (for example, the <b>Restart</b> key) now also restart <b>Min Hold</b> and <b>Max Hold</b></p> <p>As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does</p> <p>Also, previous to X-Series:</p>

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	<b>OFF</b>
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[ :SENSe]:AVERage[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:AVERage[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[ :SENSe]:AVERage[:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[ :SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

## Trace Type Details

### Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

## Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count *k* is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated
- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

## Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending `:TRAC:TYPE MAXH` for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

### Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending `:TRAC:TYPE MINH` for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

### Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "**Trace Type**" on page 2137 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again

- the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:


- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold

## View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

<b>Active</b>	Update and Display both <b>ON</b>
<b>View</b>	Update <b>OFF</b> ; Display <b>ON</b>
<b>Blank</b>	Update <b>OFF</b> ; Display <b>OFF</b>
<b>Background</b>	Update <b>ON</b> , Display <b>OFF</b> Allows a trace to be blanked <i>and</i> continue to update “in the background”, which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

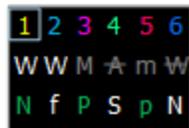

See: "[More Information](#)" on page 742

---

Notes For the commands to control the two variables, Update and Display, see "[Trace Update State On/Off](#)" on page 740 and "[Trace Display State On/Off](#)" on page 741 below

---

Dependencies When Signal ID is on, this key is grayed-out

---

Couplings

- Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in **Active** (Update **ON** and Display **ON**), even if that trace type was already selected
- Selecting a detector for a trace (pressing the key or sending [ :SENS ] :DET :TRAC) puts the trace in **Active** (Update**ON** and Display**ON**), even if that detector was already selected
- Selecting a "[Math Function](#)" on page 1145 other than **OFF** for a trace (pressing the key or sending the equivalent command) puts the trace in **Active** (Update**ON** and Display**ON**), even if that Math Mode was already selected
- Loading a trace from a file puts that trace in **View** regardless of the state it was in when it was saved; as does being the target of a **Copy** or a participant in an **Exchange**

### Trace Update State On/Off

---

Remote Command For Swept SA Measurement (in SA Mode):  
:TRACe[1]|2|...|6:UPDate[:STATe] ON | OFF | 1 | 0  
:TRACe[1]|2|...|6:UPDate[:STATe]?  
For all other measurements:

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

	<pre>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe] ON   OFF   1   0 :TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):</p> <pre>:TRAC2:UPD 0</pre>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state
<b>Trace Display State On/Off</b>	
Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON   OFF   1   0 :TRACe[1] 2 ... 6:DISPlay[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:DISPlay[:STATe] ON   OFF   1   0 :TRACe[1] 2 3:&lt;meas&gt;:DISPlay[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 1 visible:</p> <pre>:TRAC2:DISP 1</pre> <p>Blank trace 3:</p> <pre>:TRAC3:DISP 3</pre>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

## More Information

When a trace becomes inactive, any update from the **:SENSE** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

### 3.4.15.3 Math

Lets you turn on and configure Trace Math functions.

## Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "**Operand 1 / Operand 2**" on page 1151 controls.

- See "**How trace math is processed**" on page 747

---

Remote Command    For option details, see "**Trace Math Options**" on page 744  
For Swept SA Measurement (in SA Mode):

### 3 LTE & LTE-A TDD Mode

#### 3.4 ACP Measurement

---

```
:CALCulate:MATH <trace_num>, PDIFference | PSUM | LOFFset | LDIFference |  
OFF, <trace_num>, <trace_num>, <real>,<real>
```

```
:CALCulate:MATH? <trace_num>
```

where <trace\_num> is any one of:

```
TRACE1|...|TRACE6
```

For all other measurements:

```
:CALCulate:<meas>:MATH <trace_num>, PDIFference | PSUM | LOFFset |  
LDIFference | OFF, <trace_num>, <trace_num>, <real>,<real>
```

```
:CALCulate[:<meas>]:MATH? <trace_num>
```

where:

<meas> is the identifier for the current measurement, and

<trace\_num> is any one of:

```
TRACe1|TRACe2|TRACe3
```

Note that the format of the **TRACe<n>** parameter differs from that for the Swept SA Measurement

---

#### Example

```
:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0
```

Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2

```
:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0
```

Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2

```
:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0
```

Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB

```
:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00
```

Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm

```
:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0
```

Turns off trace math for trace 1

---

#### Notes

The Trace Math Function command has 6 main set of parameters:

- Set 1 defines the "result trace":

```
TRACE1|...|TRACE6
```

-Set 2 defines the "function":

```
PDIFference|PSUM|LOFFset|LDIFference|OFF
```

- Set 3 is a "trace operand" (1):

```
TRACE1|...|TRACE6
```

- Set 4 is a "trace operand" (2):

```
TRACE1|...|TRACE6
```

---

	<ul style="list-style-type: none"> <li>- Set 5 defines the “Log Offset” (in dB)</li> <li>- Set 6 defines the “Log Difference Reference” (in dBm)</li> </ul> <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if <b>Normalize</b> is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	<p>When a math function is changed for a trace, that trace is set to Display = <b>ON</b>; and Update = <b>ON</b></p>
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p><b>OFF, TRACE5, TRACE6, 0, 0   OFF, TRACE6, TRACE1, 0, 0   OFF, TRACE1, TRACE2, 0, 0  </b>  <b>OFF, TRACE2, TRACE3, 0, 0   OFF, TRACE3, TRACE4, 0, 0   OFF, TRACE4, TRACE5, 0, 0</b></p> <p>For all other measurements:</p> <p><b>OFF, TRACE2, TRACE3, 0, 0   OFF, TRACE3, TRACE1, 0, 0   OFF, TRACE1, TRACE2, 0, 0</b></p>
State Saved	<p>The trace math function for each trace is saved in instrument state</p>
Annunciation	<p>An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on; and the function is annotated on the trace if Trace Annotation is on</p>
Status Bits/OPC dependencies	<p><b>*OPC</b> can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep</p>

## Trace Math Options

### IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system

- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

---

The Trace Math functions are:

#### **Power Diff (Op1 - Op2)**

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log_{10}(10^{(1/10)(\text{FirstTrace})} - 10^{(1/10)(\text{SecondTrace})})$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

#### **Power Sum (Op1 + Op2)**

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = 10 \log_{10}(10^{(1/10)(\text{FirstTrace})} + 10^{(1/10)(\text{SecondTrace})})$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

#### **Log Offset (Op1 + Offset)**

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

*Example:* If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

### Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

*Example:* If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at -5 dBm, and the reference is -25 dBm, then the destination trace will be -15 dBm.

*Example:* If the first operand trace 1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.


If neither of the above is true for a given point, then:

- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

### **How trace math is processed**

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

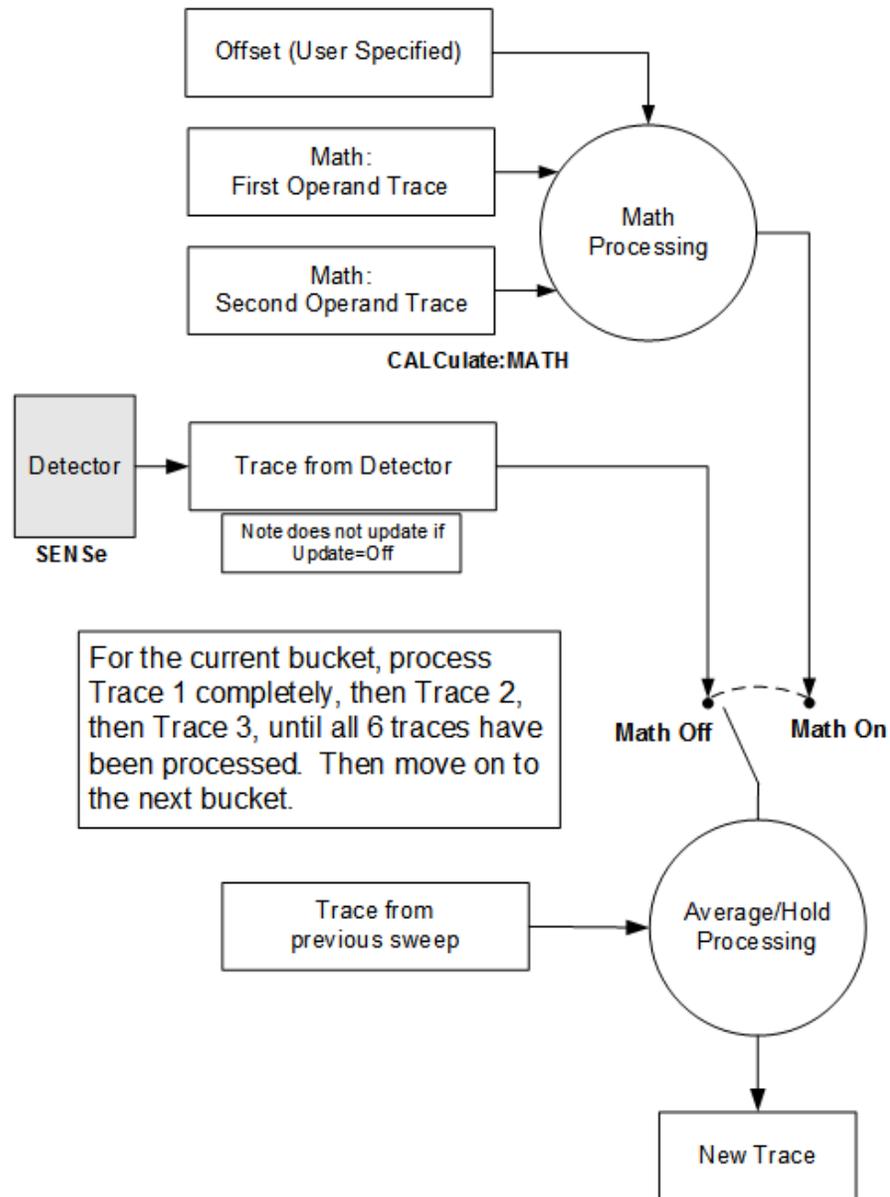

**NOTE ABOUT OFFSETS:** When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

## Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <pre><b>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</b></pre> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <pre><b>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</b></pre>
Notes	See " <a href="#">Math Function</a> " on page 1145 for how to specify Operands 1 and 2 using <b>:CALCulate:MATH</b>
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

---

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

---

## Offset

Used by the Log Offset math function.

---

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

---

## Reference

Used by the Log Diff math function.

---

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

---

### 3.4.15.4 Detector

Lets you choose and configure detectors for the selected trace.

## Detector

Selects a detector to be used by the instrument for the current measurement. Allows up to three (3) traces, but each use the same detector type choice. The following choices are available:

3 LTE & LTE-A TDD Mode  
3.4 ACP Measurement

Option	Parameters	Description
Auto	See "Detector Select Auto/Man" on page 752	Detector selected depends on marker functions, trace functions, average type, and the trace averaging function When in <b>AUTO</b> , the detector selected is set to <b>AVERage</b> , unless the Radio Standard defaults state otherwise, for example, it is set to <b>POS</b> for Radio Standard = PDC when Device = both MS and BTS, and when Radio Standard = NADC and Device = MS
Normal	<b>NORMa1</b>	Detector determines the peak of the CW-like signals, and yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
Average	<b>AVERage</b> <b>RMS</b>	Detector determines the average of the signal within the sweep points, using RMS averaging
Peak (Positive)	<b>POSitive</b>	Detector determines the maximum of the signal within the sweep points
Sample	<b>SAMPle</b>	Detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
Negative Peak	<b>NEGative</b>	Detector determines the minimum of the signal within the sweep points

Because they may not find a spectral component's true peak, neither Average nor Sample detectors measure amplitudes of CW signals as accurately as Peak or Normal, but they do measure noise without the biases of peak detection.

When **Meas Method** is Fast Power, Auto, Peak and Average are selectable.

Remote Command	<code>[ :SENSe]:ACPoweR:DETEctor[:FUNctIon] NORMa1   AVERage   POSitive   SAMPle   NEGative   RMS</code> <code>[ :SENSe]:ACPoweR:DETEctor[:FUNctIon]?</code>
Example	<code>:ACP:DET NORM</code> <code>:ACP:DET?</code> <code>:ACP:DET RMS</code> Sets the detector to <b>AVERage</b> . In ACP, <b>AVERage</b> uses RMS averaging, so this is equivalent to selecting an <b>RMS</b> detector

Notes  
The query returns a name that corresponds to the detector type, as shown below  
The **RMS** selection sets the detector type to **AVERage** with RMS averaging. Therefore, if **RMS** has been selected, the query returns **AVER**

String Returned	Definition
<b>NORM</b>	Normal
<b>AVER</b>	Average (RMS)
<b>POS</b>	Peak
<b>SAMP</b>	Sample
<b>NEG</b>	Negative Peak

Couplings	<p>When "Detector Select Auto/Man" on page 752 is <b>Auto</b>, <b>Detector</b> switches aligning with the switch of this parameter: <b>NORMal</b> with Clear Write, <b>AVERage</b> with <b>AVERage</b>, <b>POSitive</b> (Peak) with <b>MAXHold</b>, and <b>NEGative</b> (Peak) with <b>MINHold</b></p> <p>When <b>Detector Select Auto/Man</b> is <b>Auto</b>, <b>Detector</b> is set to what the Radio Standard defaults states for all conditions of Trace Type and for all traces</p> <p>When <b>Detector Select Auto/Man</b> is set to <b>Manual</b>, all Traces use the same detector type</p> <p>When Average State = Off then Trace Types <b>AVERage</b>, <b>MaxHold</b> and <b>MinHold</b> do not function, since Averaging must be 'on' for them to operate. Only one Detector type for all 3 traces is allowed</p> <p>When "Meas Method" on page 582 is RBW or FAST, Detector is disabled</p>
Preset	<b>AVERage</b>
State Saved	Saved in instrument state
Range	<b>NORMal</b>   <b>AVERage</b>   <b>POSitive</b>   <b>SAMPle</b>   <b>NEGative</b>   <b>RMS</b>
Annotation	The four-letter mnemonic for the detector appears in the trace window next to the referenced trace
Backwards Compatibility SCPI	<b>[ :SENSe ] :ACPR :SWEep :DETector [ :FUNction ]</b>

## Detector Select Auto/Man

Sets the Detector mode to Auto (**ON** | **1**) or Manual (**OFF** | **0**). In Auto, the proper detector is chosen based on rules that take into account the measurement settings and other instrument settings.

When you manually select any detector, this toggle is automatically set to Manual (**OFF**).

Remote Command	<b>[ :SENSe ] :ACPower :DETector :AUTO ON   OFF   1   0</b> <b>[ :SENSe ] :ACPower :DETector :AUTO?</b>
Example	<b>:ACP:DET:AUTO 1</b> <b>:ACP:DET?</b>
Notes	When "Meas Method" on page 582 is Fast Power, Peak and Average are selectable
Couplings	<p>When <b>Detector Select Auto/Man</b> is <b>Auto</b>, "Detector" on page 750 switches aligning with the switch of this parameter: <b>NORMal</b> with <b>Clear Write</b>, <b>AVERage</b> with <b>AVERage</b>, <b>POSitive</b> with <b>MAXHold</b>, and <b>NEGative</b> with <b>MINHold</b></p> <p>When <b>Detector Select Auto/Man</b> is <b>Auto</b>, <b>Detector</b> is set to what the Radio Standard defaults states for all conditions of Trace Type and for all traces</p> <p>When <b>Detector Select Auto/Man</b> is set to <b>Manual</b>, all Traces use the same detector type</p> <p>When Average State = Off then Trace Types <b>AVERage</b>, <b>MaxHold</b> and <b>MinHold</b> do not function, since Averaging must be <b>ON</b> for them to operate</p>
Preset	<b>ON</b>
State Saved	Yes

### 3.4.15.5 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

#### From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 1

#### To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 2

#### Copy

Executes a Trace Copy based on the **"From Trace" on page 1153** and **"To Trace" on page 1153** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

---

Remote Command	<p>For Swept SA Measurement (in SA Mode):  <code>:TRACe:COPIY TRACE1   ...   TRACE6, TRACE1   ...   TRACE6</code></p> <p>For all other measurements:  <code>:TRACe:&lt;meas&gt;:COPIY TRACe1   TRACe2   TRACe3, TRACe1   TRACe2   TRACe3</code></p> <p>where <b>&lt;meas&gt;</b> is the identifier for the current measurement</p> <p>Note that the format of the <b>TRACe&lt;n&gt;</b> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On  <code>:TRAC:COPIY TRACE1,TRACE3</code></p>
Notes	<p>The command is of the form:  <code>:TRACe:COPIY &lt;source_trace&gt;,&lt;dest_trace&gt;</code></p>
Dependencies	<p>When Signal ID is on, this key is grayed-out</p>

Couplings	The destination trace is put in <b>View</b> (Update = Off, Display = On) after the copy
Preset	For Swept SA Measurement (in SA Mode): <code>TRACE1, TRACE2</code>  For all other measurements: <code>TRACe1, TRACe2</code>

## Exchange

Executes a Trace Exchange based on the "From Trace" on page 1153 and "To Trace" on page 1153 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	For Swept SA Measurement (in SA Mode): <code>:TRACe:EXCHange TRACE1   ...   TRACE6, TRACE1   ...   TRACE6</code>  For all other measurements: <code>:TRACe:&lt;meas&gt;:EXCHange TRACe1   TRACe2   TRACe3, TRACe1   TRACe2   TRACe3</code>  where <code>&lt;meas&gt;</code> is the identifier for the current measurement  Note that the format of the <code>:TRACe&lt;n&gt;</code> parameter differs from that for the Swept SA Measurement
Example	Exchange Trace 1 and Trace 2 and put both traces in Update= <b>OFF</b> , Display= <b>ON</b> : <code>:TRAC:EXCH TRACE1,TRACE2</code>
Notes	The command is of the form: <code>:TRACe:EXCHange &lt;trace_1&gt;,&lt;trace_2&gt;</code>
Couplings	Both traces are put in <b>View</b> (Update=Off, Display=On) after the exchange

## Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<code>:TRACe[:&lt;meas&gt;]:PRESet:ALL</code>
Example	<code>:TRAC:PRESet:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

## Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads `mintracevalue` into all of the points for all traces, except traces

in **Min Hold**, in which case it loads **maxtracevalue**, even if **Update = OFF**.

Remote Command	<code>:TRACe[&lt;meas&gt;]:CLEAr:ALL</code>
Example	<code>:TRAC:CLE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

### 3.4.15.6 Advanced

Contains controls for setting advanced trace functions of the instrument.

#### Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCh** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<code>:CALCulate:&lt;meas&gt;:MTRace TRACe1   TRACe2   TRACe3</code> <code>:CALCulate:&lt;meas&gt;:MTRace?</code> <code>&lt;meas&gt;</code> is the identifier for the current measurement; any one of <b>CHPower</b>   <b>ACPower</b>   <b>OBWidth</b>   <b>SEMask</b>   <b>SPURious</b>   <b>PVTime</b>
Example	Channel Power <code>:CALC:CHP:MTR TRAC1</code> <code>:CALC:CHP:MTR?</code>
Dependencies	In the ACP measurement, this control is grayed-out when <b>Meas Method</b> is set to <b>RBW</b> or <b>FAST</b> , and only Trace 1 is enabled
Preset	<b>TRACe1</b>
State Saved	No
Range	Trace 1   Trace 2   Trace 3

## 3.5 SEM Measurement

The Spectrum Emission Mask measurement analyzes spurious signal levels in up to six pairs of offset frequencies and relates them to the carrier power.

### SEM Measurement Commands

The following commands and queries can be used to configure the measurement, then retrieve measurement results:

The general functionality of ["CONFigure" on page 2997](#), ["INITiate" on page 2998](#), ["FETCh" on page 2998](#), ["MEASure" on page 3000](#), and ["READ" on page 2999](#) are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

Note that, in general, `:CONF : <measurement>` resets the specified measurement settings to their defaults. X-Series permits the addition of the `NDEFault` node to the command, which prevents a measurement preset after a measurement switch.

```
:CONFigure:SEMask
:CONFigure:SEMask:NDEFault
:INITiate:SEMask
:FETCh:SEMask[n]?
:MEASure:SEMask[n]?
:READ:SEMask[n]?
```

### Remote Command Results Overview

The following table provides an overview of the results returned by the `:FETCh`, `:MEASure`, and `:READ` queries listed above, according to the index value `n`. For Mode-specific details, click on the appropriate link for each `n` value.

Offsets that are turned off (inactive) return -999.0 or `NAN` when their results are queried via SCPI. The value of `NAN` is 9.91E+37.

n	Results
1	Result summary (Offsets A - F) Note that n = 1 returns results of 6 offsets (Offset A to F) See <a href="#">"Results for n = 1" on page 758</a>
2	Displayed frequency domain spectrum trace data for Trace 1 See <a href="#">"Results for n = 2-4" on page 761</a>
3	Displayed frequency domain absolute limit trace data See <a href="#">"Results for n = 2-4" on page 761</a>
4	Displayed frequency domain relative limit trace data

n	Results
	See <a href="#">"Results for n = 2-4" on page 761</a>
5	Offset abs power, Offset abs PSD, Offset abs peak power depending on <a href="#">"Measurement Type" on page 929</a> (Offset A- L) See <a href="#">"Results for n = 5" on page 761</a>
6	Offset rel power, Offset rel PSD, Offset rel peak power depending on <a href="#">"Measurement Type" on page 929</a> (Offset A- L) See <a href="#">"Results for n = 6" on page 764</a>
7, 8	Offset pass/fail (Offset A- L) See <a href="#">"Results for n = 7-11" on page 765</a>
9	Offset peak power freq (Offset A- L) See <a href="#">"Results for n = 7-11" on page 765</a>
10	Offset abs peak power (Offset A- L) See <a href="#">"Results for n = 7-11" on page 765</a>
11	Offset rel peak power (Offset A- L) See <a href="#">"Results for n = 7-11" on page 765</a>
12	Peak power of the signal in the ref channel when <a href="#">"Measurement Type" on page 929</a> is Spectrum Peak Reference See <a href="#">"Results for n = 12" on page 767</a>
13	Ref channel summary Available only in LTEAFDD, LTEATDD, MSR and 5GNR Modes See <a href="#">"Results for n = 13" on page 767</a>
14	Offset result summary (Offset A- L) See <a href="#">"Results for n = 14" on page 769</a>
15	Offset limit margins (Offset A- L) See <a href="#">"Results for n = 15" on page 770</a>
16	Carrier powers Available only in LTEAFDD, LTEATDD, MSR, 5GNR, and WLAN Modes See <a href="#">"Results for n = 16" on page 771</a>
17	Displayed frequency domain combined limit trace data Available only in LTEAFDD, LTEATDD, MSR and 5GNR Modes See <a href="#">"Results for n = 17" on page 771</a>
18	Displayed frequency domain spectrum trace data for Trace 2 See <a href="#">"Results for n = 18-20" on page 771</a>
19	Displayed frequency domain spectrum trace data for Trace 3 See <a href="#">"Results for n = 18-20" on page 771</a>
20	Displayed frequency domain absolute 2 limit trace data See <a href="#">"Results for n = 18-20" on page 771</a>
21	Result Summary (Offset A – L, Outer and Inner)

n	Results
	Available only in LTEAFDD, LTEATDD, and 5GNR Modes See <a href="#">"Results for n = 21" on page 771</a>
22	Offset pass/fail (Offset A- L) Available only in LTEAFDD, LTEATDD, and 5GNR Modes See <a href="#">"Results for n = 22" on page 777</a>

### 3.5.1 Results for n = 1

Returns outer offset results when ["Non-Contiguous Meas Region" on page 850](#) is set to **Outer** or **Outer & Inner** (5GNR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**, in the following order:

Available Power Ref selections differ depending on the mode. For details, see ["Power Ref" on page 930](#)

k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. The number of offsets is 6 (A-F).

#	Item	Unit										
1	Total Absolute power of carriers of Measure Carrier On if available Otherwise, -999.0											
2	Reference power	When <a href="#">"Measurement Type" on page 929</a> is PSD Ref: dBm/Hz Others: dBm										
	<table border="1"> <thead> <tr> <th>Power Ref</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Left &amp; Right Carriers</td> <td>Power<sup>(*1)</sup> at the left reference carrier</td> </tr> <tr> <td>Max Power Carrier in Sub-block</td> <td>Power<sup>(*1)</sup> power at the reference carrier of the left sub-block</td> </tr> <tr> <td>Left &amp; Right Sub-blocks</td> <td>Power<sup>(*2)</sup> power in the left sub-block</td> </tr> </tbody> </table>	Power Ref	Result	Left & Right Carriers	Power <sup>(*1)</sup> at the left reference carrier	Max Power Carrier in Sub-block	Power <sup>(*1)</sup> power at the reference carrier of the left sub-block	Left & Right Sub-blocks	Power <sup>(*2)</sup> power in the left sub-block			
Power Ref	Result											
Left & Right Carriers	Power <sup>(*1)</sup> at the left reference carrier											
Max Power Carrier in Sub-block	Power <sup>(*1)</sup> power at the reference carrier of the left sub-block											
Left & Right Sub-blocks	Power <sup>(*2)</sup> power in the left sub-block											
3	Reference power	When <a href="#">"Measurement Type" on page 929</a> is PSD Ref: dBm/Hz Others: dBm										
	<table border="1"> <thead> <tr> <th>Power Ref</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Left &amp; Right Carriers</td> <td>Power<sup>(*1)</sup> at the right reference carrier</td> </tr> <tr> <td>Max Power Carrier in Sub-block</td> <td>Power<sup>(*1)</sup> at the reference carrier of the right sub-block</td> </tr> <tr> <td>Left &amp; Right Sub-blocks</td> <td>Power<sup>(*2)</sup> in the right sub-block</td> </tr> <tr> <td>All others</td> <td>-999.0</td> </tr> </tbody> </table>	Power Ref	Result	Left & Right Carriers	Power <sup>(*1)</sup> at the right reference carrier	Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the right sub-block	Left & Right Sub-blocks	Power <sup>(*2)</sup> in the right sub-block	All others	-999.0	
Power Ref	Result											
Left & Right Carriers	Power <sup>(*1)</sup> at the right reference carrier											
Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the right sub-block											
Left & Right Sub-blocks	Power <sup>(*2)</sup> in the right sub-block											
All others	-999.0											

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

#	Item	Unit
4	Reserved for future use, returns -999.0	
5	Peak frequency in the reference channel spacing frequency range	
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Peak frequency in the left ref carrier frequency range
	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block
	Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range
	RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range
6	Peak frequency in the right reference channel spacing frequency range	
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Peak frequency in the right ref carrier frequency range
	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block
	Left & Right Sub-blocks	Peak frequency in the right reference sub-block frequency range
	All others	-999.0
7~10	Reserved for future use, returns -999.0	
11	Relative integrated power on the negative offset A	dBc
10k + 11, k = 0		
12	Absolute integrated power on the negative offset A	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
10k + 12, k = 0		
13	Relative peak power on the negative offset A	dBc
10k + 13, k = 0		
14	Absolute peak power on the negative offset A	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
10k + 14, k = 0		
15	Peak power offset frequency from the center or carrier edge	Hz

#	Item	Unit
10k + 15, k = 0	frequency in the negative offset A Depends on the setting of "Offset Freq Define" on page 870	
16 10k + 16, k = 0	Relative integrated power on the positive offset A	dBc
17 10k + 17, k = 0	Absolute integrated power on the positive offset A	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
18 10k + 18, k = 0	Relative peak power on the positive offset A	dBc
19 10k + 19, k = 0	Absolute peak power on the positive offset A	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
20 10k + 20, k = 0	Peak power offset frequency from the center or carrier edge frequency in the positive offset A Depends on the setting of "Offset Freq Define" on page 870	Hz
---		
70 10k + 20, k = 5	Peak power offset frequency from the center or carrier edge frequency in the positive offset F Depends on the setting of "Offset Freq Define" on page 870	Hz
71 2k + 71, k = 0	Minimum margin from limit line on the negative offset A	dB
72 2k + 72, k = 0	Minimum margin from limit line on the positive offset A	dB
---		
82 2k + 72, k = 5	Minimum margin from limit line on the positive offset F	dB

\*1: Absolute power when "Measurement Type" on page 929 is Total Power Ref or PSD Ref; Peak power when "Measurement Type" on page 929 is Spectrum Peak Ref

\*2: Integrated power when "Measurement Type" on page 929 is Total Power Ref or PSD Ref; Peak power when "Measurement Type" on page 929 is Spectrum Peak Ref

### 3.5.2 Results for n = 2-4

n	Data
2	Returns the displayed frequency domain spectrum trace data for Trace 1 separated by commas
3	Returns the displayed frequency domain absolute limit trace data separated by commas
4	Returns the displayed frequency domain relative limit trace data separated by commas

### 3.5.3 Results for n = 5

The results returned depend on "Measurement Type" on page 929:

- "Total Power Reference" on page 761
- "Power Spectral Density Reference" on page 762
- "Spectrum Peak Reference" on page 763

#### Total Power Reference

Returns comma-separated scalar values (in dBm) of the absolute integrated power of the segment frequencies. The length of the result depends on the number of available offset (See "Number of Offsets" on page 777)

#	Item	Unit
1	Total power reference	dBm
2	Reserved for future use, returns -999.0	
3	Absolute integrated power at negative offset frequency A	
4	Absolute integrated power at positive offset frequency A	
	---	
25	Absolute integrated power at negative offset frequency L	
26	Absolute integrated power at positive offset frequency L	

For MSR, 5G NR, LTEAFDD, and LTEATDD modes, returns outer offset results when "Non-Contiguous Meas Region" on page 850 is set to **Outer**, and returns inner offset results when it is set to **Inner**, in the following order

For LTEAFDD, LTEATDD, 5G NR, and MSR Modes, available Power Ref selections differ depending on the mode. For details, see "Power Ref" on page 930

#	Item	Unit
1	Reference power	dBm

#	Item	Unit
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Left ref carrier power
	Max Power Carrier in Sub-block	Ref carrier power of the left sub-block
	Left & Right Sub-blocks	Integrated power in the left sub-block
2	Right reference power	dBm
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Right ref carrier power
	Max Power Carrier in Sub-block	Ref carrier power of the right sub-block
	Left & Right Sub-blocks	Integrated power in the right sub-block
	All others	-999.0
3	Absolute integrated power at negative offset frequency A	
4	Absolute integrated power at positive offset frequency A	
	---	
25	Absolute integrated power at negative offset frequency L	
26	Absolute integrated power at positive offset frequency L	

### Power Spectral Density Reference

Returns comma-separated scalar values (in dBm/Hz) of the absolute integrated power of the segment frequencies. The length of the result depends on the number of available offset (See "[Number of Offsets](#)" on page 777)

#	Item	Unit
1	Power spectral density reference	dBm/Hz
2	Reserved for future use, returns -999.0	
3	Absolute integrated power at negative offset frequency A	
4	Absolute integrated power at positive offset frequency A	
	---	
25	Absolute integrated power at negative offset frequency L	
26	Absolute integrated power at positive offset frequency L	

For MSR, 5G NR, LTEAFDD, and LTEATDD modes, returns outer offset results when "[Non-Contiguous Meas Region](#)" on page 850 is set to **Outer**, and returns inner offset results when it is set to **Inner**, in the following order

For LTEAFDD, LTEATDD, 5G NR, and MSR Modes, available Power Ref selections differ depending on the mode. For details, see "[Power Ref](#)" on page 930

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

#	Item	Unit
1	Reference power	dBm/Hz
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Left ref carrier power
	Max Power Carrier in Sub-block	Ref carrier power of the left sub-block
	Left & Right Sub-blocks	Integrated power in the left sub-block
2	Right reference power	dBm
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Right ref carrier power
	Max Power Carrier in Sub-block	Ref carrier power of the right sub-block
	Left & Right Sub-blocks	Integrated power in the right sub-block
	All others	999.0
3	Absolute integrated power at negative offset frequency A	
4	Absolute integrated power at positive offset frequency A	
	---	
25	Absolute integrated power at negative offset frequency L	
26	Absolute integrated power at positive offset frequency L	

### Spectrum Peak Reference

Returns comma-separated scalar values (in dBm) of the absolute peak power of the segment frequencies. The length of the result depends on the number of available offset (See "[Number of Offsets](#)" on page 777)

#	Item	Unit
1	Spectrum Peak Power reference	dBm
2	Reserved for future use, returns -999.0	
3	Absolute peak power at negative offset frequency A	
4	Absolute peak power at positive offset frequency A	
	---	
25	Absolute peak power at negative offset frequency L	
26	Absolute peak power at positive offset frequency L	

For MSR, 5G NR, LTEAFDD, and LTEATDD modes, returns outer offset results when "[Non-Contiguous Meas Region](#)" on page 850 is set to **Outer**, and returns inner offset results when it is set to **Inner**, in the following order

For LTEAFDD, LTEATDD, 5G NR, and MSR Modes, available Power Ref selections differ depending on the mode. For details, see "[Power Ref](#)" on page 930

#	Item	Unit
1	Spectrum Peak Power reference	dBm
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Spectrum Peak Power reference at the left reference carrier
	Max Power Carrier in Sub-block	Spectrum Peak Power reference of the left sub-block
	Left & Right Sub-blocks	Spectrum Peak Power reference in the left sub-block
2	Spectrum Peak Power reference	dBm
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Spectrum Peak Power reference at the right reference carrier
	Max Power Carrier in Sub-block	Spectrum Peak Power reference of the right sub-block
	Left & Right Sub-blocks	Spectrum Peak Power reference in the right sub-block
	All others	-999.0
3	Absolute peak power at negative offset frequency A	
4	Absolute peak power at positive offset frequency A	
---		
25	Absolute peak power at negative offset frequency L	
26	Absolute peak power at positive offset frequency L	

### 3.5.4 Results for n = 6

When **"Measurement Type" on page 929** is Total Power Ref or PSD Ref, returns comma-separated scalar values (in dBc or dBc/Hz) of the integrated power relative to the carrier at the segment frequencies

When **"Measurement Type" on page 929** is Spectrum Peak Ref, returns comma-separated scalar values (in dB) of the peak power relative to the carrier at the segment frequencies

The length of the result depends on the number of available offset (See **"Number of Offsets" on page 777**)

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when **"Non-Contiguous Meas Region" on page 850** is set to **Outer** or **Outer & Inner** (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

3 LTE & LTE-A TDD Mode  
 3.5 SEM Measurement

k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. The number of offsets is 12 (A-L).

#	Item
1	Reserved for future use, returns -999.0
2	Reserved for future use, returns -999.0
3	Power <sup>(*1)</sup> at negative offset A
2k + 3, k = 0	
4	Power <sup>(*1)</sup> at positive offset A
2k + 4, k = 0	
---	
26	Power <sup>(*1)</sup> at positive offset L
2k + 4, k = 11	

\*1: Relative integrated power when "Measurement Type" on page 929 is Total Power Ref or PSD Ref; Relative peak power when "Measurement Type" on page 929 is Spectrum Peak Ref

### 3.5.5 Results for n = 7-11

n	Data																				
7, 8	<p>Returns comma-separated pass/fail test results (0 = passed, or 1 = failed) determined by testing the minimum margin point from the limit line that is determined each offset's Limits setting. The length of the result depends on the number of available offset (See "Number of Offsets" on page 777)</p> <p>For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 850 is set to <b>Outer</b> or <b>Outer &amp; Inner</b> (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to <b>Inner</b></p> <p>The results are in the following order:</p> <table border="1"> <thead> <tr> <th>#</th> <th>Item</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Reserved for future use, returns -999.0</td> </tr> <tr> <td>2</td> <td>Reserved for future use, returns -999.0</td> </tr> <tr> <td>3</td> <td>At negative offset A</td> </tr> <tr> <td>2k + 3, k = 0</td> <td></td> </tr> <tr> <td>4</td> <td>At positive offset A</td> </tr> <tr> <td>2k + 4, k = 0</td> <td></td> </tr> <tr> <td>---</td> <td></td> </tr> <tr> <td>26</td> <td>At positive offset L</td> </tr> <tr> <td>2k + 4, k = 11</td> <td></td> </tr> </tbody> </table>	#	Item	1	Reserved for future use, returns -999.0	2	Reserved for future use, returns -999.0	3	At negative offset A	2k + 3, k = 0		4	At positive offset A	2k + 4, k = 0		---		26	At positive offset L	2k + 4, k = 11	
#	Item																				
1	Reserved for future use, returns -999.0																				
2	Reserved for future use, returns -999.0																				
3	At negative offset A																				
2k + 3, k = 0																					
4	At positive offset A																				
2k + 4, k = 0																					
---																					
26	At positive offset L																				
2k + 4, k = 11																					
9	<p>Returns comma-separated scalar values of frequency (in Hz) that have peak power from center or carrier edge frequency in each offset, depending on the setting of "Offset Freq Define" on page 870. The length of the result depends on the number of available offset (See "Number of Offsets" on page 777)</p>																				

**n Data**

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 850 is set to **Outer** or **Outer & Inner** (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

#	Item
1	Reserved for future use, returns -999.0
2	Reserved for future use, returns -999.0
3	Negative offset A
$2k + 3, k = 0$	
4	Positive offset A
$2k + 4, k = 0$	
---	---
26	Positive offset L
$2k + 4, k = 11$	

10 Returns comma-separated scalar values (in dBm) of the absolute peak power of the segment frequencies. The length of the result depends on the number of available offset (See "Number of Offsets" on page 777)

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 850 is set to **Outer** or **Outer & Inner** (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

#	Item
1	Reserved for future use, returns -999.0
2	Reserved for future use, returns -999.0
3	At negative offset A
$2k + 3, k = 0$	
4	At positive offset A
$2k + 4, k = 0$	
---	---
26	At positive offset L
$2k + 4, k = 11$	

11 Returns comma-separated scalar values in dBc (dB if MeasType = PSD) of the peak power relative to the carrier at the segment frequencies. The length of the result depends on the number of available offset (See "Number of Offsets" on page 777)

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 850 is set to **Outer** or **Outer & Inner** (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

n	Data	
#	Item	
1	Reserved for future use, returns -999.0	
2	Reserved for future use, returns -999.0	
3	At negative offset A	
2k + 3, k = 0		
4	At positive offset A	
2k + 4, k = 0		
---		
26	At positive offset L	
2k + 4, k = 11		

### 3.5.6 Results for n = 12

When "Measurement Type" on page 929 is Spectrum Peak reference, returns the peak power of the signal in the ref channel

Otherwise, the value returned is -999.0

### 3.5.7 Results for n = 13

Returns outer offset results when "Non-Contiguous Meas Region" on page 850 is set to **Outer** or **Outer & Inner** (5G NR, LTE-A FDD, LTE-A TDD only), and returns inner offset results when it is set to **Inner**, in the following order:

#	Item	Unit
1	<b>Power Ref</b>	<b>Result</b>
	Max Power Carrier	Total Absolute power of carriers
	Max Power Carrier in Sub-block	of Measure Carrier On
	RF Bandwidth	
	All others	NaN
2	Absolute reference power	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Power <sup>(*1)</sup> at the left reference carrier

#	Item	Unit										
	<table border="1"> <thead> <tr> <th>Power Ref</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Max Power Carrier in Sub-block</td> <td>Power<sup>(*1)</sup> at the reference carrier of the left sub-block</td> </tr> <tr> <td>Left &amp; Right Sub-blocks</td> <td>Power<sup>(*2)</sup> in the left sub-block</td> </tr> </tbody> </table>	Power Ref	Result	Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the left sub-block	Left & Right Sub-blocks	Power <sup>(*2)</sup> in the left sub-block					
Power Ref	Result											
Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the left sub-block											
Left & Right Sub-blocks	Power <sup>(*2)</sup> in the left sub-block											
3	Absolute reference power	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm										
	<table border="1"> <thead> <tr> <th>Power Ref</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Left &amp; Right Carriers</td> <td>Power<sup>(*1)</sup> at the right reference carrier</td> </tr> <tr> <td>Max Power Carrier in Sub-block</td> <td>Power<sup>(*1)</sup> at the reference carrier of the right sub-block</td> </tr> <tr> <td>Left &amp; Right Sub-blocks</td> <td>Power<sup>(*2)</sup> in the right sub-block</td> </tr> <tr> <td>All others</td> <td>NaN</td> </tr> </tbody> </table>	Power Ref	Result	Left & Right Carriers	Power <sup>(*1)</sup> at the right reference carrier	Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the right sub-block	Left & Right Sub-blocks	Power <sup>(*2)</sup> in the right sub-block	All others	NaN	
Power Ref	Result											
Left & Right Carriers	Power <sup>(*1)</sup> at the right reference carrier											
Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the right sub-block											
Left & Right Sub-blocks	Power <sup>(*2)</sup> in the right sub-block											
All others	NaN											
4	Peak frequency in the reference channel spacing frequency range											
	<table border="1"> <thead> <tr> <th>Power Ref</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Left &amp; Right Carriers</td> <td>Peak frequency in the left ref carrier frequency range</td> </tr> <tr> <td>Max Power Carrier in Sub-block</td> <td>Peak frequency in the ref carrier frequency range of the left sub-block</td> </tr> <tr> <td>Left &amp; Right Sub-blocks</td> <td>Peak frequency in the left reference sub-block frequency range</td> </tr> <tr> <td>RF Bandwidth &amp; Aggregated Channel Bandwidth</td> <td>Peak frequency in the reference channel bandwidth frequency range</td> </tr> </tbody> </table>	Power Ref	Result	Left & Right Carriers	Peak frequency in the left ref carrier frequency range	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block	Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range	RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range	
Power Ref	Result											
Left & Right Carriers	Peak frequency in the left ref carrier frequency range											
Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block											
Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range											
RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range											
5	Peak frequency in the right reference channel spacing frequency range											
	<table border="1"> <thead> <tr> <th>Power Ref</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Left &amp; Right Carriers</td> <td>Peak frequency in the right ref carrier frequency range</td> </tr> <tr> <td>Max Power Carrier in Sub-block</td> <td>Peak frequency in the ref carrier frequency range of the right sub-block</td> </tr> <tr> <td>Left &amp; Right</td> <td>Peak frequency in the right</td> </tr> </tbody> </table>	Power Ref	Result	Left & Right Carriers	Peak frequency in the right ref carrier frequency range	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block	Left & Right	Peak frequency in the right			
Power Ref	Result											
Left & Right Carriers	Peak frequency in the right ref carrier frequency range											
Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block											
Left & Right	Peak frequency in the right											

#	Item	Unit
	<b>Power Ref</b>	<b>Result</b>
	Sub-blocks	reference sub-block frequency range
	All others	NaN

\*1: Absolute power when "Measurement Type" on page 929 is Total Power Ref or PSD Ref; Peak power when "Measurement Type" on page 929 is Spectrum Peak Ref

\*2: Integrated power when "Measurement Type" on page 929 is Total Power Ref or PSD Ref; Peak power when "Measurement Type" on page 929 is Spectrum Peak Ref

If the result is not available, NaN (9.91E+37) is returned

The number of values returned is subject to change in future releases

### 3.5.8 Results for n = 14

Returns comma-separated scalar results

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 850 is set to **Outer** or **Outer & Inner** (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. The number of offsets is 12 (A-L)

#	Item	Unit
1	Relative integrated power on the negative offset A	When "Measurement Type" on page 929 is Total Power Ref: dBc
10k + 1, k = 0	Returns NaN when "Measurement Type" on page 929 is Spectrum Peak Ref	When PSD: dB
2	Absolute integrated power on the negative offset A	When "Measurement Type" on page 929 is Total Power Ref: dBm
10k + 2, k = 0	Returns NaN when "Measurement Type" on page 929 is Spectrum Peak Ref	When PSD: dBm/Hz
3	Relative peak power on the negative offset A	When "Measurement Type" on page 929 is Total Power Ref PSD: dBc
10k + 3, k = 0		Others: dB
4	Absolute peak power on the negative offset A	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz
10k + 4, k = 0		Others: dBm
5	Peak power offset frequency from the center or carrier edge frequency in the negative offset A	Hz
10k + 5, k = 0	Depends on the setting of "Offset Freq Define" on page 870	

#	Item	Unit
6	Relative integrated power on the positive offset A	When "Measurement Type" on page 929 is Total Power Ref: dBc
10k + 6, k = 0	Returns NaN when "Measurement Type" on page 929 is Spectrum Peak Ref	When PSD: dB
7	Absolute integrated power on the positive offset A	When "Measurement Type" on page 929 is Total Power Ref: dBm
10k + 7, k = 0	Returns NaN when "Measurement Type" on page 929 is Spectrum Peak Ref	When PSD: dBm/Hz
8	Relative peak power on the positive offset A	When "Measurement Type" on page 929 is Total Power Ref: dBc
10k + 8, k = 0		Others: dB
9	Absolute peak power on the positive offset A	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz
10k + 9, k = 0		Others: dBm
10	Peak power offset frequency from the center or carrier edge frequency in the positive offset A	Hz
10k + 10, k = 0	Depends on the setting of "Offset Freq Define" on page 870	
---		
120	Peak power offset frequency from the center or carrier edge frequency in the positive offset L	Hz
10k + 10, k = 11	Depends on the setting of "Offset Freq Define" on page 870	

If the result is not available, NaN (9.91E+37) is returned

### 3.5.9 Results for n = 15

Results available only when "Measurement Type" on page 929 is Total Power Reference.

Returns comma-separated scalar results

For MSR, 5G NR, LTEAFDD, and LTEATDD Modes, returns outer offset results when "Non-Contiguous Meas Region" on page 850 is set to **Outer** or **Outer & Inner** (5G NR, LTEAFDD, LTEATDD only), and returns inner offset results when it is set to **Inner**

The results are in the following order:

k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. The number of offsets is 12 (A-L).

#	Item	Unit
1	Minimum margin from limit line on the negative offset A	dB
2k + 1, k = 0		
2	Minimum margin from limit line on the positive offset A	dB
2k + 2, k = 0		

#	Item	Unit
3	Minimum margin from limit line on the negative offset B	dB
$2k + 1, k = 1$		
4	Minimum margin from limit line on the positive offset B	dB
$2k + 2, k = 1$		
---		
24	Minimum margin from limit line on the positive offset L	dB
$2k + 2, k = 11$		

### 3.5.10 Results for n = 16

Returns number of carriers comma-separated scalar results, in the following order:

#	Item	Unit
1	Absolute power of carrier 1	dBm
2	Absolute power of carrier 2	dBm
	---	
number of carriers - 1	Absolute power of carrier (number of carriers) - 1	dBm
number of carriers	Absolute power of carrier (number of carriers)	dBm

If Measure Carrier of the corresponding carrier is no, **NaN** (9.91E+37) is returned

If the result is not available, **NaN** (9.91E+37) is returned

### 3.5.11 Results for n = 17

Returns the displayed frequency domain combined limit trace data separated by comma. Combined trace is a mixed trace of both absolute limit trace and relative limit trace according to the fail mask condition

### 3.5.12 Results for n = 18-20

n	Return Value
18	Returns the displayed frequency domain spectrum trace data for Trace 2 separated by commas
19	Returns the displayed frequency domain spectrum trace data for Trace 3 separated by commas
20	Returns the displayed frequency domain absolute 2 limit trace data, separated by commas

### 3.5.13 Results for n = 21

The results consist of seven categories:

- 1-10 (outer reference powers)
- 11-130 (outer offset results)
- 131-154 (outer minimum margins)
- 155-170 (reserved)
- 171-180 (inner reference powers)
- 181-300 (inner offset results)
- 301-324 (inner minimum margins)

"Non-Contiguous Meas Region" on page 850	Results returned
<b>Outer</b>	Outer offset results. For items returning an inner offset result, returns <b>NaN</b>
<b>Inner</b>	Inner offset results. For items returning an outer offset result, returns <b>NaN</b>
<b>Outer &amp; Inner</b>	Both outer and inner offset results

Available Power Ref selections differ depending on the mode. For details, see ["Power Ref" on page 930](#)

Below, k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. For these Modes, the number of offsets is always 12 (A-L).

#	Item	Unit, if any								
1	Total Absolute power of carriers of Measure Carrier On if available Otherwise, <b>NaN</b>									
2	Reference power for outer offset	When <a href="#">"Measurement Type" on page 929</a> is PSD Ref: dBm/Hz Others: dBm								
	<table border="1"> <thead> <tr> <th>Power Ref</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Left &amp; Right Carriers</td> <td>Power<sup>(*1)</sup> at the left reference carrier</td> </tr> <tr> <td>Max Power Carrier in Sub-block</td> <td>Power<sup>(*1)</sup> at the reference carrier of the left sub-block</td> </tr> <tr> <td>Left &amp; Right Sub-blocks</td> <td>Power<sup>(*2)</sup> in the left sub-block</td> </tr> </tbody> </table>	Power Ref	Result	Left & Right Carriers	Power <sup>(*1)</sup> at the left reference carrier	Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the left sub-block	Left & Right Sub-blocks	Power <sup>(*2)</sup> in the left sub-block	
Power Ref	Result									
Left & Right Carriers	Power <sup>(*1)</sup> at the left reference carrier									
Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the left sub-block									
Left & Right Sub-blocks	Power <sup>(*2)</sup> in the left sub-block									
3	Reference power for outer offset	When <a href="#">"Measurement Type" on page 929</a> is PSD Ref: dBm/Hz Others: dBm								
	<table border="1"> <thead> <tr> <th>Power Ref</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>Left &amp; Right Carriers</td> <td>Power<sup>(*1)</sup> at the right reference</td> </tr> </tbody> </table>	Power Ref	Result	Left & Right Carriers	Power <sup>(*1)</sup> at the right reference					
Power Ref	Result									
Left & Right Carriers	Power <sup>(*1)</sup> at the right reference									

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

#	Item	Unit, if any
	<b>Power Ref</b>	<b>Result</b>
		carrier
	Max Power Carrier in Sub-block	Power <sup>(*1)</sup> at the reference carrier of the right sub-block
	Left & Right Sub-blocks	Power <sup>(*2)</sup> in the right sub-block
	All others	NaN
4	Reserved for future use, returns NaN	
5	Peak frequency in the reference channel spacing frequency range for outer offset	Hz
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Peak frequency in the left ref carrier frequency range
	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the left sub-block
	Left & Right Sub-blocks	Peak frequency in the left reference sub-block frequency range
	RF Bandwidth & Aggregated Channel Bandwidth	Peak frequency in the reference channel bandwidth frequency range
6	Peak frequency in the right reference channel spacing frequency range for outer offset	Hz
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Peak frequency in the right ref carrier frequency range
	Max Power Carrier in Sub-block	Peak frequency in the ref carrier frequency range of the right sub-block
	Left & Right Sub-blocks	Peak frequency in the right reference sub-block frequency range
	All others	NaN
7~10	Reserved for future use, returns NaN	
11	Relative integrated power on the negative offset A for outer	dB
10k + 11, k = 0		
12	Absolute integrated power on the negative offset A for outer	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz
10k + 12, k =		

#	Item	Unit, if any
0		Others: dBm
13	Relative peak power on the negative offset A for outer	dB
10k + 13, k = 0		
14	Absolute peak power on the negative offset A for outer	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
10k + 14, k = 0		
15	Peak power offset frequency from the center or carrier edge frequency in the negative offset A for outer	Hz
10k + 15, k = 0	Depends on the setting of "Offset Freq Define" on page 870	
16	Relative integrated power on the positive offset A for outer	dB
10k + 16, k = 0		
17	Absolute integrated power on the positive offset A for outer	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
10k + 17, k = 0		
18	Relative peak power on the positive offset A for outer	dB
10k + 18, k = 0		
19	Absolute peak power on the positive offset A for outer	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
10k + 19, k = 0		
20	Peak power offset frequency from the center or carrier edge frequency in the positive offset A for outer	Hz
10k + 20, k = 0	Depends on the setting of "Offset Freq Define" on page 870	
130	Peak power offset frequency from the center or carrier edge frequency in the positive offset L for outer	dB
10k + 20, k = 11	Depends on the setting of Offset Freq Define	
...		
131	Minimum margin from limit line on the negative offset A for outer	dB
2k + 131, k = 0		
132	Minimum margin from limit line on the positive offset A for outer	dB
2k + 132, k = 0		
---		
154	Minimum margin from limit line on the positive offset L for outer	dB
2k + 132 K = 11		
155~171	Reserved for future use, returns NaN	

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

#	Item	Unit, if any
172	Reference power for inner offset	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Power <sup>(*1)</sup> at the left reference carrier
	All others	NaN
173	Reference power for inner offset	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Power <sup>(*1)</sup> at the right reference carrier
	All others	NaN
174	Reserved for future use, returns NaN	
175	Peak frequency in the reference channel spacing frequency range for inner offset	Hz
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Peak frequency in the left ref carrier frequency range
	All others	NaN
176	Peak frequency in the right reference channel spacing frequency range for inner offset	Hz
	<b>Power Ref</b>	<b>Result</b>
	Left & Right Carriers	Peak frequency in the right ref carrier frequency range
	All others	NaN
177~180	Reserved for future use, returns NaN	
181	Relative integrated power on the negative offset A for inner	dB
10k + 181, k = 0		
182	Absolute integrated power on the negative offset A for inner	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
10k + 182, k = 0		
183	Relative peak power on the negative offset A for inner	dB
10k + 183, k = 0		
184	Absolute peak power on the negative offset A for inner	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
10k + 184, k = 0		
185	Peak power offset frequency from the center or carrier edge	Hz

#	Item	Unit, if any
10k + 185, k = 0	frequency in the negative offset A for inner Depends on the setting of "Offset Freq Define" on page 870	
186 10k + 186, k = 0	Relative integrated power on the positive offset A for inner	dB
187 10k + 187, k = 0	Absolute integrated power on the positive offset A for inner	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
188 10k + 188, k = 0	Relative peak power on the positive offset A for inner	dB
189 10k + 189, k = 0	Absolute peak power on the positive offset A for inner	When "Measurement Type" on page 929 is PSD Ref: dBm/Hz Others: dBm
190 10k + 190, k = 0	Peak power offset frequency from the center or carrier edge frequency in the positive offset A for inner Depends on the setting of "Offset Freq Define" on page 870	Hz
---		
300 10k + 190, k=11	Peak power offset frequency from the center or carrier edge frequency in the positive offset L for inner Depends on the setting of Offset Freq Define	
301 2k + 301, k = 0	Minimum margin from limit line on the negative offset A for inner	dB
302 2k + 302, k = 0	Minimum margin from limit line on the positive offset A for inner	dB
---		
324 2k + 302, k = 11	Minimum margin from limit line on the positive offset L for inner	dB

\*1: Absolute power when "Measurement Type" on page 929 is Total Power Ref or PSD Ref; Peak Power when "Measurement Type" on page 929 is Spectrum Peak Ref

\*2: Integrated power when "Measurement Type" on page 929 is Total Power Ref or PSD Ref; Peak Power when "Measurement Type" on page 929 is Spectrum Peak Ref

### 3.5.14 Results for n = 22

Returns comma-separated pass/fail test results (0 = passed, or 1 = failed) determined by testing the minimum margin point from the limit line that is determined each offset's Limits setting.

"Non-Contiguous Meas Region" on page 850	Results returned
Outer	Outer offset results. For items returning an inner offset result, returns NaN
Inner	Inner offset results. For items returning an outer offset result, returns NaN
Outer & Inner	Both outer and inner offset results

Below, k is an index for each offset: k = 0 for offset A; k = 1 for offset B; k = 2 for offset C, etc. For these Modes, the number of offsets is always 12 (A-L).

#	Item
1	Reserved for future use, returns NaN
2	Reserved for future use, returns NaN
3	At negative offset A for outer
2k + 3, k = 0	
4	At positive offset A for outer
2k + 4, k = 0	
---	
26	At positive offset L for outer
2k + 4, k = 11	
27~32	Reserved for future use, returns NaN
33	At negative offset A for inner
2k + 33, k = 0	
34	At positive offset A for inner
2k + 34, k = 0	
---	
56	At positive offset L for inner
2k + 34, k = 11	

### 3.5.15 Number of Offsets

The number of available offsets varies depending on the mode and option as below.

Mode	Number of available offsets
MSR LTEAFDD, LTEATDD, 5G NR	12 (Offset A to L)
WLAN	14 (Offset A to N)
Other Modes with option: N9060A-7FP, N9060B-2FP, N9060C-2FP, N9060EM1D, N9060EM1E, or N90EMPSMB	12 (Offset A to L)
Other Modes without option N9060A-7FP, N9060B-2FP, N9060C-2FP, N9060EM1D, N9060EM1E, or N90EMPSMB	6 (Offset A to F)

### 3.5.16 Views

All Modes provide three predefined views. In MSR, LTE-Advanced FDD/TDD and 5G NR Modes, there is also a fourth predefined view. The views are listed in the table below.

In the following table:

- The Enumerated ID is used with `:DISP:SEM:VIEW`
- The Numeric ID is used with `:DISP:SEM:VIEW:NSEL`

View Name	Enumerated ID	Numeric ID	Details
"Abs Pwr Freq" on page 779	APFReq	1	Displays the absolute power levels in dBm and the corresponding frequencies in the text window
"Rel Pwr Freq" on page 779	RPFReq	2	Displays the relative power levels in dBc and the corresponding frequencies in the text window
"Integrated Power" on page 780	IPOWer	3	Displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the text window
"Carrier Info" on page 780	CINFormation	4	Displays the carrier info table Only available in MSR, LTE-Advanced FDD/TDD and 5G NR Modes MSR is not supported in UXM

#### View Selection by Name

---

Remote Command `:DISPlay:SEMask:VIEW[:SElect] APFReq | RPFReq | IPOWer | CINFormation`  
`:DISPlay:SEMask:VIEW[:SElect]?`

---

Example `:DISP:SEM:VIEW IPOW`

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

---

	<code>:DISP:SEM:VIEW?</code>
Dependencies	In SA Mode, when <b>Radio Standard</b> is set to WLAN, <b>IPower</b> is not available <b>CINformation</b> is available only in MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Preset	<b>APFReq</b> unless noted below <b>RPFReq</b> WLAN
State Saved	Saved in instrument state
Range	Abs Pwr Freq  Rel Pwr Freq Integrated Power Carrier Info

### Views Selection by Number

---

Remote Command	<code>:DISPlay:SEMask:VIEW:NSElect &lt;integer&gt;</code> <code>:DISPlay:SEMask:VIEW:NSElect?</code>
Example	<code>:DISP:SEM:VIEW:NSEL 2</code> <code>:DISP:SEM:VIEW:NSEL?</code>
Dependencies	In SA Mode, when <b>Radio Standard</b> is set to WLAN, Option 3 is not available Option 4 is available only in MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Preset	1 unless noted below: 2 WLAN
State Saved	Saved in instrument state
Min/Max	MSR, LTEAFDD, LTEATDD, 5G NR Modes 1/4 All other Modes 1/3

#### 3.5.16.1 Abs Pwr Freq

Displays the absolute power levels in dBm and the corresponding frequencies in the text window.

Windows: "Graph" on page 780, "Table" on page 785

---

Example	<code>:DISP:SEM:VIEW APFR</code>
---------	----------------------------------

#### 3.5.16.2 Rel Pwr Freq

Displays the relative power levels in dBc and the corresponding frequencies in the text window.

Windows: "Graph" on page 780, "Table" on page 785

---

Example	<code>:DISP:SEM:VIEW RPFPR</code>
---------	-----------------------------------

### 3.5.16.3 Integrated Power

Displays the absolute and relative power levels integrated throughout the bandwidths between the start and stop frequencies in the text window.

Windows: "Graph" on page 780, "Table" on page 785

---

Example `:DISP:SEM:VIEW IPOW`

### 3.5.16.4 Carrier Info

Only available in MSR, LTE-Advanced and 5G NR Modes.

Displays the carrier configuration information with measure powers. Sets the display to the **Carrier Info** view. The lower window is the carrier info table in this view.

Windows: "Graph" on page 780, "Table" on page 785

---

Example `:DISP:SEM:VIEW CINF`

Dependencies Only available in MSR, LTE-Advanced FDD/TDD and 5G NR Modes

## 3.5.17 Windows

There are four available window types:

- In all Modes, the "Graph" on page 780 and "Table" on page 785 windows are available
- In the MSR, LTE-Advanced FDD/TDD and 5G NR Modes, an additional window, **Carrier Info**, is available. For details, see the **View** topic for "Carrier Info" on page 780
- When **Gate View** is on, the "Gate" on page 795 window is available

This section describes the windows.

### 3.5.17.1 Graph

Used to display the spectrum being measured by the SEM measurement.

This window appears in several Views, as follows:

View	Size	Position
Abs Pwr Freq	Three fifth, full width	Top

3 LTE & LTE-A TDD Mode  
 3.5 SEM Measurement


View	Size	Position
Rel Pwr Freq	Three fifth, full width	Top
Integrated Power	Three fifth, full width	Top
Gate View	One third, full width	Middle

The Graph differs depending on which View you are in. The views differ depending on the setting of the measurement type ("**Measurement Type**" on page 929) under the **Meas Setup** menu


### Graph Window in Abs Pwr Freq View

Corresponding Trace                      yellow - Combined trace from carrier and each offset


Abs Peak Pwr & Freq (Total Pwr Ref)

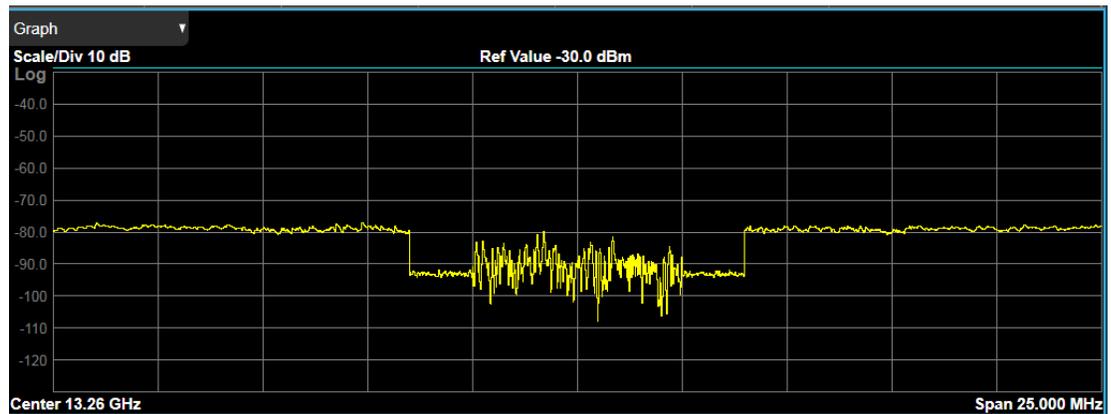

Abs Peak Pwr & Freq (PSD Ref)

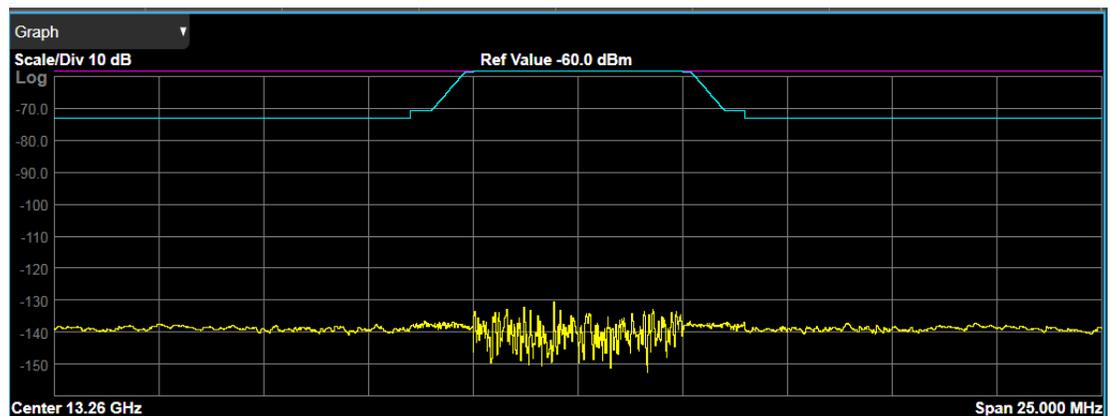


Abs Peak Pwr & Freq (Spectrum Pk Ref)

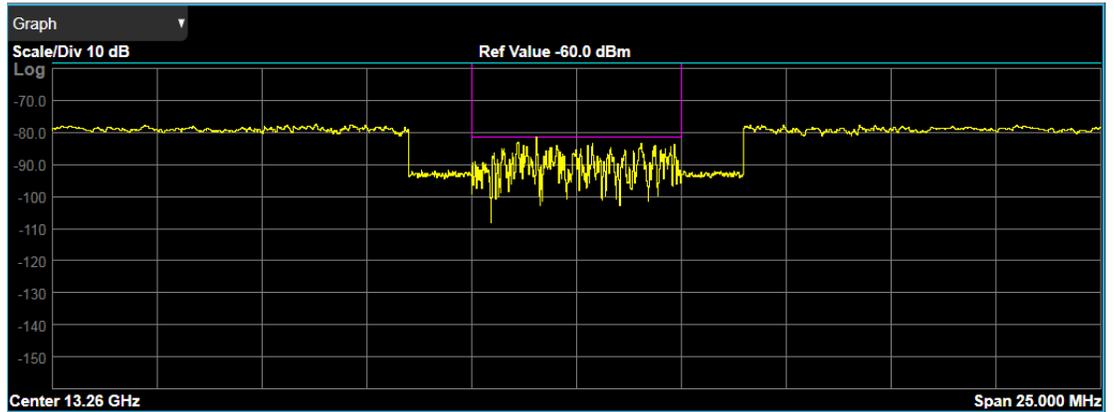


### Graph Window in Rel Pwr Freq View

Corresponding Trace yellow - Combined trace from carrier and each offset

Rel Peak Pwr & Freq (Total Pwr Ref)

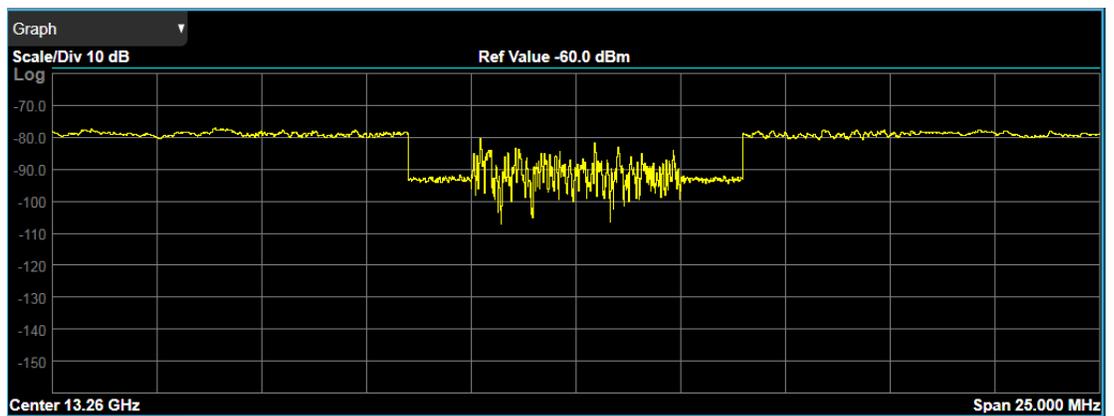


Rel Peak Pwr & Freq (PSD Ref)

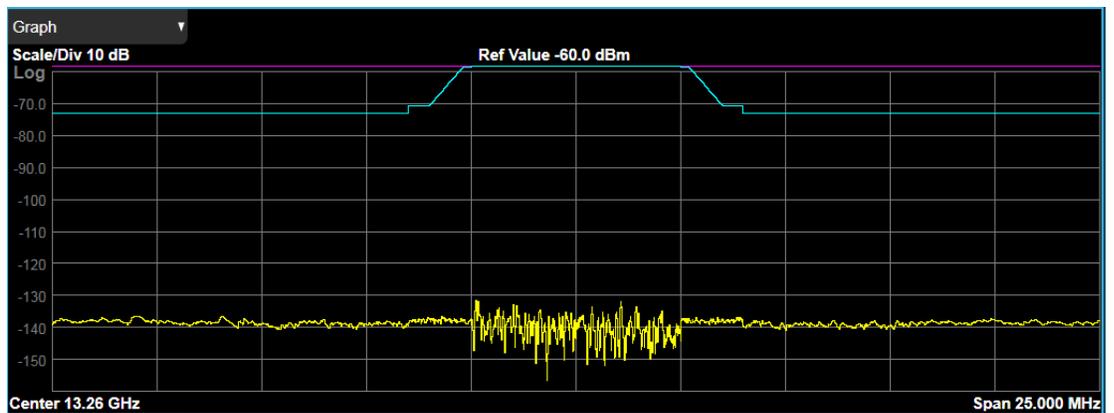


Rel Peak Pwr & Freq (Spectrum Pk Ref)

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

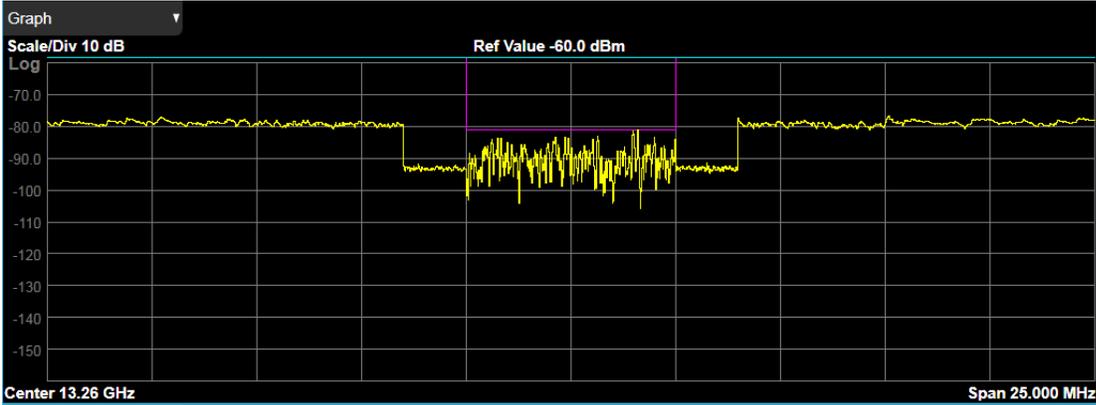


**Graph Window in Integrated Power View**


Corresponding Trace                      yellow - Combined trace from carrier and each offset  
Integrated Power (Total Pwr Ref)

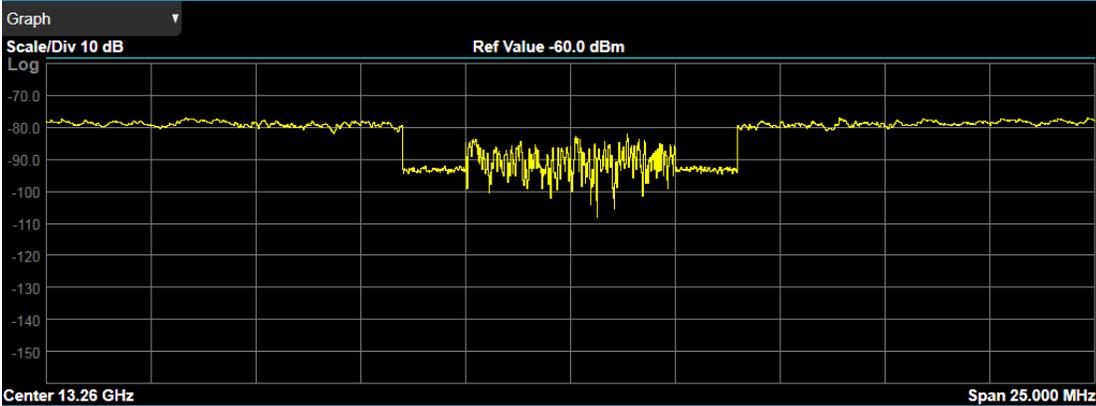

Integrated Power (PSD Ref)

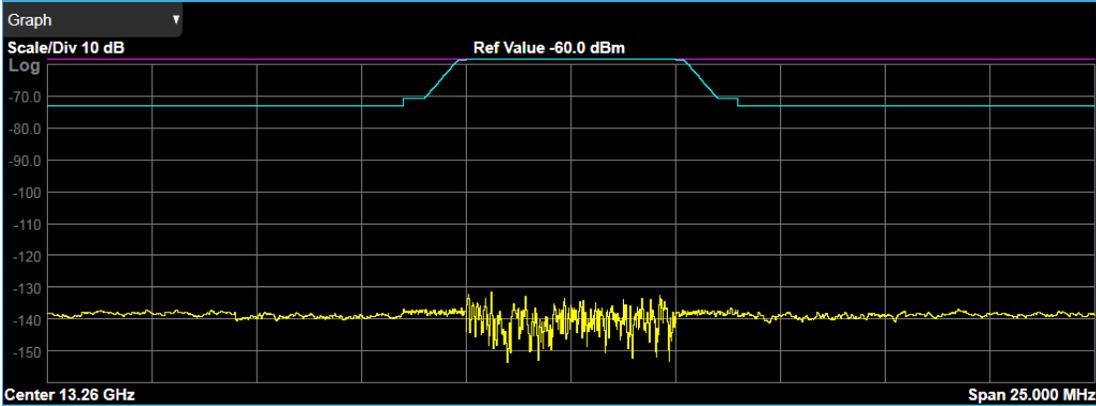


Integrated Power (Spectrum Pk Ref)

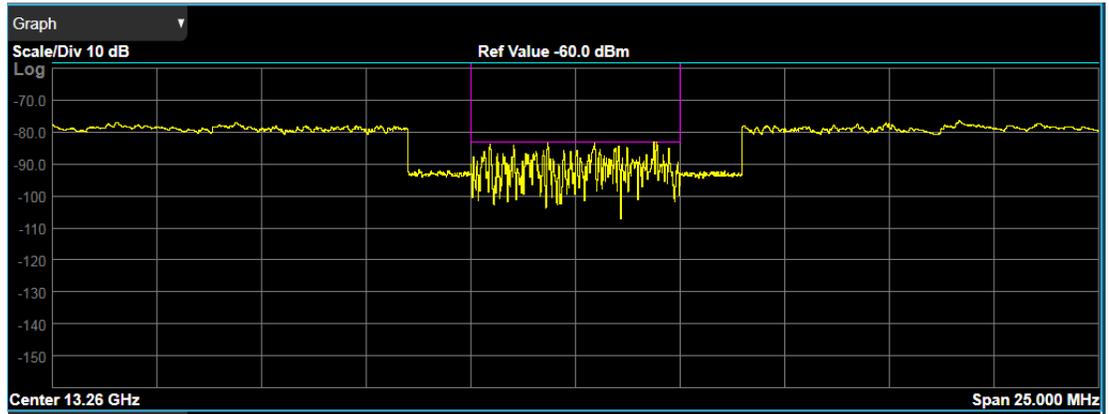

### Graph Window in Carrier Info View


Sets the display to the carrier info view. The views differ depending on the setting of "Measurement Type" on page 929.

Spectrum trace (Total Pwr Ref)

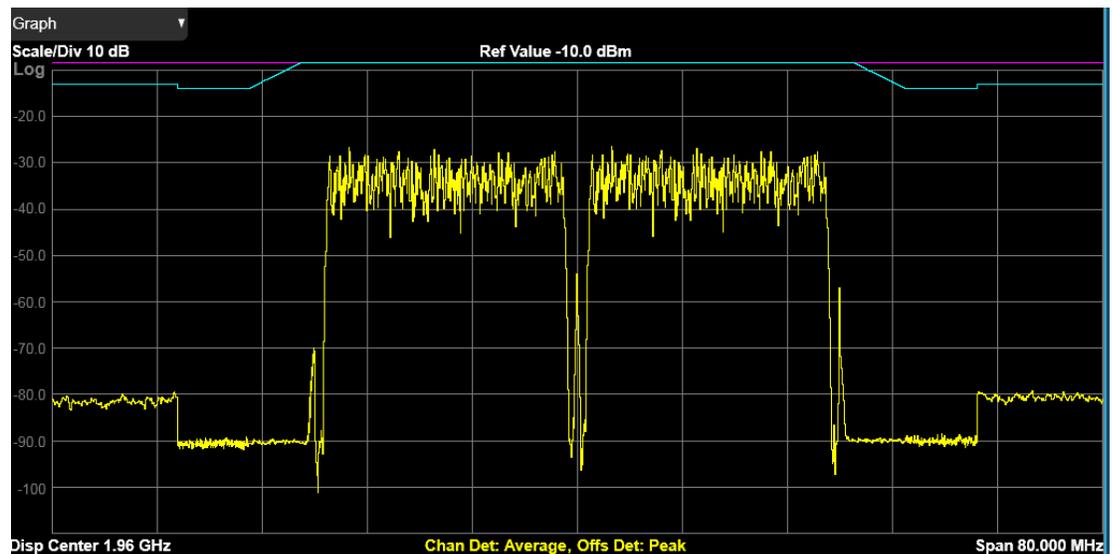


Spectrum trace (PSD Ref)

3 LTE & LTE-A TDD Mode  
 3.5 SEM Measurement

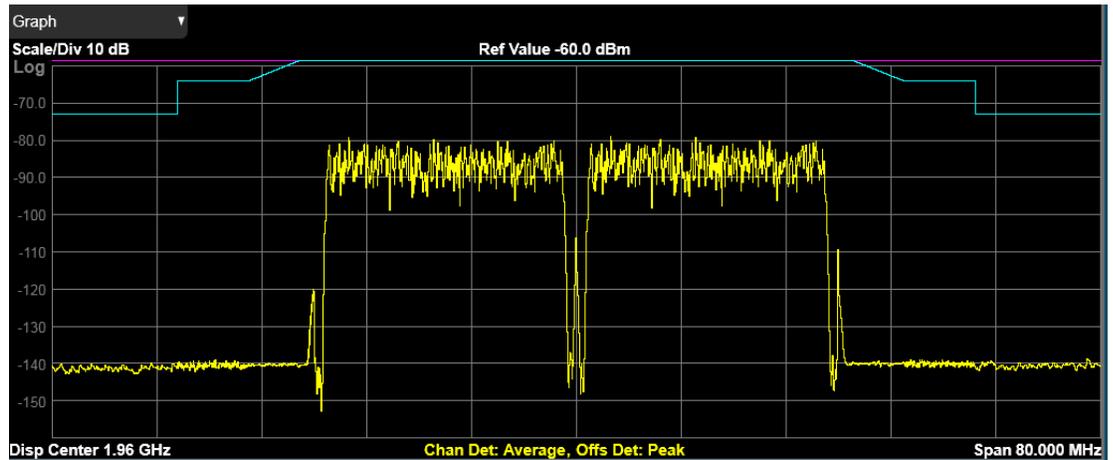

Spectrum trace (Spectrum Pk Ref)

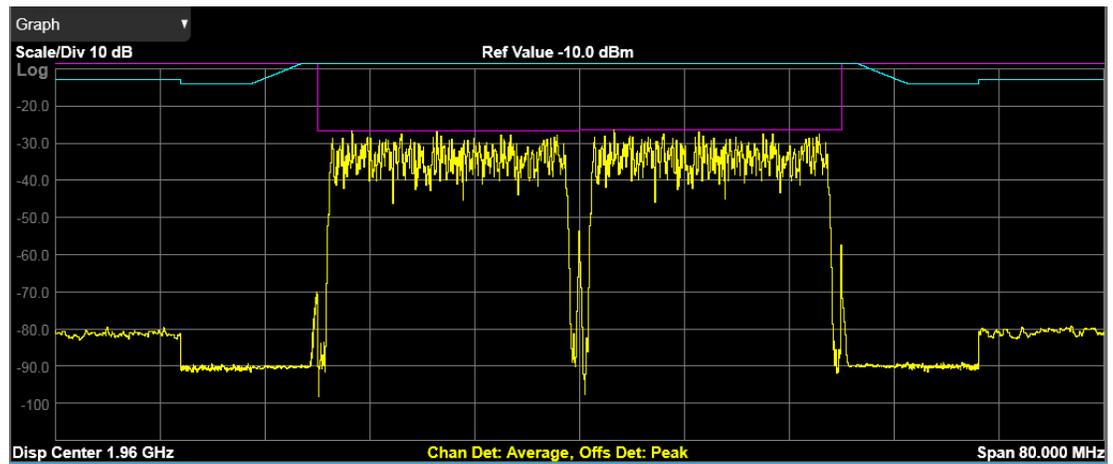

### 3.5.17.2 Table

Displays textual results for the measurement. The Table differs depending on which View you are in.

The views differ depending on the setting of "Measurement Type" on page 929.

View	Size	Position
Abs Pwr Freq	Two fifth, full width	Bottom
Rel Pwr Freq	Two fifth, full width	Bottom
Integrated Power	Two fifth, full width	Bottom
Gate View	One third, full width	Bottom

### Table Window in Abs Pwr Freq View

Name (Measurement Type)	Unit, if any	Corresponding Results
Power		n = 1 2nd element Absolute power at the reference area
Reference		In multi-carrier applications, this column displays which carrier is reference carrier
PSD Ref (PSD Ref)		n = 5 1st element Power spectral density reference at the reference area
Spectrum Peak ref (Spectrum Pk Ref)		n = 5 1st element Spectrum peak power reference at the reference area
Measure Trace		See " <a href="#">Measure Trace</a> " on page 1155
Start Freq	Hz	Start frequency for offset
Stop Freq	Hz	Stop frequency for offset
Integ BW	Hz	Measurement bandwidth for offset
Lower Peak (Total Power Ref, Spectrum Pk Ref)	dBm	Absolute peak power on minimum margin point of the negative offset
Lower (PSD Ref)	dBm/Hz	Absolute power spectrum density of the negative offset
Lower $\Delta$ lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq	Hz	Frequency on minimum margin point of the negative offset
Upper Peak (Total Power Ref, Spectrum Pk Ref)	dBm	Absolute peak power on minimum margin point of the positive offset
Upper (PSD Ref)	dBm/Hz	Absolute power spectrum density of the positive offset
Upper $\Delta$ lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq	Hz	Frequency on minimum margin point of the positive offset

### When Measurement Type is Total Power Ref

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

2 Table		Power		Measure Trace					
		-75.08 dBm / 3.84 MHz		Trace 1					
Start Freq	Stop Freq	Integ BW	dBm	Lower ΔLimit(dB)	Freq (Hz)	dBm	Upper ΔLimit(dB)	Freq (Hz)	
2.515 MHz	2.715 MHz	30.00 kHz	-97.53	(-83.53)	-2.650 M	-97.85	(-83.85)	2.680 M	
2.715 MHz	3.515 MHz	30.00 kHz	-99.02	(-73.17)	-3.505 M	-96.22	(-70.37)	3.505 M	
3.515 MHz	4.000 MHz	30.00 kHz	-98.01	(-72.01)	-3.595 M	-97.50	(-71.50)	3.963 M	
4.000 MHz	8.000 MHz	1.000 MHz	-84.11	(-71.11)	-6.488 M	-82.54	(-69.54)	5.450 M	
8.000 MHz	12.50 MHz	1.000 MHz	-82.36	(-69.36)	-9.300 M	-83.15	(-70.15)	11.23 M	
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---	
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---	

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference	Power		Measure Trace			
		Sub-block Left	-60.63 dBm / 99.97 MHz		Trace 1			
		Sub-block Right	-60.63 dBm / 99.97 MHz					
Start Freq	Stop Freq	Integ BW	dBm	Lower ΔLimit(dB)	Freq (Hz)	dBm	Upper ΔLimit(dB)	Freq (Hz)
50.00 kHz	5.050 MHz	102.0 kHz	-89.50	(-77.23)	-4.884 M	-89.58	(-77.08)	5.050 M
5.050 MHz	10.05 MHz	100.0 kHz	-87.86	(-75.36)	-6.725 M	-87.98	(-75.48)	7.675 M
10.50 MHz	40.00 MHz	1.000 MHz	-20.42	(-5.42)	-14.80 M	-78.24	(-63.24)	35.65 M
40.00 MHz	100.0 MHz	1.000 MHz	-77.73	(-62.73)	-57.55 M	-77.94	(-62.94)	59.95 M
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---

When Measurement Type is PSD Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		PSD Ref		Measure Trace		
		-75.55 dBm / 3.84 MHz		-141.39 dBm/Hz		Trace 1		
Start Freq	Stop Freq	Integ BW	dBm/Hz	Lower ΔLimit(dB)	Freq (Hz)	dBm/Hz	Upper ΔLimit(dB)	Freq (Hz)
2.515 MHz	2.715 MHz	30.00 kHz	-145.39	(-84.46)	-2.553 M	-144.42	(-82.94)	2.658 M
2.715 MHz	3.515 MHz	30.00 kHz	-144.96	(-73.59)	-3.515 M	-144.86	(-72.24)	3.513 M
3.515 MHz	4.000 MHz	30.00 kHz	-144.92	(-70.74)	-3.843 M	-145.04	(-71.79)	3.558 M
4.000 MHz	8.000 MHz	1.000 MHz	-146.73	(-71.41)	-5.950 M	-146.24	(-70.80)	7.525 M
8.000 MHz	12.50 MHz	1.000 MHz	-145.26	(-69.37)	-11.89 M	-145.49	(-69.12)	8.388 M
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference	Power		PSD Ref		Measure Trace	
		Sub-block Left	-60.39 dBm / 99.97 MHz		-140.39 dBm/Hz		Trace 1	
		Sub-block Right	-60.39 dBm / 99.97 MHz		-140.39 dBm/Hz			
Start Freq	Stop Freq	Integ BW	dBm/Hz	Lower ΔLimit(dB)	Freq (Hz)	dBm/Hz	Upper ΔLimit(dB)	Freq (Hz)
50.00 kHz	5.050 MHz	102.0 kHz	-139.82	(-77.24)	-5.050 M	-139.86	(-77.14)	5.050 M
5.050 MHz	10.05 MHz	100.0 kHz	-139.53	(-75.14)	-6.375 M	-139.45	(-75.05)	8.900 M
10.50 MHz	40.00 MHz	1.000 MHz	-94.24	(-5.41)	-14.80 M	-139.59	(-62.92)	34.00 M
40.00 MHz	100.0 MHz	1.000 MHz	-139.81	(-62.31)	-69.55 M	-139.88	(-62.73)	54.70 M
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---

### When Measurement Type is Spectrum Pk Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		Spectrum Peak Ref		Measure Trace		
		-74.79 dBm / 3.84 MHz		-82.60 dBm		Trace 1		
Start Freq	Stop Freq	Integ BW	dBm	Lower ΔLimit(dB)	Freq (Hz)	Upper dBm	ΔLimit(dB)	Freq (Hz)
2.515 MHz	2.715 MHz	30.00 kHz	-99.47	(-85.47)	-2.545 M	-98.13	(-84.13)	2.538 M
2.715 MHz	3.515 MHz	30.00 kHz	-98.92	(-73.18)	-3.498 M	-97.29	(-71.55)	3.498 M
3.515 MHz	4.000 MHz	30.00 kHz	-98.39	(-72.39)	-3.835 M	-97.40	(-71.40)	3.723 M
4.000 MHz	8.000 MHz	1.000 MHz	-84.06	(-71.06)	-5.250 M	-83.22	(-70.22)	6.663 M
8.000 MHz	12.50 MHz	1.000 MHz	-82.52	(-69.52)	-9.313 M	-82.16	(-69.16)	12.26 M
12.50 MHz	15.00 MHz	1.000 MHz	---	(--)	---	---	(--)	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(--)	---	---	(--)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		Spectrum Peak Ref		Measure Trace	
		Sub-block Left		-60.60 dBm / 99.97 MHz		-74.10 dBm		Trace 1	
		Sub-block Right		-60.60 dBm / 99.97 MHz		-74.10 dBm			
Start Freq	Stop Freq	Integ BW	dBm	Lower ΔLimit(dB)	Freq (Hz)	Upper dBm	ΔLimit(dB)	Freq (Hz)	
50.00 kHz	5.050 MHz	102.0 kHz	-89.75	(-77.34)	-4.986 M	-89.69	(-77.19)	5.050 M	
5.050 MHz	10.05 MHz	100.0 kHz	-87.79	(-75.29)	-8.875 M	-87.91	(-75.41)	8.975 M	
10.50 MHz	40.00 MHz	1.000 MHz	-20.42	(-5.42)	-14.80 M	-77.91	(-62.91)	31.00 M	
40.00 MHz	100.0 MHz	1.000 MHz	-77.44	(-62.44)	-47.80 M	-78.05	(-63.05)	41.35 M	
100.0 MHz	500.0 MHz	1.000 MHz	---	(--)	---	---	(--)	---	
100.0 MHz	500.0 MHz	1.000 MHz	---	(--)	---	---	(--)	---	
100.0 MHz	500.0 MHz	1.000 MHz	---	(--)	---	---	(--)	---	

### Table Window in Rel Pwr Freq View

Name (Measurement Type)	Unit, if any	Corresponding Results
Power		n = 1 2nd element Absolute power at the reference area
Reference		In multi-carrier applications, this column displays which carrier is reference carrier
PSD Ref		n=5 1st element Power spectral density reference at the reference area
Spectrum Peak Ref		n = 5 1st element Spectrum peak power reference at the reference area
Measure Trace		See " <a href="#">Measure Trace</a> " on page 1155
Start Freq	Hz	Start frequency for offset

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Name (Measurement Type)	Unit, if any	Corresponding Results
Stop Freq	Hz	Stop frequency for offset
Integ BW	Hz	Measurement bandwidth for offset
Lower Peak (Total Pwr Ref, Spectrum Pk Ref)	dBc (Total Pwr Ref) dB (Spectrum Pk Ref)	Relative peak power on minimum margin point of the negative offset
Lower (PSD Ref)	dB	Relative power spectrum density of the negative offset
Lower $\Delta$ Lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Freq	Hz	Frequency on minimum margin point of the negative offset
Upper Peak (Total Pwr Ref, Spectrum Pk Ref)	dBc (Total Pwr Ref) dB (Spectrum Pk Ref)	Relative peak power on minimum margin point of the positive offset
Upper (PSD Ref)	dB	Relative power spectrum density of the positive offset
Upper $\Delta$ Lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Freq	Hz	Frequency on minimum margin point of the positive offset

**When Measurement Type is Total Power Ref:**

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power						Measure Trace	
		-75.54 dBm / 3.84 MHz						Trace 1	
Start Freq	Stop Freq	Integ BW	dBc	Lower		dBc	Upper		
				$\Delta$ Limit(dB)	Freq (Hz)		$\Delta$ Limit(dB)	Freq (Hz)	
2.515 MHz	2.715 MHz	30.00 kHz	-23.32	(-84.86)	-2.515 M	-22.02	(-83.56)	2.703 M	
2.715 MHz	3.515 MHz	30.00 kHz	-21.35	(-71.38)	-3.483 M	-21.76	(-71.57)	3.498 M	
3.515 MHz	4.000 MHz	30.00 kHz	-21.68	(-71.22)	-3.633 M	-22.23	(-71.77)	3.790 M	
4.000 MHz	8.000 MHz	1.000 MHz	-8.29	(-70.83)	-6.488 M	-5.96	(-68.50)	5.900 M	
8.000 MHz	12.50 MHz	1.000 MHz	-6.02	(-68.56)	-8.100 M	-6.17	(-68.71)	8.775 M	
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---	
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---	

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		Measure Trace		
		Sub-block Left	-60.67 dBm / 99.97 MHz					Trace 1
		Sub-block Right	-60.67 dBm / 99.97 MHz					
Start Freq	Stop Freq	Integ BW	dBc	ΔLimit(dB)	Freq (Hz)	dBc	ΔLimit(dB)	Freq (Hz)
50.00 kHz	5.050 MHz	102.0 kHz	-28.81	(-76.98)	-5.050 M	-28.69	(-76.99)	4.961 M
5.050 MHz	10.05 MHz	100.0 kHz	-27.13	(-75.30)	-9.275 M	-27.07	(-75.25)	6.200 M
10.50 MHz	40.00 MHz	1.000 MHz	40.24	(-5.43)	-14.80 M	-17.50	(-63.17)	16.30 M
40.00 MHz	100.0 MHz	1.000 MHz	-17.42	(-63.09)	-71.65 M	-17.24	(-62.91)	81.10 M
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---

**When Measurement Type is PSD Ref:**

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		PSD Ref		Measure Trace		
		-75.32 dBm / 3.84 MHz		-141.16 dBm/Hz		Trace 1		
Start Freq	Stop Freq	Integ BW	dB	ΔLimit(dB)	Freq (Hz)	dB	ΔLimit(dB)	Freq (Hz)
2.515 MHz	2.715 MHz	30.00 kHz	-3.38	(-82.66)	-2.553 M	-4.49	(-85.02)	2.680 M
2.715 MHz	3.515 MHz	30.00 kHz	-3.71	(-73.61)	-3.490 M	-3.79	(-73.81)	3.515 M
3.515 MHz	4.000 MHz	30.00 kHz	-3.79	(-71.26)	-3.588 M	-3.48	(-70.88)	3.865 M
4.000 MHz	8.000 MHz	1.000 MHz	-5.66	(-69.72)	-4.300 M	-5.37	(-71.05)	8.000 M
8.000 MHz	12.50 MHz	1.000 MHz	-4.17	(-69.03)	-11.44 M	-4.36	(-68.82)	12.50 M
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		PSD Ref		Measure Trace
		Sub-block Left	-60.58 dBm / 99.97 MHz		-140.58 dBm/Hz		Trace 1	
		Sub-block Right	-60.58 dBm / 99.97 MHz		-140.58 dBm/Hz			
Start Freq	Stop Freq	Integ BW	dB	ΔLimit(dB)	Freq (Hz)	dB	ΔLimit(dB)	Freq (Hz)
50.00 kHz	5.050 MHz	102.0 kHz	0.72	(-77.17)	-5.050 M	0.72	(-77.34)	4.859 M
5.050 MHz	10.05 MHz	100.0 kHz	1.02	(-75.25)	-6.025 M	1.00	(-75.39)	6.450 M
10.50 MHz	40.00 MHz	1.000 MHz	46.32	(-5.39)	-14.80 M	0.90	(-62.81)	26.50 M
40.00 MHz	100.0 MHz	1.000 MHz	0.70	(-62.71)	-72.55 M	0.60	(-63.26)	67.00 M
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---

**When Measurement Type is Spectrum Pk Ref:**

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

2 Table		Power		Spectrum Peak Ref		Measure Trace		
		-75.00 dBm / 3.84 MHz		-82.77 dBm		Trace 1		
Start Freq	Stop Freq	Integ BW	dB	Lower ΔLimit(dB)	Freq (Hz)	dB	Upper ΔLimit(dB)	Freq (Hz)
2.515 MHz	2.715 MHz	30.00 kHz	-14.59	(-83.37)	-2.530 M	-15.11	(-83.88)	2.575 M
2.715 MHz	3.515 MHz	30.00 kHz	-15.41	(-72.22)	-3.513 M	-14.67	(-71.45)	3.515 M
3.515 MHz	4.000 MHz	30.00 kHz	-14.73	(-71.51)	-3.528 M	-12.62	(-69.39)	3.700 M
4.000 MHz	8.000 MHz	1.000 MHz	0.62	(-69.16)	-6.450 M	-0.56	(-70.33)	7.813 M
8.000 MHz	12.50 MHz	1.000 MHz	-0.34	(-70.12)	-11.18 M	0.72	(-69.05)	11.44 M
12.50 MHz	15.00 MHz	1.000 MHz	—	(—)	—	—	(—)	—

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Reference		Power		Spectrum Peak Ref		Measure Trace	
		Sub-block Left		-60.58 dBm / 99.97 MHz		-74.09 dBm		Trace 1	
		Sub-block Right		-60.58 dBm / 99.97 MHz		-74.09 dBm			
Start Freq	Stop Freq	Integ BW	dB	Lower ΔLimit(dB)	Freq (Hz)	dB	Upper ΔLimit(dB)	Freq (Hz)	
50.00 kHz	5.050 MHz	102.0 kHz	-15.34	(-77.14)	-4.897 M	-15.66	(-77.27)	5.037 M	
5.050 MHz	10.05 MHz	100.0 kHz	-13.91	(-75.50)	-5.475 M	-13.91	(-75.50)	7.775 M	
10.50 MHz	40.00 MHz	1.000 MHz	53.62	(-5.47)	-14.80 M	-3.87	(-62.96)	18.85 M	
40.00 MHz	100.0 MHz	1.000 MHz	-3.51	(-62.60)	-99.25 M	-3.65	(-62.74)	96.70 M	
100.0 MHz	500.0 MHz	1.000 MHz	—	(—)	—	—	(—)	—	
100.0 MHz	500.0 MHz	1.000 MHz	—	(—)	—	—	(—)	—	

### Table Window in Integrated Power View

Name (Measurement Type)	Unit, if any	Corresponding Results
Power		n = 1 2nd element Absolute power at the reference area
Reference		In multi-carrier applications, this column displays which carrier is reference carrier
PSD Ref		n = 5 1st element Power spectral density reference at the reference area
Spectrum Peak Ref		n = 5 1st element Peak power at the reference area
Measure Trace		See " <a href="#">Measure Trace</a> " on page 1155
Start Freq	Hz	Start frequency for offset
Stop Freq	Hz	Stop frequency for offset
Integ BW	Hz	Measurement bandwidth for offset
Lower Integ (Total Power Ref)	dBc	Relative integrated power on the negative offset
Lower (PSD Ref)	dB	Relative power spectrum density of the negative offset
Lower Peak (Spectrum Pk Ref)	dB	Relative peak power on minimum margin point of the negative offset

Name (Measurement Type)	Unit, if any	Corresponding Results
Lower $\Delta$ Lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the negative offset
Lower Integ (Total Power Ref)	dBm	Absolute integrated power on the negative offset
Lower (PSD Ref)	dBm/Hz	Absolute power spectrum density of the negative offset
Lower Peak (Spectrum Pk Ref)	dBm	Absolute peak power on minimum margin point of the negative offset
Upper Integ (Total Power Ref)	dBc	Relative integrated power on the positive offset
Upper (PSD Ref)	dB	Relative power spectrum density of the positive offset
Upper Peak (Spectrum Pk Ref)	dB	Relative peak power on minimum margin point of the positive offset
Upper $\Delta$ Lim	dB	Minimum margin from limit line which is decided by Fail Mask setting on the positive offset
Upper Integ (Total Power Ref)	dBm	Absolute integrated power on the positive offset
Upper (PSD Ref)	dBm/Hz	Absolute power spectrum density of the positive offset
Upper Peak (Spectrum Pk Ref)	dBm	Absolute peak power on minimum margin point of the positive offset

**When Measurement Type is Total Power Ref:**

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table		Power		Measure Trace				
		-74.97 dBm / 3.84 MHz		Trace 1				
Start Freq	Stop Freq	Integ BW	Lower			Upper		
			dBc	$\Delta$ Limit(dB)	dBm	dBc	$\Delta$ Limit(dB)	dBm
2.515 MHz	2.715 MHz	30.00 kHz	-17.16	(-84.04)	-92.13	-17.07	(-83.72)	-92.04
2.715 MHz	3.515 MHz	30.00 kHz	-11.02	(-73.04)	-85.99	-10.76	(-70.18)	-85.73
3.515 MHz	4.000 MHz	30.00 kHz	-12.97	(-71.13)	-87.94	-13.10	(-70.37)	-88.07
4.000 MHz	8.000 MHz	1.000 MHz	-5.58	(-67.90)	-80.55	-5.64	(-69.89)	-80.61
8.000 MHz	12.50 MHz	1.000 MHz	-4.10	(-68.15)	-79.07	-4.15	(-69.25)	-79.12
12.50 MHz	15.00 MHz	1.000 MHz	---	(--)	---	---	(--)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

2 Table			Reference		Power			Measure Trace	
			Sub-block Left		-60.67 dBm / 99.97 MHz			Trace 1	
			Sub-block Right		-60.67 dBm / 99.97 MHz				
Start Freq	Stop Freq	Integ BW	Lower			Upper			
			dBc	ΔLimit(dB)	dBm	dBc	ΔLimit(dB)	dBm	
50.00 kHz	5.050 MHz	102.0 kHz	-12.20	(-77.41)	-72.87	-12.22	(-77.51)	-72.89	
5.050 MHz	10.05 MHz	100.0 kHz	-11.85	(-75.50)	-72.51	-11.79	(-74.79)	-72.45	
10.50 MHz	40.00 MHz	1.000 MHz	40.90	(-5.49)	-19.77	-4.24	(-62.77)	-64.90	
40.00 MHz	100.0 MHz	1.000 MHz	-1.43	(-63.23)	-62.09	-1.48	(-63.24)	-62.14	
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---	

When Measurement Type is PSD Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table			Power		PSD Ref		Measure Trace	
			-75.62 dBm / 3.84 MHz		-141.47 dBm/Hz		Trace 1	
Start Freq	Stop Freq	Integ BW	Lower			Upper		
			dB	ΔLimit(dB)	dBm/Hz	dB	ΔLimit(dB)	dBm/Hz
2.515 MHz	2.715 MHz	30.00 kHz	-3.69	(-82.69)	-145.16	-3.85	(-83.76)	-145.32
2.715 MHz	3.515 MHz	30.00 kHz	-3.46	(-73.42)	-144.92	-3.53	(-71.41)	-145.00
3.515 MHz	4.000 MHz	30.00 kHz	-3.62	(-71.73)	-145.09	-3.32	(-70.57)	-144.79
4.000 MHz	8.000 MHz	1.000 MHz	-5.13	(-69.13)	-146.59	-5.20	(-69.79)	-146.66
8.000 MHz	12.50 MHz	1.000 MHz	-4.73	(-70.43)	-146.19	-4.20	(-69.28)	-145.67
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table			Reference		Power		PSD Ref		Measure Trace	
			Sub-block Left		-60.69 dBm / 99.97 MHz		-140.69 dBm/Hz		Trace 1	
			Sub-block Right		-60.69 dBm / 99.97 MHz		-140.69 dBm/Hz			
Start Freq	Stop Freq	Integ BW	Lower			Upper				
			dB	ΔLimit(dB)	dBm/Hz	dB	ΔLimit(dB)	dBm/Hz		
50.00 kHz	5.050 MHz	102.0 kHz	0.86	(-76.90)	-139.83	0.89	(-77.15)	-139.80		
5.050 MHz	10.05 MHz	100.0 kHz	1.08	(-75.27)	-139.61	1.07	(-75.63)	-139.62		
10.50 MHz	40.00 MHz	1.000 MHz	46.46	(-5.39)	-94.23	0.92	(-63.00)	-139.77		
40.00 MHz	100.0 MHz	1.000 MHz	0.80	(-63.20)	-139.89	0.77	(-62.95)	-139.92		
100.0 MHz	500.0 MHz	1.000 MHz	---	(---)	---	---	(---)	---		

When Measurement Type is Spectrum Pk Ref:

Modes other than MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table			Power		Spectrum Peak Ref		Measure Trace	
			-75.44 dBm / 3.84 MHz		-84.03 dBm		Trace 1	
Start Freq	Stop Freq	Integ BW	Lower			Upper		
			dB	ΔLimit(dB)	dBm	dB	ΔLimit(dB)	dBm
2.515 MHz	2.715 MHz	30.00 kHz	-12.79	(-82.82)	-96.82	-13.07	(-83.10)	-97.10
2.715 MHz	3.515 MHz	30.00 kHz	-14.32	(-72.50)	-98.35	-15.22	(-73.62)	-99.25
3.515 MHz	4.000 MHz	30.00 kHz	-12.82	(-70.85)	-96.85	-12.95	(-70.98)	-96.98
4.000 MHz	8.000 MHz	1.000 MHz	0.61	(-70.42)	-83.42	0.58	(-70.45)	-83.45
8.000 MHz	12.50 MHz	1.000 MHz	2.05	(-68.98)	-81.98	-0.18	(-71.21)	-84.21
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---
12.50 MHz	15.00 MHz	1.000 MHz	---	(---)	---	---	(---)	---

MSR, LTE-Advanced FDD/TDD and 5G NR

2 Table			Reference	Power	Spectrum Peak Ref	Measure Trace	
			Sub-block Left	-60.52 dBm / 99.97 MHz	-73.53 dBm	Trace 1	
			Sub-block Right	-60.52 dBm / 99.97 MHz	-73.53 dBm		
Start Freq	Stop Freq	Integ BW	Lower			Upper	
			dB	$\Delta$ Limit(dB)	dBm	dB	$\Delta$ Limit(dB)
50.00 kHz	5.050 MHz	102.0 kHz	-16.13	(-77.17)	-89.67	-15.70	(-76.91)
5.050 MHz	10.05 MHz	100.0 kHz	-14.00	(-75.03)	-87.53	-14.14	(-75.17)
10.50 MHz	40.00 MHz	1.000 MHz	53.13	(-5.40)	-20.40	-4.35	(-62.88)
40.00 MHz	100.0 MHz	1.000 MHz	-4.44	(-62.97)	-77.97	-4.43	(-62.96)
100.0 MHz	500.0 MHz	1.000 MHz	---	(---	---	---	(---
100.0 MHz	500.0 MHz	1.000 MHz	---	(---	---	---	(---

### Table Window in Carrier Info View

Only available in MSR, LTE-Advanced FDD/TDD and 5G NR Modes. Carrier center frequency can be displayed in either offset or absolute frequency depending on Carrier Freq.

LTE-Advanced FDD/TDD has a different carrier info table from that in MSR in this view, which displays with measured component carrier powers and its power spectral density in the order of component carrier index in one of the view windows.

Name	Unit, if any	Corresponding Results
Total Carrier Power		The total power of all the carriers with carrier measure state set to yes. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter for each carrier and then totaling the sums. The total integration bandwidth is shown as part of the result. This will be the total of the Carrier Integ Bw of the carriers used in calculating the total carrier power. If the RRC Filter is on, then the integration bandwidth used is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$ multiplied by the number of carriers with carrier measure state set to yes
RF-BW		Displays the total bandwidth from the lowest carrier to uppermost carrier
Carrier Power	dBm	The power in all the currently defined carriers with measure state is on. The power is calculated by integrating across the bandwidth declared by the Carrier Integ Bw parameter. The integration bandwidth is shown as part of the result. This is the value of the Carrier Integ Bw for the carrier unless the RRC Filter is on, then the integration bandwidth used is the displayed value, which is $(1 + \alpha)/T$ where $T = 1/(\text{Carrier Integ Bw})$
Integration Bandwidth	Hz	Shows carrier transmission bandwidth
Filter		Displays whether RRC filter is used or not
Offset Frequency	Hz	Shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Name	Unit, if any	Corresponding Results
		determines whether the relative frequency or absolute frequency will be displayed
Sub-block		Displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column will be displayed when <b>Carrier Allocation</b> is Non-contiguous
Measure		Indicates whether the carrier power is present or not

MSR

2 Carrier Info

Total Car Pwr	-66.71 dBm / 22.575 MHz	Ref Carrier Power	
Total PSD	---	Carrier #1: Left	-73.70 dBm / 4.515 MHz
RF-BW	5.000 MHz	Carrier #--: Right	--- dBm / ---

	Carrier Power	Integ BW	Filter	Offset Freq	Measure	Parameter Set
1	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	
2	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	
3	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	
4	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	
5	-73.70 dBm	4.515 MHz	OFF	0.0000 Hz	On	

LTE-Advanced FDD/TDD and 5G NR

2 Carrier Info

Total Car Pwr	-49.83 dBm / 1.199280 GHz	Reference	
Total PSD	---	Sub-block Left	-60.62 dBm / 99.97 MHz
RF-BW	99.970 MHz	Sub-block Right	-60.62 dBm / 99.97 MHz

	Carrier Power	Integ BW	Filter	Offset Freq	Sub-block	Measure
CC0	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC1	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC2	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC3	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC4	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On
CC5	-60.62 dBm	100.000 MHz	OFF	0.0 Hz	1	On

3.5.17.3 Gate

Allows you to see your Gating signal at the same time as the measured data. See the description under "[Gate View On/Off](#)" on page 2915 in **Trigger, Gate Settings**.

Views in which the **Gate** window appears:

View	Size	Position
Gate View	One third, full width	Top

## 3.5.18 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

### 3.5.18.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

#### Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of "**Ref Position**" on page 798.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALE]:RLEVel &lt;real&gt;</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALE]:RLEVel?</code>
Example	<code>:DISP:SEM:WIND:TRAC:Y:RLEV 100</code> <code>:DISP:SEM:WIND:TRAC:Y:RLEV?</code>
Couplings	When " <b>Auto Scaling</b> " on page 798 is <b>ON</b> (default), this value is automatically determined by the measurement result. If you set a value manually, <b>Auto Scaling</b> changes to <b>OFF</b> Attenuation is not coupled to <b>Ref Value</b>
Preset	0.00 dBm
State Saved	Saved in instrument state
Min/Max	-250.00 dBm / 250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel</code>

#### Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

**Scale/Div** also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if **Scale/Div** is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:PDIVision &lt;rel_ampl&gt;</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:SEM:WIND:TRAC:Y:PDIV 15dB</code> <code>:DISP:SEM:WIND:TRAC:Y:PDIV?</code>
Couplings	When "Auto Scaling" on page 798 is ON, this value is automatically determined by the measurement result. If you set a value manually, "Auto Scaling" on page 798 automatically changes to OFF
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision</code>

## Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALe]:RANGe &lt;rel_ampl&gt;</code> <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to <b>Scale/Div</b> as follows <b>Scale Range = Scale/Div * 10</b> (number of divisions) When you change this value, <b>Auto Scaling</b> automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

## Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change "Ref Value" on page 796.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALE]:RPOSition TOP   CENTer   BOTTom</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALE]:RPOSition?</code>
Example	<code>:DISP:SEM:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:SEM:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP   CENTER   BOTTOM
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOSition</code>

## Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALE]:COUPle 0   1   OFF   ON</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:Y[:SCALE]:COUPle?</code>
Example	<code>:DISP:SEM:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:SEM:WIND:TRAC:Y:COUP?</code>
Couplings	When <b>Auto Scaling</b> is <b>ON</b> , and the <b>Restart</b> front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you set the value of either <b>Scale/Div</b> , <b>Ref Value</b> , or <b>Scale Range</b> manually, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	1
State Saved	Saved in instrument state
Range	OFF   ON
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:COUPle</code>

### 3.5.18.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations"](#) on page 799
- See ["Single-Attenuator Configuration"](#) on page 800

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.


Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.

---


Dependencies      In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

#### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

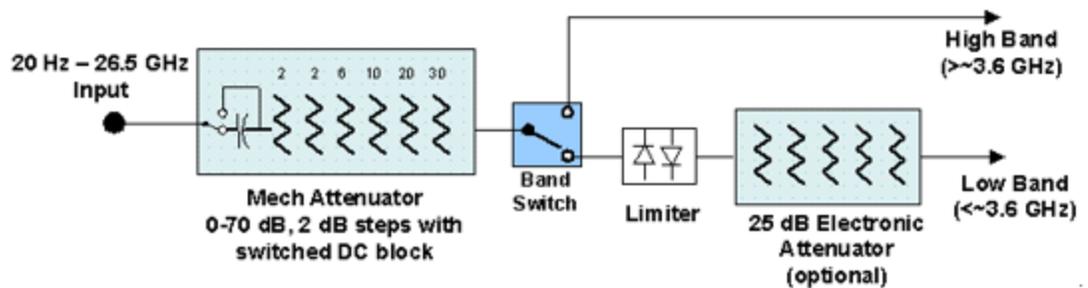


Configuration 2: Mechanical attenuator, no optional electronic attenuator

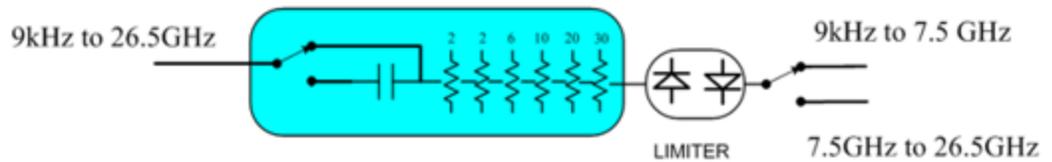

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


### Single-Attenuator Configuration

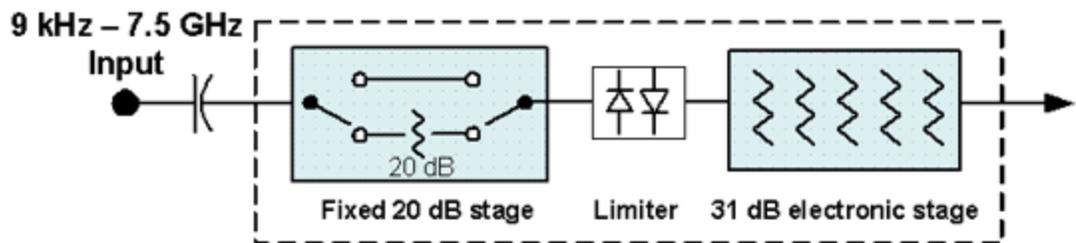

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



**Dual Attenuator**

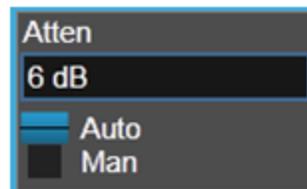

**Single Attenuator**

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

## Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and <b>"Mech Atten"</b> on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the <b>Input</b> is <b>RF</b>, and the <b>Input Port</b> is <b>RF Input 2</b>, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> <li>- If the sweep is entirely &lt; 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten</li> <li>- If the sweep is entirely &gt; 50 GHz, the value shown after "Atten:" is equal to Full Range Atten</li> <li>- If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol "&gt;=" and is equal to Full Range Atten</li> </ul> <p>In the <b>Amplitude</b>, <b>"Y Scale"</b> on page 2153 menu, and the Atten <b>Meas Bar</b> dropdown menu panel, a summary is displayed as follows:</p> <p>"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten          "Total Atten above 50 GHz" followed by the value of Full Range Atten</p> <p>For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> <li>- Attenuator summary:</li> <li>- Total Atten below 50 GHz: 30 dB</li> <li>- Total Atten above 50 GHz: 20 dB</li> </ul>

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "[Internal Preamp](#)" on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "[Attenuator Configurations and Auto/Man](#)" on page 804

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation &lt;rel_amp&gt;</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code>  Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation)  In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available  In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of <b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " <a href="#">Elec Atten</a> " on page 2164  See " <a href="#">Attenuator Configurations and Auto/Man</a> " on page 804 for more information on the <b>Auto/Man</b> functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none"> <li>- If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>- Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>, <b>External Gain</b>, <b>Ref Level Offset</b>, <b>Max Mixer Level</b>, <b>μW Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "<a href="#">Full Range Atten</a>" on page 2160 from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul> <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when <b>Mech Atten</b> is in <b>Auto</b>, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is &lt;= 7.5 GHz. So, when the frequency is changed from below</p>

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

	7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB	
Preset	<b>Auto</b>	
	The Auto value is 10 dB	
State Saved	Saved in instrument state	
Min	0 dB	
	The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB	
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)</p> <p>When in Manual, a # sign appears in front of Atten in the annotation</p>	

Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn <b>Auto Mech AttenON</b> : <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	<b>ON</b>

## Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 802 (or `:POW:ATT`) as the "main" attenuation; and the attenuation that is set by `:POW:EATT` as the "soft" attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about "soft" attenuation.

### NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

---

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 806](#)

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[:SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the <b>Attenuation</b> control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is &gt; 3.6 GHz, then the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If <a href="#">"Internal Preamp" on page 2183</a> is <b>ON</b> (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the <b>Stop Freq</b> of the instrument is limited to 3.6 GHz and <b>Internal Preamp</b> is unavailable</p> <p>If <a href="#">"LNA" on page 2185</a> is <b>ON</b>, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> <li>- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes</li> <li>- Transmit On Off Power measurement in 5G NR Mode</li> <li>- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode</li> <li>- Burst Power measurement in Spectrum Analyzer Mode</li> </ul> <p>The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in <a href="#">"Mechanical Attenuator</a>

	<a href="#">Transition Rules" on page 807</a>
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description
Auto Function	
Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	<b>OFF</b> (Disabled) for Swept SA measurement <b>ON</b> (Enabled) for all other measurements that support the electronic attenuator

**NOTE**

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

**More Information**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 808](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

## Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

## Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "[Pre-Adjust for Min Clipping](#)" on page 2168.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

## Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

### Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 810

Selection	SCPI	Note
Off	<code>OFF</code>	This is the default setting
On	<code>ON</code>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <code>COMBined</code>
Elec Atten Only	<code>ELECTrical</code>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<code>COMBined</code>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>

Notes	<p>The parameter option <b>ELECTRICAL</b> sets this function to <b>ON</b> in Single-Attenuator models</p> <p>The parameter option <b>COMBINED</b> is mapped to <b>ELECTRICAL</b> in Single-Attenuator models. If you send <b>COMBINED</b>, it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query</p> <p>For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBINED</b></p>				
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed</p> <p>In instruments with Dual-Attenuator model, when "<b>Elec Atten</b>" on page 2164 is <b>OFF</b> or grayed-out, "<b>Pre-Adjust for Min Clipping</b>" on page 809 is grayed-out</p> <p>Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements</p> <p>Appears in the Waveform measurement in BASIC and 5G NR Modes</p>				
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>				
State Saved	Saved in instrument state				
Range	<table border="1"> <tr> <td>Dual-Attenuator models:</td> <td>Off   Elec Atten Only   Mech + Elec Atten</td> </tr> <tr> <td>Single-Attenuator models:</td> <td>Off   On</td> </tr> </table>	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten	Single-Attenuator models:	Off   On
Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten				
Single-Attenuator models:	Off   On				


#### Backwards Compatibility Command

Notes	<p><b>ON</b> aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC)</p> <p><b>OFF</b> aliases to "Off" (:POW:RANG:OPT:ATT OFF)</p> <p>:POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF</p>
Backwards Compatibility SCPI	<pre>[ :SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0</pre> <pre>[ :SENSe]:POWer[:RF]:RANGe:AUTO?</pre>

### Adjustment Algorithm


The algorithms for the adjustment are documented below:

### Single-Attenuator Models

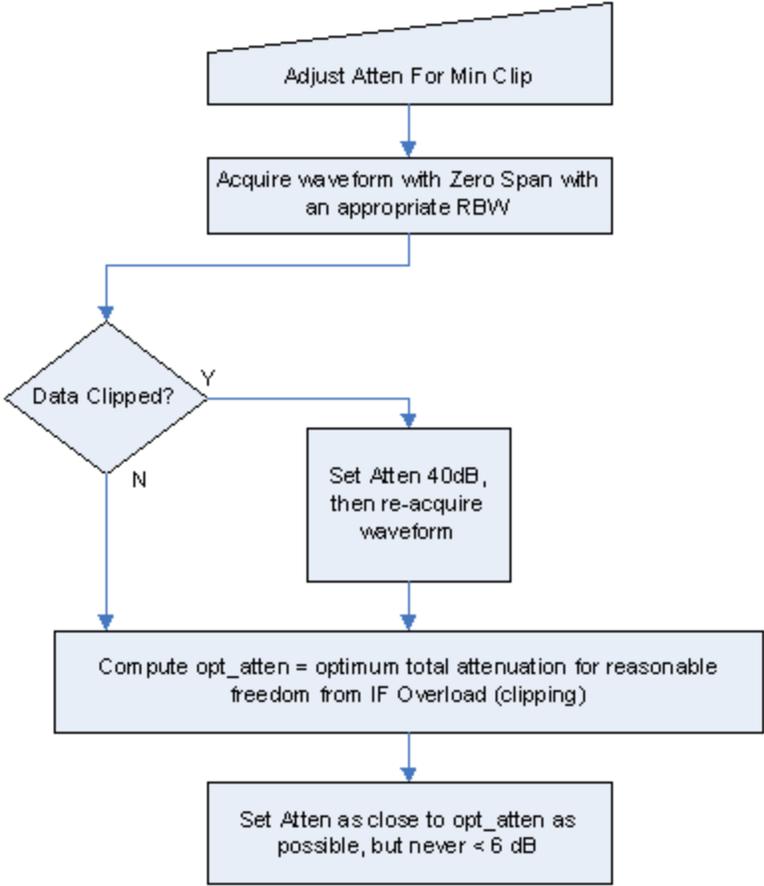


### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 809 selection is Mech + Elec Atten:

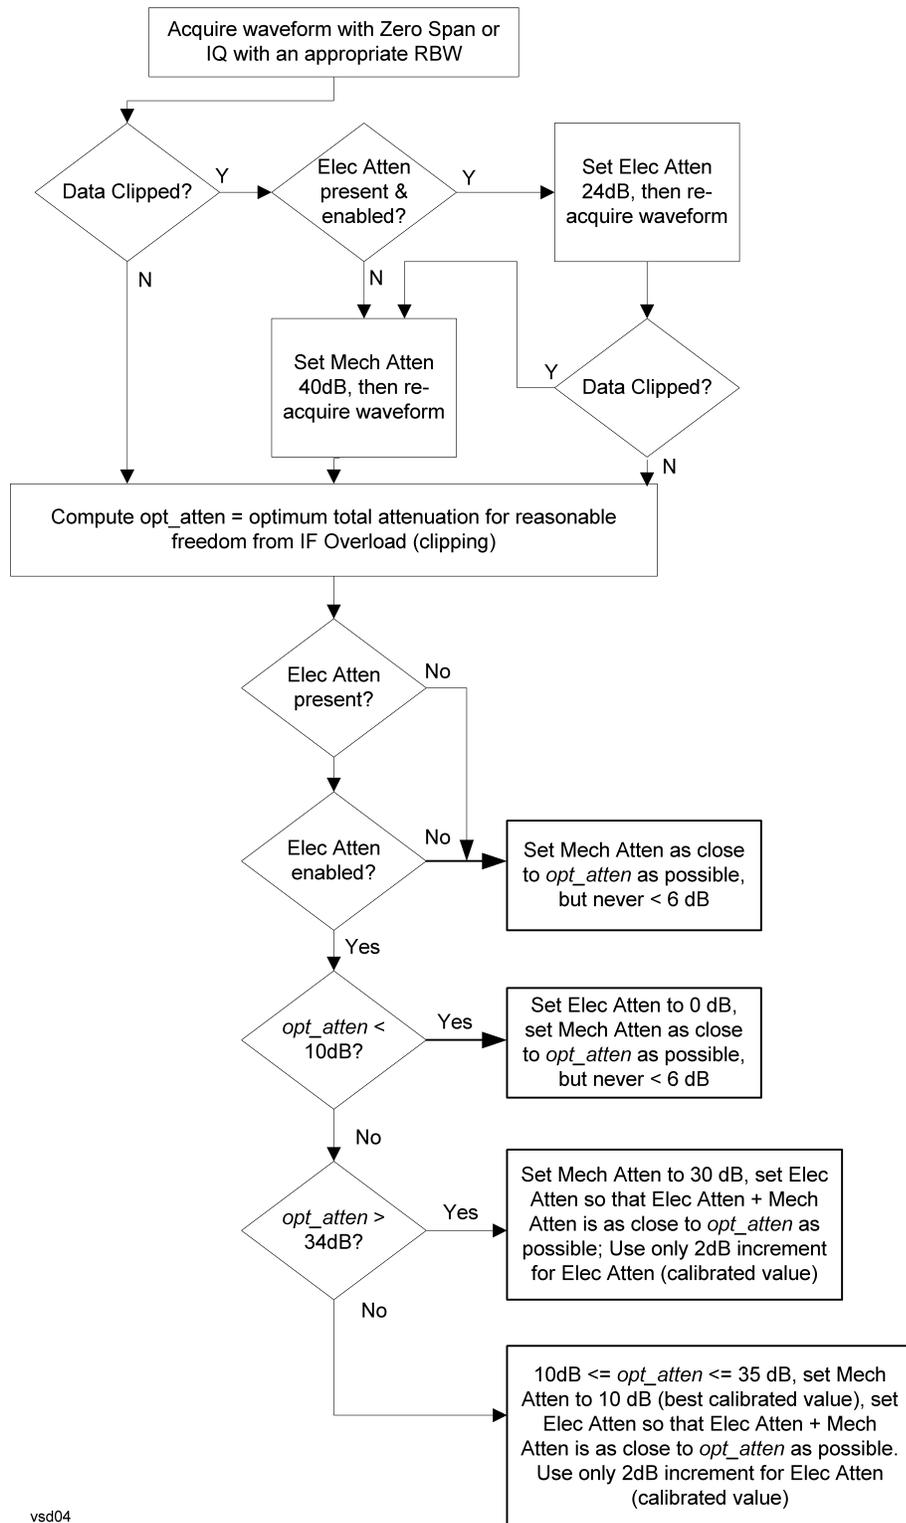

"Pre-Adjust for Min Clipping" on page 809 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

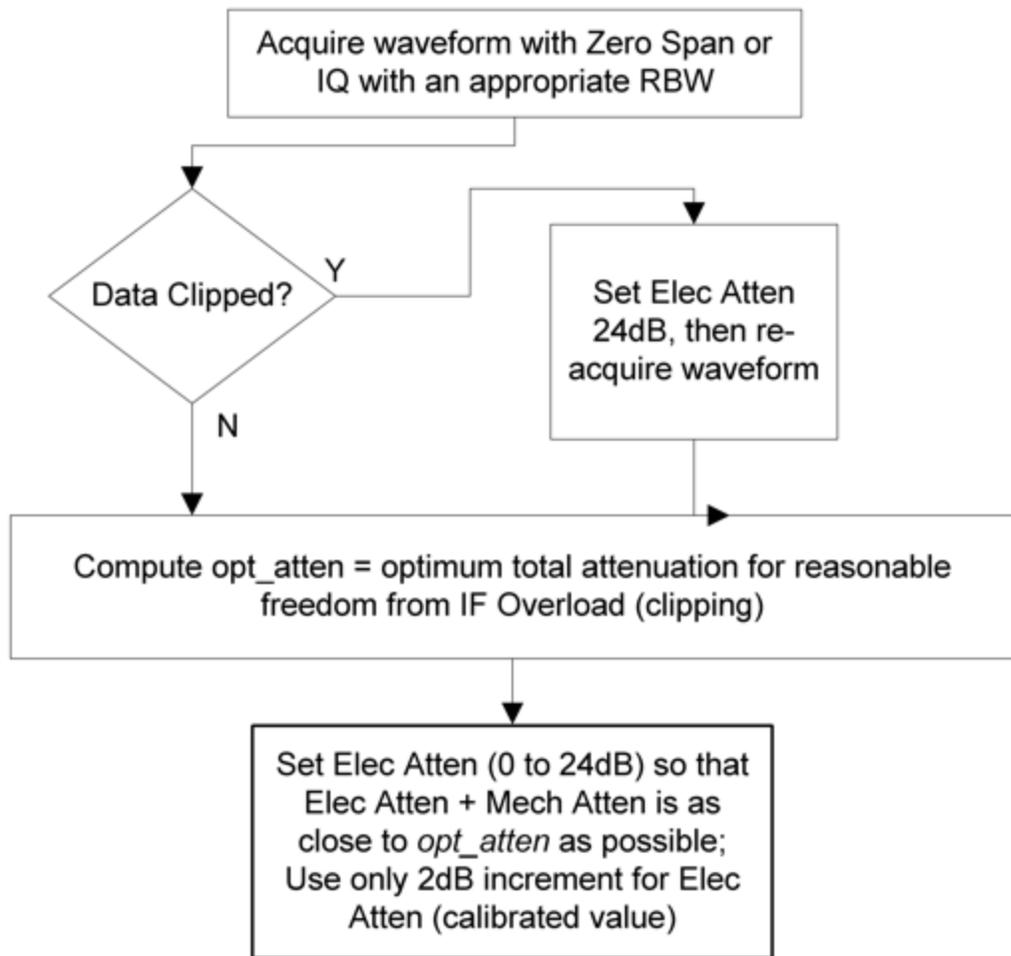

## Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.5.18.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

### Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> . The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

### Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements


### Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

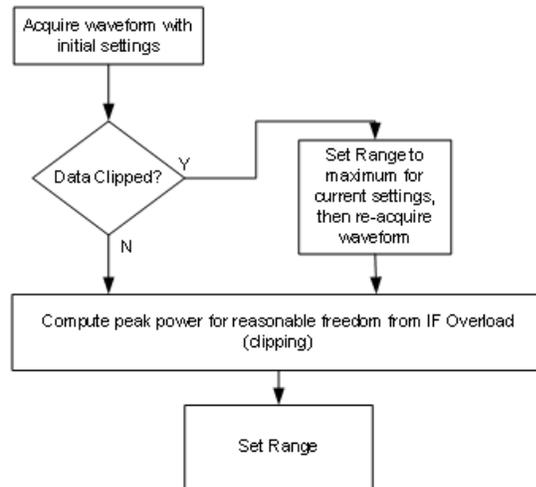

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:PARatio &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet &lt;real&gt;</code>	
	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.5.18.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because "[Software Preselection](#)" on page 2195 is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on "**Preselector Adjust**" on page 2182 changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in "**Proper Preselector Operation**" on page 818.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in " <b>Preselector Adjust</b> " on page 2182
Status Bits/OPC dependencies	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

## Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "**Presel Center**" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Preset	0 MHz

State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PADJust</code> <code>[ :SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXTERNAL</code> <code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <b>LOW</b> instead of <b>FULL</b> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<b>LOW</b>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)

Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<b>OFF</b>

## LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to **"Internal Preamp"** on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with **"Internal Preamp"** on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see **"More Information"** on page 822

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

## More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and **Internal Preamp**. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
µW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
µW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 827
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 829
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 830

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "<b>Presel Center</b>" on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b></p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b>. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul> <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are grayed-out if the current measurement does not support them</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, “Setting Conflict; Feature not supported for this measurement”</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>IQ Analyzer</td> <td>MPB option present and licensed: <b>MPB</b></td> </tr> <tr> <td>Pulse</td> <td>MPB option not present and licensed: <b>STD</b></td> </tr> <tr> <td>RTSA</td> <td></td> </tr> <tr> <td>Avionics</td> <td></td> </tr> <tr> <td>All other Modes</td> <td><b>STD</b></td> </tr> <tr> <td>-</td> <td></td> </tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: <b>MPB</b>	Pulse	MPB option not present and licensed: <b>STD</b>	RTSA		Avionics		All other Modes	<b>STD</b>	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: <b>MPB</b>														
Pulse	MPB option not present and licensed: <b>STD</b>														
RTSA															
Avionics															
All other Modes	<b>STD</b>														
-															
State Saved	Save in instrument state														
Range	Standard Path   Low Noise Path Enable   μW Presel Bypass   Full Bypass Enable														

Annotation In the Meas Bar, if the Standard path is chosen:  
 μW Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 μW Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 μW Path: LNP,On  
 If the preselector is bypassed:  
 μW Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 μW Path: FByp,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 μW Path: FByp,On

**μW Path Control Auto**

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Measurement	$\mu$ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is presel bypass if presel bypass is enabled, auto $\mu$ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

Measurement	$\mu$ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	
Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 825 above
Preset	ON
Range	ON OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

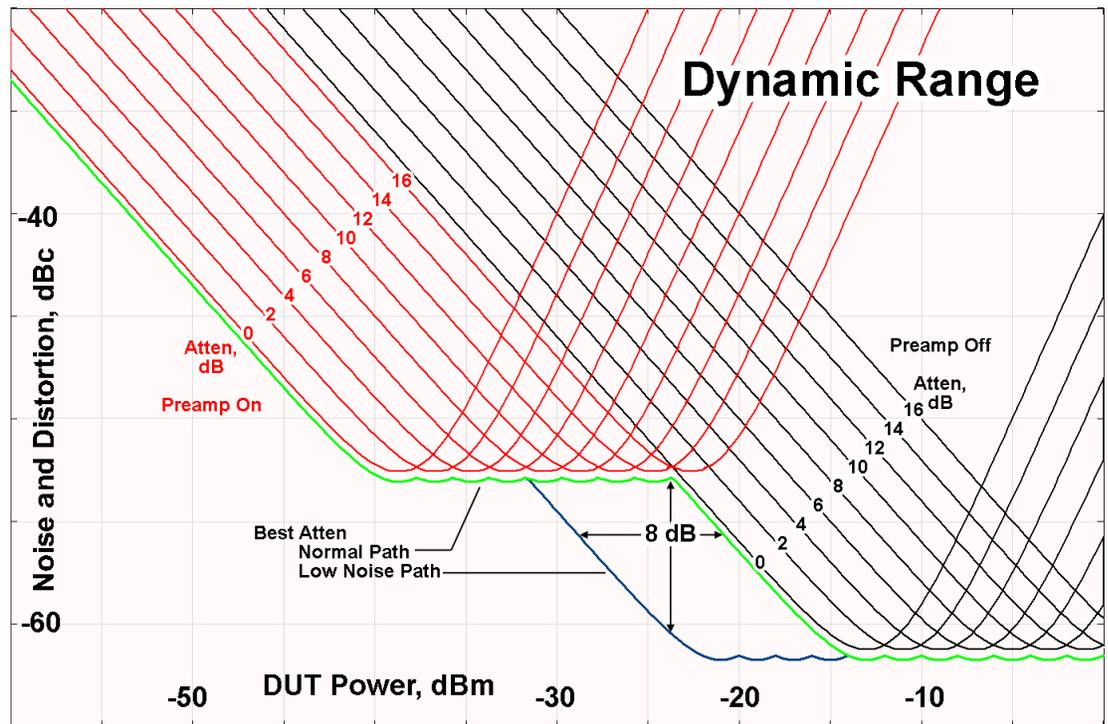

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **μW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

#### CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

---

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path ( <code>:POW:MW:PATH STD</code> ) The <b>OFF</b> parameter sets path <b>MPB</b> ( <code>:POW:MW:PATH MPB</code> )
Preset	<b>ON</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPrese1:STATe 0   1   ON   OFF</code>	
	<code>[ :SENSe]:POWer[:RF]:SWPrese1:STAT?</code>	
Example	<code>:POW:SWPR:STAT 1</code>	
	<code>:POW:SWPR:STAT?</code>	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state	
Preset	N9041B	<b>OFF</b>
	N9042B+V3050A	<b>ON</b>
	M9410A/11A	<b>ON</b>
State Saved	Saved in instrument state	

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel NORMa1   ADVanced</code> <code>[ :SENSe]:POWer[:RF]:SWPResel?</code>
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 2195 is OFF. The grayout message is “Unavailable unless SW Presel enabled”
Preset	N9041B <b>ADVanced</b> N9042B+V3050A <b>NORMa1</b>
State Saved	Saved in instrument state

## SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from

wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPResel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <a href="#">Software Preselection</a> " on <a href="#">page 2195</a> is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <a href="#">Prefilter Presets</a> " on <a href="#">page 836</a> below

State Saved      Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

## 3.5.19 BW

Opens the Bandwidth (**BW**) menu, which contains controls for the Resolution Bandwidth functions of the instrument.

The Resolution BW functions control filter type. There are two filter types, Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

### 3.5.19.1 Settings

Contains basic Bandwidth functions. The only tab under **BW**.

## RBW Filter Type

Selects the type of bandwidth filter that is used in Carriers and Offsets:

Option	SCPI	Behavior
Gaussian	GAUSSian	The selected filter is applied to carriers and all offsets
Flattop	FLATtop	
Auto Sense	ASENSE	<p>The filter type is automatically selected for each carrier and offset in a way such that measurement speed and accuracy are optimized</p> <p>Filter Auto Sense Rules:</p> <ul style="list-style-type: none"> <li>- Flattop is selected when "Enable Wideband IF for FFT" on page 962 is ON</li> <li>- Flattop is selected for offsets close to the reference carrier</li> <li>- For all other cases, Gaussian is selected</li> </ul>

Remote Command	<code>[ :SENSe ] :SEMAsk :BANDwidth :SHAPE ASEnSe   GAUSSian   FLATtop</code> <code>[ :SENSe ] :SEMAsk :BANDwidth :SHAPE?</code>
Example	<code>:SEM:BAND:SHAP GAUS</code> <code>:SEM:BAND:SHAP?</code>
Preset	ASENSE
State Saved	Saved in instrument state
Range	Auto Sense (each offset and carrier)   Gaussian (all offsets and carriers)   Flattop (all offsets and carriers)

### 3.5.20 Display

Lets you configure display items for the current Mode, Measurement View or Window.

#### 3.5.20.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

#### Limit Lines

Toggles Limit Lines display for this measurement On or Off.

Remote Command	<code>:CALCulate:SEMAsk:LLINE:STATE ON   OFF   1   0</code>
----------------	---

	<code>:CALCulate:SEMAsk:LLINe:STATe?</code>
Example	<code>:CALC:SEM:LLIN:STAT OFF</code> <code>:CALC:SEM:LLIN:STAT?</code>
Preset	ON
State Saved	Saved in instrument state
Range	ON OFF

### Carrier Frequency Type

Sets the carrier frequency display type.

- **OFFSet**- The carrier center frequencies are displayed as offset from Carrier Ref Freq
- **ABSolute**- The carrier center frequencies are displayed as absolute frequency

Remote Command	<code>:DISPlay:SEMAsk:VIEW[1]:WINDow[1]:CINFormation:FREQuency OFFSet   ABSolute</code> <code>:DISPlay:SEMAsk:VIEW[1]:WINDow[1]:CINFormation:FREQuency?</code>
Example	<code>:DISP:SEM:VIEW:WIND:CINF:FREQ ABS</code> <code>:DISP:SEM:VIEW:WIND:CINF:FREQ?</code>
Preset	OFFSet
State Saved	Saved in instrument state
Range	OFFSet ABSolute

### 3.5.20.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

### Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis

Preset	ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1 :DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]? This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

## Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	:DISPlay:ANNOtation:SCReem[:STATe] OFF   ON   0   1 :DISPlay:ANNOtation:SCReem[:STATe]?
Example	:DISP:ANN:SCR OFF
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	ON This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	:DISPlay:ANNOtation:TRACe[:STATe] ON   OFF   1   0 :DISPlay:ANNOtation:TRACe[:STATe]?
----------------	--

Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state

## Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

## Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When `OFF`, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

## Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display

3 LTE & LTE-A TDD Mode  
 3.5 SEM Measurement

2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DELeTe</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DELeTe</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DELeTe:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF   ON   0   1</code> <code>:DISPlay:ENABle?</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight <b>OFF</b> and <code>:DISP:ENAB ON</code> turns Backlight <b>ON</b> , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	<b>ON</b> Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state

---

Backwards Compatibility Notes :SYST:PRES no longer turns on :DISPlay:ENABLe as it did in legacy analyzers

### 3.5.20.3 View

See "Views" on page 778

## 3.5.21 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the **Center Freq** setting is the same for all measurements – it does not change as you change measurements.

### 3.5.21.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed, and control instrument settings that affect the horizontal axis.

#### Carrier Reference Frequency

The center frequencies of carriers are defined as offset frequency from the **Carrier Reference Frequency** value. This reference frequency is also the reference for carrier configuration preset.

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple **Center Frequency** parameter used in most measurements does *not* apply here. Instead, **Carrier Reference Frequency** is the key parameter. This must be distinct from the **Center Frequency** parameter used in other measurements, because **Center Frequency** can be a global parameter, and it would not make sense for **Carrier Reference Frequency** to use this global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- the **Number of Component Carriers** is 1
- the **Center Freq Offset** is 0 Hz

- **Center Frequency** (SA Mode) is in **Auto** mode

then **Center Frequency** is equivalent to **Carrier Reference Frequency**. When **Center Frequency** changes in such conditions, its mode remains as **Auto**, and **Carrier Reference Frequency** is changed to the same value. The main purpose of this coupling is for backwards compatibility with legacy LTE/LTE TDD Modes, in which **:SENSe:FREQuency:CENTer** was used to set up the measurement frequency.

For more details, see "[More Information](#)" on page 843.

Remote Command	For LTE-A, 5G NR <code>[ :SENSe]:CCARrier:REFeRence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFeRence?</code> For MSR <code>[ :SENSe]:CARRier:REFeRence &lt;freq&gt;</code> <code>[ :SENSe]:CARRier:REFeRence?</code>
Example	For LTE-A, 5G NR <code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code> For MSR <code>:CARR:REF 2GHz</code> <code>:CARR:REF?</code>
Dependencies	Only available in LTE-A FDD/TDD, 5G NR and MSR Modes
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency. Same as <b>Center Frequency</b>

## More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, measurements are done based on carrier center frequencies and bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here is only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these three are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers, or a range far away from the component carriers to see spurious. The **Center Frequency** in these three measurements has a different meaning, therefore it must be separate from **Carrier Reference Frequency**.

Carrier center frequencies are defined using offsets from **Carrier Reference Frequency** which determines absolute frequency locations, and which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in the Monitor Spectrum, IQ Waveform and CCDF measurements, this control only appears on the **Frequency** menu for these measurements.

To maintain legacy LTE usability in the converged LTE & LTE-A application, when **Center Frequency** mode is **Auto** and **Number of Component Carriers** is 1, and **Center Frequency Offset** is 0 Hz, **Center Frequency** is equivalent to **Carrier Reference Frequency**, which is used to set up the frequencies of all measurements.

## 3.5.22 Marker

Enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects Marker 1, sets it to **Normal (POStion)** and places it at the center of the display. If the selected marker is **OFF**, it is set to **Normal** and placed at the center of the screen, on the trace determined by the **Marker Trace** rules.

### 3.5.22.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

This control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, **Counter**).

In any menu that includes **Select Marker**, the first control is always **Marker Frequency|Time**.

Notes	The selected marker is remembered even when not in the <b>Marker</b> menu and is used if a search is done, or a Band Function is turned on, or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for <b>Normal</b> marker

### 3.5.22.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (**Normal**, **Delta** or **Off**) for the selected marker, as well as additional functions that help you use markers.

## Marker Frequency

Sets the marker X-Axis value in the current marker X-Axis Scale unit. Has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal**.

Remote Command	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:X &lt;freq&gt;</code> <code>:CALCulate:SEMask:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:SEM:MARK3:X 1.0 GHz</code> <code>:CALC:SEM:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X-Axis Scale. If a suffix is sent that does not match the current marker X-Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X-Axis value if the control mode is <b>Normal</b> , or the offset from the marker's reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X-Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b> , seconds for <b>Period</b> and <b>Time</b>
Preset	After a preset, all markers are turned <b>OFF</b> , so the query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

## Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:X:POStion &lt;real&gt;</code> <code>:CALCulate:SEMask:MARKer[1] 2 ... 12:X:POStion?</code>
Example	<code>:CALC:SEM:MARK10:X:POS 1001</code> <code>:CALC:SEM:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points . When a Marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is <b>Off</b> , the response is Not A Number
Preset	After a preset, all markers are turned <b>OFF</b> , so the query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state

Min	-9.9E+37
Max	9.9E+37
<b>Marker Y Axis Value (Remote Command only)</b>	
Returns the marker Y-Axis value in the current marker Y Axis unit.	
Remote Command	:CALCulate:SEMask:MARKer[1] 2 ... 12:Y?
Example	:CALC:SEM:MARK11:Y?
Notes	The query returns the marker Y-Axis result, if the control mode is <b>Normal</b> . If the marker is <b>Off</b> , the response is Not A Number
Preset	Result depends on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:SEMask:MARKer[1] 2 ... 12:FUNCTION:RESult?

## Marker Mode

Sets the marker control mode to **POSITION** (Normal) or **OFF**.

If the selected marker is **OFF**, pressing **Marker** sets it to **POSITION** and places it at the center of the screen, on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area. If the current control mode for the measurement is **OFF**, there is no active function, and the active function is turned off.

Remote Command	:CALCulate:SEMask:MARKer[1] 2 ... 12:MODE POSITION   OFF :CALCulate:SEMask:MARKer[1] 2 ... 12:MODE?
Example	:CALC:SEM:MARK:MODE POS :CALC:SEM:MARK:MODE?
Notes	Default Active Function: the active function for the selected marker's current control mode. If the current control mode is <b>OFF</b> , there is no active function, and the active function is turned off
Preset	OFF
State Saved	Saved in instrument state
Range	POSITION OFF
Annotation	Mkr# <X value> and <Marker value> upper right of graph

## All Markers Off

Turns off all markers.

---

Remote Command	:CALCulate:SEMask:MARKer:AOff
Example	:CALC:SEM:MARK:AOff

---

## Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **OFF**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental X-Axis units of the trace that marker is on) and the X-Axis value of the marker being moved (in the same fundamental X-Axis units).

This may result in markers going off screen.

---

Remote Command	:CALCulate:SEMask:MARKer:COUPle[:STATe] ON   OFF   1   0 :CALCulate:SEMask:MARKer:COUPle[:STATe]?
Example	:CALC:SEM:MARK:COUP ON :CALC:SEM:MARK:COUP?
Preset	OFF Preset by <b>Mode Preset</b> and <b>All Markers Off</b>
State Saved	Saved in instrument state

---

### 3.5.22.3 Properties

The controls on this tab are used to set certain properties of the selected marker.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. This is the same as "**Marker Frequency**" on page 845 in the **Settings** tab.

## Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal markers.

Specifying a Marker Trace manually or with this command associates the marker with the specified trace. If the marker is not **OFF**, it moves the marker from the trace it was on to the new trace. If the marker is **OFF** it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:SEMask:MARKer[1] 2 ... 12:TRACe 1   2   3</code> <code>:CALCulate:SEMask:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:SEM:MARK2:TRAC 2</code> <code>:CALC:SEM:MARK2:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of <b>Marker Trace</b> is not affected by " <b>Auto Couple</b> " on page 2242 Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state

### 3.5.23 Meas Setup

Contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the Mode.

#### 3.5.23.1 Settings

Contains frequently used **Meas Setup** functions to which you will want the fastest access.

#### Avg/Hold Num

Toggles averaging On or Off, in addition to enabling you to set the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep. After the specified number of average counts, the average mode (termination control) setting determines the average action.

In the remote mode, use "**Averaging On/Off**" on page 849 to turn Averaging on or off.

Remote Command	<code>[ :SENSe ] :SEMask:AVERage:COUNT &lt;integer&gt;</code> <code>[ :SENSe ] :SEMask:AVERage:COUNT?</code>
Example	<code>:SEM:AVER:COUN 100</code> <code>:SEM:AVER:COUN?</code>

Preset	10
State Saved	Saved in instrument state
Min/Max	1/10000

## Averaging On/Off

Turns Averaging on or off.

**NOTE**

In this measurement, **Average Type** is preset to the [Log-Pwr Avg \(Video\)](#) method. Other averaging methods are not available.

Remote Command	<code>[ :SENSe]:SEMAsk:AVERage[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:SEMAsk:AVERage[:STATe]?</code>
Example	<code>:SEM:AVER ON</code> <code>:SEM:AVER?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF

## Meas Method

Sets the measurement method:

Method	Option	Description
Integration BW	0 OFF	Enables you to set the channel integration bandwidth
RRC Weighted	1 ON	Selects Root Raised Cosine (RRC) filtering of the carriers. The a value (rolloff) for the filter is set to the value of the Filter Alpha parameter

Remote Command	<code>[ :SENSe]:SEMAsk:FILTer[:RRC][:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:SEMAsk:FILTer[:RRC][:STATe]?</code>
Example	<code>:SEM:FILT ON</code> <code>:SEM:FILT?</code>
Dependencies	WLAN: RRC Weight is not supported when the radio standard is WLAN 802.11ac (80+80MHz)
Preset	SA, LTEAFDD, LTEATDD, 5G NR, WLAN, MSR Modes <b>OFF</b> WCDMA Mode <b>ON</b>
State Saved	Saved in instrument state
Range	Integration BW RRC Weighted

## RRC Filter Alpha

Sets the alpha value for the RRC Filter.

Remote Command	<code>[ :SENSe]:SEMAsk:FILTer[:RRC]:ALPHa &lt;real&gt;</code> <code>[ :SENSe]:SEMAsk:FILTer[:RRC]:ALPHa?</code>
Example	<code>:SEM:FILT:ALPH 0.3</code> <code>:SEM:FILT:ALPH?</code>
Preset	0.22
State Saved	Saved in instrument state
Min/Max	0.01/1.0

## Non-Contiguous Meas Region

Selects the region to measure for the non-contiguous frequency allocation.

Option	SCPI	Comments
Outer	<code>OUTer</code>	
Inner	<code>INNeR</code>	
Outer & Inner	<code>OINNeR</code>	Available only in 5G NR and LTE-Advanced FDD/TDD Modes

Remote Command	<code>[ :SENSe]:SEMAsk:NCONtiguous:REGion INNeR   OUTer   OINNeR</code> <code>[ :SENSe]:SEMAsk:NCONtiguous:REGion?</code>
Example	<code>:SEM:NCON:REG INN</code> <code>:SEM:NCON:REG?</code>
Dependencies	Available only in MSR, 5G NR and LTE-Advanced FDD/TDD Modes <code>OINNeR</code> is available only in 5G NR and LTE-Advanced FDD/TDD Modes
Preset	<code>INNeR</code>
State Saved	Yes
Range	Inner   Outer   Outer & Inner

## Sweep Type Rules

Selects which set of rules will be used for automatic selection of "Sweep Type" on [page 874](#) when Sweep Type mode is Auto.

Rule	Option	Description
Best Dynamic Range	<code>DRANge</code>	The instrument selects either swept or FFT analysis with the primary goal of dynamic range optimization. If the dynamic range of swept and FFT is very close, then it chooses the faster one. In determining

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Rule	Option	Description
		the Swept or FFT setting, the auto rules use the following approach: <ul style="list-style-type: none"> <li>- If the RBW &gt; 210 Hz, use swept; for the RBW &lt;= 210 Hz, use FFT</li> <li>- If Sweep Time Mode is Man, the Sweep Type is always Swept for backwards compatibility</li> </ul>
Best Speed	<b>SPEed</b>	The instrument selects either FFT or swept analysis based on the fastest instrument speed
Remote Command	[:SENSe]:SEMAsk:SWEep:TYPE:AUTO:RULEs <b>SPEed</b>   <b>DRANge</b> [:SENSe]:SEMAsk:SWEep:TYPE:AUTO:RULEs?	
Dependencies	In modular products such as VXT, the value is always set to Best Dynamic Range and this control does not appear	
Preset	<b>DRANge</b>	
State Saved	Saved in instrument state	

## Spur Avoidance

Because VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the Center Frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed. For Spur Avoidance, the instrument uses a software algorithm to remove this spur from the displayed measurement data.

Some measurements allow you to turn off **Spur Avoidance**, but in this measurement it is always enabled. Therefore, the **Spur Avoidance** switch is unavailable (grayed-out) and set to **ON**.

If you press the grayed-out switch, a popup message appears stating:

*Always enabled in this measurement. See manual for details*

Remote Command	[:SENSe]:SEMAsk:SAVoid[:STATe]?	
Example	:SEM:SAV? Always returns <b>ON</b>	
Dependencies	Only appears in VXT models M9410A/11A/15A	
Preset	<b>ON</b>	
State Saved	Saved in instrument state	
Range	<b>ON</b>	

## Offset/Limits Config Table

Enables you to set up the measurement parameters for offset pairs and to set the power limits for start and stop frequencies of the selected offsets. For example, you can assign the start and stop frequencies, select the resolution bandwidth, and set the sweep time.

Before UE, the LTE-Advanced FDD/TDD standards gave the test specification requirements for BS intra-band contiguous aggregation and intra-band non-contiguous aggregation modes. However, for UE, only the requirements of intra-band contiguous aggregation modes are defined. So, the standards don't support making the measurement in UE intra-band non-contiguous aggregation mode for LTE-Advanced FDD/TDD. As a result, the preset values of Inner Offset/Limits are temporarily set as those of Outer Offset/Limits for UE.

## Limits for Inner Offsets

Since inner offsets are defined from the sub-block edges to the gap, limits from two sub-blocks overlap each other. Therefore, the limit used for inner offsets are the cumulative sum of limits from both sub-blocks. Offsets can have different RBWs, which must be compensated when accumulated.


For example, when offset A and D overlap, the limit of offset A is calculated as follows.

$$\text{Cumulated Limit of Offset A} = 10^{\frac{[\text{Offset A Limit in dBm}]}{10}} + \frac{\text{Offset A RBW}}{\text{Offset D RBW}} 10^{\frac{[\text{Offset D Limit in dBm}]}{10}}$$

The diagram below depicts what inner offset limits look like.

### 3 LTE & LTE-A TDD Mode

#### 3.5 SEM Measurement

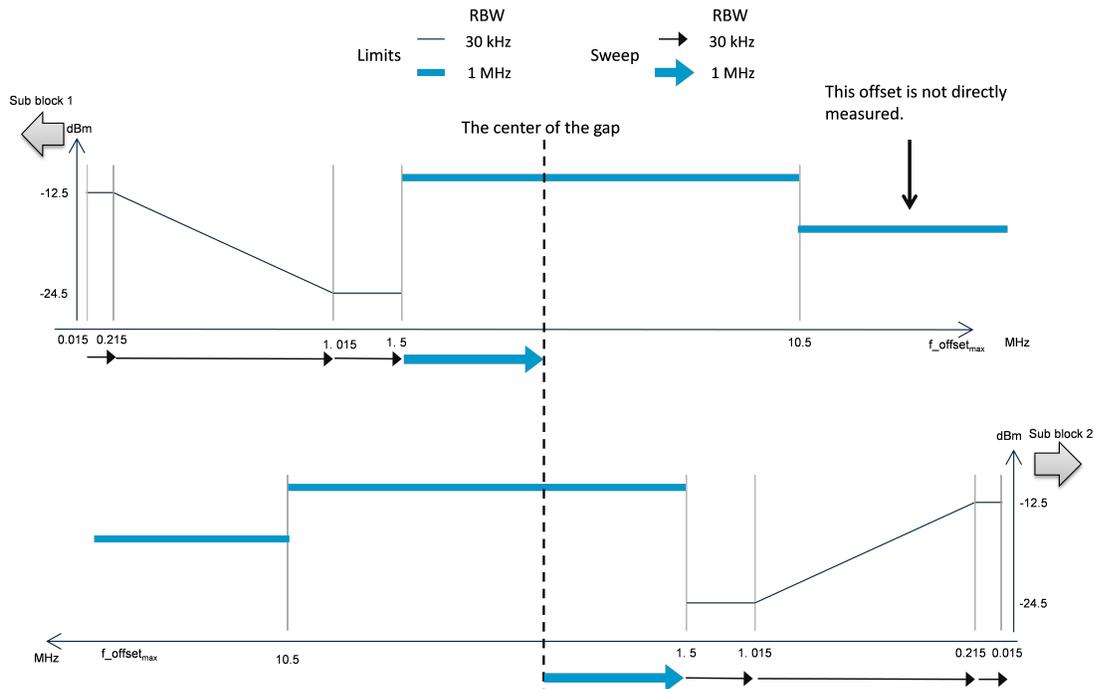

### Offset (Bandwidth)

Enables you to set up the bandwidth measurement parameters for offset pairs. For example, you can assign the start and stop frequencies, and select the resolution bandwidth.

### Offset Freq Define

Enables you to select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “Carrier Center to Meas BW Edge” definition. LTE conformance test requires “Carrier Edge to Meas BW Center” and/or “Carrier Edge to Meas BW Edge” definition. The MSR standard requires “RF BW Edge to Meas BW Center” and/or “RF BW Edge to Meas BW Edge” definition.

“Meas BW Edge” means the edge frequency of resolution bandwidth closer to the carrier that is represented by Meas BW and Res BW settings. Actual center frequency of Meas BW and the limit line have  $\frac{1}{2}$  Meas BW offset when the Meas BW Edge is selected.

Note that the outermost (lowermost, uppermost) carrier at each side is determined by which carrier edge frequency is located outermost within the RF BW or each sub-block bandwidth, instead of which carrier center frequency is located outermost.

See also "[Diagrams for Offset Freq Define](#)" on page 856.

### Modes other than MSR, LTE-A, 5G NR

Options:

<b>CTOCenter</b>	From carrier center to the center of offset measuring filter*
<b>CTOEdge</b>	From carrier center to the nominal -3 dB point of the offset measuring filter* closer to the carrier
<b>ETOCenter</b>	From Center Frequency - Span of Ref Channel / 2 (for lower offset), Center Frequency + Span of Ref Channel / 2 (for upper offset) of the carrier closest to each offset to the center of offset measuring filter *
<b>ETOEdge</b>	From Center Frequency - Span of Ref Channel / 2 (for lower offset), Center Frequency + Span of Ref Channel / 2 (for upper offset) of the carrier closest to each offset to the nominal -3 dB point of the offset measuring filter * closer to the carrier

\*Measuring filter = Meas BW (N) x Res BW

\*\* RF BW =  $BW_{\text{channel,CA}}$  which is defined in each 3GPP standard, regardless of “Measure Carrier” for the uppermost and the lowermost carriers being Enabled or Disabled. When **Number of Component Carriers** = 1, RF BW =  $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$

Remote Command	<code>[ :SENSE]:SEMAsk:OFFSet[1] 2:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge</code> <code>[ :SENSE]:SEMAsk:OFFSet[1] 2:TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC</code> <code>:SEM:OFFS:TYPE?</code>
Notes	<b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS
Preset	<b>CTOCenter</b>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center   Carrier Center to Meas BW Edge   Carrier Edge to Meas BW Center   Carrier Edge to Meas BW Edge

### Mode: MSR, LTEAFDD, LTEATDD

Options:

<b>CTOCenter</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the center of offset measuring filter*
<b>CTOEdge</b>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the nominal -3 dB point of the

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

	offset measuring filter* closer to the carrier
<b>ETOCenter</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of offset measuring filter*
<b>ETOEdge</b>	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
<b>RTOCenter</b>	From either the lower or upper RF BW** edge frequency to the center frequency of offset measuring filter*
<b>RTOEdge</b>	From either the lower or upper RF BW** edge frequency to the nominal -3 dB point of the offset measuring filter* closer to the carrier
<b>RCTOCenter</b>	<b>From the center frequency of RF BW to the center frequency of offset measuring filter*</b>
5G NR Mode only	

\*Measuring filter = Meas BW (N) x Res BW

\*\* RF BW =  $BW_{channel,CA}$  which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When **Number of Component Carriers** = 1, RF BW =  $BW_{channel} = 2 \times F_{offset,RAT}$

Remote Command	<code>[ :SENSe ] :SEMAsk:OFFSet[1] 2[ :OUTer ] :TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   RTOCenter   RTOEdge</code> <code>[ :SENSe ] :SEMAsk:OFFSet[1] 2[ :OUTer ] :TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC</code> <code>:SEM:OFFS:TYPE?</code>
Notes	<b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS
Preset	MSR: <b>RTOCenter</b> LTEAFDD, LTEATDD: <b>ETOCenter</b>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center- Carrier Edge to Meas BW Edge RF BW Edge to Meas BW Center RF BW Edge to Meas BW Edge

**Mode: 5G NR**

Options: see "Mode: MSR, LTEAFDD, LTEATDD" on page 854 above.


Remote Command	<code>[ :SENSe ] :SEMAsk:OFFSet[1] 2[ :OUTer ] :TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   RTOCenter   RTOEdge   RCTOCenter</code> <code>[ :SENSe ] :SEMAsk:OFFSet[1] 2[ :OUTer ] :TYPE?</code>
Example	<code>:SEM:OFFS:TYPE ETOC</code>

	<code>:SEM:OFFS:TYPE?</code>
Notes	<code>OFFSet1</code> is for BTS, 2 for MS. Default is BTS
Preset	<code>ETOCenter</code>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center Carrier Center to Meas BW Edge Carrier Edge to Meas BW Center- Carrier Edge to Meas BW Edge RF BW Edge to Meas BW Center RF BW Edge to Meas BW Edge RF BW Center to Meas BW Center

### Diagrams for Offset Freq Define


Details depend on the selected mode.

#### Diagrams for Modes other than MSR, LTEAFDD/LTEATDD, 5G NR

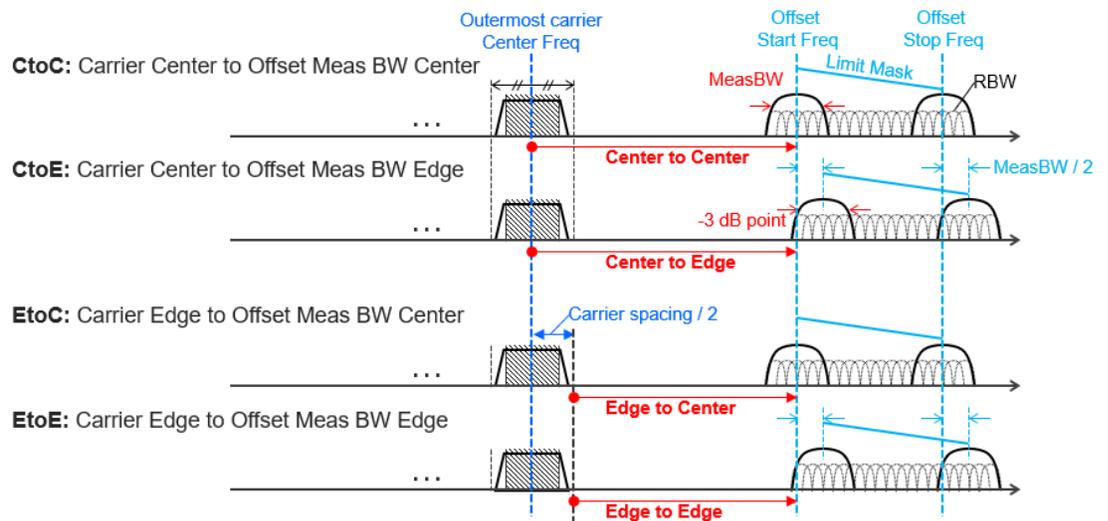

*Note:*  
•  $MeasBW = N \times RBW$

Diagrams for MSR, LTEAFDD/LTEATDD, 5G NR

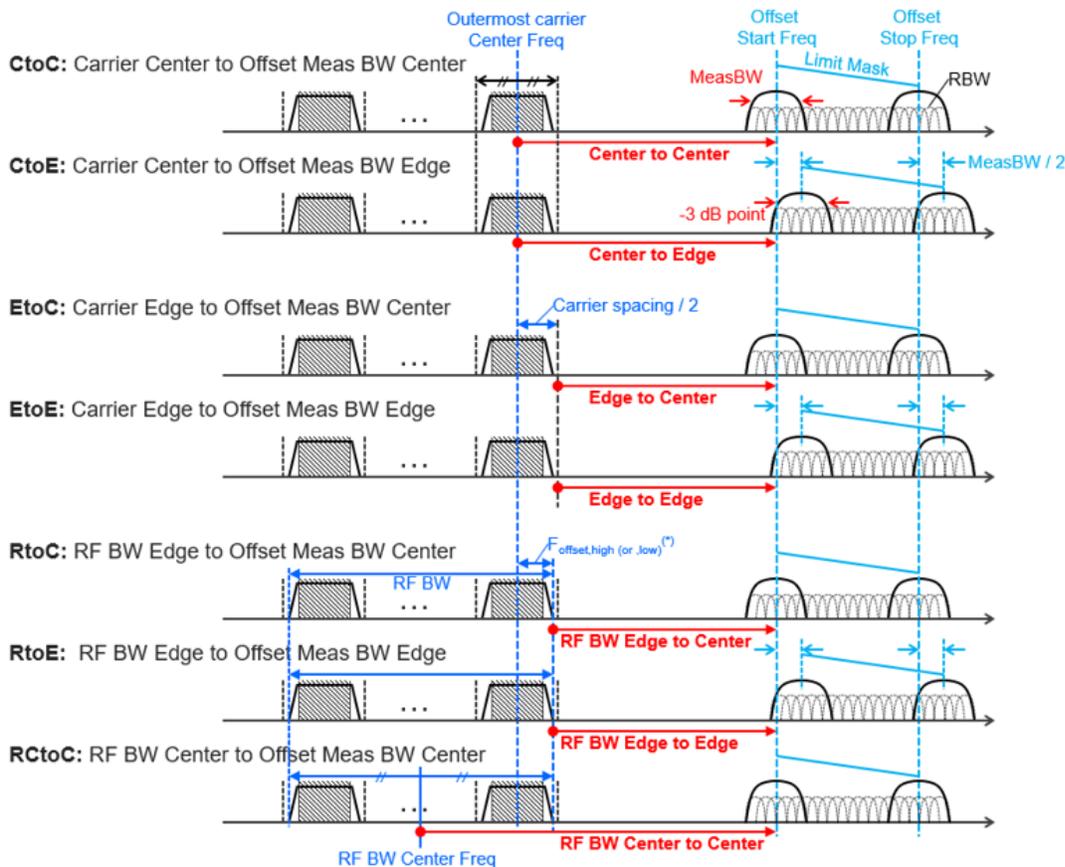

Notes:

- $MeasBW = N \times RBW$
- RF BW Edge and Outermost Carrier Edge are not always same. e.g.) 5G NR (3GPP) defines  $BW\_channel, CA$  which calculates  $F\_offset,high$  and  $F\_offset,low$  asymmetrically with SCS shift. (\*) For MSR,  $F\_offset,high (or ,low) = F\_offset,RAT,high (or ,low)$

Offset Detector

Enables you to control the detector for offsets. The following choices are available:

- AUTO** The detector selected depends on marker functions, trace functions, average type, and the trace averaging function
- NORMa1** The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
- AVERage** The detector determines the average of the signal within the sweep points. The

	averaging method depends upon the Average Type selection (voltage, power or log scales)
<b>POSitive</b> Peak	The detector determines the maximum of the signal within the sweep points
<b>SAMPle</b>	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
<b>NEGative</b> Peak	The detector determines the minimum of the signal within the sweep points

Remote Command	<code>[ :SENSe]:SEMask:DETEctor:OFFSet[:FUNction] AVERage   NEGative   NORMal   POSitive   SAMPle</code> <code>[ :SENSe]:SEMask:DETEctor:OFFSet[:FUNction]?</code> <code>[ :SENSe]:SEMask:DETEctor:OFFSet:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:SEMask:DETEctor:OFFSet:AUTO?</code>
Example	<code>:SEM:DET:OFFS AVER</code> <code>:SEM:DET:OFFS?</code> <code>:SEM:DET:OFFS:AUTO OFF</code> <code>:SEM:DET:OFFS:AUTO?</code>
Notes	When you manually select a detector (instead of selecting Auto), that detector is used regardless of other instrument settings Note that this detector setting affects all offsets; there is no per-trace detector
Couplings	See Couplings in <a href="#">"Trace Type" on page 2137</a>
Preset	<code>POSitive</code> <code>ON</code>
State Saved	Saved in instrument state
Range	<code>AVERage   NEGative   NORMal   POSitive   SAMPle</code>

### Offset Average Type (Remote Command Only)

Select trace average type for the offsets.

Remote Command	<code>[ :SENSe]:SEMask:AVERage:OFFSet:TYPE RMS   LOG</code> <code>[ :SENSe]:SEMask:AVERage:OFFSet:TYPE?</code>
Example	<code>:SEM:AVER:OFFS:TYPE LOG</code> <code>:SEM:AVER:OFFS:TYPE?</code>
Preset	<code>RMS</code>
State Saved	Saved in instrument state

## Start Freq

Specifies the start frequency for the currently selected offset. Also enables you to toggle that offset between On and Off.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<pre>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STARt &lt;freq&gt;, ... [:SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STARt? [:SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STATe ON   OFF   1   0, ... [:SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STATe?</pre>												
Example	<pre>:SEM:OFFS2:LIST:FREQ:STAR 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz :SEM:OFFS2:LIST:FREQ:STAR? :SEM:OFFS:LIST:STAT ON, ON, ON, OFF, OFF, OFF :SEM:OFFS:LIST:STAT?</pre>												
Notes	<p>Comma-separated list of values  <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS          Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS          If the offset is outside of the frequency range, the result spectrum will be invalid</p>												
Couplings	Coupled to Stop Freq. When the start freq goes above the stop freq, the stop freq is automatically adjusted to the start freq plus 100 Hz												
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</td> </tr> <tr> <td>WCDMA</td> <td>2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz</td> </tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz   15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz</td> </tr> <tr> <td>LTEAFDD,</td> <td>50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40</td> </tr> </tbody> </table>	Mode	Values	SA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz	WCDMA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz	Mode	Values	MSR	15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz   15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz	LTEAFDD,	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40
Mode	Values												
SA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz												
WCDMA	2.515 MHz, 2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz 2.515MHz, 4.000 MHz, 7.500 MHz, 8.500 MHz, 12.5 MHz, 15 MHz												
Mode	Values												
MSR	15 kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz   15kHz, 215kHz, 1.015MHz, 1.5MHz, 10.5MHz, 15.00MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz, 30MHz												
LTEAFDD,	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40												

Mode	Values
LTEATDD	MHz,40 MHz, 40 MHz, 40 MHz   15.00 kHz,1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz
5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz   15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

WLAN Mode: See the table of "WLAN Mode Presets" on page 860 below

When the max number of offsets is 6:

Mode	Values
SA	ON, ON, ON, ON, ON, OFF
WCDMA	ON, ON, ON, ON, ON, OFF   ON, ON, ON, ON, OFF, OFF

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
LTEAFDD, LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
5G NR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

Mode	Values
WLAN	See the table of "WLAN Mode Auto Function Presets" on page 862 below

State Saved	Saved in instrument state Saved in instrument state
Min/Max	0 Hz/Depends on instrument maximum frequency Always Offset Stop Freq - 100 Hz

### WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)/802.11n (20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 216 MHz

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	11 MHz, 22 MHz, 50 MHz, 70 MHz, 90 MHz, 100 MHz
802.11n(20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz
802.11n(40MHz)	19 MHz, 21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz, 200 MHz
802.11ac(20MHz)	9 MHz, 11 MHz, 20 MHz, 30 MHz, 40 MHz
802.11ac(40MHz)	19 MHz, 21 MHz, 40 MHz, 60 MHz, 70 MHz
802.11ac(80MHz)	39 MHz, 41 MHz, 80 MHz, 120 MHz, 125 MHz
802.11ac(160MHz)	79 MHz, 81 MHz, 160 MHz, 240 MHz, 250 MHz
802.11ac(80 MHz + 80MHz)	0MHz, 0 MHz, 40 MHz, 79 MHz, 159 MHz, 161 MHz, 200 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz
802.11ah(1MHz)	0.45 MHz, 0.6 MHz, 1 MHz, 1.5 MHz
802.11ah(2MHz)	0.9 MHz, 1.1 MHz, 2 MHz, 3 MHz
802.11ah(4MHz)	1.9 MHz, 2.1 MHz, 4 MHz, 6 MHz
802.11ah(8MHz)	3.9 MHz, 4.1 MHz, 8 MHz, 12 MHz, 120 MHz, 120 MHz, 120 MHz
802.11ah(16MHz)	7.9 MHz, 8.1 MHz, 16 MHz, 24 MHz
802.11j/p(10MHz)	4.5 MHz, 5MHz, 5.5 MHz, 10 MHz, 15 MHz, 216 MHz, 216MHz, 216 MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz
802.11p(5MHz)	2.25 MHz, 2.5MHz, 2.75 MHz, 5 MHz, 7.5 MHz, 216 MHz, 216MHz, 216 MHz, 216MHz, 216MHz, 216MHz, 216MHz, 216MHz
802.11ax/be(20MHz)	9.75 MHz, 10.5 MHz, 20 MHz, 30 MHz, 40 MHz
802.11ax/be(40MHz)	19.5 MHz, 20.5 MHz, 40 MHz, 60 MHz, 70 MHz
802.11ax/be(80MHz)	39.5 MHz, 40.5 MHz, 80 MHz, 120 MHz, 125 MHz
802.11ax/be(160MHz):	79.5 MHz, 80.5 MHz, 160 MHz, 240 MHz, 250 MHz
802.11ax(80 MHz + 80MHz)	0MHz, 0 MHz, 40 MHz, 79 MHz, 159 MHz, 161 MHz, 200 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz, 240 MHz
802.11af(6MHz)	2.85 MHz, 3.15 MHz, 6 MHz, 9 MHz

Radio Std	Presets
	9 MHz, 9 MHz, 9 MHz, 9 MHz, 9 MHz
802.11af(7MHz)	3.325 MHz, 3.675 MHz, 7 MHz, 10.5 MHz
802.11af(8MHz)	3.8 MHz, 4.2 MHz, 8 MHz, 12 MHz
802.11be (320MHz)	159.5 MHz, 160.5 MHz, 320 MHz, 480 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz, 490 MHz

### WLAN Mode Auto Function Presets

For X Series:

Radio Std	Presets
802.11b/g(DSSS/CCK/PBCC)	ON, ON, OFF, OFF
802.11a/g/j/p 20MHz (OFDM/DSSS-OFDM)	ON, ON, ON, ON, OFF, OFF
802.11j/p 10MHz	
802.11p 5MHz/802.11n (20MHz/40MHz)	
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	ON, ON, ON, ON, OFF, OFF
802.11be (320 MHz)	ON, ON, ON, ON, OFF, OFF
802.11ac/ax (80 MHz + 80 MHz)	OFF, ON, ON, ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.ah (1MHz/ 2MHz/ 4MHz/ 8MHz/ 16MHz)	ON, ON, ON, ON, OFF, OFF
802.11af (6 MHz/ 7 MHz/ 8 MHz)	ON, ON, ON, ON, OFF, OFF

For E6630A, E6640A, and M90XA:

Radio Std	Presets
802.11a/g(OFDM/DSSS-OFDM)	ON, ON, ON, OFF, OFF
802.11n(20MHz/40MHz)	
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	ON, ON, ON, OFF, OFF
802.11be (320 MHz)	ON, ON, ON, OFF, OFF
802.11ac/ax (80 MHz + 80 MHz)	ON, ON, ON, OFF, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
802.11af (6 MHz/ 7 MHz/ 8 MHz)	ON, ON, ON, ON, OFF, OFF

## Stop Freq

Specifies the stop frequency for the currently selected offset.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<code>[ :SENSE]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STOP &lt;freq&gt;, ...</code> <code>[ :SENSE]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:FREQuency:STOP?</code>
Example	<code>:SEM:OFFS:LIST:FREQ:STOP 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</code> <code>:SEM:OFFS:LIST:FREQ:STOP?</code>
Notes	Comma separated list of values <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA Modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS If the offset is outside of the frequency range, the result spectrum will be invalid
Couplings	Coupled to Start Freq. When Stop Freq goes below Start Freq, Start Freq is automatically adjusted to Stop Freq minus 100 Hz
Preset	When the max number of offsets is 6:

Mode	Values
SA	2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz
WCDMA	2.715 MHz, 3.515 MHz, 4.000 MHz, 8.000 MHz, 12.50 MHz, 15.0 MHz 3.485 MHz, 7.500 MHz, 8.500 MHz, 12.00 MHz, 15.00 MHz, 18.0 MHz

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

Mode	Values
MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz
LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz 985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz
5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz 985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as

	the Offset F value
	<b>WLAN Mode:</b> See table of " <a href="#">WLAN Mode Presets</a> " on page 864 below
State Saved	Saved in instrument state
Min/Max	100 Hz/Depends on instrument maximum frequency. Same as the Max Span in Swept SA Measurement

## WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 250 MHz
802.11n (20MHz)	
802.11b/g (DSSS/CCK/PBCC)	22 MHz, 50 MHz, 70 MHz, 90 MHz, 100 MHz, 120 MHz
802.11n (20MHz)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 100 MHz, 200 MHz
802.11n (40MHz)	21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz, 200 MHz, 300 MHz
802.11ac (20MHz)	11 MHz, 20 MHz, 30 MHz, 40 MHz, 50 MHz
802.11ac (40MHz)	21 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz
802.11ac (80MHz)	41 MHz, 80 MHz, 120 MHz, 125 MHz, 200 MHz
802.11ac (160MHz)	81 MHz, 160 MHz, 240 MHz, 250 MHz, 400 MHz
802.11ac (80 MHz + 80MHz)	100MHz, 40 MHz, 79 MHz, 81 MHz, 161 MHz, 200 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11ah (1MHz)	0.6MHz, 1 MHz, 1.5 MHz, 2.5MHz, 2.5 MHz, 2.5 MHz
802.11ah (2MHz)	1.1 MHz, 2 MHz, 3 MHz, 5MHz, 5 MHz, 5 MHz
802.11ah (4MHz)	2.1 MHz, 4 MHz, 6 MHz, 10 MHz
802.11ah (8MHz)	4.1 MHz, 8 MHz, 12 MHz, 20 MHz
802.11ah (16MHz)	8.1 MHz, 16 MHz, 24 MHz, 40 MHz
802.11j/p (20MHz)	10MHz, 11 MHz, 20 MHz, 30 MHz, 50MHz, 50 MHz, 50 MHz
802.11j/p (10MHz)	5MHz, 5.5 MHz, 10 MHz, 15 MHz, 25MHz, 250MHz, 250MHz, 250MHz, 250 MHz, 250MHz, 250MHz, 250MHz, 250MHz

Radio Std	Presets
802.11p (5MHz)	2.5MHz, 2.75MHz, 5 MHz, 7.5 MHz, 12.5MHz, 250MHz, 250MHz, 250MHz, 250 MHz, 250MHz, 250MHz, 250MHz, 250MHz
802.11ax/be (20MHz)	10.5 MHz, 20 MHz, 30 MHz, 40 MHz, 50 MHz
802.11ax/be (40MHz)	20.5 MHz, 40 MHz, 60 MHz, 70 MHz, 100 MHz
802.11ax/be (80MHz)	40.5 MHz, 80 MHz, 120 MHz, 125 MHz, 200 MHz
802.11ax/be (160MHz)	80.5 MHz, 160 MHz, 240 MHz, 250 MHz, 400 MHz
802.11ax (80 MHz + 80MHz)	100Hz, 40 MHz, 79 MHz, 81 MHz, 161 MHz, 200 MHz, 240 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz, 250 MHz
802.11af (6MHz)	3.15MHz, 6 MHz, 9 MHz, 15MHz, 15 MHz, 15 MHz
802.11af (7MHz)	3.675 MHz, 7 MHz, 10.5 MHz, 17.5MHz, 17.5 MHz, 17.5 MHz
802.11af (8MHz)	4.2 MHz, 8 MHz, 12 MHz, 20 MHz
802.11be (320MHz)	160.5 MHz, 320 MHz, 480 MHz, 490 MHz, 800 MHz

## Res BW

Specifies which Resolution BW filter to use when measuring the currently selected offset.

Offset Res BW Mode allows the instrument to determine the optimum Resolution BW filter to use when measuring the currently selected offset.. When changing the Meas BW parameter, if the Res BW needs to be changed to adhere to the rule:

$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})$ ,

where N is the multiplier, this setting will automatically be changed to manual.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

---

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution] &lt;bandwidth&gt;, ...</code>
	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]?</code>
	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]:AUTO OFF   ON   1   0, ...</code>

Example	<pre>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:BANDwidth[:RESolution]:AUTO? :SEM:OFFS2:LIST:BAND 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz :SEM:OFFS2:LIST:BAND? :SEM:OFFS:LIST:BAND:AUTO 1,1,1,1,1,1 :SEM:OFFS:LIST:BAND:AUTO?</pre>																
Notes	<p>Comma separated list of values  <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS          Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS</p>																
Couplings	<p>Coupled to Start and Stop offset and Meas BW multiplier. This parameter must adhere to the rule (N x Res BW) &lt;= (Stop freq of the offset - Start freq of the offset), where N is the multiplier. If the multiplier is changed, the Res BW will change to ensure this. When set manually, Res BW Coupling is set to manual          The resolution bandwidth is coupled to the offset width determined by the start frequency and stop frequency</p>																
Preset	<p>When the max number of offsets is 6:</p> <table border="1" data-bbox="399 947 1403 1108"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz</td> </tr> <tr> <td>WCDMA</td> <td>30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz</td> </tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1" data-bbox="399 1213 1403 1465"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td> <td>51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz   15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz</td> </tr> <tr> <td>MSR</td> <td>30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz   30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz</td> </tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <table border="1" data-bbox="399 1570 1403 1682"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>WLAN</td> <td>100 kHz, 100 kHz</td> </tr> </tbody> </table> <p>When the max number of offsets is 6:  <b>OFF, OFF, OFF, OFF, OFF, OFF   OFF, OFF, OFF, OFF, OFF, OFF</b></p> <p>When the max number of offsets is 12:  <b>OFF, OFF, OFF   OFF, OFF, OFF,</b></p>	Mode	Values	SA	30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz	WCDMA	30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz	Mode	Values	LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz   15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz	MSR	30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz   30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz	Mode	Values	WLAN	100 kHz, 100 kHz
Mode	Values																
SA	30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz																
WCDMA	30.00 kHz, 30.00 kHz, 30.00 kHz, 100.00 kHz, 1.000 MHz, 1.00 MHz 30.00 kHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.000 MHz, 1.00 MHz																
Mode	Values																
LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz   15.0 kHz, 510 kHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz																
MSR	30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz   30kHz, 30kHz, 30kHz, 1.0MHz,1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz, 1.0MHz																
Mode	Values																
WLAN	100 kHz, 100 kHz																

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

	<p>OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</p> <p>When the max number of offsets is 14: OFF, OFF, OFF   OFF, OFF</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min	1 Hz
Max	<p>Option FS1 or FS2 is installed: 10 MHz</p> <p>Otherwise: 8 MHz</p>
Backwards Compatibility SCPI	<p>[ :SENSe]:SEMAsk:OFFSet[1] 2:LIST:BWIDth[:RESolution]</p> <p>[ :SENSe]:SEMAsk:OFFSet[1] 2:LIST:BWIDth[:RESolution]:AUTO</p>

## Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer number. It shows a ratio between Integration BW and Resolution BW of the measurement result.

$$\text{Integ BW} = \text{Meas BW} * \text{Resolution BW}$$

Integration BW is desired resolution bandwidth and Resolution BW is actual bandwidth for sweep. Measurement sweeps with Resolution BW and Meas BW compensates sweep resolution bandwidth to Integration BW.

If you set this value greater than 1, you can set Resolution BW narrower to avoid carrier power leakage effect to the offset power integration.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<p>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:BWIDth:IMULTi &lt;integer&gt;, ...</p> <p>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:BWIDth:IMULTi?</p>
Example	<p>:SEM:OFFS2:LIST:BWIDth:IMUL 1,1,1,1,1,1</p> <p>:SEM:OFFS2:LIST:BWIDth:IMUL?</p>
Notes	<p>Comma separated list of values</p> <p>OFFSet1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS</p>

Preset	When the max number of offsets is 6:																
	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>1, 1, 1, 1, 1, 1</td> </tr> <tr> <td>WCDMA</td> <td>1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1</td> </tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td> </tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td> <td>2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td> </tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>WLAN</td> <td>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td> </tr> </tbody> </table>	Mode	Values	SA	1, 1, 1, 1, 1, 1	WCDMA	1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1	Mode	Values	MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1	LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1	Mode	Values	WLAN	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
Mode	Values																
SA	1, 1, 1, 1, 1, 1																
WCDMA	1, 1, 1, 10, 1, 1 1, 1, 1, 1, 1, 1																
Mode	Values																
MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1																
LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1																
Mode	Values																
WLAN	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1																
State Saved	Yes																
Min/Max	1/1000																
Backwards Compatibility SCPI	<code>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :LIST :BWIDth :IMULti</code>																

## Video BW

Changes the instrument post-detection filter.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<pre>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 [ :OUTer ] :LIST :BANDwidth :VIDeo &lt;freq&gt;, ... [ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 [ :OUTer ] :LIST :BANDwidth :VIDeo? [ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 [ :OUTer ] :LIST :BANDwidth :VIDeo :AUTO OFF   ON   0   1, ... [ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 [ :OUTer ] :LIST :BANDwidth :VIDeo :AUTO?</pre>
Example	<pre>:SEM:OFFS2:LIST:BAND:VID 3.00 kHz, 3.00 kHz, 3.00 kHz, 100.0 kHz,100.0 kHz, 100.0 kHz :SEM:OFFS2:LIST:BAND:VID? :SEM:OFFS2:LIST:BAND:VID:AUTO ON, ON, ON, ON, ON, ON :SEM:OFFS2:LIST:BAND:VID:AUTO?</pre>

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Notes	Comma separated list of values <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS
Preset	Automatically Calculated When the max number of offsets is 6: <b>ON, ON, ON, ON, ON, ON   ON, ON, ON, ON, ON, ON</b> When the max number of offsets is 12: <b>ON, ON, ON   ON, ON</b> When the max number of offsets is 14: <b>ON, ON, ON</b>
State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min/Max	1 Hz/50 MHz
Backwards Compatibility SCPI	<b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :LIST :BWIDth :VIDeo</b> <b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :LIST :BWIDth :VIDeo :AUTO</b>

## VBW/RBW

Selects the ratio between the video and resolution bandwidths.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

Remote Command	<b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 [ :OUTer ] :LIST :BANDwidth :VIDeo :RATio &lt;real&gt;, ...</b> <b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 [ :OUTer ] :LIST :BANDwidth :VIDeo :RATio?</b> <b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 [ :OUTer ] :LIST :BANDwidth :VIDeo :RATio :AUTO OFF   ON   0   1, ...</b> <b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 [ :OUTer ] :LIST :BANDwidth :VIDeo :RATio :AUTO?</b>
Example	<b>:SEM:OFFS2:LIST:BAND:VID:RAT 0.1, 0.1, 0.1, 0.1, 0.1, 0.1</b> <b>:SEM:OFFS2:LIST:BAND:VID:RAT?</b> <b>:SEM:OFFS2:LIST:BAND:VID:RAT:AUTO ON, ON, ON, ON, ON, ON</b> <b>:SEM:OFFS2:LIST:BAND:VID:RAT:AUTO?</b>
Notes	Comma separated list of values <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS

---

Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS

---

Preset	<p><b>Modes other than LTEAFDD, LTEATDD, 5G NR, MSR, WLAN:</b></p> <p>When the max number of offsets is 6: 0.01, 0.01, 0.01, 0.01, 0.01, 0.01 0.01, 0.01, 0.01, 0.01, 0.01, 0.01</p> <p>When the max number of offsets is 12, the preset value of Offset G ~ L is the same as the Offset F value</p> <p><b>LTEAFDD, LTEATDD, 5G NR, MSR Modes:</b></p> <p>0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01</p> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p><b>WLAN Mode:</b></p> <p>802.11 ax/be: 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075, 0.075</p> <p>All other formats: 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3, 0.3</p> <p><b>Modes other than WLAN</b></p> <p>When the max number of offsets is 6: <b>OFF, OFF, OFF, OFF, OFF, OFF   OFF, OFF, OFF, OFF, OFF, OFF</b></p> <p>When the max number of offsets is 12: <b>OFF, OFF, OFF   OFF, OFF</b></p> <p>WLAN Mode: <b>OFF, OFF, OFF   OFF, OFF</b></p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min/Max	0.00001/3000000
Backwards Compatibility SCPI	<p><b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :LIST :BWIDth :VIDeo :RATio</b></p> <p><b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :LIST :BWIDth :VIDeo :RATio :AUTO</b></p>

---

## Offset (Sweep)

Accesses a menu that enables you to set up the sweep measurement parameters for offset pairs.

## Offset Freq Define

Same as "[Offset Freq Define](#)" on page 853 under Offset (Bandwidth).

## Offset Detector

Same as "Offset Detector" on page 857 under Offset (Bandwidth).

## Start Freq

Same as "Start Freq" on page 859 under Offset (Bandwidth).

## Stop Freq

Same as "Stop Freq" on page 863 under Offset (Bandwidth).

## Sweep Time

Specifies the **Sweep Time** for the currently selected offset and enables you to toggle the Sweep Time mode between Auto and Man.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

### NOTE

On non-sweeping hardware, this column is grayed out. The value shown on this column is an estimate. It is the turnaround time to complete the measurement of the entire offset span, which is the sum of signal acquisition time, FFT time, and other overhead time. If you need to specify the same "Sweep Time" as you would for sweeping hardware, send `[ :SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEp:TIME <time>`. The measurement emulates the "Sweep Time" effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using **Minimum Acquisition Time**, which provides better control.

Remote Command	<code>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEp:TIME &lt;time&gt;, ...</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEp:TIME?</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEp:TIME:AUTO ON   OFF   1   0, ...</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SWEp:TIME:AUTO?</code>
Example	<code>:SEM:OFFS2:LIST:SWE:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms</code> <code>:SEM:OFFS2:LIST:SWE:TIME?</code> <code>:SEM:OFFS2:LIST:SWE:TIME:AUTO ON, ON, ON, ON, OFF, OFF</code> <code>:SEM:OFFS2:LIST:SWE:TIME:AUTO?</code>

Notes	<p>Comma separated list of values</p> <p><b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in non-SA modes. In the SA mode, Offset sub op code 1 is used for both BTS and MS</p>
Dependencies	<p>On non-sweeping hardware, this column is grayed out and the Auto/Man checkbox is invisible. The read-only value shows the estimated sweep time</p> <p>In those instruments, "<b>Minimum Acquisition Time</b>" on page 872 is available</p>
Couplings	When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	<p>Automatically calculated</p> <p>Modes other than LTEAFDD, LTEATDD, 5G NR, MSR, WLAN:</p> <p>When the max number of offsets is 6: <b>ON, ON, ON, ON, ON, ON</b></p> <p>When the max number of offsets is 12: <b>ON, ON, ON</b></p> <p>Modes LTEAFDD, LTEATDD, 5G NR, MSR: <b>ON, ON, ON   ON, ON</b></p> <p>When the max number of offsets is 14: Mode WLAN: <b>ON, ON, ON</b></p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min	<p>Other than non-sweeping hardware</p> <p>Depends on Sweep Type:</p> <ul style="list-style-type: none"> <li>- Sweep Type "Swept": 1 ms</li> <li>- Sweep Type "FFT": 100 ns</li> </ul> <p>Non-sweeping hardware: N/A</p>
Max	<p>Other than non-sweeping hardware: 4000 s</p> <p>Non-sweeping hardware: N/A</p>
Backwards Compatibility SCPI	<p><b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :LIST :SWEep [ :TIME ]</b></p> <p><b>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :LIST :SWEep [ :TIME ] :AUTO</b></p>

### Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each "chunk" of the measurement result. The instrument automatically divides Span into multiple chunks if needed.

Therefore, the total signal acquisition time for the entire offset span is  $\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$ .

When in Auto, this parameter's value is determined by other parameters, such as Offset Start, Offset Stop, RBW and VBW.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on Detector settings.

Note that the actual acquisition time for each chunk may exceed the Minimum Acquisition Time value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<pre>[:SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:ACQuisition:TIME &lt;time&gt;, ... [:SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:ACQuisition:TIME? [:SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:ACQuisition:TIME:AUTO ON   OFF   1   0, ... [:SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:ACQuisition:TIME:AUTO?</pre>
Example	<pre>:SEM:OFFS2:LIST:SWE:ACQ:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms :SEM:OFFS2:LIST:SWE:ACQ:TIME? :SEM:OFFS2:LIST:SWE:ACQ:TIME:AUTO ON, ON, ON, ON, OFF, OFF :SEM:OFFS2:LIST:SWE:ACQ:TIME:AUTO?</pre>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to Offset Start Freq, Offset Stop Freq, RBW, and VBW when in the Auto state When you manually set a value when in the Auto state, the state automatically changes to Man
Preset	Automatically calculated ON
State Saved	Saved in instrument state
Min	100 ns
Max	4000 s

### Sweep Time Annotation (Remote Query Only)

Returns the Sweep Time Annotation value. Available only on non-sweeping hardware.

The value returned is the estimated turnaround time of each acquisition, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire offset span of each measurement cycle.

Remote Command	<pre>[:SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:ETIME?</pre>
----------------	--

Example	<code>:SEM:OFFS2:LIST:SWE:ETIM?</code>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

## Sweep Type

Specifies the **Sweep Type** for the currently selected offset, and enables you to toggle the **Sweep Type** mode between **Auto** and **Man**.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain unchanged. The query for this parameter returns 14 values for WLAN mode, 12 values for other modes.

How to define Sweep Time and Sweep Type:

Sweep Type mode	Behavior
Auto	<b>Sweep Type</b> is automatically selected according to <a href="#">"Sweep Type Rules" on page 850</a> <b>Sweep Time</b> is automatically calculated according to the selected <b>Sweep Type</b>
Man	<b>Sweep Type</b> is user-selected
–	

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:TYPE SWEep   FFT, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:TYPE?</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:TYPE:AUTO ON   OFF   1   0, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:SWEep:TYPE:AUTO?</code>
Example	<code>:SEM:OFFS2:LIST:SWE:TYPE FFT,FFT,SWE</code> <code>:SEM:OFFS2:LIST:SWE:TYPE?</code> <code>:SEM:OFFS2:LIST:SWE:TYPE:AUTO ON, ON, ON, ON, OFF, OFF</code> <code>:SEM:OFFS2:LIST:SWE:TYPE:AUTO?</code>
Notes	Comma-separated list of values <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA Modes In SA Mode, Offset sub op code 1 is used for both BTS and MS
Dependencies	Not available in modular products, such as VXT
Couplings	When <b>Sweep Type</b> is set manually, Sweep Type mode is set to <b>OFF (Manual)</b> When <b>Sweep Type</b> mode is <b>Auto</b> , <b>Sweep Type</b> is automatically selected according to <b>Sweep Type Rules</b>

Preset	Automatically calculated LTEAFDD, LTEATDD, 5G NR, MSR Modes: <code>ON, ON, ON  </code> <code>ON, ON, ON</code> When the max number of offsets is 14: WLAN Mode: <code>ON, ON, ON</code> <b>All Other Modes:</b> When the max number of offsets is 6: <code>ON, ON, ON, ON, ON, ON</code> When the max number of offsets is 12: <code>ON, ON, ON</code>
State Saved	Saved in instrument state
Range	Auto Man

## Offset Side


Specifies which offset side to measure.

You can turn off (not use) specific offsets with `[ :SENSe ] :SEMAsk :OFFSet [ n ] [ :OUTer ] :LIST :STATe`.

<b>BOTH</b>	Both of the negative (lower) and positive (upper) sidebands
<b>NEGative</b>	Negative (lower) sideband only
<b>POSitive</b>	Positive (upper) sideband only

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, and 12 values for other Modes.

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR, LTE-Advanced FDD/TDD and 5G NR Modes.

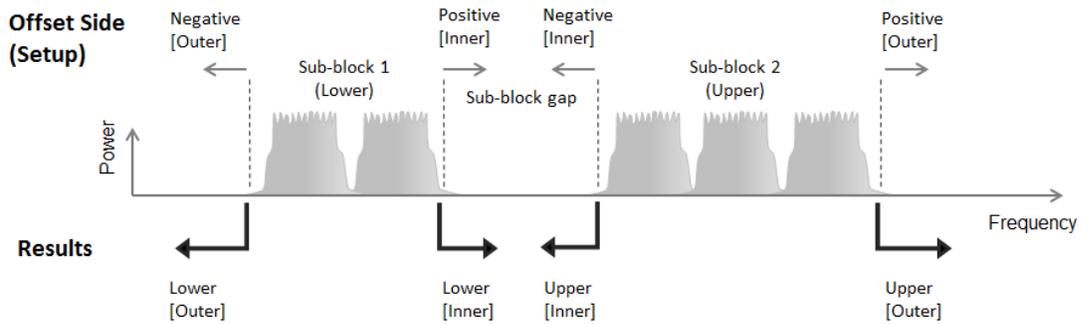

Remote Command	<code>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SIDE BOTH   NEGative   POSitive, ...</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:SIDE?</code>
Example	<code>:SEM:OFFS:LIST:SIDE BOTH, NEG, NEG, POS, POS, POS</code> <code>:SEM:OFFS:LIST:SIDE?</code>
Notes	Comma-separated list of values <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS
Preset	<b>Modes LTEAFDD,LTEATDD, 5G NR, MSR:</b> <code>BOTH, BOTH, BOTH   BOTH, BOTH</code> When the max number of offsets is 14: <b>Mode WLAN:</b> <code>BOTH, BOTH, BOTH</code> <b>All Other Modes:</b> When the max number of offsets is 6: <code>BOTH, BOTH, BOTH, BOTH, BOTH, BOTH</code> When the max number of offsets is 12: <code>BOTH, BOTH, BOTH</code>
State Saved	Saved in instrument state
Range	<code>BOTH NEGative POSitive</code>

### Limits

Enables you to set the power limits for start and stop frequencies of the selected offsets.

### Start Freq

Same as "[Start Freq](#)" on page 859 under **Offset (Bandwidth)**.

## Stop Freq

Same as "Stop Freq" on page 863 under **Offset (Bandwidth)**.

## Abs Start

Sets the absolute power level limit at the start frequency for the selected offset. The absolute power level limit ranges from -200 to +50 dBm.

The fail condition for each offset channel is set remotely by  
`[ :SENSe]:SEMAsk:OFFSet[n][ :OUTer]:LIST:TEST.`

You can turn off (not use) specific offset channels remotely with  
`[ :SENSe]:SEMAsk:OFFSet[n][ :OUTer]:LIST:STATe.`

The query returns values currently set to the absolute power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:START:ABSolute &lt;real&gt;, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:START:ABSolute?</code>								
Example	<code>:SEM:OFFS2:LIST:STAR:ABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS2:LIST:STAR:ABS?</code>								
Notes	Comma-separated list of values <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in non-SA modes. In SA Mode, Offset sub op code 1 is used for both BTS and MS								
Preset	When the max number of offsets is 6: <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>-14.00 dBm, -14.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm</td> </tr> <tr> <td>WCDMA</td> <td>-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm</td> </tr> <tr> <td>LTE, LTETDD</td> <td>-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td> </tr> </tbody> </table> When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value	Mode	Values	SA	-14.00 dBm, -14.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm	WCDMA	-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm	LTE, LTETDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
Mode	Values								
SA	-14.00 dBm, -14.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm								
WCDMA	-12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm								
LTE, LTETDD	-5.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm								



Radio Std	Presets
	60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11ah (2MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -63.00 dBm
802.11ah (4MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm
802.11ah (8MHz/16MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -69.00 dBm
802.11j/p (20MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -63.00 dBm
802.11j/p (10MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -60.00 dBm
802.11p (5MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -57.00 dBm
802.11af (6MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm
802.11af (7MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm
802.11af (8MHz)	16.00 dBm, -4.00 dBm, -12.00 dBm, -66.00 dBm

## Abs Stop

Sets the absolute power level limit at the stop frequency for the selected offset. The absolute power level limit ranges from -200 to +50 dBm. You can also toggle this function between **Couple** (**COUPle** = **ON**) and **Manual** (**COUPle** = **OFF**). If set to **Couple**, the **Abs Stop** power level limit is coupled to **Abs Start** to result in a flat limit line. If set to **Man**, **Abs Start** and **Abs Stop** take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop absolute power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<pre>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute &lt;real&gt;, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute? [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute:COUPle ON   OFF   1   0, ... [:SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:STOP:ABSolute:COUPle?</pre>
Example	<pre>:SEM:OFFS:LIST:STOP:ABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm :SEM:OFFS1:LIST:STOP:ABS? :SEM:OFFS:LIST:STOP:ABS:COUP ON, OFF, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:ABS:COUP?</pre>
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS</p>
Couplings	Coupled to <b>Abs Start</b> if <b>Auto</b> is selected, that is, the Stop value is equal to the Start value
Preset	When the max number of offsets is 6:

Mode	Values
SA	-14.00 dBm, -26.00 dBm, -26.00 dBm, -13.00 dBm, -13.00 dBm, -13.00 dBm
WCDMA	-12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm -69.6 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm, -54.3 dBm
LTE, LTETDD	-12.5 dBm, -12.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

Mode	Values
LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm
MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

**WLAN Mode:** See the table of "[WLAN Mode Presets](#)" on page 881 below

When the max number of offsets is 6:

Mode	Values
SA	ON, OFF, ON, ON, ON, ON
WCDMA	ON, OFF, ON, ON, ON, ON   ON, ON, ON, ON, ON, ON
LTE, LTETDD	OFF, ON, ON, ON, ON, ON   ON, ON, ON, ON, ON, ON

When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value

Mode	Values
LTEAFDD, LTEATDD, 5G NR	OFF, ON, ON   ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
MSR	ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF

When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value

**WLAN Mode:** See the table of "[WLAN Mode Auto Function Presets](#)" on page 882 below

State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min/Max	-200 dBm/50 dBm

## WLAN Mode Presets

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	-4.00 dBm, -12.00 dBm, -24.00 dBm
802.11a/g (OFDM/DSSS-OFDM)	-10 dBm, -30 dBm
802.11n/ac/ax/be (20MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -63.00 dBm
802.11n/ac/ax/be (40MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm
802.11ac/ax (80MHz/160MHz)	-69.00 dBm, -69.00 dBm

Radio Std	Presets
	69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11be (80MHz/160MHz/320MHz)	-49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm, -49.00 dBm
802.11ac/ax (80 + 80 MHz)	-69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11ah (1MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11ah (2MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -63.00 dBm, -63.00 dBm, - 63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm, - 63.00 dBm, -63.00 dBm, -63.00 dBm, -63.00 dBm
802.11ah (4MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11ah (8MHz/16MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -69.00 dBm, -69.00 dBm, - 69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm, - 69.00 dBm, -69.00 dBm, -69.00 dBm, -69.00 dBm
802.11j/p (10MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm, - 60.00 dBm, -60.00 dBm, -60.00 dBm, -60.00 dBm
802.11j/p (5MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -57.00 dBm, -57.00 dBm, - 57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm, - 57.00 dBm, -57.00 dBm, -57.00 dBm, -57.00 dBm
802.11af (6MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (7MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm
802.11af (8MHz)	-4.00 dBm, -12.00 dBm, -24.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm, - 66.00 dBm, -66.00 dBm, -66.00 dBm, -66.00 dBm

### WLAN Mode Auto Function Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON,
802.11n (20MHz/40MHz)	ON, ON, ON, ON
802.11 ac/ax/be (20MHz/40MHz/80MHz/160MHz)	

Radio Std	Presets
802.11 be (320MHz)	
802.11ah (1MHz/2MHz/4MHz/8MHz/16MHz)	
802.11af (6MHz/7MHz/8MHz)	
802.11 ac/ax (80+80 MHz)	ON, ON, ON, ON, ON
802.11b/g (DSSS/CCK/PBCC)	ON, ON, ON, ON, ON
802.11j/p 20M, j/p 10M, p5M	OFF, OFF, OFF, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON

## Rel Start

Sets a relative power level limit at the start frequency for the selected offset. The relative power level limit ranges from -200 to +50 dBc.

The fail condition is set remotely by `[ :SENSe]:SEMAsk:OFFSet[n]  
[:OUTer]:LIST:TEST` for each offset channel test.

You can turn off (not use) specific offset channels remotely with `[ :SENSe]:SEMAsk:OFFSet[n][:OUTer]:LIST:STATe`.

The query returns values currently set to the relative power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:START:RCARrier &lt;rel_amp1&gt;, ... [ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:START:RCARrier?</code>						
Example	<code>:SEM:OFFS:LIST:STAR:RCAR -30, -30, -30, -30, -30, -30 :SEM:OFFS:LIST:STAR:RCAR?</code>						
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS Note that Offset sub op code 2 is supported only in Modes other than SA. In SA mode, Offset sub op code 1 is used for both BTS and MS						
Preset	When the max number of offsets is 6: <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB</td> </tr> <tr> <td>WCDMA</td> <td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB</td> </tr> </tbody> </table>	Mode	Values	SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB	WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB
Mode	Values						
SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB						
WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -33.73 dB, -34.00 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB						



## Rel Stop

Sets a relative power level limit at the stop frequency for the selected offset. The relative power level limit ranges from -200 to +50 dBc.

The fail condition is set remotely by `[ :SENSe]:SEMAsk:OFFSet[n] [ :OUTer]:LIST:TEST` for each offset channel.

You can turn off (not use) specific offset channels remotely with `[ :SENSe]:SEMAsk:OFFSet[n][ :OUTer]:LIST:STATE`.

The query returns values currently set to the offset stop relative power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<pre>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier &lt;rel_ampl&gt;, ... [ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier? [ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier:COUPle ON   OFF   1   0, ... [ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STOP:RCARrier:COUPle?</pre>						
Example	<pre>:SEM:OFFS:LIST:STOP:RCAR -30, -30, -30, -30, -30, -30 :SEM:OFFS:LIST:STOP:RCAR? :SEM:OFFS:LIST:STOP:RCAR:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:RCAR:COUP?</pre>						
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Offset sub op code 2 is supported only in Modes other than SA. In SA mode, Offset sub op code 1 is used for both BTS and MS</p>						
Couplings	Coupled to Rel Start if "Auto" is selected, that is, Start is made the same as Stop						
Preset	<p>When the max number of offsets is 6:</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB</td> </tr> <tr> <td>WCDMA</td> <td>-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB</td> </tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p>	Mode	Values	SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB	WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB
Mode	Values						
SA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB						
WCDMA	-30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB, -30.00 dB -48.28 dB, -37.50 dB, -47.50 dB, -47.50 dB, -47.50 dB, -47.50 dB						



3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Radio Std	Presets
160 MHz)	dB, -40.00 dB
802.11be (320 MHz)	-20.00 dB, -28.00 dB, -40.00 dB
802.11ac/ax (80 MHz + 80MHz)	-40dB, -28.00 dB, -20.00 dB, 0 dB, -20.00 dB, -28.00 dB, -40.00 dB
802.11ah (1MHz/ 2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	-20.00 dB, -28.00 dB, -40.00 dB
802.11 j/p 10M, p5M	-20.00 dB, -28.00 dB, -40.00 dB, -40.00 dB, -40.00 dB, -47.00 dB, -40.00 dB, -40.00 dB
802.11af (6MHz/ 7MHz/ 8MHz)	-20.00 dB, -28.00 dB, -40.00 dB

### WLAN Mode Auto Function Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	OFF, OFF, OFF, ON, ON
802.11n (20MHz/ 40MHz)	ON, ON, ON
802.11b/g (DSSS/CCK/PBCC)	ON, ON
802.11ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/ 160 MHz)	OFF, OFF, OFF, ON, ON
802.11be (320 MHz)	OFF, OFF, OFF, ON, ON
802.11ac/ax (80 MHz + 80MHz)	OFF, OFF
802.11ah (1MHz/2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	OFF, OFF, OFF, ON, ON
802.11j/p (20M/ 10M) /11p(5M)	OFF, OFF, OFF, ON, ON
802.11af (6 MHz/ 7 MHz/ 8 MHz)	OFF, OFF, OFF, ON, ON

### Fail Mask

Selects one of the logics for fail conditions between the measurement results and the test limits:

- **ABSolute** and **RELative** both check the results against the respective limit
- **OR** checks against both limits, failing if either of the limits is broken
- **AND** only displays a fail if both of the limits are broken

The absolute or relative power limit value for each offset channel can be set remotely with `[ :SENSe]:SEMAsk:OFFSet[n][ :OUTer]:LIST:ABSolute` or `[ :SENSe]:SEMAsk:OFFSet[n][ :OUTer]:LIST:RCARrier`.

You can turn off (not use) specific offset channels remotely with `[ :SENSe]:SEMAsk:OFFSet[n][ :OUTer]:LIST:STATE`.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[ :OUTer]:LIST:TEST ABSolute   AND   OR   RELative, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[ :OUTer]:LIST:TEST?</code>												
Example	<code>:SEM:OFFS:LIST:TEST ABS, ABS, ABS, ABS, ABS, ABS</code> <code>:SEM:OFFS:LIST:TEST?</code>												
Notes	Comma-separated list of values Note that Offset sub op code 2 is supported only in Modes other than SA. In SA Mode, Offset sub op code 1 is used for both BTS and MS												
Preset	When the max number of offsets is 6: <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>ABS, ABS, ABS, ABS, ABS, ABS</td> </tr> <tr> <td>WCDMA</td> <td>ABS, ABS, ABS, ABS, ABS, ABS   AND, AND, AND, AND, AND, AND</td> </tr> <tr> <td>LTE, LTETDD</td> <td>ABS, ABS, ABS, ABS, ABS, ABS</td> </tr> </tbody> </table> <p>When the max number of offsets is 12 in these modes, the preset value of Offset G ~ L is the same as the Offset F value</p> <table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>LTEAFDD, LTEATDD, 5G NR, MSR</td> <td>ABS, ABS, ABS   ABS, ABS</td> </tr> </tbody> </table> <p>When the max number of offsets is 14 in these modes, the preset value of Offset G ~ N is the same as the Offset F value</p> <p><b>WLAN Mode:</b> See the table of "<b>WLAN Mode Presets</b>" on page 889 below</p>	Mode	Values	SA	ABS, ABS, ABS, ABS, ABS, ABS	WCDMA	ABS, ABS, ABS, ABS, ABS, ABS   AND, AND, AND, AND, AND, AND	LTE, LTETDD	ABS, ABS, ABS, ABS, ABS, ABS	Mode	Values	LTEAFDD, LTEATDD, 5G NR, MSR	ABS, ABS   ABS, ABS
Mode	Values												
SA	ABS, ABS, ABS, ABS, ABS, ABS												
WCDMA	ABS, ABS, ABS, ABS, ABS, ABS   AND, AND, AND, AND, AND, AND												
LTE, LTETDD	ABS, ABS, ABS, ABS, ABS, ABS												
Mode	Values												
LTEAFDD, LTEATDD, 5G NR, MSR	ABS, ABS   ABS, ABS												
State Saved	Saved in instrument state												
Range	Absolute Relative Abs AND Rel Abs OR Rel												

## WLAN Mode Presets

Radio Std	Presets
802.11b/g (DSSS/CCK/PBCC)	REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL, REL
802.11a/g (OFDM/DSSS-OFDM)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11n/ac/ax/be (20 MHz/ 40 MHz/ 80 MHz/80 MHz + 80MHz / 160 MHz/320MHz)	AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11ah (1MHz/ 2 MHz/ 4 MHz/ 8 MHz/ 16 MHz)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11j/p 10M, p5M	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND
802.11af (6 MHz/ 7 MHz/ 8 MHz)	REL, REL, REL, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND, AND

## Show Abs2 Limit

Shows or hides Abs2 limit parameters.

Remote Command	:DISPlay:SEMask:OFFSet:SABSolute ON   OFF   1   0
Example	:DISP:SEM:OFFS:SABS 1 :DISP:SEM:OFFS:SABS?
Preset	0
State Saved	Yes
Range	ON OFF

## Abs2 Start

Sets the 2nd absolute power level limit at the start frequency for the selected offset, ranging from -200 to +50 dBm.

The fail condition for each offset channel is set remotely using:

`[ :SENSe]:SEMask:OFFSet[n][ :OUTer]:LIST:TEST:SABSolute`

You can turn off (not use) specific offset channels remotely using:

`[ :SENSe]:SEMask:OFFSet[n][ :OUTer]:LIST:STATe`

The query returns values currently set to the 2nd absolute power test limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STARt:SABSolute &lt;real&gt;, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STARt:SABSolute?</code>
Example	<code>:SEM:OFFS:LIST:STAR:SABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS:LIST:STAR:SABS?</code>
Notes	Comma-separated list of values <b>OFFSet1</b> is for BTS, 2 for MS. Default is BTS
Preset	For WLAN Mode: 0 dBm, 0 dBm For other Modes: 0 dBm, 0 dBm   0 dBm, 0 dBm
State Saved	Saved in instrument state
Min	-200 dBm
Max	50 dBm

## Abs2 Stop

Sets the 2nd absolute power level limit at the stop frequency for the selected offset, ranging from -200 to +50 dBm. You can also toggle this function between **Couple** and **Manual**. If **Couple = ON**, the **Abs2 Stop** power level limit is coupled to "**Abs2 Start**" on page 889, resulting in a flat limit line. If set to **Man (Couple = OFF)**, **Abs2 Start** and **Abs2 Stop** take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop absolute2 power limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute &lt;real&gt;, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute?</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute:COUPlE ON   OFF   1   0, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2[:OUTer]:LIST:STOP:SABSolute:COUPlE?</code>
Example	<code>:SEM:OFFS:LIST:STOP:SABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code>

	<pre> :SEM:OFFS:LIST:STOP:SABS? :SEM:OFFS:LIST:STOP:SABS:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:LIST:STOP:SABS:COUP? </pre>
Notes	Comma separated list of values <b>OFFSet</b> 1 is for BTS, 2 for MS. Default is BTS
Couplings	Coupled to Abs2 Start if <b>Auto</b> is selected, that is, the Stop value is equal to the Start value
Preset	For WLAN Mode: 0 dBm, 0 dBm For other Modes: 0 dBm, 0 dBm   0 dBm, 0 dBm For WLAN Mode: <b>ON, ON, ON</b> For other Modes: <b>ON, ON, ON   ON, ON</b>
State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min	-200 dBm
Max	50 dBm

## Fail Mask2

Selects the logic operation for fail conditions between the measurement results and the test limits:

(Primary Fail Mask selection) OR Abs2	<b>OR</b>	Checks against both Primary and Abs2 limits. The test fails if either of the limits is broken
(Primary Fail Mask selection) AND Abs2	<b>AND</b>	Checks against both Primary and Abs2 limits. The test fails if both of the limits are broken
Abs2 Disabled	<b>OFF</b>	Fail Mask2 is disabled

Note that the Primary Fail Mask selection is set by **"Fail Mask"** on page 887.

Examples:

- when Fail Mask is Abs **AND** Rel and Fail Mask2 is **OR** Abs2, “(Abs AND Rel) OR Abs2” is displayed in the column
- when Fail Mask is Absolute and Fail Mask2 is And Abs2, “(Absolute) AND Abs2” is displayed in the column

You can turn off (not use) specific offset channels remotely using:

`[ :SENSe]:SEMask:OFFSet[n][ :OUTer]:LIST:STATE`

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query returns 14 values for WLAN Mode, or 12 values for other Modes.

Remote Command	<code>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST:SABSolute AND   OR   OFF, ...</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2[:OUTer]:LIST:TEST:SABSolute?</code>
Example	<code>:SEM:OFFS:LIST:TEST:SABS AND, AND, OR, OFF, OFF, OFF</code> <code>:SEM:OFFS:LIST:TEST:SABS?</code>
Notes	Comma-separated list of values
Preset	For WLAN: <code>OFF, OFF, OFF</code> For other Modes: <code>OFF, OFF, OFF   OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</code>
State Saved	Saved in instrument state
Range	OR Abs2 AND Abs2 Abs2 Disabled

## Inner Offset (BW)

Accesses a menu that enables you to set up the bandwidth measurement parameters for inner offset pairs.

## Offset Freq Define

Enables you to select offset frequency definition. Each standard defines each offset frequency from Carrier.

For example, 3GPP2 requires the “Carrier Center to Meas BW Edge” definition, and LTE conformance test requires “Carrier Edge to Meas BW Center” and/or “Carrier Edge to Meas BW Edge” definition. MSR standard requires “RF BW Edge to Meas BW Center” and/or “RF BW Edge to Meas Edge” definition.

“Meas BW Edge” means the edge frequency of resolution bandwidth closer to the carrier that is represented by Meas BW and Res BW settings. Actual center frequency of Meas BW and the limit line have ½ Meas BW offset when the Meas BW Edge is selected.

Option	SCPI	Definition
Carrier Center to	<code>CTOCenter</code>	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Option	SCPI	Definition
Meas BW Center		center of offset measuring filter*
Carrier Center to Meas BW Edge	CTOEdge	From the lowermost carrier center frequency (for lower offset), the uppermost carrier center frequency (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Carrier Edge to Meas BW Center	ETOCenter	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the center frequency of offset measuring filter*
Carrier Edge to Meas BW Edge	ETOEdge	From the lowermost carrier center frequency - spacing of this carrier /2 (for lower offset), the uppermost carrier center frequency + spacing of this carrier /2 (for upper offset) to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Sub-block Edge to Meas BW Center	STOCenter	From either the lower or upper sub-block edge frequency to the center frequency of offset measuring filter*
Sub-block Edge to Meas BW Edge	STOEdge	From either the lower or upper sub-block edge frequency to the nominal -3 dB point of the offset measuring filter* closer to the carrier
Sub-block Center to Meas BW Center	SCTOCenter	<b>From the center frequency of sub-block</b> to the center frequency of offset measuring filter*

5G NR Mode only

\*Measuring filter = Meas BW (N) x Res BW

\*\* sub-block (bandwidth) =  $BW_{\text{channel,block}}$  which is defined in each 3GPP standard, regardless of "Measure Carrier" for the uppermost and the lowermost carriers being Enabled or Disabled. When the **Number of Component Carriers** within each sub-block = 1, sub-block (bandwidth) =  $BW_{\text{channel}} = 2 \times F_{\text{offset,RAT}}$ .

See "[Diagrams for Offset Freq Define](#)" on page 895.

**Mode: MSR, LTEAFDD, LTEATDD**

---


Remote Command  
[:SENSe]:SEMAsk:OFFSet[1]|2:INNeR:TYPE CTOCenter | CTOEdge | ETOCenter | ETOEdge | STOCenter | STOEdge  
[:SENSe]:SEMAsk:OFFSet[1]|2:INNeR:TYPE?

Example	<code>:SEM:OFFS:INN:TYPE ETOC</code> <code>:SEM:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center   Carrier Center to Meas BW Edge   Carrier Edge to Meas BW Center   Carrier Edge to Meas BW Edge   Sub-block Edge to Meas BW Center   Sub-block Edge to Meas BW Edge

### Mode: 5G NR

Remote Command	<code>[[:SENSe]:SEMAsk:OFFSet[1] 2:INNeR:TYPE CTOCenter   CTOEdge   ETOCenter   ETOEdge   STOCenter   STOEdge   SCTOCenter</code> <code>[[:SENSe]:SEMAsk:OFFSet[1] 2:INNeR:TYPE?</code>
Example	<code>:SEM:OFFS:INN:TYPE ETOC</code> <code>:SEM:OFFS:INN:TYPE?</code>
Preset	<code>STOCenter</code>
State Saved	Saved in instrument state
Range	Carrier Center to Meas BW Center   Carrier Center to Meas BW Edge   Carrier Edge to Meas BW Center   Carrier Edge to Meas BW Edge   Sub-block Edge to Meas BW Center   Sub-block Edge to Meas BW Edge   Sub-block Center to Meas BW Center

### Diagrams for Offset Freq Define

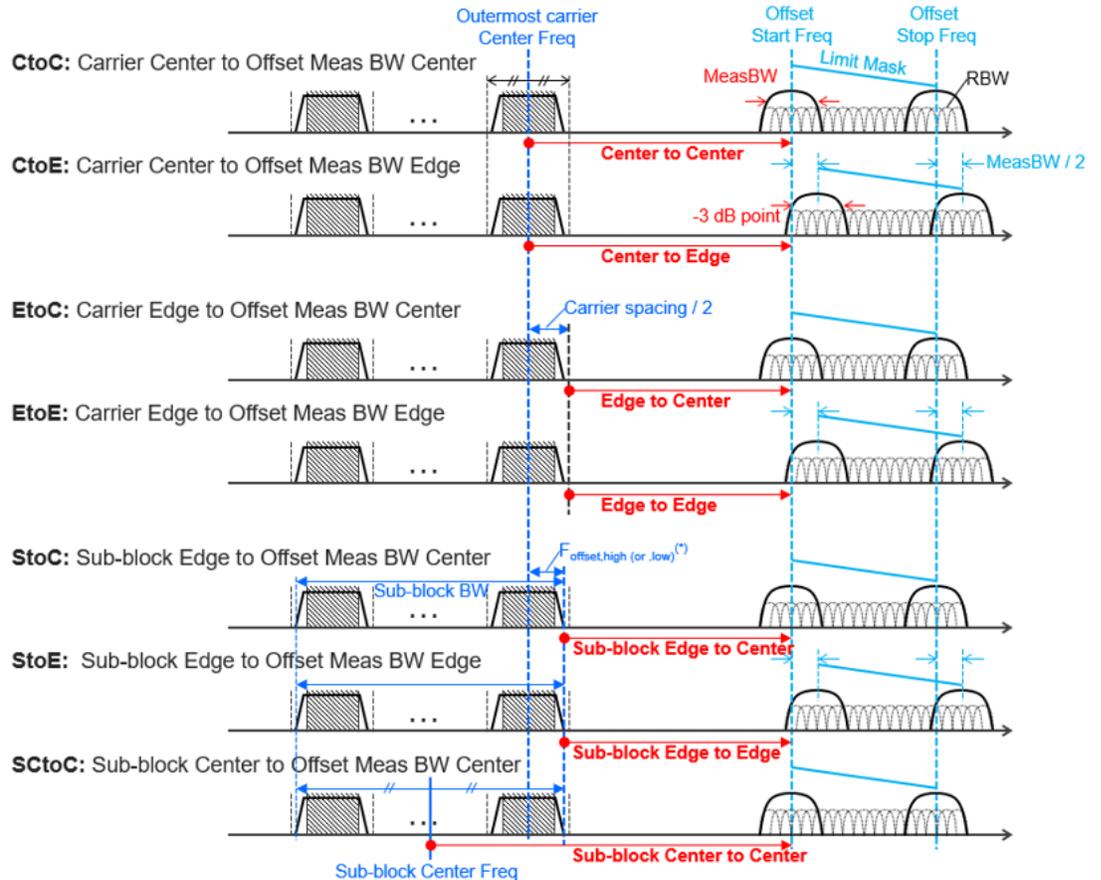

**Notes:**

- $MeasBW = N \times RBW$
- Sub-block Edge and Outermost Carrier Edge in the Sub-block are not always same. e.g.) 5G NR (3GPP) defines  $BW_{channel,block}$  which calculates  $F_{offset,high}$  and  $F_{offset,low}$  asymmetrically with SCS shift.  
 (\*) For MSR,  $F_{offset,high (or,low)} = F_{offset,RAT,high (or,low)}$

### Offset Detector

See "Offset Detector" on page 857.

### Cumulate Mask

Selects whether inner offset limit masks are cumulated or not.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:CMASK[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:CMASK[:STATe]?</code>
Example	<code>:SEM:OFFS:INN:CMAS 0</code> <code>:SEM:OFFS:INN:CMAS?</code>
Notes	OFFSet 1 is for BTS, 2 for MS. Default is BTS
Preset	1 0
State Saved	Yes
Range	ON OFF

### Cumulate Mask Stop Frequency

Specifies stop frequency of summing limit masks. For outside of the stop frequency, the limit masks are not cumulated.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:CMASK:FREQuency:STOP &lt;freq&gt;</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:CMASK:FREQuency:STOP?</code>
Example	<code>:SEM:OFFS:INN:CMAS:FREQ:STOP 500E6</code> <code>:SEM:OFFS:INN:CMAS:FREQ:STOP?</code>
Notes	OFFSet 1 is for BTS, 2 for MS. Default is BTS
Dependencies	Valid only when " <a href="#">Cumulate Mask</a> " on page 895 is ON
Preset	10.5 MHz
State Saved	Yes
Min/Max	0 Hz/10 GHz

### Start Freq

Specifies the start frequency for the currently selected offset. Also, enables you to toggle that offset between On and Off. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:FREQuency:STARt &lt;freq&gt;, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:FREQuency:STARt?</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STATe ON   OFF   1   0, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STATe?</code>
Example	<code>:SEM:OFFS2:INN:LIST:FREQ:STAR 2.515 MHz, 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz</code> <code>:SEM:OFFS2:INN:LIST:FREQ:STAR?</code>

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

	<code>:SEM:OFFS:INN:LIST:STAT ON, ON, ON, OFF, OFF, OFF</code> <code>:SEM:OFFS:INN:LIST:STAT?</code>																
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS If the offset is outside the frequency range, the result spectrum will be invalid																
Couplings	Coupled to " <b>Stop Freq</b> " on page 897. If <b>Start Freq</b> exceeds <b>Stop Freq</b> , <b>Stop Freq</b> is automatically adjusted to ( <b>Start Freq</b> + 100 Hz)																
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz   15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz</td> </tr> <tr> <td>5G NR</td> <td>50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz   15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD</td> <td>50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz   15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz</td> </tr> <tr> <th>Mode</th> <th>Values</th> </tr> <tr> <td>MSR</td> <td>ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>5GNR</td> <td>ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td> </tr> <tr> <td>LTEAFDD LTEATDD</td> <td>ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF</td> </tr> </tbody> </table>	Mode	Values	MSR	15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz   15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz	5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz   15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz	LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz   15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz	Mode	Values	MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF	5GNR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF	LTEAFDD LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF
Mode	Values																
MSR	15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz, 30 MHz   15 kHz, 215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 15.00 MHz, 30 MHz																
5G NR	50 kHz, 5.05 MHz, 10.5 MHz, 40.00 MHz, 100 MHz   15.00 kHz, 1.5 MHz, 5.5 MHz, 100.50 MHz, 105.00 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz, 100 MHz																
LTEAFDD, LTEATDD	50 kHz, 5.05 MHz, 10.5 MHz, 15.00 MHz, 30 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz, 40 MHz   15.00 kHz, 1.5 MHz, 5.5 MHz, 6.5 MHz, 10 MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz, 20MHz																
Mode	Values																
MSR	ON, ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
5GNR	ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
LTEAFDD LTEATDD	ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, ON, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF																
State Saved	Saved in instrument state Saved in instrument state																
Range	ON OFF																
Min/Max	0 Hz/Depends on instrument maximum frequency. It's always Offset Stop Freq -100 Hz																

### Stop Freq

Specifies the stop frequency for the currently selected offset.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1][2:INNER:LIST:FREQuency:STOP &lt;freq&gt;, ...</code>
----------------	---

	<code>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :INNer :LIST :FREQuency :STOP ?</code>								
Example	<code>:SEM :OFFS :INN :LIST :FREQ :STOP 2.715 MHz, 3.515 MHz, 4.00 MHz, 8.00 MHz, 12.50 MHz, 15.0 MHz</code> <code>:SEM :OFFS :INN :LIST :FREQ :STOP ?</code>								
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS If the offset is outside the frequency range, the result spectrum will be invalid								
Couplings	Coupled to " <b>Start Freq</b> " on page 896. If <b>Stop Freq</b> is lower than <b>Start Freq</b> , <b>Start Freq</b> is automatically adjusted to ( <b>Stop Freq</b> - 100 Hz)								
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz</td> </tr> <tr> <td>5G NR</td> <td>5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz   985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD</td> <td>5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz   985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz</td> </tr> </tbody> </table>	Mode	Values	MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz	5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz   985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz	LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz   985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz
Mode	Values								
MSR	215 kHz, 1.015 MHz, 1.5 MHz, 10.5 MHz, 50 MHz								
5G NR	5.05 MHz, 10.05 MHz, 40 MHz, 100 MHz, 500 MHz   985.0 kHz, 4.50 MHz, 99.500 MHz, 104.5 MHz, 500 MHz								
LTEAFDD, LTEATDD	5.05 MHz, 10.05 MHz, 15 MHz, 30 MHz, 40 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz, 50 MHz   985.0 kHz, 4.50 MHz, 5.5001 MHz, 9.50 MHz, 20 MHz, 40 MHz								
State Saved	Saved in instrument state								
Min/Max	100 Hz/Depends on instrument maximum frequency. Same as the Max Span on Swept SA Measurement								

## Res BW

Specifies which Resolution BW filter to use when measuring the currently selected offset.

Offset Res BW Mode allows the instrument to determine the optimum Resolution BW filter to use when measuring the currently selected offset. using front panel and all the offsets using SCPI. When changing the Meas BW parameter, if the Res BW needs to be changed to adhere to the rule:

$$(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset}),$$

where N is the multiplier, this setting will automatically be changed to manual.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[ :SENSe ] :SEMAsk :OFFSet [ 1 ]   2 :INNer :LIST :BANDwidth [ :RESolution ] &lt;bandwidth&gt;, ...</code>
----------------	--

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

	<pre>[ :SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]? [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]:AUTO OFF   ON   1   0, ... [:SENSe]:SEMask:OFFSet[1] 2:INNeR:LIST:BANDwidth[:RESolution]:AUTO?</pre>								
Example	<pre>:SEM:OFFS2:INN:LIST:BAND 30.0 kHz, 30.0 kHz, 30.0 kHz, 1.00 MHz,1.00 MHz, 1.00 MHz :SEM:OFFS2:INN:LIST:BAND? :SEM:OFFS:INN:LIST:BAND:AUTO 1,1,1,1,1,1 :SEM:OFFS:INN:LIST:BAND:AUTO?</pre>								
Notes	<p>Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS</p>								
Couplings	<p>Coupled to Start and Stop offset and "<b>Meas BW</b>" on page 899 multiplier. This parameter must adhere to the rule:  <math>(N \times \text{Res BW}) \leq (\text{Stop freq of the offset} - \text{Start freq of the offset})</math>, where N is the multiplier          If the multiplier is changed, the Res BW changes to ensure conformance to the rule. When set manually, Res BW Coupling is set to manual          The resolution bandwidth is coupled to the offset width, determined by "<b>Start Freq</b>" on page 896 and "<b>Stop Freq</b>" on page 897</p>								
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz   30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td> <td>51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz,1.0 MHz   15.0 kHz, 510 kHz,1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz</td> </tr> <tr> <td></td> <td>OFF, OFF, OFF   OFF, OFF</td> </tr> </tbody> </table>	Mode	Values	MSR	30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz   30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz	LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz,1.0 MHz   15.0 kHz, 510 kHz,1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz		OFF, OFF   OFF, OFF
Mode	Values								
MSR	30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz   30 kHz, 30 kHz, 30 kHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz								
LTEAFDD, LTEATDD, 5G NR	51 kHz, 100 kHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz,1.0 MHz,1.0 MHz   15.0 kHz, 510 kHz,1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz, 1.0 MHz,1.0 MHz, 1.0 MHz, 1.0 MHz								
	OFF, OFF   OFF, OFF								
State Saved	<p>Saved in instrument state Saved in instrument state</p>								
Range	Auto Man								
Min	1 Hz								
Max	<p>When Option FS1 or FS2 is installed:10 MHz Otherwise: 8 MHz</p>								

### Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

Meas BW is multiplier integer, which defines a ratio between Integration BW and **Res BW** of the measurement result:

Integration BW = Meas BW \* "Res BW" on page 898

Integration BW is the desired resolution bandwidth, and **Res BW** is the actual bandwidth for sweep. Measurement sweeps with **Res BW**, and **Meas BW** compensates sweep resolution bandwidth to Integration BW.

If you set this parameter greater than 1, you can set **Res BW** narrower to avoid carrier power leakage effect to the offset power integration.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:BA NDwidth:IMULti &lt;integer&gt;, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:BA NDwidth:IMULti?</code>						
Example	<code>:SEM:OFFS2:INN:LIST:BA ND:IMUL 1,1,1,1,1,1</code> <code>:SEM:OFFS2:INN:LIST:BA ND:IMUL?</code>						
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS						
Couplings	This parameter must adhere to the rule: (N x Res BW) <= (Stop freq of the offset - Start freq of the offset), where N is the multiplier If <b>Res BW</b> is changed, the multiplier changes to conform to the rule						
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1   1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td> </tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td> <td>2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1   2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1</td> </tr> </tbody> </table>	Mode	Values	MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1   1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1	LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1   2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
Mode	Values						
MSR	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1   1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1						
LTEAFDD, LTEATDD, 5G NR	2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1   2, 2, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1						
State Saved	Yes						
Min/Max	1/1000						

## Video BW

Changes the instrument post-detection filter.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:BA NDwidth:VIDeo &lt;freq&gt;, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:BA NDwidth:VIDeo?</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:BA NDwidth:VIDeo:AUTO OFF   ON   0   1, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:BA NDwidth:VIDeo:AUTO?</code>
Example	<code>:SEM:OFFS2:INN:LIST:BA ND:VID 3.00 kHz, 3.00 kHz, 3.00 kHz, 100.0 kHz,100.0</code>

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

	<p>kHz, 100.0 kHz</p> <p>:SEM:OFFS2:INN:LIST:BAND:VID?</p> <p>:SEM:OFFS2:INN:LIST:BAND:VID:AUTO ON, ON, ON, ON, ON, ON</p> <p>:SEM:OFFS2:INN:LIST:BAND:VID:AUTO?</p>
Notes	<p>Comma-separated list of values</p> <p>Offset 1 is for BTS, 2 for MS. Default is BTS</p>
Couplings	When the <b>Auto</b> state is <b>ON</b> , <b>Video BW</b> is basically coupled with other parameters
Preset	<p>Automatically Calculated</p> <p>ON, ON, ON   ON, ON</p>
State Saved	<p>Saved in instrument state</p> <p>Saved in instrument state</p>
Range	Auto Man
Min/Max	1 Hz/50 MHz

## VBW/RBW

Selects the ratio between the video and resolution bandwidths.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<p>[ :SENSe ] :SEMAsk:OFFSet[ 1 ]   2 :INNer:LIST:BANDwidth:VIDeo:RATio &lt;real&gt;, ...</p> <p>[ :SENSe ] :SEMAsk:OFFSet[ 1 ]   2 :INNer:LIST:BANDwidth:VIDeo:RATio?</p> <p>[ :SENSe ] :SEMAsk:OFFSet[ 1 ]   2 :INNer:LIST:BANDwidth:VIDeo:RATio:AUTO OFF   ON   0   1, ...</p> <p>[ :SENSe ] :SEMAsk:OFFSet[ 1 ]   2 :INNer:LIST:BANDwidth:VIDeo:RATio:AUTO?</p>
Example	<p>:SEM:OFFS2:INN:LIST:BAND:VID:RAT 0.1, 0.1, 0.1, 0.1, 0.1, 0.1</p> <p>:SEM:OFFS2:INN:LIST:BAND:VID:RAT?</p> <p>:SEM:OFFS:INN:LIST:BAND:VID:RAT:AUTO ON, ON, ON, ON, ON, ON</p> <p>:SEM:OFFS:INN:LIST:BAND:VID:RAT:AUTO?</p>
Notes	<p>Comma-separated list of values</p> <p>Offset1 is for BTS, 2 for MS. Default is BTS</p>
Couplings	When <b>Auto</b> state is <b>ON</b> , the VBW/RBW is basically coupled with other parameters
Preset	<p>0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01   0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01, 0.01</p> <p>OFF, OFF, OFF   OFF, OFF</p>
State Saved	Saved in instrument state

---

	Saved in instrument state
Range	Auto Man
Min/Max	0.00001/3000000

---

### Inner Offset (Sweep)

Accesses a menu that enables you to set up the sweep measurement parameters for inner offset pairs.

### Offset Freq Define

Same as ["Offset Freq Define" on page 892](#) under Inner Offset (BW)

### Offset Detector

Same as ["Offset Detector" on page 857](#) under Inner Offset (BW)

### Cumulate Mask

Same as ["Cumulate Mask " on page 895](#) under Inner Offset (BW)

### Cumulate Mask Stop Frequency

Same as ["Cumulate Mask Stop Frequency" on page 896](#), under Inner Offset (BW)

### Start Freq

Same as ["Start Freq" on page 896](#), under Inner Offset (BW)

### Stop Freq

Same as ["Stop Freq" on page 897](#), under Inner Offset (BW)

### Sweep Time

Specifies the sweep time for the currently selected offset and enables you to toggle the **Sweep Time** mode between **Auto** and **Man**.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

NOTE

On non-sweeping hardware, this column is grayed-out. The value shown on this column is an estimate of the turnaround time to complete the measurement of the entire offset span, which is the sum of signal acquisition time, FFT time, and other overhead time. If you need to specify the same **Sweep Time** as you would for sweeping hardware, send `[ :SENSe ]:SEMask:OFFSet [1] | 2:INNeR:LIST:SWEEp:TIME <time>`. The measurement emulates the **Sweep Time** effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using "**Minimum Acquisition Time**" on page 904, which provides better control.

Remote Command	<code>[ :SENSe ]:SEMask:OFFSet [1]   2:INNeR:LIST:SWEEp:TIME &lt;time&gt;, ...</code> <code>[ :SENSe ]:SEMask:OFFSet [1]   2:INNeR:LIST:SWEEp:TIME?</code> <code>[ :SENSe ]:SEMask:OFFSet [1]   2:INNeR:LIST:SWEEp:TIME:AUTO ON   OFF   1   0, ...</code> <code>[ :SENSe ]:SEMask:OFFSet [1]   2:INNeR:LIST:SWEEp:TIME:AUTO?</code>						
Example	<code>:SEM:OFFS2:INN:LIST:SWE:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms</code> <code>:SEM:OFFS2:INN:LIST:SWE:TIME?</code> <code>:SEM:OFFS2:INN:LIST:SWE:TIME:AUTO ON, ON, ON, ON, OFF, OFF</code> <code>:SEM:OFFS2:INN:LIST:SWE:TIME:AUTO?</code>						
Notes	OFFSet 1 is for BTS, 2 for MS. Default is BTS						
Dependencies	On non-sweeping hardware, this column is grayed-out and the <b>Auto/Man</b> checkbox is invisible. The read-only column shows estimated sweep time In those instruments, " <b>Minimum Acquisition Time</b> " on page 904 is available						
Couplings	When you manually set a value while in <b>Auto</b> , the state automatically changes to <b>Man</b>						
Preset	Automatically calculated						
	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>ON, ON, ON</td> </tr> <tr> <td>LTEAFDD, LTEATDD, 5G NR</td> <td>ON, ON, ON   ON, ON, ON</td> </tr> </tbody> </table>	Mode	Values	MSR	ON, ON	LTEAFDD, LTEATDD, 5G NR	ON, ON   ON, ON, ON
Mode	Values						
MSR	ON, ON						
LTEAFDD, LTEATDD, 5G NR	ON, ON   ON, ON, ON						
State Saved	Saved in instrument state Saved in instrument state						
Min	Other than non-sweeping hardware Depends on Sweep Type: <ul style="list-style-type: none"> <li>- Sweep Type "Swept": 1 ms</li> <li>- Sweep Type "FFT": 100 ns</li> </ul> Non-sweeping hardware: N/A						

Max	Sweeping hardware: 10 s Non-sweeping hardware: N/A						
Min/Max	Depends on "Sweep Type" on page 874:						
	<table border="1"> <thead> <tr> <th>Sweep Type</th> <th>Min/Max</th> </tr> </thead> <tbody> <tr> <td>Swept</td> <td>1ms/10 s</td> </tr> <tr> <td>FFT</td> <td>100ns/10 s</td> </tr> </tbody> </table>	Sweep Type	Min/Max	Swept	1ms/10 s	FFT	100ns/10 s
Sweep Type	Min/Max						
Swept	1ms/10 s						
FFT	100ns/10 s						

## Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides **Span** into multiple chunks if needed.

Therefore, the total signal acquisition time for the entire offset span is:

$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$ .

When in **Auto**, this parameter’s value is determined by other parameters, such as **Offset Start**, **Offset Stop**, **RBW** and **VBW**.

You can manually increase this parameter value from this **Auto** value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<pre>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:SWEep:ACQuisition:TIME &lt;time&gt;, ... [:SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:SWEep:ACQuisition:TIME? [:SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:SWEep:ACQuisition:TIME:AUTO ON   OFF   1   0, ... [:SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:SWEep:ACQuisition:TIME:AUTO?</pre>
Example	<pre>:SEM:OFFS2:INN:LIST:SWE:ACQ:TIME 1.0 ms, 3.4 ms, 2.08 ms, 1.0 ms, 1.0 ms, 1.0 ms :SEM:OFFS2:INN:LIST:SWE:ACQ:TIME? :SEM:OFFS2:INN:LIST:SWE:ACQ:TIME:AUTO ON, ON, ON, OFF, OFF :SEM:OFFS2:INN:LIST:SWE:ACQ:TIME:AUTO?</pre>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to <b>Offset Start Freq</b> , <b>Offset Stop Freq</b> , <b>RBW</b> , and <b>VBW</b> when in the <b>Auto</b> state When you manually set a value while in <b>Auto</b> , the state automatically changes to <b>Man</b>

Preset	Automatically calculated <b>ON</b>
State Saved	Saved in instrument state
Min	100 ns
Max	4000 s

### Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

The value returned is the estimated turnaround time of each acquisition, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire offset span of each measurement cycle.

Remote Command	<code>[ :SENSe ] :SEMAsk:OFFSet[1]   2:INNeR:LIST:SWEEp:ETIMe?</code>
Example	<code>:SEM:OFFS2:INN:LIST:SWE:ETIM?</code>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

### Sweep Type

Specifies the **Sweep Type** for the currently selected offset and enables you to toggle **Sweep Type** mode between **Auto** and **Man**.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

How to define Sweep Time and Sweep Type

Sweep Type Mode	Behavior
Auto	<b>Sweep Type</b> is automatically selected depending on Rules <b>Sweep Time</b> is automatically calculated, according to the selected <b>Sweep Type</b>
Man	<b>Sweep Type</b> is user-selected
–	

Remote Command	<code>[ :SENSe ] :SEMAsk:OFFSet[1]   2:INNeR:LIST:SWEEp:TYPE SWEEp   FFT, ...</code> <code>[ :SENSe ] :SEMAsk:OFFSet[1]   2:INNeR:LIST:SWEEp:TYPE?</code> <code>[ :SENSe ] :SEMAsk:OFFSet[1]   2:INNeR:LIST:SWEEp:TYPE:AUTO ON   OFF   1   0, ...</code> <code>[ :SENSe ] :SEMAsk:OFFSet[1]   2:INNeR:LIST:SWEEp:TYPE:AUTO?</code>
----------------	---

Example	<pre> :SEM:OFFS2:INN:LIST:SWE:TYPE FFT,FFT,SWE :SEM:OFFS2:INN:LIST:SWE:TYPE? :SEM:OFFS2:INN:LIST:SWE:TYPE:AUTO ON, ON, ON, ON, OFF, OFF :SEM:OFFS2:INN:LIST:SWE:TYPE:AUTO? </pre>
Notes	<p>Comma-separated list of values</p> <p>OFFSet 1 is for BTS, 2 for MS. Default is BTS</p>
Dependencies	Not available in modular products, such as VXT
Couplings	<p>When <b>Sweep Type</b> is set manually, <b>Sweep Type Mode</b> is set to <b>MANua1</b></p> <p>When <b>Sweep Type Mode</b> is <b>Auto</b>, <b>Sweep Type</b> is automatically selected according to "<b>Sweep Type Rules</b>" on page 850</p>
Preset	<p>Automatically calculated</p> <p>ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON,ON</p>
State Saved	Saved in instrument state
Range	Auto Man

## Offset Side

Specifies which offset side to measure.


You can turn off (not use) specific offsets with `[ :SENSe ] :SEMAsk:OFFSet [n] :INNer:LIST:STATe`.

<b>BOTH</b>	Both sides in the sub-block gap are enabled.
<b>NEGative</b>	The upper side in the sub-block gap only (i.e., negative sideband of the upper sub-block) is enabled
<b>POSitive</b>	The lower side in the sub-block gap only (i.e., positive sideband of the lower sub-block) is enabled.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

The figure below shows the relation between the negative/positive offset side setups and the upper/lower results in the MSR and LTE-Advanced FDD/TDD Modes.

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

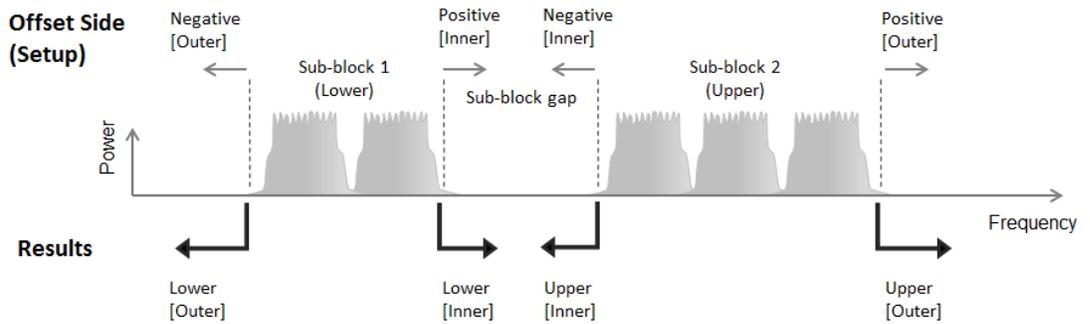

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:SIDE BOTH   NEGative   POSitive, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:SIDE?</code>						
Example	<code>:SEM:OFFS:INN:LIST:SIDE BOTH, NEG, NEG, POS, POS, POS</code> <code>:SEM:OFFS:INN:LIST:SIDE?</code>						
Notes	Comma-separated list of values OFFSet1 is for BTS, 2 for MS. Default is BTS						
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>BOTH, BOTH, BOTH</td> </tr> <tr> <td>LTEAFDD, LTEATDD, 5GNR</td> <td>BOTH, BOTH, BOTH   BOTH, BOTH</td> </tr> </tbody> </table>	Mode	Values	MSR	BOTH, BOTH	LTEAFDD, LTEATDD, 5GNR	BOTH, BOTH   BOTH, BOTH
Mode	Values						
MSR	BOTH, BOTH						
LTEAFDD, LTEATDD, 5GNR	BOTH, BOTH   BOTH, BOTH						
State Saved	Saved in instrument state						
Range	<code>BOTH NEGative POSitive</code>						

### Inner Offset (Limits)

Accesses a menu that enables you to set the power limits for start and stop frequencies of the selected inner offsets.

### Start Freq

Same as "Start Freq" on page 896 under Inner Offset (BW)

### Stop Freq

Same as "Stop Freq" on page 897 under Inner Offset (BW)

## Abs Start

Sets the absolute power level limit at the start frequency for the selected inner offset, ranging from -200 to +50 dBm.

The fail condition for each inner offset channel is set remotely by  
`[ :SENSe]:SEMAsk:OFFSet[n]:INNER:LIST:TEST`.

You can turn off (not use) specific inner offset channels remotely with  
`[ :SENSe]:SEMAsk:OFFSet[n]:INNER:LIST:STATE`.

The query returns values currently set to the absolute power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNER:LIST:START:ABSolute &lt;real&gt;, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNER:LIST:START:ABSolute?</code>								
Example	<code>:SEM:OFFS2:INN:LIST:STAR:ABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS2:INN:LIST:STAR:ABS?</code>								
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS								
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm  -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm</td> </tr> <tr> <td>5G NR</td> <td>-5.5 dBm, -12.5 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm</td> </tr> <tr> <td>LTEAFDD, LTEATDD</td> <td>-5.5 dBm, -12.5 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm</td> </tr> </tbody> </table>	Mode	Values	MSR	-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm  -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm	5G NR	-5.5 dBm, -12.5 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm	LTEAFDD, LTEATDD	-5.5 dBm, -12.5 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm
Mode	Values								
MSR	-12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm  -12.5 dBm, -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm, -15.0 dBm								
5G NR	-5.5 dBm, -12.5 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm								
LTEAFDD, LTEATDD	-5.5 dBm, -12.5 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm								
State Saved	Saved in instrument state								
Min/Max	-200 dBm/50 dBm								

## Abs Stop

Sets the absolute power level limit at the stop frequency for the selected inner offset, ranging from -200 to +50 dBm. You can also toggle this function between **Couple** (**COUPle** = **ON**) and **Manual** (**COUPle** = **OFF**). If set to **Couple**, the Abs Stop power level limit is coupled to Abs Start to result in a flat limit line. If set to **Man**, Abs Start and Abs Stop take different values to result in a sloped limit line.

The query returns values currently set to the inner offset stop absolute power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<pre>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute &lt;real&gt;, ... [ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute? [ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute:COUPle ON   OFF   1   0, ... [ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:ABSolute:COUPle?</pre>								
Example	<pre>:SEM:OFFS:INN:LIST:STOP:ABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, - 11.50 dBm, -11.50 dBm :SEM:OFFS1:INN:LIST:STOP:ABS? :SEM:OFFS:INN:LIST:STOP:ABS:COUP ON, OFF, ON, ON, ON, ON :SEM:OFFS:INN:LIST:STOP:ABS:COUP?</pre>								
Notes	<p>Comma-separated list of values          OFFSet 1 is for BTS, 2 for MS. Default is BTS</p>								
Couplings	Coupled to Abs Start if <b>Auto</b> is selected, that is, the Stop value is equal to the Start value								
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Values</th> </tr> </thead> <tbody> <tr> <td>MSR</td> <td>-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm</td> </tr> <tr> <td>5G NR</td> <td>-12.5 dBm, -12.5 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm</td> </tr> <tr> <td>LTEAFDD, LTEATDD</td> <td>-12.5 dBm, -12.5 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm</td> </tr> </tbody> </table>	Mode	Values	MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm	5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm	LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm
Mode	Values								
MSR	-12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm -12.5 dBm, -24.5 dBm, -11.5 dBm, -15.0 dBm								
5G NR	-12.5 dBm, -12.5 dBm, -15.0 dBm -22.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm								
LTEAFDD, LTEATDD	-12.5 dBm, -12.5 dBm, -15.0 dBm -13.5 dBm, -8.5 dBm, -11.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm, -23.5 dBm								

Mode	Values
MSR	ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF   ON, OFF, OFF, OFF, ON, OFF, OFF, OFF, OFF, OFF, OFF, OFF
LTEAFDD, LTEATDD, 5G NR	OFF, ON, ON   ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON, ON
State Saved	Saved in instrument state Saved in instrument state
Range	Auto Man
Min/Max	-200 dBm/50 dBm

## Rel Start

Sets a relative power level limit at the start frequency for the selected inner offset, ranging from -200 to +50 dBc.

The fail condition is set remotely by `[ :SENSe ]:SEMAsk:OFFSet [n]:INNeR:LIST:TEST` for each inner offset channel test.

You can turn off (not use) specific inner offset channels remotely with `[ :SENSe ]:SEMAsk:OFFSet [n]:INNeR:LIST:STAtE`.

The query returns values currently set to the relative power test limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[ :SENSe ]:SEMAsk:OFFSet [1]   2:INNeR:LIST:STARt:RCARrier &lt;rel_ampl&gt;, ...</code> <code>[ :SENSe ]:SEMAsk:OFFSet [1]   2:INNeR:LIST:STARt:RCARrier?</code>
Example	<code>:SEM:OFFS:INN:LIST:STAR:RCAR -30, -30, -30, -30, -30, -30</code> <code>:SEM:OFFS:INN:LIST:STAR:RCAR?</code>
Notes	Comma-separated list of values OFFSet 1 is for BTS, 2 for MS. Default is BTS
Preset	0 dB, 0 dB   0 dB, 0 dB
State Saved	Saved in instrument state
Min/Max	-200 dB/50 dB

## Rel Stop

Sets a relative power level limit at the stop frequency for the selected inner offset, ranging from -200 to +50 dBc.

The fail condition is set remotely by `[ :SENSe]:SEMAsk:OFFSet [n]:INNeR:LIST:TEST` for each inner offset channel.

You can turn off (not use) specific inner offset channels remotely with `[ :SENSe]:SEMAsk:OFFSet[n]:INNeR:LIST:STATe`.

The query returns values currently set to the inner offset stop relative power limits.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<pre>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:RCARrier &lt;rel_ampl&gt;, ... [ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:RCARrier? [ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:RCARrier:COUple ON   OFF   1   0, ... [ :SENSe]:SEMAsk:OFFSet[1] 2:INNeR:LIST:STOP:RCARrier:COUple?</pre>
Example	<pre>:SEM:OFFS:INN:LIST:STOP:RCAR -30, -30, -30, -30, -30, -30 :SEM:OFFS:INN:LIST:STOP:RCAR? :SEM:OFFS:INN:LIST:STOP:RCAR:COUP ON, ON, ON, ON, ON, ON :SEM:OFFS:INN:LIST:STOP:RCAR:COUP?</pre>
Notes	<p>Comma-separated list of values          OFFSet 1 is for BTS, 2 for MS. Default is BTS</p>
Couplings	Coupled to Rel Start if "Auto" is selected, that is, Start is made the same as Stop
Preset	<pre>0 dB, 0 dB   0 dB, 0 dB ON, ON   ON, ON</pre>
State Saved	<p>Saved in instrument state          Saved in instrument state</p>
Range	Auto Man
Min/Max	-200 dB/50 dB

## Fail Mask

Selects one of the logics for fail conditions between the measurement results and the test limits:

- **ABSolute** and **RELative** both check the results against the respective limit
- **OR** checks against both limits, failing if either of the limits is broken
- **AND** only displays a fail if both of the limits are broken

The absolute or relative power limit value for each inner offset channel can be set remotely with `[ :SENSe]:SEMAsk:OFFSet[n]:INNER:LIST:ABSolute` or `[ :SENSe]:SEMAsk:OFFSet[n]:INNER:LIST:RCARrier`.

You can turn off (not use) specific inner offset channels remotely with `[ :SENSe]:SEMAsk:OFFSet[n]:INNER:LIST:STATe`.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query for this parameter always returns 12 values.

Remote Command	<code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNER:LIST:TEST ABSolute   AND   OR   RELative, ...</code> <code>[ :SENSe]:SEMAsk:OFFSet[1] 2:INNER:LIST:TEST?</code>
Example	<code>:SEM:OFFS:INN:LIST:TEST ABS, ABS, ABS, ABS, ABS, ABS</code> <code>:SEM:OFFS:INN:LIST:TEST?</code>
Notes	Comma-separated list of values
Preset	<code>ABS, ABS, ABS</code>
State Saved	Saved in instrument state
Range	Absolute   Relative   Abs AND Rel   Abs OR Rel

## Show Abs2 Limit

Same as ["Show Abs2 Limit" on page 912](#) under Limits.

## Abs2 Start

Sets the 2nd absolute power level limit at the start frequency for the selected inner offset, ranging from -200 to +50 dBm.

The fail condition for each inner offset channel is set remotely using:

`[ :SENSe]:SEMAsk:OFFSet[n]:INNER:LIST:TEST:SABSolute`

You can turn off (not use) specific inner offset channels remotely using:

`[ :SENSe]:SEMAsk:OFFSet[n]:INNER:LIST:STATe`

The query returns values currently set to the 2nd absolute power test limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query always returns 12 values.

Remote Command	<code>[ :SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:START:SABSolute &lt;real&gt;, ...</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:START:SABSolute?</code>
Example	<code>:SEM:OFFS:INN:LIST:STAR:SABS -12.50 dBm, -12.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS:INN:LIST:STAR:SABS?</code>
Notes	Comma-separated list of values <b>OFFSet</b> 1 is for BTS, 2 for MS. Default is BTS
Preset	0 dBm, 0 dBm 0 dBm, 0 dBm
State Saved	Saved in instrument state
Min	-200 dBm
Max	50 dBm

## Abs2 Stop

Sets the 2nd absolute power level limit at the stop frequency for the selected inner offset, ranging from -200 to +50 dBm. You can also toggle this function between **Couple** and **Manual**. If set to **Couple = ON**, the **Abs2 Stop** power level limit is coupled to "**Abs2 Start**" on page 912, resulting in a flat limit line. If set to **Man (Couple = OFF)**, **Abs2 Start** and **Abs2 Stop** take different values, resulting in a sloped limit line.

The query returns values currently set to the offset stop 2nd absolute power limits.

When sending the command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values remain unchanged. The query always returns 12 values.

Remote Command	<code>[ :SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STOP:SABSolute &lt;real&gt;, ...</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STOP:SABSolute?</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STOP:SABSolute:COUPle ON   OFF   1   0, ...</code> <code>[ :SENSe]:SEMask:OFFSet[1] 2:INNER:LIST:STOP:SABSolute:COUPle?</code>
Example	<code>:SEM:OFFS:INN:LIST:STOP:SABS -12.50 dBm, -24.50 dBm, -24.50 dBm, -11.50 dBm, -11.50 dBm, -11.50 dBm</code> <code>:SEM:OFFS:INN:LIST:STOP:SABS?</code> <code>:SEM:OFFS:INN:LIST:STOP:SABS:COUP ON, ON, ON, ON, ON, ON</code> <code>:SEM:OFFS:INN:LIST:STOP:SABS:COUP?</code>
Notes	Comma-separated list of values <b>OFFSet</b> 1 is for BTS, 2 for MS. Default is BTS



## Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

### Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 916 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL   NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** does not affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

## Measurement-Specific Details

### TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

### Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

## Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	<code>:CONFigure:SEMAsk</code>
Example	<code>:CONF:SEM</code>
Couplings	Restores all measurement parameters to their default values

### 3.5.23.2 Carrier

Used to set up parameters that define how the reference channel is measured.

## Integ BW

Specifies the integration bandwidth used to calculate the power in the reference channel.

Remote Command	<code>[ :SENSe]:SEMAsk:BANDwidth[1] 2:INTEgration &lt;bandwidth&gt;</code> <code>[ :SENSe]:SEMAsk:BANDwidth[1] 2:INTEgration?</code>								
Example	<code>:SEM:BAND:INT 10 MHz</code> <code>:SEM:BAND:INT?</code>								
Notes	10% . 100% of Channel Span Parameter Value Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS Note that Bandwidth sub op code 2 is supported only in non-SA Modes. In SA Mode, Bandwidth sub op code 1 is used for both BTS and MS If the ref channel is outside the frequency range, the result spectrum will be invalid								
Dependencies	Not shown in MSR, LTE-Advanced FDD/TDD and 5G NR Modes In order to maintain backwards compatible with legacy LTE FDD/TDD Modes, the remote command is supported in LTE & LTE-A converged application								
Couplings	Cannot be higher than the channel <b>Span</b> . If lower than 1/10 of channel <b>Span</b> , then the channel <b>Span</b> is reduced to be 10 times the Integ BW								
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>3.84 MHz</td> </tr> <tr> <td>WCDMA</td> <td>3.84 MHz 3.84 MHz</td> </tr> <tr> <td>WLAN</td> <td>See the table of "<a href="#">WLAN Mode Presets</a>" on page 918 below</td> </tr> </tbody> </table>	Mode	Value	SA	3.84 MHz	WCDMA	3.84 MHz 3.84 MHz	WLAN	See the table of " <a href="#">WLAN Mode Presets</a> " on page 918 below
Mode	Value								
SA	3.84 MHz								
WCDMA	3.84 MHz 3.84 MHz								
WLAN	See the table of " <a href="#">WLAN Mode Presets</a> " on page 918 below								
State Saved	Saved in instrument state								
Min/Max	1 kHz/Depends on instrument maximum frequency								

---

Backwards `[ :SENSe]:SEMAsk:BWIDth[1]|2:INTEgration`  
Compatibility SCPI

## WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	18 MHz
802.11n/ac (20 MHz)	
802.11b/g (DSSS/CCK/PBCC)	22 MHz
802.11n (40MHz)/ 802.11ac (40 MHz)	38 MHz
802.11ac (80 MHz)	78 MHz
802.11ac (160 MHz)	158 MHz
802.11ac (80 MHz + 80 MHz)	78 MHz
802.11ah (1 MHz)	0.9 MHz
802.11ah (2 MHz)	1.8 MHz
802.11ah (4 MHz)	3.8 MHz
802.11ah (8 MHz)	7.8 MHz
802.11ah (16 MHz)	15.8 MHz
802.11j/p (20 MHz)	18 MHz
802.11j/p (10 MHz)	9 MHz
802.11p (5 MHz)	4.5 MHz
802.11ax/be (20 MHz)	19.5 MHz
802.11ax/be (40 MHz)	39.0 MHz
802.11ax/be (80 MHz)	79.0 MHz
802.11ax/be (160 MHz)	159.0 MHz
802.11be (320 MHz)	319.0 MHz
802.11ax (80 MHz + 80 MHz)	79.0 MHz
802.11af (6 MHz)	5.7 MHz
802.11af (7 MHz)	6.65 MHz
802.11af (8 MHz)	7.6 MHz

## Span

Specifies the span used to calculate the power in the reference channel.

---

Remote Command `[ :SENSe]:SEMAsk:FREQuency[1]|2:SPAN <freq>`  
`[ :SENSe]:SEMAsk:FREQuency[1]|2:SPAN?`  
`[ :SENSe]:SEMAsk:FREQuency[1]|2:SPAN:AUTO ON | OFF | 1 | 0`

3 LTE & LTE-A TDD Mode  
 3.5 SEM Measurement

	<code>[ :SENSe ] :SEMAsk :FREQuency [ 1 ]   2 :SPAN :AUTO ?</code>														
Example	<code>:SEM:FREQ:SPAN 3MHz</code> <code>:SEM:FREQ:SPAN?</code> <code>:SEM:FREQ:SPAN:AUTO OFF</code> <code>:SEM:FREQ:SPAN:AUTO?</code>														
Notes	<p>Frequency sub op code, 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Frequency sub op code 2 is supported only in non-SA Modes. In SA Mode, Frequency sub op code 1 is used for both BTS and MS</p> <p>If the ref channel is outside the frequency range, the result spectrum will be invalid</p>														
Dependencies	<p>Not shown in MSR Mode</p> <p>In order to maintain backwards compatible with legacy LTE FDD/TDD Modes, the channel span key is supported in LTE &amp; LTE-A converged application. The <b>Auto/Man</b> toggle is added to this key. This key is enabled and can be changed only in single carrier. The span state is always <b>Auto</b> in Multi-carriers</p> <p>Span <b>Auto/Man</b> state is only available in LTE/LTE-Advanced FDD/TDD and 5G NR Modes</p>														
Couplings	<p>Range 1 kHz to 50 MHz (although restricted by Chan Integ BW). If you set the channel <b>Span</b> lower than channel <b>Integ BW</b>, they will both track each other. As you increase the channel <b>Span</b>, <b>Integ BW</b> also increases if it is less than 1/10 of the channel <b>Span</b></p> <p>For WLAN 802.11ac (80 + 80 MHz), the channel span is coupled with the difference between the center frequencies of the two carriers. When the difference is either less than 80 MHz, or greater than 565 MHz, a "setting conflict" error message is displayed</p> <p>Chan Span = Carrier Spacing + Chan IntegBW</p> <p>When the state of Span is <b>Auto</b>, the span value is automatically determined by multi-carrier configuration. Otherwise, the span value depends on user input</p> <p>When the span value is set manually, the state of span is automatically changes to <b>Man</b></p> <p>This key is enabled and can be changed only in single carrier. The span state is always <b>Auto</b> in Multi-carriers</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>5.0 MHz</td> </tr> <tr> <td>WCDMA</td> <td>5.0 MHz 5.0 MHz</td> </tr> <tr> <td>LTEAFDD, LTEATDD</td> <td>5 MHz</td> </tr> <tr> <td>SGNR</td> <td>Automatically calculated</td> </tr> <tr> <td>WLAN</td> <td>See the table of "<a href="#">WLAN Mode Presets</a>" on page 920 below</td> </tr> <tr> <td>ON</td> <td></td> </tr> </tbody> </table>	Mode	Value	SA	5.0 MHz	WCDMA	5.0 MHz 5.0 MHz	LTEAFDD, LTEATDD	5 MHz	SGNR	Automatically calculated	WLAN	See the table of " <a href="#">WLAN Mode Presets</a> " on page 920 below	ON	
Mode	Value														
SA	5.0 MHz														
WCDMA	5.0 MHz 5.0 MHz														
LTEAFDD, LTEATDD	5 MHz														
SGNR	Automatically calculated														
WLAN	See the table of " <a href="#">WLAN Mode Presets</a> " on page 920 below														
ON															
State Saved	<p>Saved in instrument state</p> <p>Yes</p>														
Range	Auto Man														
Min/Max	1 kHz/Depends on instrument maximum frequency														

## WLAN Mode Presets

Radio Std	Presets
802.11a/g (OFDM/DSSS-OFDM)	18 MHz
802.11n/ac (20 MHz)	
802.11b/g (DSSS/CCK/PBCC)	22 MHz
802.11n/ac (40 MHz)	38 MHz
802.11ac (80 MHz)	78 MHz
802.11ac (160 MHz)	158 MHz
802.11ac (80 MHz + 80 MHz)	320 MHz
802.11ah (1 MHz)	0.9 MHz
802.11ah (2 MHz)	1.8 MHz
802.11ah (4 MHz)	3.8 MHz
802.11ah (8 MHz)	7.8 MHz
802.11ah (16 MHz)	15.8 MHz
802.11j/p (20 MHz)	18 MHz
802.11j/p (10 MHz)	9 MHz
802.11p (5 MHz)	4.5 MHz
802.11ax/be (20 MHz)	19.5 MHz
802.11ax/be (40 MHz)	39.0 MHz
802.11ax/be (80 MHz)	79.0 MHz
802.11ax/be (160 MHz)	159.0 MHz
802.11be (320 MHz)	319.0 MHz
802.11ax (80 MHz + 80 MHz)	320.0 MHz
802.11af (6 MHz)	5.7 MHz
802.11af (7 MHz)	6.65 MHz
802.11af (8 MHz)	7.6 MHz

## Sweep Time

Used to calculate the power in the reference channel. **Sweep Time** can be set manually or put into **Auto** mode.

For instruments with non-sweeping acquisitions, such as VXT, the time value is the acquisition time for an individual FFT segment, not the cumulated time for all FFT segments in the channel.

NOTE

On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate, which is the turnaround time to complete the measurement of the entire carrier span, which is the sum of signal acquisition time, FFT time, and other overhead time. If you need to specify the same **Sweep Time** as you would for sweeping hardware, send `[ :SENSe ] :SEMAsk:SWEp [1] | 2:TIME <time>`. The measurement emulates the **Sweep Time** effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using "**Minimum Acquisition Time**" on page 922, which provides better control.

Remote Command	<pre>[ :SENSe ] :SEMAsk:SWEp [1]   2:TIME &lt;time&gt; [ :SENSe ] :SEMAsk:SWEp [1]   2:TIME? [ :SENSe ] :SEMAsk:SWEp [1]   2:TIME:AUTO OFF   0   ON   1 [ :SENSe ] :SEMAsk:SWEp [1]   2:TIME:AUTO?</pre>						
Example	<pre>:SEM:SWE:TIME 9ms :SEM:SWE:TIME? :SEM:SWE:TIME:AUTO OFF :SEM:SWE:TIME:AUTO?</pre>						
Notes	<p>Sub op code 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Sweep sub op code 2 is supported only in non-SA Modes. In SA Mode, Sweep sub op code 1 is used for both BTS and MS</p>						
Dependencies	<p>On non-sweeping hardware, this control is grayed out and the <b>Auto/Man</b> checkbox is invisible. The read-only value shows the estimated sweep time</p> <p>In those instruments, "<b>Minimum Acquisition Time</b>" on page 922 is available</p>						
Couplings	<p>When the time is set manually, <b>Auto</b> is set to <b>OFF</b></p> <p>If state is <b>Auto</b>, coupled with <b>Channel Detector</b> selection, <b>Channel Resolution BW</b>, <b>Channel Video BW</b></p> <p>When set to <b>Auto</b>, the Time is automatically calculated</p>						
Preset	<p>Automatically calculated</p> <p><b>ON</b></p>						
State Saved	<p>Saved in instrument state</p> <p>Yes</p>						
Range	<p><b>OFF   ON</b></p>						
Min	<p>Sweeping hardware</p> <p>Depends on Channel "<b>Sweep Type</b>" on page 923:</p> <table border="1"> <thead> <tr> <th>Sweep Type</th> <th>Min</th> </tr> </thead> <tbody> <tr> <td>Swept</td> <td>1 ms</td> </tr> <tr> <td>FFT</td> <td>100 ns</td> </tr> </tbody> </table> <p>Non-sweeping hardware: N/A</p>	Sweep Type	Min	Swept	1 ms	FFT	100 ns
Sweep Type	Min						
Swept	1 ms						
FFT	100 ns						

Max	Sweeping hardware: 4000 s Non-sweeping hardware: N/A
Backwards	<code>[ :SENSe]:SEMAsk:SWEEp[1] 2[:TIME]</code>
Compatibility SCPI	<code>[ :SENSe]:SEMAsk:SWEEp[1] 2[:TIME]:AUTO</code>

## Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides **Span** into multiple chunks if needed. Therefore, the total signal acquisition time for the entire carrier span is:

$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$

When in **Auto**, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this **Auto** value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<code>[ :SENSe]:SEMAsk:SWEEp:ACQuisition:TIME &lt;time&gt;</code> <code>[ :SENSe]:SEMAsk:SWEEp:ACQuisition:TIME?</code> <code>[ :SENSe]:SEMAsk:SWEEp:ACQuisition:TIME:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:SEMAsk:SWEEp:ACQuisition:TIME:AUTO?</code>
Example	<code>:SEM:SWE:ACQ:TIME 500 ms</code> <code>:SEM:SWE:ACQ:TIME?</code> <code>:SEM:SWE:ACQ:TIME:AUTO OFF</code> <code>:SEM:SWE:ACQ:TIME:AUTO?</code>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to <b>Span</b> , <b>RBW</b> , and <b>VBW</b> when in the <b>Auto</b> state If you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b>
Preset	Automatically calculated <b>ON</b>
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks

### Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

The value returned is the estimated turnaround time of each acquisition, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire carrier span of each measurement cycle.

Remote Command	<code>[ :SENSe ] :SEMAsk :SWEep :ETIME?</code>
Example	<code>:SEM:SWE:ETIM?</code>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

### Sweep Type

Sets the **Sweep Type** used to calculate the power in the reference channel. **Sweep Type** can be set manually or put into **Auto** mode.

How to define Channel Sweep Time and Channel Sweep Type:

Channel Sweep Type Mode	Behavior
Auto	Channel <b>Sweep Type</b> is automatically selected depending on Sweep Type Rules Channel <b>Sweep Time</b> is automatically calculated depending on the selected sweep type
Man	Channel <b>Sweep Type</b> is user-selected
–	

Remote Command	<code>[ :SENSe ] :SEMAsk :SWEep [ 1 ]   2 :TYPE SWEep   FFT</code> <code>[ :SENSe ] :SEMAsk :SWEep [ 1 ]   2 :TYPE?</code> <code>[ :SENSe ] :SEMAsk :SWEep [ 1 ]   2 :TYPE:AUTO OFF   0   ON   1</code> <code>[ :SENSe ] :SEMAsk :SWEep [ 1 ]   2 :TYPE:AUTO?</code>
Example	<code>:SEM:SWE:TYPE FFT</code> <code>:SEM:SWE:TYPE?</code> <code>:SEM:SWE:TYPE:AUTO OFF</code> <code>:SEM:SWE:TYPE:AUTO?</code>

Notes  
 Sub op code, 1 is for BTS, 2 for MS. Default is BTS  
 Note that Sweep sub op code 2 is supported only in non-SA Modes. In SA Mode, Sweep sub op code 1 is used for both BTS and MS

Dependencies	Grayed-out in VXT models M9410A/11A
Couplings	If <b>Sweep Type</b> is set manually, <b>Sweep Type</b> mode is set to <b>MANua1</b> When <b>Channel Sweep Type</b> mode is <b>Auto</b> , <b>Sweep Type</b> is automatically selected according to <b>Sweep Type Rules</b>
Preset	Automatically calculated <b>ON</b>
State Saved	Saved in instrument state Yes
Range	<b>OFF   ON</b>

## Res BW

Sets the resolution bandwidth used to calculate the power in the reference channel. The Channel Resolution BW can be set manually or put into auto mode.

MSR Auto RBW:

In the MSR Mode, resolution bandwidth is predefined for each radio format. When carriers are configured with multiple radio formats, the narrowest RBW is selected.

Radio Format	RBW (kHz)	
LTE	1.4 MHz	13 kHz
	3 MHz	27 kHz
	5 MHz	47 kHz
	10 MHz	91 kHz
	15 MHz	150 kHz
	20 MHz	180 kHz
	200 kHz (NB-IoT, only available in FDD)	10 kHz
W-CDMA	75 kHz	

5G NR Auto RBW:

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Radio Format		RBW
5G NR	5 MHz	47 kHz
	10 MHz	91 kHz
	15 MHz	150 kHz
	20 MHz	180 kHz
	25 MHz	240 kHz
	30 MHz	270 kHz
	35 MHz	330 kHz
	40 MHz	390 kHz
	45 MHz	430 kHz
	50 MHz	470 kHz
	60 MHz	560 kHz
	70 MHz	680 kHz
	80 MHz	750 kHz
	90 MHz	820 kHz
	100 MHz	910 kHz
	200MHz	1.8 MHz
	400 MHz	3 MHz
800 MHz	3 MHz	
1600 MHz	3 MHz	
2000 MHz	3 MHz	

In the LTE-Advanced (both FDD and TDD) and 5G NR modes, the resolution bandwidth is predefined based on the corresponding bandwidth of the single carrier, which is listed above. When **Res BW** mode is **Auto**, the narrowest RBW is selected.

Remote Command	<pre>[ :SENSe]:SEMask:BANDwidth[1] 2[:RESolution] &lt;bandwidth&gt; [:SENSe]:SEMask:BANDwidth[1] 2[:RESolution]? [:SENSe]:SEMask:BANDwidth[1] 2[:RESolution]:AUTO OFF   ON   1   0 [:SENSe]:SEMask:BANDwidth[1] 2[:RESolution]:AUTO?</pre>
Example	<pre>:SEM:BAND 100 kHz :SEM:BAND? :SEM:BAND:AUTO ON :SEM:BAND:AUTO?</pre>
Notes	<p>Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS</p> <p>Note that Bandwidth sub op code 2 is supported only in non-SA modes. In SA Mode, Bandwidth sub op code 1 is used for both BTS and MS</p>
Couplings	If <b>Res BW</b> is set manually, <b>Channel Resolution BW</b> mode is set to <b>MANual</b>

	Coupled with <b>Channel Detector</b> selection, <b>Channel Sweep Time</b> and <b>Channel Video BW</b> When set to <b>Auto</b> , the resolution bandwidth is automatically calculated	
Preset	<b>Mode</b>	<b>Values</b>
	SA	100 kHz
	WCDMA	75 kHz
	LTE, LTETDD, MSR, LTEAFDD, LTEATDD	Auto (47 kHz)
	5G NR	Auto
	WLAN	100 kHz
	<b>ON</b>	
State Saved	Saved in instrument state Saved in instrument state	
Range	Auto   Man	
Min	1 Hz	
Max	When Option FS1 or FS2 is installed: 10 MHz Otherwise: 8 MHz	
Backwards Compatibility SCPI	[:SENSe]:SEMAsk:BWIDth[1] 2[:RESolution] [:SENSe]:SEMAsk:BWIDth[1] 2[:RESolution]:AUTO	

## Video BW

Sets the video bandwidth used to calculate the power in the reference channel. The **Channel Video BW** can be set manually or put into **Auto** mode.

Remote Command	[:SENSe]:SEMAsk:BA <b>ND</b> width[1] 2:VIDeo <bandwidth> [:SENSe]:SEMAsk:BA <b>ND</b> width[1] 2:VIDeo? [:SENSe]:SEMAsk:BA <b>ND</b> width[1] 2:VIDeo:AUTO OFF   ON   1   0 [:SENSe]:SEMAsk:BA <b>ND</b> width[1] 2:VIDeo:AUTO?
Example	:SEM:BA <b>ND</b> :VID 100 kHz :SEM:BA <b>ND</b> :VID? :SEM:BA <b>ND</b> :VID:AUTO ON :SEM:BA <b>ND</b> :VID:AUTO?
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS Note that Bandwidth sub op code 2 is supported only in non-SA Modes. In SA Mode, Bandwidth sub op code 1 is used for both BTS and MS
Couplings	If <b>Video BW</b> is set manually, <b>Channel Video BW</b> mode is set to <b>MANua1</b> Coupled with <b>Channel Detector</b> selection, <b>Channel Sweep Time</b> and <b>Channel Resolution BW</b> When set to <b>Auto</b> , the video bandwidth is automatically calculated

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Preset	Mode	Values
	SA	100 kHz
	WCDMA	75 kHz
	LTE, LTEAFDD, LTETDD, LTEATDD, 5G NR, WLAN, MSR	Auto
	<b>ON</b>	
State Saved	Saved in instrument state	
	Yes	
Range	Auto   Man	
Min/Max	1 Hz/50 MHz	
Backwards Compatibility SCPI	[:SENSe]:SEMAsk:BWIDth[1] 2:VIDeo [:SENSe]:SEMAsk:BWIDth[1] 2:VIDeo:AUTO	

## VBW/RBW

Sets the Video BW/Resolution BW ratio to calculate the Channel Resolution BW and Channel Video BW. The VBW/RBW Ratio can be set manually or put into **Auto** mode.

Remote Command	[:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:RATio <real> [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:RATio [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:RATio:AUTO OFF   ON   1   0 [:SENSe]:SEMAsk:BANDwidth[1] 2:VIDeo:RATio:AUTO?
Example	:SEM:BAND:VID:RAT 0.1 :SEM:BAND:VID:RAT? :SEM:BAND:VID:RAT:AUTO ON :SEM:BAND:VID:RAT:AUTO?
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS Note that Bandwidth sub op code 2 is supported only in non-SA Modes. In SA Mode, Bandwidth sub op code 1 is used for both BTS and MS
Couplings	When <b>Video BW/Res BW</b> is set manually, <b>Channel VBW/RBW Ratio</b> mode is set to <b>MANual</b> When set to <b>Auto</b> , the <b>VBW/RBW Ratio</b> is automatically calculated
Preset	SA, WCDMA: 1.0 LTE, LTETDD, LTEAFDD, LTEATDD, 5G NR, WLAN, MSR: Auto <b>ON</b>
State Saved	Saved in instrument state Saved in instrument state
Range	Auto   Man

Min/Max	0.00001/3000000
Backwards Compatibility SCPI	[ :SENSe ] :SEMAsk :BWIDth [ 1 ]   2 :VIDeo :RATio [ :SENSe ] :SEMAsk :BWIDth [ 1 ]   2 :VIDeo :RATio :AUTO

## Channel Detector

Accesses a menu of functions that enable you to control the detectors for reference channel. The following choices are available:

<b>AUTO</b>	The detector selected depends on marker functions, trace functions, average type, and the trace averaging function
<b>NORMal</b>	The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection
<b>AVERage</b>	The detector determines the average of the signal within the sweep points. The averaging method depends upon the Average Type selection (voltage, power or log scales)
<b>POSitive Peak</b>	The detector determines the maximum of the signal within the sweep points
<b>SAMPle</b>	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
<b>NEGative Peak</b>	The detector determines the minimum of the signal within the sweep points

Remote Command	[ :SENSe ] :SEMAsk :DETector :CARRier [ :FUNCTION ] AVERage   NEGative   NORMal   POSitive   SAMPle [ :SENSe ] :SEMAsk :DETector :CARRier [ :FUNCTION ] ? [ :SENSe ] :SEMAsk :DETector :CARRier :AUTO ON   OFF   1   0 [ :SENSe ] :SEMAsk :DETector :CARRier :AUTO ?
Example	:SEM:DET:CARR NEG :SEM:DET:CARR? :SEM:DET:CARR:AUTO OFF :SEM:DET:CARR:AUTO?
Notes	When you manually select a detector (instead of selecting <b>Auto</b> ), that detector is used regardless of other instrument settings Note: This detector setting affects the reference channel. There is no per-trace detector
Couplings	See Couplings in <a href="#">"Trace Type" on page 2137</a>
Preset	AVERage ON
State Saved	Saved in instrument state
Range	AVERage   NEGative   NORMal   POSitive   SAMPle

### Reference Carrier Average Type (Remote Command Only)

Select trace average type for the reference carrier.

Remote Command	<code>[ :SENSe]:SEMAsk:AVERAge:CARRier:TYPE RMS   LOG</code> <code>[ :SENSe]:SEMAsk:AVERAge:CARRier:TYPE?</code>
Example	<code>:SEM:AVER:CARR:TYPE LOG</code> <code>:SEM:AVER:CARR:TYPE?</code>
Preset	<code>RMS</code>
State Saved	Saved in instrument state

### Offset/Limits Config Table

This function is the same as "Offset/Limits Config Table" on page 852 under the "Settings" on page 848 tab.

Sets the power reference in the carrier that will be used to compute the relative values for the offsets.

#### 3.5.23.3 Reference

Lets you set the Reference Power and parameters related to the Reference Power for SEM measurements.

### Measurement Type

Accesses a menu that enables you to select one of the following measurement reference types:

<b>Total Pwr Ref</b>	<code>TPRef</code>	Sets the reference to the total carrier power and the measured data is shown in dBc and dBm
<b>PSD Ref</b>	<code>PSDRef</code>	Sets the reference to the mean power spectral density of the carrier and the measured data is shown in dB and dBm/Hz
<b>Spectrum Peak Ref</b>	<code>SPRef</code>	Sets the reference to the spectrum peak power of the carrier and the measured data is shown in dB and dBm

Remote Command	<code>[ :SENSe]:SEMAsk:TYPE PSDRef   TPRef   SPRef</code> <code>[ :SENSe]:SEMAsk:TYPE?</code>
Example	<code>:SEM:TYPE PSDR</code> <code>:SEM:TYPE?</code>
Preset	WLAN Mode: <code>SPRef</code>

	All other Modes: <a href="#">TPRef</a>
State Saved	Saved in instrument state
Range	Total Pwr Reference   PSD Reference   Spectrum Peak Reference

## Power Ref

Selects the power reference type:


Option	SCPI	Description
Left & Right Carriers	<a href="#">LRCarriers</a>	<p>Powers of leftmost and rightmost carriers with Measure Carrier On in a sub-block are the references of left and right sides respectively. Only the frequency ranges of leftmost and rightmost carriers are swept and measured. Other frequency ranges in the RFBW are not measured. Left and right carriers are determined based on the carrier center frequencies</p> <p>If Measure Carriers of all the carriers in a sub-block are off, the reference power in a sub-block and all the relative power results are <b>NaN</b>. Relative limits are not evaluated</p>
Max Power Carrier	<a href="#">MPCarrier</a>	<p>Maximum carrier power is the reference of measurement. All the configured carriers are measured</p> <p>If Measure Carriers of all the carriers are off, the reference power and all the relative power results are <b>NaN</b>. Relative limits are not evaluated</p>
Carrier Index	<a href="#">CINdex</a>	<p>Power of the specified carrier is the reference of measurement. Only the frequency range of the specified carrier is swept and measured, and other frequency ranges in the RFBW are not measured</p> <p>If Measure Carriers of this carrier index is off, the reference power and all the relative power results are <b>NaN</b>. Relative limits are not evaluated</p>
Manual	<a href="#">MANual</a>	<p>Power or PSD specified by the user is the reference of measurement. No carriers are measured and the manually specified value is used as reference</p>
Max Power Carrier in Sub-block	<a href="#">MPCSubblock</a>	<p>Maximum carrier power among the sub-block carriers with Measure Carrier On is the reference of measurement. All the configured carriers are measured</p> <p>If Measure Carriers of all the carriers in a sub-block are off, the reference power of the sub-block and all the relative power results referring to this sub-block are <b>NaN</b>, and these relative limits are not evaluated</p>
RF Bandwidth	<a href="#">RFBandwidth</a>	<p>Power or PSD of total of the RF bandwidth is the reference of measurement. Power not only in the carrier bands but also carrier gaps is integrated into the reference power. Measure Carrier On/Off does not affect the reference power frequency range because RF bandwidth is determined by the carrier configuration</p>
Aggregated Chan BW LTE-A and 5G NR Modes only	<a href="#">ACBandwidth</a>	<p>The assigned aggregated channel bandwidth power which is measured with a rectangular filter with measurement bandwidth specified as aggregated channel bandwidth based on the definition of each 3GPP standard. Calculated from the carrier configuration including SCS (Power Meas), the smallest SCS among the enabled SCSs of the selected component carrier. Measure Carrier On/Off affects the reference power frequency range</p>

3 LTE & LTE-A TDD Mode  
 3.5 SEM Measurement


Option	SCPI	Description								
Left & Right Sub-blocks 5G NR Mode only	LRSubblocks	If Measure Carriers of all the carriers are off, the reference power and all the relative power results are <b>NaN</b> and Relative limits are not evaluated								
		The reference depends on the <b>Number of Component Carriers (CC)</b> and Carrier Allocation as follows:								
		<table border="1"> <thead> <tr> <th>Number of CCs</th> <th>Reference</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The carrier power is the reference</td> </tr> <tr> <td>2 or more, <i>and</i> <b>Carrier Allocation</b> is Contiguous</td> <td>Aggregated Channel power is the reference</td> </tr> <tr> <td>2 or more, <i>and</i> <b>Carrier Allocation</b> is Non-Contiguous</td> <td>Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration</td> </tr> </tbody> </table>	Number of CCs	Reference	1	The carrier power is the reference	2 or more, <i>and</i> <b>Carrier Allocation</b> is Contiguous	Aggregated Channel power is the reference	2 or more, <i>and</i> <b>Carrier Allocation</b> is Non-Contiguous	Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration
		Number of CCs	Reference							
1	The carrier power is the reference									
2 or more, <i>and</i> <b>Carrier Allocation</b> is Contiguous	Aggregated Channel power is the reference									
2 or more, <i>and</i> <b>Carrier Allocation</b> is Non-Contiguous	Aggregated powers of left and right sub-blocks are the references. Left and right sub-blocks are determined by component carrier configuration									

The powers of carriers are not included in the reference power when their Measure Carriers are **Off**. When Measure Carriers of all the carriers in a sub-block are **Off**, the reference power and all the relative power results are **NaN**. Therefore, relative limits are not evaluated.


Meas Type = Total Power Ref

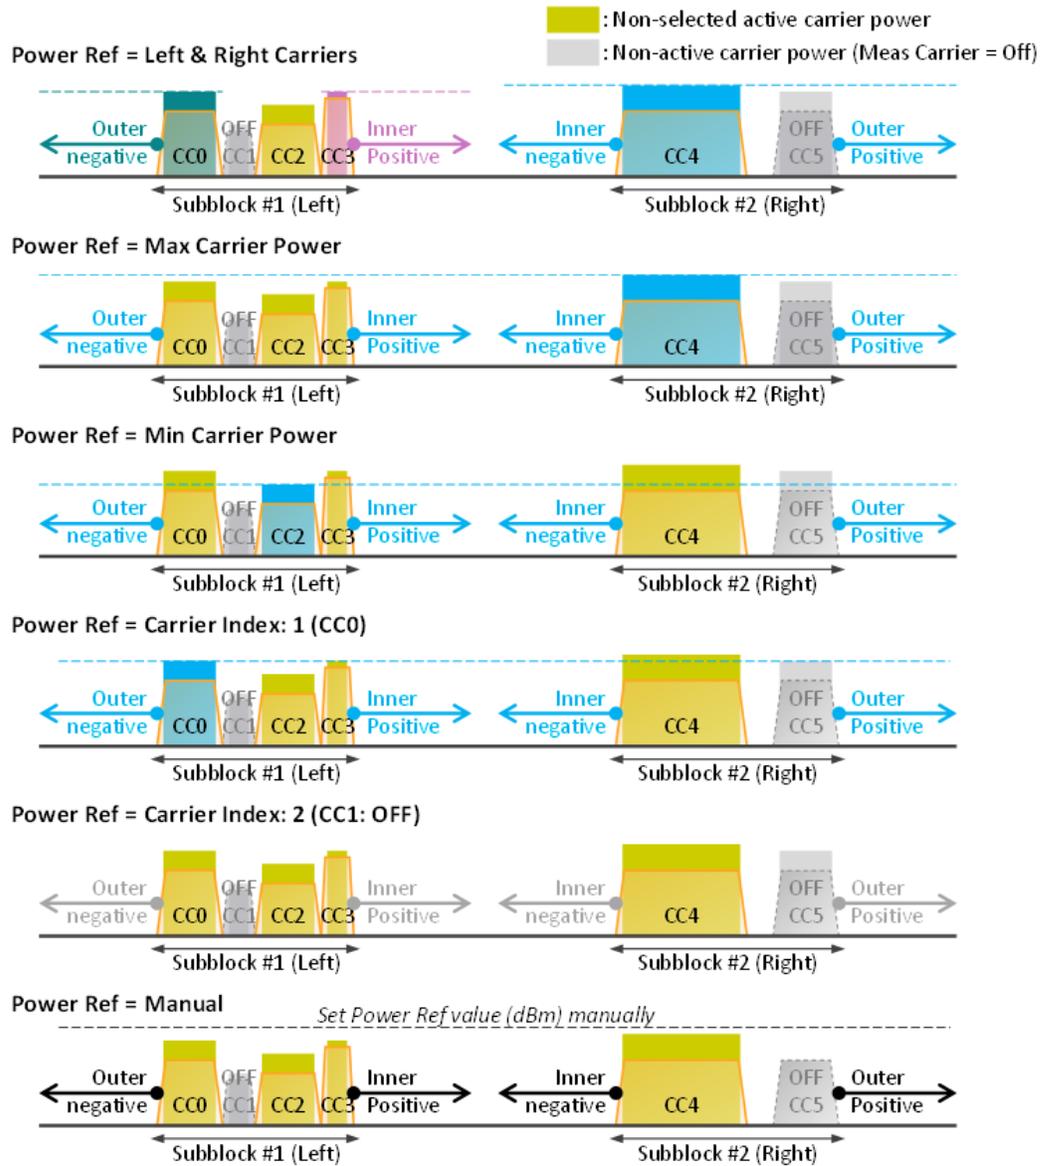


3 LTE & LTE-A TDD Mode  
 3.5 SEM Measurement

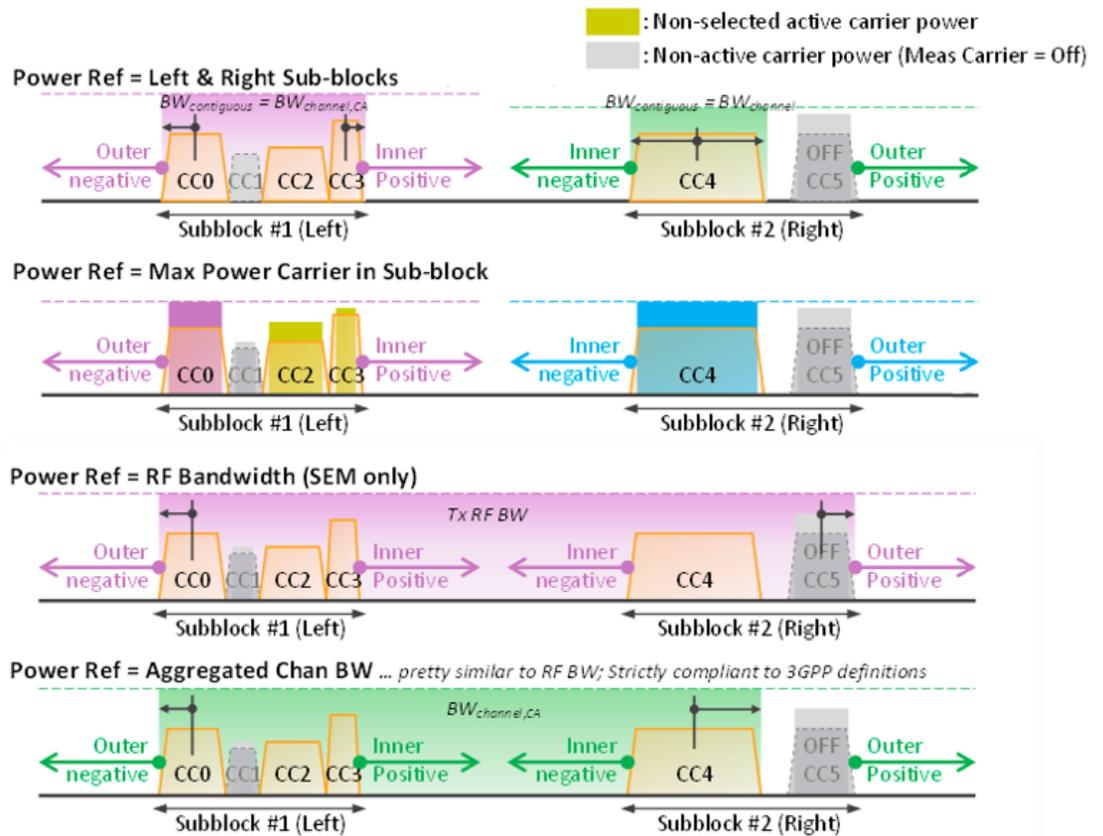

Meas Type = PSD Ref

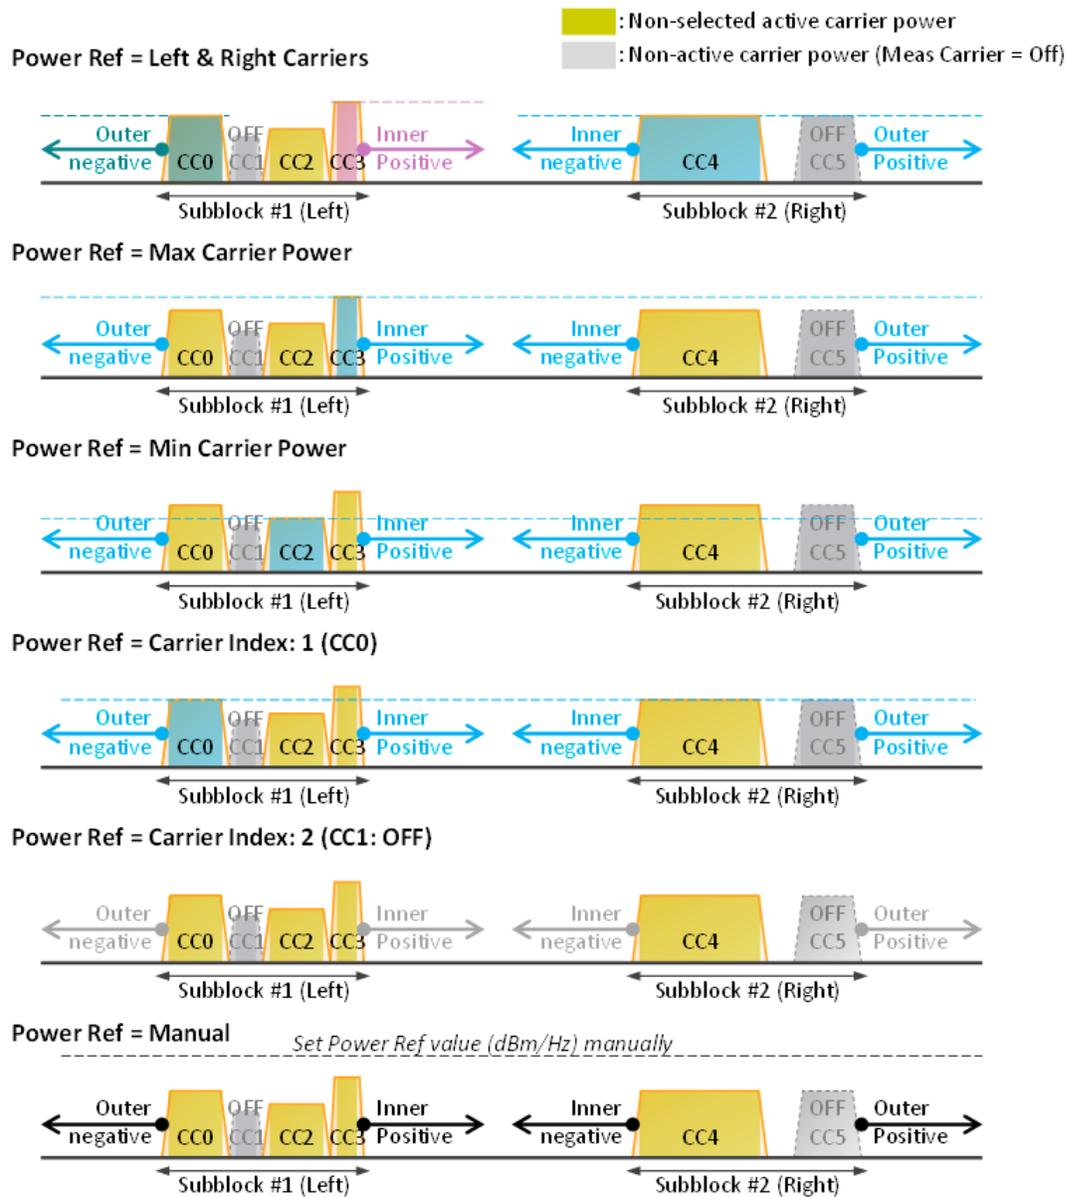

3 LTE & LTE-A TDD Mode  
 3.5 SEM Measurement

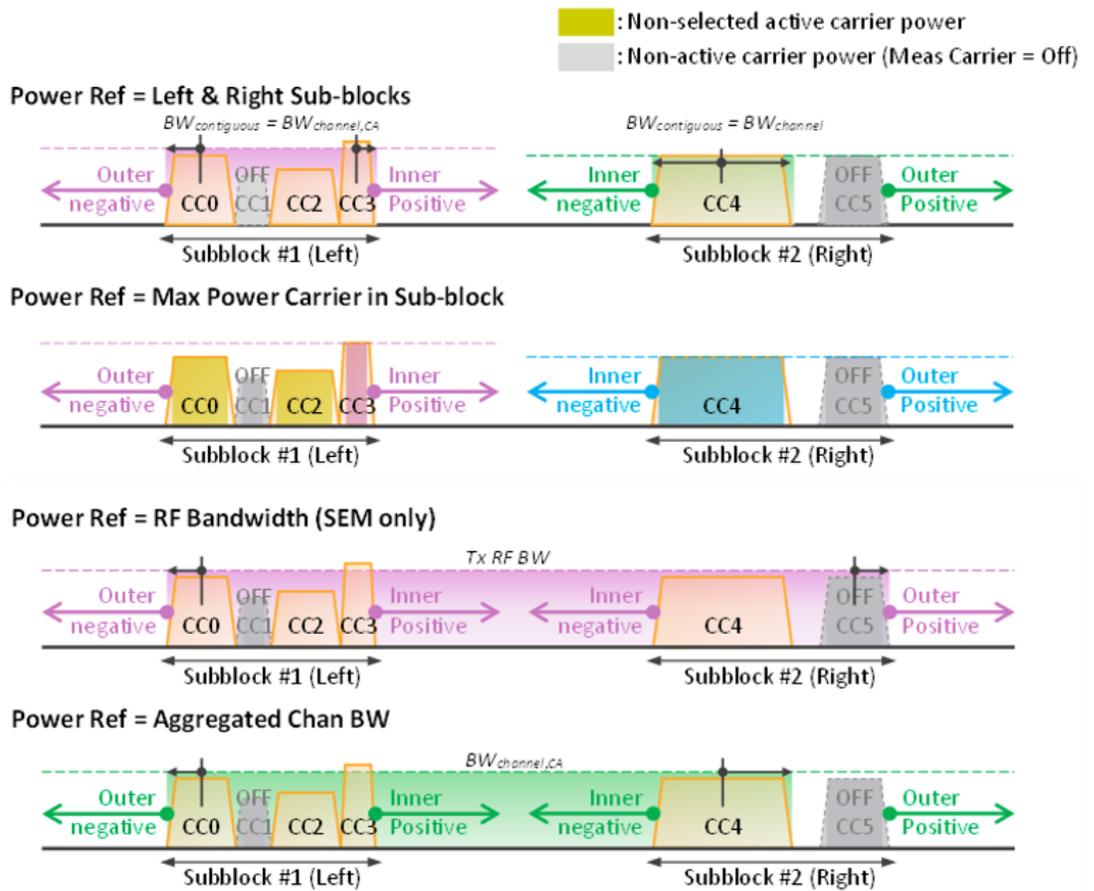

Remote Command	<code>[ :SENSe ] :SEMAsk:CARRier:PREFerence:TYPE LRCarriers   MPCarrier   CINDEX   MANual   MPCSubblock   RFBandwidth   ACBandwidth   LRSubblocks</code> For option details, see above <code>[ :SENSe ] :SEMAsk:CARRier:PREFerence:TYPE?</code>
Example	<code>:SEM:CARR:PREF:TYPE CIND</code> <code>:SEM:CARR:PREF:TYPE?</code>
Notes	<code>LRSubblocks</code> is available only in 5G NR Mode <code>ACBandwidth</code> is available only in LTE-A and 5G NR Modes
Dependencies	Only available in MSR, LTE-A and 5G NR Modes
Preset	<code>MPCarrier</code>
State Saved	Saved in instrument state
Range	Left & Right Carriers   Max Power Carriers   Carrier Index   Manual   Max Power Carrier in Sub-block   RF Bandwidth   Aggregated Chan BW   Left & Right Sub-blocks
Remote Command	<code>[ :SENSe ] :SEMAsk:CARRier:AUTO[ :STATe ] OFF   ON   1   0</code> <code>[ :SENSe ] :SEMAsk:CARRier:AUTO[ :STATe ]?</code>

Example	<code>:SEM:CARR:AUTO OFF</code> <code>:SEM:CARR:AUTO?</code>
Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

## Carrier Index

Sets carrier index of the reference power. The power of the carrier selected by this index becomes reference power when "Power Ref" on page 930 is Carrier Index.

Remote Command	<code>[ :SENSe]:SEMAsk:CARRier:INDex &lt;integer&gt;</code> <code>[ :SENSe]:SEMAsk:CARRier:INDex?</code>
Example	<code>:SEM:CARR:IND 1</code> <code>:SEM:CARR:IND?</code>
Dependencies	Available only in MSR, LTE-A and 5G NR Modes
Preset	1
State Saved	Saved in instrument state
Min/Max	MSR Mode: 1/100 LTEAFDD,LTEATDD Mode:1/5 5G NR Mode: 16

## Total Power Ref

Sets the power in the carrier (ref channel) that is used to compute the relative power values for the offsets. For modes other than MSR, LTEAFDD, LTEATDD, and 5G NR, when **Reference Power** is set to Measured, this value is set to the measured carrier reference power. When set to Manual, the result takes on the last measured value, or can be manually entered.

For WLAN 802.11ac (80 MHz + 80 MHz), the higher of the power readouts of the two carriers is used for computing the relative power values for the offset.

Remote Command	<code>[ :SENSe]:SEMAsk:CARRier[:POWer] &lt;real&gt;</code> <code>[ :SENSe]:SEMAsk:CARRier[:POWer]?</code>
Example	<code>:SEM:CARR 100dBm</code> <code>:SEM:CARR?</code>
Notes	The min and max values given are for "Measurement Type" on page 929 = Total Pwr Ref
Couplings	Coupled with <b>Measurement Type</b> . Active when <b>Measurement Type</b> is set to Total Power Ref. Otherwise, grayed-out

	In MSR, LTE-A and 5G NR Modes, the control is active when <b>Measurement Type</b> is set to Total Power and <b>Power Ref</b> is set to Manual
Preset	Measured carrier reference power
State Saved	Saved in instrument state
Min/Max	-200 dBm/200 dBm
Annotation	Value is displayed on the left top of the Results window with the Channel Integ BW

## PSD Ref

Sets the power spectral density in the carrier that is used to compute the relative power spectral density values for the offsets when "[Measurement Type](#)" on page 929 is set to PSD Ref. When the state is set to **Auto**, this will be set to the measured carrier power spectral density.

For WLAN 802.11ac (80 MHz + 80 MHz), the higher of the power density readouts of the two carriers is used for computing the relative PSD values for the offset.

Remote Command	<code>[ :SENSe ] :SEMAsk :CARRier :CPSD &lt;real&gt;</code> <code>[ :SENSe ] :SEMAsk :CARRier :CPSD?</code>
Example	<code>:SEM:CARR:CPSD -80</code> <code>:SEM:CARR:CPSD?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS
Couplings	Coupled with " <a href="#">Measurement Type</a> " on page 929. Active if <b>Measurement Type</b> is PSD. Otherwise, grayed-out In MSR, LTE-A and 5G NR Modes, active when <b>Measurement Type</b> is PSD and <b>Power Ref</b> is Manual
Preset	Measured carrier PSD reference power
State Saved	Saved in instrument state
Min/Max	-200/200
Annotation	Value is displayed on the right top of the Results window. If Meas Type selection is PSD Ref, the string is "PSD Ref" with BOLD font, otherwise, hide annotation

## Spectrum Pk Ref

Sets the spectrum peak power in the carrier that is used to compute the relative power spectral density values for the offsets when "[Measurement Type](#)" on page 929 is Spectrum Peak. When the state is set to **Auto**, this is set to the measured carrier spectrum peak power. When set to **Manual**, the result takes on the last measured value, or can be manually entered

Remote Command	<code>[ :SENSe]:SEMAsk:CARRier:PEAK[:POWer] &lt;real&gt;</code> <code>[ :SENSe]:SEMAsk:CARRier:PEAK[:POWer]?</code>
Example	<code>:SEM:CARR:PEAK -80</code> <code>:SEM:CARR:PEAK:POWER?</code>
Notes	Although the default value is defined, the value is recalculated by the measurement result just after completing the measurement Carrier sub op code. 1 for BTS, 2 for MS. Default is BTS
Couplings	Coupled with " <a href="#">Measurement Type</a> " on page 929. Active when <b>Measurement Type</b> is "Spectrum Peak Ref". Otherwise, grayed-out In MSR, LTE-A and 5G NR Modes, active when <b>Measurement Type</b> is Spectrum Peak Ref and <b>Power Ref</b> is Manual
Preset	Measured carrier Spectrum Peak reference power
State Saved	Saved in instrument state
Min/Max	-200/200
Annotation	Value is displayed on the right top of the Results window. If Meas Type selection is Spectrum Peak Ref, the string is "Spectrum Peak Ref" with BOLD font, otherwise, hide annotation

### Measure All Ref Carriers

When **ON**, all reference carriers configured are always measured irrespective of Measure Carrier on/off settings.

Remote Command	<code>[ :SENSe]:SEMAsk:CARRier:MEASure:ALL ON   OFF   1   0</code> <code>[ :SENSe]:SEMAsk:CARRier:MEASure:ALL?</code>
Example	<code>:SEM:CARR:MEAS:ALL 1</code> <code>:SEM:CARR:MEAS:ALL?</code>
Dependencies	Only available in MSR, LTE-A and 5G NR Modes
Preset	0
State Saved	Saved in instrument state

### Offset/Limits Config Table

This function is the same as "[Offset/Limits Config Table](#)" on page 852 under the "[Settings](#)" on page 848 tab.

Sets the power reference in the carrier that will be used to compute the relative values for the offsets.

#### 3.5.23.4 Radio

Contains controls to select link direction.

## Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

Remote Command	<code>[ :SENSe ]:RADio:STANdard:DIRection DLINK   ULINK</code> <code>[ :SENSe ]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

## Interfering Signal Present

Sets whether interfering signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in ACP, SEM and Spurious Emissions.

Remote Command	<code>[ :SENSe ]:RADio:IMODulation:INTerference[ :STATe ] OFF   ON   0   1</code> <code>[ :SENSe ]:RADio:IMODulation:INTerference[ :STATe ]?</code>
Example	<code>:RAD:IMOD:INT 1</code> <code>:RAD:IMOD:INT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	Yes No

## Freq Offset from Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min/Max	0 Hz / 20.0 MHz

## Span

Sets the span of the interference signal for intermodulation tests.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min/Max	200 kHz / 20.0 MHz

## Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE NEGative   POSitive</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code> <code>:RAD:IMOD:INT:SIDE?</code>
Preset	POSitive
State Saved	Saved in instrument state

### Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- INNER – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- OUTER – The interfering signal exists at either of the outer regions

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:REGion INNER   OUTER</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	OUTer
State Saved	Saved in instrument state

### 3.5.23.5 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

## Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

## Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

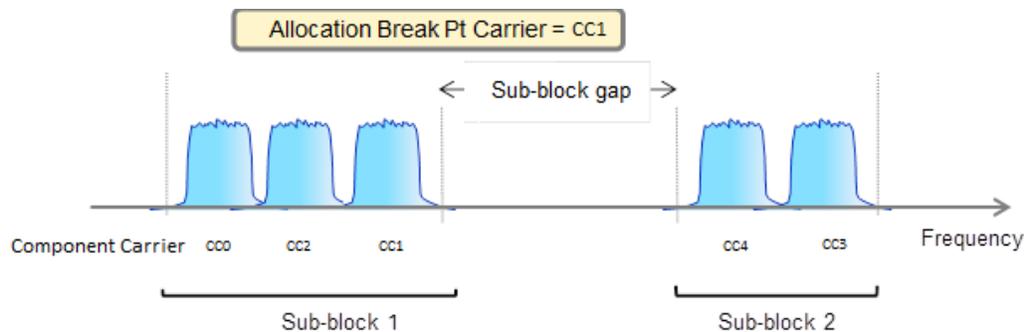

Remote Command `[ :SENSe]:CCARrier:CONFig:ALLocation:NCONTiguous:ABPoint CC0 | ... | CC4`

	<code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

### Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

### Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

### Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

### Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

### Non-Contiguous Break at

See ["Non-Contiguous Break at" on page 2246](#).

### System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0[...]:4:RADIo:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	--

	<code>[ :SENSe ] : CCARrier0   ...   4 : RADio : STANdard : BANDwidth ?</code>
Example	<code>:CCAR4 : RAD : STAN : BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe ] : RADio : STANdard : BANDwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe ] : CCARrier0   ...   4 [ :STATe ] OFF   ON   0   1</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0 ?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe ] : CCARrier&lt;n&gt; : FREQuency : OFFSet &lt;freq&gt;</code> <code>[ :SENSe ] : CCARrier&lt;n&gt; : FREQuency : OFFSet ?</code>
Example	<code>:CCAR4 : FREQ : OFFS 10MHz</code> <code>:CCAR4 : FREQ : OFFS ?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMAl   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:DGPU?</code>
Example	<code>:CCAR0:RAD:STAN:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:DGPU</code>

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

	<b>System Bandwidth</b>	<b>CHP Integ BW</b>
	1.4 MHz (B1M4)	1.4 MHz
	3 MHz (B3M)	3 MHz
	5 MHz (B5M)	5 MHz
	10 MHz (B10M)	10 MHz
	15 MHz (B15M)	15 MHz
	20 MHz (B20M)	20 MHz
	200 kHz(B200K)	200 kHz
Preset	5 MHz	
State Saved	Saved in instrument state	
Min	100 kHz	
Max	20 MHz	
Backwards Compatibility SCPI	[:SENSe]:CHPower:BANDwidth:INTEgration [:SENSe]:CHPower:BWIDth:INTEgration	

### ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	[:SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration <freq> [:SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration?
Example	:CCAR0:ACP:BAND:INT 20MHz :CCAR0:ACP:BAND:INT?
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

<b>System Bandwidth</b>	<b>BTS ACP Meas Noise BW</b>	<b>MS ACP Meas Noise BW</b>
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
3 MHz (B3M)	2.715 MHz	2.7 MHz
5 MHz (B5M)	4.515 MHz	4.5 MHz
10 MHz (B10M)	9.015 MHz	9.0 MHz
15 MHz (B15M)	13.515 MHz	13.5 MHz
20 MHz (B20M)	18.015 MHz	18.0 MHz
200 kHz(B200K)	180 kHz	180 kHz

Preset	4.515 MHz 4.5 MHz
State Saved	Yes
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:BANDwidth[:INTEgration]</code> <code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:BWIDth[:INTEgration]</code>

### SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1]   2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1]   2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode

Couplings When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth

System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
3 MHz (B3M)	2.715 MHz	2.7 MHz
5 MHz (B5M)	4.515 MHz	4.5 MHz
10 MHz (B10M)	9.015 MHz	9.0 MHz
15 MHz (B15M)	13.515 MHz	13.5 MHz
20 MHz (B20M)	18.015 MHz	18.0 MHz
200 kHz(B200K)	180 kHz	180 kHz

Preset	4.515 MHz 4.5 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:SEMAsk:BANDwidth[1]   2:INTEgration</code>

## Carrier Config Presets

Lets you configure the Component Carrier presets.

### Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

### Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

### Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code> <code>:CCAR:CONF:SPAC:DELTA?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

### ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:Bandwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:Bandwidth?</code>
Example	<code>:CCAR:CONF:ETC1:Band B5M</code> <code>:CCAR:CONF:ETC1:Band?</code>
Preset	B5M

State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

### Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative - Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive - Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG</code> <code>:CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

## Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M</code> <code>:CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

## ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	---

	<code>[ :SENSe ] :CCARrier:CONFig:ETC3:BANdwidth?</code>
Example	<code>:CCAR:CONF:ETC3:BANd B5M</code> <code>:CCAR:CONF:ETC3:BANd?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### 3.5.23.6 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

### System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command `RAD:STAN:PRES B5M` or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote	<code>[ :SENSe ] :RADio:STANdard:PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
--------	--

Command	
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:RADio:STANdard:PRESet:ULDL?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

## Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

### Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[ :SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

### Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>						
Example	<code>:RAD:MIN 1</code>						
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes						
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>						
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH: <table border="1" data-bbox="407 1104 1406 1234"> <thead> <tr> <th>Meas NPRACH</th> <th>Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						
Preset	1						
State Saved	Yes						
Min	1						
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise						
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTime:MINInterval</code>						

## CP Length

Specifies whether the cyclic prefix is configured as NORMAL or EXTENDED for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:CPLength NORMal   EXTended</code> <code>[ :SENSe]:RADio:CPLength?</code>
Example	<code>:RAD:CPL NORM</code>
Notes	The backwards compatible SCPI command <code>[ :SENSe]:PVTTime:CPLength</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to “200 kHz (NB-IoT)” and Direction is “uplink”
Couplings	Set to NORMal when System BW is set to “200 kHz (NB-IoT)”
Preset	NORMal
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTTime:CPLength</code>

## Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe]:RADio:MEASure?</code>
Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

## Reference Config

Specifies which component carrier’s ULDL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code>
----------------	--

	<code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.5.23.7 Advanced

Contains controls for setting advanced instrument functions.

This tab does not appear in EXM, VXT.

### Noise Floor Extension

Allows you to turn on/configure the **Noise Floor Extension** (NFE) function. Some Modes (such as Spectrum Analyzer Mode), support two states of NFE, Full and Adaptive. The **ON** state (in Modes that do not support Adaptive NFE) matches the FULL state (in Modes that *do* support Adaptive NFE).

In **ON** or FULL NFE, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This usually reduces the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

In Adaptive NFE, there is not the same dramatic visual impact on the noise floor as there is in Full NFE. Adaptive NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the NFE-off case; and when lots of averaging is being performed, the signal displays more like the full-NFE case.

Adaptive NFE (in Modes that support it) is recommended for general-purpose use. For fully ATE (automatic test equipment) applications, where the distraction of a person using the instrument is not a risk, Full NFE is recommended.

NFE works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to **Average** or **Peak**). It works best with extreme

amounts of smoothing, and with the average detector, with Average Type set to **Power**.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** ON.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages. When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

**NOTE**

**Noise Floor Extension has no effect unless the RF Input is selected, therefore it does nothing when External Mixing is selected.**

**In Modes that support Adaptive NFE, the default state of NFE is Adaptive. In Modes that do not support Adaptive NFE, the default state of NFE is OFF. Prior to the introduction of Adaptive NFE (firmware version A.18.00), the default state of NFE was OFF for all Modes.**

With the introduction of Adaptive NFE, the menu control is changed from On|Off to Full|Adaptive|Off. For SCPI Backwards Compatibility, the existing SCPI command to turn NFE on and off was retained, and a new command was added to set the state to turn Adaptive On and Off

`[:SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0` is retained, default changed to On for modes which support Adaptive NFE

`[:SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0` is added (for certain Modes), default=On

FULL = `:CORRection:NOISe:FLOor ON plus :CORRection:NOISe:FLOor:ADAPtive ON`

Remote Command	<code>[:SENSe]:CORRection:NOISe:FLOor ON   OFF   1   0</code> <code>[:SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, but the remote command will be accepted without error (but has no effect)
Couplings	When NFE is enabled in any Mode manually, a prompt is displayed reminding you to perform the Characterize Noise Floor operation if it is needed. If NFE is enabled via SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by <b>Mode Preset</b> . Turned <b>ON</b> at startup and by <b>Restore Mode Defaults</b> in Modes that support Adaptive. Turned <b>OFF</b> at startup and by <b>Restore Mode Defaults</b> in Modes that do not support Adaptive
State Saved	No

Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOor:ADApTive ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOor:ADApTive?</code>
Example	First turn NFE on, this is FULL mode: <code>:CORR:NOIS:FLO ON</code>  Then set it to Adaptive: <code>:CORR:NOIS:FLO:ADAP ON</code>
Dependencies	Only available in Modes that support Adaptive NFE Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, but the remote command is accepted without error (but has no effect)
Couplings	Sending <code>:CORR:NOIS:FLO ON</code> turns NFE Adaptive <b>OFF</b> for backwards compatibility. To turn Adaptive <b>ON</b> , you must issue the commands in the proper order, as shown in the example above
Preset	Not affected by <b>Mode Preset</b> , but set to <b>ON</b> at startup and by <b>Restore Mode Defaults</b>
State Saved	No

### More Information

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is **Average**, and the Average Type is set to **Power**.

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise.

For best operation, the average detector and the power scale are recommended, as already stated. **Peak** detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals,

so this combination is not recommended. **Negative peak** detection is not very useful, either. **Sample** detection works well but is never better than the average detector because it does not smooth as well. The **Normal** detector is a combination of peak and negative peak behaviors and works about as well as these.

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well but using very long bucket durations and the average detector works best. Reducing the number of trace points makes the buckets longer.

For best operation, the power scale (Average Type = **Power**) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE, the NFE does an even better job than using the log scale ever could. Using NFE with the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of  $-174$  dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that is in excess of the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

Adaptive NFE provides an alternative to fully-on and fully-off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement – those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the NFE-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

On instruments with the NF2 license installed, the calibrated Noise Floor used by **Noise Floor Extension** should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, *and* once every calendar year. The control to perform this is located in the **System, Alignments, Advanced** menu. If you have not done this yourself at the recommended interval, then when you turn on **Noise Floor Extension**, the instrument will prompt you to do so with a dialog that says:

“This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week”

If you **Cancel**, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

### Enable Wideband IF for FFT

When **OFF**, the maximum FFT BW is limited to 40 MHz. When **ON**, FFT with more wideband IF is supported depending on the instrument. For example, the max FFT BW is 510 MHz with option B5X. When ON for R10/R20/R40, the max FFT BW is 1GHz.

When this parameter is on and the following conditions are met, the measurement is performed with a single I/Q acquisition.

- Stop Freq of the outermost Offset range is within the available IQ acquisition BW
- Same RBW, VBW, Detector Type settings across all Offset ranges and Carrier
- Sweep Type = FFT and Sweep Time = Auto across all Offset ranges and Carrier

Remote Command	<code>[ :SENSe]:SEMask:WBFFt:ENABle ON   OFF   1   0</code> <code>[ :SENSe]:SEMask:WBFFt:ENABle?</code>
Example	<code>:SEM:WBFF:ENAB 1</code> <code>:SEM:WBFF:ENAB?</code>
Dependencies	The maximum FFT BW depends on the $\mu$ W preselector and the current frequency. In hi-band, the $\mu$ W preselector must be disabled to apply the FFT with wideband IF. Otherwise, the maximum FFT BW is limited to 40 MHz
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>ON OFF</b>

### 3.5.23.8 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "**Global Center Freq**" on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

## Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENTer ALL   NONE</code> <code>:INSTrument:COUPle:FREQuency:CENTer?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL   NONE</b>
Preset	<b>OFF</b>
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When

**Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:EMC:STANdard ALL   NONE</code> <code>:INSTrument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL   NONE</b>

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF</code> <code>:INSTrument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	<b>ON   OFF</b>

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTrument:COUPle:DEFault</code>
----------------	---

Example	:INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault

### 3.5.24 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

#### 3.5.24.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

#### Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 966

Remote Command	:INITiate:CONTinuous OFF   ON   0   1 :INITiate:CONTinuous?
Example	Put instrument into <b>Single</b> measurement operation: :INIT:CONT 0 :INIT:CONT OFF  Put instrument into <b>Continuous</b> measurement operation: :INIT:CONT 1 :INIT:CONT ON
Preset	ON  Note that :SYST:PRES sets :INIT:CONT to ON, but *RST sets :INIT:CONT to OFF
State Saved	Saved in instrument state
Annunciation	The <b>Single/Continuous</b> icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> <li>- A line with an arrow is <b>Single</b></li> <li>- A loop with an arrow is <b>Continuous</b></li> </ul>

Backwards  
Compatibility  
Notes

X-Series A-models had **Single** and **Cont** hardkeys in place of the **SweepSingleCont** softkey. In the X-Series A-models, if in single measurement, the **Cont** hardkey (and **INIT:CONT ON**) switched to continuous measurement, but never restarted a measurement and never reset a sweep

X-Series B-models have a **Cont/Single** toggle control instead of **Single** and **Cont** hardkeys, but it is still true that, if in single measurement, the **Cont/Single** toggle control never restarts a measurement and never resets a sweep

### More Information

**Continuous Mode** The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the **Average/Hold Num**, the count stops incrementing, but the instrument keeps sweeping

See the **Trace** key description under **Trace Average** for the averaging formula used both before and after the **Average/Hold Num** is reached. The trigger condition must be met prior to each sweep

The type of trace processing for multiple sweeps is set under the **Trace** key, with choices of **Trace Average**, **Max Hold**, or **Min Hold**

**Single Mode** The instrument takes a single sweep when in **Single** mode, or if in average or Max/Min Hold, or if there is a **Waterfall** window displayed, it takes multiple sweeps until the average/hold count reaches the **Average/Hold Num**, then the count stops incrementing, and the instrument stops sweeping

See the **Trace** key description under **Trace Average** for the averaging formula used. The trigger condition must be met prior to the sweep

The type of trace processing for multiple sweeps is set under the **Trace** key, with choices of **Trace Average**, **Max Hold**, or **Min Hold**

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state

See "**Restart**" on page 2279 for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a

trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

## Restart

Restarts the current sweep, or measurement, or set of averaged/hold sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See "[More Information](#)" on page 968

Remote Command	<code>:INITiate[:IMMEDIATE]</code> <code>:INITiate:REStart</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <code>STATus:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATus:QUESTionable</code> register bit 9 ( <code>INTEgrity</code> sum) is cleared The <code>SWEEPING</code> bit is set The <code>MEASURING</code> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the <b>Restart</b> hardkey and the <code>:INIT:REST</code> command restarted trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> In X-Series, the <b>Restart</b> hardkey and the <code>:INIT:REST</code> command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count  $k$  equals the number  $N$  set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command `:CALC:AVER:TCON UP`.

## Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in

application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
<b>Clear/Write</b> pressed (even if already in Clear/Write)	Set to mintracevalue
<b>Max Hold</b> pressed (even if already in Max Hold)	Set to mintracevalue
<b>Min Hold</b> pressed (even if already in Min Hold)	Set to maxtracevalue
<b>Trace Average</b> pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
<b>Restart</b> pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

### Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count  $k$  to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

### Averaging

The weighting factor used for averaging is  $k$ . This  $k$  is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This  $k$  is used for comparisons with  $N$ , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold,  $K$ , shows the count for the sweep (data acquisition) in progress.  $K = k + 1$ , with a limit of  $N$ . The displayed value  $K$  changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

### Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

---

Remote Command    **:INITiate:PAUSE**  
                           **:INITiate:RESume**

Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

### Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>
Notes	If <code>:INIT:CONT</code> is <b>ON</b> , then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met If <code>:INIT:CONT</code> is <b>OFF</b> , then <code>:INIT:IMM</code> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, <code>:ABORT</code> is equivalent to the <b>Restart</b> key Not all measurements support this command
Status Bits/OPC dependencies	The <code>STATus:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATus:QUEStionable</code> register bit 9 ( <b>INTEgrity</b> sum) is cleared Since all the bits that feed into OPC are cleared by <code>:ABORT</code> , the Abort command will cause the <code>*OPC</code> query to return true

### 3.5.24.2 X Scale

Accesses controls that enable you to set the horizontal scale parameters.

### Ref Value

Sets the X reference value.

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALE]:RLEVel &lt;freq&gt;</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALE]:RLEVel?</code>
Example	<code>:DISP:SEM:WIND:TRAC:X:RLEV 10</code> <code>:DISP:SEM:WIND:TRAC:X:RLEV?</code>
Couplings	If " <b>Auto Scaling</b> " on page 798 is <b>ON</b> , this value is automatically determined by the measurement result. If you set this value manually, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	1.0 GHz
State Saved	Saved in instrument state
Min	-1000 GHz
Max	1000 GHz
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:X[:SCALE]:RLEVel</code>

### Scale/Div

Sets the horizontal scale.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALE]:PDIVision &lt;freq&gt;</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALE]:PDIVision?</code>
Example	<code>:DISP:SEM:WIND:TRAC:X:PDIV 500</code> <code>:DISP:SEM:WIND:TRAC:X:PDIV?</code>
Couplings	If <b>Auto Scaling</b> is <b>ON</b> , this value is automatically determined by the measurement result. When you set this value manually, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	Automatically Calculated
State Saved	Yes Saved in instrument state
Min	1 Hz
Max	100 GHz
Backwards Compatibility SCPI	<code>:DISPlay:SEMask:VIEW[1]:WINDow[1]:TRACe:X[:SCALE]:PDIVision</code>

### Ref Position

Sets the reference position for the X axis to Left, Center or Right.

Remote Command	<code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALE]:RPOsition LEFT   CENTer   RIGHT</code> <code>:DISPlay:SEMask:WINDow[1]:TRACe:X[:SCALE]:RPOsition?</code>
Example	<code>:DISP:SEM:WIND:TRAC:X:RPOS LEFT</code>

	<code>:DISP:SEM:WIND:TRAC:X:RPOS?</code>
Preset	<code>CENTer</code>
State Saved	Saved in instrument state
Range	Left Center Right
Backwards Compatibility SCPI	<code>:DISPlay:SEMAsk:VIEW[1]:WINDow[1]:TRACe:X[:SCALE]:RPOSition</code>

## Auto Scaling

Toggles the scale coupling function On or Off.

Remote Command	<code>:DISPlay:SEMAsk:WINDow[1]:TRACe:X[:SCALE]:COUPle 0   1   OFF   ON</code> <code>:DISPlay:SEMAsk:WINDow[1]:TRACe:X[:SCALE]:COUPle?</code>
Example	<code>:DISP:SEM:WIND:TRAC:X:COUP ON</code> <code>:DISP:SEM:WIND:TRAC:X:COUP?</code>
Couplings	When <b>Auto Scaling</b> is <b>ON</b> and the <b>Restart</b> front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results When you set a value to either " <b>Scale/Div</b> " on page 971 or " <b>Ref Value</b> " on page 970 manually, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	<code>ON</code>
State Saved	Saved in instrument state
Range	<code>OFF   ON</code>
Backwards Compatibility SCPI	<code>:DISPlay:SEMAsk:VIEW[1]:WINDow[1]:TRACe:X[:SCALE]:COUPle</code>

### 3.5.24.3 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument, such as Sweep Rules.

## Points

Sets the number of points displayed in the traces. The current value of points is displayed in the bottom-right corner of the display.

Remote Command	<code>[:SENSe]:SEMAsk:SWEEp:POINts &lt;integer&gt;</code> <code>[:SENSe]:SEMAsk:SWEEp:POINts?</code>
Example	<code>:SEM:SWE:POIN 4001</code>

:SEM:SWE:POIN?	
Preset	2001
State Saved	Saved in instrument state
Min	201
Max	10001
Annotation	On second line of annotations in bottom right corner

## IF Dithering

Lets you turn IF Dithering on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to enhance the rejection of images and internally-generated spurious signals.

Remote Command	<code>[ :SENSe ]:SWEep:IF:DITHer OFF   ON   0   1</code> <code>[ :SENSe ]:SWEep:IF:DITHer?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT models
Preset	OFF
State Saved	Saved in instrument state

## Image Protection

Lets you turn IF Protection on or off. This is a technique used in unpreselected instruments (such as Keysight's modular instruments) to detect and suppress images and spurs that may be present in non-preselected hardware.

IF Protection takes two sweeps and by correlating the data between them, provides a single, correct power-versus-frequency trace.

Remote Command	<code>[ :SENSe ]:SWEep:IMAGeprot OFF   ON   0   1</code> <code>[ :SENSe ]:SWEep:IMAGeprot?</code>
Dependencies	Only appears in Spectrum Analyzer Mode in VXT model M9421A
Preset	ON
State Saved	Saved in instrument state

## 3.5.25 Trace

Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces. The Trace Control tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

### 3.5.25.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

**Select Trace** appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the <b>Trace</b> menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none"> <li>- In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View</li> <li>- When you turn on Image Suppress, Update turns off for all traces except the selected trace</li> </ul> For the ACP measurement, when <b>Meas Method</b> is <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> , <b>Select Trace</b> is disabled
Preset	Trace 1
State Saved	Yes

### 3.5.25.2 Trace Control

The controls on this tab allow you to set the "**Trace Type**" on page 2137 and its update mode.

There are four Trace Types:

- **Clear/Write**
- **Trace Average**
- **Max Hold**
- **Min Hold**

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "**View/Blank**" on page 2142 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

## Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITE	:TRAC2:TYPE WRIT	See: " <a href="#">Clear/Write</a> " on page 978
Trace Average	AVERage	:TRAC2:TYPE AVER	See: " <a href="#">Trace Average</a> " on page 978
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: " <a href="#">Max Hold</a> " on page 979
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: " <a href="#">Min Hold</a> " on page 979

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "[View/Blank](#)" on page 2142 state must be set to **Active** (**Update: ON, Display: ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "[Trace Mode Backwards Compatibility Commands](#)" on page 976

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITE   AVERage   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE WRITE   AVERage   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<pre>:TRAC:TYPE WRIT</pre> <pre>:TRAC:TYPE?</pre>
Couplings	<p>Selecting a <b>Trace Type</b> (by pressing any of the Trace Type selections or sending <code>:TRAC:TYPE</code>) sets the Trace to <b>Active</b> (<b>Update: ON, Display: OFF</b>), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<code>[ :SENSe ] : &lt;meas&gt; : DETector : AUTO ?</code>), Detector (<code>[ :SENSe ] : &lt;meas&gt; : DETector [ :FUNCTION ] ?</code>) switches aligning with the switch of this parameter: "<b>NORMal</b>" with <code>WRITE</code> (Clear Write), "<b>AVERage</b>" with <code>AVERage</code>, "<b>POSitive</b> (peak)" with <code>MAXHold</code>, and "<b>NEGative</b> (peak)" with <code>MINHold</code></p>
Preset	<p>Swept SA and Monitor Spectrum: <code>WRITE</code></p> <p>All other measurements: <code>AVERage</code></p> <p>Following <b>Preset</b>, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

## Trace Mode Backwards Compatibility Commands

In earlier instruments, the “Trace Modes” were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under ["View/Blank" on page 2142](#).

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The **:TRACe:MODE** command is retained for backwards compatibility, and the **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay** commands introduced for ongoing use. The old Trace Modes are selected using **:TRAC:MODE**, whose parameters are mapped into calls to **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay**, and the old global Averaging command **[ :SENSe ]:AVERage[ :STATe ]** is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	<b>WRITE</b>
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	<b>:TRACe[1] 2 ... 6:MODE WRITE   MAXHold   MINHold   VIEW   BLANK</b> <b>:TRACe[1] 2 ... 6:MODE?</b>
Backwards Compatibility Notes	<p>The legacy <b>:TRACe:MODE</b> command is retained for backwards compatibility. In conjunction with the legacy <b>:AVERage</b> command, it works as follows:</p> <ul style="list-style-type: none"> <li>– <b>:AVERage ON OFF</b> sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the <b>[ :SENSe ]:AVERage[ :STATe ]</b> command description below</li> <li>– <b>:TRACe:MODE WRITE</b> sets <b>:TRACe:TYPE WRITE</b> (Clear/Write) unless average is true, in which case it sets it to <b>:TRACe:TYPE AVERage</b>. It also sets <b>:TRACe:UPDate ON</b>, <b>:TRACe:DISPlay ON</b>, for the selected trace</li> <li>– <b>:TRACe:MODE MAXHold</b> sets <b>:TRACe:TYPE MAXHold</b> (Max Hold). It also sets <b>:TRACe:UPDate ON</b>, <b>:TRACe:DISPlay ON</b>, for the selected trace</li> </ul>

3 LTE & LTE-A TDD Mode  
3.5 SEM Measurement

- `:TRACe:MODE MINHold` sets `:TRACe:TYPE MINHold` (Min Hold). It also sets `:TRACe:UPDate ON`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE VIEW` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE BLANK` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay OFF`, for the selected trace

The query returns the same value as `:TRACe:TYPE?`, meaning that if you set `:TRACe:MODE:VIEW` or `:TRACe:MODE:BLANK`, the query response will not be what you sent

`:TRACe[n]:MODE` was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new `:TRACe:TYPE` command should be used in the future, but `:TRACe:MODE` is retained to provide backwards compatibility

In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has

As the **Average/Hold Number** now affects **Min Hold** and **Max Hold**, the operations that restart Averaging (for example, the **Restart** key) now also restart **Min Hold** and **Max Hold**

As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does

Also, previous to X-Series:

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	<code>OFF</code>
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[ :SENSe]:AVERAge[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:AVERAge[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[ :SENSe]:AVERAge[:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[ :SENSe]:AVERAge[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

## Trace Type Details

### Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

### Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count  $k$  is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated

- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

### Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending `:TRAC:TYPE MAXH` for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

### Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending `:TRAC:TYPE MINH` for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

### Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 2137 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again

- the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:

- **Clear/Write:** Clear and Write
- **Trace Average:** Restart Averaging
- **Max Hold:** Restart Max Hold
- **Min Hold:** Restart Min Hold


### View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

<b>Active</b>	Update and Display both <b>ON</b>
<b>View</b>	Update <b>OFF</b> ; Display <b>ON</b>
<b>Blank</b>	Update <b>OFF</b> ; Display <b>OFF</b>
<b>Background</b>	Update <b>ON</b> , Display <b>OFF</b>

Allows a trace to be blanked *and* continue to update "in the background", which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

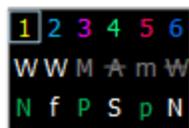

See: ["More Information" on page 982](#)

Notes	For the commands to control the two variables, Update and Display, see <a href="#">"Trace Update State On/Off" on page 981</a> and <a href="#">"Trace Display State On/Off" on page 981</a> below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	<p>Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in <b>Active</b> (Update <b>ON</b> and Display <b>ON</b>), even if that trace type was already selected</p> <p>Selecting a detector for a trace (pressing the key or sending <code>[ :SENS ] :DET :TRAC</code>) puts the trace in <b>Active (UpdateON and DisplayON)</b>, even if that detector was already selected</p> <p>Selecting a <a href="#">"Math Function" on page 1145</a> other than <b>OFF</b> for a trace (pressing the key or sending the equivalent command) puts the trace in <b>Active (UpdateON and DisplayON)</b>, even if that Math Mode was already selected</p> <p>Loading a trace from a file puts that trace in <b>View</b> regardless of the state it was in when it was saved; as does being the target of a <b>Copy</b> or a participant in an <b>Exchange</b></p>

### Trace Update State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):</p> <pre>:TRAC2:UPD 0</pre>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

### Trace Display State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 ... 6:DISPlay[:STATe]?</pre> <p>For all other measurements:</p>
----------------	--

	<pre>:TRACe[1] 2 3:&lt;meas&gt;:DISPlay[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:DISPlay[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 1 visible:</p> <pre>:TRAC2:DISP 1</pre> <p>Blank trace 3:</p> <pre>:TRAC3:DISP 3</pre>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

### More Information

When a trace becomes inactive, any update from the **:SENSe** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

### 3.5.25.3 Math

Lets you turn on and configure Trace Math functions.

#### Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "Operand 1 / Operand 2" on page 1151 controls.

- See "How trace math is processed" on page 987

---

Remote Command For option details, see "Trace Math Options" on page 985  
For Swept SA Measurement (in SA Mode):  
:CALCulate:MATH <trace\_num>, PDIFference | PSUM | LOFFset | LDIFference | OFF, <trace\_num>, <trace\_num>, <real>,<real>  
:CALCulate:MATH? <trace\_num>  
where <trace\_num> is any one of:  
TRACE1|...|TRACE6  
For all other measurements:  
:CALCulate:<meas>:MATH <trace\_num>, PDIFference | PSUM | LOFFset | LDIFference | OFF, <trace\_num>, <trace\_num>, <real>,<real>  
:CALCulate[:<meas>]:MATH? <trace\_num>  
where:  
<meas> is the identifier for the current measurement, and  
<trace\_num> is any one of:  
TRACe1|TRACe2|TRACe3  
Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement

---

Example :CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0  
Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2  
:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0  
Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2  
:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0

	<p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p> <p><code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code></p> <p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <p><code>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</code></p> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> <li>- Set 1 defines the “result trace”: <code>TRACE1  ...  TRACE6</code></li> <li>-Set 2 defines the “function”: <code>PDIFference PSUM LOFFset LDIFference OFF</code></li> <li>- Set 3 is a “trace operand” (1): <code>TRACE1  ...  TRACE6</code></li> <li>- Set 4 is a “trace operand” (2): <code>TRACE1  ...  TRACE6</code></li> <li>- Set 5 defines the “Log Offset” (in dB)</li> <li>- Set 6 defines the “Log Difference Reference” (in dBm)</li> </ul> <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if <b>Normalize</b> is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	When a math function is changed for a trace, that trace is set to Display = <b>ON</b> ; and Update = <b>ON</b>
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p><code>OFF,TRACE5,TRACE6,0,0   OFF,TRACE6,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0  </code>  <code>OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE4,0,0   OFF,TRACE4,TRACE5,0,0</code></p> <p>For all other measurements:</p> <p><code>OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0</code></p>
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on;

---

	and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

---

## Trace Math Options

### IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

---

The Trace Math functions are:

### Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log_{10}(10^{(1/10)(\text{FirstTrace})} - 10^{(1/10)(\text{SecondTrace})})$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

### Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = 10 \log_{10}(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace})$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

### Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

*Example:* If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

### Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-

B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

*Example:* If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at -5 dBm, and the reference is -25 dBm, then the destination trace will be -15 dBm.

*Example:* If the first operand trace 1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.


If neither of the above is true for a given point, then:

- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

### How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

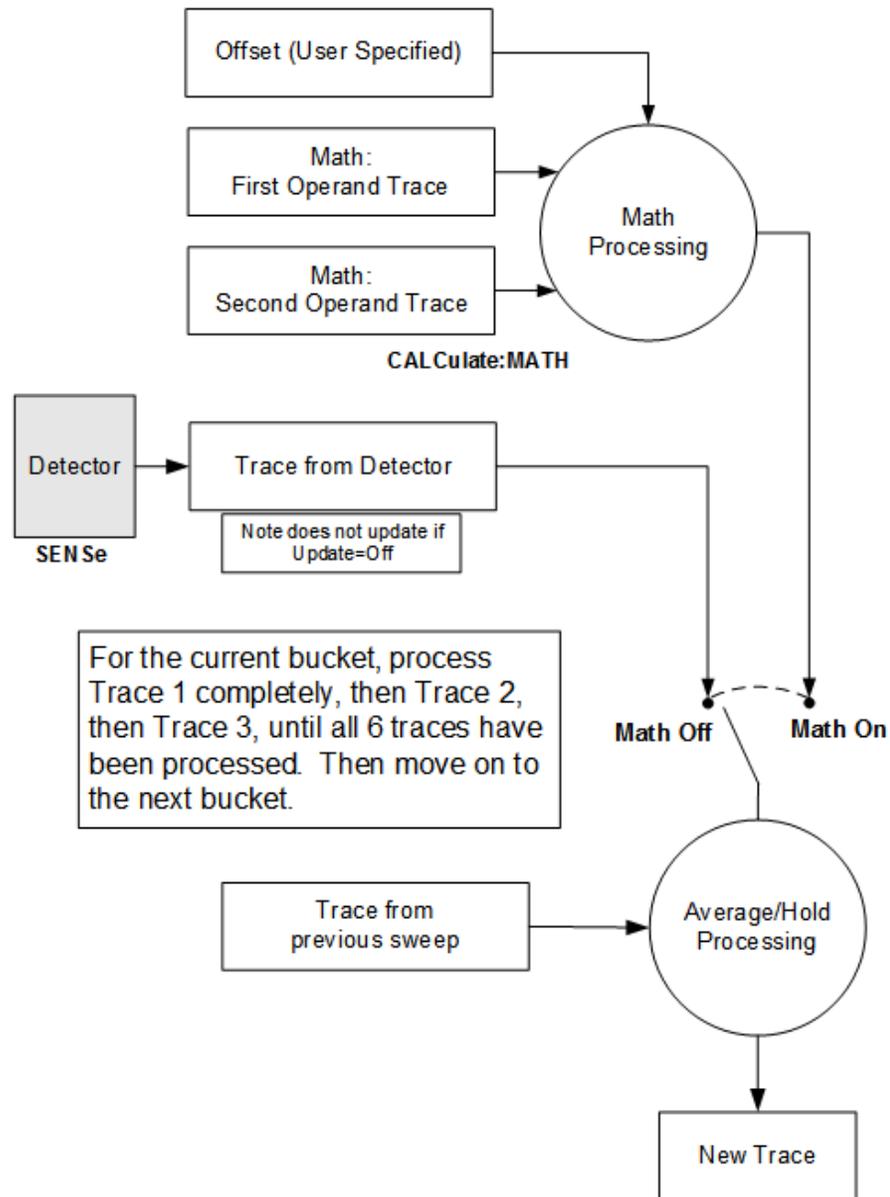

**NOTE ABOUT OFFSETS:** When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

## Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <pre><b>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</b></pre> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <pre><b>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</b></pre>
Notes	See " <a href="#">Math Function</a> " on page 1145 for how to specify Operands 1 and 2 using <b>:CALCulate:MATH</b>
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

---

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

---

## Offset

Used by the Log Offset math function.

---

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:
---------	--

```
:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0
```

---

State Saved	The Log Offset value for each trace is saved in Instrument State
-------------	--

---

Min	-100 dB
-----	---------

---

Max	100 dB
-----	--------

## Reference

Used by the Log Diff math function.

---

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm:
---------	--

```
:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00
```

---

State Saved	The Log Difference reference value for each trace is saved in instrument state
-------------	--

---

Min/Max	Same as reference level
---------	-------------------------

### 3.5.25.4 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

## From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 1

## To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 2

## Copy

Executes a Trace Copy based on the **"From Trace" on page 1153** and **"To Trace" on page 1153** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

---

Remote Command For Swept SA Measurement (in SA Mode):  
`:TRACe:COPIY TRACE1 | ... | TRACE6, TRACE1 | ... | TRACE6`

For all other measurements:  
`:TRACe:<meas>:COPIY TRACe1 | TRACe2 | TRACe3, TRACe1 | TRACe2 | TRACe3`

where `<meas>` is the identifier for the current measurement

Note that the format of the `TRACe<n>` parameter differs from that for the Swept SA Measurement

---

Example Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On  
`:TRAC:COPIY TRACE1,TRACE3`

---

Notes The command is of the form:  
`:TRACe:COPIY <source_trace>,<dest_trace>`

---

Dependencies When Signal ID is on, this key is grayed-out

---

Couplings The destination trace is put in **View** (Update = Off, Display = On) after the copy

---

Preset For Swept SA Measurement (in SA Mode):  
`TRACE1, TRACE2`

For all other measurements:  
`TRACe1, TRACe2`

## Exchange

Executes a Trace Exchange based on the "From Trace" on page 1153 and "To Trace" on page 1153 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	<p>For Swept SA Measurement (in SA Mode):  <code>:TRACe:EXCHange TRACE1   ...   TRACE6, TRACE1   ...   TRACE6</code></p> <p>For all other measurements:  <code>:TRACe:&lt;meas&gt;:EXCHange TRACe1   TRACe2   TRACe3, TRACe1   TRACe2   TRACe3</code></p> <p>where <code>&lt;meas&gt;</code> is the identifier for the current measurement</p> <p>Note that the format of the <code>:TRACe&lt;n&gt;</code> parameter differs from that for the Swept SA Measurement</p>
Example	<p>Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON:  <code>:TRAC:EXCH TRACE1,TRACE2</code></p>
Notes	<p>The command is of the form:  <code>:TRACe:EXCHange &lt;trace_1&gt;,&lt;trace_2&gt;</code></p>
Couplings	Both traces are put in <b>View</b> (Update=Off, Display=On) after the exchange

## Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	<code>:TRACe[:&lt;meas&gt;]:PRESet:ALL</code>
Example	<code>:TRAC:PRE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

## Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads `mintracevalue` into all of the points for all traces, except traces in **Min Hold**, in which case it loads `maxtracevalue`, even if **Update = OFF**.

Remote Command	<code>:TRACe[:&lt;meas&gt;]:CLEar:ALL</code>
Example	<code>:TRAC:CLE:ALL</code>
Dependencies	When Signal ID is on, this key is grayed-out

### 3.5.25.5 Advanced

Contains controls for setting advanced trace functions of the instrument.

#### Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCh** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<pre>:CALCulate:&lt;meas&gt;:MTRace TRACe1   TRACe2   TRACe3 :CALCulate:&lt;meas&gt;:MTRace? &lt;meas&gt; is the identifier for the current measurement; any one of CHPower   ACPower   OBWidth   SEMask   SPURious   PVTime</pre>
Example	<pre>Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?</pre>
Dependencies	In the ACP measurement, this control is grayed-out when <b>Meas Method</b> is set to <b>RBW</b> or <b>FAST</b> , and only Trace 1 is enabled
Preset	<b>TRACe1</b>
State Saved	No
Range	Trace 1   Trace 2   Trace 3

## 3.6 Spurious Emissions Measurement

The Spurious Emissions measurement identifies and determines the power level of spurious emissions in certain frequency bands.

### Measurement Commands

The general functionality of "CONFigure" on page 2997, "INITiate" on page 2998, "FETCh" on page 2998, "MEASure" on page 3000, and "READ" on page 2999 are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

Note that, in general, `:CONF: <Measurement>` resets the specified measurement settings to their defaults. X-Series permits the addition of the `NDEFault` node to the command, which prevents a measurement preset after a measurement switch.

The tables below list measurement commands for this measurement.

Command	Function
<code>:INITiate:SPURious</code>	Initiates a trigger cycle for the <code>SPUR</code> measurement, but does not return any data. You must then use <code>:FETC:SPUR[n]?</code> to retrieve data
<code>:CONFigure?</code>	Does not change any measurement settings
<code>:CONFigure:SPURious</code>	Returns the long form name of current measurement, in this case, <code>SPURious</code>
<code>:CONFigure:SPURious</code>	Selects <code>SPUR</code> measurement with Meas Setup settings in preset state – same as "Meas Preset" on page 1096
<code>:CONFigure:SPURious:NDEFault</code>	Selects <code>SPUR</code> measurement <i>without</i> affecting settings

The following queries are used to retrieve data. The type of data returned depends on the value of `n`.

Command	Function
<code>:FETCh:SPURious[n]?</code>	Retrieves the data defined by <code>n</code>
<code>:MEASure:SPURious[n]?</code>	Switches to <code>SPUR</code> measurement, restores default values, starts the measurement, then retrieves the data defined by <code>n</code>
<code>:READ:SPURious[n]?</code>	Starts the measurement, then retrieves the data defined by <code>n</code>

### Remote Command Results

The following table describes the results returned by the `:FETCh`, `:MEASure`, and `:READ` queries listed above, according to the index value `n`. Note that these queries are *not* available when viewing the Range Table.

The value of the constant `SCPI_NAN`, mentioned below, is 9.91E37.

3 LTE & LTE-A TDD Mode  
3.6 Spurious Emissions Measurement

n	Return Value
1 or omitted	<p>Returns a variable-length (1 + 6 * Spurs – up to 1201 entries) comma-separated list containing detailed information in the following format:</p> <p>Number of spurs in following list (Integer)</p> <p><i>[Repeat the following for each spur]</i></p> <ul style="list-style-type: none"> <li>- Spur #</li> <li>- Range # Spur was located (Integer)</li> <li>- Frequency of Spur (Hz, Float64)</li> <li>- Amplitude of Spur (dBm, Float32)</li> <li>- Absolute Limit (dBm, Float32)</li> <li>- Pass or Fail (1 0, Boolean)</li> </ul>
2 – 21 (Average Trace)	<p>Regardless of the Trace selection, returns a comma-separated list of the average trace data for the selected range (where range number = n – 1) using Detector 1. If selected range is not active, <b>SCPI_NAN</b> is returned for each trace data element</p>
22	<p>Returns the number of spurs found for the selected Measured Trace</p>
23 – 42 (Average Trace)	<p>Regardless of the Trace selection, returns a comma-separated list of the average trace data for the selected range (where range number = n – 22) using Detector 2. If selected range is not active or Detector 2 selection is off, <b>SCPI_NAN</b> is returned for each trace data element</p>
43 – 62 (Maximum Hold Trace)	<p>Regardless of the Trace selection, returns a comma-separated list of the maximum hold trace data for the selected range (where range number = n – 42) using Detector 1. If selected range is not active, <b>SCPI_NAN</b> is returned for each trace data element</p>
63 – 82 (Minimum Hold Trace)	<p>Regardless of the Trace selection, returns a comma-separated list of the minimum hold trace data for the selected range (where range number = n – 62) using Detector 1. If selected range is not active, <b>SCPI_NAN</b> is returned for each trace data element</p>
83-102	<p>Reserved</p>
103-122	<p>Reserved</p>
123-142 (Clear/Write Trace)	<p>Regardless of the Trace selection, returns a comma-separated list of the clear/write trace data for the selected range (where range number = n – 122) using Detector 1. If selected range is not active, <b>SCPI_NAN</b> is returned for each trace data element</p>
143-162 (Clear/Write Trace)	<p>Regardless of the Trace selection, returns a comma-separated list of the clear/write trace data for the selected range (where range number = n – 142) using Detector 2. If selected range is not active or Detector 2 selection is off, <b>SCPI_NAN</b> is returned for each trace data element</p>
163-182 (Trace 1)	<p>Returns a comma-separated list of the trace data of Trace 1 for the selected range (where range number = n – 162). If selected range is not active, <b>SCPI_NAN</b> is returned for each trace data element</p>
183-202 (Trace 2)	<p>Returns a comma-separated list of the trace data of Trace 2 for the selected range (where range number = n – 182). If selected range is not active, <b>SCPI_NAN</b> is returned for each trace data element</p>
203-222 (Trace 3)	<p>Returns a comma-separated list of the trace data of Trace 3 for the selected range (where range number = n – 202). If selected range is not active, <b>SCPI_NAN</b> is returned for each trace data element</p>
223	<p>Returns "Marker Table" on page 1000 data as a series of comma separated values in the following form:</p>

**n** **Return Value**

<Marker Number>, <Marker Trace>, <X>, <Y>, <Reserved>, <Reserved>

Only markers that are enabled are included. <Reserved> items are returned as SCPI\_NAN

The data is returned in the current sort order as displayed in the **Marker Table**

### 3.6.1 Views

This measurement has two predefined views:

#	Name	SCPI
1	"Graph + Metrics" on page 1046	RESult
2	"All Ranges" on page 1046	ALL

These are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change, depending on which window is selected.

Remote Command	:DISPlay:SPURious:VIEW[:SElect] RESult   ALL :DISPlay:SPURious:VIEW[:SElect]?
Example	:DISP:SPUR:VIEW RANG :DISP:SPUR:VIEW?
Preset	RESult
State Saved	No
Range	Graph + Metrics   All Ranges

#### 3.6.1.1 Graph + Metrics

Windows: "Graph" on page 997, "Table" on page 998

Select Graph + Metrics to view measurement results.

- The upper window displays a trace of the range that contains the currently selected spur
- The lower window displays a list of spurs detected in a measurement cycle. The currently selected spur, which is highlighted, can be changed by the Spur control in the Meas Setup menu

Example	:DISP:SPUR:VIEW RES
---------	---------------------

#### 3.6.1.2 All Ranges

Windows: "Graph" on page 997,

Select All Ranges to view measurement results for all the ranges.

- The upper window displays a merged trace of all the ranges
- The lower window displays a list of spurs detected in a measurement cycle. The currently selected spur, which is highlighted, can be changed by the Spur control in the Meas Setup menu

---

Example      `:DISP:SPUR:VIEW ALL`

## 3.6.2 Windows

The following windows are available in this measurement:

1. "Graph" on page 997
2. "Table" on page 998
3. "All Range Table" on page 999
4. "Gate" on page 1000
5. "Marker Table" on page 1000

The **Gate** Window is available only when "Gate View On/Off" on page 2915 is **ON** in **Gate Settings** under **Trigger**.


### 3.6.2.1 Graph

Window #1 & #3

Appears in several Views, as follows:

View	Size	Position
Graph + Metrics	Three fifth, full width	Top
All Ranges	Three fifth, full width	Top
Gate View	One third, full width	Middle

When Graph + Metrics is selected

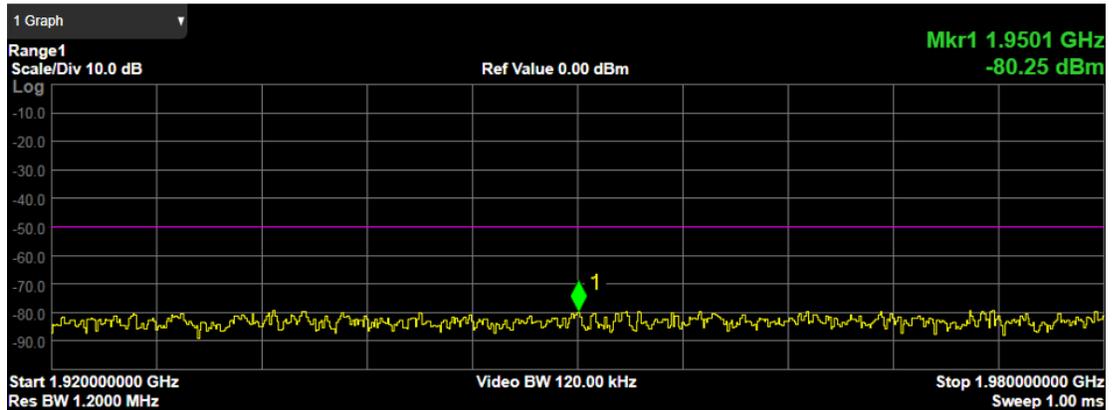

When All Ranges is selected



### 3.6.2.2 Table

Window #2

The spurs listed are within the current value of the Marker Peak Excursion setting of the absolute limit. All the spurs listed passed. Any spur that has failed the absolute limit has an 'F' beside it.

Result	Units	Min	Max
Spur	N/A	0	200
Range	N/A	1	20
Frequency	Hz	Analyzer Min	Analyzer Max
Amplitude	dBm	Analyzer Min	Analyzer Max
Limit	dBm	-200	50
$\Delta$ Limit	dBm	(Limit - Amplitude)	

Views in which the **Table** window appears:

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

View	Size	Position
Graph + Metrics	Two fifth, full width	Bottom
Gate View	One third, full width	Bottom

Spur	Range	Frequency	Amplitude	Limit	ΔLimit
1	1	1.966 GHz	-77.10 dBm	-50.00 dBm	-27.10 dB
2	1	1.946 GHz	-77.23 dBm	-50.00 dBm	-27.23 dB
3	1	1.935 GHz	-77.29 dBm	-50.00 dBm	-27.29 dB
4	1	1.950 GHz	-77.43 dBm	-50.00 dBm	-27.43 dB
5	1	1.958 GHz	-77.50 dBm	-50.00 dBm	-27.50 dB
6	1	1.973 GHz	-77.60 dBm	-50.00 dBm	-27.60 dB
7	1	1.948 GHz	-77.82 dBm	-50.00 dBm	-27.82 dB

Measure Trace

See "[Measure Trace](#)" on page 1155.

Trace Type

This is the trace type (and view/blank parameter) of a trace specified by Measure Trace.

### 3.6.2.3 All Range Table

Window #4

The spurs listed are within the current value of the Marker Peak Excursion setting of the absolute limit. All the spurs listed passed. Any spur that has failed the absolute limit displays 'F' beside it.

Result	Units	Min	Max
Spur	N/A	0	200
Range	N/A	1	20
Start Freq	See " <a href="#">Start Freq</a> " on page 1068 under Meas Setup		
Stop Freq	See " <a href="#">Stop Freq</a> " on page 1069 under Meas Setup		
RBW	See " <a href="#">Res BW</a> " on page 1070 under Meas Setup		
Frequency	Hz	Analyzer Min	Analyzer Max
Amplitude	dBm	Analyzer Min	Analyzer Max
Limit	dBm	-200	50
Δ Limit	dBm	(Limit - Amplitude)	

Views in which the **All Range Table** window appears:

View	Size	Position
All Ranges	Two fifth, full width	Bottom
Gate View	One third, full width	Bottom

4 All Range Table

								Measure Trace	Trace 1
								Trace Type	Trace Average (Active)
Spur	Range	Start Freq	Stop Freq	RBW	Frequency	Amplitude	ΔLimit		
1	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.965500000 GHz	-77.10 dBm	-27.10 dB		
2	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.945600000 GHz	-77.23 dBm	-27.23 dB		
3	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.934900000 GHz	-77.29 dBm	-27.29 dB		
4	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.949800000 GHz	-77.43 dBm	-27.43 dB		
5	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.958000000 GHz	-77.50 dBm	-27.50 dB		
6	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.972500000 GHz	-77.60 dBm	-27.60 dB		
7	1	1.9200 GHz	1.9800 GHz	1.200 MHz	1.947600000 GHz	-77.82 dBm	-27.82 dB		

### 3.6.2.4 Gate

Window #5

Turning on "[Gate View On/Off](#)" on [page 2915](#) displays the **Gate** Window, which allows you to see your gating signal at the same time as the measured data.

Views in which the **Gate** window appears:

View	Size	Position
Gate View	One third, full width	Top

### 3.6.2.5 Marker Table

Window# 6

Displays a table containing detailed information about all the markers in the current measurement. It can be selected from the Data control on the Window Title. There is no specific view in which the **Marker Table** window turns on, it is on by demand.

## 3.6.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

### 3.6.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

## Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of the Ref Position function.

Remote Command	<code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:RLEVe1 &lt;real&gt;</code> <code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:RLEVe1?</code>
Example	<code>:DISP:SPUR:WIND:TRAC:Y:RLEV 10 dBm</code> <code>:DISP:SPUR:WIND:TRAC:Y:RLEV?</code>
Couplings	When "Auto Scaling" on page 1002 is ON (default), this value is automatically determined by the measurement result. When you set a value manually, <b>Auto Scaling</b> changes to OFF Attenuation is not coupled to "Ref Value" on page 1001
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-/+250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>[:SENSe]:SPURious:POWer[:RF]:LEVe1</code> <code>:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVe1</code>

## Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

**Scale/Div** also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if Scale/Div is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:PDIVision &lt;rel_ampl&gt;</code> <code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:SPUR:WIND:TRAC:Y:PDIV 10 dB</code> <code>:DISP:SPUR:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to "Scale Range" on page 1002 as follows $Scale/Div = Scale\ Range / 10$ (number of divisions) When "Auto Scaling" on page 1002 is ON, this value is automatically determined by the measurement result When you change a value, <b>Auto Scaling</b> automatically changes to OFF

Preset	Automatically calculated
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIvision</code>

## Scale Range

Sets the Y-Axis scale range.

Remote Command	Replace <meas> with the identifier for the current measurement <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALe]:RANGe &lt;rel_amp&gt;</code> <code>:DISPlay:&lt;meas&gt;:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:CHP:WIND:TRAC:Y:RANG 100</code> <code>:DISP:CHP:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to <b>Scale/Div</b> as follows <b>Scale Range</b> = <b>Scale/Div</b> * 10 (number of divisions) When you change this value, <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

## Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Preset	<b>TOP</b>
State Saved	Saved in instrument state
Range	Top   Center   Bottom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position

## Auto Scaling

Toggles **Auto Scaling** On or Off.

Remote Command	<code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0   1   OFF   ON</code>
Example	<code>:DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:COUPle?</code> <code>:DISP:SPUR:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:SPUR:WIND:TRAC:Y:COUP?</code>
Couplings	<p>When <b>Auto Scaling</b> is <b>ON</b>, and the <b>Restart</b> front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results</p> <p>When you change the value of "<b>Scale/Div</b>" on page 1001, "<b>Ref Value</b>" on page 1001 or "<b>Scale Range</b>" on page 1002, <b>Auto Scaling</b> automatically changes to <b>OFF</b></p> <p>When <b>Auto Scaling</b> is <b>OFF</b>, the measurement uses the current reference level settings</p> <p>When <b>Auto Scaling</b> is <b>ON</b>, the instrument automatically sets the reference level such that the absolute limit is positioned two divisions down from the top of the display. This is the most useful setting when searching for spurs. The algorithm used for determining the ref level is <math>\text{Ref Level} = \text{Absolute Limit} + (2 * \text{Scale/Div})</math>. All other reference level settings are left as the current base instrument settings</p>
Preset	1
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>
Backwards Compatibility SCPI	<code>[:SENSe]:SPURious:POWer[:RF]:RANGe:AUTO</code> <code>:DISPlay:SPURious:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle</code>

### 3.6.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See "[Dual-Attenuator Configurations](#)" on page 1004
- See "[Single-Attenuator Configuration](#)" on page 1004

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.


Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected

input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

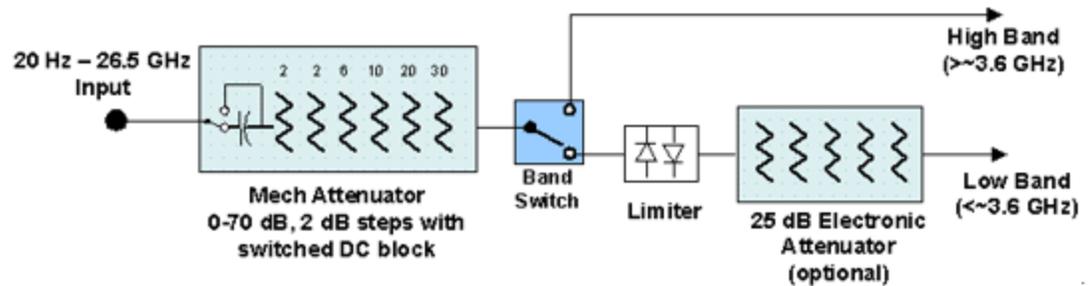


Configuration 2: Mechanical attenuator, no optional electronic attenuator

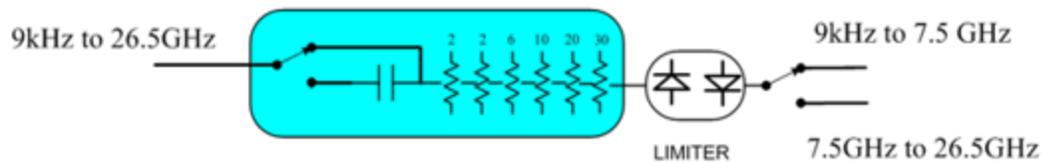

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

### Single-Attenuator Configuration

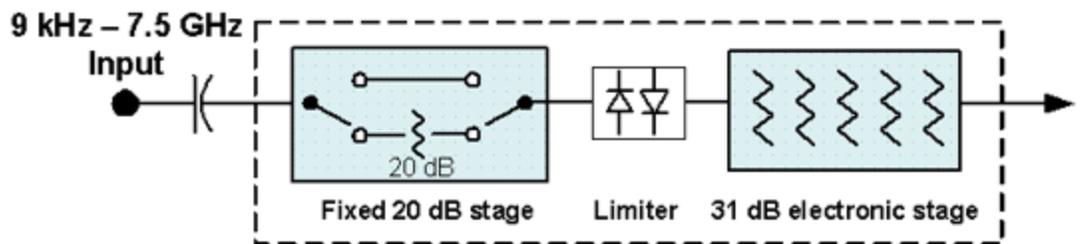

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

### Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_ampl&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and " <b>Mech Atten</b> " on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	When the <b>Input</b> is RF, and the <b>Input Port</b> is RF Input 2, and the Full Range Attenuator is installed:

On the Meas Bar, the field “Atten” displays as follows:

- If the sweep is entirely < 50 GHz, the value shown after “Atten:” is equal to Mech Atten + Elec Atten + Full Range Atten
- If the sweep is entirely > 50 GHz, the value shown after “Atten:” is equal to Full Range Atten
- If the sweep straddles 50 GHz, the value shown after “Atten:” is preceded by the symbol “>=” and is equal to Full Range Atten

In the **Amplitude**, **"Y Scale"** on page 2153 menu, and the Atten **Meas Bar** dropdown menu panel, a summary is displayed as follows:

“Total Atten below 50 GHz” followed by the value of Full Range Atten + Mech Atten + Elec Atten

“Total Atten above 50 GHz” followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **"Internal Preamp"** on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **"Attenuator Configurations and Auto/Man"** on page 1008

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation &lt;rel_amp&gt;</code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

**Auto/Man** is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in ["Elec Atten" on page 2164](#)

See ["Attenuator Configurations and Auto/Man" on page 1008](#) for more information on the **Auto/Man** functionality

Couplings	<p>If the RF Input Port is the RF Input:</p> <ul style="list-style-type: none"> <li>- If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>- Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>, <b>External Gain</b>, <b>Ref Level Offset</b>, <b>Max Mixer Level</b>, <b>μW Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of <a href="#">"Full Range Atten" on page 2160</a> from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul>
-----------	--

In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when **Mech Atten** is in **Auto**, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input

For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is  $\leq 7.5$  GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB

Preset	<p><b>Auto</b></p> <p>The Auto value is 10 dB</p>
--------	---

State Saved	Saved in instrument state
-------------	---------------------------

Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>
-----	---

Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB

Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p>
------------	---

---

For example:  
 Dual-Attenuator configuration:  
*Atten: 24 dB (e14)*  
 Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB  
 Single-Attenuator configuration:  
*A: 24 dB (e14)*  
 Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)  
 When in Manual, a # sign appears in front of Atten in the annotation

### Auto Function

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn <b>Auto Mech Atten</b> ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	<code>ON</code>

---

### Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 1006 (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about “soft” attenuation.

**NOTE**

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

---



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 1011](#)

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code> , and affects the total attenuation displayed on the <b>Attenuation</b>

control and the Meas Bar

The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If "**Internal Preamp**" on page 2183 is **ON** (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned

If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamp** is unavailable

If "**LNA**" on page 2185 is **ON**, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <b>Mechanical Attenuator Transition Rules</b> " on page 1011
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description

#### Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATE OFF   ON   0   1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATE?</code>
Example	<code>:POW:EATT:STAT ON</code>

---

:POW:EATT:STAT?

---

Preset      **OFF** (Disabled) for Swept SA measurement  
              **ON** (Enabled) for all other measurements that support the electronic attenuator

**NOTE**

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

---

### More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1012](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled

- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

### **Using the Electronic Attenuator: Pros and Cons**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the

electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

### Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 2168](#).

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

### Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 1015

Selection	SCPI	Note
Off	<b>OFF</b>	This is the default setting
On	<b>ON</b>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <b>COMBined</b>
Elec Atten Only	<b>ELECTrical</b>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<b>COMBined</b>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>
Notes	The parameter option <b>ELECTrical</b> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <b>COMBined</b> is mapped to <b>ELECTrical</b> in Single-Attenuator models. If you send <b>COMBined</b> , it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBined</b>
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " <a href="#">Elec Atten</a> " on page 2164 is <b>OFF</b> or grayed-out, " <a href="#">Pre-Adjust for Min Clipping</a> " on page 1014 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>
State Saved	Saved in instrument state

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

Range	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten
	Single-Attenuator models:	Off   On


Backwards Compatibility Command

Notes	<b>ON</b> aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) <b>OFF</b> aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0 [:SENSe]:POWer[:RF]:RANGe:AUTO?

**Adjustment Algorithm**

The algorithms for the adjustment are documented below:


### Single-Attenuator Models

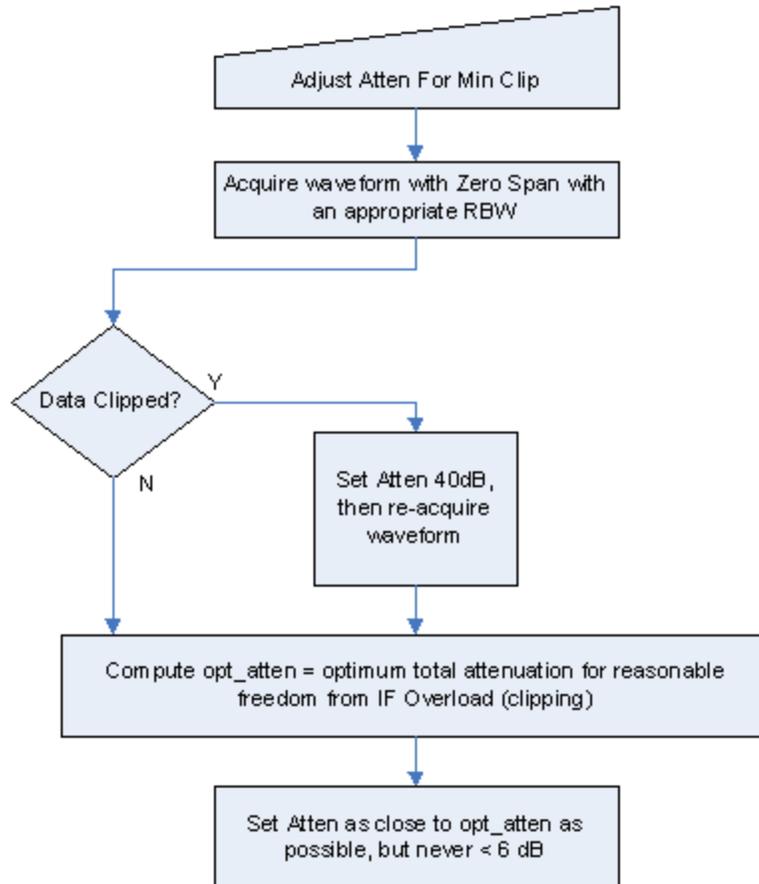

### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 1014 selection is Mech + Elec Atten:


3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

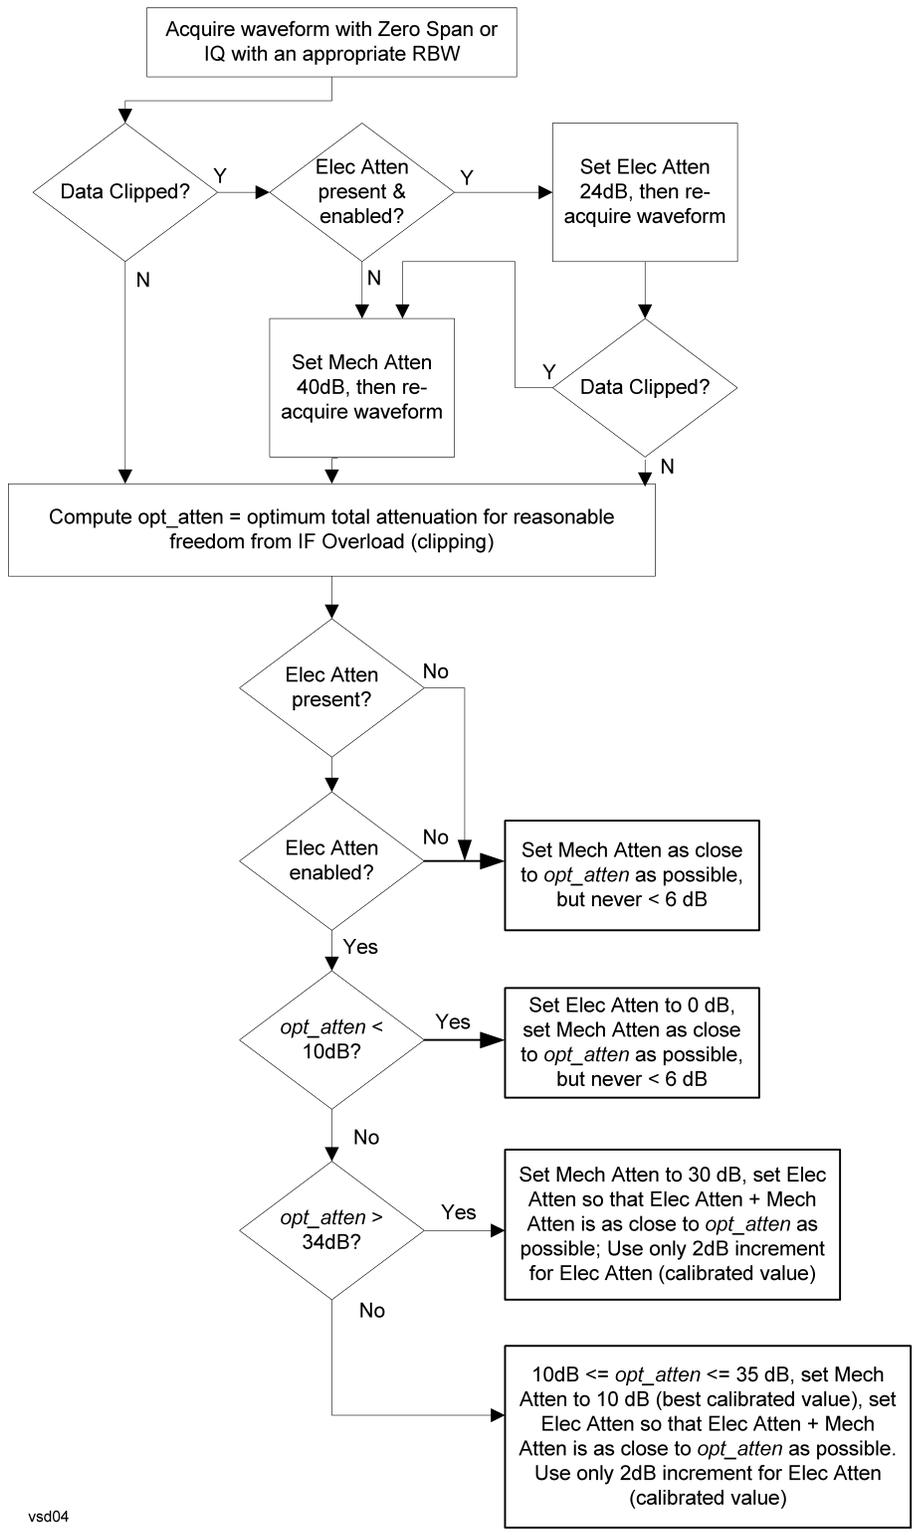

vsd04

"Pre-Adjust for Min Clipping" on page 1014 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

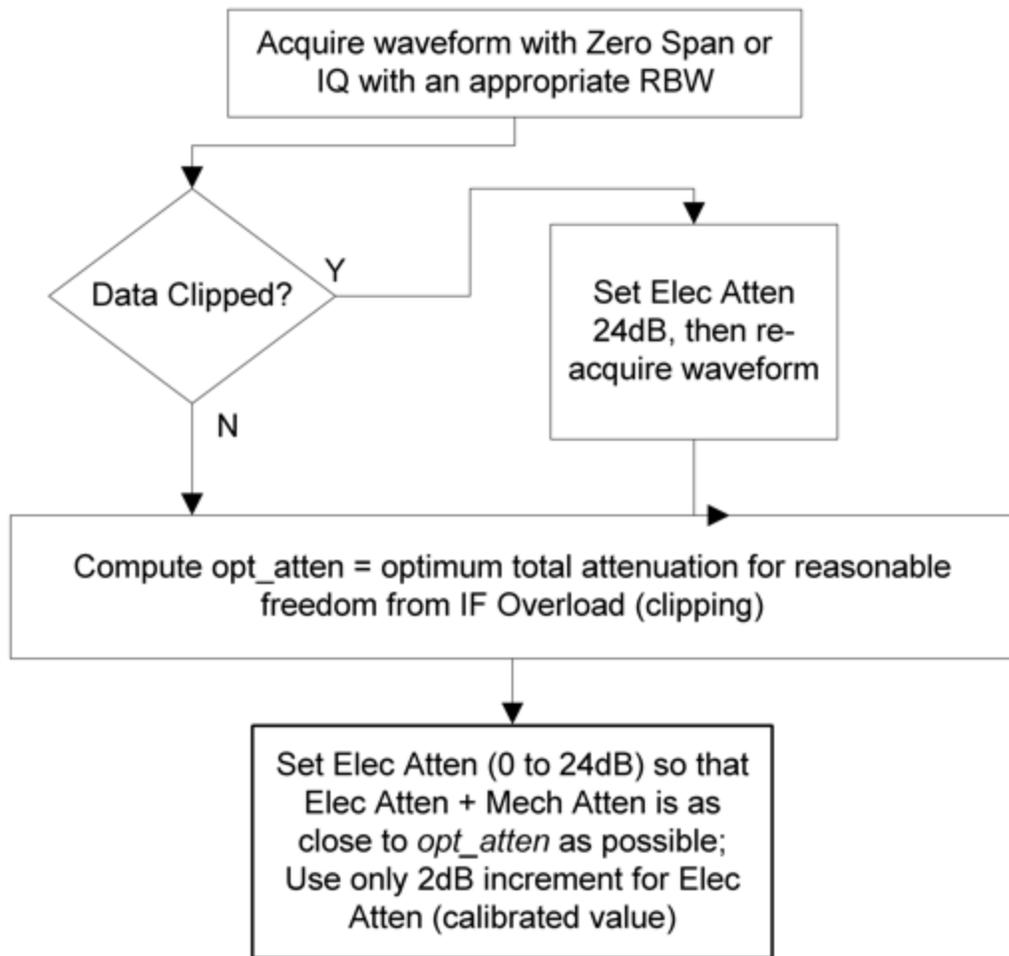

### Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

3 LTE & LTE-A TDD Mode  
3.6 Spurious Emissions Measurement

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.6.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

## Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

## Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

## Pre-Adjust for Min Clipping


If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

3 LTE & LTE-A TDD Mode  
3.6 Spurious Emissions Measurement

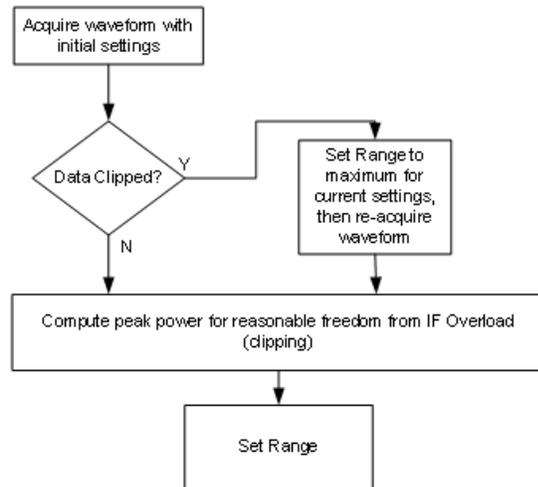

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.6.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because "[Software Preselection](#)" on page 2195 is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on "**Preselector Adjust**" on page 2182 changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in "**Proper Preselector Operation**" on page 1023.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in " <b>Preselector Adjust</b> " on page 2182
Status Bits/OPC dependencies	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

## Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "**Presel Center**" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram</b> View</li> </ul>
Preset	0 MHz

State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] :POWer [ :RF ] :MW :PADJust</code> <code>[ :SENSe ] :POWer [ :RF ] :MMW :PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe ] :POWer [ :RF ] :PADJust :PRESelector MWAVE   MMWave   EXTernal</code> <code>[ :SENSe ] :POWer [ :RF ] :PADJust :PRESelector?</code>

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

**NOTE**

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<code>LOW</code>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)

**Auto Function**

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<code>OFF</code>

**LNA**

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to "Internal Preamp" on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with "Internal Preamp" on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "More Information" on page 1027

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

## More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and Internal Preamp. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
µW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, Internal Preamp is switched off (even if you have its switch set to ON). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the Internal Preamp annotation displays in amber, to warn you that the actual state of Internal Preamp does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
µW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 1032
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 1034
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 1035

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "<b>Presel Center</b>" on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b></p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b>. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul> <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are grayed-out if the current measurement does not support them</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>IQ Analyzer</td> <td>MPB option present and licensed: <b>MPB</b></td> </tr> <tr> <td>Pulse</td> <td>MPB option not present and licensed: <b>STD</b></td> </tr> <tr> <td>RTSA</td> <td></td> </tr> <tr> <td>Avionics</td> <td></td> </tr> <tr> <td>All other Modes</td> <td><b>STD</b></td> </tr> <tr> <td>-</td> <td></td> </tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: <b>MPB</b>	Pulse	MPB option not present and licensed: <b>STD</b>	RTSA		Avionics		All other Modes	<b>STD</b>	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: <b>MPB</b>														
Pulse	MPB option not present and licensed: <b>STD</b>														
RTSA															
Avionics															
All other Modes	<b>STD</b>														
-															
State Saved	Save in instrument state														
Range	Standard Path   Low Noise Path Enable   μW Presel Bypass   Full Bypass Enable														

Annotation In the Meas Bar, if the Standard path is chosen:  
 $\mu$ W Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 $\mu$ W Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 $\mu$ W Path: LNP,On  
 If the preselector is bypassed:  
 $\mu$ W Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 $\mu$ W Path: FByp,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 $\mu$ W Path: FByp,On

### $\mu$ W Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to  $\mu$ W Path Control:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	$\mu$ W Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

Measurement	$\mu$ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is presel bypass if presel bypass is enabled, auto $\mu$ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

Measurement	$\mu$ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	
Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSE]:POWER[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSE]:POWER[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 1030 above
Preset	ON
Range	ON OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

### 3 LTE & LTE-A TDD Mode

#### 3.6 Spurious Emissions Measurement

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

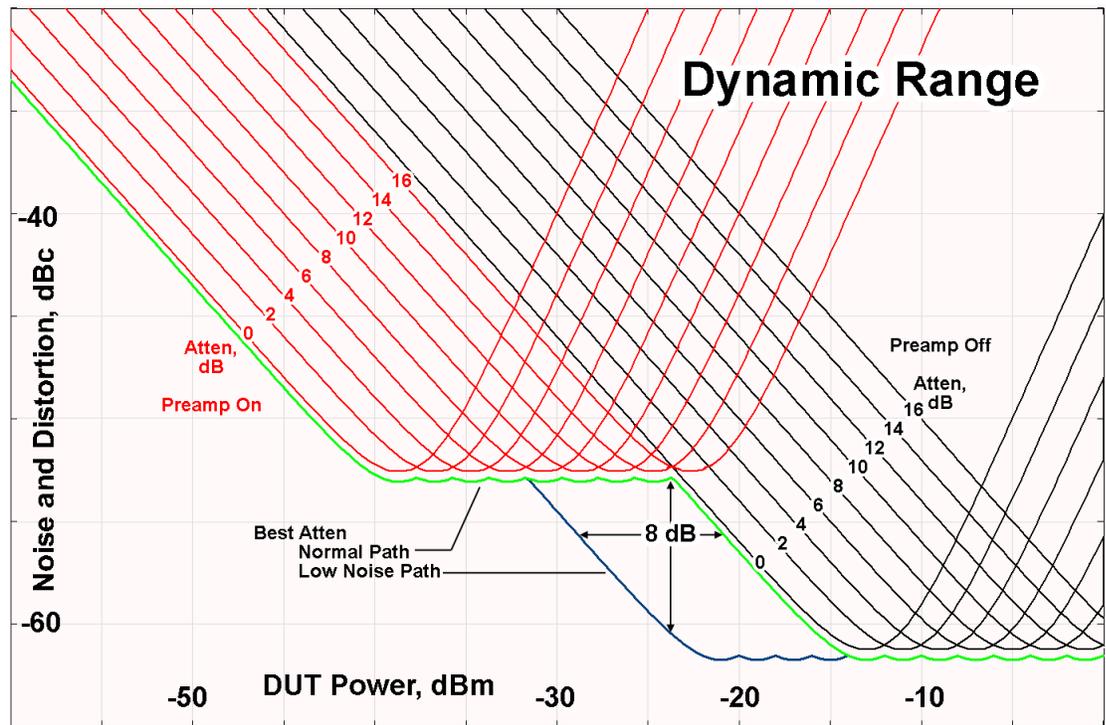

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **μW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

#### CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path ( <code>:POW:MW:PATH STD</code> ) The <b>OFF</b> parameter sets path <b>MPB</b> ( <code>:POW:MW:PATH MPB</code> )
Preset	<b>ON</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel:STATe 0   1   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel:STAT?</code>
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state
Preset	N9041B <b>OFF</b> N9042B+V3050A <b>ON</b> M9410A/11A <b>ON</b>
State Saved	Saved in instrument state

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel NORMa1   ADVanced</code> <code>[ :SENSe]:POWer[:RF]:SWPResel?</code>	
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	<b>ADVanced</b>
	N9042B+V3050A	<b>NORMa1</b>
State Saved	Saved in instrument state	

### SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from

wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPResel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <b>Prefilter Presets</b> " on page 1041 below
State Saved	Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

### 3.6.4 BW

There is no **BW** functionality in this measurement.

### 3.6.5 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, Measurement View or Window.

#### 3.6.5.1 Meas Display

Contains controls for setting up the display for the current Measurement, View, or Window.

## Center Frequency On/Off

Turns the display of **Center Frequency** on the **Meas Bar** On or Off.

Remote Command	<code>:DISPlay:SPURious:FREQuency:CENTer[:STATe] ON   OFF   1   0</code>
Command	<code>:DISPlay:SPURious:FREQuency:CENTer[:STATe]?</code>
Example	<code>:DISP:SPUR:FREQ:CENT ON</code> <code>:DISP:SPUR:FREQ:CENT?</code>
Preset	<code>ON</code>
State Saved	Yes

### 3.6.5.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

## Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code>
Command	<code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<code>ON</code>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

## Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b>  This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

### Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state

### Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b>

	This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	:DISPlay:VIEW:ADVanced:SElect
Rename User View	:DISPlay:VIEW:ADVanced:REName
Delete User View	:DISPlay:VIEW:ADVanced:DELeTe
Create User View	:DISPlay:VIEW:ADVanced:NAME
Select Screen	:INSTrument:SCReen:SElect
Delete Screen	:INSTrument:SCReen:DELeTe
Delete All But This Screen	:INSTrument:SCReen:DELeTe:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISPlay:ENABle OFF   ON   0   1 :DISPlay:ENABle?
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON, but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON Set by :SYST:DEF MISC, but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABle as it did in legacy analyzers

### 3.6.5.3 View

Contains controls for selecting the current **View**, and for editing User Views.

#### Views

This measurement has two predefined views:

#	Name	SCPI
1	"Graph + Metrics" on page 1046	RESult
2	"All Ranges" on page 1046	ALL

These are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change, depending on which window is selected.

Remote Command	<code>:DISPlay:SPURious:VIEW[:SElect] RESult   ALL</code> <code>:DISPlay:SPURious:VIEW[:SElect]?</code>
Example	<code>:DISP:SPUR:VIEW RANG</code> <code>:DISP:SPUR:VIEW?</code>
Preset	<code>RESult</code>
State Saved	No
Range	Graph + Metrics   All Ranges

## Graph + Metrics

Windows: ["Graph" on page 997](#), ["Table" on page 998](#)

Select Graph + Metrics to view measurement results.

- The upper window displays a trace of the range that contains the currently selected spur
- The lower window displays a list of spurs detected in a measurement cycle. The currently selected spur, which is highlighted, can be changed by the Spur control in the Meas Setup menu

---

Example `:DISP:SPUR:VIEW RES`

## All Ranges

Windows: ["Graph" on page 997](#),

Select All Ranges to view measurement results for all the ranges.

- The upper window displays a merged trace of all the ranges
- The lower window displays a list of spurs detected in a measurement cycle. The currently selected spur, which is highlighted, can be changed by the Spur control in the Meas Setup menu

---

Example `:DISP:SPUR:VIEW ALL`

## User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect &lt;alphanumeric&gt;</code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOom</code>) with</p> <pre>:DISP:VIEW:ADV:SEL</pre> <p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name &lt;alphanumeric&gt; does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre>:DISPlay:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a "User View".

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME &lt;alphanumeric&gt;</code>
----------------	---

---

Example	<code>:DISP:VIEW:ADV:NAME "Baseband"</code> Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If <code>&lt;alphanumeric&gt;</code> name already exists as a View, the error message “-224, Illegal parameter value; View &lt;alphanumeric&gt; already exists” is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated</p>

---

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message “-224, Illegal parameter value; View &lt;alphanumeric&gt; already exists” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot rename a Predefined View” is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

---

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> is not present in the list of View names, the error message “-224, Illegal parameter value; View <code>&lt;alphanumeric&gt;</code> does not exist” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot delete a Predefined View” is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>

### Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

### View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

### View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:</p> <p><code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p>

---

No distinction is made between Predefined and User Views  
If you switch measurements with the display disabled (via `:DISP:ENAB OFF`), then query the list of available Views, the result is undefined

### User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example: <code>"Baseband,myView1,yourView1"</code></p> <p>If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a>), then query the list of available Views, the result is undefined</p>

## 3.6.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some settings in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by ["Meas Preset" on page 1096](#). For example, Center Frequency is the same for all measurements - it does not change as you change measurements.

### 3.6.6.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

#### Carrier Reference Frequency

Sets Carrier Reference Frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple **Center Frequency** parameter used in most measurements does not apply here. Instead, **Carrier Reference Frequency** is the key parameter.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- Number of Component Carriers is 1
- Center Freq Offset is 0 Hz
- Center Frequency mode is Auto

then **Center Frequency** is equivalent to **Carrier Reference Frequency**. When **Center Frequency** changes in such conditions, **Center Frequency** mode remains Auto, and **Carrier Reference Frequency** changes to the same value. The major purpose of this coupling is to maintain backwards compatibility with legacy LTE/LTE TDD, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

See "[More Information](#)" on page 1051

Remote Command	For LTE-A, 5G NR Modes: <code>[ :SENSe]:CCARrier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFerence?</code> For MSR Mode: <code>[ :SENSe]:CARRier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CARRier:REFerence?</code>
Example	For LTE-A, 5G NR Modes: <code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code> For MSR Mode: <code>:CARR:REF 2GHz</code> <code>:CARR:REF?</code>
Dependencies	Only available in LTE-A FDD/TDD, 5G NR and MSR Modes
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as <b>Center Frequency</b>

### More Information

In most applications, **Center Frequency** is generally where the carrier center is located, and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, the measurements are based on carrier center frequencies and bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here is only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers, or a range far away from the component carriers to see spurious. The **Center Frequency** in these three measurements has a different meaning, therefore it is a separate setting from **Carrier Reference Frequency**.

Carrier center frequencies are defined using offsets from **Carrier Reference Frequency**, which determine absolute frequency locations, and which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in those three measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the Frequency menu of these measurements.

### 3.6.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is set to Normal and placed it at the center of the screen on the trace determined by the **Marker Trace** rules.

#### 3.6.7.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a **Peak Search**, etc.

The **Select Marker** control appears above the menu panel, indicating that it applies to all controls in the Marker menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, Counter).

On any menu tab that displays **Select Marker**, the first control is always **Marker Frequency | Time**.

Notes	The selected marker is remembered even when not in the <b>Marker</b> menu and is used if a Search is done, or a Band Function is turned on, or for Signal Track, or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for <b>Normal</b> and <b>Delta</b> markers

### 3.6.7.2 Settings

The controls on this tab include the **Marker** active function and a radio button selection for the marker control mode (**Normal**, **Delta**, or **Off**) for the selected marker, as well as additional functions that help you use markers.

#### Marker Frequency

Sets the marker X-Axis value in the current marker X-Axis Scale unit. It has no effect if the control mode is **OFF**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** (**POSition**) or **DELTA**.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:X &lt;freq&gt;</code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:SPUR:MARK2:X 25 kHz</code> <code>:CALC:SPUR:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker's reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and Inverse Time, seconds for Period and Time
Preset	After a preset, all markers are turned <b>OFF</b> , so Marker X-Axis Value query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

#### Marker X Axis Position (Remote Command Only)

Sets the marker X-Axis Scale position in trace points. This setting has no effect if the control mode is **Off**, but is the SCPI equivalent of entering a value if the control mode is **Normal** or **Delta** - except in trace points rather than X-Axis Scale units. The entered value is immediately translated into the current X-Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:X:POSition &lt;real&gt;</code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:X:POSition?</code>
Example	<code>:CALC:SPUR:MARK10:X:POS 300</code> <code>:CALC:SPUR:MARK10:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to

	trace points . When a Marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is <b>OFF</b> , the response is Not A Number
Preset	After a preset, all markers are turned <b>OFF</b> , so Marker X-Axis Value query returns Not A Number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min/Max	-/+9.9E+37

### Marker Y Axis Value (Remote Query only)

Returns the marker Y Axis value in the current marker Y Axis unit.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:SPUR:MARK11:Y?</code>
Notes	<p>Returns the marker Y-Axis result, if the control mode is <b>Normal</b> or <b>Delta</b>. If the marker is <b>OFF</b>, the response is Not A Number</p> <p>In the Complex Spectrum measurement, when the marker is on and Marker Trace is set to IQ, it returns I and Q values</p> <p>Case #1 - MarkerTrace SPEC, I or Q: returns a single double value</p> <ul style="list-style-type: none"> <li>- <code>&gt;:CALC:SPEC:MARK1:Y?</code></li> <li>- <code>-2.402406506109E+001</code></li> </ul> <p>Case #2 - MarkerTrace IQ: returns a double array of two values, the first is I, and the second is Q</p> <ul style="list-style-type: none"> <li>- <code>&gt;:CALC: SPEC:MARK1:Y?</code></li> <li>- <code>-3.006944493834E-003,+9.9870666467354E-004</code></li> </ul> <p>The IQ selection is for backward compatibility purposes. It is recommended that the users use the I and/or Q selection instead</p>
Preset	Result dependent on Marker setup and signal source
State Saved	No
Backwards Compatibility SCPI	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:FUNCtion:RESult?</code>

### Marker Mode

Sets the marker control mode to **POSition** (**Normal**), **DELta**, or **OFF**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **POSition** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:MODE POSition   DELTa   OFF</code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:SPUR:MARK:MODE POS</code> <code>:CALC:SPUR:MARK:MODE?</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>POSITION DELTA OFF</b>
Annotation	Mkr # <X value> and <Marker value> upper right on graph When Marker Trace is Polar in WCDMA mode: Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

### Backwards Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1) puts it in **POSITION** mode and places it at the center of the screen.

Example	<code>:CALC:SPUR:MARK3:STAT 1</code> <code>:CALC:SPUR:MARK3:STAT?</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>OFF ON</b>
Backwards Compatibility SCPI	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:STATe OFF   ON   0   1</code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:STATe?</code>

### Delta Marker (Reset Delta)

Pressing this control has exactly the same effect as selecting **Delta** in "**Marker Mode**" **on page 1054**. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

### Marker Settings Diagram

Lets you configure the Marker system using a visual utility.

## All Markers Off

Turns off all markers.

Remote Command	:CALCulate:SPURious:MARKer:AOFF
Example	:CALC:SPUR:MARK:AOFF

## Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **OFF**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental x-axis units of the trace that marker is on), and the X-Axis value of the marker being moved (in the same fundamental X-Axis units).

This may result in markers going off screen.

Remote Command	:CALCulate:SPURious:MARKer:COUple[:STATe] ON   OFF   1   0
Example	:CALC:SPUR:MARK:COUP ON :CALC:SPUR:MARK:COUP?
Preset	OFF Preset by <b>Mode Preset</b> and <b>All Markers Off</b>
State Saved	Saved in instrument state

### 3.6.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

#### NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a peak search.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "[Marker Frequency](#)" on page 1053 on the **Settings** tab.

## Peak Search

Moves the selected marker to the trace point that has the maximum y-axis value for that marker's trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

---

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:MAXimum</code>
Example	<code>:CALC:SPUR:MARK2:MAX</code> <code>:SYST:ERR?</code> can be used to query the errors to determine if a peak is found. The message "No peak found" will be returned after an unsuccessful search
Notes	Sending this command selects the subopcoded marker In W-CDMA Mode, this command does not work when the selected marker is located on the polar trace. In this case, the command is ignored

## Next Peak

Moves the selected marker to the peak that is next lower in amplitude than the current marker value.

If the selected marker was **OFF**, then it is turned on as a **POSiTion** marker and a peak search is performed.

---

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:MAXimum:NEXT</code>
Example	<code>:CALC:SPUR:MARK2:MAX:NEXT</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

## Next Pk Right

Moves the selected marker to the nearest peak right of the current marker.

If the selected marker was **OFF**, then it is turned on as a **POSition** marker and a peak search is performed.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:MAXimum:RIGHT
Example	:CALC:SPUR:MARK2:MAX:RIGH
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Next Pk Left

Moves the selected marker to the nearest peak left of the current marker.

If the selected marker was **OFF**, then it is turned on as a **POSition** marker and a peak search is performed.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:MAXimum:LEFT
Example	:CALC:SPUR:MARK2:MAX:LEFT
State Saved	Not part of saved state

### Minimum Peak

Moves the selected marker to the minimum Y-Axis value on the current trace.

If the selected marker is **OFF**, it is turned **ON** before the minimum search is performed.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:MINimum
Example	:CALC:SPUR:MARK:MIN
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Pk-Pk Search

Finds and displays the amplitude and frequency differences between the highest and lowest y-axis value. It places the selected marker on the minimum value on its selected trace, and places that marker's reference marker on the peak of its selected trace.

This function turns on the reference marker and sets its mode to **Fixed** or **Normal** if it is not already on. (These markers may be on two different traces.)

If the selected marker is **OFF**, a **Delta** type marker is turned on and the peak-to-peak search is done. If the selected marker is on, but it is not a **Delta** marker, then it is

changed to delta, which turns on the reference marker if needed, and then it performs the peak-to-peak function.

Remote Command	:CALCulate:SPURious:MARKer[1] 2 ... 12:PTPeak
Example	:CALC:SPUR:MARK:PTP
Notes	Turns on the Marker D active function Sending this command selects the subopcoded marker
Dependencies	Pk-Pk Search is not available when <b>Coupled Markers</b> is <b>ON</b>
Couplings	The selected marker becomes a <b>Delta</b> marker if not already in <b>Delta</b> mode
State Saved	Not part of saved state

## Marker Delta

Pressing this control has the same effect as selecting **Delta** in "**Marker Mode**" on [page 1054](#) on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search, and change the marker's control mode to **Delta**, without having to access two separate menus.

### 3.6.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. It is the same as "[Marker Frequency](#)" on [page 1053](#) on the **Settings** tab.

## Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. This attribute is set by the **Marker, Properties, Relative To** control. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

---

Remote	:CALCulate:SPURious:MARKer[1] 2 ... 12:REference <integer>
--------	--

Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:REFerence?</code>
Example	<code>:CALC:SPUR:MARK3:REF 5</code> <code>:CALC:SPUR:MARK:REF?</code>
Notes	This command causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself, so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried a single value is returned (the specified marker numbers relative marker)
Couplings	If the reference marker is off it is turned on in <b>Normal</b> mode at the delta marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using <b>Restore Mode Defaults</b> . This is not reset by <b>Marker Off</b> , <b>All Markers Off</b> , or <b>Preset</b>
State Saved	Saved in instrument state. Not affected by <b>Markers Off</b> , hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a <b>Delta</b> marker

## Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become **Normal** markers.

Specifying a **Marker Trace** manually or with this command associates the marker with the specified trace. If the marker is not **OFF**, it moves the marker from the trace it was on to the new trace. If the marker is **OFF**, it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:SPURious:MARKer[1] 2 ... 12:TRACe:ATTached TRACe1   TRACe2   TRACe3</code> <code>:CALCulate:SPURious:MARKer[1] 2 ... 12:TRACe:ATTached?</code>
Example	<code>:CALC:SPUR:MARK2:TRAC:ATT TRAC2</code> <code>:CALC:SPUR:MARK2:TRAC:ATT?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of <b>Marker Trace</b> is not affected by <b>"Auto Couple" on page 2242</b>

	Sending the remote command causes the addressed marker to become selected
Preset	TRACe1
State Saved	Saved in instrument state
Range	TRACe1   TRACe2   TRACe3

### Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility. It is the same as "[Marker Settings Diagram](#)" on page 1055 under **Settings**.

## 3.6.8 Meas Setup

Contains functions for setting up the measurement parameters, and for setting up parameters global to all measurements in the Mode.

### 3.6.8.1 Settings

Contains frequently-used **Meas Setup** functions, to which you will want the fastest access.

### Avg/Hold Num

Specifies the number of measurement averages used to calculate the measurement result. The average is displayed at the end of each sweep.

Remote Command	<code>[ :SENSe]:SPURious:AVERage:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:SPURious:AVERage:COUNT?</code>
Example	<code>:SPUR:AVER:COUN 2500</code> <code>:SPUR:AVER:COUN?</code>
Preset	10
State Saved	Saved in instrument state
Min/Max	1/10000

### Averaging On/Off

Turns Averaging on or off.

**NOTE**

In this measurement, the **Average Type** is preset to the **Log-Pwr Avg (Video)** method. Other averaging methods are not available.

Remote Command	<code>[ :SENSe]:SPURious:AVERage[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:SPURious:AVERage[:STATe]?</code>
Example	<code>:SPUR:AVER ON</code> <code>:SPUR:AVER?</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>ON OFF</code>

## Average Mode

Lets you set the Averaging Mode. Options are:

- **EXponential**: The measurement averaging continues using the specified number of averages to compute each averaged value. The average will be displayed at the end of each sweep
- **REPeat**: The measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[ :SENSe]:SPURious:AVERage:TCONtrol EXPonential   REPeat</code> <code>[ :SENSe]:SPURious:AVERage:TCONtrol?</code>
Example	<code>:SPUR:AVER:TCON REP</code> <code>:SPUR:AVER:TCON?</code>
Preset	<code>EXPonential</code>
State Saved	Saved in instrument state
Range	<code>EXPonential REPeat</code>

## Average Type

Enables you to control the way averaging is done by choosing one of the following averaging scales: Log-Power (Video) or Power (RMS).

There are three different averaging processes in the measurement, and all of them are affected by this setting: Trace Averaging, the Average detector, and VBW filtering.

Control Selection	SCPI	Type
Log-Pwr (Video)	<code>LOG</code>	Simulates the traditional spectrum analyzer type of averaging by averaging the log of the power
Power (RMS)	<code>RMS</code>	True power averaging that is equivalent to taking the RMS value of the voltage. This is the most accurate type of averaging

Remote Command	<code>[ :SENSe]:SPURious:AVERage:TYPE LOG   RMS</code> <code>[ :SENSe]:SPURious:AVERage:TYPE?</code>
Example	<code>:SPUR:AVER:TYPE LOG</code> <code>:SPUR:AVER:TYPE?</code>
Couplings	Sending this command will affect the VBW Average Type
Preset	<code>LOG</code>
State Saved	Yes
Range	Log-Pwr (Video)   Power (RMS)

## Meas Type

Selects either **EXAMine** or **FULL** measurement type. This parameter is coupled to "Average Mode" on page 1062. Therefore, if the **EXAMine** measurement type is selected, the measurement sets the Average Mode to exponential. If the **FULL** measurement type is selected, the measurement sets the Average Mode to repeat. The behavior of each measurement type is described in the table below. When averaging is on, trace averaging is used as each active range is measured. Averaging is not used at any other time.

Type	Single		Continuous	
	No Spurs Found	Spurs Found	No Spurs Found	Spurs Found
<b>EXAMine</b>	All active ranges are measured. On completion the measurement is set to the idle state and the 'No Spurs' happening is displayed	All active ranges are measured, and the spurs found reported. On completion the measurement is set to the idle state and the trace containing the worst spur restored. The spur control is enabled. A marker is also added which is set to the frequency of the worst spur	All active ranges are measured. On completion the SA remains set to last range checked with an active trace and the 'No Spurs' happening is displayed	All active ranges are measured, and the spurs found reported. On completion the SA is set to the range containing the worst spur found and continually sweeps this range. Note that the trace is continually updated but the metrics results aren't updated until restart to keep the initial results as references. Use

Type	Single		Continuous	
	No Spurs Found	Spurs Found	No Spurs Found	Spurs Found
				marker readouts to refer the latest results. The spur control is enabled. A marker is also added which is set to the frequency of the worst spur
<b>FULL</b>	All active ranges are measured. On completion measurement is set to idle state and the 'No Spurs' happening is displayed	All active ranges are measured, and spurs found reported. On completion the measurement is set to the idle state, displaying the trace of the last active range	Measurement continually cycles through all active ranges	All active ranges are measured, and spurs found reported. On each cycle of the active ranges the spurs found are reset. This ensures any remote queries retrieve the trace data that matches the currently displayed results

Remote Command	<code>[ :SENSe]:SPURious:TYPE EXAMine   FULL</code> <code>[ :SENSe]:SPURious:TYPE?</code>
Example	<code>:SPUR:TYPE FULL</code> <code>:SPUR:TYPE?</code>
Preset	<code>EXAMine</code>
State Saved	Saved in instrument state
Range	<code>EXAMine FULL</code>

## Spur

Displays any spurs found. Only enabled when the measurement type is set to **EXAMine**, and turns on upon completion of a measurement. Once the **Spur** control has been enabled, you can view any spur. The measurement sets the instrument to

the range in which the currently selected spur was found. The range settings only change if the spur selected is in a range that is different from the current range settings. A marker is used to identify the currently selected spur on the trace.

Remote Command	<code>[ :SENSe]:SPURious:SPUR &lt;integer&gt;</code> <code>[ :SENSe]:SPURious:SPUR?</code>
Example	<code>:SPUR:SPUR 55</code> <code>:SPUR:SPUR?</code>
Preset	1
State Saved	No
Min/Max	1/200

## Range

Selects the sweep range of the display trace. **Marker** operation, such as peak search is performed in the selected range.

For more details, see ["Range Settings" on page 1066](#).

Preset	1
State Saved	No
Min/Max	1/20

## Spur Report Mode

Selects the spurious report mode. Options are:

Limit Line Test	<b>LIMTest</b>	Report only spurs above the limit line. Any spurs reported will cause the measurement to fail. See Abs Start Limit for more information
All Spurs	<b>ALL</b>	Report all spurs detected by Peak Threshold and Peak Excursion
Minimum Margin	<b>MMARgin</b>	Report only the spur with the minimum margin from the limit line. For the spur above the limit, its margin is defined as the negative margin. If there are more than one spurs above the limit, only one spur with the largest negative margin is reported

Remote Command	<code>[ :SENSe]:SPURious:REPT:MODE ALL   LIMTest   MMARgin</code> <code>[ :SENSe]:SPURious:REPT:MODE?</code>
Example	<code>:SPUR:REPT:MODE LIMT</code> <code>:SPUR:REPT:MODE?</code>
Dependencies	<b>MMARgin</b> is available only when option N9060A-7FP is installed
Preset	<b>ALL</b>

State Saved	Saved in instrument state
Range	All Spurs   Limit Test   Minimum Margin

### Apply Carrier Config to Range Table

Sets offset and limit parameters under Range Table. The range frequency and limit values are determined by the carrier configuration parameters and Band Category.

Remote Command	<code>[ :SENSe]:SPURious:MCONdition:IMMediate</code>
Example	<code>:SPUR:MCON:IMM</code>
Dependencies	Only appears in the LTE-A FDD/TDD mode In 5G NR, this control is not supported

### Range Settings

This dialog enables you to set range parameters. As you change values, the instrument settings are updated with the new parameter values.

In SA Mode, and most other Modes, each **Range** is defined by its Start Freq and Stop Freq. The index tabs that appear on the left side of this dialog let you change different sets of **Range** parameters; the **Ranges** themselves (Start Freq and Stop Freq) are the same in each of these tabs. In some measurements, **Center Frequency** and **Span** are also shown, but these depend on the Start Freq and Stop Freq parameters for each **Range**.

In MSR Mode, each **Range** is defined by the parameters under the **Frequency** Index tab. The parameters for each **Range** are defined using the other index tabs, tied to the **Frequency** tab by the **Range** number, which appears in the leftmost column of each table.

Each **Range** has an **Enabled** checkbox, which lets you decide whether to use the **Range** or not. The checkbox state is the same for all tabs.

### Bandwidth

Lets you set RBW and VBW parameters for each range, as well as Filter Type. The **Bandwidth** tab appears in all Modes except MSR.

### Frequency Range

Allows you to switch the displayed **Frequency Range** columns. When **ALL** is selected, Start Frequency, Stop Frequency, Center Frequency, and Span are displayed.



State Saved	Yes
Range	ON OFF

## Start Freq

Sets the start frequency of the instrument. This parameter can send up to 20 values. The location where the start frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STARt &lt;freq&gt;, &lt;freq&gt;  [:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STARt?</pre>
Example	<pre>:SPUR:FREQ:STAR 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz,1.5 GHz  :SPUR:FREQ:STAR?</pre>
Preset	<pre>SA: +1.92000000E+009, +1.89350000E+009, +2.10000000E+009, +2.17500000E+009, +8.00000000E+008, +1.50000000E+009, +1.50000000E+009  WCDMA: 9kHz, 150kHz, 30MHz, 1GHz, 2.1GHz, 2.1GHz, 2.1774GHz, 2.18GHz, 1.5GHz, 1.5GHz  LTETDD, LTEATDD, 5G NR: 9 kHz, 150 kHz, 30 MHz, 1 GHz, 1.90GHz, 2.01 GHz, 2.025 GHz, 1.5 GHz  LTE, LTEAFDD: 9 kHz, 150 kHz, 30 MHz, 1 GHz, 1.92GHz, 1.98 GHz, 2.18 GHz, 1.5 GHz  WLAN: 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz  MSR: 9 kHz, 150 kHz, 30 MHz, 1 GHz, 1.92GHz, 1.98 GHz, 2.18 GHz, 1.5 GHz</pre>
State Saved	Saved in instrument state
Min/Max	-80 MHz/Hardware Dependent: - Option 503: 3699999990

- Option 508: 8499999990
- Option 513: 13799999990
- Option 526: 26999999990

## Stop Freq

Sets the stop frequency of the instrument. This parameter can send up to 20 values.

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>[ :SENSE]:SPURious[:RANGE][:LIST]:FREQUENCY:STOP &lt;freq&gt;, &lt;freq&gt;  [:SENSe]:SPURious[:RANGe][:LIST]:FREQUeNCY:STOP?</pre>
Example	<pre>:SPUR:FREQ:STOP 150kHz, 30MHz, 1GHz, 2.1GHz, 2.1GHz, 2.1774GHz, 2.18GHz, 12.75GHz, 2.5GHz, 2.5GHz  :SPUR:FREQ:STOP?</pre>
Preset	<p>SA Mode: +1.98000000E+009, +1.91960000E+009, +2.10150000E+009, +2.18000000E+009,        +1.00000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009,        +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009,        +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009,        +2.50000000E+009, +2.50000000E+009, +2.50000000E+009, +2.50000000E+009</p> <p>WCDMA Mode: 150kHz, 30MHz, 1GHz, 2.1GHz, 2.1GHz, 2.1774GHz, 2.18GHz, 12.75GHz, 2.5GHz,        2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz</p> <p>LTETDD, LTEATDD, 5G NR Modes: 150kHz, 30MHz, 1GHz, 1.90GHz, 2.01GHz, 2.025GHz, 12.75GHz,        2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz,        2.5GHz</p> <p>LTE, LTEAFDD Modes: 150kHz, 30MHz, 1GHz, 1.92GHz, 1.98GHz, 2.1GHz, 12.75GHz, 2.5GHz, 2.5GHz,        2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz</p> <p>WLAN Mode: 150kHz, 30 MHz, 1GHz, 12.75GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz, 2.5 GHz,        2.5 GHz, 2.5 GHz</p> <p>MSR Mode: 150kHz, 30MHz, 1GHz, 1.92GHz, 1.98GHz, 2.1GHz, 12.75GHz, 2.5GHz, 2.5GHz, 2.5GHz,        2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz, 2.5GHz</p>
State Saved	Yes
Min/Max	-79999990/Hardware Dependent: <ul style="list-style-type: none"> <li>- Option 503: 3.7 GHz</li> <li>- Option 508: 8.5 GHz</li> </ul>

- Option 513: 13.8 GHz
- Option 526: 27.0 GHz

## Span

Sets the span of the instrument. This parameter can send up to 20 values. The location where the span occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:SPAN &lt;freq&gt;, &lt;freq&gt;</code> <code>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:SPAN?</code>
Example	<code>:SPUR:FREQ:SPAN 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz, 1.5 GHz,1.5 GHz</code> <code>:SPUR:FREQ:SPAN?</code>
Preset	(Preset of Stop Freq) - (Preset of Start Freq)
State Saved	No
Min/Max	0Hz/Instrument maximum frequency + 80MHz

## Res BW

Sets the resolution bandwidth of the instrument. This parameter can send up to 20 values.

The location of where the resolution bandwidth occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. In other words, if you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution] &lt;freq&gt;, &lt;freq&gt;</code> <code>[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution]?</code>
----------------	--



LTEATDD, 5G NR Modes	ON, ON
WLAN Mode	OFF, OFF, OFF, OFF, ON, ON
MSR Mode	OFF, OFF, OFF, OFF, OFF, OFF, OFF, OFF, ON, ON
State Saved	Saved in instrument state
Backwards Compatibility SCPI	[ :SENSe]:SPURious[:RANGe][:LIST]:BWIDth[:RESolution]:AUTO

## Meas BW

Allows you to specify a multiplier of Res BW for the measurement integration bandwidth.

**Meas BW** is multiplier integer number. It shows a ratio between Integration BW and Resolution BW of the measurement result:

$$\text{Integ BW} = \text{Meas BW} * \text{Resolution BW}$$

Integration BW is desired resolution bandwidth and Resolution BW is actual bandwidth for sweep. Measurement sweeps with Resolution BW and **Meas BW** compensates sweep resolution bandwidth to Integration BW.

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, you must send all values up to 6. Subsequent values will remain as they were. The query always returns 20 values.

Remote Command	[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:IMULti <integer>, ... [ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:IMULti?
Example	:SPUR:BAND:IMUL 1,1,1,1,1,1 :SPUR:BAND:IMUL?
Notes	Comma-separated list of values
Preset	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
State Saved	Yes
Max	1000
Min/Max	1
Backwards Compatibility SCPI	[ :SENSe]:SPURious[:RANGe][:LIST]:BWIDth:IMULti

## Video BW

Sets the **Video BW** mode of the instrument. This can be Auto, where the instrument determines the optimum setting, or Manual, where you determine the setting. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[ :SENSE]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo &lt;freq&gt;, &lt;freq&gt;</code>
	<code>[ :SENSE]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo?</code>
Example	<code>:SPUR:BAND:VID 1kHz, 10kHz, 100kHz, 1MHz, 1MHz, 1MHz, 1MHz, 3MHz, 3MHz</code> <code>:SPUR:BAND:VID?</code>
Preset	SA, WCDMA, WLAN Modes: Automatically calculated LTE, LTEAFDD, MSR Modes: 4.7kHz, 47kHz, 470kHz, 5MHz, 470kHz, 5MHz, 5MHz, 300kHz, 300kHz LTETDD, LTEATDD Modes: 4.7kHz, 47kHz, 470kHz, 5MHz, 5MHz, 5MHz, 5MHz, 300kHz, 300kHz 5G NR Mode: 100 Hz, 1 kHz, 10 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 300 kHz
State Saved	Saved in instrument state
Min/Max	1 Hz/50 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:BWIDth:VIDeo</code>

### Auto Function

Remote Command	<code>[ :SENSE]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO OFF   ON   0   1, OFF   ON   0   1</code>
	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO?</code>
Example	<code>:SPUR:BAND:VID:AUTO ON, ON, OFF, OFF, OFF, ON, ON, ON, OFF, ON</code>





## Abs Start Freq

Sets the start frequency of the instrument. This parameter can send up to 20 values. The location where the start frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

This parameter is coupled with either Offset Start Freq or Offset Stop Freq. The coupling equations are shown in ["Enabled" on page 1074](#).

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STARt &lt;freq&gt;, &lt;freq&gt;</code> <code>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STARt?</code>
Example	<code>:SPUR:FREQ:STAR 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz</code> <code>:SPUR:FREQ:STAR?</code>
Preset	9 kHz, 150 kHz, 30 MHz, 1 GHz, 1.92GHz, 1.98 GHz, 2.18 GHz, 1.5 GHz
State Saved	Saved in instrument state
Min/Max	-80 MHz/Hardware Dependent <ul style="list-style-type: none"> <li>- Option 503: 3699999990</li> <li>- Option 508: 8499999990</li> <li>- Option 513: 13799999990</li> <li>- Option 526: 26999999990</li> </ul>

## Abs Stop Freq

Sets the stop frequency of the instrument. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with.

This parameter is coupled with either ["Offset Start Freq" on page 1077](#) or ["Offset Stop Freq" on page 1078](#). The coupling equations are shown in ["Enabled" on page 1074](#).

The location of where the stop frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STOP &lt;freq&gt;, &lt;freq&gt;</code>  <code>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STOP?</code>
Example	<code>:SPUR:FREQ:STOP 150kHz, 30MHz, 1GHz, 2.1GHz, 2.1GHz, 2.1774GHz, 2.18GHz, 12.75GHz, 2.5GHz, 2.5GHz</code>  <code>:SPUR:FREQ:STOP?</code>
Preset	150kHz, 30MHz, 1GHz, 1.92GHz, 1.98GHz, 2.1GHz, 12.75GHz, 2.5GHz, 2.5GHz
State Saved	Yes
Min/Max	-79999990/Hardware Dependent: <ul style="list-style-type: none"> <li>- Option 503: 3.7 GHz</li> <li>- Option 508: 8.5 GHz</li> <li>- Option 513: 13.8 GHz</li> <li>- Option 526: 27.0 GHz</li> </ul>

### Offset Start Freq

Sets the range frequency as offset from one of the operating band edges. This parameter can send up to 20 values. The location where the start frequency occurs in the list sent to the measurement corresponds to the range the value is associated with. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

This parameter is coupled with either ["Abs Start Freq" on page 1076](#) or ["Abs Stop Freq" on page 1076](#) using the coupling equations shown in ["Enabled" on page 1074](#).

This value is clipped to keep Abs Start/Stop Freq within the available frequency range. This clipping applies even when OB Start Freq, OB Stop Freq or Offset Side is changed.

Remote Command	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:OFFSet:FREQuency:START &lt;freq&gt;, &lt;freq&gt;</code>  <code>[ :SENSe]:SPURious[:RANGe][:LIST]:OFFSet:FREQuency:START?</code>
----------------	--





## Enabled

Same as Enabled under the **Bandwidth** index tab. See "[Enabled](#)" on page 1067.

## Start Freq

Same as the Start Freq column under the **Bandwidth** index tab. See "[Start Freq](#)" on page 1068.

## Stop Freq

Same as the Stop Freq column under the **Bandwidth** index tab. See "[Stop Freq](#)" on page 1069.

## Center Frequency

Sets the center frequency of the instrument. This parameter can send up to 20 values. The location where the center frequency occurs in the list sent to the measurement corresponds to the range the value is associated with.

When sending the remote command, missing values are not permitted. If you want to change values 2 and 6 you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQUency:CENTer &lt;freq&gt;, &lt;freq&gt;</code> <code>[ :SENSe]:SPURious[:RANGe][:LIST]:FREQUency:CENTer?</code>
Example	<code>:SPUR:FREQ:CENT 9 kHz, 150 kHz, 30 MHz, 1GHz, 1.5 GHz, 1.5 GHz</code> <code>:SPUR:FREQ:CENT?</code>
Preset	(Preset of Start Freq + Preset of Stop Freq)/2
State Saved	No
Min/Max	-79.999995 MHz/ Instrument maximum frequency – 5 Hz

## Span

Same as the Span column under the **Bandwidth** index tab. See "[Span](#)" on page 1070.





## Enabled

Same as the **Enabled** checkbox under the **Bandwidth** tab. See "[Enabled](#)" on page 1067.

## Res BW

Same as the **Enabled** checkbox under the **Bandwidth** tab. See "[Res BW](#)" on page 1070.

## Meas BW

Same as the Meas BW column under the **Bandwidth** tab. See "[Meas BW](#)" on page 1072.

## Video BW

Sets the **Video BW** mode of the instrument. This can be Auto, where the instrument determines the optimum setting, or Manual, where you determine the setting. This parameter can send up to 20 values. The location in the list sent corresponds to the range the value is associated with. When sending the remote command, missing values are not permitted; that is, if you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>[ :SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo &lt;freq&gt;, &lt;freq&gt;  [:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo?</pre>
Example	<pre>:SPUR:BAND:VID 1kHz, 10kHz, 100kHz, 1MHz, 1MHz, 1MHz, 1MHz, 3MHz, 3MHz  :SPUR:BAND:VID?</pre>
Preset	<p>SA, WCDMA, WLAN Modes: Automatically calculated</p> <p>LTE, LTEAFDD, MSR Modes: 4.7kHz, 47kHz, 470kHz, 5MHz, 470kHz, 5MHz, 5MHz, 300kHz, 300kHz</p> <p>LTETDD, LTEATDD Modes:</p> <p>4.7kHz, 47kHz, 470kHz, 5MHz, 5MHz, 5MHz, 5MHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz, 300kHz</p> <p>5G NR Mode:</p> <p>100 Hz, 1 kHz, 10 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 100 kHz, 300 kHz</p>





Remote Command	:DISP:SPURious:VIEW:RANGe:TABLE:FMODE ALL   SStop   CSPan :DISP:SPURious:VIEW:RANGe:TABLE:FMODE?
Example	:DISP:SPUR:VIEW:RANG:TABL:FMOD ALL :DISP:SPUR:VIEW:RANG:TABL:FMOD?
Preset	SStop
State Saved	Saved in instrument state
Range	All   Start/Stop Frequency   Center Frequency/Span

### Enabled

Same as the **Enabled** checkbox under the **Bandwidth** tab. See "[Enabled](#)" on page 1067.

### Start Freq

Same as the Start Freq column under the **Bandwidth** tab. See "[Start Freq](#)" on page 1068. This column does not appear in MSR mode.

### Stop Freq

Same as the Stop Freq column under the **Bandwidth** tab. See "[Stop Freq](#)" on page 1069. This column does not appear in MSR mode.

### Center Frequency

Same as the Center column under the **Bandwidth** index tab. See "[Center Frequency](#)" on page 1080.

### Span

Same as the Span column under the **Bandwidth** tab. See "[Span](#)" on page 1070. This column does not appear in MSR mode.

### Sweep Time

Sets the **Sweep Time** mode of the instrument. This can be **Auto**, where the instrument determines the optimum setting, or **Manual**, where you determine the setting.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. When sending the remote command, missing





3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

	<pre>   NEGative   NORMal   POSitive   SAMPlE   RMS, AVERage   NEGative   NORMal   POSitive   SAMPlE   RMS [:SENSe]:SPURious[:RANGe][:LIST]:DETector[1][:FUNction]? </pre>
Example	<pre> :SPUR:DET NORM, NORM :SPUR:DET? </pre>
Notes	For backwards compatibility, <b>NORMal</b> is available as a command parameter. However, this is treated the same as <b>RMS</b> internally, so the query never returns <b>NORMal</b>
Preset	POS, POS
State Saved	Saved in instrument state
Range	Normal   Average   Peak   Sample   Negative Peak

## Detector 2

Sets the detector to be used by the trace for display purposes only.

Remote Command	<pre> [:SENSe]:SPURious[:RANGe][:LIST]:DETector2[:FUNction] OFF   AVERage   NEGative   NORMal   POSitive   SAMPlE   RMS, OFF   AVERage   NEGative   NORMal   POSitive   SAMPlE   RMS, OFF   AVERage   NEGative   NORMal   POSitive   SAMPlE   RMS, OFF   AVERage   NEGative   NEGative   NORMal   POSitive   SAMPlE   RMS, OFF   AVERage   NEGative   NORMal   POSitive   SAMPlE   RMS [:SENSe]:SPURious[:RANGe][:LIST]:DETector2[:FUNction]? </pre>
Example	<pre> :SPUR:DET2 AVER, AVER </pre>

:SPUR:DET2?	
Notes	For backward compatibility, "NORMa1" is available as a SCPI command parameter. However, this is treated same as "RMS" internally, so the query never returns "NORMa1" as its results
Preset	OFF, OFF
State Saved	Saved in instrument state
Range	Off   Normal   Average   Peak   Sample   Negative Peak

## Limits

Lets you set Start and Stop Limits and Threshold values for each Range.

## Frequency Range

Same as **Frequency Range** under the **Bandwidth** tab. See "[Frequency Range](#)" on [page 1085](#). This control does not appear in MSR mode.

## Enabled

Same as the **Enabled** checkbox under the **Bandwidth** tab. See "[Enabled](#)" on [page 1067](#).

## Start Freq

Same as the Start Freq column under the **Bandwidth** tab. See "[Start Freq](#)" on [page 1068](#). This column does not appear in MSR.

## Stop Freq

Same as the Stop Freq column under the **Bandwidth** tab. See "[Stop Freq](#)" on [page 1069](#). This column does not appear in MSR.

## Center Frequency

Same as the Center column under the **Bandwidth** tab. See "[Center Frequency](#)" on [page 1080](#). This column does not appear in MSR mode.

## Span

Same as the Span column under the **Bandwidth** tab. See "[Span](#)" on page 1070. This column does not appear in MSR mode.

## Abs Start Limit

Determines the limit above which spurs will report a failing. If Abs Stop Limit Mode is set to **Auto**, this is coupled to **Abs Stop Limit** to make a flat limit line. If set to **Man**, Abs Start Limit and Abs Stop Limit can take different values to make a sloped limit line.

If the Limit Line Test parameter is off, then any spurs that are found to be above the current 'Peak Excursion' are added to the results table. From these spurs, the amplitude is checked using the abs limit start and abs limit stop parameters, then the limit is calculated. An 'F' is appended to the amplitude value of the spur if the measured amplitude is above the limit. If the Limit Line Test is on, only the spurs whose amplitudes exceed the limit are reported.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<pre>:CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA[:START] &lt;ampl&gt;, &lt;ampl&gt;  :CALCulate:SPURious[:RANGe][:LIST]:LIMit:ABSolute[:UPPer]:DATA[:START]?</pre>
Example	<pre>:CALC:SPUR:LIM:ABS:DATA 0,0  :CALC:SPUR:LIM:ABS:DATA?</pre>
Preset	<pre>SA Mode: -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001, - 5.00000000E+001, -5.00000000E+001, -5.00000000E+001, -5.00000000E+001  WCDMA Mode: -36dBm, -36dBm, -36dBm, -30dBm, -25dBm, -15dBm, -25dBm, -30dBm, -50dBm, - 50dBm, -50dBm, -50dBm  LTE, LTEAFDD, MSR Modes: -36dBm, -36dBm, -36dBm, -30dBm, -96dBm, -30dBm, -30dBm, - 50dBm, -50dBm, -50dBm  LTETDD, LTEATDD, 5G NR Modes: -36dBm, -36dBm, -36dBm, -30dBm, -30dBm, -30dBm, -30dBm, - 50dBm, -50dBm, -50dBm</pre>





	+6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000, +6.00000000E+000
State Saved	Saved in instrument state
Min/Max	0.0 dB/100.0 dB

## Pk Threshold

Sets the minimum amplitude of signals that can be identified as peaks. For example, if a value of -90 dBm is selected, only peaks that rise and fall more than the peak excursion value which are above -90 dBm are identified.

This parameter can send up to 20 values. The location in the list sent corresponds to the range of the associated value. When sending the remote command, missing values are not permitted. If you want to change values 2 and 6, then you must send all values up to 6. Subsequent values will remain as they were.

The query always returns 20 values.

Remote Command	<code>[ :SENSe]:SPURious[:RANGe][:LIST]:PEAK:THReshold &lt;real&gt;, &lt;real&gt;</code> <code>[ :SENSe]:SPURious[:RANGe][:LIST]:PEAK:THReshold?</code>
Example	<code>:SPUR:PEAK:THR 0,0,0</code> <code>:SPUR:PEAK:THR?</code>
Preset	-9.00000000E+001, -9.00000000E+001
State Saved	Saved in instrument state
Min/Max	-200/0

## Meas Setup Summary Table

Lets you view and access many of the parameters in the Meas Setup menus on one screen.

## Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure

accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 1095 below.

Remote Command	:COUPl <sup>e</sup> ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL   NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** does *not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

## Measurement-Specific Details

### TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

#### **Harmonics (SA Mode only)**

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

### **Meas Preset**

Restores all measurement parameters to their default values.

---

Remote Command	<code>:CONFigure:SPURious</code>
----------------	----------------------------------

---

Example	<code>:CONF:SPUR</code>
---------	-------------------------

### **Fast Spurious Meas (Remote Command only)**

This command is the backward compatibility command for the Fast Spurious Measurement. Since this command is another representation of Spurious Report Mode, it is coupled with that command.

- When set to **ON**, only spurs above the limit line are reported. This is the same as Spurious Report Mode **LIMTest**

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

- When set to **OFF**, all detected spurs are reported. This is the same as Spurious Report Mode **ALL**

Remote Command	<code>[ :SENSe]:SPURious:FSMeas ON   OFF   1   0</code> <code>[ :SENSe]:SPURious:FSMeas?</code>
Example	<code>:SPUR:FSM ON</code> <code>:SPUR:FSM?</code>
Couplings	If <code>:SPUR:REPT:MODE</code> is <b>ALL</b> , this parameter is <b>OFF</b> If <code>:SPUR:REPT:MODE</code> is <b>LIMTest</b> , this parameter is <b>ON</b>
Preset	<b>OFF</b>
State Saved	Saved in instrument state

### 3.6.8.2 Radio

Contains controls to select link direction.

#### Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

Remote Command	<code>[ :SENSe]:RADio:STANdard:DIRection DLINK   ULINK</code> <code>[ :SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

## Interfering Signal Present

Sets whether interfering signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in ACP, SEM and Spurious Emissions.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:RADio:IMODulation:INTerference[:STATe]?</code>
Example	<code>:RAD:IMOD:INT 1</code> <code>:RAD:IMOD:INT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	Yes No

## Freq Offset from Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min/Max	0 Hz / 20.0 MHz

## Span

Sets the span of the interference signal for intermodulation tests.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min/Max	200 kHz / 20.0 MHz

## Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE NEGative   POSitive</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code> <code>:RAD:IMOD:INT:SIDE?</code>
Preset	POSitive
State Saved	Saved in instrument state

## Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- INNER – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- OUTER – The interfering signal exists at either of the outer regions

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:REGion INNER   OUTER</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	OUTer
State Saved	Saved in instrument state

### 3.6.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

## Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:

- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured


Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

## Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

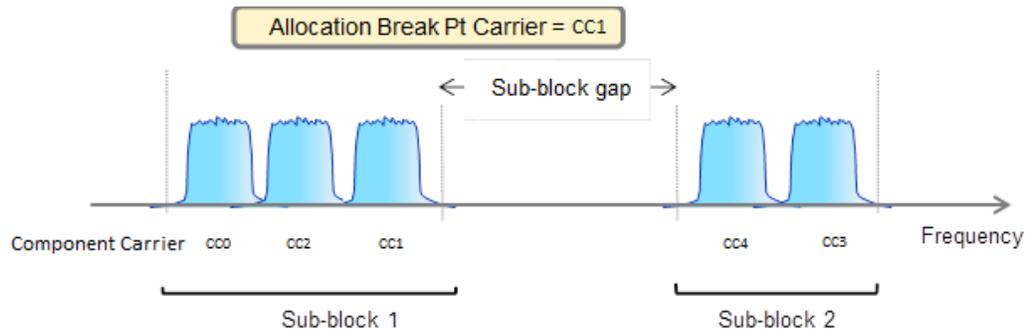

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0   ...   CC4</code> <code>[ :SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

### Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

### Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

### Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

### Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

## Non-Contiguous Break at

See "Non-Contiguous Break at" on page 2246.

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:BANdwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:CCARrier0 ... 4[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

### 3 LTE & LTE-A TDD Mode

#### 3.6 Spurious Emissions Measurement

Remote Command	<code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMal   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD)

	CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUUDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe ] : RADio : STANdard : ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe ] : CCARrier0   ...   4 : RADio : STANdard : DGPU CONF0   ...   CONF9</code> <code>[ :SENSe ] : CCARrier0   ...   4 : RADio : STANdard : DGPU?</code>
Example	<code>:CCAR0 : RAD : STAN : DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe ] : RADio : STANdard : DGPU</code>

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>																
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>																
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode																
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>CHP Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.4 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>3 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>10 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>15 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>20 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>200 kHz</td> </tr> </tbody> </table>	System Bandwidth	CHP Integ BW	1.4 MHz (B1M4)	1.4 MHz	3 MHz (B3M)	3 MHz	5 MHz (B5M)	5 MHz	10 MHz (B10M)	10 MHz	15 MHz (B15M)	15 MHz	20 MHz (B20M)	20 MHz	200 kHz(B200K)	200 kHz
System Bandwidth	CHP Integ BW																
1.4 MHz (B1M4)	1.4 MHz																
3 MHz (B3M)	3 MHz																
5 MHz (B5M)	5 MHz																
10 MHz (B10M)	10 MHz																
15 MHz (B15M)	15 MHz																
20 MHz (B20M)	20 MHz																
200 kHz(B200K)	200 kHz																
Preset	5 MHz																
State Saved	Saved in instrument state																
Min	100 kHz																
Max	20 MHz																
Backwards Compatibility SCPI	<code>[ :SENSe]:CHPower:BANDwidth:INTEgration</code> <code>[ :SENSe]:CHPower:BWIDth:INTEgration</code>																

## ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>

Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRUMENT:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS ACP Meas Noise BW</th> <th>MS ACP Meas Noise BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Yes																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:BANDwidth[:INTEgration]</code> <code>[ :SENSe]:ACPower:CARRier[1] 2:LIST:BWIDth[:INTEgration]</code>																								

## SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRUMENT:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

	<b>System Bandwidth</b>	<b>BTS SEM Integ BW</b>	<b>MS SEM Integ BW</b>
	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
	3 MHz (B3M)	2.715 MHz	2.7 MHz
	5 MHz (B5M)	4.515 MHz	4.5 MHz
	10 MHz (B10M)	9.015 MHz	9.0 MHz
	15 MHz (B15M)	13.515 MHz	13.5 MHz
	20 MHz (B20M)	18.015 MHz	18.0 MHz
	200 kHz(B200K)	180 kHz	180 kHz
Preset	4.515 MHz 4.5 MHz		
State Saved	Saved in instrument state		
Min	100 kHz		
Max	20 MHz		
Backwards Compatibility SCPI	[:SENSe]:SEMAsk:BAWdth[1] 2:INtegration		

### Carrier Config Presets

Lets you configure the Component Carrier presets.

### Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	[:SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3 [:SENSe]:CCARrier:CONFig?
Example	:CCAR:CONF ETC1 :CCAR:CONF?
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

### Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

### Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELT -200kHz</code> <code>:CCAR:CONF:SPAC:DELT?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

### ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code>

3 LTE & LTE-A TDD Mode  
3.6 Spurious Emissions Measurement

	<code>:CCAR:CONF:ETC1:CMAX?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth?</code>
Example	<code>:CCAR:CONF:ETC1:BAND B5M</code> <code>:CCAR:CONF:ETC1:BAND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

## Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

## Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative – Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive – Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG</code> <code>:CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

## Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

3 LTE & LTE-A TDD Mode  
3.6 Spurious Emissions Measurement

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M</code> <code>:CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC3:BANDwidth?</code>
Example	<code>:CCAR:CONF:ETC3:BAND B5M</code> <code>:CCAR:CONF:ETC3:BAND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

#### 3.6.8.4 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF

- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

## System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command RAD:STAN:PRES B5M or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote Command	<code>[ :SENSe ] :RADio :STANdard :PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe ] :RADio :STANdard :PRESet :ULDL CONF0   ...   CONF6</code> <code>[ :SENSe ] :RADio :STANdard :PRESet :ULDL ?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU)

3 LTE & LTE-A TDD Mode  
3.6 Spurious Emissions Measurement

	CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUDDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

### Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSE]:RADIO:STANDARD:PRESET:DGPU CONF0   ...   CONF9</code> <code>[ :SENSE]:RADIO:STANDARD:PRESET:DGPU?</code>
Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

## Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[[:SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19 [:SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

## Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[[:SENSe]:RADio:MINTerval &lt;integer&gt; [:SENSe]:RADio:MINTerval</code>
Example	<code>:RAD:MINT 1</code>
Notes	The backwards compatible command <code>[[:SENSe]:PVTime:MINTerval]</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel

3 LTE & LTE-A TDD Mode  
3.6 Spurious Emissions Measurement

For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH:

Meas NPRACH	Meas Interval
Preamble0	3 slots
Preamble1	4 slots

Preset	1
State Saved	Yes
Min	1
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise
Backwards Compatibility SCPI	LTE: [:SENSE]:PVTime:MINInterval

## CP Length

Specifies whether the cyclic prefix is configured as NORMAl or EXTended for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	[:SENSE]:RADio:CPLength NORMAl   EXTended [:SENSE]:RADio:CPLength?
Example	:RAD:CPL NORM
Notes	The backwards compatible SCPI command [:SENSE]:PVTime:CPLength is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to "200 kHz (NB-IoT)" and Direction is "uplink"
Couplings	Set to NORMAl when System BW is set to "200 kHz (NB-IoT)"
Preset	NORMAl
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: [:SENSE]:PVTime:CPLength

## Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe]:RADio:MEASure?</code>
Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

## Reference Config

Specifies which component carrier's UL/DL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On/Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code> <code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.6.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

This tab does not appear in VXT.

## Noise Floor Extension

Allows you to turn on/configure the **Noise Floor Extension** (NFE) function. Some Modes (such as Spectrum Analyzer), support two states of NFE, Full and Adaptive.

The **ON** state (in Modes that do not support Adaptive NFE) matches the **FULL** state (in Modes that *do* support Adaptive NFE).

In **ON** or **FULL** NFE, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

In Adaptive NFE, there is not the same dramatic visual impact on the noise floor as there is in Full NFE. Adaptive NFE controls the amount of correction that is applied based on other instrument settings like RBW, averaging and sweep time. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement, such as settings that provide more averaging. The result is that when not much averaging is being performed, the signal displays more like the NFE-off case; and when lots of averaging is being performed, the signal displays more like the full-NFE case.

Adaptive NFE (in Modes that support it) is recommended for general-purpose use. For fully ATE (automatic test equipment) applications, where the distraction of a person using the instrument is not a risk, Full NFE is recommended.

NFE works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to Average or Peak). It works best with extreme amounts of smoothing, and with the average detector, with the Average Type set to Power.

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact in having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages. When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

NOTE

**Noise Floor Extension** has no effect unless the RF Input is selected, therefore it does nothing when **External Mixing** is selected.

In Modes that support Adaptive NFE, the default state of NFE is **Adaptive**. In Modes that do not support Adaptive NFE, the default state of NFE is **OFF**. Prior to the introduction of Adaptive NFE (firmware version A.18.00), the default state of NFE was **OFF** for all Modes.

---

With the introduction of Adaptive NFE, the menu control is changed from **On/Off** to **Full/Adaptive/Off**. For SCPI Backwards Compatibility, the existing SCPI command to turn NFE on and off was retained, and a new command was added to set the state to turn Adaptive On and Off

`[ :SENSe]:CORRection:NOISe:FLOor ON|OFF|1|0` is retained, default changed to On for modes which support Adaptive NFE

`[ :SENSe]:CORRection:NOISe:FLOor:ADAPtive ON|OFF|1|0` is added (for certain Modes), default=On

FULL = `:CORRection:NOISe:FLOor ON` plus  
`:CORRection:NOISe:FLOor:ADAPtive ON`

Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOor ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, but the SCPI command is accepted without error (but has no effect)
Couplings	If NFE is enabled in any Mode manually, a prompt is displayed reminding you to perform the Characterize Noise Floor operation if it is needed If NFE is enabled via SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by <b>Mode Preset</b> . Turned <b>ON</b> at startup and by <b>Restore Mode Defaults</b> in Modes that support Adaptive. Turned <b>OFF</b> at startup and by <b>Restore Mode Defaults</b> in Modes that do not support Adaptive
State Saved	No
Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOor:ADAPtive ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOor:ADAPtive?</code>
Example	First turn NFE on, this is Full mode <code>:CORR:NOIS:FLO ON</code> Then set it to Adaptive <code>:CORR:NOIS:FLO:ADAP ON</code>
Dependencies	Only available in Modes that support Adaptive NFE Only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, however the SCPI command is accepted without error, but has no effect
Couplings	Sending <code>:CORR:NOIS:FLO ON</code> turns NFE Adaptive <b>OFF</b> for backwards compatibility, so to turn Adaptive on, you must issue the commands in the proper order, as shown in the example above
Preset	Not affected by <b>Mode Preset</b> , but set to <b>ON</b> at startup and by <b>Restore Mode Defaults</b>
State Saved	No

### More Information

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

### 3 LTE & LTE-A TDD Mode

#### 3.6 Spurious Emissions Measurement

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is Average, and the Average Type is set to Power.

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise.

For best operation, the average detector and the power scale are recommended, as already stated. Peak detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals, so this combination is not recommended. Negative peak detection is not very useful, either. Sample detection works well, but is never better than the average detector because it doesn't smooth as well. The Normal detector is a combination of peak and negative peak behaviors, and works about as well as these.

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points will make the buckets longer.

For best operation, the power scale (Average Type = Power) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE, the NFE does an even better job than using the log scale ever could. Using NFE with the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of  $-174$  dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that is in excess of the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

Adaptive NFE provides an alternative to fully-on and -off NFE. Fully-on NFE can, notably in cases with little or no averaging of the spectrum, result in a display that is distractingly unfamiliar in the variability in response to low level signals. Fully-off NFE fails to achieve the potential improvement in dynamic range and associated accuracy of measurement of low-level signals. Adaptive NFE controls the degree of potential improvement in the noise floor to give more improvement for those instrument settings that can make good use of the potential improvement—those settings with high degrees of variance reduction through some variant of averaging. When the potential improvement is small, the display acts like the NFE-off case, and when it is high, it acts like the fully-on case, and in-between, application is a compromise between attractiveness and effectiveness.

On instruments with the NF2 license installed, the calibrated Noise Floor used by Noise Floor Extensions should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, and once every calendar year. The control to perform this is located in the **System, Alignments, Advanced** menu. If you have not done this yourself at the recommended interval, then when you turn on Noise Floor Extensions, the instrument will prompt you to do so with a dialog that says:

“This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week”

If you Cancel, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

### 3.6.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "**Global Center Freq**" on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

### Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support

global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:CENTer ALL   NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE
Preset	OFF
Backwards Compatibility SCPI	:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF :GLOBal:FREQuency:CENTer[:STATe]?

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:EMC:STANdard ALL   NONE :INSTrument:COUPle:EMC:STANdard?
----------------	--

Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL   NONE</b>

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF</code> <code>:INSTrument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	<b>ON   OFF</b>

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTrument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

### 3.6.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

#### 3.6.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

#### Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 1124

Remote Command	<code>:INITiate:CONTinuous OFF   ON   0   1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into <b>Single</b> measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code>  Put instrument into <b>Continuous</b> measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	<b>ON</b>  Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to <b>ON</b> , but <code>*RST</code> sets <code>:INIT:CONT</code> to <b>OFF</b>
State Saved	Saved in instrument state
Annunciation	The <b>Single/Continuous</b> icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> <li>- A line with an arrow is <b>Single</b></li> <li>- A loop with an arrow is <b>Continuous</b></li> </ul>
Backwards Compatibility Notes	X-Series A-models had <b>Single</b> and <b>Cont</b> hardkeys in place of the <b>SweepSingleCont</b> softkey. In the X-Series A-models, if in single measurement, the <b>Cont</b> hardkey (and <code>INIT:CONT ON</code> ) switched to continuous measurement, but never restarted a measurement and never reset a sweep  X-Series B-models have a <b>Cont/Single</b> toggle control instead of <b>Single</b> and <b>Cont</b> hardkeys, but it is still

true that, if in single measurement, the **Cont/Single** toggle control never restarts a measurement and never resets a sweep

### More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the <b>Average/Hold Num</b>, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used both before and after the <b>Average/Hold Num</b> is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>
Single Mode	<p>The instrument takes a single sweep when in <b>Single</b> mode, or if in average or Max/Min Hold, or if there is a <b>Waterfall</b> window displayed, it takes multiple sweeps until the average/hold count reaches the <b>Average/Hold Num</b>, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state

See "**Restart**" on page 2279 for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC: AVER: TCON UP**.

## Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending **:INIT: IMM**
- Sending **:INIT: REST**

See "[More Information](#)" on page 1126

Remote Command	<b>:INITiate[: IMMEDIATE]</b> <b>:INITiate: RESTart</b>
Example	<b>:INIT: IMM</b> <b>:INIT: REST</b>
Notes	<b>:INIT: REST</b> and <b>:INIT: IMM</b> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <b>STATUS: OPERation</b> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <b>STATUS: QUESTionable</b> register bit 9 ( <b>INTEgrity</b> sum) is cleared The <b>SWEEPING</b> bit is set The <b>MEASURING</b> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the <b>Restart</b> hardkey and the <b>:INIT: REST</b> command restarted trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> In X-Series, the <b>Restart</b> hardkey and the <b>:INIT: REST</b> command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count  $k$  equals the number  $N$  set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command `:CALC:AVER:TCON UP`.

## Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in

application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
<b>Clear/Write</b> pressed (even if already in Clear/Write)	Set to mintracevalue
<b>Max Hold</b> pressed (even if already in Max Hold)	Set to mintracevalue
<b>Min Hold</b> pressed (even if already in Min Hold)	Set to maxtracevalue
<b>Trace Average</b> pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
<b>Restart</b> pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

### Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count  $k$  to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

### Averaging

The weighting factor used for averaging is  $k$ . This  $k$  is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This  $k$  is used for comparisons with  $N$ , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold,  $K$ , shows the count for the sweep (data acquisition) in progress.  $K = k + 1$ , with a limit of  $N$ . The displayed value  $K$  changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

### Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

---

Remote Command    :INITiate:PAUSE  
                       :INITiate:RESume

Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

### Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when `:ABORT` is sent, the alignment finishes *before* the abort function is performed, so `:ABORT` does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an `:INIT:IMM` command is received.

Remote Command	<code>:ABORT</code>
Example	<code>:ABOR</code>
Notes	If <code>:INIT:CONT</code> is <b>ON</b> , then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met If <code>:INIT:CONT</code> is <b>OFF</b> , then <code>:INIT:IMM</code> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, <code>:ABORT</code> is equivalent to the <b>Restart</b> key Not all measurements support this command
Status Bits/OPC dependencies	The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATUS:QUESTionable</code> register bit 9 ( <b>INTEGRITY</b> sum) is cleared Since all the bits that feed into OPC are cleared by <code>:ABORT</code> , the Abort command will cause the <code>*OPC</code> query to return true

### 3.6.9.2 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument, such as Sweep Rules.

#### Sweep Type

Sets the **Sweep Type** of the spurious measurement to either **Auto** or **Swept**.

When in **Auto**, the selections of swept type of ranges are governed by the Best Speed Sweep Type Rule, and FFT analysis might be chosen for some ranges if it speeds up the measurement.

Remote Command	<code>[ :SENSe]:SPURious[:RANGe]:ALL:SWEep:TYPE:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:SPURious[:RANGe]:ALL:SWEep:TYPE:AUTO?</code>
Example	<code>:SPUR:ALL:SWE:TYPE:AUTO 1</code> <code>:SPUR:ALL:SWE:TYPE:AUTO?</code>
Dependencies	Available only when Option N9060A-7FP is installed
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	Auto   Swept
Annotation	When in <b>Auto</b> , and the instrument is in FFT analysis, an indicator, “FFT” is displayed at the right bottom of range spectrum trace window

## Sweep Time Rules

Switches the instrument between **NORMa1** and **ACCuracy** sweep states.

Setting **Auto Sweep Time** to **Accy** (**ACCuracy**) results in slower sweep times, usually about three times as long, but yields better amplitude accuracy for CW signals. The instrument amplitude accuracy specifications only apply when **Auto Sweep Time** is set to **Accy**.

Additional amplitude errors which occur when **Auto Sweep Time** is set to **Norm** are usually well under 0.1 dB, though this is not guaranteed. Because of the faster sweep times and still low errors, **Norm** is the preferred setting of **Auto Sweep Time**. **Auto Sweep Time** is set to **Norm** on a **Preset**. This means that in the Preset state, instrument amplitude accuracy specifications do not apply.

Remote Command	<code>[ :SENSe]:SPURious:SWEep:TIME:AUTO:RULEs NORMa1   ACCuracy</code> <code>[ :SENSe]:SPURious:SWEep:TIME:AUTO:RULEs?</code>
Example	<code>:SPUR:SWE:TIME:AUTO:RUL ACC</code> <code>:SPUR:SWE:TIME:AUTO:RUL?</code>
Notes	This command is implemented as <code>[ :SENSe]:SPURious[:RANGe]</code> <code>[ :LIST]:SWEep:TIME:AUTO:RULEs</code> to avoid illegal SCPI node definition, so this command should be used as <code>[ :SENSe]:SPURious:SWEep:TIME:AUTO:RULEs</code>
Dependencies	Does not appear in SA Mode in VXT
Preset	<b>NORMa1</b>
State Saved	Saved in instrument state
Range	<b>NORMa1</b>   <b>ACCuracy</b>

### 3.6.10 Trace


Lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces.

The "Trace Control" on page 2136 tab of this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

A trace is a series of data points, each having an x and a y value. The x value is frequency (or time, in zero span) and the y value is amplitude. Each data point is referred to as a *trace point*. In any given trace, trace point 0 is the first point, and trace point (*sweep\_points* - 1) is the last. For example, in a 1001 point trace, the first point is 0 and the last is 1000. Another term sometimes used to describe traces is *bucket*. A bucket is the frequency span of a trace point, equal to the point spacing. For swept analysis, the y value in each bucket is measured while the instrument is sweeping across the bucket. The selected detector determines how it is measured.

When in **Single** Mode, Measurements and their Views save the trace data from the last acquisition. This is true on multiple screens. The marker and trace data will be present whenever the measurement is brought back into focus. The measurement switches for these measurements do not clear the traces, so the data will be present until the next acquisition is completed.

#### Invalid Data Indicator

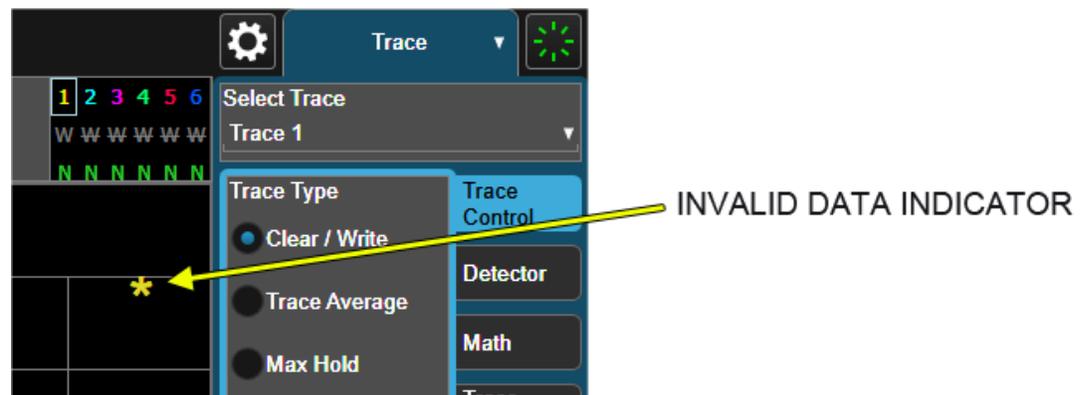

The Invalid Data Indicator is displayed whenever the data on the display does not match the settings of the instrument. The most common example of this is when instrument settings have changed in the time since the data in the traces on the display was taken. This means that the screen annotation cannot be guaranteed to match the trace data. For example, if you change **Center Frequency**, the Invalid Data Indicator will display until the trace has been retaken.

If any Trace is in View mode (displaying but not updating) and instrument settings are changed, the Invalid Data Indicator will display as long as that trace remains in View. Traces that are blanked do not turn on the Invalid Data Indicator.

Not all instrument settings require display of the invalid data indicator when they change; only changes that require a new acquisition will cause it to display. For example, changing the Y-Axis scale of the instrument does not cause the invalid data indicator to display, unless the attenuation changes.

The Invalid Data Indicator is also turned on:

- When the counter is turned on, until the completion of the first count
- When a trace is imported from mass storage and the trace's parameters do not match the current instrument settings
- When a trace is sent to the instrument from a remote interface (since there is no way to know if its settings match)


NOTE

**The Invalid Data Indicator has an associated status bit that can be checked at any time to determine whether the indicator is on.**

---

### Trace right-click menu


If you right-click on a trace (or touch and hold a trace and wait for the circle to close) you will see the Trace Right-Click Menu:

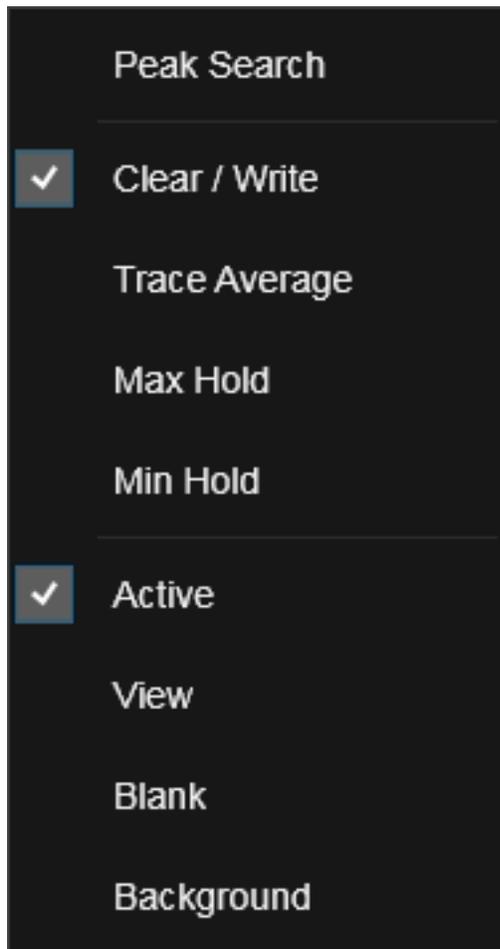

If you now tap or click on one of the items in this menu, the instrument will perform the corresponding function. **Peak Search** finds the highest peak on the selected Trace. **Clear/Write**, **Trace Average**, **Max Hold** and **Min Hold** set the "Trace Type" on [page 2137](#). **Active**, **View**, **Blank**, and **Background** set the "View/Blank" on [page 2142](#) type.

#### Waterfall Window

If you right-click on the trace (or touch and hold the trace and wait for the circle to close) in the **Waterfall** window (for example, in the Spectrogram View) you will see the Waterfall Trace Right-Click Menu:

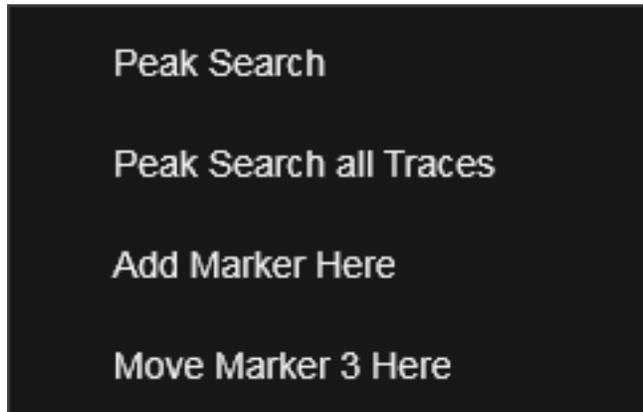


In this menu, **Peak Search** works as above. **Peak Search all Traces** finds the highest peak in the Waterfall window. **Add Marker Here** takes the lowest numbered Marker that is currently Off and turns it On as a **Normal** marker in the Waterfall window at the point where you right-clicked (or touched-and-held). **Move Marker n Here** moves the currently selected Marker to the point in the Waterfall window where you right-clicked (or touched-and-held).

### Trace Update Indicator

Trace updates can take one of two forms:


1. The trace is updated in a single operation that affects all of the points in the trace at once. This happens, for example, in the case of very fast (< 200 ms) sweeps, single-chunk FFT's, and the initial math operation after a math function is set for a trace
2. The trace is updated in a series of discrete steps, with measurement data being gathered between each step. This will be the case for slow sweeps, multi-chunk FFTs, gated sweeps, etc.

In the first case, no update indicator is required. In the second case, however, a visual indicator exists on the trace where the new data is being written. The indicator is a green caret (^), which moves across the bottom of the graticule showing the current trace point.



### Trace Annunciator Panel

This panel appears on the right hand side of the Meas Bar. Here is an explanation of the fields in this panel, as shown below:

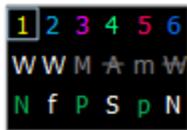

### Top Line

On the top line, each trace number is shown, in the trace color. A box is drawn around the currently selected trace.

### Middle Line

Below each trace number, is a letter signifying the trace type for that trace number, where

W	Clear/Write
A	Trace Average
M	Max Hold
m	Min Hold

If the letter is white, it means the trace is being updated (**Update = ON**); if the letter is dimmed, it means the trace is not being updated (**Update = OFF**). A strikethrough indicates that the trace is blanked (**Display = OFF**). Note that it is possible for a trace to be updating *and* blanked, which is useful if the trace is a trace math component.

### Bottom Line

The third line shows the detector type for each trace, or, if trace math is on for that trace, it shows “f” (for “math function”). It is not always possible to have a unique detector for each trace, but the instrument hardware provides the maximum flexibility of detector selection in order to maintain the highest accuracy. The letters used for this readout are

N	Normal
A	Average
P	peak
p	negative peak
S	Sample
Q	Quasi Peak
E	EMI Average
R	RMS Average
f	math function

If the letter is green, the detector is in Auto. If white, the detector has been manually selected.

In the example above, the panel is indicating the following:

### 3 LTE & LTE-A TDD Mode

#### 3.6 Spurious Emissions Measurement

- Trace 1: Visible, being updated, in Clear/Write, with Normal detector auto selected
- Trace 2: Visible, being updated, in Clear/Write, being written to with a math function
- Trace 3: Visible, not updating, data was taken in Max Hold, with the peak detector auto selected
- Trace 4: Blanked, not updating, data was taken with Averaging turned on, Sample detector manually selected
- Trace 5: Visible, not updating, data was taken in Min Hold with Negative Peak detector auto selected
- Trace 6: Blanked, not updating, in Clear/Write, with Normal detector manually selected

#### Trace Annotation

When **Trace Annotation** (see **Display**) is **ON**, each non-blanked trace is labeled on the trace with the detector used to take it, unless a Trace Math function is on for that trace, in which case it is labeled with the **"Math Function"** on page 1145.

The detector labels are:

<b>NORM</b>	Normal
<b>PEAK</b>	Peak
<b>SAMP</b>	Sample
<b>NPEAK</b>	Negative Peak
<b>RMS</b>	Average detector with Power Average (RMS)
<b>LG AVG</b>	Average detector with Log-Pwr Average
<b>VAVG</b>	Average detector with Voltage Average
<b>QPEAK</b>	Quasi Peak
<b>EMI AVG</b>	EMI Average
<b>RMS AVG</b>	RMS Average

The trace math labels are:

<b>PDIF</b>	Power Difference
<b>PSUM</b>	Power Sum
<b>LOFF</b>	Log Offset
<b>LDIF</b>	Log Difference

### 3.6.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

**Select Trace** appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the <b>Trace</b> menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none"> <li>- In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View</li> <li>- When you turn on Image Suppress, Update turns off for all traces except the selected trace</li> </ul> For the ACP measurement, when <b>Meas Method</b> is <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> , <b>Select Trace</b> is disabled
Preset	Trace 1
State Saved	Yes

### 3.6.10.2 Trace Control

The controls on this tab allow you to set the "Trace Type" on page 2137 and its update mode.

There are four Trace Types:

- **Clear/Write**
- **Trace Average**
- **Max Hold**
- **Min Hold**

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "View/Blank" on page 2142 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

## Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	WRITe	:TRAC2:TYPE WRIT	See: "Clear/Write" on page 1140
Trace Average	AVERage	:TRAC2:TYPE AVER	See: "Trace Average" on page 1140
Maximum Hold	MAXHold	:TRAC3:TYPE MAXH	See: "Max Hold" on page 1141
Minimum Hold	MINHold	:TRAC5:TYPE MINH	See: "Min Hold" on page 1141

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "**View/Blank**" on page 2142 state must be set to **Active** (**Update: ON, Display: ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "**Trace Mode Backwards Compatibility Commands**" on page 1138

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITe   AVERage   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE WRITe   AVERage   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<pre>:TRAC:TYPE WRIT</pre> <pre>:TRAC:TYPE?</pre>
Couplings	<p>Selecting a <b>Trace Type</b> (by pressing any of the Trace Type selections or sending <code>:TRAC:TYPE</code>) sets the Trace to <b>Active</b> (<b>Update: ON, Display: OFF</b>), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<code>[ :SENSe ] : &lt;meas&gt; : DETector : AUTO ?</code>), Detector (<code>[ :SENSe ] : &lt;meas&gt; : DETector [ :FUNCTION ] ?</code>) switches aligning with the switch of this parameter: "NORMal" with <code>WRITe</code> (Clear Write), "AVERage" with <code>AVERage</code>, "POSitive (peak)" with <code>MAXHold</code>, and "NEGative (peak)" with <code>MINHold</code></p>
Preset	<p>Swept SA and Monitor Spectrum: <code>WRITe</code></p> <p>All other measurements: <code>AVERage</code></p> <p>Following <b>Preset</b>, all traces are cleared (all trace points set to mintracevalue)</p>
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

## Trace Mode Backwards Compatibility Commands

In earlier instruments, the “Trace Modes” were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under ["View/Blank" on page 2142](#).

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The `:TRACe:MODE` command is retained for backwards compatibility, and the `:TRACe:TYPE`, `:TRACe:UPDate` and `:TRACe:DISPlay` commands introduced for ongoing use. The old Trace Modes are selected using `:TRAC:MODE`, whose parameters are mapped into calls to `:TRACe:TYPE`, `:TRACe:UPDate` and `:TRACe:DISPlay`, and the old global Averaging command `[ :SENSe ]:AVERage[ :STATe ]` is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or `:INIT:IMM`, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	<code>WRITE</code>
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	<code>:TRACe[1] 2 ... 6:MODE WRITE   MAXHold   MINHold   VIEW   BLANK</code> <code>:TRACe[1] 2 ... 6:MODE?</code>
Backwards Compatibility Notes	<p>The legacy <code>:TRACe:MODE</code> command is retained for backwards compatibility. In conjunction with the legacy <code>:AVERage</code> command, it works as follows:</p> <ul style="list-style-type: none"> <li>– <code>:AVERage ON OFF</code> sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See the <code>[ :SENSe ]:AVERage[ :STATe ]</code> command description below</li> <li>– <code>:TRACe:MODE WRITE</code> sets <code>:TRACe:TYPE WRITE</code> (Clear/Write) unless average is true, in which case it sets it to <code>:TRACe:TYPE AVERage</code>. It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> <li>– <code>:TRACe:MODE MAXHold</code> sets <code>:TRACe:TYPE MAXHold</code> (Max Hold). It also sets <code>:TRACe:UPDate ON</code>, <code>:TRACe:DISPlay ON</code>, for the selected trace</li> </ul>

3 LTE & LTE-A TDD Mode  
 3.6 Spurious Emissions Measurement

- `:TRACe:MODE MINHold` sets `:TRACe:TYPE MINHold` (Min Hold). It also sets `:TRACe:UPDate ON`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE VIEW` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE BLANK` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay OFF`, for the selected trace

The query returns the same value as `:TRACe:TYPE?`, meaning that if you set `:TRACe:MODE:VIEW` or `:TRACe:MODE:BLANK`, the query response will not be what you sent

`:TRACe[n]:MODE` was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new `:TRACe:TYPE` command should be used in the future, but `:TRACe:MODE` is retained to provide backwards compatibility

In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has

As the **Average/Hold Number** now affects **Min Hold** and **Max Hold**, the operations that restart Averaging (for example, the **Restart** key) now also restart **Min Hold** and **Max Hold**

As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does

Also, previous to X-Series:

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	<code>OFF</code>
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[ :SENSe]:AVERage[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:AVERage[:STATe]?</code>
Backwards Compatibility Notes	<p>Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[ :SENSe]:AVERage[:STATe] ON OFF 1 0</code> was used to turn Averaging on or off</p> <p>In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another</p> <p>For backwards compatibility, the old global Average State variable is retained solely as a legacy variable, turned on and off and queried by the legacy command <code>[ :SENSe]:AVERage[:STATe] OFF ON 0 1</code>. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old <code>:TRAC:MODE</code> command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write</p>

## Trace Type Details

### Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending `:TRAC:TYPE WRIT` for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

### Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending `:TRAC:TYPE AVER` (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

- The average/hold count  $k$  is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated

- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

### Max Hold

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending `:TRAC:TYPE MAXH` for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

### Min Hold

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending `:TRAC:TYPE MINH` for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count k is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

### Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 2137 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again

- the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:

- **Clear/Write:** Clear and Write
- **Trace Average:** Restart Averaging
- **Max Hold:** Restart Max Hold
- **Min Hold:** Restart Min Hold


### View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

<b>Active</b>	Update and Display both <b>ON</b>
<b>View</b>	Update <b>OFF</b> ; Display <b>ON</b>
<b>Blank</b>	Update <b>OFF</b> ; Display <b>OFF</b>
<b>Background</b>	Update <b>ON</b> , Display <b>OFF</b>

Allows a trace to be blanked *and* continue to update "in the background", which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

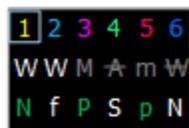

See: ["More Information" on page 1144](#)

Notes	For the commands to control the two variables, Update and Display, see <a href="#">"Trace Update State On/Off" on page 1143</a> and <a href="#">"Trace Display State On/Off" on page 1143</a> below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	<p>Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in <b>Active</b> (Update <b>ON</b> and Display <b>ON</b>), even if that trace type was already selected</p> <p>Selecting a detector for a trace (pressing the key or sending <code>[ :SENS ] :DET :TRAC</code>) puts the trace in <b>Active (UpdateON and DisplayON)</b>, even if that detector was already selected</p> <p>Selecting a <a href="#">"Math Function" on page 1145</a> other than <b>OFF</b> for a trace (pressing the key or sending the equivalent command) puts the trace in <b>Active (UpdateON and DisplayON)</b>, even if that Math Mode was already selected</p> <p>Loading a trace from a file puts that trace in <b>View</b> regardless of the state it was in when it was saved; as does being the target of a <b>Copy</b> or a participant in an <b>Exchange</b></p>

### Trace Update State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):  <code>:TRACe[1] 2 ... 6:UPDate[:STATe] ON   OFF   1   0</code>  <code>:TRACe[1] 2 ... 6:UPDate[:STATe]?</code></p> <p>For all other measurements:  <code>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe] ON   OFF   1   0</code>  <code>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe]?</code></p> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):  <code>:TRAC2:UPD 0</code></p>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):  <code>1 0 0 0 0 0</code>  <b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:  <code>1 0 0</code>  <b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

### Trace Display State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):  <code>:TRACe[1] 2 ... 6:DISPlay[:STATe] ON   OFF   1   0</code>  <code>:TRACe[1] 2 ... 6:DISPlay[:STATe]?</code></p> <p>For all other measurements:</p>
----------------	--

---

	<pre>:TRACe[1] 2 3:&lt;meas&gt;:DISPlay[:STATe] ON   OFF   1   0 :TRACe[1] 2 3:&lt;meas&gt;:DISPlay[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 1 visible: :TRAC2:DISP 1</p> <p>Blank trace 3: :TRAC3:DISP 3</p>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode): 1 0 0 0 0 0</p> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements: 1 0 0</p> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

---

### More Information

When a trace becomes inactive, any update from the **:SENSe** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

### 3.6.10.3 Math

Lets you turn on and configure Trace Math functions.

#### Math Function

Trace Math functions perform mathematical operations between traces and, in some cases, user-specified offsets. When in a Trace Math function, the indicated function is performed during the sweep with the math function used in place of a detector. The trace operands for the math function are set using the "[Operand 1 / Operand 2](#)" on [page 1151](#) controls.

- See "[How trace math is processed](#)" on [page 1149](#)

---

Remote Command For option details, see "[Trace Math Options](#)" on [page 1147](#)  
For Swept SA Measurement (in SA Mode):  
:CALCulate:MATH <trace\_num>, PDIFference | PSUM | LOFFset | LDIFference | OFF, <trace\_num>, <trace\_num>, <real>,<real>  
:CALCulate:MATH? <trace\_num>  
where <trace\_num> is any one of:  
TRACE1|...|TRACE6  
For all other measurements:  
:CALCulate:<meas>:MATH <trace\_num>, PDIFference | PSUM | LOFFset | LDIFference | OFF, <trace\_num>, <trace\_num>, <real>,<real>  
:CALCulate[:<meas>]:MATH? <trace\_num>  
where:  
<meas> is the identifier for the current measurement, and  
<trace\_num> is any one of:  
TRACe1|TRACe2|TRACe3  
Note that the format of the TRACe<n> parameter differs from that for the Swept SA Measurement

---

Example :CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0  
Sets Trace 3 to Power Diff trace math function, and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2  
:CALC:MATH TRACE3,PSUM,TRACE1,TRACE2,0,0  
Sets Trace 3 to Power Sum trace math function and sets the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2  
:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0

	<p>Sets Trace 3 to Log Offset trace math function, sets the First Trace operand (for Trace 3) to Trace 1, leaves the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and sets the Log Offset (for Trace 3) to -6 dB</p> <p><code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code></p> <p>Sets Trace 3 to Log Diff trace math function, sets the First Trace operand (for Trace 3) to Trace 1, sets the Second Trace operand (for Trace 3) to Trace 2, and sets the Log Difference reference (for Trace 3) to -6 dBm</p> <p><code>:CALC:MATH TRACE1,OFF,TRACE2,TRACE3,0,0</code></p> <p>Turns off trace math for trace 1</p>
Notes	<p>The Trace Math Function command has 6 main set of parameters:</p> <ul style="list-style-type: none"> <li>- Set 1 defines the “result trace”: <code>TRACE1  ...  TRACE6</code></li> <li>-Set 2 defines the “function”: <code>PDIFference PSUM LOFFset LDIFference OFF</code></li> <li>- Set 3 is a “trace operand” (1): <code>TRACE1  ...  TRACE6</code></li> <li>- Set 4 is a “trace operand” (2): <code>TRACE1  ...  TRACE6</code></li> <li>- Set 5 defines the “Log Offset” (in dB)</li> <li>- Set 6 defines the “Log Difference Reference” (in dBm)</li> </ul> <p>Note that the trace math mode is an enumeration; that is, when a math function is set for a trace, it turns off any math function that is on for that trace, then sets the new math function</p> <p>The parameters sent in the command are reflected in the values in the control menu. There is no default for any parameter; all 6 parameters must be sent to satisfy the parser. Failure to specify a parameter will result in a missing parameter message</p> <p>The query returns the math mode, the operand traces, the offset and the reference for the specified trace, all separated by commas</p>
Dependencies	<p>Trace Math is not available if <b>Normalize</b> is on</p> <p>Trace Math is not available if Signal ID is on</p> <p>None of the trace operands can be the destination trace. If any of the three trace math commands is sent with a destination trace number matching one of the operands, a warning is generated and the function does not turn on</p>
Couplings	When a math function is changed for a trace, that trace is set to Display = <b>ON</b> ; and Update = <b>ON</b>
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <p><code>OFF,TRACE5,TRACE6,0,0   OFF,TRACE6,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0  </code>  <code>OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE4,0,0   OFF,TRACE4,TRACE5,0,0</code></p> <p>For all other measurements:</p> <p><code>OFF,TRACE2,TRACE3,0,0   OFF,TRACE3,TRACE1,0,0   OFF,TRACE1,TRACE2,0,0</code></p>
State Saved	The trace math function for each trace is saved in instrument state
Annunciation	An “f” is shown on the trace annunciation panel in the Measurement Bar when a math function is on;

---

	and the function is annotated on the trace if Trace Annotation is on
Status Bits/OPC dependencies	*OPC can be used to detect the completion of a sweep, which will also correspond to the completion of the math operation, since all math takes place during the sweep

---

## Trace Math Options

### IMPORTANT

To generate a trace math result, *you must take a sweep*. The trace math engine, described below, operates in concert with the sweep engine in the instrument. Until a sweep has been taken, even if the constituent traces are not in Update mode, no result is generated.

Note that certain events can affect the trace in ways that affects all points at once. This can happen in any number of ways, including:

- A trace clear taking place
- A trace being loaded from the file system
- Trace data being sent in from the remote interface
- A copy or exchange of trace data

You should try to avoid these occurrences during a sweep, as they will tend to invalidate the math result being accumulated.

---

The Trace Math functions are:

### Power Diff (Op1 - Op2)

Calculates a power difference between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace:

$$\text{DestinationTrace} = 10 \log_{10}(10^{(1/10)(\text{FirstTrace})} - 10^{(1/10)(\text{SecondTrace})})$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

Otherwise, if the result of the subtraction is less than or equal to 0, the resultant point is **mintracevalue**.

### Power Sum (Op1 + Op2)

Calculates a power sum between the **First Trace** operand and the **Second Trace** operand and puts the result in the destination trace.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = 10 \log(10(1/10)(\text{FirstTrace}) + 10(1/10)(\text{SecondTrace}))$$

The values of the trace points are assumed to be in a decibel scale, as they are internally stored.

If a point in either trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

### Log Offset (Op1 + Offset)

Calculates a log offset from the **First Trace** operand and puts the result in the destination trace. This is like the B-DL function in some older instruments. The offset is entered on the **Offset** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own offset.

During the sweep, the following formula is executed for each point in the trace operand, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = \text{FirstTrace} + \text{Offset}$$

The values of the trace points are assumed to be in dBm (as they are internally stored) and the offset is in dB.

If a point in the trace operand is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in the trace operand is equal to **mintracevalue**, the resultant point is also **mintracevalue**.

*Example:* If offset is 25 dB, then our destination trace will be higher than the operand trace by 25 dB.

Note that the **Second Trace** operand is not used for this function.

### Log Diff (Op1 - Op2 + Ref)

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

Offsets the difference between the **First Trace** operand and the **Second Trace** operand by a reference and puts the result in the destination trace. This is like the A-

B+DL function in some older instruments. The Reference is entered on the **Reference** control, which only appears when this math function is in force for the selected trace. Each destination trace has its own reference.

During the sweep, the following formula is executed for each point in the trace operands, and the corresponding point is generated for the destination trace.

$$\text{DestinationTrace} = (\text{FirstTrace} - \text{SecondTrace}) + \text{Reference}$$

The values of the operand trace points are assumed to be in decibel units (as they are internally stored) and the reference is in dBm so the result is in dBm.

*Example:* If the first operand trace 1 is at 5 dBm, the second operand trace 2 is at -5 dBm, and the reference is -25 dBm, then the destination trace will be -15 dBm.

*Example:* If the first operand trace 1 is at 60 dBuV, the second operand trace 2 is at 50 dBuV, and the reference is 35 dBuV, then the destination trace will be 45 dBuV.

If a point in **FirstTrace** is equal to **maxtracevalue**, the resultant point is also **maxtracevalue**.

If a point in **FirstTrace** is equal to **mintracevalue**, the resultant point is also **mintracevalue**.


If neither of the above is true for a given point, then:

- If that point in **SecondTrace** is equal to **maxtracevalue**, the resultant point is **mintracevalue**.
- If that point in **SecondTrace** is equal to **mintracevalue**, the resultant point is **maxtracevalue**.

### How trace math is processed

Whenever a trace math function is turned on, or the parameters and/or operands of an existing trace math function are changed, the destination trace is cleared. After the trace is cleared, all x-axis values in the trace, and the domain of the trace, are set to match the X-Axis settings of the first trace operand. When this is complete, a new sweep is initiated.

The process of acquiring data, processing it using the math and Average/Hold functions, and presenting it as trace data, consists of several functional blocks, as shown below:

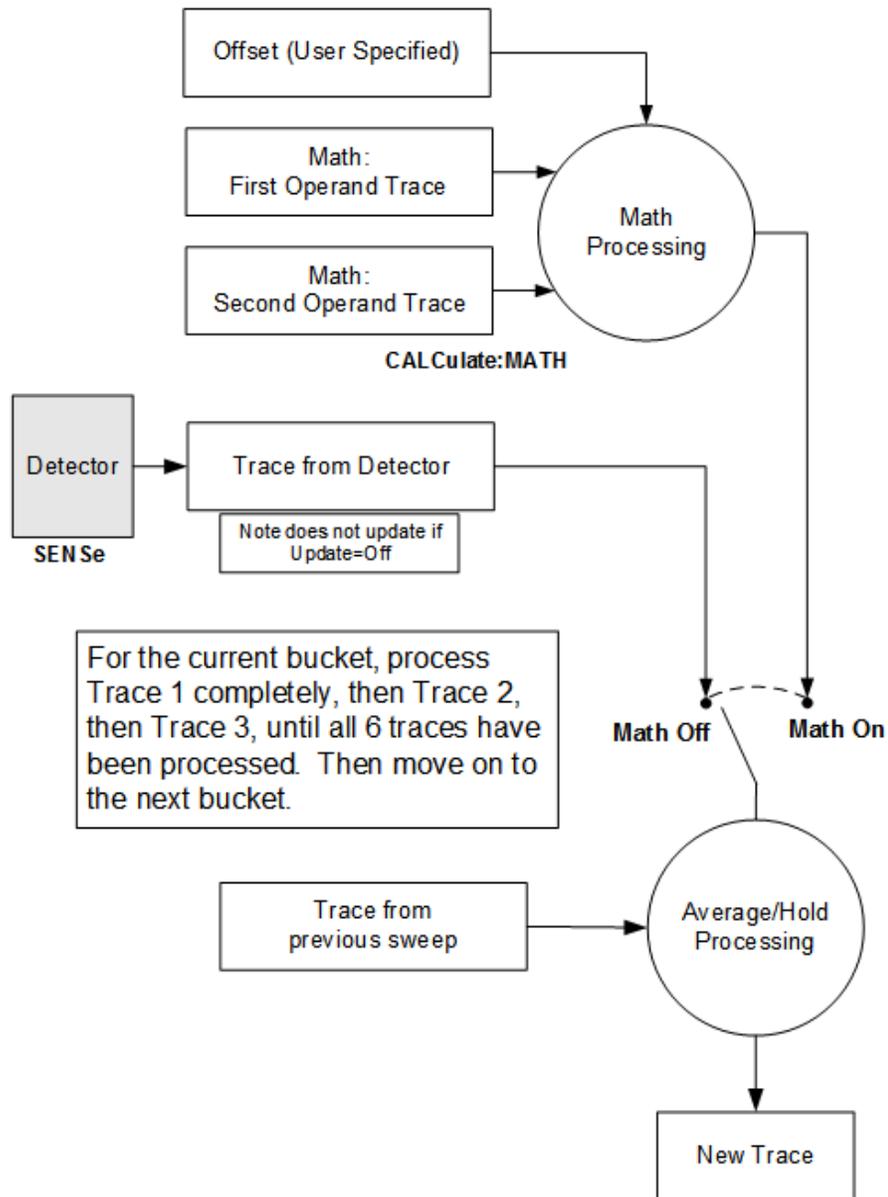

**NOTE ABOUT OFFSETS:** When either External Gain or Ref Level Offset is on, an offset is applied to the trace operands, and when Trace Math is on this offset is applied before any math processing is performed. Since the operands have already been offset the result trace should NOT be offset. Therefore when any Trace Math operation is performed, the sum of (External Gain - Ref Level Offset) is added to the result before it is stored in the result trace.

For each active trace, the current trace point is processed for **Trace 1**, then **Trace 2**, then **Trace 3**, etc. Trace data is taken from either the detector for that trace, or

from the mathematical result of up to two other traces and an offset, depending on whether trace math is on or not. The resultant data is then fed to the Average/Hold processing block, where (if the trace type is **Average**, **Max Hold**, or **Min Hold**) it is processed with previous trace data. The new trace data resulting from this process is then available for display, storage or remote output.

When the processing is complete for **Trace 1**, **Trace 2** is processed, and so on until all six traces have been processed. This allows a downstream trace to use as one of its math components a fully processed upstream trace. In other words, if math is **ON** for **Trace 4**, and its operand traces are **Trace 2** and **Trace 3**, then all detector, math, average and hold processing for Traces 2 and 3 is completed before the math is performed for **Trace 4**. When the current trace point is completed for all traces, the instrument moves on to the next trace point.

This allows very flexible and powerful math functions to be configured. For example, **Trace 1** can be an average trace, which can be fed with an offset to **Trace 2**, which can also be in **Max Hold**, allowing you to obtain the **Max Hold** of an Average trace.

Note that none of this processing is performed on inactive traces.

Note also that for any active trace with math **ON**, the Operand traces should have *lower* numbers than the trace (for example, using **Trace 4** as an operand for **Trace 1** will cause the data coming from **Trace 4** to be delayed by one sweep).

## Operand 1 / Operand 2

These two controls select the first and second trace operands to be used for the trace math functions for the destination trace. The operands are common to all math functions for a given trace. The most recently sent **:CALCulate:MATH** command for a given trace sets the operands for that trace. Those settings are displayed on the trace operand controls for that trace.

Example	<p>The following examples are for the Swept SA measurement</p> <p>Set Trace 3 to Power Diff trace math function. Set the First Trace operand (for Trace 3) to Trace 1 and the Second Trace operand (for Trace 3) to Trace 2:</p> <pre><b>:CALC:MATH TRACE3,PDIF,TRACE1,TRACE2,0,0</b></pre> <p>Set Trace 3 to Log Offset trace math function. Set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB:</p> <pre><b>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</b></pre>
Notes	See " <b>Math Function</b> " on page 1145 for how to specify Operands 1 and 2 using <b>:CALCulate:MATH</b>
Dependencies	The destination trace cannot be an operand. The destination trace number is grayed-out on the dropdown
Preset	Operand 1: Trace number minus 2 (wraps at 1). For example, for Trace 1, Operand 1 presets to Trace

---

	5; for Trace 6, it presets to Trace 4 Operand 2: Trace number minus 1 (wraps at 1). For example, for Trace 1, Operand 2 presets to Trace 6; for Trace 6, it presets to Trace 5
State Saved	Operands 1 and 2 for each trace are stored in instrument state

---

## Offset

Used by the Log Offset math function.

---

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Offset trace math function, set the First Trace operand (for Trace 3) to Trace 1, leave the Second Trace operand (for Trace 3) unchanged (it is irrelevant for this function) and set the Log Offset (for Trace 3) to -6 dB: <code>:CALC:MATH TRACE3,LOFF,TRACE1,TRACE2,-6.00,0</code>
State Saved	The Log Offset value for each trace is saved in Instrument State
Min	-100 dB
Max	100 dB

---

## Reference

Used by the Log Diff math function.

---

Example	The following example is for the Swept SA measurement Set Trace 3 to Log Diff trace math function, set the First Trace operand (for Trace 3) to Trace 1, set the Second Trace operand (for Trace 3) to Trace 2, and set the Log Difference reference (for Trace 3) to -6 dBm: <code>:CALC:MATH TRACE3,LDIF,TRACE1,TRACE2,0,-6.00</code>
State Saved	The Log Difference reference value for each trace is saved in instrument state
Min/Max	Same as reference level

---

### 3.6.10.4 Trace Function

Contains controls to:

- Copy and Exchange traces
- Preset or Clear all traces

## From Trace

Selects the trace to be copied to or exchanged with the **"To Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 1

## To Trace

Selects the trace to be copied from or exchanged with the **"From Trace" on page 1153** when a **"Copy" on page 1153** or **"Exchange" on page 1154** is performed

---

Preset 2

## Copy

Executes a Trace Copy based on the **"From Trace" on page 1153** and **"To Trace" on page 1153** parameters. The copy operation is from the **From Trace** to the **To Trace**. The action is performed once.

The X-Axis settings and domain of a trace are also copied.

---

Remote Command For Swept SA Measurement (in SA Mode):  
`:TRACe:COPIY TRACE1 | ... | TRACE6, TRACE1 | ... | TRACE6`

For all other measurements:  
`:TRACe:<meas>:COPIY TRACe1 | TRACe2 | TRACe3, TRACe1 | TRACe2 | TRACe3`

where `<meas>` is the identifier for the current measurement

Note that the format of the `TRACe<n>` parameter differs from that for the Swept SA Measurement

---

Example Copy Trace 1 to Trace 3 and put Trace 3 in Update=Off, Display=On  
`:TRAC:COPIY TRACE1,TRACE3`

---

Notes The command is of the form:  
`:TRACe:COPIY <source_trace>,<dest_trace>`

---

Dependencies When Signal ID is on, this key is grayed-out

---

Couplings The destination trace is put in **View** (Update = Off, Display = On) after the copy

---

Preset For Swept SA Measurement (in SA Mode):  
`TRACE1, TRACE2`

For all other measurements:  
`TRACe1, TRACe2`

## Exchange

Executes a Trace Exchange based on the "From Trace" on page 1153 and "To Trace" on page 1153 parameters. The **From Trace** and **To Trace** values are exchanged with each other. The action is performed once.

The X-Axis settings and domain of a trace are also copied when it is exchanged with another trace.

Remote Command	For Swept SA Measurement (in SA Mode): :TRACe:EXCHange TRACE1   ...   TRACE6, TRACE1   ...   TRACE6  For all other measurements: :TRACe:<meas>:EXCHange TRACe1   TRACe2   TRACe3, TRACe1   TRACe2   TRACe3  where <meas> is the identifier for the current measurement  Note that the format of the :TRACe<n> parameter differs from that for the Swept SA Measurement
Example	Exchange Trace 1 and Trace 2 and put both traces in Update=OFF, Display=ON: :TRAC:EXCH TRACE1,TRACE2
Notes	The command is of the form: :TRACe:EXCHange <trace_1>,<trace_2>
Couplings	Both traces are put in <b>View</b> (Update=Off, Display=On) after the exchange

## Preset All Traces

Turns on Trace 1 and blanks all other traces. This is useful when you have many traces on and you want to return to having only Trace 1 on the display. Does not affect the trace type, detector or any other aspect of the trace system.

Remote Command	:TRACe[:<meas>]:PRESet:ALL
Example	:TRAC:PRE:ALL
Dependencies	When Signal ID is on, this key is grayed-out

## Clear All Traces

Clears all traces. Does not affect the state of any function or variable in the instrument. Loads **mintracevalue** into all of the points for all traces, except traces in **Min Hold**, in which case it loads **maxtracevalue**, even if **Update = OFF**.

Remote Command	:TRACe[:<meas>]:CLEar:ALL
Example	:TRAC:CLE:ALL
Dependencies	When Signal ID is on, this key is grayed-out

### 3.6.10.5 Advanced

Contains controls for setting advanced trace functions of the instrument.

#### Measure Trace

Specifies which trace's scalar results are displayed in the **Metrics** window, and retrieved by sending a **:READ** or **:FETCH** query:

- Trace 1
- Trace 2
- Trace 3

Remote Command	<pre>:CALCulate:&lt;meas&gt;:MTRace TRACe1   TRACe2   TRACe3 :CALCulate:&lt;meas&gt;:MTRace? &lt;meas&gt; is the identifier for the current measurement; any one of CHPower   ACPower   OBWidth   SEMask   SPURious   PVTime</pre>
Example	<pre>Channel Power :CALC:CHP:MTR TRAC1 :CALC:CHP:MTR?</pre>
Dependencies	In the ACP measurement, this control is grayed-out when <b>Meas Method</b> is set to <b>RBW</b> or <b>FAST</b> , and only Trace 1 is enabled
Preset	<b>TRACe1</b>
State Saved	No
Range	Trace 1   Trace 2   Trace 3

## 3.7 Transmit On|Off Power Measurement

This measurement is designed for testing Transmit On/Off Power for the E-UTRA TDD BS, E-UTRA FDD UE and E-UTRA TDD UE.

When Direction is Downlink, two key results will be provided, one is transmitter OFF power and the other is transmitter transient period. The definition for the two results are as below according to TS36.141:

- Transmitter OFF power is defined as the mean power measured over 70 us filtered with a square filter of bandwidth equal to the transmission bandwidth configuration of the BS (BWConfig) centered on the assigned channel frequency during the transmitter OFF period. The minimum requirement for transmitter OFF power spectral density shall be less than -82.5dBm/MHz
- The transmitter transient period is the time period during which the transmitter is changing from the OFF period to the ON period or vice versa. The transmitter transient period is illustrated in figure below,

When Direction is Uplink, three key results will be provided to ensure that the UE's transmitter is comply with the ON/OFF time mask defined in TS36.521, following 3 results will be provided.

- Transmission OFF power during the sub-frame prior to the active subframe.
- Output power of the UE transmission during the active subframe
- Transmission OFF power during the sub-frame following the active subframe

### More Information

When Direction is Downlink, two key results will be provided, one is transmitter OFF power and the other is transmitter transient period. The definition for the two results are as below:

- Transmitter OFF power is defined as the mean power measured over 70 us filtered with a square filter of bandwidth equal to the transmission bandwidth configuration of the BS (BWConfig) centered on the assigned channel frequency during the transmitter OFF period. The minimum requirement for transmitter OFF power spectral density shall be less than -85dBm/MHz
- The transmitter transient period is the time period during which the transmitter is changing from the OFF period to the ON period or vice versa. The transmitter transient period is illustrated in figure below

For averaged measurements, the user may specify the number of sweeps over which to average the result. This means that for an average number of 10, the power results are obtained from each trace, converted to linear (voltage squared), and

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On/Off Power Measurement

then averaged with the previous average result before being displayed. The running average count and (the log of) the true averaged linear power will be displayed after each measurement sweep.


When Direction is Uplink, three key results will be provided to ensure that the UE's transmitter is comply with the ON/OFF time mask defined in TS36.521 6.3.4.

- Transmission OFF power during the sub-frame prior to the active subframe.
- Output power of the UE transmission during the active subframe
- Transmission OFF power during the sub-frame following the active subframe.

The transmit OFF power is defined as the mean power in a duration of at least one sub-frame (1ms) excluding any transient periods. The requirement for the transmit OFF power shall not exceed the -50dBm, the measurement bandwidth is listed below:

	Channel bandwidth / OFF power measurement bandwidth					
	1.4	3.0	5	10	15	20
	MHz	MHz	MHz	MHz	MHz	MHz
Measurement bandwidth	1.08	2.7 MHz	4.5 MHz	9.0 MHz	13.5	18 MHz
	MHz				MHz	

The ON power is defined as the mean power over one sub-frame excluding any transient period.

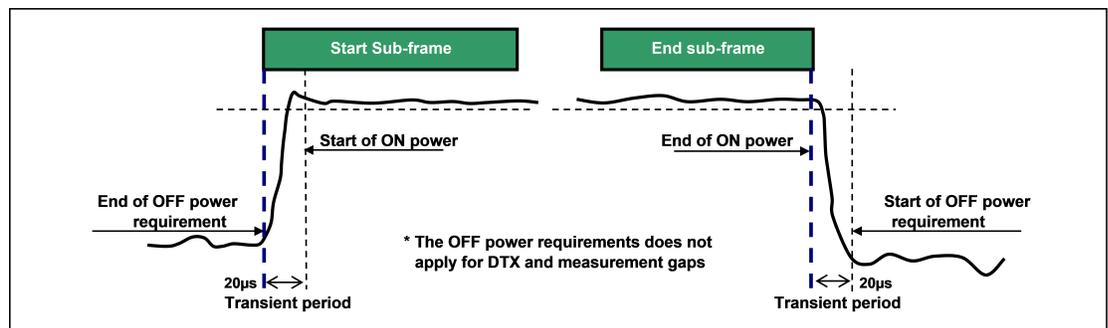

Following ON/OFF time masks are supported:

- General ON/OFF time mask
- PRACH ON/OFF time mask
- Single SRS time mask
- Dual SRS time mask for the case of UpPTS transmissions

The OFF Power prior to the active burst is measured according to TS36.521-1 , the measurement period is defined as below: The measurement period for OFF Power following the active burst is 1 frame excluding 20 us transient period, which is 980us in all cases.

Measurement Period for the OFF Power Prior to Active Burst		
	FDD	TDD
General ON/OFF time mask	1ms	When the subframe prior to the active subframe is special subframe, the DwPTS part plus one symbol will be excluded, other case will be 1ms.
PRACH ON/OFF time mask	980us	When the preamble format 4 is under test, the DwPTS part plus one symbol will be excluded, the fact that the nominal PRACH timing for TDD format 4 is not aligned with the subframe and symbol raster is considered. Other case will be 980us.
Single SRS time mask	13 symbols preceding the SRS symbol	13 symbols preceding the SRS symbol if SRS is not transmitted in the UpPTS; otherwise, will be all the symbols in the same subframe preceding the SRS symbol excluding DwPTS part plus one symbol.
Dual SRS time mask	Not supported	All the symbols in the same subframe preceding the two SRS symbols excluding DwPTS part plus one symbol. Only support special subframe configurations with UpPTS lengths 4384Ts and 5120 Ts only.
Burst Type	ON power measurement period	
PUSCH	0.980ms when transmitted only in one subframe	
PRACH preamble format 0	0.9031ms	
PRACH preamble format 1	1.4844ms	
PRACH preamble format 2	1.8031ms	
PRACH preamble format 3	2.2844ms	
PRACH preamble format 4	0.1479ms	

### 3 LTE & LTE-A TDD Mode

#### 3.7 Transmit On|Off Power Measurement

Single SRS	1 symbol minus 20us
Dual SRS	If there is frequency hopping or a power change between SRS symbols, the On period will be discontinuous, 20us at the end of the first symbol and another 20us at the start of the second symbol will be excluded, otherwise, it will be 2 symbol time minus 20 us.

This topic contains the following sections.

#### Remote Commands for Transmit On|Off Power

The following commands are used to retrieve the measurement results.

You must be in the LTE & LTE-A TDD or LTE & LTE-A FDD mode to use these commands.

```
:CONFigure:PVTime
:CONFigure:PVTime:NDEFault
:INITiate:PVTime
:FETCh:PVTime[n]?
:READ:PVTime[n]?
:MEASure:PVTime[n]?
```

#### Measurement Results for Transmit On|Off Power Measurement

For each result, the following heading is used to represent its format and precision.

#. Result Name (type of number) [unit] <explanation>

Type of number includes double, float and integer.

Index n	Results Returned
0	Returns unprocessed I/Q trace data as a series of comma-separated trace point values, in volts. The I values are listed first in each pair, using 0 through the even-indexed values. The Q values are odd-indexed values.
n=1 (or not specified)	Returns the following comma-separated scalar results: <ol style="list-style-type: none"> <li>1. Sample time is a floating point number representing the time between samples of displayed trace which you can get by using the trace queries (n=2, 3, ...).</li> <li>2. Number of samples is the number of data points in the displayed trace. This number is useful when performing a query on the signal (i.e. when n=2, 3 ...). For VXT models M9410A/11A, only an even number of samples is supported, and samples will be clipped if it this number is odd.</li> <li>3. On Power/ Mean Power of First SRS Symbol is the mean power (in dBm) of the active part in the range specified by Analysis Time Slot and Measured Time Slots</li> </ol>

Index n	Results Returned
	<p>in the most recently acquired data, or in the last data acquired at the end of a set of averages. For LTETDD, When Direction is Uplink and Measure Dual SRS is selected, this result will be the mean power of the first SRS symbol.</p>
	<p>4. Burst width is the width of the first set of continuous active slots in the range specified by Analysis Time slot and Measured Time Slots.</p>
	<p>5. Trigger Diff is the time difference between the position of the trigger line and the start point of the start slot specified by Analysis Time Slot.</p>
	<p>6. Ramp up time is the time difference between 10% and 90% voltage points (relative to peak) on the positive slope of the burst, here burst has the same meaning in Burst width.</p>
	<p>7. Ramp down time is the time difference between 90% and 10% voltage points (relative to peak) on the negative slope of the burst, here burst has the same meaning in Burst width.</p>
	<p>8. Off power/Off power before is the mean power measured during the transmitter OFF period, When Direction is Uplink, and this result is the OFF power during the sub-frame prior to the active subframe.</p>
	<p>9. Maximum power is the maximum peak level in the range specified by Analysis Time Slot and Measured Time Slots (in dBm).</p>
	<p>10. Minimum power is the minimum peak level in the range specified by Analysis Time Slot and Measured Time Slots (in dBm).</p>
	<p>11. Actual sample time is the a floating point number representing the time between samples of uncompressed I/Q trace data, which could be get by using trace query(n=0).</p>
	<p>12. Actual number of samples is the number of data points in the uncompressed I/Q trace data, which could be get by using trace query(n=0).</p>
	<p>13. Off power after this result is Uplink only. It is the OFF power during the sub-frame following the active subframe. When Direction is not Uplink, the value will be NaN (9.91 E 37).</p>
	<p>14. Mean Power of Second SRS Symbol. For LTETDD, When Direction is Uplink and Measure Dual SRS is selected, this result will be the mean power of the second SRS symbol. When Direction is not Uplink and Meas DualSRS is not selected, the value will be NaN (9.91 E 37).</p>
2	<p>Measured Trace data            This returns comma-separated floating point numbers representing the Measured Trace data (in dBm).</p>
3	<p>Measured Max Hold Trace data            This returns comma-separated floating point numbers representing the Measured Max Hold Trace data (in dBm).</p>
4	<p>Measured Min Hold Trace data</p>

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

Index n	Results Returned
5	<p>This returns comma-separated floating point numbers representing the Measured Min Hold Trace data (in dBm).</p> <p>Averaged absolute power of the slots</p> <p>This returns at most 20 comma-separated float values representing the averaged absolute power of each time slot (in dBm). For the inactive slot, the value will be NaN (9.91 E 37)..</p> <ol style="list-style-type: none"> <li>1. Averaged absolute power of TS0</li> <li>2. Averaged absolute power of TS1</li> <li>3. Averaged absolute power of DwPTS</li> <li>4. Averaged absolute power of UpPTS</li> <li>5. Averaged absolute power of TS4</li> <li>6. Averaged absolute power of TS5</li> <li>7. Averaged absolute power of TS6</li> <li>8. Averaged absolute power of TS7</li> <li>9. Averaged absolute power of TS8</li> <li>10. Averaged absolute power of TS9</li> <li>11. Averaged absolute power of TS10</li> <li>12. Averaged absolute power of TS11</li> <li>13. Averaged absolute power of TS12 ( if the Uplink-downlink configuration indicates it is 5ms periodicity, it is 2nd DwPTS)</li> <li>14. Averaged absolute power of TS13( if the Uplink-downlink configuration indicates it is 5ms periodicity, it is 2nd UpPTS)</li> <li>15. Averaged absolute power of TS14</li> <li>16. Averaged absolute power of TS15</li> <li>17. Averaged absolute power of TS16</li> <li>18. Averaged absolute power of TS17</li> <li>19. Averaged absolute power of TS18</li> <li>20. Averaged absolute power of TS19</li> </ol>
6	<p>Width of the slots</p> <p>This returns 20 comma-separated float values representing the width of each time slot (in us). For the inactive slot, the value will be NaN(9.91E37).</p>

Index n	Results Returned
	<ol style="list-style-type: none"> <li>1. Active signal width of TS0</li> <li>2. Active signal width of TS1</li> <li>3. Active signal width of DwPTS</li> <li>4. Active signal width of UpPTS</li> <li>5. Active signal width of TS4</li> <li>6. Active signal width of TS5</li> <li>7. Active signal width of TS6</li> <li>8. Active signal width of TS7</li> <li>9. Active signal width of TS8</li> <li>10. Active signal width of TS9</li> <li>11. Active signal width of TS10</li> <li>12. Active signal width of TS11</li> <li>13. Active signal width of TS12 ( if the Uplink-downlink configuration indicates it is 5ms periodicity, it is 2nd DwPTS)</li> <li>14. Active signal width of TS13( if the Uplink-downlink configuration indicates it is 5ms periodicity, it is 2nd UpPTS)</li> <li>15. Active signal width of TS14</li> <li>16. Active signal width of TS15</li> <li>17. Active signal width of TS16</li> <li>18. Active signal width of TS17</li> <li>19. Active signal width of TS18</li> <li>20. Active signal width of TS19</li> </ol>
7	<p>Averaged absolute power of the subframes</p> <p>This returns 10 comma-separated float values, for active subframe, it represents mean power (in dBm) of each subframe excluding any transient time, for inactive subframe, it represents the OFF power. For subframes not included in the specified measure interval, the value will be NaN(9.91E37). For special subframes in LTE-TDD, when Direction is Downlink, it will be the mean power in DwPTS, when Direction is Uplink, it will be the mean power of UpPTS.</p> <ol style="list-style-type: none"> <li>1. Averaged absolute power of Subframe 0</li> <li>2. Averaged absolute power of Subframe 1</li> </ol>

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On/Off Power Measurement

Index n	Results Returned
	3. Averaged absolute power of Subframe 2 4. Averaged absolute power of Subframe 3 5. Averaged absolute power of Subframe 4 6. Averaged absolute power of Subframe 5 7. Averaged absolute power of Subframe 6 8. Averaged absolute power of Subframe 7 9. Averaged absolute power of Subframe 8 10. Averaged absolute power of Subframe 9
8	Averaged Width of the subframes This returns 10 comma-separated float values representing burst width (in us) of each subframe. For special subframes in LTETDD, when Direction is Downlink, it will be the burst width of DwPTS, when Direction is Uplink, it will be the burst width of UpPTS. For the inactive subframe, the value will be NaN(9.91E37) 1. Active signal width of Subframe 0 2. Active signal width of Subframe 1 3. Active signal width of Subframe 2 4. Active signal width of Subframe 3 5. Active signal width of Subframe 4 6. Active signal width of Subframe 5 7. Active signal width of Subframe 6 8. Active signal width of Subframe 7 9. Active signal width of Subframe 8 10. Active signal width of Subframe 9
9	Measured 70us RMS Trace (dBm/MHz) data This returns comma-separated floating point numbers representing the Measured 70us RMS Trace (dBm/MHz) data (in dBm/MHz).
10 Direction = Downlink	Returns scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing Off Power result and Ramp Up/Down results. 1. DL Off Power 2. DL Ramp Up (When Auto Timing Adjust is On) / DL Transient Ramp Up (When Auto Timing Adjust is Off)

Index n	Results Returned
	3. DL Ramp Down (When Auto Timing Adjust is On) / DL Transient Ramp Down (When Auto Timing Adjust is Off)
	4. -999.0
	5. -999.0
	6. -999.0
	7. -999.0
	8. -999.0
	9. -999.0
	10. -999.0
	The last seven results always return -999.0.
	The number of values returned is subject to change in future releases.
10	Returns scalar values of the pass/fail (0 = passed, or 1 = failed) determined by testing Off Power results, Ramp Up/Down results and On Power result.
Direction = Uplink	1. UL Off Power Before
	2. UL Off Power After
	3. UL Ramp Up
	4. UL Ramp Down
	5. UL On Power
	6. -999.0
	7. -999.0
	8. -999.0
	9. -999.0
	10. -999.0
	The last five results always return -999.0.
	The number of values returned is subject to change in future releases.

### 3.7.1 Views

The Transmit On/Off Power measurement has two views.

These Views are multiple-window Views. When in a multiple window View, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the View changes, the default menu is Frequency, unless otherwise specified in the View description.

View	String ID	Numeric ID	Window
------	-----------	------------	--------

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

Burst	ALL	1	RF Envelope Metrics
Rise & Fall	BOTH	2	Rise Fall Metrics

You can select the desired measurement view from the selections listed in the table below. There are two available commands, allowing you to select the view using either a string ID or a numeric ID value.

- :DISP:PVT:VIEW[:SEL] <string ID>
- :DISP:PVT:VIEW:NSEL <numeric ID>

View Selection by Name

Remote Command	<code>:DISPlay:PVTime:VIEW[:SElect] ALL   BOTH</code> <code>:DISPlay:PVTime:VIEW[:SElect]?</code>
Example	DISP:PVT:VIEW ALL DISP:PVT:VIEW?
Preset	ALL
State Saved	Saved in instrument state.
Range	Burst   Rise & Fall

**View Selection by Number**

Remote Command	<code>:DISPlay:PVTime:VIEW:NSElect &lt;integer&gt;</code> <code>:DISPlay:PVTime:VIEW:NSElect?</code>
Example	DISP:PVT:VIEW:NSEL 2 DISP:PVT:VIEW:NSEL?
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	2

**3.7.1.1 Burst**

Windows:

- RF Envelope
- Metrics

View Burst envelope, the length of burst can be determined by slot number in mode setup.

---

Example      DISP:PVT:VIEW ALL

### 3.7.1.2 Rise&Fall

Windows:

- Rise
- Fall
- Metrics

Zooms in on the rising and falling portions of the burst being tested.

---

Example      DISP:PVT:VIEW BOTH

## 3.7.2 Windows

The following windows are available in Transmit On/Off measurement

Window	Number
RF Envelope	1
Rise	2
Fall	3
Metrics	4

### 3.7.2.1 RF Envelope

The RF Envelope window appears in Burst Views, as follows:

View	Size	Position
Burst	Half, full Width	Upper

### 3.7.2.2 Rise

The Rise window is an important component to see the Detail of power ramp up profile, it will appears in Rise&Fall view.

View	Size	Position
Rise&Fall	Half height, half width	Top Left

### 3.7.2.3 Fall

The Rise window is an important component to see the Detail of power ramp down profile, it will appears in Rise&Fall view.


View	Size	Position
Rise&Fall	Half height, half width	Top Right

### 3.7.2.4 Metrics


The Metrics window is an important component to see the specific metric reported by the measurement.

View	Size	Position
Burst	Half height, full width	Bottom
Rise&Fall	Half height, full width	Bottom

This table illustrates the details of metrics window when Direction is Downlink and AutoTimingAdjustment is on:

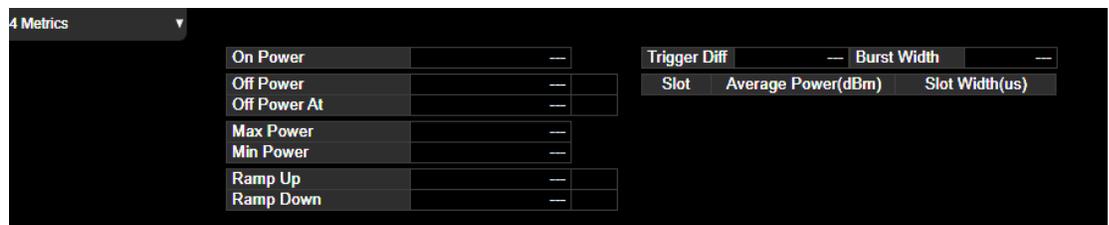

This table illustrates the details of metrics window when Direction is Downlink and AutoTimingAdjustment is off:

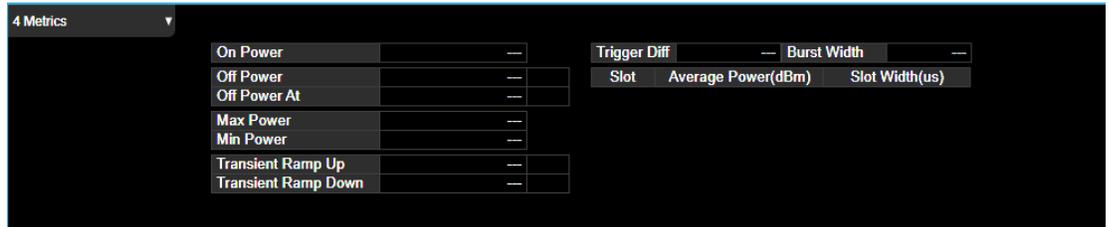


Name	Corresponding Results in READ:PVT	Display Format
On Power	n=1 3 <sup>rd</sup>	99.999 dBm
Burst Width	n=1 4 <sup>th</sup>	99.999 ms
Trigger Diff	n=1 5 <sup>th</sup>	99.999 us
Ramp Up	n=1 6 <sup>th</sup>	99.999 us
Ramp Down	n=1 7 <sup>th</sup>	99.999 us
Off Power	n=1 8 <sup>th</sup>	99.999 dBm
Max Power	n=1 9 <sup>th</sup>	99.999 dBm
Min Power	n=1 10 <sup>th</sup>	99.999 dBm
Slot	N/A	AAA
Avg Pwr	n=7	99.99 dBm
Slot width	n=8	99.99 us

**NOTE**

Slot/AvgPwr/SlotWidth section only displays measure results for active slot within display range.

This table illustrates the details of metrics window when Direction is Uplink and Measure PRACH/SRS is NOT set to Dual SRS:

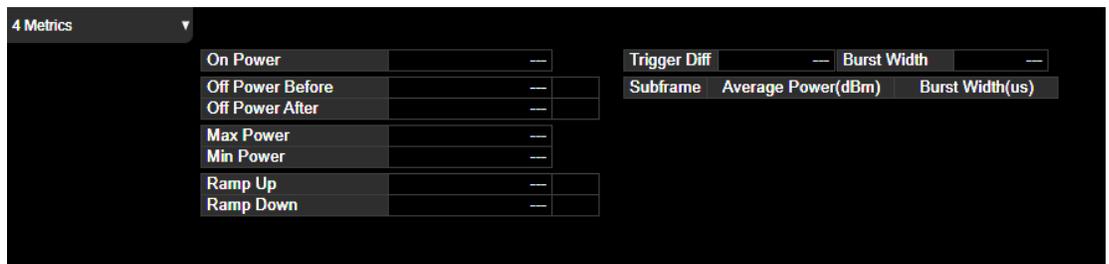

Name	Corresponding Results in READ:PVT	Display Format
On Power	n=1 3 <sup>rd</sup>	99.999 dBm
Burst Width	n=1 4 <sup>th</sup>	99.999 ms
Trigger Diff	n=1 5 <sup>th</sup>	99.999 us

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On/Off Power Measurement

Ramp Up	n=1 6 <sup>th</sup>	99.999 us
Ramp Down	n=1 7 <sup>th</sup>	99.999 us
Off Power Before	n=1 8 <sup>th</sup>	99.999 dBm
Off Power After	n=1 13 <sup>th</sup>	99.999 dBm
Max Power	n=1 9 <sup>th</sup>	99.999 dBm
Min Power	n=1 10 <sup>th</sup>	99.999 dBm
Subframe	N/A	AAA
Avg Pwr	n=7	99.99 dBm
Burst width	n=8	99.99 us

Subframe/AvgPwr/SlotWidth section displays measure results for all subframes within display range.

When Direction is Uplink and Measure PRACH/SRS is set to Dual SRS, the mean power for SRS1 and SRS2 are listed separately:



Name	Corresponding Results	Display Format
Mean Power for SRS1	n=1 3 <sup>rd</sup>	99.999 dBm
Mean Power for SRS2	n=11 4 <sup>th</sup>	99.999 dBm
Burst Width	n=1 4 <sup>th</sup>	99.999 ms
Trigger Diff	n=1 5 <sup>th</sup>	99.999 us
Ramp Up	n=1 6 <sup>th</sup>	99.999 us
Ramp Down	n=1 7 <sup>th</sup>	99.999 us
Off Power Before	n=1 8 <sup>th</sup>	99.999 dBm
Off Power After	n=1 13 <sup>th</sup>	99.999 dBm
Max Power	n=1 9 <sup>th</sup>	99.999 dBm
Min Power	n=1 10 <sup>th</sup>	99.999 dBm
Subframe	N/A	AAA

Avg Pwr	n=7	99.99 dBm
Burst width	n=8	99.99 us

**NOTE**

Subframe/AvgPwr/SlotWidth section displays measure results for all subframes within display range.

### 3.7.3 Amplitude

The Amplitude front-panel key activates the Amplitude menu and selects Reference Value as the active function.

#### 3.7.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

#### Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of the Ref Position function.

Remote Command: `:DISPlay:PVT:WINDow[1]|2|3:TRACe:Y[:SCALe]:RLEV1 <real>`  
`:DISPlay:PVT:WINDow[1]|2|3:TRACe:Y[:SCALe]:RLEV1?`

Window numbers are as follows:

- Burst: 1
- Rise: 2
- Fall: 3

Example: `DISP:PVT:WIND:TRAC:Y:SCAL:RLEV 5dBm ! 1-Burst for Transmit On/Off Power`  
`DISP:PVT:WIND:TRAC:Y:SCAL:RLEV? ! 1-Burst for Transmit On/Off Power`  
`DISP:PVT:WIND2:TRAC:Y:SCAL:RLEV 5 ! 2-Rise for Transmit On/Off Power`  
`DISP:PVT:WIND3:TRAC:Y:SCAL:RLEV 5 ! 2-Fall for Transmit On/Off Power`

Couplings: When Auto Scaling is On (default), this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling changes to Off.  
 Attenuation is not coupled to Ref Value.

Preset: `10.00 dBm ! 1-Burst`  
`0.00 dBm ! 2-Rise`

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

	0.00 dBm ! 3-Fall
State Saved	Saved in instrument state
Resolution	0.01 dB
Annotation	Ref <value> top left of graph

### Backwards Compatibility SCPI

Window Numbers used to be a combination of View and Window, now the VIEW parameter is not used and defaults to 1. All Windows are referenced through VIEW1. For backwards compatibility the old View and Window numbers are honored as below:

Window	Old SCPI Command	New SCPI Command
PVT - Burst	:DISP:PVT:VIEW [1]:WIND:TRAC:Y:SCAL:RLEV 5dBm	:DISP:PVT:WIND1:TRAC:Y:SCAL:RLEV 5dBm
PVT - Rise	:DISP:PVT:VIEW2:WIND:TRAC:Y:SCAL:RLEV 5dBm	:DISP:PVT:WIND2:TRAC:Y:SCAL:RLEV 5dBm
PVT - Fall	:DISP:PVT:VIEW2:WIND2:TRAC:Y:SCAL:RLEV 5dBm	:DISP:PVT:WIND3:TRAC:Y:SCAL:RLEV 5dBm

## Scale/Div

Scale/Div sets the height of one division of the graticule in the current Y-Axis unit.

Scale/Div also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if Scale/Div is 10 dB, then the total range of the graph is 100 dB.

Remote Command	:DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:Y[:SCALe]:PDIVision <rel_amp1> :DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:Y[:SCALe]:PDIVision?
	Window numbers are as follows: Burst: 1 Rise: 2 Fall: 3
Example	DISP:PVT:WIND:TRAC:Y:PDIV 5 ! 1-Burst for Transmit On/Off Power DISP:PVT:WIND:TRAC:Y:PDIV? ! 1-Burst for Transmit On/Off Power DISP:PVT:WIND2:TRAC:Y:PDIV 10 ! 2-Rise for Transmit On/Off Power DISP:PVT:WIND3:TRAC:Y:PDIV 10 ! 3-Fall for Transmit On/Off Power
Dependencies	In measurements that support both Log and Lin scales, Scale/Div is grayed out in linear Y scale. Sending the equivalent SCPI command does change the Scale/Div, though it has no affect while in Lin.

Couplings	In measurements that support Auto Scaling, when the Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, Auto Scaling automatically changes to Off.
Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20dB
Resolution	0.1 ! all measurements unless noted below Swept SA For values from 1-20 resolution is 1 dB For values from 0.1 to 0.9, resolution is 0.1 dB Spectrum Emission Mask, Complex Spectrum 0.01
Annotation	<value> dB/ left upper of graph ! all measurements unless noted In log scale, the Scale/Div is shown in the upper left side of the display. In Lin mode, no annotation is displayed. ! Swept SA
Status Bits/OPC dependencies	None

### Backwards Compatibility SCPI

Window Numbers used to be a combination of View and Window, now the VIEW parameter is not used and defaults to 1. All Windows are referenced through VIEW1. For backwards compatibility the old View and Window numbers are honored as below:

Window	Old SCPI Command	New SCPI Command
PVT - Burst	:DISP:PVT:VIEW[1]:WIND:TRAC:Y:PDIV 10	:DISP:PVT:WIND1:TRAC:Y:PDIV 10
PVT - Rise	:DISP:PVT:VIEW2:WIND:TRAC:Y:PDIV 10	:DISP:PVT:WIND2:TRAC:Y:PDIV 10
PVT - Fall	:DISP:PVT:VIEW2:WIND2:TRAC:Y:PDIV 10	:DISP:PVT:WIND3:TRAC:Y:PDIV 10

### Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISP:PVTime:WINDow[1] 2 3:TRACe:Y[:SCALE]:RPOSition TOP   CENTer   BOTTom</code> <code>:DISP:PVTime:WINDow[1] 2 3:TRACe:Y[:SCALE]:RPOSition?</code>
----------------	---

Window numbers are as follows:

Burst: 1

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On/Off Power Measurement

	Rise: 2 Fall: 3
Example	:DISP:PVT:WIND:TRAC:Y:RPOS CENT ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND:TRAC:Y:RPOS? ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND2:TRAC:Y:RPOS CENT ! 2-Rise for Transmit On/Off Power :DISP:PVT:WIND3:TRAC:Y:RPOS CENT ! 3-Fall for Transmit On/Off Power
Preset	TOP
State Saved	Saved in instrument state.
Range	Top Ctr Bot
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position

Backwards Compatibility SCPI

Window Numbers used to be a combination of View and Window, now the VIEW parameter is not used and defaults to 1. All Windows are referenced through VIEW1. For backwards compatibility the old View and Window numbers are honored as below:

Window	Old SCPI Command	New SCPI Command
PVT - Burst	:DISP:PVT:VIEW[1]:WIND:TRAC:Y:RPOS CENT	:DISP:PVT:WIND[1]:TRAC:Y:RPOS CENT
PVT - Rise	:DISP:PVT:VIEW2:WIND:TRAC:Y:RPOS CENT	:DISP:PVT:WIND2:TRAC:Y:RPOS CENT
PVT - Fall	:DISP:PVT:VIEW2:WIND2:TRAC:Y:RPOS CENT	:DISP:PVT:WIND3:TRAC:Y:RPOS CENT

**Auto Scaling**

Toggles the Auto Scaling function between On and Off. When Auto Scaling is On, pressing the Restart front-panel key results in automatically determining scale per division and reference values based on the measurement results.

When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.

Remote Command	:DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:Y[:SCALE]:COUPle 0   1   OFF   ON :DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:Y[:SCALE]:COUPle?
----------------	--

Window numbers are as follows:

- Burst: 1
- Rise: 2

	Fall: 3
Example	<pre>:DISP:PVT:WIND:TRAC:Y:COUP ON ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND:TRAC:Y:COUP? ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND2:TRAC:Y:COUP ON ! 2-Rise for Transmit On/Off Power :DISP:PVT:WIND3:TRAC:Y:COUP? ! 2-Fall for Transmit On/Off Power</pre>
Couplings	<p>When Auto Scaling is On, and the Restart front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results.</p> <p>When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.</p>
Preset	<p>1 ! Measurements other than Spot Frequency</p> <p>0 ! Spot Frequency</p>
State Saved	Saved in instrument state.
Range	On Off

#### Backwards Compatibility SCPI

Window Numbers used to be a combination of View and Window, now the VIEW parameter is not used and defaults to 1. All Windows are referenced through VIEW1. For backwards compatibility the old View and Window numbers are honored as below:

Window	Old SCPI Command	New SCPI Command
PVT - Burst	:DISP:PVT:VIEW[1]:WIND:TRAC:Y:COUP ON	:DISP:PVT:WIND[1]:TRAC:Y:COUP ON
PVT - Rise	:DISP:PVT:VIEW2:WIND:TRAC:Y:COUP ON	DISP:PVT:WIND2:TRAC:Y:COUP ON
PVT - Fall	:DISP:PVT:VIEW2:WIND2:TRAC:Y:COUP ON	DISP:PVT:WIND3:TRAC:Y:COUP ON

### 3.7.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 1175](#)
- See ["Single-Attenuator Configuration" on page 1176](#)

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

**Dual-Attenuator Configurations**

Configuration 1: Mechanical attenuator + optional electronic attenuator

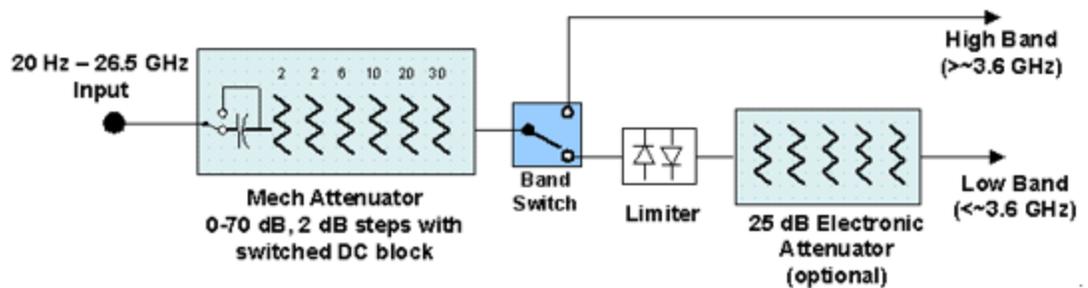


Configuration 2: Mechanical attenuator, no optional electronic attenuator

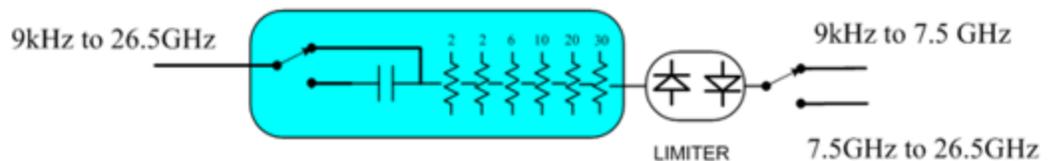

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

### Single-Attenuator Configuration

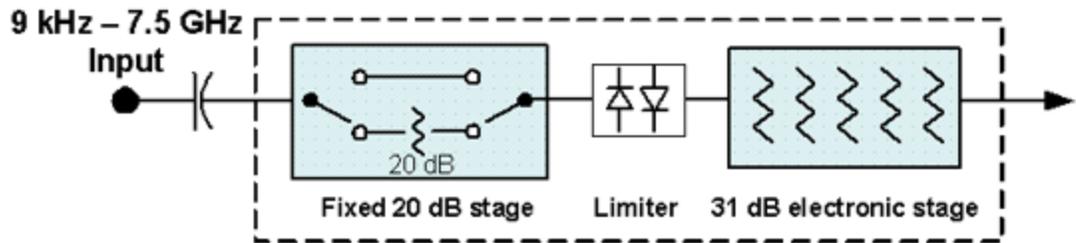

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



**Dual Attenuator**



**Single Attenuator**

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

### Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

---

Remote Command    `[ :SENSe]:POWer[:RF]:FRATten <rel_amp1>`  
                          `[ :SENSe]:POWer[:RF]:FRATten?`

---

Example                `:POW:FRAT 14`

: POW: FRAT?	
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and " <b>Mech Atten</b> " on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the <b>Input</b> is <b>RF</b>, and the <b>Input Port</b> is <b>RF Input 2</b>, and the Full Range Attenuator is installed:            On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> <li>- If the sweep is entirely &lt; 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten</li> <li>- If the sweep is entirely &gt; 50 GHz, the value shown after "Atten:" is equal to Full Range Atten</li> <li>- If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol "&gt;=" and is equal to Full Range Atten</li> </ul> <p>In the <b>Amplitude</b>, "<b>Y Scale</b>" on page 2153 menu, and the Atten <b>Meas Bar</b> dropdown menu panel, a summary is displayed as follows:            "Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten            "Total Atten above 50 GHz" followed by the value of Full Range Atten            For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> <li>- Attenuator summary:</li> <li>- Total Atten below 50 GHz: 30 dB</li> <li>- Total Atten above 50 GHz: 20 dB</li> </ul>

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "**Internal Preamp**" on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "**Attenuator Configurations and Auto/Man**" on page 1179

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation &lt;rel_ampl&gt;</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code>  Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of <b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " <a href="#">Elec Atten</a> " on page 2164 See " <a href="#">Attenuator Configurations and Auto/Man</a> " on page 1179 for more information on the <b>Auto/Man</b> functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none"> <li>- If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>- Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>, <b>External Gain</b>, <b>Ref Level Offset</b>, <b>Max Mixer Level</b>, <b>μW Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "<a href="#">Full Range Atten</a>" on page 2160 from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul> <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when <b>Mech Atten</b> is in <b>Auto</b>, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is &lt;= 7.5 GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>
Preset	<b>Auto</b> The Auto value is 10 dB
State Saved	Saved in instrument state
Min	0 dB  The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On/Off Power Measurement

Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
<p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>		
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)</p> <p>When in Manual, a # sign appears in front of Atten in the annotation</p>	
<p>Auto Function</p>		
Remote Command	<pre>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1 [:SENSe]:POWer[:RF]:ATTenuation:AUTO?</pre>	
Example	<p>Turn <b>Auto Mech AttenON</b>:</p> <pre>:POW:ATT:AUTO ON</pre>	
Dependencies	<pre>:POW:ATT:AUTO</pre> <p>is only available in measurements that support <b>Auto</b>, such as Swept SA</p>	
Preset	<pre>ON</pre>	

### Attenuator Configurations and Auto/Man

As described under ["Attenuation" on page 2158](#), there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using ["Mech Atten" on page 1177](#) (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in

the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about “soft” attenuation.

NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see "[More Information](#)" on page 1182

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no “electronic attenuator”; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a “soft” attenuation. The “soft” attenuation is treated as an addition to the “main” attenuation value set by the <b>Attenuation</b> control or <b>:POW:ATT</b>, and affects the total attenuation displayed on the <b>Attenuation</b> control and the Meas Bar</p> <p>The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is &gt; 3.6 GHz, then the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If "<b>Internal Preamp</b>" on page 2183 is <b>ON</b> (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the <b>Stop Freq</b> of the instrument is limited to 3.6 GHz and <b>Internal Preamp</b> is unavailable</p> <p>If "<b>LNA</b>" on page 2185 is <b>ON</b>, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> <li>- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes</li> <li>- Transmit On Off Power measurement in 5GNR Mode</li> <li>- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode</li> <li>- Burst Power measurement in Spectrum Analyzer Mode</li> </ul> <p>The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement</p>
Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <b>Mechanical Attenuator Transition Rules</b> " on page 1182
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	<p>Dual-Attenuator configuration: 24 dB</p> <p>Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>
Annotation	See Annotation under the <b>Mech Atten</b> control description

### Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	<code>OFF</code> (Disabled) for Swept SA measurement <code>ON</code> (Enabled) for all other measurements that support the electronic attenuator

#### NOTE

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

### More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1183](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or

knob, and it behaves as it normally would in manual mode

- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

### **Using the Electronic Attenuator: Pros and Cons**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-

decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

### Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "[Pre-Adjust for Min Clipping](#)" on page 2168.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

### Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code>

	<code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 1186

Selection	SCPI	Note
Off	<code>OFF</code>	This is the default setting
On	<code>ON</code>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <code>COMBined</code>
Elec Atten Only	<code>ELECTrical</code>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<code>COMBined</code>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>
Notes	The parameter option <code>ELECTrical</code> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <code>COMBined</code> is mapped to <code>ELECTrical</code> in Single-Attenuator models. If you send <code>COMBined</code> , it sets the function to <b>ON</b> and returns <code>ELEC</code> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <code>COMBined</code>
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " <a href="#">Elec Atten</a> " on page 2164 is <b>OFF</b> or grayed-out, " <a href="#">Pre-Adjust for Min Clipping</a> " on page 1185 is grayed-out

	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes	
Preset	OFF when Elec Atten is Disabled at preset, otherwise ELEC	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten
	Single-Attenuator models:	Off   On


#### Backwards Compatibility Command

Notes	ON aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) OFF aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF	
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0 [:SENSe]:POWer[:RF]:RANGe:AUTO?	

### Adjustment Algorithm


The algorithms for the adjustment are documented below:

### Single-Attenuator Models

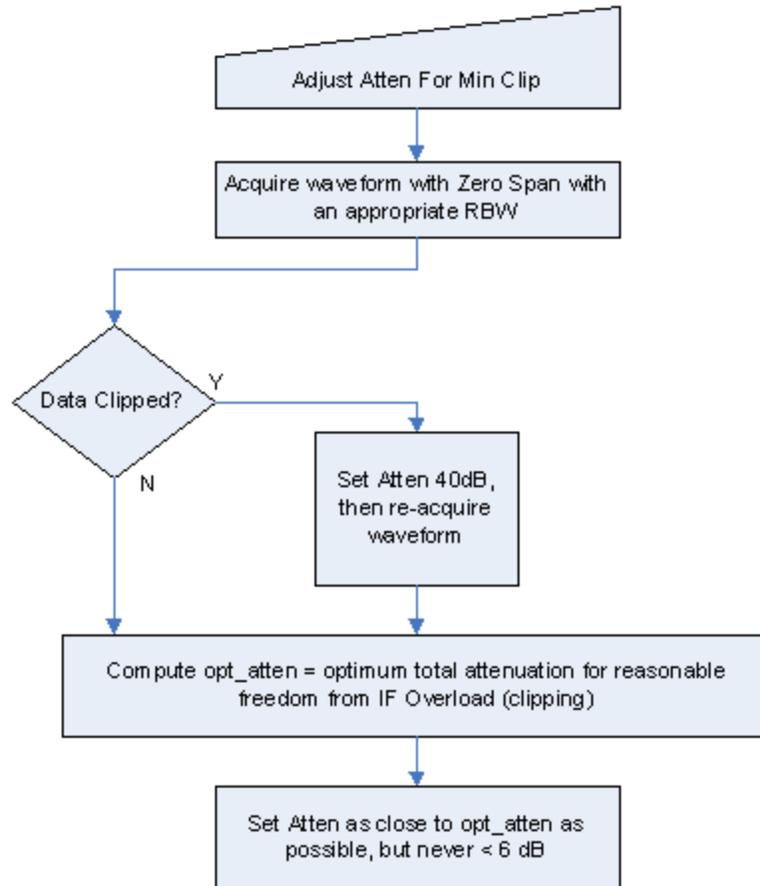


### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 1185 selection is Mech + Elec Atten:

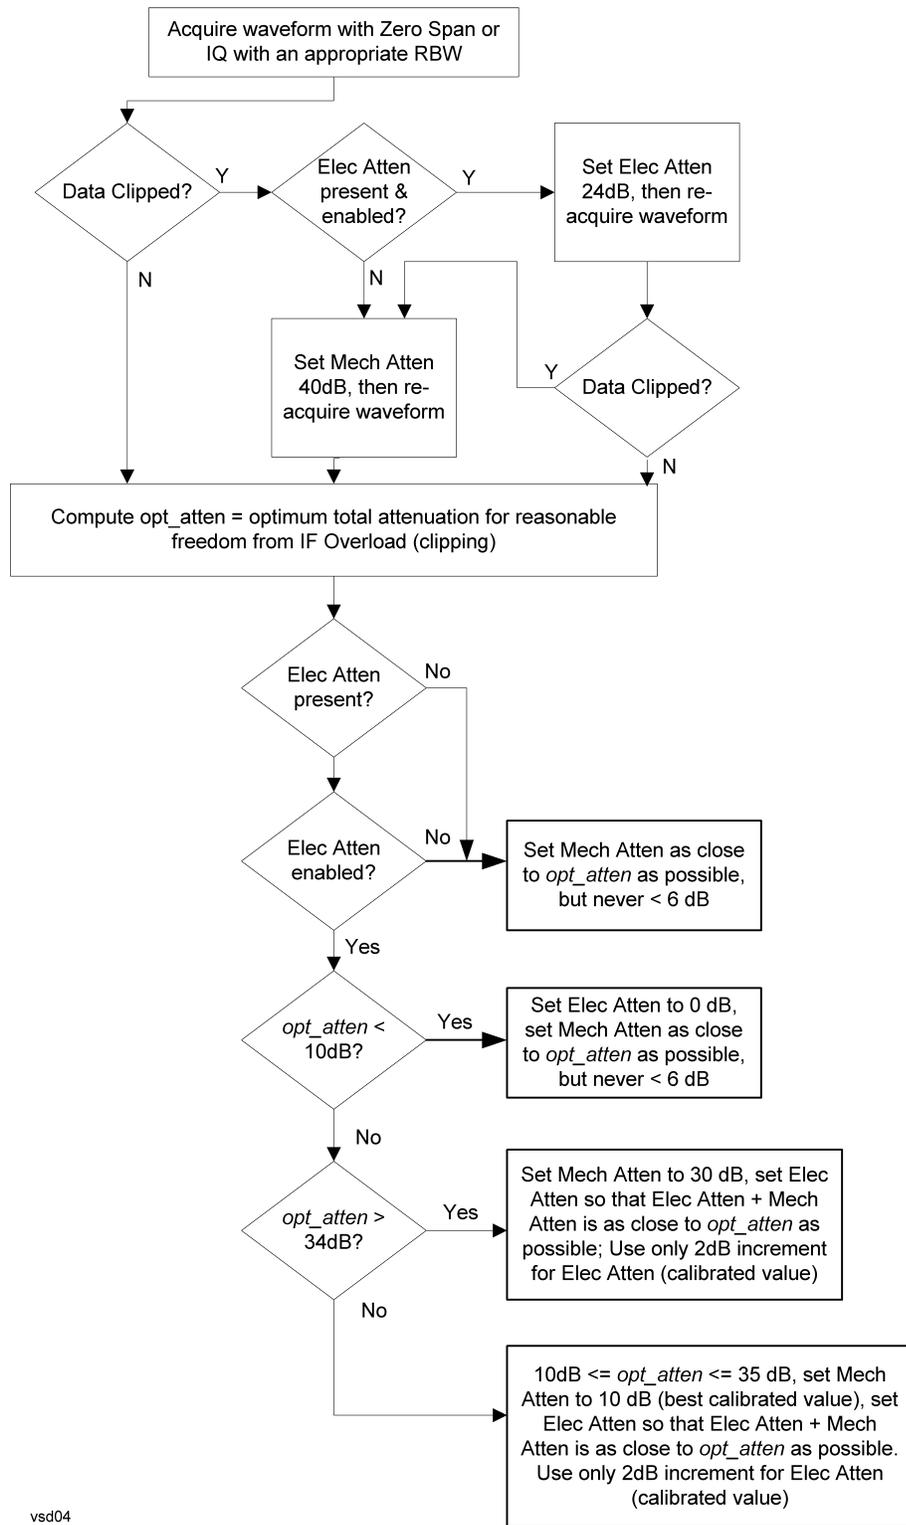

"Pre-Adjust for Min Clipping" on page 1185 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

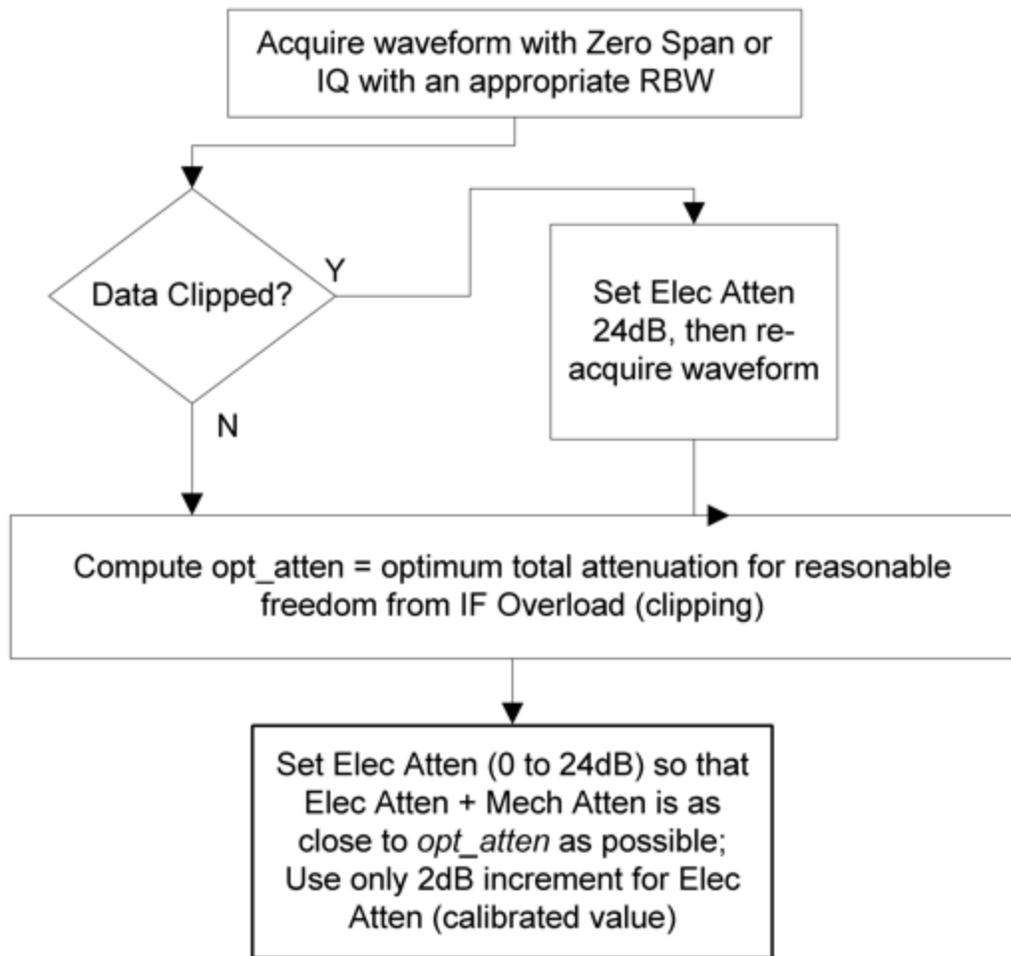

## Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.7.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

### Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGE &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGE?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> . The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

### Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements


### Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

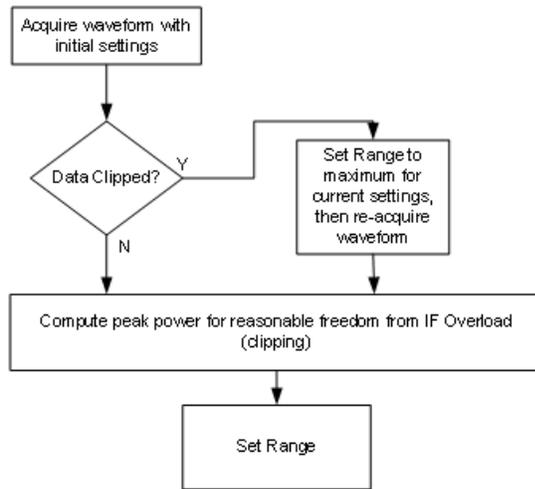

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:PARatio &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:PARatio?</code>	
Example	<code>:POW:RANG:PAR 12 dB</code>	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.7.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because "[Software Preselection](#)" on page 2195 is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on "[Preselector Adjust](#)" on page 2182 changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in "[Proper Preselector Operation](#)" on page 1194.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram</b> View</li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in " <a href="#">Preselector Adjust</a> " on page 2182
Status Bits/OPC dependencies	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

## Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "**Presel Center**" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Preset	0 MHz

State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PADJust</code> <code>[ :SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXTERNAL</code> <code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

**NOTE**

The maximum **Center Frequency** for **Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <b>LOW</b> instead of <b>FULL</b> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<b>LOW</b>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)

Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<b>OFF</b>

**LNA**

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to "Internal Preamp" on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with "Internal Preamp" on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "More Information" on page 1198

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

## More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and Internal Preamp. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
µW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, Internal Preamp is switched off (even if you have its switch set to ON). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the Internal Preamp annotation displays in amber, to warn you that the actual state of Internal Preamp does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
µW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 1203
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 1205
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 1206

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "<b>Presel Center</b>" on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b></p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b>. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul> <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are grayed-out if the current measurement does not support them</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, “Setting Conflict; Feature not supported for this measurement”</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>IQ Analyzer</td> <td>MPB option present and licensed: <b>MPB</b></td> </tr> <tr> <td>Pulse</td> <td>MPB option not present and licensed: <b>STD</b></td> </tr> <tr> <td>RTSA</td> <td></td> </tr> <tr> <td>Avionics</td> <td></td> </tr> <tr> <td>All other Modes</td> <td><b>STD</b></td> </tr> <tr> <td>-</td> <td></td> </tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: <b>MPB</b>	Pulse	MPB option not present and licensed: <b>STD</b>	RTSA		Avionics		All other Modes	<b>STD</b>	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: <b>MPB</b>														
Pulse	MPB option not present and licensed: <b>STD</b>														
RTSA															
Avionics															
All other Modes	<b>STD</b>														
-															
State Saved	Save in instrument state														
Range	Standard Path   Low Noise Path Enable   μW Presel Bypass   Full Bypass Enable														

Annotation In the Meas Bar, if the Standard path is chosen:  
 μW Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 μW Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 μW Path: LNP,On  
 If the preselector is bypassed:  
 μW Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 μW Path: FByp,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 μW Path: FByp,On

### μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Measurement	$\mu$ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is presel bypass if presel bypass is enabled, auto $\mu$ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

Measurement	$\mu$ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 1201 above
Preset	ON
Range	ON OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

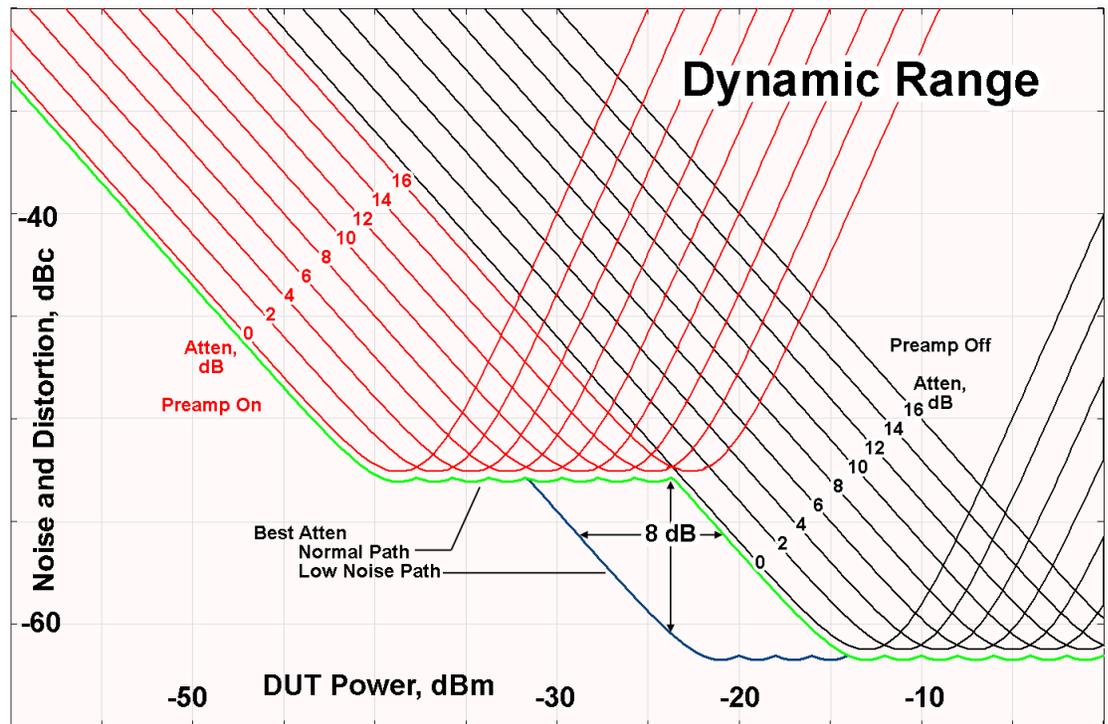

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **μW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

#### CAUTION

When **Full Bypass Enable** is selected, and **"Y Scale"** on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

---

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path ( <code>:POW:MW:PATH STD</code> ) The <b>OFF</b> parameter sets path <b>MPB</b> ( <code>:POW:MW:PATH MPB</code> )
Preset	<b>ON</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreseL:STATe 0   1   ON   OFF</code>	
	<code>[ :SENSe]:POWer[:RF]:SWPreseL:STAT?</code>	
Example	<code>:POW:SWPR:STAT 1</code>	
	<code>:POW:SWPR:STAT?</code>	
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements	
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state	
Preset	N9041B	<b>OFF</b>
	N9042B+V3050A	<b>ON</b>
	M9410A/11A	<b>ON</b>
State Saved	Saved in instrument state	

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel NORMa1   ADVanced</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel?</code>
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 2195 is OFF. The grayout message is “Unavailable unless SW Presel enabled”
Preset	N9041B <b>ADVanced</b> N9042B+V3050A <b>NORMa1</b>
State Saved	Saved in instrument state

## SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPResel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <b>Prefilter Presets</b> " on page 1212 below

State Saved      Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

### 3.7.4 BW

This key allows you to set the Bandwidth of the signal being measured.

Preset To Standard	Info BW	Notes
1.4 MHz ( 6 RB)	1.5 MHz	
3.0 MHz ( 15 RB)	3.0 MHz	
5.0 MHz ( 25 RB)	5.0 MHz	
10.0 MHz (50 RB)	10.0 MHz	Need B25 opt
15.0 MHz (75 RB)	25.0 MHz	Need B25 opt
20.0 MHz (100 RB)	25.0 MHz	Need B25 opt

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On/Off Power Measurement

Bandwidth	BS Info BW	UE Info BW	Notes
1.4 MHz ( 6 RB)	1.095 MHz	1.08 MHz	Need B40 or wider
3.0 MHz ( 15 RB)	2.715 MHz	2.7 MHz	Need B40 or wider
5.0 MHz ( 25 RB)	4.515 MHz	4.5 MHz	Need B40 or wider
10.0 MHz (50 RB)	9.015 MHz	9.0 MHz	Need B40 or wider
15.0 MHz (75 RB)	13.515 MHz	13.5 MHz	Need B40 or wider
20.0 MHz (100 RB)	18.015 MHz	18.0 MHz	Need B40 or wider

### 3.7.4.1 Settings

The Settings tab contains the basic Bandwidth functions. In most measurements it is the only tab under Bandwidth.

#### Info BW

Allows you to enter a frequency value to set the channel bandwidth that will be used for data acquisition.

Remote Command	<pre>[ :SENSe]:PVT:BANDwidth &lt;freq&gt; [ :SENSe]:PVT:BANDwidth? [ :SENSe]:PVTime:BANDwidth:AUTO ON   OFF   1   0 [ :SENSe]:PVTime:BANDwidth:AUTO?</pre>
Example	<pre>PVT:BAND 6.0 MHz !Transmit On/Off Power PVT:BAND?    !Transmit On/Off Power :PVT:BAND:AUTO OFF :PVT:BAND:AUTO?</pre>
Dependencies	In the Transmit On/Off Power measurement, the Info BW control contains an Auto parameter. When it is set to AUTO, the bandwidth is automatically calculated according to the channel bandwidth.
Couplings	<p>This parameter is coupled with LTE/LTE-Advanced Preset to Standard parameters.</p> <p>When the state of info BW is Auto, the info BW value is automatically determined by the requirement of the standard. Otherwise, the info BW value depends on User's input.</p> <p>When the info BW value is set manually, the state of info BW is automatically changes to Man.</p>
Preset	<p>Hardware Dependent</p> <p>Option B25: 5 MHz</p> <p>Option B40 and above: 4.515 MHz</p> <p>ON</p>
State Saved	<p>Saved in instrument state.</p> <p>Yes</p>

Range	Auto Man
Max	<p>The analyzer's max info bandwidth is option dependent: B1Y=160 MHz, B1X=140 MHz, B1A=125 MHz, B85= 85 MHz, B40=40 MHz, B25=25 MHz, else 10 MHz</p>
Max	<p>Analyzer Max Info BW</p> <p>The analyzer's max info bandwidth is option dependent: B1Y=160 MHz, B1X=140 MHz, B1A=125 MHz, B85= 85 MHz, B40=40 MHz, B25=25 MHz, else 10 MHz</p>
Resolution	1 Hz

### 3.7.5 Display

The Display key opens the Display Menu, which lets you configure display items for the current Mode, Measurement View or Window.

#### 3.7.5.1 Meas Display

The Meas Display tab contains controls for setting up the display for the current Measurement, View or Window.

#### Trigger Line

Turns the Trigger Line On or Off.

Remote Command	<code>:DISPlay:PVTtime:VIEW[1]:WINDow[1]:TRIGger[:STATe] ON   OFF   1   0</code> <code>:DISPlay:PVTtime:VIEW[1]:WINDow[1]:TRIGger[:STATe]?</code>
Example	<code>:DISP:PVT:VIEW:WIND:TRIG ON</code> <code>:DISP:PVT:VIEW:WIND:TRIG?</code>
Preset	OFF
State Saved	Yes
Range	On Off

#### Burst Line

Turns the Burst Line On or Off. This line indicates where is the detected burst start and burst end.

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

Remote Command	<code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:BLINes[:STATe] ON   OFF   1   0</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:BLINes[:STATe]?</code>
Example	<code>:DISP:PVT:VIEW:WIND:BLIN ON</code> <code>:DISP:PVT:VIEW:WIND:BLIN?</code>
Preset	OFF
State Saved	Yes
Range	On Off

### Burst Timing Indicator Line

Turns the Burst Timing Indicator Line On or Off. Note that this line is supported only in the RF Envelop window of the Burst view. The line shown on screen is just to indicate which part of signal is active burst and which part is inactive burst and nothing to do with the Pass/Fail (shown at the upper-left corner of screen) criteria. Regarding the Pass/Fail criteria, please refer to ["Limit" on page 1256](#).

Remote Command	<code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:LIMit:MASK OFF   ON   0   1</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:LIMit:MASK?</code>
Example	<code>DISP:PVT:VIEW:WIND:LIM:MASK 1</code> <code>DISP:PVT:VIEW:WIND:LIM:MASK?</code>
Notes	This parameter only hides or shows the Burst Timing Indicator Line on the display.
Couplings	None
Preset	ON
State Saved	Yes
Range	On Off

### Ramp Lines

Turns the Ramp Line On or Off. This line indicates the start and the end of ramp up and ramp down.

Remote Command	<code>:DISPlay:PVTime:RAMP[:STATe] OFF   ON   0   1</code> <code>:DISPlay:PVTime:RAMP[:STATe]?</code>
Example	<code>:DISP:PVT:RAMP ON</code> <code>:DISP:PVT:RAMP?</code>
Preset	OFF
State Saved	Yes
Range	On Off

### 3.7.5.2 Views

The Transmit On/Off Power measurement has two views.

These Views are multiple-window Views. When in a multiple window View, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the View changes, the default menu is Frequency, unless otherwise specified in the View description.

View	String ID	Numeric ID	Window
Burst	ALL	1	RF Envelope Metrics
Rise & Fall	BOTH	2	Rise Fall Metrics

You can select the desired measurement view from the selections listed in the table below. There are two available commands, allowing you to select the view using either a string ID or a numeric ID value.

- :DISP:PVT:VIEW[:SEL] <string ID>
- :DISP:PVT:VIEW:NSEL <numeric ID>

#### View Selection by Name

Remote Command	<code>:DISPlay:PVTime:VIEW[:SElect] ALL   BOTH</code> <code>:DISPlay:PVTime:VIEW[:SElect]?</code>
Example	DISP:PVT:VIEW ALL DISP:PVT:VIEW?
Preset	ALL
State Saved	Saved in instrument state.
Range	Burst   Rise & Fall

#### View Selection by Number

Remote Command	<code>:DISPlay:PVTime:VIEW:NSElect &lt;integer&gt;</code> <code>:DISPlay:PVTime:VIEW:NSElect?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.7 Transmit On|Off Power Measurement

---

Example	DISP:PVTime:VIEW:NSEL 2 DISP:PVTime:VIEW:NSEL?
Preset	1
State Saved	Saved in instrument state.
Min	1
Max	2

---

### Burst

Windows:

- RF Envelope
- Metrics

View Burst envelope, the length of burst can be determined by slot number in mode setup.

---

Example DISP:PVT:VIEW ALL

### Rise&Fall

Windows:

- Rise
- Fall
- Metrics

Zooms in on the rising and falling portions of the burst being tested.

---

Example DISP:PVT:VIEW BOTH

### 3.7.5.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

### Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on

and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<b>ON</b>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

## Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state

### Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

### Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When `OFF`, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

## Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DELeTe</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DELeTe</code>
Delete All But This Screen	<code>:INSTrument:SCReen:DELeTe:ALL</code>
Add Screen	<code>:INSTrument:SCReen:CREate</code>
Rename Screen	<code>:INSTrument:SCReen:REName</code>
Sequencer On/Off	<code>:SYSTem:SEQuencer</code>

Remote Command	<code>:DISPlay:ENABle OFF   ON   0   1</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight <b>OFF</b> and <code>:DISP:ENAB ON</code> turns Backlight <b>ON</b> , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>
Preset	<code>ON</code> Set by <code>:SYST:DEF MISC</code> , but not affected by <code>*RST</code> or <code>:SYSTem:PRESet</code>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<code>:SYST:PRES</code> no longer turns on <code>:DISPlay:ENABle</code> as it did in legacy analyzers

### 3.7.6 Freq

The Freq key opens the Frequency menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the Frequency menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

#### 3.7.6.1 Settings

The Settings Tab contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

#### Carrier Reference Frequency

The parameter is set the reference frequency of all the carriers. The center frequencies of carriers are defined as offset frequency from this value.

If the following conditions are satisfied at the same time:

- the Number of Component Carrier equals to 1
- the Center Freq Offset equals to 0 Hz
- the mode of the Center Freq is Auto

the Center Freq is equivalent to Carrier Ref Freq.

When the Center Freq changes in such conditions, the mode of the Center Freq keeps as Auto and the Carrier Ref Freq will be changed to same value. The major purpose of this coupling is to keep BWCC with legacy LTE/LTE TDD, in which :SENSe:FREQuency:CENTer is used to set up the Frequency of the measurement.

Remote Command	<code>[ :SENSe]:CCARrier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFerence?</code>
Example	<code>CCAR:REF 2GHz</code> <code>CCAR:REF?</code>
Preset	1GHz
State Saved	Saved in instrument state
Min	Depends on instrument minimum center frequency. Same as Center Frequency
Max	Depends on instrument maximum center frequency. Same as Center Frequency
Resolution	1 Hz

### 3.7.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is set to Normal and placed it at the center of the screen on the trace determined by the Marker Trace rules.

For more detailed information on the types of Markers and the interaction between Markers, see the Marker section of the Swept SA measurement.

#### 3.7.7.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

The Select Marker control appears above the menu panel, indicating that it applies to all controls in the Marker menu panels. Select Marker is blanked if you select a tab whose controls do NOT depend on the selected marker (e.g., Counter).

On any menu tab for which Select Marker displays, the first control is always Marker Frequency|Time.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak.
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state.
Annunciation	Appears in the marker results block label for <b>Normal</b> and <b>Delta</b> markers.

### 3.7.7.2 Settings

The controls on the Settings tab include the Marker active function and a radio button selection of the marker control mode (Normal, Delta, or Off) for the selected marker, as well as additional functions that help you use markers.

#### Marker Time

Set the X Axis value of the selected marker in the current X Axis Scale unit. If the marker mode is off, the SCPI command has no affect other than to cause the marker to become selected.

**NOTE**

**The X label and value can change if the marker is moved to a trace with a different domain.**

If the marker mode is Normal, the Marker X position is absolute.

If the mode is Delta, then the X position is relative to the reference marker.

The valid X positions are the actual data points in the trace; the marker cannot be located between points. If a SCPI command attempts to place the marker between two points, the X value snaps to the closest point.

Note that for Vector or Constellation format, the X axis is perpendicular to the screen (because the screen axes are used to show the real and imaginary parts of the Y value), so adjusting the X value in this case only causes the marker to move horizontally if the real Y value changes.

Remote Command	<code>:CALCulate:PVTime:MARKer[1] 2 ... 12:X &lt;real&gt;</code> <code>:CALCulate:PVTime:MARKer[1] 2 ... 12:X?</code>
Example	CALC:PVTime:MARK:X 0.325 CALC:PVTime:MARK:X?
Notes	Marker X does not go outside the bounds of the data. If you attempt to set it to a value outside the bounds, it is clipped at the closest limit and error -222 Data Out of Range is generated. If suffix is sent, it must match the X units for the trace the marker is on. Otherwise, error -138, "Suffix not allowed" is generated. If you try to read or set the position of a Delta marker, remember that the position is in relative units.
Couplings	See <a href="#">"Coupling of Delta and Reference markers"</a> on page 1225.
Preset	None until marker is turned on.
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data

### SCPI only X position commands

Via SCPI, the marker position can also be set or queried in trace points. In this case, the position setting or reading is absolute regardless of control mode.

**NOTE** The entered value in Trace Points is immediately translated into the current domain units for setting the value of the marker. The marker's value in domain units, NOT trace points, is preserved if a change is made to the X Axis scale settings. Thus, if you use this command to place a marker on point 500, which happens at that time to correspond to 13 GHz, and then you change the Start Frequency so that point 500 is no longer 13 GHz, the marker stays at 13 GHz, NOT at point 500.

If the trace the marker is on a 2-dimensional domain, then the points are numbered in the following way:

Starting at the minimum X and Z position, this point is numbered 0. Each time you increment the point number, increment the X value to the next available value. When X reaches the maximum X position, then reset X to the minimum and increment the Z value. Then continue incrementing the X position in the same manner as before.

Note that for symbol tables, which have no axes, incrementing the X position in points moves the marker consecutively through all table entries.

Remote Command	<code>:CALCulate:PVTime:MARKer[1] 2 ... 12[:X]:POSition &lt;real&gt;</code> <code>:CALCulate:PVTime:MARKer[1] 2 ... 12[:X]:POSition?</code>
Example	CALC:PVTime:MARK:POS 25 CALC:PVTime:MARK:POS?
Notes	When a marker mode is changed from off to any other mode, the X position is set to mid-screen.
Preset	None until marker is turned on.
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data

Remote Command	<code>:CALCulate:PVTime:MARKer[1] 2 ... 12:X:UNIT?</code>
Example	CALC:PVTime:MARK:X:UNIT?
Notes	Query Only

## Coupling of Delta and Reference markers

The following coupling rules apply from the front panel and also if the equivalent SCPI commands are sent.

Pressing the Delta key causes the selected marker to become a delta marker if it is not already. Also, the selected marker's reference is affected as follows:

- If the reference marker was off, it is turned on as a fixed marker.
- The reference marker is moved to the trace of the selected marker and set to the same position as the selected marker.
- If the delta marker has a marker function turned on, the reference marker takes on the same function (with the same band limits).

Exception: Pressing Delta when the selected marker's mode is not yet Delta does not move or change a reference marker that is already turned on (Normal, or Delta) and on the same trace as the selected marker. It merely changes the selected marker's mode to Delta and shows the current offset between it and the reference. If you press Delta again (when the selected marker is already in Delta mode) then the reference is moved and modified as described above.

When a delta marker is changed to any other control mode, if its reference marker is fixed then the reference marker is also turned off.

If you move a delta marker to a different trace, it is forced to Normal mode and if its reference is fixed, the reference is turned off.

A delta marker is forced to Normal mode if you turn its reference off or if you move its reference to another trace. (In the latter case the reference is not turned off even if it is fixed.)

If you change the selected marker's reference (using the Marker, Properties, Relative To), the selected marker is forced to Delta mode. This change of the selected marker to Delta mode causes its new reference's control mode and position to change as described above.

## Marker Mode

Sets the marker control mode to **Normal**, **Delta**, or **Off**.

All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules.

The default active function is the active function for the currently selected marker control mode. If the current control mode is Off, there is no active function and the active function is turned off.

Remote Command	<code>:CALCulate:PVTime:MARKer[1] 2 ... 12:MODE POSition   DELTa   OFF</code> <code>:CALCulate:PVTime:MARKer[1] 2 ... 12:MODE?</code>
Example	CALC:PVTime:MARK3:MODE POS CALC:PVTime:MARK3:MODE?
Preset	OFF
State Saved	Saved in instrument state.
Range	Normal   DELTa (D)   Off

### Backward Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker which is OFF to state ON or 1 puts it in Normal mode and places it at the center of the screen.


Remote Command	<code>:CALCulate:PVTime:MARKer[1] 2 ... 12:STATe OFF   ON   0   1</code> <code>:CALCulate:PVTime:MARKer[1] 2 ... 12:STATe?</code>
Example	CALC:PVTime:MARK3:STAT ON CALC:PVTime:MARK3:STAT?
Preset	OFF
State Saved	Saved in instrument state
Range	On Off

### Delta Marker (Reset Delta)

Pressing this button is exactly the same as pressing the “Delta” selection on the Marker Mode radio button. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

### Marker Settings Diagram

The Marker Settings Diagram lets you configure the Marker system using a visual utility.

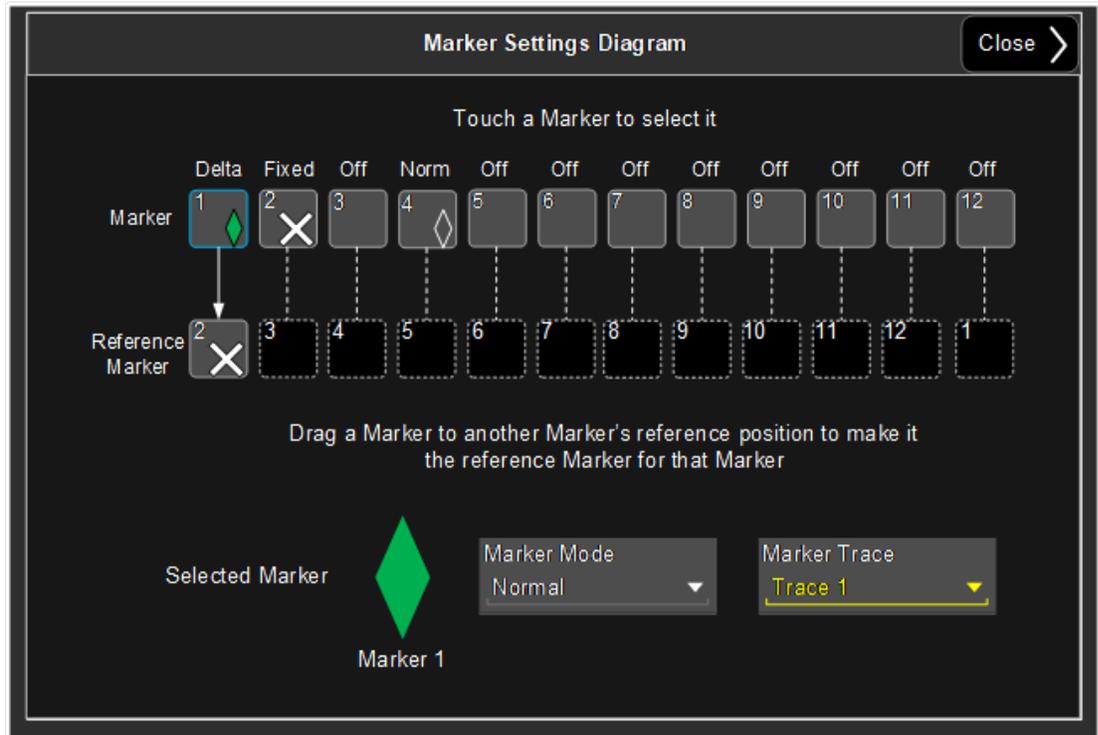

### All Markers Off

Turns off all markers.

Remote Command `:CALCulate:PVTime:MARKer:AOFF`

Example `CALC:PVTime:MARK:AOFF`

### Couple Markers

When this function is On, moving any marker causes an equal X Axis movement of every other marker which is not Off. "equal X Axis movement" means to preserve the difference between each marker's X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

Remote Command `:CALCulate:PVTime:MARKer:COUple[:STATe] ON | OFF | 1 | 0`  
`:CALCulate:PVTime:MARKer:COUple[:STATe]?`

Example `CALC:PVTime:MARK:COUP ON`  
`CALC:PVTime:MARK:COUP?`

Notes In general, when coupling is turned on then all Normal or Delta markers with the same (or equivalent) domain as the selected marker move in the same manner as the selected marker. See "[Peak Search](#)" on

page 1228

Preset	OFF (presets on Mode Preset and All Markers Off)
State Saved	Saved in instrument state

### More Information

Coupling is relative between markers on the same trace (so that their relative positions in the domain are maintained). Coupling can be absolute between markers on different traces that have equivalent domains. That is, they have the same position in the domain, if possible. (As an example of equivalent domains, demodulated symbol positions can be derived from time by using the current symbol rate). When you move the selected marker, then others on related traces track it. This enables you to correlate different measurement results. For example, you can place a marker at a particular symbol time on an error vector magnitude display, have tracking markers on the symbol table and pre-demod time trace showing you the symbol value, and the actual time-varying signal value at the same point in time.

Absolute coupling is performed only for the lowest numbered Normal or Delta marker on each trace. All other markers on a trace couple relatively. When you turn on marker coupling, the subset of markers that have the same domain as the selected marker track it and all other markers remain at their current location. The absolutely coupled markers within this subset is moved at this time to match the domain setting of the selected marker, with the relatively coupled markers following accordingly to maintain offsets within their respective traces. Those markers with different domains remain at their current location. When you select a marker with a different domain than the previously selected marker, the subset of markers with that domain go through the same procedure.

Any marker that coupling would move outside its range of X values, remains at the closest limiting value. If the coupled markers are on data that do not have the same domain resolution, then they are positioned as close to each other as possible.

If markers change mode or trace, or trace data is changed below them, the coupling rules are immediately applied to the new set.

#### 3.7.7.3 Peak Search

The controls on the Peak Search tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

NOTE

Pressing the Peak Search hardkey automatically moves you to the Peak Search page of the Marker menu AND performs a Peak Search.

---

NOTE

Pressing the Peak Search tab once you are already IN the Marker menu does NOT perform a Peak Search.

---

## Marker Time

See "[Marker Time](#)" on page 1223.

## Peak Search

Pressing the Peak Search control moves the selected marker to the trace point which has the maximum y-axis value for that marker's trace.

NOTE

Pressing the Peak Search hardkey automatically moves you to the Peak Search page of the Marker menu AND performs a Peak Search.

---

Remote Command	:CALCulate:PVTime:MARKer[1] 2 ... 12:MAXimum
----------------	--

Example	CALC:PVTime:MARK2:MAX The command SYST:ERR? can be used to query the errors to determine if a peak is found. The message "No peak found" will be returned after an unsuccessful search.
---------	--

## Marker Delta

Pressing this button is exactly the same as pressing the "Delta" selection on the Marker Mode radio button on the Settings tab. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

The control is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and change the marker's control mode to Delta without having to access two separate menus.

### 3.7.7.4 Properties

The controls on the Properties tab are used to set certain properties of the selected marker.

## Marker Time

See "Marker Time" on page 1223.

## Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:PVTime:MARKer[1] 2 ... 12:REference &lt;integer&gt;</code> <code>:CALCulate:PVTime:MARKer[1] 2 ... 12:REference?</code>
Example	CALC:PVTime:MARK:REF 5 CALC:PVTime:MARK:REF?
Notes	This command causes the marker specified with the subopcode to become selected. Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped. A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: “Settings conflict; marker cannot be relative to itself.” When queried a single value is returned (the specified marker numbers relative marker).
Couplings	The act of specifying the selected marker’s reference marker makes the selected marker a Delta marker. If the reference marker is off it is turned on in <b>Normal</b> mode at the delta marker location.
Preset	The preset default “Relative To” marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it’s default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1. Set to the defaults by using <b>Restore Mode Defaults</b> . This is not reset by <b>Marker Off, All Markers Off</b> , or <b>Preset</b> .
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle.
Min	1
Max	12
Resolution	1
Annunciation	Appears in the marker label of a <b>Delta</b> marker.

## Marker Trace

Assigns the specified marker to the designated trace.

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

Remote Command	<code>:CALCulate:PVTime:MARKer[1] 2 ... 12:TRACe RFENvelope   MAXHold   MINHold   RMS70</code> <code>:CALCulate:PVTime:MARKer[1] 2 ... 12:TRACe?</code>
Example	CALC:PVTime:MARK:TRAC RFEN CALC:PVTime:MARK:TRAC?
Preset	RF Envelope
State Saved	Yes
Range	RF Envelope Max Hold RF Envelope  Min Hold RF Envelope   70us RMS trace

### Marker Settings Diagram

The Marker Settings Diagram lets you configure the Marker system using a visual utility. This is the same as the "[Marker Settings Diagram](#)" on page 1226 control on the Settings tab.

### 3.7.8 Meas Setup

The Meas Setup menu panel contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the mode.

Notes	None
-------	------

#### 3.7.8.1 Settings

The Settings tab contains frequently used Meas Setup functions to which you will want the fastest access.

#### Average/Hold Number

Sets the number of data acquisitions that are averaged. After the specified number of average counts is reached, the averaging mode (termination control) setting determines the averaging action.

Remote Command	<code>[ :SENSe]:PVTime:AVERage:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:PVTime:AVERage:COUNT?</code>
Example	PVT:AVER:COUN 100 PVT:AVER:COUN?
Preset	10
State Saved	Yes

Min	1
Max	10000
Resolution	1

## Averaging On/Off

Turns averaging on or off.

Remote Command	<code>[ :SENSe]:PVTIme:AVERage[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:PVTIme:AVERage[:STATe]?</code>
Example	PVT:AVER OFF PVT:AVER?
Preset	ON
State Saved	Yes
Range	On Off

## Averaging Mode

Selects the type of termination control used for the averaging function. This determines the averaging action after the specified number of data acquisitions (average count) is reached. You can select between the **Exp** (exponential) and **Repeat** averaging modes. This selection only affects the averaging result after the number of N averages is reached. You can use the **Avg|Hold Number** to set N.

Control	SCPI	Description
Exponential averaging	EXPonential	When Measure is set at Cont, data acquisitions continue indefinitely. After N averages, exponential averaging is used with a weighting factor of N (the displayed average count stops at N). Exponential averaging weights new data more than old data, which allows tracking of slow-changing signals.
Repeat averaging	REPeat	When Measure is set at Cont, data acquisitions continue indefinitely. After N averages is reached, all previous result data is cleared and the average count is set back to 1. This is equivalent to being in Measure Single and pressing the Restart control when the Single measurement finishes.

Remote Command	<code>[ :SENSe]:PVTIme:AVERage:TCONtrol EXPonential   REPeat</code> <code>[ :SENSe]:PVTIme:AVERage:TCONtrol?</code>
----------------	--

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

Example	PVT:AVER:TCON EXP PVT:AVER:TCON?
Preset	REPeat
State Saved	Yes
Range	Exponential Repeat

### Average Type

Specifies the type of trace and result averaging to use.

CONTROL: Pwr Avg (RMS)	True power averaging that is equivalent to taking the RMS value of the voltage. It is the most accurate type of averaging
SCPI: RMS POWer	
CONTROL: Log-Pwr Avg (Video)	Simulates the traditional spectrum analyzer type of averaging by averaging the log of the power
SCPI: LOG LPOWer	

Remote Command	<code>[ :SENSe]:PVTIme:AVERage:TYPE LOG   LPOWer   RMS   POWer</code> <code>[ :SENSe]:PVTIme:AVERage:TYPE?</code>
Example	<code>:SENS:PVT:AVER:TYPE RMS</code> <code>:SENS:PVT:AVER:TYPE?</code>
Preset	RMS
State Saved	Yes
Range	Pwr Avg (RMS) Log-Pwr Avg(Video)

### Component Carrier

Selects the component carrier to be measured in the uplink time mask measurement.

Remote Command	<code>[ :SENSe]:PVTIme:ULINK:CCARrier CC0   CC1   CC2   CC3   CC4</code> <code>[ :SENSe]:PVTIme:ULINK:CCARrier?</code>
Example	PVT:ULINK:CCAR CC0 PVT:ULINK:CCAR?
Dependencies	The parameter is only visible when the direction is uplink. All the component carriers are listed. When invalid component carrier is selected, measurement error message will pop up at the status bar to indicate the component carrier setting is invalid.
Preset	CC0
State Saved	Saved in instrument state

---

Range CC0|CC1|CC2|CC3|CC4

## Ramp Time Length

This parameter indicates the searching window length in which the start of ramp up or the end of ramp down is searched. If it is set shorter than actual ramp time, the ramp may be lost. The start of the searching window is derived from the external trigger when auto timing adjust is off, and is at the actual burst boundary when auto timing adjust is on.

---

Remote Command `[ :SENSe]:PVTIme:RAMP:SEARch:LENGth <time>`  
`[ :SENSe]:PVTIme:RAMP:SEARch:LENGth?`

---

Example PVT:RAMP:SEAR:LENG 1.0  
PVT:RAMP:SEAR:LENG?

---

Preset 17.0 us

---

State Saved Yes

---

Min 1.0 us

---

Max 100.0 us

---

Resolution 100 ns

## Auto Timing Adjustment

In order to check transmit off power is below the 3GPP defined limit, timing reference must be provided in the measurement. This setting specifies how the timing reference is derived in the measurement.

When it is ON, the burst boundary timing is always appropriately adjusted based on the measured ramp up and ramp down edge timings. When it is OFF, the timing reference will be provided by external trigger, expected burst boundaries will be derived from external trigger and frame configuration parameters – UL/DL allocation and special sub-frame configuration.

---

Remote Command `[ :SENSe]:PVTIme:TIMing:REFerence:AUTO ON`  
`[ :SENSe]:PVTIme:TIMing:REFerence:AUTO?`

---

Example PVT:TIM:REF:AUTO ON  
PVT:TIM:REF:AUTO?

---

Dependencies When Auto Timing adjustment is OFF and Trigger type is free run, an advisory message is generated.

---

Preset On

---

State Saved Saved in instrument state

---

Range On|Off

## Off Power Meas Rules

The parameter is to indicate which way to calculate 70us RMS Off Power over the entire OFF period. When it is "Speed", 70 us averaged power is calculated in 35us granularity during OFF period; when it is "Accuracy", the 70us RMS Off Power is calculated for each sample points during OFF period

Remote Command	<code>[ :SENSe ]:PVTime:POFF:MEAS:RULes SPEed   ACCuracy</code> <code>[ :SENSe ]:PVTime:POFF:MEAS:RULes?</code>
Example	PVT:POFF:MEAS:RUL SPE PVT:POFF:MEAS:RUL?
Couplings	When the direction is uplink, the control is always greyed out. There is no 70us RMS off power for uplink signal.
Preset	Speed
State Saved	Saved in instrument state
Range	SPEed ACCuracy

## IF Gain

Accesses the menu that sets ranging in the digital IF when acquiring an I/Q time record.

See "[More Information about IF Gain](#)" on page 1235.

This function is not affected by RF Input Range attenuation.

## More Information about IF Gain

To take full advantage of the RF dynamic range of the analyzer, you can manually turn on or turn off a switched digital IF amplifier. When it is turned on, the signal will get approximately 10 dB of gain.

- Setting IF Gain to Man and selecting High Gain will turn on the digital IF amplifier and get an extra 10 dB gain.
- Setting IF Gain to Auto will activate the Auto rules for IF Gain.

These settings affect sensitivity and IF overloads.

## IF Gain Auto

Activates the Auto Rules for IF Gain. When Auto is active, the IF Gain is set to High Gain under any of the following conditions:

- the input attenuator is set to 0 dB
- the preamp is turned On
- the Max Mixer Level is -20 dBm or lower

For other settings, Auto sets IF Gain to Off.

Remote Command	<code>[ :SENSe]:PVTIme:IF:GAIN:AUTO[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:PVTIme:IF:GAIN:AUTO[:STATe]?</code>
Example	PVT:IF:GAIN:AUTO ON PVT:IF:GAIN:AUTO?
Dependencies	This control does not appear in EXM, VXT, or UXM
Couplings	When either the auto attenuation is active (for example, with an electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed using the following rule The Auto selection sets IF Gain On under any of the following conditions: <ul style="list-style-type: none"> <li>- the input attenuator is set to 0 dB</li> <li>- the preamp is turned on</li> <li>- the Max Mixer Level is -20 dBm or lower</li> </ul> For other settings, Auto sets IF Gain to Off
Preset	OFF
State Saved	Yes
Range	Auto Man

## IF Gain State

Selects the range of IF gain.

- On sets the high gain option, which allows for better noise level measurements
- Off sets low gain when measuring large signals

When this parameter is changed manually from front panel, IF Gain Auto will become Man.

Remote Command	<code>[ :SENSe]:PVTIme:IF:GAIN[:STATe] ON   OFF   1   0</code>
----------------	--

	<code>[ :SENSe]:PVTIme:IF:GAIN[:STATe]?</code>
Example	PVT:IF:GAIN ON PVT:IF:GAIN?
Notes	where ON = high gain OFF = low gain
Dependencies	This control does not appear in EXM, VXT, or UXM
Preset	OFF
State Saved	Yes
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)

## Spur Avoidance

Because the VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The Spur Avoidance function is provided to eliminate this spur, at the expense of some measurement speed.

When Spur Avoidance is enabled (the default), the analyzer uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates when the  $BW \leq \max BW / 2.5$ .

You can disable this function in order to speed up your measurement. When Spur Avoidance is turned Off, a warning message will appear in the status bar as “Settings Alert;Spur Avoidance Off”. This is to alert you that measurement accuracy might be impacted because you have defeated the spur avoidance algorithm.

Remote Command	<code>[ :SENSe]:PVTIme:SAVoid[:STATe] ON OFF 0 1</code> <code>[ :SENSe]:PVTIme:SAVoid[:STATe]?</code>
Example	<code>:PVT:SAV ON</code> <code>:PVT:SAV?</code>
Dependencies	This control only appears in VXT models M9410A/11A/15A.
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Meas Setup Summary Table

The Meas Setup Summary Table lets you view and access many of the parameters in the Meas Setup menus on one screen.

## Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	<code>:CONFigure:PVTime</code>
Example	CONF:PVT
Couplings	Selecting Meas Preset restores all measurement parameters to these default values

## Ignore Burst Found (SCPI only)

In the Pvt measurement, by default, it checks whether a burst signal is found and decides what to do next. When average state is ON and no burst signal is found, the measurement will continuously run and you cannot get test results by SCPI meas/read/fetch command under continuous measurement status. To avoid this, it is recommended to implement timeout process in test scripts.

This SCPI only parameter is defined to stop continuous running, as an alternate option. For backwards compatibility, the behavior of “waiting for burst found” is kept intact when this parameter is OFF..

Remote Command	<code>[ :SENSe]:PVTime:IGNore:BURSt:FOUNd OFF   ON   0   1</code>
Example	<code>PVT:IGN:BURS:FOUN ON</code> <code>PVT:IGN:BURS:FOUN?</code>
Preset	OFF
State Saved	Yes

### 3.7.8.2 Radio

Contains controls to select link direction.

#### Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

Remote Command	<code>[ :SENSe]:RADio:STANdard:DIRection DLINK   ULINK</code> <code>[ :SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

### 3.7.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

## Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[[:SENSE]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[[:SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

## Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

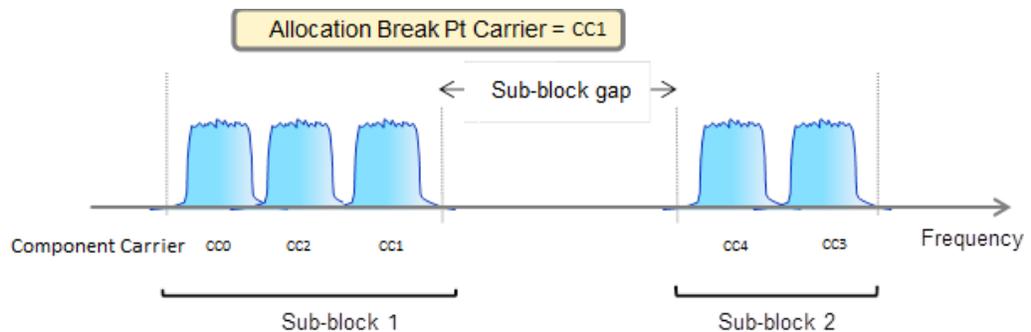

Remote Command `[[:SENSe]:CCARrier:CONFig:ALLocation:NCONTiguous:ABPoint CC0 | ... | CC4`

	<a href="#">[:SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</a>
Example	<a href="#">:CCAR:CONF:ALL:NCON:ABP CC0</a> <a href="#">:CCAR:CONF:ALL:NCON:ABP?</a>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

## Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

## Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

## Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

## Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

## Non-Contiguous Break at

See ["Non-Contiguous Break at" on page 2246](#).

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<a href="#">[:SENSe]:CCARrier0[...]:4:RADIo:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</a>
----------------	--

	<code>[ :SENSe ] : CCARrier0   ...   4 : RADio : STANdard : BANDwidth ?</code>
Example	<code>:CCAR4 : RAD : STAN : BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe ] : RADio : STANdard : BANDwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe ] : CCARrier0   ...   4 [ :STATe ] OFF   ON   0   1</code> <code>[ :SENSe ] : CCARrier0   ...   4 [ :STATe ] ?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0 ?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe ] : CCARrier&lt;n&gt; : FREQuency : OFFSet &lt;freq&gt;</code> <code>[ :SENSe ] : CCARrier&lt;n&gt; : FREQuency : OFFSet ?</code>
Example	<code>:CCAR4 : FREQ : OFFS 10MHz</code> <code>:CCAR4 : FREQ : OFFS ?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMAl   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:DGPU?</code>
Example	<code>:CCAR0:RAD:STAN:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:DGPU</code>

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

	<b>System Bandwidth</b>	<b>CHP Integ BW</b>
	1.4 MHz (B1M4)	1.4 MHz
	3 MHz (B3M)	3 MHz
	5 MHz (B5M)	5 MHz
	10 MHz (B10M)	10 MHz
	15 MHz (B15M)	15 MHz
	20 MHz (B20M)	20 MHz
	200 kHz(B200K)	200 kHz
Preset	5 MHz	
State Saved	Saved in instrument state	
Min	100 kHz	
Max	20 MHz	
Backwards Compatibility SCPI	[:SENSe]:CHPower:BANDwidth:INTEgration [:SENSe]:CHPower:BWIDth:INTEgration	

### ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	[:SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration <freq> [:SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration?
Example	:CCAR0:ACP:BAND:INT 20MHz :CCAR0:ACP:BAND:INT?
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

<b>System Bandwidth</b>	<b>BTS ACP Meas Noise BW</b>	<b>MS ACP Meas Noise BW</b>
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
3 MHz (B3M)	2.715 MHz	2.7 MHz
5 MHz (B5M)	4.515 MHz	4.5 MHz
10 MHz (B10M)	9.015 MHz	9.0 MHz
15 MHz (B15M)	13.515 MHz	13.5 MHz
20 MHz (B20M)	18.015 MHz	18.0 MHz
200 kHz(B200K)	180 kHz	180 kHz

Preset	4.515 MHz 4.5 MHz
State Saved	Yes
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:BANDwidth[:INTEgration]</code> <code>[ :SENSe]:ACPower:CARRier[1]   2:LIST:BWIDth[:INTEgration]</code>

### SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1]   2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1]   2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode

Couplings When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth

System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
3 MHz (B3M)	2.715 MHz	2.7 MHz
5 MHz (B5M)	4.515 MHz	4.5 MHz
10 MHz (B10M)	9.015 MHz	9.0 MHz
15 MHz (B15M)	13.515 MHz	13.5 MHz
20 MHz (B20M)	18.015 MHz	18.0 MHz
200 kHz(B200K)	180 kHz	180 kHz

Preset	4.515 MHz 4.5 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:SEMAsk:BANDwidth[1]   2:INTEgration</code>

## Carrier Config Presets

Lets you configure the Component Carrier presets.

### Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

### Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code> <code>:CCAR:CONF:SPAC:DELTA?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

## Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

## ETC1 Attributes

Sets ETC1 carrier configuration.

## Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

## Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BAWdth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	--

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth?</code>
Example	<code>:CCAR:CONF:ETC1:BAND B5M</code> <code>:CCAR:CONF:ETC1:BAND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

### Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative - Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive - Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG</code> <code>:CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

### Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M</code> <code>:CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe ] :CCARrier :CONFig :ETC3 :BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe ] :CCARrier :CONFig :ETC3 :BANDwidth?</code>
Example	<code>:CCAR :CONF :ETC3 :BAND B5M</code> <code>:CCAR :CONF :ETC3 :BAND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

#### 3.7.8.4 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

## System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command RAD:STAN:PRES B5M or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote Command	<code>[ :SENSe ] :RADio :STANdard :PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe ] :RADio :STANdard :PRESet :ULDL CONF0   ...   CONF6</code> <code>[ :SENSe ] :RADio :STANdard :PRESet :ULDL ?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUUDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On/Off Power Measurement

Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

### Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

### Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[ :SENSe]:RADio:SLOT?</code>
----------------	---

Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

## Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>						
Example	<code>:RAD:MINT 1</code>						
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes						
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>						
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH: <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Meas NPRACH</th> <th>Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						
Preset	1						

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

State Saved	Yes
Min	1
Max	20, when System BW is NOT "200 kHz (NB-IoT) 16, otherwise
Backwards Compatibility SCPI	LTE: [:SENSe]:PVTIme:MINInterval

### CP Length

Specifies whether the cyclic prefix is configured as NORMal or EXTended for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	[:SENSe]:RADio:CPLength NORMal   EXTended [:SENSe]:RADio:CPLength?
Example	:RAD:CPL NORM
Notes	The backwards compatible SCPI command [:SENSe]:PVTIme:CPLength is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to "200 kHz (NB-IoT)" and Direction is "uplink"
Couplings	Set to NORMal when System BW is set to "200 kHz (NB-IoT)"
Preset	NORMal
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: [:SENSe]:PVTIme:CPLength

### Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	[:SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS [:SENSe]:RADio:MEASure?
Example	:RAD:MEAS OFF
Couplings	If direction is downlink, the control is disabled and the value is set to off

	If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

## Reference Config

Specifies which component carrier's UL DL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code> <code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.7.8.5 Limit

Accesses the setup menu for the measurement ramp up, ramp down time and threshold for off power.

Please note, whether the pass/fail shown in measurement bar( at upper-left corner of screen) will be pass or fail is just determined by the threshold listed in Limits menu, they are Max Ramp Up Time, Max Ramp Down Time, Downlink Off Power and Uplink Off Power. If and only if ramp up time, ramp down time and off power ( downlink or uplink) measured are all less than Max Ramp Up Time, Max Ramp Down Time and Off Power (downlink or uplink) separately, the Pass/Fail flag is set to pass (green), otherwise Pass/Fail flag is set to fail(red). The limit mask shown on screen is just to indicate which part is active burst and which part is inactive burst, the mask is nothing to do with the Pass/Fail criteria.

## Max Ramp Down Time

It used as threshold which can judge whether the real measured ramp down time can be passed or not. If real measured ramp down time exceeds Max Ramp Down Time, then ramp down time measurement fails, otherwise, it passes.

Remote Command	<code>[ :SENSe]:PVTime:LIMit:RAMP:DRTime &lt;time&gt;</code> <code>[ :SENSe]:PVTime:LIMit:RAMP:DRTime? [ :SENSe]:PVTime:LIMit:RAMP:DRTime?</code>
Example	PVT:LIM:RAMP:DRT 17.0e-6 PVT:LIM:RAMP:DRT?
Couplings	While Downlink is selected, the default value is 17us, and while Uplink is selected, the default value is 20.0us.
Preset	17.0 us
State Saved	No
Min	1.0 us
Max	100.0 us
Resolution	0.1 us

## Max Ramp Up Time

It used as threshold which can judge whether the real measured ramp up time can be passed or not. If real measured ramp up time exceeds Max Ramp Up Time, then ramp up time measurement fails, otherwise, it passes.

Remote Command	<code>[ :SENSe]:PVTime:LIMit:RAMP:URTime &lt;time&gt;</code> <code>[ :SENSe]:PVTime:LIMit:RAMP:URTime?</code>
Example	PVT:LIM:RAMP:URT 17.0e-6 PVT:LIM:RAMP:URT?
Couplings	While Downlink is selected, the default value is 17us, and while Uplink is selected, the default value is 20.0us.
Preset	17.0 us
State Saved	No
Min	1.0 us
Max	100.0 us
Resolution	0.1 us

### Downlink Transient Period

The setting is used to set the threshold for downlink transient period which is calculated from expected burst boundary to the point of the specified OFF power limit. Burst (slot) boundary is determined from the external trigger and frame configuration parameters – UL/DL allocation and special sub-frame configuration.

If the measured ramp up or ramp down transient period of downlink signal exceeds the threshold, the ramp up or ramp down transient period measurements fail.

Remote Command	<code>[ :SENSe]:PVTIme:LIMit:TRANsient:DLINK &lt;time&gt;</code> <code>[ :SENSe]:PVTIme:LIMit:TRANsient:DLINK?</code>
Example	PVT:LIM:TRAN:DLIN 17.0e-6 PVT:LIM:TRAN:DLIN?
Dependencies	This control appears only when the Radio Direction is Downlink and is available when Auto Timing Adjust is Off.
Preset	17.0 us
State Saved	No
Min	1.0 us
Max	100.0 us
Resolution	0.1 us

### Downlink Off Power

It is used as threshold in downlink which can judge whether the real measured off power can be passed or not. If real measured off power exceeds Downlink Off Power, then off power measurement fails, otherwise, it passes. Please note, the unit of this parameter is dBm/MHz.

Remote Command	<code>[ :SENSe]:PVTIme:LIMit:POFF:DLINK &lt;real&gt;</code> <code>[ :SENSe]:PVTIme:LIMit:POFF:DLINK?</code>
Example	PVT:LIM:POFF:DLIN -89.0 PVT:LIM:POFF:DLIN?
Notes	Update the default Off Power limit value from -85 dBm/MHz to -83 dBm/MHz, as the TS36.141 applies 2dB Test Tolerance (TT).
Dependencies	This control appears only when the Radio Direction is Downlink.
Preset	-83.00
State Saved	Yes
Min	-150.00
Max	0.00
Resolution	1.0

## Uplink Off Power

It is used as threshold in uplink which can judge whether the real measured off power can be passed or not. If real measured off power exceeds Uplink Off Power, then off power measurement fails, otherwise, it passes. Please note, the unit of this parameter is dBm.

Remote Command	<code>[ :SENSe]:PVTIme:LIMit:POFF:ULINK &lt;real&gt;</code> <code>[ :SENSe]:PVTIme:LIMit:POFF:ULINK?</code>
Example	<code>PVT:LIM:POFF:ULIN -50.0</code> <code>PVT:LIM:POFF:ULIN?</code>
Notes	Update the default Off Power limit value from -50 dBm to -48.50 dBm, as the TS36.521 applies 1.5dB Test Tolerance (TT).  As the setting is shared by LTE and V2X, and V2X works in Band47 (5.9GHz Band), the off power limit for this band is -48dBm, so the default value of the setting is -48dBm for V2X carrier.
Preset	LTE V2X: -48 others: -48.50
State Saved	Yes
Min	-150.00 dBm
Max	0.00 dBm
Resolution	1.0 dB

## Uplink On Power Reference

This is used as an Expected Transmission ON Measured power reference in uplink, which judges whether the real measured on power is passed or not when "[Uplink On Power Limit Test](#)" on page 1260 is set to on. If the real measured on power is within Uplink On Power Reference +/- Uplink On Power Tolerance, then on power measurement passes, otherwise, it fails.

Remote Command	<code>[ :SENSe]:PVTIme:LIMit:PON:ULINK:REference &lt;real&gt;</code> <code>[ :SENSe]:PVTIme:LIMit:PON:ULINK:REference?</code>
Example	<code>:PVT:LIM:PON:ULIN:REF -8.0</code> <code>:PVT:LIM:PON:ULIN:REF?</code>
Notes	NB-IoT and C-V2X are embedded in the LTE/LTE-Advanced FDD application, so the application can be separately configured as LTE,NB-IoT and C-V2X formats. Then the preset value of the parameter is changed based on the configuration of the LTE/LTE-Advanced FDD application.
Dependencies	This control appears only when the Radio Direction is Uplink.
Preset	LTE: -8.6 NB-IoT: -11

	C-V2X:-2.8
State Saved	Yes
Min	-150 dBm
Max	150 dBm
Resolution	0.1 dB

### Uplink On Power Tolerance

This is used as the pass/fail margin from the UL On Power Reference value for the UL On Power measurement limit test when "[Uplink On Power Limit Test](#)" on page 1260 is set to on.

Remote Command	<code>[ :SENSe]:PVTime:LIMit:PON:ULINK:TOLerance &lt;real&gt;</code> <code>[ :SENSe]:PVTime:LIMit:PON:ULINK:TOLerance?</code>
Example	<code>:PVT:LIM:PON:ULIN:TOL 10.7</code> <code>:PVT:LIM:PON:ULIN:TOL?</code>
Notes	NB-IoT and C-V2X are embedded in the LTE/LTE-Advanced FDD application, so the application can be separately configured as LTE,NB-IoT and C-V2X formats. Then the preset value of the parameter is changed based on the configuration of LTE/LTE-Advanced FDD application.
Dependencies	This control appears only when the Radio Direction is Uplink.
Preset	LTE: +/- 7.5 dB NB-IoT: +/-7.5dB C-V2X: +/-8.0dB
State Saved	Yes
Min	0 dB
Max	100 dB
Resolution	0.1 dB

### Uplink On Power Limit Test

When this is set to on, the measurement judges whether the real measured on power is passed or not. If the real measured on power is within Uplink On Power Reference +/- Uplink On Power Tolerance, the on power measurement passes, otherwise, it fails.

Remote Command	<code>[ :SENSe]:PVTime:LIMit:PON:ULINK:STATe OFF   ON   0   1</code> <code>[ :SENSe]:PVTime:LIMit:PON:ULINK:STATe?</code>
Example	<code>:PVT:LIM:PON:ULIN:STAT 1</code> <code>:PVT:LIM:PON:ULIN:STAT?</code>

Dependencies	This control appears only when the Radio Direction is Uplink.
Preset	OFF
State Saved	Yes

### 3.7.8.6 Threshold

Accesses the setup menu to set the thresholds used to find ramp up and ramp down part in burst signal.

#### Ramp Up Start Level

It specifies the relative power level to active slots average power level at which the ramp-up starts.

Remote Command	<code>[ :SENSe]:PVTIme:THReshold:UP:START &lt;rel_amp1&gt;</code> <code>[ :SENSe]:PVTIme:THReshold:UP:START?</code>
Example	PVT:THR:UP:STAR -50.0 PVT:THR:UP:STAR?
Preset	-20.000 dB
State Saved	Yes
Min	-120.000 dB
Max	0.000 dB
Resolution	1.0 dB

#### Ramp Up End Level

It specifies the relative power level to active slots average power level at which the ramp-up ends.

Remote Command	<code>[ :SENSe]:PVTIme:THReshold:UP:END &lt;rel_amp1&gt;</code> <code>[ :SENSe]:PVTIme:THReshold:UP:END?</code>
Example	PVT:THR:UP:END -50.0 PVT:THR:UP:END?
Preset	-0.915 dB
State Saved	Yes
Min	-120.000 dB
Max	0.000 dB
Resolution	1.0 dB

### Ramp Down Start Level

It specifies the relative power level to active slots average power level at which the ramp-down starts.

Remote Command	<code>[ :SENSe]:PVTime:THReshold:DOWN:STARt &lt;rel_amp1&gt;</code> <code>[ :SENSe]:PVTime:THReshold:DOWN:STARt?</code>
Example	PVT:THR:DOWN:STAR -50.0 PVT:THR:DOWN:STAR?
Preset	-0.915 dB
State Saved	Yes
Min	-120.000 dB
Max	0.000 dB
Resolution	1.0 dB

### Ramp Down End Level

It specifies the relative power level to active slots average power level at which the ramp-down ends.

Remote Command	<code>[ :SENSe]:PVTime:THReshold:DOWN:END &lt;rel_amp1&gt;</code> <code>[ :SENSe]:PVTime:THReshold:DOWN:END?</code>
Example	PVT:THR:DOWN:END -50.0 PVT:THR:DOWN:END?
Preset	-20.000 dB
State Saved	Yes
Min	-120.000 dB
Max	0.000 dB
Resolution	1.0 dB

#### 3.7.8.7 Advanced

The Advanced tab contains controls for setting advanced functions of the analyzer.

Dependencies	This tab does not appear in EXM or VXT.
--------------	---

## Noise Floor Extention

Turns on the **Noise Floor Extension** function. When this function is On, the expected noise power of the analyzer (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

When Noise Floor Extention is on, the Off power results (signal plus analyzer noise) will be compensated by subtracting the estimated noise power, leaving just the signal power. For downlink, the 70us RMS Off power trace will be compensated, and for uplink, both Off Power Before and Off Power After results will be compensated.

Remote Command	<code>[ :SENSe]:CORRection:NOISe:FLOor ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:NOISe:FLOor?</code>
Example	CORR:NOIS:FLO ON
Dependencies	This control only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, however the SCPI command will be accepted without error (but will have no effect).
Couplings	When NFE is enabled in any mode manually, a prompt will be displayed reminding you to perform the Characterize Noise Floor operation if it is needed. If NFE is enabled through SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue.
Preset	Unaffected by Mode Preset. Turned off by Restore Mode Defaults.
State Saved	No

## Noise Correction

Sets the noise floor correction function to On or Off. On enables measurement noise correction when the measured power in the reference channel or any offset is close to the noise floor of the analyzer. Off turns these corrections off.

Remote Command	<code>[ :SENSe]:PVTime:CORRection:NOISe[:AUTO] OFF   ON   0   1</code> <code>[ :SENSe]:PVTime:CORRection:NOISe[:AUTO]?</code>
Example	PVT:CORR:NOIS OFF PVT:CORR:NOIS?
Couplings	None
Preset	0
State Saved	Yes
Range	On Off

## Ramp Time Length

This parameter indicates the searching window length in which the start of ramp up or the end of ramp down is searched. If it is set shorter than actual ramp time, the ramp may be lost. The start of the searching window is derived from the external trigger when auto timing adjust is off, and is at the actual burst boundary when auto timing adjust is on.

Remote Command	<code>[ :SENSe]:PVTIme:RAMP:SEARch:LENGth &lt;time&gt;</code> <code>[ :SENSe]:PVTIme:RAMP:SEARch:LENGth?</code>
Example	PVT:RAMP:SEAR:LENG 1.0 PVT:RAMP:SEAR:LENG?
Preset	17.0 us
State Saved	Yes
Min	1.0 us
Max	100.0 us
Resolution	100 ns

## Off Power Meas Rules

The parameter is to indicate which way to calculate 70us RMS Off Power over the entire OFF period. When it is "Speed", 70 us averaged power is calculated in 35us granularity during OFF period; when it is "Accuracy", the 70us RMS Off Power is calculated for each sample points during OFF period

Remote Command	<code>[ :SENSe]:PVTIme:POFF:MEAS:RULes SPEed   ACCuracy</code> <code>[ :SENSe]:PVTIme:POFF:MEAS:RULes?</code>
Example	PVT:POFF:MEAS:RUL SPE PVT:POFF:MEAS:RUL?
Couplings	When the direction is uplink, the control is always greyed out. There is no 70us RMS off power for uplink signal.
Preset	Speed
State Saved	Saved in instrument state
Range	SPEed ACCuracy

## IF Gain

Accesses the menu that sets ranging in the digital IF when acquiring an I/Q time record.

See ["More Information about IF Gain" on page 1265](#).

This function is not affected by RF Input Range attenuation.

### More Information about IF Gain

To take full advantage of the RF dynamic range of the analyzer, you can manually turn on or turn off a switched digital IF amplifier. When it is turned on, the signal will get approximately 10 dB of gain.

- Setting IF Gain to Man and selecting High Gain will turn on the digital IF amplifier and get an extra 10 dB gain.
- Setting IF Gain to Auto will activate the Auto rules for IF Gain.

These settings affect sensitivity and IF overloads.

### IF Gain Auto

Activates the Auto Rules for IF Gain. When Auto is active, the IF Gain is set to High Gain under any of the following conditions:

- the input attenuator is set to 0 dB
- the preamp is turned On
- the Max Mixer Level is -20 dBm or lower

For other settings, Auto sets IF Gain to Off.

Remote Command	<code>[ :SENSe]:PVTIme:IF:GAIN:AUTO[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:PVTIme:IF:GAIN:AUTO[:STATe]?</code>
Example	PVT:IF:GAIN:AUTO ON PVT:IF:GAIN:AUTO?
Dependencies	This control does not appear in EXM, VXT, or UXM
Couplings	When either the auto attenuation is active (for example, with an electrical attenuator), or the optimize mechanical attenuator range is requested, the IF Gain setting is changed using the following rule The Auto selection sets IF Gain On under any of the following conditions: <ul style="list-style-type: none"> <li>- the input attenuator is set to 0 dB</li> <li>- the preamp is turned on</li> <li>- the Max Mixer Level is -20 dBm or lower</li> </ul> For other settings, Auto sets IF Gain to Off
Preset	OFF

State Saved	Yes
Range	Auto Man

### IF Gain State

Selects the range of IF gain.

- On sets the high gain option, which allows for better noise level measurements
- Off sets low gain when measuring large signals

When this parameter is changed manually from front panel, IF Gain Auto will become Man.

Remote Command	<code>[ :SENSe]:PVTIme:IF:GAIN[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:PVTIme:IF:GAIN[:STATe]?</code>
Example	PVT:IF:GAIN ON PVT:IF:GAIN?
Notes	where ON = high gain OFF = low gain
Dependencies	This control does not appear in EXM, VXT, or UXM
Preset	OFF
State Saved	Yes
Range	Low Gain (Best for Large Signals) High Gain (Best Noise Level)

### 3.7.8.8 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "[Global Center Freq](#)" on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

### Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:CENTer ALL   NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE
Preset	OFF
Backwards Compatibility SCPI	:GLOBa1:FREQuency:CENTer[:STATe] 1   0   ON   OFF :GLOBa1:FREQuency:CENTer[:STATe]?

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPlE:EMC:STANdard ALL   NONE</code> <code>:INSTRument:COUPlE:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings</b> , <b>Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL   NONE</b>

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPlE:FREQuency:BAND:EXTend 0   1   ON   OFF</code> <code>:INSTRument:COUPlE:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	<b>ON OFF</b>

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTRument:COUPlE:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

### 3.7.9 Sweep

The Sweep key contains controls which allow you to control the sweep and measurement functions of the analyzer, such as the sweep or measurement time and whether in Single sweep/measure or Continuous sweep/measure mode.

The Sweep key accesses controls that enable you configure and control the acquisition of data and the X-axis parameters of the instrument. These controls might include Sweep Time, Continuous/Single, Pause/Resume, X Scale and number of Points.

#### 3.7.9.1 Sweep/Control

This tab accesses controls that enable you to operate the Sweep and Control functions of the analyzer.

#### Sweep/Measure

Allows you to toggle between Continuous and Single sweep or measurement operation. The single/continuous state is Meas Global so the setting will affect all measurements.

The front-panel key **Single/Cont** performs this exact same function

See "[More Information](#)" on page 1270

Remote Command	:INITiate:CONTinuous OFF   ON   0   1 :INITiate:CONTinuous?
Example	INIT:CONT 0 !puts analyzer in Single measurement operation. INIT:CONT OFF !puts analyzer in Single measurement operation. INIT:CONT 1 !puts analyzer in Continuous measurement operation. INIT:CONT ON !puts analyzer in Continuous measurement operation
Preset	ON (Note that SYST:PRESet sets INIT:CONT to ON but *RST sets INIT:CONT to OFF)
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting. A line with an arrow is single, a loop with an arrow is Continuous.
Status Bits/OPC dependencies	n/a
Backwards Compatibility Notes	See the description of this control in the Swept SA measurement

## More Information

With **Avg/Hold Num** (in the **Meas Setup** menu) set to **Off** or set to **On** with a value of 1, a sweep is taken after the trigger condition is met; and the analyzer continues to take new sweeps after the current sweep has completed and the trigger condition is again met. However, with **Avg/Hold Num** set to **On** with a value  $>1$ , multiple sweeps (data acquisitions) are taken for the measurement. The trigger condition must be met prior to each sweep. The sweep is not stopped when the average count  $k$  equals the number  $N$  set for **Avg/Hold Num** is reached, but the number  $k$  stops incrementing. A measurement average usually applies to all traces, marker results, and numeric results. But sometimes it only applies to the numeric results.

If the analyzer is in Single measurement, pressing the **Cont/Single** toggle control does not change  $k$  and does not cause the sweep to be reset; the only action is to put the analyzer into Continuous measurement operation.

If it is already in continuous sweep:

- the `INIT:CONT 1` command has no effect
- the `INIT:CONT 0` command will place the analyzer in Single Sweep but will have no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state.

See "**Restart**" on page 1270 control description for details on the `INIT:IMMEDIATE` (Restart) function.

If you are already in single sweep, the `INIT:CONT OFF` command has no effect.

If you are already in Single Sweep, then pressing the **Cont/Single** toggle control in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing the **Cont/Single** toggle control does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the analyzer is waiting for a trigger). Even though pressing the **Cont/Single** toggle control in the middle of a sweep does not restart the sweep, sending `INIT:IMMEDIATE` does reset it.

## Restart

The Restart function restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing Restart does a Resume.

The front-panel key **Restart** performs this exact same function

The Restart function is accessed in several ways:

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

- Pressing the Restart key
- Sending the remote command INIT:IMMEDIATE
- Sending the remote command INIT:RESTART

See "[More Information](#)" on page 1271

Remote Command	:INITiate[:IMMEDIATE] :INITiate:RESTART
Example	INIT:IMM INIT:REST
Notes	:INITiate:RESTART and :INITiate:IMMEDIATE perform exactly the same function.
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update=on) traces with new current data. For application modes, it resets other parameters as required by the measurement.
Status Bits/OPC dependencies	This is an Overlapped command. The STATUS:OPERation register bits 0 through 8 are cleared. The STATUS:QUESTIONable register bit 9 (INTEgrity sum) is cleared. The SWEEPING bit is set. The MEASURING bit is set.
Backwards Compatibility Notes	For Spectrum Analysis mode in ESA and PSA, the <b>Restart</b> hardkey and the INITiate:RESTART command restart trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> . In the X-Series, the <b>Restart</b> hardkey and the INITiate:RESTART command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well. For wireless comms modes in ESA and PSA, the <b>Restart</b> hardkey and the INITiate:RESTART command restart every measurement, which includes all traces and numeric results. There is no change to this operation.

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is in the process of aligning when a Restart is executed, the alignment finishes before the restart function is performed.

Even when set for Single operation, multiple sweeps may be taken when Restart is pressed (for example, when averaging/holding is on). Thus when we say that Restart "restarts a measurement," we may mean:

- It restarts the current sweep
- It restarts the current measurement
- It restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- It restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement
- depending on the current settings.

With Average/Hold Number (in Meas Setup menu) set to 1, or Averaging off, or no trace in Trace Average or Hold, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the analyzer stops sweeping once that sweep has completed. However, with Average/Hold Number >1 and at least one trace set to Trace Average, Max Hold, or Min Hold (SA Measurement) or Averaging on (most other measurements), multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for Average/Hold Number. A measurement average usually applies to all traces, marker results, and numeric results; but sometimes it only applies to the numeric results.

Once the full set of sweeps has been taken, the analyzer will go to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the step up key while Average/Hold Number is the active function, or sending the remote command CALC:AVER:TCON UP.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the control changes to Resume. Pressing Resume un-pauses the measurement. When you are Paused, pressing **Restart** does a Resume.

Remote Command	<code>:INITiate:PAUSE</code>
Example	<code>INIT:PAUS</code>
Dependencies	Not displayed in Modes that do not support Pausing.
Annotation	Only on control

Remote Command	<code>:INITiate:RESume</code>
Example	<code>INIT:RES</code>
Dependencies	Not displayed in Modes that do not support Pausing.
Annotation	Only on control

### Abort (Remote Command Only)

This command is used to stop the current measurement. It aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the analyzer is in the process of aligning when ABORt is sent, the alignment finishes before the abort function is performed. So ABORt does not abort an alignment.

If the analyzer is set for Continuous measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is set for Single measurement, it remains in the "idle" state until an :INIT:IMM command is received.

Remote Command	:ABORt
Example	ABOR
Notes	If :INITiate:CONTinuous is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met. If :INITiate:CONTinuous is OFF, then :INITiate:IMMEDIATE is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met.
Dependencies	For continuous measurement, ABORt is equivalent to the Restart key. Not all measurements support the abort command.
Status Bits/OPC dependencies	The STATus:OPERation register bits 0 through 8 are cleared. The STATus:QUESTionable register bit 9 (INTegrity sum) is cleared. Since all the bits that feed into OPC are cleared by the ABORt, the ABORt will cause the *OPC query to return true.

### 3.7.9.2 X Scale

This tab accesses controls that enable you to set the horizontal scale parameters.

#### Ref Value

Enables you to set the display X reference value.

Remote Command	:DISPlay:PVTime:WINDow[1] 2 3:TRACe:X[:SCALE]:RLEVel <time> :DISPlay:PVTime:WINDow[1] 2 3:TRACe:X[:SCALE]:RLEVel?
	Window numbers are as follows: Burst: 1 Rise: 2 Fall: 3

Example	<pre>:DISP:PVT:WIND:TRACE:X:RLEV 1s ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND:TRACE:X:RLEV? ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND2:TRAC:X:RLEV 1s ! 2-Rise for Transmit On/Off Power :DISP:PVT:WIND3:TRAC:X:RLEV 1s ! 3-Fall for Transmit On/Off Power</pre>
Couplings	If X Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to Off.
Preset	-100us
State Saved	Saved in instrument state.
Min	-10.0 s
Max	10.0 s
Resolution	10.0 ns
Annotation	<value> s bottom left of graph

### Backwards Compatibility SCPI

Window Numbers used to be a combination of View and Window, now the VIEW parameter is not used and defaults to 1. All Windows are referenced through VIEW1. For backwards compatibility the old View and Window numbers are honored as below:

Window	Old SCPI Command	New SCPI Command
PVT - Burst	:DISP:PVT:VIEW[1]:WIND:TRAC:X:RLEV 1s	DISP:PVT:WIND[1]:TRAC:X:RLEV 1s
PVT - Rise	:DISP:PVT:VIEW2:WIND:TRAC:X:RLEV 1s	DISP:PVT:WIND2:TRAC:X:RLEV 1s
PVT - Fall	:DISP:PVT:VIEW2:WIND2:TRAC:X:RLEV 1s	DISP:PVT:WIND3:TRAC:X:RLEV 1s

### Scale/Div

Enables you to set the display X scale/division value.

Remote Command	<pre>:DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:X[:SCALE]:PDIVision &lt;time&gt; :DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:X[:SCALE]:PDIVision?</pre>
	Window numbers are as follows: Burst: 1 Rise: 2 Fall: 3
Example	<pre>:DISP:PVT:WIND:TRACE:X:PDIV 1ms! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND:TRACE:X:PDIV?! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND2:TRAC:X:PDIV 1ms ! 2-Rise for Transmit On/Off Power</pre>

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

:DISP:PVT:WIND3:TRAC:X:PDIV 1ms ! 3-Fall for Transmit On/Off Power	
Couplings	If X Auto Scaling is On, this value is automatically determined by the measurement result. When you set a value manually, X Auto Scaling automatically changes to Off.
Preset	4 ms
State Saved	Saved in instrument state.
Min	1.00 ns
Max	1.0 s
Resolution	ns

Backwards Compatibility SCPI

Window Numbers used to be a combination of View and Window, now the VIEW parameter is not used and defaults to 1. All Windows are referenced through VIEW1. For backwards compatibility the old View and Window numbers are honored as below:

Window	Old SCPI Command	New SCPI Command
PVT - Burst	:DISP:PVT:VIEW[1]:WIND:TRAC:X:PDIV 1ms	:DISP:PVT:WIND[1]:TRAC:X:PDIV 1ms
PVT - Rise	:DISP:PVT:VIEW2:WIND:TRAC:X:PDIV 1ms	:DISP:PVT:WIND2:TRAC:X:PDIV 1ms
PVT - Fall	:DISP:PVT:VIEW2:WIND2:TRAC:X:PDIV 1ms	:DISP:PVT:WIND3:TRAC:X:PDIV 1ms

**Ref Position**

Sets the reference position for the X axis to Left, Center or Right.

Remote Command	:DISPlay:PVTiMe:WINDow[1] 2 3:TRACe:X[:SCALE]:RPOSition LEFT   CENTER   RIGHT :DISPlay:PVTiMe:WINDow[1] 2 3:TRACe:X[:SCALE]:RPOSition?
	Window numbers are as follows: Burst: 1 Rise: 2 Fall: 3
Example	:DISP:PVT:WIND:TRACE:X:RPOS LEFT ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND:TRACE:X:RPOS? ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND2:TRAC:X:RPOS LEFT ! 2-Rise for Transmit On/Off Power :DISP:PVT:WIND3:TRAC:X:RPOS RIGHT ! 3-Fall for Transmit On/Off Power
Preset	CENTER
State Saved	Yes Saved in instrument state.
Range	Left Ctr Right

### Backwards Compatibility SCPI

Window Numbers used to be a combination of View and Window, now the VIEW parameter is not used and defaults to 1. All Windows are referenced through VIEW1. For backwards compatibility the old View and Window numbers are honored as below:

Window	Old SCPI Command	New SCPI Command
PVT - Burst	:DISP:PVT:VIEW[1]:WIND:TRAC:X:RPOS LEFT	:DISP:PVT:WIND[1]:TRAC:X:RPOS LEFT
PVT - Rise	:DISP:PVT:VIEW2:WIND:TRAC:X:RPOS LEFT	DISP:PVT:WIND2:TRAC:X:RPOS LEFT
PVT - Fall	:DISP:PVT:VIEW2:WIND2:TRAC:X:RPOS LEFT	DISP:PVT:WIND3:TRAC:X:RPOS LEFT

## Auto Scaling

Toggles the scale coupling function between On and Off.

Remote Command	<pre>:DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:X[:SCALe]:COUPle 0   1   OFF   ON :DISPlay:PVT:ime:WINDow[1] 2 3:TRACe:X[:SCALe]:COUPle?</pre> <p>Window numbers are as follows: Burst: 1 Rise: 2 Fall: 3</p>
Example	<pre>:DISP:PVT:WIND:TRAC:X:COUP OFF ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND:TRAC:X:COUP? ! 1-Burst for Transmit On/Off Power :DISP:PVT:WIND2:TRAC:X:COUP OFF ! 2-Rise for Transmit On/Off Power :DISP:PVT:WIND3:TRAC:X:COUP ON ! 3-Fall for Transmit On/Off Power</pre>
Couplings	<p>When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.</p> <p>When you set a value to either Scale/Div or Ref Value manually, Auto Scaling automatically changes to Off.</p>
Preset	ON
State Saved	Saved in instrument state.

### Backwards Compatibility SCPI

Window Numbers used to be a combination of View and Window, now the VIEW parameter is not used and defaults to 1. All Windows are referenced through

3 LTE & LTE-A TDD Mode  
 3.7 Transmit On|Off Power Measurement

VIEW1. For backwards compatibility the old View and Window numbers are honored as below:

Window	Old SCPI Command	New SCPI Command
PVT - Burst	:DISP:PVT:VIEW[1]:WIND:TRAC:X:COUP OFF	:DISP:PVT:WIND[1]:TRAC:X:COUP ON
PVT - Rise	:DISP:PVT:VIEW2:WIND:TRAC:X:COUP OFF	:DISP:PVT:WIND2:TRAC:X:COUP ON
PVT - Fall	:DISP:PVT:VIEW2:WIND2:TRAC:X:COUP OFF	:DISP:PVT:WIND3:TRAC:X:COUP ON

### 3.7.10 Trace

The **Trace** menu lets you control the acquisition, display, storage, detection and manipulation of trace data for the available traces.

#### 3.7.10.1 Trace Control

Allows you to control the available traces.

#### Max Hold Trace

This control allows you to make the Max Hold Trace visible or invisible in the display..

Remote Command	:DISPlay:PVT:ime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe] ON   OFF   1   0 :DISPlay:PVT:ime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]?
Example	:DISP:PVT:VIEW:WIND:TRAC:MAXH ON :DISP:PVT:VIEW:WIND:TRAC:MAXH?
Notes	None
Couplings	While Rise & Fall view is selected, this control will be grayed out. Rise & Fall view will not support trace max/min hold.
Preset	OFF
State Saved	Yes
Range	On Off

#### Min Hold Trace

This control allows you to make the Min Hold Trace visible or invisible in the display.

Remote Command	:DISPlay:PVT:ime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe] ON   OFF   1   0 :DISPlay:PVT:ime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe]?
----------------	--

Example	<code>:DISP:PVT:VIEW:WIND:TRAC:MINH ON</code> <code>:DISP:PVT:VIEW:WIND:TRAC:MINH?</code>
Notes	None
Couplings	While Rise & Fall view is selected, this control will be grayed out. Rise & Fall view will not support trace max/min hold.
Preset	OFF
State Saved	Yes
Range	On Off

### 70us RMS Off Power Trace State

This control is used to control the display of 70us averaged off power (dBm/MHz) trace over the entire OFFperiod when the direction is downlink. The parameter also controls to display the off power limit line. The OFF power period is from burst down edge boundary plus max transient period to burst up edge boundary minus max transient period.

Remote Command	<code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:POFF[:STATe] ON   OFF   1   0</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:POFF[:STATe]?</code>
Example	<code>:DISP:PVT:VIEW:WIND:TRAC:POFF ON</code> <code>:DISP:PVT:VIEW:WIND:TRAC:POFF?</code>
Notes	Except for 70us RMS off power trace on the trace window, the off power limit line (dBm/MHz) is also shown up when the state is on.
Couplings	While Rise & Fall view is selected, this control will be grayed out. Rise & Fall view will not support 70us RMS off power trace. When the direction is uplink, the control is always greyed out. There is no 70us RMS off power trace for uplink signal.
Preset	OFF
State Saved	Yes
Range	On Off

### Burst Trace State

This control is used to control the display of the burst signal waveform (RF Envelop) trace in the Burst View.

Remote Command	<code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:BURSt[:STATe] ON   OFF   1   0</code> <code>:DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:BURSt[:STATe]?</code>
Example	<code>:DISP:PVT:VIEW:WIND:TRAC:BURS ON</code> <code>:DISP:PVT:VIEW:WIND:TRAC:BURS?</code>

3 LTE & LTE-A TDD Mode  
3.7 Transmit On|Off Power Measurement

Notes	In order to view 70us OFF Power RMS trace alone, the toggle of burst signal waveform trace is supported.
Couplings	While Rise & Fall view is selected, this control will be grayed out. Rise & Fall view will not support signal waveform trace.
Preset	ON
State Saved	Yes
Range	On Off

## 3.8 Modulation Analysis Measurement

The Modulation Analysis measurement provides modulation analysis capabilities for LTE & LTE-Advanced FDD/TDD signals, eMTC (enhanced Machine-Type Communications defined in 3GPP Rel. 13, also known as Cat-M1) signals, NB-IoT (Narrowband Internet of Things) signals and Sidelink V2X signals (also known as LTE V2X in this document).

The Modulation Analysis measurement is used to test the Transmitted signal quality for both Base station and User equipment for E-UTRA (Evolved Universal Terrestrial Radio Access) according to 3GPP specifications.

The UE (User Equipment), BS (Base Station) radio transmission, reception definitions and their conformance testing requirements are listed in the specifications of the following tables.

3GPP standards	Version	Date
TS 36.101 (UE Radio Tx/Rx)	14.7.0	04/2018
TS 36.104 (BS Radio Tx/Rx)	13.7.0	03/2017
TS 36.141 (BS Conformance)	13.7.0	03/2017
TS 36.521-1 (UE Conformance)	14.6.0	04/2018

The Modulation Analysis measurement refers to the standards as below to support the demodulation of the signals.

3GPP standards	Version	Date
TS 36.201 (Phy General Description)	13.3.0	03/2017
TS 36.211 (Phy Channels and Modulation)	14.6.0	04/2018
TS 36.212 (Multiplexing and Channel Coding)	14.5.1	01/2018
TS 36.213 (Phy Layer Procedures)	14.6.0	04/2018
TS 36.214 (Phy Measurements)	13.4.0	01/2017

### 3.8.1 Modulation Analysis Measurement Results for LTE-A FDD/TDD

The following table denotes the LTE-Advanced Modulation Analysis specific results returned from the (FETCh|MEASure|READ):EVM commands, indexed by subopcode. MEASure:EVM<n> performs the equivalent of CONF:EVM;INIT:IMM;FETCh:EVM<n>. This gets you the default measurement, which is a 5 MHz downlink with auto detection of allocations.

For queries listed in section, the results returned depend on the value of n, as follows.

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

n	Results Returned
Not specified or n=1	Returns measurement results for Component Carrier 0 when it is active All the return values are floating points
	<b>LTE-Advanced Downlink Results for each Component Carrier</b>
	The result contents are customizable
	If no result is available, NaN (9.91E+37) is returned
	1. EVM (%)
	2. EVM Symbol Time Adjust
	1 Window Start
	2 Window End
	3 Center
	4 Custom
	3. EVM Pk (%)
	4. EVM Pk Index
	5. EVM Peak Sub Car Index
	6. Data EVM (%) - Not available when RB Auto Detect is Off and no User is added
	7. 3GPP-defined QPSK EVM (%)
	8. 3GPP-defined 16QAM EVM (%)
	9. 3GPP-defined 64QAM EVM (%)
	10. RS EVM (%)
	11. RS Tx. Power (dBm)
	12. OFDM Symbol Tx. Power (dBm)
	13. Frequency Error (Hz)
	14. Sync Correlation (%)
	15. Sync Type
	1 P-SS
	20 Ant Port 0 RS
	21 Ant Port 1 RS
	22 Ant Port 2 RS
	23 Ant Port 3 RS
	16. Common Tracking Error (%)

**n Results Returned**

- 17. Symbol Clock Error (ppm)
- 18. Time Offset (s)
- 19. IQ Offset (dB)
- 20. IQ Gain Imbalance (dB)
- 21. IQ Quad Error (deg)
- 22. IQ Timing Skew (s)
- 23. CP Length Mode
  - 1 Normal
  - 2 Extended
- 24. Cell ID
- 25. Cell ID Group/Sector  
Integer part: Cell ID Group, After the decimal point: Cell ID Sector
- 26. RS-OS/PRS
  - 1 3GPP
  - 4 Custom
- 27. Reference Signal Rx Power (dBm)
- 28. Reference Signal Rx Quality (dB)
- 29. Received Signal Strength Indicator (dBm)
- 30. Channel Power (dBm)
- 31. 3GPP-defined 256QAM EVM (%)
- 32. 3GPP-defined 1024QAM EVM (%)

**LTE-Advanced Uplink Results for each Component Carrier**

The result contents are customizable. See for details. If no result is available, NaN (9.91E+37) is returned

- 1. EVM (%)
- 2. EVM Symbol Time Adjust
  - 1 Window Start
  - 2 Window End
  - 3 Center
  - 4 Custom

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

n		Results Returned
		3. EVM Pk (%)
		4. EVM Pk Index
		5. EVM Peak Sub Car Index
		6. Data EVM (%) - Not available when RB Auto Detect is Off and no User is added
		7. 3GPP-defined QPSK EVM (%)
		8. 3GPP-defined 16QAM EVM (%)
		9. 3GPP-defined 64QAM EVM (%)
		10. RS EVM (%)
		11. NaN (9.91E+37) returned
		12. NaN (9.91E+37) returned
		13. Frequency Error (Hz)
		14. Sync Correlation (%)
		15. Sync Type
	2	PUSCH-DMRS
	3	PUCCH-DMRS
	4	SRS
	5	PRACH
		16. Common Tracking Error (%)
		17. Symbol Clock Error (ppm)
		18. Time Offset (s)
		19. IQ Offset (dB)
		20. IQ Gain Imbalance (dB)
		21. IQ Quad Error (deg)
		22. IQ Timing Skew (s)
		23. CP Length Mode
	1	Normal
	2	Extended
		24. Channel Power (dBm)

n	Results Returned																					
	25. In-band Emissions Result																					
	0 PASS																					
	1 FAIL																					
	26. In-band Emissions worst Margin (dB)																					
	27. In-band Emissions worst Slot																					
	28. In-band Emissions worst RB																					
	29. Spectral Flatness Result																					
	0 PASS																					
	1 FAIL																					
	30. Spectral Flatness worst Margin (dB)																					
	31. Spectral Flatness worst Slot																					
	32. Spectral Flatness worst Subcarrier																					
	33. 3GPP-defined 256QAM EVM (%)																					
2	Returns the results of the Frame Summary table of CCO in numeric format, with NaN instead of string results. Since this table changes depending on the Channel Profile Setup, the data names and units must be determined at run time by using CALC:EVM:DATA<k>:TABL queries.																					
3	<p><b>Error Information of each Component Carrier</b></p> <p>Returns total error information of each <b>Component Carrier</b>. The values are bitwise OR operated on the Error Information as follows:</p> <table border="1"> <thead> <tr> <th>Error Information</th> <th>Decimal</th> <th>Binary</th> </tr> </thead> <tbody> <tr> <td>No Error</td> <td>0</td> <td>0x00000000</td> </tr> <tr> <td>Parameter Setting Conflict</td> <td>1</td> <td>0x00000001</td> </tr> <tr> <td>ADC OverRange</td> <td>2</td> <td>0x00000010</td> </tr> <tr> <td>Sync Error</td> <td>4</td> <td>0x00000100</td> </tr> <tr> <td>Demod Error</td> <td>8</td> <td>0x00001000</td> </tr> <tr> <td>Burst Not Found</td> <td>16</td> <td>0x00010000</td> </tr> </tbody> </table> <p>For example, if ADC Over Range and Sync Error occurred, the value is 6.</p> <p>The total result length is variable. The returned contents vary depending on the total number of Component Carriers, which is specified by Number of Component Carriers.</p> <p>Returns the following scalar results:</p> <ol style="list-style-type: none"> <li>Total Error Information of CCO</li> <li>Total Error Information of CC1</li> </ol>	Error Information	Decimal	Binary	No Error	0	0x00000000	Parameter Setting Conflict	1	0x00000001	ADC OverRange	2	0x00000010	Sync Error	4	0x00000100	Demod Error	8	0x00001000	Burst Not Found	16	0x00010000
Error Information	Decimal	Binary																				
No Error	0	0x00000000																				
Parameter Setting Conflict	1	0x00000001																				
ADC OverRange	2	0x00000010																				
Sync Error	4	0x00000100																				
Demod Error	8	0x00001000																				
Burst Not Found	16	0x00010000																				

n	Results Returned
3. ...	<b>nCarr. Total Error Information of the last carrier.</b>
	Where, nCarr is the number of carriers to be measured.
5	Returns three results (I offset, Q offset and IQ offset) for each active Component Carrier. For example, if CC0 and CC4 are active, six values are returned, the initial three values are for CC0 and the following three values are for CC4. 1. I Offset (Average) in Volts 2. Q Offset(Average) in Volts 3. IQ Offset(Average) in dB
6-9	Reserved
10	Returns measurement results for <b>Component Carrier 1</b> when it is active. All the return values are floating points. The result fields and detailed description see the first row ( n=1) of this table.
11	Returns measurement results for <b>Component Carrier 2</b> when it is active. All the return values are floating points. The result fields and detailed description see the first row ( n=1) of this table.
12	Returns measurement results for <b>Component Carrier 3</b> when it is active. All the return values are floating points. The result fields and detailed description see the first row ( n=1) of this table.
13	Returns measurement results for <b>Component Carrier 4</b> when it is active. All the return values are floating points. The result fields and detailed description see the first row ( n=1) of this table.

Because the results for MEASure, READ, or FETCh queries are statically defined, use the following query:

```
CALCulate:EVM:DATA<n>:TABLE:STRing?
```

as this provides both string and numeric results (numeric formatted as ASCII), and the queries.

```
CALCulate:EVM:DATA<n>:TABLE:NAMes?
```

```
CALCulate:EVM:DATA<n>:TABLE:UNIT?
```

to obtain lists of descriptive data names and associated units. For table results that can change dynamically, such as the Frame Summary, these provide the only possible way to interpret remote table data, since static tabulations such as those above are not sufficient.

As an example for the previous commands, if you have performed CONF:EVM;INIT:IMM;FORM ASCII, the following commands return results similar to those shown in the columns below. The FORM ASCII command dictates that the FETC results are returned as ASCII in a comma-separated list. The CALC:EVM:DATA<n>:TABL query responses are a comma-separated list enclosed in quotes (that is, they are a single string).

**FETC:EVM<n> Results vs CALC:EVM:DATA<n>:TABL series Results**

FETC:EVM1	CALC:EVM:DATA4 :TABL:STR?	CALC:EVM:DATA 4 :TABL:UNIT?	CALC:EVM:DATA4 :TABL:NAM?
9.2223893260E+01	92.22389326	%rms	EVM
9.9100000000E+37	EVM Window End		EVMSymTimeAdj
4.2397593130E+02	423.9759313	%rms	EVMPeak
6.0000000000E+00	6	sym	EVMPeakIdx
2.1000000000E+01	21	subcar	EVMPeakSubcarIdx
8.6673950980E+01	86.67395098	%rms	DataEVM
7.6970986550E+01	76.97098655	%rms	RSEVM
6.6970986550E+01	66.97098655	%rms	3GPPEVMQPSK
9.6673950980E+01	96.67395098	%rms	3GPPEVM16QAM
2.8573950980E+01	28.57395098	%rms	3GPPEVM1
3.9100000000E+01	3.91	dBm/subcar	RSTP
-20.4500000000E+01	-20.45	dBm	OSTP
8.4413310460E+02	844.1331046	Hz	FreqErr
1.0699478450E-01	0.106994784	%	SyncCorr
9.9100000000E+37	P-SS		SyncType
1.6618317400E+01	16.6183174	%rms	CTE
4.2218131000E+02	422.18131	ppm	SymClkErr
3.4869991450E-03	0.003486999	sec	TimeOffset
-2.2683995020E+01	-22.68399502	dB	IQOffset
-1.1367356920E-01	-0.113673569	dB	IQGainImb
-3.6632873820E-01	-0.366328738	deg	IQQuadErr
-2.6630113160E-09	-2.66E-09	sec	IQTimingSkew
9.9100000000E+37	Normal(auto)		CpLengthMode
9.9100000000E+37	503 (auto)		CellId
9.9100000000E+37	167/2 (auto)		CellIdGroupSector
9.9100000000E+37	Custom		RSPRS
1.003800000000E+01	-10.038	dBm	RSRP
-6.4700000000E+00	-6.47	dB	RSRQ
-2.0050000000E+01	-20.05	dBm	RSSI
-3.613801427E+00	-	dBm	ChannelPower
	3.6138014269358		
	8		

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

FETC:EVM1	CALC:EVM:DATA4 :TABL:STR?	CALC:EVM:DATA 4 :TABL:UNIT?	CALC:EVM:DATA4 :TABL:NAM?
9.9100000000E+37	PASS		InbandEmissions
3.38484E+01	33.848	dB	InbandEmissionsWorstMargin
2	2		InbandEmissionsWorstSlot
18	18		InbandEmissionsWorstRB
9.9100000000E+37	FAIL		SpectralFlatness
-3.915E+00	-3.915	dB	SpectralFlatnessWorstMargin
2	2		SpectralFlatnessWorstSlot
-8	-8		SpectralFlatnessWorstSubcarrier
2.8573950980E+01	28.57395098	%rms	3GPPEVM256QAM

In addition, if just the “FreqErr” result is desired, you can obtain it using the command:

CALC:EVM:TABL:STR? “FreqErr”

For the example data above, the response is:

“844.1331046”

### 3.8.2 Views

The Modulation Analysis measurement supports up to six views.

Some of these views are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the View changes, the default menu is Frequency, unless otherwise specified in the View description.

---

Remote Command [:DISPlay:EVM:VIEW:PRESet](#) [BASic](#) | [SUMM](#)ary | [RBS](#)lot | [SUB](#)Carrier | [MIMO](#) | [CROS](#)s

---

Example [:DISP:EVM:VIEW:PRES](#) [BAS](#)  
 sets the Basic view  
[:DISP:EVM:VIEW:PRES](#) [SUMM](#)  
 sets the summary view  
[:DISP:EVM:VIEW:PRES](#) [RBSL](#)  
 sets the RB Slot view  
[:DISP:EVM:VIEW:PRES](#) [SUBC](#)  
 sets the Subcarrier view

---

	<code>:DISP:EVM:VIEW:PRES CROS</code>
	sets the Cross Carrier Summary view
	<code>:DISP:EVM:VIEW:PRES MIMO</code>
	sets the MIMO view
Preset	Basic
State Saved	Saved in instrument state

---

### 3.8.2.1 Basic

This view consists of the following windows of the selected Component Carrier in a Grid 2x2 layout:


- IQ Meas
- Spectrum
- Error Vector Spectrum
- Error Summary

This layout is set by Meas Preset and is good to ensure that the signal is being demodulated correctly, as well as showing many basic demodulation setup problems.

---

Example	<code>:DISP:EVM:VIEW:PRES BAS</code>
---------	--------------------------------------

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

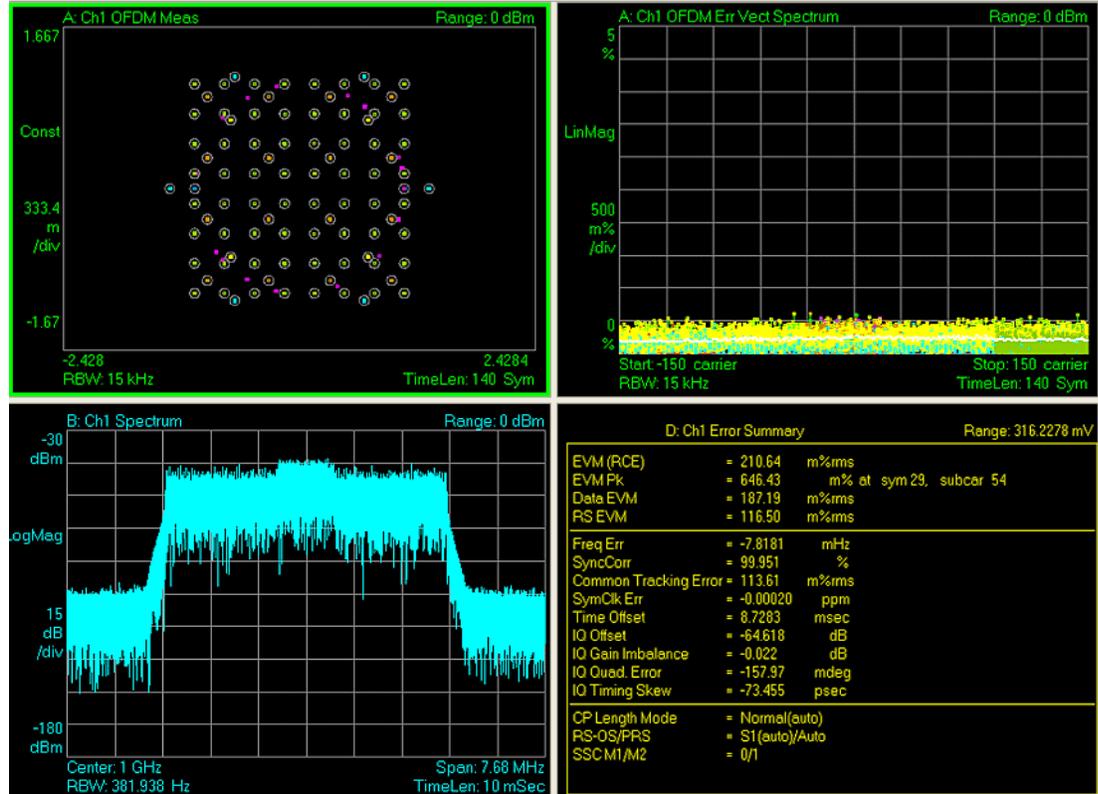

### 3.8.2.2 Meas Summary


This view consists of the following windows of the selected Component Carrier in a Stacked layout:

- Error Summary
- Frame Summary

This layout provides the full list of the composite result metrics and characteristics of each of the logical channels.

---

Example      `:DISP:EVM:VIEW:PRES SUMM`

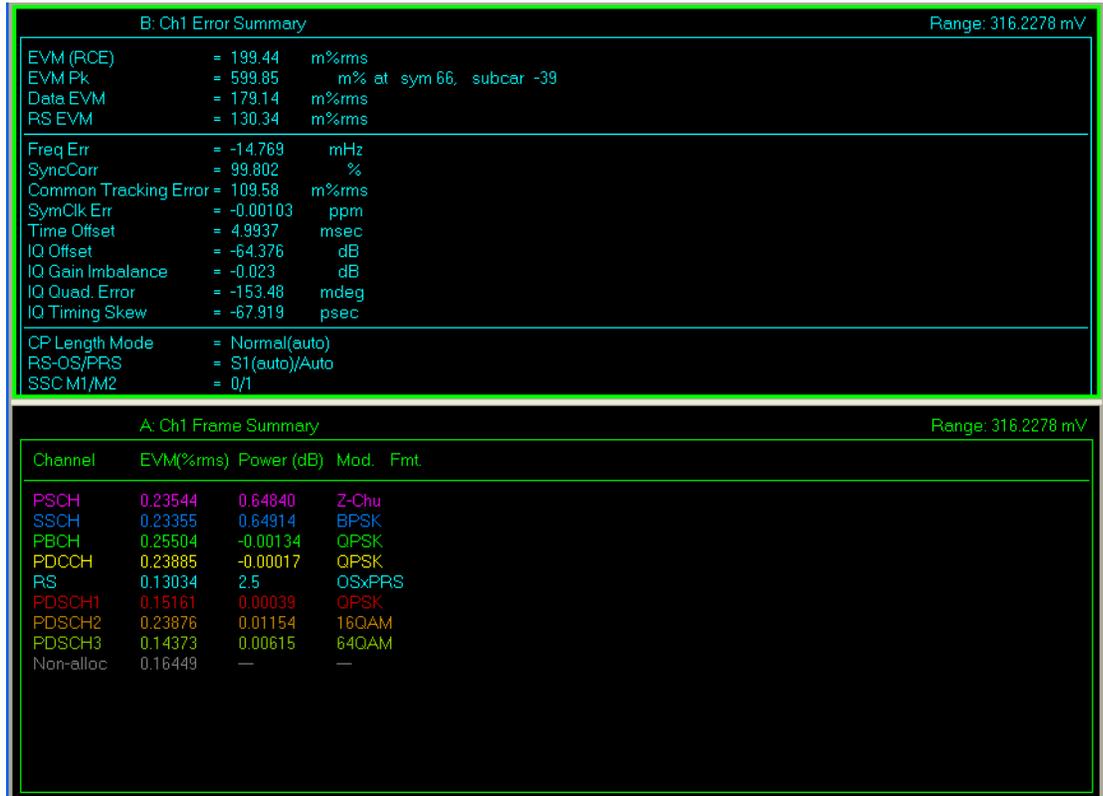

### 3.8.2.3 RB Slot Meas

This view consists of the following windows of the selected Component Carrier in a Grid 2x2 layout:

- RB Power vs Spectrum
- RB Error Mag vs Spectrum
- RB Power vs Time
- RB Error Mag vs Time


This layout provides the details on the Resource Block.

The Preset View: RB Slot Meas control performs the immediate action of changing the layout and view to this configuration. Preset View is an action, not a state.

---

Example :DISP:EVM:VIEW:PRES RBSL

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

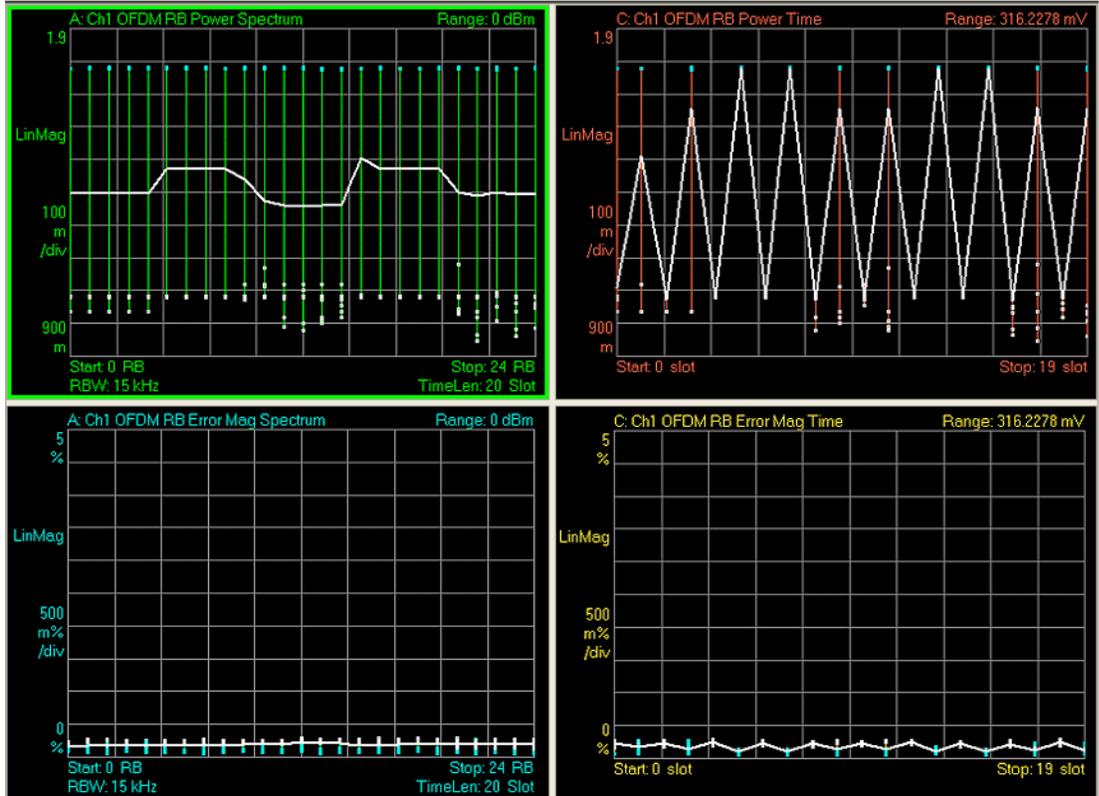

### 3.8.2.4 Subcarrier Meas

This view consists of the following windows of the selected Component Carrier in a Grid 2x2 layout:


- Error Vector vs Spectrum
- IQ Meas (Log Mag)
- Error Vector Time
- IQ Meas vs Time (Log Mag)

This layout provides the details on the Power and EVM results.

The Preset View: Subcarrier Meas control performs the immediate action of changing the layout and view to this configuration. Preset View is an action, not a state.

---

Example `:DISP:EVM:VIEW:PRES SUBC`

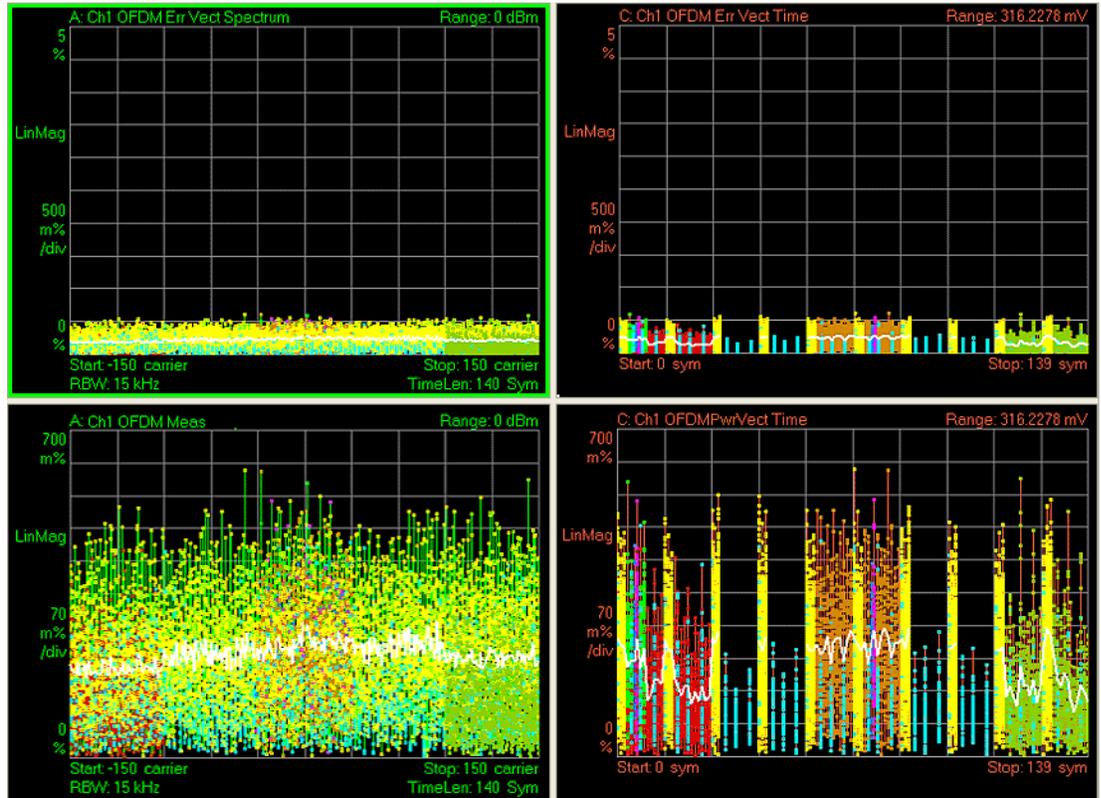

### 3.8.2.5 MIMO Summary

This preset view consists of the following windows in a Stacked layout:

- Chan Freq Resp
- MIMO Info Table

This layout provides the details on the MIMO results.

The Preset View immediately changes the layout and view to this configuration. Preset View is an action, not a state.

---

Example `:DISP:EVM:VIEW:PRES MIMO`

### 3.8.2.6 Cross-Carriers Summary

This layout provides the details Error Summary of the selected Component Carrier, Cross-Carriers Summary information about the Time Alignment Error (TAE) and Channel Power for each component carrier (CCx) relative to the selected Reference Component Carrier (specified by Reference Config on Meas Standard tab).

The TAE for the CCx is calculated by subtracting the Time Offset of the reference CC from the Time Offset of the CCx.

The relative Channel Power for the CCx is calculated by subtracting the Channel Power of the reference CC from the Channel Power of the CCx.

---

Example `:DISP:EVM:VIEW:PRES CROS`

### 3.8.3 Windows

There are various windows (each displaying a specific trace) available in the Modulation Analysis measurement.

The table below ("[Table: SCPI Commands for trace configuration](#)" on page 1293) shows available trace data types. Use the following SCPI command to configure the trace data.

```
:DISPlay:EVM:TRACe|2|3|4|5|6:FEED <string>
```

For example, the following command sets the first trace to Spectrum.

```
:DISP:EVM:TRAC1:FEED "Spectrum1"
```

TRACe number 1 to 9 can be mapped to the Window number displayed on the screen. You can add more than nine windows on the screen, but only up to nine windows can be configured to show various trace data types.

Besides the window names as listed in the table below, the Data Registers are also available for display if there are traces stored in them (for example, "D1", "D2", "D3", "D4", "D5", "D6" and so on).

**Table: SCPI Commands for trace configuration**

Window Name	SCPI <string>	
Pre Demod		
Spectrum	"CC0 Spectrum1"	
Inst Spectrum	"CC0 Inst Spectrum1"	
Search Time	"CC0 Search Time1"	
Time	"CC0 Time1"	
Raw Main Time	"CC0 Raw Main Time1"	
Demod	<Uplink>	<Downlink>
IQ Meas	"Demod CC0 IQ Meas1"	"Layer CC0 IQ Meas1"
IQ Ref	"Demod CC0 IQ Ref1"	"Layer CC0 IQ Ref1"
IQ Meas Time	"Demod CC0 IQ Meas Time1"	"Layer CC0 IQ Meas Time1"

Window Name	SCPI <string>	
IQ Ref Time	"Demod CC0 IQ Ref Time1"	"Layer CC0 IQ Ref Time1"
IQ Freq Meas	"Demod CC0 IQ Freq Meas1"	N/A
IQ Freq Ref	"Demod CC0 IQ Freq Ref1"	N/A
Detected Allocations	"Demod CC0 Detected Allocations Time1"	"Layer CC0 Detected Allocations Time1"
Demod Error	<Uplink>	<Downlink>
Error Vector Time	"Demod CC0 Error Vector Time1"	"Layer CC0 Error Vector Time1"
RMS Error Vector Time	"Demod CC0 RMS Error Vector Time1"	"Layer CC0 RMS Error Vector Time1"
Error Vector Spectrum	"Demod CC0 Error Vector Spectrum1"	"Layer CC0 Error Vector Spectrum1"
RMS Error Vector Spectrum	"Demod CC0 RMS Error Vector Spectrum1"	"Layer CC0 RMS Error Vector Spectrum"
Common Tracking Error (LTE)	"Demod CC0 Common Tracking Error1"	
RB Error Mag Spectrum	"Demod CC0 RB Error Mag Spectrum1"	"Layer RB Error Mag Spectrum1"
RB Error Mag Time	"Demod CC0 RB Error Mag Time1"	"Layer CC0 RB Error Mag Time1"
RB Power Spectrum	"Demod CC0 RB Power Spectrum1"	"Layer CC0 RB Power Spectrum1"
RB Power Time	"Demod CC0 RB Power Time1"	"Layer CC0 RB Power Time1"
Freq Err Per Slot	"Demod CC0 Freq Err Per Slot1"	
IQ Offset Per Slot	"Demod CC0 IQ Offset Per Slot1"	
In-band Emissions	"Demod CC0 In-band Emissions1"	
Cross-Carrier In-band Emissions (LTE)	"Cross-CC In-band Emissions1"	
Tables		
Error Summary	"Demod CC0 Error Summary1"	
Frame Summary	"Demod CC0 Frame Summary1"	
Symbols	"Demod CC0 Symbol Table1"	"Layer CC0 Symbol Table1"
Decoded Symbol Table	"Demod CC0 Decoded Symbol Table1"	"Demod CC0 CW0 Decoded Symbol Table1"
Decode Info	"Demod CC0 UL Decode Info1"	"Demod CC0 DL Decode Info1"
UE-RS Weights (LTE)	N/A	"Demod CC0 UE-specific RS Weights1"
Cross-Carrier Summary	"Cross-CC Summary1"	

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Window Name	SCPI <string>	
(LTE)		
Response		
Eq Ch Freq Resp (LTE)	“Demod CC0 Eq Chan Freq Resp1”	
Inst Eq Ch Freq Resp (LTE)	“Demod CC0 Inst Eq Chan Freq Resp1”	
Eq Ch Freq Resp Diff (LTE)	“Demod CC0 Eq Chan Freq Resp Diff1”	
Inst Eq Ch Freq Resp Diff (LTE)	“Demod CC0 Inst Eq Chan Freq Resp Diff1”	
Eq Impulse Response (LTE)	“Demod CC0 Eq Impulse Response1”	
Eq Ch Freq Resp Per Slot (LTE)	“Demod CC0 Per Slot Eq Chan Freq Resp1”	N/A
MIMO	Uplink	Downlink
Info Table	N/A	“MIMO CC0 Info Table1”
Ch Freq Resp	N/A	“MIMO CC0 Eq Chan Freq Resp1”
Ch Freq Resp Diff	N/A	“MIMO CC0 Eq Chan Freq Resp Diff1”
Eq Impulse Resp	N/A	“MIMO CC0 Eq Impulse Response1”
Common Track Error	N/A	“MIMO CC0 Common Tracking Error1”
ACP		
ACP Summary for Trace 1 (LTE)	“Acp Summary Trc1”	
ACP Summary for Trace 2 (LTE)	“Acp Summary Trc2”	
ACP Summary for Trace 3 (LTE)	“Acp Summary Trc3”	
ACP Summary for Trace 4 (LTE)	“Acp Summary Trc4”	
ACP Summary for Trace 5 (LTE)	“Acp Summary Trc5”	
ACP Summary for Trace 6 (LTE)	“Acp Summary Trc6”	
ACP Summary for Trace 7 (LTE)	“Acp Summary Trc7”	
ACP Summary for Trace 8 (LTE)	“Acp Summary Trc8”	
ACP Summary for Trace 9 (LTE)	“Acp Summary Trc9”	
OBW		
OBW Summary for	“Obw Summary Trc1”	

Window Name	SCPI <string>
Trace 1 (LTE)	
OBW Summary for Trace 2 (LTE)	"Obw Summary Trc2"
OBW Summary for Trace 3 (LTE)	"Obw Summary Trc3"
OBW Summary for Trace 4 (LTE)	"Obw Summary Trc4"
OBW Summary for Trace 5 (LTE)	"Obw Summary Trc5"
OBW Summary for Trace 6 (LTE)	"Obw Summary Trc6"
OBW Summary for Trace 7 (LTE)	"Obw Summary Trc7"
OBW Summary for Trace 8 (LTE)	"Obw Summary Trc8"
OBW Summary for Trace 9 (LTE)	"Obw Summary Trc9"
Marker Table	
Marker Table	"Marker"

### 3.8.3.1 Pre Demod

Displays the Trace Data choices that show pre-demodulation results.

### Spectrum

Averaged FFT of the Time waveform for the selected Component Carrier. This window appears in the Basic View.

---

Example `:DISP:EVM:TRAC1:FEED "Spectrum1"`  
`:DISP:EVM:TRAC1:FEED "CC0 Spectrum1"`

### Inst Spectrum

FFT of the time waveform for the selected Component Carrier. "Inst" or Instantaneous refers to this result not being averaged.

---

Example `:DISP:EVM:TRAC1:FEED "Inst Spectrum1"`  
`:DISP:EVM:TRAC1:FEED "CC0 Inst Spectrum1"`

For both ["Spectrum" on page 1296](#) and ["Inst Spectrum" on page 1296](#),

- When "Acquisition Mode" on page 1447 is Simultaneous, the Span is based on the aggregated bandwidth of multiple Component Carriers.
- When "Acquisition Mode" on page 1447 is Sequential, the Span is based on the BW of the specified Component Carrier.

## Search Time

Search Length long time record acquired for the current measurement.

---

Example      :DISP:EVM:TRAC1:FEED "Search Time1"  
              :DISP:EVM:TRAC1:FEED "CC0 Search Time1"

## Time

Time data corresponding to the measurement interval used to compute demod results.

---

Example      :DISP:EVM:TRAC1:FEED "Time1"  
              :DISP:EVM:TRAC1:FEED "CC0 Time1"

## Raw Main Time

Raw time record acquired for the selected Component Carrier. This data is unprocessed and includes additional points acquired for settling of the filters involved in subsequent processing, such as the demodulation filtering.

---

Example      :DISP:EVM:TRAC1:FEED "CC0 Raw Main Time1"  
              :DISP:EVM:TRAC1:FEED "Raw Main Time1"

### 3.8.3.2 Demod

Displays the general demodulation results.

## IQ Meas

IQ Meas is the measured IQ symbol values of the subcarriers. There is one complex value for each subcarrier for each symbol in the burst.

In Downlink mode, IQ Meas shows the IQ values for channels/signals in the selected layer. When the component carrier contains only one layer, IQ Meas shows the values of the subcarriers from the OFDM symbol FFT.

Normally, this trace data is displayed as a constellation. The constellation display shows both data and pilot subcarriers, the pilot and data values are shown in different colors.

Only the points of channels/signals selected in Composite Include are shown on this trace. The color of a point indicates which channel/signal the point belongs to. The colors of the channel/signals are shown in the Frame Summary trace.

In the constellation (Const) format, reference constellation circles/crosses are drawn where the symbol points are expected to fall only when "[Power Boost Normalize](#)" on page 1453 is set to On.

With the IQ Meas constellation view, you can get an understanding of how close the constellation points are to the reference. Also, you can turn off various corrections, such as "[Equalizer Training](#)" on page 1485 and "[EVM Minimization](#)" on page 1493 to see how well, and in what way, they are correcting the signal.

---

Example      `:DISP:EVM:TRAC1:FEED "Demod CC0 IQ Meas1"`  
 When Direction is Uplink  
`:DISP:EVM:TRAC1:FEED "Layer CC0 IQ Meas1"`  
 When Direction is Downlink

## IQ Ref

IQ Ref is the reference (ideal) IQ values of the subcarriers. There is one complex value for each subcarrier for each symbol in the burst.

Normally, this trace data is displayed as a constellation. The constellation shows both data and pilot subcarrier symbols, the pilot and data values are shown in different colors.

In Downlink mode, IQ Ref shows the reference IQ values of the subcarriers from the output of the FFT (frequency domain).

When analyzing channels transmitted on C-RS antenna ports with transmit diversity or spatial multiplexing, this trace shows the channel data values after precoding has been removed. When precoding is removed, the subcarrier notation does not apply to channel data values since the values do not have a one-to-one correspondence with on-air subcarriers. See "[MIMO Decoding](#)" on page 1470 for more information.

For downlink signals, the PDSCH IQ data that is used in calculating this trace comes from the layer chosen when selecting this trace. Other LTE channels/signals are included in Layer traces for convenience.

For uplink signals, the IQ data comes directly from the OFDM symbol FFT, except for PUSCH. PUSCH subcarriers are despread before being used in calculations.

In uplink mode, when PUSCH is included in analysis, IQ Meas shows PUSCH IQ values after despreading (IFFT), overlaid on the other channels/signals reference

IQ values, which come directly from the output of the symbol FFT. To view PUSCH points in the frequency domain instead, use the IQ Freq Ref trace. See the SC-FDMA Symbol Points section in IQ Meas for more information.

Only the points of channels/signals selected in Composite Include are shown on this trace. The color of a point indicates which channel/signal the point belongs to. The colors of the channel/signals are shown in the Frame Summary trace.

The data in this trace comes from the interval specified by Measurement Interval and Measurement Offset.

---

Example       :DISP:EVM:TRAC1:FEED "Demod CC0 IQ Ref1"  
For Uplink  
              :DISP:EVM:TRAC1:FEED "Layer CC0 IQ Ref1"  
For Downlink

## IQ Meas Time

IQ Meas Time shows the same information as IQ Meas when the data is shown in the Const or I-Q trace format. When the data is shown in any other format, time is on the horizontal axis instead of frequency as in IQ Meas.

The concept pertaining to ["IQ Meas" on page 1297](#) applies to IQ Meas Time, with the exception mentioned above. Also, see ["MBMS mixed-mode CP" on page 1301](#).

---

Example       :DISP:EVM:TRAC1:FEED "Demod CC0 IQ Meas Time1"  
For Uplink  
              :DISP:EVM:TRAC1:FEED "Layer CC0 IQ Meas Time1"  
For Downlink

## IQ Ref Time

IQ Ref Time shows the same information as the IQ Ref trace when the data is shown in the Const or I-Q trace format. When the data is shown in any other format, time is on the horizontal axis instead of frequency as in the IQ Ref trace.

The concept pertaining to ["IQ Ref" on page 1298](#) applies to IQ Ref Time, with the exception mentioned above. Also, see ["MBMS mixed-mode CP" on page 1301](#).

---

Example       :DISP:EVM:TRAC1:FEED "Demod CC0 IQ Ref Time1"  
For Uplink  
              :DISP:EVM:TRAC1:FEED "Layer CC0 IQ Ref Time1"  
For Downlink

## Uplink IQ Freq Meas

IQ Freq Meas shows the IQ data taken after the OFDM symbol FFT is performed on the measured data. This trace is available only for uplink signals and is in contrast to "IQ Meas" on page 1297 which, in uplink mode, shows PUSCH SC-FDMA points after despreading (IFFT).

PUSCH IQ values shown on the IQ Freq Meas trace resemble a collection of random points concentrated around the origin as a result of the SC-FDMA modulation.

NOTE

**To view SC-FDMA (uplink PUSCH) signals in the time domain, use IQ Meas.**

The data in IQ Freq Meas, which comes from the Time trace data as that data is passed through the demodulator, is a 2x2 matrix with frequency along one dimension and time along the other. In addition, each one of the points in the matrix is a complex value; therefore, there are four total dimensions. The choice of trace format determines which two dimensions are on the x-y plane, and which dimensions are overlapped, averaged, or ignored. The relevant trace formats and their corresponding view of the data are described below.

Constellation, IQ - The I-Q plane is mapped to the x-y plane and each point contains both a subcarrier and a symbol-time reference. In other words, each point plotted on the complex plane comes from a symbol transmitted on a specific subcarrier at a certain time.

LogMag, LinMag, Real, Imag, Wrapped Phase, Unwrapped Phase - Subcarriers are plotted along the x-axis. All the symbols that a subcarrier transmits are plotted above the corresponding subcarrier tick on the x-axis, in the specified format (whether it be dB magnitude or the real value of the symbol point, and so on).

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 IQ Freq Meas1`  
For Uplink

## Uplink IQ Freq Ref

IQ Freq Ref shows the reference (demodulated) IQ values of the subcarriers for each OFDM symbol point at the output of the FFT. This trace always shows OFDM reference IQ points (unlike IQ Ref, which in uplink mode, shows reference PUSCH SC-FDMA IQ points after despreading (IFFT)).

This trace is only available for uplink signals.

To view SC-FDMA (uplink PUSCH) signals in the time domain (after despreading), use the IQ Ref trace.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 IQ Freq Ref1`

---

For Uplink

### Detected Allocations

Detected Allocations Time shows the allocations of the selected layer in a two dimensional grid with frequency on the vertical axis and time on the horizontal axis. Each point on the grid represents a single resource element (1 subcarrier x 1 symbol).

Only signals that are selected on the Channel Profile Tab are shown on this trace.

By default, the unit for time is set to symbols. However, you may set "Time Unit" to 'sec' in the "Edit Window" Dialog, to change the unit for time to seconds.

The points are color coded according to channel type. The Frame Summary trace shows all channels and their corresponding colors. Also, see "[MBMS mixed-mode CP](#)" on page 1301.

---

Example

`:DISP:EVM:TRAC1:FEED "Demod CC0 Detected Allocations Time1"`

For Uplink

`:DISP:EVM:TRAC1:FEED "Layer CC0 Detected Allocations Time1"`

For Downlink

MBMS mixed-mode CP

MBMS signals are transmitted during the MBSFN region of MBSFN subframes using Extended CP mode (six symbols per slot). The non-MBSFN region in these subframes (and the rest of the frame) can be transmitted in Normal or Extended CP mode.

For mixed-CP-mode LTE frames, traces that show time on the x-axis in units of syms (OFDM symbols) need unevenly spaced x-axis points to correctly represent the time location of the symbols (since extended CP symbols are longer than normal CP symbols).

Instead of using non-uniform x-axis spacing of symbol points, the LTE demodulator shows the time axis as if all the slots use Normal CP (with seven symbols per slot), and for MBSFN slots, the demodulator fills the first 6 symbols of the slot with the extended CP symbols, leaving the 7<sup>th</sup> symbol blank.

### 3.8.3.3 Demod Error

Displays the general demodulation results, which are related to the Error Vector.

Error Vector Time

This trace shows individual signal error vectors for each subcarrier and symbol versus Time (symbol) and frequency (subcarrier) in the Measurement Interval. Each error vector is the vector difference, for that subcarrier at that symbol time, between the corresponding "IQ Meas" on page 1297 value and the "IQ Ref" on page 1298 value.

The EVM values for subcarriers are plotted above their corresponding symbol time on this trace. The values of the error vectors are usually plotted as a magnitude, but you can choose other formats as well.

In addition, a white trace is drawn, where each point is the RMS average over the valid subcarriers, which is the same result as is plotted separately as "RMS Error Vector Time" on page 1302.

For uplink PRACH analysis, this trace's x-axis is marked in subframes. The PRACH EVM data points are located at the subframe that the PRACH preamble begins in.

---

Example       :DISP:EVM:TRAC1:FEED "Layer CC0 Error Vector Time1"  
For Downlink  
:DISP:EVM:TRAC1:FEED "Demod CC0 Error Vector Time1"  
For Uplink

## RMS Error Vector Time

RMS Error Vector Time shows the Root Mean Square (RMS) average EVM for each symbol. The RMS average for each symbol is calculated from the subcarrier EVMs of currently selected channels and signals. This trace is the same data shown as a white trace shown in "Error Vector Time" on page 1301 "Error Vector Time" on page 1301 "Error Vector Time" on page 1301.

---

Example       :DISP:EVM:TRAC1:FEED "Demod CC0 RMS Error Vector Time1"  
For Downlink  
:DISP:EVM:TRAC1:FEED "Layer CC0 RMS Error Vector Time1"  
For Uplink

## Error Vector Spectrum

Error Vector Spectrum shows the difference between the measured values and the reference values for each resource element in a layer. The error vectors for each resource element in the Measurement Interval are calculated and the values are plotted above the corresponding subcarrier. The values of the error vectors are usually plotted as a magnitude, but you can choose other formats as well.

On this trace, the individual error vectors are plotted versus frequency (subcarrier). So, at each valid subcarrier, there is a point plotted for each valid symbol. Note that subcarrier 0 is not plotted since it is not used. In addition, a white trace is drawn,

where each point is the RMS average over the valid symbols, which is the same result as is plotted separately as "RMS Error Vector Spectrum" on page 1303.

---

Example           :DISP:EVM:TRAC1:FEED "Layer CC0 Error Vector Spectrum1"  
For Downlink  
                  :DISP:EVM:TRAC1:FEED "Demod CC0 Error Vector Spectrum1"  
For Uplink

## RMS Error Vector Spectrum

RMS Error Vector Spectrum shows the Root Mean Square (RMS) average EVM for each subcarrier. The value displayed above each subcarrier index on the x-axis is the EVM RMS average for the subcarrier over all symbols in the Measurement Interval. Only currently selected channels are included in the average.

---

Example           :DISP:EVM:TRAC1:FEED "Demod CC0 RMS Error Vector Spectrum1"  
For Downlink  
                  :DISP:EVM:TRAC1:FEED "Layer CC0 RMS Error Vector Spectrum1"  
For Uplink

## Common Tracking Error

Common Tracking Error shows the corrections calculated by EVM Minimization. The complex value for each symbol is the average of subcarrier phase and amplitude corrections to that symbol. When EVM Minimization is set to 3GPP, the Common Tracking Error trace still shows the tracking error for each symbol, but tracking is calculated per slot (uplink) or per subframe (downlink).

For signals with multiple C-RS antenna ports, this trace shows the tracking information of the path determined by the Ref Meas Channel and Ref C-RS Port parameters.

To view the tracking information for all C-RS/Rx paths simultaneously, select the MIMO Common Tracking Error trace.

The Common Tracking Error trace shows phase or amplitude error when the appropriate trace format, such as Wr Phs or Log Mag, is selected.

Tracking information is calculated and shown in this trace whether or not the corrections are applied to the signal.

The information in the Common Tracking Error trace is calculated from a symbol FFT location determined by the Symbol Timing Adjust parameter.

---

Example           :DISP:EVM:TRAC1:FEED "Demod CC0 Common Tracking Error1"  
For Downlink and Uplink

## RB Error Mag Spectrum

RB Error Mag Spectrum shows the EVM of each resource block (RB) in the selected layer. The EVM points are plotted with respect to frequency (resource blocks on x-axis). The distance away from the x-axis expresses the magnitude of the EVM.

The data comes from the interval specified by Measurement Interval and Measurement Offset.

---

Example      `:DISP:EVM:TRAC1:FEED "Layer CC0 RB Error Mag Spectrum1"`  
For Downlink  
              `:DISP:EVM:TRAC1:FEED "Demod CC0 RB Error Mag Spectrum1"`  
For Uplink

## RB Error Mag Time

RB Error Mag Time shows the EVM of each resource block (RB) in the selected layer. The EVM points are plotted with respect to time (slots on x-axis). The distance away from the x-axis expresses the magnitude of the EVM.

The data comes from the interval specified by Measurement Interval and Measurement Offset.

---

Example      `:DISP:EVM:TRAC1:FEED "Layer RB Error Mag Spectrum1"`  
For Downlink  
              `:DISP:EVM:TRAC1:FEED "Demod CC0 RB Error Mag Time1"`  
For Uplink

## RB Power Spectrum

RB Power Spectrum shows the resource block power spectrum for the demodulated data specified by Measurement Interval and Measurement Offset. For trace formats that show magnitude (Linear Mag or Log Mag (dB)), multiple power values are plotted above each RB index on the x-axis. Each point represents the power of a particular slot in the Measurement Interval. The distance away from the x-axis expresses the power.

The RB Power Spectrum trace is different from the other traces in that channel frequency response equalization is not applied and Non-alloc resources are included whether or not 'Non-alloc' is selected on the 'Profile' tab of the "LTE-Advanced Demod Properties" dialog.

Resource block numbering starts from 0 and increases with frequency.

The In-band Emissions trace are used to make in-band emission measurements for uplink signals.

The data in this trace is generated from the 2D IQ Meas (frequency x time) data grouped into resource blocks (12 subcarriers x 1 slot). The power values of the resource elements are summed for each resource block, and the resulting resource block power values are plotted along the frequency axis. To view the resource block powers plotted with respect to time, use the "RB Power Time" on page 1305 trace.

For downlink signals, PDSCH IQ data that are used to calculate this trace come from the chosen layer of the selected trace. Other LTE channels/signals are included in Layer traces for convenience. For more details, see the Layer Traces and Resource Element Distribution topic.

For uplink signals, the IQ data comes directly from the OFDM symbol FFT, except for PUSCH. PUSCH subcarriers are despread before being used for calculations.

Points on the trace are color-coded to represent which channel/signal they contain. When a resource block contains more than just one channel/signal (which is often the case unless some channels are turned off in Composite Include), the point is colored white and a marker on the point is labeled "Composite."

You can disable the average line for this trace by clearing the 'Show 2D Avg Line' check box in the "Edit Window Dialog". When the average line is disabled, the marker does not display the average value for the current marker location.

---

Example           :DISP:EVM:TRAC1:FEED "Layer CC0 RB Power Spectrum1"  
For Downlink  
                  :DISP:EVM:TRAC1:FEED "Demod CC0 RB Power Spectrum1"  
For Uplink

## RB Power Time

RB Power Time shows the resource block power for each slot in the time interval specified by Measurement Interval and Measurement Offset. For trace formats that show magnitude, multiple power values are plotted above each slot index on the x-axis. Each point represents the power of a particular resource block in the measurement interval. The distance away from the x-axis expresses the power.

The RB Power Spectrum trace is different from the other traces in that

1 channel frequency response equalization has not been applied

2 non-alloc resources are included whether or not Non-Alloc has been selected on the Profile tab of the LTE-Advanced Demod Properties dialog box

Slot numbering starts from 0 at the beginning of a frame.

The data in this trace is generated from the 2D IQ Meas data (frequency x time) grouped into resource blocks (12 subcarriers x 1 slot). The powers of the resource

elements are summed for each resource block, and the resulting resource block powers are plotted for each slot along the time axis. To view the resource block powers plotted according to frequency, see the RB Power Spectrum trace.

For downlink signals, PDSCH IQ data used in calculating this trace comes from the layer chosen when selecting this trace. Other LTE channels/signals are included in Layer traces for convenience. For more details, see the Layer Traces and Resource Element Distribution topic.

For uplink signals, the IQ data comes directly from the OFDM symbol FFT, except for PUSCH. PUSCH subcarriers are despread before being used in calculations.

---

Example `:DISP:EVM:TRAC1:FEED "Layer CC0 RB Power Time1"`

For Downlink

`:DISP:EVM:TRAC1:FEED "Demod CC0 RB Power Time1"`

For Uplink

## Freq Error Per Slot

Freq Err Per Slot shows the frequency error of the signal as a function of slot number for the data in the Measurement Interval. This is the frequency error that is compensated on a per-slot basis as part of the EVM minimization process.

The frequency error is expressed as an offset in Hz from the center frequency of component carrier  $x$  (CC center frequency = Carrier Reference Frequency + CC Frequency Offset).

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Freq Err Per Slot1"`

For Downlink and Uplink

## Uplink IQ Offset Per Slot

This trace is only available for uplink signals.

IQ Offset indicates the magnitude of carrier feedthrough (power at 0 Hz). When there is no carrier feedthrough, IQ Offset is zero (-infinity dB). For an uplink signal, even when the signal is an ideal signal, any IQ offset adversely affects the subcarrier EVMs since the DC subcarrier is not orthogonal to the other subcarriers.

An IQ offset can be caused when the center (DC) carrier (which is supposed to be filtered out) leaks into the signal. IQ offset can also be caused when the baseband signal has a DC offset which then shows up as (DC) carrier power when the baseband signal is upconverted.

IQ Offset Per Slot shows the average IQ offset for each slot in the Measurement Interval. The IQ Offset Per Slot trace is calculated and is valid for active slots only

(slots that contain channel allocations, as defined in the LTE Allocation Editor or autodetected).

---

Example `:DISP:EVM:TRAC1:FEED ""Demod CC0 IQ Offset Per Slot1""`  
For Uplink

### Uplink In-band Emission

This trace is only available for uplink signals.

In-band Emissions shows the resource block power spectrum for the slot with worst emissions during the multiple slots specified by Measurement Interval and Measurement Offset.

This trace is identical to RB Power Spectrum except for the following three differences.

1. In-band Emissions always includes Non-alloc signals, regardless of the Non-alloc parameter selection.
2. In-band Emissions includes autogenerated limit lines the slot with the worst emission.
3. RB Power levels are normalized such that the average active RB power is 0 dB.

Resource block points whose power exceeds the limit are displayed in red.

See Section 6.5.2.3 of 3GPP TS 36.521-1 for more information about in-band emissions measurements.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 In-band Emissions1"`  
For Uplink

### Uplink Cross CC In-band Emission

This trace is only available for uplink signals.

The in-band emissions are a measure of the interference falling into the non-allocated resources blocks

The in-band emission is defined as the average across 12 sub-carrier and as a function of the RB offset from the edge of the allocated UL transmission bandwidth. The in-band emission is measured as the ratio of the UE output power in a non-allocated RB to the UE output power in an allocated RB. The basic in-band emissions measurement interval is defined over one slot in the time domain. For all types of E-UTRA UE release 8, this measurement only check the RBs within the Configured Channel Bandwidth.

There are 3 frequency regions to be checked for this measurement.

The first one is called General, it is for non-allocated RBs. The limit is given out as below, the more distant the non-allocated RBs located from allocated-RBs, the less power should be present required by this limit.

$$\max \left\{ -25 - 10 \cdot \log_{10} (N_{RB} / L_{CRB}), \right. \\ \left. 20 \cdot \log_{10} EVM - 3 - 5 \cdot (|\Delta_{RB}| - 1) / L_{CRB}, \right. \\ \left. - 57 \text{ dBm} / 180 \text{ kHz} - P_{RB} \right\}$$

The second part is called image, the image frequencies are those that are enclosed in the reflection of the allocated bandwidth, based on symmetry with respect to the center carrier frequency, but excluding any allocated RBs.

The third part is called carrier leakage, The applicable frequencies for this limit are those that are enclosed in the RBs containing the DC frequency if is odd, or in the two RBs immediately adjacent to the DC frequency if is even, but excluding any allocated RB.

For UEs supporting contiguous CA, this measurement is re-defined. Since the transmitter can transmit multiple CCs simultaneously using a wideband transceiver, so the actual center frequency is based on the final implementation of the base station transceiver, for example, the center frequency is any frequency between the CC0's high edge and CC1's low edge. Taking this into consideration, another test requirements for in-band emissions for those non-allocated component carriers are provided by 3GPP.

By default, it shows the result for the slot with the worst emissions.

See Section 6.5.2.3 of 3GPP TS 36.521-1 for more information about in-band emissions measurements.

---

Example `:DISP:EVM:TRAC1:FEED "Cross-CC In-band Emissions1"`

For Uplink

### 3.8.3.4 Tables

Displays the Trace Data in tabular form.

A scrollbar appears when the contents are too long to be displayed in the window. You can scroll the window without a mouse with the following steps.

1. Press **NextWindow** key to select the window you want to scroll.
2. Press **Esc** key to turn off the active function
3. Then, press one of **Arrow** keys.

### **Error Summary for LTE-A FDD/TDD**

For NB-IoT mode, see "[Error Summary for NB-IoT](#)" on page 1313.

For LTE-V2X mode, see "[Error Summary for LTE V2X](#)" on page 1315.

Error Summary contains information about the quality of the signal being analyzed (in the Measurement Interval). Below is a list of available data results.

Only EVM and EVM Pk are calculated from the channels that are selected for analysis in the Composite Include list on the Profile tab. The other Error Summary data results are not dependent on which channels are selected for analysis.

- EVM - Overall RMS Error Vector Magnitude for all selected channels in Composite Include
- EVM Symbol TimeAdjust
- EVM Pk - The peak EVM value and location of the peak EVM
- Data EVM - RMS Error Vector Magnitude of the user channels (PDSCH for Downlink, or PUSCH, PUCCH, and SRS for Uplink)
- 3GPP-defined QPSK EVM - RMS average EVM of PDSCH QPSK allocations, calculated based on the standard
- 3GPP-defined 16QAM EVM - RMS average EVM of PDSCH 16QAM allocations, calculated based on the standard
- 3GPP-defined 64QAM EVM - RMS average EVM of PDSCH 64QAM allocations, calculated based on the standard
- 3GPP-defined 256QAM EVM (%rms) - RMS average EVM of PDSCH 256QAM allocations, calculated according to the standard
- 3GPP-defined 1024QAM EVM (%rms) - RMS average EVM of PDSCH 1024QAM allocations, calculated based on the standard
- RS EVM - RMS Error Vector Magnitude of the reference signal
- RS Tx. Power (Avg) - Average (dBm) reference signal power, can be used to calculate RSTP as defined in Section F.3.3 of 3GPP TS 36.141

- OFDM Sym. Tx. Power - Average power (dBm) for OFDM data subcarriers, can be used to calculate OSTP as defined in Section F.3.3 of 3GPP TS 36.141
- RS Rx. Power (Avg) - Average Cell-specific Reference Signal "Received" Power (dBm), can be used to calculate RSRP as defined in Section 5.1.1 of 3GPP TS 36.214 (Downlink only)
- RSSI - Received Signal Strength Indicator
- RS Rx. Quality - Cell-specific RS Receive Quality, can be used to calculate RSRQ as defined in Section 5.1.3 of 3GPP TS 36.214 (Downlink only)
- Freq Err - Average carrier frequency error
- SyncCorr - Correlation between the measured P-SS signal and the reference P-SS signal
- Sync Type -
- Common Tracking Error - RMS average of the correction applied to each symbol by EVM Minimization
- SymClk Err - Frequency error of the measured signal's symbol clock
- Time Offset - The distance from the start of the Search Time trace to the beginning of the Measurement Interval (not averaged)
- IQ Gain Imbalance - I vs Q amplifier gain imbalance (ratio of I-gain to Q-gain)
- IQ Offset - Magnitude of carrier feedthrough
- IQ Quad. Error - Amount of angle skew between I and Q
- IQ Timing Skew - Time difference between the I and Q parts of the signal
- CP Length Mode - Current CP Length: normal or extended (useful when CP Length is set to Auto in demod properties)
- RS-OS/PRS (Downlink only) - The current setting of the RS-PRS measurement parameter
- Cell ID - The physical-layer Cell ID of the signal
- Cell ID Group/Sector - The signal's Cell ID group and Cell ID sector, determined by physical-layer Cell ID
- Channel Power - average power of the component carrier
- In-band Emissions Result - Result of limit test on the In-band Emissions trace (Uplink only)
- In-band Emissions Worst Margin (Uplink only)

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

- In-band Emissions Worst Slot (Uplink only)
- In-band Emissions Worst RB (Uplink only)
- Spectral Flatness Result - Result of limit test on the Per Slot Eq Chan Freq Resp trace (Uplink only)
- Spectral Flatness Worst Margin (Uplink only)
- Spectral Flatness Worst Slot (Uplink only)
- Spectral Flatness Worst Subcarrier (Uplink only)

Result name	Displayed Unit	Remote Name	Remote Unit
EVM	%rms*	EVM	%rms
EVM Symbol Timing Adjust	none	EVMSymTimeAdj	none
EVM Pk	%	EVMPeak	%
Peak EVM location symbol number	sym	EVMPeakIdx	sym
Peak EVM subcarrier number	subcar	EVMPeakSubcarIdx	subcar
Data EVM	%rms*	DataEVM	%rms
3GPP-defined QPSK EVM	%rms*	3GPPEVMQPSK	%rms
3GPP-defined 16QAM EVM	%rms*	3GPPEVM16QAM	%rms
3GPP-defined 64QAM EVM	%rms*	3GPPEVM64QAM	%rms
3GPP-defined 256QAM EVM	%rms*	3GPPEVM256QAM	%rms
3GPP-defined 1024QAM EVM	%rms*	3GPPEVM1024QAM	%rms
RS EVM	%rms*	RSEVM	%rms
RS Tx. Power (avg)	dBm/subcar	RSTP	dBm
OFDM Sym. Tx. Power	dBm	OSTP	dBm
Reference Signal Rx Power (Avg)	dBm	RSRP	dBm
Received Signal	dBm	RSSI	dBm

Result name	Displayed Unit	Remote Name	Remote Unit
Strength Indicator			
Reference Signal Rx Quality	dB	RSRQ	dB
Frequency Error	Hz	FreqErr	Hz
Sync Corr	%	SyncCorr	%
Sync Type	None	SyncType	none
Common Tracking Error	%rms	CTE	%rms
Symbol Clock Err	ppm	SymClkErr	ppm
Time Offset	s	TimeOffset	sec
IQ Offset	dB	IQOffset	dB
IQ Gain Imbalance	dB	IQGainImb	dB
IQ Quadrature Error	deg	IQQuadErr	deg
IQ Timing Skew	s	IQTimingSkew	sec
CP Length Mode	None	CpLengthMode	None
Cell ID	None	CellId	None
Cell ID Group/Sector	None	CellIdGroupSector	None
RS PRS	None	RSPRS	None
Channel Power	dBm	ChannelPower	dBm
RU/Preamble Index	None	RUPreambleIndex	None
In-band Emissions Result	None	InbandEmissionsResult	None
In-band Emissions worst Margin	dB	InbandEmissionsMargin	dB
In-band Emissions worst Slot	None	InbandEmissionsMarginLocationSlot	None
In-band Emissions worst RB	None	InbandEmissionsMarginLocationWorstRB	None
Spectral Flatness Result	None	SpectralFlatnessResult	None
Spectral Flatness	dB	SpectralFlatnessMargin	dB

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Result name	Displayed Unit	Remote Name	Remote Unit
worst Margin			
Spectral Flatness worst Slot	None	SpectralFlatnessMarginLocationSlot	None
Spectral Flatness worst Subcarrier	None	SpectralFlatnessMarginLocationSC	None

\* displayed in dB when Report EVM in dB parameter is On

3GPP-defined 256QAM EVM or 1024QAM EVM is available only when higher order modulation is enabled with the required license in LTE-Advanced applications.

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Error Summary1"`

### Error Summary for NB-IoT

For LTE-V2X mode, see ["Error Summary for LTE V2X" on page 1315](#).

For LTE-A FDD mode or LTE-A TDD mode, see ["Error Summary for LTE-A FDD/TDD" on page 1309](#).

The Error Summary table shows some metrics calculated from signal demod. The metrics are subject to averaging, unless indicated otherwise.

The SCPI command `":DISPlay:EVM:TRACe[1]|2|3|4|5|6:FEED <string>"` can be used to configure the trace data.

The error summary values can be obtained using the `CALC:EVM:DATA<n>:TABL` commands.

The following metrics are shown in Error Summary Table:

Result name	Displayed Unit	Remote Name	Direction
EVM	%rms*	EVM	UL&DL
EVM Pk	%	EVMPeak	UL&DL
Peak EVM location symbol number	sym	EVMPeakIdx	UL&DL
Peak EVM subcarrier number	subcar	EVMPeakSubcarIdx	UL&DL
Data EVM	%rms*	DataEVM	UL&DL
RS EVM	%rms*	RSEVM	UL&DL
Channel Power	dBm	ChannelPower	UL&DL
RS Tx. Power	dBm/subcar	RSTP	DL

Result name	Displayed Unit	Remote Name	Direction
(avg)			
OFDM Sym. Tx. Power	dBm	OSTP	DL
Reference Signal Rx Power (Avg)	dBm	RSRP	DL
Received Signal Strength Indicator	dBm	RSSI	DL
Reference Signal Rx Quality	dB	RSRQ	DL
Frequency Error	Hz	FreqErr	UL&DL
Sync Corr	%	SyncCorr	UL&DL
Common Tracking Error	%rms	CTE	UL&DL
Symbol Clock Err	ppm	SymClkErr	UL&DL
Time Offset	s	TimeOffset	UL&DL
IQ Offset	dB	IQOffset	UL&DL
IQ Gain Imbalance	dB	IQGainImb	UL&DL
IQ Quadrature Error	deg	IQQuadErr	UL&DL
IQ Timing Skew	s	IQTimingSkew	UL&DL
Cell ID	None	CellId	DL
Cell ID Group/Sector	None	CellIdGroupSector	DL
RU/Preamble Index	None	RUPreambleIndex	UL
RU Tones (N <sub>RU_sc</sub> )	None	NumRUTones	UL
Subcarrier Spacing ( $\Delta f$ )	kHz	SubcarrierSpacingMode	UL
NPUSCH Format	None	NPUSCHFormat	UL
Subcarrier Ind. Filed (Isc)	None	SubcarrierIndField	UL
Base Seq. Index (u)	None	BaseSeqIndex	UL
NPUSCH T1 Mod. Type	None	NPUSCHT1ModType	UL
In-band Emissions Result	None	InbandEmissionsResult	UL

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Result name	Displayed Unit	Remote Name	Direction
In-band Emissions worst Margin	dB	InbandEmissionsMargin	UL
In-band Emissions worst Slot	None	InbandEmissionsMarginLocationSlot	UL
In-band Emissions worst Subcarrier	None	InbandEmissionsMarginLocationWorstSC	UL
In-band Emissions General Power**	dB	IBEGeneralPower	UL
In-band Emissions General Power Subcarrier**	None	IBEGeneralPowerSC	UL
In-band Emissions IQ Image Power**	dB	IBEIQImagePower	UL
In-band Emissions IQ Image Power Subcarrier**	None	IBEIQImagePowerSC	UL
In-band Emissions Carrier Leakage Power**	dB	IBECarrierLeakagePower	UL
In-band Emissions Carrier Leakage Power Subcarrier**	None	IBECarrierLeakagePowerSC	UL

\*Displayed in dB when Report EVM in dB parameter is On

\*\*These results are protected by the UnsupportedFeature.

### Error Summary for LTE V2X

For NB-IoT mode, see ["Error Summary for NB-IoT" on page 1313](#).

For LTE-A FDD mode or LTE-A TDD mode, see ["Error Summary for LTE-A FDD/TDD" on page 1309](#).

The Error Summary table shows some metrics calculated from signal demod. The metrics are subject to averaging, unless indicated otherwise.

The SCPI command “:DISPlay:EVM:TRACe[1]|2|3|4|5|6:FEED <string>” can be used to configure the trace data.

The error summary values can be obtained using the CALC:EVM:DATA<n>:TABL commands.

The following metrics are shown in Error Summary Table when direction is uplink and the selected component carrier sets the Sidelink mode to V2X.

Result name	Displayed Unit	Remote Name
EVM	%rms*	EVM
EVM Symbol Timing Adjust	none	EVMSymTimeAdj
EVM Pk	%	EVMPeak
Peak EVM location symbol number	sym	EVMPeakIdx
Peak EVM subcarrier number	subcar	EVMPeakSubcarIdx
Data EVM	%rms*	DataEVM
3GPP-defined QPSK EVM	%rms*	3GPPEVMQPSK
3GPP-defined 16QAM EVM	%rms*	3GPPEVM16QAM
3GPP-defined 64QAM EVM	%rms*	3GPPEVM64QAM
RS EVM	%rms*	RSEVM
Frequency Error	Hz	FreqErr
Sync Corr	%	SyncCorr
Sync Type	None	SyncType
Common Tracking Error	%rms	CTE
Symbol Clock Err	ppm	SymClkErr
Time Offset	s	TimeOffset
IQ Offset	dB	IQOffset
IQ Gain Imbalance	dB	IQGainImb
IQ Quadrature Error	deg	IQQuadErr
IQ Timing Skew	s	IQTimingSkew
Channel Power	dBm	ChannelPower
In-band Emissions Result	None	InbandEmissionsResult
In-band Emissions worst Margin	dB	InbandEmissionsMargin
In-band Emissions worst Slot	None	InbandEmissionsMarginLocationSlot
In-band Emissions worst RB	None	InbandEmissionsMarginLocationWorstRB
Spectral Flatness Result	None	SpectralFlatnessResult
Spectral Flatness worst Margin	dB	SpectralFlatnessMargin

Result name	Displayed Unit	Remote Name
Spectral Flatness worst Slot	None	SpectralFlatnessMarginLocationSlot
Spectral Flatness worst Subcarrier	None	SpectralFlatnessMarginLocationSC
Sidelink ID	None	SID

\* displayed in dB when Report EVM in dB parameter is On

The error summary values can be queried using the CALC:EVM:DATA<n>:TABL commands.

### Freq Err Per Slot

This trace displays the average frequency error for each slot. The frequency error is expressed as an offset in Hz from the current center frequency setting.

The trace shows the average frequency error per slot. The frequency error is expressed as an offset in Hz from the center frequency of the measured component carrier. The frequency error is also one which is compensated on a per-slot basis as part of the EVM minimization process.

### Frame Summary for LTE-A FDD/TDD

The Frame Summary trace shows the EVM, power, modulation format, number of resource blocks occupied, and Radio Network Temporary Identifier (RNTI) for the channels and signals that are present in the Measurement Interval.

Manual user mappings for downlink users (PDSCH), uplink users (PUSCH and PUCCH), and uplink PRACH and SRS are specified in the LTE Allocation Editor.

Downlink control channel and signal parameters are specified in the Downlink Control Channel Properties dialog.

Frame Summary shows information for only the data in the Measurement Interval.

There are currently 6 columns shown in this table.

#### 4. Channel Name

- When the link direction is downlink, the following channels are shown in the Frame Summary:

P-SS, S-SS, PBCH, PCFICH, PHICH, PDCCH,RS,P-RS,MBSFN-RS,PMCH,PDSCH1 to PDSCHn, Non-Alloc

- When the link direction is uplink, the following are the channels that are shown

in the Frame Summary:

PUSCH DM-RS, PUCCH, PUSCH1 to PUSCHn, PRACH, S-RS, Non-Alloc

#### 5. Error Vector Magnitude

EVM is the RMS value of error vector magnitudes for the channel. The Report EVM in dB parameter affects the units of this data result. Non-alloc EVM is normalized with respect to the entire component carrier's average power per subcarrier, since dividing by the reference vector's magnitude (0 in this case) would cause the result to be undefined. EVM can be Averaged using RMS or Continuous Peak Hold averaging(MAX).

#### 6. Power

Power is the per-subcarrier power received at the reference measurement channel, averaged over all the subcarriers belonging to the physical channel. For PDSCH channels, the Power data result also shows the average power for each layer. The Report Relative Power Levels parameter affects the units of this data result. Non-alloc does not show a power value because the power value is normally zero, and even small values would result in a very large negative dB value. This data result can be Averaged using RMS or Continuous Peak Hold averaging(MAX).

#### 7. Modulation Format

Mod. Fmt. is the modulation format of channel. The modulation format for Non-alloc signals is not shown.

When a channel contains more than one modulation format, Mod. Fmt. shows "Mixed" for that channel.

#### 8. Number of RBs occupied

Num. RB shows the number of resource blocks (1 RB x 1 slot) within the Measurement Interval that contain subcarriers belonging to the channel. Num. RB is not shown for Non-alloc signals. When Averaging is enabled, Num. RB shows the total number of resource blocks included in the average for each channel.

#### 9. RNTI

RNTI shows the Radio Network Temporary Identifier that a PDSCH transmission is intended for. The RNTI is used to scramble the CRC of PDCCH transmissions so that a UE only needs to decode PDCCH transmissions which have a CRC that can be unscrambled using the RNTIs assigned to the UE. The RNTI column is only shown when RB Auto Detect Mode is set to Decoded DCI. Non-Alloc signals consist of unused subcarriers in all shared and control channels. This includes unallocated user data subcarriers, the DC subcarrier, certain RS subcarriers in multi-antenna mode, and unused P-SS and S-SS subcarriers.

Non-Alloc signals include the following:

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

- Unallocated user data subcarriers
- The unused DC subcarrier
- Unused P-SS and S-SS subcarriers: these signals are 6 RBs (72 subcarriers) wide in the frequency domain, but only the center 62 subcarriers are actually used, and the remaining 10 are set to zero.
- Subcarriers reserved for RS in a multiple antenna port signal. For example, in a four Tx Antenna signal, the transmission from antenna port 0 does not transmit anything on the subcarriers that are used for RS in the other three antenna port transmissions.

Manually defined and autodetected user allocations are always considered allocated whether or not they are enabled for display in Composite Include and are not included in Non-Alloc.

Non-alloc means only unallocated shared channel subcarriers (those that could be allocated for users but are not). The rest of the traces consider Non-alloc to be any unused subcarrier (whether in control or shared channels).

Any resource elements (subcarriers) contained by a user channel that is present in the Composite Include list are considered allocated, regardless of whether or not the user channel has been selected for analysis and display.

Non-Alloc signal's EVMs are normalized with respect to the signal's average power per subcarrier, since dividing by the reference vector's magnitude (0 in this case) causes the result to be undefined.

When the link direction is downlink:

Result name	Displayed Unit	Remote Name	Remote Unit
PSS EVM	%rms	PSSEVM	%rms
PSS Power	dB	PSSPower	dB
PSS Mod Format	none	PSSModFmt	none
PSS Num Rb	none	PSSNumRb	none
SSS EVM	%rms	SSSEVM	%rms
SSS Power	dB	SSSPower	dB
SSS Mod Format	none	SSSModFmt	none
SSS Num Rb	none	SSSNumRb	none
PBCH EVM	%rms	PBCH EVM	%rms
PBCH Power	dB	PBCHPower	dB
PBCH Mod Format	none	PBCHModFmt	none
PBCH Num Rb	none	PBCHNumRb	none
PCFICH EVM	%rms	PCFICHEVM	%rms

Result name	Displayed Unit	Remote Name	Remote Unit
PCFICH Power	dB	PCFICHPower	dB
PCFICH Mod Format	none	PCFICHModFmt	none
PCFICH Num Rb	none	PCFICHNumRb	none
PHICH EVM	%rms	PHICHEVM	%rms
PHICH Power	dB	PHICHPower	dB
PHICH Mod Format	none	PHICHModFmt	none
PHICH Num Rb	none	PHICHNumRb	none
PDCCH EVM	%rms	PDCCHEVM	%rms
PDCCH Power	dB	PDCCHPower	dB
PDCCH Mod Format	none	PDCCHModFmt	none
PDCCH Num Rb	none	PDCCHNumRb	none
RS EVM	%rms	RSEVM	%rms
RS Power	dB	RSPower	dB
RS Mod Format	none	RModFmt	none
RS Num Rb	none	RSNumRb	none
P-RS EVM	%rms	PRSEVM	%rms
P-RS Power	dB	PRSPower	dB
P-RS Mod Format	none	PRModFmt	none
P-RS Num Rb	none	PRNumRb	none
MBSFN-RS EVM	%rms	MBSFNREVM	%rms
MBSFN -RS Power	dB	MBSFNRSPower	dB
MBSFN -RS Mod Format	none	MBSFNRSModFmt	none
MBSFN -RS Num Rb	none	MBSFNRSNumRb	none
PMCH EVM	%rms	PMCHEVM	%rms
PMCH Power	dB	PMCHPower	dB
PMCH Mod Format	none	PMCHModFmt	none
PMCH Num Rb	none	PMCHNumRb	none
PDSCHn EVM	%rms	PDSCHnEVM	%rms
PDSCHn Power	dB	PDSCHnPower	dB
PDSCHn Mod Format	none	PDSCHnModFmt	none
PDSCHn Num Rb	none	PDSCHnNumRb	none
Inactive EVM	%rms	InactiveEVM	%rms
Inactive Power	dB	InactivePower	dB
Inactive Mod Format	none	InactiveModFmt	none
Inactive Num Rb	none	InactiveNumRb	none

When the link direction is uplink,

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Result name	Displayed Unit	Remote Name	Remote Unit
DMRS EVM	%rms	DMRSEVM	%rms
DMRS Power	dB	DMRSPower	dB
DMRS Mod Format	none	DMRSModFmt	none
DMRS Num Rb	none	DMRSNumRb	none
PUCCH EVM	%rms	PUCCH EVM	%rms
PUCCH Power	dB	PUCCH Power	dB
PUCCH Mod Format	none	PUCCH ModFmt	none
PUCCH Num Rb	none	PUCCH NumRb	none
PUSCHn EVM	%rms	PUSCHn EVM	%rms
PUSCHn Power	dB	PUSCHn Power	dB
PUSCHn Mod Format	none	PUSCHn ModFmt	none
PUSCHn Num Rb	none	PUSCHn NumRb	none
PRACH EVM	%rms	PRACHEVM	%rms
PRACH Power	dB	PRACHPower	dB
PRACH Mod Format	none	PRACHModFmt	none
PRACH Num Rb	none	PRACHNumRb	none
SRS EVM	%rms	SRSEVM	%rms
SRS Power	dB	SRSPower	dB
SRS Mod Format	none	SRSModFmt	none
SRS Num Rb	none	SRSNumRb	none
Inactive EVM	%rms	InactiveEVM	%rms
Inactive Power	dB	InactivePower	dB
Inactive Mod Format	none	InactiveModFmt	none
Inactive Num Rb	none	InactiveNumRb	none

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Frame Summary1"`

### Frame Summary for NB-IoT

This table shows certain characteristics of each of the logical channels. The list of channels shown is different for Downlink and Uplink. Each of the channels shown have the same color coding as used in the IQ demod traces.

The following are the characteristics that are shown in the Frame Summary Table:

- Channel Name
- Error Vector Magnitude

- Relative Power Level
- Modulation Format
- Number of Slots occupied

When the link direction is downlink, the following channels are shown in the Frame Summary:

- NPSS
- NSSS
- NPBCH
- NPDCCH
- NRS
- NPDSCH
- NPRS
- Non-Alloc (remote name :inactive)

When the link direction is uplink, the following are the channels that are shown in the Frame Summary:

- NPUSCH DM-RS (remote name:DMRS)
- NPUSCH
- NPRACH
- Non-Alloc(remote name :inactive)

Each channel has the following characteristics, the “xxx” in the Remote Name represents the corresponding channel.

Result name	Displayed Unit	Remote Name	Remote Unit
EVM	%rms	xxxEVM	%rms
Power	dB	xxxPower	dB
Mod Format	none	xxxModFmt	none
Num Slots	none	xxxNumRb	none

These values are never averaged; they always show the results of the current measurement. These results are valid only for the current measurement interval.

Non-Alloc signals consist of unused subcarriers in all shared and control channels. This includes unallocated user data subcarriers, the DC subcarrier, certain RS subcarriers in multi-antenna mode, and unused NPSS and NSSS subcarriers.

Non-Alloc signals include the following:

- Unallocated user data subcarriers
- The unused DC subcarrier
- Unused NPSS and NSSS subcarriers
- Subcarriers reserved for RS in a multiple antenna port signal. For example, in a two Tx Antenna signal, the transmission from antenna port 0 does not transmit anything on the subcarriers that are used for RS in the other antenna port transmissions.

### **Frame Summary for LTE V2X**

This table shows certain characteristics of each of the logical channels. Each of the channels shown have the same color coding as used in the IQ demod traces.

The following are the characteristics that are shown in the Frame Summary Table:

- Channel Name
- Error Vector Magnitude
- Relative Power Level
- Modulation Format
- Number of RBs occupied

The following channels are shown in the Frame Summary:

- PSSS
- SSSS
- PSBCH
- PSBCH DM-RS
- PSCCH
- PSCCH DM-RS
- PSSCH

- PSSCH DM-RS
- PSDCH
- PSDCH DM-RS
- Non-Alloc (remote name :inactive)

Each channel has the following characteristics, the “xxx” in the Remote Name represents the corresponding channel.

Result name	Displayed Unit	Remote Name	Remote Unit
EVM	%rms	xxxEVM	%rms
Power	dB	xxxPower	dB
Mod Format	None	xxxModFmt	none
Num. RB	None	xxxNumRb	none

These values are never averaged; they always show the results of the current measurement. These results are valid only for the current measurement interval.

Non-Alloc signals consist of unused subcarriers in all shared and control channels. This includes unallocated user data subcarriers, the DC subcarrier, and unused PSSS and SSSS subcarriers, Guard subcarriers.

Non-Alloc signals include the following:

- Unallocated user data subcarriers
- The unused DC subcarrier
- Unused PSSS and SSSS subcarriers
- Subcarriers reserved for Guard period.

### Cross-Carrier Summary

This table shows summary information about the Time Alignment Error (TAE) and Channel Power for each component carrier (CCx) relative to the selected Reference Component Carrier (Reference CC).

The TAE for the CCx is calculated by subtracting the Time Offset of the reference CC from the Time Offset of the CCx.

The relative Channel Power for the CCx is calculated by subtracting the Channel Power of the reference CC from the Channel Power of the CCx.

The trace shows the measurement results for Cross Carrier In band Emission when Direction is uplink and non-allocated component carrier are present.

---

Example `:DISP:EVM:TRAC1:FEED "Cross-CC Summary1"`

For Downlink and Uplink

## Symbols

Symbol Table shows the numerical values of demodulated data (the data in the Measurement Interval) for the selected layer and can be shown as hexadecimal or binary digits.

This window has the following characteristics:

1. The digits are color coded to match the channel/signal colors in Frame Summary.
2. The symbol locations for channel/signals that are not selected in the Composite Include list on the Profile tab or in User Summary of Edit NB-IoT Channels are blanked on the Symbol Table. If the subcarriers are not allocated in one RB, the symbol locations of these subcarriers are blanked.
3. Signals that do not have numerical values assigned to symbol points are shown as zeros.
4. Non-alloc subcarriers, when included in analysis, are shown as zeros.
5. Each group of digits corresponding to a subcarrier is shown with the most significant bit first. The most significant bit is interpreted as  $b(i+n)$  where  $n$  is the highest value depending on the modulation type. For instance,  $b(i+5)$  is interpreted as the most significant bit for 64QAM modulation.

The modulation bit-mapping tables, which define  $b(i)$ , are located in 3GPP TS 36.211 Section 7.

See Downlink Control Channel Properties for information on PHICH symbol table mapping.

To view decoded channel information bits, use the CW 0/1 Decoded Symbol Table for downlink or the Decoded Symbol Table for uplink. A scrollbar appears when the contents are too long to be displayed in the window.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Symbol Table1"`

For Uplink

`:DISP:EVM:TRAC1:FEED "Layer CC0 Symbol Table1"`

For Downlink

## Symbols for NB-IoT

This table shows the numerical values of the demodulated symbols over the measurement interval. It displays one value per sample/subcarrier for uplink. And it displays one value per subcarrier for downlink.

This trace has the following characteristics:

- The digits are color coded to match the channel/signal colors in Frame Summary (NB-IoT).
- The symbol locations for channel/signals are blanked on the symbol table if the corresponding channels are not selected in User Summary of Edit NB-IoT Channels.

If the subcarriers are not allocated in one RB, the symbol locations of these subcarriers are blanked.

- Each group of digits corresponding to a symbol is shown with the most significant bit first.

The modulation bit-mapping tables, which define  $b(i)$ , are located in 3GPP TS 36.211 Section 7.

A scrollbar appears when the contents are too long to be displayed in the window.

See "[Table: SCPI Commands for trace configuration](#)" on page 1293 for more information.

## Decoded Symbol Table

When Direction is Downlink, this table shows the decoded values of the physical layer channels: PBCH, PDCCH, PCFICH, and PDCCH. The level of decoding is determined by each channel decoding selection (See "[PBCH Bits](#)" on page 1738 for details.)

When Direction is Uplink, this table shows descrambled PUSCH data when PUSCH Decoding is set to Descrambled. The default bit order for this trace is MSB-first.

---

Example      `:DISP:EVM:TRAC1:FEED "Demod CC0 Decoded Symbol Table1"`  
For Uplink      `:DISP:EVM:TRAC1:FEED "Demod CC0 CW0 Decoded Symbol Table1"`  
For Downlink

## Decoded Symbol Table for NB-IoT

The trace is for NB-IoT which is different from LTE.

When Direction is Downlink, this table shows decoded bits carried on downlink channel when the corresponding channel Bits parameter is set to values other than None. What level of decoding data is shown in Decoded Symbol Table sees the description of the corresponding channel Bits parameter. The default bit order for this trace is MSB-first.

When Direction is Uplink, this table shows decoded data carried on NPUSCH channel when NPUSCH Bits parameter is set to values other than None. What level of decoding data is shown in Decoded Symbol Table sees the description of NPUSCH Bits parameter. The default bit order for this trace is MSB-first.

A scrollbar appears when the contents are too long to be displayed in the window.

See "[Table: SCPI Commands for trace configuration](#)" on page 1293 for more information.

### Decoded Symbol Table for LTE V2X

The trace is for V2X which is different from LTE.

When Direction is Uplink and the component carrier is V2X , this table shows decoded bits carried on sidelink channels when the corresponding channel Bits parameter is set to values other than None. What level of decoding data is shown in Decoded Symbol Table sees the description of the corresponding channel Bits parameter. The default bit order for this trace is MSB-first.

A scrollbar appears when the contents are too long to be displayed in the window.

See "[Table: SCPI Commands for trace configuration](#)" on page 1293 for more information.

### Downlink Decode Info

DL Decode Info contains the decoded information from PBCH, PDCCH, PCFICH and PDSCH.

The upper section shows the status of the PBCH, PDCCH, PCFICH, and PDSCH decoders (On or Off).

The lower part of the table shows the decoded information for each frame. The data is color coded to match the color of the corresponding channel in the Frame Summary trace.

PHICH information

The decoded PHICH Hybrid-ARQ (HARQ) values are listed by PHICH Group for each subframe.

The values of the PHICHs in each PHICH group are listed in increasing order of PHICH Sequence index, starting with sequence 0 in the leftmost position and ending with NPHICHSF - 1.

The values of the PHICHs are one of the following:

- A - ACK
- N - NACK
- Off (inactive PHICH sequence index)

#### PBCH information

PBCH decoded information is available when PHICH Duration or Allocation(Ng) are set to Auto in the Downlink Control Channel Properties: Basic tab or when PBCH Bits is set to a value other than None.

A "CRC Invalid" message is shown when PBCH CRC fails. Otherwise the decoded PBCH contents are shown.

The following is a list of all the information contained in the PBCH section of the DL Decode Info trace.

- FrameNum - system frame number for each frame in the Measurement Interval.
- Transmission Bandwidth - one of 1.4MHz(6RB), 3MHz(15RB), 5MHz(25RB), 10MHz(50RB), 15MHz(75RB), 20MHz(100RB).
- NumTxAnt - number of C-RS antenna ports
- PHICH - PHICH resource Allocation size (Ng) and Duration. These values always come from the decoded PBCH bits and are unaffected by the PHICH Duration or Allocation(Ng) parameters in the Downlink Control Channel Properties: Basic tab.

#### PCFICH information

Decoded PCFICH information is available when the Auto check box is selected in the PDCCH Allocations section of the Downlink Control Channel Properties: Basic tab or when PCFICH Bits is set to a value other than None.

# PDCCH SymPerSubframe shows a comma separated list of values, one for each subframe, that indicate the number of symbols at the beginning of a subframe which are allocated to PDCCH.

#### PDCCH information

PDCCH information is available when RB Auto Detect Mode is set to Decode PDCCH or when PDCCH Bits is set to a value other than None.

The demodulator uses the number of bits in a DCI payload to determine the DCI format. DCI formats 1b and 1d have the same number of bits and DCI format 1 can

### 3 LTE & LTE-A TDD Mode

#### 3.8 Modulation Analysis Measurement

have the same number of bits as 1b and 1d. To work around these cases, the demodulator provides the DCI Formats 1, 1B, 1D Detection Include parameter.

DCI Formats 3 and 3A have the same payload length as DCI Formats 0, 1A, 1B. To work around this ambiguity, see the TPC RNTI Range parameter.

The following is a list of all the information contained in the PDCCH section of the DL Decode Info trace.

- RNTI - Radio Network Temporary Identifier. Identifies the intended recipient(s) of a DCI (downlink control information) transmission.
- PBoost (dB) - Autodetected Power Boost value for PDCCH. PBoost (dB) is reported in dB relative to the 0 dB level defined by C-RS Power Boost. See the Downlink Control Channel Properties: Basic tab topic for more information about how the 0 dB level is defined.
- The value reported for PBoost (dB) can be used to verify that the PDCCH Power Boost (dB) +/- Increments (dB) parameter has been set correctly.
- CCEOffset - Control Channel Element Offset Start Index for decoded PDCCH
- L - Aggregation level, which is one of \{1, 2, 4, 8\}.
- A - DCI payload bit length (message+CRC)
- DCIFmt - DCI format, which is one of \{0, 1, 1A, 1B, 1C, 1D, 2, 2A, 3, 3A\}
- RBAssign - Resource block assignment contained in a DCI message
- Nprb - Number of physical resource blocks assigned to PDSCH/PUSCH allocation
- Hop - Indicates whether Frequency Hopping is On or Off when using DCI Format 0 to schedule a PUSCH transmission.
- Type - PDSCH Resource Allocation Type
- Imcs(n) - Modulation and coding for transport block n
- NDI(n) - New Data Indicator for transport block n
- RV(n) - Redundancy Version for transport block n
- TBS(n) - Transport Block Size for transport block n
- CRC(n) - Cyclic Redundancy Check result (Pass/Fail) for PDSCH transport block n, whose allocation is indicated by the PDCCH.
- CRC Pass/Fail metric is only reported when RB Auto Detect Mode is set to Decode PDCCH and PDSCH Bits is set to a value other than None.

- EPRE - average Energy Per Resource Element, per transmit antenna.
- P\_A(n) - PDSCH UE-specific relative power level (P\_A) for transport block n.
- TBSwap - Transport Block to Codeword Swap flag (present in DCI formats 2 and 2A)
- CShift - UL PUSCH Cyclic Shift value (present in DCI format 0)
- TPC - Transmit Power Control value
- For DCI formats other than 3 and 3A, the TPC value is shown as a 2-bit decimal value (0-3).
- HARQ - Hybrid Automatic Repeat Request value (present in DCI formats 1, 1A, 1B, 1C, 1D, 2, and 2A)
- DAI - Downlink Assignment Index (present in TDD signals only and in DCI formats 0, 1, 1A, 1B, 1D, 2, 2A)
- TPMI - Transmitted Precoding Matrix Indicator (present in DCI formats 1B, 1D, 2, 2A)
- PMI - confirmation of Precoding Matrix Indicator for precoding (present in DCI format 1B)
- PwrOffset - Downlink Power Offset (present in DCI format 1D)
- CQIReq - Uplink Channel Quality Indicator request (present in DCI format 0)
- ScID - Scrambling Identity (present in DCI format 2B). See Section 5.3.3.1.5B of TS 36.212.
- See the nSCID parameter in the LTE Allocation Editor.

#### PDSCH information

PDSCH information is available when RB Auto Detect Mode is set to Power-Based and when PDSCH Bits is set to a value other than None.

The following is a list of all the information contained in the PDSCH section of the DL Decode Info trace.

- RNTI - Radio Network Temporarily Identifier
- TBS(n) - Transport Block Size for transport block n
- CRC(n) - Cyclic Redundancy Check result (Pass/Fail) for PDSCH transport block n

---

Example           :DISP:EVM:TRAC1:FEED "Demod CC0 DL Decode Info1"  
For Downlink

## Downlink Decode Info for NB-IoT

DL Decode Info contains the decoded information from NPBCH, NPDSCH.

The upper section shows the status of the NPBCH, NPDSCH decoders (On or Off).

The lower part of the table shows the decoded information for each frame. The data is color coded to match the color of the corresponding channel in the Frame Summary trace.

A scrollbar appears when the contents are too long to be displayed in the window.

See "[Table: SCPI Commands for trace configuration](#)" on page 1293 for more information.

## PBCH information

A "CRC Cyclic Redundancy Check Invalid" message is shown when NPBCH CRC fails. Otherwise the decoded NPBCH contents are shown.

The following is a list of all the information contained in the NPBCH section of the DL Decode Info trace.

- FrameNum - system frame number for each frame in the Measurement Interval
- NumTxAnt - number of NRS Cell-specific RS antenna ports
- HyperSFN - the 2 least significant bits of hyper system frame number
- NumRepsOfNPDSCH - number of repetitions for NPDSCH carrying SIB1-NB message.
- SysInfoValueTag - a value tag for comparison with the stored one to indicate if a change has occurred in the SI messages.
- abEnabled - displays whether access barring is enabled
- OpMode - mode of operation information
- RasterOffset - NB-IoT offset from LTE channel raster for in-band and guard-band modes
- eutraCRSSeqInfo - E-UTRA CRS sequence info which is used to index to E-UTRA PRB index for NB-IoT carrier in in-band mode with same PCI
- eutraNumCRSPorts - number of E-UTRA CRS antenna ports for in-band mode with different PCI

## NPDCCH information

NPDCCH information is available when PDCCH Bits is set to a value other than None.

The following is a list of all the information contained in the NPDCCH section of the DL Decode Info trace.

- RNTI - Radio Network Temporary Identifier. Identifies the intended recipient(s) of a DCI (downlink control information) transmission.
- PBoost (dB) - Autodetected Power Boost value for NPDCCH. PBoost (dB) is reported in dB relative to the 0 dB level defined by C-RS Power Boost.
- CCEOffst - Control Channel Element Offset Start Index for decoded NPDCCH
- L - Aggregation level, which is one of  $\{1, 2\}$ .
- A - DCI payload bit length (message+CRC)
- Idci - Index of DCI in one subframe (0,1)
- DCI - DCI format, which is one of  $\{N0, N1, N2\}$

The following information elements are shown based on the detected DCI format:

DCI Format N0:

- Isc - Subcarriers Indication field for NPUSCH
- RAssign - Resource assignment ( $I_{RU}$ ) to indicate number of RUs
- Idelay - Index for Schedule Delay
- Imcs - Modulation and coding scheme for transport block
- RV - Redundancy Version for transport block
- Nrep - Number of repetitions for NPUSCH
- NDI - New Data Indicator. When it is set as 1, the corresponding transmission data is new, otherwise it is re-transmitted.
- NSFrep - DCI subframe repetition number
- Nharq - HARQ Process number. The field can only be present when two HARQ Processes state is on

DCI Format N1:

### 3 LTE & LTE-A TDD Mode

#### 3.8 Modulation Analysis Measurement

- $l_{order}$  – NPDCCH order indicator. When it indicates Random Access Procedure, it is set to 1.
- $INFO_{mcch}$  – Information for SC-MCCH change notification
- When NPDCCH order indicator is set as 1, the following information elements are shown for N1 DCI format:
  - $Preamble_{Fmt}$  – Preamble format indicator
  - $N_{start}$  – Starting number of NPRACH repetitions
  - $I_{sc}$  – Subcarrier Indication field for NPRACH
  - $I_{carrier}$  – Carrier indication of NPRACH
  - $RSVD$  – Reserved field
- Otherwise the following information elements are shown for N1 DCI format:
  - $I_{delay}$  – Index for Schedule Delay
  - $R_{Assign}$  – Resource assignment ( $I_{SF}$ ) to indicate number of subframes
  - $I_{mcs}$  – Modulation and coding scheme for transport block
  - $N_{rep}$  – Number of repetitions for NPDSCH
  - $NDI$  – New Data Indicator. When it is set as 1, the corresponding transmission data is new, otherwise it is re-transmitted.
  - $HARQ_{ack}$  – HARQ – ACK resource field
  - $NSF_{rep}$  – DCI subframe repetition number
  - $N_{harq}$  – HARQ Process number. The field exists when two HARQ Processes state is on

#### DCI Format N2:

- $Flag$  – Flag for paging / direct indication differentiation, with value 0 for direct indication and value 1 for paging
- $INFO_{mcch}$  – Information for SC-MCCH change notification
- When flag indicates direction, the following information elements are shown for N2 DCI format:
  - $Direct$  – Information for Direct indication

- RSVD – Reserved field
- When flag indicates paging, the following information elements are shown for DCI format N2.
- RAssign - - Resource assignment ( $I_{SF}$ ) to indicate number of subframes
- Imcs - Modulation and coding scheme for transport block
- Nrep – Number of repetitions for NPDSCH
- NSFrep – DCI subframe repetition number

### NPDSCH information

NPDSCH information is available when NPDSCH Bits is set to a value other than None and NPDSCH is decoded successfully.

The following is a list of all the information contained in the NPDSCH section of the DL Decode Info trace.

- TBS(n) - Transport Block Size for transport block n
- CRC(n) - Cyclic Redundancy Check result (Pass/Fail) for PDSCH transport block n

---

Example           :DISP:EVM:TRAC1:FEED "Demod CC0 DL Decode Info1"  
For Downlink

### Uplink Decode Info

UL Decode Info contains the decoded information from PUCCH and PUSCH.

The upper section shows the status of the PUCCH and PUSCH decoders (On or Off).

The lower part of the table shows the decoded information for each frame.

The data is color coded to match the color of the corresponding channel in the Frame Summary trace. For example, any text that is colored yellow represents information from PUCCH.

Uplink Decoded Information

The decoded information for each frame is denoted by the text Frame Num 0xNNN where NNN is the frame number in hexadecimal format.

Common Information

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

The following fields in the UL Decode Info table are common to both PUCCH and PUSCH.

- Sfn - the value n indicates the subframe number for the decoded channel information
- RNTI - Radio Network Temporary Identifier. Identifies the UE transmitting in this allocation.
- This parameter is specified for each uplink user using the RNTI field in the LTE Allocation editor.
- Nprb - Number of physical resource blocks assigned to this allocation. This parameter is always equal to 1 for PUCCH.
- Chan - uplink channel type specified as PUSCH or PUCCH (format) where format is the PUCCH format and is one of the following: 1, 1a, 1b, 2, 2a, 2b, 3.

PUCCH Information

Size metrics indicate number of most-significant bits

PUCCH decoding results shown per subframe include:

- HARQ Size - HARQ Ack/Nack Information Size in bits
- HARQ Info - HARQ Ack/Nack Information Word value (hex representation)

Due to joint CQI / PMI and HARQ-ACK encoding in Extended CP mode, any associated HARQ-ACK Info bits are also marked as questionable when CQI / PMI Info Size is set to Auto. To avoid this, specify manually the CQI / PMI Info Size parameter.

When HARQ-ACK Info Size set to Auto, the demodulator decodes the maximum number of HARQ-ACK bits (21 bits) since it is not possible to determine the actual number of HARQ-ACK bits. This allows you to view all potential HARQ-ACK bits and validate them against the expected bits. Also, since the actual number of HARQ-ACK bits is unknown, a question mark (?) is appended to the HARQ Info field.

The following table shows the possible formats that PUCCH can be autodetected as when PUCCH autodetection is enabled:

HARQ-ACK Info Size	Normal CP	Extended CP
12	3	3
2	1b,2b	1b,2
1	1a,2a	1a,2
0	1,2	1,2

- CQI / PMI Size - Channel Quality & Precoding Matrix Indicator Information Size in bits

- CQI / PMI Info - Channel Quality & Precoding Matrix Indicator Information bits (hex representation). The CQI / PMI Info field contains space for eight 32-bit words of data for alignment purposes. The CQI / PMI bits are placed in the most-significant section of the bit field.

When CQI / PMI Info Size is set to Auto, the demodulator decodes the maximum number of CQI/PMI bits (11 bits) since it is not possible to determine the actual number of CQI/PMI bits. This allows you to view all potential CQI/PMI bits and validate them against the expected bits. Also, since the actual number of CQI/PMI bits is unknown, a question mark (?) is appended to the CQI / PMI Info field. You can manually specify the CQI / PMI Info Size parameter to validate any bits marked as questionable.

Due to joint CQI / PMI and HARQ-ACK encoding in Extended CP mode, any associated HARQ-ACK Info bits are also marked as questionable when CQI / PMI Info Size is set to Auto. To avoid this, manually specify the CQI / PMI Info Size parameter.

When CQI / PMI Info Size is manually specified and decoding the CQI / PMI bits results in a CRC failure or detected bit errors, the letter F is appended to the bits to indicate decode failure. In this case, you must confirm that the manually specified CQI / PMI Info Size matches the test signal.

- SR Size - Scheduling Request Information Size in bits \{0 = SR not present ; 1 = SR present\}
- SR Info - Scheduling Request Information Word value (hex representation)

\{0 = expected SR BPSK sym d(0) fixed encoding; 1 = unexpected SR BPSK sym d(0) fixed encoding\}

- nPUCCH(1) - Resource index for PUCCH formats 1/1a/1b (decimal representation)
- nPUCCH(2) - Resource index for PUCCH formats 2/2a/2b (decimal representation)
- nPUCCH(3) - Resource index for PUCCH format 3 (decimal representation)

Decoded PUCCH HARQ-ACK, CQI / PMI, and SR information bits are aligned in the most-significant bits within the respective Info hexadecimal value.

#### PUSCH Information

Size metrics indicate number of most-significant bits

This trace shows the following PUSCH channel decoded message content for each subframe:

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

- HARQ-ACK Size - HARQ Ack/Nack Information Size in bits
- HARQ-ACK Info - HARQ Ack/Nack Information Word value (hex representation)
- CQI / PMI Size - Channel Quality & Precoding Matrix Indicator Information Size in bits. The CQI / PMI Info field contains space for eight 32-bit words of data for alignment purposes. The CQI / PMI bits are placed in the most-significant section of the bit field.
- CQI / PMI Info - Channel Quality & Precoding Matrix Indicator Information Word value (hex representation)
- RI Size - Rank Indicator Information Size
- RI Info - Rank Indicator Information Word value (hex representation)
- Imcs(n) - Modulation and Coding for transport block n, where n = 1 only for 3GPP Rel 8

For UL PUSCH 16QAM transmissions, which are encoded with IMCS = 20, the table reports IMCS = 21 as the value resulting in a successful PUSCH decode (CRC Pass). This is because TS 36.213, Section 8.6.1, Table 8.6.1-1 defines the same transport block size (ITBS = 19) for both IMCS = 20 and 21 for 16QAM PUSCH transmissions and the software has been configured to show the highest possible IMCS when there is ambiguity.

- RV(n) - Redundancy Version for transport block n, where n = 1 only for 3GPP Rel 8
- TBS(n) - Transport Block Size for transport block n, where n = 1 only for 3GPP Rel 8. TBS(n) is expressed in decimal format.
- CRC(n) - Cyclic Redundancy Check Pass/Fail for PUSCH transport block n
- The CRC Pass/Fail data result is reported when PUSCH Bits is set to a value other than Mapped.

When PUSCH HARQ-ACK, RI, or CQI / PMI Info Size is specified manually, if decoding results in either a CRC failure or there are detected bit errors for the corresponding information bits, the demodulator appends the letter F after the decoded bits for the appropriate Info field in UL Decode Info table, indicating decode failure. In this case, confirm that the Info Size and Offset Index parameters match the expected signal content.

When the Auto checkbox is enabled for the HARQ-ACK, RI, or CQI / PMI Info Size parameters within Decode tab, the demodulator attempts to auto detect the appropriate multiplexed control region information size as far as possible.

For certain test signal configurations there may not be an adequate number of mapped control information resource elements for reliable auto detection. In this

situation, autodetected HARQ-ACK, RI, or CQI / PMI Info Size is questionable, and a question mark (?) is appended to the bits for the corresponding Info field in the UL Decode Info table, indicating that the decoded bits are questionable.

Any bits are marked as questionable should then be validated against expected test signal content. Note that you can manually specify HARQ-ACK, RI, or CQI / PMI Info Size parameters to validate any questionable size results.

Decoded PUCCH HARQ-ACK, CQI / PMI, and RI information bits are aligned in the most-significant bits within the respective Info hexadecimal value.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 UL Decode Info1"`  
For Uplink

### Uplink Decode Info for NB-IoT

UL Decode Info contains the decoded information from NPUSCH.

The upper section shows the status of the NPUSCH decoders (On or Off).

The lower part of the table shows the decoded information for each transport block.

This trace shows the following NPUSCH channel decoded message content for each transport block:

- NPUSCH Config Params - display configuration parameters of NPUSCH channel such as Nru, Nrep etc.
- NPUSCH TBn - the value n indicates the transport block number for the decoded channel information
- RNTI - Radio Network Temporary Identifier, this is parameter specified in uplink NB-IoT channel allocation.
- HARQ-ACK Info - HARQ Ack/Nack Information Word value (hex representation)

Only NPUSCH format 2 carries UL control information (UCI), which is used to an acknowledgement of a DL transmission. So HARQ-ACK Info is displayed out for NPUSCH format 2 only.

- Imcs - Modulation and Coding for transport block
- TBS - Transport Block Size for transport block . TBS is expressed in decimal format.

NPUSCH transmission is separated in j blocks which each block includes specified length of consecutive NB-IoT UL slots, where j is related to Nrep parameter. The computation of j sees the 3GPP 36.213 16.5.1.2. Because each transmission block has its own RV and CRC, they are displayed on UL Decode Info table separately based on NPUSCH transmission blocks.

- Blkj - the value j indicates the code block number
- NumSlots - specifies detected physical resource allocated to the NPUSCH transmission block
- RV - Redundancy Version for transport block of each NPUSCH transmission block
- CRC - Cyclic Redundancy Check Pass/Fail for NPUSCH transport block of each NPUSCH transmission block

The CRC Pass/Fail data result is reported when NPUSCH Bits is set to a value other than Mapped.

### Uplink Decode Info for LTE V2X

UL Decode Info contains the decoded information from PSCCH

The upper section shows the status of the PSCCH decoders (On or Off).

The lower part of the table shows the decoded information for each frame. The data is color coded to match the color of the corresponding channel in the Frame Summary trace.

A scrollbar appears when the contents are too long to be displayed in the window. You can scroll the window without a mouse with the following steps.

See "[Table: SCPI Commands for trace configuration](#)" on page 1293 for more information.

PSCCH information

PSCCH information is available when PSCCH Bits is set to a value other than None

A "CRC Invalid" message is shown when PSCCH CRC fails. Otherwise the decoded PSCCH contents are shown per subframe.

The following is a list of all the information contained in the PSCCH section of the UL Decode Info trace.

Sfn - the value n indicates the subframe number for the decoded channel information

Nprb - Number of physical resource blocks assigned to this allocation. This parameter is always equal to 4 for PSCCH.

SCILen - SCI message payload bit length

SCIFmt - SCI format, which is one of  $\{0,1\}$

PRI -3 bits to represent priority of V2X message

RRsvn - 4 bits to represent the resource reservation interval in ms unit.

RIV - Resource indication value to indicate the frequency resource location of the initial transmission and retransmission. The value corresponds to a starting subchannel index and a length in terms of contiguously allocated subchannels.

SFgap - 4 bits to indicate subframe time gap between initial transmission and retransmission (no retrans; retrans)

Lmcs - Modulation and coding for transport block

Iretrans - 1 bit to indicate retransmission index

TxFmt - 1 bit to indicate transmission format. The field is present when rate matching and TBS scaling functionality is supported, otherwise invalid string is displayed. Where value 0 represents puncturing and no TBS-scaling and value 1 represents rate-matching and TBS scaling.

RV - Redundancy Version for transport block

XID - Destination Identity. The field is computed by the decimal representation of CRC on the PSCCH channel. The XID is used to generate the scrambling sequence of PSSCH transmitted in the same frame with PSCCH.

TBS - Transport Block Size for transport block

CRC - Cyclic Redundancy Check result (Pass/Fail) for PSSCH transport block , whose allocation is indicated by the PSCCH.

XID, TBS, CRC Pass/Fail metric are only reported when RB Auto Detect Mode is set to Decode PSCCH or PSSCH Bits is set to a value other than None.

## Downlink UE-RS Weights

This table shows shows the subcarrier locations and weights for all UE-specific Reference Signal resource elements on a UE-RS antenna port.

The lower section of the UE-specific RS Weights summary indicates whether the UE-RS analysis is On or Off. The upper part of the table is divided into sections, one for each PDSCH allocation.

Each section contains the following information:

- UserXX - indicates which PDSCH user allocation the section belongs to. 'XX' is the user allocation index from the Composite Include list.
- UERS-RBs - total number of UE-RS Resource Blocks per subframe
- When a PDSCH allocation is transmitted on UE-RS antenna ports, the following information is present in the corresponding section in the UE-specific RS Weights summary table.
- Frequency index for UE-RS weight

- $h_n.w$  (part) or  $w_n$  (part) - weights applied to the UE-RS subcarriers, averaged for each resource block or for the user, depending on the setting of the Weights Display Mode parameter.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 UE-specific RS Weights1"`  
For Downlink

### Downlink Cross-Carrier Summary

This table shows summary information about the Time Alignment Error (TAE) and Channel Power for each component carrier (CCx) relative to the selected Reference Component Carrier (Reference CC).

The TAE for the CCx is calculated by subtracting the Time Offset of the reference CC from the Time Offset of the CCx.

The relative Channel Power for the CCx is calculated by subtracting the Channel Power of the reference CC from the Channel Power of the CCx.

---

Example `:DISP:EVM:TRAC1:FEED "Cross-CC Summary1"`  
For Downlink

### 3.8.3.5 Response

Displays the Trace Data choices that show equalizer response results.

### Eq Ch Frequency Response

Eq Chan Freq Resp shows the channel frequency response calculated from the reference signal (C-RS for downlink and DM-RS for uplink) using the time data in the Search Time trace (capture length primarily determined by Result Length).

For downlink signals, Eq Chan Freq Resp is calculated from the reference C-RS/Rx path (determined by the reference measurement channel and the reference C-RS port). To view the equalization frequency response for all C-RS/Rx paths simultaneously, see MIMO Eq Chan Freq Resp.

The Equalizer Training settings determine data that is shown on the Eq Chan Freq Resp trace. When Equalizer Training is set to Off or RS, the Eq Chan Freq Resp trace shows the equalization frequency response calculated from the reference signal. When RS+Data is selected, the Eq Chan Freq Resp trace shows the equalization frequency response calculated from the reference signal and the data subcarriers (PDSCH for downlink and PUSCH for uplink). Also, the moving average filter setting affects the equalizer frequency response and thus affects the Eq Chan Freq Resp trace as well.

This trace is always calculated from an OFDM symbol FFT taken from the center of the cyclic prefix. This is different from most Demod Trace Data and Layer Trace Data, which use the Symbol Timing Adjust parameter to determine the location of the symbol FFT. See the Symbol Timing Adjust topic for more information.

This trace is affected by Averaging.

The Equalizer Training parameter determines whether the equalization is applied to the signal.

Eq Chan Freq Resp can be used to view the frequency response of the transmitter's filters when the transmitter is connected directly to the measurement hardware.

Eq Chan Freq Resp is affected by the Normalize Chan. Freq. Resp. parameter. Eq Chan Freq Resp is always shown with an average per-subcarrier power gain of 0 dB. When the Normalize Chan. Freq. Resp. is selected any phase, frequency, or timing offset in the channel frequency response is removed. When Normalize Chan. Freq. Resp. is cleared, any phase, frequency, or timing offset present in the channel frequency response is not removed.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Eq Chan Freq Resp1"`  
For Downlink and Uplink

### Inst Eq Ch Frequency Response

Inst Eq Chan Freq Resp always shows the channel frequency response of the current measurement sweep (Inst Eq Chan Freq Resp is a non-averaged version of Eq Chan Freq Resp).

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Inst Eq Chan Freq Resp1"`  
For Downlink and Uplink

### Eq Ch Frequency Resp Diff

Eq Chan Freq Resp Diff shows the channel response's rate of change with respect to frequency, and is computed by subtracting the channel frequency response from a shifted version of itself (by one subcarrier).

This trace can be used to find the source of a spur or other problem in a signal that causes high EVM. When the problem is in the channel (that is, another transmitter is nearby), both the Error Vector Spectrum and the channel frequency response difference are affected. When the problem is in the transmitted signal (but not in the channel or in reference signal since the reference signal is used to calculate the channel frequency response), only the Error Vector Spectrum is affected.

To view the equalization frequency response difference for all C-RS/Rx paths, see MIMO Eq Chan Freq Resp Diff.

This trace is affected by Averaging.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Eq Chan Freq Resp Diff1"`  
For Downlink and Uplink

### Inst Eq Ch Freq Resp Diff

As Eq Ch Resp Diff, but this trace is not averaged

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Inst Eq Chan Freq Resp Diff1"`  
For Downlink and Uplink

### Eq Impulse Response

Eq Impulse Response shows the channel equalization impulse response, which is the time-domain version of the channel equalization frequency response shown in the Eq Chan Freq Resp trace. The equalizer impulse response is computed by taking the reciprocal of the channel equalizer frequency response, performing data filtering and computations that produce a result length of 4x the FFT length, and then converting to the time domain.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Eq Impulse Response1"`  
For Downlink and Uplink

### Eq Ch Freq Resp Per Slot

Eq Chan Freq Resp Per Slot shows the frequency response of the channel for each slot in the Measurement Interval.

Each slot's channel frequency response is plotted as a separate line with a different color. The colors are used to visually separate each slot's channel frequency response and have no correspondence to other traces' or channels' colors.

This trace can be used to measure Spectral Flatness as defined in Section 6.5.2.4 of 3GPP TS 36.521-1.

The Eq Chan Freq Resp Per Slot trace contains an automatically generated  $\pm 2$  dB limit line for each slot. Any points that traverse above their respective limit line is highlighted in red. The limit lines are drawn in red.

---

Example `:DISP:EVM:TRAC1:FEED "Demod CC0 Per Slot Eq Chan Freq Resp1"`  
For Downlink and Uplink

### 3.8.3.6 MIMO (Downlink)

Displays the Trace Data choices that show MIMO results for downlink signals.

#### MIMO Info Table

MIMO Info Table shows information about the C-RS antenna port transmissions detected by the demodulator.

The first column contains the name of the data result, and the other columns display the value of the data result for each C-RS antenna port signal received on a VSA measurement channel (Rx0 = Measurement Channel 1). When there are multiple measurement channels, a horizontal section is added to the table for each additional measurement channel.

The C-RS results in this summary table are calculated regardless of successful demodulation, which means user mappings do not need to be defined for these data results to be calculated. However, the component carrier does need to be demodulated for the IQ impairment results to be calculated, since the IQ data results are calculated from the PDSCH subcarriers.

RSEVM and RSCTE are calculated with a Symbol Timing Adjust setting of EVM Window Center. When Symbol Timing Adjust is set to a value other than EVM Window Center, these data results may not match the corresponding reference signal EVM and Common Tracking Error data results in the Error Summary and Frame Summary tables.

Below is a table of data results provided and their descriptions.

Data result	Description
IQGainImb (dB)	IQ gain imbalance
IQQuadErr (deg)	IQ quadrature error
IQTimSkew (nsec)	IQ timing skew
RSCTE (%rms)	Average (RMS) C-RS Common Tracking Error
RSEVM (%rms or dB)	Average (RMS) C-RS EVM Units are determined by the Report EVM in dB parameter
RSFreq (Hz)	C-RS frequency shift error
RSPHase (degrees)	Average (RMS) C-RS phase error
RSPwr (dB)	Average (RMS) C-RS signal power
RSSymClk (ppm)	Average C-RS symbol clock error
RSTiming (seconds)	C-RS timing error

RSPwr, RSTiming, RSPHase, RSSymClk and RSFreq are set to zero for the reference C-RS/Rx path determined by the Ref Meas Channel and Ref C-RS Port parameters.

The values of these data results for other C-RS/Rx paths are reported relative to the reference path.

---

Example `:DISP:EVM:TRAC1:FEED "MIMO CC0 Info Table1"`

For Downlink

### MIMO Ch Freq Resp

MIMO Eq Chan Freq Resp shows the channel frequency response for all C-RS/Rx paths. Only results for antenna port transmissions that have been detected are shown on this trace.

This trace is always calculated from an OFDM symbol FFT taken from the center of the cyclic prefix. This is different from most Demod Trace Data and Layer Trace Data, which use the Symbol Timing Adjust parameter to determine the location of the symbol FFT. See the Symbol Timing Adjust topic for more information.

The MIMO Chan Eq Freq Resp trace is affected by the Normalize Chan. Freq. Resp. parameter. When Normalize Chan. Freq. Resp. is selected, the channel frequency response of each C-RS/Rx path is normalized to have an average per-subcarrier gain of 0 dB. In addition, any frequency, phase, or time offset present in the channel frequency responses is removed. When the Normalize Chan. Freq. Resp. parameter is cleared, only the channel frequency response of the reference C-RS/Rx path is normalized to have an average per-subcarrier gain of 0 dB. The relative power information among all the paths is maintained and any frequency, phase, or timing offset present is preserved.

---

Example `:DISP:EVM:TRAC1:FEED "MIMO CC0 Eq Chan Freq Resp1"`

For Downlink

### MIMO Ch Freq Resp Diff

MIMO Eq Chan Freq Resp Diff shows the slope of the channel frequency response for all C-RS/Rx paths. Only results for antenna port transmissions that have been detected are shown on this trace.

This trace is always calculated from an OFDM symbol FFT taken from the center of the cyclic prefix. This is different from most Demod Trace Data and Layer Trace Data, which use the Symbol Timing Adjust parameter to determine the location of the symbol FFT. See the Symbol Timing Adjust topic for more information.

---

Example `:DISP:EVM:TRAC1:FEED "MIMO CC0 Eq Chan Freq Resp Diff1"`

For Downlink

### MIMO EQ Impulse Resp

MIMO Eq Impulse Response shows the equalizer impulse response for all C-RS/Rx paths. Only results for antenna port transmissions that have been detected are shown on this trace.

This trace is always calculated from an OFDM symbol FFT taken from the center of the cyclic prefix. This is different from most Demod Trace Data and Layer Trace Data, which use the Symbol Timing Adjust parameter to determine the location of the symbol FFT.

---

Example       :DISP:EVM:TRAC1:FEED "MIMO CC0 Eq Impulse Response1"  
For Downlink

### MIMO Common Tracking Error

MIMO Common Tracking Error shows the common tracking error data for all C-RS/Rx paths. Only results for antenna port transmissions that have been detected are shown on this trace. See the antenna detection threshold topic for more information.

MIMO Common Tracking Error trace data is always calculated from an OFDM symbol FFT taken from the center of the cyclic prefix. This is different from most Demod Trace Data and Layer Trace Data (including the non-MIMO Common Tracking Error trace) which use the Symbol Timing Adjust parameter to determine the location of the symbol FFT.

---

Example       :DISP:EVM:TRAC1:FEED "MIMO CC0 Common Tracking Error1"  
For Downlink

#### 3.8.3.7 ACP

Provides access to ACP summary table data. These results are available when the ACP function is enabled for a particular trace, and it enables you to display the results in another trace.

You can use the following SCPI to set the display.

---

Example       :DISP:EVM:TRAC3:FEED "Acp Summary For Trace2"

#### 3.8.3.8 OBW

Provides access to OBW summary table data. These results are available when the OBW function is enabled for a particular trace, and it enables you to display the

results in another trace.

You can use the following SCPI to set the display.

---

Example `:DISP:EVM:TRAC3:FEED "Obw Summary For Trace2"`

### 3.8.3.9 Marker Table

The marker table is shown.

The Marker should be turned on to show valid marker values.

---

Example `:DISP:EVM:TRAC1:FEED "Marker"`

### 3.8.3.10 No Data

Enables you to turn off trace computations. Measurement results are not computed unless assigned to a trace. No Data lets you increase measurement speed by turning off post-processing calculations that are not needed.

---

Example `:DISP:EVM:TRAC1:FEED "No Data"`

### 3.8.3.11 Config Window

Allows you to configure the window display and carrier parameters for ACP and OBW functions. There are three tabs on this Dialog:

- ["DigitalDemod" on page 1347](#)
- ["ACPSetsup" on page 1354](#)
- ["OBWSetup" on page 1360](#)

---

Notes This control is available for EVM measurement

### DigitalDemod

Accesses settings that control certain elements of displays of digitally demodulated trace data.

---

Notes This control is available for EVM measurement

## Symbol Shape

Enables you to display dots, bars, or nothing (none) at symbol locations (if the trace contains demodulated time-domain data) for all time-domain displays except IQ diagrams. This parameter enables you to select the symbol shape for the selected trace.

If you select bars, vertical lines (bars) are drawn from the baseline to the symbol location on the trace. The baseline is 0 for all traces that have coordinates other than log (dB). The baseline is the bottom of the trace box for traces that have log (dB) coordinates.

With IQ diagrams, displaying vertical bars is meaningless. Therefore, selecting bars displays dots in IQ diagrams.

With constellation diagrams, selecting none is the same as selecting bars - you cannot turn off the dots in a constellation diagram.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:SYMBol BARS   DOTS   OFF</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:SYMBol?</code>
Example	<code>:DISP:EVM:WIND2:DDEM:SYMB DOTS</code> <code>:DISP:EVM:WIND2:DDEM:SYMB?</code>
Preset	BARS
State Saved	Yes
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:DDEMod:SYMBol</code>

## Ideal State Shape

Enables you to choose between a cross, circle, or none to represent the ideal state on the selected trace. Digital Demodulation shows you the location of all ideal symbol states in an I-Q or constellation diagram.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:SYMBol:SHAPE CIRCle   CROSS   OFF</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:SYMBol:SHAPE?</code>
Example	<code>:DISP:EVM:WIND2:DDEM:SYMB:SHAP CIRC</code> <code>:DISP:EVM:WIND2:DDEM:SYMB:SHAP?</code>
Preset	CIRC
State Saved	Yes
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:DDEMod:SYMBol:SHAPE</code>

## Ideal State Size

Determines the ideal state size, as a percentage of the maximum ideal state distance from the origin (the same way Error Vector Magnitude is defined). Ideal states are shown as circles or crosses in Vector and constellation diagrams, as determined by the Ideal State Shape setting.

The ideal state is where symbols occur if your signal is without error. Showing the ideal states gives a visual indication of the quality of your signal.

You can use this feature to determine if symbols have an EVM above a specified Value. For example, to see if any symbols have an EVM greater than 10%, set the state size to 10% and select Circle as the shape. Any symbols that fall outside of the circle (other than SYNC or PILOT symbols) have an EVM greater than 10%.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:SYMBol:SIZE &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:SYMBol:SIZE?</code>
Example	<code>:DISP:EVM:WIND2:DDEM:SYMB:SIZE 10</code> <code>:DISP:EVM:WIND2:DDEM:SYMB:SIZE?</code>
Notes	Parameter is interpreted as a percent, for example, if you want the ideal size to be 10%, send 10, not 0.1
Preset	5
State Saved	Yes
Min	0.1
Max	50
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:DDEMod:SYMBol:SIZE</code>

## Symbol Table Format

Enables you to choose the format in which symbol table data is displayed, when the modulation format encodes 4 or more bits per symbol. You can choose binary or hexadecimal. Binary symbol data is padded with leading zeros to make a multiple of 4 bits before conversion to hexadecimal. For example, for 16 QAM format, each 4-bit symbol is displayed as 2 hex digits.

- Binary Format: The symbol data bit format is binary and each character represents a binary digit. The number to the left of each row indicates the bit offset of the first bit in the row.
- Hexadecimal Format: The symbol data bit format is hexadecimal and each character represents a hexadecimal digit. The number to the left of each row indicate the symbol offset of the first symbol in the row.

**NOTE**

There must be at least 4 bits per symbol to use the hexadecimal format, that is, symbols that have less than 4 bits per symbol are only displayed in binary format regardless of the Symbol Table Format setting.

This parameter is valid only when:

- The active trace is a symbol table, and
- The current demodulation format supports hexadecimal, the demodulation format's bits per symbol is equal to or greater than four.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:SYMBol:FORMat HEXadecimal   BINary</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:SYMBol:FORMat?</code>
Example	<code>:DISP:EVM:WIND2:DDEM:SYMB:FORM BIN</code> <code>:DISP:EVM:WIND2:DDEM:SYMB:FORM?</code>
Preset	HEX
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:DDEMod:SYMBol:FORMat</code>

## Eye Length

Controls how wide (in symbol periods) the eye and trellis diagrams are, for the selected trace.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:EYE:COUNT &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:EYE:COUNT?</code>
Example	<code>:DISP:EVM:WIND2:DDEM:EYE:COUN 3</code> <code>:DISP:EVM:WIND2:DDEM:EYE:COUN?</code>
Preset	2
State Saved	Yes
Min	0.1
Max	40
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:DDEMod:EYE:COUNT</code>

## Time Unit

Enables you to select the time units that are applied to x-axis annotations and marker readouts for the selected trace, whenever it is assigned data with

(demodulation) symbol information. The available measurement units are sym (symbols) or sec (seconds).

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:UNIT:TIME SEC   SYMBol</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:UNIT:TIME?</code>
Example	<code>:DISP:EVM:WIND2:DDEM:UNIT:TIME SYMB</code> <code>:DISP:EVM:WIND2:DDEM:UNIT:TIME?</code>
Preset	SYMB
State Saved	Yes
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:DDEMod:UNIT:TIME</code>

## Freq Unit

Enables you to select the frequency units that are applied to x-axis annotations and marker readouts for the selected trace, whenever it is assigned data with (demodulation) carrier information. The available measurement units are Carrier or Hz.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:UNIT:FREQuency CARRier   HZ</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:UNIT:FREQuency?</code>
Example	<code>:DISP:EVM:WIND2:DDEM:UNIT:FREQ CARR</code> <code>:DISP:EVM:WIND2:DDEM:UNIT:FREQ?</code>
Preset	CARR
State Saved	Yes
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:DDEMod:UNIT:FREQuency</code>

## Avg Line

Controls whether or not the average line is visible on certain demodulation analysis traces such as Error Vector Time and Error Vector Spectrum in Digital Demod measurements. These traces have 2-dimensional domains; typically subcarriers (frequency) and symbol times. Since the result can only be shown with one of these dimensions on the x-axis, the other dimension is placed on the z-axis. Since all the z-axis values are overlapped, an average is calculated for all z values at each x value and the average is normally displayed as a line in front of trace. The average line display can be turned on or off using this control.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:ALINE OFF   ON   0   1</code>
----------------	---

	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:DDEMod:ALIN?</code>
Example	<code>:DISP:EVM:WIND2:DDEM:ALIN OFF</code> <code>:DISP:EVM:WIND2:DDEM:ALIN?</code>
Preset	1
State Saved	Yes
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:DDEMod:ALINe</code>

### Phase/Trellis Offset

Only used if the trace format is Wrap Phase, Unwrap Phase, or Trellis. For Unwrap Phase or Trellis traces, the phase offset value is added to the existing phase at each point. For example, if you are viewing an Unwrapped Phase trace, setting the Phase/Trellis Offset to 5 degrees moves the entire trace up 5 degrees (and changes the value displayed by a marker by the same amount). For Wrap Phase traces the phase offset only affects the phase wrap point, not the underlying data. The point at which the phase wraps is 180 degrees plus the phase offset. For example, suppose you have a marker on a Wrap Phase trace whose phase offset is 0 and the marker is showing -3 degrees. The trace data is all confined within (-180, 180] degrees. If you then change the phase offset to 180 degrees, then the Wrap Phase trace shows values within the interval (0, 360] degrees and the marker value is displayed as 357 degrees, which is the wrapped equivalent of -3 degrees.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:FORMat:PHASe:OFFSet &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:FORMat:PHASe:OFFSet?</code>
Example	<code>:DISP:EVM:WIND3:FORM:PHAS:OFFS 31</code> <code>:DISP:EVM:WIND3:FORM:PHAS:OFFS?</code>
Preset	0
State Saved	Yes
Min	-1E+8
Max	1E+8
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:FORMat:PHASe:OFFSet</code>

### Unwrap Phase Ref

Enables you to designate the point (x-axis) value about which phase values are to be unwrapped. That is, the phase at the designated reference is within -180 to 180 degrees, and phase varies smoothly without jumps around that point.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:FORMat:PHASe:UNWRap:REFerence &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:FORMat:PHASe:UNWRap:REFerence?</code>
Example	<code>:DISP:EVM:WIND3:FORM:PHAS:UNWR:REF 24.5E6</code> <code>:DISP:EVM:WIND3:FORM:PHAS:UNWR:REF?</code>
Preset	0
State Saved	Yes
Min	-9.9e37
Max	9.9e37
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:FORMat:PHASe:UNWRap:REFerence</code>

### Group Delay Aperture

Used when the trace format is Group Delay. The aperture is specified as a percentage of the current frequency span for frequency-domain data. It is specified as a percentage of the time-record length for time-domain data.

When group delay is calculated for a given point (which can be a time- or frequency-domain point), the aperture is centered at that point. Larger apertures decrease resolution, but they increase the smoothing of the group-delay trace.

The point plotted for group delay is located between the data points used to calculate it. For example, in the frequency domain, the group delay for 100 Hz can be calculated by measuring the change in phase between 90 and 110 Hz. If you had specified a start frequency of 90 Hz, 100 Hz would be the first point with group delay data. This results in a trace that does not extend to the edges of the screen (more noticeable as the delay aperture increases).

Note that the smallest aperture that you can select depends on the number of frequency points. If you select an invalid aperture, the analyzer automatically selects the smallest valid aperture.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 6:FORMat:DELay:APERture &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 6:FORMat:DELay:APERture?</code>
Example	<code>:DISP:EVM:WIND3:FORM:DEL:APER 1</code> <code>:DISP:EVM:WIND3:FORM:DEL:APER?</code>
Notes	Parameter is interpreted as a percent, e.g., if you want the group delay aperture to be 1%, send 1, not 0.01
Preset	0.5
State Saved	Yes
Min	0.00390625

Max	16
Backwards Compatibility SCPI	:DISPlay:EVM:TRACe[1] 2 ... 6:FORMat:DElay:APERture

## ACPSetup

This tab enables you to turn on the ACP function on the selected trace and set up carrier parameters. One reference channel and up to 5 offset frequencies can be defined, and ACP is calculated for bands both above and below the reference frequency for each offset.

The adjacent channel power (ACP) function calculates the power in a reference band of frequencies as well as bands of frequencies offset from the reference, and calculates the ratio of each offset band to the reference band power.

An ACP measurement can be defined for each trace, although it is only active on frequency-domain trace data. The reference and offset frequency bands defined by the ACP measurement are shown as gold bars overlaying the trace display. To see tabular data showing power and power ratio results, you can assign the ACP Summary (Trace m) to a different trace. For example, you can assign Spectrum data in Window 2, turn on and define an ACP measurement on Trace 2, assign the ACP Summary for Trace 2 to TRACe3, and use a 2x2 display to view both at the same time, as shown below.



Notes This control is available for EVM measurement

## ACP On/Off

Turns the ACP function on or off for the selected trace.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:STATE OFF   ON   0   1</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:STATE?</code>
Example	<code>:CALC:EVM:WIND1:ACP:STATE ON</code> <code>:CALC:EVM:WIND1:ACP:STATE?</code>
Preset	0
State Saved	Yes
Backwards Compatibility SCPI	<code>:CALCulate:EVM:TRACe[1] 2 ... 6:ACPower:STATE</code>

## Carrier Freq

Enables you to enter the carrier frequency of the reference channel for the ACP measurement. The carrier frequency is relative to the center frequency of the measurement. There is only one available reference carrier.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:CARRier:FREQuency &lt;freq&gt;</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:CARRier:FREQuency?</code>
Example	<code>:CALC:EVM:WIND1:ACP:CARR:FREQ 100 KHZ</code> <code>:CALC:EVM:WIND1:ACP:CARR:FREQ?</code>
Preset	0
State Saved	Yes
Min	-9.9e37
Max	9.9e37
Backwards Compatibility SCPI	<code>:CALCulate:EVM:TRACe[1] 2 ... 6:ACPower:CARRier:FREQuency</code>

## Carrier Meas Noise BW

Enables you to define the measurement noise bandwidth of the reference channel.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:CARRier:BANDwidth BWIDth:INTEgration &lt;bandwidth&gt;</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:CARRier:BANDwidth BWIDth:INTEgration?</code>
Example	<code>:CALC:EVM:WIND1:ACP:CARR:BAND:INT 1 MHZ</code>

	<code>:CALC:EVM:WIND1:ACP:CARR:BAND:INT?</code>
Preset	1000000
State Saved	Yes
Min	-9.9e37
Max	9.9e37
Backwards Compatibility SCPI	<code>:CALCulate:EVM:TRACe[1]   2   ...   6:ACPower:CARRier:BANDwidth   BWIDth:INTegration</code>

### Carrier RRC Weighting

Turns on or off RRC weighting for the reference (carrier) power measurement.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:CARRier:FILTer:RRC:STATe OFF   ON   0   1</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:CARRier:FILTer:RRC:STATe?</code>
Example	<code>:CALC:EVM:WIND1:ACP:CARR:FILT:RRC:STAT ON</code> <code>:CALC:EVM:WIND1:ACP:CARR:FILT:RRC:STAT?</code>
Preset	0
State Saved	Yes
Backwards Compatibility SCPI	<code>:CALCulate:EVM:TRACe[1]   2   ...   6:ACPower:CARRier:FILTer:RRC:STATe</code>

### Carrier Filter Alpha

Enables you to adjust the alpha of the RRC filter for the reference (carrier) power measurement.

Remote Command	<code>:CALCulate:EVM:WIND[1] 2 ... 6:ACPower:CARRier:FILTer:RRC:ALPHa &lt;real&gt;</code> <code>:CALCulate:EVM:WIND[1] 2 ... 6:ACPower:CARRier:FILTer:RRC:ALPHa?</code>
Example	<code>:CALC:EVM:WIND1:ACP:CARR:FILT:RRC:ALPH 0.22</code> <code>:CALC:EVM:WIND1:ACP:CARR:FILT:RRC:ALPH?</code>
Preset	0.35
State Saved	Yes
Min	0
Max	1
Backwards Compatibility SCPI	<code>:CALCulate:EVM:TRACe[1]   2   ...   6:ACPower:CARRier:FILTer:RRC:ALPHa</code>

## RRC Weighting (All Offsets)

Turns on or off RRC weighting for the power measurement for all offsets. If RRC weighting is turned on, but you want to exclude RRC weighting for a particular offset, set its filter alpha to 0.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:FILTer:RRC:STATe OFF   ON   0   1</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:FILTer:RRC:STATe?</code>
Example	<code>:CALC:EVM:WIND1:ACP:OFFS:FILT:RRC:STAT ON</code> <code>:CALC:EVM:WIND1:ACP:OFFS:FILT:RRC:STAT?</code>
Preset	0
State Saved	Yes
Backwards Compatibility SCPI	<code>[[:SENSE]:ACPower:FILTer[:RRC][:STATe] OFF   ON   0   1</code> <code>:CALCulate:EVM:TRACe[1]   2   ...   6:ACPower:OFFSet:FILTer:RRC:STATe</code>

## Offset Freq

Turns ACP analysis on or off for a selected offset and sets the offset frequency, which is relative to the carrier frequency.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:FREQuency &lt;freq&gt;,&lt;-freq&gt;,&lt;freq&gt;,&lt;freq&gt;</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:FREQuency?</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:STATe OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:STATe?</code>
Example	<code>:CALC:EVM:WIND1:ACP:OFFS:LIST:FREQ 1 MHZ,1 MHz,500 KHZ,500 KHZ,1 MHZ</code> <code>:CALC:EVM:WIND1:ACP:OFFS:LIST:FREQ?</code> <code>:CALC:EVM:TRAC1:ACP:OFFS:LIST:STAT ON,OFF,OFF,ON,OFF</code>
Notes	If you send fewer than 5 frequencies in the parameter list, then the remaining offsets frequencies are set to 0 You can send a single on/off parameter or a comma-separated list of up to 5 parameters. These enable/disable each of the Offsets in sequence. Any remaining Offsets are disabled
Preset	3000000,0,0,0,0 1,0,0,0,0
State Saved	Yes Yes
Min	-9.9E+37

Max	9.9E+37
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1] 2:LIST[:FREQuency] &lt;freq&gt;,...</code> <code>:CALCulate:EVM:TRACe[1] 2 ... 6:ACPower:OFFSet:LIST:FREQuency</code> <code>[ :SENSe]:ACPower:OFFSet[1] 2:LIST:STATe OFF   ON   0   1, ...</code> <code>:CALCulate:EVM:TRACe[1] 2 ... 6:ACPower:OFFSet:LIST:STATe</code>

## Offset Meas Noise BW

Enables you to set the measurement noise bandwidth for the power measurement of a selected offset band.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower-OFFSet:LIST:BANDwidth BWIDth:INTEgration &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;, &lt;bandwidth&gt;</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower-OFFSet:LIST:BANDwidth BWIDth:INTEgration?</code>
Example	<code>:CALC:EVM:WIND1:ACP:OFFS:LIST:BAND:INT 1 MHZ,2 MHZ,3 MHZ,4 MHZ,5 MHZ</code> <code>:CALC:EVM:WIND1:ACP:OFFS:LIST:BAND:INT?</code>
Notes	If you send fewer than 5 bandwidth parameters in the list, then Measurement Noise Bandwidths for the remaining Offsets are set to 0
Preset	1000000,0,0,0,0
State Saved	Yes
Min	-9.9e37
Max	9.9e37
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:OFFSet[1] 2:LIST:BANDwidth[:INTEgration]</code> <code>:&lt;bandwidth&gt;, ...</code> <code>:CALCulate:EVM:TRACe[1]   2   ...   6:ACPower:OFFSet:LIST:BANDwidth   BWIDth:INTEgration</code>

## Offset Filter Alpha

Enables you to adjust the alpha of the RRC filter for the power measurement of the selected offset band.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:FILTer:RRC:ALPha &lt;real&gt;, &lt;real&gt;, &lt;real&gt;, &lt;real&gt;, &lt;real&gt;</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:FILTer:RRC:ALPha?</code>
Example	<code>:CALC:EVM:WIND1:ACP:OFFS:LIST:FILT:RRC:ALPH 0.22,0.22,0.22,0.22,0.22</code> <code>:CALC:EVM:WIND1:ACP:OFFS:LIST:FILT:RRC:ALPH?</code>
Notes	You can send a single Filter Alpha for Offset A or a comma-separated list of up to 5 Filter Alpha parameters. These are assigned in sequence to the Offsets. Alpha for any remaining Offsets are set to 0

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Preset	0.35,0.35,0.35,0.35,0.35
State Saved	Yes
Min	0
Max	1.0
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPower:FILTer[:RRC]:ALPHA &lt;real&gt;</code> <code>:CALCulate:EVM:TRACe[1]   2   ...   9:ACPower:OFFSet:LIST:FILTer:RRC:ALPHA</code>

### Offset Relative Limit

Enables you to turn on/off a relative limit test and set the limit for the selected offset. The test shows a failure if the power in either the upper or lower band at the selected offset exceeds the reference power plus the relative test limit. For example, if the test limit is -60, the reference power is -4.5 dBm, a test failure would be shown if the power in the lower or upper band exceeds -64.5 dBm.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:RCARrier &lt;real&gt;,&lt;real&gt;,&lt;real&gt;,&lt;real&gt;,&lt;real&gt;</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:RCARrier?</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:RCARrier:TEST OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1,OFF   ON   0   1</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:ACPower:OFFSet:LIST:RCARrier:TEST?</code>
Example	<code>:CALC:EVM:WIND1:ACP:OFFS:LIST:RCAR -50, -55, -60, -65, -80</code> <code>:CALC:EVM:WIND1:ACP:OFFS:LIST:RCAR?</code> <code>:CALC:EVM:WIND1:ACP:OFFS:LIST:RCAR:TEST 1, 1, 1, 1, 1</code> <code>:CALC:EVM:WIND1:ACP:OFFS:LIST:RCAR:TEST?</code>
Notes	You can send a single Limit for Offset A or a comma-separated list of up to 5 limit parameters. These are assigned in sequence to the Offset frequencies with the remaining limits being set to 0 You can send a single on/off parameter or a comma-separated list of up to 5 parameters. These turn the Limit Test on or off for each of the Offsets in sequence. For any remaining Offsets, the Limit test is turned off
Preset	-120,-120,-120,-120,-120 0,0,0,0,0
State Saved	Yes Yes
Range	On   Off
Min	50
Max	-200
Annunciation	If this or any other test is on, the pass/fail enunciator is active and shows fail if any test fails, otherwise shows pass


```
Backwards      :SENSe]:ACPower:OFFSet[1]|2:LIST:RCARrier <real>, ...
Compatibility  :CALCulate:EVM:TRACe[1]|2|...|6:ACPower:OFFSet:LIST:RCARrier
SCPI          :CALCulate:EVM:TRACe[1] | 2 | ... | 6:ACPower:OFFSet:LIST:RCARrier:TEST
```

## OBWSetup

This tab enables you to turn on the OBW function on the selected trace and set up carrier parameters.

The occupied bandwidth (OBW) function finds and displays the band of frequencies that contain a specified percentage of the total power within the measurement span.

An OBW measurement can be defined for each trace, although it is only active on frequency-domain trace data. The band defined by the OBW measurement is shown as a blue bar overlaying the trace display. To see tabular data showing the frequencies of the band limits, the total power, and so on, you can assign the OBW Summary (Trace m) to a different trace. For example, you can assign Spectrum data to trace 1, turn on OBW on trace 1, and assign the OBW Summary (Trace 1) to trace 3, as shown below.

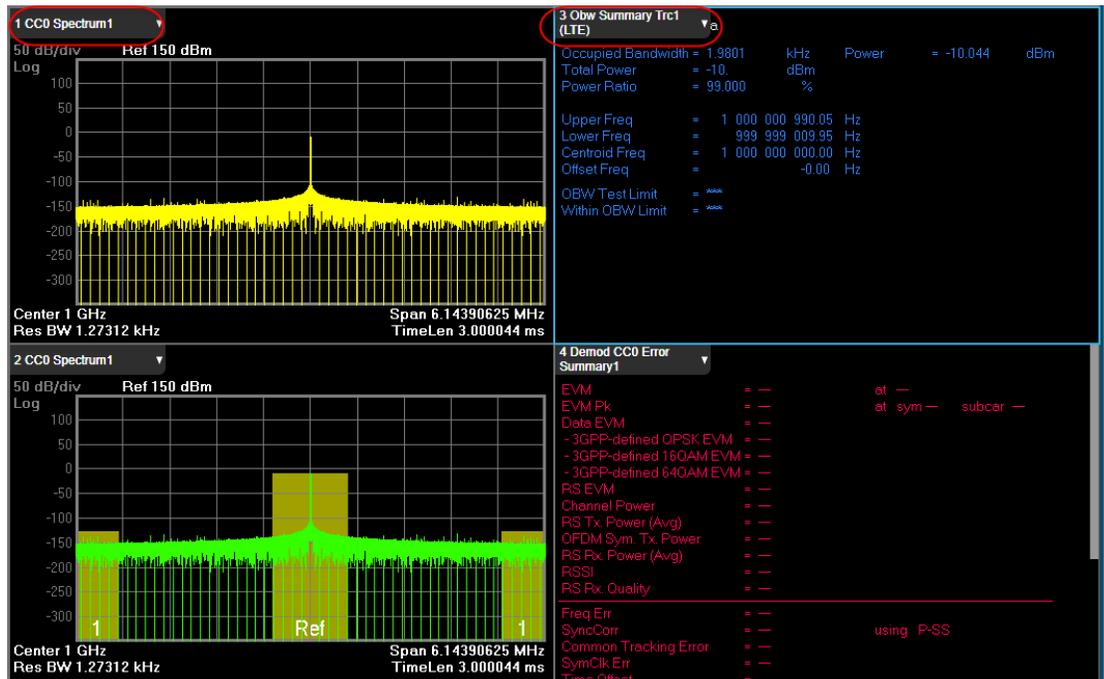

Notes This control is available for EVM measurement

## OBW On/Off

Turns the OBW function on or off for the selected trace.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:STATe OFF   ON   0   1</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:STATe?</code>
Example	<code>:CALC:EVM:WIND1:OBW:STAT ON</code> <code>:CALC:EVM:WIND1:OBW:STAT?</code>
Preset	0
State Saved	Yes
Backwards Compatibility SCPI	<code>:CALCulate:EVM:TRACe[1] 2 ... 6:OBwidth:STATe</code>

## % of OBW Power

Specifies the percentage of power for determining the occupied BW for the selected trace.

Remote Command	<code>:CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:PERCent &lt;real&gt;</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:PERCent?</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:STATe OFF   ON   0   1</code> <code>:CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:STATe?</code>
Example	<code>:CALC:EVM:WIND1:OBW:PERC 99</code> <code>:CALC:EVM:WIND1:OBW:PERC?</code> <code>:CALC:EVM:WIND1:OBW:STAT ON</code> <code>:CALC:EVM:WIND1:OBW:STAT?</code>
Notes	Parameter is interpreted as a percent, e.g., if you want the OBW to be 95% send 95, not 0.95
Couplings	Controls the presence or absence of data in the OBW Summary table for the selected trace
Preset	99.0 0
State Saved	Yes Yes
Min	0
Max	100
Backwards Compatibility SCPI	<code>:CALCulate:EVM:TRACe[1] 2 ... 6:OBwidth:PERCent</code> <code>:CALCulate:EVM:TRACe[1] 2 ... 6:OBwidth:STATe</code>

## OBW Limit

Turns on or off limit testing for the Occupied BW test for the selected trace, and enables you to define the limit. Test pass or fail status appears in the OBW Summary table associated with the trace.

Remote Command	<pre>:CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:LIMit:FBLimit &lt;freq&gt; :CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:LIMit:FBLimit? :CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:LIMit[:TEST] OFF   ON   0   1 :CALCulate:EVM:WINDow[1] 2 ... 6:OBwidth:LIMit[:TEST]?</pre>
Example	<pre>:CALC:EVM:WIND1:OBW:LIMIT:FBL 10 MHz :CALC:EVM:WIND1:OBW:LIMIT:FBL? :CALC:EVM:WIND1:OBW:LIMIT:TEST ON :CALC:EVM:WIND1:OBW:LIMIT:TEST?</pre>
Preset	1000000 0
State Saved	Yes Yes
Min	1 Hz
Max	9.9e37 Hz
Backwards Compatibility SCPI	<pre>:CALCulate:OBwidth:LIMit:FBLimit &lt;freq&gt; :CALCulate:EVM:TRACe[1] 2 ... 6:OBwidth:LIMit:FBLimit :CALCulate:OBwidth:LIMit[:TEST] ON   OFF   1   0 :CALCulate:EVM:TRACe[1] 2 ... 6:OBwidth:LIMit[:TEST]</pre>

### 3.8.3.12 Format

Accesses a menu that enables you to choose the format of the selected trace. Any format can be assigned to any trace. For symbol tables and tabular data the format choice is ignored. If the data doesn't have defined symbol times, Constellation format is the same as I-Q, Eye formats are the same as Real or Imaginary, and Trellis format is the same as Unwrapped Phase.

The available formats are:

Format name	Description
Log Mag (dB)	Data is converted to decibel units and shown on a linear Y axis
Linear Mag (Abs Value)	Magnitude of the data is shown on a linear Y axis

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Format name	Description
Real (I)	Real part of data is shown on a linear Y axis
Imaginary (Q)	Imaginary part of data is shown on linear Y axis
I-Q	Real part of data is shown on horizontal axis, imaginary part is shown on vertical axis, Independent variable (X axis) is normal to display
Constellation	Same as I-Q, but for data with symbols defined, only the symbol points are shown as dots with no connecting lines
Wrap Phase	Phase of complex data, limited to $\pm 180$ deg, is shown on Y axis
Unwrap Phase	Phase of complex data is shown "unwrapped", that is, without discontinuities. Not limited to $\pm 180$ degrees
I-Eye	Real part of data is shown with X axis segmented (generally into 2 symbol segments) and each segment is overlaid to show signal crossings at symbol boundaries
Q-Eye	Same as I-eye but imaginary part of data is shown
Trellis	Same as I-eye but uses unwrapped phase of data
Group Delay	Useful for frequency response displays. Shows the derivative of phase response with respect to frequency
Log Mag (Linear Unit)	Displays data with a logarithmic Y axis, but marker read outs are in linear magnitude units

Remote Command	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:FORMat MLOG   MLINear   REAL   IMAGinary   VECTOR   CONS   PHASe   UPHase   IEYE   QEYE   TRELLis   GDELay   MLGLinear</code> <code>:DISPlay:EVM:TRACe[1] 2 ... 6:FORMat?</code>
Example	<code>:DISP:EVM:TRAC1:FORM MLOG</code> <code>:DISP:EVM:TRAC2:FORM?</code>
Notes	This control is available for EVM measurement
Preset	Depends on trace and measurement
State Saved	Yes

### 3.8.3.13 Component Carrier (Display only)

Specifies for which component carrier the results are displayed.

Notes	Display only
-------	--------------

### 3.8.3.14 Trace Data Queries (Remote Commands only)

Notes	Remote Commands only  The <code>CALC:EVM:DATA&lt;m&gt;</code> and <code>CALCulate:EVM:DATA&lt;m&gt;:TABLE?</code> commands enable you to retrieve any trace data or trace table. This family of commands also
-------	---

enable you to get information about the names of data results available and the units associated with them, as well as names and results of meta-data associated with traces, where <m> is a reference to the trace number, which can be mapped to the window number on the screen display. The results assigned to each trace vary depending on which tests are enabled.

Command	Returns	Parameters
<code>:CALCulate:EVM:DATA&lt;m&gt;? [Y   X   XY   LL   UL]</code>	The data in the designated trace as displayed	The optional parameters control what data is returned [Y]: is the same as that with no parameter. It returns an array of Y values [X]: returns an array of X values that correspond to the Y values above [XY]: returns interleaved X and Y data [LL UL]: returns an array of Lower/Upper Limit values when Limit Test is enabled and the trace includes limit values
<code>:CALCulate:EVM:DATA&lt;m&gt;:RAW?</code>	This unformatted Y data in the designated trace	If Y data is complex, it is returned as <y_real1><y_imag1><y_real2><y_imag2> etc
<code>:CALCulate:EVM:DATA&lt;m&gt;:RAW:COMPLex?</code>	The flag to indicate whether the data retrieved by is complex	Returns 1 if the trace data is complex, 0 if it is real
<code>:CALCulate:EVM:DATA&lt;m&gt;:POINTs?</code> <code>:CALCulate:EVM:DATA&lt;m&gt;:RAW:POINTs?</code>	The number of points for the corresponding data retrieved SCPI commands	
<code>CALCulate:EVM:DATA&lt;m&gt;:TABLe:NAMes?</code>	Comma-separated list of all table data names	
<code>CALCulate:EVM:DATA&lt;m&gt;:TABLe:UNIT?</code>	Comma-separated list of all table data units	

CALCulate:EVM:DATA<m>:TABLE[:NUMBer]?	All table numeric data results (as an array)
:CALCulate:EVM:DATA<m>:TABLE:STRing?	All table string data results (as an array)
CALCulate:EVM:DATA<m>:TABLE[:NUMBer]?"<name>"	The table numeric/string data result referred to by name
:CALCulate:EVM:DATA<m>:TABLE:STRing?"<name>"	

### 3.8.4 Amplitude

The Amplitude front-panel key activates the Amplitude menu and selects Reference Value as the active function.

#### 3.8.4.1 Y Scale

The Y Scale Tab contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

#### Auto Scale

Changes the Y reference value and Scale per Division so the full trace is displayed without clipping.

Remote Command	:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:AUTO:ONCE Window number is based on window position, see number on window
Example	:DISP:EVM:WIND1:Y:AUTO:ONCE
Backwards Compatibility SCPI	:DISPlay:EVM:TRACe[1] 2 ... 6:Y[:SCALE]:AUTO:ONCE

#### Couple Ref to Range

When Couple Ref to Range is on, Y scaling is adjusted when the Range changes. For example, on traces with Y units of dBm, the reference value changes by the same amount in dB as the Range does. On a trace with Y units of Volts, the Per Division setting changes by a factor of approximately 1.25 when the Range changes by 2 dB. This function can be turned on or off for each individual trace.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:RLEVe1:AUTO OFF   ON   0   1</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:RLEVe1:AUTO?</code>
Example	<code>:DISP:EVM:WIND1:Y:RLEV:AUTO ON</code> <code>:DISP:EVM:WIND1:Y:RLEV:AUTO?</code>
Notes	Range coupling is not available for Phase and Group delay traces
Preset	1
State Saved	Yes
Range	On   Off
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:Y[:SCALE]:RLEVe1:AUTO OFF   ON   0   1</code>

## Ref Level

Controls the Y value of the selected trace at the Reference Position.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:RLEVe1 &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:RLEVe1?</code> Window number is based on window position, see number on window
Example	<code>:DISP:EVM:WIND:Y:RLEV 20</code> <code>:DISP:EVM:WIND:Y:RLEV?</code>
Couplings	None. This does not affect any hardware input settings
Preset	Depends on trace
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37
Annotation	Above trace grid toward the left side
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:Y[:SCALE]:RLEVe1 &lt;real&gt;</code>

## Scale/Div

Controls the Y scale per division of the selected trace.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:PDIVision &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:PDIVision?</code> Window number is based on window position, see number on window
Example	<code>:DISP:EVM:TRAC:Y:PDIV 10</code>

	<code>:DISP:EVM:TRAC:Y:PDIV?</code>
Preset	Depends on trace
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37
Annotation	Upper left corner of trace grid, same grey as grid. (see Display under Mode Overview)
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:Y[:SCALE]:PDIVision &lt;real&gt;</code>

## Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:RPOsition TOP   CENTer   BOTTom</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y[:SCALE]:RPOsition?</code> Window number is based on window position, see number on window
Example	<code>:DISP:EVM:WIND1:Y:RPOS TOP</code> <code>:DISP:EVM:WIND1:Y:RPOS?</code>
Preset	Depends on trace format and trace data. Top for LogMag or most LinearMag traces, middle for Real, Imaginary, Vector displays, Eye diagrams, Phase, Delay, Bottom for Linear Mag EVM
State Saved	Saved in instrument state
Range	Top Ctr Bot
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position

## Ref Line

Controls whether the Y reference line is visible or not.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:RLINe OFF   ON   0   1</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:RLINe?</code>
Example	<code>:DISP:EVM:WIND1:RLIN ON</code> <code>:DISP:EVM:WIND1:RLIN?</code>
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:RLINe OFF   ON   0   1</code>

## Y Unit Preference

Displays a menu that enables you to set the preferred Y unit for the selected trace. You can select Peak, RMS, Power units, or an automatic selection. The automatic selection uses Power units for frequency domain data and Peak units for time domain data.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y:UNIT:PREference AUTO   PEAK   RMS   POWer   MRMS</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y:UNIT:PREference?</code>
Example	<code>:DISP:EVM:WIND1:Y:UNIT:PREF PEAK</code> <code>:DISP:EVM:WIND1:Y:UNIT:PREF?</code>
Preset	AUTO
State Saved	Yes
Range	AUTO PEAK RMS POW MRMS
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:Y:UNIT:PREference AUTO   PEAK   RMS   POWer   MRMS</code>

The following SCPI only command can be used to determine exactly which Y unit was chosen based on the setting of the above:

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y:UNIT?</code>
Example	<code>:DISP:EVM:WIND1:Y:UNIT?</code>

## Vector Horiz Center

Sets the position of the origin for Vector trace formats such as I-Q and Constellation. When using one of these formats, you set the vertical (imaginary) axis scaling with the Y Reference Value, Y Reference Position, and Y Scale Per Division properties. The scaling of the horizontal axis is set to maintain an aspect ratio of 1:1.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:VHCenter &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:VHCenter?</code>
Example	<code>:DISP:EVM:WIND1:VHC 0.2</code> <code>:DISP:EVM:WIND1:VHC?</code>
Preset	0
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:VHCenter &lt;real&gt;</code>

## Log Ratio

Enabled if the Trace Format is set to LogMag (Linear Unit). In this format type, you set the Y Log Ratio instead of Y Scale Per Division to determine Y scaling. It sets the ratio of the top of the Y axis to the bottom.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y:LRATio &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:Y:LRATio?</code>
Example	<code>:DISP:EVM:WIND1:Y:LRAT 10000</code> <code>:DISP:EVM:WIND1:Y:LRAT?</code>
Notes	This is grayed out if the trace format is not Log Mag (linear unit)
Preset	100000
State Saved	Yes
Min	1.001
Max	100e6
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:Y:LRATio &lt;real&gt;</code>

### 3.8.4.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 1370](#)
- See ["Single-Attenuator Configuration" on page 1370](#)


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

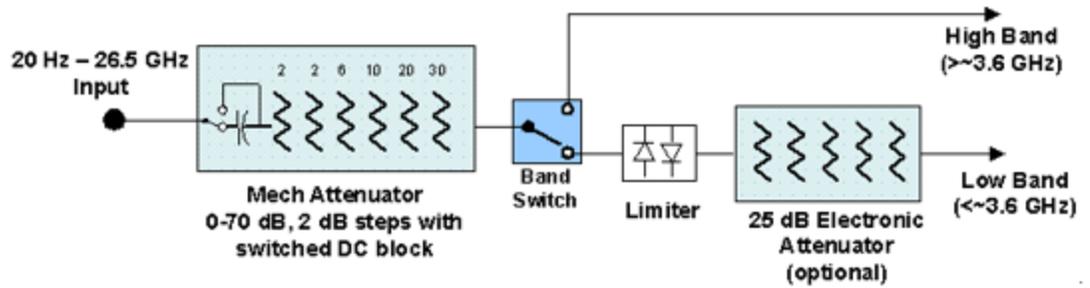


Configuration 2: Mechanical attenuator, no optional electronic attenuator

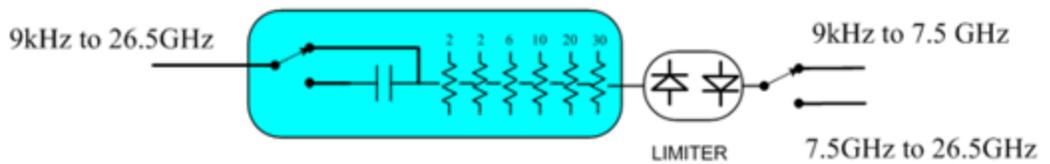

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

### Single-Attenuator Configuration

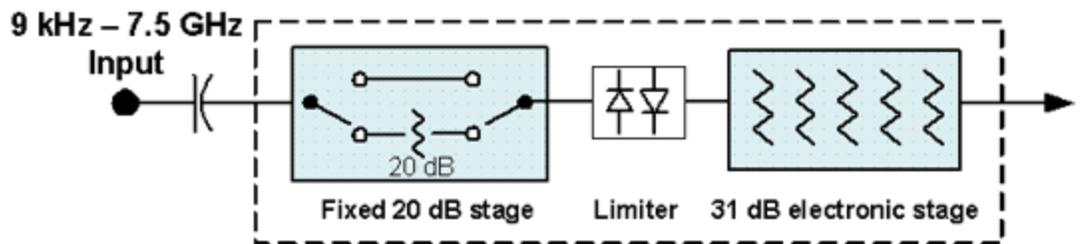

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

### Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_ampl&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and " <b>Mech Atten</b> " on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	When the <b>Input</b> is RF, and the <b>Input Port</b> is RF Input 2, and the Full Range Attenuator is installed:

On the Meas Bar, the field “Atten” displays as follows:

- If the sweep is entirely < 50 GHz, the value shown after “Atten:” is equal to Mech Atten + Elec Atten + Full Range Atten
- If the sweep is entirely > 50 GHz, the value shown after “Atten:” is equal to Full Range Atten
- If the sweep straddles 50 GHz, the value shown after “Atten:” is preceded by the symbol “>=” and is equal to Full Range Atten

In the **Amplitude**, **"Y Scale"** on page 2153 menu, and the Atten **Meas Bar** dropdown menu panel, a summary is displayed as follows:

“Total Atten below 50 GHz” followed by the value of Full Range Atten + Mech Atten + Elec Atten

“Total Atten above 50 GHz” followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **"Internal Preamp"** on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **"Attenuator Configurations and Auto/Man"** on page 1374

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation &lt;rel_amp&gt;</code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

**Auto/Man** is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in ["Elec Atten" on page 2164](#)

See ["Attenuator Configurations and Auto/Man" on page 1374](#) for more information on the **Auto/Man** functionality

Couplings	<p>If the RF Input Port is the RF Input:</p> <ul style="list-style-type: none"> <li>– If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>– Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>, <b>External Gain</b>, <b>Ref Level Offset</b>, <b>Max Mixer Level</b>, <b>μW Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>– In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of <a href="#">"Full Range Atten" on page 2160</a> from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul> <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when <b>Mech Atten</b> is in <b>Auto</b>, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is <math>\leq 7.5</math> GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>						
Preset	<p><b>Auto</b></p> <p>The Auto value is 10 dB</p>						
State Saved	Saved in instrument state						
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>						
Max	<table border="1"> <tr> <td>CXA Option 503 or 507</td> <td>50 dB</td> </tr> <tr> <td>EXA</td> <td>60 dB</td> </tr> <tr> <td>All other models</td> <td>70 dB</td> </tr> </table> <p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>	CXA Option 503 or 507	50 dB	EXA	60 dB	All other models	70 dB
CXA Option 503 or 507	50 dB						
EXA	60 dB						
All other models	70 dB						
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p>						

---

For example:  
 Dual-Attenuator configuration:  
*Atten: 24 dB (e14)*  
 Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB  
 Single-Attenuator configuration:  
*A: 24 dB (e14)*  
 Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)  
 When in Manual, a # sign appears in front of Atten in the annotation

### Auto Function

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn <b>Auto Mech Atten</b> ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	<code>ON</code>

---

### Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 1372 (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about “soft” attenuation.

**NOTE**

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

---



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 1377](#)

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code> , and affects the total attenuation displayed on the <b>Attenuation</b>

control and the Meas Bar

The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If "**Internal Preamp**" on page 2183 is **ON** (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned

If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamp** is unavailable

If "**LNA**" on page 2185 is **ON**, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <b>Mechanical Attenuator Transition Rules</b> " on page 1377
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description

#### Auto Function

Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code>

---

:POW:EATT:STAT?

---

Preset      **OFF** (Disabled) for Swept SA measurement  
              **ON** (Enabled) for all other measurements that support the electronic attenuator

**NOTE**

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

---

### More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1378](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled

- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

### **Using the Electronic Attenuator: Pros and Cons**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the

electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

### Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 2168](#).

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

### Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 1381

Selection	SCPI	Note
Off	<b>OFF</b>	This is the default setting
On	<b>ON</b>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <b>COMBined</b>
Elec Atten Only	<b>ELECTrical</b>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<b>COMBined</b>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>
Notes	The parameter option <b>ELECTrical</b> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <b>COMBined</b> is mapped to <b>ELECTrical</b> in Single-Attenuator models. If you send <b>COMBined</b> , it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBined</b>
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " <a href="#">Elec Atten</a> " on page 2164 is <b>OFF</b> or grayed-out, " <a href="#">Pre-Adjust for Min Clipping</a> " on page 1380 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>
State Saved	Saved in instrument state

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Range	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten
	Single-Attenuator models:	Off   On


Backwards Compatibility Command

Notes	<b>ON</b> aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) <b>OFF</b> aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0 [:SENSe]:POWer[:RF]:RANGe:AUTO?

**Adjustment Algorithm**

The algorithms for the adjustment are documented below:


### Single-Attenuator Models

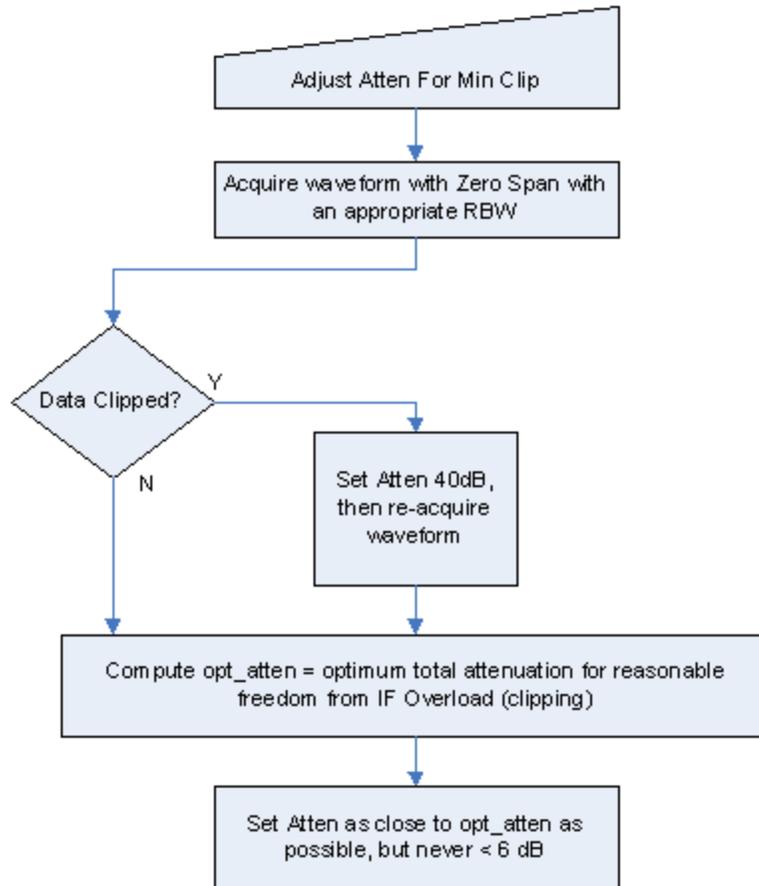

### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 1380 selection is Mech + Elec Atten:


3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

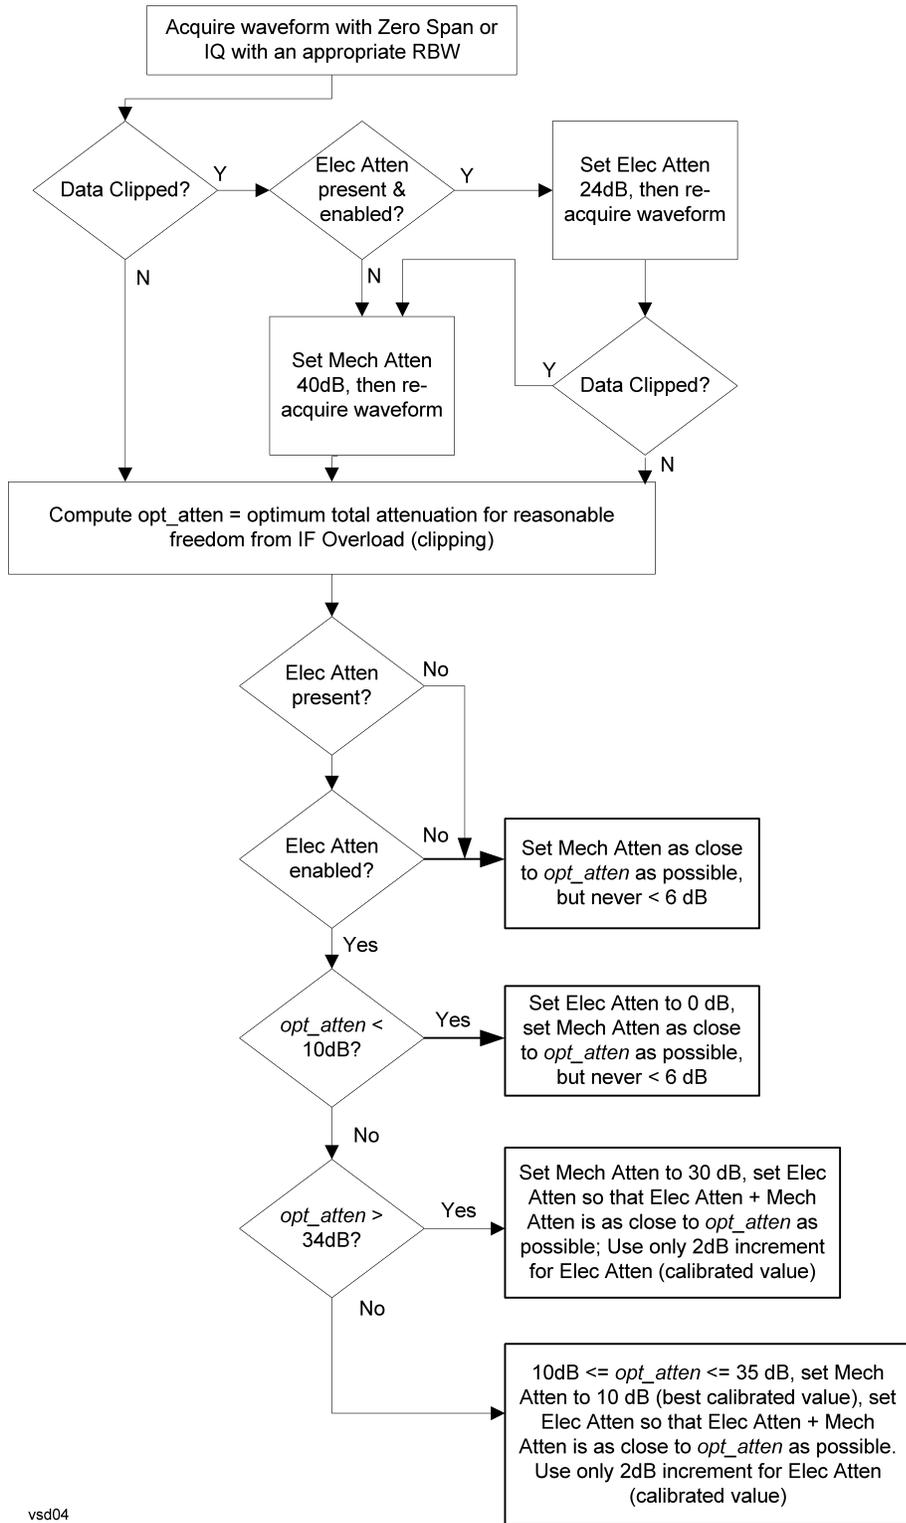

vsd04

"Pre-Adjust for Min Clipping" on page 1380 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

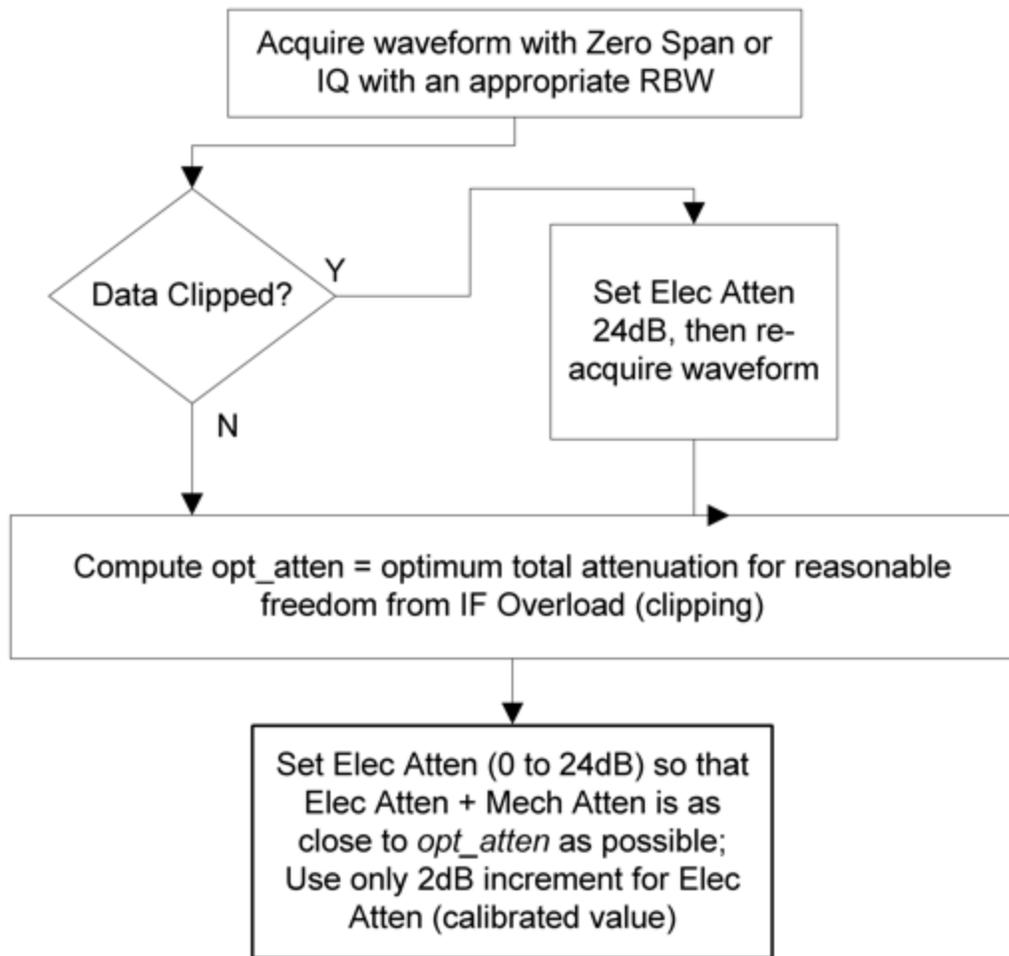

### Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.8.4.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

## Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

## Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

## Pre-Adjust for Min Clipping


If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

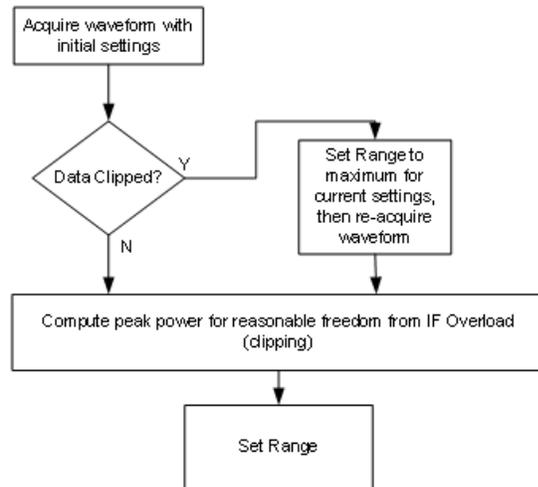

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.8.4.4 Range (Baseband Input models)

Only available when Option BBA is present (I/Q Baseband Inputs), the current measurement supports option BBA, and I/Q is the selected input. In these cases, replaces the **Attenuation** tab.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a few millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Dependencies	Available only when the selected input is I/Q. If the current measurement does not support baseband inputs, an error will be displayed: "No result; Meas invalid with I/Q inputs"
State Saved	No

## Range Auto/Man

The **Auto** setting for **Range** causes the range to be set based on the Y Scale settings. When **Range** is **Auto**, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support **Range Auto/Man**. If **Auto** is not supported in the current measurement, this control is grayed-out, displaying **Man**, and **MAN** is returned to a SCPI query, but this does *not* change the Auto/Man setting for **Range**. When you switch to a measurement that supports **Auto**, it goes back to **Auto** if it was previously in **Auto** mode.

Remote Command	<code>[ :SENSe ] :VOLTagE :IQ :RANGe :AUTO OFF   ON   0   1</code> <code>[ :SENSe ] :VOLTagE :IQ :RANGe :AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:VOLT :IQ :RANG :AUTO OFF</code> <code>:VOLT :IQ :RANG :AUTO?</code>
Dependencies	If <b>Auto</b> is not supported, sending the SCPI command generates an error
Couplings	When in <b>Auto</b> , both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: YMax = max(abs(top), abs(bottom)) The I Range and Q Range are then set to YMax
Preset	<b>ON</b>
State Saved	Saved in instrument state
Annotation	When in Man, the Range annotation is preceded by "#"  This is an alternate form of the command to match the <b>POWer</b> form of the I Range and Q Range SCPI.
Remote Command	<code>[ :SENSe ] :POWer :IQ :RANGe :AUTO OFF   ON   0   1</code> <code>[ :SENSe ] :POWer :IQ :RANGe :AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:POW :IQ :RANG :AUTO OFF</code> <code>:POW :IQ :RANG :AUTO?</code>
Notes	<code>:POW :IQ :RANG :AUTO</code> is an alternate form of <code>:VOLT :IQ :RANG :AUTO</code> , to maintain consistency with I Range and Q Range, which support both the <b>POWer</b> and <b>VOLTagE</b> forms of the command
Preset	<b>ON</b>
Range	Auto   Man

## I Range

The internal gain range for the I channel when the Input Path is I Only or I and I/Q. Used for both the I and Q channels when the Input Path is I+jQ.

Remote Command	<code>[ :SENSe]:VOLTAge:IQ[:I]:RANGe[:UPPer] &lt;voltage&gt;</code> <code>[ :SENSe]:VOLTAge:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak <code>:VOLT:IQ:RANG 0.5 V</code> <code>:VOLT:IQ:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V
Couplings	When <a href="#">"Q Same as I" on page 2177</a> is On, the <b>I Range</b> value will be copied to <a href="#">"Q Range" on page 2176</a> Changing the value also sets Range = Man
Preset	Complex <b>SPECTrum</b> Measurement: 0.5 V Peak All others: 1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω)   0.5 V Peak (4 dBm @ 50Ω)   0.25 V Peak (-2 dBm @ 50Ω)   0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <I Range>". When Range = Man the annotation is preceded by "#" The I Range is not annotated in Input Path Q Only. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the I Range is 1 V Peak "Rng: 1 V, 0.5 V" the I Range is 1 V Peak and the Q Range is 0.5 V Peak  This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[ :SENSe]:POWer:IQ[:I]:RANGe[:UPPer] &lt;amp;lt;math&gt;P&lt;/math&gt;&gt;</code> <code>[ :SENSe]:POWer:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω <code>:POW:IQ:RANG 4 dBm</code> <code>:POW:IQ:RANG?</code>
Notes	The <b>POWER</b> form of the command is provided for convenience. It maps to the same underlying gain range parameter as the <b>VOLTAge</b> form The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the <b>VOLTAge</b> form of the command. The power values of the 4 range

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:

50 Ω: 10, 4, -2, -8

75 Ω: 8.2, 2.2, -3.8, -9.8

600 Ω: -0.8, -6.8, -12.8, -18.9

Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

## Q Range

The internal gain range for the Q channel. **Q Range** only applies to Input Path Q Only and Ind I/Q. For input I+jQ "[I Range](#)" on page 2174 determines both I and Q channel range settings.

Remote Command	<code>[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] &lt;voltage&gt;</code> <code>[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?</code>
Example	Set the Q Range to 0.5 V Peak: <code>:VOLT:IQ:Q:RANG 0.5 V</code> <code>:VOLT:IQ:Q:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V <b>Q Range</b> is only used for Input Path Q Only and Ind I/Q. For input I+jQ, " <a href="#">I Range</a> " on page 2174 determines both I and Q channel range settings
Couplings	When " <a href="#">Q Same as I</a> " on page 2177 is On, the " <a href="#">I Range</a> " on page 2174 value is copied to <b>Q Range</b> and the range value keys are disabled Changing the value also sets Range = Man
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50Ω)   0.5 V Peak (4 dBm @ 50Ω)   0.25 V Peak (-2 dBm @ 50Ω)   0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <Q Range>". When Range = Man the annotation is preceded by "#" The Q Range is not annotated in Input Path I Only or I+jQ. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the Q Range is 1 V Peak

---

"Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak

This is an alternate form of the command to allow entry as a power.

---

Remote Command	<code>[ :SENSe]:POWer:IQ:Q:RANGe[:UPPer] &lt;amp;gt;</code> <code>[ :SENSe]:POWer:IQ:Q:RANGe[:UPPer]?</code>
Example	Sets the Q Range to 0.5 V Peak when Reference Z is 50 $\Omega$ , and to 1.0 V Peak when Reference Z is 75 $\Omega$ : <code>:POW:IQ:Q:RANG 4 dBm</code> <code>:POW:IQ:Q:RANG?</code>
Notes	The <b>POWer</b> form of the command is provided for convenience. It maps to the same underlying gain range parameter as the <b>VOLTage</b> form of the command The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the <b>VOLTage</b> form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 $\Omega$ : 10, 4, -2, -8 75 $\Omega$ : 8.2, 2.2, -3.8, -9.8 600 $\Omega$ : -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

## Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, **Q Same as I** causes the Q channel range to be mirrored from the I channel. That way, you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time **Q Same as I** is Off, the I and Q channel setups will be identical.

---

Remote Command	<code>[ :SENSe]:VOLTage POWer:IQ:MIRROred OFF   ON   0   1</code> <code>[ :SENSe]:VOLTage POWer:IQ:MIRROred?</code>
Example	Turn off the mirroring of I Range to Q Range <code>:VOLT:IQ:MIRR OFF</code> <code>:POW:IQ:MIRR OFF</code>
Couplings	When <b>ON</b> , the " <b>I Range</b> " on page 2174 value is mirrored (copied) to the " <b>Q Range</b> " on page 2176
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>

### 3.8.4.5 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 2195](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

### Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on ["Preselector Adjust" on page 2182](#) changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in ["Proper Preselector Operation" on page 1394](#).

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command</li> </ul>

---

	is sent in these instruments, accepted without error, and the query always returns 0
	- Grayed-out in the <b>Spectrogram</b> View
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in " <a href="#">Preselector Adjust</a> " on page 2182
Status Bits/OPC dependencies	When centering the preselector, *OPC does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to :READ or :MEASure queries The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

---

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak search to find
2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

### Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "[Presel Center](#)" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram</b> View</li> </ul>
Preset	0 MHz
State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PADJust</code> <code>[ :SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXTERNAL</code> <code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

### Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	:POW:GAIN OFF	
Low Band	:POW:GAIN ON :POW:GAIN:BAND LOW	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	:POW:GAIN ON :POW:GAIN:BAND FULL	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command `[ :SENSe]:POWer[:RF]:GAIN:BAND LOW | FULL`  
`[ :SENSe]:POWer[:RF]:GAIN:BAND?`

Example `:POW:GAIN:BAND LOW`  
`:POW:GAIN:BAND?`

Dependencies Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown  
  
Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E  
If `:POW:GAIN:BAND FULL` is sent when a low band preamp is available, the preamp band parameter is set to `LOW` instead of `FULL`, and an "Option not installed" message is generated

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	Not available when the electronic/soft attenuator is enabled
Preset	<b>LOW</b>
State Saved	Saved in instrument state
Annotation	<p>When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says “Off” if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says “3.6 GHz”. If it is a 13.6 GHz preamp and it is set to Full Range the annotation says “13.6 GHz”</p> <p>When the USB Preamp is connected to USB, the Preamp annotation says “Preamp: USB” if the internal preamp is off or “Preamp: USB, Int” if the internal preamp is on (only for measurements that support the USB preamp)</p>
	Auto Function
Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<b>OFF</b>

## LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

**LNA** is an additional preamplifier that provides superior DANL and frequency range compared to "[Internal Preamp](#)" on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, **LNA** can be turned on *together* with "[Internal Preamp](#)" on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "[More Information](#)" on page 1398

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	<p>Requires Option LNA, except for VXT models M9415A/16A</p> <p>Does not appear in VXT models M9420A/10A/11A</p> <p>M9410E/11E/15E/16E support LNA</p> <p>May not appear in some measurements</p> <p><b>LNA</b> is not available when the electronic/soft attenuator is enabled</p>

Preset	OFF
State Saved	Saved in State

## More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
μW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
μW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be

narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp’s compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 1403
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 1405
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 1405

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH STD   LNPPath   MPBypass   FULL</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH?</code>
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>
Notes	When " <a href="#">Presel Center</a> " on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b>  The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b> . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled  Alignment switching ignores the settings in this menu, and restores them when finished
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing  – The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed

- The **μW Preselector Bypass** selection does not appear unless Option MPB is present and licensed
- The **Full Bypass Enable** selection does not appear unless options LNP and MPB are both present as well as option FBP

In any of these cases, if the required options are not present and the SCPI command is sent, error -241, "Hardware missing; Option not installed" is generated

**Low Noise Path Enable** and **Full Bypass Enable** are grayed-out if the current measurement does not support them

**Low Noise Path Enable** and **Full Bypass Enable** are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"

Preset	Mode	Value
	IQ Analyzer	MPB option present and licensed: <b>MPB</b>
	Pulse	MPB option not present and licensed: <b>STD</b>
	RTSA	
	Avionics	
	All other Modes	<b>STD</b>
	-	

State Saved Save in instrument state

Range Standard Path | Low Noise Path Enable | μW Presel Bypass | Full Bypass Enable

Annotation In the Meas Bar, if the Standard path is chosen:  
 μW Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 μW Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 μW Path: LNP,On  
 If the preselector is bypassed:  
 μW Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 μW Path: FByp,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 μW Path: FByp,On

### μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μW Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type

Measurement	$\mu$ W Path Control Auto behavior
	Rule' is Best Dynamic Range, auto $\mu$ W path is standard
	For other cases, auto $\mu$ W path is preselect bypass if preselect bypass is enabled, auto $\mu$ W path is standard if preselect bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious Emissions	Always Standard Path
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

---

Remote Command `[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON | OFF | 1 | 0`  
`[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?`

---

Example `:POW:MW:PATH:AUTO ON`

	: POW:MW:PATH:AUTO?
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 1400 above
Preset	ON
Range	ON   OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.

Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still

high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around  $-30$  dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

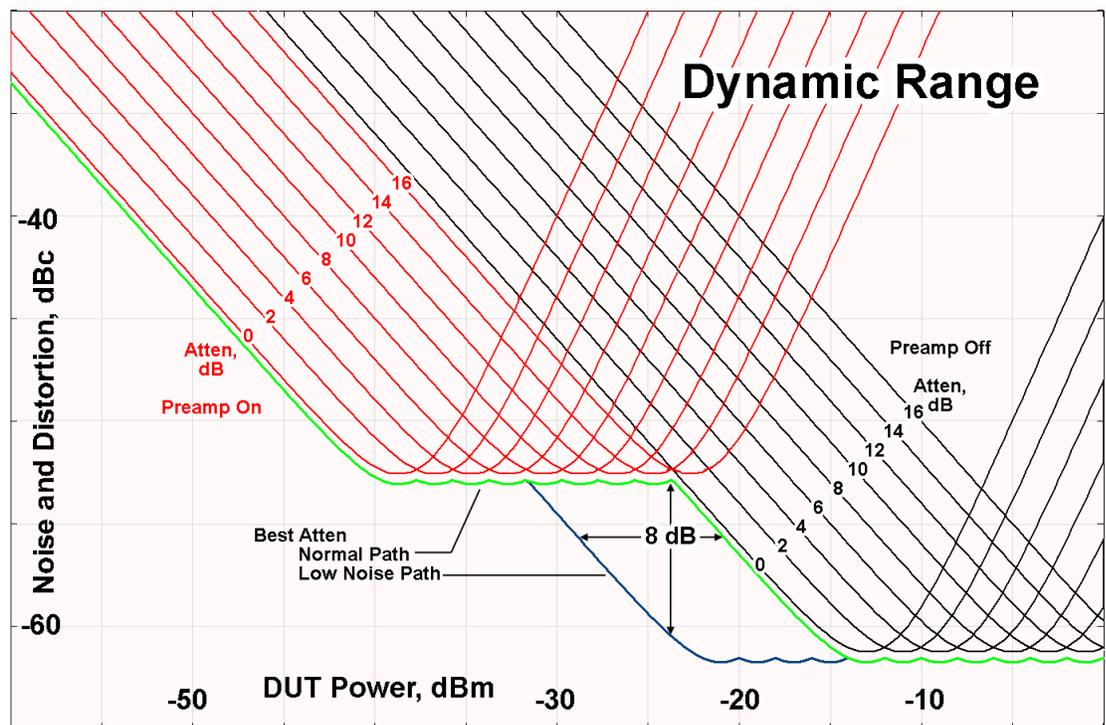

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a

larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **μW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselect is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### **Full Bypass Enable**

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and

- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

**CAUTION**

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

---

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1 [ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender's preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED; Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:STATe 0   1   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:SWPrese1:STAT?</code>
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not

	appear in all measurements
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state
Preset	N9041B <span style="float: right;">OFF</span>
	N9042B+V3050A <span style="float: right;">ON</span>
	M9410A/11A <span style="float: right;">ON</span>
State Saved	Saved in instrument state

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSE]:POWER[:RF]:SWPreSel NORMa1   ADVanced</code> <code>[ :SENSE]:POWER[:RF]:SWPreSel?</code>
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method  Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is “Unavailable unless SW Presel enabled”
Preset	N9041B <span style="float: right;">ADVanced</span>
	N9042B+V3050A <span style="float: right;">NORMa1</span>

---

State Saved      Saved in instrument state

## SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

---

Remote Command    `[ :SENSe]:POWer[:RF]:SWPreSel:BW NORMa1 | NARRow`  
`[ :SENSe]:POWer[:RF]:SWPreSel:BW?`

Example            `:POW:SWPR:BW NARR`

Dependencies      Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method  
  
Grayed-out when "**Software Preselection**" on page 2195 is **OFF**. The grayout message is "Unavailable unless SW Presel enabled"  
  
For N9042B+V3050A, the parameter is SCPI-only, and always set to **NARRow** when **Software Preselection** is enabled

---

Preset	N9041B	<b>NORMa1</b>
	N9042B+V3050A	<b>NARRow</b>

---

State Saved      Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code>  Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code>  Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <a href="#">Prefilter Presets</a> " on page 1411 below
State Saved	Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

### 3.8.5 BW

BW function is not supported in LTE-A Modulation Analysis measurements.

### 3.8.6 Display

The Display key opens the Display Menu, which lets you configure display items for the current Mode, Measurement View or Window.

#### 3.8.6.1 Meas Display

The Meas Display tab contains controls for setting up the display layout. You can select to display up to six windows on the screen with various layout:

- Single layout has one window.
- Stack 2 layout has two windows, one on top of the other.
- Stack 3 layout has three windows that display, top to bottom
- Stack 4 layout has four windows that display, top to bottom
- Stack 6 layout has three windows that display, top to bottom
- Grid 2x2 layout has 4 windows, arranged 2x2. They display (in order top to bottom, left to right)
- Grid 2x3 layout has 2 rows of 3 windows that display all 6 traces in order, top to bottom, then left to right.
- Grid 3x2 layout has 3 rows of 2 windows that display all 6 traces in order, top to bottom, then left to right.

Remote Command	<code>:DISPlay:EVM:WINDow:FORMat SINGLE   TWO   TRI   FOUR   SIX   QUAD   GR2X3   GR3X2</code> <code>:DISPlay:EVM:WINDow:FORMat?</code>
Example	<code>:DISP:EVM:WIND:FORM GR2X3</code> <code>:DISP:EVM:WIND:FORM?</code>
Range	SINGLE TWO TRI FOUR SIX QUAD GR2X3 GR3X2

#### 3.8.6.2 View

Contains controls for selecting the current **View**, and for editing User Views.

## Views

The Modulation Analysis measurement supports up to six views.

Some of these views are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Whenever the View changes, the default menu is Frequency, unless otherwise specified in the View description.

Remote Command	<code>:DISPlay:EVM:VIEW:PRESet BASic   SUMMary   RBSLot   SUBCarrier   MIMO   CROSS</code>
Example	<code>:DISP:EVM:VIEW:PRES BAS</code> sets the Basic view <code>:DISP:EVM:VIEW:PRES SUMM</code> sets the summary view <code>:DISP:EVM:VIEW:PRES RBSL</code> sets the RB Slot view <code>:DISP:EVM:VIEW:PRES SUBC</code> sets the Subcarrier view <code>:DISP:EVM:VIEW:PRES CROS</code> sets the Cross Carrier Summary view <code>:DISP:EVM:VIEW:PRES MIMO</code> sets the MIMO view
Preset	Basic
State Saved	Saved in instrument state

## User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect &lt;alphanumeric&gt;</code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA</p>

measurement, you send:

```
:DISP:VIEW:ADV:SEL "Trace Zoom"
```

because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu

You *cannot* use the legacy View parameter (which in this case would be **TZOOM**) with

```
:DISP:VIEW:ADV:SEL
```

<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:

```
:DISP:VIEW:ADV:SEL "Trace Zoom"
```

```
:DISP:VIEW:ADV:SEL "TRACE ZOOM"
```

If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name <alphanumeric> does not exist"

If the display is disabled (via **:DISP:ENAB OFF**) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated

Backwards Compatibility SCPI	The legacy node <b>:DISPlay:VIEW[:SElect]</b> is retained for backwards compatibility, but it only supports predefined views
------------------------------	--

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a "User View".

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<b>:DISPlay:VIEW:ADVanced:NAME &lt;alphanumeric&gt;</b>
Example	<b>:DISP:VIEW:ADV:NAME "Baseband"</b> Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View
Notes	<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <alphanumeric> name already exists as a View, the error message "-224, Illegal parameter value; View <alphanumeric> already exists" is generated If the display is disabled (via <b>:DISP:ENAB OFF</b> ) then the error message "-221, Settings conflict; User View SCPI cannot be used while Display is disabled" is generated

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View's name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> is not present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p>

---

If the display is disabled (via `:DISP:ENAB OFF`) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated

## Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
----------------	--

---

Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
---------	-------------------------------------

---

Notes	Disabled if there are no User Views
-------	-------------------------------------

## View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

### View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
----------------	--

---

Example	<code>:DISP:VIEW:ADV:CAT?</code>
---------	----------------------------------

---

Notes	Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement
-------	--

Example:

`"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"`

No distinction is made between Predefined and User Views

If you switch measurements with the display disabled (via `:DISP:ENAB OFF`), then query the list of available Views, the result is undefined

### User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	Returns a quoted string of the available User Views for the current measurement, separated by commas. Example: <code>"Baseband,myView1,yourView1"</code> If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a> ), then query the list of available Views, the result is undefined

### 3.8.6.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

### Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<code>ON</code>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the <code>WINDow</code> , <code>TRACe</code> and <code>GRID</code> parameters are ignored

### Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b>  This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state

## Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b>

	This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	:DISPlay:VIEW:ADVanced:SElect
Rename User View	:DISPlay:VIEW:ADVanced:REName
Delete User View	:DISPlay:VIEW:ADVanced:DElete
Create User View	:DISPlay:VIEW:ADVanced:NAME
Select Screen	:INSTrument:SCReen:SElect
Delete Screen	:INSTrument:SCReen:DElete
Delete All But This Screen	:INSTrument:SCReen:DElete:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISPlay:ENABle OFF   ON   0   1 :DISPlay:ENABle?
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON, but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON Set by :SYST:DEF MISC, but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABle as it did in legacy analyzers

### 3.8.7 Frequency

The Freq key opens the Frequency menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the Frequency menu are the same for all measurements in the current Mode - they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements - it does not change as you change measurements.

### 3.8.7.1 Settings

The Settings Tab contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

#### Carrier Reference Frequency

The parameter is set the reference frequency of all the carriers. The center frequencies of carriers are defined as offset frequency from this value.

If the following conditions are satisfied at the same time:

- the Number of Component Carrier equals to 1
- the Center Freq Offset equals to 0 Hz
- the mode of the Center Freq is Auto

the Center Freq is equivalent to Carrier Ref Freq.

When the Center Freq changes in such conditions, the mode of the Center Freq keeps as Auto and the Carrier Ref Freq is changed to same value. The major purpose of this coupling is to keep BWCC with legacy LTE/LTE TDD, in which :SENSe:FREQuency:CENTer sets the Frequency of the measurement.

Remote Command	<code>[ :SENSe]:CCARrier:REFeRence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFeRence?</code>
Example	<code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code>
Preset	1GHz
State Saved	Saved in instrument state
Min	Depends on instrument minimum center frequency Same as Center Frequency
Max	Depends on instrument maximum center frequency Same as Center Frequency

### 3.8.8 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is

set to Normal and placed it at the center of the screen on the trace determined by the Marker Trace rules.

For more detailed information on the types of Markers and the interaction between Markers, see the Marker section of the Swept SA measurement.

### 3.8.8.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker is affected when you change marker settings, perform a Peak Search, and so on.

The Select Marker control appears above the menu panel, indicating that it applies to all controls in the Marker menu panels. Select Marker is blanked if you select a tab whose controls do not depend on the selected marker (such as, Counter).

On any menu tab for which Select Marker displays, the first control is always Marker Frequency|Time.

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	Saved in instrument state
Range	Marker 1   Marker 2   Marker 3   Marker 4   Marker 5   Marker 6   Marker 7   Marker 8   Marker 9   Marker 10   Marker 11   Marker 12
Annunciation	Appears in the marker results block label for <b>Normal</b> and <b>Delta</b> markers

### 3.8.8.2 Markers

The controls on the Markers tab include the Marker active function and a radio button selection of the marker control mode (Normal, Delta, Fixed, or Off) for the selected marker, as well as additional functions that help you use markers.

#### Marker X

Set the X Axis value of the selected marker in the current X Axis Scale unit. If the marker mode is off, the SCPI command has no affect other than to cause the marker to become selected. Note that the X value can change if the marker is moved to a trace with a different domain.

The Marker X position is absolute if the marker mode is Normal or Fixed. If the mode is Delta, then the X position is relative to the reference marker. The valid X positions are the actual data points in the trace; the marker cannot be located between points. If a SCPI command attempts to place the marker between two points, the X value snaps to the closest point.

Note that for Vector or Constellation format, the X axis is perpendicular to the screen (because the screen axes are used to show the real and imaginary parts of the Y value), so adjusting the X value in this case only causes the marker to move horizontally if the real Y value changes. For Fixed markers on a trace with one of these formats, adjusting the X value does not cause horizontal motion of the marker at all. Instead, use the Marker Y and Marker Y (imag) controls to move the marker horizontally and vertically.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:X &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:EVM:MARK:X 0.325</code> <code>:CALC:EVM:MARK:X?</code>
Notes	Marker X does not go outside the bounds of the data unless it is Fixed. If you attempt to set it to a value outside the bounds, it is clipped at the closest limit and error -222 Data Out of Range is generated If suffix is sent, it must match the X units for the trace the marker is on. Otherwise, error -138, "Suffix not allowed" is generated If you try to read or set the position of a Delta marker, remember that the position is in relative units
Couplings	See <a href="#">"Couple Markers" on page 1429</a> , <a href="#">"Couple Markers" on page 1429</a> for Coupling of Delta and Reference Markers
Preset	None until marker is turned on
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data

### SCPI only X position commands

Via SCPI, the marker position can also be set or queried in trace points. In this case, the position setting or reading is absolute regardless of control mode.

**NOTE**

The entered value in Trace Points is immediately translated into the current domain units for setting the value of the marker. The marker's value in domain units, NOT trace points, is preserved if a change is made to the X Axis scale settings. Thus, if you use this command to place a marker on point 500, which happens at that time to correspond to 13 GHz, and then you change the Start Frequency so that point 500 is no longer 13 GHz, the marker stays at 13 GHz, NOT at point 500.

If the trace the marker is on has a 2-dimensional domain, then the points are numbered in the following way:

Starting at the minimum X and Z position, this point is numbered 0. Each time you increment the point number, increment the X value to the next available value. When X reaches the maximum X position, then reset X to the minimum and

increment the Z value. Then continue incrementing the X position in the same manner as before.

Note that for symbol tables, which have no axes, incrementing the X position in points moves the marker consecutively through all table entries.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12[:X]:POSition &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12[:X]:POSition?</code>
Example	<code>:CALC:EVM:MARK:POS 25</code> <code>:CALC:EVM:MARK:POS?</code>
Notes	When a marker mode is changed from off to any other mode, the X position is set to mid-screen
Preset	None until marker is turned on
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data
	Marker X Unit can be queried via SCPI
Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:X:UNIT?</code>
Example	<code>:CALC:EVM:MARK:X:UNIT?</code>
Notes	SCPI Query Only

## Marker Z

Set the selected markers Z Axis value in the current Z Axis Scale unit for markers on traces with a 2-dimensional domain. In each case the marker that is addressed becomes the selected marker. It has no affect (other than to cause the marker to become selected) if the control mode is **Off** or if the trace has no Z domain. Note that the Z value can change or become irrelevant if the marker is moved to a trace with a different Z domain or no Z domain.

Note that this Z value is affected if the SCPI command to set marker point position is used.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Z &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:Z?</code>
Example	<code>:CALC:EVM:MARK:Z 12</code> <code>:CALC:EVM:MARK:Z?</code>
Notes	Marker Z does not go outside the bounds of the data unless it is Fixed. If you attempt to set it to a value outside the bounds it is clipped at the closest limit, and error -222 Data Out of Range is generated If suffix is sent, it must match the Z units for the trace the marker is on. Otherwise, error -138, "Suffix not allowed" is generated
Couplings	See <a href="#">"Couple Markers" on page 1429</a> , <a href="#">"Couple Markers" on page 1429</a> for Coupling of Delta and Reference Markers

Preset	None until marker is turned on
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data
	Marker Z Unit can be queried via SCPI only.
Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Z:UNIT?</code>
Example	<code>:CALC:EVM:MARK:Z:UNIT?</code>
Notes	SCPI Query Only

## Marker Y

Enables you to set or read back the selected marker's Y Axis value in the current Y Axis Scale unit. Setting the Y value has no affect (other than to cause the marker to become selected) if the control mode is other than fixed. The query form generates an error if the control mode is Off. Note that the Y value can change if the Y-axis units change, either from a change in format of the trace the marker is on or if the marker is moved to a different trace.

If the selected marker is on a trace that is displayed with Vector or Constellation format, this function controls only the real part of the Y value (i.e., the horizontal axis value). Use the Marker Y (imag) control to change the imaginary (vertical) value. Marker Y and Marker Y Imag always set or get the rectangular form of Y, regardless of whether the marker readout is polar or rectangular.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y[:REAL] &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y[:REAL]?</code>
Example	<code>:CALC:EVM:MARK2:Y 0.325</code> <code>:CALC:EVM:MARK2:Y?</code>
Notes	You cannot set Y unless the marker type is fixed. If the marker becomes fixed after a marker function is turned on, it is set to whatever the Y value was when the marker became fixed If suffix is sent, it must match the Y units for the trace the marker is on. Otherwise, error, "Suffix not allowed" is generated
Couplings	See <a href="#">"Couple Markers" on page 1429</a> , <a href="#">"Couple Markers" on page 1429</a> for Coupling of Delta and Reference Markers
Preset	None until marker is turned on
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data
	Marker Y Unit can be queried via SCPI.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y:UNIT?</code>
Example	<code>:CALC:EVM:MARK:Y:UNIT?</code>
Notes	SCPI Query Only

## Marker Y Imag

Enables you to set or read back the selected marker's quadrature (imaginary) Y value in the current Y Axis Scale unit. It has no affect (other than to cause the marker to become selected) if the control mode is other than fixed or if the current trace format is not complex (Vector or Constellation). The query form generates an error if it is used for a marker that is not on a complex trace. Marker Y Imag is not affected by whether the marker readout is polar or rectangular.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y:IMAGinary &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:Y:IMAGinary?</code>
Example	<code>:CALC:EVM:MARK2:Y:IMAG 0.425</code> <code>:CALC:EVM:MARK2:Y:IMAG?</code>
Notes	Grayed out unless the marker is fixed and on a vector display If suffix is sent, it must match the Y units for the trace the marker is on. Otherwise, an Invalid Suffix error is generated. Otherwise, error, "Suffix not allowed" is generated If query is sent while the marker is on a trace whose format is not vector or constellation, NaN (9.91E+37) is returned
Couplings	See <a href="#">"Couple Markers" on page 1429</a> , <a href="#">"Couple Markers" on page 1429</a> for Coupling of Delta and Reference Markers
Preset	None until marker is turned on
State Saved	Yes
Min	Depends on trace data
Max	Depends on trace data

## Marker Mode

There are four control modes for markers:

- Normal (POSition) - A marker that can be moved to any point on the X Axis by specifying its X Axis value, and whose absolute Y Axis value is then the value of the trace point at that X Axis value.
- Delta (DELTa) - A marker that can be moved to any point on the X Axis by specifying its X Axis offset from a reference marker, and whose absolute Y Axis value is then the value of the trace point at that X Axis value.

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

- Fixed (FIXed) - A marker whose X Axis and Y Axis values may be directly or indirectly specified by you, but whose Y Axis value remains fixed, once specified, and does not follow the trace. Fixed markers are useful as reference markers for Delta markers, as operands in a Peak Search operation, and as arbitrary reference points settable by you. These markers are represented on the display by an “X” rather than a diamond. Not every measurement supports Fixed markers.
- Off (OFF) - A marker which is not in use.

The SCPI command in the table below selects the marker and sets the marker control mode as described under **Normal**, **Delta**, **Fixed** and **Off**, below. All interactions and dependencies detailed under the control description are enforced when the remote command is sent.

See "[More Information](#)" on page 1428.

Remote Command	<code>:CALCulate:MARKer[1] 2 ... 12:MODE POSition   DELTa   FIXed   OFF</code> <code>:CALCulate:MARKer[1] 2 ... 12:MODE?</code>
Notes	Upon receipt of this command, for any parameter but <b>Off</b> , if the selected marker was <b>Off</b> , it is set to the specified mode and placed at the center of the screen on the trace specified by the marker's Trace attribute
Couplings	The marker addressed by this command becomes the selected marker on the front panel
Preset	OFF (all markers)
State Saved	The marker control mode (Normal, Delta, Fixed, Off) and X Axis value are saved in instrument state
Annunciation	Annunciation in the marker result block in the upper-right corner of the display indicates the X Axis value and Y-axis result of the marker
Backwards Compatibility SCPI	<code>:CALCulate:MARKer[1] 2 ... 12:STATe ON   1</code> Setting a marker which is OFF to ON or 1 selects the marker, puts it in Normal mode and places it at the center of the screen Setting a marker which is not OFF to ON has no effect (does not change its control mode) Example: CALC:MARK2:STAT ON sets Marker 2 to Normal if it was off; otherwise it does nothing The response to the query is ON unless the marker is OFF <code>:CALCulate:MARKer[1] 2 ... 12:MODE SPAN   BAND</code> To support band function backwards compatibility, both of these legacy parameters are accepted and aliased to POSition. They are never returned to a query. See " <a href="#">Band Function</a> " on page 1437" <a href="#">Band Function</a> " on page 1437 for more information
Backwards Compatibility Notes	In legacy analyzers, only a Reference marker could be Fixed, and it was always Fixed. Additionally it could not be moved. In the X-Series, any marker can be set to Fixed and can be moved to any X or Y value In pre X-Series analyzers, pressing Delta (or sending the CALC:MARK:MODE:DELTA command) always moved the reference marker to the delta marker. Now it only does so if the marker was already a delta marker

Remote Command	<code>:CALCulate:MARKer[1] 2 ... 12:STATE OFF   ON   0   1</code> <code>:CALCulate:MARKer[1] 2 ... 12:STATE?</code>
Preset	OFF

## More Information

Value	Example	Notes
Normal	CALC:MARK2:MODE POS	<b>A Normal</b> marker can be moved to any point on the X Axis by specifying its X Axis value. Its absolute Y Axis value is then the value of the trace point at that X Axis value
Delta	:CALC:MARK2:MODE DELT	In Delta mode the marker result shows the relative result between the selected (Delta) marker and its reference marker. A delta marker can be moved to any point on the X Axis by specifying its X Axis offset from a reference marker. Its absolute Y Axis value is then the value of the trace point at that X Axis value
Fixed	:CALC:MARK2:MODE FIX	A fixed marker is fixed in the sense that it stays where you place it. It can be directly moved in both X and Y. It can be moved with a Peak Search. It can also be indirectly moved by re-zeroing the delta if it is a relative marker. If it is moved, it again becomes fixed at the X Axis point it moved to and it has a Y-axis result that it took on when it moved there. If a Normal or Delta marker is changed to Fixed it becomes fixed at the X Axis point it was at, and with the Y-axis result it had when it was set to Fixed  In Fixed mode the marker result shows: <ul style="list-style-type: none"> <li>- If no Marker Function is on, the absolute X Axis and Y axis value of the marker</li> <li>- If a Marker Function is on, the X Axis value and the Y-axis function result the marker had when it became fixed</li> </ul>
Off	:CALC:MARK2:MODE OFF	Off turns off the marker, removes the marker annunciation from the display, turns off any active function and any marker function, and resets the following properties to their default value: <ul style="list-style-type: none"> <li>- X Axis scale: Auto</li> <li>- Band Span: 0</li> <li>- Auto Trace: On</li> </ul> <b>Off</b> does not affect which marker is selected

### Delta Marker (Reset Delta)

Pressing this button is exactly the same as pressing the “Delta” selection on the Marker Mode radio button. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

#### 3.8.8.3 Settings

The controls on the Settings tab include the Marker active function and a radio button selection of the marker control mode (Normal, Delta, or Off) for the selected marker, as well as additional functions that help you use markers.

### Marker X

The Marker Xcontrol is the fundamental control that you use to move a marker around on the trace. This is the same as ["Marker X" on page 1422](#) on the Markers tab.

### Marker Settings Diagram

The Marker Settings Diagram lets you configure the Marker system using a visual utility.

### All Markers Off

Turns off all markers.

---

Remote Command	:CALCulate:RHO:MARKer:AOff
----------------	----------------------------

---

Example	:CALC:RHO:MARK:AOff
---------	---------------------

### Couple Markers

When this function is On, moving any marker causes an equal X Axis movement of every other marker which is not Fixed or Off. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

Note that Fixed markers do not couple. They stay where they were while all the other markers move. Of course, if a Fixed marker is being moved, all the non-fixed markers do move with it.

This may result in markers going off screen.

Remote Command	:CALCulate:EVM:MARKer:COUPlE[:STATe] ON   OFF   1   0 :CALCulate:EVM:MARKer:COUPlE[:STATe]?
Example	:CALC:EVM:MARK:COUP ON :CALC:EVM:MARK:COUP?
Notes	In general, when coupling is turned on then all Normal or Delta markers with the same (or equivalent) domain as the selected marker move in the same manner as the selected marker. See <a href="#">"More Information" on page 1430</a>
Preset	OFF, presets on Mode Preset and All Markers Off
State Saved	Saved in instrument state

## More Information

Coupling is relative between markers on the same trace (so that their relative positions in the domain are maintained). Coupling can be absolute between markers on different traces that have equivalent domains. That is, they have the same position in the domain, if possible. (As an example of equivalent domains, demodulated symbol positions can be derived from time by using the current symbol rate). When you move the selected marker, then others on related traces track it. This enables you to correlate different measurement results. For example, you can place a marker at a particular symbol time on an error vector magnitude display, have tracking markers on the symbol table and pre-demod time trace showing you the symbol value, and the actual time-varying signal value at the same point in time.

Absolute coupling is performed only for the lowest numbered Normal or Delta marker on each trace. All other markers on a trace couple relatively. When you turn on marker coupling, the subset of markers that have the same domain as the selected marker track it and all other markers remain at their current location. The absolutely coupled markers within this subset is moved at this time to match the domain setting of the selected marker, with the relatively coupled markers following accordingly to maintain offsets within their respective traces. Those markers with different domains remain at their current location. When you select a marker with a different domain than the previously selected marker, the subset of markers with that domain go through the same procedure.

Any marker that coupling would move outside its range of X values, remains at the closest limiting value. If the coupled markers are on data that do not have the same domain resolution, then they are positioned as close to each other as possible.

If markers change mode or trace, or trace data is changed below them, the coupling rules are immediately applied to the new set.

### 3.8.8.4 Peak Search

The controls on the Peak Search tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

**NOTE**

Pressing the Peak Search hardkey automatically moves you to the Peak Search page of the Marker menu AND performs a Peak Search.

Pressing the Peak Search tab once you are already IN the Marker menu does NOT perform a Peak Search.

---

### Marker X

The Marker X control is the fundamental control that you use to move a marker around on the trace. This is the same as "Marker X" on page 1422 on the Markers tab.

### Peak Search

Pressing the Peak Search control moves the selected marker to the trace point which has the maximum y-axis value for that marker's trace.

**NOTE**

Pressing the Peak Search hardkey automatically moves you to the Peak Search page of the Marker menu AND performs a Peak Search.

---

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum</code>
----------------	--

---

Example	<code>:CALC:EVM:MARK2:MAX</code> <code>:SYST:ERR?</code>
---------	---

can be used to query the errors to determine if a peak is found. The message "No peak found" (-200) is returned after an unsuccessful search

---

Notes	Sending this command selects the subcoded marker
-------	--

This command does not work when the selected marker is located on the polar trace. In this case, the command is ignored.

### Next Peak (Next Lower Amp)

Pressing Next Peak moves the selected marker to the peak that is next lower in amplitude than the current marker value. Only peaks which meet all enabled peak

criteria are considered. If there is no valid peak lower than the current marker position, a “No peak found” message is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum:NEXT</code>
Example	<code>:CALC:EVM:MARK2:MAX:NEXT</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Next Higher Amplitude

Moves the marker to the peak next higher in Y value than the peak it is currently on. If the format is complex (vector or constellation) then the marker moves to the closest point that has a higher magnitude than the marker's current position. If this function is invoked via SCPI on a marker that is off, the result is the same as if you sent a Peak Search command.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum:PREVIOUS</code>
Example	<code>:CALC:EVM:MARK2:MAX:PREV</code>

### Next Pk Right

Pressing Next Pk Right moves the selected marker to the nearest peak right of the current marker that meets all enabled peak criteria. If there is no valid peak to the right of the current marker position, a “No peak found” message is generated and the marker is not moved. If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Pressing this control moves the selected marker to the nearest active channel right of the current marker when Marker Trace is Code Domain Power. In other cases, pressing this control moves the selected marker to the highest peak right of the current marker.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum:RIGHT</code>
Example	<code>:CALC:EVM:MARK2:MAX:RIGH</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Next Pk Left

Pressing Next Pk Left moves the selected marker to the nearest peak left of the current marker that meets all enabled peak criteria. If there is no valid peak to the

left of the current marker position, a “No peak found” message is generated and the marker is not moved. If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Pressing this control moves the selected marker to the nearest active channel left of the current marker when Marker Trace is Code Domain Power. In other cases, moves the selected marker to the highest peak left of the current marker.

Remote Command	:CALCulate:EVM:MARKer[1] 2 ... 12:MAXimum:LEFT
Example	:CALC:EVM:MARK2:MAX:LEFT
State Saved	Not part of saved state

### Minimum Peak

Moves the selected marker to the minimum y-axis value on the current trace. Minimum (negative) peak searches do not have to meet the peak search criteria. It just looks for the lowest y-axis value. If the selected marker is Off, it is turned on before the minimum search is performed.

Remote Command	:CALCulate:EVM:MARKer[1] 2 ... 12:MINimum
Example	:CALC:EVM:MARK:MIN
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Mkr->CF

Assigns the selected marker's frequency to the Center Frequency setting.

The control is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and marker to CF without having to access two separate menus.

### Mkr->Ref Lvl

Assigns the selected marker's level to the Reference Level setting. See the Section ["Marker To" on page 1443](#) for the description of this function. The control is duplicated here in the Peak Search Menu to allow you to conveniently perform a peak search and marker to RL without having to access two separate menus.

### Continuous Peak Search

Sets Continuous Peak Search to On or Off. When Continuous Peak Search is set to On, a peak search is automatically performed for the selected marker after each

sweep. The rules for finding the peak are exactly the same as for **Peak Search**, including the peak criteria rules. If no valid peak is found, warning -200.2020 is generated after each sweep. If a valid peak is found, message 0.1400 is displayed after each sweep.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:CPSearch[:STATe] ON   OFF   1   0</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:CPSearch[:STATe]?</code>
Example	<code>:CALC:EVM:MARK1:CPS ON</code>
Notes	It is possible to have Couple Markers and Continuous Peak Search both on. If this is the case, it is recommended that Continuous Peak search be turned on for only one marker in any tracking set (that is, any set of markers with the same or equivalent domain). Otherwise, conflicts over marker position can cause that cause erratic marker movement
Couplings	The Continuous Peak Search key is grayed out when the selected marker is a <b>Fixed</b> marker. Also, if Continuous Peak Search is on and the selected marker becomes a fixed marker, then Continuous Peak Search is turned off and the key grayed out. Continuous Peak Search is turned off when the selected marker is turned off
Preset	OFF
State Saved	Yes
Range	Off On

### 3.8.8.5 Properties

The controls on the Properties tab are used to set certain properties of the selected marker.

#### Marker X

The Marker X control is the fundamental control that you use to move a marker around on the trace. This is the same as "**Marker X**" on page 1422 on the Markers tab.

#### Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:REference &lt;integer&gt;</code>
----------------	--

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:REFerence?</code>
Example	<code>:CALC:EVM:MARK:REF 5</code> <code>:CALC:EVM:MARK:REF?</code>
Notes	This command causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself." When queried a single value is returned (the specified marker numbers relative marker)
Couplings	If the reference marker is off it is turned on in <b>Normal</b> mode at the delta marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using <b>Restore Mode Defaults</b> . This is not reset by <b>Marker Off</b> , <b>All Markers Off</b> , or <b>Preset</b>
State Saved	Saved in instrument state Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a <b>Delta</b> marker

### Complex Format

Determine the format for the readout when a marker is placed on a complex display (vector or constellation). The choices are to read out in rectangular or polar coordinates. The readout format applies to the marker display and marker table only; there is no SCPI for reading out the marker value in polar form.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:CFORmat RECTangular   POLar</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:CFORmat?</code>
Example	<code>:CALC:EVM:MARK1:CFOR RECT</code> <code>:CALC:EVM:MARK1:CFOR?</code>
Preset	RECT
State Saved	Yes
Range	Rect Polar

### Marker Window

Enables you to determine the window to which a marker is assigned. By default, when a marker is turned on it is assigned to the currently selected window. You can change that assignment using this control.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:WINDow &lt;integer&gt;</code>
Example	<code>:CALC:VECT:MARK3:WIND 2</code> <code>:CALC:VECT:MARK3:WIND?</code>
Preset	1
State Saved	Yes
Range	Window 1  Window 2  Window 3  Window 4  Window 5  Window 6  Window 7  Window 8  Window 9
Min	1
Max	9
Backwards Compatibility SCPI	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:TRACe &lt;integer&gt;</code> <code>:In order to coordinate with window-adressing principle, changing the TRACe node to WINDow</code>

## Marker Count

Enable the frequency counter algorithm on the selected marker. This algorithm can more precisely determine the frequency of a peak. The marker must be on a frequency domain trace, with data coming from hardware. Place the marker on a peak and enable the frequency counter. The marker readout then shows the calculated frequency rather than the marker X position. Only one marker can be counted at any time. Turning on marker count for any marker turns it off for all other markers.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FCOunt[:STATe] OFF   ON   0   1</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FCOunt[:STATe]?</code>
Example	<code>:CALC:EVM:MARK:FCO ON</code> <code>:CALC:EVM:MARK:FCO?</code>
Notes	Marker must be on a frequency-domain trace and data must be live, not recorded or simulated
Preset	OFF
State Saved	Yes
Range	Off On
	The frequency counter result must be read back with the following SCPI command. The Marker X query command only gets the marker's data point position, which is not as accurate as the frequency counter result.
Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FCOunt:X?</code>
Example	<code>:CALC:EVM:MARK:FCO:X?</code>
Notes	Query only. If the marker counter result is unavailable, NaN is returned

### 3.8.8.6 Marker Function

The controls on the Marker Function tab allow you to control the Marker Functions of the instrument. Marker Functions perform post-processing operations on marker data.

#### Band Center

Enable you to define the center of the band. That is, it enables you to adjust the marker position in absolute units (regardless of whether the marker mode is Normal or Delta).

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:CENTer &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:CENTer?</code>
Example	<code>:CALC:EVM:MARK2:FUNC:BAND:CENT 1.23E+09</code> <code>:CALC:EVM:MARK2:FUNC:BAND:CENT?</code>
Preset	Center of screen
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

#### Band Function

Sets the marker control function type to one of the following:

- NOISe: Marker Noise
- BPOWer: Band Power
- BDENsity: Band Density
- OFF: Marker Function Off

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION BPOWer   BDENsity   OFF</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION?</code>
Example	<code>:CALC:EVM:MARK:FUNC BPOW</code> <code>:CALC:EVM:MARK:FUNC?</code>
Preset	OFF
State Saved	Yes
Range	Band Power Band Density Marker Function Off
Annotation	Mkr # <X value> and <Marker value> upper right on graph

## Band Span

Set the width of the span for the selected marker. This function defines the span of frequencies or time. The marker position does not change when you adjust the span.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:SPAN &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:SPAN?</code>
Example	<code>:CALC:EVM:MARK2:FUNC:BAND:SPAN 1.23E+06</code> <code>:CALC:EVM:MARK2:FUNC:BAND:SPAN?</code>
Preset	When marker turned on, 1/20th of current span or displayed time length
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

## Band Left

Enable you to adjust the left side of the band. In order to remain centered in the band, the marker position must also change as you change the left edge. The right edge is unaffected.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:LEFT &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:LEFT?</code>
Example	<code>:CALC:EVM:MARK2:FUNC:BAND:LEFT 1.23E+06</code> <code>:CALC:EVM:MARK2:FUNC:BAND:LEFT?</code>
Couplings	Changes marker X to keep the marker centered in the band
Preset	When marker turned on, 1/40th of current span or displayed time length left of the marker position
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

## Band Right

Enable you to adjust the right side of the band. In order to remain centered in the band, the marker position must also change as you change the right edge. The left edge is unaffected.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:RIGHT &lt;real&gt;</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCTION:BAND:RIGHT?</code>
Example	<code>:CALC:EVM:MARK2:FUNC:BAND:RIGHT 1.23E+06</code>

	<code>:CALC:EVM:MARK2:FUNC:BAND:RIGHT?</code>
Couplings	Changes marker X to keep the marker centered in the band
Preset	When marker turned on, 1/40 <sup>th</sup> of current span or displayed time length right of the marker position
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

## Calc Power

Turn on the Band/Interval Power function for the selected marker. This function calculates the power within the band centered on the marker. The function works generally with frequency spectra, PSD, and time traces. On traces where band power is undefined, the result display shows "---" and `CALC:<meas>:MARK[n]:Y?` returns 9.91E+37 (NaN), although the band interval can still be defined.

## Frequency-domain data

If the marker is on a frequency-domain trace, the result is total power within the band. This is true whether the underlying trace data is a power spectrum or power spectral density.

## Time-domain data

If the marker is on a time-domain trace, the result is average power within the time interval, that is, the power at each time sample in the time interval is calculated, the powers are summed and the total divided by the number of samples.

The band power results can be shown in dBm, dBVrms, Watts, Volts RMS Squared or Volts RMS.

The detailed description sees "[More Information](#)" on page 1442.

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCtion:BPOwer:CTYPe MEAN   RMS</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNCtion:BPOwer:CTYPe?</code>
Example	<code>:CALC:EVM:MARK1:FUNC:BPOW:CTYP MEAN</code> <code>:CALC:EVM:MARK1:FUNC:BPOW:CTYP?</code>
Preset	MEAN
State Saved	Yes
Range	Mean RMS

## More Information

When the band power calculation type is set to Mean, the display units is determined on the current format and Y units of the trace .

Trace data type	Trace Format	Y Unit	Result format
Spectrum, PSD, Time record	LogMag (dB)	Auto, Power	dBm
		Peak, RMS mRMS	dBVrms dBmVrms
		Auto, Peak, RMS, mRMS	Vrms^2
	Linear Mag, Real, Imag, Log Mag (lin)	Power	W
		Wrap Phase, Unwrap Phase, Delay	Vrms^2
		Vector, Constellation, Eye, Trellis	blanked
Dimensionless (e.g., Frequency response, Impulse response, various Demodulation error types)	LogMag (dB)	Any	dBrms
	Linear Mag, Real, Imag, Wrap Phase, Unwrap Phase, Delay, Log Mag (lin)	Any	rms^2
General dimensions(e.g., Hz, %)	LogMag (dB)	Any	dB<unit>rms
	Linear Mag, Real, Imag, Wrap Phase, Unwrap Phase, Delay, Log Mag (lin)	Any	<unit>rms^2

If the band power calculation type is set to **RMS**, then the readout unit does not depend on trace format or Y unit. For Spectrums, PS, and Time record traces, the displayed unit is “Vrms”. For general units, the unit abbreviation is shown followed by “rms”.

The Band Power Calculation only controls the readout format for Normal and Fixed markers.

As For Delta markers, when either a Delta marker or its reference has a band power function turned on, the Delta marker readout always shows a ratio calculation. This enables you to perform common calculations like carrier to noise ratio or adjacent channel power ratio. The form of the ratio depends on the main marker function calculation type (Mean or RMS). If the main marker function calculation type is Mean, then when you change the marker to Delta the result is a power ratio. If the

main marker function calculation type is RMS, then the Delta marker result is a voltage ratio. (If the main marker band power function is off, then the form of the ratio depends on the reference marker calculation type: If it is Mean you get a power ratio and if it is RMS you get a voltage ratio.)

For example, if the main marker function is Band/Interval Power with a calculation type of Mean and the reference marker function is Band/Interval Power with a calculation type of RMS, then the Delta marker shows the ratio of the main marker "Band/Interval Power Mean" value to the reference marker "Band/Interval Power Mean" (not RMS) value.

A dimensionless ratio (for example, Volt/Volt or Watt/Watt) is shown with units of "x". The marker function calculation type indicates whether the ratio is voltage or power (see above). A dimensionless power ratio is shown with units of dB if the trace format is Log Mag (dB).

If the reference marker function is Band/Interval Density and the main marker is either Band/Interval Power or its function is turned off, then the ratio is not dimensionless, but has units of Hz (or dB-Hz) for power calculations or rHz for voltage calculations. When the main marker function is Band/Interval Density and the reference is either Band/interval Power or its function is off, the units are /Hz (or dB/Hz) for power calculations or /rHz for voltage calculations.

## Calc Density

Turn on the Band/Interval Density function for the selected marker. If the selected marker is off, it is turned on in **Normal** marker mode and is located at the center of the screen.

If **Band/Interval Density** is selected while in the **Marker Function Off** state, the **Band Span** or **Interval Span** is initialized to 5% of the screen width.

If the detector mode for the detector on the marker's trace is set to Auto, the average detector is selected. If the Average type is set to Auto, Power Averaging is selected. Other choices for the detector or Average type usually cause measurement inaccuracy.

Calculates the average power density within the band centered on the marker. The function works generally with frequency spectra, PSD, and time traces. On traces where band power cannot reasonably be defined, the result display shows "---" and CALC:<meas>:MARK[n]:Y? returns NaN (9.91E+37), although the band interval can still be defined.

## Frequency-domain data

If the marker is on a frequency-domain trace, the result is the band power (as computed above) which divided by the bandwidth over which it is measured. This is

true whether the underlying trace data is a power spectrum or power spectral density.

## Time-domain data

If the marker is on a time-domain trace, the result is average power within the time interval (as computed above) divided by the equivalent noise bandwidth of the span.

A band/interval density calculation result can be shown in dBm/Hz, Volts RMS Squared, or Volts RMS. The detailed description sees ["More Information" on page 1442](#).

Remote Command	<code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNction:BDENsity:CTYPe MEAN   RMS</code> <code>:CALCulate:EVM:MARKer[1] 2 ... 12:FUNction:BDENsity:CTYPe?</code>
Example	<code>:CALC:EVM:MARK1:FUNC:BDEN:CTYP RMS</code> <code>:CALC:EVM:MARK1:FUNC:BDEN:CTYP?</code>
Preset	MEAN
State Saved	Yes
Range	Mean RMS

## More Information

The following table shows the choice of display units if **Band Density Calculation** is set to **Mean**, depending on the current format of the trace the marker is on.

Trace data type	Trace Format	Result format
Spectrum, PSD, Time record	LogMag (dB)	dBm/Hz
	Linear Mag, Real, Imag, Wrap Phase, Unwrap Phase, Delay, Log Mag (lin)	Vrms <sup>2</sup> /Hz
Dimensionless (e.g., Frequency response, Impulse response, various Demodulation error types)	LogMag (dB)	dBrms/Hz
	Linear Mag, Real, Imag, Wrap Phase, Unwrap Phase, Delay, Log Mag (lin)	rms <sup>2</sup> /Hz
General dimensions (e.g., Hz, %)	LogMag (dB)	dB<unit>rms/Hz
	Linear Mag, Real, Imag, Wrap Phase, Unwrap Phase, Delay, Log Mag (lin)	<unit>rms <sup>2</sup> /Hz

If the **Band Density Calculation** is set to **RMS**, then the readout unit does not depend on trace format. For Spectrum, PSD, and Time record traces, the displayed unit is "Vrms/rtHz". For general units, the unit abbreviation is shown followed by "rms/rtHz".

The Band Density Calculation only controls the readout format for Normal and Fixed markers. For Delta markers, see "[Calc Power](#)" on page 1439 – Band Power and Delta Markers.

### 3.8.8.7 Marker To

The controls on the Marker -> tab enable you to copy the current marker value into other instrument parameters (for example, Center Freq). The currently selected marker is made the active function on entry to this menu (if the currently selected marker is not on when you press this front panel key, it is turned on at the center of the screen as a normal type marker and then made the active function).

The **Marker ->** (or Marker To) feature is used to quickly assign a marker's x- or y-axis value to another parameter. For example, if a marker's x-axis value is 500 MHz and y-axis value is -20 dBm, pressing **Mkr -> CF** would assign 500 MHz to **Center Freq** and pressing **Mkr ->Ref Lvl** would assign -20 dBm to **Ref Level**.

All Marker To functions executed from the front panel use the selected marker's values, while all Marker To remote commands specify in the command which marker's value to use.

### Marker X

Set the X Axis value of the selected marker in the current X Axis Scale unit. This is the same as "[Marker X](#)" on page 1422 on the Markers tab.

### Mkr->CF

Sets the center frequency equal to the selected marker's absolute frequency. The marker must be on a frequency-domain trace. The absolute marker frequency is used regardless of whether its control mode is Normal, Delta, or Fixed.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a Normal type marker.

Notes	This function is only supported for manual operation, there is no equivalent remote command
Dependencies	This function is not available (control is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Center Frequency apply

### Mkr->CF Step

Sets the center frequency step size equal to the selected marker's frequency. The marker must be on a frequency-domain trace. The absolute marker frequency is used regardless of whether its control mode is Normal, Delta, or Fixed.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a normal type marker.

Notes	This function is only supported for manual operation, there is no equivalent remote command
Dependencies	This function is not available (control is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting CF Step apply

### Mkr->Start

Sets the start frequency equal to the selected marker's frequency. The marker must be on a frequency-domain trace. The absolute marker frequency is used regardless of whether its control mode is Normal, Delta, or Fixed.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a normal type marker.

Notes	This function is only supported for manual operation, there is no equivalent remote command
Dependencies	This function is not available (control is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Start Frequency apply

### Mkr->Stop

Sets the stop frequency equal to the selected marker's frequency. The marker must be on a frequency-domain trace. The absolute marker frequency is used regardless of whether its control mode is Normal, Delta, or Fixed.

If the currently selected marker is not on when this key is pressed, it is turned on at the center of the screen as a normal type marker.

Notes	This function is only supported for manual operation, there is no equivalent remote command
Dependencies	This function is not available (control is grayed out) when x-axis is the time domain
Couplings	All the usual couplings associated with setting Stop Frequency apply

### Mkr->Ref Lvl

Sets the Y axis reference value equal to the selected marker's Y value. For example, if the reference position is at the top of the screen, the whole trace is moved up so that the marker appears at the top of the screen. Note that this is a display scaling function only. The input range remains the same.

Notes	This function is only supported for manual operation, there is no equivalent remote command
-------	---

### Mkr Delta->CF

Sets the center frequency equal to the difference in frequency between the selected Delta marker and its reference. The marker must be on a frequency-domain trace and the selected marker's control mode must be Delta.

Notes	This function is only supported for manual operation, there is no equivalent remote command
Dependencies	This function is only available when the selected marker is a delta marker. Otherwise the control is grayed out. In addition, this function is not available when x-axis is the time domain

### Mkr Delta->Span

Sets the start and stop frequencies equal to the selected marker's frequency and that of its reference. That is, the measurement span is "zoomed in" so that the selected marker and its associated reference appear on the extreme left and right of the display. The marker must be on a frequency-domain trace and its control mode must be Delta.

Notes	This function is only supported for manual operation, there is no equivalent remote command
Dependencies	This function is only available when the selected marker is a delta marker. Otherwise the control is grayed out. In addition, this function is not available when x-axis is the time domain
Couplings	All the usual couplings associated with setting Span apply (see the Freq key documentation)

## 3.8.9 Meas Setup

The Meas Setup menu panel contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the mode.

### 3.8.9.1 Component Carrier

This parameter specifies which component carrier's configuration menu is displayed. This parameter decides which Component Carrier is the target CC when one parameter is changed through front panel. For example, when CC0 is selected, Sync Type is changed to PSS from front panel, and then measurement is aware that the Sync Type for CC0 is PSS, which is equivalent to sending the following SCPI command:

```
EVM:CCAR0:DLINK:SYNC:TYPE PSS
```

Remote Command	<code>[ :SENSe]:EVM:SElected CC0   ...   CC4</code> <code>[ :SENSe]:EVM:SElected?</code>
----------------	---

Example	<code>:EVM:SEL CC0</code> <code>:EVM:SEL?</code>
Dependencies	Component Carrier is coupled to Number of Component Carriers. For example, Component Carrier list includes CC0~CC1 if Number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

## Settings

The Settings tab contains frequently used Meas Setup functions to which you want the fastest access.

## Avg/Hold Num

Turns averaging on or off and sets the number of times record measurement results that are averaged. There are no SCPI/features unique to this measurement.

Remote Command	<code>[ :SENSe ]:EVM:AVERage:COUNT &lt;integer&gt;</code> <code>[ :SENSe ]:EVM:AVERage:COUNT?</code>
Example	<code>:EVM:AVER:COUN 20</code> <code>:EVM:AVER:COUN?</code>
Notes	If an averaged measurement is idle because the scan count is equal to the Avg Number and the Avg Number is increased, the measurement resumes until the new number of averages is satisfied
Preset	10
State Saved	Yes
Min	1
Max	2147483647

Averaging applies to a limited set of measurement results in LTE-Advanced Modulation Analysis for every Component Carrier, and averaging related settings applies to all component carriers. RMS and Max average types apply to the Spectrum and Ch Frequency Response traces. The behavior for these types is the same as in the Vector Analysis Measurement. Averaging of numeric error data in the Error Summary is described below:

Average Type	Average Mode	Effects of averaging
RMS	any (single sweep)	After each scan, the Error Summary shows a running (linear) average over past scans for each parameter in the table. Peak or position parameters are not averaged. Parameters that appear in the table in dB are converted to linear units in order to average

Average Type	Average Mode	Effects of averaging
RMS	repeat (continuous sweep)	them. The measurement stops after the specified Avg Number of scans
RMS	exponential (continuous sweep)	Same as above, except that averages are reset after the specified Avg Number of scans, and the measurement continues
Max	any	Same as the single sweep case until the specified Avg Number of scans is complete. After that, averaging continues using exponential weighting
		After each scan, compares each parameter in the table with the current scan's value and keeps the maximum. Symbol positions relate to the maximum peak value seen

### Averaging On/Off

Turns averaging on or off.

Remote Command	<code>[ :SENSe]:EVM:AVERage[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:EVM:AVERage[:STATe]?</code>
Example	<code>:EVM:AVER ON</code> <code>:EVM:AVER?</code>
Preset	OFF
State Saved	Yes
Range	On Off

### Acquisition Mode

This parameter specifies the data acquisition mode that is be used by analyzer to capture IQ data. When Acquisition mode is Sequential, The data capture is done for each CC sequentially. All the pre-demod traces show results based on individual CC BW. For example, the Span of spectrum trace for CC0 is based on BW setting of CC0. When Acquisition mode is Simultaneous, The data capture is done for every CC simultaneously using a bandwidth wide enough to accommodate every component carrier, all the pre-demod traces show results based on aggregated BW rather than individual CC BW. For example, the Span of spectrum trace is based on BWChannel\_CA. If the required IFBW or BWChannel\_CA (calculated by Fedge\_high - Fedge\_low ) is wider than HW capability, a warning message such as "Setting conflict- Required Bandwidth is beyond hardware capability" is shown.

Remote Command	<code>[ :SENSe]:EVM:ACQuisition SIMultaneous   SEquential</code> <code>[ :SENSe]:EVM:ACQuisition?</code>
----------------	---

Example	<code>:EVM:ACQ SEQ</code> <code>:EVM:ACQ?</code>
Preset	Sequential
State Saved	Saved in instrument state
Range	Simultaneous  Sequential

## CC For All Windows

This parameter is very useful when you want to change all traces to display measurement results for specific Component Carrier. For example, when number of Component Carrier is 2, if you have 4 results showing contents like below:

Window 1	Demod CC0 Error Summary1
Window 2	CC0 Spectrum1
Window 3	Demod CC0 Frame Summary1
Window 4	MIMO CC0 Info Table1

After you select CC1 for CC For All Traces, the contents of four traces are changed to :

Window 1	Demod CC1 Error Summary1
Window 2	CC1 Spectrum1
Window 3	Demod CC1 Frame Summary1
Window 4	MIMO CC1 Info Table1

Remote Command	<code>:DISPlay:EVM:TRACe:ALL:SElected CC0   ...   CC4</code>
Example	<code>:DISP:EVM:TRAC:ALL:SEL CC0</code>
Couplings	CC For All Traces is coupled to Number of Component Carriers. For example, CC For All Traces list include CC0~CC1 if the number Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

## Adjust Atten For

This parameter specifies how to adjust the attenuation when multiple Component Carriers are under test. For example, when CC0 is selected, the attenuation is set based on the peak power of CC0. When All is selected, the attenuation is adjusted for each CC.

Remote Command	<code>[ :SENSe]:EVM:RANGe:OPTimize CC0   CC1   CC2   CC3   CC4   All</code> <code>[ :SENSe]:EVM:RANGe:OPTimize?</code>
Example	<code>:EVM:RANG:OPT CC0</code> <code>:EVM:RANG:OPT?</code>
Dependencies	Component Carrier is coupled to Number of Component Carriers. For example, Component Carrier list includes CC0 to CC1 if the number Component Carriers is 2.
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4 All

### Copy CC To

This parameter provides parameter copy function of selected Component Carrier to another Component Carrier or all Component Carrier.

**NOTE**

**This parameter copies LTE-Advanced demodulation parameters from one Component Carrier to other Component Carrier or all Component Carriers.**

Remote Command	<code>[ :SENSe]:EVM:COPIY CC0   CC1   CC2   CC3   CC4   All</code>
Example	<code>:EVM:COPIY All</code>
Couplings	Copy the parameters settings of selected Component Carrier to the target Component Carrier
Preset	All
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4 All

### Eq Ch Freq Resp -> Memory

This parameter performs the immediate action to store the following items in the Modulation Analysis measurement.

- Equalizer Channel Frequency Response
- Number of Points in Equalizer Channel Frequency Response
- Link Direction (Downlink or Uplink)

Remote Command	<code>:MEMory:EVM:STORe:ECFResponse</code>
Example	<code>:MEM:EVM:STOR:ECFR</code>
Notes	To use this parameter, Eq Ch Freq Resp under Trace > Data > Response must be assigned. Otherwise,

---

	an advisory message "Eq Chan Freq Resp' needs to be assigned. Trace/Det - Data - Response" appears.
Dependencies	Available when Option BBA or N9080A-DP2 is installed

---

## Advanced Settings

Sets up more advanced parameters, such as Average Type, Result Format, and so on.

## Average Type

Enables you to select the type of averaging. The following table shows what measurement results are averaged for each average type. This applies in the Vector Measurement.

Average Type	Measurement result averaged
RMS	Spectrum, PSD: Power is averaged for each spectral line (i.e., this is a mean-square average of voltage). For the Spectrum result only, if the display transform is linear or real, the RMS result is displayed
Time	Main Time: Individual time samples in the current time record are averaged vectorially (not RMS) with corresponding points in previous time records. See Main Time for more details
Maximum	Spectrum, PSD: Not strictly an average. For each spectral line, power from the current measurement is compared to the average buffer value and the maximum is kept in the average buffer

Some measurement results are inherently averaged, and are not affected by the Average controls. These are: CCDF, CDF, and PDF. They average continuously until the next measurement restart.

---

Remote Command	<code>[ :SENSe]:EVM:AVERage:TYPE RMS   TIME   MAXimum</code> <code>[ :SENSe]:EVM:AVERage:TYPE?</code>
Example	<code>:EVM:AVER:TYPE RMS</code> <code>:EVM:AVER:TYPE?</code>
Preset	RMS
State Saved	Yes
Range	RMS Time Max

---

## Fast Average

Controls the display of average data. If fast averaging is off, then the display is updated after each time record is processed. If fast averaging is on, then the display

is only updated after every M records, where M is the Update Rate (see "[Fast Average Update Rate](#)" on page 1451). For example, if the fast average count is 10, then the running average is only displayed every 10th time record.

Remote Command	<code>[ :SENSe]:EVM:AVERage:FAST OFF   ON   0   1</code> <code>[ :SENSe]:EVM:AVERage:FAST?</code>
Example	<code>:EVM:AVER:FAST ON</code> <code>:EVM:AVER:FAST?</code>
Preset	OFF
State Saved	Yes
Range	On Off

### Fast Average Update Rate

Controls how often the display updates when fast averaging is turned on. If the Fast Averaging State is MAX then the display is updated only after the full Average Count is reached. Otherwise, the display is updated whenever the average count is a multiple of the Update Rate.

Remote Command	<code>[ :SENSe]:EVM:AVERage:FAST:URATe &lt;integer&gt;</code> <code>[ :SENSe]:EVM:AVERage:FAST:URATe?</code> <code>[ :SENSe]:EVM:AVERage:FAST:URATe:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:EVM:AVERage:FAST:URATe:AUTO?</code>
Example	<code>:EVM:AVER:FAST:URAT 20</code> <code>:EVM:AVER:FAST:URAT?</code> <code>:EVM:AVER:FAST:URAT:AUTO ON</code> <code>:EVM:AVER:FAST:URAT:AUTO?</code>
Preset	10 ON
State Saved	Yes Yes
Range	Auto Man
Min	1
Max	2147483647

### Report EVM in DB

Switches the unit of EVM reporting between percentage and dB.

- When set to ON, EVM is reported in dB on all traces.
- When set to Off, EVM is reported in %rms according to the LTE standard.

The reference for EVM calculation in both cases is the ideal IQ points that are displayed on the IQ Ref and IQ Ref Time traces.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:REPort:DB OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:REPort:DB?</code>
Example	<code>:EVM:CCAR0:REP:DB OFF</code> <code>:EVM:CCAR0:REP:DB?</code>
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:REPort:DB</code>

### Report Relative Power Levels

Switches the unit of Power reporting between in Absolute (dBm) and relative (dB).

The following traces are affected by this parameter:

- Error Vector Spectrum
- Error Vector Time
- IQ Freq Meas
- IQ Freq Ref
- IQ Meas
- IQ Meas Time
- IQ Ref
- IQ Ref Time
- RB Error Mag Spectrum
- RB Error Mag Time
- RB Power Spectrum
- RB Power Time

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

- RMS Error Vector Spectrum
- RMS Error Vector Time

The only summary table affected by this parameter is the Frame Summary table. The channel power is reported in dB when this parameter is selected and in dBm when this parameter is cleared. The power values reported on Error Summary and MIMO Info Table are not affected by this parameter.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:REPort:POWer:RELative OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:REPort:POWer:RELative?</code>
Example	<code>:EVM:CCAR0:REP:POW:REL OFF</code> <code>:EVM:CCAR0:REP:POW:REL?</code>
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:REPort:POWer:RELative</code>

### Power Boost Normalize

Determines if Power Boost Normalize is used.

When Power Boost Normalize is enabled, results displayed on IQ traces are normalized by the power level (set for each channel in the LTE Allocation Editor) or power boost (in Downlink Control Channel Properties) settings of the corresponding channels so that each channel's average power is 0 dB.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:POWer:BOOSt:NORMalize OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:POWer:BOOSt:NORMalize?</code>
Example	<code>:EVM:CCAR0:POW:BOOS:NORM OFF</code> <code>:EVM:CCAR0:POW:BOOS:NORM?</code>
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:POWer:BOOSt:NORMalize</code>

### Phase Noise Optimization

The Phase Noise Optimization setting affects the phase noise distribution on the analyzer's LO.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:FREQuency:SYNThesis[:STATe] 1   2   3</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:FREQuency:SYNThesis[:STATe]?</code>
Example	<code>:EVM:CCAR0:FREQ:SYNT 1</code> <code>:EVM:CCAR0:FREQ:SYNT?</code>
Notes	Parameter control: 1 - Best Close-in 2 - Best Wide-offset 3 - Fast Tuning Readback is Close-in Wide-offset FastTuning
Dependencies	This control does not appear in EXM, VXT, M9410E/11E/15E/16E , UXM, M9391A or M9393A
Preset	Default value is different depending on hardware configuration Models with option EP2 (available, for example, for MXA): 3 Others: 1 The preset value of PXA is determined by considering balance of speed and phase noise. Compared with Best Wide-offset, Best Close-in is faster, however, it has phase noise disadvantage
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:FREQuency:SYNThesis[:STATe]</code>

## Number of Antenna Elements

Sets the number of antenna elements per antenna group.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:AENumber &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:AENumber?</code>
Example	<code>:EVM:CCAR0:DLIN:AEN 3</code> <code>:EVM:CCAR0:DLIN:AEN?</code>
Dependencies	Available when Direction is Downlink
Preset	2
State Saved	Yes
Min	2
Max	8
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:AENumber</code>

## Antenna Element Spacing

Specifies the distance between the antennas in a linear antenna array. This parameter is used only for calculating the Antenna Beam Pattern trace, which

shows the beam patterns applied to PDSCH user allocations.

This parameter is specified in units of wavelengths of the Center Frequency.

**NOTE**

**NOTE** The LTE demodulator only supports vertical linear antenna arrays with uniform spacing.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:AESPacing &lt;double&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:AESPacing?</code>
Example	<code>:EVM:CCAR0:DLIN:AESP 0</code> <code>:EVM:CCAR0:DLIN:AESP?</code>
Dependencies	Available when Direction is Downlink
Preset	0.5
State Saved	Yes
Min	0
Max	100
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:AESPacing</code>

**Compensate Chan Freq Response**

Determines whether the UE-RS weights are compensated for the channel calculated from the Reference Signal.

- On: the UE-RS weights are compensated for the channel frequency response which is shown in the Eq Chan Freq trace.
- Off: the UE-RS weights are not compensated for the channel frequency response.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:UERS:CFRCCompen OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:UERS:CFRCCompen?</code>
Example	<code>:EVM:CCAR0:DLIN:UERS:CFRC ON</code> <code>:EVM:CCAR0:DLIN:UERS:CFRC?</code>
Notes	Available when Direction is Downlink
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:UERS:CFRCCompen</code>

## Display Weights in Real/Imag

Determines whether the values of complex UE-RS weights are shown as real/imaginary pairs or as magnitude/phase pairs on the UE-Specific RS Weights summary table.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:UERS:WEIGhts:RIFormat OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:UERS:WEIGhts:RIFormat?</code>
Example	<code>:EVM:CCAR0:DLIN:UERS:WEIG:RIF ON</code> <code>:EVM:CCAR0:DLIN:UERS:WEIG:RIF?</code>
Notes	Available when Direction is Downlink
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:UERS:WEIGhts:RIFormat</code>

## Weights Display Mode

Determines how the UE-RS weights are shown in the UE-specific Weights summary table.

- PSUBcarrier - Per Subcarrier: the UE-RS weights are shown for each UE-RS subcarrier. UE-RS subcarrier weights are averaged over all subframes in the Measurement Interval. Weights Display Mode can be set to Per Subcarrier only by SCPI command, it is not accessible from front panel.
- PRB - Per RB: the UE-RS weights are shown for each resource block in frequency. A UE-RS weight for a resource block is averaged over the subcarriers in the resource block as well as all subframes in the Measure Interval.
- PUSer - Per User: UE-RS subcarrier weights are averaged over all UE-RS resource elements in the Measurement Interval for a user allocation and the averaged UE-RS is shown for each user.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:UERS:WEIGhts:DISPlay PSUBcarrier   PRB   PUSer</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:UERS:WEIGhts:DISPlay?</code>
Example	<code>:EVM:CCAR0:DLIN:UERS:WEIG:DISP PUSer</code> <code>:EVM:CCAR0:DLIN:UERS:WEIG:DISP?</code>
Notes	Available when Direction is Downlink

Preset	PUSer
State Saved	Yes
Range	PSUBcarrier PRB PUSer
Backwards Compatibility SCPI	<code>[ :SENSe ] : EVM : DLINK : UERS : WEIGHts : DISPlay</code>

## Spur Avoidance

Because the VXT models M9410A/11A/15A and M9410E/11E/15E/16E are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The Spur Avoidance function is provided to eliminate this spur, at the expense of some measurement speed.

When Spur Avoidance is enabled (the default), the analyzer uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates when the  $BW \leq \max BW / 2.5$ .

You can disable this function in order to speed up your measurement. When Spur Avoidance is turned Off, a warning message appears in the status bar as “Settings Alert; Spur Avoidance Off”. This is to alert you that measurement accuracy might be impacted because you have defeated the spur avoidance algorithm.

The spur avoidance function is not available for:

- M9410A/11A with EP6 option at frequency above 6 GHz
- M9415A/16A at frequency below 380 MHz and above 12.3 GHz
- M9410E/11E/15E/16E at frequency below 380 MHz and above 25.9 GHz

Remote Command	<code>[ :SENSe ] : EVM : SAVoid [ :STATe ] ON   OFF   0   1</code> <code>[ :SENSe ] : EVM : SAVoid [ :STATe ] ?</code>
Example	<code>:EVM : SAVoid ON</code> <code>:EVM : SAVoid ?</code>
Dependencies	This control only appears in VXT models M9410A/11A/15A and M9410E/11E/15E/16E
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Meas Preset

Restores all the measurement parameters to their default values.

Remote Command	:CONFigure:EVM
Example	:CONF:EVM
Notes	Restore all defaults of parameters

## Advanced Limit Setup

Accesses a menu that enables you to set parameters required to calculate the limit for Per Slot Freq Resp trace.

See "[Spectrum Flatness Mask](#)" on page 1458 for more information.

NOTE

This control is available only when Direction is Uplink.

## Spectrum Flatness Mask

Four parameters are required to calculate the limit for Per Slot Freq Resp trace, which can be used to perform the EVM equalizer spectrum flatness test defined in TS36-521 6.5.2.4

- Channel Condition - Specify under what environmental condition the test is performed. There two temperature conditions defined in TS36.101 Annex E, which are normal condition(+15°C to +35°C) and extreme condition(-10°C to +55°C).
- F\_UL\_Center - Specify the carrier frequency of the signal under test.
- F\_UL\_Low - Specify the lower frequency of the E-UTRA operating band defined in TS36-521-1 Table 5.2.1
- F\_UL\_High - Specify the upper frequency of the E-UTRA operating band defined in TS36-521-1 Table 5.2.1

## Channel Condition

Specifies under what condition the test is performed. This parameter determines the minimum requirements for EVM equalizer spectrum flatness test.

Remote Command	[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:FLATness:CHANnel:CONDition NORMal   EXTReMe
Example	:EVM:CCAR0:ULIN:FLAT:CHAN:COND NORM :EVM:CCAR0:ULIN:FLAT:CHAN:COND?

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Dependencies	Available when Direction is uplink
Preset	NORMal
State Saved	Yes
Range	NORMal EXTReme
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:FLATness:CHANnel:CONDition</code>

### F\_UL\_CENTER (Center Frequency)

Specifies the carrier frequency of signal under test.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:FREQuency:CENTer &lt;freq&gt;</code>
Example	<code>:EVM:CCAR0:ULIN:FREQ:CENT 1.95 GHz</code> <code>:EVM:CCAR0:ULIN:FREQ:CENT?</code>
Couplings	The value is clipped to F_UL_Low or F_UL_High If the value entered is greater than F_UL_High, it is set to the value of F_UL_High If the value entered is lower than F_UL_Low, it is set to the value of F_UL_Low
Preset	1.95GHz
State Saved	Saved in instrument state
Min	Depends on F_UL_Low
Max	Depends on F_UL_High
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:FREQuency:CENTer</code>

### F\_UL\_LOW (Lower Edge Freq)

Specifies the lower frequency of the E-UTRA operating band defined in TS36-521-1 Table 5.2.1.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:FREQuency:LOW &lt;freq&gt;START</code>
Example	<code>:EVM:CCAR0:ULIN:FREQ:LOW 1.92 GHz</code> <code>:EVM:CCAR0:ULIN:FREQ:LOW?</code>
Couplings	If the value entered is greater than F_UL_High, F_UL_High is set to the value of F_UL_Low
Preset	1.92GHz
State Saved	Saved in instrument state

Min	0Hz
Max	Depends on F_UL_High
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:ULINK:FREQUENCY:LOW</code>

### F\_UL\_HIGH (Upper Edge Freq)

Specifies the upper frequency of the E-UTRA operating band defined in TS36-521-1 Table 5.2.1

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0  ...  4:ULINK:FREQUENCY:HIGh &lt;freq&gt;</code> <code>[ :SENSe ] :EVM:CCARrier0  ...  4:ULINK:FREQUENCY:HIGh?</code>
Example	<code>:EVM:CCAR0:ULIN:FREQ:HIGh 1.98 GHz</code> <code>:EVM:CCAR0:ULIN:FREQ:HIGh?</code>
Couplings	The value entered is lower than F_UL_Low, it is set to the F_UL_Low
Preset	1.98GHz
State Saved	Saved in instrument state
Min	Depends on F_UL_Low
Max	6 GHz
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:ULINK:FREQUENCY:HIGh</code>

### Meas Time

The Meas Time tab contains commonly used measurement time setup parameters.

### Result Length

Sets the maximum result length for analysis.

Result Length determines how many slots are available for demodulation for each component carrier. This parameter is common to all component carriers, which means any change made to one component carrier is applied to all component carriers. Measurement Interval and Measurement Offset specify what part of the result length is demodulated.

The result data starts where the analysis boundary is found and ends after the amount of data specified by Result Length.

The length of the time capture (contained in Search Time) is longer than the result length by approximately the length of the Analysis Start Boundary (frame = 10 ms, slot = 0.5 ms, etc.) to enable for location of the analysis boundary within the time capture.

As NB-IoT NPRACH signal is in the unit of symbol group, the slot unit of the parameters (Result Length, Meas Interval Slot, Meas Offset Slot) in Meas Time Setup group is changed to symbol group. There are two NPRACH signal length per preamble format. One is 1.4 ms with preamble format 0, the other is 1.6ms with preamble format1.

Each NPRACH preamble contains 4 symbol groups, so the analysis start boundary for NPRACH is fixed to preamble and the analysis start boundary parameter under Meas time setup is out of scope when measuring NPRACH signal.

**NOTE** For downlink, an entire slot containing S-SS must be present in the time capture (Raw Main Time) for demodulation to occur.

**NOTE** For LTEATDD, the maximum Result Length is 40 slots when Direction is set to Downlink, for Uplink, the maximum Result Length is 20 slots.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:RESUlt:LENGth &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:RESUlt:LENGth?</code>
Example	<code>:EVM:CCAR0:TIME:RES:LENG 20</code> <code>:EVM:CCAR0:TIME:RES:LENG?</code>
Preset	20 slots NB-IoT PRACH only: 20 sym groups
State Saved	Yes
Min	1 slot
Max	LTEAFDD: 20 slots LTEATDD: 40 slots for Downlink, 20 slots for Uplink
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:TIME:RESUlt:LENGth</code>

### Meas Interval Slot

Sets the Meas Interval Slot.

Measurement Interval determines how much data is sent to the demodulator, and can be specified in slots + symbols-times. The beginning of the measurement interval is specified as an offset from the Analysis Start Boundary. The offset is specified by the Measurement Offset parameter.

**NOTE**

The Time Offset data result in the Error Summary trace shows the distance from the beginning of the Search Time trace to the beginning of the measurement interval.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:INTERval:SLOT &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:INTERval:SLOT?</code>
Example	<code>:EVM:CCAR0:TIME:INT:SLOT 1</code> <code>:EVM:CCAR0:TIME:INT:SLOT?</code>
Couplings	Max value determined by Result Length (refer to "Result Length" on page 1460)
Preset	LTEAFDD: 6 slots LTEATDD: 6 slots NB-IoT PRACH only: 6 sym groups
State Saved	Yes
Min	0 slot
Max	Determined by Result Length (refer to "Result Length" on page 1460)
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:TIME:INTERval:SLOT</code>

### Meas Interval Symbol

Sets the Meas Interval Symbol.

Measurement Interval determines how much data after the measurement offset is sent to the demodulator, and can be specified in slots + symbols-times.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:INTERval:SYMBOL &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:INTERval:SYMBOL?</code>
Example	<code>:EVM:CCAR0:TIME:INT:SYMB 0</code> <code>:EVM:CCAR0:TIME:INT:SYMB?</code>
Preset	0 symbols
State Saved	Yes
Min	0 symbols
Max	6 symbols
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:TIME:INTERval:SYMBOL</code>

## Meas Offset Slot

Sets the Meas Offset Slot.

Measurement Offset Slot specifies the offset from the Analysis Start Boundary to the beginning of the Measurement Interval (the data sent to the demodulator), and can be specified in slots + symbols-times.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:OFFSet:SLOT &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:OFFSet:SLOT?</code>
Example	<code>:EVM:CCAR0:TIME:OFFS:SLOT 0</code> <code>:EVM:CCAR0:TIME:OFFS:SLOT?</code>
Couplings	Max value determined by Result Length (refer to "Result Length" on page 1460)
Preset	0 slots NB-IoT PRACH only: 0 sym groups
State Saved	Yes
Min	0 slots
Max	Determined by Result Length (refer to "Result Length" on page 1460)
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:TIME:OFFSet:SLOT</code>

## Meas Offset Symbol

Sets the Meas Offset Symbol.

Measurement Offset Symbol specifies the offset from the Analysis Start Boundary to the beginning of the Measurement Interval (the data sent to the demodulator), and can be specified in slots + symbols-times.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:OFFSet:SYMBol &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:OFFSet:SYMBol?</code>
Example	<code>:EVM:CCAR0:TIME:OFFS:SYMB 0</code> <code>:EVM:CCAR0:TIME:OFFS:SYMB?</code>
Preset	0 symbols
State Saved	Yes
Min	0 symbols
Max	6 symbols
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:TIME:OFFSet:SYMBol</code>

## Analysis Start Boundary

Sets the Analysis Start Boundary. Analysis Start Boundary specifies the alignment boundary of the Result Length time data. To ensure that this alignment can be achieved, the total amount of data acquired by the analyzer is equal to the Result Length plus the length of the alignment boundary specified by Analysis Start Boundary. For example, if Analysis Start Boundary is set to Half-Frame, the total acquisition is equal to ResultLength + 10 slots (and the Measurement Interval starts at a Half-Frame boundary).

Once the Result Length is located within the time capture, Measurement Offset and Measurement Interval determine the data that is to be analyzed. This data is also displayed on the Time trace.

This parameter cannot be set to Slot for downlink signals since MIMO Decoding must be applied beginning at a subframe boundary. This parameter is common to all component carriers, which means any change made to one component carrier is applied to all component carriers.

### NOTE

**Since uplink signals do not contain a separate synchronization channel, the demodulator cannot determine the frame boundary exactly unless there is a unique slot in a user mapping and that unique slot is present within the Search Time data.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:ASBoundary FRAME   HALF   SUB   SLOT</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:ASBoundary?</code>
Example	<code>:EVM:CCAR0:TIME:ASB FRAM</code> <code>:EVM:CCAR0:TIME:ASB?</code>
Dependencies	When Direction is set to Downlink, SLOT cannot be selected and the control is grayed out When Direction is changed to Downlink from Uplink, this parameter is set to FRAME
Preset	FRAME
State Saved	Yes
Range	Frame Half-Frame SubFrame Slot
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:TIME:ASBoundary</code>

## Capture Time Diagram

This control shows a dialog page to access commonly used measurement time setup parameters.

- "Result Length" on page 1460
- "Meas Interval Slot" on page 1461
- "Meas Interval Symbol" on page 1462
- "Meas Offset Slot" on page 1463
- "Meas Offset Symbol" on page 1463

## Sync/Format

This tab contains commonly used functions for sync/format setup parameters.

### Sync Type (FDD/TDD Downlink)

Selects the Sync Type.

- PSS - Selects Primary Sync Signal for Sync Type
- C-RS - Selects Cell-specific reference signal for Sync Type

Sync Type sets the channel or signal to be used for synchronization.

The LTE demodulator can be set to use either the Primary Sync signal (P-SS) or the Cell-specific reference signal (C-RS) to synchronize the downlink signal.

This synchronization is performed at the frame level. For smaller scale adjustments (such as at the symbol or slot level), see the EVM Minimization parameter.

P-SS is normally used for downlink synchronization. However, when P-SS is impaired in some way (for example, P-SS has a different Cell ID from RS), C-RS can be used for synchronization so that the signal can be demodulated.

---

**NOTE**

**S-SS must be present in the time capture (Raw Main Time) for demodulation to occur, since finding S-SS is the only way to distinguish between the beginning and the middle of a frame.**

---

**NOTE**

**When Sync Type is set to C-RS:**

**The Error Summary data result SyncCorr shows which C-RS antenna port's reference signal was used for synchronization to the right of the correlation value.**

**Auto detection of Cell ID and Custom RS-PRS are not supported.**

---

The reference C-RS port must be specified, since the demodulator does not automatically search the input signal for all C-RS antenna ports when Sync Type is set to C-RS.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:TYPE PSS   RS</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:TYPE PSS</code> <code>:EVM:CCAR0:DLIN:SYNC:TYPE?</code>
Dependencies	When Sync Type is set to C-RS, auto detection of Cell ID and Custom RS-PRS are not supported
Preset	PSS
State Saved	Yes
Range	P-SS C-RS
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:SYNC:TYPE</code>

## P-SS

Selects P-SS Sync Type.

P-SS is the Primary Synchronization signal for an LTE downlink frame. The center 72 subcarriers (6 RB wide) are allocated to P-SS, but only the center 62 subcarriers are used. The unused subcarriers (the outer five on each side) are set to zero power during P-SS transmission. P-SS is not present in an uplink frame.

For FDD frame type 1, P-SS is present in the last symbol of slots 0 and 11 in every frame.

For TDD frame type 2, P-SS is present in the third symbol of slots 2 and 12 in every frame.

P-SS is transmitted as a Zadoff-Chu sequence and thus appears as irregularly spaced points on a circle in the IQ Meas constellation diagram.

## C-RS

Selects C-RS (Cell-specific Ref Signal Sync Type).

C-RS is the downlink Cell-specific Reference Signal and is used for "EVM Minimization" on page 1493 and Equalizer Training, and it can be used for synchronization. The reference signal is also used as the power level reference for the rest of the signal.

The modulation type of C-RS is QPSK.

## Sync Type (FDD/TDD Uplink)

Selects the Sync Type to use.

- RS - Selects PUSCH DM-RS as the Sync Type
- PUCCh - Selects PUCCH DM-RS as the Sync Type
- SRS - Selects S-RS as the Sync Type
- PRACH - Selects PRACH as the Sync Type

Sync Type sets the channel or signal to use for synchronization.

The demodulator can use PUSCH DM-RS, PUCCH DM-RS, S-RS, or PRACH for synchronization. Only the channels or signals that are defined for the current user (by selecting the Active to On for that signal in the User Mapping Editor) are available as synchronization options.

Note that PUSCH, PUCCH, PUSCH DM-RS, PUCCH DM-RS, and SRS powers in the User Mapping Editor are specified relative to the 0 dB level determined by the power of the channel chosen for synchronization. For example, when:

Sync Type is set to PUCCH DM-RS

- PUCCH DMRS Power (dB) = 3 dB
- PUSCH Power (dB) = 1.2 dB,

the demodulator sets 0 dB level to be 3 dB below the average power of PUCCH DM-RS and expect PUSCH average power to be 1.2 dB above the 0 dB level, which is equivalent to 1.8 dB below the average PUCCH DM-RS power.

Sync Type also determines which channel's Sync Slot parameter is used for frame boundary calculation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:TYPE RS   PUCCh   SRS   PRACH</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:TYPE?</code>
Example	<code>:EVM:CCAR0:ULIN:SYNC:TYPE RS</code> <code>:EVM:CCAR0:ULIN:SYNC:TYPE?</code>
Dependencies	Only the channels or signals that are defined for the current user (by turn on Active for that signal in the LTE Allocation Editor) are available as synchronization options For example, if a user does not have a PUCCH allocation defined, the PUCCH DM-RS synchronization option is disabled
Preset	RS
State Saved	Yes

Range	PUSCH DM-RS PUCCH DM-RS S-RS PRACH
Backwards Compatibility SCPI	[ :SENSe ] : EVM : ULINK : SYNC : TYPE

## RS-PRS

Sets the RS-PRS.

- 3GPP - The demodulator expects the RS pseudorandom sequence to follow the formula given in the LTE standard in Section 6.10.1.1 of 3GPP TS 36.211.
- CUSTom - The demodulator autodetects the RS sequence (including non-standard sequences). Since the RS points can only be in certain positions, the demodulator assumes that the point closest to the measured point is the desired reference signal point and calculates the EVM and other metrics using the assumed reference signal constellation point.
- RS-PRS specifies whether or not the demodulator should expect the reference signal sequence to adhere to the standard.

### NOTE

When Sync Type is set to RS, autodetecting of a Custom RS-PRS is not supported since the demodulator needs to know the RS-PRS to be able to synchronize the signal using RS.

When RS-PRS is set to Custom and any of the antenna port signals are phase delayed by more than 45 degrees, the demodulator autodetects a different RS-PRS. This causes equalization to be incorrect and demodulation fails. To ensure correct demodulation of signals containing an antenna port transmission with a phase rotation of more than 45 degrees, set RS-PRS to 3GPP to enable RS-PRS to be determined by Cell ID according to the standard.

Remote Command	[ :SENSe ] : EVM : CCARrier0   ...   4 : DLINK : SYNC : RSPRS GPP   CUSTom [ :SENSe ] : EVM : CCARrier0   ...   4 : DLINK : SYNC : RSPRS ?
Example	: EVM : CCAR0 : DLIN : SYNC : RSPR CUSTom : EVM : CCAR0 : DLIN : SYNC : RSPR ?
Dependencies	When Sync Type for Downlink is set to RS, the Custom selection is disabled and the control is grayed out
Preset	GPP
State Saved	Yes
Range	3GPP Custom
Backwards Compatibility SCPI	[ :SENSe ] : EVM : DLINK : SYNC : RSPR

## Cell ID

Autodetects the Cell ID from the SSCH content or to manually select the Cell ID.

Cell ID sets the physical (PHY) layer Cell Identity. This PHY-layer Cell ID determines the Cell ID Group and Cell ID Sector. There are 168 possible Cell ID groups and 3 possible Cell ID sectors; therefore, there are  $3 * 168 = 504$  possible PHY-layer Cell IDs. When Cell ID is set to Auto, the analyzer automatically detects the Cell ID. When Cell ID is set to Manual, the PHY-layer Cell ID must be specified for successful demodulation.

The physical layer Cell ID can be calculated from the following formula:

$$\text{PHY-layer Cell ID} = 3 * (\text{Cell ID Group}) + \text{Cell ID Sector}$$

When Sync Type is set to RS, the Cell ID Auto selection is disabled, and Cell ID must be specified manually. This is because the demodulator needs to know the values of the RS sequence to use for synchronization and because Cell ID determines these values. See "[RS-PRS](#)" on page 1468 for more information.

**NOTE**

**Cell ID Sector and Group information can be found on the Error Summary trace. Only cell-specific reference signals are supported by the LTE demod (MBSFN and UE-specific reference signals are not supported).**

Cell ID Sector determines the Zadoff-Chu Root Index used to generate the Primary Synchronization Signal (P-SS):

- Cell ID sector 0 = ZC Root Index 25
- Cell ID sector 1 = ZC Root Index 29
- Cell ID sector 2 = ZC Root Index 34

Normally, the same sequence used to generate P-SS is used to generate RS, but a custom RS can be used by setting RS-PRS to Custom.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:CID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:CID?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:CID 0</code> <code>:EVM:CCAR0:DLIN:SYNC:CID?</code>
Dependencies	Available when direction is downlink and Sync Type for Downlink is set to RS, the Cell ID Auto selection is disabled and Cell ID must be specified manually
Preset	0
State Saved	Yes

Min	0
Max	503
Backwards	<code>[ :SENSe ] :EVM:DLINK:SYNC:CID</code>
Compatibility SCPI	<code>[ :SENSe ] :EVM:DLINK:SYNC:CID:AUTO</code>

## Cell ID Mode

Set the Cell ID Mode type which determines how the Cell ID for each downlink component carrier is configured.

- Auto: the demodulator automatically detects the Cell ID from the synchronous channel
- Manual: the PHY-layer Cell ID must be specified manually for successful demodulation.
- E-TM: Use 1 for LTE lowest configured component carrier, and auto-increment cell ID for each component carrier for LTE-Advanced in accordance with E-TM specifications

Use 103 for the lowest configured standalone NB-IoT carrier(s), and auto-increment cell ID by the equation  $NID_{cell} = 97 + 6 * n$  for the nth configured NB-IoT stand-alone carrier. This rule only applies to multi-carriers only composed of NB-IoT standalone carriers.

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0   ...   4:DLINK:SYNC:CID:MODE AUTO   MANua1   ETM</code> <code>[ :SENSe ] :EVM:CCARrier0   ...   4:DLINK:SYNC:CID:MODE?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:CID:MODE ETM</code> <code>:EVM:CCAR0:DLIN:SYNC:CID:MODE?</code>
Notes	In 3GPP specification, it uses N-TM term for NB-IoT instead of E-TM to refer to test model. As the setting is shared by Lte carrier and NB-IoT carrier, so the label of enum item - ETM is changed to E(N)-TM with the required license
Dependencies	Available when direction is downlink and Sync Type for Downlink is set to RS, the Cell ID Mode is set to Manual automatically
Preset	AUTO
State Saved	Yes
Range	Auto Manual E(N)-TM
Backwards	<code>[ :SENSe ] :EVM:DLINK:SYNC:CID:AUTO OFF   ON   0   1</code>
Compatibility SCPI	<code>[ :SENSe ] :EVM:CCARrier0   ...   4:DLINK:SYNC:CID:AUTO OFF   ON   0   1</code>

## MIMO Decoding

Determines the MIMO decoding method.

- NONE - No decoding
- GPPMimo - Selects 3GPP MIMO decoding

MIMO Decoding determines how much of the transmit chain is decoded by the demodulator. The selection of this parameter directly affects what values are shown on the IQ Meas trace and all other traces that depend on the IQ Meas data (error vector traces).

MIMO Decoding applies to multi-antenna signals only.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:MIMO:DECoding NONE   GPPMimo</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:MIMO:DECoding?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:MIMO:DEC NONE</code> <code>:EVM:CCAR0:DLIN:SYNC:MIMO:DEC?</code>
Preset	3GPP MIMO
State Saved	Yes
Range	None 3GPP MIMO
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:SYNC:MIMO:DECoding</code>

### 3GPP MIMO Decoding

When 3GPP MIMO Decoding is selected, the data points shown on the IQ Meas trace are equivalent to the data points before precoding was applied in the transmit chain. In other words, the demodulator stops MIMO precoding and shows the results on IQ Meas. Although the data points are mapped onto "subcarriers" when being shown on the layer traces, the data points do not have a one-to-one correspondence to the subcarrier that they are mapped onto. For instance, when there is a frequency null that affects a subcarrier, there are several (depending on the precoding) data points in IQ Meas that are affected. Another way of looking at this is that each subcarrier contains information from multiple data points after precoding is performed (this does not apply to RS, P-SS, and S-SS which do not undergo precoding).

For channels that undergo transmit diversity, the demodulator stop transmit diversity precoding along with codeword-to-layer mapping, and shows the resulting codeword data points in their respective resource elements, copied on all layer traces. That is, constellation points on layer traces for transmit diversity-precoded channels is the same for all layer traces.

When a signal uses Tx Diversity, the amount of data transmitted is not increased, but the reliability of the signal is increased by transmitting multiple copies of the data.

In two Tx Antenna mode, each antenna port transmission carries enough information to determine all the data.

In four Tx Antenna mode, each antenna port transmission only carries enough information to determine half the data. Any data that cannot be determined from the detected antenna ports is considered part of Non-Alloc signals and shown as blanks on the Symbol Table (unless the Non-Alloc parameter is selected; the data are shown as gray zeros).

For channels that undergo spatial multiplexing, the demodulator stops Spatial Multiplexing precoding only and shows the layer data points in their respective resource elements on the appropriate layer traces.

For precoded channels, subcarrier points on the layer traces do not have a one-to-one correspondence to on-air subcarriers. Rather, each subcarrier point is actually the demodulated value of a codeword data point present prior to the codeword-to-layer mapping at the transmitter.

NOTE

**For LTE signals that contain more than one layer, the P-SS and S-SS subcarriers from the P-SS/S-SS Antenna Port are copied to all layer traces. RS subcarriers from all Tx antenna ports are copied to their respective subcarrier/symbol locations in all layer traces.**

---

### No Decoding

When No Decoding is selected, no decoding or cross-channel equalization is performed on the measured IQ data. This means that, for LTE signals that have been precoded (multi-antenna signals), subcarrier points shown on measured IQ traces (IQ Meas and IQ MEas Time) are actually an addition of multiple modulation points, resulting in non-standard constellations.

For example, in a two antenna port signal, there are subcarrier points that are an addition of two QPSK points. The resulting diagram is a 9QAM constellation. These are effectively the points transmitted on the OFDM subcarriers.

Reference antenna path equalization are still performed when Equalizer Training is enabled (set to RS or RS+Data).

The No Decoding selection is useful for the case where you have four antenna signals, and you want to isolate channel effects from transmit chain effects (filters, mixers, and so on). You could connect each transmit port directly to your measurement instrument with identical cables. That way, any observed anomalies come primarily from the RF transmit chain.

NOTE

**When No Decoding is selected, EVM results are not relevant since the ideal symbol points (shown on the IQ Ref and IQ Ref Time), which are used to**

compute EVM, are still standard constellation points and hence may not match the non-standard constellation points of IQ Meas arising due to No Decoding.

### PDSCH Cell Specific Ratio

Determines PDSCH cell-specific ratio  $\rho_B/\rho_A$  or cell-specific parameter PB. (3GPP TS 36.213 V8.5.0 5.2) PDSCH cell-specific ratio specifies the power ratio between PDSCH resource elements and cell-specific reference signal elements.

- R1 - Cell-specific ratio  $\rho_B/\rho_A$  = always 1 (0 dB)
- PB0 - Cell-specific parameter PB = 0
- PB1 - Cell-specific parameter PB = 1
- PB2 - Cell-specific Parameter PB = 2
- PB3 - Cell-specific parameter PB = 3

When PB(x) is selected, the LTE parameter  $P_B$  is set to (x), and the ratio  $\rho_B/\rho_A$  is determined from Table 5.2-2 in 3GPP TS.36.213.

When R1 is selected, the cell-specific ratio  $\rho_B/\rho_A$  is set to 1.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PDSCh:CSRatio R1   PB0   PB1   PB2   PB3</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PDSCh:CSRatio?</code>
Example	<code>:EVM:CCAR0:DLIN:PDSC:CSR R1</code> <code>:EVM:CCAR0:DLIN:PDSC:CSR?</code>
Preset	$\rho_B/\rho_A = 1$
State Saved	Yes
Range	$\rho_B/\rho_A = 1 PB = 0 PB = 1 PB = 2 PB = 3$
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PDSCh:CSRatio</code>

### Serving Cell Index

When one component carrier is acting as the Primary Component Carrier, which carries scheduling information about all other Secondary Component Carriers(SCC), this index is used by SCCs as the Scheduling Cell ID.

Remote	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:SCINdex</code>
--------	--

Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:SCINdex?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:SCINdex 1</code> <code>:EVM:CCAR0:DLIN:PROF:SCINdex?</code>
Preset	0
State Saved	Yes
Min	0
Max	7

### Half Subcarrier Shift

Sets the state of Half Carrier Shift. When Half Subcarrier Shift is selected, the demodulator expects the uplink signal to comply with the LTE-A standard regarding subcarrier shift and phase reset. The standard requires that the uplink subcarriers be spaced on either side of DC by half the subcarrier spacing. When this is done, a phase reset is also needed after each symbol.

To demodulate a signal that does not shift the subcarriers by half the subcarrier spacing (and therefore does not need a phase reset), set this parameter to OFF.

To demodulate a signal that conforms to the half subcarrier shift, but does not reset the phase each symbol, set this parameter to OFF. The signal is then demodulated correctly, but shows a frequency offset error of 7.5 KHz.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:HSSHift OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:HSSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:SYNC:HSSH ON</code> <code>:EVM:CCAR0:ULIN:SYNC:HSSH?</code>
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:SYNC:HSSHift</code>

### More Information

Downlink signals have an odd number of subcarriers, and the middle subcarrier, located at DC, is discarded, since recovering the data from a DC subcarrier is generally difficult. In contrast, uplink signals have one less subcarrier than the corresponding downlink signal and are shifted down in frequency by half the subcarrier spacing such that the subcarriers are symmetric about DC, causing less bandwidth to be wasted.

## PUSCH DFT Swap

Sets the state of PUSCH DFT Swap. PUSCH DFT Swap influences how data is mapped to the subcarriers in the Physical Uplink Shared Channel after a discrete Fourier transform is performed. It can be turned on or off to provide two different interpretation of how data should be mapped to resource elements in PUSCH channels.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:PDSwap OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:PDSwap?</code>
Example	<code>:EVM:CCAR0:ULIN:SYNC:PDSW ON</code> <code>:EVM:CCAR0:ULIN:SYNC:PDSW?</code>
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:SYNC:PDSwap</code>

## Carrier Allocated

Indicates whether the carrier is allocated, this parameter is used when in-band emission is measured for UEs supporting contiguous CA.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:CARRier:ALLOcated OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:CARRier:ALLOcated?</code>
Example	<code>:EVM:CCAR0:PROF:CARR:ALL ON</code> <code>:EVM:CCAR0:PROF:CARR:ALL?</code>
Preset	ON
State Saved	Yes

## Tx Antenna (Downlink)

This control allows you to set up Antenna parameters for LTE-A or NB-IoT downlink signals.

## Tx Antenna Tab

This control allows you to set up Antenna parameters for LTE-A signals.

## Number of C-RS Ports

Selects the number of C-RS Ports.

- ANT1 - 1 Port: Selects one C-RS Port.
- ANT2 - 2 Ports: Selects two C-RS Port.
- ANT4 - 4 Ports: Selects four C-RS Ports.

Number of C-RS Ports specifies the number of C-RS (Cell-specific RS) antenna ports there are for the current LTE-A signal, and thus determines how many C-RS antenna port signals the demodulator searches for.

### NOTE

When RS-PRS is set to Custom and any of the C-RS antenna port signals are phase delayed by more than 45 degrees, the demodulator auto-detects a different RS-PRS. This causes equalization to be incorrect and demodulation fails.

To ensure correct demodulation of signals containing an antenna port transmission with a phase rotation of more than 45 degrees, set RS-PRS to 3GPP to enable RS-PRS to be determined by Cell ID according to the standard.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:NUMBer ANT1   ANT2   ANT4</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:NUMBer?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:ANT:NUMB ANT1</code>
Dependencies	When Sync Type for Downlink is set to C-RS, the Custom selection is disabled and the control is grayed out
Preset	ANT1
State Saved	Yes
Range	1 Port 2 Ports 4 Ports
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:SYNC:ANTenna:NUMBer</code>

## Reference C-RS Port

Selects which Reference C-RS Port to use.

- P0 - C-RS Port 0
- P1 - C-RS Port 1
- P2 - C-RS Port 2
- P3 - C-RS Port 3

Reference C-RS Port determines which C-RS path to use for synchronization and initial equalization and to show on certain non-MIMO traces (listed below). This parameter determines the transmitted Cell-specific RS antenna port.

Auto/Man selection enables you to specify whether the analyzer uses auto-detection or manual mode to determine the reference C-RS antenna port.

- Auto - The demodulator searches for the strongest C-RS antenna port signal and uses that C-RS port as the reference.
- Man - Selected C-RS port is used as the reference.

C-RS metrics for other C-RS/Rx paths are expressed relative to the C-RS metrics for the reference C-RS/Rx path. For example, when C-RS port 0 and Rx0 (Measurement Channel 1) are selected, the C-RS0/Rx0 section of the MIMO Info Table shows 0 dB for RSPwr and the other C-RS/Rx paths' RSPwr is expressed in dB relative to this 0 dB point.

NOTE

In the absence of cross-channel paths (when connecting directory to the transmitter), make sure that the specified C-RS path is present; otherwise, the signal is not demodulated.

**The Sync Type parameter affects how the reference C-RS path must be specified.**

NOTE

Sync Type = P-SS (note: Input Signal must contain P-SS)

NOTE

Ref C-RS Port is Man: the demodulator uses the specified reference C-RS antenna port (which must be present on the Input Signal).

NOTE

Ref C-RS Port is Auto: the demodulator automatically detects the strongest C-RS port signal to use for the reference C-RS port.

NOTE

**when PUSCH is selected as the Sync Type**

NOTE

**= RS: reference path auto detection is not supported and the reference C-RS path must be specified manually.**

This parameter also determines which C-RS path results are shown on the following traces:

- Eq Chan Freq Resp
- Eq Chan Freq Resp Diff
- Eq Impulse Response
- Common Tracking Error
- Inst Eq Chan Freq Resp
- Inst Eq Chan Freq Resp Diff
- Freq Err per Slot

To view show information for all detected antenna port signals, set the window to display "MIMO (Downlink)" on page 1344 traces.

**NOTE**

**P-SS and S-SS must be present in the time capture (Raw Main Time) for successful demodulation to occur. For example, for two-channel transmit diversity signal that has P-SS and S-SS transmitted only on antenna 2, the demodulator can analyze antenna 2 without antenna 1 connected, but not vice versa.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:PORT P0   ...   P3</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:PORT?</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:PORT:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:PORT:AUTO?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:ANT:PORT P0</code> <code>:EVM:CCAR0:DLIN:SYNC:ANT:PORT?</code>
Dependencies	When Number of C-RS Ports is 1 Port, only Port 0 is enabled and the others are disabled. When Number of C-RS Ports is 2 Ports, Port 0 and Port 1 are enabled and the others are disabled. When Number of C-RS Ports is 4 Ports, all Ports are enabled
Preset	P0 ON
State Saved	Yes Yes
Range	Port 0 Port 1 Port 2 Port 3
Backwards	<code>[ :SENSe]:EVM:DLINK:SYNC:ANTenna:PORT</code>
Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:SYNC:ANTenna:PORT:AUTO</code>

## P-SS/S-SS Antenna

Selects the Antenna Port that is transmitting P-SS/S-SS when the Number of C-RS Ports is set to 2 Ports or 4 Ports.

When All Ports is selected, the Power Boost value for P-SS and S-SS entered in Downlink Control Channel Properties is assumed to be split equally among the transmit antennas.

For example, when P-SS Power Boost = 0.6 dB and P-SS/S-SS Antenna Port is set to All Ports for a four antenna port signal, the demodulator expects P-SS power on each antenna port to be 0.6 dB - 6.02 dB = -5.38 dB.

Otherwise, when Port 0, Port 1, Port 2, or Port 3 is selected, the entire power specified by the P-SS and S-SS Power Boost parameter is assumed to be transmitted on the selected antenna port.

- PORT0 - Port 0
- PORT1 - Port 1
- PORT2 - Port 2
- PORT3 - Port 3
- APORts - All Ports

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0 ... 4:DLINK:SYNC:SS:ANTenna:PORT P0   P1   P2   P3   APORts</code> <code>[ :SENSe ] :EVM:CCARrier0 ... 4:DLINK:SYNC:SS:ANTenna:PORT?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:SS:ANT:PORT P0</code> <code>:EVM:CCAR0:DLIN:SYNC:SS:ANT:PORT?</code>
Dependencies	Disabled when Number of C-RS Ports is 1 Port
Preset	P0
State Saved	Yes
Range	Port 0 Port 1 Port 2 Port 3 All Ports
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:DLINK:SYNC:SS:ANTenna:PORT</code>

## Antenna Detect Threshold

Sets the Antenna Detection Threshold.

Antenna Detection Threshold sets the threshold for transmit antenna port signal detection. The average RS power from a Tx antenna port has to be above the

Antenna Detection Threshold to be detected by the demodulator. The threshold is specified relative to the average RS subcarrier power level of the reference antenna path selected.

For example, a combination of the transmissions from Ports 0-3 are being received, Antenna Detection Threshold is set to -10 dB, Reference Tx Antenna Port is set to Port 1. The demodulator sets the detection threshold 10 dB below the average RS power level of the reference antenna path (Tx1). Any other antenna port transmission paths with an average RS power level that is at or below this threshold is not detected nor included in demodulation results. However, any undetected transmissions affects EVM since they are not equalized and act as noise.

**NOTE**

**Include Inactive Antenna Paths shows information about all Tx paths on the MIMO trace.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:DETECT:THReshold &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:DETECT:THReshold?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:ANT:DET:THR -10</code> <code>:EVM:CCAR0:DLIN:SYNC:ANT:DET:THR?</code>
Dependencies	This parameter is disabled when Number of C-RS Ports is 1 Port
Preset	-10
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:SYNC:ANTenna:DETECT:THReshold</code>

### Inactive Antenna Path

Selects whether or not inactive antenna paths are included in the result.

- Include - All Tx/Rx antenna paths are shown on the "MIMO (Downlink)" on page 1344 traces whether or not the path is present.
- Exclude - Only Tx/Rx antenna paths that have an average RS power above the antenna detection threshold is shown on the "MIMO (Downlink)" on page 1344 traces.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:INACTive:PATHs INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:ANTenna:INACTive:PATHs?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:ANT:INAC:PATH INCL</code> <code>:EVM:CCAR0:DLIN:SYNC:ANT:INAC:PATH?</code>

Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<a href="#">[:SENSe]:EVM:DLINK:SYNC:ANTenna:INACtive:PATHs</a>

## NB-IoT Tx Antenna Tab

This control allows you to set up Antenna parameters for NB-IoT signals.

### Inactive Antenna Path

See ["Inactive Antenna Path" on page 1480](#).

### Advanced Sync Setup

This control allows you to set up more parameters for sync setup.

### Cyclic Prefix Length

Selects whether to automatically detect the Cyclic Prefix Length or specify the cyclic prefix length for Downlink or Uplink.

- AUTO - Auto detect the Cyclic Prefix Length
- NORMal - Specify Cyclic Prefix Length as Normal (7.03125% the length of the symbol)
- EXTended - Specify Cyclic Prefix Length as Extended (25% the length of the symbol)

Cyclic Prefix Length specifies the cyclic prefix mode. The current Cyclic Prefix Length mode is displayed in the Error Summary trace.

The Cyclic Prefix is added by the transmitter to each OFDM symbol by taking the last 7% (or 25% for extended Cyclic Prefix) of the OFDM symbol and appending it to the front. The addition of the Cyclic Prefix enables time for all the paths in a multipath environment to arrive at the receiver before the symbol is demodulated.

See ["Symbol Time Adjust" on page 1490](#) for information about setting the location of the symbol FFT.

Remote	<a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:CPLength</a> <b>AUTO</b>   <b>NORMal</b>   <b>EXTended</b>
--------	--

Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:CPLength AUTO   NORMal   EXTended [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:CPLength? [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:CPLength? [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:CPLength:AUTO OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:CPLength:AUTO OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:CPLength:AUTO? [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:CPLength:AUTO?</pre>
Example	<pre>:EVM:CCAR0:DLIN:SYNC:CPL NORM :EVM:CCAR0:DLIN:SYNC:CPL? :EVM:CCAR0:DLIN:SYNC:CPL:AUTO 1 :EVM:CCAR0:DLIN:SYNC:CPL:AUTO?</pre>
Preset	AUTO ON
State Saved	Yes Yes
Range	Normal Extended
Backwards Compatibility SCPI	<pre>[ :SENSe]:EVM:DLINK:SYNC:CPLength [ :SENSe]:EVM:ULINK:SYNC:CPLength</pre>

## Time Scale Factor

Sets Time Scale Factor.

Time Scale Factor sets the value by which to scale the bandwidth and time lengths of the measured signal. This setting can be used to compensate for mistuned crystals or to enable demodulation of signals at a lower rate, such as half rate or 1/10 rate.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:TIME:SCALE:FACTOR &lt;value&gt; [ :SENSe]:EVM:CCARrier0 ... 4:TIME:SCALE:FACTOR?</pre>
Example	<pre>:EVM:CCAR0:TIME:SCAL:FACT 1 :EVM:CCAR0:TIME:SCAL:FACT?</pre>
Preset	1
State Saved	Yes
Min	0.0625
Max	16
Backwards Compatibility SCPI	<pre>[ :SENSe]:EVM:TIME:SCALE:FACTOR</pre>

## Multi Carrier Filter

Specifies whether or not to apply a filter to the received component carrier to filter out adjacent carriers.

When other carriers are expected to be adjacent to the component carrier of interest, this multi-carrier filter can be used to filter out the unwanted carrier and minimize leakage into the component carrier of interest.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:MCFilter:STATe OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:MCFilter:STATe?</code>
Example	<code>:EVM:CCAR0:MCF:STAT ON</code> <code>:EVM:CCAR0:MCF:STAT?</code>
Dependencies	Multi-Carrier Filter is coupled to Number of Component Carriers. If the number of Component Carriers is 1, the state of multi-carrier filter is OFF; If the number of Component Carriers is greater than 1, the state of multi-carrier filter per CC is ON
Preset	OFF ON ON ON ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:MCFilter:STATe OFF   ON   0   1</code>

## Opposite Direction Active (TDD only)

Specifies whether or not the signal for opposite direction is present in the signal under test. For example, when downlink signal is under test, if there is also uplink signal present in uplink subframe, set the Opposite Direction Active to On makes the measurement more accurate with the knowledge of possible interference from uplink subframes.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ODActive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ODActive?</code>
Example	<code>:EVM:CCAR0:ODAC ON</code> <code>:EVM:CCAR0:ODAC?</code>
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ODActive</code>

## Extended Freq Lock Range

Provides the ability to reduce the frequency lock range. When this parameter is on, the frequency lock range is two and a half times the subcarrier spacing or 37.5 kHz. When this parameter is off, it is reduced to one half the subcarrier spacing, or 7.5kHz, which enables faster processing time.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EXTended:FREQuency:LOCK:RANGe OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EXTended:FREQuency:LOCK:RANGe?</code>
Example	<code>:EVM:CCAR0:EXT:FREQ:LOCK:RANG OFF</code> <code>:EVM:CCAR0:EXT:FREQ:LOCK:RANG?</code>
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:EXTended:FREQuency:LOCK:RANGe</code>

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMAl   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## Sync Slot

Specify the slot number as the synchronization reference to perform synchronization when the sync type is C-RS for the downlink signal. By default it still uses the zero slot as the synchronization reference.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:SLOT &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:SYNC:SLOT?</code>
Example	<code>:EVM:CCAR0:DLIN:SYNC:SLOT 0</code> <code>:EVM:CCAR0:DLIN:SYNC:SLOT?</code>
Dependencies	Available when Direction is Downlink Enabled when downlink sync type is C-RS
Preset	0
State Saved	Yes
Min	0
Max	19

### Exclude EVM Transient Time (TDD only)

Excludes the EVM results calculated from part of OFDM symbols during a PUSCH allocation change as specified by the standard.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EETTime OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EETTime?</code>
Example	<code>:EVM:CCAR0:EETT ON</code> <code>:EVM:CCAR0:EETT?</code>
Notes	Available when Direction is Uplink
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:EETTime</code>

### Advanced Demod Setup

This control allows you to set up more parameters for demodulation.

### Equalizer Training

Displays a menu that enables you to set whether or not to equalize the signal.

Channel equalization only applies to phase and amplitude. For information about signal-level timing correction, see ["Sync Type \(FDD/TDD Downlink\)" on page 1465](#).

**NOTE**

Small-scale deviations (slot-by-slot or symbol-by-symbol) from the equalization channel frequency response are compensated by EVM Minimization.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning OFF   RS   RSD</code>
Example	<code>:EVM:CCAR0:EQU:TRA RS</code> <code>:EVM:CCAR0:EQU:TRA?</code>
Preset	RS
State Saved	Yes
Range	None   RS   RS + Data
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:EQUalizer:TRAIning</code>

## More Information

### Downlink:

The channel frequency response is computed over the entire Result Length, and the resulting coefficients are shown in the Eq Chan Freq Resp trace.

- OFF - When Off is selected, no equalization is applied to the signal.
- RS - When RS is selected, equalization is performed using the frequency response calculated from the reference signal for the reference antenna path. The channel frequency response for subcarriers between reference signals is linearly interpolated. For downlink, the standard only specifies using the reference signal for equalization. However, the LTE demodulator can apply a RS+Data equalization for single-channel downlink signals.
- RSD - When RS+Data is selected, equalization is performed using the frequency response calculated using the reference signal and the data subcarriers. RS+Data equalization is not supported for multi-antenna downlink signals (when number of input channels is greater than 1).

When including data (PDSCH) subcarriers in equalizer calculations:

1. The demodulator equalizes the signal using the reference signal and demodulates the data subcarrier values.
2. Using the demodulated signal, the demodulator calculates a reference LTE signal (shown in IQ Ref)

3. Then the demodulator calculates another equalizer channel frequency response by comparing all the measured PDSCH and RS subcarrier values with the corresponding reference subcarrier values
4. Finally, the channel frequency response including PDSCH is applied to the signal, the signal is demodulated, and the results of the demodulation are shown on the traces

A moving average can be applied to the RS subcarriers in frequency. For more information, see ["Moving Average Filter \(Downlink only\)" on page 1488](#).

NOTE

To see the measured channel frequency response for the current Tx/Rx path, use the Eq Chan Freq Resp trace.

To see the measured channel frequency responses for all Tx/Rx paths, use the MIMO Eq Chan Freq Resp trace.

The **Equalizer Training** setting determines what subcarriers are used when the Tracking method of EVM Minimization is selected. See the ["EVM Minimization" on page 1493](#) for more information.

---

### Uplink:

Channel frequency responses are computed and equalization is applied on a slot-by-slot basis. These per-slot channel frequency responses are shown in the ["Eq Ch Freq Resp Per Slot" on page 1343](#) trace. The Eq Ch Frequency Response trace however shows a single set of channel frequency response coefficients computed from the time data in the Search Time trace (capture length defined by ["Result Length" on page 1460](#)).

- OFF - When Off is selected, the channel frequency response is still calculated from the DM-RS subcarriers but is not applied to the signal.
- RS - When RS is selected, the signal is equalized using the channel frequency response calculated using the DM-RS subcarriers in the signal.
- RSD - When RS+Data is selected, the LTE demodulator calculates the equalizer channel frequency response according to the standard using the DM-RS subcarriers and the DFT-spread (SC-FDMA) subcarriers (PUSCH). The LTE standard specifies that an RS+Data equalization should be performed for uplink signals.

NOTE

PRACH equalization is done differently from the other uplink channels' equalization. First, the channel frequency response is calculated for a PRACH transmission by comparing the received preamble sequence to the reference preamble sequence. Then, the channel frequency response is averaged to a single correction value and this correction is applied to all subcarriers in the

**PRACH preamble. Each PRACH transmission is equalized separately from the other PRACH transmissions.**

PRACH equalization is done this way because if each PRACH subcarrier were corrected individually, the equalization simply removes the error from the PRACH transmission (resulting in near zero EVM) since the channel frequency response is calculated from the same subcarriers that are being equalized.

### Equalizer Training Mode (Uplink only)

Selects the equalization method. This control is available only when Direction is set to Uplink.

- ZFORcing - Use Zero-Forcing equalizer
- LSquares - Use Least Squares equalizer

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning:MODE ZFORcing   LSquares</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning:MODE?</code>
----------------	---

Example	<code>:EVM:CCAR0:EQU:TRA:MODE ZFOR</code> <code>:EVM:CCAR0:EQU:TRA:MODE?</code>
---------	--

Dependencies	Available only when Direction is Uplink. Disabled when Sync Type is PRACH
--------------	---

Preset	LSquares
--------	----------

State Saved	Yes
-------------	-----

Range	Zero Forcing Least Squares
-------	----------------------------

Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:EQUalizer:TRAIning:MODE</code>
------------------------------	--

### Moving Average Filter (Downlink only)

Sets the value and state of the Moving Avg Filter.

Moving Avg Filter specifies whether or not to perform a moving average (frequency smoothing) on the reference signals during equalization, as well as the number of RS subcarriers to use in each average.

When Equalizer Training is set to **RS**, a value of 5 RS means the value of an RS subcarrier is calculated as the average of the value of that subcarrier and the values of the next two and previous two RS subcarriers in frequency.

When Equalizer Training is set to **RS+Data**, data subcarriers (PDSCH) in between the RS subcarriers are included in the average. For example, a setting of 3 RS means that the value of an RS subcarrier is taken as the average of the next and previous

RS subcarrier in frequency and all data subcarriers that are in between the next and previous RS subcarriers.

For RS subcarrier locations that do not have enough RS subcarriers to one side or the other (those near the edge of the frequency spectrum), the average is taken over available reference signal subcarriers.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning:MAFilter:LENGth &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning:MAFilter:LENGth?</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning:MAFilter OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning:MAFilter?</code>
Example	<code>:EVM:CCAR0:EQU:TRA:MAF:LENG 19</code> <code>:EVM:CCAR0:EQU:TRA:MAF:LENG?</code> <code>:EVM:CCAR0:EQU:TRA:MAF ON</code> <code>:EVM:CCAR0:EQU:TRA:MAF?</code>
Notes	This parameter always clips to an odd number. Available when Direction is Downlink.
Preset	19 ON
State Saved	Yes Yes
Range	On Off
Min	1
Max	399
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:EQUalizer:TRAIning:MAFilter:LENGth</code>

### MIMO Channel Freq Normalize (Downlink only)

Selects normalized or non-normalized MIMO Ch Frequency Response trace data. Normalized trace data is scaled to show each MIMO channel antenna path frequency response trace centered around 0 db. For normalized traces, all MIMO Channel paths are individually normalized for magnitude, phase, and time offset. For non-normalized trace data, the trace data is not scaled or modified.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning:MCFNormalize OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EQUalizer:TRAIning:MCFNormalize?</code>
Example	<code>:EVM:CCAR0:EQU:TRA:MCFN OFF</code> <code>:EVM:CCAR0:EQU:TRA:MCFN?</code>
Dependencies	Available only when Direction is Downlink

Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe ] : EVM : EQUalizer : TRAIning : MCFNormalIze</code>

## Symbol Time Adjust

Sets the demodulator to equalize the signal (that is, whether or not to compensate for measured channel frequency response).

Remote Command	<code>[ :SENSe ] : EVM : CCARrier0   ...   4 : SYMBol : TIMing : ADJust MAX   MIN   START   END   CENTER   FFTSize</code> <code>[ :SENSe ] : EVM : CCARrier0   ...   4 : SYMBol : TIMing : ADJust ?</code>
Example	<code>: EVM : CCAR0 : SYMB : TIM : ADJ MAX</code> <code>: EVM : CCAR0 : SYMB : TIM : ADJ ?</code>
Preset	MAX
State Saved	Yes
Range	Max of EVM Win Start/End Min of EVM Win Start/End EVM Window Start EVM Window End EVM Window Center %FFT Size
Backwards Compatibility SCPI	<code>[ :SENSe ] : EVM : SYMBol : TIMing : ADJust</code>

## More Information

- Max of EVM Window Start/End:  
Selects Max of EVM Window Start/End for Symbol Timing Adjust . When Max of EVM Window Start / End selected, the EVM for each subcarrier comes from the data set determined in the following manner: For each OFDM symbol, two FFTs are taken to determine the values of the subcarriers. The first FFT is taken starting at the beginning of the EVM Window. The second is taken starting at the end of the EVM Window. Two sets of EVMs are calculated for the subcarriers, one from each FFT. Then an RMS average is taken over each set. The set with the highest RMS average EVM is then chosen as the set to use in EVM and demodulation results.
- Min of EVM in Start/End:  
Selects Min of EVM Window Start/End for Symbol Timing Adjust. When Min of EVM Window Start / End is selected, the EVM for each subcarrier comes from the data set determined in the following manner: For each OFDM symbol, two

FFTs are taken to determine the values of the subcarriers. The first FFT is taken starting at the beginning of the EVM Window. The second is taken starting at the end of the EVM Window. Two sets of EVMs are calculated for the subcarriers, one from each FFT. Then an RMS average is taken over each set. The set with the highest RMS average EVM is then chosen as the set to use in EVM and demodulation results.

- EVM Window Start:  
Selects EVM Window Start for Symbol Timing Adjust .
- EVM Window End:  
Selects EVM Window Stop for Symbol Timing Adjust.
- EVM Window Center:  
Selects EVM Window Center for Symbol Timing Adjust.
- % FFT Size

### % FFT Size

Selects %FFT Size for Symbol Timing Adjust which enables you to enter the value. When % of FFT Size is selected, the symbol FFT used for EVM and demodulation results begins at the specified location. A maximum value of 0% begins the FFT at the end of the CP (beginning of the Symbol). The minimum value of -7.125% (or -25% for extended CP Length) begins the FFT at the beginning of the cyclic prefix. Setting the value to 0% provides the maximum amount of time for all the paths in a multipath environment to arrive at the receiver before the symbol FFT is taken.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:SYMBOL:TIMing:ADJust:USER &lt;percent&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:SYMBOL:TIMing:ADJust:USER?</code>
Example	<code>:EVM:CCAR:SYMB:TIM:ADJ:USER -3.125</code> <code>:EVM:CCAR:SYMB:TIM:ADJ:USER?</code>
Preset	-3.125 %
State Saved	Yes
Min	-25 %
Max	0 %
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:SYMBOL:TIMing:ADJust:USER</code>

### EVM Window

Selects the EVM Window Length.

EVM Window Length specifies the length of the window used for EVM calculations. The EVM window is centered in the cyclic prefix.

- 3GPP: Sets EVM Window Length according to the LTE standard for EVM measurements.
- Custom: The EVM window length can also be specified in the range of 1–512 samples. A value of 512 samples corresponds to the entire CP length for Extended CP on a 20 MHz signal.

The standard states that the EVM for an LTE signal’s subcarriers should be taken from the higher of the two EVM RMS averages calculated from the FFTs taken from the start and from the end of the EVM window. For example, an EVM Window Length of 3 samples means that two FFTs are taken, one on either sample adjacent to the center sample of the CP. The EVMs for the subcarriers come from the FFT with the higher EVM RMS average. However, the location of the symbol FFT used for EVM calculations can be set specifically using the Symbol Timing Adjust parameter.

**NOTE**

**A value of 1 sample causes the EVM to be measured from an FFT taken from the center of the cyclic prefix, since any other FFTs are just taken over the same sample points.**

**EVM Window Length does not apply when Symbol Timing Adjust is set to % of FFT Size or EVM Window Center since these settings cause only one FFT to be taken starting from the specified location within the cyclic prefix regardless of the EVM Window Length setting.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:WINDow:LENGth GPP   CUSTom</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:WINDow:LENGth?</code>
Example	<code>:EVM:CCAR0:WIND:LENG GPP</code> <code>:EVM:CCAR0:WIND:LENG?</code>
Preset	GPP
State Saved	Yes
Range	RS None
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:WINDow:LENGth</code>

### Custom Length

Sets the EVM Window Length. This control is available only when EVM Window Length is set to Custom.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:WINDow:LENGth:CUSTom &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:WINDow:LENGth:CUSTom?</code>
----------------	---

Example	<code>:EVM:CCAR0:WIND:LENG:CUST 1</code> <code>:EVM:CCAR0:WIND:LENG:CUST?</code>		
Preset	32		
State Saved	Yes		
Min	1		
Max	128 The max value differs depending on the Sync Type (Uplink) and BW that you selected		
	BW	Max Length when Sync Type is PRACH	Max Length when Sync Type is NOT PRACH
	1.4 MHz	1314	32
	3 MHz	2628	64
	5 MHz	5256	128
	10 MHz	10512	256
	15 MHz	15768	384
	20 MHz	21024	512
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:ULINK:WINDow:LENGth:CUSTom</code>		

## EVM Minimization

Selects whether or not EVM Minimization algorithm are applied. EVM Minimization uses the reference signal to correct the signal.

- OFF - Disable EVM Minimization
- 3GPP - 3GPP EVM minimization, the demodulator calculates timing, frequency/phase and IQ offset corrections using the reference signal and the data subcarriers as defined in Section F.3.1 of 36.141 for DL and Section E.3.1 of 36.521 for UL. For downlink, the data subcarriers are from PDSCH, and for uplink the data subcarriers are from PUSCH and PUCCH. The demodulator applies the corrections on a slot-by-slot basis for uplink, or on a subframe-by-subframe basis for downlink, as defined by the LTE standard.
- TRACKing - Tracking, the demodulator applies corrections on a symbol-by-symbol basis and the Equalizer Training parameter determines whether or not data subcarriers are included in calculating corrections. When Equalizer Training is set to RS+Data, EVM Minimization Tracking is performed using the reference signal and the PDSCH data subcarriers. When Equalizer Training is set to RS or Off, EVM Minimization Tracking is performed using only the reference signal.

Reference signal subcarriers are transmitted periodically in time and frequency. The demodulator compares the reference signals with the expected data sequence and computes an error, or correction value, that can be used to track phase, amplitude, and timing at the symbol level when Tracking is selected and at the slot or subframe level when 3GPP is selected. For subcarriers that do not have a corresponding reference subcarrier to compare to, the correction value is calculated by linearly interpolating between RS (and PDSCH, when Equalizer Training is set to RS+Data) subcarrier corrections.

When corrections are averaged and applied to a slot or subframe, the same correction is applied to each symbol in the slot or subframe.

There are four corrections that can be applied to the signal to minimize the EVM: Amplitude, Frequency/Phase, Timing, and IQ Offset (IQ Offset is only for Uplink). See ["EVM Minimization Items" on page 1494](#) for more details.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize OFF   GPP   TRACking</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize?</code>
Example	<code>:EVM:CCAR0:EVMM OFF</code> <code>:EVM:CCAR0:EVMM?</code>
Dependencies	3GPP is available only when Number of C-RS Ports is set to 1 Port
Preset	3GPP
State Saved	Yes
Range	Off 3GPP Tracking
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:EVMMinimize</code>

## EVM Minimization Items

Four types of corrections are available. They are calculated by comparing the measured reference signal to the ideal reference signal:

- Amplitude - When selected, the average reference signal amplitude error is used to correct the amplitudes of the subcarriers.
- Frequency/Phase - When selected, the average reference signal phase difference is used to adjust subcarrier phase.
- Timing - When selected, the average slope (average rate of change) of the RS phase in the frequency domain is used to correct the timing.
- IQ Offset (uplink, 3GPP only) - When selected, any IQ offset is compensated for on a slot-by-slot basis. This type of EVM minimization is only available when 3GPP is selected and the direction is uplink.

- IQ Imbalance - When selected, IQ gain, Quadrature error and Timing Skew are compensated. EVM result is minimized to exclude those IQ errors.

For uplink, both equalization and 3GPP EVM Minimization occur on a slot-by-slot basis, while for downlink, equalization occurs over the entire Measurement Interval and 3GPP EVM Minimization occurs on a subframe-by-subframe basis.

## Timing

Selects whether or not Timing is to be used for EVM minimization algorithm.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:TIMing OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:TIMing?</code>
Example	<code>:EVM:CCAR0:EVMM:TIM OFF</code> <code>:EVM:CCAR0:EVMM:TIM?</code>
Dependencies	Enabled when EVM minimization is set to ON.
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PILot:TRACK:TIMing</code> <code>[ :SENSe]:EVM:EVMMinimize:TIMing</code> <code>[ :SENSe]:EVM:PILot:TRACK:TIMing</code>

## Frequency

Selects whether or not Frequency/Phase is to be used for EVM minimization algorithm.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:FREquency OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:FREquency?</code>
Example	<code>:EVM:CCAR0:EVMM:FREQ OFF</code> <code>:EVM:CCAR0:EVMM:FREQ?</code>
Dependencies	Enabled when EVM minimization is set to ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PILot:TRACK:PHASe</code> <code>[ :SENSe]:EVM:EVMMinimize:FREquency</code> <code>[ :SENSe]:EVM:PILot:TRACK:PHASe</code>

## Amplitude

Selects whether or not Amplitude is to be used for EVM minimization algorithm.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:AMPLitude OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:AMPLitude?</code>
Example	<code>:EVM:CCAR0:EVMM:AMPL OFF</code> <code>:EVM:CCAR0:EVMM:AMPL?</code>
Dependencies	Enabled when EVM minimization is set to ON
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PILot:TRACk:AMPLitude</code> <code>[ :SENSe]:EVM:EVMMinimize:AMPLitude</code> <code>[ :SENSe]:EVM:PILot:TRACk:AMPLitude</code>

## IQ Imbalance

Selects whether or not IQ Imbalance is to be used for EVM minimization algorithm.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:IQIMbalance OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:IQIMbalance?</code>
Example	<code>:EVM:CCAR0:EVMM:IQIM OFF</code> <code>:EVM:CCAR0:EVMM:IQIM?</code>
Dependencies	Enabled when EVM minimization is not OFF
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:EVMMinimize:IQIMbalance</code>

## IQ Offset

Selects whether or not IQ Offset is to be used for EVM minimization algorithm.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:IQOffset OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:EVMMinimize:IQOffset?</code>
Example	<code>:EVM:CCAR0:EVMM:IQOF OFF</code> <code>:EVM:CCAR0:EVMM:IQOF?</code>
Notes	The parameter is shared by LTE and NB-IoT

	When in NB-IoT, whether IQ Offset is used for EVM minimization algorithm is available both for uplink signal and downlink signal
Dependencies	Available when EVM minimization is set to ON and Direction is Uplink for LTE Available both for downlink and uplink when EVM minimization is set ON for NB-IoT
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:SYNC:IQOComp</code> <code>[ :SENSe]:EVM:EVMMinimize:IQOFfset</code>

### Higher Order Modulation

Enables the higher order modulation which is greater than 64 QAM on the physical channels.

When the state is on, the higher order modulation such as 256 QAM modulation is enabled; when it is off, it only supports the modulation of the physical channels which the modulation types are less than 256QAM.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:HOModulation:STATe OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:HOModulation:STATe?</code>
Example	<code>:EVM:CCAR0:HOM:STAT ON</code> <code>:EVM:CCAR0:HOM:STAT?</code>
Dependencies	Available when LTE-Advanced FDD/TDD license installed
Preset	OFF
State Saved	Yes
Range	On Off

### PDSCH Modulation&TBS Index Table

Selects Modulation and TBS Index Table for PDSCH, which helps to determine the modulation order in PDSCH.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PDSCh:MTITable T1   T2   T3</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PDSCh:MTITable?</code>			
Example	<code>:EVM:CCAR0:DLIN:PDSC:MTIT T2</code> <code>:EVM:CCAR0:DLIN:PDSC:MTIT?</code>			
Notes	The enum values are: <table border="1" data-bbox="389 1722 1443 1799"> <tr> <td>T1</td> <td>Table 1</td> <td>Modulation and TBS index table 7.1.7.1-1 in 36.213, which supports QPSK / 16QAM / 64QAM</td> </tr> </table>	T1	Table 1	Modulation and TBS index table 7.1.7.1-1 in 36.213, which supports QPSK / 16QAM / 64QAM
T1	Table 1	Modulation and TBS index table 7.1.7.1-1 in 36.213, which supports QPSK / 16QAM / 64QAM		

	<b>T2</b>	Table 2	Modulation and TBS index table 7.1.7.1-1A in 36.213, which supports QPSK / 16QAM / 64QAM / 256QAM
	<b>T3</b>	Table 3	Modulation and TBS index table 7.1.7.1-1B in 36.213, which supports QPSK / 16QAM / 64QAM / 256QAM / 1024QAM
Dependencies	<p>This parameter can be automatically set, depending on <b>Higher Order Modulation</b> and the corresponding license:</p> <p>When <b>Higher Order Modulation</b> is <b>OFF</b>, only Table 1 is enabled/visible</p> <p>When <b>Higher Order Modulation</b> is <b>ON</b>:</p> <ul style="list-style-type: none"> <li>- Table 1 and Table 2 are enabled/visible. The default value of the parameter is Table 2</li> <li>- With 1024QAM support license, Table 1, Table 2, Table 3 are enabled/visible. The default value of the parameter is Table 3</li> </ul>		
Preset	<b>T1</b>		
State Saved	Yes		
Range	<b>T1 T2 T3</b>		

### PDSCH IQ Ref Mode (Downlink only)

Selects the source of the reference constellation points for PDSCH EVM calculation. By default, the reference constellation points are obtained from demodulation. This parameter allows you to specify that the IQ Reference alternatively comes from decoding or is based on the information symbols being all zeros.

Specifies the IQ Reference constellation points' generation mode for PDSCH.

- Demod: IQ reference constellation points are obtained from demodulation
- Decode: IQ reference constellation points come from the symbol decoding
- All Zeros: IQ reference constellation is generated based on the information symbols being all zeros.

Remote Command	<code>[ :SENSE]:EVM:CCARrier0 ... 4:DLINK:PDSCh:IQ:REference DEMod   DECode   ZERO</code> <code>[ :SENSE]:EVM:CCARrier0 ... 4:DLINK:PDSCh:IQ:REference?</code>		
Example	<code>:EVM:CCAR0:DLIN:PDSC:IQ:REF ZERO</code> <code>:EVM:CCAR0:DLIN:PDSC:IQ:REF?</code>		
Dependencies	Available when Direction is Downlink		
Preset	DEM		
State Saved	Yes		
Range	Demod Decode All Zeros		

## Number of Blank RBs

Sets the number of RBs to be blanked. By default, it is zero, and the EVM results are output for normal spectrum without being trimmed. When the number of blank RBs is greater than zero, the number of RBs on both edges of normal spectrum are blanked and they are forced to be excluded from EVM calculation, irrespective of the RB detect mode.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:BRBS:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:BRBS:COUNT?</code>		
Example	<code>:EVM:CCAR0:DLIN:BRBS:COUN 5</code> <code>:EVM:CCAR0:DLIN:BRBS:COUN?</code>		
Dependencies	Available when Direction is Downlink		
Preset	0		
State Saved	Yes		
Min	0		
Max	The max value differs depending on the system bandwidth of the Component Carrier.		
	BW	PRBs	Max Number of Blank PRBs
	1.4 MHz	6	0
	3 MHz	15	0
	5 MHz	25	10
	10 MHz	50	20
	15 MHz	75	20
	20 MHz	100	40

## Channel Profile (Downlink)

This tab contains commonly used functions for channel setup parameters.

### RB Auto Detect

Determines whether or not the user allocations are detected automatically.

#### Downlink:

When set to On, the demodulator can perform power based auto detection or can auto detect allocations by decoding DCI. See the ["RB Auto Detect Mode" on page 1500](#) for more information.

#### Uplink:

When set to On, PUSCH, PUCCH, SRS, and PRACH allocations can be auto-detected when the necessary parameters are defined.

To configure automatic sync slot detection, set "Auto Sync" on page 1634 to On on the Edit User Mapping.

To configure user-assigned auto detection, set "Auto Sync" on page 1634 to Off for a channel and define a "Sync Slot" on page 1635 with associated Per-slot Parameters (in the Edit User Mapping) to be used for initial synchronization.

**NOTE**

The LTE-A demodulator can perform sync slot auto detection or user-assigned auto detection for uplink signals.

User-assigned auto detection results in faster measurements than automatic sync slot detection.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:AUTO[:DETECT] OFF   ON   0   1</code>
Example	<code>:EVM:CCAR0:PROF:AUTO ON</code> <code>:EVM:CCAR0:PROF:AUTO?</code>
Couplings	This parameter is the same for Downlink and Uplink  When Direction is Downlink, this parameter is coupled to the Include User (Downlink) menu. This menu is context sensitive and when Auto Include is On, you may include QPSK, 16QAM, 64QAM, 256QAM or 1024QAM channels. When Off, you may include any of the user defined PDSCCH channels  When direction is Uplink, this parameter is coupled to the Include User (Uplink) menu. This menu is context sensitive and when Auto Include is On the, you may include channels from the Auto Detected User. When Off, you may include channels from ONE of the user defined Users
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:PROFile:AUTO[:DETECT]</code>

## RB Auto Detect Mode

Sets the level of auto detection that the LTE-A demodulator uses. There are two levels of auto detection, described as below:

- Power Based - User allocations are detected using codeword power levels and MIMO parameters. Detected allocations are grouped according to modulation type (QPSK, 16QAM, 64QAM, 256QAM or 1024 QAM). The codeword powers (needed for EVM calculations) and "Precoding" on page 1573 type are not auto-detected and need to be specified. When SpatialMultiplexing is selected as the "Precoding" on page 1573 type, Section "# of Layers" on page 1574, "# of Layers" on page 1574, "# of

[Codewords" on page 1575](#), ["CDD" on page 1576](#), and ["Code Book Index" on page 1577](#) must also be specified, and these parameters are assumed to apply to all auto-detected PDSCH channels.

- Decoded DCI - User allocations are determined by decoding PDCCH if eMTC analysis is disabled, and by decoding both MPDCCH and PDCCH if eMTC analysis is enabled. This selection is available only for downlink signals.

**NOTE**

By setting Auto Detect Power Levels to On, the demodulator can be configured to auto-detect 3GPP-defined codeword power levels. When codeword power levels are not auto-detected, they must be specified using the CW0/1 Power parameters in the Edit User Mapping for each expected user allocation. The number of expected user allocations is set by ["Expected # Users" on page 1502](#) and by selecting the individual users.

This parameter is enabled when RB Auto Detect is set to On.

Only Power Based selection is available when Radio Direction is set to Uplink. There is no corresponding SCPI command for Uplink.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETECT]:MODE POWER   DECODED [:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETECT]:MODE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:MODE POW :EVM:CCAR0:DLIN:PROF:AUTO:MODE?</code>
Dependencies	Available when RB Auto Detect is On Only Power Based is available when Radio is set to Uplink
Preset	POWER
State Saved	Yes
Range	Power Based Decoded DCI
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO[:DETECT]:MODE</code>

### Round to Standard Values

Determines whether the measured, relative power levels for PDSCH allocations are detected as one of the standard values or assumed to be equal to the measured power level.

When it's set to On, the power levels are detected as the closest standard power level. Standard power levels are specified in 3GPP TS 36.331, section 6.3.2 under the PDSCH-Config parameter. These power levels are -6 dB, -4.77 dB, -3 dB, -1.77 dB, 0 dB, 1 dB, 2 dB, and 3 dB. When it's set to Off, the measured power levels are used as the actual power levels.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETECT]:POWer:ROUNd OFF   ON   0   1  [:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETECT]:POWer:ROUNd?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:POW:ROUN ON :EVM:CCAR0:DLIN:PROF:AUTO:POW:ROUN?</code>
Dependencies	Available when the following conditions are met Direction: Downlink Detection: Auto RB Auto Detect Mode: Decoded DCI Auto Detect Power Levels: On
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO[:DETECT]:POWer:ROUNd</code>

## Expected # Users

Specifies the number of user allocations from 1 to 50 when RB Auto Detect Mode is set to Decoded DCI.

Other user allocations detected from PDCCH are shown on traces and included in calculations, but only the number of users specified with this control are included in the Composite Include menu, where they can be excluded from traces and calculations.

When Auto Detect Power Levels is set to OFF, PDSCH Decoded User Power Boost must be specified. This parameter limits the number of PDSCH user allocations for which codeword power levels can be manually defined. When there are more user allocations found in the signal than are specified by this parameter, any additional user allocation is assumed to have a PDSCH power level of 0 dB.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:EUSers:COUNT &lt;integer&gt; [:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:EUSers:COUNT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:EUS:COUN 1 :EVM:CCAR0:DLIN:PROF:EUS:COUN?</code>
Dependencies	Available when RB Auto Detect is On and RB Auto Detect Mode is Decoded DCI
Preset	3
State Saved	Yes
Min	0
Max	50

---

Backwards Compatibility SCPI `[ :SENSe]:EVM:DLINK:PROFile:EUSers:COUNT`

### Copy Auto -> Manual

Copies all autodetected allocations into the Resource Block Editor.

For Downlink, when Copy Auto -> Manual is pressed, each autodetected modulation group is assigned to a user. When RB Auto Detect Mode is set to Power Based, User\_01 contains resource blocks with QPSK; User\_02 contains resource blocks with 16QAM; and User\_03 contains resource blocks with 64QAM; User\_04 contains resource blocks with 256QAM.

When RB Auto Detect Mode is set to Decode PDCCH, the user allocations are copied into the LTE Allocation Editor as manual allocations.

For Uplink, when you click Copy Auto > Manual, User\_01, which contains all autodetected channels, is copied into the LTE Allocation Editor.

This control is useful when you have two signals with identical allocations, where one has a fairly good SNR, but the other has a low SNR. In this case, RB Auto Detect may detect the allocations for the noisy signal incorrectly. To work around this, you can recall the clean signal, autodetect allocations, and press Copy Auto -> Manual. Then you can recall the noisy signal and don't need to rely on auto detection.

Note that existing manual user mappings are overwritten when you press this button.

---

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:COPY[:IMMediate]</code>
Example	<code>:EVM:CCAR0:PROF:COPY</code>
Notes	Available when RB Auto Detect is On
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:PROFile:COPY[:IMMediate]</code>

---

### Control and User Channels

Sets parameters for Control Channels and User Channels.

### Basic Control Channels

Sets parameters for Basic Control Channels.

### Composite Include All

Turns On all Downlink channels.

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0  ...  4:DLINK:PROF:INCLude:ALL</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:INCL:ALL</code>
Couplings	<p>Turns On the following parameters</p> <ul style="list-style-type: none"> <li>- Include P-SCH</li> <li>- Include S-SCH</li> <li>- Include PBCH</li> <li>- Include PCFICH</li> <li>- Include PHICH</li> <li>- Include RS</li> <li>- Include PDCCH</li> </ul> <p>All Users under the Include Users (Downlink) Menu</p>
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:DLINK:PROF:INCLude:ALL</code>

## Composite Exclude All

Turns Off all Downlink channels.

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0  ...  4:DLINK:PROF:EXCLude:ALL</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:EXCL:ALL</code>
Couplings	<p>Turns Off the following parameters</p> <ul style="list-style-type: none"> <li>- Include P-SCH</li> <li>- Include S-SCH</li> <li>- Include PBCH</li> <li>- Include PCFICH</li> <li>- Include PHICH</li> <li>- Include RS</li> <li>- Include PDCCH</li> <li>- Include Non Allocation</li> </ul> <p>All Users under the Include Users (Downlink) Menu</p>

---

Backwards Compatibility SCPI `[ :SENSe]:EVM:DLINK:PROFile:EXCLude:ALL`

### Include P-SS

Includes the Primary Synchronization Channel in the results.

---

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PSS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PSS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PSS INCL</code> <code>:EVM:CCAR0:DLIN:PROF:PSS?</code>
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PSS</code>

### Include S-SS

Includes the Secondary Synchronization Channel in the results.

---

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:SSS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:SSS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:SSS INCL</code> <code>:EVM:CCAR0:DLIN:PROF:SSS?</code>
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:SSS</code>

### Include PBCH

Includes PBCH in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PBCH INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PBCH?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PBCH INCL</code> <code>:EVM:CCAR0:DLIN:PROF:PBCH?</code>
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PBCH</code>

## Include PCFICH

Includes PCFICH in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PCFich INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PCFich?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PCF INCL</code> <code>:EVM:CCAR0:DLIN:PROF:PCF?</code>
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PCFich</code>

## Include PHICH

Includes PHICH in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PHIC INCL</code> <code>:EVM:CCAR0:DLIN:PROF:PHIC?</code>
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINk:PROFile:PHICH</code>

### Include PDCCH

Includes PDCCH in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:PROFile:PDCCh INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:PROFile:PDCCh?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC INCL</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC?</code>
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINk:PROFile:PDCCh</code>

### Include C-RS

Includes RS in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:PROFile:RS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:PROFile:RS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:RS INCL</code> <code>:EVM:CCAR0:DLIN:PROF:RS?</code>
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINk:PROFile:RS</code>

## Include Non-Allocated Symbols

Includes the inactive signals in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:NALLocation INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:NALLocation?</code>
Example	<code>:EVM:CCAR0:PROF:NALL EXCL</code> <code>:EVM:CCAR0:PROF:NALL?</code>
Couplings	This parameter is same for Downlink and Uplink When either Downlink Exclude All or Uplink Exclude All is selected, this parameter is set to Exclude
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:PROFile:NALLocation</code>

## Edit Basic Control Channels

This control allows you to set up more parameters for Basic Control Channels.

### Auto Detect Control Channel Pow Levels

Selects whether or not power levels are autodetected for control channels: P-SS, S-SS, PBCH, PCFICH, PDCCH and PHICH.

- ON – The power levels are auto detected for downlink control channels : P-SS, S-SS, PBCH, PCFICH, PDCCH and PHICH.
- OFF – The power boosts for downlink control channels need to be specified for EVM calculations to be correct.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETect]:CCPower OFF   ON   0</code> <code>  1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETect]:CCPower?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:CCP ON</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:CCP?</code>
Preset	ON
State Saved	Yes
Range	On Off

---

Backwards            [:SENSe]:EVM:DLINK:PROFile:AUTO[:DETECT]:CCPower  
 Compatibility  
 SCPI

### P-SS Power Boost

Sets the Power Boost value for the P-SS.

---

Remote Command	[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PSS:PWRBoost <rel_amp1>
	[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PSS:PWRBoost?
Example	:EVM:CCAR0:DLIN:PROF:PSS:PWRB 0.65 :EVM:CCAR0:DLIN:PROF:PSS:PWRB?
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	[:SENSe]:EVM:DLINK:PROFile:PSS:PWRBoost

### S-SS Power Boost

Sets the Power Boost value for the S-SS.

---

Remote Command	[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:SSS:PWRBoost <rel_amp1>
	[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:SSS:PWRBoost?
Example	:EVM:CCAR0:DLIN:PROF:SSS:PWRB 0.65 :EVM:CCAR0:DLIN:PROF:SSS:PWRB?
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	[:SENSe]:EVM:DLINK:PROFile:SSS:PWRBoost

### PBCH Power Boost

Sets the Power Boost value for the PBCH.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PBCH:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PBCH:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PBCH:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:PBCH:PWRB?</code>
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PBCH:PWRBoost</code>

### PCFICH Power Boost

Sets the Power Boost value for the PCFICH.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PCFich:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PCFich:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PCF:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:PCF:PWRB?</code>
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PCFich:PWRBoost</code>

### C-RS Power Boost

Sets the Power Boost value for the C-RS.

The 0 dB level is set by C-RS Power Boost. A value of 2.5 dB for C-RS Power Boost specifies that the 0 dB level is set to be 2.5 dB below the measured C-RS power level. Other Power Boosts (P-SS, S-SS, PBCH, PCFICH, PDCCH and PHICH) are set relative to the 0 dB level. For example, setting PBCH Power Boost to 0.5 dB when C-RS Power Boost is set to 2.5 dB tells the demodulator to expect the average PBCH power level to be 0.5 dB above the 0 dB level (which is 2.5 dB below the measured C-RS power level).

Remote	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:RS:PWRBoost &lt;rel_amp1&gt;</code>
--------	---

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:RS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:RS:PWRB 2.50</code> <code>:EVM:CCAR0:DLIN:PROF:RS:PWRB?</code>
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:RS:PWRBoost</code>

### PHICH Power Boost

Sets the Power Boost value for the PHICH.

PHICH power boost specifies the BPSK symbol power of each PHICH sequence (unlike the Power Boost for the other channels, which are per-subcarrier). Since each PHICH sequence can potentially have a different BPSK symbol power, provision has been made to auto-detect it by specifying a starting value in this parameter and setting the granularity of the search in the PHICH Power Boost Step. The demodulator detects each PHICH sequence's BPSK symbol power as

$$\text{PHICH power} = (\text{PHICH Power Boost} + k * \text{PHICH Power Boost Step})$$

where k in the range -10 dB £ k\*PHICH Power Boost Step £ 10 dB is the value that brings the equation closest to the actual PHICH BPSK symbol power. Note that setting the PHICH Power Boost Step to 0 dB effective turns off auto-detection of power.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH:PWRBoost &lt;rel_ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PHIC:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:PHIC:PWRB?</code>
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PHICH:PWRBoost</code>

## PHICH +/- Increments

Sets the Power Boost Step value for the PHICH. See "[PHICH Power Boost](#)" on page 1511 for details.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH:PWRBoost:STEP &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH:PWRBoost:STEP?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PHIC:PWRB:STEP 0</code> <code>:EVM:CCAR0:DLIN:PROF:PHIC:PWRB:STEP?</code>
Preset	1 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:ROFile:PHICH:PWRBoost:STEP</code>

## Despread IQ Orthog Sequence Index

Determines the state of Despread IQ Orthogonal Sequence Index.

When set to OFF, displays the PHICH constellation points as received. These points are the summation of all weighted PHICH sequences within the same PHICH group.

When set to ON, the traces to show PHICH constellation points after despreading. Despreading arbitrarily remaps the demodulated values of individual PHICH sequences onto the I and Q values of the subcarriers containing those sequences.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH:DESPread OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH:DESPread?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PHIC:DESP OFF</code> <code>:EVM:CCAR0:DLIN:PROF:PHIC:DESP?</code>
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PHICH:DESPread</code>

## More Information

**NOTE**

Only the IQ Meas, IQ Meas Time, IQ Ref, and IQ Ref Time traces are affected when this parameter is selected.

EVM measurements are always calculated from PHICH IQ points before despreading.

Each PHICH can take on values in the set  $\{-1, 0, 1\}$  which is translated as  $\{\text{NACK}, \text{Inactive}, \text{ACK}\}$ .


### PHICH mapping for Normal CP Length

Subcarrier in a PHICH group	$\text{Re}\{\text{Subcarrier } x\}$ value	$\text{Imag}\{\text{Subcarrier } x\}$ value
Subcarrier 0	PHICH0	PHICH4
Subcarrier 1	PHICH1	PHICH5
Subcarrier 2	PHICH2	PHICH6
Subcarrier 3	PHICH3	PHICH7

### PHICH mapping for Extended CP Length

Subcarrier in a PHICH group	$\text{Re}\{\text{Subcarrier } x\}$ value	$\text{Imag}\{\text{Subcarrier } x\}$ value
Subcarrier 0	PHICH0	PHICH2
Subcarrier 1	PHICH1	PHICH3

Each PHICH subcarrier IQ point represents the values for the two PHICHs determined by the tables above. The image below provides a quick reference to the actual PHICH values for each constellation point in the form (I,Q).

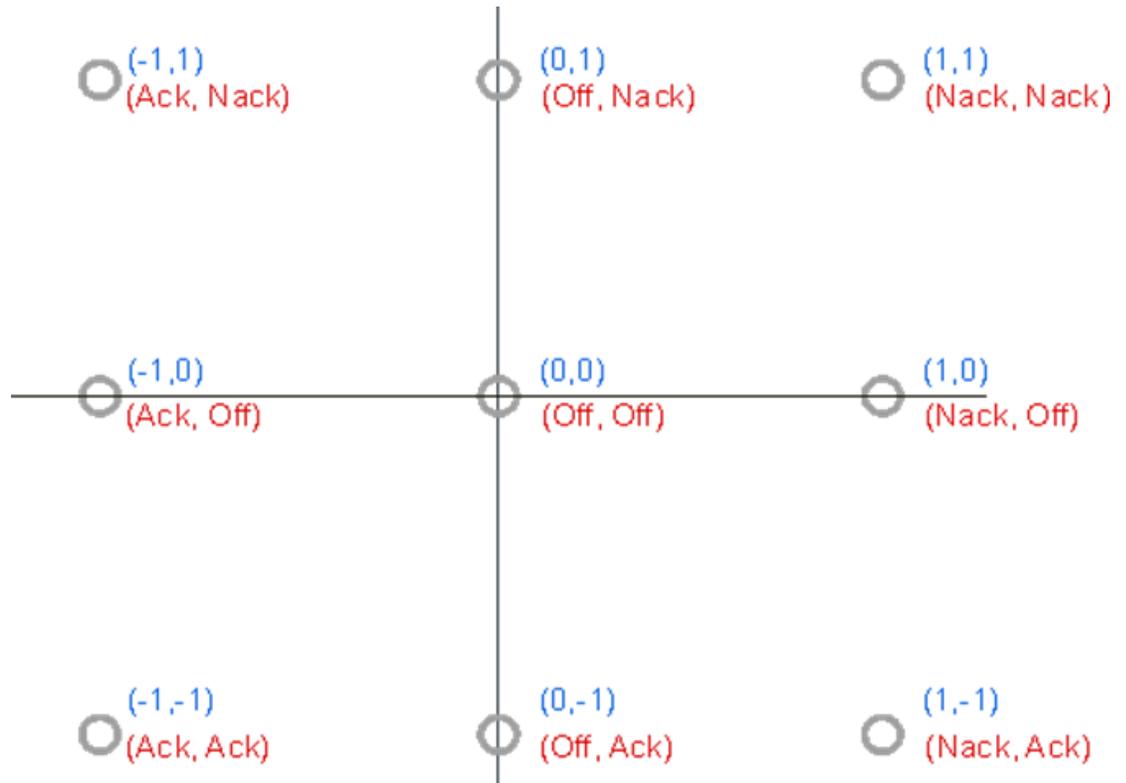

For example, the Subcarrier 1 IQ point in a PHICH group is at (1,0). For a signal with Normal PHICH duration, Subcarrier 1 contains the values for PHICH1 and PHICH5; therefore, PHICH1=Nack and PHICH5=Off.

**NOTE** Each de-spread PHICH IQ constellation point represents the Ack/Nack/Off values of two PHICH's, but does not accurately represent their BPSK symbol power levels.

**NOTE** You can also view the PHICH values in the Symbol Table. PHICH values are from the set  $\{0, 1, 3\}$  which is mapped to  $\{NACK, ACK, OFF\}$ .  
The PHICH sequence values are mapped to the hex digits in the following order for each PHICH group:  
For Normal CP, the order is PHICH index  $\{0, 4, 1, 5, 2, 6, 3, 7\}$   
For Extended CP, the order is PHICH index  $\{0, 2, 1, 3\}$   
When the Symbol Table format is shown in binary, the same mapping order and values are used, but the even-indexed hex digits are truncated to two bits.  
For example, a PHICH group (Normal CP) may show the value 010011 000011 1100 11110011... In this case, the first two bits, 01, indicate an ACK for PHICH0. The next four bits, 0011, indicate OFF for PHICH4. The next two bits, 00,

indicate NACK for PHICH1. The next four bits, 0011, indicate OFF for PHICH5, and so on.

The actual ACK/NACK/Inactive information contained in PHICH can also be viewed in the DL Decode Info table.

## PHICH Allocation (Ng)

Selects the Ng value used in computing the number of resource element groups. Allocation (Ng) is a higher layer parameter configured from the set (1/6, 1/2, 1, 2) that determines the number of PHICH groups per subframe.

- ADETECT - Allocation (Ng) is detected from PBCH.
- R1BY6 - Ng = 1/6
- R1BY2 - Ng = 1/2
- R1 - Ng = 1
- R2 - Ng = 2

The number of PHICH groups in a subframe is given by the equation for  $N_{group\_PHICH}$  in Section 6.9 of 3GPP TS 36.211.

Remote Command	<code>[ :SENSE]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH:ALLocation:RATio ADETECT   R1BY6   R1BY2   R1   R2</code> <code>[ :SENSE]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICH:ALLocation:RATio?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PHIC:ALL:RAT R1</code> <code>:EVM:CCAR0:DLIN:PROF:PHIC:ALL:RAT?</code>
Dependencies	Available when Direction is Downlink
Preset	ADETECT
State Saved	Yes
Range	Auto Detect Ng 1/6 Ng 1/2 Ng 1 Ng 2
Backwards Compatibility SCPI	<code>[ :SENSE]:EVM:DLINK:PROFile:PHICH:ALLocation:RATio</code>

## PHICH Duration

Selects the number of symbols used in each PHICH subframe.

PHICH duration is a higher layer parameter configured either as Normal or Extended that tells the demodulator how many symbols per subframe are used by PHICH.

- ADEtect - PHICH Duration can be autodetected from PBCH
- NORMal - There are 8 PHICH sequences in one PHICH group
- EXTended - There are 4 PHICH sequences in one PHICH group

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICh:DURation ADEtect   NORMal   EXTended</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICh:DURation?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PHIC:DUR NORM</code> <code>:EVM:CCAR0:DLIN:PROF:PHIC:DUR?</code>
Dependencies	Available when Direction is Downlink
Preset	ADEtect
State Saved	Yes
Range	Auto Detect Normal Extended
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PHICh:DURation</code>

### M<sub>i</sub> Definition (TDD only)

Selects which specification the factor M<sub>i</sub> is set to. The factor M<sub>i</sub> is originally defined in 3GPP TS36.211 Table 6.9-1 and it is used to specify the number of PHICH groups which may vary between downlink subframes.

The M<sub>i</sub> parameter determines how many PHICH groups are in each downlink subframe for TDD mode. The values for M<sub>i</sub> depend on the uplink-downlink configuration and are given by Table 6.9-1 in 3GPP TS 36.211. However, 3GPP TS 36.141, section 6.1.2.6 specifies that M<sub>i</sub> must be set to 1 when performing E-TM tests. This is to provide consistency between FDD and TDD test results.

- STD - Standard, the expected values of M<sub>i</sub> are given by Table 6.9-1 in 3GPP TS36.211
- ETM - E-TM, M<sub>i</sub> is expected to equal 1 in all downlink subframes

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICh:MIDefinition STD   ETM</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PHICh:MIDefinition?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PHIC:MID STD</code>
Notes	LTEATDD only
Dependencies	Available when Direction is Downlink LTEATDD only
Preset	STD

State Saved	Yes
Range	Standard E-TM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PHICh:MIDefinition</code>

### Edit PDCCH Control Channels

Displays a menu that enables the configuration of PDCCH parameters.

### Auto Detect Control Channel Pow Levels

See Section ["Auto Detect Control Channel Pow Levels" on page 1508](#) ["Auto Detect Control Channel Pow Levels" on page 1508](#).

### PDCCH Allocation Auto Detect

Determines whether or not the number of PDCCH symbols is autodetected. When On, the analyzer autodetects the PDCCH allocations by decoding PCFICH.

To view the detected number of PDCCH allocations per subframe, use the # PDCCPMCH Power BoostH SymPerSubframe data result on the DL Decode Info summary table.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCh:ALLocation:AUTO[:DETECT] OFF   ON   0   1</code>
Example	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCh:ALLocation:AUTO[:DETECT]?</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:AUTO 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:AUTO?</code>
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCh:ALLocation:AUTO[:DETECT]</code>

### PDCCH Allocation Subframe 0

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 0.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCh:ALLocation:SUBFrame0:SYMBOLs &lt;integer&gt;</code>
----------------	--

Example	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCh:ALLocation:SUBFrame0:SYMBOLs?</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF0:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF0:SYMB?</code>
Dependencies	When PDCCH Allocation Constant is On, all subframes uses this value. Available when PDCCH Allocation Auto Detect is Off
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCh:ALLocation:SUBFrame0:SYMBOLs</code>

### PDCCH Allocation Subframe 1

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 1.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCh:ALLocation:SUBFrame1:SYMBOLs</code> <code>&lt;integer&gt;</code>
Example	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCh:ALLocation:SUBFrame1:SYMBOLs?</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF1:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF1:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCh:ALLocation:SUBFrame1:SYMBOLs</code>

### PDCCH Allocation Subframe 2

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 2.

Remote	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCh:ALLocation:SUBFrame2:SYMBOLs</code>
--------	--

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Command	<code>&lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame2:SYMBOLs?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF2:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF2:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:ALLocation:SUBFrame2:SYMBOLs</code>

### PDCCH Allocation Subframe 3

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 3.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame3:SYMBOLs</code> <code>&lt;integer&gt;</code>
Example	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame3:SYMBOLs?</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF3:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF3:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:ALLocation:SUBFrame3:SYMBOLs</code>

### PDCCH Allocation Subframe 4

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 4.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame4:SYMBOLs &lt;integer&gt;</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF4:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF4:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:ALLocation:SUBFrame4:SYMBOLs</code>

### PDCCH Allocation Subframe 5

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 5.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame5:SYMBOLs &lt;integer&gt;</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF5:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF5:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:ALLocation:SUBFrame5:SYMBOLs</code>

### PDCCH Allocation Subframe 6

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 6.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame6:SYMBOLs &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame6:SYMBOLs?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF6:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF6:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:ALLocation:SUBFrame6:SYMBOLs</code>

### PDCCH Allocation Subframe 7

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 7.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame7:SYMBOLs &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame7:SYMBOLs?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF7:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF7:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:ALLocation:SUBFrame7:SYMBOLs</code>

### PDCCH Allocation Subframe 8

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 8.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame8:SYMBOLs &lt;integer&gt;</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF8:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF8:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:ALLocation:SUBFrame8:SYMBOLs</code>

### PDCCH Allocation Subframe 9

Sets the PDCCH Allocation (Symbols per Subframe) for Subframe 9.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame9:SYMBOLs &lt;integer&gt;</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF9:SYMB 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:ALL:SUBF9:SYMB?</code>
Dependencies	Available when both PDCCH Allocation Auto Detect and PDCCH Allocation Constant are OFF
Preset	3
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 3 - Bandwidth 3 MHz, 5 MHz, 10 MHz, 15 MHz, 20 MHz 4 - Bandwidth 1.4 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:ALLocation:SUBFrame9:SYMBOLs</code>

### PDCCH Power Boost

Sets the Power Boost value for the PDCCH.

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

When RB Auto Detect Mode is set to Decoded DCI, PDCCH power boost (see the section Edit Control Channels for description of Power Boost parameters) can be auto detected by specifying a starting value in this parameter and setting the granularity of the search in the PDCCH Power Boost Step. The demodulator detects PDCCH power as

$$\text{PDCCH power} = (\text{PDCCH Power Boost} + k * \text{PDCCH Power Boost Step})$$

where k in the range  $-10 \text{ dB} \leq k * \text{PDCCH Power Boost Step} \leq 10 \text{ dB}$  is the value that brings the equation closest to the actual PDCCH power.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:PWRBoost &lt;rel_ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:PWRB?</code>
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:PWRBoost</code>

### PDCCH +/- Increments

Sets the Power Boost Step value for the PDCCH. See section "[PDCCH Power Boost](#)" on page 1522 for more details.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:PWRBoost:STEP &lt;rel_ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:PWRBoost:STEP?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:PWRB:STEP 0</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:PWRB:STEP?</code>
Dependencies	Available when RB Auto Detect is On and RB Auto Detect Mode is Decoded DCI, or RB Auto Detect is On and PDCCH Decoding is other than NONE
Preset	1 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PDCCh:PWRBoost:STEP</code>

## Cross-carrier Scheduling

Determines whether or not Cross-Carrier Scheduling is enabled for this Component Carrier.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCC:CCScheduling OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCC:CCScheduling?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:CCSC 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:CCSC?</code>
Preset	OFF
State Saved	Yes
Range	On Off

## CIF Presence

Indicates whether carrier indicator field (CIF) is present (TRUE) or not (FALSE) in PDCCH DCI formats of this component carrier.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCC:CIFPresence OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCC:CIFPresence?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:CIFP ON</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:CIFP?</code>
Dependencies	Available when Cross Carrier Scheduling is enabled
Preset	OFF
State Saved	Yes

## Scheduling Cell Id

Indicates which cell signals the downlink allocations and uplink grants, if applicable, for the concerned Serving Cell.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCC:SCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCC:SCID?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:SCID 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:SCID?</code>
Dependencies	Available when Cross Carrier Scheduling is enabled
Preset	0
State Saved	Yes

Min	0
Max	7

### PDSCH Start OFDM Symbol

Indicates the starting OFDM symbol of PDSCH for the concerned Serving Cell. If CIF presence = TRUE, this value needs to be set. If CIF presence = FALSE, PCFICH has the information of the number of PDCCH symbols.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:PSOSymbol</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PDCCh:PSOSymbol?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PDCC:PSOS 1</code> <code>:EVM:CCAR0:DLIN:PROF:PDCC:PSOS?</code>
Dependencies	Available when Cross Carrier Scheduling is enabled
Preset	1
State Saved	Yes
Min	1
Max	4

### Add MPDCCH

Adds an MPDCCH channel.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:EMTC:PROFile:ADD:MPDCch</code>
Example	<code>:EVM:CCAR0:DLIN:EMTC:PROF:ADD:MPDCch</code>
Dependencies	The new User is added at the end of the currently defined MPDCCH channels. (Disabled once the number of channels reaches the maximum value of 12.)

### Delete MPDCCH

Deletes an MPDCCH channel.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:EMTC:PROFile:MPDCch&lt;n&gt;:DElete</code>
Example	<code>:EVM:CCAR0:DLIN:EMTC:PROF:MPDC2:DElete</code>
Dependencies	Disabled when there is only one MPDCCH channel The range of sub op code <n> values is determined by the number of MPDCCH channels you have configured. If you attempt to remotely delete a sub op code that is out of range, this results in an error message

## Set Index (Display Only)

Specifies of which set the Set Parameters to be displayed in the row.

- #0: Display the Set Paramters for Set 0. When Set # 0 Enable is checked, you can change any of Set Paramters for Set 0.
- #1: Display the Set Paramters for Set 1. When Set # 1 Enable is checked, you can change any of Set Paramters for Set 1.

The Set Parameters include NB Index, RB Alloc. Index, PRB Pairs Number, Tx. Type, Scrambling Sequence, Frequency Hopping, Rep. Num., and Max Rep. Num.

## Other Control Channels

Allows you to set up parameters for Other Control Channels.

## Composite Include All

See "[Composite Include All](#)" on page 1503.

## Composite Exclude All

See "[Composite Exclude All](#)" on page 1504.

## P-RS Include

Includes the Position Reference Channel in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PRS INCL</code> <code>:EVM:CCAR0:DLIN:PROF:PRS?</code>
Dependencies	Available when P-RS Active is On. Otherwise, this control is grayed out
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PRS</code>

## P-RS Active

See ["P-RS Active" on page 1540](#)"P-RS Active" on page 1540.

## MBSFN-RS Include

Includes the MBSFN-RS channel in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF INCL</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF?</code>
Dependencies	Available when MBSFN Active is On. Otherwise, this control is grayed out
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn</code>

## MBSFN-RS Active

See ["MBSFN Active" on page 1528](#)"MBSFN Active" on page 1528.

## PMCH Include

Includes the PMCH channel in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH INCL</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH?</code>
Dependencies	Available when MBSFN Active is On. Otherwise, this control is grayed out
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	EXCLude
State Saved	Yes

Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH</code>

## Include CSI-RS

Includes the CSI-RS in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:CSIR INCL</code> <code>:EVM:CCAR0:DLIN:PROF:CSIR?</code>
Dependencies	Available when CSI-RS Active is On. Otherwise, this control is grayed out
Couplings	This parameter is set to Include when Downlink Include All is selected and set to Exclude when Downlink Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:CSIRs</code>

## CSI-RS Active

See ["CSI-RS Active" on page 1542](#).

## Edit P-RS/MBMS Control Channels

This control allows you to set up more parameters for P-RS/MBMS Control Channels.

## RB Auto Detect

See ["RB Auto Detect" on page 1499](#).

## MBSFN Active

Selects whether or not the MBSFN signal exists for this downlink user in the input signal.

Remote	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:ACTive OFF   ON   0   1</code>
--------	--

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:ACT?</code>
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:ROFile:MBSFn:ACTive</code>

### MBSFN-RS Power Boost

Sets the Power Boost value for MBSFN-RS channel.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:PWRB 10.0</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:PWRB?</code>
Dependencies	Available when MBSFN-RS Active is On. Otherwise, this control is grayed out
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn:PWRBoost</code>

### MBSFN Area ID

Sets a value for Multimedia Broadcast Multicast Service Single Frequency Network Reference Signal (MBSFN) Area ID which identifies the MBSFN Area . It is used for the scrambling of the MBSFN Reference Signals and the Physical Multicast Channel (PMCH).

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:AID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:AID?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:AID 1</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:AID?</code>
Dependencies	Available when MBSFN Active is On. Otherwise, this control is grayed out
Preset	0

State Saved	Yes
Min	0
Max	255
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn:AID</code>

## Non-MBSFN Region Length

Sets a value for Non-MBSFN region's symbol number.

A subset of the downlink subframes in a radio frame on a carrier supporting PDSCH transmission can be configured as MBSFN subframes by higher layers. Each MBSFN subframe is divided into a non-MBSFN region and an MBSFN region.

- The non-MBSFN region spans the first one or two OFDM symbols in an MBSFN. Transmission in the non-MBSFN region shall use the same cyclic prefix length as used for subframe 0.
- The MBSFN region in an MBSFN subframe is defined as the OFDM symbols not used for the non-MBSFN region.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:NMRLength &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:NMRLength?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:NMRL 2</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:NMRL?</code>
Dependencies	Available when MBSFN Active is On, grayed out otherwise
Preset	1
State Saved	Yes
Min	1
Max	2
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn:NMRLength</code>

## MBSFN Subframe3 Active

Sets Subframe3 to be reserved for MBSFN in downlink when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame3:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame3:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF3:ACT ON</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF3:ACT?</code>

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Dependencies	Available when MBSFN Active is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn:SUBFrame3:ACTive</code>

### MBSFN Subframe4 Active (TDD only)

Sets Subframe4 to be reserved for MBSFN in downlink when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame4:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame4:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF4:ACT ON</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF4:ACT?</code>
Dependencies	Available when Mode is LTEATDD Available when MBSFN Active is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn:SUBFrame4:ACTive</code>

### MBSFN Subframe7 Active

Sets Subframe7 to be reserved for MBSFN in downlink when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame7:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame7:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF7:ACT ON</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF7:ACT?</code>
Dependencies	Available when MBSFN Active is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn:SUBFrame7:ACTive</code>

### MBSFN Subframe8 Active

Sets Subframe8 to be reserved for MBSFN in downlink when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame8:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame8:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF8:ACT ON</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF8:ACT?</code>
Dependencies	Available when MBSFN Active is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn:SUBFrame8:ACTive</code>

### MBSFN Subframe9 Active (TDD only)

Sets Subframe9 to be reserved for MBSFN in downlink when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame9:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:MBSFn:SUBFrame9:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF9:ACT ON</code> <code>:EVM:CCAR0:DLIN:PROF:MBSF:SUBF9:ACT?</code>
Dependencies	Available when Mode is LTEATDD Available when MBSFN Active is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:MBSFn:SUBFrame9:ACTive</code>

### PMCH Subframe3 Present

Sets weather or not PMCH channel presents in Subframe3 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame3:ACTive OFF   ON   0   1</code>
----------------	---

	<a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame3:ACTive?</a>
Example	<a href="#">:EVM:CCAR0:DLIN:PROF:PMCH:SUBF3:ACT ON</a> <a href="#">:EVM:CCAR0:DLIN:PROF:PMCH:SUBF3:ACT?</a>
Dependencies	Available when MBSFN Active is On and MBSFN Subframe3 is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<a href="#">[:SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame3:ACTive</a>

### PMCH Subframe4 Active (TDD only)

Sets whether or not PMCH channel presents in Subframe4 when RB Auto Detect is Off.

Remote Command	<a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame4:ACTive OFF   ON   0   1</a> <a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame4:ACTive?</a>
Example	<a href="#">:EVM:CCAR0:DLIN:PROF:PMCH:SUBF4:ACT ON</a> <a href="#">:EVM:CCAR0:DLIN:PROF:PMCH:SUBF4:ACT?</a>
Dependencies	Available when mode is LTEATDD Available when MBSFN Active is On and MBSFN Subframe4 is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<a href="#">[:SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame4:ACTive</a>

### PMCH Subframe7 Present

Sets whether or not PMCH channel presents in Subframe7 when RB Auto Detect is Off.

Remote Command	<a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame7:ACTive OFF   ON   0   1</a> <a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame7:ACTive?</a>
Example	<a href="#">:EVM:CCAR0:DLIN:PROF:PMCH:SUBF7:ACT ON</a> <a href="#">:EVM:CCAR0:DLIN:PROF:PMCH:SUBF7:ACT?</a>

Dependencies	Available when MBSFN Active is On and MBSFN Subframe7 is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSE ] : EVM : DLINK : PROFfile : PMCH : SUBFrame7 : ACTive</code>

### PMCH Subframe8 Present

Sets weather or not PMCH channel presents in Subframe8 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe ] : EVM : CCARrier0   ...   4 : DLINK : PROFfile : PMCH : SUBFrame8 : ACTive OFF   ON   0   1</code> <code>[ :SENSe ] : EVM : CCARrier0   ...   4 : DLINK : PROFfile : PMCH : SUBFrame8 : ACTive ?</code>
Example	<code>: EVM : CCAR0 : DLIN : PROF : PMCH : SUBF8 : ACT ON</code> <code>: EVM : CCAR0 : DLIN : PROF : PMCH : SUBF8 : ACT ?</code>
Dependencies	Available when MBSFN Active is On and MBSFN Subframe8 is On. Otherwise, this control is grayed out
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe ] : EVM : DLINK : PROFfile : PMCH : SUBFrame8 : ACTive</code>

### PMCH Subframe9 Present (TDD only)

Sets weather or not PMCH channel presents in Subframe9 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe ] : EVM : CCARrier0   ...   4 : DLINK : PROFfile : PMCH : SUBFrame9 : ACTive OFF   ON   0   1</code> <code>[ :SENSe ] : EVM : CCARrier0   ...   4 : DLINK : PROFfile : PMCH : SUBFrame9 : ACTive ?</code>
Example	<code>: EVM : CCAR0 : DLIN : PROF : PMCH : SUBF9 : ACT ON</code> <code>: EVM : CCAR0 : DLIN : PROF : PMCH : SUBF9 : ACT ?</code>
Dependencies	Available when mode is LTEATDD Available when MBSFN Active is On and MBSFN Subframe9 is On. Otherwise, this control is grayed out
Preset	OFF

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame9:ACTive</code>

### PMCH Power Boost (RB Auto Detect On)

Sets the Power Boost value for the PMCH Channel when RB Auto Detect is set to On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PMCH:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PMCH:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PMCH:PWRB 3.0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PMCH:PWRB?</code>
Dependencies	Available when RB Auto Detect is On and when MBSFN Active is On Otherwise, this key is grayed out
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PMCH:PWRBoost</code>

### PMCH Subframe3 Power Boost

Sets PMCH's Power Boost for Subframe3 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame3:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame3:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF3:PWRB 6.0</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF3:PWRB?</code>
Dependencies	Available when MBSFN Active is On , MBSFN Subframe3 is On and PMCH Subframe3 is On. Otherwise, this control is grayed out
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame3:PWRBoost</code>

### PMCH Subframe4 Power Boost (TDD only)

Sets PMCH's Power Boost for Subframe4 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame4:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame4:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF4:PWRB 6.0</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF4:PWRB?</code>
Dependencies	Available when Mode is LTEATDD Available when MBSFN Active is On , MBSFN Subframe4 is On and PMCH Subframe4 is On. Otherwise, this control is grayed out
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame4:PWRBoost</code>

### PMCH Subframe7 Power Boost

Sets PMCH's Power Boost for Subframe7 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame7:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame7:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF7:PWRB 6.0</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF7:PWRB?</code>
Dependencies	Available when MBSFN Active is On , MBSFN Subframe7 is On and PMCH Subframe7 is On. Otherwise, this control is grayed out
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame7:PWRBoost</code>

### PMCH Subframe8 Power Boost

Sets PMCH's Power Boost for Subframe8 when RB Auto Detect is Off.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame8:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame8:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF8:PWRB 6.0</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF8:PWRB?</code>
Dependencies	Available when MBSFN Active is On , MBSFN Subframe8 is On and PMCH Subframe8 is On. Otherwise, this control is grayed out
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame8:PWRBoost</code>

### PMCH Subframe9 Power Boost (TDD only)

Sets PMCH's Power Boost for Subframe9 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame9:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame9:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF9:PWRB 6.0</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF9:PWRB?</code>
Dependencies	Available when Mode is LTEATDD Available when MBSFN Active is On , MBSFN Subframe9 is On and PMCH Subframe9 is On. Otherwise, this control is grayed out
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame9:PWRBoost</code>

### PMCH Subframe3 Mod Type

Selects PMCH channel's Modulation Type for Subframe3 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame3:MODulation:TYPE QPSK</code> <code>  QAM16   QAM64   QAM256   QAM1024</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame3:MODulation:TYPE?</code>
----------------	---

Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF3:MOD:TYPE QAM16</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF3:MOD:TYPE?</code>
Dependencies	Available when MBSFN Active is On , MBSFN Subframe3 is On and PMCH Subframe3 is On. Otherwise, this control is grayed out 256QAM and 1024QAM are available when " <a href="#">Higher Order Modulation</a> " on page 1497 is set to On
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame3:MODulation:TYPE</code>

### PMCH Subframe4 Mod Type (TDD only)

Selects PMCH channel's Modulation Type for Subframe4 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame4:MODulation:TYPE</code> <code>QPSK   QAM16   QAM64   QAM256   QAM1024</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame4:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF4:MOD:TYPE QAM16</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF4:MOD:TYPE?</code>
Dependencies	Available when Mode is LTEATDD Available when MBSFN Active is On , MBSFN Subframe4 is On and PMCH Subframe4 is On. Otherwise, this control is grayed out 256QAM and 1024QAM are available when " <a href="#">Higher Order Modulation</a> " on page 1497 is set to On
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame4:MODulation:TYPE</code>

### PMCH Subframe7 Mod Type

Selects PMCH channel's Modulation Type for Subframe7 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame7:MODulation:TYPE</code> <code>QPSK   QAM16   QAM64   QAM256   QAM1024</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PMCH:SUBFrame7:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF7:MOD:TYPE QAM16</code>

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF7:MOD:TYPE?</code>
Dependencies	Available when MBSFN Active is On , MBSFN Subframe7 is On and PMCH Subframe7 is On. Otherwise, this control is grayed out 256QAM and 1024QAM are available when " <a href="#">Higher Order Modulation</a> " on page 1497 is set to On
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROF:PMCH:SUBFrame7:MODulation:TYPE</code>

### PMCH Subframe8 Mod Type

Selects PMCH channel's Modulation Type for Subframe8 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROF:PMCH:SUBFrame8:MODulation:TYPE QPSK   QAM16   QAM64   QAM256   QAM1024</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROF:PMCH:SUBFrame8:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF8:MOD:TYPE QAM16</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF8:MOD:TYPE?</code>
Dependencies	Available when MBSFN Active is On , MBSFN Subframe8 is On and PMCH Subframe8 is On. Otherwise, this control is grayed out 256QAM and 1024QAM are available when " <a href="#">Higher Order Modulation</a> " on page 1497 is set to On
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROF:PMCH:SUBFrame8:MODulation:TYPE</code>

### PMCH Subframe9 Mod Type (TDD only)

Selects PMCH channel's Modulation Type for Subframe9 when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROF:PMCH:SUBFrame9:MODulation:TYPE QPSK   QAM16   QAM64   QAM256   QAM1024</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROF:PMCH:SUBFrame9:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF9:MOD:TYPE QAM16</code> <code>:EVM:CCAR0:DLIN:PROF:PMCH:SUBF9:MOD:TYPE?</code>
Dependencies	Available when Mode is LTEATDD

	Available when MBSFN Active is On, MBSFN Subframe9 is On and PMCH Subframe9 is On. Otherwise, this control is grayed out 256QAM and 1024QAM are available when "Higher Order Modulation" on page 1497 is set to On
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PMCH:SUBFrame9:MODulation:TYPE</code>

### P-RS Active

Selects whether or not the Positioning Reference Signal (P-RS) exists in the input signal.

P-RS parameters are transmitted on antenna port 6 at regularly spaced time and frequency locations. The measurement provides support for analysis of P-RS transmitted on normal subframes. P-RS transmitted on MBSFN subframes is not analyzed.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PRS:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:PRS:ACT?</code>
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PRS:ACTive</code>

### P-RS Bandwidth

Sets the Bandwidth of the position reference signal, its unit is RBs.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:BANDwidth?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PRS:BAND B10M</code> <code>:EVM:CCAR0:DLIN:PROF:PRS:BAND?</code>
Dependencies	Available when P-RS Active is On. It is needed to set P-RS Active to On in advance. Otherwise, this control is grayed out

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PRS:BANDwidth</code>

### P-RS Power Boost

Sets the Power Boost value for the P-RS channel.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PRS:PWRB 2.0</code> <code>:EVM:CCAR0:DLIN:PROF:PRS:PWRB?</code>
Dependencies	Available when P-RS Active is On, grayed out other wise
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PRS:PWRBoost</code>

### P-RS Config Index

Sets the configuration index of the position reference signal.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:INDEX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:INDEX?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PRS:IND 160</code> <code>:EVM:CCAR0:DLIN:PROF:PRS:IND?</code>
Dependencies	Available when P-RS Active is On. Otherwise, this control is grayed out
Preset	0
State Saved	Yes
Min	0
Max	2399
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PRS:INDEX</code>

## N-PRS

Sets the number ( $N_{PRS}$ ) of consecutive downlink subframes that the position reference signal shall be transmitted.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:SUBFrame:NUMBer N1   N2   N4   N6</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:PRS:SUBFrame:NUMBer?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:PRS:SUBF:NUMB N6</code> <code>:EVM:CCAR0:DLIN:PROF:PRS:SUBF:NUMB?</code>
Notes	N1 means the consecutive downlink subframes number is 1 N2 means the consecutive downlink subframes number is 2 N4 means the consecutive downlink subframes number is 4 N6 means the consecutive downlink subframes number is 6
Dependencies	Available when P-RS Active is On. Otherwise, this control is grayed out
Preset	N1
State Saved	Yes
Range	N1 N2 N4 N6
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:PRS:SUBFrame:NUMBer</code>

## Edit CSI-RS Control Channels

This control allows you to set up more parameters for CSI-RS Control Channels.

### CSI-RS Active

Selects whether or not the CSI reference signal exists in the input signal. When CSI-RS is active, the LTE demodulator expects there to be one non-zero power CSI-RS present in the signal and no zero-power CSI-RS. Although the LTE standard allows there to be multiple CSI-RS configurations to be present (only one with non-zero power), these signals are not supported by demodulator.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:CSIR:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:CSIR:ACT?</code>
Preset	OFF
State Saved	Yes

Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:CSIRs:ACTive</code>

### Num. of Antenna Ports

Indicates the number of CSI-RS antenna ports being used by the CSI-RS transmission. This value is not restricted to the number of measurement channels since it is possible that all 8 CSI-RS antenna ports be transmitted on the same physical antenna.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:PORTs:NUMBER PORT1   PORT2   PORT4   PORT8</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:PORTs:NUMBER?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:CSIRs:PORTs:NUMB PORT1</code> <code>:EVM:CCAR0:DLIN:PROF:CSIR:PORT:NUMB?</code>
Dependencies	Available when CSI-RS Active is On
Preset	PORT1
State Saved	Yes
Range	PORT1 PORT2 PORT4 PORT8
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:CSIRs:PORTs:NUMBER</code>

### CSI-RS Power Boost

Specifies the power of CSI-RS relative to the average power of the LTE signal.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:CSIR:PWRB 2.0</code> <code>:EVM:CCAR0:DLIN:PROF:CSIR:PWRB?</code>
Dependencies	Available when CSI-RS Active is On, grayed out other wise
Preset	0.0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB

## CSI-RS Config Index

Specifies the channel state information reference signal configuration index, which along with Number of Antenna Ports determines the subcarrier/symbol location of CSI-RS within a subframe.

Subframe Config. Index

Specifies the value of ICSI-RS which determines the CSI-RS subframe periodicity and offset according to Table 6.10.5.3-1 in 3GPP Technical Specification 36.211.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:INDEX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:INDEX?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:CSIRs:IND 1</code> <code>:EVM:CCAR0:DLIN:PROF:CSIRs:IND?</code>
Dependencies	Available when CSI-RS Active is On. Otherwise, this key is grayed out
Preset	0
State Saved	Yes
Min	0
Max	31
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:CSIRs:INDEX</code>

## CSI-RS Subframe Config Index

Specifies the value which determines the CSI-RS subframe periodicity and offset according to Table 6.10.5.3-1 in 3GPP Technical Specification 36.211.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:SUBFrame:INDEX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:CSIRs:SUBFrame:INDEX?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:CSIRs:SUBFrame:IND 1</code> <code>:EVM:CCAR0:DLIN:PROF:CSIRs:SUBFrame:IND?</code>
Dependencies	Available when CSI-RS Active is On. Otherwise, this key is grayed out
Preset	0
State Saved	Yes
Min	0
Max	154
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:CSIRs:SUBFrame:INDEX</code>

## User Channels

Allows you to set up parameters for User Channels.

## Composite Include All

See ["Composite Include All" on page 1503](#).

## Composite Exclude All

See ["Composite Exclude All" on page 1504](#).

## RB Auto Detect

See ["RB Auto Detect" on page 1499](#).

## RB Auto Detect Mode

See ["RB Auto Detect Mode" on page 1500](#).

## Expected # Users

See ["Expected # Users" on page 1502](#).

## Include PDSCH

Includes the user defined channel PDSCH in the results.

NOTE

Available when:

NOTE

RB Auto Detect is Off

NOTE

there is at least one user (to ["Add User" on page 1555](#) under ["User Channel Summary" on page 1554](#)).

---

Remote Command `[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh INCLUDE | EXCLUDE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh?`

Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC EXCL</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Available when RB Auto Detect is Off. You need to set allocations to the user in advance. Otherwise, this control is grayed out
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh</code>

## Include Decoded PDSCH

Includes the user defined channel Decoded PDSCH in the results.

**NOTE**

**Available when RB Auto Detect is On and RB Auto Detect Mode is Decoded DCI.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC EXCL</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC?</code>
Notes	As an LTE user can be configured as an eMTC user, the parameter is shared with eMTC. In Edit eMTC Channels dialog, the parameter is out of scope and greyed out on UI when eMTC User Channel Type is Others.
Dependencies	The range of sub op code <n> values is determined by the Number of Expected DL Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Available When RB Auto Detect is On, RB Auto Detect Mode is Decoded DCI, User and Decoded PDSCH are available
Couplings	This parameter is set to Include when Composite Include All is selected, and set to Exclude when Composite Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh</code>

Compatibility SCPI

## Include QPSK

Includes channels using QPSK Mod Type in the results.

**NOTE**

**Available when RB Auto Detect is On and RB Auto Detect Mode is Power Based.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QPSK INCL</code> <code>:EVM:CCAR0:DLIN:PROF:QPSK?</code>
Dependencies	Enabled when PDSCH RB Auto Detect is On
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QPSK</code>

## Include 16QAM

Includes channels using 16QAM Mod Type in the results.

**NOTE**

**Available when RB Auto Detect is On and RB Auto Detect Mode is Power Based.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16 INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM16 INCL</code> <code>:EVM:CCAR0:DLIN:PROF:QAM16?</code>
Dependencies	Enabled when PDSCH RB Auto Detect is On
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM16</code>

## Include 64QAM

Includes channels using 64QAM Mod Type in the results.

**NOTE**

**Available when RB Auto Detect is On and RB Auto Detect Mode is Power Based.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM64 INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM64?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM64 INCL</code> <code>:EVM:CCAR0:DLIN:PROF:QAM64?</code>
Dependencies	Enabled when Downlink RB Auto Detect is On
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM64</code>

## Include 256QAM

Includes channels using 256QAM Mod Type in the results.

**NOTE**

**Available when Higher Order Modulation is On, RB Auto Detect is On and RB Auto Detect Mode is Power Based.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256 INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM256 INCL</code> <code>:EVM:CCAR0:DLIN:PROF:QAM256?</code>
Dependencies	Enabled when Downlink RB Auto Detect is On Available when Higher Order Modulation is enabled
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude

## Include 1024QAM

Includes channels using 1024QAM Mod Type in the results.

**NOTE**

**Available when Higher Order Modulation is On, RB Auto Detect is On and RB Auto Detect Mode is Power Based.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024 INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM1024 INCL</code> <code>:EVM:CCAR0:DLIN:PROF:QAM1024?</code>
Dependencies	Enabled when Downlink RB Auto Detect is On Available when Higher Order Modulation is enabled with the required license
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	INCLude
State Saved	Yes
Range	Include Exclude

## Edit User Mapping

Enables you to edit the Downlink channel parameters.

### More Information

This table lists all the parameters available to set up downlink PDSCH user allocations.

Parameter	Description
RB Auto Detect	When On, the demodulator autodetects PDSCH user allocations. The only parameter needed is Power Boost (for EVM calculations) RB Auto Detect groups resource blocks that contain the same modulation type into a user so that there are possible users: QPSK, QAM16, QAM64, QAM256 and QAM1024
RB Auto Detect Mode	Specifies how the LTE-A demodulator detects user allocations when RB Auto Detect is On
Auto Detect Power Levels	Selects whether or not power levels are autodetected. Enabled only when RB Auto Detect is On and RB Auto Detect Mode is Decoded DCI
Use Per Antenna EPRE	Determines whether the EPRE is interpreted as energy per antenna port or the sum total of energies contributed by all antenna ports involved . When it is On, EPRE is interpreted as energy per antenna port

Parameter	Description
Multi-Frame Analysis	When On, the demodulator enables user to setup PDSCH allocations for two continuous frames. This parameter needs to be set to On when the signal under analysis is complied with E-UTRA TDD Test Models defined in 3GPP TS36.141 6.1.1 V8.2.0
Show Mapping	Specifies which frame's allocation is shown in RB Mapping diagram when Multi-Frame Analysis is On
Include	When this check box is selected, the corresponding user mapping is displayed on appropriate traces. When cleared, only the Frame Summary trace displays the user mapping
Add User	Adds a user mapping
Delete User	Deletes the selected user mapping
RNTI	Sets the radio network temporary identifier for the user. Enabled only when RB Auto Detect is Off. (TDD only)
UE-RS Active	Selects whether the UE-specific reference signal is present in the signal under test. Enabled only when RB Auto Detect is Off. (TDD only)
UE-RS Include	Selects whether the UE-specific reference signal is included in the analysis results. Enabled only when UE-RS Active is On and RB Auto Detect is Off. (TDD only)
UE-RS Power	Specifies the power boost for the UE-specific reference signal. Enabled only when RB Auto Detect is Off. (TDD only)
UE-RS Port	Specifies on which logical antenna port UE-RS is transmitted for the selected PDSCH user allocation. (TDD only)
UE-RS nSCID	Specifies downlink user's scrambling identity value nSCID. (TDD only)
Precoding Parameters	
Precoding	Specifies the type of shared channel precoding method that the demodulator should expect
Number of layers	Specifies the number of layers. It's less than or equal to the number of antenna ports used for transmission of the physical channel
Number of codewords	Specifies the number of codewords
CDD	Specifies whether precoding is done with or without CDD (cyclic delay diversity) for spatial multiplexing
Codebook Index	Specifies the Codebook index for spatial multiplexing precoding
PDSCH Per-allocation Parameters	
Couple	Certain parameters can be coupled across all RB allocation groups for a user or can be set independently for each RB allocation group. Selecting the checkbox next to a parameter couples that parameter across all RB allocation groups
RB Start	Specifies the RB start boundary of the current allocation group for the current user
RB End	Specifies the RB end boundary of the current allocation group for the current user

Parameter	Description
Slot Start	Specifies the slot start boundary of the current allocation group for the current user
Slot End	Specifies the slot end boundary of the current allocation group for the current user
Allocation EPRE	Sets the EPRE value for the selected Allocation
Codeword 0 Mod Type	Modulation type for codeword 0: QPSK, QAM16, QAM64, QAM256 or QAM1024
Codeword 1 Mod Type	Modulation type for codeword 1: QPSK, QAM16, QAM64, QAM256 or QAM1024
Codeword 0 Power Boost	The power of the subcarriers relative to the 0 dB level determined by the RS power level for codeword 0
Codeword 1 Power Boost	The power of the subcarriers relative to the 0 dB level determined by the RS power level for codeword 1
Frame Index	Specifies which frame of the current allocation for the current user belongs to
Add Allocation	Adds an allocation to the selected user
Delete Allocation	Deletes the selected allocation

## RB Auto Detect

Allows you to set the parameters for RB Auto Detection.

## RB Auto Detect

See Section ["RB Auto Detect" on page 1499](#)"RB Auto Detect" on page 1499

## RB Auto Detect Mode

See Section ["RB Auto Detect Mode" on page 1500](#)"RB Auto Detect Mode" on page 1500

## Auto Detect Power Levels

Selects whether or not power levels are autodetected. This setting depends on the RB Auto Detect Mode setting.

## Power Based Mode

Selects whether or not power levels are autodetected when RB Auto Detect is On and RB Auto Detect Mode is Power-based.

- ON - Detected allocations are grouped according to modulation type (QPSK, 16QAM, 64QAM or 256QAM). The codeword power levels are detected also.
- OFF - The codeword power levels for each user allocation must be specified for EVM calculations to be correct.

The power levels are detected as one of the levels specified by the standard in 3GPP TS 36.331, section 6.3.2 under the PDSCH-Config parameter.

These power levels are -6 dB, -4.77 dB, -3 dB, -1.77 dB, 0 dB, 1 dB, 2 dB, and 3 dB.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETECT]:POWer:PMODE OFF   ON   0   1  [:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETECT]:POWer:PMODE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:POW:PMOD ON :EVM:CCAR0:DLIN:PROF:AUTO:POW:PMOD?</code>
Notes	When you enter the Edit User Mapping form, the RB Auto Detect Mode selection that you set before entering the form appears. You can switch the mode between Decoded DCI and Power Based on the Editor, however, the Auto Detect Power Levels state on the form and its control are still for the mode you set before entering the form and do not change even if you change the mode
Dependencies	Applicable when RB Auto Detect is On and RB Auto Detect Mode is Power based.
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO[:DETECT]:POWer:PMODE</code>

## Decoded DCI Mode

Selects whether or not power levels are autodetected.

- ON - Detects the relative PDSCH power level for each user allocation (PA). RB Auto Detect Mode must be set to Decode PDCCH for power levels to be autodetected.
- OFF - The codeword power levels for each user allocation need to be specified for EVM calculations to be correct. The Expected Num. of Users parameter

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

determines the number of users listed in the LTE Allocation Editor for which the power levels can be defined.

The power levels are detected as one of the levels specified by the standard in 3GPP TS 36.331, section 6.3.2 under the PDSCH-Config parameter.

These power levels are -6 dB, -4.77 dB, -3 dB, -1.77 dB, 0 dB, 1 dB, 2 dB, and 3 dB.

The autodetected power levels (P\_A(n)) can be viewed on the DL Decode Info trace.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETECT]:POWer OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO[:DETECT]:POWer?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:POW ON</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:POW?</code>
Notes	When you enter the Edit User Mapping form, the RB Auto Detect Mode selection that you set before entering the form appears. You can switch the mode between Decoded DCI and Power Based on the Editor, however, the Auto Detect Power Levels state on the form and its control are still for the mode you set before entering the form and do not change even if you change the mode.
Dependencies	Applicable when RB Auto Detect is On and RB Auto Detect Mode is Decoded DCI
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO[:DETECT]:POWer</code>

### Use Per Antenna EPRE

Determines whether the Energy Per Resource Element (EPRE) is interpreted as energy per antenna port or the sum total of energies contributed by all antenna ports involved . When it is On, EPRE is interpreted as energy per antenna port.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:EPRE:PANTenna OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:EPRE:PANTenna?</code>
Example	<code>:EVM:CCAR0:DLINK:PROF:EPRE:PANT ON</code> <code>:EVM:CCAR0:DLINK:PROF:EPRE:PANT?</code>
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:EPRE:PANTenna</code>

## Multi-Frame Analysis (TDD only)

Determines whether to allow multi-frame allocations..

When it is set to On, the demodulator sets PDSCH allocations for two continuous frames. This parameter needs to be set to On when the signal under analysis is complied with E-UTRA TDD Test Models defined in 3GPP TS36.141 6.1.1 V8.2.0.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:MFANalysis OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:MFANalysis?</code>
Example	<code>:EVM:CCAR0:PROF:MFAN ON</code> <code>:EVM:CCAR0:PROF:MFAN?</code>
Dependencies	Available only for LTEATDD downlink. Enabled when RB Auto Detect is Off and Input Channel is 1
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:PROFile:MFANalysis</code>

## Show Mapping (TDD only)

Selects which frame's allocations you want to see in RB mapping diagram when Multi Frame Analysis is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:SMAPping[:SElect] F0   F1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:PROFile:SMAPping[:SElect]?</code>
Example	<code>:EVM:CCAR0:PROF:SMAP F0</code> <code>:EVM:CCAR0:PROF:SMAP?</code>
Dependencies	Available only for LTEATDD Downlink Enabled when Multi-Frame Analysis is ON
Preset	F0
State Saved	Yes
Range	F0 F1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:PROFile:SMAPping[:SElect]</code>

## User Channel Summary

Allows you to set the parameters for User Channels.

## Add User

Adds a new User and the new entry becomes the selected User. The new User contains by default one Allocation that has the associated parameters set to the default values.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:ADD:USER</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:ADD:USER</code>
Dependencies	The new User is added at the end of the currently defined Users. Disabled once the number of Users reaches 50, the max number
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFfile:ADD:USER</code>

## Delete User

Deletes the current selected User.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:USER&lt;n&gt;:DELeTe</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:DEL</code>
Dependencies	Disabled when there is only one User. The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely delete a sub op code that is out of range, this results in an error message
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFfile:USER&lt;n&gt;:DELeTe</code>

## Include PDSCH

Determines whether or not the PDSCH is included in the results.

Couplings	This parameter provides the Include/Exclude status of the currently selected User, therefore the SCPI commands associated with this parameter changes as the User is changed When RB Auto Detect is On and Mode is Power Based: when selected User is QPSK, refer to <a href="#">"Include QPSK" on page 1547</a> when selected User is 16QAM, refer to <a href="#">"Include 16QAM" on page 1547</a> when selected User is 64QAM, refer to <a href="#">"Include 64QAM" on page 1548</a> when selected User is 256QAM, refer to <a href="#">"Include 256QAM" on page 1548</a> When RB Auto Detect is On and Mode is Decoded DCI, refer to <a href="#">"Include Decoded PDSCH" on page 1546</a> . When RB Auto Detect is Off, refer to <a href="#">"Include PDSCH" on page 1545</a> .
Preset	EXCLude

State Saved	Yes
Range	Include Exclude

## RNTI

Sets downlink user's Radio Network Temporary Identifier (RNTI) which is used for demodulating UE-specific Reference Signals.

### NOTE

**Available when RB Auto Detect is Off, UE-RS Present is On and UE-RS Port is Port5.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:RNTI &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:RNTI?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:RNTI 1</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:RNTI?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Available when RB Auto Detect is Off, UE-RS Present is On and UE-RS Port is Port5
Preset	1
State Saved	Yes
Min	0
Max	65535
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:RNTI</code>

## Auto Detect RNTI for QPSK

Sets radio network temporary identifier for the QPSK modulation when RB Auto Detect is On.

### NOTE

**Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Present is On, and UE-RS Port is Port5.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:RNTI &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:RNTI?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QPSK:RNTI 1</code> <code>:EVM:CCAR0:DLIN:PROF:QPSK:RNTI?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Present is On, and

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

	UE-RS Port is Port5
Preset	1
State Saved	Yes
Min	0
Max	65535
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QPSK:RNTI</code>

### Auto Detect RNTI for 16QAM

Sets radio network temporary identifier for the 16QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:RNTI &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:RNTI?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM16:RNTI 1</code> <code>:EVM:CCAR0:DLIN:PROF:QAM16:RNTI?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is Port5
Preset	1
State Saved	Yes
Min	0
Max	65535
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM16:RNTI</code>

### Auto Detect RNTI for 64QAM

Sets radio network temporary identifier for the 64QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM64:RNTI &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM64:RNTI?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM64:RNTI 1</code> <code>:EVM:CCAR0:DLIN:PROF:QAM64:RNTI?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is Port5
Preset	1
State Saved	Yes

Min	0
Max	65535
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM64:RNTI</code>

### Auto Detect RNTI for 256QAM

Sets radio network temporary identifier for the 256QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256:RNTI &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256:RNTI?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM256:RNTI 1</code> <code>:EVM:CCAR0:DLIN:PROF:QAM256:RNTI?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is Port5 and Higher Order Modulation is On
Preset	1
State Saved	Yes
Min	0
Max	65535

### Auto Detect RNTI for 1024QAM

Sets radio network temporary identifier for the 1024QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:RNTI &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:RNTI?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM1024:RNTI 1</code> <code>:EVM:CCAR0:DLIN:PROF:QAM1024:RNTI?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is Port5 and Higher Order Modulation is On
Preset	1
State Saved	Yes
Min	0
Max	65535

## UE-RS Present

Selects whether or not the UE specific reference signal exists for this downlink user in the input signal. When this is selected, the demodulator to search for UE-specific RS.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:UERS:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:UERS:ACT?</code>
Dependencies	Available when RB Auto Detect is Off All controls for UE-RS parameters are grayed out when this parameter is set to OFF
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER1 50:UERS:ACTive</code>

## Auto Detect UE-RS Present for QPSK

Selects whether or not the UE specific reference signal exists for the QPSK modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS:ACT?</code>
Dependencies	Available when RB Auto Detect is On. All controls for UE-RS parameters are grayed out when this parameter is set to OFF
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QPSK:UERS:ACTive</code>

### Auto Detect UE-RS Present for 16QAM

Selects whether or not the UE specific reference signal exists for the 16QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:UERS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:UERS:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS:ACT?</code>
Dependencies	Available when RB Auto Detect is On. All controls for UE-RS parameters are grayed out when this parameter is set to OFF
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM16:UERS:ACTive</code>

### Auto Detect UE-RS Present for 64QAM

Selects whether or not the UE specific reference signal exists for 64QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM64:UERS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM64:UERS:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS:ACT?</code>
Dependencies	Available when RB Auto Detect is On. All controls for UE-RS parameters are grayed out when this parameter is set to OFF
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM64:UERS:ACTive</code>

### Auto Detect UE-RS Present for 256QAM

Selects whether or not the UE specific reference signal exists for 256QAM modulation when RB Auto Detect is On.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256:UERS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256:UERS:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS:ACT?</code>
Dependencies	Available when RB Auto Detect is On and Higher Order Modulation is On. All UE-RS parameters are grayed out when this parameter is set to OFF.
Preset	OFF
State Saved	Yes
Range	On Off

### Auto Detect UE-RS Present for 1024QAM

Selects whether or not the UE specific reference signal exists for 1024QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:UERS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:UERS:ACTive?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS:ACT OFF</code> <code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS:ACT?</code>
Dependencies	Available when RB Auto Detect is On and Higher Order Modulation is On. All UE-RS parameters are grayed out when this parameter is set to OFF
Preset	OFF
State Saved	Yes
Range	On Off

### Include UE-RS

Includes the user defined channel PDSCH's UE specific reference signal in the results. The UE-specific RS is shown on appropriate traces and included in error metric calculations.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:UERS EXCL</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:UERS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Available when UE-RS Active is ON and RB Auto Detect is Off

Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:UERS</code>

### Auto Detect Include UE-RS for QPSK

Includes UE specific reference signal for the QPSK modulation in the results when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS EXCL</code> <code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS?</code>
Dependencies	Available when UE-RS Active is ON and RB Auto Detect is On
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QPSK:UERS</code>

### Auto Detect Include UE-RS for 16QAM

Includes UE specific reference signal for the 16QAM modulation in the results when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:UERS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:UERS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS EXCL</code> <code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS?</code>
Dependencies	Available when UE-RS Active is ON and RB Auto Detect is On
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFfile:QAM16:UERS</code>

### Auto Detect Include UE-RS for 64QAM

Includes UE specific reference signal for the 64QAM modulation in the results when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM64:UERS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM64:UERS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS EXCL</code> <code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS?</code>
Dependencies	Available when UE-RS Active is ON and RB Auto Detect is On
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFfile:QAM64:UERS</code>

### Auto Detect Include UE-RS for 256QAM

Includes UE specific reference signal for the 256QAM modulation in the results when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM256:UERS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM256:UERS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS EXCL</code> <code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS?</code>
Dependencies	Available when UE-RS Active is ON and RB Auto Detect is On and Higher Order Modulation is On
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude

## Auto Detect Include UE-RS for 1024QAM

Includes UE specific reference signal for the 1024QAM modulation in the results when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:UERS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:UERS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS EXCL</code> <code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS?</code>
Dependencies	Available when UE-RS Active is ON and RB Auto Detect is On and Higher Order Modulation is On
Couplings	This parameter is set to Include when Composite Include All is selected and set to Exclude when Composite Exclude All is selected
Preset	EXCLude
State Saved	Yes
Range	Include Exclude

## UE-RS Power Boost

Sets the Power Boost value for the specified user. Power Boost value specifies the average power for the UE-specific reference signal.

The average power of the UE-RS power is relative to the 0 dB level determined by the cell-specific RS power level.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS:PWRBoost &lt;rel_amp&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:UERS:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:UERS:PWRB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Available when RB Auto Detect is Off.
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:UERS:PWRBoost</code>

### Auto Detect UE-RS Power Boost for QPSK

Determines the Power Boost value for the QPSK modulation when RB Auto Detect is On. Power Boost value specifies the average power for the UE-specific reference signal. The average power of the UE-RS power is relative to the 0 dB level determined by the cell-specific RS power level.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS:PWRB?</code>
Dependencies	Available when RB Auto Detect is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QPSK:UERS:PWRBoost</code>

### Auto Detect UE-RS Power Boost for 16QAM

Determine the Power Boost value for the 16QAM modulation when RB Auto Detect is On. Power Boost value specifies the average power for the UE-specific reference signal. The average power of the UE-RS power is relative to the 0 dB level determined by the cell-specific RS power level.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:UERS:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:UERS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS:PWRB?</code>
Dependencies	Available when RB Auto Detect is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM16:UERS:PWRBoost</code>

### Auto Detect UE-RS Power Boost for 64QAM

Determines the Power Boost value for the 64QAM modulation when Detectio is Auto. Power Boost value specifies the average power for the UE-specific reference signal. The average power of the UE-RS power is relative to the 0 dB level determined by the cell-specific RS power level.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM64:UERS:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM64:UERS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS:PWRB?</code>
Dependencies	Available when RB Auto Detect is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM64:UERS:PWRBoost</code>

### Auto Detect UE-RS Power Boost for 256QAM

Determines the Power Boost value for the 256QAM modulation when Detectio is Auto. Power Boost value specifies the average power for the UE-specific reference signal. The average power of the UE-RS power is relative to the 0 dB level determined by the cell-specific RS power level.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256:UERS:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256:UERS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS:PWRB?</code>
Dependencies	Available when RB Auto Detect is On and Higher Order Modulation is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB

### Auto Detect UE-RS Power Boost for 1024QAM

Determines the Power Boost value for the 1024QAM modulation when Detectio is Auto. Power Boost value specifies the average power for the UE-specific reference signal. The average power of the UE-RS power is relative to the 0 dB level determined by the cell-specific RS power level.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:UERS:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:UERS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS:PWRB?</code>
Dependencies	Available when RB Auto Detect is On and Higher Order Modulation is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB

### UE-RS Port

Specifies on which logical antenna port UE-RS is transmitted for the selected PDSCH user allocation.

Possible selections for single-layer beamforming are as follows:

- Port 5
- Port 7
- Port 8

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS:PORT P5   P7   P8</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS:PORT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:UERS:PORT P5</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:UERS:PORT?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n= 50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, and UE-RS Active is On.
Preset	P5

State Saved	Yes
Range	P5 P7 P8
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:UERS:PORT</code>

### Auto Detect UE-RS Port for QPSK

Specifies on which logical antenna port UE-RS is transmitted for the QPSK modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS:PORT P5   P7   P8</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS:PORT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS:PORT P5</code> <code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS:PORT?</code>
Dependencies	Enabled when RB Auto Detect is On, and UE-RS Active is On
Preset	P5
State Saved	Yes
Range	P5 P7 P8
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QPSK:UERS:PORT</code>

### Auto Detect UE-RS Port for 16QAM

Specifies on which logical antenna port UE-RS is transmitted for the 16QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:UERS:PORT P5   P7   P8</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM16:UERS:PORT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS:PORT P5</code> <code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS:PORT?</code>
Dependencies	Enabled when RB Auto Detect is On, and UE-RS Active is On
Preset	P5
State Saved	Yes
Range	P5 P7 P8
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM16:UERS:PORT</code>

### Auto Detect UE-RS Port for 64QAM

Specifies on which logical antenna port UE-RS is transmitted for the 64QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM64:UERS:PORT P5   P7   P8</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM64:UERS:PORT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS:PORT P5</code> <code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS:PORT?</code>
Dependencies	Enabled when RB Auto Detect is On, and UE-RS Active is On
Preset	P5
State Saved	Yes
Range	P5 P7 P8
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFfile:QAM64:UERS:PORT</code>

### Auto Detect UE-RS Port for 256QAM

Specifies on which logical antenna port UE-RS is transmitted for the 256QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM256:UERS:PORT P5   P7   P8</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM256:UERS:PORT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS:PORT P5</code> <code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS:PORT?</code>
Dependencies	Enabled when RB Auto Detect is On, and UE-RS Active is On and Higher Order Modulation is On
Preset	P5
State Saved	Yes
Range	P5 P7 P8

### Auto Detect UE-RS Port for 1024QAM

Specifies on which logical antenna port UE-RS is transmitted for the 1024QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM1024:UERS:PORT P5   P7   P8</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM1024:UERS:PORT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS:PORT P5</code>

	<code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS:PORT?</code>
Dependencies	Enabled when RB Auto Detect is On, and UE-RS Active is On and Higher Order Modulation is On
Preset	P5
State Saved	Yes
Range	P5 P7 P8

## UE-RS $n_{SCID}$

Specifies downlink user's scrambling identity value  $n_{SCID}$  when RB Auto Detect is Off. This is enabled when the UE-RS Port is set to Port 7 or Port 8.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS:SCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:UERS:SCID?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:UERS:SCID 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:UERS:SCID?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Available when RB Auto Detect is Off and UE-RS Active is On and UE-RS Port is not Port5.
Preset	0
State Saved	Yes
Min	0
Max	1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:UERS:SCID</code>

## Auto Detect UE-RS $n_{SCID}$ for QPSK

Specifies scrambling identity value  $n_{SCID}$  for the QPSK modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS:SCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QPSK:UERS:SCID?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS:SCID 0</code> <code>:EVM:CCAR0:DLIN:PROF:QPSK:UERS:SCID?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is not Port5.
Preset	0

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

State Saved	Yes
Min	0
Max	1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFfile:QPSK:UERS:SCID</code>

### Auto Detect UE-RS $n_{SCID}$ for 16QAM

Specifies scrambling identity value  $n_{SCID}$  for the 16QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM16:UERS:SCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM16:UERS:SCID?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS:SCID 0</code> <code>:EVM:CCAR0:DLIN:PROF:QAM16:UERS:SCID?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is not Port5.
Preset	0
State Saved	Yes
Min	0
Max	1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFfile:QAM16:UERS:SCID</code>

### Auto Detect UE-RS $n_{SCID}$ for 64QAM

Specifies scrambling identity value  $n_{SCID}$  for the 64QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM64:UERS:SCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:QAM64:UERS:SCID?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS:SCID 0</code> <code>:EVM:CCAR0:DLIN:PROF:QAM64:UERS:SCID?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is not Port5
Preset	0
State Saved	Yes
Min	0

Max	1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:QAM64:UERS:SCID</code>

### Auto Detect UE-RS $n_{SCID}$ for 256QAM

Specifies scrambling identity value  $n_{SCID}$  for the 256QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256:UERS:SCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM256:UERS:SCID?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS:SCID 0</code> <code>:EVM:CCAR0:DLIN:PROF:QAM256:UERS:SCID?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is not Port5 and Higher Order Modulation is On
Preset	0
State Saved	Yes
Min	0
Max	1

### Auto Detect UE-RS $n_{SCID}$ for 1024QAM

Specifies scrambling identity value  $n_{SCID}$  for the 1024QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:UERS:SCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:QAM1024:UERS:SCID?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS:SCID 0</code> <code>:EVM:CCAR0:DLIN:PROF:QAM1024:UERS:SCID?</code>
Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Power Based, UE-RS Active is On, and UE-RS Port is not Port5 and Higher Order Modulation is On
Preset	0
State Saved	Yes
Min	0
Max	1

### PDSCH

Allows you to set the parameters for PDSCH Channels.

## Number of C-RS Ports

See Section "[Number of C-RS Ports](#)" on page 1476"[Number of C-RS Ports](#)" on page 1476

## Precoding

Selects the Precoding method for each User when RB Auto Detect is Off.

This parameter specifies the type of MIMO precoding performed on the current user's data. The possible choices are:

- Off
- Tx Diversity
- Spatial Multiplexing

When Spatial Multiplexing is selected, the parameters Number of Layers, Number of Codewords, CDD, and Codebook Index must also be specified.

### NOTE

**RB Auto Detection can detect allocations of either Spatial Multiplexing or Tx Diversity, but not both. When RB Auto Detect is On, this parameter determines which type of Precoding the demodulator looks for.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PRECoding OFF   TXDiversity   SMULtiplex</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PRECoding?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSCh:PREC TXD</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSCh:PREC?</code>
Dependencies	Enabled when RB Auto Detect is Off and Number of C-RS Ports is set to more than 1 Port
Preset	Off
State Saved	Yes
Range	Off Tx Diversity Spatial Multiplexing
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PRECoding</code>

## Auto Detect Precoding

Selects the Precoding method when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:PRECoding OFF  </code>
----------------	---

	<code>TXDiversity   SMULTiplex</code>
	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:PRECoding?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:PREC TXD</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:PREC?</code>
Dependencies	Enabled when RB Auto Detect is On, Detection Mode is Power Based, and Number of C-RS Ports is set to more than 1 Port
Preset	Off
State Saved	Yes
Range	Off Tx Diversity Spatial Multiplexing
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSC:PRECoding</code>

## # of Layers

Specifies the number of layers for the current user when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER1 50:PDSC:NLAYers &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER1 50:PDSC:NLAYers?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:NLAY 1</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:NLAY?</code>
Notes	Always 1 since this instrument supports only one RF input
Dependencies	Enabled only when RB Auto Detect is Off, Number of C-RS Ports is more than 1 Port and Precoding is set to Spatial Multiplexing
Couplings	Coupled with Number of C-RS Ports, Precoding
Preset	1
State Saved	Yes
Min	1
Max	4
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER1 50:PDSC:NLAYers</code>

## Auto Detect Number of Layers

Sets the number of layers when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:NLAYers &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:NLAYers?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:NLAY 1</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:NLAY?</code>

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Notes	Always 1 since this instrument supports only one RF input
Dependencies	Enabled only when RB Auto Detect is On, Number of C-RS Ports is more than 1 Port and Auto Detect Precoding is set to Spatial Multiplexing
Couplings	Coupled with Number of C-RS Ports, Precoding
Preset	1
State Saved	Yes
Min	1
Max	4
Backwards Compatibility SCPI	<a href="#">[:SENSe]:EVM:DLINK:PROFfile:AUTO:PDSCh:NLAYers</a>

### # of Codewords

Specifies the number of code words (1 or 2) for the current user. The selections available are dependent on the number of layers and multiplexing mode, according to the standard. Sets the number of codewords when RB Auto Detect is Off.

Remote Command	<a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:USER&lt;n&gt;:PDSCh:NCODewords &lt;integer&gt;</a> <a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:USER&lt;n&gt;:PDSCh:NCODewords?</a>
Example	<a href="#">:EVM:CCAR0:DLIN:PROF:USER1:PDSCh:NCOD 1</a> <a href="#">:EVM:CCAR0:DLIN:PROF:USER1:PDSCh:NCOD?</a>
Dependencies	Enabled only when all the following conditions are met: <ul style="list-style-type: none"> <li>- Number of C-RS Ports is set to more than 1 Port</li> <li>- Precoding is set to Spatial Multiplexing</li> <li>- Number of Layers is set to more than 1</li> </ul> <p>Max value of this parameter depends on Precoding. When Precoding is set to Tx Diversity, Max value is 1. When Precoding is set to Spatial Multiplexing, Max value is 2</p>
Couplings	Coupled with Precoding
Preset	1
State Saved	Yes
Min	1
Max	2
Backwards Compatibility SCPI	<a href="#">[:SENSe]:EVM:DLINK:PROFfile:USER&lt;n&gt;:PDSCh:NCODewords</a>

### Auto Detect Number of Codewords

Sets the number of codewords when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:NCODewords &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:NCODewords?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:NCOD 1</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:NCOD?</code>
Dependencies	Enabled only when all the following conditions are met: <ul style="list-style-type: none"> <li>- Number of C-RS Ports is set to more than 1 Port</li> <li>- Auto Detect Precoding is set to Spatial Multiplexing</li> <li>- Number of Layers is set to more than 1</li> </ul> <p>Max value of this parameter depends on Precoding. When Precoding is set to Tx Diversity, Max value is 1. When Precoding is set to Spatial Multiplexing, Max value is 2</p>
Couplings	Coupled with Precoding
Preset	1
State Saved	Yes
Min	1
Max	2
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSC:NCODewords</code>

## CDD

Sets whether precoding is done without Cyclic Delay Diversity (CDD) or with large delay CDD for spatial multiplexing when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSC:CDD WOCDD   LDCDD</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSC:CDD?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CDD WOCDD</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CDD?</code>
Notes	Applicable only when the instrument supports more than one RF input
Dependencies	Enabled only when all the following conditions are met <ul style="list-style-type: none"> <li>- RB Auto Detect is Off</li> <li>- Number of C-RS Ports is set to more than 1 Port</li> <li>- Precoding is set to Spatial Multiplexing</li> <li>- Number of Layers is set to more than 1</li> </ul>
Preset	WOCDD
State Saved	Yes

Range	Without CDD Large Delay CDD
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CDD</code>

### Auto Detect Precoding CDD

Determines whether precoding is done without cyclic delay diversity (CDD) or with large delay CDD for spatial multiplexing when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:CDD WOCDD   LDCDD</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:CDD?</code>
Example	<code>:EVM:CCAR0:DLIN:PROFile:AUTO:PDSCh:CDD WOCDD</code> <code>:EVM:CCAR0:DLIN:PROFile:AUTO:PDSCh:CDD?</code>
Notes	Applicable only when the instrument supports more than one RF input
Dependencies	Enabled only when all the following conditions are met <ul style="list-style-type: none"> <li>- RB Auto Detect is On</li> <li>- Number of C-RS Ports is set to more than 1 Port</li> <li>- Precoding is set to Spatial Multiplexing</li> <li>- Number of Layers is set to more than 1</li> </ul>
Preset	WOCDD
State Saved	Yes
Range	Without CDD Large Delay CDD
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:CDD</code>

### Code Book Index

Sets the Codebook Index number for spatial multiplexing precoding when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CBINDEX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CBINDEX?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSCh:CBIN 1</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSCh:CBIN?</code>
Dependencies	Max value of this parameter depends on Number of C-RS Ports. When Number of C-RS Ports is set to 2 Ports, Max value is 3. When Number of C-RS Ports is set to 4 Ports, Max value is 15 Enabled only when RB Auto Detect is Off, Number of C-RS Ports is set to more than 1 Port, and Precoding is set to Spatial Multiplexing

Couplings	Coupled with Number of C-RS Ports
Preset	0
State Saved	Yes
Min	0
Max	15 Max value depends on the port number: 3 - when Number of C-RS Ports is set to 2 Ports 15 - when Number of C-RS Ports is set to 4 Ports
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROF:USER&lt;n&gt;:PDSCh:CBIndex</code>

### Auto Detect Codebook Index

Sets the Codebook Index number for spatial multiplexing precoding when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROF:AUto:PDSCh:CBIndex &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROF:AUto:PDSCh:CBIndex?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUto:PDSCh:CBIN 1</code> <code>:EVM:CCAR0:DLIN:PROF:AUto:PDSCh:CBIN?</code>
Dependencies	Max value of this parameter depends on Number of C-RS Ports. When Number of C-RS Ports is set to 2 Ports, Max value is 3. When Number of C-RS Ports is set to 4 Ports, Max value is 15 Enabled only when RB Auto Detect is On, Precoding is set to Spatial Multiplexing and Number of C-RS Ports is set to more than 1 Port
Couplings	Coupled with Number of C-RS Ports
Preset	0
State Saved	Yes
Min	0
Max	15 Max value depends on the port number: 3 - when Number of C-RS Ports is set to 2 Ports 15 - when Number of C-RS Ports is set to 4 Ports
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROF:AUto:PDSCh:CBIndex</code>

### Modulation Format (Display Only)

Selects one of the Modulation Formats to be displayed when RB Auto Detect is On and RB Auto Detect Mode is Power Based.

- QPSK
- 16QAM
- 64QAM
- 256QAM
- 1024QAM

### User Index (Display Only)

Selects the User Index to be displayed when RB Auto Detect is On and RB Auto Detect Mode is Decoded DCI, or when RB Auto Detect is Off.

### EPRE (Auto Detect Off)

Sets the per-antenna Energy Per Resource Element (EPRE) value for all the Allocations when RB Auto Detect is Off and EPRE Couple is On.

When ERPE Couple is Off, refer to ["EPRE" on page 1610](#).

The average power per antenna port is relative to the 0 dB level of the RS power when its value is 0 dB.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:EPRE &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:EPRE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:EPRE 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:EPRE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Max value for n=50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, EPRE Couple is ON, and Use Per Antenna EPRE is On.
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:EPRE</code>

## Couple for EPRE

Determines whether or not all the Allocations use the EPRE value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:EPRE:COUPle OFF   ON   0   1  [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:EPRE:COUPle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:EPRE:COUP 0 :EVM:CCAR0:DLIN:PROF:USER1:PDSC:EPRE:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50.  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.  Enabled when Use Per Antenna EPRE is On and RB Auto Detect is Off.
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:EPRE:COUPle</code>

## EPRE (Auto Detect On, Power Based Mode, QPSK)

Sets the EPRE value for PDSCH QPSK Mod Type when RB Auto Detect is On and Use Per Antenna EPRE is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:EPRE &lt;rel_amp1&gt; [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:EPRE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:EPRE 0 :EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:EPRE?</code>
Dependencies	Enabled when RB Auto Detect is On and Use Per Antenna EPRE is On.
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:QPSK:EPRE</code>

### EPRE (Auto Detect On, Power Based Mode, 16QAM)

Sets the EPRE value for PDSCH 16QAM Mod Type when RB Auto Detect is On and Use Per Antenna EPRE is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM16:EPRE &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM16:EPRE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:EPRE 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:EPRE?</code>
Dependencies	Enabled when RB Auto Detect is On and Use Per Antenna EPRE is On.
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:QAM16:EPRE</code>

### EPRE (Auto Detect On, Power Based Mode, 64QAM)

Sets the EPRE value for PDSCH 64QAM Mod Type when RB Auto Detect is On and Use Per Antenna EPRE is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM64:EPRE &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM64:EPRE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:EPRE 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:EPRE?</code>
Dependencies	Enabled when RB Auto Detect is On and Use Per Antenna EPRE is On
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:QAM64:EPRE</code>

### EPRE (Auto Detect On, Power Based Mode, 256QAM)

Sets the EPRE value for PDSCH 256QAM Mod Type when RB Auto Detect is On, Use Per Antenna EPRE is On and Higher Order Modulation is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM256:EPRE &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM256:EPRE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:EPRE 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:EPRE?</code>
Dependencies	Enabled when RB Auto Detect is On, Use Per Antenna EPRE is On and Higher Order Modulation is enabled
Preset	0
State Saved	Yes
Min	-100
Max	100

### EPRE (Auto Detect On, Power Based Mode, 1024QAM)

Sets the EPRE value for PDSCH 1024QAM Mod Type when RB Auto Detect is On, Use Per Antenna EPRE is On and Higher Order Modulation is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM1024:EPRE &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM1024:EPRE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:EPRE 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:EPRE?</code>
Dependencies	Enabled when RB Auto Detect is On and Use Per Antenna EPRE is On and Higher Order Modulation is On
Preset	0
State Saved	Yes
Min	-100
Max	100

### EPRE (Auto Detect On, Decoded DCI Mode)

Sets the EPRE value for the specified user.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSC:h:EPRE &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSC:h:EPRE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:EPRE 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:EPRE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Max value for n=50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Available when all the following conditions are met:

- Direction is Downlink
- RB Auto Detect is On
- RB Auto Detect Mode is Decoded DCI
- Use Per Antenna EPRE is On
- Auto-detect Power Levels is Off

Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh:EPRE</code>

### CW0 Enable (Auto Detect Off)

Enables parameters for Codeword 0 and includes Codeword 0 in the analysis when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWZero:ENABle ON   OFF   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWZero:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWZ:ENAB ON</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWZ:ENAB?</code>
Dependencies	Enabled when RB Auto Detect is Off
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWZero:ENABle</code>

### CW0 Enable (Auto Detect On, Power Based Mode, QPSK)

Enables parameters for Codeword 0 for QPSK modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:CWZero:ENABle ON   OFF   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:CWZero:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:CWZ:ENAB ON</code>

	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:CWZ:ENAB?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:QPSK:CWZero:ENABle</code>

### CW0 Enable (Auto Detect On, Power Based Mode, 16QAM)

Enables parameters for Codeword 0 for 16QAM modulation when RB Auto Detect is On.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM16:CWZero:ENABle ON   OFF   0   1 [:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM16:CWZero:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:CWZ:ENAB ON :EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:CWZ:ENAB?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:QAM16:CWZero:ENABle</code>

### CW0 Enable (Auto Detect On, Power Based Mode, 64QAM)

Enables parameters for Codeword 0 for 64QAM modulation when RB Auto Detect is On.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM64:CWZero:ENABle ON   OFF   0   1 [:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM64:CWZero:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:CWZ:ENAB ON :EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:CWZ:ENAB?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:QAM64:CWZero:ENABle</code>

### CW0 Enable (Auto Detect On, Power Based Mode, 256QAM)

Enables parameters for Codeword 0 for 256QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:QAM256:CWZero:ENABle ON   OFF   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:QAM256:CWZero:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:CWZ:ENAB ON</code>  <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:CWZ:ENAB?</code>
Dependencies	Enabled when RB Auto Detect is On Available when Higher Order Modulation is On
Preset	ON
State Saved	Yes

### CW0 Enable (Auto Detect On, Power Based Mode, 1024QAM)

Enables parameters for Codeword 0 for 1024QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:QAM1024:CWZero:ENABle ON   OFF   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:QAM1024:CWZero:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:CWZ:ENAB ON</code>  <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:CWZ:ENAB?</code>
Dependencies	Enabled when RB Auto Detect is On Available when Higher Order Modulation is On
Preset	ON
State Saved	Yes

### CW0 Enable (Auto Detect On, Decoded DCI Mode)

Enables parameters for Codeword 0 and includes Codeword 0 in the analysis.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSC:CWZero:ENABle ON   OFF   0   1</code>  <code>[ :SENSe]:EVM:CCARri- er0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSC:CWZero:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:CWZ:ENAB ON</code>  <code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:CWZ:ENAB?</code>

Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Decoded DCI and Auto Detect Power Levels is Off.
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh:CWZero:ENABle</code>

### CW0 Mod Type (Auto Detect Off)

Selects the Modulation Type for all the Allocations when Mod Type Couple is On.  
When Couple is Off, refer to "CW0 Mod Type" on page 1611.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:MODulation:TYPE QPSK   QAM16   QAM64   QAM256  [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:MOD:TYPE QPSK :EVM:CCAR0:DLIN:PROF:USER1:PDSC:MOD:TYPE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n= 50.  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.  Enabled when RB Auto Detect is Off, Codeword 0 Enable is ON and Mod Type Couple is ON. QAM256 and QAM1024 options are available only when Higher Order Modulation is On.
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:MODulation:TYPE</code>

### Couple for CW0 Mod Type

Determines whether or not all the Allocations use the Common Mod Type value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:MODulation:TYPE:COUple OFF   ON   0   1  [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:MODulation:TYPE:COUple?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:MOD:TYPE:COUP ON</code>

---

[:EVM:CCAR0:DLIN:PROF:USER1:PDSC:MOD:TYPE:COUP?](#)

---

Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. Max value for n=50.</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.</p> <p>Enabled when RB Auto Detect is Off and CW0 Enable is On.</p>
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<a href="#">[:SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:MODulation:TYPE:COUPle</a>

### CW0 Power (dB) (Auto Detect Off)

Sets the Power Boost value for all the Allocations when Power Boost Couple is On.

Power Boost value specifies the average power for the codeword symbols.

The average power of the codeword modulation symbols (d(q)(i)) is relative to the 0 dB level determined by the RS power level.

---

Remote Command	<p><a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PWRBoost &lt;rel_ampl&gt;</a></p> <p><a href="#">[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PWRBoost?</a></p>
Example	<p><a href="#">:EVM:CCAR0:DLIN:PROF:USER1:PDSC:PWRB 0</a></p> <p><a href="#">:EVM:CCAR0:DLIN:PROF:USER1:PDSC:PWRB?</a></p>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured Max value for n=50.</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.</p> <p>Enabled when RB Auto Detect is Off, Use "Per-antenna" EPRE is OFF, Power Boost Couple is ON, and Codeword 0 Enable is ON.</p>
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<a href="#">[:SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PWRBoost</a>

### Couple for CW0 Power

Determines whether or not all the Allocations use the Common Power Boost value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PWRBoost:COUPle OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PWRBoost:COUPle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:PWRB:COUP 0</code>  <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:PWRB:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50.  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.  Enabled when RB Auto Detect is Off, Use "Per-antenna" EPRE is OFF and Codeword 0 Enable is ON.
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:PWRBoost:COUPle</code>

### CW0 Power (dB) (Auto Detect On, Power Based Mode, QPSK)

Sets the Power Boost value for PDSCH QPSK Mod Type when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:PWRBoost &lt;rel_ ampl&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:PWRB 0</code>  <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:PWRB?</code>
Dependencies	Enabled when RB Auto Detect is On, Use "Per-antenna" EPRE is OFF and Auto Detect Codeword 0 for QPSK QAM16 QAM64 QAM256 is ON.
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:QPSK:PWRBoost</code>

### CW0 Power (dB) (Auto Detect On, Power Based Mode, 16QAM)

Sets the Power Boost value for PDSCH 16QAM Mod Type when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM16:PWRBoost &lt;rel_ ampl&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM16:PWRBoost?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:PWRB?</code>
Dependencies	Enabled when RB Auto Detect is On, Use "Per-antenna" EPRE is OFF and Auto Detect Codeword 0 for QPSK QAM16 QAM64 QAM256 is ON.
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe ]:EVM:DLINK:PROF:file:AUTO:PDsch:QAM16:PWRBoost</code>

### CWO Power (dB) (Auto Detect On, Power Based Mode, 64QAM)

Sets the Power Boost value for PDSCH 64QAM Mod Type when RB Auto Detect is On.

Remote Command	<code>[ :SENSe ]:EVM:CCARrier0 ... 4:DLINK:PROF:file:AUTO:PDsch:QAM64:PWRBoost &lt;rel_ ampl&gt;</code> <code>[ :SENSe ]:EVM:CCARrier0 ... 4:DLINK:PROF:file:AUTO:PDsch:QAM64:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:PWRB?</code>
Dependencies	Enabled when RB Auto Detect is On, Use "Per-antenna" EPRE is OFF and Auto Detect Codeword 0 for QPSK QAM16 QAM64 is ON.
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe ]:EVM:DLINK:PROF:file:AUTO:PDsch:QAM64:PWRBoost</code>

### CWO Power (dB) (Auto Detect On, Power Based Mode, 256QAM)

Sets the Power Boost value for PDSCH 256QAM Mod Type when RB Auto Detect is On.

Remote Command	<code>[ :SENSe ]:EVM:CCARrier0 ... 4:DLINK:PROF:file:AUTO:PDsch:QAM256:PWRBoost &lt;rel_ ampl&gt;</code> <code>[ :SENSe ]:EVM:CCARrier0 ... 4:DLINK:PROF:file:AUTO:PDsch:QAM256:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:PWRB?</code>

Dependencies	Enabled when RB Auto Detect is On, Use Per-antenna EPRE is OFF. Available when Higher Order Modulation is On.
Preset	0
State Saved	Yes
Min	-100
Max	100

### CW0 Power (dB) (Auto Detect On, Power Based Mode, 1024QAM)

Sets the Power Boost value for PDSCH 1024QAM Mod Type when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM1024:PWRBoost &lt;rel_ ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM1024:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:PWRB?</code>
Dependencies	Enabled when RB Auto Detect is On, Use Per-antenna EPRE is OFF Available when Higher Order Modulation is enabled
Preset	0
State Saved	Yes
Min	-100
Max	100

### CW0 Power (dB) (Auto Detect On, Decoded DCI Mode)

Sets the Power Boost value for the specified user.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh:CWZero:PWRBoost &lt;rel_ ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh:CWZero:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:CWZ:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:CWZ:PWRB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Max value for n=50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Available when all the following conditions are met: <ul style="list-style-type: none"> <li>- Direction is Downlink</li> </ul>

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

- RB Auto Detect is On
- RB Auto Detect Mode is Decoded DCI
- Auto-detect Power Levels is OFF
- Use "Pre-antenna" EPRE is OFF
- Codeword 0 Enable is ON

Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:DECodEd:PDSCh:CWZero:PWRBoost</code>

### CW1 Enable (Auto Detect Off)

Enables parameters for Codeword 1 and includes Codeword 1 in the analysis when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:ENABle ON   OFF   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:ENAB ON</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:ENABle</code>

### CW1 Enable (Auto Detect On, Power Based Mode, QPSK)

Enables parameters for Codeword 1 for QPSK modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:CWONe:ENABle ON   OFF   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:CWONe:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:CWON:ENAB ON</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:CWON:ENAB?</code>

Notes	This parameter is applicable only when the instrument supports more than one RF input
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINk:PROFile:AUTO:PDSC:h:QPSK:CWONe:ENABle</code>

### CW1 Enable (Auto Detect On, Power Based Mode, 16QAM)

Enables parameters for Codeword 1 for 16QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:PROFile:AUTO:PDSC:h:QAM16:CWONe:ENABle ON   OFF   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:PROFile:AUTO:PDSC:h:QAM16:CWONe:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:CWON:ENAB ON</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:CWON:ENAB?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINk:PROFile:AUTO:PDSC:h:QAM16:CWONe:ENABle</code>

### CW1 Enable (Auto Detect On, Power Based Mode, 64QAM)

Enables parameters for Codeword 1 for 64QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:PROFile:AUTO:PDSC:h:QAM64:CWONe:ENABle ON   OFF   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINk:PROFile:AUTO:PDSC:h:QAM64:CWONe:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:CWON:ENAB ON</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:CWON:ENAB?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINk:PROFile:AUTO:PDSC:h:QAM64:CWONe:ENABle</code>

### CW1 Enable (Auto Detect On, Power Based Mode, 256QAM)

Enables parameters for Codeword 1 for 256QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:AUTO:PDSC:h:QAM256:CWONe:ENABle ON   OFF   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:AUTO:PDSC:h:QAM256:CWONe:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:CWON:ENAB ON</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:CWON:ENAB?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	Available when Higher Order Modulation is enabled
Preset	ON
State Saved	Yes

### CW1 Enable (Auto Detect On, Power Based Mode, 1024QAM)

Enables parameters for Codeword 1 for 1024QAM modulation when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:AUTO:PDSC:h:QAM1024:CWONe:ENABle ON   OFF   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:AUTO:PDSC:h:QAM1024:CWONe:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:CWON:ENAB ON</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:CWON:ENAB?</code>
Notes	Applicable only when the instrument supports more than one RF input
Dependencies	Always grayed out since this instrument supports only one RF input Available when Higher Order Modulation is enabled
Preset	ON
State Saved	Yes

### CW1 Enable (Auto Detect On, Decoded DCI Mode)

Enables parameters for Codeword 1 and includes Codeword 1 in the analysis.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:USER&lt;n&gt;:DECoded:PDSC:h:CWONe:ENABle ON   OFF   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:USER&lt;n&gt;:DECoded:PDSC:h:CWONe:ENABle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:CWON:ENAB ON</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:CWON:ENAB?</code>

Dependencies	Available when RB Auto Detect is On, RB Auto Detect Mode is Decoded DCI, and Auto-detect Power Levels is Off
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe ]:EVM:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh:CWONe:ENABLe</code>

### CW1 Mod Type (Auto Detect Off)

Selects the Modulation Type for Codeword 1 for all the Allocations when Mod Type Couple is On.

Remote Command	<code>[ :SENSe ]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:MODulation:TYPE QPSK   QAM16   QAM64   QAM256   QAM1024</code> <code>[ :SENSe ]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:MOD:TYPE QPSK</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:MOD:TYPE?</code>
Notes	Applicable only when the instrument supports more than one RF input.
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n= 50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, CW1 Enable is On and Mod Type Couple is ON. QAM256 and QAM1024 options are available only when Higher Order Modulation is On.
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe ]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:MODulation:TYPE</code>

### Couple for CW1 Mod Type

Determines whether or not all the Allocations use the Common Mod Type value for Codeword 1.

Remote Command	<code>[ :SENSe ]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:MODulation:TYPE:COUPle OFF   ON   0</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	1 [:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER<n>:PDSCh:CWONe:MODulation:TYPE:COUPle?
Example	:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:MOD:TYPE:COUP ON :EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:MOD:TYPE:COUP?
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n= 50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, CW1 Enable is On and Mod Type Couple is ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	[:SENSe]:EVM:DLINK:PROFile:USER<n>:PDSCh:CWONe:MODulation:TYPE:COUPle

### CW1 Power (dB) (Auto Detect Off)

Sets the Power Boost value for Codeword 1 for all the Allocations when Power Boost Couple is On.

Remote Command	[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER<n>:PDSCh:CWONe:PWRBoost <rel_ ampl> [:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER<n>:PDSCh:CWONe:PWRBoost?
Example	:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:PWRB 0 :EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:PWRB?
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Max value for n=50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	[:SENSe]:EVM:DLINK:PROFile:USER<n>:PDSCh:CWONe:PWRBoost

## Couple for CW1 Power

Determines whether or not all the Allocations use the Common Power Boost value for Codeword 1.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:PWRBoost:COUPle OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARri- er0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:PWRBoost:COUPle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:PWRB:COUP 0</code>  <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:PWRB:COUP?</code>
Notes	Applicable only when the instrument supports more than one RF input
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:PWRBoost:COUPle</code>

## CW1 Power (dB) (Auto Detect On, Power Based Mode, QPSK)

Sets the Power Boost value for PDSCH QPSK Mod Type for Codeword 1 when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:CWONe:PWRBoost &lt;rel_ampl&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:CWONe:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:CWON:PWRB 0</code>  <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:CWON:PWRB?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	Enabled when RB Auto Detect is On
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSCh:QPSK:CWONe:PWRBoost</code>

### CW1 Power (dB) (Auto Detect On, Power Based Mode, 16QAM)

Sets the Power Boost value for PDSCH 16QAM Mod Type for Codeword 1 when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM16:CWONe:PWRBoost &lt;rel_amp1&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM16:CWONe:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:CWON:PWRB 0</code>  <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:CWON:PWRB?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	Enabled when RB Auto Detect is On
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSC:h:QAM16:CWONe:PWRBoost</code>

### CW1 Power (dB) (Auto Detect On, Power Based Mode, 64QAM)

Sets the Power Boost value for PDSCH 64QAM Mod Type for Codeword 1 when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM64:CWONe:PWRBoost &lt;rel_amp1&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM64:CWONe:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:CWON:PWRB 0</code>  <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:CWON:PWRB?</code>
Notes	Applicable only when the instrument supports more than one RF input
Dependencies	Enabled when RB Auto Detect is On
Preset	0
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:AUTO:PDSC:h:QAM64:CWONe:PWRBoost</code>

### CW1 Power (dB) (Auto Detect On, Power Based Mode, 256QAM)

Sets the Power Boost value for PDSCH 256QAM Mod Type for Codeword 1 when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM256:CWONe:PWRBoost &lt;rel_ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM256:CWONe:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:CWON:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:CWON:PWRB?</code>
Notes	Applicable only when the instrument supports more than one RF input
Dependencies	Enabled when RB Auto Detect is On Available when Higher Order Modulation is enabled
Preset	0
State Saved	Yes
Min	-100
Max	100

### CW1 Power (dB) (Auto Detect On, Power Based Mode, 1024QAM)

Sets the Power Boost value for PDSCH 1024QAM Mod Type for Codeword 1 when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM1024:CWONe:PWRBoost &lt;rel_ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM1024:CWONe:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:CWON:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:CWON:PWRB?</code>
Notes	Applicable only when the instrument supports more than one RF input
Dependencies	Enabled when RB Auto Detect is On Available when Higher Order Modulation is enabled
Preset	0
State Saved	Yes
Min	-100
Max	100

### CW1 Power (dB) (Auto Detect On, Decoded DCI Mode)

Sets the Power Boost value for the specified user.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh:CWONe:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh:CWONe:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:DEC:PDSC:CWON:PWRB 0</code>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured Max value for n=50.</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>Available when all the following conditions are met:</p> <ul style="list-style-type: none"> <li>- Direction is Downlink</li> <li>- RB Auto Detect is On</li> <li>- RB Auto Detect Mode is Decoded DCI</li> <li>- Auto-detect Power Levels is OFF</li> <li>- Use "Pre-antenna" EPRE is OFF</li> <li>- Codeword 1 Enable for Decoded User is ON</li> </ul>
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:DECoded:PDSCh:CWONe:PWRBoost</code>

### Frame Index (TDD only)

Select the Frame Index for all the Allocations when Frame Index Couple is On.

Enabled when all the following conditions are met.

- RB Auto Detect is Off.
- Multi-Frame Analysis is ON.
- Frame Index Couple is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:FINDex F0   F1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:FINDex?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:FIND F0</code>

	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:FIND?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n= 50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.
Preset	F0
State Saved	Yes
Range	F0 F1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:FINDex</code>

### Couple for Frame Index

Sets all the Allocations to use the Common Frame Index value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:FINDex:COUPle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:FINDex:COUPle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:FIND:COUP ON</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:FIND:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when the Mode is LTEATDD, RB Auto Detect is Off, and Multi-Frame Analysis is ON.
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:FINDex:COUPle</code>

### CW0 MCS Index (Auto Detect Off)

Sets the MCS Index value for all the Allocations when auto-detect is off and MCS Index Couple is On.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:MCS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:MCS 0</code>

---

**:EVM:CCAR0:DLIN:PROF:USER1:PDSC:MCS?**

---

Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Max value for n=50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, MCS Index Couple is ON, and Codeword 0 Enable is ON.
Preset	0
State Saved	Yes
Min	0
Max	63

### CW0 MCS Index (Auto Detect On, Power Based Mode, QPSK)

Sets the MCS Index value for PDSCH QPSK Mod Type when RB Auto Detect is on and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

---

Remote Command	<b>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QPSK:MCS &lt;integer&gt;</b> <b>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QPSK:MCS?</b>
Example	<b>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:MCS 0</b> <b>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:MCS?</b>
Dependencies	Enabled when RB Auto Detect is On and power-based mode, and Auto Detect Codeword 0 for QPSK QAM16 QAM64 QAM256 QAM1024 is ON
Preset	0
State Saved	Yes
Min	0
Max	63

### CW0 MCS Index (Auto Detect On, Power Based Mode, 16QAM)

Sets the MCS Index value for PDSCH 16QAM Mod Type when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

---

Remote Command	<b>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM16:MCS &lt;integer&gt;</b> <b>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM16:MCS?</b>
Example	<b>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:MCS 0</b>

	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:MCS?</code>
Dependencies	Enabled when RB Auto Detect is On and power-based mode, Auto Detect Codeword 0 for QPSK QAM16 QAM64 QAM256 QAM1024 is ON
Preset	0
State Saved	Yes
Min	0
Max	63

### CW0 MCS Index (Auto Detect On, Power Based Mode, 64QAM)

Sets the MCS Index value for PDSCH 64QAM Mod Type when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM64:MCS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM64:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:MCS?</code>
Dependencies	Enabled when RB Auto Detect is On and power-based mode and Auto Detect Codeword 0 for QPSK QAM16 QAM64 QAM256 QAM1024 is ON
Preset	0
State Saved	Yes
Min	0
Max	63

### CW0 MCS Index (Auto Detect On, Power Based Mode, 256QAM)

Sets the MCS Index value for PDSCH 256QAM Mod Type when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM256:MCS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:h:QAM256:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:MCS?</code>
Dependencies	Enabled when RB Auto Detect is On and power-based mode and Auto Detect Codeword 0 for QPSK QAM16 QAM64 QAM256 QAM1024 is ON

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	Available when Higher Order Modulation is On.
Preset	0
State Saved	Yes
Min	0
Max	63

### CW0 MCS Index (Auto Detect On, Power Based Mode, 1024QAM)

Sets the MCS Index value for PDSCH 1024QAM Mod Type when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM1024:MCS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QAM1024:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:MCS?</code>
Dependencies	Enabled when RB Auto Detect is On and power-based mode and Auto Detect Codeword 0 for QPSK QAM16 QAM64 QAM256 QAM1024 is ON Available when Higher Order Modulation is enabled
Preset	0
State Saved	Yes
Min	0
Max	63

### CW1 MCS Index (Auto Detect Off)

Sets the MCS Index value for Codeword 1 for all the Allocations when CW1 MCS Index Couple is On and auto-detect is off.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONE:MCS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONE:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:MCS?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Max value for n=50

	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Preset	0
State Saved	Yes
Min	0
Max	63

### Couple for CW1 MCS Index

Determines whether all the Allocations use the Common MCS Index value for Codeword 1.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:MCS:COUPle OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:CWONe:MCS:COUPle?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:MCS:COUP 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:CWON:MCS:COUP?</code>
Notes	Applicable only when the instrument supports more than one RF input.
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.
Preset	ON
State Saved	Yes

### CW1 MCS Index (Auto Detect On, Power Based Mode, QPSK)

Sets the MCS Index value for PDSCH QPSK Mod Type for Codeword 1 when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:CWONe:MCS &lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSCh:QPSK:CWONe:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:CWON:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QPSK:CWON:MCS?</code>
Notes	Applicable only when the instrument supports more than one RF input.
Dependencies	Enabled when RB Auto Detect is On and power-based mode.

Preset	0
State Saved	Yes
Min	0
Max	63

### CW1 MCS Index (Auto Detect On, Power Based Mode, 16QAM)

Sets the MCS Index value for PDSCH 16QAM Mod Type for Codeword 1 when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:AUTO:PDSC:h:QAM16:CW0Ne:MCS &lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:AUTO:PDSC:h:QAM16:CW0Ne:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:CWON:MCS 0</code>  <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM16:CWON:MCS?</code>
Notes	Applicable only when the instrument supports more than one RF input
Dependencies	Enabled when RB Auto Detect is On and power-based mode
Preset	0
State Saved	Yes
Min	0
Max	63

### CW1 MCS Index (Auto Detect On, Power Based Mode, 64QAM)

Sets the MCS Index value for PDSCH 64QAM Mod Type for Codeword 1 when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:AUTO:PDSC:h:QAM64:CW0Ne:MCS &lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFfile:AUTO:PDSC:h:QAM64:CW0Ne:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:CWON:MCS 0</code>  <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM64:CWON:MCS?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	Enabled when RB Auto Detect is On and power-based mode

Preset	0
State Saved	Yes
Min	0
Max	63

### CW1 MCS Index (Auto Detect On, Power Based Mode, 256QAM)

Sets the MCS Index value for PDSCH 256QAM Mod Type for Codeword 1 when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information. A value of 0 indicates that the parameter is not used

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:QAM256:CWONe:MCS &lt;integer&gt;</code> <code>[[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:QAM256:CWONe:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:CWON:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM256:CWON:MCS?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	Enabled when RB Auto Detect is On and power-based mode Available when Higher Order Modulation is enabled
Preset	0
State Saved	Yes
Min	0
Max	63

### CW1 MCS Index (Auto Detect On, Power Based Mode, 1024QAM)

Sets the MCS Index value for PDSCH 1024QAM Mod Type for Codeword 1 when RB Auto Detect is On and power-based mode.

Specifies the MCS Index for decoding of the PDSCH for the codeword symbols in the absence of PDCCH decoding Downlink Control Information.

Remote Command	<code>[[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:QAM1024:CWONe:MCS &lt;integer&gt;</code> <code>[[:SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:AUTO:PDSC:QAM1024:CWONe:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:CWON:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:AUTO:PDSC:QAM1024:CWON:MCS?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Dependencies	Enabled when RB Auto Detect is On and power-based mode Available when Higher Order Modulation is enabled
Preset	0
State Saved	Yes
Min	0
Max	63

### PDSCH Per Allocation Parameters

Allows you to set the parameters for specific allocations.

#### User Channel (Display Only)

Displays the selected User Channel.

#### Allocation (Display Only)

Displays the Allocation Index.

### Add Allocation

Adds a new Allocation after the currently selected Allocation and the new entry becomes the selected Allocation. The parameters for the new Allocation are set to the default values.

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ADD:ALLocation</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:ADD:ALL</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The new Allocation is added to the end of the currently defined Allocation. Disabled once the number of Allocations reaches to 250 (max).
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ADD:ALLocation</code>

### Delete Allocation

Deletes the currently selected Allocation.

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:DELete</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:DEL</code>

Dependencies	<p>Disabled when there is only one Allocation.</p> <p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. The range of sub op code &lt;m&gt; values is determined by the number of Allocations you have configured. Max value for n=50. Max Value for m=250.</p> <p>If you attempt to delete a Slot that does not exist, an error message is generated.</p>
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLocation&lt;m&gt;:DElete (Max value for n=50 and m=50)</code>

## RB Start

Sets the Resource Block start boundary of the selected Allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:RB:START &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:RB:START?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:RB:STAR 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:RB:STAR?</code>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. The range of sub op code &lt;m&gt; values is determined by the number of Allocations you have configured. Max value for n=50. Max Value for m=250.</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.</p>
Couplings	If you attempt to set a RB Start value greater than the RB End value, both values are set to the RB Start value or clipped to the min or max value if the entered value is out of range
Preset	0
State Saved	Yes
Min	0
Max	<p>Max valude depends on the bandwidth:</p> <ul style="list-style-type: none"> <li>5 - Bandwidth 1.4 MHz</li> <li>14 - Bandwidth 3 MHz</li> <li>24 - Bandwidth 5 MHz</li> <li>49 - Bandwidth 10 MHz</li> <li>74 - Bandwidth 15 MHz</li> <li>99 - Bandwidth 20 MHz</li> </ul>
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLocation&lt;m&gt;:RB:START (Max value for n=50 and m=50)</code> <code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:RB:START</code>

## RB End

Sets the Resource Block stop boundary of the selected Allocation.

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:RB:END&lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:RB:END?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:RB:END 0</code>  <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:RB:END?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Couplings	If you attempt to set a RB End value less than the RB Start value, both values are set to the RB End value or clipped to the min or max value if the entered value is out of range
Preset	0
State Saved	Yes
Min	0
Max	Max valude depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLocation&lt;m&gt;:RB:END (Max value for n=50 and m=50)</code>  <code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:RB:END</code>

## Slot Start

Sets the Slot start boundary of the selected Allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:SLOT:START&lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:SLOT:START?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:SLOT:STAR 0</code>  <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:SLOT:STAR?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured Max value for n=50. Max Value for m=250 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Couplings	If you attempt to set a Slot Start value greater than the Slot End value, both values are set to the Slot

	Start value or clipped to the min or max value if the entered value is out of range
Preset	0
State Saved	Yes
Min	0
Max	19
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLocAtion&lt;m&gt;:SLOT:START (Max value for n=50 and m=50)</code> <code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:SLOT:START</code>

## Slot End

Sets the Slot end boundary of the selected Allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:SLOT:END &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:SLOT:END?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:SLOT:END 1</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:SLOT:END?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Couplings	If you attempt to set a Slot End value less than the Slot Start value, both values are set to the Slot End value or clipped to the min or max value if the entered value is out of range
Preset	0
State Saved	Yes
Min	0
Max	19
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLocAtion&lt;m&gt;:SLOT:END (Max value for n=50 and m=50)</code> <code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:SLOT:END</code>

## EPRE

Sets the EPRE value for the selected Allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:EPRE &lt;rel_ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:EPRE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:EPRE 0</code>

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:EPRE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured Max value for n=50. Max Value for m=250 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, Use Per Antenna EPRE is On, EPRE Couple is Off and Add Allocation at least once
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROfile:USER&lt;n&gt;:PDSch:RBALloc&lt;m&gt;:EPRE</code>

## CW0 Mod Type

Selects the Modulation Type for the selected Allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROfile:USER&lt;n&gt;:PDSch:RBALloc&lt;m&gt;:MODulation:TYPE QPSK   QAM16   QAM64   QAM256   QAM1024</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROfile:USER&lt;n&gt;:PDSch:RBALloc&lt;m&gt;:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:MOD:TYPE QPSK</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:MOD:TYPE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured Max value for n=50. Max Value for m=250 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when Mod Type Couple is Off and Codeword 0 Enable is On QAM256 and QAM1024 options are available only when Higher Order Modulation is On
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM QAM256 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROfile:USER&lt;n&gt;:PDSch:ALLocation&lt;m&gt;:MODulation:TYPE QPSK   QAM16   QAM64 (Max value for n=50 and m=50)</code> <code>[ :SENSe]:EVM:DLINK:PROfile:USER&lt;n&gt;:PDSch:RBALloc&lt;m&gt;:MODulation:TYPE</code>

## CW0 Power (dB)

Sets the Power Boost value for the selected Allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:PWRBoost &lt;rel_ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:PWRB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured. Max value for n=50. Max Value for m=250. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, Use "Per-antenna" EPRE is OFF, Codeword 0 Enable is ON and Power Boost Couple is OFF.
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLocAtion&lt;m&gt;:PWRBoost (Max value for n=50 and m=50)</code> <code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:PWRBoost</code>

## CW1 Mod Type

Selects the Modulation Type of Codeword 1 for the selected Allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:CWONe:MODulation:TYPE QPSK   QAM16   QAM64   QAM256   QAM1024</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:CWONe:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:CWON:MOD:TYPE QPSK</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:CWON:MOD:TYPE?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured. Max value for n=50. Max Value for m=250 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message QAM256 and QAM1024 options are available only when Higher Order Modulation is On

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM 1024QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLoca-tion&lt;m&gt;:CWONe:MODulation:TYPE QPSK   QAM16   QAM64 (Max value for n=50 and m=50)</code> <code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:CWONe:MODulation:TYPE</code>

### CW1 Power (dB)

Sets the Power Boost value of Codeword 1 for the selected Allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:CWONe:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:CWONe:PWRBoost?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:CWON:PWRB 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:CWON:PWRB?</code>
Notes	This parameter is applicable only when the instrument supports more than one RF input
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured. Max value for n=50. Max Value for m=250 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLoca-tion&lt;m&gt;:CWONe:PWRBoost (Max value for n=50 and m=50)</code> <code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:CWONe:PWRBoost</code>

### Frame Index (TDD only)

Specifies the Frame Index for the selected Allocation.

**NOTE** Enabled only for the LTE TDD mode.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:FINdex F0   F1</code>
----------------	--

	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:FINDex?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:FIND F0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:FIND?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured Max value for n=50. Max Value for m=250 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled only for the LTE TDD mode Enabled when RB Auto Detect is Off, Multi –Frame Analysis is ON, and Frame Index Couple is OFF
Preset	F0
State Saved	Yes
Range	F0 F1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0   ...   4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:ALLoca-tion&lt;m&gt;:FINDex F0   F1 (Max value for n=50 and m=50)</code> <code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:FINDex</code>

### Count Number of Users (Remote Command Only)

Returns the number of added users.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:COUNT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:COUN?</code>
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:COUNT</code>

### Count Number of PDSCH Allocations (Remote Command Only)

This command returns the number of added PDSCH allocations.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:COUNT?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER2:PDSC:COUN?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:PROFile:USER&lt;n&gt;:PDSCh:COUNT</code>

## CW0 MCS Index

Sets the MCS Index value for Codeword 0 for the selected Allocation when CW0 MCS Index Couple is Off and auto-detect is off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:MCS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:MCS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users the user has configured. The range of sub op code <m> values is determined by the number of Allocations you have configured. Max value for n=50. Max Value for m=250 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, Codeword 0 Enable is ON and MCS Index Couple is OFF.
Preset	0
State Saved	Yes
Min	0
Max	63

## CW1 MCS Index

Sets the MCS Index value for Codeword 1 for the selected Allocation when CW1 MCS Index Couple is Off and auto-detect is off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:CW0Ne:MCS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:PROFile:USER&lt;n&gt;:PDSCh:RBALloc&lt;m&gt;:CW0Ne:MCS?</code>
Example	<code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:CW0Ne:MCS 0</code> <code>:EVM:CCAR0:DLIN:PROF:USER1:PDSC:RBAL1:CW0Ne:MCS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Allocations you have configured. Max value for n=50. Max Value for m=250 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, Codeword 0 Enable is ON and CW1 MCS Index Couple is OFF
Preset	0
State Saved	Yes

Min	0
Max	63

### Edit NB-IoT Channels (NB-IoT only)

This control allows you to set up parameters for NB-IoT Channels.

### Cell ID

Shared the LTE Cell ID. See ["Cell ID" on page 1469](#)

### Reference Component Carrier

This key specifies which E-UTRA component carrier the downlink NB-IoT occupies.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:NIOT:DLINK:INBAND:REFerence CC0   ...   CC4</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:NIOT:DLINK:INBAND:REFerence?</code>
Example	<code>:EVM:CCAR0:NIOT:DLIN:INB:REF CC1</code> <code>:EVM:CCAR0:NIOT:DLIN:INB:REF?</code>
Dependencies	Enabled when Direction is Downlink and Modes of Operation is In-Band with Same PCI and In-Band with Different PCI. Reference Component Carrier is coupled to Number of Component Carriers. For example, reference configuration list includes CC0~CC1 if the number of Component Carriers is 2.
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### Carrier Freq Offset Auto Calc.

The setting indicates whether to open the functionality of NB-IoT Carrier Frequency Offset auto calculation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:NIOT:DLINK:INBAND:FOFFset:CALCulate[:STATe] OFF</code> <code>  ON</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:NIOT:DLINK:INBAND:FOFFset:CALCulate[:STATe]?</code>
Example	<code>:EVM:CCAR0:NIOT:DLIN:INB:FOFF:CALC ON</code> <code>:EVM:CCAR0:NIOT:DLIN:INB:FOFF:CALC?</code>
Notes	When the state is ON, the NB-IoT carrier frequency offset can be calculated automatically based on the reference E-UTRA component carrier center frequency and RB Offset which NB-IoT carrier in E-UTRA component carrier. Otherwise, NB-IoT carrier frequency offset needs to set manually

Dependencies	Enabled when Direction is Downlink and Modes of Operation is In-Band with Same PCI and In-Band with Different PCI, and Number of Component Carriers > 1
Preset	OFF
State Saved	Yes
Range	OFF ON

## MPDCCH

This tab provides an alternative way to configure the MPDCCH parameters for eMTC users.

See Edit MPDCCH Control Channels.

## Other Control Channels

This control allows you to set up parameters for Other Control Channels.

## Channel Profile(Uplink)

This tab contains commonly used functions for channel setup parameters.

## RB Auto Detect

See ["RB Auto Detect" on page 1499](#)

## RB Auto Detect Mode

See ["RB Auto Detect Mode" on page 1500](#)

## Auto Detect Power Levels

Selects whether or not power levels are auto detected when Direction is Uplink.

When this parameter is set to on, the LTEA demodulator detects the relative uplink channel power levels for PUCCH, PUSCH, SRS and PRACH. When this parameter is set to off, the power levels for uplink channels must be specified.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO[:DETECT]:POWer OFF   ON   0   1</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:POW ON</code>

	<code>:EVM:CCAR0:ULIN:PROF:AUTO:POW?</code>
Dependencies	Available when Direction is Uplink and RB Auto Detect is On.
Preset	OFF
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROF:AUto[:DETEct]:POWer</code>

## Non-Allocated Symbols

Includes the inactive signals in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:PROF:file:NALLocation INCLUDE   EXCLUDE</code>
Example	<code>:EVM:CCAR0:PROF:NALL EXCL</code> <code>:EVM:CCAR0:PROF:NALL?</code>
Couplings	This parameter is same for Downlink and Uplink. When either Downlink Exclude All or Uplink Exclude All is selected, this parameter is set to Exclude.
Preset	EXCLUDE
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:PROF:file:NALLocation</code>

## Copy Auto -> Manual

See ["Copy Auto -> Manual"](#) on page 1503.

## Edit User Mapping

See ["Edit User Mapping"](#) on page 1549.

This is for Uplink.

## RB Auto Detect

This tab allows you to set up the parameters for RB Auto Detection.

## RB Auto Detect

See ["RB Auto Detect" on page 1499](#)

## RB Auto Detect Mode

See ["RB Auto Detect Mode" on page 1500](#)

## Auto Detect Power Levels

See ["Auto Detect Power Levels" on page 1617](#).

## User Summary

### Add User

Adds a new User and the new entry becomes the selected User. All parameters of channels for the new User are set to the default values.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:ADD:USER</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:ADD:USER</code>
Dependencies	The new User is added at the end of the currently defined Users Disabled once the number of Slots reaches to 50, the max number
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:ADD:USER</code>

### Delete User

Deletes the current selected User.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:DELeTe</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:DEL</code>
Notes	Once a User is deleted, subsequent Users are renumbered to keep User numbering sequential
Dependencies	The range of sub op code (n) values is determined by the number of Users you have configured. If you attempt to remotely delete a sub op code that is out of range, this results in an error message Disabled when there is only one User
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:DELeTe</code>

## Cell ID

Sets uplink user's physical-layer Cell ID when Detection is Man.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:CID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:CID?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:CID 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:CID?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off
Preset	0
State Saved	Yes
Min	0
Max	503
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:CID</code>

## Auto Detect Cell ID

Sets uplink user's physical-layer Cell ID when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:CID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:CID?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:CID 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:CID?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	0
State Saved	Yes
Min	0
Max	503
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:CID</code>

## RNTI

Sets uplink user's radio network temporary identifier.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:RNTI &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:RNTI?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:RNTI 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:RNTI?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Available when Direction is Uplink and RB Auto Detect is Off.
Preset	1
State Saved	Yes
Min	0
Max	65535
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:RNTI</code>

### Auto Detect RNTI

Sets uplink user's radio network temporary identifier.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:RNTI &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:RNTI?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:RNTI 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:RNTI?</code>
Dependencies	Available when Direction is Uplink and RB Auto Detect is On
Preset	0
State Saved	Yes
Min	0
Max	65535
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:RNTI</code>

### Frame No.

Sets uplink user's System Frame Number when Detection is Man.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SFNumber &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SFNumber?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SFN 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SFN?</code>

Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off
Preset	0
State Saved	Yes
Min	0
Max	1023
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SFNumber</code>

### Auto Detect Frame No.

Sets uplink user's System Frame Number when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SFNumber &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SFNumber?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SFN 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SFN?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	0
State Saved	Yes
Min	0
Max	1023
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SFNumber</code>

### Group Hop

Determines if Group Hopping is enabled when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:HOPPing:GROup OFF   ON   0</code> <code>  1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:HOPPing:GROup?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:HOPP:GRO OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:HOPP:GRO?</code>
Dependencies	Enabled when RB Auto Detect is Off
Couplings	Enabling Group Hopping disables Sequence Hopping
Preset	OFF

State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:HOPping:GROup</code>

### Auto Detect Group Hop

Determines if Group Hopping is enabled when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:HOPping:GROup OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:HOPping:GROup?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:HOPP:GRO OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:HOPP:GRO?</code>
Dependencies	Enabled when RB Auto Detect is On
Couplings	Enabling Group Hopping disables Sequence Hopping
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:HOPping:GROup</code>

### Seq Hop

Determines if Seq Hopping is enabled when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:HOPping:SEQuence OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:HOPping:SEQuence?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:HOPP:SEQ OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:HOPP:SEQ?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users the user has configured Enabled when RB Auto Detect is Off
Couplings	Enabling Sequence Hopping disables Group Hopping
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:HOPping:SEQuence</code>

### Auto Detect Seq Hop

Determines if Seq Hopping is enabled when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:HOPping:SEquence OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:HOPping:SEquence?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:HOPP:SEQ OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:HOPP:SEQ?</code>
Dependencies	Enabled when RB Auto Detect is On
Couplings	Enabling Sequence Hopping disables Group Hopping
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:HOPping:SEquence</code>

## DMRS CSH ID

Sets nDMRS-CSH-Identity-r11 aka.  $N_{\text{csh\_DMRS\_ID}}$ , when the RB auto detection is OFF. This parameter is used by the calculation of  $c_{\text{init}}$ , which is used for further calculating the cyclic shift for each slot. The detailed information can be found in section 5.5.2.1.1 in 3GPP TS 36.211.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:DCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:DCID?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:DCID 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:DCID?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  The column DMRS CSH ID is only enabled when DMRS CSH ID enable is ON and the RB auto detection is OFF, and is disabled otherwise
Preset	0
State Saved	Yes
Min	0
Max	109

## Auto Detect DMRS CSH ID

Sets uplink user's DMRS CSH ID when the RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:DCID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:DCID?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:DCID 1</code>

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	<code>:EVM:CCAR0:ULIN:PROF:AUTO:DCID?</code>
Dependencies	Enabled when RB auto detection is ON and auto detect DMRS CSH ID enable is ON
Preset	0
State Saved	Yes
Min	0
Max	109

### DMRS CSH ID Enable

Determines if DMRS CSH ID is used for calculating cyclic shift for each slot when the RB auto detection is OFF. DMRS CSH ID is not used if this parameter is OFF.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:DCID:ENABle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:DCID:ENABle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:DCID:ENAB OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:DCID:ENAB?</code>
Dependencies	Enabled when RB auto detection is OFF
Couplings	Enables DMRS CSH ID when this parameter is ON. Disable DMRS CSH ID otherwise
Preset	OFF
State Saved	Yes

### Auto Detect DMRS CSH ID Enable

Determines if DMRS CSH ID is used when the RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:DCID:ENABle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:DCID:ENABle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:DCID:ENAB OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:DCID:ENAB?</code>
Dependencies	Enabled when the RB auto detection is ON
Couplings	Enables auto detect DMRS CSH ID when this parameter is ON. Disable auto detect DMRS CSH ID otherwise
Preset	OFF
State Saved	Yes

### User Channel Summary

This tab allows you to set up the parameters for User Channels.

## PUSCH Present

Selects whether or not PUSCH exists in the input signal when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER1 50:PUSCh:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER1 50:PUSCh:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:ACT OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:ACT?</code>
Dependencies	Enabled when RB Auto Detect is Off All controls for PUSCH parameters are grayed out when this parameter is set to OFF
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER1 50:PUSCh:ACTive</code>

## Auto Detect PUSCH Present

Selects whether or not PUSCH exists in the input signal when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:ACT OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:ACT?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:ACTive</code>

## Include PUSCH

Includes PUSCH in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC INCL</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	<p>you attempt to remotely set or query a sub op code that is out of range, this results in an error message.</p> <p>Disabled when RB Auto Detect is On, PUSCH Present is OFF or no slot is added. Only one user can be included at the same time.</p>
Couplings	<p>This parameter is set to Exclude when Uplink Exclude All is selected.</p> <p>When this parameter is set to Include, PUSCH of the other users and PRACH of all users are set to Exclude.</p>
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh</code>

### Include Auto Detect PUSCH

Includes Auto Detected PUSCH in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:AUTO:PUSCh INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:AUTO:PUSCh?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC INCL</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUSCH Present is ON
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected. When this parameter is set to Include, Auto Detect PRACH is set to Exclude
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:AUTO:PUSCh</code>

### Include PUSCH DM-RS

Includes PUSCH DM-RS in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:DMRS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:DMRS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS INCL</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS?</code>

Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off Only one user can be included at the same time
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected When this parameter is set to Include, PUSCH DMRS of the other users and PRACH of all users are set to Exclude
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS</code>

### Include Auto Detect PUSCH DM-RS

Includes Auto Detected PUSCH DM-RS in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS INCL</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS?</code>
Dependencies	Enabled when RB Auto Detect is On
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected. When this parameter is set to Include, Auto Detect PRACH is set to Exclude.
Preset	INCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:DMRS</code>

### PUCCH Present

Selects whether or not PUCCH exists in the input signal when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ACTive OFF   ON   0</code> <code>  1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:ACT OFF</code>

	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:ACT?</code>
Dependencies	Enabled when RB Auto Detect is Off All soft keys for PUCCH parameter are grayed out when this parameter is OFF
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ACTive</code>

### Auto Detect PUCCH Active

Selects whether or not PUCCH exists in the input signal when RB Auto Detect is On.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:ACTive OFF   ON   0   1</code> <code>[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC:ACT OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC:ACT?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[:SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:ACTive</code>

### Include PUCCH

Includes PUCCH in the results.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh INCLude   EXCLude</code> <code>[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC INCL</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUC?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when PUCCH Present is On, one or more slots are added, and RB Auto Detect is Off. Only one user can be included at the same time.
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected. When this parameter is set to Include, PUCCH of another user, PUSCH, PRACH and S-RS are set to Exclude.
Preset	EXCLude

State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh</code>

### Include Auto Detect PUCCH

Includes Auto Detected PUCCH in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh INCL</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUCCH Present is On.
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected. When this parameter is set to Include, Auto Detect PRACH is set to Exclude.
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh</code>

### Include PUCCH DM-RS

Includes PUCCH DM-RS in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:DMRS INCL</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:DMRS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off Only one user can be included at the same time
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected When this parameter is set to Include, PUCCH DMRS of the other users and PRACH of all users are set to Exclude

Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS</code>

### Include Auto Detect PUCCH DM-RS

Includes Auto Detected PUSCH DM-RS in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:DMRS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:DMRS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:DMRS INCL</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:DMRS?</code>
Dependencies	Enabled when RB Auto Detect is On
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected When this parameter is set to Include, Auto Detect PRACH is set to Exclude
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:DMRS</code>

### SRS Present

Selects whether or not S-RS exists in the input signal when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER1 50:SRS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER1 50:SRS:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:ACT OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:ACT?</code>
Dependencies	Enabled when RB Auto Detect is Off When this parameter is set to OFF, all of soft keys for S-RS parameter are grayed out
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER1 50:SRS:ACTive</code>

## Auto Detect SRS Active

Selects whether or not S-RS exists in the input signal when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:ACT OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:ACT?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:ACTive</code>

## Include SRS

Includes S-RS in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS INCL</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Active is ON
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected When this parameter is set to Include, PRACH is set to Exclude
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS</code>

## Include Auto Detect SRS

Includes Auto Detected S-RS in the results.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS INCL</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected When this parameter is set to Include, Auto Detect PRACH is set to Exclude
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS</code>

### PRACH Present

Selects whether or not PRACH exists in the input signal when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC:ACT OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC:ACT?</code>
Dependencies	Enabled when RB Auto Detect is Off When this parameter is set to OFF, all of soft keys for PRACH parameter are grayed out
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:ACTive</code>

### Auto Detect PRACH Active

Selects whether or not PRACH exists in the input signal when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRAC:ACT OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRAC:ACT?</code>
Dependencies	Enabled when RB Auto Detect is On
Preset	OFF

State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:ACTive</code>

## Include PRACH

Includes PRACH in the results.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH INCLude   EXCLude</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC INCL</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when Direction is Manual and PRACH Present is ON
Couplings	This parameter is set to Exclude when Uplink Exclude All is selected When this parameter is set to Include, PUSCH, PUCCH and S-RS are set to Exclude
Preset	EXCLude
State Saved	Yes
Range	Include Exclude
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH</code>

## PUSCH

### NOTE

To enable the parameter settings when RB Auto Detect is Off, Add User in the User Summary and Add Allocation in PUSCH Per Slot Parameters.

## User Channel (Display Only)

Displays the selected User Channel.

## Auto Sync

When Auto Sync is set to On, the demod algorithm may automatically determine the best time slot to synchronize to. This approach simplifies parameter entry and provides easier setup. However, the complexity of the algorithm makes it rather slow and prone to errors in the presence of noise.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER1 50:PUSCh:SSLot:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER1 50:PUSCh:SSLot:AUTO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SSL:AUTO 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SSL:AUTO?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message PUSCH Sync Slot is enabled when PUSCH Present is ON, RB Auto Detect is Off and PUSCH Auto Sync is OFF
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:SSLot</code> <code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:SSLot:AUTO</code>

## Sync Slot

Sets the Sync Slot for all PUSCH Slots when RB Auto Detect is Off.

Sync Slot specifies the index of the slot to use for initial synchronization when PUSCH is selected as the Sync Type. The demodulator searches for the slot with the characteristics specified in Per-slot Parameters and the slot that matches the Per-slot Parameters with the highest correlation is assigned the slot number given in the Sync Slot parameter.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER1 50:PUSCh:SSLot &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER1 50:PUSCh:SSLot?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SSL 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SSL?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message PUSCH Sync Slot is enabled when PUSCH Active is ON, RB Auto Detect is Off and PUSCH Auto Sync is OFF
Preset	0
State Saved	Yes
Min	0
Max	19

## Auto Detect PUSCH Sync Slot

Sets the Sync Slot for all PUSCH Slots when RB Auto Detect is On.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:SSLot &lt;integer&gt; [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:SSLot? [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:SSLot:AUTO OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:SSLot:AUTO?</pre>
Example	<pre>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:SSL 1 :EVM:CCAR0:ULIN:PROF:AUTO:PUSC:SSL? :EVM:CCAR0:ULIN:PROF:AUTO:PUSC:SSL:AUTO 1 :EVM:CCAR0:ULIN:PROF:AUTO:PUSC:SSL:AUTO?</pre>
Dependencies	<p>Auto Detect PUSCH Sync Slot is enabled when Auto Detect PUSCH Present is ON, RB Auto Detect is On and Auto Detect PUSCH Sync Slot Auto is OFF</p> <p>Auto Detect PUSCH Sync Slot Auto is enabled when Auto Detect PUSCH Present is ON and RB Auto Detect is On</p>
Preset	<p>0</p> <p>ON</p>
State Saved	<p>Yes</p> <p>Yes</p>
Min	0
Max	19
Backwards Compatibility SCPI	<pre>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:SSLot [ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:SSLot:AUTO</pre>

## Use CS from DCI

Indicates whether  $n_{\text{DMRS}}(2)$  for selected user mapping is given by the cyclic shift for DMRS field in most recent uplink-related DCI. See Section 5.5.2.1.1 of 3GPP TS 36.211 for more information.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER1 50:PUSCh:CSFDci OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER1 50:PUSCh:CSFDci?</pre>
Example	<pre>:EVM:CCAR0:ULIN:PROF:USER1:PUSCh:CSFD ON :EVM:CCAR0:ULIN:PROF:USER1:PUSCh:CSFD?</pre>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error</p>

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	message. When this parameter is on, CS Field and Layer( $\lambda$ ) are enabled n DMRS (2) and OCC are disabled When this parameter is off, CS Field and Layer( $\lambda$ ) are disabled and n DMRS (2) and OCC are enabled
Preset	OFF
State Saved	Yes

### Auto Detect Use CS from DCI

Indicates when RB Auto Detect is Off, whether  $n_{\text{DMRS}}(2)$  used by selected user mapping is given by the cyclic shift for DMRS field in most recent uplink-related DCI. See Section 5.5.2.1.1 of 3GPP TS 36.211 for more information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:CSFDci OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:CSFDci?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:CSFD ON</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:CSFD?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On, Auto Detect DMRS Params is On, and Auto Detect PUSCH Present is ON
Preset	OFF
State Saved	Yes

### CS Field

Sets the value of Cyclic Shift Field in uplink related DCI format, See Section 5.5.2.1.1 of 3GPP TS 36.211 for more information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:CSField &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:CSField?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:CSF 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:CSF?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is On, and PUSCH Present is ON
Preset	0

State Saved	Yes
Min	0
Max	7

### Auto Detect CS Field

Sets the value of Cyclic Shift Field in uplink related DCI format used by the selected user mapping when RB Auto Detect is On, See Section 5.5.2.1.1 of 3GPP TS 36.211 for more information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:CSField &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:CSField?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:CSF 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:CSF?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On, Auto Detect DMRS Params is On, and Auto Detect PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	7

### Layer Index

Sets the value of Layer Index with which PUSCH demodulation reference signal associates. See Section 5.5.2.1.1 of 3GPP TS 36.211 for more information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:LINDex &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:LINDex?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:LIND 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:LIND?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is On, and PUSCH Present is ON
Preset	0
State Saved	Yes

Min	0
Max	3

### Auto Detect PUSCH Layer Index

Sets the value of Layer Index with which PUSCH demodulation reference signal associates when RB Auto Detect is On. See Section 5.5.2.1.1 of 3GPP TS 36.211 for more information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:LINDex &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:LINDex?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:LINDex 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:LINDex?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is On, Auto Detect DMRS Params is On, and Auto Detect PUSCH Present is ON.
Preset	0
State Saved	Yes
Min	0
Max	3

### N DMRS(2)

Sets the value of  $n_{\text{DMRS}}(2)$  used by the selected user mapping when RB Auto Detect is Off. The value is used to calculate the cyclic shift when DMRS parameters is on.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:TWO &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:TWO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:TWO 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:TWO?</code>
Notes	The values [0 2 3 4 6 8 9 10] of n DMRS(2) are valid according to 3GPP 36.211 table 5.5.2.1.1-2
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is On, and PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0

Max	10
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:TWO</code>

## Auto Detect n DMRS (2)

Sets the value of  $n_{\text{DMRS}}(2)$  used by the selected user mapping when RB Auto Detect is On. The value is used to calculate the cyclic shift when Auto-Detect DMRS parameters is on.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:TWO &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:TWO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:TWO 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:TWO?</code>
Notes	The values [0 2 3 4 6 8 9 10] of n DMRS(2) are valid according to 3GPP 36.211 table 5.5.2.1.1-2
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On and Auto Detect DMRS Params is On, and Auto Detect PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	10
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:DMRS:TWO</code>

## OCC

Selects the Orthogonal Cover Code to construct the PUSCH demodulation reference signal sequence. When P1P1 is selected, orthogonal sequence is [1 1]. When P1M1 is selected, orthogonal sequence is [1 -1]. See Section 5.5.2.1.1 of 3GPP TS 36.211 for more information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:OCCCode P1P1   P1M1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:OCCCode?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:OCC P1P1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:OCC?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message

	Available when RB Auto Detect is Off
Preset	P1P1
State Saved	Yes
Range	P1P1 P1M1

### Auto Detect Orthogonal Cover Code

Selects the Orthogonal Cover Code, which is used to construct the PUSCH demodulation reference signal sequence, when RB Auto Detect is On. See Section 5.5.2.1.1 of 3GPP TS 36.211 for more information. (3GPP TS 36.211 5.3.4)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINk:PROFile:AUTO:PUSCh:OCCode P1P1   P1M1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINk:PROFile:AUTO:PUSCh:OCCode?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:OCC P1P1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:OCC?</code>
Dependencies	Available when RB Auto Detect is On and Auto Detect PUSCH Present is ON
Preset	P1M1
State Saved	Yes
Range	P1P1 P1M1

### Auto-calc. per-slot Params

Determines if all DMRS parameters are common to all Slots or if they are to be defined on a per Slot basis when RB Auto Detect is Off.

Enabling this parameter causes DMRS Group, DMRS Seq, and DMRS Cyclic Shift to be set automatically using  $n_{\text{DMRS}}(1)$ ,  $n_{\text{DMRS}}(2)$  and DSS.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINk:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PARams OFF   ON</code> <code>  0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINk:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PARams?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:PAR OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:PAR?</code>
Notes	This control label was "DMRS Params" before XA21
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  When this parameter is on, $n_{\text{DMRS}}(1)$ , $n_{\text{DMRS}}(2)$ and $\Delta$ SS are enabled and DMRS Group (u), DMRS Seq (v) and DMRS Cyclic Shift are disabled  When this parameter is off, $n_{\text{DMRS}}(1)$ , $n_{\text{DMRS}}(2)$ and $\Delta$ SS are disabled and DMRS Group (u),

	DMRS Seq (v) and DMRS Cyclic Shift are enabled
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PARams</code>

### Auto Detect Auto-calc. per-slot Params

Determines if all DMRS parameters to be used are common to all Slots or if they are to be defined on a per Slot basis when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:PARams OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:PARams?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:PAR OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:PAR?</code>
Dependencies	When this parameter is on n DMRS (1), n DMRS (2) and $\Delta$ SS are enabled and DMRS Group (u), DMRS Seq (v) and DMRS Cyclic Shift are disabled When this parameter is off, n DMRS (1), n DMRS (2) and $\Delta$ SS are disabled and DMRS Group (u), DMRS Seq (v) and DMRS Cyclic Shift are enabled
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:DMRS:PARams</code>

### N DMRS(1)

Sets the value of  $n_{\text{DMRS}}(1)$  used by the selected user mapping when RB Auto Detect is Off. The value is used to calculate the cyclic shift when DMRS parameters is on.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:ONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:ONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:ONE 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:ONE?</code>
Notes	The values [0 2 3 4 6 8 9 10] of N DMRS(1) are valid according to 3GPP 36.211 table 5.5.2.1.1-2
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is On, and PUSCH Present is ON

Preset	0
State Saved	Yes
Min	0
Max	10
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:DMRS:ONE</code>

### Auto Detect n DMRS (1)

Sets the value of  $n_{\text{DMRS}}(1)$  used by the selected user mapping when RB Auto Detect is On. The value is used to calculate the cyclic shift when Auto-Detect DMRS parameters is on.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:AUTO:PUSCh:DMRS:ONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:AUTO:PUSCh:DMRS:ONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:ONE 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:ONE?</code>
Notes	The values [0 2 3 4 6 8 9 10] of n DMRS(1) are valid according to 3GPP 36.211 table 5.5.2.1.1-2
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On, Auto Detect DMRS Params is On, and Auto Detect PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	10
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:AUTO:PUSCh:DMRS:ONE</code>

### Delta SS

Sets the value of Delta SS used by the selected user mapping when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:DSS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:DSS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DSS 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DSS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max

---

	value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is On, and PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	29
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DSS</code>

### Auto Detect Delta SS

Sets the value of Delta SS used by the selected user mapping when RB Auto Detect is On.

---

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DSS &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DSS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DSS 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DSS?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On, Auto Detect DMRS Params is On, and Auto Detect PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	29
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:DSS</code>

### N PUSCH ID Enable

Determines if  $N_{PUSCH\_ID}^{PUSCH}$  is used for calculating cyclic shift for each slot when RB auto detection is OFF.  $N_{PUSCH\_ID}^{PUSCH}$  is not used if this parameter is OFF.

---

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:ID:ENABle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:ID:ENABle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:ID:ENAB OFF</code>

	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:ID:ENAB?</code>
Dependencies	Enabled when RB auto detection is OFF and Auto-calc. Per-slot Params is ON
Couplings	Enables N PUSCH ID when the value of this parameter is On. Disables N PUSCH ID otherwise
Preset	OFF
State Saved	Yes
Range	On Off

### Auto Detect N PUSCH ID Enable

Determines if  $N^{PUSCH}_{ID}$  is used when the RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:ID:ENABle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:ID:ENABle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:ID:ENAB OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:ID:ENAB?</code>
Dependencies	Enabled when RB auto detection is ON and Auto-calc. Per-slot Params is ON
Couplings	Enables Auto Detect N PUSCH ID when this parameter is ON. Disables Auto Detect N PUSCH ID otherwise
Preset	OFF
State Saved	Yes
Range	On Off

### N PUSCH ID

Sets  $N^{PUSCH}_{ID}$ , when RB auto detection is OFF. This parameter is used by the calculation of  $c_{init}$ , which is used for further calculating the cyclic shift for each slot. The detailed information can be found in section 5.5.1.5 in 3GPP TS 36.211.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:ID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:ID?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:ID 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:ID?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message The control is enabled only when the following conditions are met: Use N PUSCH ID is ON, RB auto detection is OFF, Auto-calc. per-slot Parm. is ON,

	and is disabled otherwise
Preset	0
State Saved	Yes
Min	0
Max	509

### Auto Detect N PUSCH ID

Sets  $N_{PUSCH_{ID}}$ , when RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:ID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:ID?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSCh:ID 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSCh:ID?</code>
Dependencies	The control is enabled only when the following conditions are met: Auto Detect N PUSCH ID Enable is ON, RB auto detection is ON, Auto-calc. per-slot Parm. is ON, and is disabled otherwise
Preset	0
State Saved	Yes
Min	0
Max	509

### Frequency Hopping

Selects the frequency hopping type or disables frequency hopping. (3GPP TS 36.211 V8.5.0 5.3.4)

The following table shows the combination and its corresponding Freq Hopping selection.

**NOTE**

“Type 1, +1/4” and “Type 1, -1/4” are available only when Bandwidth is set to 10 MHz or higher.

Frequency Hopping

Off	Type1, +1/4	Type 1, - 1/4	Type 1, +1/2	Type 2
-----	----------------	------------------	-----------------	--------

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Frequency Hopping Mode	Intra- SF	OFF	T1ISF00	T1ISF01	T1ISF10	T2ISF
	Intra/Inter-SF	OFF	T1IISF00	T1IISF01	T1IISF10	T2IISF

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER1 50:PUSCh:FHOPping OFF   T1ISF00   T1IISF00   T1ISF01   T1IISF01   T1ISF10   T1IISF10   T2ISF   T2IISF</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER1 50:PUSCh:FHOPping?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:FHOP OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:FHOP?</code>
Dependencies	Available when PUSCH Present is ON "Type 1, +1/4" and "Type 1, -1/4" are enabled only when Bandwidth is set to more than or equal to 10MHz The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message
Preset	OFF
State Saved	Yes
Range	OFF Type 1, +1/4 Type 1, -1/4 Type 1, +1/2 Type 2
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:FHOPping</code>

### Auto Detect Frequency Hopping

Selects the frequency hopping type or disables frequency hopping when RB Auto Detect is On. (3GPP TS 36.211 5.3.4)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:FHOPping OFF   T1ISF00   T1IISF00   T1ISF01   T1IISF01   T1ISF10   T1IISF10   T2ISF   T2IISF</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:FHOPping?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:FHOP T2IISF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:FHOP?</code>
Dependencies	Available when RB Auto Detect is On and Auto Detect PUSCH Present is ON
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:FHOPping</code>

### Hopping Mode

Selects the frequency hopping mode. (3GPP TS 36.211 V8.5.0 5.3.4).

Dependencies	Available when PUSCH Present is ON
Preset	OFF
State Saved	Yes
Range	Inter-SF Intra/Inter-SF

## Hopping Offset

Sets the value of Hopping Offset ( $N_{RB}^{HO}$ ) when RB Auto Detect is Off. Hopping Offset is the offset used for PUSCH frequency hopping, expressed in number of resource blocks. (3GPP TS 36.211 V8.5.0 5.3.4).

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:NRBHo &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:NRBHo?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:NRBH 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:NRBH?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, Frequency Hopping is not OFF, and PUSCH Present is ON.
Couplings	Hopping Offset should always be less than or equal to the total RB number of the selected Bandwidth
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 6 - Bandwidth 1.4 MHz 15 - Bandwidth 3 MHz 25 - Bandwidth 5 MHz 50 - Bandwidth 10 MHz 75 - Bandwidth 15 MHz 100 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:NRBHo</code>

## Auto Detect Hopping Offset

Sets the value of Hopping Offset ( $N_{RB}^{HO}$ ) when RB Auto Detect is On. Hopping Offset is the offset used for PUSCH frequency hopping, expressed in number of resource blocks. (3GPP TS 36.211 V8.5.0 5.3.4).

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:NRBHo &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:NRBHo?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:NRBH 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:NRBH?</code>
Dependencies	Enabled when RB Auto Detect is On, Auto Detect Frequency Hopping is not OFF, and Auto Detect PUSCH Present is ON.
Couplings	Hopping Offset should always be less than or equal to the total RB number of the selected Bandwidth.
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 6 - Bandwidth 1.4 MHz 15 - Bandwidth 3 MHz 25 - Bandwidth 5 MHz 50 - Bandwidth 10 MHz 75 - Bandwidth 15 MHz 100 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:NRBHo</code>

### Number of SubBand

Sets the number of sub-bands ( $N_{sb}$ ) when RB Auto Detect is Off. (3GPP TS 36.211 V8.5.0 5.3.4).

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:NSB &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:NSB?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:NSB 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:NSB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, Frequency Hopping is set to either Type2InterSF or Type2InterIntraSF, and PUSCH Present is ON.
Couplings	Nsb should always be less than or equal to the total RB number of the selected Bandwidth
Preset	1
State Saved	Yes
Min	1

Max	4
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:NSB</code>

### Auto Detect Number of SubBand

Sets the Number of Sub-bands ( $N_{sb}$ ) when RB Auto Detect is On. (3GPP TS 36.211 V8.5.0 5.3.4).

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:NSB &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:NSB?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:NSB 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:NSB?</code>
Dependencies	Enabled when RB Auto Detect is On, Auto Detect Frequency Hopping is set to either Type2InterSF or Type2InterIntraSF, and Auto Detect PUSCH Present is ON
Couplings	Nsb should always be less than or equal to the total RB number of the selected Bandwidth
Preset	1
State Saved	Yes
Min	1
Max	4
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:NSB</code>

### PUSCH Per Slot Parameters

When the Couple checkbox next to a parameter is checked, the parameter of this allocation couples to the common slot parameter, as shown in the second row of Common. Common parameters apply to all RB allocations.

When Couple is unchecked, this allocation uses its specific slot parameter, as shown in the third row with specific Slot position.

### User Channel (Display Only)

See ["User Channel \(Display Only\)" on page 1634](#)

### Allocation (Display Only)

This parameter shows the selected Allocation in the PUSCH allocation list. This value equals the Allocation Index plus one.

## Add Allocation

Adds a new allocation in the slot position specified, if available. The parameters for the new allocation are set to the default values. It is put into a collection of allocations in ascending order of slot position. The SCPI commands that follow are used to set slot allocation parameters, such as RB start and end. They all contain the mnemonic SLOT<m>, where <m> is an index into the collection of allocations. The index ranges from 0 to a maximum of 39.

**NOTE**

**The Allocation index is not the same as the Slot Position.**

To avoid confusion, you should make PUSCH allocations in ascending order of slot position.

For example, if you wished to add 4 allocations for User1 at slot positions 2, 4, 7, and 10, use the following commands in order:

```
EVM:CCAR0:ULIN:PROF:USER1:PUSC:ADD:SLOT 2
```

```
EVM:CCAR0:ULIN:PROF:USER1:PUSC:ADD:SLOT 4
```

```
EVM:CCAR0:ULIN:PROF:USER1:PUSC:ADD:SLOT 7
```

```
EVM:CCAR0:ULIN:PROF:USER1:PUSC:ADD:SLOT 10
```

You now have four allocations. Allocation 0 is at slot position 2, allocation 1 at slot position 4, allocation 2 at slot position 7, and allocation 3 at slot position 10. The allocations are referenced as SLOT0, SLOT1, SLOT2, and SLOT3 in the commands that follow. For example, if you want to verify the slot position of the third allocation, send the query:

```
EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT2:POS?
```

This returns 7 for the example above.

Note that if you delete an allocation, the indices of the allocations above it reduce by 1. To continue the previous example, if you send the command:

```
EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT1:DEL
```

This removes the allocation at slot position 4. The allocations at slot positions 7 and 10 are now referenced as SLOT1 and SLOT2, whereas before they were referenced as SLOT2 and SLOT3.

Remote Command	<code>[ :SENSe ]:EVM:CCARn:ier0 ... 4:ULInk:PROFile:USER1 50:PUSCh:ADD:SLOT &lt;integer&gt;</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:ADD:SLOT 0</code>
Notes	The control for this parameter is an Immediate Action control. The value that is passed in by the SCPI command enables the user to position the allocation at a particular slot
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to add a Slot to a User and the slot is already allocated, an error message is generated

	Disabled once the number of Slots reaches to 40, the max number
Preset	0
State Saved	Yes
Min	0
Max	19
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:ADD:SLOT</code>

## Delete Allocation

Deletes the currently selected slot allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DELeTe</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT1:DEL</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add Allocation" on page 1651</a> command for an explanation of the difference
Dependencies	Disabled when there is only one Slot. The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50 The range of sub op code <m> values is determined by the number of Slots you have configured. The range of <m> is 0 – 39. If you attempt to delete a Slot that does not exist, an error message is generated
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DELeTe</code>

## Slot Up

Moves the currently selected Slot up.

See also ["Slot Position \(Remote Command Only\)" on page 1653](#) query.

Dependencies	Disabled when there are no Slots defined or if the slot is at Slot19
--------------	--

## Slot Down

Moves the currently selected Slot down .

See also ["Slot Position \(Remote Command Only\)" on page 1653](#) query.

Dependencies	Disabled when there are no Slots defined or if the slot is at Slot0
--------------	---

## Slot Position (Remote Command Only)

Queries the PUSCH slot start position.

This parameter is shown as in Slot column. You can use Slot Up or Slot Down to adjust the position.

When a slot is assigned to a RB allocation, the Slot Position is binded to that Allocation Index.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:POSition?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:POS?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See <a href="#">"Add Allocation" on page 1651</a> command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. Max value for n = 50. The range of sub op code <m> values is 0 – 39.
Preset	0
State Saved	Yes
Min	0
Max	19
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:POSition?</code>

## RB Start Common

Sets the Start Resource Block for all the PUSCH Slots when RB Start Couple is On and when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:RB:STARt &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:RB:STARt?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:RB:STAR 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:RB:STAR?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, RB Start Couple is ON, and PUSCH Present is ON
Couplings	If you attempt to set a RB Start value greater than the RB Stop value, both values are set to the RB Start value or clipped to the min or max value if the entered value is out of range
Preset	0

State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:RB:STARt</code>

### Auto Detect RB Start

Sets the Start Resource Block for all the PUSCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:AUTO:PUSCh:RB:STARt &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:AUTO:PUSCh:RB:STARt?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:RB:STAR 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:RB:STAR?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUSCH Auto Sync Slot is OFF, and Auto Detect PUSCH Present is ON
Couplings	If you attempt to set a RB Start value greater than the RB Stop value, both values are set to the RB Start value or clipped to the min or max value if the entered value is out of range
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:AUTO:PUSCh:RB:STARt</code>

## RB Start Couple

Determines whether or not all the PUSCH Slots use the Common RB Start value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:RB:START:COUPle OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:RB:START:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:RB:STAR:COUP ON</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:RB:STAR:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50.  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.  Enabled when RB Auto Detect is Off, and PUSCH Present is ON.
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:RB:START:COUPle</code>

## RB Start Slot

Sets the Start Resource Block for the selected PUSCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:RB:START &lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:RB:START?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:RB:STAR 0</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:RB:STAR?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add Allocation" on page 1651</a> command for an explanation of the difference.
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 – 39.  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.  Enabled when RB Start Couple is OFF and PUSCH Present is ON.
Couplings	If you attempt to set a RB Start value greater than the RB End value, both values are set to the RB Start value or clipped to the min or max value if the entered value is out of range.  Max value is dependent on Bandwidth.
Preset	0

State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROF:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:RB:START</code>

## RB End Common

Sets the End Resource Block for all the PUSCH Slots when RB End Couple is On and when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:USER&lt;n&gt;:PUSCh:RB:END &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:USER&lt;n&gt;:PUSCh:RB:END?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:RB:END 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:RB:END?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, RB End Couple is ON, and PUSCH Present is ON
Couplings	If you attempt to set a RB End value less than the RB Start value, both values are set to the RB End value or clipped to the min or max value if the entered value is out of range
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROF:USER&lt;n&gt;:PUSCh:RB:END</code>

## Auto Detect RB End

Sets the End Resource Block for all the PUSCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:RB:END &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:RB:END?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:RB:END 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:RB:END?</code>
Dependencies	Enabled when RB Auto Detect is On, Auto Detect PUSCH Auto Sync Slot is OFF, and Auto Detect PUSCH Present is ON
Couplings	If you attempt to set a RB End value less than the RB Start value, both values are set to the RB End value or clipped to the min or max value if the entered value is out of range
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:RB:END</code>

## RB End Couple

Determines whether or not all the PUSCH Slots uses the Common RB Start value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:RB:END:COUPlE OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:RB:END:COUPlE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:RB:END:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:RB:END:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, and PUSCH Present is ON

Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:RB:END:COUPlE</code>

## RB End Slot

Sets the Stop Resource Block for the selected PUSCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:RB:END&lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:RB:END?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:RB:END 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:RB:END?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add Allocation" on page 1651</a> command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n = 50. The range of sub op code <m> values is 0 - 39 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB End Couple is OFF and PUSCH Present is ON
Couplings	If you attempt to set a RB End value less than the RB Start value, both values are set to the RB End value or clipped to the min or max value if the entered value is out of range Max value is dependent on Bandwidth
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:RB:END</code>

## Mod Type Common

Selects the Modulation Type for all the PUSCH Slots when Mod Type Couple is On and RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:MODulation:TYPE QPSK   QAM16   QAM64   QAM256</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:MOD:TYPE QPSK</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:MOD:TYPE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when Mod Type Couple is On, RB Auto Detect is Off, and PUSCH Present is ON QAM256 option is available only when Higher Order Modulation is enabled
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:MODulation:TYPE</code>

## Auto Detect Mod Type

Selects the Modulation Type for all the PUSCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:MODulation:TYPE QPSK   QAM16   QAM64   QAM256</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:MOD:TYPE QPSK</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:MOD:TYPE?</code>
Dependencies	Always grayed out
Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:MODulation:TYPE</code>

## Mod Type Couple

Determines whether or not all the PUSCH Slots uses the Common Mod Type value.

Remote Command	<code>[ :SENSe]:EVM:CCARri-er0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:MODulation:TYPE:COUPle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARri-er0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:MODulation:TYPE:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:MOD:TYPE:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:MOD:TYPE:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and PUSCH Present is ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:MODulation:TYPE:COUPle</code>

## Mod Type Slot

Selects the Modulation Type for the selected PUSCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARri-er0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:MODulation:TYPE QPSK   QAM16   QAM64   QAM256</code> <code>[ :SENSe]:EVM:CCARri-er0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:MODulation:TYPE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:MOD:TYPE QPSK</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:MOD:TYPE?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the " <a href="#">Add Allocation</a> " on page 1651 command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n = 50. The range of sub op code <m> values is 0 – 39. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when Mod Type Couple is OFF and PUSCH Present is ON QAM256 option is available only when Higher Order Modulation is enabled

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Preset	QPSK
State Saved	Yes
Range	QPSK 16QAM 64QAM 256QAM
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:MODulation:TYPE</code>

### Power Boost Common

Sets the Power Boost value for all the PUSCH Slots when Power Boost Couple is On and RB Auto Detect is Off.

Power Boost sets the PUSCH average power level relative to the 0 dB point set by the PUSCH DMRS Power.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:PWRB 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:PWRB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when RB Auto Detect is Off, Power Boost Couple is On, and PUSCH Present is ON.
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:PWRBoost</code>

### Auto Detect Power Boost

Sets the Power Boost value for all the PUSCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:PWRB 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:PWRB?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUSCH Present is ON

Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:PWRBoost</code>

## Power Boost Couple

Determines whether or not all the PUSCH Slots uses the Common Power Boost value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:PWRBoost:COUPle OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:PWRBoost:COUPle</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:PWRB:COUP ON</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:PWRB:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50.  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message.  Enabled when RB Auto Detect is Off.
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:PWRBoost:COUPle</code>

## Power Boost Slot

Sets the Power Boost value for the selected PUSCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:PWRBoost &lt;rel_ampl&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:PWRB 0</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:PWRB?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add" on page 1685</a> command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n = 50. The range of sub op code <m> values is 0 – 39.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when Power Boost Couple is OFF and PUSCH Present is ON
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROF:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:PWRBoost</code>

### DMRS Group Common

Sets the DMRS Group for all the PUSCH Slots when DMRS Group Couple is On and when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:USER&lt;n&gt;:PUSCh:DMRS:GROup &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:USER&lt;n&gt;:PUSCh:DMRS:GROup?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:GRO 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:GRO?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is Off, DMRS Group Couple is On, and PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	29
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROF:USER&lt;n&gt;:PUSCh:DMRS:GROup</code>

### Auto Detect DMRS Group

Sets the DMRS Group for all the PUSCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:AUTO:PUSCh:DMRS:GROup &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:AUTO:PUSCh:DMRS:GROup?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:GRO 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:GRO?</code>

Dependencies	Enabled when RB Auto Detect is On, Auto Detect DMRS Params is Off, and Auto Detect PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	29
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:DMRS:GRoup</code>

## DMRS Group Couple

Determines whether or not all the PUSCH Slots use the Common DMRS Group value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:GRoup:COUPle OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:GRoup:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:GRO:COUP ON</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:GRO:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when RB Auto Detect is Off, DMRS Params is Off, PUSCH Present is ON, and PUSCH Present is ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:GRoup:COUPle</code>

## DMRS Group Slot

Specifies the DMRS Group for the selected PUSCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:GRoup &lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:GRoup?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:DMRS:GRO 1</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:DMRS:GRO?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add Allocation" on page 1651</a> command for an explanation of the difference.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n = 50. The range of sub op code <m> values is 0 - 39. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message. Enabled when DMRS Params is OFF, DMRS Group Couple is OFF, and PUSCH Present is ON.
Preset	0
State Saved	Yes
Min	0
Max	29
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:GROup</code>

### DMRS Sequence Common

Sets the DMRS Sequence (v) for all the PUSCH Slots when DMRS Sequence Couple is On and when RB Auto Detect is Off. DMRS Sequence or v, is the sequence number within the group and can take on values from 0 to floor(NZCRS/30)-1, where NZCRS is the largest prime number less than MSCRS

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:DMRS:SEquence&lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:DMRS:SEquence?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:SEQ 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:SEQ?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is Off, DMRS Sequence Couple is On, and PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:DMRS:SEquence</code>

## Auto Detect DMRS Sequence

Sets the DMRS Sequence (v) for all the PUSCH Slots when RB Auto Detect is On. DMRS Sequence or v, is the sequence number within the group and can take on values from 0 to  $\text{floor}(\text{NZCRS}/30)-1$ , where NZCRS is the largest prime number less than MSCRS

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:SEquence &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:SEquence?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:SEQ 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:SEQ?</code>
Dependencies	Enabled when RB Auto Detect is On, Auto Detect DMRS Params is Off, and Auto Detect PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	$\text{floor}(\text{N}_{\text{ZC}}^{\text{RS}}/30)-1$ (can be restricted based on bandwidth)
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:DMRS:SEquence</code>

## DMRS Sequence Couple

Determines whether or not all the PUSCH Slots use the Common DMRS Sequence value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:SEquence:COUPle</code> <code>OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:SEquence:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:SEQ:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:SEQ:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50.If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is OFF, and PUSCH Present is ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:SEquence:COUPle</code>

## DMRS Sequence Slot

Specifies the DMRS Sequence (v) for the selected PUSCH. DMRS Sequence or v, is the sequence number within the group and can take on values from 0 to floor  $(N_{ZC}^{RS}/30)-1$ , where  $N_{ZC}^{RS}$  is the largest prime number less than  $M_{SC}^{RS}$

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:SEQuence &lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:SEQuence?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:DMRS:SEQ 1</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:DMRS:SEQ?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the " <a href="#">Add Allocation</a> " on page 1651 command for an explanation of the difference.
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n = 50. The range of sub op code <m> values is 0 - 39  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when DMRS Params is OFF, DMRS Sequence Couple is OFF and PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	1  Max value is calculated as below: floor( $N_{ZC}^{RS}/30$ )-1 (can be restricted based on bandwidth)
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:SEQuence</code>

## DMRS CS Common

Sets the DMRS Cyclic Shift for all the PUSCH Slots when DMRS Cyclic Shift Couple is On and RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:CSHift &lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:CSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:CSH 1</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:CSH?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max

	value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Params is Off, and DMRS Cyclic Shift Couple is On
Preset	0
State Saved	Yes
Min	0
Max	11
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:CSHift</code>

### Auto Detect DMRS Cyclic Shift

Sets the DMRS Cyclic Shift for all the PUSCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:CSHift &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:CSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:CSH 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:CSH?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect DMRS Params is Off
Preset	0
State Saved	Yes
Min	0
Max	11
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:DMRS:CSHift</code>

### DMRS CS Couple

Determines whether or not all the PUSCH Slots use the Common DMRS Cyclic Shift value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:CSHift:COUPle</code> <code>OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:CSHift:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:CSH:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:CSH:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50.If you attempt to remotely set or query a sub op code that is out of range, this results

---

	in an error message Enabled when RB Auto Detect is Off, DMRS Params is Off, and PUSCH Present is ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:ULINk:PROFile:USER&lt;n&gt;:PUSCh:DMRS:CSHift:COUPle</code>

## DMRS CS Slot

Specifies the DMRS Cyclic Shift for the selected PUSCH Slot.

---

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0 ... 4:ULINk:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:CSHift&lt;integer&gt;</code> <code>[ :SENSe ] :EVM:CCARrier0 ... 4:ULINk:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:CSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:DMRS:CSH 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:DMRS:CSH?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add Allocation" on page 1651</a> command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n = 50. The range of sub op code <m> values is 0 - 39 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when DMRS Params is OFF, DMRS Cyclic Shift Couple is OFF, and PUSCH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	11
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:ULINk:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:CSHift</code>

## DMRS Power Common

Sets the DMRS Power Boost value for all the PUSCH Slots when DMRS Power Boost Couple is On and RB Auto Detect is Off.

**NOTE**

**All channel and signal powers are relative to the power of the channel/signal chosen for synchronization.**

For example, when PUSCH DMRS is chosen for synchronization, setting PUSCH DMRS Power = 2 dB and PUSCH Power = 0.1 dB means that the demodulator expects PUSCH average power level to be 1.9 dB below the average DMRS power level.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PWRBoost &lt;rel_ ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:PWRB 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:PWRB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, DMRS Power Boost Couple is ON, and PUSCH Present is ON
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PWRBoost</code>

### Auto Detect DMRS Power Boost

Sets the DMRS Power Boost value for all the PUSCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:PWRBoost &lt;rel_ ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUSCh:DMRS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:PWRB 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUSC:DMRS:PWRB?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUSCH Present is ON
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUSCh:DMRS:PWRBoost</code>

## DMRS Power Couple

Determines whether or not all the PUSCH Slots use the Common DMRS Power Boost value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PWRBoost:COUPle OFF   ON   0   1</code>
Example	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PWRBoost:COUPle? :EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:PWRB:COUP ON :EVM:CCAR0:ULIN:PROF:USER1:PUSC:DMRS:PWRB:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when RB Auto Detect is Off and PUSCH Present is ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:DMRS:PWRBoost:COUPle</code>

## DMRS Power Slot

Sets the DMRS Power Boost value for the selected PUSCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:PWRBoost &lt;rel_ampl&gt;</code>
Example	<code>[ :SENSe]:EVM:CCARri- er0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:PWRBoost? :EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:DMRS:PWRB 0 :EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:DMRS:PWRB?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the " <a href="#">Add Allocation</a> " on page 1651 command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n = 50. The range of sub op code <m> values is 0 - 39  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when DMRS Power Boost Couple is OFF and PUSCH Present is ON
Preset	0 dB

State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:DMRS:PWRBoost</code>

## Mirror Common

Selects CURRENT\_TX\_NB when RB Auto Detect is Off.

CUURENT\_TX\_NB specifies whether or not allocation is mirrored.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER1 50:PUSCh:CTNB EVEN   ODD</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER1 50:PUSCh:CTNB?</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:CTNB EVEN   ODD</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:CTNB?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:CTNB EVEN</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:CTNB?</code>
Dependencies	Enabled when RB Auto Detect is Off, PUSCH Present is ON, and CURRENT_TX_NB Couple is ON Disabled when Intra/Inter-SF hopping is selected for Frequency Hopping Mode
Preset	EVEN
State Saved	Yes
Range	Even Odd
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:CTNB</code>

## Mirror Couple

Determines whether or not all the PUSCH Slots use the Common CURRENT\_TX\_NB value.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:CTNB:COUple OFF   ON</code> <code>  0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUSCh:CTNB:COUple?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:CTNB:COUP OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:CTNB:COUP?</code>
Dependencies	Enabled when RB Auto Detect is Off and PUSCH Present is ON
Preset	ON

State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:CTNB:COUPlE</code>

## Mirror Slot

Sets the CURRENT\_TX\_NB for the selected PUSCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:CTNB EVEN   ODD</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:CTNB?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:CTNB EVEN</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT0:CTNB?</code>
Notes	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n = 50. The range of sub op code <m> values is 0 – 39.
Dependencies	Enabled when RB Auto Detect is Off, Current TX NB Couple is OFF, and PUSCH Present is ON Disabled when Intra/Inter-SF hopping is selected for Frequency Hopping Mode
Preset	EVEN
State Saved	Yes
Range	Even Odd
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUSCh:SLOT&lt;m&gt;:CTNB</code>

## PUCCH

This tab allows you to set up the parameters for PUCCH.

### User Channel (Display Only)

Display the selected User Channel.

### Auto Sync

When Sync Slot is set to Auto, the demod algorithm may automatically determine the best time slot to synchronies to. This approach simplifies parameter entry and provides easier setup. However, the complexity of the algorithm makes it rather slow and prone to errors in the presence of noise.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SSLot:AUTO OFF   ON   0   1</code>
----------------	--

	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SSLot:AUTO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:SSL:AUO 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:SSL:AUO?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message PUCCH Auto Sync is enabled when RB Auto Detect is Off and PUCCH Present is ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SSLot:AUTO</code>

## Sync Slot

Sets the Sync Slot for all PUCCH Slots when RB Auto Detect is Off.

Sync Slot specifies the index of the slot to use for initial synchronization. The demodulator searches for the slot with the characteristics specified in Per-slot Parameters and the slot that matches the Per-slot Parameters with the highest correlation is assigned the slot number given in the Sync Slot parameter.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SSLot &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SSLot?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:SSL 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:SSL?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message PUCCH Sync Slot is enabled when RB Auto Detect is Off, PUCCH Present is On, and PUCCH Sync Slot Auto is OFF PUCCH Sync Slot Auto is enabled when RB Auto Detect is Off and PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	19
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SSLot</code> :

## Auto Detect PUCCH Sync Slot

Sets the Sync Slot for all PUCCH Slots when RB Auto Detect is On.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:SSLot &lt;integer&gt; [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:SSLot? [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:SSLot:AUTO OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:SSLot:AUTO?</pre>
Example	<pre>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:SSL 1 :EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:SSL? :EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:SSL:AUTO 1 :EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:SSL:AUTO?</pre>
Dependencies	<p>Auto Detect PUCCH Sync Slot is enabled when RB Auto Detect is On, Auto Detect PUCCH Present is On, and Auto Detect PUCCH Sync Slot Auto is OFF</p> <p>Auto Detect PUCCH Sync Slot Auto is enabled when RB Auto Detect is On and Auto Detect PUCCH Present is On</p>
Preset	<p>0</p> <p>OFF</p>
State Saved	<p>Yes</p> <p>Yes</p>
Min	0
Max	19
Backwards Compatibility SCPI	<pre>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:SSLot [ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:SSLot:AUTO</pre>

## Auto Detect PUCCH

This parameter enables the auto detection of PUCCH Format,  $n_{\text{PUCCH}}^{(1)}$ , and  $n_{\text{PUCCH}}^{(3)}$ ,  $n_{\text{PUCCH}}^{(4)}$ ,  $n_{\text{PUCCH}}^{(5)}$ ,  $M^{\text{PUCCH}4}_{\text{RB}}$  for all subframes when the RB auto detection is ON. This parameter takes no effect when the RB auto detection is OFF. This is useful when some of the following value vary for each subframe: format,  $n_{\text{PUCCH}}^{(1)}$ ,  $n_{\text{PUCCH}}^{(3)}$ ,  $n_{\text{PUCCH}}^{(4)}$ ,  $n_{\text{PUCCH}}^{(5)}$ ,  $M^{\text{PUCCH}4}_{\text{RB}}$ . When this parameter is set to OFF, PUCCH parameters are still automatically detected, though PUCCH Format,  $n_{\text{PUCCH}}^{(1)}$ ,  $n_{\text{PUCCH}}^{(3)}$ ,  $n_{\text{PUCCH}}^{(4)}$ ,  $n_{\text{PUCCH}}^{(5)}$ , and  $M^{\text{PUCCH}4}_{\text{RB}}$  are expected to be constant for the entire frame. When this parameter is set to ON, the parameter Auto Detect PUCCH Auto Sync is ignored. If the sync type is PUCCH DMRS, a sync slot must be defined by setting an index in the parameter Auto Detect PUCCH Sync Slot and setting up the per-slot parameters corresponding to the slot index.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:FNPucch:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:FNPucch:AUTO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC: FNP:AUTO 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC: FNP:AUTO?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUCCH Present is On
Preset	ON
State Saved	Yes
Range	On Off
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK: :PROFile:AUTO:PUCCh:FNPucch:AUTO</code>

### PUCCH Format 4/5 Active

Without some higher level instruction, it is impossible to tell a PUSCH channel and a PUCCH channel, of which the format is 4 or 5, apart in some worst case scenarios. To be more specific, if the a PUSCH channel uses the same DMRS sequence with a PUCCH channel, of which the format is 4 or 5, and the RB allocation of the PUSCH channel looks exactly analogous to a PUCCH channel (format 4 or 5), and there's no PUCCH (format 1/2/3) detected in the subframe where the PUSCH channel locates, there could be ambiguities. In such a case, an instruction from the users would be helpful for prioritizing the order in the process of demodulation. Hence this parameter.

In the certain extreme case scenarios, if the value of the parameter is "On", the ambiguous RB allocations are seen as a PUCCH channel, of which the format is 4 or 5. Otherwise, the ambiguous RB allocations are seen as a PUSCH channel, and the detected PUCCH channels (format 4/5) are seen as inactive channels.

This parameter only takes effect when the RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:FORMat45:ACTive OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:FORMat45:ACTive?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC: FORM45:ACT ON</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC: FORM45:ACT?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUCCH Present is On
Preset	On
State Saved	Yes
Range	On Off

### Auto-Calc. per-Slot Parameters

This parameter is used for determining if the per-slot parameters (first RB, cyclic shift, OS, and DMRS group (u)) are automatically calculated based on  $N_{RB}^{(2)}$ ,  $N_{CS}^{(1)}$ ,  $n_{PUCCH}^{(1)}$ ,  $n_{PUCCH}^{(2)}$ ,  $n_{PUCCH}^{(3)}$ ,  $n_{PUCCH}^{(4)}$ ,  $n_{PUCCH}^{(5)}$ ,  $M_{PUCCH4_{RB}}$ , and  $\Delta_{shift}^{PUCCH}$ .

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PARams OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PARams?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:DMRS:PAR OFF</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:DMRS:PAR?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  When this parameter is ON, $N_{RB}^{(2)}$ , $N_{CS}^{(1)}$ , $n_{PUCCH}^{(1)}$ , $n_{PUCCH}^{(2)}$ , $n_{PUCCH}^{(3)}$ , $n_{PUCCH}^{(4)}$ , $n_{PUCCH}^{(5)}$ , $M_{PUCCH4_{RB}}$ , and $\Delta_{shift}^{PUCCH}$ are enabled and First RB, Cyclic Shift, OS and DMRS Group (u) are disabled  Enabled when RB Auto Detect is Off and PUCCH Present is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PARams</code>

### Auto Detect Auto-Calc. per-Slot Parameters

Determines if all DMRS parameters are common to all slots for PUCCH or if they are to be defined on a per slot basis when RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:DMRS:PARams OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:DMRS:PARams?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCC:DMRS:PAR OFF</code>  <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCC:DMRS:PAR?</code>
Dependencies	When this parameter is on, $N_{RB}^{(2)}$ , $N_{CS}^{(1)}$ , $n_{PUCCH}^{(1)}$ , $n_{PUCCH}^{(2)}$ , $n_{PUCCH}^{(3)}$ , $n_{PUCCH}^{(4)}$ , $n_{PUCCH}^{(5)}$ , $M_{PUCCH4_{RB}}$ , $\Delta_{shift}^{PUCCH}$ are enabled and First RB, Cyclic Shift, OS and DMRS Group (u) are disabled  Enabled when the RB auto detection is OFF and Auto Detect PUCCH Present is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:DMRS:PARams</code>

## N RB (2)

Sets the  $N_{RB}(2)$  for all PUCCH Slots when RB Auto Detect is Off.

$N_{RB}(2)$  specifies the number of resource blocks per slot that are available for PUCCH type 2/2a/2b transmissions.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:NRB:TWO &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:NRB:TWO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:NRB:TWO 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:NRB:TWO?</code>
Notes	The max value of this parameter doesn't really couple with the bandwidth, which should be a defect
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, Auto-Calc. per-Slot Parameters is On, and PUCCH Present is On
Couplings	$N_{RB}(2)$ should always be less than the total RB number of selected Bandwidth Selection
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:NRB:TWO</code>

## Auto Detect N RB (2)

Sets the  $N_{RB}(2)$  for all PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:NRB:TWO &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:NRB:TWO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:NRB:TWO 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:NRB:TWO?</code>

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Notes	The max value of this parameter doesn't really couple with the bandwidth, which should be a defect
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On, Auto Detect auto-calc. per-slot params is On, and Auto Detect PUCCH Present is On
Couplings	$N_{RB(2)}$ should always be less than the total RB number of selected Bandwidth Selection
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:AUTO:PUCCh:NRB:TWO</code>

## NCS (1)

Sets the  $N_{CS(1)}$  for all PUCCH Slots when RB Auto Detect is Off.

$N_{CS(1)}$  specifies the number of cyclic shifts used for PUCCH formats 1/1a/1b in a resource block with a mix of formats 1/1a/1b and 2/2a/2b.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUCCh:NCS:ONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUCCh:NCS:ONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:NCS:ONE 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:NCS:ONE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, auto-calc. per-slot parameters is On, and PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	7
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUCCh:NCS:ONE</code>

## Auto Detect N CS (1)

Sets the  $N_{CS}(1)$  for all PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:NCS:ONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:NCS:ONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:NCS:ONE 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:NCS:ONE?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On, Auto Detect auto-calc. per-slot params is On, and Auto Detect PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	7
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:NCS:ONE</code>

## N PUCCH (2)

Sets the higher level parameter `cqi-PUCCH-ResourceIndex` for all PUCCH Slots when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:TWO &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:TWO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:TWO 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:TWO?</code>
Dependencies	The range of sub op code <code>&lt;n&gt;</code> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, auto-calc. per-slot params is On, and PUCCH Present is On
Couplings	$N_{PUCCH}(2)$ should always be less than the total available subcarrier number of current bandwidth selection
Preset	0
State Saved	Yes
Min	0
Max	1197 Max value is calculated as below:

$$N_{\text{PUCCH}}^{(2)} < N_{\text{RB}}^{(2)} N_{\text{sc}}^{\text{RB}} + \left\lceil \frac{N_{\text{cs}}^{(1)}}{8} \right\rceil \cdot (N_{\text{sc}}^{\text{RB}} - N_{\text{cs}}^{(1)} - 2)$$

Backwards [\[:SENSe\]:EVM:ULINK:PROFile:USER<n>:PUCCh:N:TWO](#)  
 Compatibility SCPI

### Auto Detect N PUCCH (2)

Sets the higher level parameter cqi-PUCCH-ResourceIndex for all PUCCH Slots when RB Auto Detect is On.

Remote Command	<a href="#">[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:TWO &lt;integer&gt;</a> <a href="#">[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:TWO?</a>
Example	<a href="#">:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:TWO 1</a> <a href="#">:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:TWO?</a>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when RB Auto Detect is On, Auto Detect Auto-Calc. per-Slot Parameters is On, and Auto Detect PUCCH Present is On
Couplings	$N_{\text{PUCCH}}^{(2)}$ should always be less than the total available subcarrier number of current bandwidth selection
Preset	0
State Saved	Yes
Min	0
Max	1197 Max value is calculated as below:

$$N_{\text{PUCCH}}^{(2)} < N_{\text{RB}}^{(2)} N_{\text{sc}}^{\text{RB}} + \left\lceil \frac{N_{\text{cs}}^{(1)}}{8} \right\rceil \cdot (N_{\text{sc}}^{\text{RB}} - N_{\text{cs}}^{(1)} - 2)$$

Backwards [\[:SENSe\]:EVM:ULINK:PROFile:AUTO:PUCCh:N:TWO](#)  
 Compatibility SCPI

### Delta Shift PUCCH

Sets the PUCCH Shift for all PUCCH Slots when RB Auto Detect is Off.

Remote Command	<a href="#">[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SHIFt &lt;integer&gt;</a> <a href="#">[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SHIFt?</a>
Example	<a href="#">:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SHIF 1</a>

	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SHIF?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and auto-calc. per-slot params is On
Preset	1
State Saved	Yes
Min	1
Max	3
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SHIFt</code>

### Auto Detect PUCCH Shift

Sets the PUCCH Shift for all PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:SHIFt &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:SHIFt?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:SHIF 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:SHIF?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect auto-calc. per-slot params is On
Preset	1
State Saved	Yes
Min	1
Max	3
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:SHIFt</code>

### N PUCCH ID Enable

Determines if  $N^{PUCCH}_{ID}$  is used for calculating cyclic shift for each slot when RB auto detection is OFF.  $N^{PUCCH}_{ID}$  is not used if this parameter is OFF.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ID:ENABle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ID:ENABle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:ID:ENAB OFF</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:ID:ENAB?</code>
Dependencies	Enabled when RB auto detection is OFF and Auto-calc. Per-slot Params is ON

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Couplings	Enables N PUCCH ID when the value of this parameter is On. Disables N PUCCH ID otherwise
Preset	OFF
State Saved	Yes
Range	On Off

### Auto Detect N PUCCH ID Enable

Determines if  $N^{PUCCH}_{ID}$  is used when the RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:ID:ENABle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:ID:ENABle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCC:ID:ENAB OFF</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCC:ID:ENAB?</code>
Dependencies	Enabled when RB auto detection is ON and Auto-calc. Per-slot Params is ON
Couplings	Enables Auto Detect N PUCCH ID when this parameter is ON. Disables Auto Detect N PUCCH ID otherwise
Preset	OFF
State Saved	Yes
Range	On Off

### N PUCCH ID

Sets  $N^{PUCCH}_{ID}$ , when RB auto detection is OFF. This parameter is used by the calculation of  $c_{init}$ , which is used for further calculating the cyclic shift for each slot. The detailed information can be found in section 5.5.1.5 in 3GPP TS 36.211.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ID?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:ID 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:ID?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to remotely set or query a sub op code that is out of range, this results in an error message The control is enabled only when the following conditions are met: Use N PUCCH ID is ON, RB auto detection is OFF, Auto-calc. per-slot Parm. is ON, and is disabled otherwise

Preset	0
State Saved	Yes
Min	0
Max	509

### Auto Detect N PUCCH ID

Sets  $N_{PUCCH_{ID}}$ , when RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:ID &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:ID?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:ID 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:ID?</code>
Dependencies	The control is enabled only when the following conditions are met: Auto Detect N PUCCH ID Enable is ON, RB auto detection is ON, Auto-calc. per-slot Parm. is ON, and is disabled otherwise
Preset	0
State Saved	Yes
Min	0
Max	509

### PUCCH Per Slot Parameters

When the Couple checkbox next to a parameter is checked, the parameter of this allocation couples to the common slot parameter, as shown in the second row of Common. Common parameters apply to all RB allocations.

When Couple is unchecked, this allocation uses its specific slot parameter, as shown in the third row with specific Slot position.

### User Channel (Display Only)

"User Channel (Display Only)" on page 1673.

## Allocation (Display Only)

This parameter shows the selected Allocation in the PUCCH allocation list. This value equals the Allocation Index plus one.

## Add

Adds a new PUCCH allocation pair. One of the allocations is in the slot position specified, if available. The other is in the slot immediately following if the parameter is even, or the slot immediately preceding if the parameter is odd. The parameters for the new allocations are set to default values. They are put into a collection of allocations in ascending order of slot position. The allocation at the even numbered slot gets the lower index. The SCPI commands that follow are used to set slot allocation parameters, such as RB. They all contain the mnemonic `SLOT<m>`, where `<m>` is an index into the collection of allocations. The index ranges from 0 to a maximum of 19. Do not confuse the allocation index with the slot position.

To avoid confusion, you should make PUCCH allocations in ascending order of even slot positions.

For example, suppose you sent the following commands in order (and no previous allocations were made):

```
EVM:CCAR0:ULIN:PROF:USER1:PUC:ADD:SLOT 0
```

```
EVM:CCAR0:ULIN:PROF:USER1:PUC:ADD:SLOT 8
```

```
EVM:CCAR0:ULIN:PROF:USER1:PUC:ADD:SLOT 10
```

You now have six allocations. Allocation 0 is at slot position 0, allocation 1 is made automatically at slot position 1, allocations 2 and 3 are at slot positions 8 and 9, and allocations 4 and 5 at slot positions 10 and 11. The allocations are referenced as `SLOT0`, `SLOT1`, `SLOT2`, etc. in the commands that follow. For example, if you want to verify the slot position of the third allocation, send the following query:

```
EVM:CCAR0:ULIN:PROF:USER1:PUC:SLOT2:POS?
```

This returns 8 for this example, and the following query returns 9:

```
EVM:CCAR0:ULIN:PROF:USER1:PUC:SLOT3:POS?
```

Note that if you delete an allocation, its paired companion is deleted also. It is recommended that you only delete even indices. To continue the previous example, send the following command:

```
EVM:CCAR0:ULIN:PROF:USER1:PUC:SLOT2:DEL
```

This removes the allocations at slot positions 8 and 9. The allocations at slot positions 10 and 11 are now referenced as SLOT2 and SLOT3, where before they were referenced as SLOT4 and SLOT5.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ADD:SLOT &lt;integer&gt;</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:ADD:SLOT 0</code>
Notes	The control for this parameter is an Immediate Action control. The value that is passed in by the SCPI command enables you to specify the slot position As PUCCH has subframes, adding a slot adds the slot specified, if available, and the second slot in the subframe
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. If you attempt to add a Slot to a User and the slot is already allocated an error message is generated Disabled once the number of slot allocations reaches to 20 (max)
Preset	0
State Saved	Yes
Min	0
Max	19
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:ADD:SLOT</code>

## Delete

Deletes the currently selected slot allocation and its paired slot allocation.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:DELeTe</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:SLOT0:DEL</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See <a href="#">"Add" on page 1685</a> command for an explanation of the difference
Dependencies	Disabled when there's no slot allocation The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19 If you attempt to delete a Slot that does not exist, an error message is generated
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:DELeTe</code>

## Subframe Up

Moves up the slot indecies of both the selected allocation and its paired allocation.

See also ["Slot Position \(Remote Command Only\)" on page 1687](#) query.

Dependencies	Disabled when there are no Slots defined or if the slot is at Slot19
--------------	--

## Subframe Down

Moves down the slot indices of both the selected allocation and its paired allocation. See also "[Slot Position \(Remote Command Only\)](#)" on page 1687 query.

---

Dependencies Disabled when there are no Slots defined or if the slot is at Slot0

## Slot Position (Remote Command Only)

Queries the PUCCH slot start position.

---

Remote Command `[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:POSition?`

Example `:EVM:CCAR0:ULIN:PROF:USER1:PUCC:SLOT0:POS?`

---

Dependencies The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19

---

Preset 0

---

State Saved Yes

---

Min 0

---

Max 19

---

Backwards `[ :SENSe]:EVM:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:POSition?`

Compatibility SCPI

## First RB Common

Sets the First Resource Block for all the PUCCH Slots when First RB Couple is On and RB auto detect is OFF.

This value sets the RB index of the selected user's PUCCH allocation for this slot. The next or previous (see Notes below) slot's PUCCH allocation is automatically set according to the LTE standard (mirrored in frequency).

For example, in a 5 MHz LTE signal (25 RBs), when Slot 0 contains a PUCCH allocation at RB 0, Slot 1 is set to have a PUCCH allocation at RB 24.

**NOTE**

**A user can only have one RB allocated to PUCCH per slot.**

**When RB Auto Detect is On and Sync Slot is odd, this parameter sets the RB index for the second slot in a PUCCH subframe, causing the previous (instead of the next) slot to contain a mirrored PUCCH allocation for the current user.**

---

See also: "[Auto Detect First RB](#)" on page 1688

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:RB &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:RB?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:RB 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:RB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, First RB Couple is ON, auto-calc. per-slot parameters is OFF, and PUCCH Present is On
Couplings	Max value dependent on Bandwidth
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz 14 - Bandwidth 3 MHz 24 - Bandwidth 5 MHz 49 - Bandwidth 10 MHz 74 - Bandwidth 15 MHz 99 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:RB</code>

### Auto Detect First RB

Sets the First Resource Block for all the PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:RB &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:RB?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCc:RB 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCc:RB?</code>
Dependencies	Enabled when RB Auto Detect is On, First RB Couple is ON, Auto Detect auto calc. per-slot parameters is OFF, and Auto Detect PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	Max value depends on the bandwidth: 5 - Bandwidth 1.4 MHz

- 14 - Bandwidth 3 MHz
- 24 - Bandwidth 5 MHz
- 49 - Bandwidth 10 MHz
- 74 - Bandwidth 15 MHz
- 99 - Bandwidth 20 MHz

Backwards Compatibility SCPI `[ :SENSe]:EVM:ULINK:PROFfile:AUTO:PUCCh:RB`

### First RB Couple

Determines whether or not all the PUCCH Slots uses the Common First RB value when RB auto detect is OFF

Remote Command `[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFfile:USER<n>:PUCCh:RB:COUPle OFF | ON | 0 | 1`

`[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFfile:USER<n>:PUCCh:RB:COUPle?`

Example `:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:RB:COUP ON`

`:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:RB:COUP?`

Dependencies The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50  
 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  
 Enabled when RB Auto Detect is Off, auto-calc. per-slot parameters is OFF, and PUCCH Present is On

Preset ON

State Saved Yes

Backwards Compatibility SCPI `[ :SENSe]:EVM:ULINK:PROFfile:USER<n>:PUCCh:RB:COUPle`

### First RB Slot

Sets the First Resource Block for the selected PUCCH slot allocation.

Remote Command `[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFfile:USER<n>:PUCCh:SLOT<m>:RB <integer>`  
`[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFfile:USER<n>:PUCCh:SLOT<m>:RB?`

Example `:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT0:RB 0`

`:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT0:RB?`

Notes The index <m> in the above SCPI command is the allocation index, not the slot position. See the ["Add" on page 1685](#) command for an explanation of the difference

Dependencies The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. Max value for n= 50. The range of sub op code <m> values is 0 - 19

	<p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>Enabled when First RB Couple is OFF, auto calc. per-slot params is Off, and PUCCH Present is On</p>
Couplings	Max value dependes on Bandwidth
Preset	0
State Saved	Yes
Min	0
Max	<p>Max value depends on the bandwidth:</p> <p>5 - Bandwidth 1.4 MHz</p> <p>14 - Bandwidth 3 MHz</p> <p>24 - Bandwidth 5 MHz</p> <p>49 - Bandwidth 10 MHz</p> <p>74 - Bandwidth 15 MHz</p> <p>99 - Bandwidth 20 MHz</p>
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:RB</code>

## Format Common

Selects the PUCCH Format type for all the PUCCH Slots when Format Couple is On and RB auto detect is OFF.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:FORMat T1   T1A   T1B   T2   T2A   T2B   T1S   T1AS   T1BS   T3   T3S   T4   T4S   T5   T5S</pre> <pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:FORMat?</pre>
Example	<pre>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:FORM T1</pre> <pre>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:FORM?</pre>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. Max value for n = 50</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>Enabled when RB Auto Detect is Off and Format Couple is ON, and PUCCH Present is On</p>
Preset	T1
State Saved	Yes
Range	Type 1   Type 1a   Type 1b   Type 2   Type 2a   Type 2b   Type 1 Short   Type 1a Short   Type 1b Short   Type 3   Type 3 Short   Type 4   Type 4 Short   Type 5   Type 5 Short
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:FORMat</code>

## Auto Detect Format

Selects the PUCCH Format type for all the PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:FORMat T1   T1A   T1B   T2   T2A   T2B   T1S   T1AS   T1BS   T3   T3S   T4   T4S   T5   T5S</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:FORMat?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCc:FORM T1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCc:FORM?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUCCH Present is On
Preset	T1
State Saved	Yes
Range	Type 1   Type 1a   Type 1b   Type 2   Type 2a   Type 2b   Type 1 Short   Type 1a Short   Type 1b Short   Type 3   Type 3 Short   Type 4   Type 4 Short   Type 5   Type 5 Short
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:FORMat</code>

## Format Couple

Determines whether or not all the PUCCH Slots use the Common Format value when RB auto detect is OFF

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:FORMat:COUPle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:FORMat:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:FORM:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:FORM:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and PUCCH Present is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:FORMat:COUPle</code>

## Format Slot

Selects the PUCCH Format type to be used for the selected PUCCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:FORMat T1   T1A   T1B   T2   T2A   T2B   T1S   T1AS   T1BS   T3   T3S   T4   T4S   T5   T5S</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:FORMat?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:SLOT0:FORMAT T1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:SLOT0:FORMAT?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <b>"Add" on page 1685</b> command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when Format Couple is OFF
Preset	T1
State Saved	Yes
Range	Type 1   Type 1a   Type 1b   Type 2   Type 2a   Type 2b   Type 1 Short   Type 1a Short   Type 1b Short   Type 3   Type 3 Short   Type 4   Type 4 Short   Type 5   Type 5 Short
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:FORMat</code>

## CS Common

Sets the Cyclic Shift for all the PUCCH Slots when Cyclic Shift Couple is On and RB auto detect is OFF.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:CSHift &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:CSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:CSH 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:CSH</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, Cyclic Shift Couple is ON, auto-calc. per-slot parameters is OFF, and PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	11

Backwards Compatibility SCPI `[ :SENSe]:EVM:ULINK:PROFile:USER<n>:PUCCh:CSHift`

### Auto Detect Cyclic Shift

Sets the Cyclic Shift for all the PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:CSHift &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:CSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCC:CSH 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCC:CSH?</code>
Notes	Enabled when RB Auto Detect is On, Auto Detect auto-calc. per slot params is OFF and Auto Detect PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	11
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:CSHift</code>

### CS Couple

Determines whether or not all the PUCCH Slots use the Common Cyclic Shift value when RB auto detect is OFF.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:CSHift:COUPle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:CSHift:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:CSH:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:CSH:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, auto-calc. per-slot parameters is OFF, and PUCCH Present is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:ULINK:PROFile:USER&lt;n&gt;:PUCCh:CSHift:COUPle</code>

## CS Slot

Sets the Cyclic Shift for the selected PUCCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:CSHift &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:CSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT0:CSH 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT0:CSH?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add" on page 1685</a> command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when Cyclic Shift Couple is OFF, auto calc. per-slot params is OFF and PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	11
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:CSHift</code>

## OS Common

Sets the higher layer parameter  $n_{oc}$  (orthogonal sequence index) for all the PUCCH slots when the RB auto detection is OFF. OS is used by PUCCH format 1, 3, and 5.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:OS INDeX0   ...   INDeX4</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:OS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:OS INDeX0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:OS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all the following conditions are met: RB Auto Detect is Off,

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

auto calc. per-slot params is OFF,  
 OS Couple is ON,  
 PUCCH Present is On  
 This parameter should've been enabled only when the common format is PUCCH format 1/3/5. And the range of the parameter should've varied with the common format in the way shown in the table below. But the coupling is not actually supported. User discretion is advised when users are setting this parameter

PUCCH format	n <sub>oc</sub> range
1	0-2
3	0-4
5	0,1

Preset	IND0
State Saved	Yes
Range	Index 0   Index1   Index2
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:OS</code>

### Auto Detect OS

Sets the Orthogonal Sequence index for all the PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:OS INDeX0   ...   INDeX4</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:OS?</code>								
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:OS INDeX0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:OS?</code>								
Dependencies	<table border="1"> <thead> <tr> <th>PUCCH format</th> <th>noc range</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0-2</td> </tr> <tr> <td>3</td> <td>0-4</td> </tr> <tr> <td>5</td> <td>0,1</td> </tr> </tbody> </table> RB Auto Detect is On	PUCCH format	noc range	1	0-2	3	0-4	5	0,1
PUCCH format	noc range								
1	0-2								
3	0-4								
5	0,1								
Preset	IND0								
State Saved	Yes								
Range	Index 0   Index1   Index2								
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:OS</code>								

## OS Couple

Determines whether or not all the PUCCH Slots use the Common OS value when RB auto detect is OFF.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUCCh:OS:COUPle OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0   ...   4:ULINK:PROFfile:USER&lt;n&gt;:PUCCh:OS:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:OS:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:OS:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, auto calc. per-slot params is OFF, and PUCCH Present is On.
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFfile:USER&lt;n&gt;:PUCCh:OS:COUPle</code>

## OS Slot

Sets the Orthogonal Sequence index for the selected PUCCH Slot. OS is used for PUCCH format 1, 3, and 5.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:OS INDeX0   ...   INDeX4</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFfile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:OS?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:SLOT0:OS INDeX0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:SLOT0:OS?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add" on page 1685</a> command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50. The range of sub op code <m> values is 0 - 19 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all of the following conditions are met: Auto calc. per-slot params is OFF; OS Couple is OFF; and PUCCH Present is On Slot format is PUCCH format 1/3/5 The range of the parameter should vary with slot format in the way shown in the table below:

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	PUCCH format	$n_{oc}$ range
	1	0-2
	3	0-4
	5	0,1
Preset	IND0	
State Saved	Yes	
Range	Index 0   Index1   Index2   Index3   Index4	
Backwards Compatibility SCPI	[:SENSe]:EVM:ULINK:PROF:USER<n>:PUCCh:SLOT<m>:OS	

### Power Common

Sets the Power Boost value for all the PUCCH Slots when Power Boost Couple is On and Auto Detect is Off.

Power Boost specifies the average PUCCH DMRS power for a slot.

**NOTE**

**All channel and signal powers are relative to the 0 dB level determined by the power of the channel/signal chosen for synchronization.**

Remote Command	[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:USER<n>:PUCCh:PWRBoost <rel_amp1> [:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:USER<n>:PUCCh:PWRBoost?	
Example	:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:PWRB 0 :EVM:CCAR0:ULIN:PROF:USER1:PUCCh:PWRB?	
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when Power Boost Couple is On, RB Auto Detect is Off, and PUCCH Present is On	
Preset	0 dB	
State Saved	Yes	
Min	-100 dB	
Max	100 dB	
Backwards Compatibility SCPI	[:SENSe]:EVM:ULINK:PROF:USER<n>:PUCCh:PWRBoost	

### Auto Detect Power Boost

Sets the Power Boost value for all the PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC:PW RB 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC:PW RB?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUCCH Present is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:PWRBoost</code>

## Power Couple

Determines whether or not all the PUCCH Slots use the Common Power Boost value when RB auto detect is OFF

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:PWRBoost:COUPle OFF</code> <code>  ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:PWRBoost:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:PW RB:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:PW RB:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, and PUCCH Present is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:PWRBoost:COUPle</code>

## Power Slot

Sets the Power Boost value for the selected PUCCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:SLOT0:PW RB 0</code>

	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC: SLOT0:PWRB?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the "Add" on page 1685 command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when Power Boost Couple is OFF and PUCCH Present is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[:SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:PWRBoost</code>

#### M(4) Common

Sets the  $MPUCCH4_{RB}$  value, aka. numberOfPRB-format4-r13 for all PUCCH slots when RB auto detection is OFF. For non-BL/CE UEs,  $n_{PUCCH}^{(4)}$  along with  $MPUCCH4_{RB}$  and the slot number get to decide the RB allocation for each slot applying PUCCH format 4. See section 5.4.3 in 3GPP TS 36.211 for detailed information.

Remote Command	<code>[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:M:FOUR M1   M2   M3   M4   M5   M6   M8</code> <code>[:SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:M:FOUR?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:M:FOUR M1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:M:FOUR?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all of the following conditions are met: RB auto detection is OFF; Auto calc. per-slot params is ON; PUCCH Present is On
Preset	M1
State Saved	Yes
Range	M1 M2 M3 M4 M5 M6 M8

## Auto Detect M PUCCH (4) RB

Sets the  $M^{PUCCH4}_{RB}$  value for all PUCCH slots when the RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:M:FOUR M1   M2   M3   M4   M5   M6   M8</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:M:FOUR?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:M:FOUR M1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:M:FOUR?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all the three conditions are met: RB auto detection is ON; Auto detect auto calc. per-slot params is ON; Auto detect PUCCH Present is On
Preset	M1
State Saved	Yes
Range	M1 M2 M3 M4 M5 M6 M8 MREServe

## M(4) Couple

Determines if all the PUCCH slots are using the common M PUCCH4 RB value when the RB auto detection is OFF.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:M:FOUR:COUPlE OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:M:FOUR:COUPlE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:M:FOUR:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:M:FOUR:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all the three conditions are met: RB auto detection is OFF; PUCCH Present is On; Auto calc. per-slot params is ON
Preset	ON
State Saved	Yes

## M(4) Slot

Sets the  $M_{PUCCH4, RB}$  value for the selected PUCCH slot when RB auto detection is OFF. For non-BL/CE UEs,  $n_{PUCCH}^{(4)}$  along with  $M_{PUCCH4, RB}$  and the slot number get to decide the RB allocation for each slot applying PUCCH format 4. See section 5.4.3 in 3GPP TS 36.211 for detailed information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:M:FOUR M1   M2   M3   M4   M5   M6   M8</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:M:FOUR?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:SLOT1:M:FOUR M1</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:SLOT1:M:FOUR?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when the RB auto detection is OFF, PUCCH Present is On, auto calc. per-slot params is ON and M PUCCH (4) RB Couple is OFF
Preset	M1
State Saved	Yes
Range	M1 M2 M3 M4 M5 M6 M8

## DMRS Group Common

Sets the group number for the PUCCH demodulation reference signal (DMRS) when DMRS Group Couple is On and RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:GROup &lt;integer&gt;</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:GROup?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:DMRS:GRO 1</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:DMRS:GRO?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when RB Auto Detect is Off, DMRS Group Couple is ON, auto calc. per-slot params is OFF, and PUCCH Present is On
Preset	0
State Saved	Yes

Min	0
Max	29
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:GROup</code>

### Auto Detect DMRS Group

Sets the group number for the PUCCH demodulation reference signal (DMRS) when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:DMRS:GROup &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:DMRS:GROup?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:DMRS:GRO 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:DMRS:GRO?</code>
Dependencies	Enabled when RB Auto Detect is On, Auto Detect auto calc. per-slot params is OFF, and Auto Detect PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	29
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:DMRS:GROup</code>

### DMRS Group Couple

Determines whether or not all the PUCCH Slots use the DMRS Group All value when RB auto detect is OFF

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:GROup:COUPle OFF</code> <code>  ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:GROup:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:DMRS:GRO:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:DMRS:GRO:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, auto calc. per-slot params is OFF and PUCCH Present is On
Preset	ON

State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:GROup:COUPle</code>

## DMRS Group Slot

Selects the DMRS Group for the selected PUCCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:DMRS:GROup&lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:DMRS:GROup?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT0:DMRS:GRO 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT0:DMRS:GRO?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the <a href="#">"Add" on page 1685</a> command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. Max value for n=50. The range of sub op code <m> values is 0 - 19  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when auto calc. per-slot params is OFF, DMRS Group Couple is OFF and PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	29
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:DMRS:GROup</code>

## DMRS Power Common

Sets the DMRS Power Boost value for all the PUCCH Slots when DMRS Power Boost Couple is On and RB Auto Detect is Off.

This value sets the power level for the PUCCH demodulation reference signal (DMRS) of the selected subframe. PUCCH Power is set relative to the 0 dB point determined by this parameter.

For example, setting DMRS Power = 2 dB and PUCCH Power = 0.1 dB means that the demodulator expects PUCCH average power level to be 1.9 dB below the average DMRS power level.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PWRBoost &lt;rel_ ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:PW RB 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:PW RB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when DMRS Power Boost Couple is On, RB Auto Detect is Off, and PUCCH Present is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PWRBoost</code>

### Auto Detect DMRS Power Boost

Sets the DMRS Power Boost value for all the PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:DMRS:PWRBoost &lt;rel_ ampl&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:DMRS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC:PW RB 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUC:PW RB?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PUCCH Present is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:DMRS:PWRBoost</code>

### DMRS Power Couple

Determines whether or not all the PUCCH Slots use the Common DMRS Power Boost value when RB auto detect is OFF

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PWRBoost:COUPle OFF   ON   0   1</code>  <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PWRBoost:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:DMRS:PWRB:COUP ON</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:DMRS:PWRB:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when RB Auto Detect is Off and PUCCH Present is On
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:DMRS:PWRBoost:COUPle</code>

## DMRS Power Slot

Sets the DMRS Power Boost value for the selected PUCCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:DMRS:PWRBoost &lt;rel_amp1&gt;</code>  <code>[ :SENSe]:EVM:CCARri- er0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:DMRS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:SL0T0:DMRS:PWRB 0</code>  <code>:EVM:CCAR0:ULIN:PROF:USER1:PUC:SL0T0:DMRS:PWRB?</code>
Notes	The index <m> in the above SCPI command is the allocation index, not the slot position. See the " <a href="#">Add</a> " on page 1685 command for an explanation of the difference
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19  If you attempt to remotely set or query a sub op code that is out of range, this results in an error message  Enabled when Power Boost Couple is OFF and PUCCH Present is On
Preset	0 dB
State Saved	Yes
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:DMRS:PWRBoost</code>

## N PUCCH (1) Common

Sets the  $n_{\text{PUCCH}}(1)$  for all PUCCH Slots when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:ONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:ONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:ONE 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:ONE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, auto calc. per-slot params is On, and PUCCH Present is On
Couplings	$n_{\text{PUCCH}}(1)$ should always be less than the total available subcarrier number of current bandwidth selection
Preset	0
State Saved	Yes
Min	0
Max	3599 3599 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:ONE</code>

## Auto Detect N PUCCH (1)

Sets the  $n_{\text{PUCCH}}(1)$  for all PUCCH Slots when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:ONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:ONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:ONE 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:ONE?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On, Auto Detect auto calc. per-slot params is On, and Auto Detect PUCCH Present is On
Couplings	$n_{\text{PUCCH}}(1)$ should always be less than the total available subcarrier number of current bandwidth selection
Preset	0
State Saved	Yes

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Min	0
Max	Max value depends on the bandwidth: 215 - Bandwidth 1.4 MHz 539 - Bandwidth 3 MHz 899 - Bandwidth 5 MHz 1799 - Bandwidth 10 MHz 2699 - Bandwidth 15 MHz 3599 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:N:ONE</code>

### N PUCCH (1) Couple

Determines whether or not all the PUCCH Slots use the Common N PUCCH (1) value when RB auto detect is OFF

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:ONE:COUPle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:ONE:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:ONE:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:ONE:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, PUCCH Present is On and auto calc. per-slot paramsis ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:ONE:COUPle</code>

### N PUCCH (1) Slot

Sets the N PUCCH (1) value for the selected PUCCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:ONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:ONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT1:N:ONE 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT1:N:ONE?</code>

Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. The range of sub op code &lt;m&gt; values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code &lt;m&gt; values is 0 - 19</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>Enabled when RB Auto Detect is Off, PUCCH Present is On, auto calc. per-slot params is ON and N PUCCH (1) Couple is OFF</p>
Couplings	$n_{\text{PUCCH}}(1)$ should be less than the total available subcarrier number of the current bandwidth selection
Preset	0
State Saved	Yes
Min	0
Max	1199
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:ONE</code>

### N PUCCH (3) Common

Sets the  $n_{\text{PUCCH}}(3)$  for all PUCCH Slots when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:THRee &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:THRee?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:THRee 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:TREee?</code>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>Enabled when RB Auto Detect is Off, auto calc. per-slot params is On, and PUCCH Present is On</p>
Preset	0
State Saved	Yes
Min	0
Max	549
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:THRee</code>

### Auto Detect N PUCCH (3)

Sets the  $n_{\text{PUCCH}}(3)$  for all PUCCH Slots when RB Auto Detect is On.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:THRee &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:THRee?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:THRee 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:THRee?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is On, Auto Detect auto calc. per-slot params is On, and Auto Detect PUCCH Present is On
Preset	0
State Saved	Yes
Min	0
Max	549
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PUCCh:N:THRee</code>

### N PUCCH (3) Couple

Determines whether or not all the PUCCH Slots use the Common N PUCCH (3) value when RB auto detect is OFF

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:THRee:COUPle OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:THRee:COUPle?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:THRee:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:THRee:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, PUCCH Present is On and auto calc. per-slot params is ON
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:THRee:COUPle</code>

### N PUCCH (3) Slot

Sets the N PUCCH (3) value for the selected PUCCH Slot.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:THRee</code>
----------------	--

	<code>&lt;integer&gt;</code>
	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:THRee?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT1:N:THRee 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:SLOT1:N:THRee?</code>
Notes	The parameter can be enabled with 9080B/9082B-2FP license
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, PUCCH Present is On, auto calc. per-slot params is ON and N PUCCH (3) Couple is OFF
Preset	0
State Saved	Yes
Min	0
Max	549
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:THRee</code>

## N PUCCH (4) Common

Sets the  $n_{\text{PUCCH}}^{(4)}$  value aka. starting PRB-format4-r13 for all PUCCH slots when RB auto detection is OFF. For non-BL/CE UEs,  $n_{\text{PUCCH}}^{(4)}$  along with  $M_{\text{PUCCH4}}^{\text{RB}}$  and the slot number get to decide the RB allocation for each slot applying PUCCH format 4. See section 5.4.3 in 3GPP TS 36.211 for detailed information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FOUR &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FOUR?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:FOUR 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:FOUR?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all of the following conditions are met: RB auto detection is OFF; Auto calc. per-slot params is ON; PUCCH Present is On
Couplings	$n_{\text{PUCCH}}^{(4)}$ is supposed to be less than the total available RB number of the current bandwidth selection
Preset	0

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

State Saved	Yes
Min	0
Max	0 / 109 99 - Bandwidth 20 MHz

### Auto Detect N PUCCH (4)

Sets the  $n_{\text{PUCCH}}(4)$  value for all PUCCH slots when the RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:FOUR &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:FOUR?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:FOUR 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:FOUR?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all the three conditions are met: RB auto detection is ON; Auto detect auto calc. per-slot params is ON; Auto detect PUCCH Present is On
Couplings	$n_{\text{PUCCH}}(4)$ is supposed to be less than the total available RB number of the current bandwidth selection
Preset	0
State Saved	Yes
Min	0
Max	109 99 - Bandwidth 20 MHz

### N PUCCH (4) Couple

Determines if all the PUCCH slots are using the common N PUCCH (4) value when the RB auto detection is OFF.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FOUR:COUPlE OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FOUR:COUPlE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:N:FOUR:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCC:N:FOUR:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50

	<p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>Enabled when all the three conditions are met:  RB auto detection is OFF;  PUCCH Present is On;  Auto calc. per-slot params is ON</p>
Preset	ON
State Saved	Yes

### N PUCCH (4) Slot

Sets the  $n_{\text{PUCCH}}^{(4)}$  value for the selected PUCCH slot when the RB auto detection is OFF. For non-BL/CE UEs,  $n_{\text{PUCCH}}^{(4)}$  along with  $M_{\text{PUCCH4}}^{\text{RB}}$  and the slot number get to decide the RB allocation for each slot applying PUCCH format 4. See section 5.4.3 in 3GPP TS 36.211 for detailed information.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:FOUR &lt;integer&gt;</pre> <pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:FOUR?</pre>
Example	<pre>:EVM:CCAR0:ULIN:PROF:USER1:PUC: SLOT1:N:FOUR 1</pre> <pre>:EVM:CCAR0:ULIN:PROF:USER1:PUC: SLOT1:N:FOUR?</pre>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. The range of sub op code &lt;m&gt; values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code &lt;m&gt; values is 0 - 19</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>Enabled when the RB auto detection is OFF, PUCCH Present is On, auto calc. per-slot params is ON and N PUCCH (4) Couple is OFF</p>
Couplings	$n_{\text{PUCCH}}^{(4)}$ is supposed to be less than the total available RB number of the current bandwidth selection
Preset	0
State Saved	Yes
Min	0
Max	109 99 - Bandwidth 20 MHz

### N PUCCH (5) Common

Sets the  $n_{\text{PUCCH}}^{(5)}$  value, aka. startingPRB-format5-r13 for all PUCCH slots when RB auto detection is OFF. For non-BL/CE UEs,  $n_{\text{PUCCH}}^{(5)}$  and the subframe index

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

get to decide the RB assigned for a PUCCH slot of format 5. See section 5.4.3 in 3GPP TS 36.211 for detailed information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FIVE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FIVE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:FIVE 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCCh:N:FIVE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all of the following conditions are met: RB auto detection is OFF; Auto calc. per-slot params is ON; PUCCH Present is On
Couplings	$n_{\text{PUCCH}}(5)$ is supposed to be less than the total available RB number of the current bandwidth selection
Preset	0
State Saved	Yes
Min	0
Max	109 99 - Bandwidth 20 MHz

### Auto Detect N PUCCH (5)

Sets the  $n_{\text{PUCCH}}(5)$  value for all PUCCH slots when the RB auto detection is ON.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:FIVE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:FIVE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:FIVE 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PUCCh:N:FIVE?</code>
Dependencies	If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all the three conditions are met: RB auto detection is ON; Auto detect auto calc. per-slot params is ON; Auto detect PUCCH Present is On
Couplings	$n_{\text{PUCCH}}(5)$ is supposed to be less than the total available RB number of the current bandwidth selection
Preset	0

State Saved	Yes
Min	0
Max	109 99 - Bandwidth 20 MHz

## N PUCCH (5) Couple

Determines if all the PUCCH slots are using the common N PUCCH (5) value when the RB auto detection is OFF.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FIVE:COUPlE OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FIVE:COUPlE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:N:FIVE:COUP ON</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:N:FIVE:COUP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n = 50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when all the three conditions are met: RB auto detection is OFF; PUCCH Present is On; Auto calc. per-slot params is ON
Preset	ON
State Saved	Yes

## N PUCCH (5) Slot

Sets the  $n_{\text{PUCCH}}^{(5)}$  value for the selected PUCCH slot when RB auto detection is OFF. For non-BL/CE UEs,  $n_{\text{PUCCH}}^{(5)}$  and the subframe index get to decide the RB assigned for a PUCCH slot of format 5. See section 5.4.3 in 3GPP TS 36.211 for detailed information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:FIVE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:FIVE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:SLOT1:N:FIVE 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PUCc:SLOT1:N:FIVE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. The range of sub op code <m> values is determined by the number of Slots you have configured. . Max value for n=50. The range of sub op code <m> values is 0 - 19

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	<p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>Enabled when the RB auto detection is OFF, PUCCH Present is On, auto calc. per-slot params is ON and N PUCCH (5) Couple is OFF</p>
Couplings	$n_{\text{PUCCH}}^{(5)}$ is supposed to be less than the total available RB number of the current bandwidth selection
Preset	0
State Saved	Yes
Min	0
Max	0 / 109 99 - Bandwidth 20 MHz

## SRS

This tab allows you to set up the parameters for SRS.

### User Channel (Display Only)

"User Channel (Display Only)" on page 1673.

### Auto Sync

When Sync Slot is set to Auto, the demod algorithm may automatically determine the best time slot to synchronise to. This approach simplifies parameter entry and provides easier setup. However, the complexity of the algorithm makes it rather slow and prone to errors in the presence of noise.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:SSLot:AUTO OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:SSLot:AUTO?</pre>
Example	<pre>:EVM:CCAR0:ULIN:PROF:USER1:SRS:SSL:AUTO 1 :EVM:CCAR0:ULIN:PROF:USER1:SRS:SSL:AUTO?</pre>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. Max value for n=50</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>SRS Auto Sync is enabled when RB Auto Detect is Off and SRS Present is ON</p>
Preset	ON
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:SSLot:AUTO</code>

## Sync Slot

Sets the S-RS Sync Slot when RB Auto Detect is Off.

This value specifies the index of the slot to use for initial synchronization. The demodulator searches for the slot with the characteristics specified in Channel Parameters and the slot that matches the Channel Parameters with the highest correlation are assigned the slot number given in the Sync Slot parameter.

When Sync Slot is set to Auto, the demod algorithm may automatically determine the best time slot to synchronize to. This approach simplifies parameter entry and provides easier setup. However, the complexity of the algorithm makes it rather slow and prone to errors in the presence of noise.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:SSLot &lt;integer&gt; [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:SSLot? [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:SSLot:AUTO OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:SSLot:AUTO?</pre>
Example	<pre>:EVM:CCAR0:ULIN:PROF:USER1:SRS:SSL 1 :EVM:CCAR0:ULIN:PROF:USER1:SRS:SSL? :EVM:CCAR0:ULIN:PROF:USER1:SRS:SSL:AUTO 1 :EVM:CCAR0:ULIN:PROF:USER1:SRS:SSL:AUTO?</pre>
Dependencies	<p>The range of sub op code &lt;n&gt; values is determined by the number of Users you have configured. Max value for n=50</p> <p>If you attempt to remotely set or query a sub op code that is out of range, this results in an error message</p> <p>S-RS Sync Slot is enabled when S-RS Active is ON, RB Auto Detect is Off and S-RS Sync Slot Auto is OFF</p> <p>S-RS Sync Slot Auto is enabled when S-RS Active is ON and RB Auto Detect is Off</p>
Preset	<pre>1 ON</pre>
State Saved	<pre>Yes Yes</pre>
Min	1
Max	19
Backwards Compatibility SCPI	<pre>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:SSLot</pre>

## Auto Detect S-RS Sync Slot

Sets the S-RS Sync Slot when RB Auto Detect is On.

3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:SSLot &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:SSLot?</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:SSLot:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:SSLot:AUTO?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:SSL 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:SSL?</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:SSL:AUTO 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:SSL:AUTO?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	1 ON
State Saved	Yes Yes
Min	1
Max	19
Backwards	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:SSLot</code>
Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:SSLot:AUTO</code>

### Cyclic Shift

Sets S-RS Cyclic Shift ( $n_{SRS}^{CS}$ ) when RB Auto Detect is Off. This value determines the cyclic shift of R-RS.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:CSHift &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:CSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:CSH 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:CSH?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Present is ON
Preset	0
State Saved	Yes
Min	0
Max	7
Backwards	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:CSHift</code>
Compatibility SCPI	

## Auto Detect Cyclic Shift

Sets S-RS Cyclic Shift when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:CSHift &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:CSHift?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:CSH 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:CSH?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	7
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:CSHift</code>

## Power (dB)

Sets S-RS Power Boost value when RB Auto Detect is Off.

This value specifies the average power for SRS.

### NOTE

**All channel and signal powers are relative to the 0 dB level determined by the power of the channel/signal chosen for synchronization.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:PWRB 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:PWRB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Active is ON
Preset	0
State Saved	Yes
Min	-100
Max	100
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:PWRBoost</code>

## Auto Detect S-RS Power Boost

Sets the S-RS Power Boost value when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:PWRB 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:PWRB?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes
Min	-100
Max	100
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:PWRBoost</code>

## SRS Bandwidth

Sets S-RS Bandwidth ( $B_{SRS}$ ) when RB Auto Detect is Off. This parameter, along with  $C_{SRS}$ , determines the values of  $m_{SRS,b}$  and  $N_b$  from tables 5.5.3.2-1 through 5.5.3.2-4 in TS 36.211.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:BWIDth &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:BWIDth?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:BWID 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:BWID?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off, and S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	3
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:BWIDth</code>

## Auto Detect Bandwidth ( $B_{SRS}$ )

Sets S-RS Bandwidth ( $B_{SRS}$ ) when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:BWIDth &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:BWIDth?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:BWID 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:BWID?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	3
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:BWIDth</code>

## SRS BW Config

Sets S-RS Bandwidth Configuration ( $C_{SRS}$ ) when RB Auto Detect is Off.

This parameter, along with  $B_{SRS}$ , determines the values of  $m_{SRS,b}$  and  $N_b$  from tables 5.5.3.2-1 through 5.5.3.2-4 in TS 36.211.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:BConfig &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:BConfig?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:BCON 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:BCON?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Active is ON
Preset	7
State Saved	Yes
Min	0
Max	7
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:BConfig</code>

### Auto Detect Bandwidth Configuration (C<sub>SRS</sub>)

Sets S-RS Bandwidth Configuration (C<sub>SRS</sub>) when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:BConfig &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:BConfig?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:BCON 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:BCON?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	7
State Saved	Yes
Min	0
Max	7
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:BConfig</code>

### Subframe Config

Sets the value for srsSubframeConfiguration in Table 5.5.3.3-1 (FDD) or Table 5.5.3.3-2 (TDD) in TS 36.211 when RB Auto Detect is Off.

srsSubframeConfiguration determines T<sub>SFC</sub> and D<sub>SFC</sub>.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:SFCConfig &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:SFCConfig?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:SFC 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:SFC?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	15
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:SFCConfig</code>

## Auto Detect Subframe Configuration

Sets the value for srsSubframeConfiguration in Table 5.5.3.3-1 (FDD) or Table 5.5.3.3-2 (TDD) in TS 36.211 when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:SFCConfig &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:SFCConfig?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:SFC 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:SFC?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	15
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:SFCConfig</code>

## Config Index

Sets the S-RS Configuration Index ( $I_{SRS}$ ) when RB Auto Detect is Off. (3GPP TS 36.213 V8.5.0 8.2 Table 8.2-1~2)

The S-RS Configuration Index value determines S-RS periodicity and subframe offset configuration from Table 8.2-1 for FDD and Table 8.2-2 for TDD in 3GPP TS 36.213.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:CINdex &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:CINdex?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:CIND 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:CIND?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	1023
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:CINdex</code>

### Auto Detect Configuration Index (I<sub>SRS</sub>)

Sets the S-RS Configuration Index (I<sub>SRS</sub>) when RB Auto Detect is On. (3GPP TS 36.213 V8.5.0 8.2 Table 8.2-1~2)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:CINdex &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:CINdex?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:CIND 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:CIND?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	1023
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:CINdex</code>

### SRS Hopping BW

Sets S-RS Hopping Bandwidth (b<sub>hop</sub>) when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:HBWidth &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:HBWidth?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:HBW 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:HBW?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Active is ON
Preset	3
State Saved	Yes
Min	0
Max	3
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:HBWidth</code>

## Auto Detect Hopping Bandwidth ( $b_{hop}$ )

Sets S-RS Hopping Bandwidth ( $b_{hop}$ ) when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:HBWidth &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:HBWidth?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:HBW 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:HBW?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	3
State Saved	Yes
Min	0
Max	3
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:HBWidth</code>

## Tx Comb

Sets Transmission Comb ( $k_{TC}$ ) of S-RS when RB Auto Detect is Off.

This parameter influences the starting frequency location of S-RS.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:TCOMb &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:TCOMb?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:TCOM 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:TCOM?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:TCOMb</code>

### Auto Detect Transmission Comb ( $k_{TC}$ )

Sets Transmission Comb ( $k_{TC}$ ) of S-RS when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:TCOMb &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:TCOMb?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:TCOM 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:TCOM?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	1
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:TCOMb</code>

### Frequency Domain Position

Sets the S-RS Frequency Domain Position ( $n_{RRC}$ ) when RB Auto Detect is Off.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:FDPosition &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:FDPosition?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:FDP 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:FDP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	23
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:FDPosition</code>

### Auto Detect Frequency Domain Position ( $n_{RRC}$ )

Sets the S-RS Frequency Domain Position ( $n_{RRC}$ ) when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:FDPosition &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:FDPosition?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:FDP 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:FDP?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	23
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:FDPosition</code>

### SRS Max UpPTS (TDD only)

Sets the value of `srsMaxUpPts` to indicate whether or not  $m_{SRS,0}$  reconfiguration is enabled for UpPTS when RB Auto Detect is Off, where  $m_{SRS,0}$  is given by Table 5.5.3.2-1 through Table 5.5.3.2-4 for each uplink bandwidth in 3GPP TS36.211 v8.5.0.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:MUPTs OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0   ...   4:ULINK:PROFile:USER&lt;n&gt;:SRS:MUPTs?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:MUPT 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:MUPT?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Enabled when the mode is LTEATDD, RB Auto Detect is Off, and S-RS Active is ON
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:MUPTs</code>

#### Auto Detect SRS Max UpPTS

Sets `MaxUpPTS` to give the `srsMaxUpPts` value which indicates whether or not  $m_{SRS,0}$  reconfiguration is enabled for UpPTS when RB Auto Detect is On, where  $m_{SRS,0}$  is given by Table 5.5.3.2-1 through Table 5.5.3.2-4 for each uplink bandwidth in 3GPP TS36.211 v8.5.0.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:MUPTs OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:MUPTs?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:MUPT 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:MUPT?</code>

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Dependencies	Enabled when the mode is LTEATDD, RB Auto Detect is On, and Auto Detect S-RS Active is ON
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROF:AUtO:SRS:MUPTs</code>

### S-RS Nra S1 (TDD only)

Sets the format number for PRACH in subframe1's UpPTS, which is derived from 3GPP TS 36.211 V8.5.0 5.7 Table5.7.1-4.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:USER&lt;n&gt;:SRS:NRA:SONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:USER&lt;n&gt;:SRS:NRA:SONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:NRA:SONE 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:NRA:SONE?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured. Max value for n=50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when the mode is LTE TDD, RB Auto Detect is Off and S-RS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	6
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROF:USER&lt;n&gt;:SRS:NRA:SONE</code>

### Auto Detect SRS Nra S1

Sets S-RS NraS1 when Auto Detection is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:AUtO:SRS:NRA:SONE &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROF:AUtO:SRS:NRA:SONE?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUtO:SRS:NRA:SON 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUtO:SRS:NRA:SON?</code>
Dependencies	Enabled when the mode is LTEATDD, RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes

Min	0
Max	6
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:SRS:NRA:SONE</code>

### S-RS Nra S6 (TDD only)

Sets the format number for PRACH in subframe6's UpPTS, which is derived from 3GPP TS 36.211 V8.5.0 5.7 Table5.7.1-4.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:NRA:SSIX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:SRS:NRA:SSIX?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:NRA:SSIX 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:SRS:NRA:SSIX?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Max value for n=50 If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when the mode is LTEATDD, RB Auto Detect is Off and SRS Active is ON
Preset	0
State Saved	Yes
Min	0
Max	6
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:SRS:NRA:SSIX</code>

### Auto Detect SRS Nra S6

Sets S-RS NraS6 when Auto Detection is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:NRA:SSIX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:SRS:NRA:SSIX?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:NRA:SSIX 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:SRS:NRA:SSIX?</code>
Dependencies	Enabled when the mode is LTEATDD, RB Auto Detect is On and Auto Detect S-RS Active is ON
Preset	0
State Saved	Yes
Min	0

Max	6
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:ULINK:PROF:le:AUTO:SRS:NRA:SSIX</code>

## PRACH

This tab allows you to set up the parameters for PRACH.

### User Channel (Display Only)

"User Channel (Display Only)" on page 1673.

### N RA PRB Offset

Sets the number of Resource Block that PRACH is offset from 0 in the frequency domain ( $n^{RA}_{PRB}$ ) when RB Auto Detect is Off. (3GPP TS 36.211 V8.5.0 5.7)

For PRACH preamble formats 0-3, this parameter is used to calculate the start location in frequency for the PRACH preamble. This parameter does not affect the start location of format 4 preamble.

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0 ... 4:ULINK:PROF:le:USER&lt;n&gt;:PRACH:NRAPrb &lt;integer&gt;</code> <code>[ :SENSe ] :EVM:CCARrier0 ... 4:ULINK:PROF:le:USER&lt;n&gt;:PRACH:NRAPrb?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:NRAP 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:NRAP?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message The maximum value is [number of resource blocks in a slot] - 6 Enabled when RB Auto Detect is Off and PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	The maximum value is [number of resource blocks in a slot] - 6 [number of resource blocks in a slot] is determined by Bandwidth setting 0 - Bandwidth 1.4 MHz 9 - Bandwidth 3 MHz 19 - Bandwidth 5 MHz 44 - Bandwidth 10 MHz 69 - Bandwidth 15 MHz

---

	94 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:NRAPrb</code>

### Auto Detect Resource Block Offset ( $n^{RA}_{PRB}$ )

Sets the number of Resource Block that PRACH is offset from 0 in the frequency domain ( $n^{RA}_{PRB}$ ) when RB Auto Detect is On. (3GPP TS 36.211 V8.5.0 5.7)

---

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:NRAPrb &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:NRAPrb?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:NRAP 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:NRAP?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	The maximum value is [number of resource blocks in a slot] - 6 [number of resource blocks in a slot] is determined by Bandwidth setting 0 - Bandwidth 1.4 MHz 9 - Bandwidth 3 MHz 19 - Bandwidth 5 MHz 44 - Bandwidth 10 MHz 69 - Bandwidth 15 MHz 94 - Bandwidth 20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:NRAPrb</code>

### Configuration Index

Sets PRACH Configuration Index to give frame structure when RB Auto Detect is Off. (3GPP TS 36.211 V8.5.0 5.7)

This parameter determines the PRACH preamble format and the locations where PRACH can be transmitted in the frame.

This information is given in table 5.7.1-2 for frame type 1 FDD signals and in table 5.7.1-3 for frame type 2 TDD signals in 3GPP TS 36.211.

---

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:CINdex &lt;integer&gt;</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:CINDeX?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:CIND 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:CIND?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	LTEAFDD: 63 LTEATDD: 57
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:CINDeX</code>

### Auto Detect Configuration Index

Sets the PRACH Configuration Index to give frame structure when RB Auto Detect is On. (3GPP TS 36.211 V8.5.0 5.7)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:CINDeX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:CINDeX?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:CIND 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:CIND?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	LTEAFDD: 63 LTEATDD: 57
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:CINDeX</code>

### Logical Root Seq Index

Sets the Logical Root Seq Index to give root Zadoff-Chu sequence order when RB Auto Detect is Off. (3GPP TS 36.211 V8.5.0 5.7)

For preamble formats 0-3, there are 838 total logical indexes. For preamble format 4, there are 138 logical indexes.

The mapping between logical and physical Zadoff-Chu indexes is given in Table 5.7.2-4 for preamble formats 0-3 and in Table 5.7.2-5 for preamble format 4 in TS 36.211.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:LRSindex &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:LRSindex?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:LRS 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:LRS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	837
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:LRSindex</code>

### Auto Detect Logical Root Seq Index

Sets Logical Root Seq Index to give root Zadoff-Chu sequence order when RB Auto Detect is On. (3GPP TS 36.211 V8.5.0 5.7)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:LRSindex &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:LRSindex?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:LRS 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:LRS?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	837
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:LRSindex</code>

## Cyclic Shift Set

Sets Cyclic Shift Set to give  $N_{CS}$  (Number of Cyclic Shifts) for PRACH preamble sequence generation when RB Auto Detect is Off. Value of  $N_{CS}$  is determined by this selection and value of  $N_{CS}$  Configuration. (3GPP TS 36.211 V8.5.0 Table 5.7.2-2)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:CSset UNRestricted   RESTRICTed</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:CSset?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC:CSS UNR</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC:CSS?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured Enabled when RB Auto Detect is Off and PRACH Present is ON
Preset	UNRestricted
State Saved	Yes
Range	Unrestricted Restricted
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:CSset</code>

## Auto Detect Cyclic Shift Set

Sets Cyclic Shift Set to give  $N_{CS}$  (Number of Cyclic Shifts) for PRACH preamble sequence generation when RB Auto Detect is On. Value of  $N_{CS}$  is determined by this selection and value of  $N_{CS}$  Configuration. (3GPP TS 36.211 V8.5.0 Table 5.7.2-3)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:CSset UNRestricted   RESTRICTed</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:CSset?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRAC:CSS UNR</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRAC:CSS?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PRACH Present is ON
Preset	UNRestricted
State Saved	Yes
Range	Unrestricted Restricted
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:CSset</code>

## N<sub>CS</sub> Configuration

Sets the Cyclic Shift Configuration Number to give N<sub>CS</sub> (Number of Cyclic Shifts) PRACH preamble sequence generation when RB Auto Detect is Off. Value of N<sub>CS</sub> is determined by this value and selection of Cyclic Shift Set. (3GPP TS 36.211 V8.5.0 Table 5.7.2-2,3)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:NCSConfig &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:NCSConfig?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:NCSC 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:NCSC?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	15
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:NCSConfig</code>

## Auto Detect N<sub>CS</sub> Configuration

Sets the Cyclic Shift Configuration Number to give N<sub>CS</sub> (Number of Cyclic Shifts) PRACH preamble sequence generation when RB Auto Detect is On. Value of N<sub>CS</sub> is determined by this value and selection of Cyclic Shift Set. (3GPP TS 36.211 V8.5.0 Table 5.7.2-3)

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:NCSConfig &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:NCSConfig?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:NCSC 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:NCSC?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	15
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:NCSConfig</code>

## Preamble Index

Sets the Preamble Index when RB Auto Detect is Off. Preamble sequence generation is presented on 3GPP TS 36.211 V8.5.0 – 5.7.2.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:PINDEX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:PINDEX?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:PIND 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRACH:PIND?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	63
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:PINDEX</code>

## Auto Detect Preamble Index

Sets the Preamble Index when RB Auto Detect is On. Preamble sequence generation is presented on 3GPP TS 36.211 V8.5.0 – 5.7.2.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:PINDEX &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:PINDEX?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:PIND 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:PIND?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	63
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:PINDEX</code>

## PRACH Power (dB)

Sets the PRACH Power Boost value when RB Auto Detect is Off.

This parameter specifies the average power of PRACH subcarriers.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC:PWRB 1</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC:PWRB?</code>
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when RB Auto Detect is Off and PRACH Present is ON
Preset	0
State Saved	Yes
Min	-100
Max	100
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:PWRBoost</code>

## Auto Detect PRACH Power Boost

Sets the PRACH Power Boost value when RB Auto Detect is On.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:PWRBoost &lt;rel_amp1&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:PWRBoost?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:PWRB 1</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:PWRB?</code>
Dependencies	Enabled when RB Auto Detect is On and Auto Detect PRACH Present is ON
Preset	0
State Saved	Yes
Min	-100
Max	100
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:PWRBoost</code>

### Sync Resource (TDD only)

Sets the index value for random access resource, which is used as a synchronization reference when RB Auto Detect is Off. Random access preamble mapping is presented on 3GPP TS 36.211 V8.5.0 5.7 Table 5.7.1-4.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:SRESouce &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:SRESouce?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC:SRES 0</code> <code>:EVM:CCAR0:ULIN:PROF:USER1:PRAC:SRES?</code>
Notes	Max value of this parameter depends on Configuration Index and UL/DL Configuration Disabled when the combination of Configuration Index and UL/DL Configuration results in the N/A in 3GPP TS 36.211 V8.5.0 5.7 Table5.7.1-4
Dependencies	The range of sub op code <n> values is determined by the number of Users you have configured If you attempt to remotely set or query a sub op code that is out of range, this results in an error message Enabled when the mode is LTEATDD, RB Auto Detect is Off, and PRACH Present is ON
Preset	0
State Saved	Yes
Min	0
Max	5
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:PROFile:USER&lt;n&gt;:PRACH:SRESouce</code>

### Auto Detect Sync Resource

Sets the index value for random access resource, which is used as synchronization reference when RB Auto Detect is On. Random access preamble mapping is presented on 3GPP TS 36.211 V8.5.0 5.7 Table 5.7.1-4.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:SRESouce &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:SRESouce?</code>
Example	<code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:SRES 0</code> <code>:EVM:CCAR0:ULIN:PROF:AUTO:PRACH:SRES?</code>
Notes	Max value of this parameter depends on Configuration Index and UL/DL Configuration. This parameter is disabled when the combination of Configuration Index and UL/DL Configuration results in the N/A in 3GPP TS 36.211 V8.5.0 5.7 Table5.7.1-4
Dependencies	Enabled when the mode is LTEATDD, RB Auto Detect is On and Auto Detect PRACH Present is ON
Preset	0

State Saved	Yes
Min	0
Max	5
Backwards Compatibility SCPI	<a href="#">[:SENSe]:EVM:ULINK:PROFile:AUTO:PRACH:SRESorce</a>

## Edit eMTC Channels

This control allows you to set up more eMTC parameters.  
This is for Uplink.

## eMTC Analysis

Enable/Disable eMTC analysis function. This control performs the same function as that in the Radio tab.

See eMTC Analysis under Radio.

## Decode

This tab contains commonly used functions for decode setup parameters.

## PBCH Bits

Selects the decoding type of the PBCH. It specifies how much coding to undo before showing the Master Information Block (MIB) bits from PBCH on the Decoded Symbol Table. See 3GPP TS 36.212, Section 5.3.1 for a diagram of the coding operations performed on PBCH.

The following is a list of the available PBCH decoding type selections and the resulting bits:

- NONE - None, no bits for this channel are shown on the Decoded Symbol Table.
- DESCrambled - Descrambled,
  - LTE:480 (Normal CP) or 432 (Extended CP) descrambled (rate-matched) bits for each subframe 0 in a frame
  - NB-IoT: 200 descrambled (rate-matched) bits for each subframe 0 in a frame
- DRMatched - DeRateMatched

- LTE: 120 deratematched (channel coded) bits for each subframe 0 in a frame
- NB-IoT: 150 deratematched (channel coded) bits for each subframe 0 in a frame
- DEcoded
  - LTE: 40 (information bits + CRC) bits for each subframe 0 in a frame
  - NB-IoT:50 (34 information bits + 16 CRC) bits for each subframe 0 in a frame

**NOTE**

For LTE: The PBCH Decoder is On when PBCH Bits is set a value other than None or when "PHICH Duration" on page 1515 or "PHICH Allocation (Ng)" on page 1515 are set to Auto Detect. You can check the status of PBCH Decoder in the window of "Downlink Decode Info" on page 1327.

Remote Command	[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:PBCH NONE   DESCrambled   DRMatched   DEcoded [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:PBCH?
Example	:EVM:CCAR0:DLIN:DEC:PBCH NONE :EVM:CCAR0:DLIN:DEC:PBCH?
Notes	Available when Direction is Downlink The setting is shared by LTE and NB-IoT
State Saved	Yes
Range	None DESCrambled DeRateMatched Decoded
Backwards Compatibility SCPI	[ :SENSe]:EVM:DLINK:DECode:PBCH

### PCFICH Bits

Selects the decoding type of the PCFICH. It specifies how much coding to undo before showing the bits from PCFICH on the Decoded Symbol Table. See 3GPP TS 36.212, Section 5.3.4 for a diagram of the coding operations performed to PCFICH. The following is a list of the available PCFICH decoding type selections and the resulting bits:

- NONE - None, no bits for this channel are shown on the Decoded Symbol Table
- DESCrambled - Descrambled, 32 descrambled (channel coded) bits per subframe
- DEcoded - Decoded, 2 decoded bits (CFI) per subframe

NOTE

The PCFICH Decoder is On when PCFICH Bits is not set to None or when "PDCCH Allocation Auto Detect" on page 1517 is set to On. You can check the status of PCFICH Decoder in "Downlink Decode Info" on page 1327.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:PCFich NONE   DESCrambled   DECodeD</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:PCFich?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:PCF NONE</code> <code>:EVM:CCAR0:DLIN:DEC:PCF?</code>
Notes	Available when Direction is Downlink
State Saved	Yes
Range	None Descrambled Decoded
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:DECode:PCFich</code>

## PDCCH Bits

Selects the decoding type of the PDCCH. It specifies how much coding to undo before showing the bits from PDCCH on the Decoded Symbol Table. See 3GPP TS 36.212, Section 5.3.3 for a diagram of the coding operations performed on PDCCH. The following is a list of the available PDCCH Bits selections and the resulting bits.  $N_{REG}$  is the number of resource element groups not allocated for PHICH or PCFICH in a subframe.

- NONE (None) - no PDCCH bits are shown in the Decoded Symbol Table.
- DEMapped (Demapped) -  $N_{REG} * 8$  demapped (interleaved) DCI format bits for each subframe
- DINTerleaved (Deinterleaved) -  $N_{REG} * 8$  deinterleaved (scrambled) DCI format bits for each subframe
- DESCrambled (Descrambled) -  $N_{REG} * 8$  descrambled (rate-matched) bits for each subframe
- DRMatched (DeRateMatched) -  $S(8 + LEN_i)$  bits for each subframe  
Each set of bits for an active PDCCH transmission consists of an 8-bit length field ( $LEN_i$ ) followed by the deratematched (channel coded) bits.  
 $LEN_i$  indicates the number of deratematched bits for the  $i$ th PDCCH transmission in a subframe and can be used to determine where a PDCCH ends and the next PDCCH begins in the Decoded Symbol Table.  
 $LEN_i = 3 * (DCI Payload Length + CRC Length)$
- DECodeD (Decoded) -  $S(8 + LEN_i)$  bits for each subframe  
Each set of bits for an active PDCCH transmission consists of an 8-bit length

field (LEN<sub>i</sub>), the decoded (DCI payload + CRC) bits, and the 16-bit CRC.  
 LEN<sub>i</sub> indicates the number of decoded bits (including CRC) for the i<sup>th</sup> PDCCH transmission in a subframe and can be used to determine where a PDCCH ends and the next PDCCH begins in the Decoded Symbol Table.  
 LEN<sub>i</sub> = DCI Payload Length + CRC Length

**NOTE**

When PDCCH Bits is set to Deratematched or Decoded, the LTE-A demodulator auto-detects the number of active PDCCH transmitted within each subframe, nPDCCH.

The PDCCH Decoder is On when PDCCH Bits is set to a value other than None or when "RB Auto Detect Mode" on page 1500 is set to Decode DCI. You can check the status of PDCCH Decoder in "Downlink Decode Info" on page 1327.

Remote Command	[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:PDCCh NONE   DEMapped   DINTerleaved   DESCrambled   DRMatched   DEcoded [ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:PDCCh?
Example	:EVM:CCAR0:DLIN:DEC:PDCC NONE :EVM:CCAR0:DLIN:DEC:PDCC?
Notes	Available when Direction is Downlink The setting is shared by LTE and NB-IoT As for NB-IoT, the data carried on NPDCCH channel is not interleaved, therefore, when the Deinterleaved option is selected, the data shown in Decoded Symbol Table is same as that which the Demapped option is selected
State Saved	Yes
Range	None   Demapped   Deinterleaved   Descrambled   DeRateMatched   Decoded
Backwards Compatibility SCPI	[ :SENSe]:EVM:DLINK:DECode:PDCCh

### PDSCH Bits

This parameter is not available for BL/CE Ues.

Selects the decoding type of the PDSCH. It specifies how much coding to undo before showing the bits from PDSCH on the Decoded Symbol Table. See 3GPP TS 36.212, Section 5.3.2 for a diagram of the coding operations performed on PDSCH. The following is a list of the available PDSCH decoding type selections and the resulting bits:

- NONE - None, no bits for this channel are shown on the Decoded Symbol Table.
- DESCrambled - Descrambled, descrambled (rate-matched) bits for each subframe

- DRMatched - DeRateMatched, S(16 + LENi) bits per subframe  
Each set of bits for a PDSCH transmission consists of an 16-bit length field (LENi) followed by the deratematched (channel coded) bits.  
LENi indicates the number of deratematched bits for the ith PDSCH allocation in a subframe and can be used to determine where one set of deratematched bits ends and the next set begins in the Decoded Symbol Table.  
 $LENi = 3 * (\text{Codeblock Length} + \text{CRC Length} + \text{Trellis Termination Bit Length})$   
where Trellis Termination Bit Length = 4.
- DCBBlock - Decoded CB, S(16 + LENi) bits per subframe  
Each set of bits for a PDSCH codeblock consists of a 16-bit length field (LENi), the decoded codeblock bits, and a 24-bit CRC. When codeblock segmentation is not performed (Transport Block Size (TBS(n)) is less than 6144), the codeblock + CRC bits shown are the same as the transport block + CRC bits.  
LENi indicates the number of decoded bits (including CRC) for the ith PDSCH codeblock in a subframe and can be used to determine where a set of codeblock bits ends and the next set begins in the Decoded Symbol Table.
- DTBBlock - Decoded TB, S(Transport Block Sizes + 24) decoded transport block bits (including CRCs) per subframe  
Each set of bits consists of the decoded transport block bits followed by a 24-bit CRC. There is no LEN field for decoded transport block bits since the Transport Block Size for each PDSCH allocation is shown on the DL Decode Info table in the TBS(n) data result.

NOTE

The PDSCH Decoder is turning on when "PDSCH Bits" on page 1741 is set to a value other than None. PDSCH decoding is available when RB Auto Detect Mode is Decoded DCI.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:PDSCh NONE   DESCrambled   DRMatched   DCBBlock   DTBBlock</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:PDSCh?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:PDSC NONE</code> <code>:EVM:CCAR0:DLIN:DEC:PDSC?</code>
Dependencies	Available when Direction is Downlink PDSCH data is decoded when RB Auto Detect is On and RB Auto Detect Mode is Decoded DCI NB-IoT supports NPDSCH decoding when both RB Auto Detect is On and RB Auto Detect Mode is Power-based, or RB Auto Detect is Off NB-IoT provides NPDSCH decoding configuration parameters under NPDSCH dialog of Edit NB-IoT Channels
State Saved	Yes
Range	None Descrambled  DeRateMatched Decoded Code Block Decoded Tx Port Block
Backwards Compatibility SCPI	<code>[ :SENSe ] : EVM : DLINK : DECode : PDSCh</code>

## RNTI DCI Settings

Enable you to adjust the RNTI DCI parameters.

### Transmission Mode Included in DCI Decoding

Specifies which Transmission Modes are included, so that decoding the appropriate DCI Format may be attempted. This property is useful in detecting the correct DCI Format. Multiple transmission modes can be included through a bitwise OR operation. TM5 and TM6 cannot be included simultaneously, as simultaneous detection of DCI Formats 1B and 1D is not possible. TM3 and TM8 cannot be included simultaneously, as simultaneous detection of DCI Formats 2A and 2B is not possible. TM3 and TM9 cannot be included simultaneously, as simultaneous detection of DCI Formats 2A and 2C is not possible.

See the table below for bitmapping.

Transmission mode	Bit
TM1	0
TM2	1
TM3	2
TM4	3
TM5	4
TM6	5
TM7	6
TM8	7
TM9	8

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:TMINclude &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:TMINclude?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:TMIN 235</code> <code>:EVM:CCAR0:DLIN:DEC:TMIN?</code>
Notes	The parameter requires a decimal entry. For example, if TM1 and TM3 are going to be included in the decoding, then the Bit Mask for this combination is 101, and the value of this parameter is the decimal number '5' By default, TM1, TM2, TM4, TM6, TM7 and TM8 are included, the Bit Mask for this combination is 11101011, and the value of this parameter is the decimal number '235'.
Preset	235
Min	0
Max	511

## DCI Format 1/1A Include

Specifies which DCI Format a PDCCH with ambiguous length is to be decoded as.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:DF1A:INCLude F1   F1A</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:DF1A:INCLude?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:DF1A:INCL F1</code> <code>:EVM:CCAR0:DLIN:DEC:DF1A:INCL?</code>
Dependencies	Available when Direction is Downlink
Preset	F1
State Saved	Yes
Range	Format1 Format1A

## Uplink Bandwidth

Specify the uplink bandwidth to be used in decoding certain DCI Formats.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:ULBW B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:ULBW?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:ULBW B20M</code> <code>:EVM:CCAR0:DLIN:DEC:ULBW?</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## RA-RNTI Range (Min Value)

Sets the minimum value of the RA-RNTI range.

RA-RNTI Range specifies the range of RNTI values that are assumed to be RA-RNTIs when decoding PDCCH transmissions. This parameter is needed to unambiguously decode the contents of DCI Format 1A.

### NOTE

Zero is not a valid RA-RNTI value, but is used to indicate that there are no RA-RNTI contained in the LTE signal when both the Min and Max values are set to 0. Any PDCCH, whose CRC is scrambled with an RNTI that is not contained in either the RA-RNTI or TPC-RNTI ranges and cannot be determined to be a SI-RNTI or P-RNTI, is demodulated as a C-RNTI PDCCH.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:RNTI:MINimum:RA &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:RNTI:MINimum:RA?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:RNTI:MIN:RA 0</code> <code>:EVM:CCAR0:DLIN:DEC:RNTI:MIN:RA?</code>
Notes	The value should be less than or equal to RA-RNTI Range Max Value
Dependencies	Available when Direction is Downlink
Preset	0
State Saved	Yes
Min	0
Max	60
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:DECode:RNTI:MINimum:RA</code>

### RA-RNTI Range (Max Value)

Sets the maximum value of the RA-RNTI range.

RA-RNTI Range specifies the range of RNTI values that are assumed to be RA-RNTIs when decoding PDCCH transmissions. This parameter is needed to unambiguously decode the contents of DCI Format 1A.

**NOTE**

**Zero is not a valid RA-RNTI value, but is used to indicate that there are no RA-RNTI contained in the LTE signal when both the Min and Max values are set to 0. Any PDCCH, whose CRC is scrambled with an RNTI that is not contained in either the RA-RNTI or TPC-RNTI ranges and cannot be determined to be a SI-RNTI or P-RNTI, is demodulated as a C-RNTI PDCCH.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:RNTI:MAXimum:RA &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:RNTI:MAXimum:RA?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:RNTI:MAX:RA 0</code> <code>:EVM:CCAR0:DLIN:DEC:RNTI:MAX:RA?</code>
Notes	The value should be greater than or equal to the RA-RNTI Range Min Value
Dependencies	Available only when Direction is Downlink
Preset	0
State Saved	Yes
Min	0
Max	60
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:DECode:RNTI:MAXimum:RA</code>

### TPC-RNTI Range (Min Value)

Sets the minimum value of the TPC-RNTI range.

TPC-RNTI Range specifies the range of RNTI values that are assumed to be TPC-RNTIs when decoding PDCCH transmissions.

DCI Formats 3 and 3A have the same message payload size as DCI Formats 0 and 1A. Any PDCCHs with a RNTI falling within the specified TPC-RNTI Range are decoded as DCI Format 3/3A transmit power control commands.

**NOTE**

**Any PDCCH, whose CRC is scrambled with an RNTI that is not contained in either the RA-RNTI or TPC-RNTI ranges and cannot be determined to be a SI-RNTI or P-RNTI, is demodulated as a C-RNTI PDCCH.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:RNTI:MINimum:TPC &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:RNTI:MINimum:TPC?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:RNTI:MIN:TPC 0</code> <code>:EVM:CCAR0:DLIN:DEC:RNTI:MIN:TPC?</code>
Notes	The value should be less than or equal to TPC-RNTI Range Max Value
Dependencies	Available only when Direction is Downlink
Preset	0
State Saved	Yes
Min	0
Max	65523
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:DECode:RNTI:MINimum:TPC</code>

### TPC-RNTI Range (Max Value)

Sets the maximum value of the TPC-RNTI range.

TPC-RNTI Range specifies the range of RNTI values that are assumed to be TPC-RNTIs when decoding PDCCH transmissions.

DCI Formats 3 and 3A have the same message payload size as DCI Formats 0 and 1A. Any PDCCHs with a RNTI falling within the specified TPC-RNTI Range are decoded as DCI Format 3/3A transmit power control commands.

**NOTE**

**Any PDCCH, whose CRC is scrambled with an RNTI that is not contained in either the RA-RNTI or TPC-RNTI ranges and cannot be determined to be a SI-RNTI or P-RNTI, is demodulated as a C-RNTI PDCCH.**

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:RNTI:MAXimum:TPC &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:RNTI:MAXimum:TPC?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:RNTI:MAX:TPC 0</code> <code>:EVM:CCAR0:DLIN:DEC:RNTI:MAX:TPC?</code>
Notes	The value should be greater than or equal to the TPC-RNTI Range Min Value
Dependencies	Available only when Direction is Downlink
Preset	0
State Saved	Yes
Min	0
Max	65523
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:DECode:RNTI:MAXimum:TPC</code>

### Latest PMI Report on PUSCH

Specify the latest Precoding Matrix Indicator(s) (PMI) reported by the UE. The latest PMI report can be specified for PDSCH allocations using 1, 2, 3, or 4 layers. Valid PMI reports are shown in the table below:

Num. of Layers	2 Tx Antenna Ports	4 Tx Antenna Ports
1	0-3	0-15
2	0-1	0-15
3	n/a	0-15
4	n/a	0-15

When Format 2 DCI is used to specify PDSCH RB allocations for a user, the eNodeB can explicitly specify the precoding that was applied to the PDSCH allocations, or can indicate that the last PMI report from the UE was used. In the latter case, the LTE demodulator needs to know what PMI that the UE reported to be able to completely decode the contents of the DCI payload as well as decode the corresponding PDSCH user allocation.

More information about DCI Format 2 can be found in 3GPP TS 36.211, Section 5.3.3.1.5.

### Latest PMI Report on PUSCH using 1 Layer

Specifies the latest Precoding Matrix Indicator(s) (PMI) reported by the UE.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:DFTwo:PRONe &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:DFTwo:PRONe?</code>
----------------	---

Example	<code>:EVM:CCAR0:DLIN:DEC:DFTW:PRON 1</code> <code>:EVM:CCAR0:DLIN:DEC:DFTW:PRON?</code>
Dependencies	Available when Direction is Downlink and Number of C-RS Ports is set to 2 or 4 Ports The number of valid PMI reports differs depending on the Number of C-RS Ports 2 Ports : 0-3 4 Ports: 0-15
Preset	0
State Saved	Yes
Min	0
Max	3 Depends on the Number of C-RS Ports 2 Ports: 3 4 Ports: 15
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:DLINK:DECode:DFTWo:PRONe</code>

### Latest PMI Report on PUSCH using 2 Layers

Specifies the latest Precoding Matrix Indicator(s) (PMI) reported by the UE.

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0 ... 4:DLINK:DECode:DFTWo:PRTWo &lt;integer&gt;</code> <code>[ :SENSe ] :EVM:CCARrier0 ... 4:DLINK:DECode:DFTWo:PRTWo?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:DFTW:PRTW 1</code> <code>:EVM:CCAR0:DLIN:DEC:DFTW:PRTW?</code>
Dependencies	Available when Direction is Downlink and Number of C-RS Ports is set to 2 or 4 Ports The number of valid PMI reports differs depending on Number of C-RS Ports 2 Ports: 0-1 4 Ports: 0-15
Preset	0
State Saved	Yes
Min	0
Max	1 Depends on the Number of C-RS Ports 2 Ports: 1 4 Ports: 15
Backwards Compatibility SCPI	<code>[ :SENSe ] :EVM:DLINK:DECode:DFTWo:PRTWo</code>

### Latest PMI Report on PUSCH using 3 Layers

Specifies the latest Precoding Matrix Indicator(s) (PMI) reported by the UE.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:DFTWo:PRTHree &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:DFTWo:PRTHree?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:DFTW:PRTH 1</code> <code>:EVM:CCAR0:DLIN:DEC:DFTW:PRTH?</code>
Dependencies	Available when Direction is Downlink and Number of C-RS Ports is set to 4 Ports The number of valid PMI reports differs depending on Number of C-RS Ports
Preset	0
State Saved	Yes
Min	0
Max	15
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:DECode:DFTWo:PRTHree</code>

### Latest PMI Report on PUSCH using 4 Layers

Specifies the latest Precoding Matrix Indicator(s) (PMI) reported by the UE.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:DFTWo:PRFour &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:DECode:DFTWo:PRFour?</code>
Example	<code>:EVM:CCAR0:DLIN:DEC:DFTW:PRF 1</code> <code>:EVM:CCAR0:DLIN:DEC:DFTW:PRF?</code>
Dependencies	Available when Direction is Downlink and Number of C-RS Ports is set to 4 Ports.
Preset	0
State Saved	Yes
Min	0
Max	15
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:DLINK:DECode:DFTWo:PRFour</code>

### PUSCH Bits

Selects the decoding type of the PUSCH. It determines the level of decoding for PUSCH bits shown in the Decoded Symbol Table.

- NONE - None, no decoding is performed on PUCCH bits. Mapped bits are shown in the Symbol Table.
- DESCrambled - Descrambled, descrambled (rate-matched) bits for each subframe are shown in the Decoded Symbol Table.
- DRMatched - DeRateMatched, S (16 + LENi) bits per subframe.  
Each set of bits for a PUSCH transmission consists of a 16-bit length field (LENi) followed by the deratematched (channel coded) bits for each codeblock. LENi indicates the number of deratematched bits for the ith codeblock in a subframe and can be used to determine where one set of deratematched codeblock bits ends and the next set begins in the Decoded Symbol Table.  $LEN = 3 * (\text{Codeblock Length} + \text{CRC Length} + \text{Trellis Termination Bit Length})$  bits, where Codeblock Length is transmission dependent, CRC Length = 24 bits, and Trellis Termination Bit Length = 4 bits.
- DCBLock - Decoded CB, S (16 + LENi) bits per subframe.  
Each set of bits for a PUSCH codeblock consists of a 16-bit length field (LEN), the decoded codeblock bits, and a 24-bit CRC. When codeblock segmentation is not performed (Transport Block Size (TBS(n)) is less than 6144), the codeblock + CRC bits shown are the same as the transport block + CRC bits. LENi indicates the number of decoded bits (including CRC) for the ith codeblock in a subframe and can be used to determine where a set of codeblock bits ends and the next set begins in the Decoded Symbol Table.  $LENi = \text{Codeblock Length} + \text{CRC Length}$ , where Codeblock Length is transmission dependent, and CRC Length = 24 bits.
- DTBBlock - Decoded TB, (Transport Block Size + 24) decoded transport block bits (including CRCs) per subframe.  
The number of bits shown on the Decoded Symbol Table for a PUSCH channel allocation when PUSCH Bits is set to Decoded is equal to the sum of the Size metrics (HARQ Size, CQI/PMI Size, SR Size, etc.) plus the Transport Block Size (TBS) for the corresponding decoded PUSCH allocation listed in the UL Decode Info trace.

**NOTE**

**RNTI needs to be specified for a user allocation for PUSCH descrambling to be performed.**

Remote Command	<code>[ :SENSE]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh NONE   DESCrambled   DRMatched   DCBBlock   DTBBlock</code>
Example	<code>:EVM:CCAR0:ULIN:DEC:PUSC NONE</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC?</code>
Notes	Available when Direction is Uplink RNTI needs to be specified for a user allocation in the LTE Allocation Editor for PUSCH descrambling to be performed

State Saved	Yes
Range	None Descrambled DeRatematched Decoded Code Block Decoded Tx Port Block
Backwards Compatibility SCPI	[ :SENSe ] : EVM : ULINk : DECode : PUSCh

## PUCCH Bits

Selects the decoding type of the PUCCH. It determines how much coding to undo before showing the bits from PUCCH on the Decoded Symbol Table. See 3GPP TS 36.212, Section 5.2.3 for a diagram of the coding operations performed on PUCCH.

- NONE - None, raw PUCCH bits are mapped to resource element locations and shown in the Symbol Table. No PUCCH bits are shown in the Decoded Symbol Table.
- DESCrambled –Descrambled, descrambled (channel coded) bits for each subframe are shown on the Decoded Symbol Table.
- DECodeD - Decoded, decoded bits for each subframe are shown in the Decoded Symbol Table.

### NOTE

**For PUCCH Format 2/2a/2b, where both CQI/PMI and HARQ-ACK bits are jointly encoded, CQI/PMI information bits are listed first in a set of PUCCH bits, followed by HARQ-ACK information bits.**

Remote Command	[ :SENSe ] : EVM : CCARrier0   ...   4 : ULINk : DECode : PUCCh NONE   DESCrambled   DECodeD [ :SENSe ] : EVM : CCARrier0   ...   4 : ULINk : DECode : PUCCh?
Example	: EVM : CCAR0 : ULIN : DEC : PUCCh NONE : EVM : CCAR0 : ULIN : DEC : PUCCh?
Notes	Available when Direction is Uplink
State Saved	Yes
Range	None Descrambled Decoded
Backwards Compatibility SCPI	[ :SENSe ] : EVM : ULINk : DECode : PUCCh

## PUSCH & PUCCH Decode Parameters

Displays a menu that enables you to configure decoding of HARQ-ACK, RI, and CQI/PMI information bits.

Available when Direction is Uplink.

### Info Size parameter

Specifies the number of bits for all PUSCH transmissions for the selected uplink user allocation.

When AutoDet is selected for HARQ-ACK, RI, or CQI/PMI, the corresponding information bit size is auto detected as far as possible.

The possible range of information bits are listed as follows:

- HARQ-ACK bits range: 0-11 bits
- RI bits range: 0-2 bits
- CQI-PMI bits range: 0-128 bits

TIP

**For best demodulation performance, specify Info Size manually.**

### Offset Index parameter

Specifies the value of loffset for HARQ-ACK, RI, and CQI in the tables listed in 3GPP TS 36.213, Section 8.6.3.

The possible range of Offset Index values are as follows:

- HARQ-ACK bits range: 0-14 bits
- RI bits range: 0-12 bits
- CQI-PMI bits range: 2-15 bits

### PUSCH HARQ-ACK Info Size

Specifies the HARQ-ACK information size in bits.

When AutoDet is selected, information size is auto detected as far as possible.

TIP

**For the best demodulation performance, specify Info Size manually.**

```
Remote Command  [:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:HARQ:ISIZe <integer>
                 [:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:HARQ:ISIZe?
                 [:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:HARQ:ISIZe:AUTO OFF | ON | 0
                 | 1
```

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

	<code>[ :SENSe ] :EVM:CCARrier0  ...  4:ULINK:DECode:PUSCh:HARQ:ISIZe:AUTO?</code>
Example	<code>:EVM:CCAR0:ULIN:DEC:PUSC:HARQ:ISIZ 0</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC:HARQ:ISIZ?</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC:HARQ:ISIZ:AUTO 0</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC:HARQ:ISIZ:AUTO?</code>
Dependencies	Available when Direction is Uplink and PUSCH HARQ-ACK Info Size Auto Detect is OFF
Preset	0 ON
State Saved	Yes Yes
Min	0
Max	11
Backwards	<code>[ :SENSe ] :EVM:ULINK:DECode:PUSCh:HARQ:ISIZe</code>
Compatibility SCPI	<code>[ :SENSe ] :EVM:ULINK:DECode:PUSCh:HARQ:ISIZe:AUTO</code>

### PUSCH HARQ-ACK Offset Index

Specifies the value of  $I_{\text{offset}}$  for HARQ-ACK in the tables listed in 3GPP TS 36.213, Section 8.6.3.

Remote Command	<code>[ :SENSe ] :EVM:CCARrier0  ...  4:ULINK:DECode:PUSCh:HARQ:OFFSet &lt;integer&gt;</code> <code>[ :SENSe ] :EVM:CCARrier0  ...  4:ULINK:DECode:PUSCh:HARQ:OFFSet?</code>
Example	<code>:EVM:CCAR0:ULIN:DEC:PUSC:HARQ:OFFS 0</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC:HARQ:OFFS?</code>
Dependencies	Available when Direction is Uplink
Preset	0
State Saved	Yes
Min	0
Max	14
Backwards	<code>[ :SENSe ] :EVM:ULINK:DECode:PUSCh:HARQ:OFFSet</code>
Compatibility SCPI	

### PUSCH RI Info Size

Specifies the RI information size in bits.

When AutoDet is selected, information size is auto detected as far as possible.

**TIP**

For the best demodulation performance, specify Info Size manually.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:RI:ISIZe &lt;integer&gt; [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:RI:ISIZe? [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:RI:ISIZe:AUTO OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:RI:ISIZe:AUTO?</pre>
Example	<pre>:EVM:CCAR0:ULIN:DEC:PUSC:RI:ISIZ 0 :EVM:CCAR0:ULIN:DEC:PUSC:RI:ISIZ? :EVM:CCAR0:ULIN:DEC:PUSC:RI:ISIZ:AUTO 1 :EVM:CCAR0:ULIN:DEC:PUSC:RI:ISIZ:AUTO?</pre>
Dependencies	Available when Direction is Uplink and PUSCH RI Info Size Auto Detect is Off
Preset	0 ON
State Saved	Yes Yes
Min	0
Max	2
Backwards Compatibility SCPI	[ :SENSe]:EVM:ULINK:DECode:PUSCh:RI:ISIZe

### PUSCH RI Offset Index

Specifies the value of  $I_{\text{offset}}$  for RI in the tables listed in 3GPP TS 36.213, Section 8.6.3.

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:RI:OFFSet &lt;integer&gt; [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:RI:OFFSet?</pre>
Example	<pre>:EVM:CCAR0:ULIN:DEC:PUSC:RI:OFFS 1 :EVM:CCAR0:ULIN:DEC:PUSC:RI:OFFS?</pre>
Dependencies	Available when Direction is Uplink
Preset	0
State Saved	Yes
Min	0
Max	12
Backwards Compatibility SCPI	[ :SENSe]:EVM:ULINK:DECode:PUSCh:RI:OFFSet

## PUSCH CQI/PMI Info Size

Specifies the CQI/PMI information size in bits.

When AutoDet is selected, information size is auto detected as far as possible.

**TIP**

**For the best demodulation performance, specify Info Size manually.**

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:CQI:ISIZe &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:CQI:ISIZe?</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:CQI:ISIZe:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:CQI:ISIZe:AUTO?</code>
Example	<code>:EVM:CCAR0:ULIN:DEC:PUSC:CQI:ISIZ 1</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC:CQI:ISIZ?</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC:CQI:ISIZ:AUTO OFF</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC:CQI:ISIZ:AUTO?</code>
Dependencies	Available when Direction is Uplink and PUSCH CQI/RI Info Size Auto Detect is Off
Preset	0 ON
State Saved	Yes Yes
Min	0
Max	128
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:DECode:PUSCh:CQI:ISIZe</code> <code>[ :SENSe]:EVM:ULINK:DECode:PUSCh:CQI:ISIZe:AUTO</code>

## PUSCH CQI/PMI Offset Index

Specifies the value of  $I_{\text{offset}}$  for CQI/PMI in the tables listed in 3GPP TS 36.213, Section 8.6.3.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:CQI:OFFSet &lt;integer&gt;</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUSCh:CQI:OFFSet?</code>
Example	<code>:EVM:CCAR0:ULIN:DEC:PUSC:CQI:OFFS 2</code> <code>:EVM:CCAR0:ULIN:DEC:PUSC:CQI:OFFS?</code>
Preset	2
State Saved	Yes

Min	2
Max	15
Backwards Compatibility SCPI	<code>[ :SENSe ] : EVM : ULINK : DECode : PUSCh : CQI : OFFSet</code>

### PUCCH HARQ-ACK Info Size

Specifies the HARQ-ACK information size in bits.

When AutoDet is selected, information size is auto detected as far as possible.

Remote Command	<code>[ :SENSe ] : EVM : CCARrier0   ...   4 : ULINK : DECode : PUCCh : HARQ : ISIZe &lt;integer&gt;</code> <code>[ :SENSe ] : EVM : CCARrier0   ...   4 : ULINK : DECode : PUCCh : HARQ : ISIZe ?</code> <code>[ :SENSe ] : EVM : CCARrier0   ...   4 : ULINK : DECode : PUCCh : HARQ : ISIZe : AUTO OFF   ON   0   1</code> <code>[ :SENSe ] : EVM : CCARrier0   ...   4 : ULINK : DECode : PUCCh : HARQ : ISIZe : AUTO ?</code>
Example	<code>: EVM : CCAR0 : ULIN : DEC : PUCC : HARQ : ISIZ 0</code> <code>: EVM : CCAR0 : ULIN : DEC : PUCC : HARQ : ISIZ ?</code> <code>: EVM : CCAR0 : ULIN : DEC : PUCC : HARQ : ISIZ : AUTO 0</code> <code>: EVM : CCAR0 : ULIN : DEC : PUCC : HARQ : ISIZ : AUTO ?</code>
Dependencies	Available when Direction is Uplink and PUCCH HARQ-ACK Info Size Auto Detect is Off
Preset	0 ON
State Saved	Yes Yes
Min	0
Max	2
Backwards Compatibility SCPI	<code>[ :SENSe ] : EVM : ULINK : DECode : PUCCh : HARQ : ISIZe</code> <code>[ :SENSe ] : EVM : ULINK : DECode : PUCCh : HARQ : ISIZe : AUTO</code>

#### Info Size parameter

Specifies the number of bits for all PUCCH transmissions for the selected uplink user allocation.

When AutoDet is selected for HARQ-ACK or CQI/PMI, the corresponding information bit size is auto detected as far as possible.

The possible range of information bits are listed as follows:

- HARQ-ACK bits range: 0-2 bits
- CQI-PMI bits range: 0-11 bits

**TIP**

**For best demodulation performance, specify Info Size manually.**

### PUCCH CQI/PMI Info Size

Specifies the CQI/PMI information size in bits.

When AutoDet is selected, information size is auto detected as far as possible.

**TIP**

**For the best demodulation performance, specify Info Size manually.**

Remote Command	<pre>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUCCh:CQI:ISIZe &lt;integer&gt; [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUCCh:CQI:ISIZe? [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUCCh:CQI:ISIZe:AUTO OFF   ON   0   1 [ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:PUCCh:CQI:ISIZe:AUTO?</pre>
Example	<pre>:EVM:CCAR0:ULIN:DEC:PUCC:CQI:ISIZ 0 :EVM:CCAR0:ULIN:DEC:PUCC:CQI:ISIZ? :EVM:CCAR0:ULIN:DEC:PUCC:CQI:ISIZ:AUTO 0 :EVM:CCAR0:ULIN:DEC:PUCC:CQI:ISIZ:AUTO?</pre>
Dependencies	Available when Direction is Uplink and PUCCH HARQ-ACK Info Size Auto Detect is Off
Preset	0 ON
State Saved	Yes Yes
Min	0
Max	11
Backwards Compatibility SCPI	<pre>[ :SENSe]:EVM:ULINK:DECode:PUCCh:CQI:ISIZe [ :SENSe]:EVM:ULINK:DECode:PUCCh:CQI:ISIZe:AUTO</pre>

### TDD ACK/NACK Feedback Mode

Specifies whether the current HARQ ACK/NACK feedback mode is ACK/NACK multiplexing or ACK/NACK bundling. See 3GPP TS 36.212, Section 5.2.2.6 and 3GPP TS 36.213, Section 7.3 for more information.

Remote Command	<code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:ANFMode MULTiplexing   BUNDling</code> <code>[ :SENSe]:EVM:CCARrier0 ... 4:ULINK:DECode:ANFMode?</code>
Example	<code>:EVM:CCAR0:ULIN:DEC:ANFM MULT</code> <code>:EVM:CCAR0:ULIN:DEC:ANFM?</code>
Dependencies	Available when Direction is Uplink
Preset	MULTiplexing
State Saved	Yes
Range	BUNDling   MULTiplexing
Backwards Compatibility SCPI	<code>[ :SENSe]:EVM:ULINK:DECode:ANFMode</code>

### 3.8.9.2 Radio

Contains controls to select link direction.

#### Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

Remote Command	<code>[ :SENSe]:RADio:STANdard:DIRection DLINK   ULINK</code> <code>[ :SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

### 3.8.9.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

#### Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

### Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

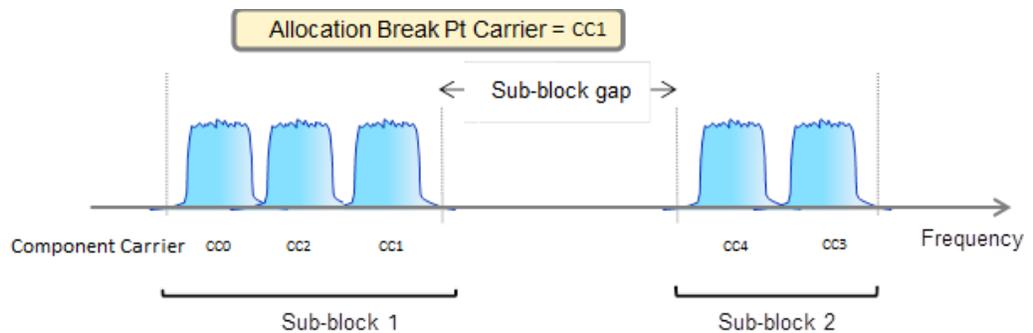

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint CC0   ...   CC4</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

### Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

## Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

## Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

## Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

## Non-Contiguous Break at

See ["Non-Contiguous Break at" on page 2246](#).

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:BANDwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote	<code>[ :SENSe]:CCARrier0 ... 4[:STATe] OFF   ON   0   1</code>
--------	---

Command	<code>[ :SENSe]:CCARrier0 ... 4[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMal   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes

Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe ] :SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :ULDL CONF0   ...   CONF6</code> <code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :ULDL ?</code>
Example	<code>:CCAR0 :RAD :STAN :ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUDDDDDD) CONF4: Configuration 4 (DSUDDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe ] :RADio :STANdard :ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :DGPU CONF0   ...   CONF9</code> <code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :DGPU ?</code>
Example	<code>:CCAR0 :RAD :STAN :DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2

	CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<a href="#">[:SENSe]:RADio:STANdard:DGPU</a>

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<a href="#">[:SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</a> <a href="#">[:SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</a>																
Example	<a href="#">:CCAR0:CHP:BAND:INT 20MHz</a> <a href="#">:CCAR0:CHP:BAND:INT?</a>																
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode																
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>CHP Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.4 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>3 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>10 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>15 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>20 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>200 kHz</td> </tr> </tbody> </table>	System Bandwidth	CHP Integ BW	1.4 MHz (B1M4)	1.4 MHz	3 MHz (B3M)	3 MHz	5 MHz (B5M)	5 MHz	10 MHz (B10M)	10 MHz	15 MHz (B15M)	15 MHz	20 MHz (B20M)	20 MHz	200 kHz(B200K)	200 kHz
System Bandwidth	CHP Integ BW																
1.4 MHz (B1M4)	1.4 MHz																
3 MHz (B3M)	3 MHz																
5 MHz (B5M)	5 MHz																
10 MHz (B10M)	10 MHz																
15 MHz (B15M)	15 MHz																
20 MHz (B20M)	20 MHz																
200 kHz(B200K)	200 kHz																
Preset	5 MHz																
State Saved	Saved in instrument state																

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] :CHPower :BANDwidth :INTEgration</code> <code>[ :SENSe ] :CHPower :BWIDth :INTEgration</code>

### ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :ACPpower :BANDwidth [ 1 ]   2 :INTEgration &lt;freq&gt;</code> <code>[ :SENSe ] :CCARrier0   ...   4 :ACPpower :BANDwidth [ 1 ]   2 :INTEgration ?</code>
Example	<code>:CCAR0 :ACP :BAND :INT 20MHz</code> <code>:CCAR0 :ACP :BAND :INT ?</code>
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRUMENT:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
3 MHz (B3M)	2.715 MHz	2.7 MHz
5 MHz (B5M)	4.515 MHz	4.5 MHz
10 MHz (B10M)	9.015 MHz	9.0 MHz
15 MHz (B15M)	13.515 MHz	13.5 MHz
20 MHz (B20M)	18.015 MHz	18.0 MHz
200 kHz(B200K)	180 kHz	180 kHz

Preset	4.515 MHz 4.5 MHz
State Saved	Yes
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BANDwidth [ :INTEgration ]</code> <code>[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BWIDth [ :INTEgration ]</code>

## SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration?</code>																								
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>																								
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS SEM Integ BW</th> <th>MS SEM Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Saved in instrument state																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:SEMAsk:BANDwidth[1] 2:INTEgration</code>																								

## Carrier Config Presets

Lets you configure the Component Carrier presets.

## Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

## Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

## Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code>

	<code>:CCAR:CONF:SPAC:DELT?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

## ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BAWdth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BAWdth?</code>
Example	<code>:CCAR:CONF:ETC1:BAWdth B5M</code> <code>:CCAR:CONF:ETC1:BAWdth?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

### Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative - Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive - Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive [:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG :CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

### Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K [:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M :CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	---

	<code>[ :SENSe ] :CCARrier :CONFig :ETC3 :BANDwidth ?</code>
Example	<code>:CCAR :CONF :ETC3 :BAND B5M</code> <code>:CCAR :CONF :ETC3 :BAND ?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### 3.8.9.4 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

### System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command `RAD:STAN:PRES B5M` or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote	<code>[ :SENSe ] :RADio :STANdard :PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
--------	--

Command	
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:RADio:STANdard:PRESet:ULDL?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

## Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

### Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[ :SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

### Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>						
Example	<code>:RAD:MINT 1</code>						
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes						
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>						
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH: <table border="1" data-bbox="407 1104 1406 1234"> <thead> <tr> <th>Meas NPRACH</th> <th>Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						
Preset	1						
State Saved	Yes						
Min	1						
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise						
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTime:MINInterval</code>						

## CP Length

Specifies whether the cyclic prefix is configured as NORMAL or EXTENDED for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:CPLength NORMal   EXTended</code> <code>[ :SENSe]:RADio:CPLength?</code>
Example	<code>:RAD:CPL NORM</code>
Notes	The backwards compatible SCPI command <code>[ :SENSe]:PVTTime:CPLength</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to “200 kHz (NB-IoT)” and Direction is “uplink”
Couplings	Set to NORMAl when System BW is set to “200 kHz (NB-IoT)”
Preset	NORMAl
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTTime:CPLength</code>

### Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe]:RADio:MEASure?</code>
Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

### Reference Config

Specifies which component carrier’s ULDL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code>
----------------	--

	<code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.8.9.5 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "[Global Center Freq](#)" on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

### Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "[Restore Defaults](#)" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPlE:FREQuency:CENTer ALL   NONE</code> <code>:INSTRument:COUPlE:FREQuency:CENTer?</code>
----------------	--

Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to <b>OFF</b> on <b>Global Settings</b> , <b>Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL</b>   <b>NONE</b>
Preset	<b>OFF</b>
Backwards Compatibility SCPI	<code>:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF</code> <code>:GLOBal:FREQuency:CENTer[:STATe]?</code>

### Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:EMC:STANdard ALL   NONE</code> <code>:INSTrument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings</b> , <b>Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL</b>   <b>NONE</b>

### Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	<b>ON   OFF</b>

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTRument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

## 3.8.10 Sweep

The Sweep key contains controls which allow you to control the sweep and measurement functions of the analyzer, such as in Single sweep/measure or Continuous sweep/measure mode.

### 3.8.10.1 Sweep/Control

This tab accesses controls that enable you to operate the Sweep and Control functions of the analyzer.

### Sweep/Measure

Allows you to toggle between Continuous and Single sweep or measurement operation. The single/continuous state is Meas Global so the setting affects all measurements.

The front-panel key **Single/Cont** performs this exact same function

See "**More Information**" on page 1779

Remote Command	<code>:INITiate:CONTinuous OFF   ON   0   1</code> <code>:INITiate:CONTinuous?</code>
Example	<code>:INIT:CONT 0 !puts analyzer in Single measurement operation</code> <code>:INIT:CONT OFF !puts analyzer in Single measurement operation</code> <code>:INIT:CONT 1 !puts analyzer in Continuous measurement operation</code> <code>:INIT:CONT ON !puts analyzer in Continuous measurement operation</code>
Preset	ON (Note that SYST:PRESet sets INIT:CONT to ON but *RST sets INIT:CONT to OFF)
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting. A line with an arrow is single, a loop with an arrow is Continuous
Backwards Compatibility Notes	See the description of this control in the Swept SA measurement

## More Information

With **Avg/Hold Num** (in the **Meas Setup** menu) set to **Off** or set to **On** with a value of 1, a sweep is taken after the trigger condition is met; and the analyzer continues to take new sweeps after the current sweep has completed and the trigger condition is again met. However, with **Avg/Hold Num** set to **On** with a value >1, multiple sweeps (data acquisitions) are taken for the measurement. The trigger condition must be met prior to each sweep. The sweep is not stopped when the average count k equals the number N set for Avg/Hold Num is reached, but the number k stops incrementing. A measurement average usually applies to all traces, marker results, and numeric results. But sometimes it only applies to the numeric results.

If the analyzer is in Single measurement, pressing the **Cont/Single** toggle control does not change k and does not cause the sweep to be reset; the only action is to put the analyzer into Continuous measurement operation.

If it is already in continuous sweep:

- the INIT:CONT 1 command has no effect
- the INIT:CONT 0 command places the analyzer in Single Sweep but has no effect on the current sequence until k = N, at which point the current sequence stops and the instrument goes to the idle state.

See "[Restart " on page 1780](#)"[Restart " on page 1780](#) control description for details on the INIT:IMMEDIATE (Restart) function.

If you are already in single sweep, the INIT:CONT OFF command has no effect.

If you are already in Single Sweep, pressing the **Cont/Single** toggle control in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing the **Cont/Single** toggle control does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the analyzer is waiting for a trigger). Even though pressing the **Cont/Single** toggle control in the middle of a sweep does not restart the sweep, sending INIT:IMMEDIATE does reset it.

## Restart

The Restart function restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing Restart does a Resume.

The front-panel key **Restart** performs this exact same function

The Restart function is accessed in several ways:

- Pressing the Restart key
- Sending the remote command INIT:IMMEDIATE
- Sending the remote command INIT:RESTART

See ["More Information" on page 1781](#)

Remote Command	:INITiate[:IMMEDIATE] :INITiate:RESTART
Example	:INIT:IMM :INIT:REST
Notes	:INITiate:RESTART and :INITiate:IMMEDIATE perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update=on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The STATUS:OPERation register bits 0 through 8 are cleared The STATUS:QUESTIONable register bit 9 (INTEGRity sum) is cleared The SWEEPING bit is set The MEASURING bit is set
Backwards Compatibility Notes	For Spectrum Analysis mode in ESA and PSA, the <b>Restart</b> hardkey and the INITiate:RESTART command restart trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b>  In the X-Series, the <b>Restart</b> hardkey and the INITiate:RESTART command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well  For wireless comms modes in ESA and PSA, the <b>Restart</b> hardkey and the INITiate:RESTART command restart every measurement, which includes all traces and numeric results. There is no change to this operation

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is in the process of aligning when a Restart is executed, the alignment finishes before the restart function is performed.

Even when set for Single operation, multiple sweeps may be taken when Restart is pressed (for example, when averaging/holding is on). Thus when we say that Restart "restarts a measurement," we may mean:

- It restarts the current sweep
- It restarts the current measurement
- It restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- It restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement depending on the current settings.

With Average/Hold Number (in Meas Setup menu) set to 1, or Averaging off, or no trace in Trace Average or Hold, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the analyzer stops sweeping once that sweep has completed. However, with Average/Hold Number >1 and at least one trace set to Trace Average, Max Hold, or Min Hold (SA Measurement) or Averaging on (most other measurements), multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count  $k$  equals the number  $N$  set for Average/Hold Number. A measurement average usually applies to all traces, marker results, and numeric results; but sometimes it only applies to the numeric results.

Once the full set of sweeps has been taken, the analyzer enters into an idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the step up key while Average/Hold Number is the active function, or sending the remote command `CALC:AVER:TCON UP`.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the control changes to Resume. Pressing Resume un-pauses the measurement. When you are Paused, pressing **Restart** does a Resume.

Remote Command	<code>:INITiate:PAUSe</code>
Example	<code>:INIT:PAUS</code>
Dependencies	Not displayed in Modes that do not support Pausing
Annotation	Only on control

Remote Command	<code>:INITiate:RESume</code>
Example	<code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support Pausing
Annotation	Only on control

### Abort (Remote Command Only)

This command is used to stop the current measurement. It aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the analyzer is in the process of aligning when ABORt is sent, the alignment finishes before the abort function is performed. So ABORt does not abort an alignment.

If the analyzer is set for Continuous measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is set for Single measurement, it remains in the "idle" state until an :INIT:IMM command is received.

Remote Command	<code>:ABORt</code>
Example	<code>:ABOR</code>
Notes	If :INITiate:CONTinuous is ON, then a new continuous measurement starts immediately, with sweep (data acquisition) occurring once the trigger condition has been met If :INITiate:CONTinuous is OFF, then :INITiate:IMMEDIATE is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, ABORt is equivalent to the Restart key Not all measurements support the abort command
Status Bits/OPC dependencies	The STATus:OPERation register bits 0 through 8 are cleared The STATus:QUESTionable register bit 9 (INTegrity sum) is cleared Since all the bits that feed into OPC are cleared by the ABORt, the ABORt causes the *OPC query to return true

### 3.8.10.2 X Scale

This tab accesses controls that enable you to set the horizontal scale parameters.

## Auto Scaling

Causes the trace to display all available trace data when set to Auto.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:COUPle OFF   ON   0   1</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:COUPle?</code>
Example	<code>:DISP:EVM:WIN1:X:COUP ON</code> <code>:DISP:EVM:WIN1:X:COUP?</code>
Couplings	When Auto Scaling is On and the Restart front-panel key is pressed, this function automatically determines XReference Value and X Width values based on the measurement results When X Reference Value or X Width is set by user manually, Auto Scaling automatically changes to Off
Preset	ON
State Saved	Saved in instrument state
Range	On Off
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:X[:SCALE]:COUPle OFF   ON   0   1</code>

## Ref Value

Controls the X value of the selected trace at the chosen X Reference Position.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:RLEVe1 &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:RLEVe1?</code>
Example	<code>:DISP:EVM:WIND:X:RLEV 1e9</code> <code>:DISP:EVM:WIND:X:RLEV?</code>
Couplings	If X Scale is set to Auto, the X Reference Value is determined by the trace data and this key is grayed out.
Preset	Depends on trace
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:X[:SCALE]:RLEVe1 &lt;real&gt;</code>

## Width

Set the width of the X axis which is displayed for the selected trace. The X width can be set less than the Span for frequency-domain traces, enabling you to zoom in on just a portion of the measured values. Likewise, it can be less than time span covered by time-domain data. This plus the X Reference Value and X Reference Position control the range of X values that can be displayed on a trace. For example, if the X Reference position is Center, the X Reference value is 1 GHz and the X Width is 20 MHz.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:SPAN &lt;real&gt;</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:SPAN?</code>
Example	<code>:DISP:EVM:WIND:X:SPAN 10e6</code> <code>:DISP:EVM:WIND:X:SPAN?</code>
Couplings	If X Scale is set to Auto, the X Width is determined by the trace data and this key is grayed out.
Preset	Depends on trace
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:X[:SCALE]:SPAN &lt;real&gt;</code>


## Ref Position

Determines the position from which the X scaling is calculated for the selected trace. It can be set to the left side, center, or right side of the grid.

Remote Command	<code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:RPOSition LEFT   CENTer   RIGHT</code> <code>:DISPlay:EVM:WINDow[1] 2 ... 9:X[:SCALE]:RPOSition?</code>
Example	<code>:DISP:EVM:WIND1:X:RPOS LEFT</code> <code>:DISP:EVM:WIND1:X:RPOS?</code>
Couplings	If X Scale is set to Auto, the X Reference Position is determined by the trace data and this key is grayed out.
Preset	CENT
State Saved	Yes
Range	Left Ctr Right
Backwards Compatibility SCPI	<code>:DISPlay:EVM:TRACe[1] 2 ... 6:X[:SCALE]:RPOSition LEFT   CENTer   RIGHT</code>

## Freq Annotation

Controls how Spectrum and PSD traces are annotated when their X Scale is set to Auto. If Freq Annotation is set to Center/Span, the X-axes on windows containing frequency domain traces are labeled with the center frequency on the left and the span on the right. If the Freq Annotation is set to Start/Stop, then the start and stop frequencies appear in place of center and span. If the X Scale is manual, then this annotation style does not apply.

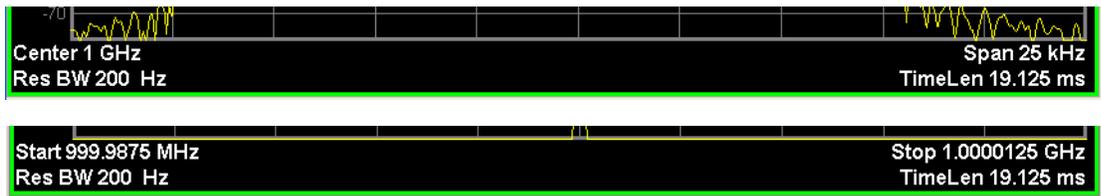

Remote Command	<code>:DISPlay:EVM:FANotation CSPan   SStop</code>
Example	<code>:DISP:EVM:FANN CSP</code> <code>:DISP:EVM:FANN?</code>
Preset	CSP
State Saved	Yes
Range	Center/Span   Start/Stop
Annotation	Depending on setting, frequency domain axes are labeled Center <number> <unit prefix>Hz Span <number> <unit prefix>Hz or Start <number> <unit prefix>Hz Stop <number> <unit prefix>Hz This annotation only applies to a frequency-domain trace if X Scale is set to Auto for that trace

## All Frequency Points

Spectrum trace data (and PSD) are based on the FFT algorithm. By default, the outer edges of the spectrum are not displayed because they can show spurious results that are aliases of real signals that are not completely filtered out by the IF filter. For example, in the case of a 1024 point FFT only 801 points are displayed. If you want to view the additional FFT points at the edges of spectral displays, turn this function on. It is global to all traces, not specific to a single trace.

Remote Command	<code>:DISPlay:EVM:AFPpoints OFF   ON   0   1</code>
Example	<code>:DISP:EVM:AFP ON</code> <code>:DISP:EVM:AFP?</code>

Couplings	Only applies if trace is showing Spectrum or PSD results
Preset	OFF
State Saved	Yes
Range	On   Off
Annunciation	Spectrum and PSD traces show the "ALL POINTS" enunciator in the upper right corner of the grid when this function is on. This metadata is saved with the trace if it is copied to a register or saved in a file

### 3.8.10.3 Recording

Displays the Sample Rate, Sample Points and Sample Time of the saved IQ data file.

Recording and playback of signal data files is a multi-step process that involves controls in several menus:

- **Save, Recording** (under the **Save** hardkey or the **Save** icon in the **File** panel)
- **Recall, Recording** (under the **Recall** hardkey or the **Recall** icon in the **File** panel)
- **Sweep, Recording** (this tab)
- **Sweep, "Playback"** on page 1787
- **Input/Output, "Data Source"** on page 2649

**NOTE**

A complete tutorial for **Record/Playback** functionality, including how to load and save recording files, can be found in the help for the tab **"Data Source"** on page 2649 under **Input/Output**.

This menu includes the following display-only fields:

#### Sample Rate

Displays the sample rate of the saved IQ data file. If you have not saved an IQ data file, the value is 0.

#### Sample Points

Displays the total number of sample points in the saved IQ data file. If you have not saved an IQ data file, the value is 0.

## Sampling Time

Displays the total sample time of the saved IQ data file. If you have not saved an IQ data file, the value is 0.

## Saved Channels [Mode: 5G NR, VMA, WLAN]

Displays the channel index/number of the saved IQ data file. If you have not saved an IQ data file, no value is displayed.

This control is designed for multi-channel I/Q data recording and playback.

### 3.8.10.4 Playback

Contains parameters for playback of saved recording files recalled to the instrument.

Recording and playback of signal data files is a multi-step process that involves controls in several menus:

- **Save, Recording** (under the **Save** hardkey or the **Save** icon in the **File** panel)
- **Recall, Recording** (under the **Recall** hardkey or the **Recall** icon in the **File** panel)
- **Sweep, "Recording"** on page 1786
- **Sweep, Playback** (this tab)
- **Input/Output, "Data Source"** on page 2649

#### NOTE

A complete tutorial for **Record/Playback** functionality, including how to load and save recording files, can be found in the help for the tab **"Data Source"** on page 2649 under the **Input/Output** menu.

---

This menu includes the following display-only fields:

## Sample Points

Displays the total number of sample points in the recalled IQ data file. If you have not recalled an IQ data file, the value is 0.

## Sampling Time

Displays the total sample time of the recalled IQ data file. If you have not recalled an IQ data file, the value is 0.

## Input Channels [Mode: 5GNR, VMA, WLAN]

Displays the input channel number of the recalled IQ data file. If you have not recalled an IQ data file, the default value of 1 is displayed.

This control is designed for multi-channel I/Q data recording and playback.

## Playback Mode

Specifies the mode of IQ data to be played back and analyzed:

- Fixed: Playback Stop value is ignored. Measurement will analyze the first chunk of IQ data start from Playback Start repeatedly
- Iterative: Measurement will analyze the IQ data chunk by chunk between Playback Start and Playback Stop, if the last chunk is not complete it will be ignored and start from the first chunk again

Remote Command	<code>:CALCulate:&lt;meas&gt;:PLAY:MODE FIXed   ITERative</code> <code>:CALCulate:&lt;meas&gt;:PLAY:MODE?</code>
Example	Where <code>&lt;meas&gt;</code> is the mnemonic for the current measurement, for example, <code>EVM</code> For EVM measurement in 5G NR Mode: <code>:CALC:EVM:PLAY:MODE CONT</code> <code>:CALC:EVM:PLAY:MODE?</code>
Preset	<code>FIX</code>
State Saved	Saved in instrument state
Range	Fixed   Iterative

## Playback Start

Once you have loaded an IQ data file using **Recall, Recording**, this control enables you to specify the start position of the IQ data playback range to be analyzed. If its value is less than zero, an additional zero is inserted at the beginning of the IQ data.

To go to a specific location in the recalled I/Q data, enter the desired **Playback Start** point.


3 LTE & LTE-A TDD Mode  
 3.8 Modulation Analysis Measurement

You can use this control to examine the data you recalled from the recording file. How you proceed depends on whether you are in **Continuous** or **Single** mode. To determine which mode you are in, look at the first panel on the left in the **Meas Bar** above the data display.

If the panel looks like this, you are in **Continuous** mode:



If the panel looks like this, you are in **Single** mode:

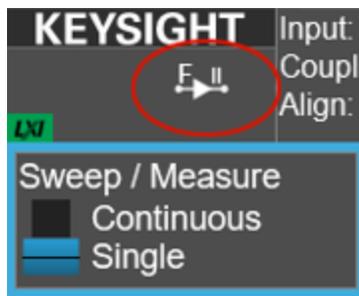

The **F** indicates that the instrument is using data from a file (if you wish to return to looking at data at the analyzer input, change the **Data Source** control in the **Input/Output, Data Source** menu from **File** back to **Input**.)

To examine the data you loaded:

Continuous mode

In this mode, turn the knob or use the **Up/Down** keys on the front panel to move through records in the recording. You will see **Playback Start** change from 0 to successively higher values as you move deeper into the data.

Single mode

In this mode, you can only look at one record. Set the **Playback Start** time to the desired offset from zero, then press **Restart**. A single record will be displayed. Note that until you press **Restart**, the “invalid data” indicator (yellow asterisk) is displayed in each window. After you press **Restart**, the invalid data indicator disappears.

---

Remote Command      `:CALCulate:<meas>:PLAY:START <time>`  
                          `:CALCulate:<meas>:PLAY:START?`

Where `<meas>` is the mnemonic for the current measurement, for example, `EVM`

---

Example                For EVM measurement in 5G NR Mode:  
                          `:CALC:EVM:PLAY:STAR 0.01 s`  
                          `:CALC:EVM:PLAY:STAR?`

Preset	0
State Saved	Saved in instrument state
Min/Max	-/+Sample Points in IQ file / Sample Rate in IQ file

## Playback Stop

Specifies the stop position of the IQ data playback range to be analyzed, when "Playback Mode" is iterative.

Remote Command	<code>:CALCulate:&lt;meas&gt;:PLAY:STOP &lt;time&gt;</code> <code>:CALCulate:&lt;meas&gt;:PLAY:STOP?</code>
	Where <code>&lt;meas&gt;</code> is the mnemonic for the current measurement, for example, <code>EVM</code>
Example	For EVM measurement in 5G NR Mode: <code>:CALC:EVM:PLAY:STOP 0.01 s</code> <code>:CALC:EVM:PLAY:STOP?</code>
Preset	0
State Saved	No
Min	0
Max	Sample Points in IQ file x Sample Rate

## Step Forward

Move to next chunk of IQ data when "Playback Mode" on page 1788 is iterative.

Remote Command	<code>:CALCulate:&lt;meas&gt;:PLAY:STEP:FORward</code>
	Where <code>&lt;meas&gt;</code> is the mnemonic for the current measurement, for example, <code>EVM</code>
Example	For EVM measurement in 5G NR Mode: <code>:CALC:EVM:PLAY:STEP:FORW</code>
State Saved	Saved in instrument state

## Sample Rate

Displays the sample rate of the recalled IQ data file if the recalled file format contains sampling rate information (`.csv`, `.sdf`, `.txt`). In this case, the *control* is grayed-out.

`BIN` and `BINX` files do not include sampling rate information inside the file, so after recalling one of these files, you must set **Sample Rate** manually. When you save a file in these formats, you must specify the sample rate, as displayed under **Sweep, Recording**.

3 LTE & LTE-A TDD Mode  
3.8 Modulation Analysis Measurement

Remote Command	<code>:CALCulate:&lt;meas&gt;:PLAY:SRATe &lt;freq&gt;</code> <code>:CALCulate:&lt;meas&gt;:PLAY:SRATe?</code> Where <code>&lt;meas&gt;</code> is the mnemonic for the current measurement, for example, <code>EVM</code>
Example	For EVM measurement in 5G NR Mode: <code>:CALC:EVM:PLAY:SRAT 122.88MHz</code> <code>:CALC:EVM:PLAY:SRAT?</code>
Couplings	Displays only after recalling <code>.csv</code> , <code>.sdf</code> , or <code>.txt</code> files Settable after recalling <code>.bin</code> or <code>.binx</code> files
Preset	0
State Saved	No
Min	0

### 3.8.11 Trace

Trace function is not supported in LTE & LTE-A FDD Modulation Analysis measurements.

## 3.9 Conformance EVM

The LTE-Advanced Conformance EVM measurement (CEVM) focuses on speed. The core functionality is almost the same as the LTE-Advanced Modulation Analysis measurement (EVM); however, the measurement algorithm and the items of result are tailored for the speed and therefore some of the functionalities and results are excluded or limited. The user can get the same result as the Error Summary on EVM for every component carrier.

All available measurement parameters are accessible through RUI (SCPI). CEVM doesn't have controls for setting parameters except for some common keys. The measurement has four views. Three views are shown in tabular form.

LTE-Advanced aggregates multiple LTE carriers (up to 5) to obtain a collective transmission bandwidth of up to 100 MHz. **The CEVM measurement supports aggregated carriers and allows you to measure LTE-Advanced signals according to 3GPP TS 36.211. Once you have configured the measurement, you can use these commands to initiate the measurement and retrieve the measurement results.**

["Measurement Commands for CEVM " on page 1792](#)

["Remote Command Results for LTE-A CEVM Measurement" on page 1792](#)

["Remote Command Results for NB-IoT CEVM Measurement" on page 1800](#)

["Remote Command Results for LTE V2X CEVM Measurement" on page 1802](#)

### Measurement Commands for CEVM

This section details remote commands and results. For the front-panel configuration and results, see ["Display" on page 1856](#). For more SCPI commands that are supported in CEVM measurements, see ["CEVM SCPI List" on page 1805](#).

```
:CONFigure:CEVM
:CONFigure:CEVM:NDEFault
:FETCh:CEVM[n]?
:INITiate:CEVM
:MEASure:CEVM[n]?
:READ:CEVM[n]?
```

### Remote Command Results for LTE-A CEVM Measurement

The following table denotes the Conformance EVM specific results returned from the (FETCh|MEASure|READ):CEVM commands, indexed by subopcode.

3 LTE & LTE-A TDD Mode  
 3.9 Conformance EVM

MEASure:CEVM<n> is equivalent to CONF:CEVM;INIT:IMM:FETCh:CEVM<n>, which gets you the default measurement, that is, 5 MHz downlink with auto detection of allocations.

For queries listed in section, the results returned depend on the value of n, as follows.

Index N	Results Returned
Not specified or n=1	<p>Returns measurement results of Component Carriers 0 when it is active. All the return values are floating points.</p> <p><b>LTE-Advanced Downlink Results For Each Component Carrier</b></p> <p>The result contents are customizable. See Downlink Result Output Selection (SCPI only) section for details. If no result is available, NaN (9.91E+37) is returned.</p> <ol style="list-style-type: none"> <li>1. EVM (%)</li> <li>2. EVM Symbol Time Adjust</li> <li>3. 1: Window Start</li> <li>4. 2: Window End</li> <li>5. 3: Center</li> <li>6. 4: Custom</li> <li>7. EVM Pk (%)</li> <li>8. EVM Pk Index</li> <li>9. EVM Peak Sub Car Index</li> <li>10. Data EVM (%) – Not available when Detection is Manual and no User is added.</li> <li>11. 3GPP-defined QPSK EVM (%)</li> <li>12. 3GPP-defined 16QAM EVM (%)</li> <li>13. 3GPP-defined 64QAM EVM (%)</li> <li>14. RS EVM (%)</li> <li>15. RS Tx. Power (dBm)</li> <li>16. OFDM Symbol Tx. Power (dBm)</li> <li>17. Frequency Error (Hz)</li> <li>18. Sync Correlation (%)</li> <li>19. Sync Type</li> <li>20. 1: P-SS</li> </ol>

Index N	Results Returned
21.	20: Ant Port 0 RS
22.	21: Ant Port 1 RS
23.	22: Ant Port 2 RS
24.	23: Ant Port 3 RS
25.	Common Tracking Error (%)
26.	Symbol Clock Error (ppm)
27.	Time Offset (s)
28.	IQ Offset (dB)
29.	IQ Gain Imbalance (dB)
30.	IQ Quad Error (deg)
31.	IQ Timing Skew (s)
32.	CP Length Mode
33.	1: Normal
34.	2: Extended
35.	Cell ID
36.	Cell ID Group/Sector
37.	Integer part: Cell ID Group, After the decimal point: Cell ID Sector
38.	RS-OS/PRS
39.	1: 3GPP
40.	4: Custom
41.	Reference Signal Rx Power (dBm)
42.	Reference Signal Rx Quality (dB)
43.	Received Signal Strength Indicator (dBm)
44.	Channel Power(dBm)
45.	3GPP-defined 256QAM EVM (%)
46.	3GPP-defined 1024QAM EVM (%rms)

The result is available only when higher order modulation is enabled with the required license in LTE-Advanced applications

Index N	Results Returned
	<p><b>LTE-Advanced Uplink Results For Each Component Carrier</b></p> <p>The result contents are customizable. See Uplink Result Output Selection for details. If no result is available, NaN (9.91E+37) is returned.</p> <ol style="list-style-type: none"> <li>1. EVM (%)</li> <li>2. EVM Symbol Time Adjust</li> <li>3. 1: Window Start</li> <li>4. 2: Window End</li> <li>5. 3: Center</li> <li>6. 4: Custom</li> <li>7. EVM Pk (%)</li> <li>8. EVM Pk Index</li> <li>9. EVM Peak Sub Car Index</li> <li>10. Data EVM (%) – Not available when Detection is Manual and no User is added.</li> <li>11. 3GPP-defined QPSK EVM (%)</li> <li>12. 3GPP-defined 16QAM EVM (%)</li> <li>13. 3GPP-defined 64QAM EVM (%)</li> <li>14. RS EVM (%)</li> <li>15. NaN (9.91E+37) returned.</li> <li>16. NaN (9.91E+37) returned.</li> <li>17. Frequency Error (Hz)</li> <li>18. Sync Correlation (%)</li> <li>19. Sync Type</li> <li>20. 2: PUSCH-DMRS</li> <li>21. 3: PUCCH-DMRS</li> <li>22. 4: SRS</li> <li>23. 5: PRACH</li> <li>24. Common Tracking Error (%)</li> <li>25. Symbol Clock Error (ppm)</li> </ol>

Index N	Results Returned
	26. Time Offset (s)
	27. IQ Offset (dB)
	28. IQ Gain Imbalance (dB)
	29. IQ Quad Error (deg)
	30. IQ Timing Skew (s)
	31. CP Length Mode
	32. 1: Normal
	33. 2: Extended
	34. Channel Power (dBm)
	35. In-band Emissions Result
	0: PASS
	1: FAIL
	36. In-band Emissions worst Margin (dB)
	37. In-band Emissions worst Slot
	38. In-band Emissions worst RB
	39. Spectral Flatness Result
	0: PASS
	1: FAIL
	40. Spectral Flatness worst Margin (dB)
	41. Spectral Flatness worst Slot
	42. Spectral Flatness worst Subcarrier
	43. 3GPP-defined 256QAM EVM (%)
2	Returns result of Equalizer Frequency Response Per Slot for CC0. The result length varies depending on the Bandwidth and Measurement Interval. For example, BW=5MHz and Result Length & Meas Interval Slot=20 slots, 12,000 points are returned. The first 600 points are 300 IQ pairs of EQ response of Slot 0 from the lowest to the highest frequency, and the second 600 points are those of Slot 1, and so on. Each slot (=EC(f)) is divided into EC_1(f) for Range1 and EC_2(f) for Range2, and then RP1, RP2, RP12 or RP21 is calculated in each region.
3	<b>Error Information of each Component Carrier</b> Returns total error information of each <b>Component Carrier</b> . The values are bitwise OR operated on the Error Information as follows:

Index N	Results Returned	Decimal	Binary
	Error Information	Decimal	Binary
	No Error	0	0x00000000
	Parameter Setting Conflict	1	0x00000001
	ADC OverRange	2	0x00000010
	Sync Error	4	0x00000100
	Demod Error	8	0x00001000
	Burst Not Found	16	0x00010000

For example, if ADC Over Range and Sync Error occurred, the value is 6.

The total result length is variable. The returned contents vary depending on the total number of Component Carriers, which is specified by Num Component Carriers in Component Carriers Setup.

Returns the following scalar results:

1. **Total Error Information of CC0.**
2. **Total Error Information of CC1.**
3. ...

**nCarr. Total Error Information of the last carrier.**

Where nCarr is the number of carriers to be measured.

4

Returns cross-carriers results like Time Alignment Error.

The first result indicate the max TAE between all component carriers, it is calculated by comparing the Time Offset of every component carrier with all the other component carriers, then calculate the time alignment error between the two with biggest difference.

The second result indicates the two component carriers which have the max TAE among all component carriers. The result is given out in the form of one floating point number. Integer part is the index of one Component Carrier, After the decimal point is the index for the other Component Carrier.

1. TAE Max (s)
2. TAE Max is between.
3. Integer part: the index of one Component Carrier, After the decimal point: the index for the other Component Carrier.
4. Reserved.
5. Reserved.
6. Reserved.
7. Reserved.
8. Reserved.

Index N	Results Returned
	9. Reserved.
	10. Reserved.
	11. Reserved.
5	<p>Returns 3 results for each active Component Carrier, they are I offset, Q offset and IQ offset.</p> <p>For example, if CC0 and CC4 are active, 6 values will be returned, the first 3 values are for CC0 and the next 3 values are for CC4.</p> <ol style="list-style-type: none"> <li>1. I Offset (Average) in Volts</li> <li>2. Q Offset(Average) in Volts</li> <li>3. IQ Offset(Average) in dB</li> </ol>
6	<p>Returns the results of Inband Emission Power per RB for CC0. The result length varies depending on the Bandwidth. (LTE-Advanced Uplink Results. The queried results are meaningless for Downlink)</p> <ol style="list-style-type: none"> <li>1 Average Power of Active RBs - the average absolute power of allocated RBs in dBm</li> <li>2 Number of RBs - the number of RBs in current configuration</li> <li>3~(2+Number of RBs) Power Per RB - the absolute power (dBm) per RB</li> </ol>
7	<p>Returns the results of Inband Emission Power Margin per RB for CC0. The result length varies depending on the Bandwidth. (LTE-Advanced Uplink Results. The queried results are meaningless for Downlink)</p> <ol style="list-style-type: none"> <li>1 Minimal Inband Margin - Inband margin is the difference between the inband emission limit mask and actual measured power per non-allocated RB. Which means the margin = (Limit - Power ) in dB, and a negative margin stands for the power exceeds the limit.</li> <li>2 Minimal Inband Margin Index - the RB index of minimal margin results (ZERO based)</li> <li>3 Number of RBs - the number of RBs in current configuration</li> <li>4~(3+Number of RBs) Inband Margin per RB - The Margin result of each RB. If the RB is active (allocated), the inband margin result will be set to NAN.</li> </ol>
8	<p>Returns the results of Spectral Flatness Ripple for CC0. (LTE-Advanced Uplink Results. The queried results are meaningless for Downlink)</p> <ol style="list-style-type: none"> <li>1. RP 1 Value - maximum Ripple in Range 1</li> <li>2. RP 2 Value - maximum Ripple in Range 2</li> <li>3. RP 12 Value - the maximum ripple between the upper side of Range 1 and lower side of Range 2</li> </ol>

3 LTE & LTE-A TDD Mode  
 3.9 Conformance EVM

Index N	Results Returned
	4. RP 21 Value - the maximum ripple between the upper side of Range 2 and lower side of Range 1 5. Min Ec(f)1 - the minimum EC(f) in Range 1 6. Max Ec(f)1 - the maximum EC(f) in Range 1 7. Min Ec(f)2 - the minimum EC(f) in Range 2 8. Max Ec(f)2 - the maximum EC(f) in Range 2
9	Returns the results of Spectral Flatness Equalizer Channel Frequency for CCO. The result length varies depending on the Bandwidth. (LTE-Advanced Uplink Results. The queried results are meaningless for Downlink)
	1 RP 1 Pass/Fail Result - 0:Pass, 1:Fail, -1:Not tested 2 RP 1 Value - maximum Ripple in Range 1 3 RP 2 Pass/Fail Result - 0:Pass, 1:Fail, -1:Not tested 4 RP 2 Value - maximum Ripple in Range 2 5 RP 12 Pass/Fail Result - 0:Pass, 1:Fail, -1:Not tested 6 RP 12 Value - the maximum ripple between the upper side of Range 1 and lower side of Range 2 7 RP 21 Pass/Fail Result - 0:Pass, 1:Fail, -1:Not tested 8 RP 21 Value - the maximum ripple between the upper side of Range 2 and lower side of Range 1 9 Number of subcarriers 10 ~ (9+Number of subcarriers) Equalizer Coefficients - EC(f)
10	Returns measurement results for <b>Component Carrier 1</b> when it is active. All the return values are floating points. The result fields and detailed description see the first row ( n=1) of this table
11	Returns measurement results for <b>Component Carrier 2</b> when it is active. All the return values are floating points. The result fields and detailed description see the first row ( n=1) of this table
12	Returns measurement results for <b>Component Carrier 3</b> when it is active. All the return values are floating points. The result fields and detailed description see the first row ( n=1) of this table
13	Returns measurement results for <b>Component Carrier 4</b> when it is active. All the return values are floating points. The result fields and detailed description see the first row ( n=1) of this table

## Remote Command Results for NB-IoT CEVM Measurement

For queries listed in section, the results returned depend on the value of n, as follows.

N	Results Returned
Not specified or n=1	<p>Returns measurement results for NB-IoT Carrier when it is active. All the return values are floating points. NB-IoT Downlink Results If no result is available, NaN (9.91E+37) is returned.</p> <ol style="list-style-type: none"> <li>1. EVM (%)</li> <li>2. EVM Pk (%)</li> <li>3. EVM Pk Index</li> <li>4. EVM Peak Sub Car Index</li> <li>5. Data EVM (%) – Not available when Detection is Manual and no User is added.</li> <li>6. RS EVM (%)</li> <li>7. RS Tx. Power(dBm)</li> <li>8. OFDM Symbol Tx. Power (dBm)</li> <li>9. Frequency Error (Hz)</li> <li>10. Sync Correlation (%)</li> <li>11. Common Tracking Error (%)</li> <li>12. Symbol Clock Error (ppm)</li> <li>13. Time Offset (s)</li> <li>14. IQ Offset (dB)</li> <li>15. IQ Gain Imbalance (dB)</li> <li>16. IQ Quad Error (deg)</li> <li>17. IQ Timing Skew (s)</li> <li>18. Cell ID</li> <li>19. Cell ID Group/Sector  Integer part: Cell ID Group, After the decimal point: Cell ID Sector</li> <li>20. Reference Signal Rx Power (dBm)</li> </ol>

### 3 LTE & LTE-A TDD Mode

#### 3.9 Conformance EVM

21. Reference Signal Rx Quality(dB)
22. Received Signal Strength Indicator (dBm)
23. Channel Power (dBm)
24. EVM Symbol Time Adjust [ 1: Window Start; 2: Window End; 3: Center; 4: Custom]

##### NB-IoT Uplink Results

If no result is available, NaN (9.91E+37) is returned.

1. EVM (%)
2. EVM Pk (%)
3. EVM Pk Index
4. EVM Peak Sub Car Index
5. Data EVM (%) – Not available when Detection is Manual and no User is added.
6. RS EVM (%)
7. NaN (9.91E+37) returned.
8. NaN (9.91E+37) returned.
9. Frequency Error (Hz)
10. Sync Correlation (%)
11. Common Tracking Error (%)
12. Symbol Clock Error (ppm)
13. Time Offset (s)
14. IQ Offset (dB)
15. IQ Gain Imbalance (dB)
16. IQ Quad Error (deg)
17. IQ Timing Skew (s)
18. Channel Power (dBm)
19. In-band Emissions Result
20. In-band Emissions Worst Margin (dB)
21. In-band Emissions Worst Slot
22. In-band Emissions Worst subcarrier

23. RU Index for Single tone (NaN(9.91E+37) for Multi-tone)
24. EVM Symbol Time Adjust [ 1: Window Start; 2: Window End; 3: Center; 4: Custom]
25. RU Tones (N\_RU\_sc) [0: 1 Tone; 1: 3 Tones; 2: 6 Tones; 3:12 Tones]
26. Subcarrier Spacing ( $\Delta f$ ) [0:3.75 kHz; 1:15 kHz]
27. NPUSCH Format
28. NPUSCH Subcarrier Indication Filed (lsc)
29. Base Sequence Index (u)
30. NPUSCH T1 Modulation Type [1003: pi/2 BPSK; 1004: pi/4 QPSK]

### Remote Command Results for LTE V2X CEVM Measurement

The following table denotes the Conformance EVM specific results returned from the (FETCh|MEASure|READ):CEVM commands, indexed by sub-opcode. MEASure:CEVM<n> is equivalent to CONF:CEVM; INIT:IMM:FETCh:CEVM<n>, which gets you the default measurement, that is, 5 MHz uplink with auto detection of allocations.

For queries listed in section, the results returned depend on the value of n, as follows.

Index N	Results Returned
Not specified or n=1	Sidelink Results If no result is available, NaN (9.91E+37) is returned. <ol style="list-style-type: none"> <li>1. EVM (%)</li> <li>2. EVM Symbol Time Adjust <ol style="list-style-type: none"> <li>1: Window Start</li> <li>2: Window End</li> <li>3: Center</li> <li>4: Custom</li> </ol> </li> <li>3. EVM Pk (%)</li> <li>4. EVM Pk Index</li> <li>5. EVM Peak Sub Car Index</li> <li>6. Data EVM (%) – Not available when Detection is Manual and no User is added.</li> <li>7. 3GPP-defined QPSK EVM (%)</li> </ol>

3 LTE & LTE-A TDD Mode  
 3.9 Conformance EVM

Index N	Results Returned
	8. 3GPP-defined 16QAM EVM (%)
	9. 3GPP-defined 64QAM EVM (%)
	10. RS EVM (%)
	11. NaN (9.91E+37) returned (Reserved for future)
	12. NaN (9.91E+37) returned (Reserved for future)
	13. Frequency Error (Hz)
	14. Sync Correlation (%)
	15. Sync Type
	11: DM-RS
	12: PSSS
	16. Common Tracking Error (%)
	17. Symbol Clock Error (ppm)
	18. Time Offset (s)
	19. IQ Offset (dB)
	20. IQ Gain Imbalance (dB)
	21. IQ Quad Error (deg)
	22. IQ Timing Skew (s)
	23. NaN (9.91E+37) returned (Reserved for future)
	24. Channel Power (dBm)
	25. In-band Emissions Result
	26. In-band Emissions worst Margin (dB)
	27. In-band Emissions worst Slot
	28. In-band Emissions worst RB
	29. Spectral Flatness Result
	30. Spectral Flatness worst Margin (dB)
	31. Spectral Flatness worst Slot
	32. Spectral Flatness worst Subcarrier
	33. NaN (9.91E+37) returned (Reserved for future)

Index N	Results Returned
	34. Sidelink ID
6	Returns the results of Inband Emission Power per RB for CC0. The result length varies depending on the number of RBs. <ul style="list-style-type: none"> <li>1 Average Power of Active RBs - the average absolute power of allocated RBs in dBm</li> <li>2 Number of RBs - the number of RBs in current configuration</li> <li>3~ (2+Number of RBs) Power Per RB - the absolute power (dBm) per RB.</li> <li>3+Number of RBs Power of General (dB) - the ratio of the average power of all unallocated RBs to the average power of all allocated RBs</li> <li>4+Number of RBs Power of IQ Image + General (dB) - the ratio of the average power of the General and IQ Image to the average power of all allocated RBs. IQ Image measures one of unallocated RBs symmetry to the carrier.</li> <li>5+Number of RBs Power of Carrier leakage + General(dB) - the ratio of the average power of the General and Carrier leakage to the average power of all allocated RBs. Carrier leakage measures one or two of unallocated RBs adjacent to DC frequency.</li> </ul>
7	Returns the results of Inband Emission Power per RB for CC0. The result length varies depending on the number of RBs <ul style="list-style-type: none"> <li>1 Minimal Inband Margin - Inband margin is the difference between the inband emission limit mask and actual measured power per non-allocated RB. Which means the margin = (Limit - Power) in dB, and a negative margin stands for the power exceeds the limit.</li> <li>2 Minimal Inband Margin Index - the RB index of minimal margin results (ZERO based)</li> <li>3 Number of RBs - the number of RBs in current configuration</li> <li>4~(3+Number of RBs) Inband Margin per RB - The Margin result of each RB. If the RB is active (allocated), the inband margin result will be set to NAN.</li> </ul>
8	Returns the results of Spectral Flatness Ripple for CC0. <ul style="list-style-type: none"> <li>9. RP 1 Value - maximum Ripple in Range 1</li> <li>10. RP 2 Value - maximum Ripple in Range 2</li> <li>11. RP 12 Value - the maximum ripple between the upper side of Range 1 and lower side of Range 2</li> <li>12. RP 21 Value - the maximum ripple between the upper side of Range 2 and lower</li> </ul>

Index N	Results Returned
	side of Range 1
	13. Min Ec(f)1 - the minimum EC(f) in Range 1
	14. Max Ec(f)1 - the maximum EC(f) in Range 1
	15. Min Ec(f)2 - the minimum EC(f) in Range 2
	16. Max Ec(f)2 - the maximum EC(f) in Range 2
9	Returns the results of Spectral Flatness Equalizer Channel Frequency for CCO. The result length varies depending on the Bandwidth.
	1 RP 1 Pass/Fail Result - 0:Pass, 1:Fail, -1:Not tested
	2 RP 1 Value - maximum Ripple in Range 1
	3 RP 2 Pass/Fail Result - 0:Pass, 1:Fail, -1:Not tested
	4 RP 2 Value - maximum Ripple in Range 2
	5 RP 12 Pass/Fail Result - 0:Pass, 1:Fail, -1:Not tested
	6 RP 12 Value - the maximum ripple between the upper side of Range 1 and lower side of Range 2
	7 RP 21 Pass/Fail Result - 0:Pass, 1:Fail, -1:Not tested
	8 RP 21 Value - the maximum ripple between the upper side of Range 2 and lower side of Range 1
	9 Number of subcarriers
	10 ~ (9+Number of subcarriers) Equalizer Coefficients - EC(f).

### 3.9.1 CEVM SCPI List

The following table gives a summary of SCPI commands that are supported in CEVM measurements. For a complete list, see ["List of Supported SCPI Commands" on page 2934](#).

Parameter	SCPI Command
PBCH Repetition Active	<code>[ :SENSe ]:CEVM:CCARrier0 ... 4:DLINK:PROFile:PBCH:REPetition:ACTive OFF   ON   0   1</code>
Include MPDCCH	<code>[ :SENSe ]:CEVM:CCARrier0 ... 4:DLINK:PROFile:MPDCch</code>
MPDCCH Start Symbol	<code>[ :SENSe ]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:SSNumber</code>
Number of MPDCCH Channels	<code>[ :SENSe ]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:COUNT</code>

Parameter	SCPI Command
MPDCCH Active	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:ACTive</code>
Narrow Band Index of Set 0	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET0:NB:INDex</code>
Number of PRB Pairs of Set 0	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET0:RBPair:NUMBer</code>
PRB Assignment Index of Set 0	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET0:RBPair:ALLocation</code>
Transmission Type of Set 0	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET0:TXTYpe</code>
Scrambling Sequence of Set 0	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET0:SCRambling</code>
Set 1 Enable	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET1:ENABle</code>
Narrow Band Index of Set 1	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET1:NB:INDex</code>
Number of PRB Pairs of Set 1	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET1:RBPair:NUMBer</code>
PRB Assignment Index of Set 1	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET1:RBPair:ALLocation</code>
Transmission Type of Set 1	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET1:TXTYpe</code>
Scrambling Sequence of Set 1	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET1:SCRambling</code>
PRACH Frequency Hopping	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:FHOPping OFF   ON   0   1</code>
Auto PRACH Frequency Hopping	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:FHOPping OFF   ON   0   1</code>
PRACH Frequency Hopping Offset	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PRACH:NRBHO &lt;integer&gt;</code>
Auto PRACH Frequency Hopping Offset	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PRACH:NRBHO &lt;integer&gt;</code>
PDSCH/MPDCCH Start OFDM Symbol	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:SSNumber &lt;integer&gt;</code>

3 LTE & LTE-A TDD Mode  
3.9 Conformance EVM

Parameter	SCPI Command
Set 0 Enable	<code>[ :SENSe]:EVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne11 12:SET0:ENABle OFF   ON   0   1</code>
Auto Detect PUCCH Format 4/5 Active	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:FORMat45:ACTive</code>
DMRS CSH ID	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:DCID</code>
Auto Detect DMRS CSH ID	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:DCID</code>
DMRS CSH ID Enable	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:DCID:ENABle</code>
Auto Detect DMRS CSH ID Enable	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:DCID:ENABle</code>
Common N PUCCH (4)	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FOUR</code>
Auto Detect PUCCH N PUCCH (4)	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:FOUR</code>
N PUCCH (4) Couple	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FOUR:COUPlE</code>
Common N PUCCH (5)	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FIVE</code>
Auto Detect PUCCH N PUCCH (5)	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:N:FIVE</code>
N PUCCH (5) Couple	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:N:FIVE:COUPlE</code>
Common M PUCCH (4) RB	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:M:FOUR</code>
Auto Detect M PUCCH (4) RB	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:AUTO:PUCCh:M:FOUR</code>
M PUCCH (4) RB Couple	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:M:FOUR:COUPlE</code>
PUCCH Slot N PUCCH (4)	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:FOUR</code>
PUCCH Slot N PUCCH (5)	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:N:FIVE</code>
Slot M PUCCH (4) RB	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER&lt;n&gt;:PUCCh:SLOT&lt;m&gt;:M:FOUR</code>
Set 0 Frequency Hopping State	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANne1&lt;n&gt;:SET0:FHOpping</code>

Parameter	SCPI Command
Set 1 Frequency Hopping State	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANnel&lt;n&gt;:SET1 :FHOPping</code>
Maximum Repetition Number of Set 0	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANnel&lt;n&gt;:SET0 :REPetition:MNUMber</code>
Maximum Repetition Number of Set 1	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANnel&lt;n&gt;:SET1 :REPetition:MNUMber</code>
Repetition Number of Set 0	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANnel&lt;n&gt;:SET0 :REPetition:NUMBer</code>
Repetition Number of Set 1	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:MPDCch:CHANnel&lt;n&gt;:SET1 :REPetition:NUMBer</code>
PDSCH/MPDC CH Hopping Offset	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:EMTC:NRBHo</code>
Edit NB-IoT Channels :Downlink- In- Band Parameters	<code>[ :SENSe]:EVM:CCARrier0 ... 4:NIOT:DLINK:INBand:EUTRa:CID &lt;integer&gt;</code>
DL, Modulation&TB S Index Table	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:PDSch:MTITable T1   T2   T3</code>
DL, Number of Blank RBs	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:DLINK:BRBS:COUNT &lt;integer&gt;</code>

The following table only lists the SCPI commands supported in CEVM measurement for sidelink newly-defined parameters.

Parameter	SCPI Command
Size of Subchanne l	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:SUBChannel:SIZE RB4   RB5   RB6   RB8   RB9   RB10   RB12   RB15   RB16   RB18   RB20   RB25   RB30   RB48   RB50   RB72   RB75   RB96   RB100  [ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:SUBChannel:SIZE?</code>
Adjacency PSCCH- PSSCH	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:SUBChannel:ADJacency OFF   ON   0   1  [ :SENSe]:EVM:CCARrier0 ... 4:SLINK:PROFile:SUBChannel:ADJacency?</code>
Start RB - Subchanne	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:SUBChannel:RB:START &lt;integer&gt;</code>

3 LTE & LTE-A TDD Mode  
3.9 Conformance EVM

Parameter	SCPI Command
	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:SUBChannel:RB:START?
Start RB – PSCCH Pool	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:PSCCh:RB:START <integer>
Number of Subchannels	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:SUBChannel:COUNT N1   N3   N5   N8   N10   N15   N20
Expected Decoded SCI # Users	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:EUUsers:COUNT <integer>
Decoded SCI User PSSCH Active	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:DECoded:PSSCh:ACTIve OFF   ON   0   1
Decoded SCI User Include PSSCH	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:DECoded:PSSCh:ACTIve?
Decoded SCI User Include PSSCH	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:DECoded:PSSCh:INCLude   EXCLude
Decoded SCI User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:DECoded:PSSCh:INCLude   EXCLude
Decoded SCI User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:DECoded:PSSCh:DMRS?
Decoded SCI User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:DECoded:PSCCh:INCLude   EXCLude
Decoded SCI User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:DECoded:PSCCh:DMRS?
Add Sidelink User	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:ADD:USER
Delete Sidelink User	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:DELete
Count Number of Users	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:COUNT?
User PSSCH Active	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSCCh:ACTIve OFF   ON   0   1

Parameter	SCPI Command
	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSCCh:ACTive?
User PSSCH Active	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSSCh:ACTive OFF   ON   0   1
User Include PSSCH	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSSCh:ACTive?   EXCLude
User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSSCh:DMRS INCLude   EXCLude
User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSSCh:DMRS?
User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSCCh INCLude   EXCLude
User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSCCh?
User Include PSSCH DM-RS	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:PSCCh:DMRS INCLude   EXCLude
Add Sidelink Allocation	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ADD:ALLocation
Delete Sidelink Allocation	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: DELete
Start Subframe	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: SUBFrame:START <integer>
PSSCH Resource m	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: SUBFrame:START?
Subchannel Start	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: PSCCh:INDex <integer>
Subchannel Length	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: PSCCh:INDex?
PSSCH Mod Type	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: SUBChannel:START <integer>
	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: SUBChannel:START?
	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: SUBChannel:LENGth <integer>
	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: SUBChannel:LENGth?
	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: PSSCh:MODulation:TYPE QPSK   QAM16   QAM64
	[ :SENSe]:CEVM:CCARrier0 ... 4:SLINK:PROFile:USER<n>:ALLocation<m>: PSSCh:MODulation:TYPE?

The following table only lists the SCPI commands supported in CEVM measurement for eMTC newly-defined parameters.

Parameter	SCPI Command
Auto Detect On, Decode d DCI Mode, For Downlink eMTC User	Channel Type [:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC::PROFile:USER1 12:DECodeD:CHANnel :TYPe PDSCh   OTHers
Coverage Enhancement Mode	[:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC::PROFile:USER1 12:DECodeD:CEMode A   B
PDSCH Transmission Span	[:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC:PROFile:USER1 12:DECodeD:PDSCh:TR ANmission:SPAN <integer>
Absolute Subframe Number	[:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC:PROFile:USER1 12:DECodeD:PDSCh:AS Number <integer>
PDSCH Maximum Repetition Number (CEModeA)	[:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC:PROFile:USER1 12:DECodeD:PDSCh:CE Mode:A:MREPetition NCONfigured   MRN16   MRN32
PDSCH Maximum Repetition Number (CEModeB)	[:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC:PROFile:USER1 12:DECodeD:PDSCh:CE Mode:B:MREPetition NCONfigured   MRN192   MRN256   MRN384   MRN512   MRN768   MRN1024   MRN1536   MRN2048
PUSCH Maximum Repetition Number (CEModeA)	[:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC:PROFile:USER1 12:DECodeD:PUSCh:CE Mode:A:MREPetition NCONfigured   MRN8   MRN16   MRN32
PUSCH Maximum Repetition Number (CEModeB)	[:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC:PROFile:USER1 12:DECodeD:PUSCh:CE Mode:B:MREPetition NCONfigured   MRN192   MRN256   MRN384   MRN512   MRN768   MRN1024   MRN1536   MRN2048
Count of eMTC Downlink Users	[:SENSe]:CEVM:CCARrier [0] 1 ... 4:DLINK:EMTC:PROFile:UNUMber?
–	

### 3.9.2 Views

The Conformance EVM measurement has 4 predefined views:

- **RESult** - "Result Metrics" on page 1812
- **MLIST** - "Measurement List" on page 1812
- **PARAmeter** - "Parameter List" on page 1812
- **RFENvelope** - "RF Envelope" on page 1812

Some of these are multiple-window views. When in a multiple-window view, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

Remote Command	<code>:DISPlay:CEVM:VIEW[:SElect] MLISt   PARAmeter   RESult   RFENvelope</code> <code>:DISPlay:CEVM:VIEW[:SElect]?</code>
Example	<code>:DISP:CEVM:VIEW RES</code> <code>:DISP:CEVM:VIEW?</code>
Preset	<code>RESult</code>
State Saved	Yes
Range	Measurement List   Parameter List   Result Metrics   RF Envelope

### 3.9.2.1 Parameter List

Shows name, remote command, and value of available commands for this measurement. You can verify and change values by using the menu, the front panel keys or by using a mouse and keyboard.

### 3.9.2.2 Measurement List

By default, this view shows the current status of enabled measurements and results.

When **Show All Items** is enabled, all available measurements and items are displayed. The measurement name and items which belong to the unavailable measurements are grayed-out.

### 3.9.2.3 Result Metrics

Shows measurement results in the same order as the remote command measurement results returned when index ( $n = 1$ ) is sent.

### 3.9.2.4 RF Envelope

For diagnostic purposes, the RF Envelope view shows a time-domain magnitude plot of selected Component Carrier.

### 3.9.3 Windows

The measurement provides 4 window types:

#	Window
1	"Measurement List" on page 1813
2	"Parameter List" on page 1813
3	"Result Metrics" on page 1813
4	"RF Envelope" on page 1814

#### 3.9.3.1 Measurement List

Window #1

Shows the current status of enabled measurements and items.

If the "Show All Items" parameter is enabled via its control, all available measurements and items are displayed. When the measurement is disabled, measurement name and items that belong to the measurement are grayed out.

Combination view of the I/Q demodulated signals using vector lines to connect the chip dots.

---

Example `:DISP:CEVM:VIEW MLIS`

#### 3.9.3.2 Parameter List

Window #2

Shows the name, remote command, and value of available commands for this measurement. The user can verify and change values by using menu and front panel keys.

---

Example `:DISP:CEVM:VIEW PAR`

#### 3.9.3.3 Result Metrics

Window #3

Displays measurement results in the same order as they are returned by the remote results (n=1) query.

---

Example `:DISP:CEVM:VIEW RES`

### 3.9.3.4 RF Envelope

Window #4

For diagnostic purposes, the RF Envelope view shows a time-domain magnitude plot of selected Component Carrier.

---

Example `:DISP:CEVM:VIEW RFEN`

## 3.9.4 Amplitude

The Amplitude front-panel key activates the Amplitude menu and selects Reference Value as the active function.

### 3.9.4.1 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 1814](#)
- See ["Single-Attenuator Configuration" on page 1815](#)

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.


Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.

---


Dependencies In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

#### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

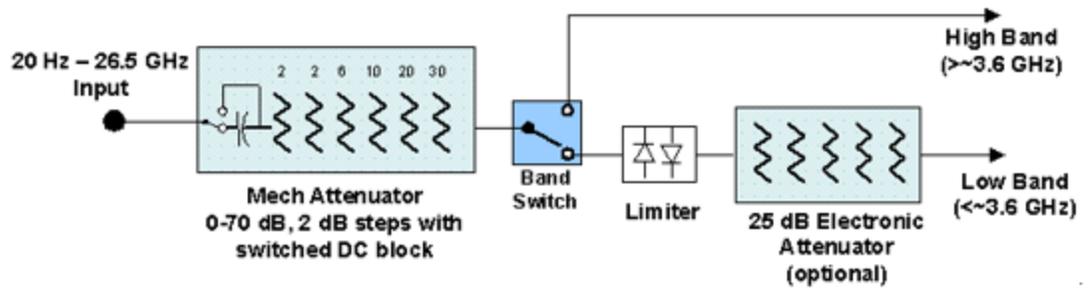


Configuration 2: Mechanical attenuator, no optional electronic attenuator

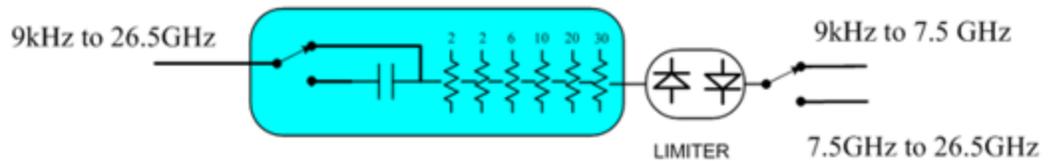

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


### Single-Attenuator Configuration

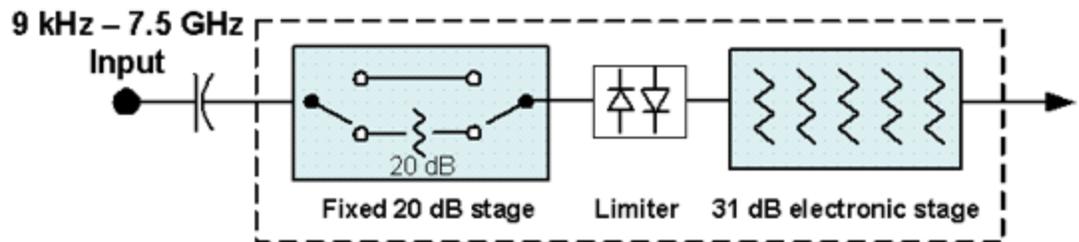

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



**Dual Attenuator**

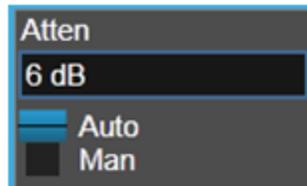

**Single Attenuator**

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

## Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and " <b>Mech Atten</b> " on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	When the <b>Input</b> is <b>RF</b> , and the <b>Input Port</b> is <b>RF Input 2</b> , and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows: <ul style="list-style-type: none"> <li>- If the sweep is entirely &lt; 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten</li> <li>- If the sweep is entirely &gt; 50 GHz, the value shown after "Atten:" is equal to Full Range Atten</li> <li>- If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol "&gt;=" and is equal to Full Range Atten</li> </ul>

In the **Amplitude**, "**Y Scale**" on page 2153 menu, and the **Atten Meas Bar** dropdown menu panel, a summary is displayed as follows:

"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten

"Total Atten above 50 GHz" followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "**Internal Preamp**" on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "**Attenuator Configurations and Auto/Man**" on page 1819

Remote Command	<code>[:SENSe]:POWer[:RF]:ATTenuation &lt;rel_amp1&gt;</code> <code>[:SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code> Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation) In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of <b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " <b>Elec Atten</b> " on page 2164 See " <b>Attenuator Configurations and Auto/Man</b> " on page 1819 for more information on the <b>Auto/Man</b> functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none"> <li>- If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>- Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>,</li> </ul>

**External Gain, Ref Level Offset, Max Mixer Level,  $\mu$ W Path Control and IF Gain** settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)

- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "**Full Range Atten**" on page 2160 from the result to determine the **Mech Atten**. Limit the value so that it is never lower than 0 dB and so that total attenuation, including **Full Range Atten**, is never less than 6 dB (total attenuation, including **Full Range Atten** below 6 dB, can never be chosen by Auto)

In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when **Mech Atten** is in **Auto**, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input

For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is  $\leq 7.5$  GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB

Preset	<b>Auto</b> The Auto value is 10 dB						
State Saved	Saved in instrument state						
Min	0 dB The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased						
Max	<table border="1"> <tr> <td>CXA Option 503 or 507</td> <td>50 dB</td> </tr> <tr> <td>EXA</td> <td>60 dB</td> </tr> <tr> <td>All other models</td> <td>70 dB</td> </tr> </table>	CXA Option 503 or 507	50 dB	EXA	60 dB	All other models	70 dB
CXA Option 503 or 507	50 dB						
EXA	60 dB						
All other models	70 dB						

Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration: <i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration: <i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the "soft" attenuation is at 14 dB (see below for definition of "soft" attenuation)</p>
------------	--

---

When in Manual, a # sign appears in front of Atten in the annotation

#### Auto Function

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn <b>Auto Mech Atten</b> ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	ON

---

### Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 1817 (or `:POW:ATT`) as the "main" attenuation; and the attenuation that is set by `:POW:EATT` as the "soft" attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about "soft" attenuation.

**NOTE**

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:

---



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see "[More Information](#)" on page 1822

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the <b>Attenuation</b> control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is &gt; 3.6 GHz, then the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If "<a href="#">Internal Preamp</a>" on page 2183 is <b>ON</b> (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the</p>

frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamp** is unavailable

If "**LNA**" on page 2185 is **ON**, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only "soft" electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <b>Mechanical Attenuator Transition Rules</b> " on page 1822
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description

#### Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	<b>OFF</b> (Disabled) for Swept SA measurement <b>ON</b> (Enabled) for all other measurements that support the electronic attenuator

#### NOTE

The maximum **Center Frequency** for Low Band can change based on the selected **IFBW** for measurements that support **IFBW** (for example, **Waveform** measurement across all Modes that support it). In certain models (such as **N9042B & N9032B**), **IFBW** values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of

3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

---

### More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1823](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled

- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

### **Using the Electronic Attenuator: Pros and Cons**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

## Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "[Pre-Adjust for Min Clipping](#)" on page 2168.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

## Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See ["Adjustment Algorithm" on page 1826](#)

Selection	SCPI	Note
Off	<b>OFF</b>	This is the default setting
On	<b>ON</b>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <b>COMBined</b>
Elec Atten Only	<b>ELECtrical</b>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<b>COMBined</b>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECtrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>	
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>	
Notes	The parameter option <b>ELECtrical</b> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <b>COMBined</b> is mapped to <b>ELECtrical</b> in Single-Attenuator models. If you send <b>COMBined</b> , it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBined</b>	
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when <a href="#">"Elec Atten" on page 2164</a> is <b>OFF</b> or grayed-out, <a href="#">"Pre-Adjust for Min Clipping" on page 1824</a> is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes	
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten
	Single-Attenuator models:	Off   On

### Backwards Compatibility Command

Notes	<b>ON</b> aliases to "Elec Atten Only" ( <code>:POW:RANG:OPT:ATT ELEC</code> ) <b>OFF</b> aliases to "Off" ( <code>:POW:RANG:OPT:ATT OFF</code> )
-------	--

---


	<code>:POW:RANG:AUTO?</code> returns true if <code>:POW:RANG:OPT:ATT</code> is not OFF
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:RANGe:AUTO?</code>

---

## Adjustment Algorithm

The algorithms for the adjustment are documented below:


### Single-Attenuator Models

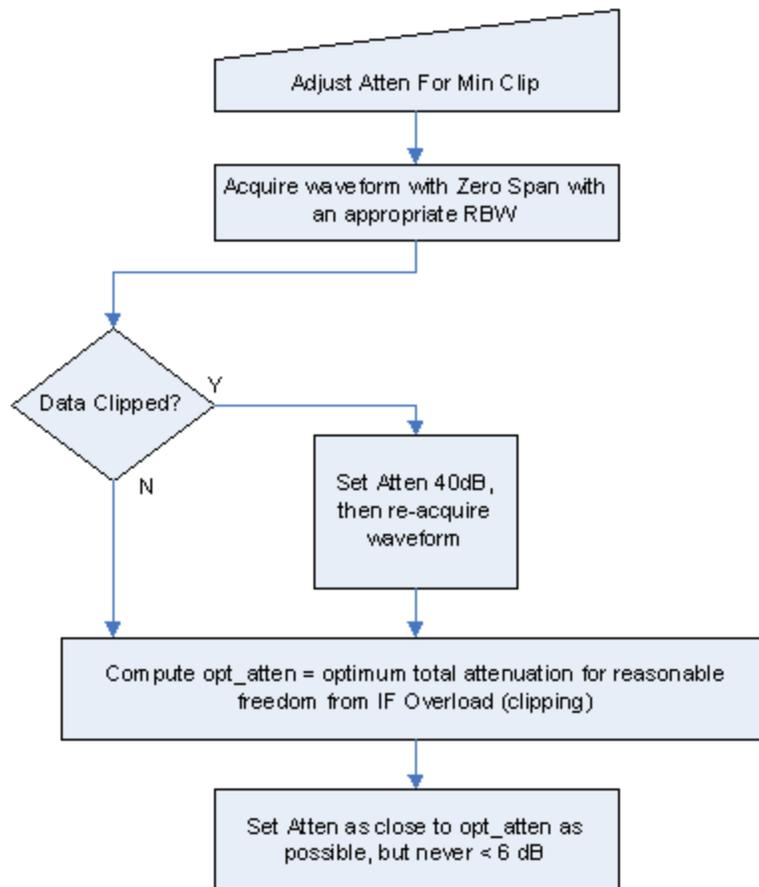

### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 1824 selection is Mech + Elec Atten:


3 LTE & LTE-A TDD Mode  
 3.9 Conformance EVM

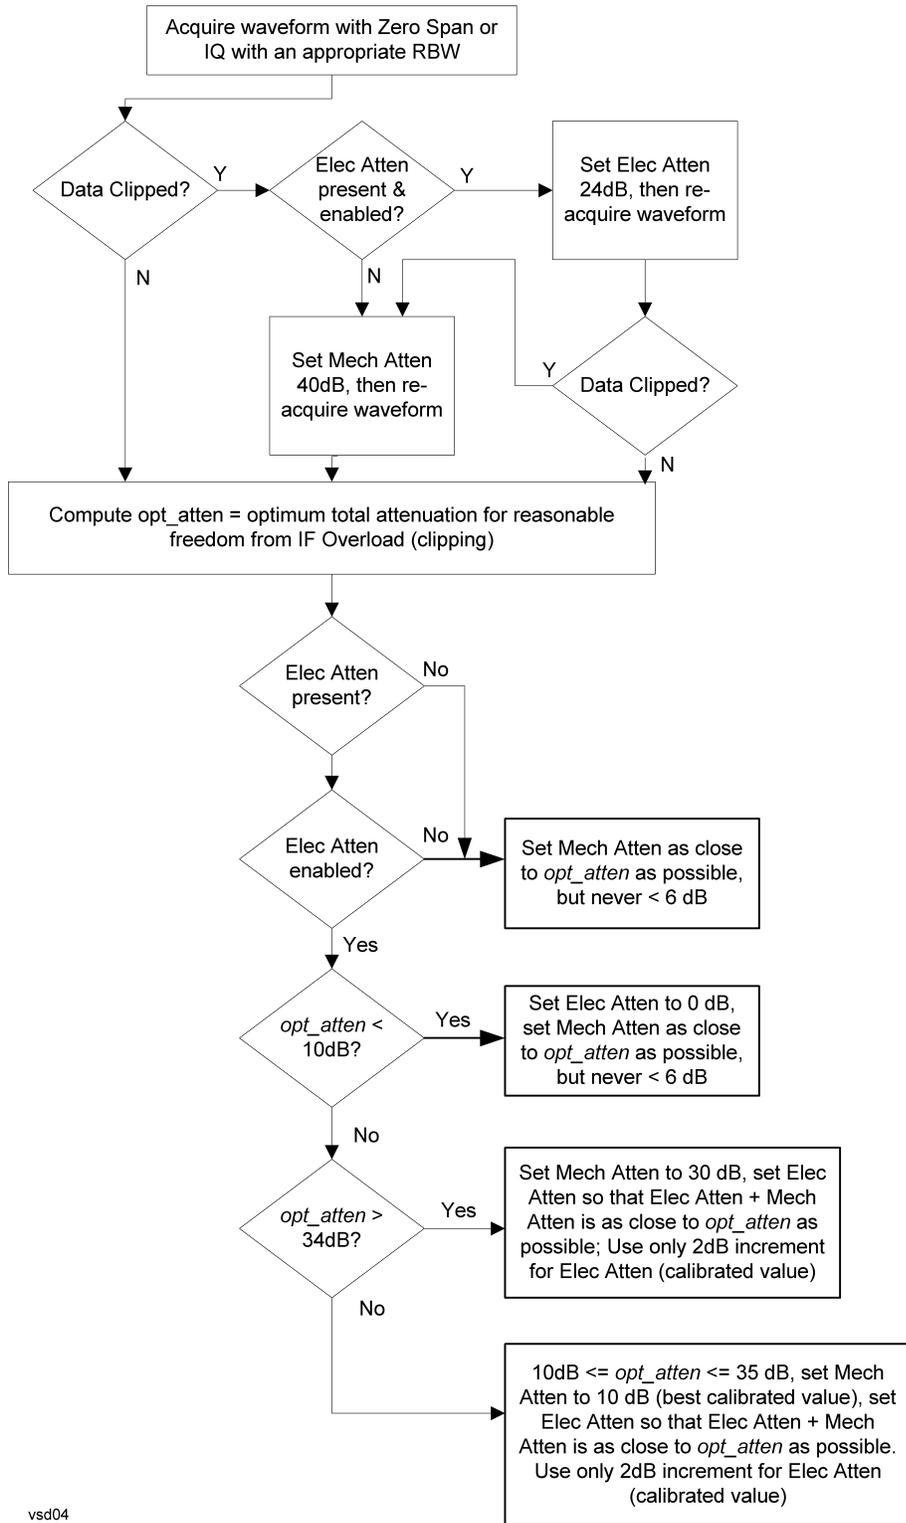

vsd04

"Pre-Adjust for Min Clipping" on page 1824 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

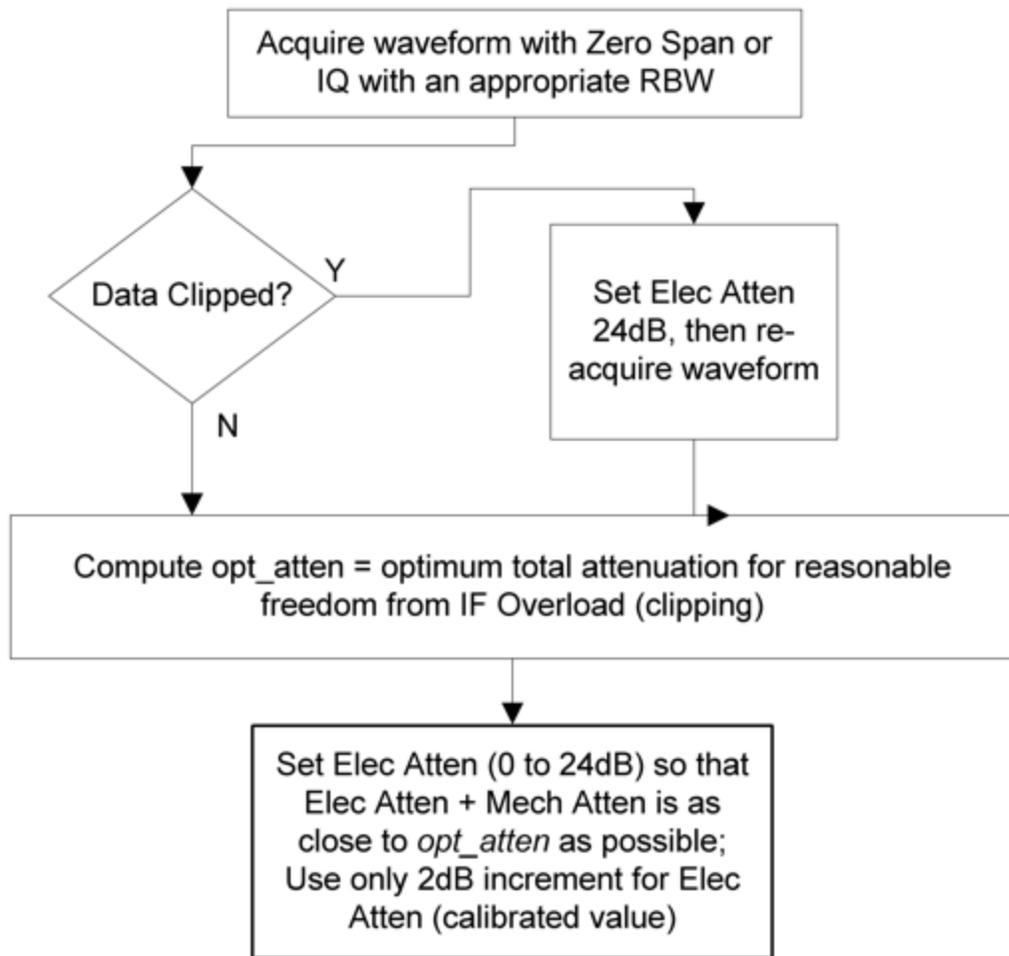

## Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.9.4.2 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

## Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

## Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements


## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

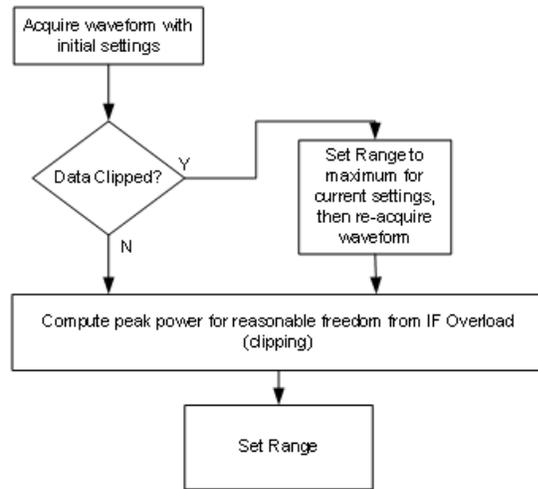

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :RANGe :MIXer :OFFSet &lt;real&gt;</code> <code>[ :SENSe ] :POWer [ :RF ] :RANGe :MIXer :OFFSet ?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.9.4.3 Range (Baseband Input models)

Only available when Option BBA is present (I/Q Baseband Inputs), the current measurement supports option BBA, and I/Q is the selected input. In these cases, replaces the **Attenuation** tab.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a few millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Dependencies	Available only when the selected input is I/Q. If the current measurement does not support baseband inputs, an error will be displayed: "No result; Meas invalid with I/Q inputs"
State Saved	No

## Range Auto/Man

The **Auto** setting for **Range** causes the range to be set based on the Y Scale settings. When **Range** is **Auto**, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support **Range Auto/Man**. If **Auto** is not supported in the current measurement, this control is grayed-out, displaying **Man**, and **MAN** is returned to a SCPI query, but this does *not* change the Auto/Man setting for **Range**. When you switch to a measurement that supports **Auto**, it goes back to **Auto** if it was previously in **Auto** mode.

Remote Command	<code>[ :SENSe ] :VOLTage :IQ :RANGe :AUTO OFF   ON   0   1</code> <code>[ :SENSe ] :VOLTage :IQ :RANGe :AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:VOLT :IQ :RANG :AUTO OFF</code> <code>:VOLT :IQ :RANG :AUTO?</code>
Dependencies	If <b>Auto</b> is not supported, sending the SCPI command generates an error
Couplings	When in <b>Auto</b> , both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: $YMax = \max(\text{abs}(\text{top}), \text{abs}(\text{bottom}))$ The I Range and Q Range are then set to YMax
Preset	<b>ON</b>
State Saved	Saved in instrument state
Annotation	When in Man, the Range annotation is preceded by "#"  This is an alternate form of the command to match the <b>POWer</b> form of the I Range and Q Range SCPI.
Remote Command	<code>[ :SENSe ] :POWer :IQ :RANGe :AUTO OFF   ON   0   1</code> <code>[ :SENSe ] :POWer :IQ :RANGe :AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:POW :IQ :RANG :AUTO OFF</code> <code>:POW :IQ :RANG :AUTO?</code>
Notes	<code>:POW :IQ :RANG :AUTO</code> is an alternate form of <code>:VOLT :IQ :RANG :AUTO</code> , to maintain consistency with I Range and Q Range, which support both the <b>POWer</b> and <b>VOLTage</b> forms of the command
Preset	<b>ON</b>
Range	Auto   Man

## I Range

The internal gain range for the I channel when the Input Path is I Only or I and I/Q. Used for both the I and Q channels when the Input Path is I+jQ.

Remote Command	<code>[ :SENSe]:VOLTagE:IQ[:I]:RANGe[:UPPer] &lt;voltage&gt;</code> <code>[ :SENSe]:VOLTagE:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak <code>:VOLT:IQ:RANG 0.5 V</code> <code>:VOLT:IQ:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V
Couplings	When <a href="#">"Q Same as I" on page 2177</a> is On, the <b>I Range</b> value will be copied to <a href="#">"Q Range" on page 2176</a> Changing the value also sets Range = Man
Preset	Complex <b>SPECTrum</b> Measurement: 0.5 V Peak All others: 1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω)   0.5 V Peak (4 dBm @ 50Ω)   0.25 V Peak (-2 dBm @ 50Ω)   0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <I Range>". When Range = Man the annotation is preceded by "#" The I Range is not annotated in Input Path Q Only. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the I Range is 1 V Peak "Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak  This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[ :SENSe]:POWer:IQ[:I]:RANGe[:UPPer] &lt;amp;gt;</code> <code>[ :SENSe]:POWer:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω <code>:POW:IQ:RANG 4 dBm</code> <code>:POW:IQ:RANG?</code>
Notes	The <b>POWER</b> form of the command is provided for convenience. It maps to the same underlying gain range parameter as the <b>VOLTagE</b> form The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the <b>VOLTagE</b> form of the command. The power values of the 4 range

states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:

50 Ω: 10, 4, -2, -8

75 Ω: 8.2, 2.2, -3.8, -9.8

600 Ω: -0.8, -6.8, -12.8, -18.9

Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

## Q Range

The internal gain range for the Q channel. **Q Range** only applies to Input Path Q Only and Ind I/Q. For input I+jQ "[I Range](#)" on page 2174 determines both I and Q channel range settings.

Remote Command	<code>[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] &lt;voltage&gt;</code> <code>[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?</code>
Example	Set the Q Range to 0.5 V Peak: <code>:VOLT:IQ:Q:RANG 0.5 V</code> <code>:VOLT:IQ:Q:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V <b>Q Range</b> is only used for Input Path Q Only and Ind I/Q. For input I+jQ, " <a href="#">I Range</a> " on page 2174 determines both I and Q channel range settings
Couplings	When " <a href="#">Q Same as I</a> " on page 2177 is On, the " <a href="#">I Range</a> " on page 2174 value is copied to <b>Q Range</b> and the range value keys are disabled Changing the value also sets Range = Man
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50Ω)   0.5 V Peak (4 dBm @ 50Ω)   0.25 V Peak (-2 dBm @ 50Ω)   0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <Q Range>". When Range = Man the annotation is preceded by "#" The Q Range is not annotated in Input Path I Only or I+jQ. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the Q Range is 1 V Peak

"Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak

This is an alternate form of the command to allow entry as a power.

Remote Command	<code>[ :SENSe]:POWer:IQ:Q:RANGe[:UPPer] &lt;amp;1&gt;</code> <code>[ :SENSe]:POWer:IQ:Q:RANGe[:UPPer]?</code>
Example	Sets the Q Range to 0.5 V Peak when Reference Z is 50 $\Omega$ , and to 1.0 V Peak when Reference Z is 75 $\Omega$ : <code>:POW:IQ:Q:RANG 4 dBm</code> <code>:POW:IQ:Q:RANG?</code>
Notes	The <b>POWer</b> form of the command is provided for convenience. It maps to the same underlying gain range parameter as the <b>VOLTage</b> form of the command The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the <b>VOLTage</b> form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 $\Omega$ : 10, 4, -2, -8 75 $\Omega$ : 8.2, 2.2, -3.8, -9.8 600 $\Omega$ : -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

## Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, **Q Same as I** causes the Q channel range to be mirrored from the I channel. That way, you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time **Q Same as I** is Off, the I and Q channel setups will be identical.

Remote Command	<code>[ :SENSe]:VOLTage POWer:IQ:MIRROred OFF   ON   0   1</code> <code>[ :SENSe]:VOLTage POWer:IQ:MIRROred?</code>
Example	Turn off the mirroring of I Range to Q Range <code>:VOLT:IQ:MIRR OFF</code> <code>:POW:IQ:MIRR OFF</code>
Couplings	When <b>ON</b> , the " <b>I Range</b> " on page 2174 value is mirrored (copied) to the " <b>Q Range</b> " on page 2176
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>

### 3.9.4.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 2195](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

### Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on ["Preselector Adjust" on page 2182](#) changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in ["Proper Preselector Operation" on page 1838](#).

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command</li> </ul>

---

	is sent in these instruments, accepted without error, and the query always returns 0
	- Grayed-out in the <b>Spectrogram</b> View
Couplings	<p>The active marker position determines where the centering will be attempted</p> <p>If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed</p> <p>The offset applied to do the centering appears in "<a href="#">Preselector Adjust</a>" on page 2182</p>
Status Bits/OPC dependencies	<p>When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <b>:READ</b> or <b>:MEASure</b> queries</p> <p>The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed</p>

---

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak search to find
2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

### Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "[Presel Center](#)" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram</b> View</li> </ul>
Preset	0 MHz
State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PADJust</code> <code>[ :SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXTERNAL</code> <code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	:POW:GAIN OFF	
Low Band	:POW:GAIN ON :POW:GAIN:BAND LOW	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	:POW:GAIN ON :POW:GAIN:BAND FULL	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command `[ :SENSe]:POWer[:RF]:GAIN:BAND LOW | FULL`  
`[ :SENSe]:POWer[:RF]:GAIN:BAND?`

Example `:POW:GAIN:BAND LOW`  
`:POW:GAIN:BAND?`

Dependencies Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown  
  
Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E  
If `:POW:GAIN:BAND FULL` is sent when a low band preamp is available, the preamp band parameter is set to `LOW` instead of `FULL`, and an "Option not installed" message is generated

3 LTE & LTE-A TDD Mode  
3.9 Conformance EVM

	Not available when the electronic/soft attenuator is enabled
Preset	LOW
State Saved	Saved in instrument state
Annotation	<p>When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says “Off” if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says “3.6 GHz”. If it is a 13.6 GHz preamp and it is set to Full Range the annotation says “13.6 GHz”</p> <p>When the USB Preamp is connected to USB, the Preamp annotation says “Preamp: USB” if the internal preamp is off or “Preamp: USB, Int” if the internal preamp is on (only for measurements that support the USB preamp)</p>
	Auto Function
Remote Command	[:SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1 [:SENSe]:POWer[:RF]:GAIN[:STATe]?
Example	:POW:GAIN OFF :POW:GAIN?
Preset	OFF

## LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

**LNA** is an additional preamplifier that provides superior DANL and frequency range compared to "[Internal Preamp](#)" on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, **LNA** can be turned on *together* with "[Internal Preamp](#)" on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "[More Information](#)" on page 1842

Remote Command	[:SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1 [:SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?
Example	:POW:GAIN:LNA ON
Dependencies	<p>Requires Option LNA, except for VXT models M9415A/16A</p> <p>Does not appear in VXT models M9420A/10A/11A</p> <p>M9410E/11E/15E/16E support LNA</p> <p>May not appear in some measurements</p> <p><b>LNA</b> is not available when the electronic/soft attenuator is enabled</p>

Preset	OFF
State Saved	Saved in State

## More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
μW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
μW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be

narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp’s compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 1847
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 1849
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 1849

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :MW :PATH STD   LNPPath   MPBypass   FULL</code> <code>[ :SENSe ] :POWer [ :RF ] :MW :PATH?</code>
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>
Notes	When " <a href="#">Presel Center</a> " on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b>  The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean “when the low noise path is enabled” but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b> . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled  Alignment switching ignores the settings in this menu, and restores them when finished
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing  – The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed

- The **μW Preselector Bypass** selection does not appear unless Option MPB is present and licensed
- The **Full Bypass Enable** selection does not appear unless options LNP and MPB are both present as well as option FBP

In any of these cases, if the required options are not present and the SCPI command is sent, error -241, "Hardware missing; Option not installed" is generated

**Low Noise Path Enable** and **Full Bypass Enable** are grayed-out if the current measurement does not support them

**Low Noise Path Enable** and **Full Bypass Enable** are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"

Preset	Mode	Value
	IQ Analyzer	MPB option present and licensed: <b>MPB</b>
	Pulse	MPB option not present and licensed: <b>STD</b>
	RTSA	
	Avionics	
	All other Modes	<b>STD</b>
	-	

State Saved	Save in instrument state
-------------	--------------------------

Range	Standard Path   Low Noise Path Enable   μW Presel Bypass   Full Bypass Enable
-------	---

Annotation	<p>In the Meas Bar, if the Standard path is chosen:  μW Path: Standard  If Low Noise Path is enabled but the LNP switch is not thrown:  μW Path: LNP,Off  If the Low Noise Path is enabled and the LNP switch is thrown:  μW Path: LNP,On  If the preselector is bypassed:  μW Path: Bypass  If Full Bypass Enable is selected but the LNP switch is not thrown:  μW Path: FByp,Off  If Full Bypass Enable is selected and the LNP switch is thrown:  μW Path: FByp,On</p>
------------	--

### μW Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to **μW Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	μW Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	μW Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type

Measurement	$\mu$ W Path Control Auto behavior
	Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is preselect bypass if preselect bypass is enabled, auto $\mu$ W path is standard if preselect bypass is not enabled
Spurious Emissions	Always Standard Path

#### 5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious Emissions	Always Standard Path
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

#### Channel Quality Mode

Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

---

Remote Command `[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON | OFF | 1 | 0`  
`[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?`

---

Example `:POW:MW:PATH:AUTO ON`

	: POW:MW:PATH:AUTO?
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 1844 above
Preset	ON
Range	ON   OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.

Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still

high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around  $-30$  dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

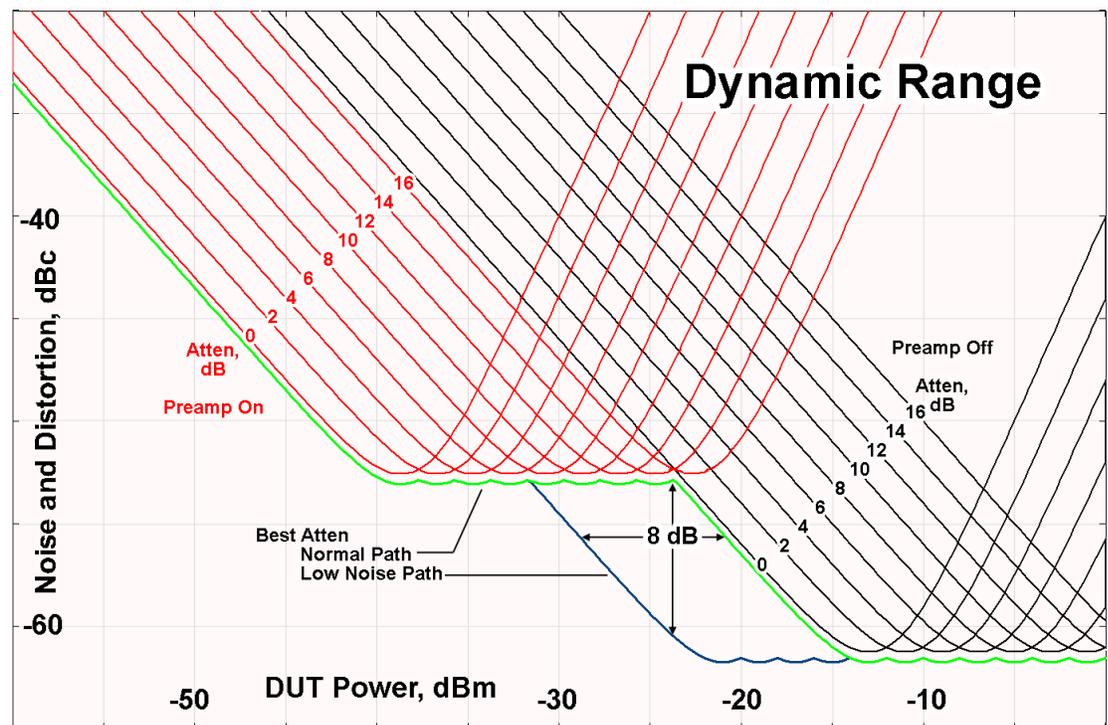

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a

larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **μW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselect is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### **Full Bypass Enable**

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and

- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

**CAUTION**

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path (:POW:MW:PATH STD) The <b>OFF</b> parameter sets path <b>MPB</b> (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1 [ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender's preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED; Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:STATe 0   1   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:SWPrese1:STAT?</code>
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not

	appear in all measurements
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state
Preset	N9041B <span style="float: right;">OFF</span>
	N9042B+V3050A <span style="float: right;">ON</span>
	M9410A/11A <span style="float: right;">ON</span>
State Saved	Saved in instrument state

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSE]:POWER[:RF]:SWPreSel NORMa1   ADVanced</code> <code>[ :SENSE]:POWER[:RF]:SWPreSel?</code>
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is “Unavailable unless SW Presel enabled”
Preset	N9041B <span style="float: right;">ADVanced</span>
	N9042B+V3050A <span style="float: right;">NORMa1</span>

---

State Saved      Saved in instrument state

## SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

---

Remote Command    `[ :SENSe]:POWer[:RF]:SWPreSel:BW NORMa1 | NARRow`  
`[ :SENSe]:POWer[:RF]:SWPreSel:BW?`

---

Example            `:POW:SWPR:BW NARR`

---

Dependencies      Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method  
  
Grayed-out when "**Software Preselection**" on page 2195 is **OFF**. The grayout message is "Unavailable unless SW Presel enabled"  
  
For N9042B+V3050A, the parameter is SCPI-only, and always set to **NARRow** when **Software Preselection** is enabled

---

Preset	N9041B	<b>NORMa1</b>
	N9042B+V3050A	<b>NARRow</b>

---

State Saved      Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band

3 LTE & LTE-A TDD Mode  
3.9 Conformance EVM

mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code>  Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code>  Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <a href="#">Prefilter Presets</a> " on page 1855 below
State Saved	Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

### 3.9.5 BW

Not supported in this measurement.

### 3.9.6 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, View, or Window.

#### 3.9.6.1 Meas Display

Contains controls for setting up the display for the current Measurement, View, or Window.

#### Selected Component Carrier

Selects which component carrier is the source Component Carrier when Copy CC To operation is performed, it also specifies which component carrier's parameter list will be shown when Parameter List view is selected.

Remote Command	<code>[ :SENSE ] :CEVM:SELected CC0   ...   CC4</code> <code>[ :SENSE ] :CEVM:SELected?</code>
Example	<code>:CEVM:SEL CC0</code> <code>:CEVM:SEL?</code>
Dependencies	Coupled to Number of Component Carriers. For example, Component Carrier list will include CC0~CC1 if the number Component Carriers is 2
Preset	<code>CC0</code>
State Saved	Saved in instrument state
Range	<code>CC0 ... CC4</code>

#### Copy CC To

Lets you copy the selected Component Carrier to another Component Carrier, or All Component carriers.

**NOTE**

This parameter copies LTE-Advanced demodulation parameters from one component carrier to other component carrier.

Remote	<code>[ :SENSE ] :CEVM:COPY CC0   CC1   CC2   CC3   CC4   ALL</code>
--------	--

---

Command	
Example	<code>:CEVM:COPY ALL</code>
Couplings	Copy the parameters settings of selected Component Carrier to the target Component Carrier
Preset	<code>ALL</code>
State Saved	Saved in instrument state
Range	<code>CC0 CC1 CC2 CC3 CC4 ALL</code>

---

## Index

Sets the subopcode for the selected SCPI command. The range is defined variously according to the range in curly braces in the commands.

---

State Saved	Saved in instrument state
-------------	---------------------------

---

## Argument

Sets the slot position.

---

State Saved	Saved in instrument state
-------------	---------------------------

---

## Value

Allows you to refer to and modify the value on the selected row.

The range is defined variously according to the selected commands.

---

State Saved	Saved in instrument state
-------------	---------------------------

---

## Immediate Action

This means the selected SCPI command does not have any parameters and will take effect immediately.

## Show All Items

When enabled, all available measurements and items are displayed.

The measurement name and items that apply to unavailable measurements are grayed out.

For display only.

### 3.9.6.2 View

Contains controls for selecting the current **View**, and for editing User Views.

#### View

See "Views" on page 1811.

#### User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect &lt;alphanumeric&gt;</code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOOM</code>) with</p> <pre>:DISP:VIEW:ADV:SEL</pre> <p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name &lt;alphanumeric&gt; does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre>:DISPlay:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:NAME "Baseband"</code> Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View
Notes	<code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <code>&lt;alphanumeric&gt;</code> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via <code>:DISP:ENAB OFF</code> ) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
----------------	---

Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> is not present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

## Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

## View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy

nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

### View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement Example: <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code> No distinction is made between Predefined and User Views If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code> ), then query the list of available Views, the result is undefined

### User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	Returns a quoted string of the available User Views for the current measurement, separated by commas. Example: <code>"Baseband,myView1,yourView1"</code> If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a> ), then query the list of available Views, the result is undefined

#### 3.9.6.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

## Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<b>ON</b>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

## Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state

## Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

## Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When `OFF`, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
----------------	--

Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPlay:VIEW:ADVanced:SElect</code>
Rename User View	<code>:DISPlay:VIEW:ADVanced:REName</code>
Delete User View	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Create User View	<code>:DISPlay:VIEW:ADVanced:NAME</code>
Select Screen	<code>:INSTrument:SCReen:SElect</code>
Delete Screen	<code>:INSTrument:SCReen:DElete</code>

Name	Command
Delete All But This Screen	:INSTrument:SCReen:DELeTe:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISP:ENABle OFF   ON   0   1
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON, but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON Set by :SYST:DEF MISC, but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISP:ENABle as it did in legacy analyzers

### 3.9.7 Frequency

Opens the **Frequency** menu, which contains controls that let you control the frequency and channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**. For example, **Center Frequency** is the same for all measurements – it does not change as you change measurements.

#### 3.9.7.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

#### Carrier Reference Frequency

Sets the reference frequency for all carriers. The center frequencies of carriers are defined as offset frequency from this value.

**Center Frequency** is equivalent to **Carrier Reference Frequency** if the following conditions are satisfied at the same time:

- Number of Component Carrier is 1
- **Center Frequency** Offset is 0 Hz
- **Center Frequency** mode is Auto

When the center frequency changes in such conditions, the Center Frequency mode remains Auto, and **Carrier Reference Frequency** changes to the same value. The major purpose of this coupling is for backwards compatibility with legacy LTE/LTE TDD, in which `:SENSe:FREQuency:CENTer` is used to set up the Frequency of the measurement.

Remote Command	<code>[ :SENSe]:CCARrier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFerence?</code>
Example	<code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code>
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency. Same as Center Frequency

### 3.9.8 Marker

Not supported in this measurement.

### 3.9.9 Meas Setup

The Meas Setup menu panel contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the mode.

#### 3.9.9.1 Settings

This tab enables you to set measurement parameters.

#### Average/Hold Number

Sets the number of data acquisitions that are averaged for every Component Carrier. The average number is global for all Component Carriers.

Remote Command	<code>[ :SENSe]:CEVM:AVERAge:COUNT &lt;integer&gt;</code>
----------------	---

	<code>[ :SENSe ] :CEVM:AVERage:COUNT?</code>
Example	<code>:CEVM:AVER:COUN 3</code> <code>:CEVM:AVER:COUN?</code>
Preset	10
State Saved	Yes
Min/Max	1/10000

## Averaging On/Off

Turns averaging on or off.

Remote Command	<code>[ :SENSe ] :CEVM:AVERage[ :STATe] OFF   ON   0   1</code> <code>[ :SENSe ] :CEVM:AVERage[ :STATe]?</code>
Example	<code>:EVM:AVER OFF</code> <code>:EVM:AVER?</code>
Preset	OFF
State Saved	Yes
Range	Off   On

## Meas Method

Selects the desired method for the CEVM measurement.

**NOTE**

This feature is available only when 85 MHz or wider analysis bandwidth option is installed.

- **NORMa1** – Measurement speed is not optimized
- **FAST** – Measurement speed is optimized and faster than NORMa1. However, measurement settings are limited even in the valid combination of the parameter values. The limitations for Fast mode, See "[Fast Mode Limitation](#)" on page 1868

Remote Command	<code>[ :SENSe ] :CEVM:METHod NORMa1   FAST</code> <code>[ :SENSe ] :CEVM:METHod?</code>
Example	<code>:CEVM:METH FAST</code> <code>:CEVM:METH?</code>
Dependencies	Available only when the Wideband DIF (85 MHz or wider) hardware is installed in the instrument Grayed-out in EXM, VXT, M9410E/11E/15E/16E, M9393A and M9391A. In these models, the Meas Method is restricted to NORMa1 only, FAST is not selectable

Preset	<b>NORMAL</b>
State Saved	Yes
Range	<b>Normal</b>   <b>Fast</b>

### Fast Mode Limitation

- For downlink signals, **FAST** mode can be used only for E-UTRA test models, the setup files can be recalled by using Recall, Data, EVM Setup
- For uplink signals, **FAST** mode only supports channel configuration for PUSCH, and other channels such as PUCCH are not supported. Multiple users are not supported in **FAST** mode. The auto function of the parameters must be **OFF**. See the table below for parameter values; all others must be preset value
- When Meas Method is **FAST**, EVM Minimization by IQ Imbalance is not valid and is always **OFF** to return the measurement results

Name	SCPI	Fast Mode
RB Auto Detection	[ :SENSe]:CEVM:CCARrier0 ... 4:PROFile:AUTO[:DETECT]	OFF
Analysis Boundary	[ :SENSe]:CEVM:CCARrier0 ... 4:TIME:ASBoundary	FRAME
Meas Interval/Offset	[ :SENSe]:CEVM:CCARrier0 ... 4:TIME:INTERval:SLOT [ :SENSe]:CEVM:CCARrier0 ... 4:TIME:OFFSet:SLOT [ :SENSe]:CEVM:CCARrier0 ... 4:TIME:OFFSet:SYMBOL	Same as <b>NORMAL</b> Mode
Sync Type	[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:SYNC:TYPE	RS
Cyclic Prefix Length	[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:SYNC:CPLength	<b>NORMAL</b>
Add User	[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:ADD:USER	Only <b>USER [1]</b> is valid
Include PUSCH	[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER:PUSCh	INCLude
PUSCH Active	[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER:PUSCh:ACTIve	ON
Include PUSCH DMRS	[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER:PUSCh:DMRS	INCLude
PUSCH Auto Calc Params	[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:DMRS:PARAmS	Same as <b>NORMAL</b> Mode
PUSCH n DMRS (1)	[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:DMRS:ONE	Same as <b>NORMAL</b> Mode
PUSCH n DMRS (2)	[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:DMRS:TWO	Same as <b>NORMAL</b> Mode

Name	SCPI	Fast Mode
Delta SS	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER:PUSCh:DSS</code>	Same as <b>NORMAL</b> Mode
Add PUSCH Slot	<code>[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:ADD:SLOT</code>	Same as <b>NORMAL</b> Mode
User PUSCH RB Start	<code>[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:RB:START</code>	Same as <b>NORMAL</b> Mode
PUSCH Start RB Couple	<code>[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:RB:START:COUPlE</code>	Same as <b>NORMAL</b> Mode
PUSCH Common RB End	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER:PUSCh:RB:END</code>	Same as <b>NORMAL</b> Mode
PUSCH End RB Couple	<code>[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:RB:END:COUPlE</code>	Same as <b>NORMAL</b> Mode
PUSCH Sync Slot	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER:PUSCh:SSLot</code>	Same as <b>NORMAL</b> Mode
PUSCH Sync Slot Auto	<code>[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:SSLot:AUTO</code>	<b>OFF</b>
PUSCH Common Mod Type	<code>[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER1   50:PUSCh:MODulation:TYPE</code>	Same as <b>NORMAL</b> Mode
Frequency Hopping	<code>[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER:PUSCh:FHOPping</code>	<b>OFF</b>
Group Hopping	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:ULINK:PROFile:USER:HOPping:GRoup</code>	Same as <b>NORMAL</b> Mode
Seq Hopping	<code>[ :SENSe]:CEVM:CCARrier0   ...   4:ULINK:PROFile:USER1   50:HOPping:SEQuence</code>	Same as <b>NORMAL</b> Mode
Equalizer Training	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:EQualizer:TRAIning</code>	<b>RSData</b>

## Spur Avoidance

Because VXT models M9410A/11A/15A and M9410E/11E/15E/16E are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. **Spur Avoidance** eliminates this spur, at the expense of some measurement speed.

When **Spur Avoidance** is enabled (**ON**: the default), the analyzer uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates when the  $BW \leq \max BW / 2.5$ .

You can disable this function to speed up your measurement. When **Spur Avoidance** is **OFF**, a warning message appears in the status bar as “Settings Alert; Spur Avoidance Off”. This is to alert you that measurement accuracy might be impacted because you have defeated the spur avoidance algorithm.

Remote Command	<code>[ :SENSe ] :CEVM:SAVoid[ :STATe ] ON   OFF   0   1</code> <code>[ :SENSe ] :CEVM:SAVoid[ :STATe ] ?</code>
Example	<code>:CEVM:SAVoid ON</code> <code>:CEVM:SAVoid ?</code>
Dependencies	Only appears in VXT models M9410A/11A/15A, M9410E/11E/15E/16E
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	<b>On   Off</b>

### Copy from Mod Analysis

This immediate action control provides parameter copy function from Mod Analysis Measurement to CEVM.

This feature is available both in LTE-A FDD and LTE V2X Modes.

**NOTE**

This immediate action copies LTE-Advanced demodulation parameters from the Mod Analysis Measurement to Conformance EVM Measurement. Note that the other parameters such as Attenuation (Range), Trigger, averaging parameters, IFBW, etc. are *not* copied from Mod Analysis Measurement.

Remote Command	<code>[ :SENSe ] :CEVM:EVM:COPY[ :IMMediate ]</code>
Example	<code>:CEVM:EVM:COPY</code>

### Meas Preset

Immediately sets all measurement parameters to their preset values. For more information, see the **Preset** control in the **System** section.

### EVM Minimization by IQ Imbalance (Remote Command only)

Selects whether or not IQ Imbalance will be used for EVM minimization algorithm for every component carrier.

Remote Command	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:EVMMinimize:IQIMbalance OFF   ON   0   1</code> <code>[ :SENSe]:CEVM:CCARrier0 ... 4:EVMMinimize:IQIMbalance?</code>
Example	<code>:CEVM:CCAR0:EVMM:IQIM OFF</code> <code>:CEVM:CCAR0:EVMM:IQIM?</code>
Dependencies	Enabled when EVM minimization is not OFF
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:CEVM:EVMMinimize:IQIMbalance</code>

### **IQ Imbalance Frequency Compensation (Remote Command only)**

Toggles Frequency Compensation for IQ Imbalance measurement results (IQ Gain Imbalance, IQ Quadrature Error) for Receiver Device Under Test (DUT) on or off. The Compensation is not valid for Transmitter DUT.

- **ON**: IQ Imbalance measurement results are compensated by taking account of Frequency Offset, which is added before IQ Imbalance addition on DUT
- **OFF**: IQ Imbalance measurement results are not compensated for the Frequency Offset

Remote Command	<code>[ :SENSe]:CEVM:CCARrier0 ... 4:IQIMbalance:FCOMpen ON   OFF</code> <code>[ :SENSe]:CEVM:CCARrier0 ... 4:IQIMbalance:FCOMpen?</code>
Example	<code>:CEVM:CCAR0:IQIM:FCOM ON</code> <code>:CEVM:CCAR0:IQIM:FCOM?</code>
Preset	OFF
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:CEVM:IQIMbalance:FCOMpen</code>

### **Result Values**

In CEVM, you can select results displayed in the Result Metrics View for every component carrier. These results are synchronized with the remote SCPI query results for index n = 1.

### **Downlink Result Output Selection (Remote Command only)**

The following table shows the mapping of the Array index and Result parameters.

Index	Result Parameter
1	EVM (%rms)
2	EVM Sym Time Adjust 1: Window Start, 2: Window End, 3: Center, 4: Custom
3	EVM Pk (%)
4	EVM Pk Index
5	EVM Peak Sub Car Index
6	Data EVM (%rms)
7	3GPP-defined QPSK EVM (%rms)
8	3GPP-defined 16QAM EVM (%rms)
9	3GPP-defined 64QAM EVM (%rms)
10	RS EVM (%rms)
11	RS Tx. Power (dBm)
12	OFDM Sym. Tx. Power (dBm)
13	Freq Error (Hz)
14	Sync Corr (%)
15	Sync Type 1 : P-SS, 20: Ant Port 0 RS, 21: Ant Port 1 RS, 22:Ant Port 2 RS, 23: Ant Port 3 RS
16	Common Tracking Error (%rms)
17	Symbol Clock Error (ppm)
18	Time Offset (s)
19	IQ Offset (dB)
20	IQ Gain Imbalance (dB)
21	IQ Quad Error (deg)
22	IQ Timing Skew (s)
23	CP Length Mode 1: Normal, 2: Extended
24	Cell ID
25	Cell ID Group/Sector Integer part: Cell ID Group, After the decimal point: Cell ID Sector
26	RS-OS / PRS 1: 3GPP, 4: Custom
27	Reference Signal Rx Power (Avg)
28	Reference Signal Rx Quality (dB)
29	Received Signal Strength Indicator (dBm)
30	Channel Power (dBm)
31	3GPP-defined 256QAM EVM (%rms)
31	3GPP-defined 1024QAM EVM (%rms)



Index	Result Parameter
20	IQ Gain Imbalance (dB)
21	IQ Quad Error (deg)
22	IQ Timing Skew (s)
23	CP Length Mode 1: Normal, 2: Extended
24	Channel Power (dBm)
25	In-band Emissions Result 0: PASS, 1: FAIL
26	In-band Emissions worst Margin (dB)
27	In-band Emissions worst Slot
28	In-band Emissions worst RB
29	Spectral Flatness Result 0: PASS, 1: FAIL
30	Spectral Flatness worst Margin (dB)
31	Spectral Flatness worst Slot
32	Spectral Flatness worst Subcarrier
33	3GPP-defined 256QAM EVM (%rms)

The following table shows the mapping of the Array index and Result parameters for V2X carrier.

Index	Result Parameter
1	EVM (%rms)
2	EVM Sym Time Adjust 1: Window Start, 2: Window End, 3: Center, 4: Custom
3	EVM Pk (%)
4	EVM Pk Index
5	EVM Peak Sub Car Index
6	Data EVM (%rms)
7	3GPP-defined QPSK EVM (%rms)
8	3GPP-defined 16QAM EVM (%rms)
9	3GPP-defined 64QAM EVM (%rms)
10	RS EVM (%rms)
11	Reserved
12	Reserved
13	Freq Error (Hz)
14	Sync Corr (%)
15	Sync Type



Remote Command	<code>[ :SENSe]:CEVM:DLINK:RESult:ALL ON   OFF   0   1</code>
Example	<code>:CEVM:DLIN:RES:ALL 0</code>
State Saved	No

### Uplink Set All Results (Remote Command only)

This action command sets all "Uplink Result Output Selection (Remote Command only)" on page 1873 to 0 or 1 at once. It works whenever the command is sent, regardless of the current result status.

Remote Command	<code>[ :SENSe]:CEVM:ULINK:RESult:ALL ON   OFF   0   1</code>
Example	<code>:CEVM:ULIN:RES:ALL 0</code>
State Saved	No

### Get Measurement Item List (Remote Query only)

Returns a comma-delimited string list of the current active measurement item in "Result Metrics" on page 1812 View.

Remote Command	<code>:CALCulate:CEVM:RESult:NAMes?</code>
Example	<code>:CALC:CEVM:RES:NAM?</code>
Notes	<p>The result depends on Radio Standard Direction, "Downlink Result Output Selection (Remote Command only)" on page 1871 or "Uplink Result Output Selection (Remote Command only)" on page 1873</p> <p>This query provides information about the content of the <code>READ:CEVM?</code> result. The result strings may change in future releases</p>
State Saved	No

## 3.9.9.2 Radio

Contains controls to select link direction.

### Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

Remote Command	<code>[ :SENSe]:RADio:STANdard:DIRectioN DLINK   ULINK</code> <code>[ :SENSe]:RADio:STANdard:DIRectioN?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

## eMTC Analysis

Enable/Disables the eMTC analysis function.

Remote Command	<code>[ :SENSe]:RADio:STANdard:EMTC[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:RADio:STANdard:EMTC[:STATe]?</code>
Example	<code>:RAD:EMTC:STAT OFF</code>
Dependencies	This parameter requires N9080EM3E license
Preset	OFF
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:EMTC[:STATe]</code>

## Interfering Signal Present

Sets whether interfering signal for the intermodulation tests exists or not. If exists, limits are not evaluated over the interference signal frequency range specified by the span and the center frequency parameters in ACP, SEM and Spurious Emissions.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:RADio:IMODulation:INTerference[:STATe]?</code>
Example	<code>:RAD:IMOD:INT 1</code> <code>:RAD:IMOD:INT?</code>
Preset	OFF

State Saved	Saved in instrument state
Range	Yes No

## Freq Offset from Edge

Sets the center frequency of the interference signal for intermodulation tests. The frequency is set as offset frequency from the BS RF bandwidth edge. Interference Offset Side determines on which side of the BS RF bandwidth the interference signal exists.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:FREQuency:OFFSet?</code>
Example	<code>:RAD:IMOD:INT:FREQ:OFFS 5MHz</code> <code>:RAD:IMOD:INT:FREQ:OFFS?</code>
Preset	5MHz
State Saved	Saved in instrument state
Min/Max	0 Hz / 20.0 MHz

## Span

Sets the span of the interference signal for intermodulation tests.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN &lt;freq&gt;</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SPAN?</code>
Example	<code>:RAD:IMOD:INT:SPAN 5MHz</code> <code>:RAD:IMOD:INT:SPAN?</code>
Preset	5 MHz
State Saved	Saved in instrument state
Min/Max	200 kHz / 20.0 MHz

## Offset Side

Sets which side of the BS RF bandwidth the interference signal exists on.

Remote Command	<code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE NEGative   POSitive</code> <code>[ :SENSe]:RADio:IMODulation:INTerference:SIDE?</code>
Example	<code>:RAD:IMOD:INT:SIDE POS</code> <code>:RAD:IMOD:INT:SIDE?</code>
Preset	POSitive
State Saved	Saved in instrument state

### Non-Contiguous Interference Region

Sets the region the interfering signal exists at in the Non-Contiguous mode:

- INNER – The interfering signal exists at the inner region. This setting is only effective when Carrier Alloc is Non-Contiguous. When in Contiguous, the interference region is always outside regardless of the selection of this parameter
- OUTER – The interfering signal exists at either of the outer regions

Remote Command	<code>[ :SENSe ]:RADio:IMODulation:INTerference:REGion INNER   OUTER</code> <code>[ :SENSe ]:RADio:IMODulation:INTerference:REGion?</code>
Example	<code>:RAD:IMOD:INT:REG OUT</code> <code>:RAD:IMOD:INT:REG?</code>
Preset	OUTer
State Saved	Saved in instrument state

#### 3.9.9.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe ]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe ]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

## Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[ :SENSe ] :CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe ] :CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

## Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

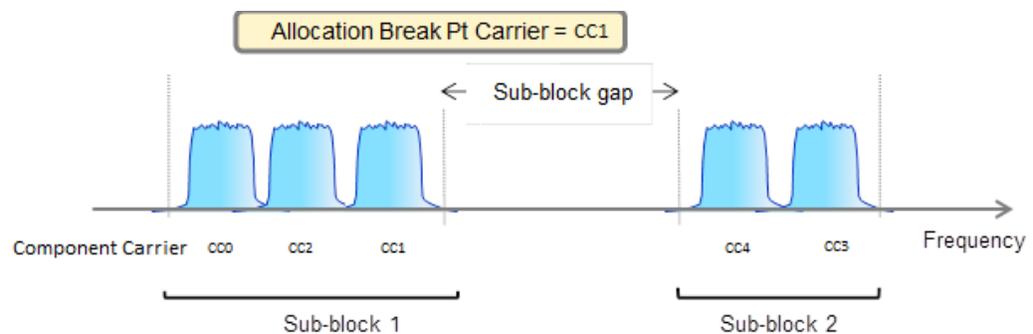

Remote Command `[ :SENSe ] :CCARrier:CONFig:ALLocation:NCONTiguous:ABPoint CC0 | ... | CC4`

	<a href="#">[:SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</a>
Example	<a href="#">:CCAR:CONF:ALL:NCON:ABP CC0</a> <a href="#">:CCAR:CONF:ALL:NCON:ABP?</a>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

## Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

## Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

## Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

## Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

## Non-Contiguous Break at

See ["Non-Contiguous Break at" on page 2246](#).

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<a href="#">[:SENSe]:CCARrier0[...]:4:RADIo:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</a>
----------------	--

	<code>[ :SENSe ] : CCARrier0   ...   4 : RADio : STANdard : BANDwidth ?</code>
Example	<code>:CCAR4 : RAD : STAN : BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe ] : RADio : STANdard : BANDwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe ] : CCARrier0   ...   4 [ :STATe ] OFF   ON   0   1</code> <code>[ :SENSe ] : CCARrier0   ...   4 [ :STATe ] ?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0 ?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe ] : CCARrier&lt;n&gt; : FREQuency : OFFSet &lt;freq&gt;</code> <code>[ :SENSe ] : CCARrier&lt;n&gt; : FREQuency : OFFSet ?</code>
Example	<code>:CCAR4 : FREQ : OFFS 10MHz</code> <code>:CCAR4 : FREQ : OFFS ?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMAl   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:DGPU?</code>
Example	<code>:CCAR0:RAD:STAN:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:DGPU</code>

## Sidelink Mode

Set the sidelink mode per uplink component carrier. The setting is used to indicate whether the component carrier is cellular LTE or sidelink V2X. There are two modes listed as below:

- None: The component carrier is legacy LTE uplink carrier. The lte uplink parameters per carrier are in scope
- V2X: The component carrier is sidelink V2X carrier. The sidelink parameters per carrier are in scope

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:SLINK:MODE NONE   V2X</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:SLINK:MODE?</code>
----------------	--

Example	<code>:CCAR4:RAD:SLIN:MODE V2X</code>
Notes	The setting is available when Direction is Uplink with the required license
State Saved	Yes
Range	None   V2X

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carriers in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>																
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>																
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode																
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>CHP Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.4 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>3 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>10 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>15 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>20 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>200 kHz</td> </tr> </tbody> </table>	System Bandwidth	CHP Integ BW	1.4 MHz (B1M4)	1.4 MHz	3 MHz (B3M)	3 MHz	5 MHz (B5M)	5 MHz	10 MHz (B10M)	10 MHz	15 MHz (B15M)	15 MHz	20 MHz (B20M)	20 MHz	200 kHz(B200K)	200 kHz
System Bandwidth	CHP Integ BW																
1.4 MHz (B1M4)	1.4 MHz																
3 MHz (B3M)	3 MHz																
5 MHz (B5M)	5 MHz																
10 MHz (B10M)	10 MHz																
15 MHz (B15M)	15 MHz																
20 MHz (B20M)	20 MHz																
200 kHz(B200K)	200 kHz																
Preset	5 MHz																
State Saved	Saved in instrument state																
Min	100 kHz																
Max	20 MHz																
Backwards Compatibility SCPI	<code>[ :SENSe]:CHPower:BANDwidth:INTEgration</code> <code>[ :SENSe]:CHPower:BWIDth:INTEgration</code>																

## ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration?</code>																								
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>																								
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS ACP Meas Noise BW</th> <th>MS ACP Meas Noise BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Yes																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPpower:CARRier[1] 2:LIST:BANDwidth[:INTEgration]</code> <code>[ :SENSe]:ACPpower:CARRier[1] 2:LIST:BWIDth[:INTEgration]</code>																								

## SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System

Bandwidth	
<b>System Bandwidth</b>	<b>BTS SEM Integ BW</b>
<b>MS SEM Integ BW</b>	
1.4 MHz (B1M4)	1.095 MHz
3 MHz (B3M)	2.715 MHz
5 MHz (B5M)	4.515 MHz
10 MHz (B10M)	9.015 MHz
15 MHz (B15M)	13.515 MHz
20 MHz (B20M)	18.015 MHz
200 kHz(B200K)	180 kHz
Preset	4.515 MHz 4.5 MHz
State Saved	Saved in instrument state
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] : SEMask : BANDwidth [ 1 ]   2 : INTEgration</code>

## Carrier Config Presets

Lets you configure the Component Carrier presets.

## Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe ] : CCARrier : CONFig : RFBW &lt;freq&gt;</code> <code>[ :SENSe ] : CCARrier : CONFig : RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

## Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e. Channel spacing =  $(BW_{\text{chan1}} + BW_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code> <code>:CCAR:CONF:SPAC:DELTA?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

## Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

## ETC1 Attributes

Sets ETC1 carrier configuration.

## Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BA NDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BA NDwidth?</code>
Example	<code>:CCAR:CONF:ETC1:BA ND B5M</code> <code>:CCAR:CONF:ETC1:BA ND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BA NDwidth:NA RRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BA NDwidth:NA RRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BA ND:NA RR B1M4</code> <code>:CCAR:CONF:ETC1:BA ND:NA RR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

## ETC2 Attributes

Sets ETC2 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

### Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative – Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive – Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BAWdwidth:SIDE NEGative   POSitive</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BAWdwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAWd:SIDE NEG</code> <code>:CCAR:CONF:ETC2:BAWd:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

## Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:Bandwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:Bandwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M</code> <code>:CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

## ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC3:Bandwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC3:Bandwidth?</code>
Example	<code>:CCAR:CONF:ETC3:BAND B5M</code> <code>:CCAR:CONF:ETC3:BAND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### 3.9.9.4 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

## System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command RAD:STAN:PRES B5M or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote Command	<code>[ :SENSe ] :RADio :STANdard :PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:RADio:STANdard:PRESet:ULDL?</code>
Example	<code>:RAD:STAN:PRESet:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUUDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

## Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
Example	<code>:RAD:STAN:PRESet:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9

Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

## Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[ :SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

## Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>
Example	<code>:RAD:MINT 1</code>
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	This parameter is disabled when all the below conditions are met at the same time:

3 LTE & LTE-A TDD Mode  
3.9 Conformance EVM

---

- System BW is “200 kHz (NB-IoT)”
- Direction is “uplink”
- NB-IoT Subcarrier Spacing is “3.75kHz”
- Meas NPRACH is “OFF”

---

Couplings	<p>Disabled when the “Measure PRACH” is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel</p> <p>For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH:</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th style="text-align: left;">Meas NPRACH</th> <th style="text-align: left;">Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						

---

Preset	1
State Saved	Yes
Min	1
Max	20, when System BW is NOT “200 kHz (NB-IoT)” 16, otherwise

---

Backwards Compatibility SCPI	LTE: <code>[ :SENSe ] :PVTime :MINTerval</code>
------------------------------	--

### CP Length

Specifies whether the cyclic prefix is configured as NORMal or EXTended for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

---

Remote Command	<code>[ :SENSe ] :RADio :CPLength NORMal   EXTended</code> <code>[ :SENSe ] :RADio :CPLength?</code>
Example	<code>:RAD:CPL NORM</code>
Notes	The backwards compatible SCPI command <code>[ :SENSe ] :PVTime :CPLength</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to “200 kHz (NB-IoT)” and Direction is “uplink”
Couplings	Set to NORMal when System BW is set to “200 kHz (NB-IoT)”
Preset	NORMal
State Saved	Yes

Range	Normal Extended
Backwards Compatibility SCPI	LTE: [:SENSe]:PVTime:CPLength

## Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	[:SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS [:SENSe]:RADio:MEASure?
Example	:RAD:MEAS OFF
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

## Reference Config

Specifies which component carrier's UL/DL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On/Off Power and Modulation Analysis measurements.

Remote Command	[:SENSe]:RADio:RCONfig CC0   ...   CC4 [:SENSe]:RADio:RCONfig?
Example	:RAD:RCON CC0
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

## 3.9.10 Sweep

The Sweep key contains controls which allow you to control the sweep and measurement functions of the analyzer, such as the sweep or measurement time and whether in Single sweep/measure or Continuous sweep/measure mode.

### 3.9.10.1 Sweep/Control

This tab accesses controls that enable you to operate the Sweep and Control functions of the analyzer.

#### Sweep/Measure

Allows you to toggle between Continuous and Single sweep or measurement operation. The single/continuous state is Meas Global so the setting will affect all measurements.

The front-panel key **Single/Cont** performs this exact same function

See "[More Information](#)" on page 1897

Remote Command	:INITiate:CONTinuous OFF   ON   0   1 :INITiate:CONTinuous?
Example	INIT:CONT 0 !puts analyzer in Single measurement operation. INIT:CONT OFF !puts analyzer in Single measurement operation. INIT:CONT 1 !puts analyzer in Continuous measurement operation. INIT:CONT ON !puts analyzer in Continuous measurement operation
Preset	ON (Note that SYST:PRESet sets INIT:CONT to ON but *RST sets INIT:CONT to OFF)
State Saved	Saved in instrument state
Annunciation	The Single/Continuous icon in the Meas Bar changes depending on the setting. A line with an arrow is single, a loop with an arrow is Continuous.
Backwards Compatibility Notes	See the description of this control in the Swept SA measurement

#### More Information

With **Avg/Hold Num** (in the **Meas Setup** menu) set to **Off** or set to **On** with a value of 1, a sweep is taken after the trigger condition is met; and the analyzer continues to take new sweeps after the current sweep has completed and the trigger condition is

again met. However, with **Avg/Hold Num** set to On with a value >1, multiple sweeps (data acquisitions) are taken for the measurement. The trigger condition must be met prior to each sweep. The sweep is not stopped when the average count k equals the number N set for Avg/Hold Num is reached, but the number k stops incrementing. A measurement average usually applies to all traces, marker results, and numeric results. But sometimes it only applies to the numeric results.

If the analyzer is in Single measurement, pressing the **Cont/Single** toggle control does not change k and does not cause the sweep to be reset; the only action is to put the analyzer into Continuous measurement operation.

If it is already in continuous sweep:

- the INIT:CONT 1 command has no effect
- the INIT:CONT 0 command will place the analyzer in Single Sweep but will have no effect on the current sequence until k = N, at which point the current sequence will stop and the instrument will go to the idle state.

See "[Restart](#)" on page 1898 control description for details on the INIT:IMMEDIATE (Restart) function.

If you are already in single sweep, the **INIT:CONT OFF** command has no effect.

If you are already in Single Sweep, then pressing the **Cont/Single** toggle control in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing the **Cont/Single** toggle control does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the analyzer is waiting for a trigger). Even though pressing the **Cont/Single** toggle control in the middle of a sweep does not restart the sweep, sending INIT:IMMEDIATE does reset it.

## Restart

The Restart function restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing Restart does a Resume.

The front-panel key **Restart** performs this exact same function

The Restart function is accessed in several ways:

- Pressing the Restart key
- Sending the remote command INIT:IMMEDIATE
- Sending the remote command INIT:RESTART

See "[More Information](#)" on page 1899

Remote Command	:INITiate[:IMMEDIATE] :INITiate:REStart
Example	INIT:IMM INIT:REST
Notes	:INITiate:REStart and :INITiate:IMMEDIATE perform exactly the same function.
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update=on) traces with new current data. For application modes, it resets other parameters as required by the measurement.
Status Bits/OPC dependencies	This is an Overlapped command. The STATus:OPERation register bits 0 through 8 are cleared. The STATus:QUESTionable register bit 9 (INTEgrity sum) is cleared. The SWEEPING bit is set. The MEASURING bit is set.
Backwards Compatibility Notes	For Spectrum Analysis mode in ESA and PSA, the <b>Restart</b> hardkey and the INITiate:REStart command restart trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> . In the X-Series, the <b>Restart</b> hardkey and the INITiate:REStart command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well. For wireless comms modes in ESA and PSA, the <b>Restart</b> hardkey and the INITiate:REStart command restart every measurement, which includes all traces and numeric results. There is no change to this operation.

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is in the process of aligning when a Restart is executed, the alignment finishes before the restart function is performed.

Even when set for Single operation, multiple sweeps may be taken when Restart is pressed (for example, when averaging/holding is on). Thus when we say that Restart "restarts a measurement," we may mean:

- It restarts the current sweep
- It restarts the current measurement
- It restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold

- It restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement
- depending on the current settings.

With Average/Hold Number (in Meas Setup menu) set to 1, or Averaging off, or no trace in Trace Average or Hold, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the analyzer stops sweeping once that sweep has completed. However, with Average/Hold Number >1 and at least one trace set to Trace Average, Max Hold, or Min Hold (SA Measurement) or Averaging on (most other measurements), multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for Average/Hold Number. A measurement average usually applies to all traces, marker results, and numeric results; but sometimes it only applies to the numeric results.

Once the full set of sweeps has been taken, the analyzer will go to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the step up key while Average/Hold Number is the active function, or sending the remote command CALC:AVER:TCON UP.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When Paused, the label on the control changes to Resume. Pressing Resume unpauses the measurement. When you are Paused, pressing **Restart** does a Resume.

Remote Command	<code>:INITiate:PAUSE</code>
Example	<code>INIT:PAUS</code>
Dependencies	Not displayed in Modes that do not support Pausing.
Annotation	Only on control

Remote Command	<code>:INITiate:RESume</code>
Example	<code>INIT:RES</code>
Dependencies	Not displayed in Modes that do not support Pausing.
Annotation	Only on control

## Abort (Remote Command Only)

This command is used to stop the current measurement. It aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the analyzer is in the process of aligning

when ABORt is sent, the alignment finishes before the abort function is performed. So ABORt does not abort an alignment.

If the analyzer is set for Continuous measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the analyzer is set for Single measurement, it remains in the "idle" state until an :INIT:IMM command is received.

Remote Command	:ABORt
Example	ABOR
Notes	If :INITiate:CONTInuous is ON, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met. If :INITiate:CONTInuous is OFF, then :INITiate:IMMEDIATE is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met.
Dependencies	For continuous measurement, ABORt is equivalent to the Restart key. Not all measurements support the abort command.
Status Bits/OPC dependencies	The STATus:OPERation register bits 0 through 8 are cleared. The STATus:QUESTionable register bit 9 (INTEgrity sum) is cleared. Since all the bits that feed into OPC are cleared by the ABORt, the ABORt will cause the *OPC query to return true.

### 3.9.10.2 Recording

Contains parameters for recording.

See the **Save** and **Recall** sections under **Recording** for more information on how to load and save recording files.

See **Sweep** under **Playback** for more information about how to manage and play recordings.

#### Sample Rate (Display Only)

Display the sample rate of saved IQ data file.

#### Sample Points (Display Only)

Display the total sample number of saved IQ data file.

#### Sample Time (Display Only)

Display the total sample time of saved IQ data file.

### 3.9.10.3 Playback

Accesses controls that let you set the parameters for playback.

See the **Save** and **Recall** sections under **Recording** for more information on how to load and save recording files.

See **Sweep** under **Recording** for more information about how to manage and play recordings.

#### Playback Start

Specifies the start position of the IQ data playback range to be analyzed. When its value < 0, additional zero will be insert at the beginning of IQ data.

Remote Command	<code>:CALCulate:CEVM:PLAY:START &lt;time&gt;</code> <code>:CALCulate:CEVM:PLAY:START?</code>
Example	<code>:CALC:CEVM:PLAY:STAR 0.01 s</code> <code>:CALC:CEVM:PLAY:STAR?</code>
Preset	0
State Saved	Saved in instrument state
Min	-0.1
Max	Sample Points in IQ file / Sample Rate in IQ file

#### Sample Rate

Displays sample rate of recalled IQ data file if recalled file format contains sampling rate information(`.csv`, `.sdf`, `.txt`).

Sets sampling rate to playback recalled IQ data if recalled file format is `.bin` or `.binx`, which do not contain sampling rate information.

Remote Command	<code>:CALCulate:CEVM:PLAY:SRATE &lt;freq&gt;</code> <code>:CALCulate:CEVM:PLAY:SRATE?</code>
Example	<code>:CALC:CEVM:PLAY:SRAT 122.88MHz</code> <code>:CALC:CEVM:PLAY:SRAT?</code>
Couplings	Display only after <code>.csv</code> , <code>.sdf</code> , <code>.txt</code> file recalling Settable after <code>.bin</code> or <code>.binx</code> file recalling
Preset	0
State Saved	No

### **Sample Points (Display Only)**

Displays the total sample number of recalled IQ data file.

### **Sample Time (Display Only)**

Displays the total sample time of recalled IQ data file.

### **Input Channels (Display Only)**

Display input channel number of recalled IQ data files.

This control aims at multi-channel I/Q data recording and playback, and is *only* available in 5G NR's EVM and WLAN's MIMO EVM.

### **3.9.11 Trace**

Not supported in this measurement.

## 3.10 Power Stat CCDF Measurement

Many modern digitally-modulated signals look noise-like in the time and frequency domain, requiring statistical measurement of these signals for meaningful characterization and differentiation. The **Power Statistics Complementary Cumulative Distribution Function (CCDF)** measurement displays curves to characterize the higher-level power statistics of digitally modulated signals. The curves can be useful in determining design parameters for digital communications systems.

The Power Statistics CCDF measurement displays probability on the Y-Axis and amplitude on the X-axis, for a display of the statistical amplitude distribution of a signal. This distribution can be affected by many factors. For example, modulation filtering, modulation format, combining the multiple signals at different frequencies, number of active codes, and correlation between symbols on different codes with spread spectrum systems will all affect measurement results. These factors are all related to modulation and signal parameters. External factors such as signal compression and expansion by nonlinear components, group delay distortion from filtering, and power control within the observation interval also affect the measurement.

The power measured in power statistics CCDF curves is actually instantaneous envelope power defined by the equation:

$$P = (I^2 + Q^2) / Z_0$$

where I & Q are the quadrature voltage components of the waveform, and  $Z_0$  is the characteristic impedance.

A CCDF curve is defined by how much time the waveform spends at or above a given power level. The percent of time the signal spends at or above the level defines the probability for that particular power level. For capturing a lower probability down to 0.0001%, this measurement is made in the single mode by pressing Single. To make the power statistics CCDF measurement, the instrument uses digital signal processing (DSP) to sample the input signal in the channel bandwidth. The Gaussian distribution line as the band-limited Gaussian noise CCDF reference line, the user-definable reference trace, and the currently measured trace can be displayed on a semi-log graph. If the currently measured trace is above the user reference trace, it means that the higher peak power levels against the average power are included in the input signal.

### Power Stat CCDF Measurement Commands

The general functionality of ["CONFigure" on page 2997](#), ["INITiate" on page 2998](#), ["FETCh" on page 2998](#), ["MEASure" on page 3000](#), and ["READ" on page 2999](#) are described in the section **SCPI Operation and Results Query** in the topic

### Programming the Instrument.

The following measurement commands and queries are used to configure the measurement:

<code>:INITiate:PSTatistic</code>	Initiates a trigger cycle for the <b>PST</b> measurement, but does not return any data. You must then use <code>:FETC:PST[n]?</code> to retrieve data
<code>:CONFigure?</code>	Does not change any measurement settings Returns the long form name of current measurement, in this case, <b>PSTatistic</b>
<code>:CONFigure:PSTatistic</code>	Selects <b>PST</b> measurement with Meas Setup settings in preset state – same as "Meas Preset" on page 1981
<code>:CONFigure:PSTatistic:NDEFault</code>	Selects <b>PST</b> measurement <i>without</i> affecting settings

The following queries are used to retrieve the results:

<code>:FETCh:PSTatistic?</code>	Retrieves the data specified by <b>n</b>
<code>:MEASure:PSTatistic[n]?</code>	Switches to <b>PST</b> measurement, restores default values, starts the measurement, then retrieves the data specified by <b>n</b>
<code>:READ:PSTatistic[n]?</code>	Starts the measurement, then retrieves the data specified by <b>n</b>

### Measurement Results for Power Stat CCDF

The following table describes the results returned by the `:FETCh`, `:MEASure`, and `:READ` queries listed above, according to the index value **n**.

<b>n</b>	<b>Results Returned</b>																								
0	Returns unprocessed I/Q trace data, as a series of trace point values, in volts. The I values are listed first in each pair, using the 0 through even-indexed values. The Q values are the odd-indexed values																								
1, or not specified	Returns 11 scalar results: <table border="1" data-bbox="357 1396 1404 1757"> <thead> <tr> <th>#</th> <th>Item</th> <th>Unit, if any</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Average input power</td> <td>dBm</td> </tr> <tr> <td>2</td> <td>Probability at the average input power level</td> <td>%</td> </tr> <tr> <td>3</td> <td>Power level that has 10 % of the power</td> <td></td> </tr> <tr> <td>4</td> <td>Power level that has 1 % of the power</td> <td></td> </tr> <tr> <td>5</td> <td>Power level that has 0.1 % of the power</td> <td></td> </tr> <tr> <td>6</td> <td>Power level that has 0.01 % of the power</td> <td></td> </tr> <tr> <td>7</td> <td>Power level that has 0.001 % of the power</td> <td></td> </tr> </tbody> </table>	#	Item	Unit, if any	1	Average input power	dBm	2	Probability at the average input power level	%	3	Power level that has 10 % of the power		4	Power level that has 1 % of the power		5	Power level that has 0.1 % of the power		6	Power level that has 0.01 % of the power		7	Power level that has 0.001 % of the power	
#	Item	Unit, if any																							
1	Average input power	dBm																							
2	Probability at the average input power level	%																							
3	Power level that has 10 % of the power																								
4	Power level that has 1 % of the power																								
5	Power level that has 0.1 % of the power																								
6	Power level that has 0.01 % of the power																								
7	Power level that has 0.001 % of the power																								

Results Returned		
#	Item	Unit, if any
8	Power level that has 0.0001 % of the power	
9	Peak power	dB
10	Count	
11	Power level that has 0.00001% of the power if "Minimum Probability" on page 1911 is PP7 (0.00001 %) This value is returned only when PP7 is selected	
2	<p>Returns a series of 5001 floating point numbers (in percent) that represent the current measured power stat trace. This is the probability at particular power levels (average power), in the following order:</p> <ol style="list-style-type: none"> <li>1. Probability at 0.0 dB power</li> <li>2. Probability at 0.01 dB power</li> <li>3. Probability at 0.02 dB power</li> </ol> <p>...</p> <ol style="list-style-type: none"> <li>5000. Probability at 49.9 dB power</li> <li>5001. Probability at 50.0 dB power</li> </ol>	
3	<p>Returns a series of 5001 floating point numbers (in percent) that represent the Gaussian trace. This is the probability at particular power levels (average power), in the following order:</p> <ol style="list-style-type: none"> <li>1. Probability at 0.0 dB power</li> <li>2. Probability at 0.01 dB power</li> <li>3. Probability at 0.02 dB power</li> </ol> <p>...</p> <ol style="list-style-type: none"> <li>5000. Probability at 49.9 dB power</li> <li>5001. Probability at 50.0 dB power</li> </ol>	
4	<p>Returns a series of 5001 floating point numbers (in percent) that represent the user-definable reference trace. This is the probability at particular power levels (average power), in the following order:</p> <ol style="list-style-type: none"> <li>1. Probability at 0.0 dB power</li> <li>2. Probability at 0.01 dB power</li> <li>3. Probability at 0.02 dB power</li> </ol> <p>...</p> <ol style="list-style-type: none"> <li>5000. Probability at 49.9 dB power</li> <li>5001. Probability at 50.0 dB power</li> </ol>	

### 3.10.1 Views

In the **LTEATDD** and **5GNR** Modes, this measurement has two views: "**Normal**" on page 1907 and **Slot**. In all other Modes, there is only a single view (**Normal**). For the SCPI command to select **Slot** View, see "**Slot View**" on page 1957.

These are multiple-window Views. When in a multiple-window View, you select a window by touching it. The menu controls may sometimes change depending on which window is selected.

### 3.10.1.1 Normal

Windows: ["Metrics" on page 1910](#), ["Graph" on page 1907](#)

The Power Stat CCDF measurement provides CCDF curves and power statistics metrics. This is common for both Uplink (MS) and Downlink (BTS).

---

Example `:PST:SLTV OFF`

### 3.10.1.2 Slot

Windows: ["Metrics" on page 1910](#), ["Graph" on page 1907](#), ["Slot" on page 1909](#)

Adds the signal wave window to Power Stat CCDF measurement curves and Power statistics metrics.

To select this view, set **Display > Settings > "Slot View" on page 1957**. to **ON**.

---

Example `:PST:SLTV ON`

Dependencies Only available in LTEATDD and 5GNR Modes

## 3.10.2 Windows


Three window types are defined:

1. ["Graph" on page 1907](#)
2. ["Slot" on page 1909](#)
3. ["Metrics" on page 1910](#)


**Slot** only appears in LTEATDD and 5GNR Modes.

### 3.10.2.1 Graph

Displays Amplitude versus probability

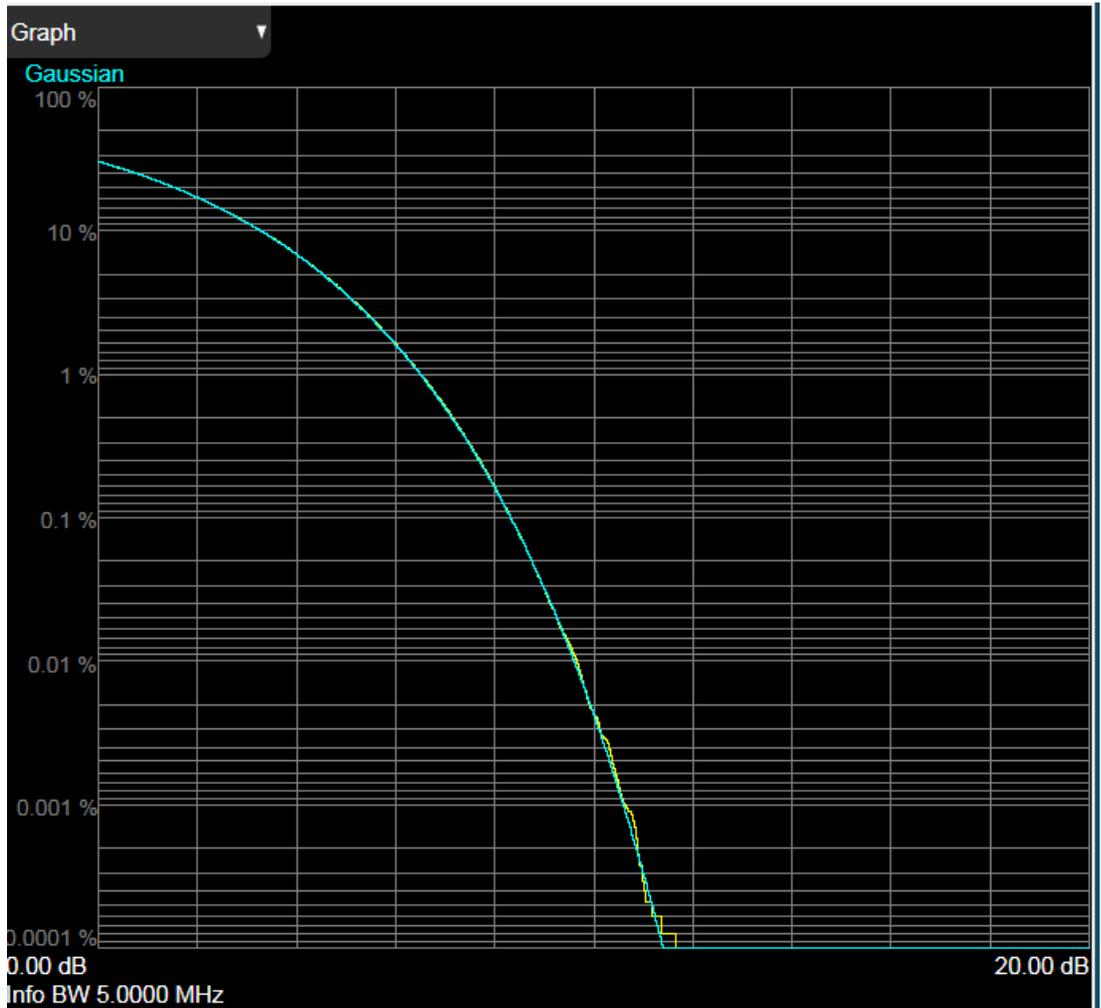


3.10.2.2 Slot

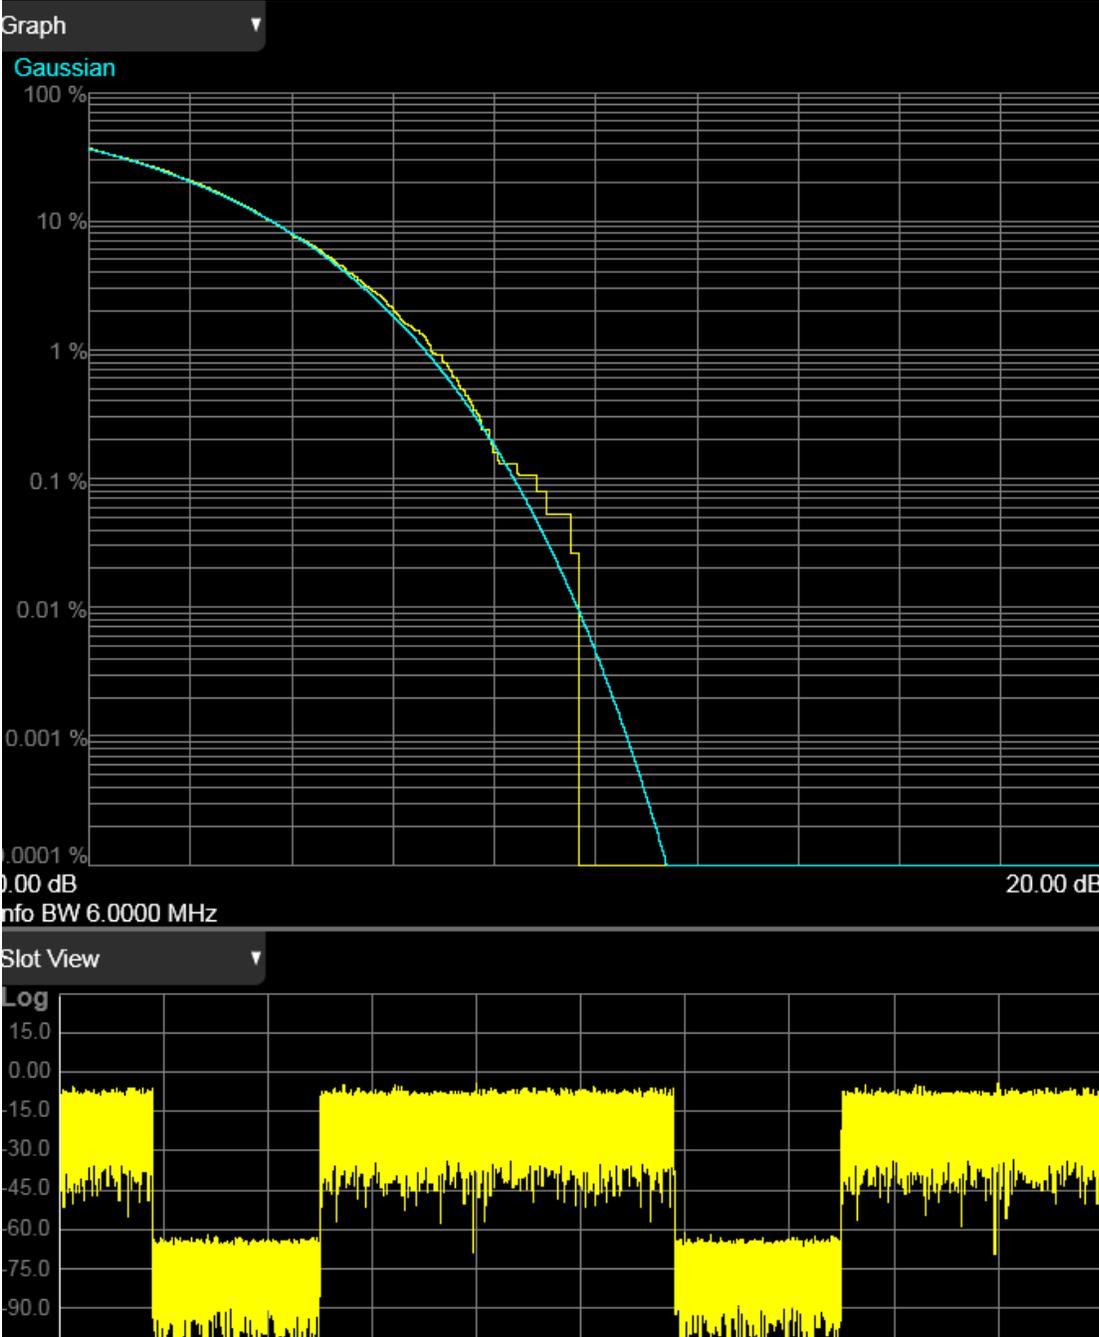

Only appears in LTEATDD and 5GNR Modes, and only in the View called "Slot" on [page 1907](#)

### 3.10.2.3 Metrics

Displays the textual results of the Power Stat CCDF measurement.

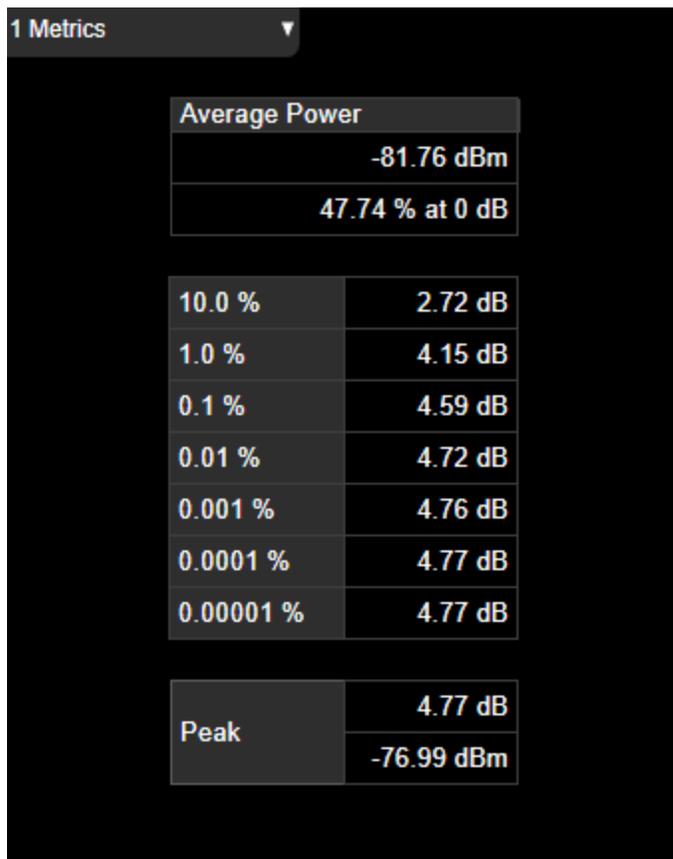

For the list of  $n = 1$  measurement results, see "[Measurement Results for Power Stat CCDF](#)" on page 1905 above.

Name	Unit	Corresponding Results	Results Item for $n = 1$	Explanation
Average Power	dBm	Average input power	1	99.99 dBm
Average Power	%	Probability at the average input power level	2	99.99 %
10.0%	dB	Power level that has 10 % of the power	3	99.99 dB
1.0%	dB	Power level that has 1 % of the power	4	99.99 dB
0.1%	dB	Power level that has 0.1 % of	5	99.99 dB

Name	Unit	Corresponding Results	Results Item for n = 1	Explanation
		the power		
0.01%	dB	Power level that has 0.01 % of the power	6	99.99 dB
0.001%	dB	Power level that has 0.001 % of the power	7	99.99 dB
0.0001%	dB	Power level that has 0.0001 % of the power	8	99.99 dB
0.00001%	dB	Power level that has 0.00001% of the power if " <b>Minimum Probability</b> " on page 1911 is PP7 (0.00001 %)	11	99.99 dB
Peak	dB	Peak power	9	99.99 dB
Peak	dBm	Not available via remote commands	n/a	99.99 dBm

### 3.10.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

#### 3.10.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

#### Minimum Probability

Sets the minimum probability range.

Remote Command	<code>:CALCulate:PStatistic:RANGe[:PROBability]:MINimum PP2   ...   PP7</code> For parameter values, see " <b>Parameter Options</b> " on page 1912 below <code>:CALCulate:PStatistic:RANGe[:PROBability]:MINimum?</code>
Example	<code>:CALC:PST:RANG:MIN PP6</code> <code>:CALC:PST:RANG:MIN?</code>

Preset	PP6
State Saved	Yes
Range	1 %   0.1 %   0.01 %   0.001 %   0.0001 %   0.00001 %

### Parameter Options

Option	Value
PP2	1.0e-2 (1 %)
PP3	1.0e-3 (0.1 %)
PP4	1.0e-4 (0.01 %)
PP5	1.0e-5 (0.001 %)
PP6	1.0e-6 (0.0001 %)
PP7	1.0e-7 (0.00001 %)

#### 3.10.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See "[Dual-Attenuator Configurations](#)" on page 1913
- See "[Single-Attenuator Configuration](#)" on page 1913


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the <b>Range</b> tab in that case
--------------	--

### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

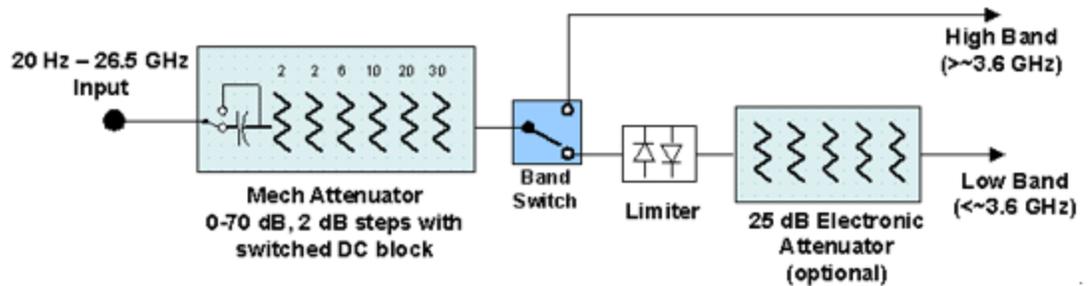


Configuration 2: Mechanical attenuator, no optional electronic attenuator

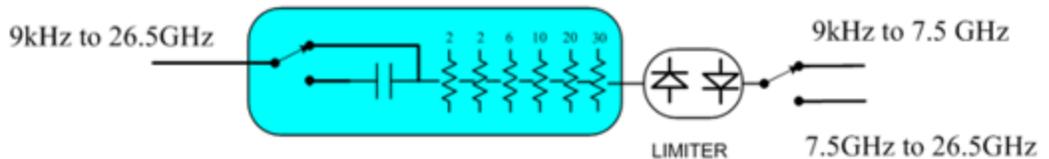

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

### Single-Attenuator Configuration

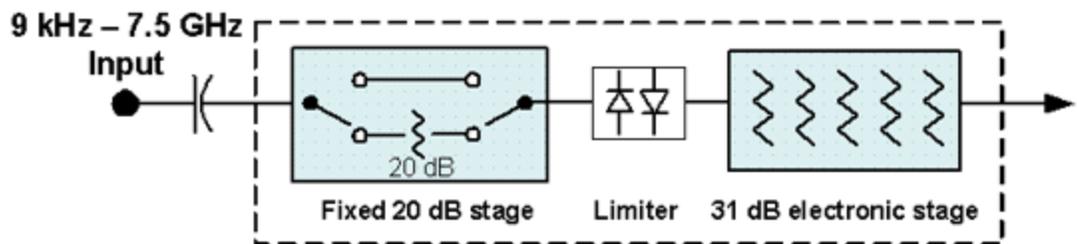

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

## Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_ampl&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and <b>"Mech Atten"</b> on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	When the <b>Input</b> is <b>RF</b> , and the <b>Input Port</b> is <b>RF Input 2</b> , and the Full Range Attenuator is installed:

---

On the Meas Bar, the field “Atten” displays as follows:

- If the sweep is entirely < 50 GHz, the value shown after “Atten:” is equal to Mech Atten + Elec Atten + Full Range Atten
- If the sweep is entirely > 50 GHz, the value shown after “Atten:” is equal to Full Range Atten
- If the sweep straddles 50 GHz, the value shown after “Atten:” is preceded by the symbol “>=” and is equal to Full Range Atten

In the **Amplitude**, **"Y Scale"** on page 2153 menu, and the Atten **Meas Bar** dropdown menu panel, a summary is displayed as follows:

“Total Atten below 50 GHz” followed by the value of Full Range Atten + Mech Atten + Elec Atten

“Total Atten above 50 GHz” followed by the value of Full Range Atten

For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:

- Attenuator summary:
- Total Atten below 50 GHz: 30 dB
- Total Atten above 50 GHz: 20 dB

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **"Internal Preamp"** on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **"Attenuator Configurations and Auto/Man"** on page 1917

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation &lt;rel_amp&gt;</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code>  Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation)  In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available  In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of

---

	<p><b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in <a href="#">"Elec Atten" on page 2164</a></p> <p>See <a href="#">"Attenuator Configurations and Auto/Man" on page 1917</a> for more information on the <b>Auto/Man</b> functionality</p>						
Couplings	<p>If the RF Input Port is the RF Input:</p> <ul style="list-style-type: none"> <li>– If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>– Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level, Int Preamp, External Gain, Ref Level Offset, Max Mixer Level, <math>\mu</math>W Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>– In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of <a href="#">"Full Range Atten" on page 2160</a> from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul> <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when <b>Mech Atten</b> is in <b>Auto</b>, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is <math>\leq 7.5</math> GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>						
Preset	<p><b>Auto</b></p> <p>The Auto value is 10 dB</p>						
State Saved	Saved in instrument state						
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>						
Max	<table border="1"> <tr> <td>CXA Option 503 or 507</td> <td>50 dB</td> </tr> <tr> <td>EXA</td> <td>60 dB</td> </tr> <tr> <td>All other models</td> <td>70 dB</td> </tr> </table> <p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>	CXA Option 503 or 507	50 dB	EXA	60 dB	All other models	70 dB
CXA Option 503 or 507	50 dB						
EXA	60 dB						
All other models	70 dB						
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p>						

---

For example:  
 Dual-Attenuator configuration:  
*Atten: 24 dB (e14)*  
 Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB  
 Single-Attenuator configuration:  
*A: 24 dB (e14)*  
 Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)  
 When in Manual, a # sign appears in front of Atten in the annotation

#### Auto Function

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn <b>Auto Mech Atten</b> ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	<code>ON</code>

---

#### Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 1915 (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about “soft” attenuation.

**NOTE**

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:

---



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see "[More Information](#)" on page 1920

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code> , and affects the total attenuation displayed on the <b>Attenuation</b>

control and the Meas Bar

The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If "**Internal Preamp**" on page 2183 is **ON** (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned

If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamp** is unavailable

If "**LNA**" on page 2185 is **ON**, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <b>Mechanical Attenuator Transition Rules</b> " on page 1920
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description

#### Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation:STATE OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation:STATE?</code>
Example	<code>:POW:EATT:STAT ON</code>

---

	<code>:POW:EATT:STAT?</code>
Preset	<code>OFF</code> (Disabled) for Swept SA measurement <code>ON</code> (Enabled) for all other measurements that support the electronic attenuator

---

**NOTE** The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

---

### More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 1921](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled

### 3 LTE & LTE-A TDD Mode

#### 3.10 Power Stat CCDF Measurement

- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

#### **Using the Electronic Attenuator: Pros and Cons**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the

electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

## Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under "[Pre-Adjust for Min Clipping](#)" on page 2168.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

## Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 1924

Selection	SCPI	Note
Off	<b>OFF</b>	This is the default setting
On	<b>ON</b>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <b>COMBined</b>
Elec Atten Only	<b>ELECTrical</b>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<b>COMBined</b>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>
Notes	The parameter option <b>ELECTrical</b> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <b>COMBined</b> is mapped to <b>ELECTrical</b> in Single-Attenuator models. If you send <b>COMBined</b> , it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBined</b>
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " <a href="#">Elec Atten</a> " on page 2164 is <b>OFF</b> or grayed-out, " <a href="#">Pre-Adjust for Min Clipping</a> " on page 1923 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>
State Saved	Saved in instrument state

Range	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten
	Single-Attenuator models:	Off   On


### Backwards Compatibility Command

Notes	<b>ON</b> aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) <b>OFF</b> aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0 [:SENSe]:POWer[:RF]:RANGe:AUTO?

### Adjustment Algorithm


The algorithms for the adjustment are documented below:

### Single-Attenuator Models

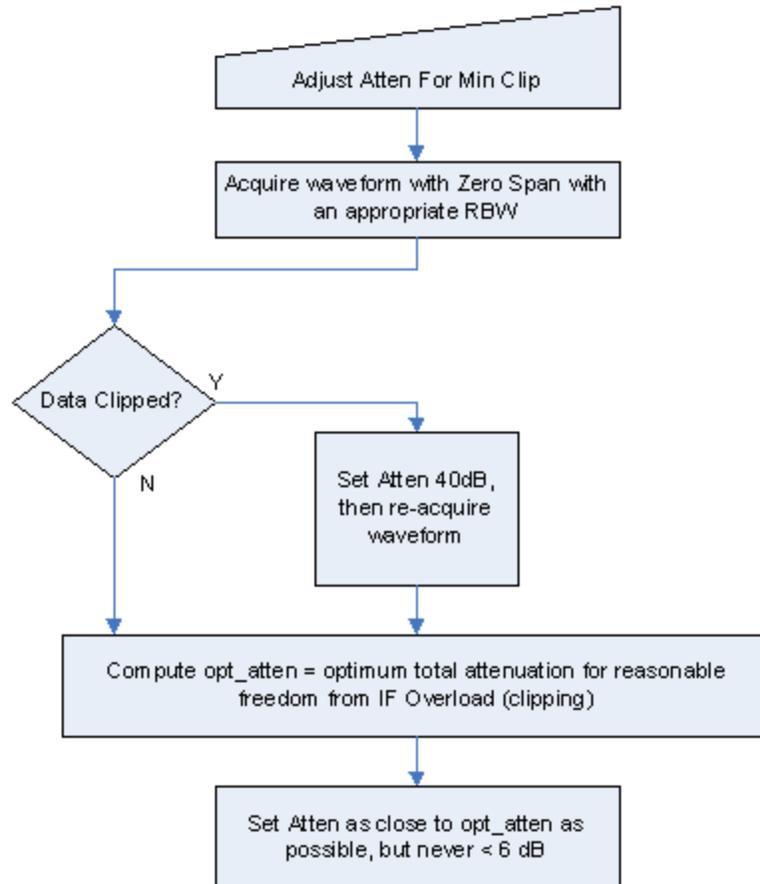

### Dual-Attenuator models


"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 1923 selection is Mech + Elec Atten:

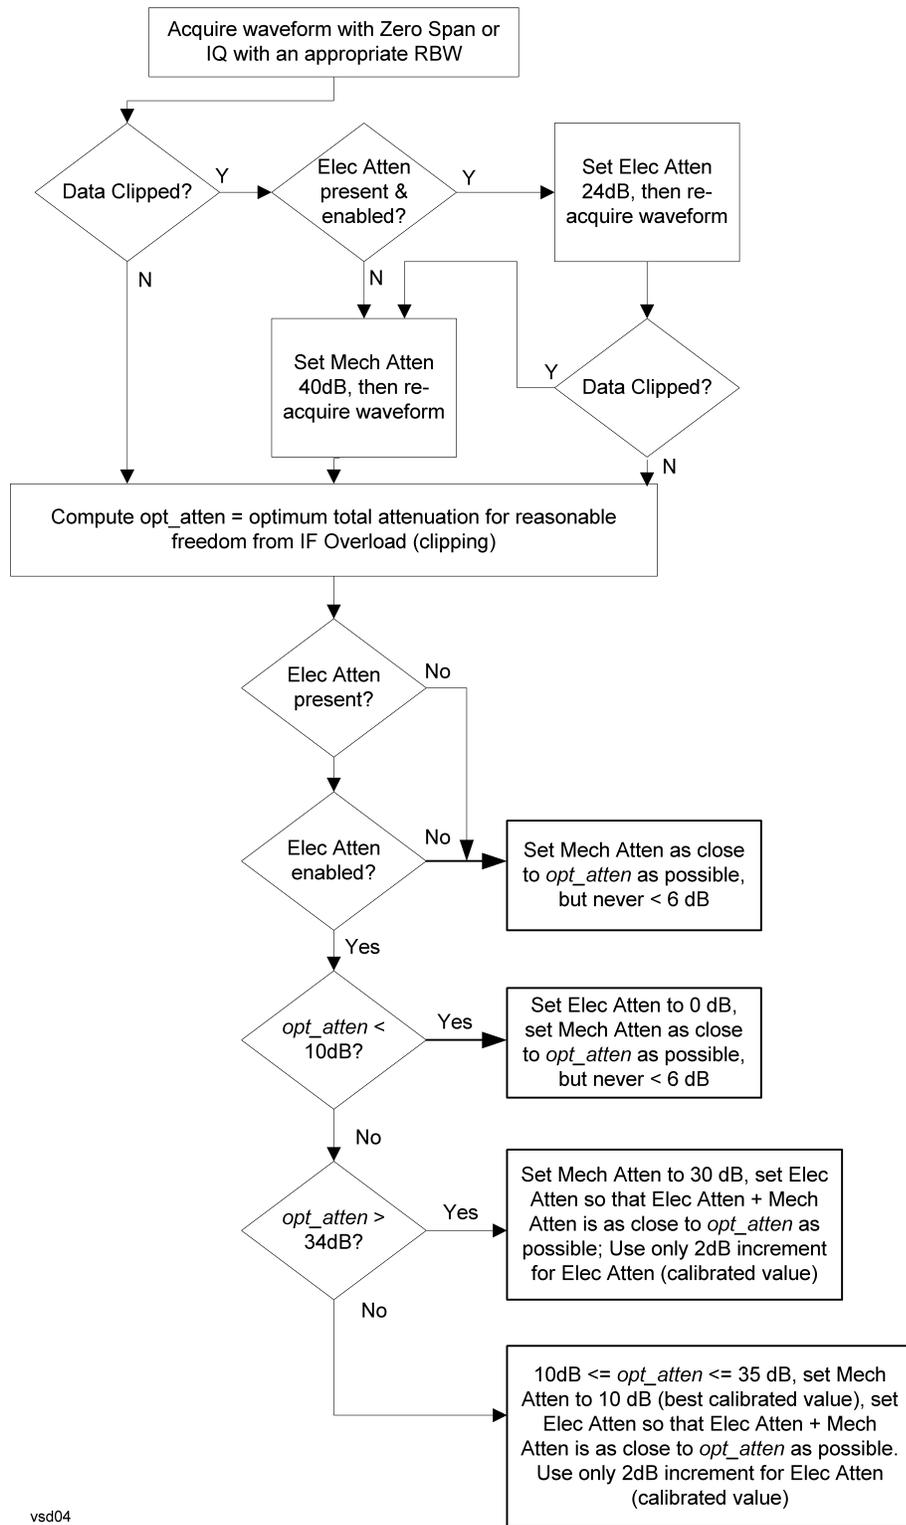

vsd04

"Pre-Adjust for Min Clipping" on page 1923 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

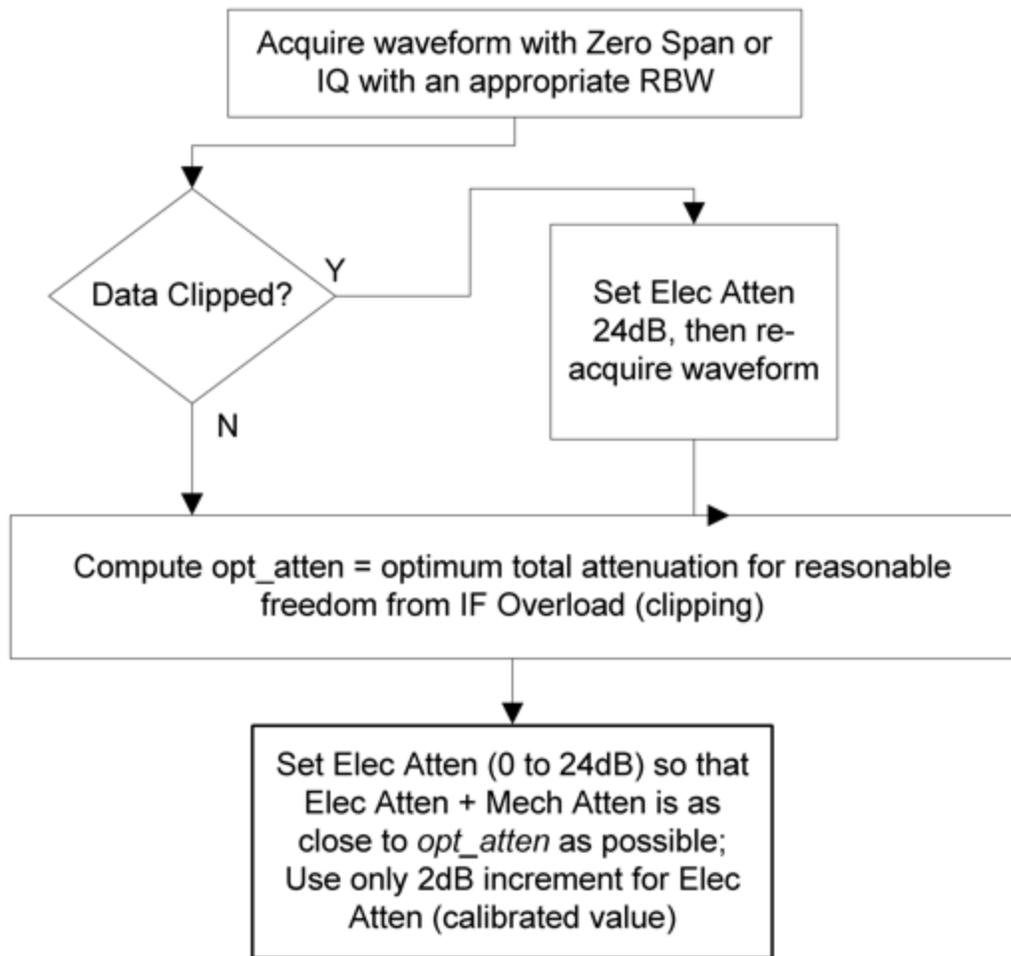

## Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.10.3.3 Range (Baseband Input models)

Only available when Option BBA is present (I/Q Baseband Inputs), the current measurement supports option BBA, and I/Q is the selected input. In these cases, replaces the **Attenuation** tab.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a few millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Dependencies	Available only when the selected input is I/Q. If the current measurement does not support baseband inputs, an error will be displayed: "No result; Meas invalid with I/Q inputs"
State Saved	No

### Range Auto/Man

The **Auto** setting for **Range** causes the range to be set based on the Y Scale settings. When **Range** is **Auto**, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support **Range Auto/Man**. If **Auto** is not supported in the current measurement, this control is grayed-out, displaying **Man**, and **MAN** is returned to a SCPI query, but this does *not* change the Auto/Man setting for **Range**. When you switch to a measurement that supports **Auto**, it goes back to **Auto** if it was previously in **Auto** mode.

Remote Command	<code>[ :SENSe]:VOLTage:IQ:RANGe:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:VOLTage:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:VOLT:IQ:RANG:AUTO OFF</code> <code>:VOLT:IQ:RANG:AUTO?</code>
Dependencies	If <b>Auto</b> is not supported, sending the SCPI command generates an error
Couplings	When in <b>Auto</b> , both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: $Y_{Max} = \max(\text{abs}(\text{top}), \text{abs}(\text{bottom}))$ The I Range and Q Range are then set to YMax
Preset	<b>ON</b>
State Saved	Saved in instrument state
Annotation	When in Man, the Range annotation is preceded by "#"  This is an alternate form of the command to match the <b>POWer</b> form of the I Range and Q Range SCPI.
Remote Command	<code>[ :SENSe]:POWer:IQ:RANGe:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:POW:IQ:RANG:AUTO OFF</code> <code>:POW:IQ:RANG:AUTO?</code>
Notes	<code>:POW:IQ:RANG:AUTO</code> is an alternate form of <code>:VOLT:IQ:RANG:AUTO</code> , to maintain consistency with I Range and Q Range, which support both the <b>POWer</b> and <b>VOLTage</b> forms of the command
Preset	<b>ON</b>
Range	Auto   Man

## I Range

The internal gain range for the I channel when the Input Path is I Only or I and I/Q. Used for both the I and Q channels when the Input Path is I+jQ.

Remote Command	<code>[ :SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] &lt;voltage&gt;</code> <code>[ :SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak <code>:VOLT:IQ:RANG 0.5 V</code>

	<code>:VOLT:IQ:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V
Couplings	When " <b>Q Same as I</b> " on page 2177 is On, the <b>I Range</b> value will be copied to " <b>Q Range</b> " on page 2176 Changing the value also sets Range = Man
Preset	Complex <b>SPECTrum</b> Measurement: 0.5 V Peak All others: 1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω)   0.5 V Peak (4 dBm @ 50Ω)   0.25 V Peak (-2 dBm @ 50Ω)   0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <I Range>". When Range = Man the annotation is preceded by "#" The I Range is not annotated in Input Path Q Only. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the I Range is 1 V Peak "Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak  This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[ :SENSe]:POWer:IQ[:I]:RANGe[:UPPer] &lt;ampl&gt;</code> <code>[ :SENSe]:POWer:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω <code>:POW:IQ:RANG 4 dBm</code> <code>:POW:IQ:RANG?</code>
Notes	The <b>POWer</b> form of the command is provided for convenience. It maps to the same underlying gain range parameter as the <b>VOLTage</b> form The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the <b>VOLTage</b> form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 Ω: 10, 4, -2, -8 75 Ω: 8.2, 2.2, -3.8, -9.8 600 Ω: -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

## Q Range

The internal gain range for the Q channel. **Q Range** only applies to Input Path Q Only and Ind I/Q. For input I+jQ "**I Range**" on page 2174 determines both I and Q channel range settings.

Remote Command	<code>[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] &lt;voltage&gt;</code> <code>[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?</code>
Example	Set the Q Range to 0.5 V Peak: <code>:VOLT:IQ:Q:RANG 0.5 V</code> <code>:VOLT:IQ:Q:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V <b>Q Range</b> is only used for Input Path Q Only and Ind I/Q. For input I+jQ, " <b>I Range</b> " on page 2174 determines both I and Q channel range settings
Couplings	When " <b>Q Same as I</b> " on page 2177 is On, the " <b>I Range</b> " on page 2174 value is copied to <b>Q Range</b> and the range value keys are disabled Changing the value also sets Range = Man
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50Ω)   0.5 V Peak (4 dBm @ 50Ω)   0.25 V Peak (-2 dBm @ 50Ω)   0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <Q Range>". When Range = Man the annotation is preceded by "#" The Q Range is not annotated in Input Path I Only or I+jQ. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the Q Range is 1 V Peak "Rng: 1 V, 0.5 V" the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[ :SENSe]:POWer:IQ:Q:RANGe[:UPPer] &lt;amp;1&gt;</code> <code>[ :SENSe]:POWer:IQ:Q:RANGe[:UPPer]?</code>
Example	Sets the Q Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω: <code>:POW:IQ:Q:RANG 4 dBm</code> <code>:POW:IQ:Q:RANG?</code>
Notes	The <b>POWer</b> form of the command is provided for convenience. It maps to the same underlying gain

range parameter as the **VOLTage** form of the command

The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the **VOLTage** form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:

50 Ω: 10, 4, -2, -8

75 Ω: 8.2, 2.2, -3.8, -9.8

600 Ω: -0.8, -6.8, -12.8, -18.9

Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

### Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, **Q Same as I** causes the Q channel range to be mirrored from the I channel. That way, you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time **Q Same as I** is Off, the I and Q channel setups will be identical.

Remote Command	<code>[ :SENSe ] :VOLTage   POWer : IQ : MIRRored OFF   ON   0   1</code> <code>[ :SENSe ] :VOLTage   POWer : IQ : MIRRored?</code>
Example	Turn off the mirroring of I Range to Q Range <code>:VOLT : IQ : MIRR OFF</code> <code>:POW : IQ : MIRR OFF</code>
Couplings	When <b>ON</b> , the " <b>I Range</b> " on page 2174 value is mirrored (copied) to the " <b>Q Range</b> " on page 2176
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>

### 3.10.3.4 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

## Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> . The hardware compensates for frequency response and alters the Range setting.
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

## Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement.
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements.

## Pre-Adjust for Min Clipping


If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELEctrical   COMBined</code>
----------------	---

	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

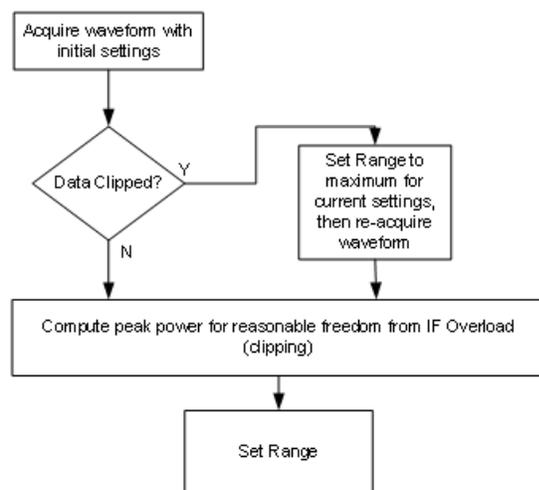

### Peak-to-Average Ratio

Used with "**Range (Non-attenuator models)**" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:PARatio &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:PARatio?</code>
Example	<code>:POW:RANG:PAR 12 dB</code>
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query

3 LTE & LTE-A TDD Mode  
 3.10 Power Stat CCDF Measurement

	via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

### Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe ]:POWer[ :RF ]:RANGe:MIXer:OFFSet &lt;real&gt;</code> <code>[ :SENSe ]:POWer[ :RF ]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.10.3.5 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 2195](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on ["Preselector Adjust" on page 2182](#) changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in ["Proper Preselector Operation" on page 1937](#).

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in <a href="#">"Preselector Adjust" on page 2182</a>
Status Bits/OPC	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a

---

dependencies subsequent measurement has completed, nor are results returned in response to **:READ** or **:MEASure** queries  
 The **Measuring** bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak search to find
2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

### Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "**Presel Center**" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

---

Remote Command	<b>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</b> <b>[ :SENSe]:POWer[:RF]:PADJust?</b>
Example	<b>:POW:PADJ 100KHz</b> <b>:POW:PADJ?</b>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	- Does not appear in CXA-m

---

---

- Does not appear in VXT Models M9410A/11A/15A/16A
- Does not appear in M9410E/11E/15E/16E
- Grayed-out if microwave preselector is off
- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz
- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz
- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0
- Grayed-out in the **Spectrogram** View

---

Preset	0 MHz
State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe ] : POWer [ :RF ] : MW : PADJust</code> <code>[ :SENSe ] : POWer [ :RF ] : MMW : PADJust</code>  Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe ] : POWer [ :RF ] : PADJust : PRESelector MWAVE   MMWave   EXTernal</code> <code>[ :SENSe ] : POWer [ :RF ] : PADJust : PRESelector?</code>

---

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

3 LTE & LTE-A TDD Mode  
 3.10 Power Stat CCDF Measurement

Selection	Example	Note
Off	:POW:GAIN OFF	
Low Band	:POW:GAIN ON :POW:GAIN:BAND LOW	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	:POW:GAIN ON :POW:GAIN:BAND FULL	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown  Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<code>LOW</code>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz"

When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)

#### Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<code>OFF</code>

## LNA

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to "[Internal Preamp](#)" on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with "[Internal Preamp](#)" on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "[More Information](#)" on page 1941

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	<code>OFF</code>
State Saved	Saved in State

## More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:

```
Atten: 8 dB  
Pre: Int on, LNA on  
μW Path: LNP, On  
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB  
Pre: Int off, LNA on  
μW Path: LNP, On  
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the **μW Preselector** is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the **μW Preselector's** bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and

without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 1946
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 1948
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 1948

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :MW :PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSe ] :POWer [ :RF ] :MW :PATH ?</code>
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH ?</code>
Notes	When " <a href="#">Presel Center</a> " on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b> The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b> . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled Alignment switching ignores the settings in this menu, and restores them when finished
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul>

In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated

**Low Noise Path Enable** and **Full Bypass Enable** are grayed-out if the current measurement does not support them

**Low Noise Path Enable** and **Full Bypass Enable** are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"

Preset	Mode	Value
	IQ Analyzer	MPB option present and licensed: <b>MPB</b>
	Pulse	MPB option not present and licensed: <b>STD</b>
	RTSA	
	Avionics	
	All other Modes	<b>STD</b>
	-	

State Saved Save in instrument state

Range Standard Path | Low Noise Path Enable |  $\mu$ W Presel Bypass | Full Bypass Enable

Annotation In the Meas Bar, if the Standard path is chosen:  
 $\mu$ W Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 $\mu$ W Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 $\mu$ W Path: LNP,On  
 If the preselector is bypassed:  
 $\mu$ W Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 $\mu$ W Path: FByP,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 $\mu$ W Path: FByP,On

**$\mu$ W Path Control Auto**

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to  **$\mu$ W Path Control**:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	$\mu$ W Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is preselect bypass if preselect bypass is enabled, auto $\mu$ W path is standard if preselect bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

3 LTE & LTE-A TDD Mode  
 3.10 Power Stat CCDF Measurement

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious Emissions	Always Standard Path
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

Channel Quality Mode

Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 1943 above
Preset	ON
Range	ON OFF

## Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.

Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic

range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

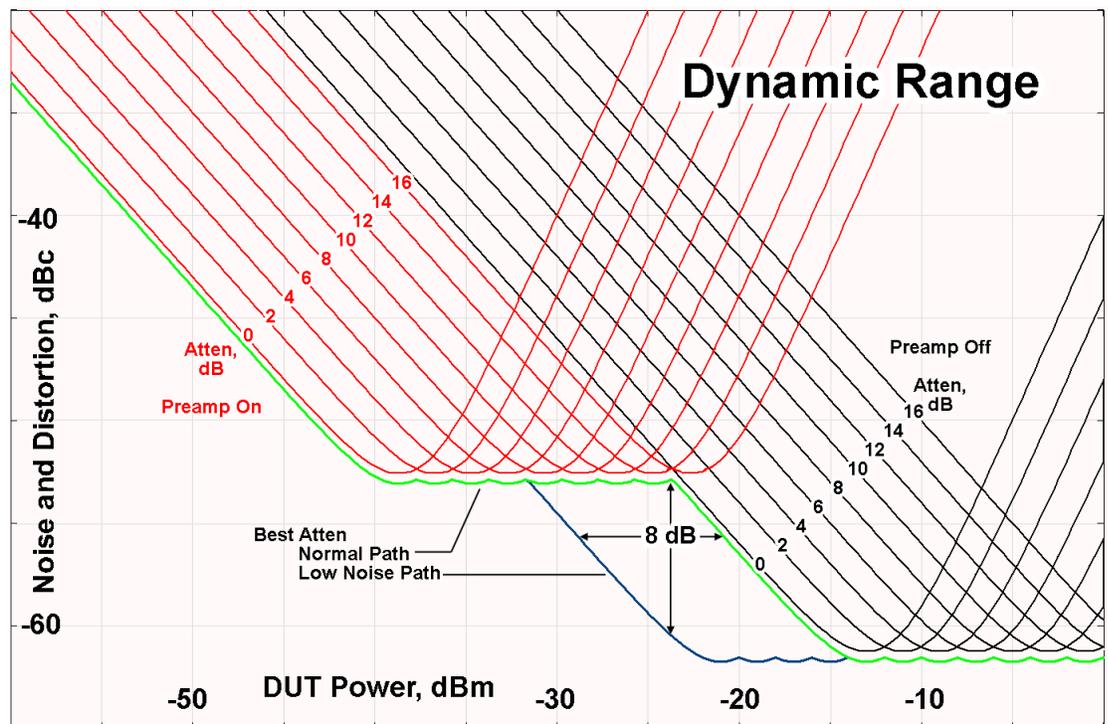

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

## **μW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### **Full Bypass Enable**

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user

interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

**CAUTION**

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

---

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The ON parameter sets the STD path (:POW:MW:PATH STD) The OFF parameter sets path MPB (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1 [ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender's preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED; Presel/Meas BW conflict

### Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

#### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPrese1:STATe 0   1   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:SWPrese1:STAT?</code>
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state

Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

## SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSe]:POWer[:RF]:SWPreSel NORMa1   ADVanced [:SENSe]:POWer[:RF]:SWPreSel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 2195 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

## SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method  Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled"  For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz

and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATE] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATE]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code>  Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code>  Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <a href="#">Prefilter Presets</a> " on page 1954 below
State Saved	Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

### 3.10.4 BW

Opens the Bandwidth (**BW**) menu, which contains the Info BW control.

#### 3.10.4.1 Settings

Contains basic bandwidth functions. It is the only tab under **BW**.

#### Info BW

Allows you to enter a frequency value to set the channel bandwidth that will be used for data acquisition. When in **Auto**, it is set to the value that covers carriers set by carrier configuration.

Remote Command	<code>[ :SENSe]:PStatistic:BANDwidth &lt;freq&gt;</code> <code>[ :SENSe]:PStatistic:BANDwidth?</code>								
Example	<code>:PST:BAND 8 MHz</code> <code>:PST:BAND?</code>								
Notes	Auto/Man is available only for 5G NR, LTE, LTETDD, LTEAFDD, LTEA TDD								
Preset	Depends on Mode and installed Options. See " <a href="#">Preset Values</a> " on page 1956 below								
State Saved	Saved in instrument state								
Min	10 kHz								
Max	Hardware-dependent: <table border="0" style="width: 100%; border-collapse: collapse;"> <tr> <td style="border-bottom: 1px solid black; padding: 2px;">RF Input</td> <td style="border-bottom: 1px solid black; padding: 2px;">- No Option = 10 MHz</td> </tr> <tr> <td style="border-bottom: 1px solid black; padding: 2px;"></td> <td style="border-bottom: 1px solid black; padding: 2px;">- WB (25 MHz or wider) = Hardware Option Limit</td> </tr> <tr> <td style="padding: 2px;">I/Q Input (for I+jQ)</td> <td style="padding: 2px;">- No Option = 20 MHz</td> </tr> <tr> <td style="padding: 2px;"></td> <td style="padding: 2px;">- Option B25 = 50 MHz</td> </tr> </table>	RF Input	- No Option = 10 MHz		- WB (25 MHz or wider) = Hardware Option Limit	I/Q Input (for I+jQ)	- No Option = 20 MHz		- Option B25 = 50 MHz
RF Input	- No Option = 10 MHz								
	- WB (25 MHz or wider) = Hardware Option Limit								
I/Q Input (for I+jQ)	- No Option = 20 MHz								
	- Option B25 = 50 MHz								
Backwards Compatibility SCPI	<code>[ :SENSe]:PStatistic:BWIDth</code>								

#### Auto Function

Remote Command	<code>[ :SENSe]:PStatistic:BANDwidth:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:PStatistic:BANDwidth:AUTO</code>
Example	<code>:PST:BAND:AUTO 0</code> <code>:PST:BAND:AUTO?</code>
Preset	ON

### Preset Values

Modes	Option	Preset Values	
SA, WCDMA	All	5 MHz	
CQM	All	10 MHz	
LTEATDD, LTEAFDD, 5G NR	All	Automatically calculated	
MSR	All	Same as max value	
WLAN	None	10 MHz	
	B25	25 MHz	
	B40	<b>Radio Std</b>	<b>Preset</b>
		802.11a/b/g/n/ac/ax/be (20 MHz)	25 MHz
		802.11n/ac/ax/be (40 MHz)	40 MHz
		802.11ac/ax/be (80 MHz)	80 MHz
		802.11ac/ax/be (160 MHz)	160 MHz
	802.11be (320 MHz)	320 MHz	
	B1X	<b>Radio Std</b>	<b>Preset</b>
		802.11ac(80 MHz)	80 MHz
B1Y	<b>Radio Std</b>	<b>Preset</b>	
	802.11ac(160 MHz)	160 MHz	

### 3.10.5 Display

Lets you configure display items for the current Mode, Measurement View or Window.

#### 3.10.5.1 Settings

Contains a control to turn on or turn off "Slot" on page 1907. When Slot View is switched OFF, Normal View is selected.

## Slot View

Toggles "Slot" on page 1907 On or Off. When **ON**, Slot View is selected. When **OFF**, Normal View is selected.

Remote Command	<code>[ :SENSe]:PStatistic:SLTView[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:PStatistic:SLTView[:STATe]?</code>
Example	<code>:PST:SLTV ON</code> <code>:PST:SLTV?</code>
Dependencies	Only available in LTEATDD and 5GNR Modes
Preset	<b>OFF</b>
State Saved	Yes
Range	<b>OFF   ON</b>

### 3.10.5.2 View

Contains controls for selecting the current **View**, and for editing User Views.

## View

See "Views" on page 1906.

## User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect &lt;alphanumeric&gt;</code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command  For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send: <code>:DISP:VIEW:ADV:SEL "Trace Zoom"</code>  because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu  You <i>cannot</i> use the legacy View parameter (which in this case would be <b>TZOOM</b> ) with

---

**:DISP:VIEW:ADV:SEL**

<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:

**:DISP:VIEW:ADV:SEL "Trace Zoom"**

**:DISP:VIEW:ADV:SEL "TRACE ZOOM"**

If the specified view is not a valid View, the query returns the error message “-224, Illegal parameter value; View with the name <alphanumeric> does not exist”

If the display is disabled (via **:DISP:ENAB OFF**) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated

---

Backwards Compatibility SCPI	The legacy node <b>:DISPlay:VIEW[:SElect]</b> is retained for backwards compatibility, but it only supports predefined views
------------------------------	--

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

---

Remote Command	<b>:DISPlay:VIEW:ADVanced:NAME &lt;alphanumeric&gt;</b>
Example	<b>:DISP:VIEW:ADV:NAME "Baseband"</b> Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View
Notes	<alphanumeric> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <alphanumeric> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via <b>:DISP:ENAB OFF</b> ) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its

existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> is not present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

## Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

Remote Command	<code>:DISPlay:VIEW:ADVanced:DELeTe:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

## View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

### View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:  <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p> <p>If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined</p>

### User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
----------------	---

Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	Returns a quoted string of the available User Views for the current measurement, separated by commas. Example: <code>"Baseband,myView1,yourView1"</code> If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a> ), then query the list of available Views, the result is undefined

### 3.10.5.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

#### Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<code>ON</code>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the <code>WINDow</code> , <code>TRACe</code> and <code>GRID</code> parameters are ignored

#### Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When `OFF`, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the `Trace` section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<b>OFF</b>
State Saved	Saved in instrument state

## Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When **OFF**, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b>  This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTem:DEFaults MISC` or `:DISPlay:ENABle ON` (neither `*RST` nor `:SYSTem:PRESet` enable the display)
- and you are using either the `:SYSTem:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	:DISPlay:VIEW:ADVanced:SElect
Rename User View	:DISPlay:VIEW:ADVanced:REName
Delete User View	:DISPlay:VIEW:ADVanced:DELeTe
Create User View	:DISPlay:VIEW:ADVanced:NAME
Select Screen	:INSTrument:SCReen:SElect
Delete Screen	:INSTrument:SCReen:DELeTe
Delete All But This Screen	:INSTrument:SCReen:DELeTe:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISPlay:ENABle OFF   ON   0   1
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON, but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON Set by :SYST:DEF MISC, but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABle as it did in legacy analyzers

### 3.10.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the frequency and channel parameters of the instrument.

Some features in this menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, **Center Frequency** is the same for all measurements – it does not change as you change measurements.

#### 3.10.6.1 Settings

Contains controls that pertain to the X-Axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

## Carrier Reference Frequency

Sets carrier reference frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Because LTE-A, MSR and 5G NR Mode measurements often deal with multiple carriers with distinct bandwidths, the simple ["Center Frequency" on page 1966](#) parameter used in most measurements does not apply here. Instead, **Carrier Reference Frequency** is the key parameter. This must be distinct from the **Center Frequency** parameter used in other measurements, as **Center Frequency** can be a global parameter, and it would not make sense for **Carrier Reference Frequency** to use this global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- the **Number of Component Carriers** is 1
- the **Center Freq Offset** is 0 Hz
- the **Center Frequency Mode** is Auto

then **Center Frequency** is equivalent to **Carrier Reference Frequency**. When **Center Frequency** changes in such conditions, the mode of **Center Frequency** remains as Auto and the Carrier Ref Freq changes to the same value. The main purpose of this coupling is to maintain backwards compatibility with legacy LTE/LTE TDD Modes, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

See ["More Information" on page 1966](#)

---

Remote Command	For LTE-A, 5G NR [:SENSe]:CCARrier:REFerence <freq> [:SENSe]:CCARrier:REFerence? For MSR [:SENSe]:CARRier:REFerence <freq> [:SENSe]:CARRier:REFerence?
----------------	---

---

Example	For LTE-A, 5G NR :CCAR:REF 2GHz :CCAR:REF? For MSR :CARR:REF 2GHz :CARR:REF?
---------	---

Dependencies	Only available in LTEAFDD, LTEATDD, 5GNR and MSR Modes
Preset	1 GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as <a href="#">"Center Frequency" on page 1966</a>

### More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

## Center Frequency

Sets the frequency that corresponds to the horizontal center of the graticule. While adjusting **Center Frequency**, **Span** is held constant.

The **Center Frequency** setting is the same for all measurements within a mode, that is, it is Meas Global. Some Modes are also able to share a Mode Global center frequency value. If this is the case, the Mode will have a **Global** tab in its **Meas Setup** menu.

**Center Frequency** sets (and queries) the center frequency for the currently selected input. If your instrument has multiple inputs, and you select another input, **Center Frequency** changes to the value for that input. SCPI commands are available to directly set the center frequency for a specific input.

**Center Frequency** is remembered as you go from input to input. Thus, you can set a **Center Frequency** of 10 GHz with the RF Input selected, change to BBIQ and set a **Center Frequency** of 20 MHz, then switch to External Mixing and set a Center Freq of 60 GHz, and when you go back to the RF Input, **Center Frequency** will go back to 10 GHz; back to BBIQ and it is 20 MHz; back to External Mixing and it is 60 GHz.

See:

- ["Center Frequency Presets" on page 1968](#)
- ["VXT Models with Radio Heads/CIU Frequency Range" on page 1970](#)
- ["RF Center Freq" on page 1970](#)
- ["Ext Mix Center Freq" on page 1970](#)
- ["I/Q Center Freq" on page 1971](#)

---

Remote [\[:SENSe\]:FREQuency:CENTer <freq>](#)

3 LTE & LTE-A TDD Mode  
 3.10 Power Stat CCDF Measurement

Command	<code>[ :SENSe ] :FREQuency :CENTer ?</code>
Example	<p>Set Center Frequency to 50 MHz:  <code>:FREQ:CENT 50 MHz</code></p> <p>Increment Center Frequency by the value of <b>CF Step</b>:  <code>:FREQ:CENT UP</code></p> <p>Return the current value of Center Frequency:  <code>:FREQ:CENT?</code></p>
Notes	<p>Sets the RF, External Mixing or I/Q Center Frequency depending on the selected input:</p> <ul style="list-style-type: none"> <li>- For RF input it is equivalent to <code>:FREQ:RF:CENT</code></li> <li>- For I/Q input it is equivalent to <code>:FREQ:IQ:CENT</code></li> <li>- For External Mixer it is equivalent to <code>:FREQ:EMIX:CENT</code></li> </ul> <p>Preset and Max values are dependent on Hardware Options          If no terminator (for example, MHz) is sent, the terminator Hz is used. If a terminator with unit other than Frequency is used, an invalid suffix error message is generated</p>
Preset	<p>Depends on instrument maximum frequency, mode, measurement, and selected input          See "Center Frequency Presets" on page 1968, "RF Center Freq" on page 1970, "Ext Mix Center Freq" on page 1970, "I/Q Center Freq" on page 1971, and "VXT Models with Radio Heads/CIU Frequency Range" on page 1970</p>
State Saved	Saved in instrument state
Min/Max	<p>Depends on instrument maximum frequency, mode, measurement, and selected input          See "Center Frequency Presets" on page 1968, "RF Center Freq" on page 1970, "I/Q Center Freq" on page 1971, and "VXT Models with Radio Heads/CIU Frequency Range" on page 1970</p>
Status Bits/OPC dependencies	<p>Non-overlapped</p> <p>The following command and parameters apply only to MSR, LTE-Advanced FDD/TDD and 5G NR Modes.</p>
Remote Command	<code>[ :SENSe ] :FREQuency :CENTer :AUTO ON   OFF   1   0</code> <code>[ :SENSe ] :FREQuency :CENTer :AUTO?</code>
Example	<code>:FREQ:CENT:AUTO OFF</code> <code>:FREQ:CENT:AUTO?</code>
Dependencies	Only available for the Monitor Spectrum, Power Stat CCDF and IQ waveform measurements in MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Couplings	<p>When Center Frequency changes, state automatically changes to <b>Manual (OFF)</b>          Center Frequency, Center Frequency Offset and Carrier Reference Frequency are coupled. When Carrier Reference Frequency changes:</p>

	<b>Center Frequency</b>	<b>Relationship</b>
	Auto	Center Frequency = Carrier Reference Frequency + Center Frequency Offset (fixed)
	Man	Center Frequency (fixed) = Carrier Reference Frequency + Center Frequency Offset
Preset	<b>ON</b>	
State Saved	Saved in instrument state	
Range	<b>Auto   Man</b>	

### Center Frequency Presets

The following table provides the Center Frequency Presets for the Spectrum Analyzer mode, and the Max Freq, for the various frequency options:

<b>Freq Option</b>	<b>CF after Mode Preset</b>	<b>Stop Freq after Mode Preset</b>	<b>Max Freq (can't tune above)</b>
503 (all but CXA)	1.805 GHz	3.6 GHz	3.7 GHz
503 (CXA)	1.505 GHz	3.0 GHz	3.08 GHz
507 (all but CXA)	3.505 GHz	7.0 GHz	7.1 GHz
507 (CXA)	3.755 GHz	7.5 GHz	7.58 GHz
508 (all but MXE)	1.805 GHz	3.6 GHz	8.5 GHz
508 (MXE)	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526 (except CXA and MXE)	13.255 GHz	26.5 GHz	27.0 GHz*
526 (CXA)	13.255 GHz	26.5 GHz	26.55 GHz
526 (MXE)	1.805 GHz	3.6 GHz	27.0 GHz
532	16.005 GHz	32.0 GHz	32.5 GHz
540	20.005 GHz	40.0 GHz	40.5 GHz
543	21.505 GHz	43.0 GHz	43.0 GHz
544	22.005 GHz	44.0 GHz	45.0 GHz
550	25.005 GHz	50.0 GHz	52 GHz
F03 (CXA-m)	1.505 GHz	3.0 GHz	3.08 GHz
F07 (CXA-m)	3.755 GHz	7.5 GHz	7.575 GHz
F13 (CXA-m)	6.805 GHz	13.6 GHz	13.8 GHz
F26 (CXA-m)	13.255 GHz	26.5 GHz	26.55 GHz
504 (M9421A, M8920A)	2.145 GHz	3.88GHz	3.88 GHz

3 LTE & LTE-A TDD Mode  
 3.10 Power Stat CCDF Measurement

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
506 (M9421A, M8920A)	3.245 GHz	6.08GHz	6.08 GHz
F06 (M9410A/11A)	1.0 GHz	6.08 GHz	6.08 GHz
F06 (M9415A)	1 GHz	1.08 GHz	6.6 GHz
F08 (M9415A)	1 GHz	1.08 GHz	8.6 GHz
F12 (M9415A)	1 GHz	1.08 GHz	12.9 GHz

\*For option 526, the Max CF in RTSA is 26.999999995 GHz.

N9041B Center Freq Presets

Input	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
Input 1, all models	25.005 GHz	50.0 GHz	52 GHz
Input 2, opt 585	42.505 GHz	85.0 GHz	86 GHz
Input 2, opt 590	45.005 GHz	90.0 GHz	92 GHz
Input 2, opt 5CX	55.005 GHz	110.0 GHz	110 GHz

Input 2, CXA and MXE

Model	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
CXA opt C75	0.7505 GHz	1.5 GHz	1.58 GHz
MXE	505 MHz	1 GHz	1.000025 GHz

Tracking Generator Frequency Limits (CXA only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	9 kHz	3.0 GHz	3.08 GHz
T06	9 kHz	6.0 GHz	6.05 GHz

Tracking Generator Frequency Limits(CXA-m only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	2 MHz	3.08 GHz	3.08 GHz
T07	2 MHz	7.575 GHz	7.575 GHz

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T13	2 MHz	13.8 GHz	13.8 GHz
T26	2 MHz	26.55 GHz	26.55 GHz

### VXT Models with Radio Heads/CIU Frequency Range

The following table shows the Center Frequency Presets and Range for VXT modes with Radio Heads/CIU.

Products with Radio Heads/CIU	Preset	Start frequency	Stop frequency
M9421A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU + RRH	25 GHz	24.25 GHz	43.5 GHz

### RF Center Freq

Lets you specify the RF Center Frequency. Sets the Center Frequency to use when the RF input is selected, even if the RF input is not selected at the time the command is sent. Note that **Center Frequency** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency:RF:CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:RF:CENTer?</code>
Example	<code>:FREQ:RF:CENT 30 MHz</code> <code>:FREQ:RF:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each mode and common across all the measurements in the mode
Dependencies	If the electronic/soft attenuator is enabled, any attempt to set <b>Center Frequency</b> such that the Stop Frequency would be > 3.6 GHz fails and results in an advisory message If the equivalent SCPI command is sent, this same message is generated as part of a "-221, Settings conflict" warning
Preset	See " <a href="#">Center Frequency Presets</a> " on page 1968
State Saved	Saved in instrument state
Min	-79.999995 MHz
Max	See " <a href="#">Center Frequency Presets</a> " on page 1968. Basically, instrument maximum frequency - 5 Hz

### Ext Mix Center Freq

Specifies the External Mixer Center Frequency. Sets the Center Frequency to use when the External Mixer is selected, even if the External Mixer input is not the input

that is selected at the time the command is sent. Note that **Center Frequency** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency:EMIXer:CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:EMIXer:CENTer?</code>
Example	<code>:FREQ:EMIX:CENT 60 GHz</code> <code>:FREQ:EMIX:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Couplings	When returning to External Mixing after having switched to one of the other inputs (for example, RF), you will come back into the settings that you had when you left External Mixing. So, you will come back to the band you were in with the Center Frequency that you had. However, Span is not an input-dependent parameter, therefore you will bring the span over from the other input. Therefore, the instrument comes back with the span from the previous input, limited as necessary by the current mixer setup
Preset	When a Mode Preset is performed while in External Mixing, the Start frequency of the current Mode is set to the nominal Min Freq of the lowest harmonic range in the Harmonic Table for the current mixer setup. Similarly, the Stop frequency of the current Mode is set to the nominal Max Freq of the highest harmonic range in the Harmonic Table. The Center Freq thus presets to the point arithmetically equidistant from these two frequencies <p>Note that, if the current measurement has a limited Span available to it, and cannot achieve the Span shown in the table (Span=Stop Freq – Start Freq), the instrument uses the maximum Span the measurement allows, and still sets the Center Freq to the midpoint of the Start and Stop Freq values in the Harmonic Table</p> <p>When <b>Restore Input/Output Defaults</b> is performed, the mixer presets to the 11970A, whose Start and Stop frequencies are 26.5 and 40 GHz respectively. The center of these two frequencies is 33.25 GHz          Therefore, after <b>Restore Input/Output Defaults</b>, if you go to External Mixing and do a <b>Mode Preset</b> while in Spectrum Analyzer Mode, the resulting Center Freq is 33.25 GHz</p>
State Saved	Yes
Min	The minimum frequency in the currently selected mixer band + 5 Hz
Max	The maximum frequency in the currently selected mixer band - 5 Hz

### I/Q Center Freq

Specifies the I/Q Center Frequency. Sets the Center Frequency to be used when the I/Q input is selected, even if the I/Q input is not the input that is selected at the time the command is sent. Note that **Center Frequency** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency:IQ:CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:IQ:CENTer?</code>
Example	<code>:FREQ:IQ:CENT 30 MHz</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is

	independent in each Mode and common across all the measurements in the Mode
Preset	0 Hz
State Saved	Saved in instrument state
Min/Max	-/+40.049995 MHz

### Center Frequency Offset

Sets **Center Frequency Offset**, which is coupled with "**Center Frequency**" on page 1966, and only used in the Monitor Spectrum, IQ Waveform, Power Stat CCDF, and PAVT measurements. **Center Frequency**, **Center Frequency Offset** and **Carrier Reference Frequency** are coupled by this equation:

$$\text{Center Frequency} = \text{Carrier Reference Frequency} + \text{Center Frequency Offset}$$

When you change **Center Frequency Offset**, **Center Frequency** is updated, but **Carrier Reference Frequency** is not.

Remote Command	<code>[ :SENSe ] :FREQuency:CENTer:OFFSet &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:CENTer:OFFSet?</code>
Example	<code>:FREQ:CENT:OFFS 100kHz</code> <code>:FREQ:CENT:OFFS?</code>
Dependencies	Only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Preset	0 GHz
State Saved	Saved in instrument state
Min/Max	-/+500 GHz

### Adjust Center Frequency to Carrier Config

This immediate action control adjusts "**Center Frequency**" on page 1966 to cover all the configured carriers when "**Info BW**" on page 1955 is Auto.

Remote Command	<code>[ :SENSe ] :PStatistic:FREQuency:CENTer:ADJust</code>
Example	<code>:PST:FREQ:CENT:ADJ</code>
Couplings	When " <b>Info BW</b> " on page 1955 is <b>Man</b> , pressing this control automatically changes it to <b>Auto</b>

### 3.10.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets

it to **Normal** and places it at the center of the display. If the selected marker is **Off**, it is set to **Normal** and placed at the center of the screen on the trace determined by the Marker Trace rules.

### 3.10.7.1 Select Marker

Specifies the selected marker. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

The **Select Marker** control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, Counter).

For any menu that includes **Select Marker**, the first control is always **Marker Frequency | Time**.

Notes	The selected marker is remembered even when not in the <b>Marker</b> menu, and is used if a search is done, or a Band Function is turned on, or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for <b>Normal</b> and <b>Delta</b> markers

### 3.10.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (**Position/Normal**, **Delta** or **Off**) for the selected marker, as well as additional functions that help you use markers.

#### Marker X-Axis Value

Sets the marker X-Axis value in the current marker X-Axis Scale unit. This function has no effect if the control mode is **Off**, but is the remote command equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	<code>:CALCulate:PStatistic:MARKer[1] 2 ... 12:X &lt;rel_amp1&gt;</code> <code>:CALCulate:PStatistic:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:PST:MARK3:X 0</code> <code>:CALC:PST:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X-Axis Scale. If a suffix is sent that does not match the current marker X-Axis Scale unit, an error “Invalid suffix” is generated The query returns the marker’s absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker’s reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X-Axis scale: Hz for <b>Frequency</b> and <b>Inverse Time</b> , seconds for <b>Period</b> and

	<b>Time.</b> If the marker is <b>Off</b> the response is Not A Number
Preset	After a preset, all Markers are turned <b>OFF</b> , so Marker X-Axis Value query returns Not a Number ( <b>NAN</b> )
State Saved	No
Min/Max	-/+9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

### Marker Y Axis Value (Remote Command Only)

Queries the marker Y-Axis value in the current marker Y-Axis unit.

Remote Command	:CALCulate:PStatistic:MARKer[1] 2 ... 12:Y?
Example	:CALC:PST:MARK11:Y?
Notes	Returns the marker Y-Axis result, if the control mode is <b>Normal</b> , or <b>Delta</b> . If the marker is <b>Off</b> , the response is <i>Not a Number</i>
Preset	0
State Saved	No
Backwards Compatibility SCPI	:CALCulate:PStatistic:MARKer[1] 2 ... 12:FUNctIon:RESult?

### Marker Mode

Sets the marker control mode to **Normal** (**POSition**), **Delta**, or **Off**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **Off**, pressing **Marker** sets it to **Normal** and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	:CALCulate:PStatistic:MARKer[1] 2 ... 12:MODE POSition   DELTa   OFF :CALCulate:PStatistic:MARKer[1] 2 ... 12:MODE?
Example	:CALC:PST:MARK:MODE POS :CALC:PST:MARK:MODE?
Preset	OFF
State Saved	Saved in instrument state
Range	POSition DELTA OFF
Annotation	Mkr # <X value> and <Marker value> upper right on graph

---

When Marker Trace is Polar in WCDMA mode:

Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

## Backwards Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1) puts it into **Normal** mode and places it at the center of the screen.

---

Example	<code>:CALC:PST:MARK3:STAT 1</code> <code>:CALC:PST:MARK3:STAT?</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>OFF   ON</code>
Backwards Compatibility SCPI	<code>:CALCulate:PStatistic:MARKer[1] 2 ... 12:STATe OFF   ON   0   1</code> <code>:CALCulate:PStatistic:MARKer[1] 2 ... 12:STATe?</code>

---

## Delta Marker (Reset Delta)

Pressing this button has exactly the same effect as pressing **Delta** in "**Marker Mode**" **on page 1974**. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

## Marker Settings Diagram

Lets you configure the Marker system using a visual utility.

## All Markers Off

Turns off all markers.

---

Remote Command	<code>:CALCulate:PStatistic:MARKer:AOff</code>
Example	<code>:CALC:PST:MARK:AOff</code>

---

## Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **Off**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental x-axis units of the trace that marker is on), and the X-Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off screen.

Remote Command	<code>:CALCulate:PSTatistic:MARKer:COUPle[:STATe] ON   OFF   1   0</code> <code>:CALCulate:PSTatistic:MARKer:COUPle[:STATe]?</code>
Example	<code>:CALC:PST:MARK:COUP ON</code> <code>:CALC:PST:MARK:COUP?</code>
Preset	<b>OFF</b> Presets on <b>Mode Preset</b> and <b>All Markers Off</b>
State Saved	Saved in instrument state

### 3.10.7.3 Properties

The controls on this tab are used to set certain properties of the selected marker.

#### Marker X-Axis Value

This is the fundamental control that you use to move a marker around on the trace. This is the same as "[Marker X-Axis Value](#)" on page 1973 in **Settings**.

#### Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the “reference marker” for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:PSTatistic:MARKer[1] 2 ... 12:REference &lt;integer&gt;</code> <code>:CALCulate:PSTatistic:MARKer[1] 2 ... 12:REference?</code>
Example	<code>:CALC:PST:MARK:REF 3</code> <code>:CALC:PST:MARK:REF?</code>

Notes	<p>Causes the marker specified with the subopcode to become selected</p> <p>Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped</p> <p>A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself"</p> <p>When queried, a single value is returned (the specified marker numbers relative marker)</p>
Couplings	<p>The act of specifying the selected marker's reference marker makes the selected marker a Delta marker</p> <p>If the reference marker is off it is turned on in <b>Fixed or Normal</b> mode at the delta marker location</p>
Preset	<p>The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1</p> <p>Set to the defaults by using <b>Restore Mode Defaults</b>. This is not reset by <b>Marker Off</b>, <b>All Markers Off</b>, or <b>Preset</b></p>
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a <b>Delta</b> marker

## Marker Trace

Assigns the specified marker to the designated trace. The trace choices are:

- [MEASured](#)
- [GAUSSian](#)
- [REFerence](#)

Remote Command	<code>:CALCulate:PStatistic:MARKer[1] 2 ... 12:TRACe MEASured   GAUSSian   REFerence</code> <code>:CALCulate:PStatistic:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:PST:MARK3:TRAC MEAS</code> <code>:CALC:PST:MARK:TRACE?</code>
Preset	<code>MEASured</code>
State Saved	Yes
Range	<code>MEASured GAUSSian REFerence</code>

## Marker Settings Diagram

Lets you configure the Marker system using a visual utility. This is the same as "[Marker Settings Diagram](#)" on page 1975 in **Settings**.

## 3.10.8 Meas Setup

Contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the mode.

### 3.10.8.1 Settings

Contains frequently used functions to which you will want the fastest access.

#### Counts

Sets the accumulated number of sampling points for data acquisition. The range is 1.000 kpt (k point) to 2.00000 Gpt (G point) with 1 kpt resolution.

Remote Command	<code>[ :SENSe]:PStatistic:COUNTs &lt;integer&gt;</code> <code>[ :SENSe]:PStatistic:COUNTs?</code>
Example	<code>:PST:COUN 5001</code> <code>:PST:COUN?</code>
Couplings	Coupled to " <a href="#">Meas Cycles</a> " on page 1978, by: <b>Counts = Meas Cycles * SamplingFrequency * "<a href="#">Meas Interval</a>" on page 1979</b>
Preset	10000000
State Saved	Saved in instrument state
Min/Max	1000/2000000000

#### Meas Cycles

Set the number of measurement cycles to calculate power statistic data. This number is coupled to "[Counts](#)" on page 1978, by:

$$\text{Meas Cycles} = \text{Counts} / (\text{Sampling Frequency} * \text{Meas Interval})$$

When the **Counts** value cannot be divided by (**Sampling Frequency** \* "[Meas Interval](#)" on page 1979), this value is displayed as a decimal fraction.

Remote Command	<code>[ :SENSe]:PStatistic:SWEp:CYCLes &lt;real&gt;</code> <code>[ :SENSe]:PStatistic:SWEp:CYCLes?</code>
Example	<code>:PST:SWE:CYCL 1001</code> <code>:PST:SWE:CYCL?</code>
Preset	Depends on the sampling frequency
Min	0.001
Max	Depends on the sampling frequency

## Meas Interval

Sets the number of data points to be used as the measurement interval. This value couples to "Counts" on page 1978, as:

$$\text{Meas Interval} = \text{Counts} / (\text{"Meas Cycles" on page 1978} * \text{Sampling Frequency})$$

Remote Command	<code>[ :SENSe]:PStatistic:SWEep:TIME &lt;time&gt;</code> <code>[ :SENSe]:PStatistic:SWEep:TIME?</code>
Example	<code>:PST:SWE:TIME 2 ms</code> <code>:PST:SWE:TIME?</code>
Preset	1.0 ms !unless noted below LTEATDD, 5G NR: 500 us
Min/Max	50.0 us/10.0 ms !unless noted below LTEATDD, 5G NR: 1 us/10.0 ms

## Meas Offset

Sets the value of time to be used as the measurement interval start.

Remote Command	<code>[ :SENSe]:PStatistic:MEAS:OFFSet &lt;time&gt;</code> <code>[ :SENSe]:PStatistic:MEAS:OFFSet?</code>
Example	<code>:PST:MEAS:OFFS 2 ms</code> <code>:PST:MEAS:OFFS?</code>
Dependencies	Only available in LTEAFDD/LTEATDD and 5GNR Modes
Preset	0.0s for LTEATDD, 5G NR
State Saved	Saved in instrument state
Min/Max	0.0 s/10.0 ms for LTEATDD, 5G NR

## Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

## Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 1981 below.

Remote Command	:COUPlE ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL   NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

## Measurement-Specific Details

### TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

### Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

## Meas Preset

Restores all the measurement parameters to their default values.

---

Remote Command	<code>:CONFigure:PStatistic</code>
----------------	------------------------------------

---

Example	<code>:CONF:PST</code>
---------	------------------------

---

Couplings	Selecting <b>Meas Preset</b> restores all measurement parameters to their default values
-----------	--

### 3.10.8.2 Radio

Contains controls to select link direction.

#### Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

Remote Command	<code>[ :SENSe]:RADio:STANdard:DIRection DLINK   ULINK</code> <code>[ :SENSe]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink For E6640A, Direction is restricted to Uplink only, Downlink is not selectable For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

### 3.10.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe]:CCARrier:COUNt &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNt?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

### Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:

- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured


Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

### Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that

sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

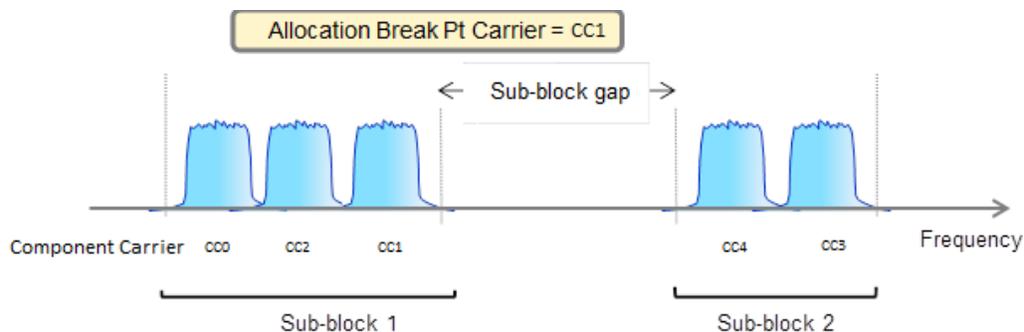

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint CC0   ...   CC4</code> <code>[ :SENSe]:CCARrier:CONFig:ALlocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

## Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

## Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

## Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

## Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

## Non-Contiguous Break at

See "Non-Contiguous Break at" on page 2246.

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BANd B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:BANdwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:CCARrier0 ... 4[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe]:CCARrier&lt;n&gt;:FREQUency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier&lt;n&gt;:FREQUency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMal   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes
Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe]:SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:ULDL?</code>
Example	<code>:CCAR0:RAD:STAN:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD)

3 LTE & LTE-A TDD Mode  
 3.10 Power Stat CCDF Measurement

	CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe ]:RADio:STANdard:ULDL</code>

### Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe ]:CCARrier0 ... 4:RADio:STANdard:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe ]:CCARrier0 ... 4:RADio:STANdard:DGPU?</code>
Example	<code>:CCAR0:RAD:STAN:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe ]:RADio:STANdard:DGPU</code>

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</code>																
Example	<code>:CCAR0:CHP:BAND:INT 20MHz</code> <code>:CCAR0:CHP:BAND:INT?</code>																
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SELEct to set the mode																
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>CHP Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.4 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>3 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>10 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>15 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>20 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>200 kHz</td> </tr> </tbody> </table>	System Bandwidth	CHP Integ BW	1.4 MHz (B1M4)	1.4 MHz	3 MHz (B3M)	3 MHz	5 MHz (B5M)	5 MHz	10 MHz (B10M)	10 MHz	15 MHz (B15M)	15 MHz	20 MHz (B20M)	20 MHz	200 kHz(B200K)	200 kHz
System Bandwidth	CHP Integ BW																
1.4 MHz (B1M4)	1.4 MHz																
3 MHz (B3M)	3 MHz																
5 MHz (B5M)	5 MHz																
10 MHz (B10M)	10 MHz																
15 MHz (B15M)	15 MHz																
20 MHz (B20M)	20 MHz																
200 kHz(B200K)	200 kHz																
Preset	5 MHz																
State Saved	Saved in instrument state																
Min	100 kHz																
Max	20 MHz																
Backwards Compatibility SCPI	<code>[ :SENSe]:CHPower:BANDwidth:INTEgration</code> <code>[ :SENSe]:CHPower:BWIDth:INTEgration</code>																

## ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration?</code>
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>

3 LTE & LTE-A TDD Mode  
3.10 Power Stat CCDF Measurement

Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTrument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS ACP Meas Noise BW</th> <th>MS ACP Meas Noise BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Yes																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPpower:CARRier[1]   2:LIST:BANDwidth[:INTEgration]</code> <code>[ :SENSe]:ACPpower:CARRier[1]   2:LIST:BWIDth[:INTEgration]</code>																								

### SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1]   2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1]   2:INTEgration?</code>
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth

	<b>System Bandwidth</b>	<b>BTS SEM Integ BW</b>	<b>MS SEM Integ BW</b>
	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
	3 MHz (B3M)	2.715 MHz	2.7 MHz
	5 MHz (B5M)	4.515 MHz	4.5 MHz
	10 MHz (B10M)	9.015 MHz	9.0 MHz
	15 MHz (B15M)	13.515 MHz	13.5 MHz
	20 MHz (B20M)	18.015 MHz	18.0 MHz
	200 kHz(B200K)	180 kHz	180 kHz
Preset	4.515 MHz 4.5 MHz		
State Saved	Saved in instrument state		
Min	100 kHz		
Max	20 MHz		
Backwards Compatibility SCPI	[:SENSe]:SEMAsk:BAWdth[1] 2:INTEgration		

## Carrier Config Presets

Lets you configure the Component Carrier presets.

## Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	[:SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3 [:SENSe]:CCARrier:CONFig?
Example	:CCAR:CONF ETC1 :CCAR:CONF?
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

## Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

### Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e. Channel spacing =  $(BW_{chan1} + BW_{chan2}) * 0.5 + [the\ delta\ spacing]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code> <code>:CCAR:CONF:SPAC:DELTA?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

### ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code>

	<code>:CCAR:CONF:ETC1:CMAX?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC1:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[[:SENSe]:CCARrier:CONFig:ETC1:BANDwidth?</code>
Example	<code>:CCAR:CONF:ETC1:BAND B5M</code> <code>:CCAR:CONF:ETC1:BAND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[[:SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

## Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

## Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative – Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive – Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG</code> <code>:CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

## Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M</code> <code>:CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC3:BANDwidth?</code>
Example	<code>:CCAR:CONF:ETC3:BAND B5M</code> <code>:CCAR:CONF:ETC3:BAND?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

#### 3.10.8.4 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF

- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

## System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command RAD:STAN:PRES B5M or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote Command	<code>[ :SENSe ] : RADio : STANdard : PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section "Values for each Preset To Standard". And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe ] : RADio : STANdard : PRESet : ULDL CONF0   ...   CONF6</code> <code>[ :SENSe ] : RADio : STANdard : PRESet : ULDL ?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU)

	CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

## Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

## Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[ :SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

## Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>
Example	<code>:RAD:MINT 1</code>
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel

For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH:

Meas NPRACH	Meas Interval
Preamble0	3 slots
Preamble1	4 slots

Preset	1
State Saved	Yes
Min	1
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise
Backwards Compatibility SCPI	LTE: [:SENSe]:PVTIme:MINTerval

## CP Length

Specifies whether the cyclic prefix is configured as NORMAl or EXTended for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	[:SENSe]:RADio:CPLength NORMAl   EXTended [:SENSe]:RADio:CPLength?
Example	:RAD:CPL NORM
Notes	The backwards compatible SCPI command [:SENSe]:PVTIme:CPLength is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to "200 kHz (NB-IoT)" and Direction is "uplink"
Couplings	Set to NORMAl when System BW is set to "200 kHz (NB-IoT)"
Preset	NORMAl
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: [:SENSe]:PVTIme:CPLength

## Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe]:RADio:MEASure?</code>
Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

### Reference Config

Specifies which component carrier's ULDL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code> <code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.10.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

#### IF Gain

Used to set the IF Gain function to: Auto, Low Gain or High Gain. These settings affect sensitivity and IF overloads.

Only applies to the RF input. Does not apply to baseband I/Q input.

Remote Command	<code>[ :SENSe]:PStatistic:IF:GAIN[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:PStatistic:IF:GAIN[:STATe]?</code>
Example	<code>:PST:IF:GAIN ON</code> <code>:PST:IF:GAIN?</code>
Notes	<b>ON</b> = high gain <b>OFF</b> = low gain
Dependencies	Not available when IQ Input is selected Has no effect when the U7227A USB Preamplifier is connected. This is not annotated or reflected on any control; there are no controls grayed out nor any SCPI locked out. The instrument simply behaves as though both IF Gain is set to Low regardless of the setting on the control Not available in VXT, EXM, or UXM
Couplings	Sending this command forces IF Gain Auto to <b>OFF (Man)</b>
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	Low Gain   High Gain  Auto Function
Remote Command	<code>[ :SENSe]:PStatistic:IF:GAIN:AUTO[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:PStatistic:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:PST:IF:GAIN:AUTO ON</code> <code>:PST:IF:GAIN:AUTO?</code>
Couplings	<b>Auto</b> sets IF Gain to High Gain if the input attenuator is set to 0 dB, or the preamp is turned on, or the Max Mixer Level is -20 dBm or lower For other conditions, <b>Auto</b> sets IF Gain to Low Gain
Preset	<b>OFF</b>

## IF Upsampling Ratio

Allows you to select the upsampling ratio after data is captured for a measurement. Using this method, mitigation of peak detection error can be expected when upsampling ratio is set to > x1.

Remote Command	<code>[ :SENSe]:PStatistic:URATio X1   X2   X4   X8   X16   X32</code> <code>[ :SENSe]:PStatistic:URATio?</code>
Example	<code>:PST:URAT X8</code> <code>:PST:URAT?</code>
Notes	X1 is for backwards compatibility
Preset	<b>X1</b>

State Saved	Yes, Saved in instrument state
Range	X1 X2 X4 X8 X16 X32

### 3.10.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "[Global Center Freq](#)" on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

### Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "[Restore Defaults](#)" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:CENTer ALL   NONE :INSTrument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE

Preset	OFF
Backwards Compatibility SCPI	:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF :GLOBal:FREQuency:CENTer[:STATe]?

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTRument:COUPlE:EMC:STANdard ALL   NONE :INSTRument:COUPlE:EMC:STANdard?
Example	:INST:COUP:EMC:STAN ALL :INST:COUP:EMC:STAN?
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTrument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF :INSTrument:COUPle:FREQuency:BAND:EXTend?
Example	:INST:COUP:FREQ:BAND:EXT 1 :INST:COUP:FREQ:BAND:EXT?
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	ON OFF

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	:INSTrument:COUPle:DEFault
Example	:INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault

## 3.10.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time, Continuous/Single, Pause/Resume, X Scale** and **Number of Points**.

### 3.10.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

## Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 2004

Remote Command	:INITiate:CONTInuous OFF   ON   0   1 :INITiate:CONTInuous?
Example	Put instrument into <b>Single</b> measurement operation:

	<p><code>:INIT:CONT 0</code></p> <p><code>:INIT:CONT OFF</code></p> <p>Put instrument into <b>Continuous</b> measurement operation:</p> <p><code>:INIT:CONT 1</code></p> <p><code>:INIT:CONT ON</code></p>
Preset	<p><b>ON</b></p> <p>Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to <b>ON</b>, but <code>*RST</code> sets <code>:INIT:CONT</code> to <b>OFF</b></p>
State Saved	Saved in instrument state
Annunciation	<p>The <b>Single/Continuous</b> icon in the Meas Bar changes depending on the setting:</p> <ul style="list-style-type: none"> <li>- A line with an arrow is <b>Single</b></li> <li>- A loop with an arrow is <b>Continuous</b></li> </ul>
Backwards Compatibility Notes	<p>X-Series A-models had <b>Single</b> and <b>Cont</b> hardkeys in place of the <b>SweepSingleCont</b> softkey. In the X-Series A-models, if in single measurement, the <b>Cont</b> hardkey (and <code>INIT:CONT ON</code>) switched to continuous measurement, but never restarted a measurement and never reset a sweep</p> <p>X-Series B-models have a <b>Cont/Single</b> toggle control instead of <b>Single</b> and <b>Cont</b> hardkeys, but it is still true that, if in single measurement, the <b>Cont/Single</b> toggle control never restarts a measurement and never resets a sweep</p>

### More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the <b>Average/Hold Num</b>, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used both before and after the <b>Average/Hold Num</b> is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>
Single Mode	<p>The instrument takes a single sweep when in <b>Single</b> mode, or if in average or Max/Min Hold, or if there is a <b>Waterfall</b> window displayed, it takes multiple sweeps until the average/hold count reaches the <b>Average/Hold Num</b>, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- `:INIT:CONT 1` has no effect
- `:INIT:CONT 0` places the instrument in Single Sweep but has no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state

See "[Restart](#)" on page 2279 for details of `:INIT:IMMEDIATE`.

If the instrument is already in **Single** sweep, `:INIT:CONT OFF` has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

## Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See "[More Information](#)" on page 2006

---

Remote Command	<code>:INITiate[:IMMEDIATE]</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function

---

Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <b>STATUS:OPERation</b> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <b>STATUS:QUESTionable</b> register bit 9 ( <b>INTEgrity</b> sum) is cleared The <b>SWEEPING</b> bit is set The <b>MEASURING</b> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command restarted trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> In X-Series, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger

condition must be met prior to each sweep. The sweep is stopped when the average count  $k$  equals the number  $N$  set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command `:CALC:AVER:TCON UP`.

## Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
<b>Clear/Write</b> pressed (even if already in Clear/Write)	Set to mintracevalue
<b>Max Hold</b> pressed (even if already in Max Hold)	Set to mintracevalue
<b>Min Hold</b> pressed (even if already in Min Hold)	Set to maxtracevalue
<b>Trace Average</b> pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
<b>Restart</b> pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

## Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count  $k$  to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

## Averaging

The weighting factor used for averaging is  $k$ . This  $k$  is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This  $k$  is used for comparisons with  $N$ , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, **K**, shows the count for the sweep (data acquisition) in progress.  $K = k + 1$ , with a limit of N. The displayed value **K** changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<b>:INITiate:PAUSE</b> <b>:INITiate:RESume</b>
Example	<b>:INIT:PAUS</b> <b>:INIT:RES</b>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

## Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when **:ABORt** is sent, the alignment finishes *before* the abort function is performed, so **:ABORt** does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an **:INIT:IMM** command is received.

Remote Command	<b>:ABORt</b>
Example	<b>:ABOR</b>
Notes	If <b>:INIT:CONT</b> is <b>ON</b> , then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met If <b>:INIT:CONT</b> is <b>OFF</b> , then <b>:INIT:IMM</b> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, <b>:ABORt</b> is equivalent to the <b>Restart</b> key Not all measurements support this command
Status Bits/OPC dependencies	The <b>STATus:OPERation</b> register bits 0 through 8 are cleared, <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous

---

The `STATUS:QUESTIONABLE` register bit 9 (`INTEGRITY` sum) is cleared  
 Since all the bits that feed into OPC are cleared by `:ABORT`, the Abort command will cause the `*OPC` query to return true

### 3.10.9.2 X Scale

Accesses controls that enable you to set the horizontal scale parameters.

#### Scale/Div

Enables you to enter a time value to change the horizontal scale.

Remote Command	<code>:DISPLAY:PSTatistic:VIEW[1]:WINDow2:TRACe:X[:SCALE]:PDIVision &lt;rel_amp1&gt;</code> <code>:DISPLAY:PSTatistic:VIEW[1]:WINDow2:TRACe:X[:SCALE]:PDIVision?</code>
Example	<code>:DISP:PST:VIEW:WIND2:TRAC:X:PDIV 10</code> <code>:DISP:PST:VIEW:WIND2:TRAC:X:PDIV?</code>
Notes	The CCDF measurement has the trace display only in Window 2, because values other than "2" are <i>not</i> available as the sub-op code
Preset	2.00
State Saved	Saved in instrument state
Min	0.1
Max	20
Backwards Compatibility SCPI	<code>:DISPLAY:PSTatistic:XScale</code>

### 3.10.10 Trace

Lets you control the display and storage of trace data for the available traces.

#### 3.10.10.1 Trace Control

The controls on this tab allow you to select display of the Reference Trace and the Gaussian Line, and store the Reference Trace.

#### Store Ref Trace

Copies the currently measured curve as the user-definable reference trace. The captured data remains until the other mode is chosen. Pressing this key also refreshes the reference trace.

No query is available.

Remote Command	:CALCulate:PSTatistic:STORe:REFerence
Example	:CALC:PST:STOR:REF
Backwards Compatibility SCPI	[ :SENSe]:PSTatistic:SRTRace

## Ref Trace

Toggles the reference trace display On or Off.

Remote Command	:DISPlay:PSTatistic:RTRace[:STATe] OFF   ON   0   1 :DISPlay:PSTatistic:RTRace[:STATe]?
Example	:DISP:PST:RTR OFF :DISP:PST:RTR?
Preset	OFF
State Saved	Saved in instrument state
Range	OFF   ON
Backwards Compatibility SCPI	[ :SENSe]:PSTatistic:RTRace[:STATe]

## Gaussian Line

Toggles the Gaussian trace display On or Off.

Remote Command	:DISPlay:PSTatistic:GAUSSian[:STATe] OFF   ON   0   1 :DISPlay:PSTatistic:GAUSSian[:STATe]?
Example	:DISP:PST:GAUS OFF :DISP:PST:GAUS?
Preset	ON
State Saved	Saved in instrument state
Range	OFF   ON
Backwards Compatibility SCPI	[ :SENSe]:PSTatistic:GAUSSian[:STATe]

## 3.11 Monitor Spectrum Measurement

The Monitor Spectrum measurement provides a quick, convenient means of looking at the entire spectrum. While the look and feel are similar to Spectrum Analyzer Mode, the functionality is greatly reduced for easy operation. The main purpose of this measurement is to show the spectrum. The default span should cover an appropriate frequency range of the application.

### Measurement Commands

The following commands can be used to configure the measurement and retrieve results:

```
:CONFigure:MONitor  
:CONFigure:MONitor:NDEFault  
:INITiate:MONitor  
:FETCh:MONitor[n]?  
:READ:MONitor[n]?  
:MEASure:MONitor[n]?
```

### Remote Command Results

The following table describes the results returned by the queries listed above, according to the index value **n**.

<b>n</b>	<b>Results Returned</b>
1 (or not specified)	Returns trace1 data with comma separated floating numbers
2	Returns trace2 data with comma separated floating numbers
3	Returns trace3 data with comma separated floating numbers

### 3.11.1 Views

For modes other than MSR, LTEAFDD/LTEATDD and 5GNR, there is a single view, **Normal**.

For the MSR, LTEAFDD/LTEATDD and 5GNR modes, there are two views, **Normal** and **Carrier Info**, as described in the table below. The **Normal** view is the same as the common Monitor Spectrum view in other Modes. Carrier Info is available on the spectrum trace.

"Normal" on  
page 2012

This is a single window view of the spectrum  
In MSR, LTEAFDD/LTEATDD and 5GNR Modes, you can turn on attributes that show the defined carriers and the sub-blocks also

"Carrier Info" on  
page 2013

This view shows the spectrum in the top window and a carrier configuration summary in the bottom window  
Carrier center frequency can be displayed in either offset or absolute frequency depending on Carrier Freq

### View Selection by Name

Remote Command	<code>:DISPlay:MONitor:VIEW[:SElect] RTRace   CINformation</code> <code>:DISPlay:MONitor:VIEW[:SElect]?</code>
Example	<code>:DISP:MON:VIEW RTR</code> <code>:DISP:MON:VIEW?</code>
Preset	<code>RTRace</code>
State Saved	Saved in instrument state
Range	Power Results Carrier Info

### View Selection by Number

Remote Command	<code>:DISPlay:MONitor:VIEW:NSElect &lt;integer&gt;</code> <code>:DISPlay:MONitor:VIEW:NSElect?</code>
Example	<code>:DISP:MON:VIEW:NSEL 1</code> <code>:DISP:MON:VIEW:NSEL?</code>
Preset	1
State Saved	Saved in instrument state
Min/Max	1/2

#### 3.11.1.1 Normal

Windows: "Spectrum" on page 2013

Single window view of the graph.

Example	<code>:DISP:MON:VIEW RTR</code>
Dependencies	This command is only available in the MSR, LTE-A FDD/TDD and 5G NR modes. In other Modes this is the only View

### 3.11.1.2 Carrier Info

This view shows the spectrum in the top window and a carrier configuration summary in the bottom window.

Carrier center frequency can be displayed in either offset or absolute frequency, depending on Carrier Freq.

Windows: "Spectrum" on page 2013, "Carrier Info" on page 2015

---

Example	:DISP:MON:VIEW CINF
Dependencies	Only available in the MSR, LTEAFDD/LTEATDD and 5G NR modes


---

## 3.11.2 Windows

This section describes the windows used in the Monitor Spectrum measurement.


### 3.11.2.1 Spectrum

In all modes except MSR, LTEAFDD/LTEATDD, and 5G NR, this is a single trace window showing the spectrum.

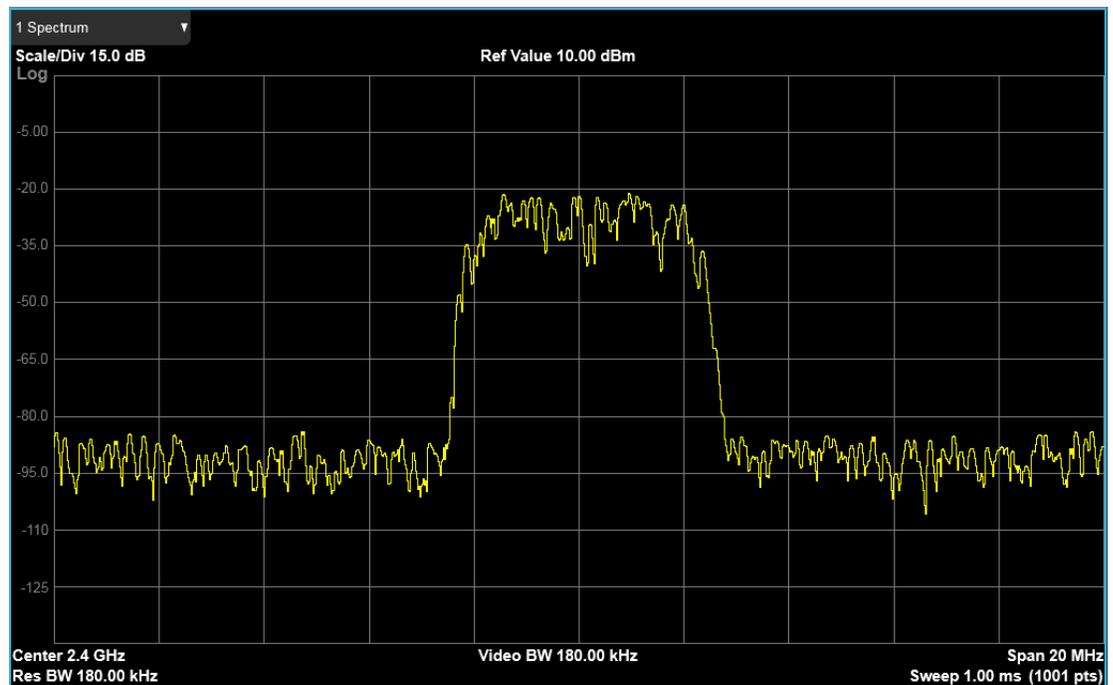

In LTEAFDD/LTEATDD, MSR and 5GNR Modes, multi-carriers are supported. The Carrier Attribute on/off and Sub-block Attribute on/off settings (under Display, Meas Display) are defined to allow the carrier and sub-block legends to display.


When the Carrier Attribute is on, the carrier identification and name are shown on the spectrum trace:

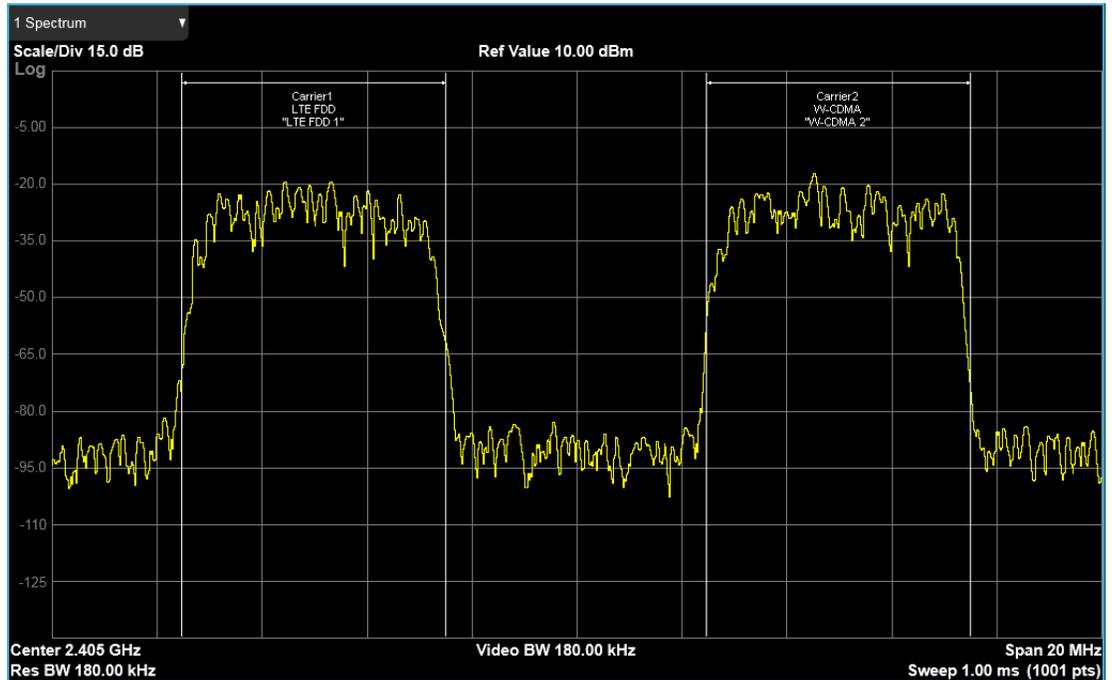

When Carrier and Sub-block attributes are both on, the sub-block scope and name are also shown on the spectrum trace:

### 3 LTE & LTE-A TDD Mode

#### 3.11 Monitor Spectrum Measurement

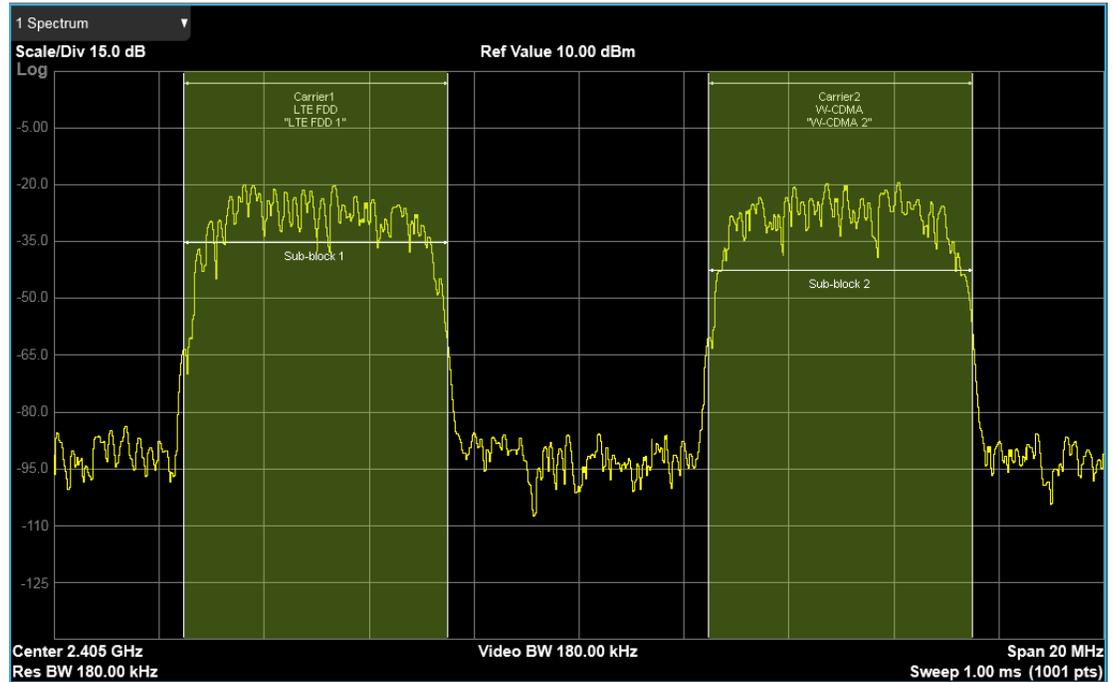


#### 3.11.2.2 Carrier Info

In the Carrier Info window, the Carrier configuration is summarized in the lower window.

#### LTEAFDD/LTEATDD, 5GNR Modes

The Carrier configuration is summarized in the lower window as below:

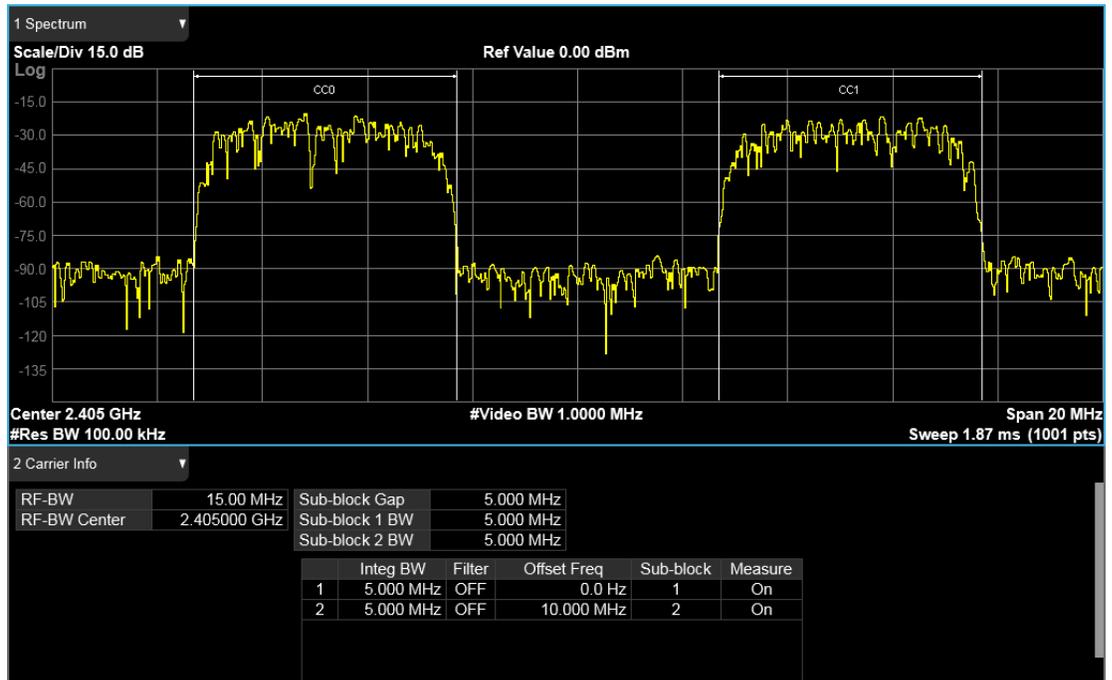

The text window displays the following results:

RF-BW and RF-BW Center

It shows the RF bandwidth calculated from the outermost component carriers and their freq offset, and the center frequency of the RF Bandwidth.

Sub-block configuration

As for intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for transmission and reception in the intra-band non-contiguous aggregation mode. So far we support the two sub-blocks. It summarizes each sub-block bandwidth and the frequency gap between the two consecutive sub-blocks. The Sub-block gap and Sub-block 2 BW are displayed when Component Carrier Allocation is Non-Contiguous and two sub-blocks are separated.

Integration Bandwidth

It displays the transmission bandwidth each component carrier.

Filter

It displays whether RRC filter is used for MON measurement or not.

Offset Frequency

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

It shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

Sub-block


It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column will be displayed when the carrier allocation mode is non-contiguous.

Measure

Shows whether the carrier is measured or not.

**MSR**

The Carrier configuration is summarized in the lower window as below:

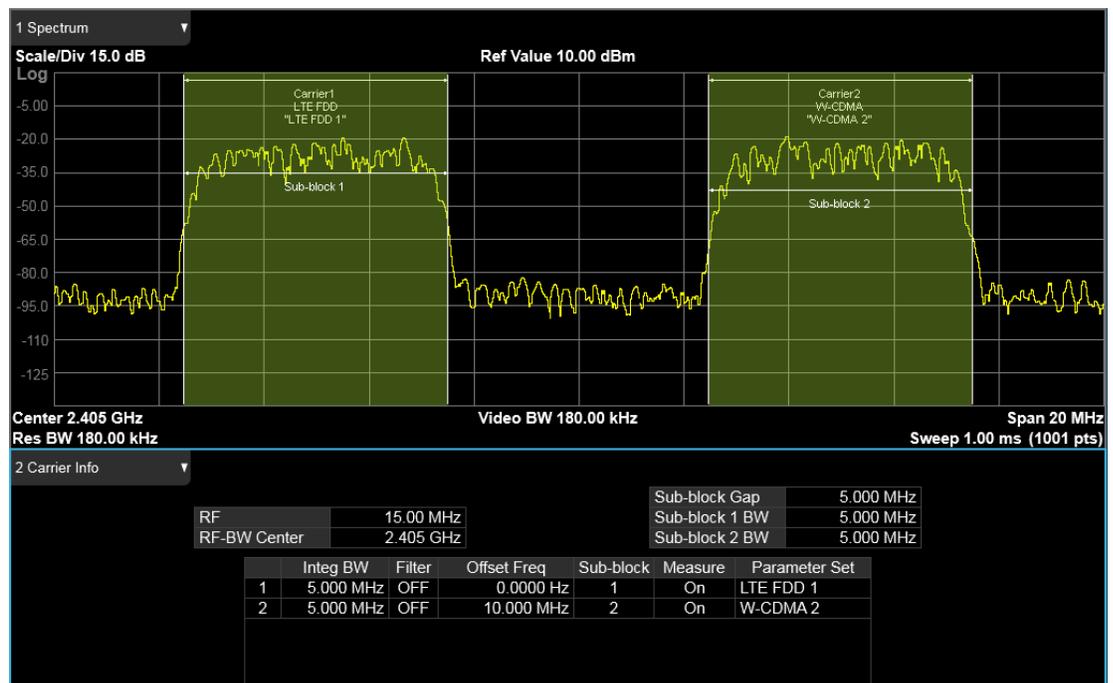

The text window displays the following results:

RF-BW and RF-BW Center

It shows the RF bandwidth calculated from the outermost component carriers and their freq offset, and the center frequency of the RF Bandwidth.

Sub-block configuration

As for intra-band non-contiguous spectrum operation, the sub-block concept is introduced, which refers to one contiguous allocated block of spectrum for

transmission and reception in the intra-band non-contiguous aggregation mode. So far we support the two sub-blocks. It summarizes each sub-block bandwidth and the frequency gap between the two consecutive sub-blocks. The Sub-block gap and Sub-block 2 BW are displayed when Component Carrier Allocation is Non-Contiguous and two sub-blocks are separated.

#### Integration Bandwidth

It displays the transmission bandwidth each component carrier.

#### Filter

It displays whether RRC filter is used for MON measurement or not.

#### Offset Frequency

It shows the offset frequency from the carrier reference frequency in multi-carrier measurements. The carrier frequency display type determines whether the relative frequency or absolute frequency will be displayed.

#### Sub-block

It displays which sub-block the carrier belongs to in the intra-band non-contiguous aggregation mode. The column will be displayed when the carrier allocation mode is non-contiguous.

#### Measure

It shows whether the carrier is measured or not.

#### Parameter Set

It displays which format parameter set is selected.

### 3.11.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

#### 3.11.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

## Ref Value

Sets the value for the absolute power reference. The reference line is at the top, center, or bottom of the graticule, depending on the value of "Ref Position" on page 2020.

Remote Command	<code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RLEVel &lt;real&gt;</code> <code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RLEVel?</code>
Example	<code>:DISP:MON:WIND:TRAC:Y:RLEV 2.0</code> <code>:DISP:MON:WIND:TRAC:Y:RLEV?</code>
Couplings	When "Auto Scaling" on page 2021 is <b>ON</b> (default), this value is automatically determined by the measurement result. When you set a value manually, <b>Auto Scaling</b> changes to <b>OFF</b> Attenuation is not coupled to "Ref Value" on page 2019
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-250.00 dBm / 250.00 dBm
Annotation	Ref <value> top left of graph
Backwards Compatibility SCPI	<code>:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RLEVel</code>

## Scale/Div

For measurements that support a logarithmic Y-Axis, **Scale/Div** sets the height of one division of the graticule in the current Y-Axis unit.

**Scale/Div** also determines the displayed amplitude range in the log plot graph. Since there are usually 10 vertical graticule division on the display, the total amplitude range of the graph is typically 10x this amount. For example, if **Scale/Div** is 10 dB, then the total range of the graph is 100 dB.

Remote Command	<code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:PDIVision &lt;rel_amp1&gt;</code> <code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:MON:WIND:TRAC:Y:PDIV 5.0 dB</code> <code>:DISP:MON:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to Scale Range as follows $Scale/Div = Scale\ Range / 10$ (number of divisions) When "Auto Scaling" on page 2021 is <b>ON</b> , this value is automatically determined by the measurement result When you change a value, <b>Auto Scaling</b> automatically changes to <b>OFF</b>

Preset	10.00 dB / Div
State Saved	Saved in instrument state
Min	0.10 dB
Max	20 dB
Annotation	<value> dB/ left upper of graph
Backwards Compatibility SCPI	<code>:DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision</code>

## Scale Range

Sets the Y Axis scale range.

Remote Command	<code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RANGe &lt;rel_ampl&gt;</code> <code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:MON:WIND:TRAC:Y:RANG 100</code> <code>:DISP:MON:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to Scale/Div as follows Scale Range = Scale/Div * 10 (number of divisions) When you change a value, Auto Scaling automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

## Ref Position

Positions the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

Remote Command	<code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom</code> <code>:DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:MON:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:MON:WIND:TRAC:Y:RPOS?</code>
Preset	TOP
State Saved	Saved in instrument state
Range	TOP   CENTer   BOTTom
Annotation	The greater than (>) and less than (<) symbols are displayed on both sides of the graph to indicate the Reference Position

---

Backwards :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOsition  
 Compatibility  
 SCPI

## Auto Scaling

Toggles the **Auto Scaling** function On or Off.

---

Remote :DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:COUPle 0 | 1 | OFF | ON  
 Command :DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:COUPle?

---

Example :DISP:MON:WIND:TRAC:Y:COUP OFF  
 :DISP:MON:WIND:TRAC:Y:COUP?

---

Couplings When **Auto Scaling** is **ON**, and the **Restart** front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results. When you change a value of **Scale/Div**, **Ref Value**, or **Scale Range**, Auto Scaling automatically changes to OFF.

---

Preset 1

---

State Saved Saved in instrument state

---

Range OFF | ON

---

Backwards :DISPlay:MONitor:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:COUPle  
 Compatibility  
 SCPI

### 3.11.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 2022](#)
- See ["Single-Attenuator Configuration" on page 2022](#)

Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.


Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not*

appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the **Range** tab in that case

### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

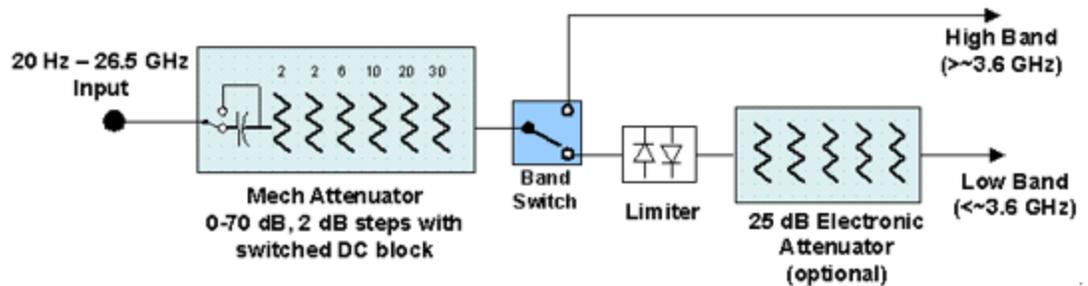


Configuration 2: Mechanical attenuator, no optional electronic attenuator

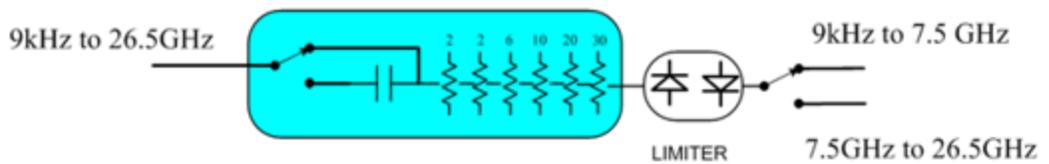

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.

### Single-Attenuator Configuration

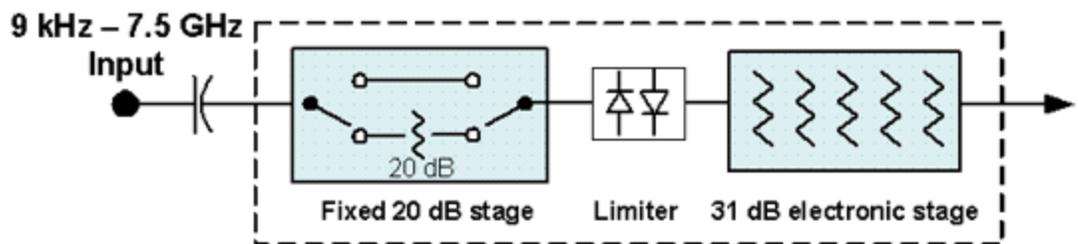

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the

Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

## Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and " <b>Mech Atten</b> " on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB

Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the <b>Input</b> is <b>RF</b>, and the <b>Input Port</b> is <b>RF Input 2</b>, and the Full Range Attenuator is installed: On the Meas Bar, the field “Atten” displays as follows:</p> <ul style="list-style-type: none"> <li>- If the sweep is entirely &lt; 50 GHz, the value shown after “Atten:” is equal to Mech Atten + Elec Atten + Full Range Atten</li> <li>- If the sweep is entirely &gt; 50 GHz, the value shown after “Atten:” is equal to Full Range Atten</li> <li>- If the sweep straddles 50 GHz, the value shown after “Atten:” is preceded by the symbol “&gt;=” and is equal to Full Range Atten</li> </ul> <p>In the <b>Amplitude</b>, <b>“Y Scale” on page 2153</b> menu, and the Atten <b>Meas Bar</b> dropdown menu panel, a summary is displayed as follows:  “Total Atten below 50 GHz” followed by the value of Full Range Atten + Mech Atten + Elec Atten  “Total Atten above 50 GHz” followed by the value of Full Range Atten  For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> <li>- Attenuator summary:</li> <li>- Total Atten below 50 GHz: 30 dB</li> <li>- Total Atten above 50 GHz: 20 dB</li> </ul>

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, **“Internal Preamp” on page 2183** Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See **“Attenuator Configurations and Auto/Man” on page 2026**

Remote Command	<pre>[ :SENSe]:POWer[:RF]:ATTenuation &lt;rel_amp&gt; [ :SENSe]:POWer[:RF]:ATTenuation?</pre>
Example	<pre>:POW:ATT 20</pre> <p>Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB  Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of “main” attenuation)  In either case, if the attenuator was in Auto, it is set to Manual</p>
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

	<p>In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of <b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in "<a href="#">Elec Atten</a>" on page 2164</p> <p>See "<a href="#">Attenuator Configurations and Auto/Man</a>" on page 2026 for more information on the <b>Auto/Man</b> functionality</p>						
Couplings	<p>If the RF Input Port is the RF Input:</p> <ul style="list-style-type: none"> <li>- If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>- Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>, <b>External Gain</b>, <b>Ref Level Offset</b>, <b>Max Mixer Level</b>, <b>μW Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "<a href="#">Full Range Atten</a>" on page 2160 from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul> <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when <b>Mech Atten</b> is in <b>Auto</b>, but no changes are made to the actual attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is <math>\leq 7.5</math> GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>						
Preset	<p><b>Auto</b></p> <p>The Auto value is 10 dB</p>						
State Saved	<p>Saved in instrument state</p>						
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>						
Max	<table border="1"> <tr> <td>CXA Option 503 or 507</td> <td>50 dB</td> </tr> <tr> <td>EXA</td> <td>60 dB</td> </tr> <tr> <td>All other models</td> <td>70 dB</td> </tr> </table> <p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>	CXA Option 503 or 507	50 dB	EXA	60 dB	All other models	70 dB
CXA Option 503 or 507	50 dB						
EXA	60 dB						
All other models	70 dB						
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p>						

The e letter is in amber in Single-Attenuator configurations  
 For example:  
 Dual-Attenuator configuration:  
*Atten: 24 dB (e14)*  
 Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB  
 Single-Attenuator configuration:  
*A: 24 dB (e14)*  
 Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)  
 When in Manual, a # sign appears in front of Atten in the annotation

#### Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO?</code>
Example	Turn <b>Auto Mech Atten</b> ON: <code>:POW:ATT:AUTO ON</code>
Dependencies	<code>:POW:ATT:AUTO</code> is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	<code>ON</code>

### Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 2024 (or `:POW:ATT`) as the “main” attenuation; and the attenuation that is set by `:POW:EATT` as the “soft” attenuation (`:POW:EATT` is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about “soft” attenuation.

#### NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 2029](#)

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code> , and affects the total attenuation displayed on the <b>Attenuation</b>

control and the Meas Bar

The electronic attenuator, and the “soft” attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is > 3.6 GHz, then the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If "**Internal Preamp**" on page 2183 is **ON** (that is, set to Low Band or Full), the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out

If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned

If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence

If the electronic/soft Attenuator is enabled, then the **Stop Freq** of the instrument is limited to 3.6 GHz and **Internal Preamp** is unavailable

If "**LNA**" on page 2185 is **ON**, the electronic attenuator (and the “soft” attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the **Enabled/Disabled** section of the **Elec Atten** control will be **OFF** and grayed-out. This coupling works in the following modes/measurements:

- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes
- Transmit On|Off Power measurement in 5GNR Mode
- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <b>Mechanical Attenuator Transition Rules</b> " on page 2029
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description

#### Auto Function

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :EATTenuation :STATE OFF   ON   0   1</code> <code>[ :SENSe ] :POWer [ :RF ] :EATTenuation :STATE?</code>
Example	<code>:POW:EATT:STAT ON</code>

---

:POW:EATT:STAT?

---

Preset      **OFF** (Disabled) for Swept SA measurement  
              **ON** (Enabled) for all other measurements that support the electronic attenuator

**NOTE**

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

---

### More Information

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 2030](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the "soft" attenuation feature replaces the Dual-Attenuator configuration's electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### Mechanical Attenuator Transition Rules

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled

- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

### **Using the Electronic Attenuator: Pros and Cons**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the

electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

### Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 2168](#).

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

### Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "[Adjust Atten for Min Clipping](#)" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "[Adjustment Algorithm](#)" on page 2033

Selection	SCPI	Note
Off	<b>OFF</b>	This is the default setting
On	<b>ON</b>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to <b>COMBined</b>
Elec Atten Only	<b>ELECTrical</b>	Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<b>COMBined</b>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Example	<code>:POW:RANG:OPT:ATT OFF</code> <code>:POW:RANG:OPT:ATT?</code>
Notes	The parameter option <b>ELECTrical</b> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <b>COMBined</b> is mapped to <b>ELECTrical</b> in Single-Attenuator models. If you send <b>COMBined</b> , it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBined</b>
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when " <a href="#">Elec Atten</a> " on page 2164 is <b>OFF</b> or grayed-out, " <a href="#">Pre-Adjust for Min Clipping</a> " on page 2032 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>
State Saved	Saved in instrument state

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

Range	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten
	Single-Attenuator models:	Off   On


Backwards Compatibility Command

Notes	<p><b>ON</b> aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC)</p> <p><b>OFF</b> aliases to "Off" (:POW:RANG:OPT:ATT OFF)</p> <p>:POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not OFF</p>
Backwards Compatibility SCPI	<p>[ :SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0</p> <p>[ :SENSe]:POWer[:RF]:RANGe:AUTO?</p>

**Adjustment Algorithm**

The algorithms for the adjustment are documented below:


### Single-Attenuator Models

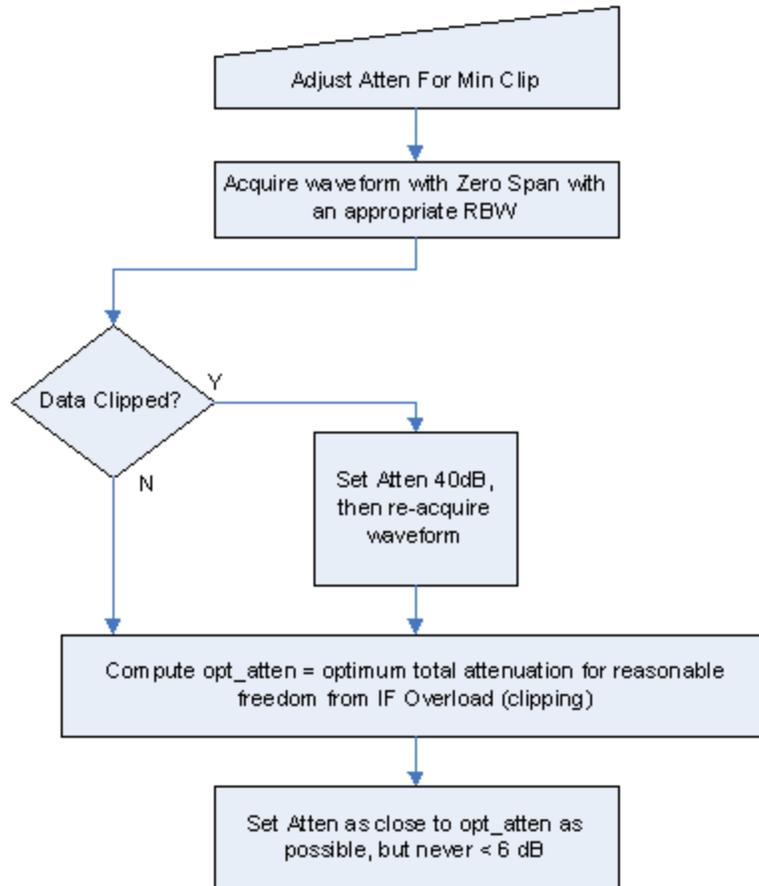

### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 2032 selection is Mech + Elec Atten:


3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

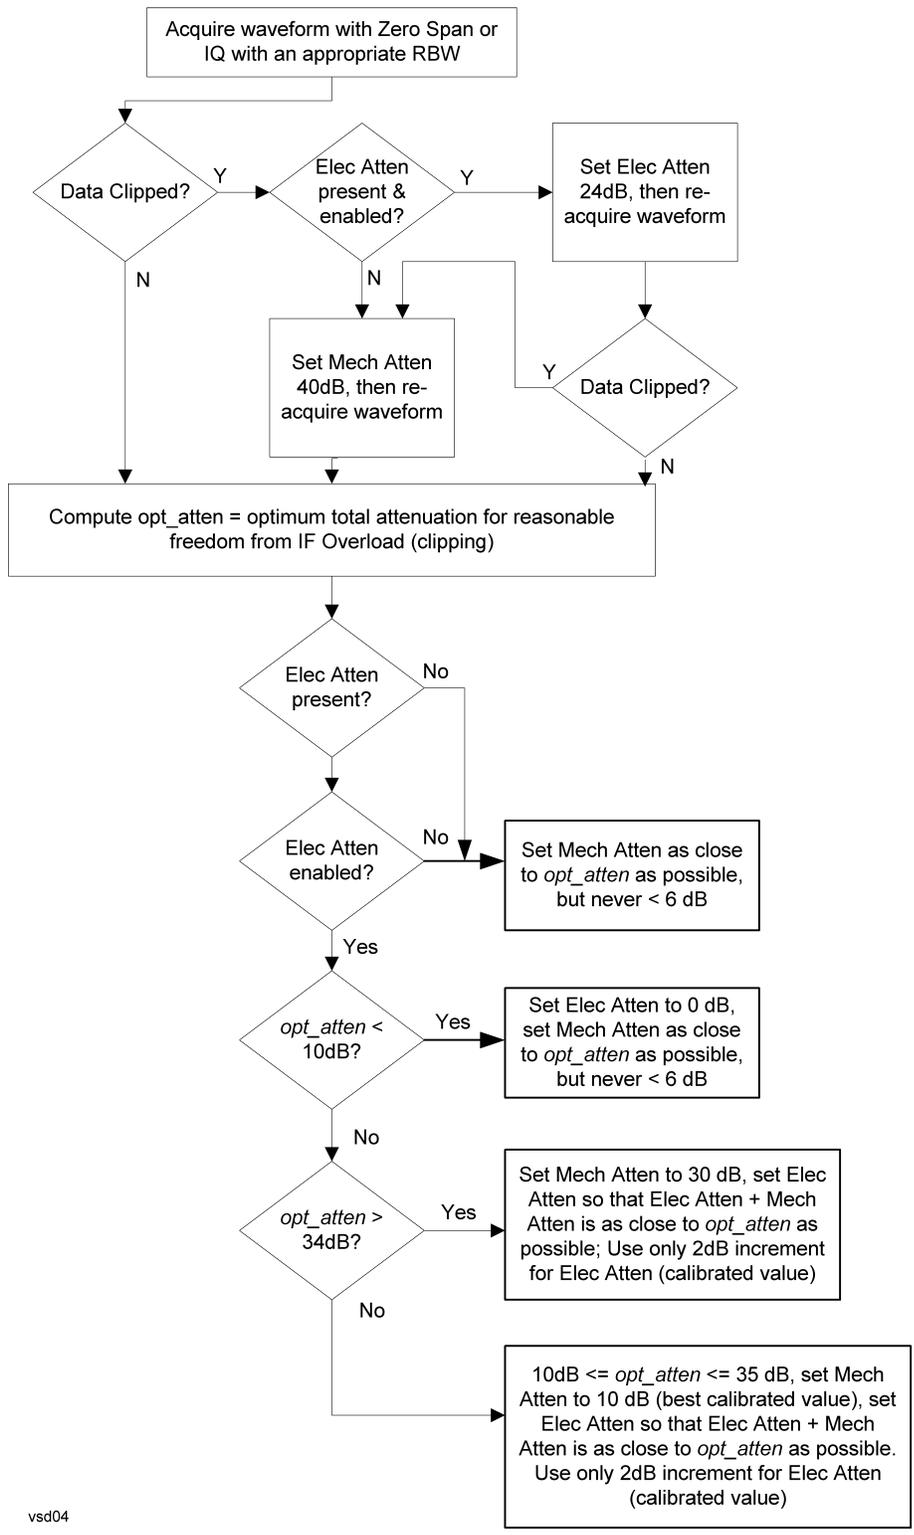

vsd04

"Pre-Adjust for Min Clipping" on page 2032 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

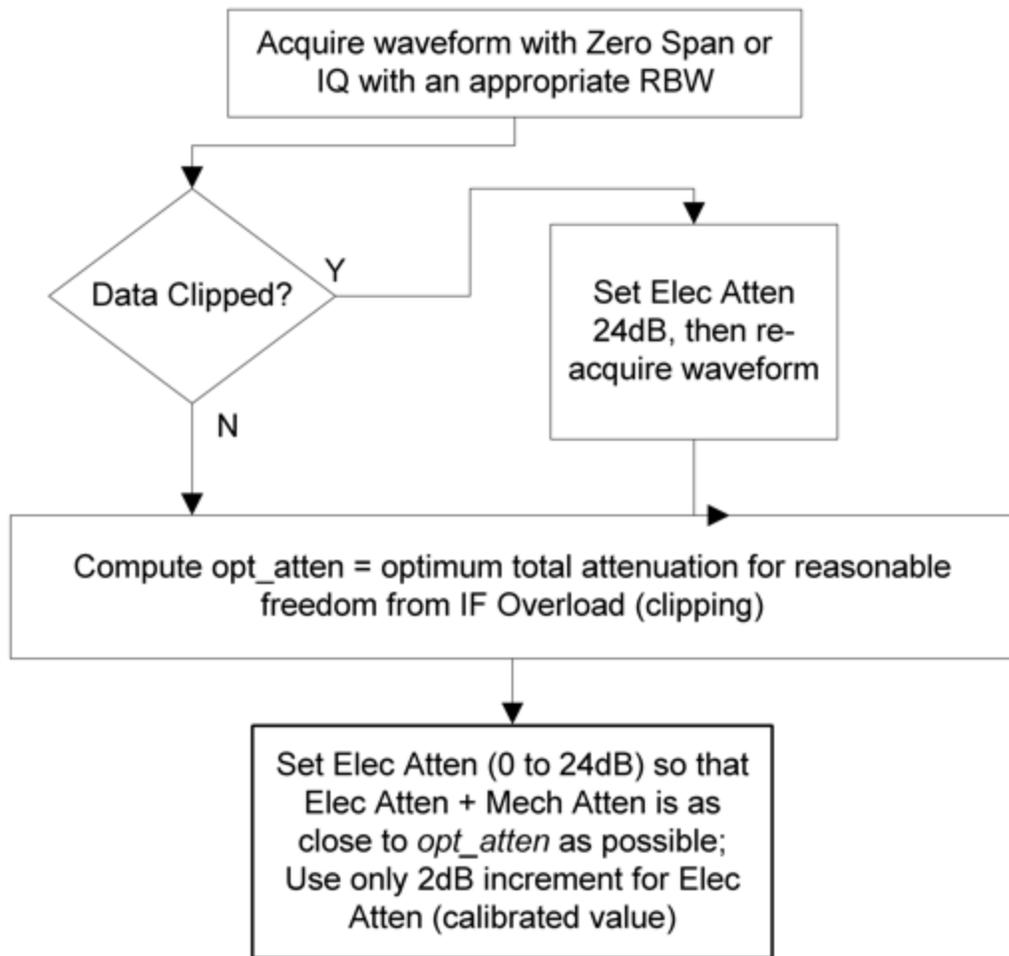

### Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

	<code>[ :SENSe ] :POWer [ :RF ] :ATTenuation :STEP [ :INCRement ] ?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.11.3.3 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

### Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :RANGe &lt;real&gt;</code> <code>[ :SENSe ] :POWer [ :RF ] :RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> The hardware compensates for frequency response and alters the Range setting
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

## Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements

## Pre-Adjust for Min Clipping


If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

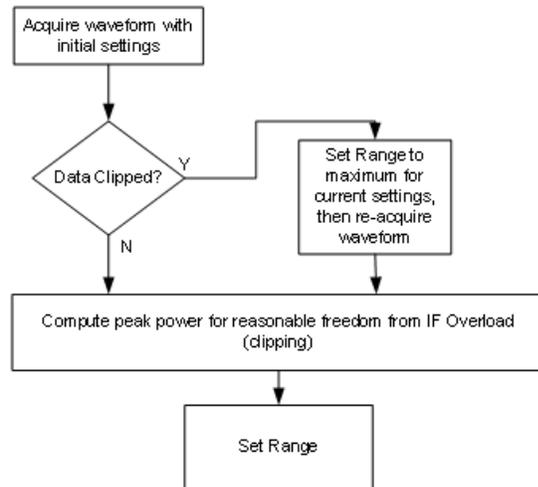

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	[:SENSe]:POWer[:RF]:RANGe:PARatio <real> [:SENSe]:POWer[:RF]:RANGe:PARatio?	
Example	:POW:RANG:PAR 12 dB	
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

## Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:MIXer:OFFSet?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

### 3.11.3.4 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because "[Software Preselection](#)" on page 2195 is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range

between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on "[Preselector Adjust](#)" on page 2182 changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in "[Proper Preselector Operation](#)" on page 2041.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in " <a href="#">Preselector Adjust</a> " on page 2182
Status Bits/OPC dependencies	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a subsequent measurement has completed, nor are results returned in response to <code>:READ</code> or <code>:MEASure</code> queries The <b>Measuring</b> bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak

search to find

2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

## Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when "**Presel Center**" on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	<ul style="list-style-type: none"> <li>- Does not appear in CXA-m</li> <li>- Does not appear in VXT Models M9410A/11A/15A/16A</li> <li>- Does not appear in M9410E/11E/15E/16E</li> <li>- Grayed-out if microwave preselector is off</li> <li>- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz</li> <li>- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz</li> <li>- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram</b> View</li> </ul>
Preset	0 MHz

State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PADJust</code> <code>[ :SENSe]:POWer[:RF]:MMW:PADJust</code> Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXternal</code> <code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	<code>:POW:GAIN OFF</code>	
Low Band	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND LOW</code>	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	<code>:POW:GAIN ON</code> <code>:POW:GAIN:BAND FULL</code>	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

**NOTE**

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <code>LOW</code> instead of <code>FULL</code> , and an "Option not installed" message is generated Not available when the electronic/soft attenuator is enabled
Preset	<code>LOW</code>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz" When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)

**Auto Function**

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<code>OFF</code>

**LNA**

Lets you turn the Low Noise Amplifier (LNA) on or off.

LNA is an additional preamplifier that provides superior DANL and frequency range compared to "Internal Preamp" on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, LNA can be turned on *together* with "Internal Preamp" on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "More Information" on page 2045

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements LNA is not available when the electronic/soft attenuator is enabled
Preset	OFF
State Saved	Saved in State

## More Information

When LNA is installed, the preamp annotation changes to show the state of both LNA and Internal Preamp. Below is an example:

```
Atten: 8 dB
Pre: Int on, LNA on
µW Path: LNP, On
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if LNA is on, **Internal Preamp** is switched off (even if you have its switch set to ON). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB
Pre: Int off, LNA on
µW Path: LNP, On
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21–26.5 GHz region, though without improving many measures of dynamic range, and without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 2050
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 2052
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 2053

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH?</code>														
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>														
Notes	<p>When "<b>Presel Center</b>" on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b></p> <p>The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b>. In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled</p> <p>Alignment switching ignores the settings in this menu, and restores them when finished</p>														
Dependencies	<p>Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing</p> <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul> <p>In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are grayed-out if the current measurement does not support them</p> <p><b>Low Noise Path Enable</b> and <b>Full Bypass Enable</b> are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"</p>														
Preset	<table border="1"> <thead> <tr> <th>Mode</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>IQ Analyzer</td> <td>MPB option present and licensed: <b>MPB</b></td> </tr> <tr> <td>Pulse</td> <td>MPB option not present and licensed: <b>STD</b></td> </tr> <tr> <td>RTSA</td> <td></td> </tr> <tr> <td>Avionics</td> <td></td> </tr> <tr> <td>All other Modes</td> <td><b>STD</b></td> </tr> <tr> <td>-</td> <td></td> </tr> </tbody> </table>	Mode	Value	IQ Analyzer	MPB option present and licensed: <b>MPB</b>	Pulse	MPB option not present and licensed: <b>STD</b>	RTSA		Avionics		All other Modes	<b>STD</b>	-	
Mode	Value														
IQ Analyzer	MPB option present and licensed: <b>MPB</b>														
Pulse	MPB option not present and licensed: <b>STD</b>														
RTSA															
Avionics															
All other Modes	<b>STD</b>														
-															
State Saved	Save in instrument state														
Range	Standard Path   Low Noise Path Enable   μW Presel Bypass   Full Bypass Enable														

Annotation      In the Meas Bar, if the Standard path is chosen:  
                           $\mu$ W Path: Standard  
                          If Low Noise Path is enabled but the LNP switch is not thrown:  
                           $\mu$ W Path: LNP,Off  
                          If the Low Noise Path is enabled and the LNP switch is thrown:  
                           $\mu$ W Path: LNP,On  
                          If the preselector is bypassed:  
                           $\mu$ W Path: Bypass  
                          If Full Bypass Enable is selected but the LNP switch is not thrown:  
                           $\mu$ W Path: FByp,Off  
                          If Full Bypass Enable is selected and the LNP switch is thrown:  
                           $\mu$ W Path: FByp,On

### $\mu$ W Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to  $\mu$ W Path Control:



This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	$\mu$ W Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

Measurement	$\mu$ W Path Control Auto behavior
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is presel bypass if presel bypass is enabled, auto $\mu$ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious	Always Standard Path

Measurement	$\mu$ W Path Control Auto behavior
Emissions	
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass
Channel Quality Mode	
Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSE]:POWER[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSE]:POWER[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 2048 above
Preset	ON
Range	ON OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used,

### 3 LTE & LTE-A TDD Mode

#### 3.11 Monitor Spectrum Measurement

whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.


Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.

Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

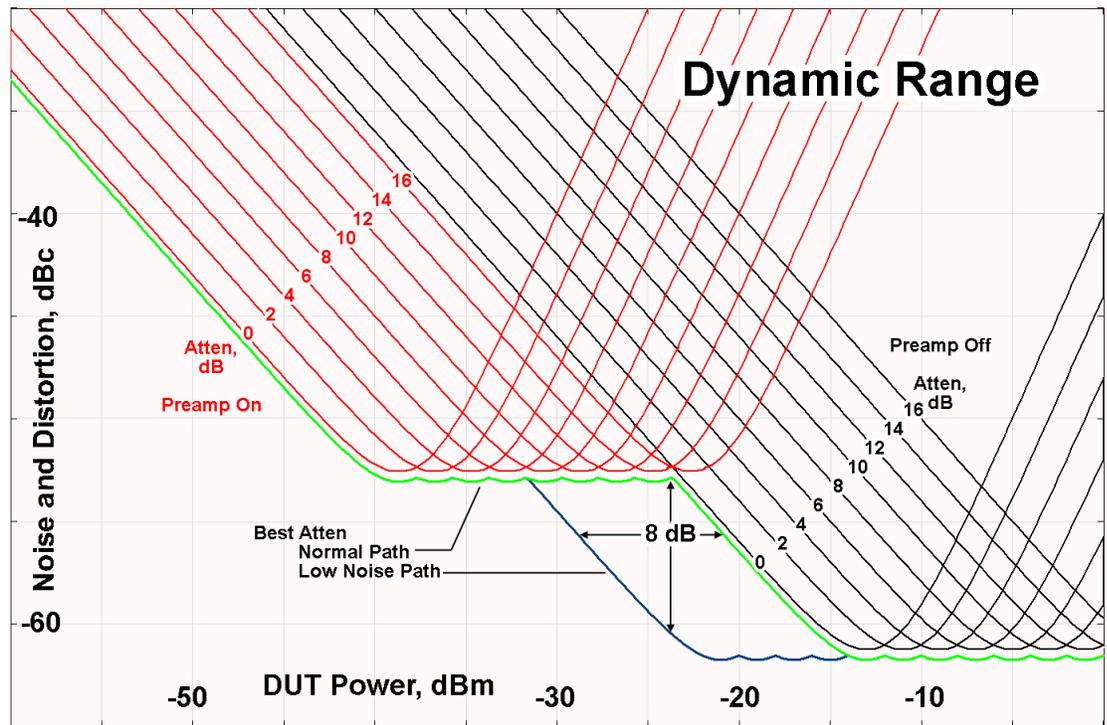

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **µW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### Full Bypass Enable

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

#### CAUTION

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently,

whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

“Full Bypass Enabled, maximum safe input power reduced”

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: <code>:POW:MW:PRES OFF</code>
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path ( <code>:POW:MW:PATH STD</code> ) The <b>OFF</b> parameter sets path <b>MPB</b> ( <code>:POW:MW:PATH MPB</code> )
Preset	<b>ON</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?</code>

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender’s preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED;Presel/Meas BW conflict

## Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

### N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

### VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel:STATe 0   1   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel:STAT?</code>
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state
Preset	N9041B <b>OFF</b> N9042B+V3050A <b>ON</b> M9410A/11A <b>ON</b>
State Saved	Saved in instrument state

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel NORMa1   ADVanced</code> <code>[ :SENSe]:POWer[:RF]:SWPResel?</code>	
Example	<code>:POW:SWPR NORM</code> <code>:POW:SWPR?</code>	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	<b>ADVanced</b>
	N9042B+V3050A	<b>NORMa1</b>
State Saved	Saved in instrument state	

### SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from

wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPResel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPResel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <a href="#">Software Preselection</a> " on page 2195 is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code> Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code> Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <a href="#">Prefilter Presets</a> " on page 2059 below
State Saved	Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

### 3.11.4 BW

Opens the Bandwidth (**BW**) menu, which contains controls for the Resolution Bandwidth and Video Bandwidth functions of the instrument.

#### 3.11.4.1 Settings

Contains the basic bandwidth functions. It is the only tab under **BW**.

#### Res BW

Activates the resolution bandwidth active function, which allows you to manually set the Resolution Bandwidth (RBW) of the instrument.

Normally, **Res BW (Auto)** selects automatic coupling of the Res BW to Span using the ratio set by the Span:3 dB RBW control (some measurements do not have a

Span:3 dB RBW control, in which case the measurement chooses the optimal ratio). To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Res BW** control, or simply enter a different value for **Res BW**.

When the **Res BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Res BW** control. This may also be done by pressing Auto Couple or by performing a **Preset**.

Only certain discrete resolution bandwidths are available. The available bandwidths are dependent on the **EMC Standard**. If an unavailable bandwidth is entered with the numeric keypad, the closest available bandwidth is selected.

See "[RBW Presets](#)" on page 2061

Remote Command	<pre>[ :SENSe]:MONitor:BANDwidth[:RESolution] &lt;bandwidth&gt; [:SENSe]:MONitor:BANDwidth[:RESolution]? [:SENSe]:MONitor:BANDwidth[:RESolution]:AUTO ON   OFF   1   0 [:SENSe]:MONitor:BANDwidth[:RESolution]:AUTO?</pre>
Example	<pre>:MON:BAND 5 MHz :MON:BAND? :MON:BAND:AUTO ON :MON:BAND:AUTO?</pre>
Notes	<p>For numeric entries, all RBW Types choose the nearest (arithmetically, on a linear scale, rounding up) available RBW to the value entered</p> <p>The setting and querying of values depends on the current bandwidth type</p>
Couplings	<p>Sweep time is coupled to the RBW. As the RBW changes, the sweep time (if set to Auto) is changed to maintain amplitude calibration</p> <p>Video bandwidth (VBW) is coupled to the RBW. As the resolution bandwidth changes, the video bandwidth (if set to Auto) changes to maintain the ratio of VBW/RBW (10:1)</p> <p>When the Res BW is set to Auto, the resolution bandwidth is auto-coupled to the span. The ratio of Span/RBW is approximately 106:1 when auto coupled. When Res BW is set to Man, and the bandwidths are entered manually, these bandwidths are used regardless of other instrument settings</p>
Preset	<p>Auto (unless noted in the table below)</p> <p>See "<a href="#">RBW Presets</a>" on page 2061 below</p>
State Saved	Saved in instrument state
Min	1 Hz
Max	8 MHz is the max equivalent -3 dB RBW, which means that the named RBW (the one shown on the control etc.) can actually exceed 8 MHz if using a filter other than -3 dB Gaussian
Annotation	A “#” mark appears before “RBW” in the annotation when it is switched from Auto to Manual coupling
Backwards Compatibility Notes	<p>For backwards compatibility this command obeys both the <b>BANDwidth</b> and <b>BWIDth</b> forms</p> <p>For ESA, the maximum Res BW was 5 MHz; on X-Series it is 8 MHz</p>

## RBW Presets

Unless noted in the table below, the Preset value of RBW is **Auto**.

Mode	Preset RBW
WLAN	100 kHz
LTE, LTETDD, LTEAFDD, LTEATDD	100 kHz
5GNR	100 kHz

## Video BW

Lets you change the instrument post-detection filter (VBW or “video bandwidth”) from 1 Hz to 8 MHz in approximately 10% steps. In addition, a wide-open video filter bandwidth may be chosen by selecting 50 MHz. The VBW is annotated at the bottom of the display, in the center.

Normally, **Video BW (Auto)** selects automatic coupling of the Video BW to RBW using the ratio set by the VBW:3 dB RBW control. To decouple the resolution bandwidth, press the **Auto/Man** toggle on the **Video BW** control, or simply enter a different value for **Video BW**.

When the **Video BW** is manually selected, it may be returned to the coupled state by pressing the **Auto/Man** toggle on the **Video BW** control. This may also be done by pressing Auto Couple or by performing a **Preset**.

Remote Command	<pre>[ :SENSe]:MONitor:BANDwidth:VIDeo &lt;bandwidth&gt; [ :SENSe]:MONitor:BANDwidth:VIDeo? [ :SENSe]:MONitor:BANDwidth:VIDeo:AUTO ON   OFF   1   0 [ :SENSe]:MONitor:BANDwidth:VIDeo:AUTO?</pre>
Example	<pre>:MON:BAND:VID 2.4 MHz :MON:BAND:VID? :MON:BAND:VID:AUTO ON :MON:BAND:VID:AUTO?</pre>
Notes	<p>For numeric entries, the instrument chooses the nearest (arithmetically, on a linear scale, rounding up) available VBW to the value entered. The 50 MHz VBW is defined to mean “wide open”</p> <p>The values shown in this table reflect the conditions after a Mode Preset</p>
Dependencies	<p>Sometimes the displayed Video BW is not actually used to process the trace data:</p> <ul style="list-style-type: none"> <li>– When the Average Detector is selected and <b>Sweep Type</b> is set to <b>Swept</b>, the video bandwidth filter cannot be used, because it uses the same hardware as the Average Detector</li> <li>– When the Quasi-Peak, EMI Average or RMS Average detector is selected the VBW is implemented by the digital IF as part of the detector</li> </ul>

	When this is the case, the VBW still acts to change the Sweep Time, if Sweep Time is in Auto, and still affects the data on other traces for which this is not the case
Couplings	Video bandwidth (VBW) is normally coupled to RBW. If <b>VBW</b> is set to Auto, then the VBW is changed as the RBW changes, to maintain the ratio set by the VBW:3 dB RBW control (usually 10:1 for measurements that do not have a VBW:3 dB RBW control)
Preset	Auto (unless noted in table below) <b>ON</b>
State Saved	Saved in instrument state
Min	1 Hz
Max	50 MHz
Annunciation	A “#” mark appears before “VBW” in the annotation when it is not coupled
Annotation	In the bottom center of the screen, “VBW <value> <units>” indicates the current video bandwidth value. Note that for some detectors this is not the value actually used for VBW (see above)
Backwards Compatibility Notes	For backwards compatibility this command obeys both the <b>BANDwidth</b> and <b>BWIDth</b> forms

## VBW Presets

Unless noted in the table below, the Preset value of VBW is **Auto**.

Mode	Preset VBW
<b>WLAN</b>	1 MHz
<b>LTE, LTETDD, LTEAFDD, LTEATDD</b>	1 MHz
<b>5GNR</b>	1 MHz

## VBW:3dB RBW

Selects the ratio between the video bandwidth and the equivalent 3 dB resolution bandwidth to be used for setting VBW when VBW is in Auto.

VBW:3dB RBW (Auto) selects automatic coupling of the VBW:3 dB RBW ratio to Detector using the rules described below in "[Coupling Auto Rules](#)" on page 2063. To decouple the ratio, press the **Auto/Man** toggle on the VBW:3 dB RBW control, or simply enter a different value for VBW:3 dB RBW.

When the VBW:3dB RBW is manually selected, it may be returned to the coupled state by setting the toggle on the VBW:3 dB RBW control back to **Auto**. This may also be done by pressing Auto Couple or by performing a **Preset**.

Remote Command	<code>[ :SENSe ]:MONitor: BANDwidth: VIDEo: RATio &lt;real&gt;</code> <code>[ :SENSe ]:MONitor: BANDwidth: VIDEo: RATio?</code>
----------------	--

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

	<code>[ :SENSe ]:MONitor:BANDwidth:VIDeo:RATio:AUTO OFF   ON   0   1</code>
	<code>[ :SENSe ]:MONitor:BANDwidth:VIDeo:RATio:AUTO?</code>
Example	<code>:MON:BAND:VID:RAT 2</code> <code>:MON:BAND:VID:RAT?</code> <code>:MON:BAND:VID:RAT:AUTO 0</code> <code>:MON:BAND:VID:RAT:AUTO?</code>
Notes	The values shown in this table reflect the conditions after a Mode Preset
Couplings	See " <a href="#">Coupling Auto Rules</a> " on page 2063
Preset	1 ON
State Saved	Saved in instrument state
Min	0.00001
Max	3000000
Backwards Compatibility Notes	For backwards compatibility this command accepts both the <b>BANDwidth</b> and <b>BWIDth</b> forms

### Coupling Auto Rules

The Auto Rules for the **VBW:3dB RBW** function are as follows.

First, if Source Mode is set to "Tracking": Use 1.0

Otherwise, we go through the following list of detector numbers and find the lowest numbered detector being used on any active traces (traces for which Update is On):

1. Peak
2. Normal
3. Average
4. Sample
5. Negative Peak
6. EMI Average
7. Quasi Peak
8. RMS Average

Use that detector to pick the ratio based on the following criteria:

1. If the measurement supports EMC Standard, and the detector is Peak and the EMC Standard is set to either CISPR or MIL, use 10.0 (we use wide VBWs to capture peak levels accurately).
2. Otherwise, if the detector is **Negative Peak**, use 1.0 (in the Negative Peak case, there are no known significant use models so we use a medium ratio).
3. Otherwise, if the detector is **Normal**, use 1.0.
4. Otherwise, if the detector is **Average**, and the span is nonzero, use 0.1. The use of a small ratio in Average detection is desirable because of its effect on the sweep time equations. The VBW filter is not actually in-circuit when the average detector is on. If the detector is Average, and the span is zero, use 10.0, which gives optimal behavior for Interval Markers in zero span. Note that only the Swept SA measurement supports Zero Span.
5. Otherwise, if the detector is EMI Average, Quasi Peak or RMS Average, use 10.0. In fact, this is a “don’t care” since no VBW is used for these detectors, as noted under “Dependencies” for the VBW control
6. Otherwise, the detector is simply **Peak** or **Sample**. These two detectors can use the same rules. In these cases, if any active trace is in max hold or min hold, use 10.0, because Max and Min Hold operations will usually be intended to capture peaks and pits without smoothing from the VBW filter; otherwise, use 1.0 as a compromise, because you have not set the instrument in a way that implies that you are measuring noise, pulsed-RF or CW signals, and for backward compatibility with earlier instruments.

Note that because the above couplings depend on which traces are active, they are re-examined whenever any trace goes active or inactive, except when this leaves no traces active. Transitioning to the state where no traces are active should not affect the couplings; in that way, the annotation will always reflect the state of the last trace which was active.

Note also that some detectors are not available in some measurements, but because of the way the above rules that does not change the logic of the rules.

### **Span:3dB RBW**

Selects the ratio between span and resolution bandwidth.

Normally, Span:3dB RBW (Auto) selects a Span:3 dB RBW ratio of 106:1. If you manually enter the ratio, the toggle on the Span:3dB RBW control will change to **Man**. This enables you to manually select ratios more suitable for certain measurements.

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

When the Span:3dB RBW is manually selected, it may be returned to the coupled state by setting the toggle on the RBW:3 dB RBW control back to **Auto**. This may also be done by pressing Auto Couple or by performing a **Preset**.

Remote Command	<pre>[ :SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio &lt;integer&gt; [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio? [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO OFF   ON   0   1 [:SENSe]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO?</pre>
Example	<pre>:MON:FREQ:SPAN:BAND:RAT 200 :MON:FREQ:SPAN:BAND:RAT? :MON:FREQ:SPAN:BAND:RAT:AUTO ON :MON:FREQ:SPAN:BAND:RAT:AUTO?</pre>
Notes	The values shown in this table reflect the conditions after a Mode Preset
Preset	106 ON
State Saved	Saved in instrument state
Min	2
Max	10000
Backwards Compatibility SCPI	<pre>[ :SENSe]:MONitor:FREQuency:SPAN:BWIDth[:RESolution]:RATio</pre>

### 3.11.5 Display

Opens the **Display** menu, which lets you configure display items for the current Mode, Measurement View or Window.

#### 3.11.5.1 Meas Display

Contains controls for setting up the display for the current Measurement, View or Window.

#### Carrier Attribute

Toggles whether or not carrier information is shown on the spectrum trace.

Carrier information is displayed when carrier attribute is on . When the Span is greater, there is insufficient space to display the texts. In this case, only vertical lines and arrows are displayed, without text.

Remote Command	<code>:DISPlay:MONitor:VIEW:WINDow:CATTribute OFF   ON   0   1</code> <code>:DISPlay:MONitor:VIEW:WINDow:CATTribute?</code>
Example	<code>:DISP:MON:VIEW:WIND:CATT 0</code> <code>:DISP:MON:VIEW:WIND:CATT?</code>
Dependencies	Only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>

### Sub-block Attribute

Toggles the sub-block information on the spectrum trace. Sub-block attributes are displayed when the setting is selected as on.

Remote Command	<code>:DISPlay:MONitor:VIEW:WINDow:SATTribute[:STATE] OFF   ON   0   1</code> <code>:DISPlay:MONitor:VIEW:WINDow:SATTribute[:STATE]?</code>
Example	<code>:DISP:MON:VIEW:WIND:SATT 0</code> <code>:DISP:MON:VIEW:WIND:SATT?</code>
Dependencies	Only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>

### Carrier Freq

Selects frequency display type between:

- **OFFSet**: carrier frequencies in the carrier table are shown as offsets from Carrier Ref Freq
- **ABSolute**: absolute frequencies are displayed

Remote Command	<code>:DISPlay:MONitor:VIEW:WINDow:CINformation:FREQuency OFFSet   ABSolute</code> <code>:DISPlay:MONitor:VIEW:WINDow:CINformation:FREQuency?</code>
Example	<code>:DISP:MON:VIEW:WIND:CINF:FREQ ABS</code> <code>:DISP:MON:VIEW:WIND:CINF:FREQ?</code>
Dependencies	Only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Preset	<b>OFFSet</b>
State Saved	Saved in instrument state
Range	<b>OFFSet   ABSolute</b>

### 3.11.5.2 View

Contains controls for selecting the current **View**, and for editing User Views.

#### View

See "Views" on page 2011

#### User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect &lt;alphanumeric&gt;</code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOOM</code>) with</p> <pre>:DISP:VIEW:ADV:SEL</pre> <p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name &lt;alphanumeric&gt; does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre>:DISPlay:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to be able to return easily to your original Basic View, you can save your edited View as a “User View”.

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:NAME "Baseband"</code> Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View
Notes	<code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <code>&lt;alphanumeric&gt;</code> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via <code>:DISP:ENAB OFF</code> ) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
----------------	---

---

Example	<code>:DISP:VIEW:ADV:REN "Baseband"</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; already exists" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot rename a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

---

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete</code>
Example	<code>:DISP:VIEW:ADV:DEL</code>
Notes	<p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <code>&lt;alphanumeric&gt;</code> is not present in the list of View names, the error message "-224, Illegal parameter value; View &lt;alphanumeric&gt; does not exist" is generated</p> <p>If the current View is a Predefined View, the error message "-224, Illegal parameter value; Cannot delete a Predefined View" is generated</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>

---

## Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

---

Remote Command	<code>:DISPlay:VIEW:ADVanced:DElete:ALL</code>
Example	<code>:DISP:VIEW:ADV:DEL:ALL</code>
Notes	Disabled if there are no User Views

---

## View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy

nodes, `:DISPlay:VIEW[:SElect]` and `:DISPlay:VIEW:NSEL`, are retained for backwards compatibility, but they only support predefined views.

### View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	<p>Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement</p> <p>Example:  <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code></p> <p>No distinction is made between Predefined and User Views</p> <p>If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code>), then query the list of available Views, the result is undefined</p>

### User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	<p>Returns a quoted string of the available User Views for the current measurement, separated by commas.</p> <p>Example:  <code>"Baseband,myView1,yourView1"</code></p> <p>If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a>), then query the list of available Views, the result is undefined</p>

#### 3.11.5.3 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

## Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<b>ON</b>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

## Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ....

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state

## Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

## Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When `OFF`, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
----------------	--

Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b>  This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

### Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global. There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTEM:DEFAULTS MISC` or `:DISPLAY:ENABLE ON` (neither `*RST` nor `:SYSTEM:PRESET` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTEM:DEFAULTS MISC` or `:DISPLAY:ENABLE ON` (neither `*RST` nor `:SYSTEM:PRESET` enable the display)
- and you are using either the `:SYSTEM:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPLAY:VIEW:ADVANCED:SELECT</code>
Rename User View	<code>:DISPLAY:VIEW:ADVANCED:RENAME</code>
Delete User View	<code>:DISPLAY:VIEW:ADVANCED:DELETE</code>
Create User View	<code>:DISPLAY:VIEW:ADVANCED:NAME</code>
Select Screen	<code>:INSTRUMENT:SCREEN:SELECT</code>
Delete Screen	<code>:INSTRUMENT:SCREEN:DELETE</code>

Name	Command
Delete All But This Screen	:INSTrument:SCReen:DELeTe:ALL
Add Screen	:INSTrument:SCReen:CREate
Rename Screen	:INSTrument:SCReen:REName
Sequencer On/Off	:SYSTem:SEQuencer

Remote Command	:DISPlay:ENABle OFF   ON   0   1 :DISPlay:ENABle?
Example	:DISP:ENAB OFF
Couplings	:DISP:ENAB OFF turns Backlight OFF and :DISP:ENAB ON turns Backlight ON, but changing Backlight settings does <i>not</i> change the state of :DISP:ENAB
Preset	ON Set by :SYST:DEF MISC, but not affected by *RST or :SYSTem:PRESet
State Saved	Not saved in instrument state
Backwards Compatibility Notes	:SYST:PRES no longer turns on :DISPlay:ENABle as it did in legacy analyzers

## 3.11.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in this menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

### 3.11.6.1 Settings

The Settings tab contains the basic Bandwidth functions. In most measurements it is the only tab under Bandwidth.

### Carrier Reference Frequency

Sets carrier reference frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

### 3 LTE & LTE-A TDD Mode

#### 3.11 Monitor Spectrum Measurement

Because LTE-A, MSR and 5G NR measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the Center Frequency parameter used in other measurements, as Center Frequency can be a global parameter, and it would not make sense for Carrier Reference Frequency to take on this global value.

In LTE-A and 5G NR, if the following conditions are satisfied at the same time:

- the Number of Component Carrier equals 1
- the Center Freq Offset equals to 0 Hz
- the mode of the Center Freq is Auto

then the Center Freq is equivalent to Carrier Ref Freq. When the Center Freq changes in such conditions, the mode of the Center Freq remains as Auto and the Carrier Ref Freq will be changed to same value. The major purpose of this coupling is to keep BWCC with legacy LTE/LTE TDD, in which `:SENSe:FREQuency:CENTer` is used to set up the Frequency of the measurement.

See "[More Information](#)" on page 2075.

Remote Command	For LTEAFDD/LTEATDD, 5GNR: <code>[ :SENSe]:CCARrier:REFeRence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFeRence?</code> For MSR: <code>[ :SENSe]:CARRier:REFeRence &lt;freq&gt;</code> <code>[ :SENSe]:CARRier:REFeRence?</code>
Example	For LTEAFDD/LTEATDD, 5GNR: <code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code> For MSR: <code>:CARR:REF 2GHz</code> <code>:CARR:REF?</code>
Dependencies	Only available in LTEAFDD/LTEATDD, 5GNR and MSR Modes
Preset	1 GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum center frequency. Same as Center Freq

### More Information

In most applications, Center Frequency is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced

TDD/FDD mode, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The Center Frequency defined here only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because these three are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers or a range far away from the component carriers to see spurious. The Center Frequency in these three measurements has a different meaning, therefore it should be a separate setting from Carrier Reference Frequency.

Carrier center frequencies are defined using offsets from Carrier Reference Frequency which determines absolute frequency locations, which can be set as both absolute and relative frequency from the carrier reference frequency.

Since Center Frequency is only used in those three measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the Frequency menu of these measurements.

Considering the legacy LTE usability in the converged LTE & LTE-A application, when the mode of the Center Frequency is Auto and the Number of Component Carrier equals to 1 and the Center Frequency Offset equals to 0 Hz, the Center Frequency is equivalent to Carrier Reference Frequency, which is used to set up the Frequency of all the measurements.

## Center Frequency

Sets the frequency that corresponds to the horizontal center of the graticule. While adjusting the Center Frequency the Span is held constant.

The center frequency setting is the same for all measurements within a mode, that is, it is Meas Global. Some modes are also able to share a Mode Global center frequency value. If this is the case, the Mode will have a **Global** tab in its **Meas Setup** menu.

The **Center Freq** function sets (and queries) the Center Frequency for the currently selected input. If your instrument has multiple inputs, and you select another input, the Center Freq changes to the value for that input. SCPI commands are available to directly set the Center Freq for a specific input.

Center Freq is remembered as you go from input to input. Thus, you can set a Center Freq of 10 GHz with the RF Input selected, change to BBIQ, and set a Center Freq of 20 MHz, then switch to External Mixing and set a Center Freq of 60 GHz, and when you go back to the RF Input the Center Freq will go back to 10 GHz; back to BBIQ and it is 20 MHz; back to External Mixing and it is 60 GHz.

See:

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

- "Center Frequency Presets" on page 2079
- "VXT Models with Radio Heads/CIU Frequency Range" on page 2081
- "RF Center Freq" on page 2081
- "Ext Mix Center Freq" on page 2082
- "I/Q Center Freq" on page 2082

Remote Command	<pre>[ :SENSe]:FREQuency:CENTer &lt;freq&gt; [ :SENSe]:FREQuency:CENTer?</pre>
Example	<pre>:FREQ:CENT 50 MHz</pre> <p>Sets Center Frequency to 50 MHz</p> <pre>:FREQ:CENT UP</pre> <p>Increments the Center Frequency by the value of CF Step</p> <pre>:FREQ:CENT?</pre> <p>Returns the current value of Center Frequency</p>
Notes	<p>Sets the RF, External Mixing or I/Q Center Frequency depending on the selected input:</p> <ul style="list-style-type: none"> <li>- For RF input it is equivalent to <code>:FREQ:RF:CENT</code></li> <li>- For I/Q input it is equivalent to <code>:FREQ:IQ:CENT</code></li> <li>- For External Mixer it is equivalent to <code>:FREQ:EMIX:CENT</code></li> </ul> <p>Preset and Max values are dependent on Hardware Options (5xx)        If no terminator (for example, MHz) is sent, the terminator Hz is used. If a terminator with unit other than Frequency is used, an invalid suffix error message is generated</p>
Couplings	<p><b>In LTEAFDD/LTEATDD and 5GNR Modes:</b></p> <p>Center Frequency, Center Frequency Offset and Carrier Reference Frequency are coupled with the following equation:</p> $\text{Center Frequency} = \text{Carrier Reference Frequency} + \text{Center Frequency Offset}$ <p>If the following conditions are satisfied at the same time:</p> <ul style="list-style-type: none"> <li>- the Num Component Carrier equals to 1</li> <li>- the Center Frequency Offset equals to 0 Hz</li> <li>- the mode of the Center Frequency is Auto</li> </ul> <p>The Center Frequency is equivalent to Carrier Reference Frequency        The major purpose of this coupling is to keep BWCC with legacy LTE, in which <code>:SENSe:FREQuency:CENTer</code> is used to set up the Frequency of the measurement        Otherwise, the Center Frequency Offset is changed following the Center Frequency and the Carrier Reference Frequency keeps intact</p>

In MSR, Center Freq, Center Freq Offset and Carrier Ref Freq are coupled with the equation, Center Freq = Carrier Ref Freq + Center Freq Offset. When Center Freq is changed, Center Freq Offset is updated and Carrier Ref Freq is not changed

When auto, Center Freq Offset remains the same value. Thus, Center Freq changes the same amount of Carrier Ref Freq change when Carrier Ref Freq is changed. The auto state changes to manual when either Center Freq is changed

**In Bluetooth Mode:**

Center Frequency is coupled to Channel and Geography

- If Geography is France: Center Frequency 2454 MHz + (channel number\* channel space) MHz
- If Geography is Others: Center Frequency 2402 MHz + (channel number\* channel space) MHz
- If Radio Stand is Basic or EDR, channel space is 1 MHz
- If Radio Stand is Low Energy, channel space is 2 MHz

**In other modes:**

Any value of the Center Frequency or Span that keeps start frequency and stop frequency within the frequency range of the instrument is allowed when the value is being set through the front panel numeric keypad or the SCPI command. Other frequency parameters are forced to different values if needed, to keep the start and stop frequencies within the instrument's frequency range

Preset	Depends on instrument maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 2079, "RF Center Freq" on page 2081, "Ext Mix Center Freq" on page 2082, "I/Q Center Freq" on page 2082 and "VXT Models with Radio Heads/CIU Frequency Range" on page 2081
State Saved	Saved in instrument state
Min/Max	Depends on instrument maximum frequency, mode, measurement, and selected input See "Center Frequency Presets" on page 2079, "RF Center Freq" on page 2081, "Ext Mix Center Freq" on page 2082, "I/Q Center Freq" on page 2082 and "VXT Models with Radio Heads/CIU Frequency Range" on page 2081
Annotation	Center <value> appears in the lower left corner of the display
Status Bits/OPC dependencies	Non-overlapped

**Center Frequency Auto State**

Remote Command	<code>[ :SENSe ] :FREQuency :CENTer :AUTO ON   OFF   1   0</code> <code>[ :SENSe ] :FREQuency :CENTer :AUTO?</code>
Example	<code>:FREQ:CENT:AUTO OFF</code> <code>:FREQ:CENT:AUTO?</code>
Dependencies	This is only available in MSR, LTEAFDD/LTEATDD and 5GNR Modes
Couplings	When the Center Frequency is changed, the state is automatically changed to Manual

**Center Frequency, Center Frequency Offset** and **Carrier Reference Frequency** are coupled. When Carrier Reference Frequency changes:

- Center Frequency : Auto Center Frequency = Carrier Reference Frequency + Center Frequency Offset (fixed)
- Center Frequency : Man Center Frequency (fixed) = Carrier Reference Frequency + Center Frequency Offset

Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

### Center Frequency Presets

The following table provides the Center Frequency Presets for the Spectrum Analyzer mode, and the Max Freq, for the various frequency options:

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
503 (all but CXA)	1.805 GHz	3.6 GHz	3.7 GHz
503 (CXA)	1.505 GHz	3.0 GHz	3.08 GHz
507 (all but CXA)	3.505 GHz	7.0 GHz	7.1 GHz
507 (CXA)	3.755 GHz	7.5 GHz	7.58 GHz
508 (all but MXE)	1.805 GHz	3.6 GHz	8.5 GHz
508 (MXE)	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526 (except CXA and MXE)	13.255 GHz	26.5 GHz	27.0 GHz*
526 (CXA)	13.255 GHz	26.5 GHz	26.55 GHz
526 (MXE)	1.805 GHz	3.6 GHz	27.0 GHz
532	16.005 GHz	32.0 GHz	32.5 GHz
540	20.005 GHz	40.0 GHz	40.5 GHz
543	21.505 GHz	43.0 GHz	43.0 GHz
544	22.005 GHz	44.0 GHz	45.0 GHz
550	25.005 GHz	50.0 GHz	52 GHz
F03 (CXA-m)	1.505 GHz	3.0 GHz	3.08 GHz
F07 (CXA-m)	3.755 GHz	7.5 GHz	7.575 GHz
F13 (CXA-m)	6.805 GHz	13.6 GHz	13.8 GHz
F26 (CXA-m)	13.255 GHz	26.5 GHz	26.55 GHz
504 (M9421A, M8920A)	2.145 GHz	3.88GHz	3.88 GHz

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
506 (M9421A, M8920A)	3.245 GHz	6.08GHz	6.08 GHz
F06 (M9410A/11A)	1.0 GHz	6.08 GHz	6.08 GHz
F06 (M9415A)	1 GHz	1.08 GHz	6.6 GHz
F08 (M9415A)	1 GHz	1.08 GHz	8.6 GHz
F12 (M9415A)	1 GHz	1.08 GHz	12.9 GHz

\*For option 526, the Max CF in RTSA is 26.999999995 GHz.

#### N9041B Center Freq Presets

Input	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
Input 1, all models	25.005 GHz	50.0 GHz	52 GHz
Input 2, opt 585	42.505 GHz	85.0 GHz	86 GHz
Input 2, opt 590	45.005 GHz	90.0 GHz	92 GHz
Input 2, opt 5CX	55.005 GHz	110.0 GHz	110 GHz

#### Input 2, CXA and MXE

Model	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
CXA opt C75	0.7505 GHz	1.5 GHz	1.58 GHz
MXE	505 MHz	1 GHz	1.000025 GHz

#### Tracking Generator Frequency Limits (CXA only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	9 kHz	3.0 GHz	3.08 GHz
T06	9 kHz	6.0 GHz	6.05 GHz

#### Tracking Generator Frequency Limits(CXA-m only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	2 MHz	3.08 GHz	3.08 GHz
T07	2 MHz	7.575 GHz	7.575 GHz

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T13	2 MHz	13.8 GHz	13.8 GHz
T26	2 MHz	26.55 GHz	26.55 GHz

### VXT Models with Radio Heads/CIU Frequency Range

The following table shows the Center Frequency Presets and Range for VXT modes with Radio Heads/CIU.

Products with Radio Heads/CIU	Preset	Start frequency	Stop frequency
M9421A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU + RRH	25 GHz	24.25 GHz	43.5 GHz

### RF Center Freq

Specifies the RF Center Frequency. This command sets the Center Frequency to be used when the RF input is selected, even if the RF input is not the input that is selected at the time the command is sent. Note that **"Center Frequency" on page 2076** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency:RF:CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:RF:CENTer?</code>
Example	<code>:FREQ:RF:CENT 30 MHz</code> <code>:FREQ:RF:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Dependencies	If the electronic/soft attenuator is enabled, any attempt to set Center Frequency such that the Stop Frequency would be >3.6 GHz fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a "-221, Settings conflict" warning
Preset	See <b>"Center Frequency Presets" on page 2079</b> above
State Saved	Saved in instrument state
Min	-79.999995 MHz
Max	See table above. Basically, instrument maximum frequency - 5 Hz If the knob or step keys are being used, also depends on the value of Span

## Ext Mix Center Freq

Specifies the External Mixer Center Frequency. This command sets the Center Frequency to be used when the External Mixer is selected, even if the External Mixer input is not the input that is selected at the time the command is sent. Note that **"Center Frequency" on page 2076** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency :EMIXer :CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency :EMIXer :CENTer?</code>
Example	<code>:FREQ:EMIX:CENT 60 GHz</code> <code>:FREQ:EMIX:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Couplings	When returning to External Mixing after having been switched to one of the other inputs (e.g., RF), you will come back into the settings that you had when you left External Mixing. So, you will come back to the band you were in with the Center Frequency that you had. However, Span is not an input-dependent parameter, therefore you will bring the span over from the other input. Therefore, the instrument comes back with the span from the previous input, limited as necessary by the current mixer setup
Preset	<p>When a Mode Preset is performed while in External Mixing, the Start frequency of the current Mode is set to the nominal Min Freq of the lowest harmonic range in the Harmonic Table for the current mixer setup. Similarly, the Stop frequency of the current Mode is set to the nominal Max Freq of the highest harmonic range in the Harmonic Table. The Center Freq thus presets to the point arithmetically equidistant from these two frequencies</p> <p>Note that, if the current measurement has a limited Span available to it, and cannot achieve the Span shown in the table (Span=Stop Freq – Start Freq), the instrument uses the maximum Span the measurement allows, and still sets the Center Freq to the midpoint of the Start and Stop Freq values in the Harmonic Table</p> <p>When Restore Input/Output Defaults is performed, the mixer presets to the 11970A, whose Start and Stop frequencies are 26.5 and 40 GHz respectively. The center of these two frequencies is 33.25 GHz. Therefore, after a Restore Input/Output Defaults, if you go into External Mixing and do a Mode Preset while in the Spectrum Analyzer Mode, the resulting Center Freq is 33.25 GHz</p>
State Saved	Yes
Min	The minimum frequency in the currently selected mixer band + 5 Hz If the knob or step keys are being used, also depends on Span
Max	The maximum frequency in the currently selected mixer band - 5 Hz If the knob or step keys are being used, also depends on Span

## I/Q Center Freq

Specifies the I/Q Center Frequency. This command sets the Center Frequency to be used when the I/Q input is selected, even if the I/Q input is not the input that is selected at the time the command is sent. Note that **"Center Frequency" on page**

**2076** in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency:IQ:CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:IQ:CENTer?</code>
Example	<code>:FREQ:IQ:CENT 30 MHz</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global, so the value is independent in each Mode and common across all the measurements in the Mode
Preset	0 Hz
State Saved	Saved in instrument state
Min	-40.049995 MHz
Max	40.049995 MHz

### Center Frequency Offset

This setting is coupled with Center Frequency, and is only used in Monitor Spectrum, IQ Waveform, Power Stat CCDF and PAVT measurements. **Center Frequency**, **Center Frequency Offset** and **Carrier Reference Frequency** are coupled with this equation:

$$\text{Center Frequency} = \text{Carrier Reference Frequency} + \text{Center Frequency Offset}$$

If you change **Center Frequency Offset**, **Center Frequency** is updated and **Carrier Reference Frequency** is not.

Remote Command	<code>[ :SENSe ] :FREQuency:CENTer:OFFSet &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:CENTer:OFFSet?</code>
Example	<code>:FREQ:CENT:OFFS 100kHz</code> <code>:FREQ:CENT:OFFS?</code>
Preset	0 GHz
State Saved	Saved in instrument state
Min	-500 GHz
Max	500 GHz

### Span

Changes the displayed frequency range symmetrically about the center frequency. While adjusting the Span, the Center Frequency is held constant, this means that both Start Frequency and Stop Frequency will change.

If the Span is set to a value greater than the maximum allowable span of the instrument, an error message is generated indicating the data is out of range and was clipped to upper limit.

See ["Span Presets" on page 2084](#)

Remote Command	<code>[ :SENSe]:MONitor:FREQuency:SPAN &lt;freq&gt;</code> <code>[ :SENSe]:MONitor:FREQuency:SPAN?</code>
Example	<code>:MON:FREQ:SPAN 10 MHz</code> <code>:MON:FREQ:SPAN?</code>
Dependencies	If the electrical attenuator is enabled, any attempt to set Span such that the Stop Frequency would be >3.6 GHz results in an error  In instruments with an RF Preselector, such as MXE, you cannot sweep across the band break at 3.6 GHz while the RF Preselector is in Continuous sweep, as there is a mechanical switch which bypasses the RF Preselector above 3.6 GHz
Couplings	Span affects RBW, sweptime, FFT & Sweep choice (including FFT Width, Phase Noise Optimization and ADC Dither auto couplings)  <ul style="list-style-type: none"> <li>- Any value of the Center Frequency or Span that is within the frequency range of the instrument is allowed when the value is being set through the front panel numeric keypad or the SCPI command. The other parameter is forced to a different value if needed, to keep the Start and the Stop Frequencies within the instrument's frequency range</li> <li>- When using the knob or the step up/down keys or the UP  DOWN keywords in SCPI, the value that is being changed i.e., the Center Frequency or Span, is limited so that the other parameter is not forced to a new value</li> </ul>
Preset	Depends on instrument maximum frequency, mode, measurement, and selected input See <a href="#">"Span Presets" on page 2084</a>
State Saved	Saved in instrument state
Min	10 Hz
Max	Depends on instrument maximum frequency, mode, measurement, and selected input; see <a href="#">"Span Presets" on page 2084</a>  If the knob or step keys are being used, depends on the value of the other three interdependent parameters Center Frequency, Start Frequency, Stop Frequency
Annunciation	Data out of range, value clipped to upper limit
Annotation	Span <value> appears on the first line of the annotation in the lower right corner of display

### Span Presets

The following table provides the Max Span, for the various frequency options:

Freq Option	Max Span (can't set higher than this)
503 (all but CXA)	3.7 GHz
503, F03 (CXA, CXA-m)	3.08 GHz

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

<b>Freq Option</b>	<b>Max Span (can't set higher than this)</b>
507 (all but CXA)	7.1 GHz
507 (CXA, CXA-m)	7.575 GHz
508 (all but MXE)	8.5 GHz
508 (MXE)	8.5 GHz
513, F13	13.8 GHz
526 (all but CXA and MXE)	27.0 GHz
526 (MXE)	27.0 GHz
526, F26 (CXA, CXA-m)	26.55 GHz
544	44.5 GHz
550	52 GHz
M9415A-F06	6.27 GHz
M9415A-F08	8.27 GHz
M9415A-F12	12.57 GHz

Input 2:

<b>Model</b>	<b>Max Span (can't set higher than this)</b>
CXA opt C75	1.58 GHz
MXE	1.000025 GHz

Note that if you are in External Mixing, the maximum Span will be equal to the Maximum Stop Frequency – Minimum Start Frequency for the currently selected mixer.

**Span Presets by Mode**

<b>Mode</b>	<b>Radio Std</b>	<b>Preset Value</b>
WCDMA		10.0 MHz
PN		1.0 MHz
GSM/EDGE		1.0 MHz
WLAN	802.11a/b/g/n/ac/ax/be (20 MHz)	25 MHz
	802.11n/ac/ax/be (40MHz)	50 MHz
	802.11ac/ax/be (80MHz)	100 MHz
	802.11ac /ax/be (160MHz)	200 MHz
	802.11be (320MHz)	400 MHz
MSR		20 MHz
LTEAFDD, LTEATDD		20 MHz

Mode	Radio Std	Preset Value
5GNR		150 MHz
RTS		40 kHz
CQM		10 MHz

## CF Step

Changes the step size for the center frequency and start and stop frequency functions. Once a step size has been selected and the center frequency function is active, the step keys (and the UP|DOWN parameters for Center Frequency from remote commands) change the center frequency by the step-size value. The step size function is useful for finding harmonics and sidebands beyond the current frequency span of the instrument.

Note that the start and stop frequencies also step by the CF Step value.

Remote Command	<pre>[ :SENSe]:FREQuency:CENTer:STEP[:INCRement] &lt;freq&gt; [:SENSe]:FREQuency:CENTer:STEP[:INCRement]? [:SENSe]:FREQuency:CENTer:STEP:AUTO OFF   ON   0   1 [:SENSe]:FREQuency:CENTer:STEP:AUTO?</pre>
Example	<pre>:FREQ:CENT:STEP 500 MHz :FREQ:CENT UP</pre> <p>Increases the current center frequency value by 500 MHz</p> <pre>:FREQ:CENT:STEP? :FREQ:CENT:STEP:AUTO ON :FREQ:CENT:STEP:AUTO?</pre>
Notes	Preset and Max values are dependent on Hardware Options
Dependencies	<p>Not available in MSR, LTEAFDD/LTEATDD, 5GNR and Channel Quality Modes</p> <p>If the electronic/soft attenuator is enabled, any attempt to change the value of the center frequency &gt;3.6 GHz by pressing the Up-arrow key, fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning</p>
Couplings	When auto-coupled, the center frequency step size is set to 10% of the span
Preset	Auto ON
State Saved	Saved in instrument state
Min	– (the maximum frequency of the instrument). That is, 27 GHz max freq instrument has a CF step range of +/- 27 GHz. Note that this is the maximum frequency given the current settings of the instrument, so in External Mixing, for example, it is the maximum frequency of the current mixer band
Max	The maximum frequency of the instrument. That is, 27 GHz max freq instrument has a CF step range of +/- 27 GHz. Note that this is the maximum frequency given the current settings of the instrument, so

---

	in External Mixing, for example, it is the maximum frequency of the current mixer band
Status Bits/OPC dependencies	non-overlapped

---

### Adjust Span to Carrier Config

This immediate-action control sets Span and Center Frequency to monitor all the configured carriers.

When executed, Span will be set based on the bandwidth and frequency offset of each carrier regardless of Measure Carrier state. Center Frequency will be set to the center of the Span

---

Remote Command	<code>[ :SENSe ] :MONitor :FREQUENCY :SPAN :ADJust</code>
Example	<code>:MON :FREQ :SPAN :ADJ</code>

---

### 3.11.7 Marker

Accesses a menu that enables you to select, set up and control the markers for the current measurement. If there are no active markers, **Marker** selects marker 1, sets it to Normal and places it at the center of the display. If the selected marker is Off, it is set to Normal and placed it at the center of the screen on the trace determined by the **Marker Trace** rules.

For more detailed information on the types of Markers and the interaction between Markers, see the Marker section of the Swept SA measurement.

#### 3.11.7.1 Select Marker

Specifies the *selected marker*. The term “selected marker” is used throughout this document to specify which marker will be affected when you change marker settings, perform a Peak Search, etc.

This control appears above the menu panel, indicating that it applies to all controls in the Marker menu panels. Select Marker is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, Counter).

On any menu tab for which Select Marker displays, the first control is always **Marker Frequency|Time**.

---

Notes	The selected marker is remembered even when not in the Marker menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1

---

State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for <b>Normal</b> and <b>Delta</b> markers

### 3.11.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection of the marker control mode (Normal, Delta, or Off) for the selected marker, as well as additional functions that help you use markers.

#### Marker Frequency

Sets the marker X Axis value in the current marker X Axis Scale unit. It has no effect if the control mode is **Off**, but is the SCPI equivalent of entering an X value if the control mode is **Normal** or **Delta**.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:X &lt;freq&gt;</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:MON:MARK3:X 0</code> <code>:CALC:MON:MARK3:X?</code>
Notes	If no suffix is sent, uses the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an error "Invalid suffix" is generated  The query returns the marker's absolute X Axis value if the control mode is <b>Normal</b> , or the offset from the marker's reference marker if the control mode is <b>Delta</b> . The query is returned in the fundamental units for the current marker X Axis scale: Hz for <b>Frequency</b> and Inverse Time, seconds for Period and Time
Preset	After a preset, all markers are turned OFF, so Marker X Axis Value query returns a not a number (NAN)
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37
Annotation	Mkr # <X value> and <Marker value> upper right on graph

#### Marker X Axis Position (Remote Command Only)

Sets the marker X Axis Scale position in trace points. This setting has no effect if the control mode is Off, but is the SCPI equivalent of entering a value if the control mode is Normal or Delta - except in trace points rather than X Axis Scale units. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:X:POsition &lt;real&gt;</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:X:POsition?</code>
Example	<code>:CALC:MON:MARK:X:POS 0</code>

	<code>:CALC:MON:MARK:X:POS?</code>
Notes	The query returns the marker's absolute X Axis value in trace points if the control mode is <b>Normal</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>Delta</b> . The value is returned as a real number, not an integer, corresponding to the translation from X Axis Scale units to trace points. When a Marker is turned on, it is placed center of the screen on the trace. Therefore, the default value depends on instrument condition. If the marker is Off the response is not a number
Preset	After a preset, all markers are turned <b>OFF</b> , so Marker X Axis Value query returns a not a number ( <b>NAN</b> )
State Saved	Saved in instrument state
Min	-9.9E+37
Max	9.9E+37

### Marker Y Axis Value (Remote Command only)

Returns the marker Y Axis value in the current marker Y Axis unit.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:Y?</code>
Example	<code>:CALC:MON:MARK11:Y?</code>
Notes	Returns the marker Y-axis result if the control mode is <b>Normal</b> or <b>Delta</b> . If the marker is <b>Off</b> , the response is Not A Number
Preset	Result dependent on Markers setup and signal source
State Saved	No
Backwards Compatibility SCPI	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:RESult?</code>

### Marker Mode

Sets the marker control mode to **Normal (POSITION)**, **Delta**, or **Off**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is Off, pressing Marker sets it to Normal and places it at the center of the screen on the trace determined by the **Marker Trace** rules. At the same time, **Marker X Axis Value** appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **Off**, there is no active function and the active function is turned off.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:MODE POSITION   DELTa   OFF</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:MODE?</code>
Example	<code>:CALC:MON:MARK:MODE POS</code>

	<code>:CALC:MON:MARK:MODE?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	<code>POSITION DELTA OFF</code>
Annotation	Mkr # <X value> and <Marker value> upper right on graph

### Backward Compatibility SCPI Commands

Sets or queries the state of a marker. Setting a marker that is **OFF** to **ON** (1) puts it in **Normal** mode and places it at the center of the screen.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:STATE OFF   ON   0   1</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:STATE?</code>
Example	<code>:CALC:MON:MARK3:STAT ON</code> <code>:CALC:MON:MARK3:STAT?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	<code>OFF ON</code>

### Delta Marker (Reset Delta)

Pressing this button has exactly the same effect as selecting the **Delta** selection in **"Marker Mode" on page 2089**. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

### Marker Settings Diagram

Lets you configure the Marker system using a visual utility.

### All Markers Off

Turns off all markers.

Remote Command	<code>:CALCulate:MONitor:MARKer:AOFF</code>
Example	<code>:CALC:MON:MARK:AOFF</code>

## Couple Markers

When this function is **ON**, moving any marker causes an equal X Axis movement of every other marker that is not Off. By “equal X Axis movement” we mean that we preserve the difference between each marker’s X Axis value (in the fundamental x-axis units of the trace that marker is on) and the X Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off screen.

Remote Command	:CALCulate:MONitor:MARKer:COUPle[:STATe] ON   OFF   1   0
Example	:CALC:MON:MARK:COUP ON :CALC:MON:MARK:COUP?
Preset	OFF Presets on Mode Preset and All Markers Off
State Saved	Saved in instrument state

### 3.11.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the Delta Marker function.

**NOTE**

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu and performs a Peak Search.  
 Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a Peak Search.

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. This is the same as "[Marker Frequency](#)" on page 2088 on the **Settings** tab.

## Peak Search

Moves the selected marker to the trace point which has the maximum y-axis value for that marker’s trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu and performs a Peak Search. If the selected marker was off, then it is turned on as a normal marker, and a Peak Search is performed.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:MAXimum</code>
Example	<code>:CALC:MON:MARK2:MAX</code> <code>:SYST:ERR?</code> can be used to query the errors to determine if a peak is found. If a search is unsuccessful, then the message "Execution error; No peak found" (-200) will be returned
Notes	Sending this command selects the subopcoded marker

### Next Peak

Moves the selected marker to the peak that is next lower in amplitude than the current marker value. If there is no valid peak lower than the current marker value, an "Execution error; No peak found" message is generated and the marker is not moved.

If the selected marker was off, then it is turned on as a normal marker and a peak search is performed.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:MAXimum:NEXT</code>
Example	<code>:CALC:MON:MARK2:MAX:NEXT</code> selects marker 2 and moves it to the peak that is next lower in amplitude than the current marker value
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Marker Delta

Pressing this control has exactly the same effect as selecting the **Delta** selection in "**Marker Mode**" on page 2089 on the **Settings** tab. The selected marker becomes a Delta Marker. If the selected marker is already a Delta marker, the reference marker is moved to the current position of the selected marker, thus resetting the Delta to zero.

The control is duplicated here to allow you to conveniently perform a peak search and change the marker's control mode to Delta without having to access two separate menus.

### 3.11.7.4 Properties

The controls on this tab are used to set certain properties of the selected marker.

#### Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. This is the same as "[Marker Frequency](#)" on page 2088 on the **Settings** tab.

#### Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "reference marker" for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:REFerence &lt;integer&gt;</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:REFerence?</code>
Example	<code>:CALC:MON:MARK2:REF 1</code> <code>:CALC:MON:MARK2:REF?</code>
Notes	This command causes the marker specified with the subopcode to become selected Range (for SCPI command): 1 to 12. If the range is exceeded the value is clipped A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried a single value is returned (the specified marker numbers relative marker)
Couplings	The act of specifying the selected marker's reference marker makes the selected marker a Delta marker If the reference marker is off it is turned on in <b>Normal</b> mode at the delta marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if marker 2 is selected, then it's default reference marker is marker 3. The exception is marker 12, which has a default reference of marker 1 Set to the defaults by using <b>Restore Mode Defaults</b> . This is not reset by <b>Marker Off</b> , <b>All Markers Off</b> , or <b>Preset</b>
State Saved	Saved in instrument state. Not affected by Marker Off and hence not affected by Preset or power cycle
Min	1
Max	12
Annunciation	Appears in the marker label of a <b>Delta</b> marker

## Marker Trace

Selects the trace on which you want your marker placed. A marker is associated with one and only one trace. This trace is used to determine the placement, result, and X-Axis Scale of the marker. All markers have an associated trace; it is from that trace that they determine their attributes and behaviors, and it is to that trace that they go when they become Normal markers.

Specifying a Marker Trace manually or with this command associates the marker with the specified trace. If the marker is not **OFF**, it moves the marker from the trace it was on to the new trace. If the marker is **OFF**, it stays off but is now associated with the specified trace.

The query returns the number of the trace on which the marker is currently placed.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:TRACe 1   2   3</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:MON:MARK:TRAC 1</code> <code>:CALC:MON:MARK:TRAC?</code>
Notes	A marker may be placed on a blanked and/or inactive trace, even though the trace is not visible and/or updating An application may register a trace name to be displayed on the control instead of a trace number
Couplings	The state of Marker Trace is not affected by the <b>"Auto Couple" on page 2242</b> key Sending the remote command causes the addressed marker to become selected
Preset	1
State Saved	Saved in instrument state
Min	1
Max	3

## Marker Settings Diagram

Lets you configure the Marker system using a visual utility. This is the same as the **"Marker Settings Diagram" on page 2090** control on the **Settings** tab.

### 3.11.7.5 Marker Function

The controls on this tab allow you to control the Marker Functions of the instrument. Marker Functions perform post-processing operations on marker data.

The **Marker Function** menu controls which marker functions are turned on and allows you to adjust the setup parameters for each function. These parameters include the following, but only one parameter can be assigned to a given marker:

- Marker Noise
- Band Power
- Band Density
- Off

## Marker Frequency

This is the fundamental control that you use to move a marker around on the trace. This is the same as "[Marker Frequency](#)" on page 2088 on the **Settings** tab.

## Marker Function

Sets the marker control function type to one of the following:

<code>NOISe</code>	Marker Noise
<code>BPOWer</code>	Band Power
<code>BDENsity</code>	Band Density
<code>OFF</code>	Marker Function Off

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNction NOISe   BPOWer   BDENsity   OFF</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNction?</code>
Example	<code>:CALC:MON:MARK:FUNC NOIS</code> <code>:CALC:MON:MARK:FUNC?</code>
Preset	<code>OFF</code>
State Saved	Yes
Range	<code>NOISe BPOWer BDENsity OFF</code>
Annotation	Mkr # <X value> and <Marker value> upper right on graph

## Band Span

Sets the width of the frequency span for the selected marker.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNction:BAND:SPAN &lt;freq&gt;</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNction:BAND:SPAN?</code>
Example	<code>:CALC:MON:MARK12:FUNC:BAND:SPAN 20 MHz</code> <code>:CALC:MON:MARK12:FUNC:BAND:SPAN?</code>
Couplings	Changing the Band Span necessarily changes the Band Left and Band Right values

Preset	Depends on X axis range of selected Trace 10% of Span
State Saved	Yes
Min	-9.9E+37 0
Max	9.9E+37 26.5GHz

### Band Left

Sets the left edge frequency or time value for the band of the selected marker.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:BAND:LEFT &lt;freq&gt;</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:BAND:LEFT?</code>
Example	<code>:CALC:MON:MARK12:FUNC:BAND:LEFT 20 GHz</code> <code>:CALC:MON:MARK12:FUNC:BAND:LEFT?</code>
Couplings	Changing the Band Left necessarily changes the Band Span value
Preset	Depends on X axis range of selected Trace
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

### Band Right

Sets the right edge frequency or time value for the band of the selected marker.

Remote Command	<code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:BAND:RIGHT &lt;freq&gt;</code> <code>:CALCulate:MONitor:MARKer[1] 2 ... 12:FUNCTION:BAND:RIGHT?</code>
Example	<code>:CALC:MON:MARK12:FUNC:BAND:RIGH 20 GHz</code> <code>:CALC:MON:MARK12:FUNC:BAND:RIGH?</code>
Couplings	Changing the Band Right necessarily changes the Band Span value
Preset	Depends on X axis range of selected Trace
State Saved	Yes
Min	-9.9E+37
Max	9.9E+37

### 3.11.8 Meas Setup

This menu panel contains functions for setting up the measurement parameters and also contains functions for setting up parameters global to all measurements in the Mode.

#### 3.11.8.1 Settings

Contains frequently used Meas Setup functions to which you will want the fastest access.

#### Avg|Hold Num

Specifies the number of measurement averages used when calculating the measurement result. The average is displayed at the end of each sweep.

After the specified number of average counts, the averaging mode (terminal control) setting determines the averaging action.

Remote Command	<code>[ :SENSe]:MONitor:AVERage:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:MONitor:AVERage:COUNT?</code>
Example	<code>:MON:AVER:COUN 25</code> <code>:MON:AVER:COUN?</code>
Preset	10
State Saved	Yes
Min/Max	1/1000
Annotation	The average count is displayed in the measurement bar on the front panel display. The annotation appears in the format n/N where n is the current average and N is the average count

#### Averaging On/Off

Turns averaging on or off.

Remote Command	<code>[ :SENSe]:MONitor:AVERage[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:MONitor:AVERage[:STATe]?</code>
Example	<code>:MON:AVER ON</code> <code>:MON:AVER?</code>
Preset	OFF
State Saved	Yes
Range	OFF   ON

## Average Mode

Toggles the Average Mode:

- **EXponential**- continues measurement averaging, using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep
- **REPeat**- causes the measurement to reset the average counter each time the specified number of averages is reached

Remote Command	<code>[ :SENSe]:MONitor:AVERage:TCONtrol EXPonential   REPeat</code> <code>[ :SENSe]:MONitor:AVERage:TCONtrol?</code>
Example	<code>:MON:AVER:TCON EXP</code> <code>:MON:AVER:TCON?</code>
Preset	<code>EXPonential</code>
State Saved	Yes
Range	<code>EXPonential REPeat</code>

## Spur Avoidance

Because the VXT models M9410A/11A/15A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed. For Spur Avoidance, the instrument uses a software algorithm to remove this spur from the displayed measurement data.

Some measurements allow you to turn off **Spur Avoidance**, but in this measurement it is always enabled. Therefore, in this measurement the Spur Avoidance switch is unavailable (grayed out) and set to Enabled.

Furthermore, if you press the grayed-out switch, this popup message appears:

`Always enabled in this measurement. See manual for details`

Remote Command	<code>[ :SENSe]:MONitor:SAVoid[:STATe]?</code>
Example	<code>:MON:SAV?</code> Always returns <code>ON</code>
Dependencies	This control only appears in VXT models M9410A/11A/15A
Preset	<code>ON</code>
State Saved	Saved in instrument state
Range	<code>ON</code>

## Meas Setup Summary Table

Lets you view and access many of the parameters in the Meas Setup menus on one screen.

### Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 2100 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL   NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** does not affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

## Measurement-Specific Details

### TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

### Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency
- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

## Meas Preset

Restores all the measurement parameters to their default values.

---

Remote Command    `:CONFigure:MONitor`

---

Example            `:CONF:MON`

### 3.11.8.2 Radio

Contains controls to select link direction.

#### Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

---

Remote Command    `[:SENSe]:RADio:STANdard:DIRection DLINK | ULINK`

---

`[:SENSe]:RADio:STANdard:DIRection?`

---

Example            `:RAD:STAN:DIR DLIN`

---

Couplings            TDD: Changing direction affects the sync source of periodic trigger source or gate source  
                          If Direction is uplink, the sync source is RF burst  
                          If Direction is downlink, the sync source is External1  
                          If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off  
                          FDD/TDD: Changing Direction affects many other modulation analysis setup parameters

---

Preset                DLIN  
                          ULIN on E6640A  
                          DLIN on E6650A

---

State Saved         Yes

---

Range                Downlink|Uplink  
                          For E6640A, Direction is restricted to Uplink only, Downlink is not selectable  
                          For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

### 3.11.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

#### Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:


- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>
Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

### Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

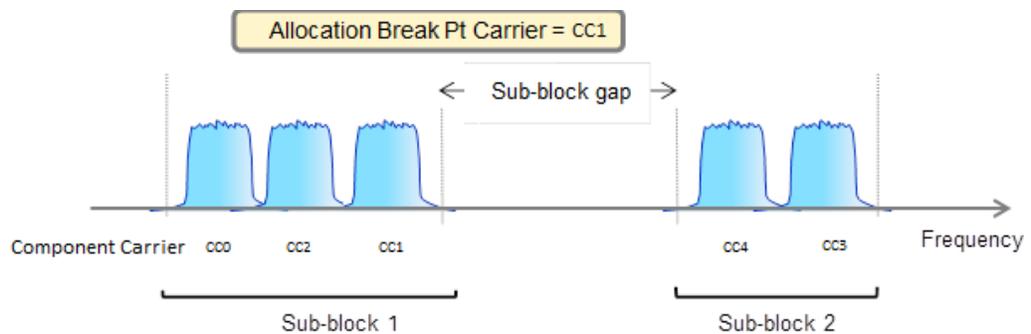

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint CC0   ...   CC4</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

### Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

## Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

### Number of Component Carriers

See "Number of Component Carriers" on page 2245.

### Carrier Allocation

See "Carrier Allocation" on page 2245.

### Non-Contiguous Break at

See "Non-Contiguous Break at" on page 2246.

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANDwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BAND B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:BANDwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote	<code>[ :SENSe]:CCARrier0 ... 4[:STATe] OFF   ON   0   1</code>
--------	---

3 LTE & LTE-A TDD Mode  
3.11 Monitor Spectrum Measurement

Command	<code>[ :SENSe]:CCARrier0 ... 4[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

### Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

### Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMal   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes

Range	Normal   Invert
Backwards Compatibility SCPI	[ :SENSe ] :SPEctrum

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :ULDL CONF0   ...   CONF6 [ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :ULDL ?
Example	:CCAR0 :RAD :STAN :ULDL CONF0
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUUDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	[ :SENSe ] :RADio :STANdard :ULDL

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :DGPU CONF0   ...   CONF9 [ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :DGPU ?
Example	:CCAR0 :RAD :STAN :DGPU CONF0
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2

3 LTE & LTE-A TDD Mode  
3.11 Monitor Spectrum Measurement

	CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<code>[ :SENSe ] :RADio:STANdard:DGPU</code>

### CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :CHPower:BAWdth:INTEgration &lt;freq&gt;</code> <code>[ :SENSe ] :CCARrier0   ...   4 :CHPower:BAWdth:INTEgration?</code>																
Example	<code>:CCAR0:CHP:BAWdth:INT 20MHz</code> <code>:CCAR0:CHP:BAWdth:INT?</code>																
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode																
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>CHP Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.4 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>3 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>10 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>15 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>20 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>200 kHz</td> </tr> </tbody> </table>	System Bandwidth	CHP Integ BW	1.4 MHz (B1M4)	1.4 MHz	3 MHz (B3M)	3 MHz	5 MHz (B5M)	5 MHz	10 MHz (B10M)	10 MHz	15 MHz (B15M)	15 MHz	20 MHz (B20M)	20 MHz	200 kHz(B200K)	200 kHz
System Bandwidth	CHP Integ BW																
1.4 MHz (B1M4)	1.4 MHz																
3 MHz (B3M)	3 MHz																
5 MHz (B5M)	5 MHz																
10 MHz (B10M)	10 MHz																
15 MHz (B15M)	15 MHz																
20 MHz (B20M)	20 MHz																
200 kHz(B200K)	200 kHz																
Preset	5 MHz																
State Saved	Saved in instrument state																

Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	[ :SENSe ] :CHPower :BANDwidth :INTEgration [ :SENSe ] :CHPower :BWIDth :INTEgration

## ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	[ :SENSe ] :CCARrier0   ...   4 :ACPpower :BANDwidth [ 1 ]   2 :INTEgration <freq> [ :SENSe ] :CCARrier0   ...   4 :ACPpower :BANDwidth [ 1 ]   2 :INTEgration ?
Example	:CCAR0 :ACP :BAND :INT 20MHz :CCAR0 :ACP :BAND :INT ?
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRument :SElect to set the mode
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.

System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz
3 MHz (B3M)	2.715 MHz	2.7 MHz
5 MHz (B5M)	4.515 MHz	4.5 MHz
10 MHz (B10M)	9.015 MHz	9.0 MHz
15 MHz (B15M)	13.515 MHz	13.5 MHz
20 MHz (B20M)	18.015 MHz	18.0 MHz
200 kHz (B200K)	180 kHz	180 kHz

Preset	4.515 MHz 4.5 MHz
State Saved	Yes
Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	[ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BANDwidth [ :INTEgration ] [ :SENSe ] :ACPpower :CARRier [ 1 ]   2 :LIST :BWIDth [ :INTEgration ]

## SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code>																								
Example	<code>:CCAR0:SEM:BAND:INT 20MHz</code> <code>:CCAR0:SEM:BAND:INT?</code>																								
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTRument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS SEM Integ BW</th> <th>MS SEM Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Saved in instrument state																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:SEMAsk:BANDwidth[1] 2:INTEgration</code>																								

## Carrier Config Presets

Lets you configure the Component Carrier presets.

## Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

## Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

## Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code>

	<code>:CCAR:CONF:SPAC:DELT?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

### ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BAWdth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BAWdth?</code>
Example	<code>:CCAR:CONF:ETC1:BAWdth B5M</code> <code>:CCAR:CONF:ETC1:BAWdth?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAx?</code>
Example	<code>:CCAR:CONF:ETC2:CMAx 5</code> <code>:CCAR:CONF:ETC2:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

### Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative – Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive – Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG</code> <code>:CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

### Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M</code> <code>:CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	---

	<code>[ :SENSe ] :CCARrier:CONFig:ETC3:BANdwidth?</code>
Example	<code>:CCAR:CONF:ETC3:BANd B5M</code> <code>:CCAR:CONF:ETC3:BANd?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### 3.11.8.4 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

### System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command `RAD:STAN:PRES B5M` or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote	<code>[ :SENSe ] :RADio:STANdard:PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
--------	--

3 LTE & LTE-A TDD Mode  
3.11 Monitor Spectrum Measurement

Command	
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

### UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:RADio:STANdard:PRESet:ULDL?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

### Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
----------------	---

Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

## Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[ :SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

## Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>						
Example	<code>:RAD:MINT 1</code>						
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes						
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>						
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH: <table border="1" data-bbox="406 1102 1404 1228" style="margin-left: 20px;"> <thead> <tr> <th>Meas NPRACH</th> <th>Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						
Preset	1						
State Saved	Yes						
Min	1						
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise						
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTime:MINInterval</code>						

### CP Length

Specifies whether the cyclic prefix is configured as NORMAL or EXTENDED for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:CPLength NORMal   EXTended</code> <code>[ :SENSe]:RADio:CPLength?</code>
Example	<code>:RAD:CPL NORM</code>
Notes	The backwards compatible SCPI command <code>[ :SENSe]:PVTTime:CPLength</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to “200 kHz (NB-IoT)” and Direction is “uplink”
Couplings	Set to NORMAL when System BW is set to “200 kHz (NB-IoT)”
Preset	NORMAL
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTTime:CPLength</code>

## Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe]:RADio:MEASure?</code>
Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

## Reference Config

Specifies which component carrier’s UL DL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code>
----------------	--

	<code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.11.8.5 Advanced

Contains controls for setting advanced functions of the instrument.

This tab does not appear in EXM or VXT.

#### Noise Floor Extension

When this function is **ON**, the expected noise power of the instrument (derived from a factory calibration) is subtracted from the trace data. This will usually reduce the apparent noise level by about 10 dB in low band, and 8 dB in high band (>~3.6 GHz).

**Noise Floor Extension** works with any RBW, VBW, detector, any setting of Average Type, any amount of trace averaging, and any signal type. It is ineffective when the trace is not smoothed (smoothing processes include narrow VBWs, trace averaging, and long sweep times with the detector set to Average or Peak). It works best with extreme amounts of smoothing, and with the average detector, with the Average Type set to Power.

**NOTE**

**Noise Floor Extensions has no effect unless the RF Input is selected, therefore it does nothing when External Mixing is selected.**

In those cases where the cancellation is ineffective, it nonetheless has no undesirable side-effects. There is no significant speed impact to having **Noise Floor Extension** on.

The best accuracy is achieved when substantial smoothing occurs in each point before trace averaging. Thus, when using the average detector, results are better with long sweep times and fewer trace averages. When using the sample detector, the VBW filter should be set narrow with less trace averaging, instead of a wide VBW filter with more trace averaging.

See "[More Information](#)" on page 2120.

Remote Command	<code>[ :SENSe]:CORRection:NOISe:FL0or ON   OFF   1   0</code>
----------------	--

	<code>[ :SENSe]:CORRection:NOISe:FLOor?</code>
Example	<code>:CORR:NOIS:FLO ON</code>
Dependencies	This control only appears in instruments with the NFE or NF2 license installed. In all others, the control does not appear, however the SCPI command will be accepted without error (but will have no effect)
Couplings	When NFE is enabled in any mode manually, a prompt will be displayed reminding you to perform the Characterize Noise Floor operation if it is needed. If NFE is enabled through SCPI and a Characterize Noise Floor operation is needed, an error will be entered in the system error queue
Preset	Unaffected by Mode Preset. Turned off by Restore Mode Defaults
State Saved	No

## More Information

The instrument is characterized in the factory (or during a field calibration) with a model of the noise, referred to the input mixer, versus frequency in each band and path combination. Bands are 0 (low band) and 1 through 4 (high band) in a 26.5 GHz instrument, for example. Paths include normal paths, preamp paths, the electronic attenuator, etc.

In most band/path combinations, the noise can be well characterized based on just two parameters and the instrument frequency response before compensation for frequency-dependent losses.

After the noise density at the input mixer is estimated, the effects of the input attenuator, RBW, detector, etc. are computed to get the estimated input-port-referred noise level.

In the simplest case, the measured power (signal plus analyzer noise) in each display point (bucket) is compensated by subtracting the estimated noise power, leaving just the signal power. This is the operation when the detector is Average and the Average Type is set to Power.

In other cases, operation is often not quite as good but still highly effective. With peak detection, the noise floor is estimated based on the RBW and the duration of the bucket using the same equations used in the noise marker function. The voltage of the noise is subtracted from the voltage of the observed signal-plus-noise measurement to compute the estimated signal voltage. The peak detector is one example of processing that varies with detector to give good estimates of the signal level without the analyzer noise.

For best operation, the average detector and the power scale are recommended, as already stated. Peak detection for pulsed-RF can still give excellent effectiveness. FFT analysis does not work well, and does not do NFE well, with pulsed-RF signals, so this combination is not recommended. Negative peak detection is not very useful, either. Sample detection works well, but is never better than the average detector

because it doesn't smooth as well. The Normal detector is a combination of peak and negative peak behaviors, and works about as well as these.

For best operation, extreme smoothing is desirable, as already stated. Using narrow VBWs works well, but using very long bucket durations and the average detector works best. Reducing the number of trace points will make the buckets longer.

For best operation, the power scale (Average Type = Power) is optimum. When making CW measurements in the presence of noise without NFE, averaging on the decibel scale has the advantage of reducing the effect of noise. When using NFE, the NFE does an even better job than using the log scale ever could. Using NFE with the log scale is not synergistic, though; NFE with the power scale works a little better than NFE with log averaging type.

The results from NFE with internal preamp can often be lower than the theoretical noise in a signal source at room temperature, a noise density of  $-174$  dBm/Hz. This is expected and useful behavior, because NFE is designed to report the amount of input signal that is in excess of the thermal noise, not the amount that includes the thermal noise. This can be a useful behavior because thermal noise often interferes with what you want to measure, instead of being part of what you want to measure. Note that NFE is not adequately accurate to always be able to read below kTB.

On instruments with the NF2 license installed, the calibrated Noise Floor used by Noise Floor Extensions should be refreshed periodically. Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, and once every calendar year. The key to perform this is located in the **System, Alignments, Advanced** menu. If you have not done this yourself at the recommended interval, then when you turn on Noise Floor Extensions, the instrument will prompt you to do so with a dialog that says:

*This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel, or Postpone to postpone for a week*

If you Cancel, you will be prompted again the next time you turn NFE on. If you postpone, you will be prompted again after a week passes and you then turn NFE on.

## Conversion

Access a menu of functions that enable you to control the frequency conversion type for the current measurement. The following choices are available:

Auto	AUTO	Auto optimizes demodulation quality by selecting single conversion when available. Default value
Single High Side	SHSide	Single downconversion with the LO frequency above the receiver frequency. Not image protected, and available only above 400 MHz or at all frequencies under specific condition

	<b>Single Low Side</b>	<b>SLSide</b>	Single downconversion with the LO frequency below the receiver frequency. Not image protected, and available only above 1.1 GHz
	<b>Image Protect</b>	<b>IPRotect</b>	Double downconversion with pre-selection filtering. Available at all frequencies
Remote Command	[:SENSe]:MONitor:CONversion:TYPE AUTO   SHSide   SLSide   IPRotect [:SENSe]:MONitor:CONversion:TYPE?		
Example	:MON:CON:TYPE AUTO :MON:CON:TYPE?		
Dependencies	This control only appears in the M9391A		
Couplings	The availabilities of SingleHighSide and SingleLowSide depend on the current Sweep Parameters such as Center Freq, Span, Res BW and Points		
Preset	AUTO		
State Saved	Yes		
Range	AUTO SHSide SLSide IPRotect		

### Phase Noise Optimization

Access a menu of functions that enable you to control the phase noise optimization for the current measurement. The following choices are available:

	<b>Normal</b>	<b>NORmal</b>	Sets the Synthesizer's Phase Lock Loop to the Normal setting (Best Close-In)
	<b>Best Wide Offset</b>	<b>BWOffset</b>	Sets the Synthesizer's Phase Lock Loop for narrow bandwidth to improve ORFS and EVM measurements for wide modulation
Remote Command	[:SENSe]:MONitor:PNOise:OPTion NORmal   BWOffset [:SENSe]:MONitor:PNOise:OPTion?		
Example	:MON:PNO:OPT NOR :MON:PNO:OPT?		
Dependencies	This control only appears in the M9391A		
Preset	NORmal		
State Saved	Yes		
Range	NORmal BWOffset		

#### 3.11.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "[Global Center Freq](#)" on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all

Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

## Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTrument:COUPle:FREQuency:CENTer ALL   NONE</code> <code>:INSTrument:COUPle:FREQuency:CENTer?</code>
Example	<code>:INST:COUP:FREQ:CENT ALL</code> <code>:INST:COUP:FREQ:CENT?</code>
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults and System, Restore Defaults, All Modes</b>
Range	<b>ALL   NONE</b>
Preset	<b>OFF</b>
Backwards Compatibility SCPI	<code>:GLOBa1:FREQuency:CENTer[:STATe] 1   0   ON   OFF</code> <code>:GLOBa1:FREQuency:CENTer[:STATe]?</code>

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:EMC:STANdard ALL   NONE</code> <code>:INSTRument:COUPle:EMC:STANdard?</code>
Example	<code>:INST:COUP:EMC:STAN ALL</code> <code>:INST:COUP:EMC:STAN?</code>
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	<b>ALL   NONE</b>

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	<b>ON OFF</b>

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

---

Remote Command	:INSTRument:COUPle:DEFault
Example	:INST:COUP:DEF
Backwards Compatibility SCPI	:GLOBal:DEFault

---

## 3.11.9 Sweep

Accesses controls that enable you configure and control the acquisition of data and the X-axis parameters of the instrument. These controls might include Sweep Time, Continuous/Single, Pause/Resume, X Scale, and number of Points.

### 3.11.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

## Sweep Time

Controls the time the instrument takes to sweep the current frequency span in swept measurements, displays the sweep time in swept measurements, and displays the equivalent Sweep Time in FFT measurements.

When **Sweep Time** is in Auto, the instrument computes a time that will give accurate measurements based on other settings, such as RBW and VBW.

You can select a shorter sweep time to improve the measurement throughput (with some potential unspecified accuracy reduction), but the **Meas Uncal** indicator will appear if the sweep time you set is less than the calculated Auto Sweep time.

You can also select a longer sweep time, which can be useful (for example) for obtaining accurate insertion loss measurements on very narrowband filters.

**NOTE**

Significantly faster sweep times are available with Option FS1.

**NOTE**

The **Meas Uncal** (measurement uncalibrated) warning is displayed in the Status Bar at the bottom of the screen when the manual Sweep time entered is faster

than the time computed by the instrument's Sweep time equations, that is, the Auto Sweep Time. The instrument's computed Sweep time will provide accurate measurements; if you sweep faster than this your measurements may be inaccurate. A **Meas Uncal** condition may be corrected by returning the Sweep Time to Auto; by entering a longer Sweep Time; or by choosing a wider RBW and/or VBW.

NOTE	On non-sweeping hardware, this control is grayed-out. The value shown on this control is an estimate. It is the measurement's turnaround time, which is the sum of signal acquisition time, FFT time, and other overhead time, to complete the entire span of the measurement. If you need to specify the same "Sweep Time" as you would for sweeping hardware, send <code>[ :SENSe ] : &lt;meas&gt; : SWEep : TIME &lt;time&gt;</code> . The measurement emulates the "Sweep Time" effect, but this emulation is not straightforward, and therefore the behavior is not specified. Instead, we recommend using Minimum Acquisition Time, which provides better control.
Remote Command	<code>[ :SENSe ] : &lt;meas&gt; : SWEep : TIME &lt;time&gt;</code> <code>[ :SENSe ] : &lt;meas&gt; : SWEep : TIME ?</code>
Example	Channel Power measurement: <code>:CHP : SWE : TIME 25ms</code> <code>:CHP : SWE : TIME ?</code>
Notes	In the ACP measurement in WCDMA Mode, this parameter is preset by <b>Meas Method</b> selection. Preset values are as follows: <ul style="list-style-type: none"> <li>- IBW: 29 ms</li> <li>- IBWR: 108 ms</li> <li>- FAST 7.5 ms</li> </ul>
Dependencies	On non-sweeping hardware, this control is grayed out, and the Auto/Man toggle disappears. The read-only control shows estimated sweep time In those instruments, " <a href="#">Minimum Acquisition Time</a> " on page 2127 is available
Couplings	Coupled to <b>Span</b> , <b>RBW</b> , <b>VBW</b> , and <b>Sweep Time Rules</b> when <b>Sweep Time</b> is set to Auto; <b>Sweep Time</b> changes when these parameters are changed When you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b>
Preset	Automatically Calculated unless noted below WCDMA Mode <ul style="list-style-type: none"> <li>- Channel Power: 1.0 msOBW: 32.6 ms</li> <li>- ACP: 29 ms</li> </ul>
State Saved	Saved in instrument state
Min	Other than non-sweeping hardware: Typically, 1 ms

3 LTE & LTE-A TDD Mode  
3.11 Monitor Spectrum Measurement

	Non-sweeping hardware: N/A In the ACP measurement, when <b>Meas Method</b> is <b>Fast Power</b> , the minimum sweep time is span-dependent and automatically calculated
Max	Other than non-sweeping hardware: 4000 s Non-sweeping hardware: N/A
Annotation	The sweep time is displayed in the lower-right corner of the screen. The number of points is displayed parenthetically, as: Sweep 13.3 ms (1001 points) A “#” mark appears before “Sweep” in the annotation when it is switched from Auto to Manual coupling
Status Bits/OPC dependencies	Meas Uncal is Bit 0 in the register: <b>STATus:QUESTionable:INTEgrity:UNCalibrated</b>
Auto Function	
Remote Command	<b>[ :SENSe]:&lt;meas&gt;:SWEep:TIME:AUTO OFF   ON   0   1</b> <b>[ :SENSe]:&lt;meas&gt;:SWEep:TIME:AUTO?</b>
Example	Channel Power measurement: <b>:CHP:SWE:TIME:AUTO OFF</b> <b>:CHP:SWE:TIME:AUTO?</b>
Preset	WCDMA Mode <b>OFF</b> All others <b>ON</b>

### Minimum Acquisition Time

Available on non-sweeping hardware.

Specifies the minimum acquisition time for each “chunk” of the measurement result. The instrument automatically divides Span into multiple chunks if needed. Therefore, the total signal acquisition time for the entire Span is:

$$\sim(\sim\text{Minimum Acquisition Time}) * (\text{The number of chunks})$$

When in Auto, this parameter’s value is determined by other parameters, such as **Span**, **RBW** and **VBW**.

You can manually increase this parameter value from this Auto value.

If increased, the instrument acquires signal for the specified time duration for each chunk. It performs additional FFTs, and averages or peak-holds the FFT results for a chunk, depending on **Detector** settings.

Note that the actual acquisition time for each chunk may exceed the **Minimum Acquisition Time** value, in order to satisfy FFT time required by other parameters, and to perform an integer number of FFTs.

Remote Command	<pre>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME &lt;time&gt; [ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME? &lt;meas&gt; is the identifier for the current measurement; any one of CHPower-  ACPower OBWidth MONitor</pre>
Example	<pre>Channel Power measurement :CHP:SWE:ACQ:TIME 500 ms :CHP:SWE:ACQ:TIME?</pre>
Dependencies	Available only on non-sweeping hardware
Couplings	Coupled to <b>Span</b> , <b>RBW</b> , and <b>VBW</b> when in the Auto state When you manually set a value when in the <b>Auto</b> state, the state automatically changes to <b>Man</b>
Preset	Automatically calculated
State Saved	Saved in instrument state
Min	100 ns
Max	4.00 ks
Auto Function	
Remote Command	<pre>[ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME:AUTO OFF   ON   0   1 [ :SENSe]:&lt;meas&gt;:SWEep:ACQuisition:TIME:AUTO? &lt;meas&gt; is the identifier for the current measurement; any one of CHPower-  ACPower OBWidth MONitor</pre>
Example	<pre>Channel Power measurement: :CHP:SWE:ACQ:TIME:AUTO OFF</pre>
Preset	ON

## Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 2129

Remote Command	<pre>:INITiate:CONTinuous OFF   ON   0   1 :INITiate:CONTinuous?</pre>
Example	<pre>Put instrument into Single measurement operation: :INIT:CONT 0</pre>

---

**:INIT:CONT OFF**

Put instrument into **Continuous** measurement operation:

**:INIT:CONT 1**

**:INIT:CONT ON**

---

Preset	<b>ON</b>
--------	-----------

---

Note that **:SYST:PRES** sets **:INIT:CONT** to **ON**, but **\*RST** sets **:INIT:CONT** to **OFF**

---

State Saved	Saved in instrument state
-------------	---------------------------

---

Annunciation	The <b>Single/Continuous</b> icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> <li>- A line with an arrow is <b>Single</b></li> <li>- A loop with an arrow is <b>Continuous</b></li> </ul>
--------------	--

---

Backwards Compatibility Notes	<p>X-Series A-models had <b>Single</b> and <b>Cont</b> hardkeys in place of the <b>SweepSingleCont</b> softkey. In the X-Series A-models, if in single measurement, the <b>Cont</b> hardkey (and <b>INIT:CONT ON</b>) switched to continuous measurement, but never restarted a measurement and never reset a sweep</p> <p>X-Series B-models have a <b>Cont/Single</b> toggle control instead of <b>Single</b> and <b>Cont</b> hardkeys, but it is still true that, if in single measurement, the <b>Cont/Single</b> toggle control never restarts a measurement and never resets a sweep</p>
-------------------------------	---

### More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the <b>Average/Hold Num</b>, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used both before and after the <b>Average/Hold Num</b> is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>
Single Mode	<p>The instrument takes a single sweep when in <b>Single</b> mode, or if in average or Max/Min Hold, or if there is a <b>Waterfall</b> window displayed, it takes multiple sweeps until the average/hold count reaches the <b>Average/Hold Num</b>, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- `:INIT:CONT 1` has no effect
- `:INIT:CONT 0` places the instrument in Single Sweep but has no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state

See ["Restart" on page 2279](#) for details of `:INIT:IMMEDIATE`.

If the instrument is already in **Single** sweep, `:INIT:CONT OFF` has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending `:INIT:IMM` does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending `:CALC:AVER:TCON UP`.

## Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See ["More Information" on page 2131](#)

Remote Command	<code>:INITiate[:IMMEDIATE]</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function

Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <b>STATUS:OPERation</b> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <b>STATUS:QUESTionable</b> register bit 9 ( <b>INTEGRity</b> sum) is cleared The <b>SWEEPING</b> bit is set The <b>MEASURING</b> bit is set
Backwards Compatibility Notes	For Spectrum Analysis Mode in ESA and PSA, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command restarted trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b> , but did not restart <b>Max Hold</b> and <b>Min Hold</b> In X-Series, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command restart not only <b>Trace Average</b> , but <b>MaxHold</b> and <b>MinHold</b> traces as well

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition

must be met prior to each sweep. The sweep is stopped when the average count  $k$  equals the number  $N$  set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command `:CALC:AVER:TCON UP`.

## Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
<b>Clear/Write</b> pressed (even if already in Clear/Write)	Set to mintracevalue
<b>Max Hold</b> pressed (even if already in Max Hold)	Set to mintracevalue
<b>Min Hold</b> pressed (even if already in Min Hold)	Set to maxtracevalue
<b>Trace Average</b> pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
<b>Restart</b> pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

## Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count  $k$  to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

## Averaging

The weighting factor used for averaging is  $k$ . This  $k$  is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This  $k$  is used for comparisons with  $N$ , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold, **K**, shows the count for the sweep (data acquisition) in progress.  $K = k + 1$ , with a limit of N. The displayed value **K** changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<b>:INITiate:PAUSE</b> <b>:INITiate:RESume</b>
Example	<b>:INIT:PAUS</b> <b>:INIT:RES</b>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

## Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when **:ABORT** is sent, the alignment finishes *before* the abort function is performed, so **:ABORT** does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an **:INIT:IMM** command is received.

Remote Command	<b>:ABORT</b>
Example	<b>:ABOR</b>
Notes	If <b>:INIT:CONT</b> is <b>ON</b> , then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met If <b>:INIT:CONT</b> is <b>OFF</b> , then <b>:INIT:IMM</b> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met
Dependencies	For continuous measurement, <b>:ABORT</b> is equivalent to the <b>Restart</b> key Not all measurements support this command
Status Bits/OPC dependencies	The <b>STATus:OPERation</b> register bits 0 through 8 are cleared, <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous

---

The **STATus:QUEStionable** register bit 9 (**INTEgrity** sum) is cleared  
 Since all the bits that feed into OPC are cleared by **:ABORt**, the Abort command will cause the **\*OPC** query to return true

### Sweep Time Annotation (Remote Query Only)

Returns the **Sweep Time Annotation** value. Available only on non-sweeping hardware.

This value is also displayed in the result trace window.

The value returned is the estimated turnaround time of each measurement cycle, in seconds. The turnaround time is the sum of the signal acquisition time, FFT time, and other overhead time, to complete the entire span of each measurement cycle.

---

Remote Command	<b>[ :SENSe ] : &lt;meas&gt; : SWEep : ETIME?</b>  <b>&lt;meas&gt;</b> is the identifier for the current measurement; any one of <b>CHPower-   ACPower   OBWidth   MONitor</b>
Example	Channel Power measurement <b>:CHP : SWE : ETIME?</b>
Dependencies	Available only on non-sweeping hardware
Preset	Automatically calculated

### 3.11.9.2 Sweep Config

Accesses controls that enable you to configure the Sweep and Control functions of the instrument, such as Sweep Rules.

#### Points

Sets the number of points taken per sweep, and displayed in the traces. The current value of points is displayed parenthetically, next to the sweep time in the lower-right corner of the display. Using more points provides greater resolution. Using fewer points compacts the data and decreases the time required to access a trace over the remote interface.

Increasing the number of points does not increase the sweep time. However, it can slightly impact the trace processing time and therefore the overall measurement speed. Decreasing the number of points does not decrease the sweep time, but it may speed up the measurement, depending on the other sweep settings (for example, in FFT sweeps). Fewer points will always speed up the I/O.

3 LTE & LTE-A TDD Mode  
 3.11 Monitor Spectrum Measurement

Due to minimum sweep rate limitations of the hardware, the minimum sweep time available to the user will increase above its normal value of 1 ms as the number of sweep points increases above 15001.

Changing the number of sweep points has several effects on the instrument. Since markers are read at the point location, the marker reading may change. The sweep time resolution will change. Trace data for all the traces will be cleared and, if Sweep is in Cont, a new trace taken. If any trace is in average or hold, the averaging starts over.

Because of sweep time quantization issues, the knob and up/down keys cannot be used to adjust the number of points.

When in a split screen display each window may have its own value for points.

When sweep points is changed, an informational message "Sweep points changed, all traces cleared" is displayed and in the 5G NR mode, Auto Sweep Points is set to OFF(0).

Remote Command	<code>[ :SENSe]:MONitor:SWEEp:POINts &lt;integer&gt;</code> <code>[ :SENSe]:MONitor:SWEEp:POINts?</code>
Example	<code>:MON:SWE:POIN 1000</code> <code>:MON:SWE:POIN?</code>
Dependencies	This function is not available when Signal ID is set to On in External Mixing Neither the knob nor the step keys can be used to change this value. If it is tried, a warning is given Not displayed in modes that do not support Swept
Couplings	Whenever the number of sweep points change: <ul style="list-style-type: none"> <li>- All trace data is erased</li> <li>- Any traces with Update Off will also go to Display Off (like going from View to Blank in the older instruments)</li> <li>- Sweep time is re-quantized</li> <li>- Any limit lines that are on will be updated</li> <li>- If averaging/hold is on, averaging/hold starts over</li> <li>- Auto Sweep Points is OFF (Only 5GNR)</li> </ul> <p>The resolution of setting the sweep time depends on the number of points selected</p>
Preset	1001 unless noted below 2001: 5GNR
State Saved	Saved in instrument state
Min	1
Max	20001
Annotation	On second line of annotations, in lower right corner in parenthesis behind the sweep annotation

### 3.11.10 Trace

Lets you control the acquisition, display, storage, detection, and manipulation of trace data for the available traces.

The "[Trace Control](#)" on [page 2136](#) tab in this menu contains radio-button selections for the trace type (**Clear/Write**, **Trace Average**, **Max Hold**, **Min Hold**) and **View/Blank** setting for the selected trace.

#### 3.11.10.1 Select Trace

Specifies the *selected trace*, which is the trace that will be affected when you change trace settings.

**Select Trace** appears above the menu panel, indicating that it applies to *all* controls in the menu panel. **Select Trace** is blanked if you select a tab whose controls do *not* depend on the selected trace (for example, **Trace Function**).

Notes	The selected trace is remembered even when not in the <b>Trace</b> menu
Dependencies	For the Swept SA measurement: <ul style="list-style-type: none"> <li>- In Image Suppress mode, when you select a trace it becomes the active trace, and the formerly active trace goes into View</li> <li>- When you turn on Image Suppress, Update turns off for all traces except the selected trace</li> </ul> For the ACP measurement, when <b>Meas Method</b> is <b>RBW</b> , <b>FAST</b> or <b>FPOwer</b> , <b>Select Trace</b> is disabled
Preset	Trace 1
State Saved	Yes

#### 3.11.10.2 Trace Control

The controls on this tab allow you to set the "[Trace Type](#)" on [page 2137](#) and its update mode.

There are four Trace Types:

- **Clear/Write**
- **Trace Average**
- **Max Hold**
- **Min Hold**

Each type handles data in a different way.

Each trace also has two values that determine whether it is being written or not, and whether it is being displayed or not. These values, **Update** and **Display**, are described fully in the "[View/Blank](#)" on page 2142 control description. Essentially, when **Update** is **ON**, a trace is updating, and when **Update** is **OFF** it is not. When **Display** is **ON**, it is visible and when **Display** is **OFF** it is not. These terms are used throughout the descriptions in this section.

## Trace Type

There are four trace Types:

Option	Parameter	SCPI Example	Details
Clear/Write	<b>WRITE</b>	<code>:TRAC2:TYPE WRIT</code>	See: " <a href="#">Clear/Write</a> " on page 2140
Trace Average	<b>AVERAge</b>	<code>:TRAC2:TYPE AVER</code>	See: " <a href="#">Trace Average</a> " on page 2140
Maximum Hold	<b>MAXHold</b>	<code>:TRAC3:TYPE MAXH</code>	See: " <a href="#">Max Hold</a> " on page 2141
Minimum Hold	<b>MINHold</b>	<code>:TRAC5:TYPE MINH</code>	See: " <a href="#">Min Hold</a> " on page 2141

Full descriptions of each type are provided below. You may select one of these types for each trace. Re-selecting the current **Trace Type** initiates the same action that selecting it the first time did, even though it is already selected. For example, selecting **Clear/Write** while **Clear/Write** is already selected will nonetheless clear the trace and begin rewriting it.

Besides the **Trace Type**, the "[View/Blank](#)" on page 2142 state must be set to **Active** (**Update**: **ON**, **Display**: **ON**) for a trace to be updating and visible. Selecting any **Trace Type** automatically makes the trace **Active**.

See also: "[Trace Mode Backwards Compatibility Commands](#)" on page 2138

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:TYPE WRITE   AVERAge   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 ... 6:TYPE?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE WRITE   AVERAge   MAXHold   MINHold</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:TYPE?</pre> <p>where <b>&lt;meas&gt;</b> is the identifier for the current measurement</p>
Example	<pre>:TRAC:TYPE WRIT</pre> <pre>:TRAC:TYPE?</pre>
Couplings	<p>Selecting a <b>Trace Type</b> (by pressing any of the Trace Type selections or sending <code>:TRAC:TYPE</code>) sets the Trace to <b>Active</b> (<b>Update</b>: <b>ON</b>, <b>Display</b>: <b>OFF</b>), even if the same trace type was already selected</p> <p>When Detector setting is "Auto" (<code>[ :SENSe ] : &lt;meas&gt; : DETector : AUTO?</code>), Detector (<code>[ :SENSe ] : &lt;meas&gt; : DETector [ :FUNction ] ?</code>) switches aligning with the switch of this parameter: "<b>NORMal</b>" with <b>WRITE</b> (Clear Write), "<b>AVERAge</b>" with <b>AVERAge</b>, "<b>POSitive</b> (peak)" with <b>MAXHold</b>, and "<b>NEGative</b> (peak)" with <b>MINHold</b></p>

Preset	Swept SA and Monitor Spectrum: <b>WRITe</b> All other measurements: <b>AVERage</b> Following <b>Preset</b> , all traces are cleared (all trace points set to mintracevalue)
State Saved	The type of each trace is saved in instrument state
Annunciation	The type for each trace is indicated in the Trace annunciator panel on the Measurement Bar

### Trace Mode Backwards Compatibility Commands

In earlier instruments, the “Trace Modes” were: Clear/Write, Max Hold, Min Hold, View and Blank. Averaging was global to all traces and was controlled under the **BW/Avg** menu.

In X-Series, trace averaging can be done on a per-trace basis. The Trace Modes (now called Trace Types) are Clear/Write, Trace Average, Max Hold and Min Hold. View and Blank are set separately under "**View/Blank**" on page 2142.

While this provides more flexibility, it also gives rise to potential backwards compatibility problems. To mitigate these, the old Trace Mode command has been retained and a new Trace Type command has been added. The **:TRACe:MODE** command is retained for backwards compatibility, and the **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay** commands introduced for ongoing use. The old Trace Modes are selected using **:TRAC:MODE**, whose parameters are mapped into calls to **:TRACe:TYPE**, **:TRACe:UPDate** and **:TRACe:DISPlay**, and the old global Averaging command **[ :SENSe ]:AVERage[ :STATe ]** is provided for backwards compatibility. See the individual command descriptions for details.

When **Average/Hold** in the **Meas Setup, Legacy Compatibility** menu is **ON**, the following is true for traces in Max Hold and Min Hold:

- They ignore the **Average/Hold** number; **Single** for Max Hold causes one sweep only, so switching to **Single** stops after the current sweep, and switching to **Cont** starts again without clearing the accumulated result
- Max Hold is not cleared on a **Restart**, **Single** or **:INIT:IMM**, but changing a measurement parameter, like frequency or bandwidth etc., still restarts the Max Hold

Preset	<b>WRITe</b>
State Saved	The trace mode is an alias only
Backwards Compatibility SCPI	<b>:TRACe[1] 2 ... 6:MODE WRITe   MAXHold   MINHold   VIEW   BLANK</b> <b>:TRACe[1] 2 ... 6:MODE?</b>
Backwards Compatibility Notes	The legacy <b>:TRACe:MODE</b> command is retained for backwards compatibility. In conjunction with the legacy <b>:AVERage</b> command, it works as follows: <ul style="list-style-type: none"> <li>– <b>:AVERage ON OFF</b> sets/clears a variable that we will call average for the sake of this discussion. This variable is maintained by the instrument solely for backwards compatibility. See</li> </ul>

the `[ :SENSe ]:AVERage[ :STATe ]` command description below

- `:TRACe:MODE WRITe` sets `:TRACe:TYPE WRITe` (Clear/Write) unless average is true, in which case it sets it to `:TRACe:TYPE AVERage`. It also sets `:TRACe:UPDate ON`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE MAXHold` sets `:TRACe:TYPE MAXHold` (Max Hold). It also sets `:TRACe:UPDate ON`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE MINHold` sets `:TRACe:TYPE MINHold` (Min Hold). It also sets `:TRACe:UPDate ON`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE VIEW` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay ON`, for the selected trace
- `:TRACe:MODE BLANK` sets `:TRACe:UPDate OFF`, `:TRACe:DISPlay OFF`, for the selected trace

The query returns the same value as `:TRACe:TYPE?`, meaning that if you set `:TRACe:MODE:VIEW` or `:TRACe:MODE:BLANK`, the query response will not be what you sent

`:TRACe[n]:MODE` was formerly used to set the type or “writing mode” of the trace. At that time, View and Blank were writing modes. The new `:TRACe:TYPE` command should be used in the future, but `:TRACe:MODE` is retained to provide backwards compatibility

In X-Series, unlike earlier instruments, Max Hold and Min Hold now obey the Average Number and counts up to a terminal value as Average always has

As the **Average/Hold Number** now affects **Min Hold** and **Max Hold**, the operations that restart Averaging (for example, the **Restart** key) now also restart **Min Hold** and **Max Hold**

As a result of these changes, legacy code that restarts averaging while retaining a running Max Hold will need to be rewritten, because the Max Hold will now restart when the Average does

Also, previous to X-Series:

- Pressing **Max Hold** while already in **Max Hold** (or doing so remotely) had no effect. Now it will clear the trace and restart the sweep and the Max Hold sequence
- Changing the vertical scale (Log/Lin or dB/div) of the display restarted **Max Hold** and **Min Hold**. This is no longer the case

Preset	<b>OFF</b>
State Saved	The state of Average is saved in Instrument State for ghosting purposes
Backwards Compatibility SCPI	<code>[ :SENSe ]:AVERage[ :STATe ] ON   OFF   1   0</code> <code>[ :SENSe ]:AVERage[ :STATe ]?</code>
Backwards Compatibility Notes	Previous to X-Series, Averaging (also sometimes known as trace averaging) was global to all traces, that is, it was either on or off for all active traces. The legacy command <code>[ :SENSe ]:AVERage [ :STATe ] ON OFF 1 0</code> was used to turn Averaging on or off In X-Series, Averaging is turned on or off on a per-trace basis, so it can be on for one trace and off for another For backwards compatibility, the old global Average State variable is retained solely as a legacy

---

variable, turned on and off and queried by the legacy command [ :SENSe ] :AVERage [ :STATe ] OFF | ON | 0 | 1. When Average is turned on, any trace in Clear/Write will get put into Average. While Average is on, any trace put into Clear/Write by the old :TRAC :MODE command will instead get put into Average. When Average is turned off, any trace in Average will get put into Clear/Write

## Trace Type Details

### Clear/Write

Each trace update replaces the old data in the trace with new data.

Pressing **Clear/Write** for the selected trace, or sending :TRAC :TYPE WRIT for the specified trace, sets the trace type to **Clear/Write** and clears the trace, even if you are already in **Clear/Write**. Then a new sweep is initiated. Trigger conditions must be met before the sweep actually starts, and if in **Single** the sweep won't start until **Restart** is pressed.

Pressing **Clear/Write** stops the current sweep and initiates a new one, so **Trace Average**, **Max Hold** and **Min Hold** data may be interrupted in mid-sweep when **Clear/Write** is pressed, and therefore may not accurately reflect the displayed count. Therefore, when **Clear/Write** is pressed for one trace, **Trace Average**, **Max Hold** and **Min Hold** must restart for all traces.

When in **Clear/Write**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), a new sweep is initiated but the trace is not cleared.

### Trace Average

The instrument maintains and displays an average trace, which represents the cumulative average on a point-by-point basis of the new trace data and previous averaged trace data.

Pressing **Trace Average** (for the selected trace), or sending :TRAC :TYPE AVER (for the specified trace), sets the trace type to **Trace Average**, clears the trace, initiates a new sweep, and restarts the Average sequence.

Details of the count limiting behavior and the averaging calculations may be found under **Avg|Hold Number** and **Average Type** under **Meas Setup**.

When in **Trace Average**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the average restarts and a new sweep is initiated but the trace is not cleared.

Restarting the average means:

### 3 LTE & LTE-A TDD Mode

#### 3.11 Monitor Spectrum Measurement

- The average/hold count  $k$  is set to 1, so that the next time the average trace is displayed it simply represents one trace of new data
- A new sweep is initiated
- Once the new sweep starts, the trace is overwritten with current trace data as the first trace of the new average

Remember that restarting averaging also restarts **Max Hold** and **Min Hold**, as there is only one count for Trace Average and Hold.

#### **Max Hold**

The instrument maintains and displays a max hold trace, which represents the maximum data value on a point-by-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under **Meas Setup**.

Pressing **Max Hold** for the selected trace, or sending `:TRAC:TYPE MAXH` for the specified trace, sets the Trace Type to **Max Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Max Hold**.

When in **Max Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Max Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Max Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the max hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated.

Remember that restarting **Max Hold** also restarts averaging and **Min Hold**, as there is only one count for Trace Average and Hold.

#### **Min Hold**

The instrument maintains and displays a min hold trace, which represents the minimum data value on a point-point basis of the new trace data and previous trace data. Details of the count limiting behavior may be found under **Avg|Hold Number** under the **Meas Setup** functions.

Pressing **Min Hold** for the selected trace, or sending `:TRAC:TYPE MINH` for the specified trace, sets the Trace Type to **Min Hold**, clears the trace, initiates a new sweep, and restarts the hold sequence, even if you are already in **Min Hold**.

When in **Min Hold**, if a measurement-related instrument setting is changed (that is, one which requires new data to be taken, like **Center Frequency** or **Attenuation**), the **Min Hold** sequence restarts and a new sweep is initiated but the trace is not cleared.

Restarting the **Min Hold** sequence means:

- The average/hold count  $k$  is set to 1, so that the next time the min hold trace is displayed it simply represents one trace of new data
- A new sweep is initiated

Remember that restarting **Min Hold** also restarts **Max Hold** and averaging, because there is only one count for Trace Average and Hold.

### Clear and Write | Restart Averaging | Restart Max/Min Hold

Starts the trace writing, as though the "Trace Type" on page 2137 had just been selected. The effect is exactly the same as reselecting the current **Trace Type** again – the control is provided because it may not be obvious that reselecting the same selection from a radio button menu will take any action.

This control displays different labels, depending on the selected Trace Type:

- **Clear/Write**: Clear and Write
- **Trace Average**: Restart Averaging
- **Max Hold**: Restart Max Hold
- **Min Hold**: Restart Min Hold


### View/Blank

Lets you set the state of the two trace variables: **Update** and **Display**. The choices available in this dropdown menu are:

<b>Active</b>	Update and Display both <b>ON</b>
<b>View</b>	Update <b>OFF</b> ; Display <b>ON</b>
<b>Blank</b>	Update <b>OFF</b> ; Display <b>OFF</b>
<b>Background</b>	Update <b>ON</b> , Display <b>OFF</b> Allows a trace to be blanked <i>and</i> continue to update "in the background", which was not possible in the past

In the Swept SA measurement, a trace with **DisplayOFF** is indicated by a strikethrough of the type letter in the trace annotation panel in the Measurement Bar. A trace with **UpdateOFF** is indicated by dimming the type letter in the trace

annotation panel in the Measurement Bar. In the example below, Traces 3, 4, 5 and 6 have **UpdateOFF**, and Traces 4 and 6 have **DisplayOFF**.

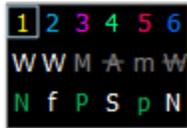

See: ["More Information" on page 2144](#)

Notes	For the commands to control the two variables, Update and Display, see <a href="#">"Trace Update State On/Off" on page 2143</a> and <a href="#">"Trace Display State On/Off" on page 2144</a> below
Dependencies	When Signal ID is on, this key is grayed-out
Couplings	<p>Selecting a Trace Type for a trace (pressing the key or sending the equivalent command) puts the trace in <b>Active</b> (Update <b>ON</b> and Display <b>ON</b>), even if that trace type was already selected</p> <p>Selecting a detector for a trace (pressing the key or sending <code>[ :SENS ] :DET :TRAC</code>) puts the trace in <b>Active</b> (Update<b>ON</b> and Display<b>ON</b>), even if that detector was already selected</p> <p>Selecting a <a href="#">"Math Function" on page 1145</a> other than <b>OFF</b> for a trace (pressing the key or sending the equivalent command) puts the trace in <b>Active</b> (Update<b>ON</b> and Display<b>ON</b>), even if that Math Mode was already selected</p> <p>Loading a trace from a file puts that trace in <b>View</b> regardless of the state it was in when it was saved; as does being the target of a <b>Copy</b> or a participant in an <b>Exchange</b></p>

### Trace Update State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 ... 6:UPDate[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:UPDate[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 2 inactive (stop updating):</p> <pre>:TRAC2:UPD 0</pre>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

## Trace Display State On/Off

Remote Command	<p>For Swept SA Measurement (in SA Mode):</p> <pre>:TRACe[1] 2 ... 6:DISPly[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 ... 6:DISPly[:STATe]?</pre> <p>For all other measurements:</p> <pre>:TRACe[1] 2 3:&lt;meas&gt;:DISPly[:STATe] ON   OFF   1   0</pre> <pre>:TRACe[1] 2 3:&lt;meas&gt;:DISPly[:STATe]?</pre> <p>where &lt;meas&gt; is the identifier for the current measurement</p>
Example	<p>Make trace 1 visible:</p> <pre>:TRAC2:DISP 1</pre> <p>Blank trace 3:</p> <pre>:TRAC3:DISP 3</pre>
Couplings	Whenever you set <b>Update</b> to <b>ON</b> for any trace, the <b>Display</b> is set to <b>ON</b> for that trace
Preset	<p>For Swept SA Measurement (in SA Mode):</p> <pre>1 0 0 0 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2–6</p> <p>For all other measurements:</p> <pre>1 0 0</pre> <p><b>ON</b> for Trace 1; <b>OFF</b> for 2 &amp; 3</p>
State Saved	Saved in instrument state

### More Information

When a trace becomes inactive, any update from the **:SENSE** system (detectors) immediately stops, without waiting for the end of the sweep. The trace data remains unchanged, but stops updating. If the trace is blanked, this still does not affect the data in the trace. Traces that are blanked (**Display=OFF**) do not display nor appear on printouts, but their data stays intact, they may be queried, and markers may be placed on them

In most cases, inactive traces are static and unchanging; however, there are cases when an inactive trace will update, specifically:

- if data is written to that trace from remote
- if trace data is loaded from mass storage
- if the trace is the target of a **Copy** or participant in an **Exchange**
- if the trace is cleared using **Clear Trace**

Inactive traces that are also being displayed (traces in **View**) are displayed at half intensity. Traces in **View** display across the entire X-Axis of the instrument. Their

horizontal placement does not change, even if X-Axis settings subsequently are changed, although Y-Axis settings do affect the vertical placement of data.

When a trace becomes active (**Update=ON**), the trace is cleared, the average count is reset, and a new sweep is initiated.

Note that putting a trace into **Display=OFF** and/or **Update=OFF** does *not* restart the sweep and does *not* restart Averaging or Hold functions for any traces.

## Trace Settings Table

Lets you configure the Trace system using a visual utility.

### Clear All Traces

Clears all traces from the display.

Remote Command	<code>:TRACe:MONitor:CLEAr:ALL</code>
Example	<code>:TRAC:MON:CLE:ALL</code>
Backwards Compatibility SCPI	<code>:DISPlay:MONitor:VIEW:WINDow:TRACe:CLEAr:ALL</code>

### 3.11.10.3 Detector

Lets you choose and configure detectors for the selected trace.

#### Detector

Allows you to select a specific detector for the current measurement. When the detector choice is Auto, the instrument selects the detector. The selected detector depends on marker functions, trace functions, and trace averaging functions for the current measurement.

The following options are available:

- AUTO** The detector selected depends on marker functions, trace functions, average type, and the trace averaging function  
In the ACP measurement, when in AUTO, the detector selected is set to AVERage, unless the Radio Standard defaults state otherwise e.g., it is set to Peak for Radio Standard = PDC when Device = both MS and BTS, and when Radio Standard = NADC and Device = MS
- NORMa1** The detector determines the peak of the CW-like signals, and it yields alternating maximums and minimums of noise-like signals. This is also referred to as Rosenfell detection

<b>AVERage</b>	The detector determines the average of the signal within the sweep points, using RMS averaging
<b>POSitive</b> Peak	The detector determines the maximum of the signal within the sweep points
<b>SAMPle</b>	The detector indicates the instantaneous level of the signal at the center of the sweep points represented by each display point
<b>NEGative</b> Peak	The detector determines the minimum of the signal within the sweep points

Because they may not find a spectral component's true peak, neither **AVERage** nor **SAMPle** detectors measure amplitudes of CW signals as accurately as Peak or **NORMal**, but they do measure noise without the biases of Peak detection.

Remote Command	<code>[ :SENSe]:MONitor:DETEctor:TRACe[1]2 3 AVERage   NEGative   NORMal   POSitive   SAMPle   RMS</code> <code>[ :SENSe]:MONitor:DETEctor:TRACe?</code>												
Example	<code>:MON:DET:TRAC NORM</code> <code>:MON:DET:TRAC?</code> <code>:MON:DET RMS</code> Sets the detector to <b>AVERage</b> . <b>AVERage</b> uses RMS averaging, so this is equivalent to selecting <b>RMS</b>												
Notes	The query returns a string corresponding to the detector type as shown below <table border="1"> <thead> <tr> <th>String Returned</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td><b>NORM</b></td> <td>Normal</td> </tr> <tr> <td><b>AVER</b></td> <td>Average (RMS)</td> </tr> <tr> <td><b>POS</b></td> <td>Peak</td> </tr> <tr> <td><b>SAMP</b></td> <td>Sample</td> </tr> <tr> <td><b>NEG</b></td> <td>Negative Peak</td> </tr> </tbody> </table> <p>The RMS selection sets the detector type to <b>AVERage</b> with RMS averaging. Therefore, if RMS has been selected, the query returns “<b>AVER</b>”</p>	String Returned	Definition	<b>NORM</b>	Normal	<b>AVER</b>	Average (RMS)	<b>POS</b>	Peak	<b>SAMP</b>	Sample	<b>NEG</b>	Negative Peak
String Returned	Definition												
<b>NORM</b>	Normal												
<b>AVER</b>	Average (RMS)												
<b>POS</b>	Peak												
<b>SAMP</b>	Sample												
<b>NEG</b>	Negative Peak												
Couplings	When " <b>Detector Select Auto/Man</b> " on page 2147 is <b>ON</b> , the detector selected depends on the Trace (Average) type												
Preset	<b>NORMal</b>												
State Saved	Yes												
Range	<b>AVERage NEGative NORMal POSitive SAMPle RMS</b>												
Annotation	The four letter mnemonic for the detector appears in the trace window next to the trace it applies to												
Backwards Compatibility SCPI	<code>[ :SENSe]:MONitor:DETEctor[:FUNction]</code> Applied to Trace 1 only												

## Detector Select Auto/Man

Sets the Detector mode to Auto or Manual. In Auto, the proper detector is chosen based on rules that take into account the measurement settings and other instrument settings.

When any detector is selected by the user, this toggles automatically set to Man (manual).

Remote Command	<code>[ :SENSe]:MONitor:DETEctor:TRACe[1] 2 3:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:MONitor:DETEctor:TRACe[1] 2 3:AUTO?</code>
Example	<code>:MON:DET:TRAC2:AUTO ON</code> <code>:MON:DET:TRAC2:AUTO?</code>
Couplings	When this function is <b>ON</b> , the "Detector" on page 2145 and "Trace Type" on page 2137 settings automatically align as follows: <ul style="list-style-type: none"> <li>- "NORMa1" with Clear Write</li> <li>- "AVERage" with AVERage</li> <li>- "POSitive (Peak)" with MAXHold</li> <li>- "NEGative (Peak)" with MINHold</li> </ul>
Preset	<b>ON</b>
State Saved	Yes
Backwards Compatibility SCPI	<code>[ :SENSe]:MONitor:DETEctor:AUTO</code> Applied to Trace 1 only

## 3.12 IQ Waveform Measurement

The IQ Waveform measurement is a time-domain measurement that lets you view the envelope, real and imaginary components of an RF or baseband signal. It is similar in many respects to the zero-span measurement in traditional spectrum analysis but gives you direct access to the I/Q pairs of the signal, such as those that make up modern communications signals. The IQ Waveform measurement can also be used to perform general purpose power measurements to a high degree of accuracy.

You can examine the RF envelope (magnitude) of the signal, or open an I/Q Waveform window, which shows the I and Q signal waveform voltage versus time, to disclose the voltages that comprise the complex modulated waveform of a digital signal.

### Measurement Commands

The general functionality of ["CONFigure" on page 2997](#), ["INITiate" on page 2998](#), ["FETCh" on page 2998](#), ["MEASure" on page 3000](#), and ["READ" on page 2999](#) are described in the section **SCPI Operation and Results Query** in the topic **Programming the Instrument**.

The following measurement commands and queries are used to configure the measurement:

<code>:INITiate:WAVeform</code>	Initiates a trigger cycle for the <b>WAV</b> measurement, but does not return any data. You must then use <code>:FETC:WAV[n]?</code> to retrieve data Does not change any measurement settings
<code>:CONFigure?</code>	Returns the long form name of current measurement, in this case, <b>WAVeform</b>
<code>:CONFigure:WAVeform</code>	Selects <b>WAV</b> measurement with Meas Setup settings in preset state – same as <a href="#">"Meas Preset" on page 2244</a>
<code>:CONFigure:WAVeform:NDEFault</code>	Selects <b>WAV</b> measurement <i>without</i> affecting settings

The following queries are used to retrieve the results:

<code>:FETCh:WAVeform?</code>	Retrieves the data defined by <b>n</b>
<code>:MEASure:WAVeform [n]?</code>	Switches to <b>WAV</b> measurement, restores default values, starts the measurement, then retrieves the data defined by <b>n</b>
<code>:READ:WAVeform[n]?</code>	Starts the measurement, then retrieves the data defined by <b>n</b>

## Remote Command Results

For the **:FETCH**, **:MEASure** and **:READ** queries above, the results returned depend on the **n** parameter value as follows:

<b>n</b>	<b>Results Returned</b>																								
0	Returns unprocessed I/Q trace data, as a series of trace point pairs, in Volts Each pair consists of an I value (even-indexed, starting at 0), followed by a Q value (odd-indexed)																								
1	Returns the following scalar results:																								
	<table border="1"> <thead> <tr> <th><b>#</b></th> <th><b>Item</b></th> <th><b>Unit, if any</b></th> </tr> </thead> <tbody> <tr> <td>1</td> <td> <b>Sample Time</b>            A floating-point number representing the time between samples. This value is important when analyzing signal results (that is, when you send a query using <b>n</b> = 0, 2, etc.)         </td> <td></td> </tr> <tr> <td>2</td> <td> <b>Mean Power</b>            The power across the entire trace. If Averaging State is <b>ON</b>, as set by "<b>Avg/Hold Number (Averaging On/Off)</b>" on page 2234, the power is for the latest acquisition         </td> <td>dBm</td> </tr> <tr> <td>3</td> <td> <b>Mean Power Averaged</b>            The power across the entire trace            If Averaging State is <b>ON</b>, the power for N averages (the latest acquisition), as set by "<b>Avg/Hold Number (Averaging On/Off)</b>" on page 2234            If Averaging State is <b>OFF</b>, the value of the mean power averaged is the same as the value of the mean power         </td> <td>dBm</td> </tr> <tr> <td>4</td> <td> <b>Number of samples</b>            The number of data points in the captured signal. This value is important when analyzing signal results (that is, when you send a query using <b>n</b> = 0, 2, etc.)         </td> <td></td> </tr> <tr> <td>5</td> <td> <b>Peak-to-mean ratio</b>            The ratio of the maximum signal level to the mean power. Valid values are only obtained with Averaging State <b>OFF</b>. If Averaging State is <b>ON</b>, the peak-to-mean ratio is calculated using the highest peak value, rather than the displayed average peak value         </td> <td>dB</td> </tr> <tr> <td>6</td> <td> <b>Maximum value</b>            The maximum of the most recently acquired data         </td> <td>dBm</td> </tr> <tr> <td>7</td> <td> <b>Minimum value</b>            The minimum of the most recently acquired data         </td> <td>dBm</td> </tr> </tbody> </table>	<b>#</b>	<b>Item</b>	<b>Unit, if any</b>	1	<b>Sample Time</b> A floating-point number representing the time between samples. This value is important when analyzing signal results (that is, when you send a query using <b>n</b> = 0, 2, etc.)		2	<b>Mean Power</b> The power across the entire trace. If Averaging State is <b>ON</b> , as set by " <b>Avg/Hold Number (Averaging On/Off)</b> " on page 2234, the power is for the latest acquisition	dBm	3	<b>Mean Power Averaged</b> The power across the entire trace If Averaging State is <b>ON</b> , the power for N averages (the latest acquisition), as set by " <b>Avg/Hold Number (Averaging On/Off)</b> " on page 2234 If Averaging State is <b>OFF</b> , the value of the mean power averaged is the same as the value of the mean power	dBm	4	<b>Number of samples</b> The number of data points in the captured signal. This value is important when analyzing signal results (that is, when you send a query using <b>n</b> = 0, 2, etc.)		5	<b>Peak-to-mean ratio</b> The ratio of the maximum signal level to the mean power. Valid values are only obtained with Averaging State <b>OFF</b> . If Averaging State is <b>ON</b> , the peak-to-mean ratio is calculated using the highest peak value, rather than the displayed average peak value	dB	6	<b>Maximum value</b> The maximum of the most recently acquired data	dBm	7	<b>Minimum value</b> The minimum of the most recently acquired data	dBm
<b>#</b>	<b>Item</b>	<b>Unit, if any</b>																							
1	<b>Sample Time</b> A floating-point number representing the time between samples. This value is important when analyzing signal results (that is, when you send a query using <b>n</b> = 0, 2, etc.)																								
2	<b>Mean Power</b> The power across the entire trace. If Averaging State is <b>ON</b> , as set by " <b>Avg/Hold Number (Averaging On/Off)</b> " on page 2234, the power is for the latest acquisition	dBm																							
3	<b>Mean Power Averaged</b> The power across the entire trace If Averaging State is <b>ON</b> , the power for N averages (the latest acquisition), as set by " <b>Avg/Hold Number (Averaging On/Off)</b> " on page 2234 If Averaging State is <b>OFF</b> , the value of the mean power averaged is the same as the value of the mean power	dBm																							
4	<b>Number of samples</b> The number of data points in the captured signal. This value is important when analyzing signal results (that is, when you send a query using <b>n</b> = 0, 2, etc.)																								
5	<b>Peak-to-mean ratio</b> The ratio of the maximum signal level to the mean power. Valid values are only obtained with Averaging State <b>OFF</b> . If Averaging State is <b>ON</b> , the peak-to-mean ratio is calculated using the highest peak value, rather than the displayed average peak value	dB																							
6	<b>Maximum value</b> The maximum of the most recently acquired data	dBm																							
7	<b>Minimum value</b> The minimum of the most recently acquired data	dBm																							
2	Returns trace point values of the entire captured signal envelope trace data Floating-point numbers, representing the power of the signal (in dBm). There are N data points, where N is the number of samples. The period between the samples is defined by the <b>Sample Time</b> (see <b>n</b> = 1 above)																								
3	Returns unprocessed I/Q trace data, as a series of trace point values, in volts The I values are listed first in each pair, as the even-indexed values (starting at 0). The Q values are odd-indexed. The number of points returned is defined by " <b>Meas Time</b> " on page 2237 * " <b>Sample Rate</b> " on page 2237, and is one point less than index 0																								

**n Results Returned**

4 Returns conjugated I/Q trace data, in Volts, if "Invert Spectrum" on page 2274 is set to **INVert**. Otherwise, returns the same unprocessed I/Q trace data as n = 0 above

### 3.12.1 Views

You can select the measurement view you want to use from the **Mode/Measurement/View** selector screen. You can also specify the view programmatically, using one of these commands:

#### View Selection by name

Specify the desired View by its name:

Remote Command	<code>:DISPlay:WAVeform:VIEW[:SElect] RFENvelope   IQ</code> <code>:DISPlay:WAVeform:VIEW[:SElect]?</code>
Example	<code>:DISP:WAV:VIEW RFEN</code> <code>:DISP:WAV:VIEW?</code>
Preset	<code>RFENvelope</code>
State Saved	Saved in instrument state
Range	RF Envelope   I/Q Waveform

#### View Selection by number

Specify the desired View by its number:

Remote Command	<code>:DISPlay:WAVeform:VIEW:NSElect &lt;integer&gt;</code> <code>:DISPlay:WAVeform:VIEW:NSElect?</code>
Example	<code>:DISP:WAV:VIEW:NSEL 1</code> <code>:DISP:WAV:VIEW:NSEL?</code>
Notes	View 1 is the RF Envelope View View 2 is the I/Q Waveform View
Preset	1
State Saved	Saved in instrument state
Min/Max	1/2

#### 3.12.1.1 RF Envelope

Windows: "RF Envelope" on page 2151, "Metrics" on page 2152

Shows an RF envelope (magnitude) window and a metrics table showing the measured values for the mean power and peak-to-mean power.

### 3.12.1.2 I/Q Waveform

Windows: ["I/Q Waveform" on page 2152](#)

Shows a window with I and Q voltages vs time. SCPI commands can also be used to query the I/Q pairs while in this View.


## 3.12.2 Windows

The following windows are available in this measurement.

- ["RF Envelope" on page 2151](#)
- ["Metrics" on page 2152](#)
- ["I/Q Waveform" on page 2152](#)


### 3.12.2.1 RF Envelope

Displays an amplitude-vs time (time domain) graph of the envelope (magnitude) of the RF waveform:

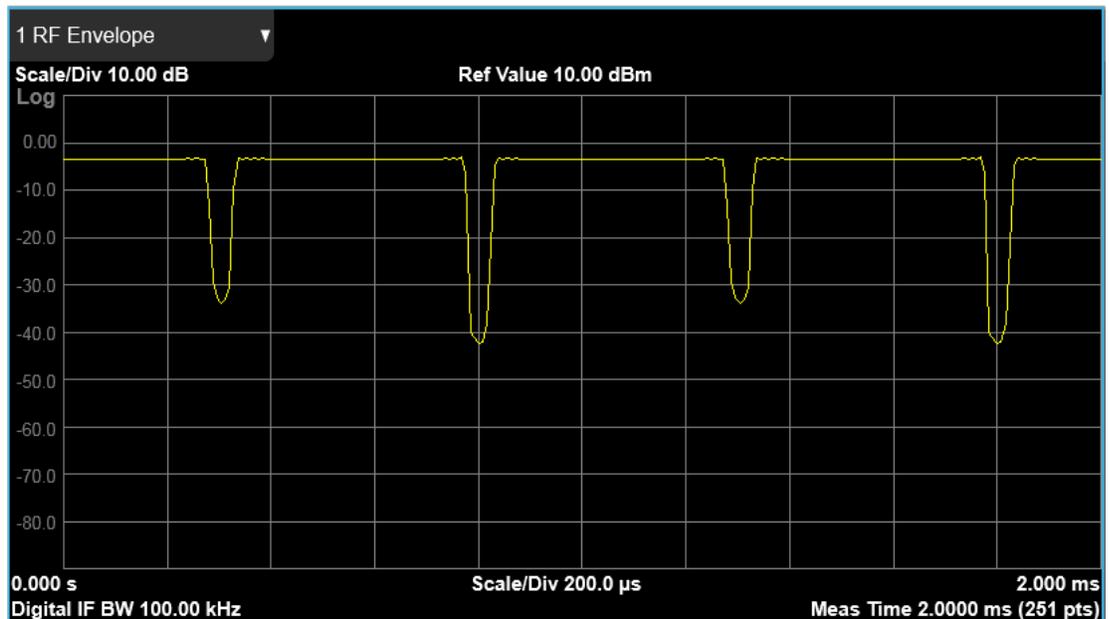

### 3.12.2.2 Metrics

Shows the measured values for the mean power and peak-to-mean power of the RF Envelope result of the waveform (time domain) measurements.

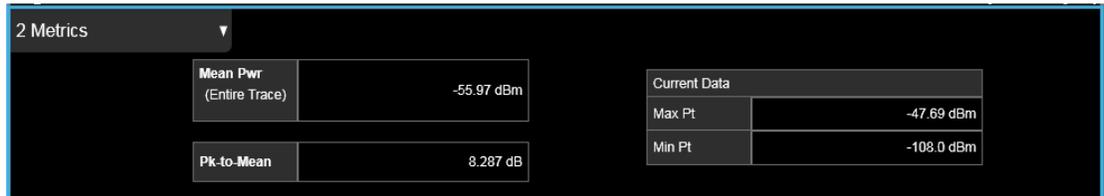


#### Numeric Results

Name	Type	Description	Unit	Format
Mean Pwr	Float64	The mean power (dBm). This is either the power across the entire trace, or the power between markers if the markers are enabled	dBm	XX.XX dBm
Pk-to-Mean	Float64	This is the ratio of the maximum signal level to the mean power	dB	XX.XX dB
Max Pt	Float64	The maximum of the most recently acquired data	dBm	XX.XX dBm
Min Pt	Float64	The minimum of the most recently acquired data	dBm	XX.XX dBm

### 3.12.2.3 I/Q Waveform

Shows an amplitude-vs time (time domain) graph of the quadrature (I and Q) components of the RF waveform. This allows you to measure the phase of the waveform as well as its magnitude. The yellow trace is the I (real) component and the blue trace is the Q (imaginary) component.

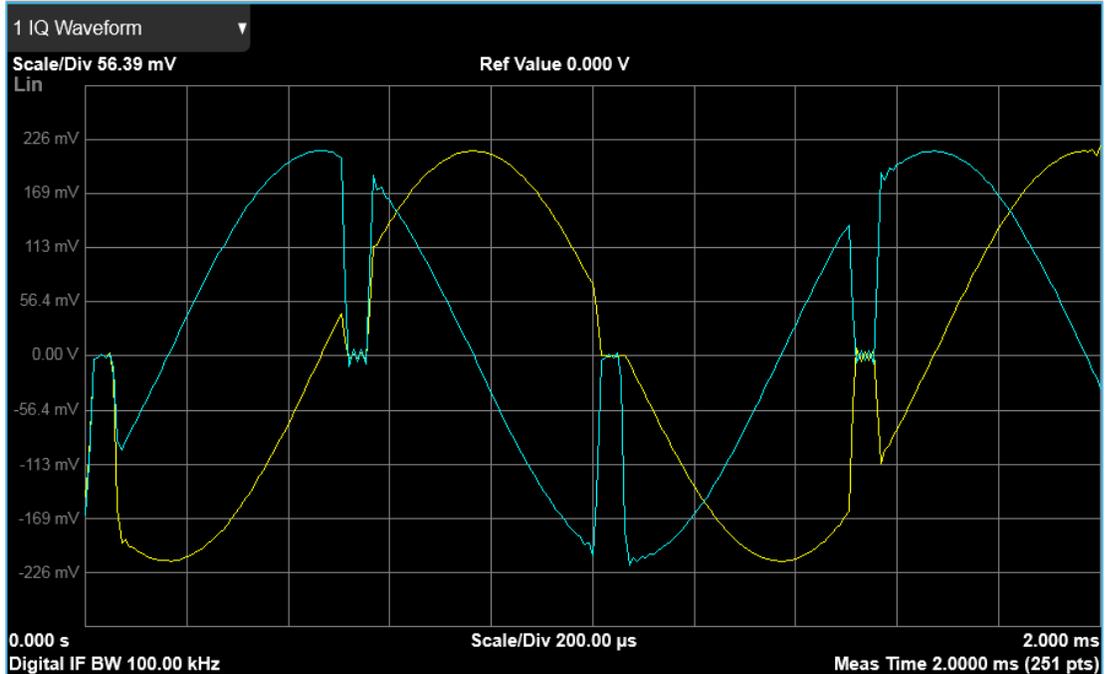

### 3.12.3 Amplitude

Activates the **Amplitude** menu and selects **Reference Level** or **Reference Value** as the active function, depending on the measurement.

Some features in this menu apply to multiple measurements. Some other features apply only to specific measurements and their controls are blanked or grayed-out in measurements that do not support the feature.

#### 3.12.3.1 Y Scale

Contains controls that pertain to the Y axis parameters of the measurement. These parameters control how data on the vertical (Y) axis is displayed and control instrument settings that affect the vertical axis.

#### Ref Value

Sets the value for the absolute power reference. The functionality depends on the selected window. The reference line is at the top, center, or bottom of the graticule, depending on the value of "**Ref Position**" on page 2156.

## RF Envelope

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel &lt;amptd&gt;</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:RLEV -50 dBm</code>
Couplings	When " <b>Auto Scaling</b> " on page 2157 is <b>ON</b> (default), this value is automatically determined by the measurement result. When you set a value manually, <b>Auto Scaling</b> changes to <b>OFF</b>
Preset	10.00 dBm
State Saved	Saved in instrument state
Min/Max	-/+250.00 dBm
Annotation	Ref <value> top of graph

## IQ Waveform

Remote Command	<code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RLEVel &lt;voltage&gt;</code>
Example	<code>:DISP:WAV:VIEW2:WIND:TRAC:Y:RLEV 25 V</code>
Couplings	When " <b>Auto Scaling</b> " on page 2157 is <b>On</b> (default), this value is automatically determined by the measurement result. When you set a value manually, <b>Auto Scaling</b> changes to <b>Off</b>
Preset	0 V
State Saved	Saved in instrument state
Min/Max	-/+250.00 V
Annotation	Ref <value> top of graph

## Scale/Div

Enables you to set the units per division of vertical scale in the logarithmic display. However, since "**Auto Scaling**" on page 2157 defaults to **ON**, this value is automatically determined by the measurement result. When you set a value manually, **Auto Scaling** automatically changes to **OFF**.

The SCPI command and default parameters are dependent on whether the View is "**RF Envelope**" on page 2150 or "**I/Q Waveform**" on page 2151.

## RF Envelope

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIVision &lt;rel_ampl&gt;</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.12 IQ Waveform Measurement

Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:PDIV 5</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to "Scale Range" on page 2155 as follows Scale/Div = Scale Range/10 (number of divisions) When "Auto Scaling" on page 2157 is On, this value is automatically determined by the measurement result When you change a value, <b>Auto Scaling</b> automatically changes to Off
Preset	10.00 dB
State Saved	Saved in instrument state
Min	0.10 dB
Max	20.00 dB
Annotation	<value> dB/ left upper of graph

### IQ Waveform

Remote Command	<code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision &lt;voltage&gt;</code> <code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:PDIVision?</code>
Example	<code>:DISP:WAV:VIEW2:WIND:TRAC:Y:PDIV 25mV</code> <code>:DISP:WAV:VIEW2:WIND:TRAC:Y:PDIV?</code>
Couplings	Coupled to "Scale Range" on page 2155 as follows Scale/Div = Scale Range/10 (number of divisions) When "Auto Scaling" on page 2157 is On, this value is automatically determined by the measurement result When you change a value, <b>Auto Scaling</b> automatically changes to Off
Preset	100.0 mV
State Saved	Saved in instrument state
Min	1.0 nV
Max	20 V
Annotation	<value> dB/ left upper of graph

### Scale Range

Sets the Y-Axis scale range.

The SCPI command and default parameters depend on whether the View is "RF Envelope" on page 2150 or "I/Q Waveform" on page 2151.

## RF Envelope

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RANGe &lt;rel_amp1&gt;</code> <code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:RANG 100</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to "Scale/Div" on page 2154 as follows Scale Range = Scale/Div * 10 (number of divisions) When you change a value, "Auto Scaling" on page 2157 automatically changes to OFF
Preset	100 dB
State Saved	Saved in instrument state
Min	1
Max	200

## IQ Waveform

Remote Command	<code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RANGe &lt;voltage&gt;</code> <code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RANGe?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:RANG 1000</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:RANG?</code>
Couplings	Coupled to "Scale/Div" on page 2154 as follows Scale Range = Scale/Div * 10 (number of divisions) When you change a value, "Auto Scaling" on page 2157 automatically changes to OFF
Preset	1 V
State Saved	Saved in instrument state
Min	10 nV
Max	200 V

## Ref Position

Enables you to position the reference level at the top, center, or bottom of the Y Scale display. Changing the reference position does not change the reference level value.

The SCPI command and default parameters depend on whether the View is "RF Envelope" on page 2150 or "I/Q Waveform" on page 2151.

## RF Envelope

Remote Command	<code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTER   BOTTom</code> <code>:DISPlay:WAVeform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:RPOS?</code>
Preset	<code>TOP</code>
State Saved	Saved in instrument state
Range	<code>Top Center Bottom</code>
Annotation	> and < are displayed both side of graph to indicate Reference Position

## IQ Waveform

Remote Command	<code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition TOP   CENTer   BOTTom</code> <code>:DISPlay:WAVeform:VIEW2:WINDow[1]:TRACe:Y[:SCALe]:RPOSition?</code>
Example	<code>:DISP:WAV:VIEW2:WIND:TRAC:Y:RPOS CENT</code> <code>:DISP:WAV:VIEW2:WIND:TRAC:Y:RPOS?</code>
Preset	<code>CENT</code>
State Saved	Saved in instrument state
Range	<code>Top Center Bottom</code>
Annotation	> and < are displayed both side of graph to indicate Reference Position

## Auto Scaling

Enables you to toggle Auto Scaling On or Off. When the **Restart** front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results.

Remote Command	<code>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE 0   1   OFF   ON</code> <code>:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:Y[:SCALe]:COUPlE?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:Y:COUP OFF</code> <code>:DISP:WAV:VIEW:WIND:TRAC:Y:COUP?</code>
Couplings	When " <b>Auto Scaling</b> " on page 2157 is On, and the <b>Restart</b> front-panel key is pressed, this function automatically sets the scale per division to 10 dB and determines the reference values based on the measurement results When you change a value of <b>Scale/Div</b> , <b>Ref Value</b> , or <b>Scale Range</b> , <b>Auto Scaling</b> automatically changes

	to OFF
Preset	OFF
State Saved	Saved in instrument state
Range	OFF   ON

### 3.12.3.2 Attenuation

Controls the attenuator functions and interactions between the attenuation system components.

There are two attenuator configurations in the X-Series. One is a Dual-Attenuator configuration consisting of a mechanical attenuator and an optional electronic attenuator. The other configuration uses a single attenuator with combined mechanical and electronic sections that controls all the attenuation functions. Different models in the X-Series come with different configurations.

- See ["Dual-Attenuator Configurations" on page 2158](#)
- See ["Single-Attenuator Configuration" on page 2159](#)


Most attenuation settings are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by **Meas Preset**.

Only available when the hardware set includes an input attenuator, which is typically only the case for Keysight’s benchtop instruments. For example, this tab does *not* appear in VXT models M9420A/10A/11A/15A/16A, M9410E/11E/15E/16E, nor in UXM. In UXM, all **Attenuation** and **Range** settings are disabled, as the expected input power level is handled by the Call Processing App that drives the DUT power control.


Dependencies	In measurements that support the I/Q inputs, unavailable when I/Q is the selected input. Replaced by the <b>Range</b> tab in that case
--------------	--

#### Dual-Attenuator Configurations

Configuration 1: Mechanical attenuator + optional electronic attenuator

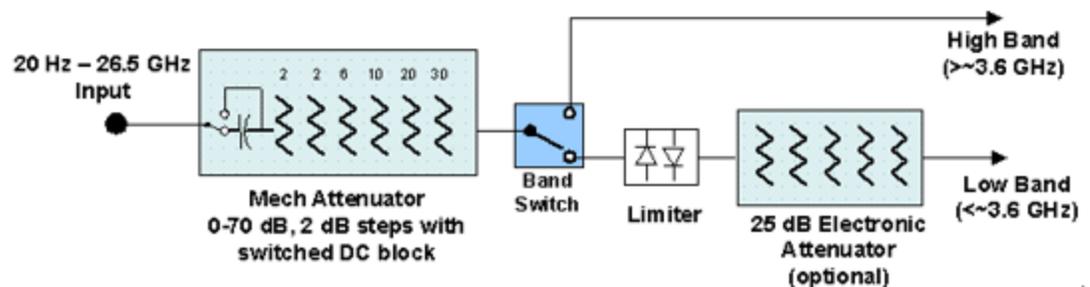


Configuration 2: Mechanical attenuator, no optional electronic attenuator

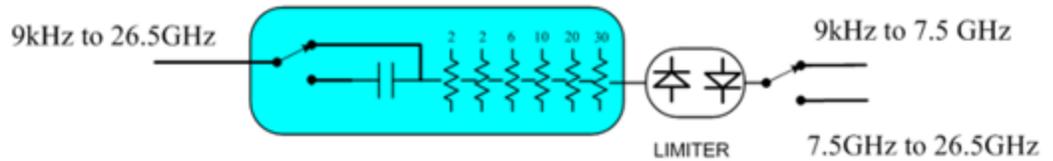

Note that Configuration 2 is not strictly speaking a dual-section attenuator, since there is no electronic section available. However, it behaves exactly like Configuration 1 without the Electronic Attenuator Option EA3, therefore for the sake of this document it is grouped into the “Dual-Attenuator” configuration.


**Single-Attenuator Configuration**

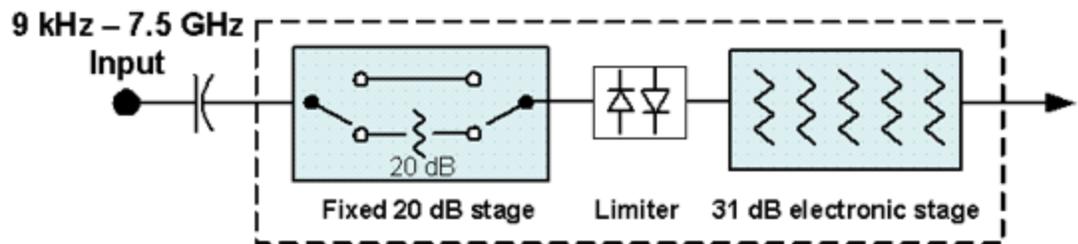

You can tell which attenuator configuration you have by pressing the Attenuation tab, which (in most Modes) opens the Attenuation menu. If the first control in the Attenuation menu says **Mech Atten** you have the Dual-Attenuator configuration. If the first control says **Atten** you have the Single-Attenuator configuration.



**Dual Attenuator**

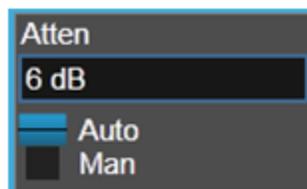

**Single Attenuator**

(Note that depending on the measurement, there may be no Auto/Man functionality on the Mech Atten control.)

In the Single-Attenuator configuration, you control the attenuation with a single control, as the fixed stage has only two states. In the Dual-Attenuator configuration, both stages have significant range, so you are given separate control of the mechanical and electronic attenuator stages.

When you have the Dual-Attenuator configuration, you may still have only a Single-Attenuator, because unless Option EA3 (the Electronic Attenuator option) is available, and you purchase it, you will have only the mechanical attenuator.

## Full Range Atten

This control and **Attenuator Summary** only appear in N9041B, when the RF input is selected, the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed. The Full Range Attenuator adds a second input attenuator in front of RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

Remote Command	<code>[ :SENSe]:POWer[:RF]:FRATten &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:FRATten?</code>
Example	<code>:POW:FRAT 14</code> <code>:POW:FRAT?</code>
Notes	When you enter an amplitude value that falls between valid values, the value will be incremented to the next smallest valid value
Dependencies	Only appears if input RF is selected, RF Input Port 2 is selected, and the Full Range Attenuator exists
Couplings	This value is never changed by any coupling, but other couplings use this value. See <b>Reference Level</b> and " <b>Mech Atten</b> " on page 2161 command descriptions
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB
Annotation	<p>When the <b>Input</b> is <b>RF</b>, and the <b>Input Port</b> is <b>RF Input 2</b>, and the Full Range Attenuator is installed: On the Meas Bar, the field "Atten" displays as follows:</p> <ul style="list-style-type: none"> <li>- If the sweep is entirely &lt; 50 GHz, the value shown after "Atten:" is equal to Mech Atten + Elec Atten + Full Range Atten</li> <li>- If the sweep is entirely &gt; 50 GHz, the value shown after "Atten:" is equal to Full Range Atten</li> <li>- If the sweep straddles 50 GHz, the value shown after "Atten:" is preceded by the symbol "&gt;=" and is equal to Full Range Atten</li> </ul> <p>In the <b>Amplitude</b>, "<b>Y Scale</b>" on page 2153 menu, and the Atten <b>Meas Bar</b> dropdown menu panel, a summary is displayed as follows:</p> <p>"Total Atten below 50 GHz" followed by the value of Full Range Atten + Mech Atten + Elec Atten</p> <p>"Total Atten above 50 GHz" followed by the value of Full Range Atten</p> <p>For example, if Mech Atten = 6 dB, Elec Atten = 4 dB, and Full Range Atten = 20 dB, the summary below is shown:</p> <ul style="list-style-type: none"> <li>- Attenuator summary:</li> </ul>

- 
- Total Atten below 50 GHz: 30 dB
  - Total Atten above 50 GHz: 20 dB

## Mech Atten

Labeled **Mech Atten** in Dual-Attenuator models, and **Atten** in Single-Attenuator models. In the Dual-Attenuator configuration, this control only affects the mechanical attenuator.

Lets you modify the attenuation applied to the RF input signal path. This value is normally auto-coupled to **Ref Level**, "[Internal Preamp](#)" on page 2183 Gain, any External Gain that is entered, and **Max Mixer Level** (if available), as described in the table below.

See "[Attenuator Configurations and Auto/Man](#)" on page 2163

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:ATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:ATTenuation?</code>
Example	<code>:POW:ATT 20</code>  Dual-Attenuator configuration: sets the mechanical attenuator to 20 dB Single-Attenuator mode: sets the main attenuation to 20 dB (see below for definition of "main" attenuation)  In either case, if the attenuator was in Auto, it is set to Manual
Dependencies	Some measurements do not support <b>Auto</b> setting of <b>Mech Atten</b> . In these measurements, the <b>Auto/Man</b> selection is not available, and the <b>Auto/Man</b> toggle function is not available  In Dual-Attenuator configurations, when the electronic attenuator is enabled, the mechanical attenuator has no auto setting, and the <b>Auto/Man</b> toggle function is not available. The state of <b>Auto/Man</b> is remembered and restored when the electronic attenuator is once again disabled. This is described in more detail in " <a href="#">Elec Atten</a> " on page 2164  See " <a href="#">Attenuator Configurations and Auto/Man</a> " on page 2163 for more information on the <b>Auto/Man</b> functionality
Couplings	If the RF Input Port is the RF Input: <ul style="list-style-type: none"> <li>- If the USB Preamp is connected to USB, use 0 dB for <b>Mech Atten</b></li> <li>- Otherwise compute the auto-selected value of <b>Mech Atten</b> based on <b>Reference Level</b>, <b>Int Preamp</b>, <b>External Gain</b>, <b>Ref Level Offset</b>, <b>Max Mixer Level</b>, <b>μW Path Control</b> and <b>IF Gain</b> settings. Limit this value to be no less than 6 dB (total attenuation below 6 dB can never be chosen by Auto)</li> <li>- In N9041B, if the RF Input Port is RF Input 2, use the formula above and subtract the value of "<a href="#">Full Range Atten</a>" on page 2160 from the result to determine the <b>Mech Atten</b>. Limit the value so that it is never lower than 0 dB and so that total attenuation, including <b>Full Range Atten</b>, is never less than 6 dB (total attenuation, including <b>Full Range Atten</b> below 6 dB, can never be chosen by Auto)</li> </ul> <p>In External Mixing and BBIQ, where the attenuator is not in the signal path, the attenuator setting changes as described above when <b>Mech Atten</b> is in <b>Auto</b>, but no changes are made to the actual</p>

	<p>attenuator hardware setting until the input is changed back to the RF Input</p> <p>For CXA-m with Option FSA (Fine-Step Attenuator or 2 dB steps), the FSA-like behavior is only available when the frequency setting is <math>\leq 7.5</math> GHz. So, when the frequency is changed from below 7.5 GHz to above 7.5 GHz, the attenuation setting changes to a multiple of 10 dB that is no smaller than the previous setting. For example, 4 dB attenuation changes to 10 dB</p>							
Preset	<p><b>Auto</b></p> <p>The Auto value is 10 dB</p>							
State Saved	<p>Saved in instrument state</p>							
Min	<p>0 dB</p> <p>The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. Values below 6 dB must be directly entered from the keypad or via SCPI. This protects against setting a dangerously small attenuation value, which can put the instrument at risk of damage to input circuitry. If the current mechanical attenuation is below 6 dB, it can be increased with the knob and step keys, but not decreased</p>							
Max	<table border="1"> <tr> <td>CXA Option 503 or 507</td> <td>50 dB</td> </tr> <tr> <td>EXA</td> <td>60 dB</td> </tr> <tr> <td>All other models</td> <td>70 dB</td> </tr> </table> <p>Note that in the Single-Attenuator configuration, the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB</p>		CXA Option 503 or 507	50 dB	EXA	60 dB	All other models	70 dB
CXA Option 503 or 507	50 dB							
EXA	60 dB							
All other models	70 dB							
Annotation	<p>The current value for Total Atten is displayed in the Measurement Bar at the top of the display. A value appears for Electronic Attenuation only if the Electronic Attenuator is enabled. The annotation appears as:</p> <p><i>Atten: &lt;total&gt; dB (e&lt;elec&gt;)</i></p> <p>The e letter is in amber in Single-Attenuator configurations</p> <p>For example:</p> <p>Dual-Attenuator configuration:</p> <p><i>Atten: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the electronic attenuation is at 14 dB</p> <p>Single-Attenuator configuration:</p> <p><i>A: 24 dB (e14)</i></p> <p>Indicating the total attenuation is at 24 dB and the “soft” attenuation is at 14 dB (see below for definition of “soft” attenuation)</p> <p>When in Manual, a # sign appears in front of Atten in the annotation</p> <p>Auto Function</p>							
Remote Command	<pre>[ :SENSe]:POWer[:RF]:ATTenuation:AUTO OFF   ON   0   1 [:SENSe]:POWer[:RF]:ATTenuation:AUTO?</pre>							
Example	<p>Turn <b>Auto Mech AttenON</b>:</p> <pre>:POW:ATT:AUTO ON</pre>							

---

Dependencies	:POW:ATT:AUTO is only available in measurements that support <b>Auto</b> , such as Swept SA
Preset	ON

---

### Attenuator Configurations and Auto/Man

As described under "[Attenuation](#)" on page 2158, there are two distinct attenuator configurations available in the X-Series, the Single Attenuator and Dual-Attenuator configurations.

In Dual-Attenuator configurations, we have mechanical attenuation and electronic attenuation, and current total attenuation is the sum of electronic + mechanical attenuation.

In Single-Attenuator configurations, we refer to the attenuation set using "[Mech Atten](#)" on page 2161 (or :POW:ATT) as the "main" attenuation; and the attenuation that is set by :POW:EATT as the "soft" attenuation (:POW:EATT is honored even in the Single-Attenuator configuration, for compatibility purposes). Then current total attenuation is the sum of main + soft attenuation.

See "[Elec Atten](#)" on page 2164 for more about "soft" attenuation.

NOTE

In some measurements, the **Mech Atten** control has an **Auto/Man** function. In these measurements, an **Auto/Man** switch is shown on the **Mech Atten** control:



Note that in configurations that include an Electronic Attenuator, this switch is only shown when the Electronic Attenuator is disabled.

In other measurements, **Mech Atten** has no **Auto/Man** function. In these measurements, no switch is shown on the **Mech Atten** control:



**Mech Atten** also appears with no switch, as above, in configurations that include an Electronic Attenuator but when the Electronic Attenuator is enabled.

## Elec Atten

Controls the Electronic Attenuator in Dual-Attenuator configurations. Does not appear in Single-Attenuator configurations, because the control of both the mechanical and electronic stages of the Single-Attenuator is integrated into the single **Atten** control.

This control includes an **Enable/Disable** toggle switch; it is only possible to enter a value for the Electronic Attenuator when this switch is in the **Enable** position.

For more details of the Electronic Attenuator, see ["More Information" on page 2165](#)

Remote Command	<code>[ :SENSe]:POWer[:RF]:EATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:POWer[:RF]:EATTenuation?</code>
Example	<code>:POW:EATT 10</code> <code>:POW:EATT?</code>
Notes	Electronic Attenuation's specification is defined only when <b>Mech Atten</b> is 6 dB
Dependencies	<p>Only appears in Dual-Attenuator models with an Electronic Attenuator installed and licensed. Does not appear in models with the Single-Attenuator configuration, because in the Single-Attenuator configuration there is no "electronic attenuator"; there is only a single integrated attenuator (which has both a mechanical and electronic stage). However, in the Single-Attenuator configuration, <b>EATT</b> SCPI commands are accepted for compatibility with other X-series instruments, and set a "soft" attenuation. The "soft" attenuation is treated as an addition to the "main" attenuation value set by the <b>Attenuation</b> control or <code>:POW:ATT</code>, and affects the total attenuation displayed on the <b>Attenuation</b> control and the Meas Bar</p> <p>The electronic attenuator, and the "soft" attenuation function provided in Single-Attenuator configurations, are unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model). If the low band range is from 0-3.6 GHz, and Stop Frequency of the instrument is &gt; 3.6 GHz, then the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If <a href="#">"Internal Preamp" on page 2183</a> is <b>ON</b> (that is, set to Low Band or Full), the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out</p> <p>If either of the above is true, and the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is returned</p> <p>If both the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>If the electronic/soft Attenuator is enabled, then the <b>Stop Freq</b> of the instrument is limited to 3.6 GHz and <b>Internal Preamp</b> is unavailable</p> <p>If <a href="#">"LNA" on page 2185</a> is <b>ON</b>, the electronic attenuator (and the "soft" attenuation function provided in Single-Attenuator configurations) is unavailable. In this case the <b>Enabled/Disabled</b> section of the <b>Elec Atten</b> control will be <b>OFF</b> and grayed-out. This coupling works in the following modes/measurements:</p> <ul style="list-style-type: none"> <li>- Channel Power, Occupied BW, ACP, SEM, Spurious Emissions, Power Stat CCDF measurements in all Modes</li> <li>- Transmit On Off Power measurement in 5G NR Mode</li> </ul>

- Power vs. Time and Transmit Power measurement in GSM/EDGE Mode
- Burst Power measurement in Spectrum Analyzer Mode

The SCPI-only “soft” electronic attenuation for the single-attenuator configuration is not available in all measurements; in particular, it is not available in the Swept SA measurement

Couplings	Enabling and disabling the Electronic Attenuator affects the setting of the Mechanical Attenuator (in Dual-Attenuator configurations). This is described in more detail below and in " <a href="#">Mechanical Attenuator Transition Rules</a> " on page 2166
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Dual-Attenuator configuration: 24 dB Single-Attenuator configuration: the total of ATT and EATT cannot exceed 50 dB. So, if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and will be reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB
Annotation	See Annotation under the <b>Mech Atten</b> control description  Auto Function
Remote Command	<code>[:SENSe]:POWer[:RF]:EATTenuation:STATe OFF   ON   0   1</code> <code>[:SENSe]:POWer[:RF]:EATTenuation:STATe?</code>
Example	<code>:POW:EATT:STAT ON</code> <code>:POW:EATT:STAT?</code>
Preset	<b>OFF</b> (Disabled) for Swept SA measurement <b>ON</b> (Enabled) for all other measurements that support the electronic attenuator

**NOTE**

The maximum **Center Frequency** for Low Band can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum Low Band frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. This frequency is reflected in the disabled message displayed for Electrical Attenuator. For N9032B and N9042B IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the Low Band maximum frequency. In these cases, the Electrical Attenuator will remain disabled no matter the Center Frequency.

**More Information**

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear. These advantages primarily

aid in remote operation and are negligible for front panel use. See ["Using the Electronic Attenuator: Pros and Cons" on page 2167](#) for a detailed discussion of the pros and cons of using the electronic attenuator.

For the Single-Attenuator configuration, for SCPI backwards compatibility, the “soft” attenuation feature replaces the Dual-Attenuator configuration’s electronic attenuator. All the same couplings and limitations apply. See ["Attenuator Configurations and Auto/Man" on page 2163](#)

### **Mechanical Attenuator Transition Rules**

When the Electronic Attenuator is enabled, the Mechanical Attenuator transitions to a state that has no Auto function. Below are the rules for transitioning the Mechanical Attenuator. Note that the information below *only* applies to the Dual-Attenuator configurations, and *only* when the Electronic Attenuator is installed:

When the Electronic Attenuation is enabled from a disabled state:

- The Mechanical Attenuator is initialized to 10 dB (this is its optimal performance setting). You can then set it as desired with SCPI, numeric keypad, step keys, or knob, and it behaves as it normally would in manual mode
- The Auto/Man state of (Mech) Atten is saved
- The Auto/Man toggle on the (Mech) Atten control disappears, and the auto rules are disabled
- The Electronic Attenuator is set to 10 dB less than the previous value of the Mechanical Attenuator, within the limitation that it must stay within the range of 0 to 24 dB of attenuation

Examples in the Dual-Attenuator configuration:

- Mech Atten at 20 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 10 dB. New total attenuation equals the value before Elec Atten enabled
- Mech Atten at 0 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 0 dB. New total attenuation does not equal the value before Elec Atten enabled
- Mech Atten at 40 dB. Elec Atten enabled, Mech Atten set to 10 dB, and Elec Atten set to 24 dB. New total attenuation does not equal the value before Elec Atten enabled

When the Electronic Attenuation is disabled from an enabled state:

- The Elec Atten control is grayed out
- The Auto/Man state of (Mech) Atten is restored
- If now in Auto, (Mech) Atten recouples
- If now in Man, (Mech) Atten is set to the value of total attenuation that existed before the Elec Atten was disabled. The resulting value is rounded up to the smallest value possible given the (Mech) Atten Step setting - (That is, 57 dB changes to 58 dB when (Mech) Atten Step is 2 dB)

### Using the Electronic Attenuator: Pros and Cons

The electronic attenuator offers finer steps than the mechanical attenuator, has no acoustical noise, is faster, and is less subject to wear.

The “finer steps” advantage of the electronic attenuator is beneficial in optimizing the alignment of the instrument dynamic range to the signal power in the front panel as well as remote use. Thus, you can achieve improved relative signal measurement accuracy. Compared to a mechanical attenuator with 2 dB steps, the 1 dB resolution of the electronic attenuator only gives better resolution when the odd-decibel steps are used. Those odd-decibel steps are less accurately calibrated than the even-decibel steps, so one tradeoff for this superior relative accuracy is reduced absolute amplitude accuracy.

Another disadvantage of the electronic attenuator is that the spectrum analyzer loses its “Auto” setting, making operation less convenient.

Also, the relationship between the dynamic range specifications (TOI, SHI, compression, and noise) and instrument performance are less well-known with the electrical attenuator. With the mechanical attenuator, TOI, SHI, and compression threshold levels increase dB-for-dB with increasing attenuation, and the noise floor does as well. With the electronic attenuator, there is an excess attenuation of about 1 to 3 dB between 0 and 3.6 GHz, making the effective TOI, SHI, and so forth, less well known. Excess attenuation is the actual attenuation relative to stated attenuation. Excess attenuation is accounted for in the instrument calibration.

### Adjust Atten for Min Clipping

Sets the combination of mechanical and electronic attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an immediate action function, that is, it executes once, when the control is pressed.

The algorithms that are used for the adjustment are documented under ["Pre-Adjust for Min Clipping" on page 2168](#).

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Example	<code>:POW:RANG:OPT IMM</code>
Notes	Executing <b>Adjust Atten for Min Clipping</b> initiates the measurement
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes

## Adjust Atten

Allows you to select;

- Electric attenuator only
- Combination of Electric attenuator and Mechanical attenuator

when `[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE` is executed.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE EONLY   COMBined</code> <code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:TYPE?</code>
Example	<code>:POW:RANG:OPT:TYPE EONL</code> <code>:POW:RANG:OPT:TYPE?</code>
Dependencies	Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes
Preset	<code>COMBined</code>
State Saved	Saved in instrument state

## Pre-Adjust for Min Clipping

If this function is **ON**, it applies the adjustment described under "**Adjust Atten for Min Clipping**" on page 2167 each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

In Dual-Attenuator models, you can set **Elec+Mech Atten**, in which case both attenuators participate in the autoranging, or **Elec Atten Only**, in which case the mechanical attenuator does not participate in the autoranging. This latter case results in less wear on the mechanical attenuator and is usually faster.

See "**Adjustment Algorithm**" on page 2169

Selection	SCPI	Note
Off	<code>OFF</code>	This is the default setting
On	<code>ON</code>	Available in Single-Attenuator instruments. For compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is supported and mapped to

3 LTE & LTE-A TDD Mode  
3.12 IQ Waveform Measurement

Selection	SCPI	Note
Elec Atten Only	<b>ELECTrical</b>	<b>COMBined</b> Selects only the electric attenuator to participate in auto ranging. This offers less wear on the mechanical attenuator and is usually faster
Elec+Mech Atten	<b>COMBined</b>	In Dual-Attenuator models, this selects both attenuators to participate in the autoranging
Remote Command	[:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTrical   COMBined [:SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?	
Example	:POW:RANG:OPT:ATT OFF :POW:RANG:OPT:ATT?	
Notes	The parameter option <b>ELECTrical</b> sets this function to <b>ON</b> in Single-Attenuator models The parameter option <b>COMBined</b> is mapped to <b>ELECTrical</b> in Single-Attenuator models. If you send <b>COMBined</b> , it sets the function to <b>ON</b> and returns <b>ELEC</b> to a query For SCPI compatibility with models that do not have an input attenuator, the <b>ON</b> parameter is honored and mapped to <b>COMBined</b>	
Dependencies	Only appears in Dual-Attenuator models with an Electronic Attenuator installed In instruments with Dual-Attenuator model, when "Elec Atten" on page 2164 is <b>OFF</b> or grayed-out, "Pre-Adjust for Min Clipping" on page 2168 is grayed-out Does not appear in the Swept SA, RTSA, Monitor Spectrum and Complex Spectrum measurements Appears in the Waveform measurement in BASIC and 5G NR Modes	
Preset	<b>OFF</b> when Elec Atten is Disabled at preset, otherwise <b>ELEC</b>	
State Saved	Saved in instrument state	
Range	Dual-Attenuator models:	Off   Elec Atten Only   Mech + Elec Atten
	Single-Attenuator models:	Off   On


### Backwards Compatibility Command

Notes	<b>ON</b> aliases to "Elec Atten Only" (:POW:RANG:OPT:ATT ELEC) <b>OFF</b> aliases to "Off" (:POW:RANG:OPT:ATT OFF) :POW:RANG:AUTO? returns true if :POW:RANG:OPT:ATT is not <b>OFF</b>
Backwards Compatibility SCPI	[:SENSe]:POWer[:RF]:RANGe:AUTO ON   OFF   1   0 [:SENSe]:POWer[:RF]:RANGe:AUTO?

### Adjustment Algorithm

The algorithms for the adjustment are documented below:


### Single-Attenuator Models

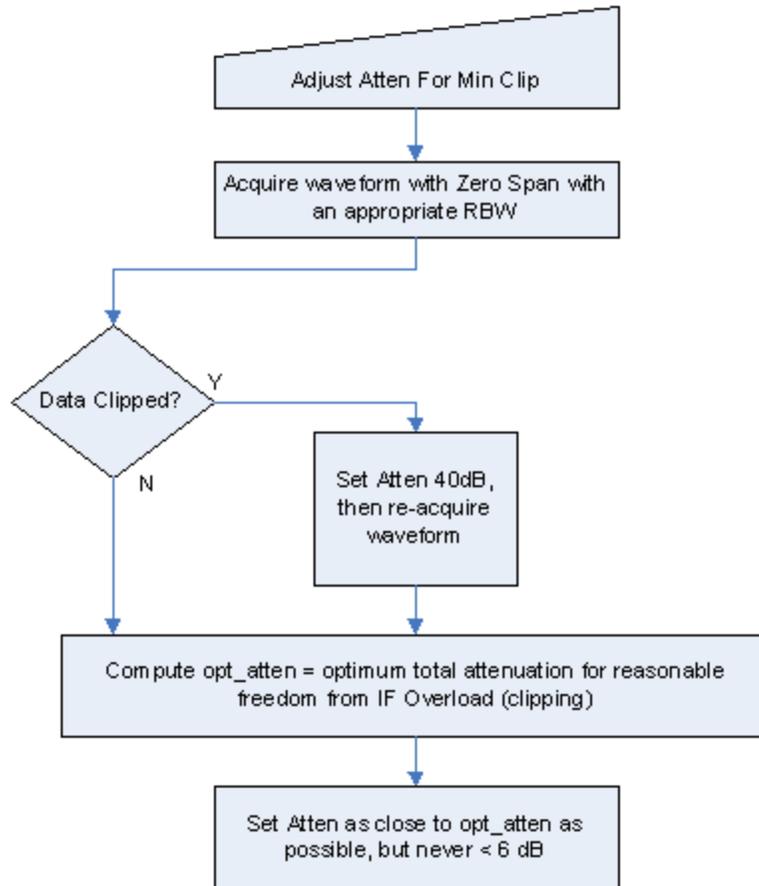

### Dual-Attenuator models

"Adjust Atten for Min Clipping" on page 2167 or "Pre-Adjust for Min Clipping" on page 2168 selection is Mech + Elec Atten:


3 LTE & LTE-A TDD Mode  
 3.12 IQ Waveform Measurement

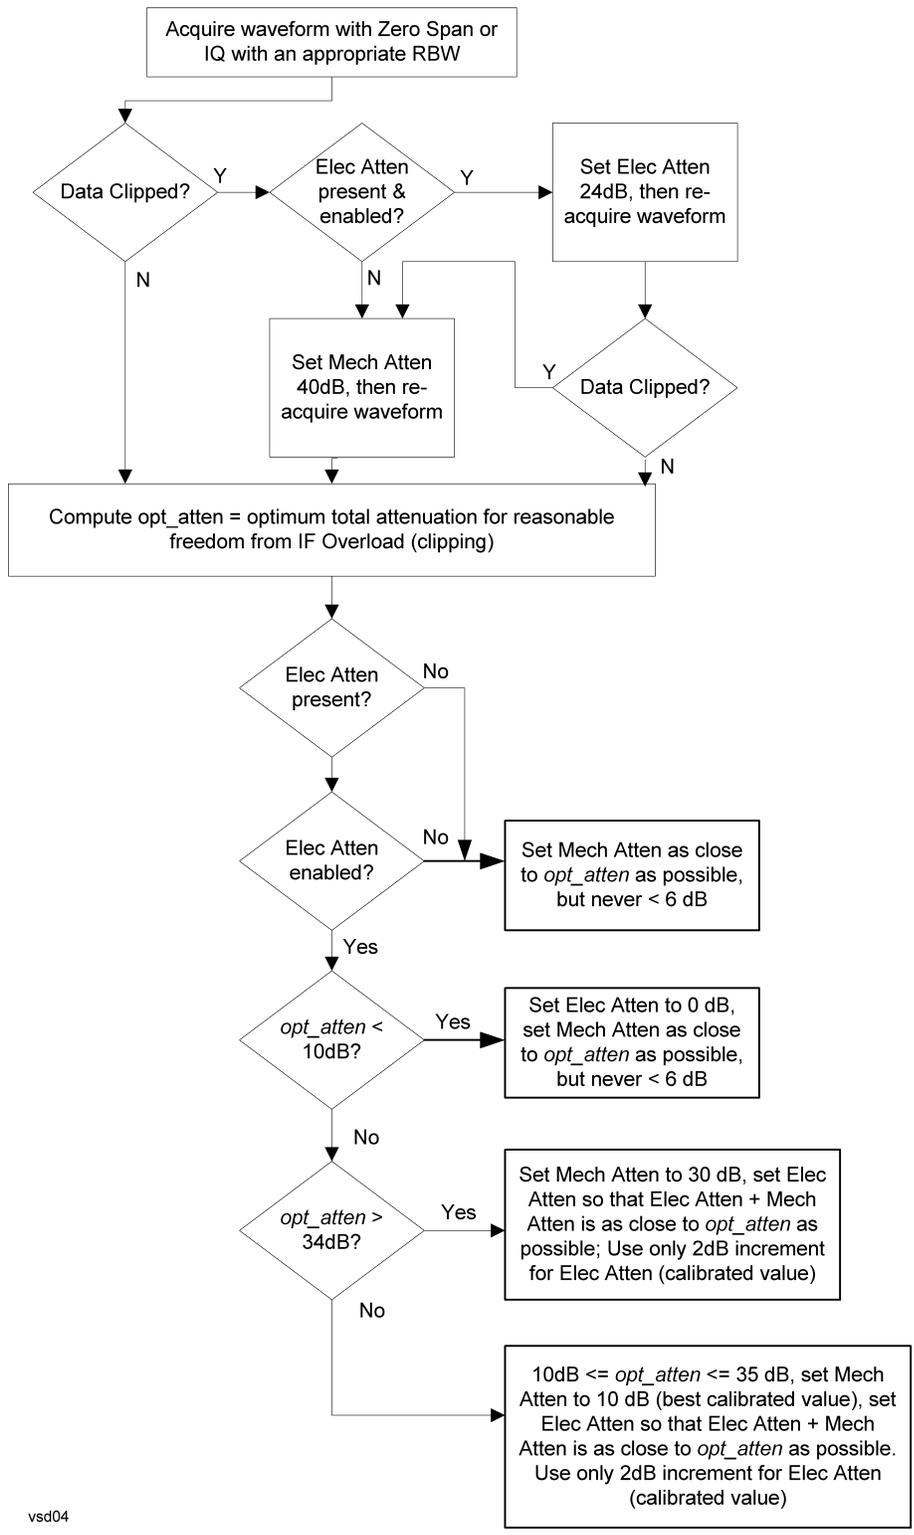

vsd04

"Pre-Adjust for Min Clipping" on page 2168 selection is Elec Only.

Note that the **Mech Atten** value is not adjusted, and the value previously set is used. Therefore, there is a case that IF Overload is still observed depending on the input signal level and the Mech Atten setting.

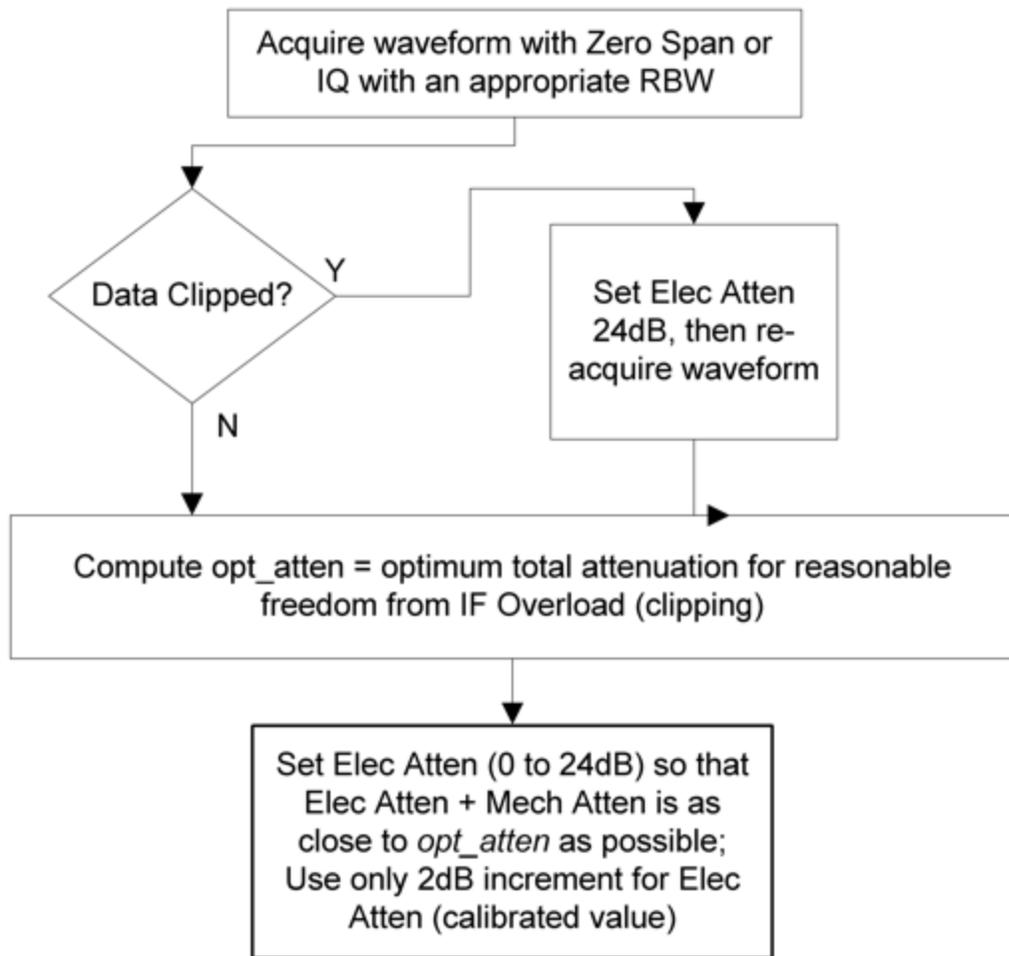

### Mech Atten Step

Controls the step size used when making adjustments to the input attenuation.

Labeled **Mech Atten Step** in Dual-Attenuator models and **Atten Step** in Single-Attenuator models. In the Dual-Attenuator configuration, only affects the step size of the mechanical attenuator.

---

Remote Command `[:SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement] 10 dB | 2 dB`

	<code>[ :SENSe]:POWer[:RF]:ATTenuation:STEP[:INCRement]?</code>
Example	<code>:POW:ATT:STEP 2</code> <code>:POW:ATT:STEP?</code>
Notes	Has a toggle control on the front panel, but takes a specific value (in dB) when used remotely. The only valid values are 2 and 10
Dependencies	Blanked in EXA, CXA and CXA-m if option FSA (2 dB steps) is not present. If blanked, attempts to set it via SCPI yield an error
Couplings	When the attenuation step size changes, the current mechanical attenuation value is adjusted (if necessary) to be quantized to the new step size. That is, if step is set to 10 dB, mech atten is increased if necessary so it is a multiple of 10 dB
Preset	EXA, CXA and CXA-m: 10 dB (2 dB with option FSA) All other models: 2 dB
State Saved	Saved in instrument state

### 3.12.3.3 Range (Baseband Input models)

Only available when Option BBA is present (I/Q Baseband Inputs), the current measurement supports option BBA, and I/Q is the selected input. In these cases, replaces the **Attenuation** tab.

Each input channel (I and Q) has four internal gain ranges. The maximum allowed voltage in each gain range is slightly more than the nominal value, so the break point between ranges is a few millivolts higher than the nominal (setting a peak voltage of 0.502 mV will still map to the 0.5 V Peak range).

Gain Setting	Volts RMS	Volts Peak	Volts Peak - Peak	dBm (50Ω)	Break Point
0 dB	0.7071	1.0	2.0	10	n/a
6 dB	0.3536	0.5	1.0	4	0.502 V Peak
12 dB	0.1768	0.25	0.5	-2	0.252 V Peak
18 dB	0.0884	0.125	0.25	-8	0.127 V Peak

Dependencies	Available only when the selected input is I/Q. If the current measurement does not support baseband inputs, an error will be displayed: "No result; Meas invalid with I/Q inputs"
State Saved	No

### Range Auto/Man

The **Auto** setting for **Range** causes the range to be set based on the Y Scale settings. When **Range** is **Auto**, the I & Q Range are set based on the top of the Y Scale when the Y scale is in dB units (for example, power), or to the max(abs(top), abs(bottom)) when the Y scale reference is not at the top of the screen.

Not all measurements support **Range Auto/Man**. If **Auto** is not supported in the current measurement, this control is grayed-out, displaying **Man**, and **MAN** is returned to a SCPI query, but this does *not* change the Auto/Man setting for **Range**. When you switch to a measurement that supports **Auto**, it goes back to **Auto** if it was previously in **Auto** mode.

Remote Command	<code>[ :SENSe]:VOLTage:IQ:RANGe:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:VOLTage:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:VOLT:IQ:RANG:AUTO OFF</code> <code>:VOLT:IQ:RANG:AUTO?</code>
Dependencies	If <b>Auto</b> is not supported, sending the SCPI command generates an error
Couplings	When in <b>Auto</b> , both I Range and Q Range are set to the same value, computed as follows: Maximum absolute value is computed for the Y Scale. The top and bottom of the graph are computed based on Ref Value, Scale/Div, and Ref Position. Formula: $Y_{Max} = \max(\text{abs}(\text{top}), \text{abs}(\text{bottom}))$ The I Range and Q Range are then set to YMax
Preset	<b>ON</b>
State Saved	Saved in instrument state
Annotation	When in Man, the Range annotation is preceded by "#"  This is an alternate form of the command to match the <b>POWer</b> form of the I Range and Q Range SCPI.

Remote Command	<code>[ :SENSe]:POWer:IQ:RANGe:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:POWer:IQ:RANGe:AUTO?</code>
Example	Put the I Range and Q Range in manual <code>:POW:IQ:RANG:AUTO OFF</code> <code>:POW:IQ:RANG:AUTO?</code>
Notes	<code>:POW:IQ:RANG:AUTO</code> is an alternate form of <code>:VOLT:IQ:RANG:AUTO</code> , to maintain consistency with I Range and Q Range, which support both the <b>POWer</b> and <b>VOLTage</b> forms of the command
Preset	<b>ON</b>
Range	Auto   Man

## I Range

The internal gain range for the I channel when the Input Path is I Only or I and I/Q. Used for both the I and Q channels when the Input Path is I+jQ.

Remote Command	<code>[ :SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer] &lt;voltage&gt;</code> <code>[ :SENSe]:VOLTage:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak <code>:VOLT:IQ:RANG 0.5 V</code>

3 LTE & LTE-A TDD Mode  
 3.12 IQ Waveform Measurement

	<code>:VOLT:IQ:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V
Couplings	When " <b>Q Same as I</b> " on page 2177 is On, the <b>I Range</b> value will be copied to " <b>Q Range</b> " on page 2176 Changing the value also sets Range = Man
Preset	Complex <b>SPECTrum</b> Measurement: 0.5 V Peak All others: 1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50 Ω)   0.5 V Peak (4 dBm @ 50Ω)   0.25 V Peak (-2 dBm @ 50Ω)   0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <I Range>". When Range = Man the annotation is preceded by "#" The I Range is not annotated in Input Path Q Only. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the I Range is 1 V Peak "Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[ :SENSe]:POWer:IQ[:I]:RANGe[:UPPer] &lt;amp;1&gt;</code> <code>[ :SENSe]:POWer:IQ[:I]:RANGe[:UPPer]?</code>
Example	Set the I Range to 0.5 V Peak when Reference Z is 50 Ω, and to 1.0 V Peak when Reference Z is 75 Ω <code>:POW:IQ:RANG 4 dBm</code> <code>:POW:IQ:RANG?</code>
Notes	The <b>POWer</b> form of the command is provided for convenience. It maps to the same underlying gain range parameter as the <b>VOLTage</b> form The Reference Z (not the I channel Input Z) is used to convert the power to peak voltage, which is then used to set the I Range as with the <b>VOLTage</b> form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples: 50 Ω: 10, 4, -2, -8 75 Ω: 8.2, 2.2, -3.8, -9.8 600 Ω: -0.8, -6.8, -12.8, -18.9
Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

## Q Range

The internal gain range for the Q channel. **Q Range** only applies to Input Path Q Only and Ind I/Q. For input I+jQ "[I Range](#)" on page 2174 determines both I and Q channel range settings.

Remote Command	<code>[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer] &lt;voltage&gt;</code> <code>[ :SENSe]:VOLTage:IQ:Q:RANGe[:UPPer]?</code>
Example	Set the Q Range to 0.5 V Peak: <code>:VOLT:IQ:Q:RANG 0.5 V</code> <code>:VOLT:IQ:Q:RANG?</code>
Notes	The numeric entries are mapped to the smallest gain range whose break point is greater than or equal to the value, or 1 V Peak if the value is greater than 1 V <b>Q Range</b> is only used for Input Path Q Only and Ind I/Q. For input I+jQ, " <a href="#">I Range</a> " on page 2174 determines both I and Q channel range settings
Couplings	When " <a href="#">Q Same as I</a> " on page 2177 is On, the " <a href="#">I Range</a> " on page 2174 value is copied to <b>Q Range</b> and the range value keys are disabled Changing the value also sets Range = Man
Preset	1 V Peak
State Saved	Saved in instrument state
Range	1 V Peak (10 dBm @ 50Ω)   0.5 V Peak (4 dBm @ 50Ω)   0.25 V Peak (-2 dBm @ 50Ω)   0.125 V Peak (-8 dBm @ 50Ω)
Min	0.125 V
Max	1 V
Annotation	The Range annotation replaces the RF Input context's "Atten" annotation "Rng: <Q Range>". When Range = Man the annotation is preceded by "#" The Q Range is not annotated in Input Path I Only or I+jQ. When I Range and Q Range are the same, the annotation is "Rng: <Range>". When I Range and Q Range are different and the Input Path is Ind I/Q, the annotation is "Rng: <I Range>, <Q Range>" and "Peak" is removed from the text. Examples: "Rng: 1 V Peak" the Q Range is 1 V Peak "Rng: 1 V, 0.5 V " the I Range is 1 V Peak and the Q Range is 0.5 V Peak  This is an alternate form of the command to allow entry as a power.
Remote Command	<code>[ :SENSe]:POWer:IQ:Q:RANGe[:UPPer] &lt;amp;gt;</code> <code>[ :SENSe]:POWer:IQ:Q:RANGe[:UPPer]?</code>
Example	Sets the Q Range to 0.5 V Peak when Reference Z is 50 Ω , and to 1.0 V Peak when Reference Z is 75 Ω : <code>:POW:IQ:Q:RANG 4 dBm</code> <code>:POW:IQ:Q:RANG?</code>
Notes	The <b>POWer</b> form of the command is provided for convenience. It maps to the same underlying gain

range parameter as the **VOLTage** form of the command

The Reference Z (not the Q channel Input Z) is used to convert the power to peak voltage, which is then used to set the Q Range as with the **VOLTage** form of the command. The power values of the 4 range states (1V Peak, 0.5V Peak, 0.25V Peak, and 0.125V Peak) will vary with Reference Z. Here are some examples:

50 Ω: 10, 4, -2, -8

75 Ω: 8.2, 2.2, -3.8, -9.8

600 Ω: -0.8, -6.8, -12.8, -18.9

Preset	10.0 dBm
Range	-20 dBm to 10 dBm
Min	-20 dBm
Max	10 dBm

### Q Same as I

Many, but not all, usages require the I and Q channels to have an identical setup. To simplify channel setup, **Q Same as I** causes the Q channel range to be mirrored from the I channel. That way, you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time **Q Same as I** is Off, the I and Q channel setups will be identical.

Remote Command	<code>[ :SENSe ] :VOLTage POWer:IQ:MIRROred OFF   ON   0   1</code> <code>[ :SENSe ] :VOLTage POWer:IQ:MIRROred?</code>
Example	Turn off the mirroring of I Range to Q Range <code>:VOLT:IQ:MIRR OFF</code> <code>:POW:IQ:MIRR OFF</code>
Couplings	When <b>ON</b> , the " <b>I Range</b> " on page 2174 value is mirrored (copied) to the " <b>Q Range</b> " on page 2176
Preset	<b>ON</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>

#### 3.12.3.4 Range (Non-attenuator models)

Only available for Keysight's modular signal analyzers and certain other Keysight products, such as VXT and M941xE.

State Saved	No
-------------	----

## Range

Represents the amplitude of the largest sinusoidal signal that could be present within the IF without being clipped by the ADC. For signals with high peak-to-average ratios, the range may need to exceed the rms signal power by a significant amount to avoid clipping.

This is a measurement global setting.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe?</code>
Example	<code>:POW:RANG 10 dBm</code> <code>:POW:RANG?</code>
Notes	The MIN and MAX values are affected by the External Gain parameters, and by the <b>Center Frequency</b> . The hardware compensates for frequency response and alters the Range setting.
Preset	0 dBm
State Saved	Yes
Min/Max	-/+100
Annotation	Meas Bar

## Adjust Range for Min Clipping

Sets the combination of attenuation and gain based on the current measured signal level so that clipping will be at a minimum.

This is an "immediate action" function, that is, it executes once, when the key is pressed.

This key does not appear in measurements that do not support this functionality.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize IMMEDIATE</code>
Notes	Executing Adjust Range for Min Clipping initiates the measurement.
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements.

## Pre-Adjust for Min Clipping


If this function is **ON**, it applies the adjustment described under Adjust Range For Min Clipping each time a measurement restarts. Therefore, in Continuous measurement mode, it only executes before the first measurement.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation OFF   ON   ELECTRICAL   COMBined</code>
----------------	---

	<code>[ :SENSe]:POWer[:RF]:RANGe:OPTimize:ATTenuation?</code>
Notes	Because there is no attenuator control available in these models, the control displays only <b>ON</b> and <b>OFF</b> choices. However, for SCPI compatibility with other platforms, all three parameters ( <b>ELECTrical</b> , <b>COMBined</b> , and <b>ON</b> ) are honored and all are mapped to <b>ELECTrical</b> , so if any of these three parameters is sent, a subsequent query will return <b>ELEC</b>
Dependencies	Does not appear in the Swept SA and Monitor Spectrum measurements
Preset	<b>OFF</b> for Swept SA measurement; <b>ON</b> for all other measurements that support <b>Pre-Adjust for Min Clipping</b>
State Saved	Saved in instrument state

### Adjustment Algorithm

The algorithm for the adjustment is documented below:

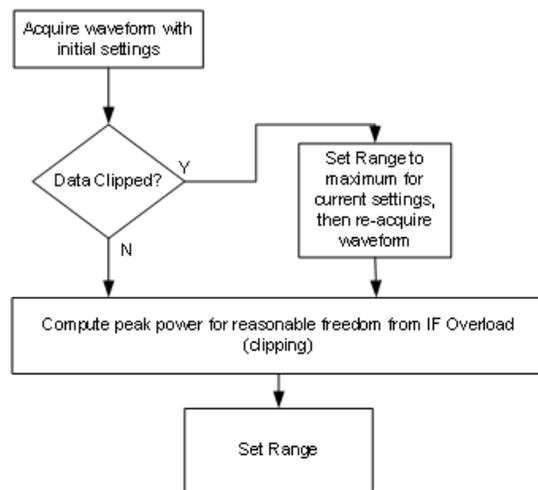

### Peak-to-Average Ratio

Used with "[Range \(Non-attenuator models\)](#)" on page 2177 to optimize the level control in the instrument. The value is the ratio, in dB, of the peak power to the average power of the signal to be measured. A ratio of 0 should be used for sinusoidal signals; for 802.11g OFDM signals use 9 dB.

All Modes show the current value of Peak-to-Average ratio on the control. However, some Modes do not permit changing the value. In these situations, the control is grayed-out.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RANGe:PARatio &lt;real&gt;</code> <code>[ :SENSe]:POWer[:RF]:RANGe:PARatio?</code>
Example	<code>:POW:RANG:PAR 12 dB</code>
Notes	In some Modes, this parameter is read-only; meaning the value will appear on the control and query

	via SCPI, but is not changeable. In such applications the control is grayed-out. Attempts to change the value via SCPI are ignored, but no error message is generated	
Dependencies	Does not appear in Spectrum Analyzer Mode	
Preset	VXT Models M9410A/11A	0 dB
	All Others	10 dB
State Saved	Saved in instrument state	
Min	0 dB	
Max	VXT Models M9410A/11A	50 dB
	All Others	20 dB

### Mixer Lvl Offset

This is an advanced setting to adjust target Range at the input mixer, which in turn affects the signal level in the instrument's IF. This setting can be used when additional optimization is needed after setting "[Peak-to-Average Ratio](#)" on page 2179. Positive values of offset optimize noise performance over distortion, negative values optimize distortion performance over noise.

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :RANGe :MIXer :OFFSet &lt;real&gt;</code> <code>[ :SENSe ] :POWer [ :RF ] :RANGe :MIXer :OFFSet ?</code>	
Example	<code>:POW:RANG:MIX:OFFS -5 dB</code>	
Preset	0 dB	
State Saved	Saved in instrument state	
Min	VXT Models M9410A/11A	-34 dB
	All Others	-35 dB
Max	30 dB	

#### 3.12.3.5 Signal Path

Contains controls that pertain to the routing of the signal through the frontend of the instrument.

In general, only appears in instruments whose hardware supports this signal routing. For example, this tab does not appear in many of the modular instrument products, including VXT Model M9420A, or UXM.

This tab *does* appear in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E, because ["Software Preselection" on page 2195](#) is under this tab, and VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E implement a version of Software Preselection.

## Presel Center

Adjusts the centering of the preselector filter to optimize the amplitude accuracy at the frequency of the selected marker. If the selected marker is not on when **Presel Center** is pressed, the instrument turns on the selected marker, performs a peak search, and then performs centering on the marker's center frequency. If the selected marker is already on and between the start and stop frequencies of the instrument, the instrument performs the preselector calibration on that marker's frequency. If the selected marker is already on, but outside the frequency range between **Start Freq** and **Stop Freq**, the instrument first performs a peak search, and then performs centering on the marker's center frequency.

The value displayed on ["Preselector Adjust" on page 2182](#) changes to reflect the new preselector tuning.

Certain considerations should be observed to ensure proper operation, as detailed in ["Proper Preselector Operation" on page 2182](#).

Remote Command	<code>[ :SENSe ] :POWer [ :RF ] :PCENter</code>
Example	<code>:POW:PCEN</code>
Notes	The rules outlined above under the control description apply for the remote command as well as the key. The result of the command depends on marker position, etc. Any message generated by the control press is also generated in response to the remote command
Dependencies	Does not appear in CXA-m, nor in VXT Models M9410A/11A/15A/16A, M9410E/11E/15E/16E Grayed-out if the microwave preselector is off <ul style="list-style-type: none"> <li>- If the selected marker's frequency is below Band 1, an advisory message is generated "Preselector not used in this frequency range" and no action is taken</li> <li>- Grayed-out if entirely in Band 0, that is, if <b>Stop Freq</b> is below about 3.6 GHz Grayed-out if entirely above 50 GHz, that is, if <b>Start Freq</b> is above 50 GHz</li> <li>- Blanked in models that do not include a preselector, such as Option 503. If the remote command is sent in these instruments, accepted without error, and the query always returns 0</li> <li>- Grayed-out in the <b>Spectrogram View</b></li> </ul>
Couplings	The active marker position determines where the centering will be attempted If the instrument is in a measurement such as averaging when centering is initiated, the act of centering the preselector restarts averaging, but the first average trace will not be taken until the centering is completed The offset applied to do the centering appears in <a href="#">"Preselector Adjust" on page 2182</a>
Status Bits/OPC	When centering the preselector, <b>*OPC</b> does not return true until the process is complete and a

---

dependencies subsequent measurement has completed, nor are results returned in response to `:READ` or `:MEASure` queries  
The **Measuring** bit remains set (true) while this command is operating, and does not go false until the subsequent sweep/measurement has completed

### Proper Preselector Operation

Certain considerations should be observed to ensure proper operation:

1. If the selected marker is **Off**, the instrument turns on a marker, performs a peak search, and adjusts the preselector using the selected marker's frequency. It uses the "highest peak" peak search method unqualified by threshold or excursion, so that there is no chance of a 'no peak found' error. It continues with that peak, even if it is the peak of just noise. Therefore, for this operation to work properly, there should be a signal on-screen in a preselected range for the peak search to find
2. If the selected marker is already **On**, the instrument attempts the centering at that marker's frequency. There is no preselector for signals below about 3.6 GHz, so if the marker is on a signal below 3.6 GHz, no centering is attempted, and an advisory message is generated
3. In some models, the preselector can be bypassed. If it is bypassed, no centering is attempted in that range and a message is generated

### Preselector Adjust

Lets you manually adjust the preselector filter frequency to optimize its response to the signal of interest. Only available when **"Presel Center"** on page 2181 is available.

For general purpose signal analysis, using **Presel Center** is recommended. Centering the filter minimizes the impact of long-term preselector drift. **Preselector Adjust** can be used instead to manually optimize the preselector. One application of manual optimization would be to peak the preselector response, which both optimizes the signal-to-noise ratio and minimizes amplitude variations due to small (short-term) preselector drifting.

When **Presel Center** is performed, the offset applied to do the centering becomes the new value of **Preselector Adjust**.

---

Remote Command	<code>[ :SENSe]:POWer[:RF]:PADJust &lt;freq&gt;</code> <code>[ :SENSe]:POWer[:RF]:PADJust?</code>
Example	<code>:POW:PADJ 100KHz</code> <code>:POW:PADJ?</code>
Notes	The value on the control is displayed to 0.1 MHz resolution
Dependencies	- Does not appear in CXA-m

---

---

- Does not appear in VXT Models M9410A/11A/15A/16A
- Does not appear in M9410E/11E/15E/16E
- Grayed-out if microwave preselector is off
- Grayed-out if entirely in Band 0, that is, if Stop Freq is lower than about 3.6 GHz
- Grayed-out if entirely above 50 GHz, that is, if Start Freq is higher than 50 GHz
- Blank in models that do not include a preselector, such as Option 503. If the command is sent in these instruments, it is accepted without error, and the query always returns 0
- Grayed-out in the **Spectrogram View**

---

Preset	0 MHz
State Saved	The <b>Preselector Adjust</b> value set by " <b>Presel Center</b> " on page 2181, or by manually adjusting <b>Preselector Adjust</b> Not saved in instrument state, and does not survive a Preset or power cycle
Min/Max	-/+500 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:MW:PADJust</code> <code>[ :SENSe]:POWer[:RF]:MMW:PADJust</code>  Backwards Compatibility Command
Notes	The command has no effect, and the query always returns <b>MWAVE</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector MWAVE   MMWave   EXTERNAL</code> <code>[ :SENSe]:POWer[:RF]:PADJust:PRESelector?</code>

---

## Internal Preamp

Accesses a menu of controls for the internal preamps. Turning on the preamp gives a better noise figure, but a poorer inter-modulation distortion (TOI) to noise floor dynamic range. You can optimize this setting for your measurement.

The instrument takes the preamp gain into account as it sweeps. If you sweep outside of the range of the preamp, the instrument will also account for that. The displayed result always reflects the correct gain.

For some measurements, when the preamp is on and any part of the displayed frequency range is below the lowest frequency for which the preamp has specifications, a warning condition message appears in the status line. For example, for a preamp with a 9 kHz lowest specified frequency: "Preamp: Accy unspec'd below 9 kHz".

Selection	Example	Note
Off	:POW:GAIN OFF	
Low Band	:POW:GAIN ON :POW:GAIN:BAND LOW	Sets the internal preamp to use only the low band. The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Low Band selection in the dropdown
Full Range	:POW:GAIN ON :POW:GAIN:BAND FULL	Sets the internal preamp to use its full range. The low band (0-3.6 GHz, 0-3.4 GHz, 0-3 GHz, depending on the model) is supplied by the low band preamp and the frequencies above low band are supplied by the high band preamp  The frequency range of the installed (optional) low-band preamp is displayed in square brackets on the Full Range selection in the dropdown. If the high band option is not installed the Full Range selection does not appear

NOTE

The maximum **Center Frequency for Low Band**, displayed in square brackets, can change based on the selected IFBW for measurements that support IFBW (for example, Waveform measurement across all Modes that support it). In certain models (such as N9042B & N9032B), IFBW values  $\leq 40$  MHz have a maximum **Low Band** frequency of 3.6 GHz, while  $40 \text{ MHz} < \text{IFBW} \leq 1 \text{ GHz}$  have a maximum of 3.3 GHz, and  $1 \text{ GHz} < \text{IFBW} \leq 1.5 \text{ GHz}$  have a maximum of 3.5 GHz. IFBW values  $> 1.5 \text{ GHz}$  do not support a **Center Frequency** that can reach the **Low Band** maximum frequency. In these cases, **N/A** is displayed in the square brackets for **Low Band**.

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:BAND LOW   FULL</code> <code>[ :SENSe]:POWer[:RF]:GAIN:BAND?</code>
Example	<code>:POW:GAIN:BAND LOW</code> <code>:POW:GAIN:BAND?</code>
Dependencies	Not available on all hardware platforms. If the preamp is not present or is unlicensed, this control is not shown  Does not appear in VXT Models M9410A/11A/15A/16A nor in M9410E/11E/15E/16E If <code>:POW:GAIN:BAND FULL</code> is sent when a low band preamp is available, the preamp band parameter is set to <b>LOW</b> instead of <b>FULL</b> , and an "Option not installed" message is generated  Not available when the electronic/soft attenuator is enabled
Preset	<b>LOW</b>
State Saved	Saved in instrument state
Annotation	When the USB Preamp is not connected to USB, the Preamp annotation in the Meas Bar says "Off" if the preamp is off and displays the frequency range of the low band or full range preamp depending on the setting. For example, if the Preamp is set to Low Band and the Low Band is 3.6 GHz the annotation says "3.6 GHz". If it is a 13.6 GHz preamp and it is set to Full Range the annotation says "13.6 GHz"

When the USB Preamp is connected to USB, the Preamp annotation says "Preamp: USB" if the internal preamp is off or "Preamp: USB, Int" if the internal preamp is on (only for measurements that support the USB preamp)

#### Auto Function

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN[:STATe]?</code>
Example	<code>:POW:GAIN OFF</code> <code>:POW:GAIN?</code>
Preset	<code>OFF</code>

## LNA

Lets you turn the Low Noise Amplifier (**LNA**) on or off.

**LNA** is an additional preamplifier that provides superior DANL and frequency range compared to "[Internal Preamp](#)" on page 2183. LNA provides lower system noise figure, especially at frequencies above 100 MHz, and can be operated up to the full range of 50 GHz instruments.

For best possible sensitivity, **LNA** can be turned on *together* with "[Internal Preamp](#)" on page 2183, although if you operate both preamps together, note that the TOI (distortion) specifications are impacted. The sensitivity improvement of this combination is substantial when operating in high band (frequencies above 3.6 GHz).

For more details about annotation, see "[More Information](#)" on page 2186

Remote Command	<code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:GAIN:LNA[:STATe]?</code>
Example	<code>:POW:GAIN:LNA ON</code>
Dependencies	Requires Option LNA, except for VXT models M9415A/16A Does not appear in VXT models M9420A/10A/11A M9410E/11E/15E/16E support LNA May not appear in some measurements <b>LNA</b> is not available when the electronic/soft attenuator is enabled
Preset	<code>OFF</code>
State Saved	Saved in State

## More Information

When **LNA** is installed, the preamp annotation changes to show the state of both **LNA** and **Internal Preamp**. Below is an example:

```
Atten: 8 dB  
Pre: Int on, LNA on  
μW Path: LNP, On  
Source: Off
```

Note that when operating entirely in the low band (below about 3.6 GHz), if **LNA** is on, **Internal Preamp** is switched off (even if you have its switch set to **ON**). This is because the noise performance is actually degraded in low band if both preamps are on. In this case, the annotation reflects the actual state of the two preamps, but the **Internal Preamp** annotation displays in amber, to warn you that the actual state of **Internal Preamp** does not match its switch control display:

```
Atten: 8 dB  
Pre: Int off, LNA on  
μW Path: LNP, On  
Source: Off
```

## μW Path Control

Options for this control include **μW Preselector Bypass** (Option MPB), **Low Noise Path** (Option LNP) and **Full Bypass Enable** in the High Band path circuits.

When the μW Preselector is bypassed, flatness is improved, but will be subject to spurs from out of band interfering signals. When **Low Noise Path Enable** is selected, the instrument automatically bypasses certain circuitry in the high frequency bands that can contribute to noise, when it is appropriate based on other instrument settings.

For most applications, the preset state is **Standard Path**, which provides the best remote-control throughput, minimizes acoustic noise from switching and minimizes the risk of wear in the hardware switches, particularly in remote test scenarios where both low band and high band setups will follow in rapid succession. In this path, the bypass of the low band/high band switch and microwave preamp is never activated, which can cause some noise degradation but preserves the life of the bypass switch.

For applications that utilize the wideband IF paths, the preset state is **μW Preselector Bypass**, if option MPB is present. This is because, when using a wideband IF such as the 140 MHz IF, the μW Preselector's bandwidth can be narrower than the available IF bandwidth, causing degraded amplitude flatness and phase linearity, so it is desirable to bypass the preselector in the default case.

You may choose **Low Noise Path Enable** for a lower noise floor, especially in the 21-26.5 GHz region, though without improving many measures of dynamic range, and

without giving the best possible noise floor. The preamp, if purchased and used, gives better noise floor than does **Low Noise Path Enable**, but the preamp's compression threshold and third-order intercept are much poorer than that of **Low Noise Path Enable**.

A fourth choice is **Full Bypass Enable**, which combines **μW Preselector Bypass** and **Low Noise Path Enable**. Because this can bypass most of the circuitry between the input and the first mixer, care should be taken when using this setting to avoid damaging the mixer. **Full Bypass Enable** is only available if both options LNP and MPB are present, as well as option FBP.

Path	Example	Note
Standard Path	:POW:MW:PATH STD	Normal setting for most measurements. μW Preselector in circuit, Low Noise Path disabled
Low Noise Path Enable	:POW:MW:PATH LNP	See " <a href="#">Low Noise Path Enable</a> " on page 2191
μW Preselector Bypass	:POW:MW:PATH MPB	See " <a href="#">μW Preselector Bypass</a> " on page 2193
Full Bypass Enable	:POW:MW:PATH FULL	See " <a href="#">Full Bypass Enable</a> " on page 2193

Remote Command	<code>[ :SENSE]:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>[ :SENSE]:POWer[:RF]:MW:PATH?</code>
Example	<code>:POW:MW:PATH LNP</code> Enables the Low Noise path <code>:POW:MW:PATH?</code>
Notes	When " <a href="#">Presel Center</a> " on page 2181 is performed, the instrument momentarily switches to the Standard Path, regardless of the setting of <b>μW Path Control</b> The DC Block will always be switched in when the low noise path is switched in, to protect succeeding circuitry from DC. Note that this does not mean "when the low noise path is enabled" but when, based on the Low Noise Path rules, the path is actually switched in. This can happen when the selection is <b>Low Noise Path Enable</b> or <b>Full Bypass Enable</b> . In the case where the DC Block is switched in, the instrument is now AC-coupled. However, if you selected DC coupling, the UI would still behave as though it were DC-coupled, including all annunciation, warnings, status bits, and responses to SCPI queries. This is because, based on other settings, the instrument could switch out the low noise path at any time and hence go back to being DC-coupled Alignment switching ignores the settings in this menu, and restores them when finished
Dependencies	Does not appear in CXA-m, VXT Models M9410A/11A/15A/16A, nor in M9410E/11E/15E/16E, BBIQ and External Mixing <ul style="list-style-type: none"> <li>- The <b>Low Noise Path Enable</b> selection does not appear unless Option LNP is present and licensed</li> <li>- The <b>μW Preselector Bypass</b> selection does not appear unless Option MPB is present and licensed</li> <li>- The <b>Full Bypass Enable</b> selection does not appear unless options LNP and MPB are both present as well as option FBP</li> </ul>

In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated

**Low Noise Path Enable** and **Full Bypass Enable** are grayed-out if the current measurement does not support them

**Low Noise Path Enable** and **Full Bypass Enable** are not supported in Avionics and MMR Modes (non-modulation measurements). In any of these cases (that is, the feature is not supported in either measurement or Mode), if the SCPI command is sent, the following error is generated: -221, "Setting Conflict; Feature not supported for this measurement"

Preset	Mode	Value
	IQ Analyzer	MPB option present and licensed: <b>MPB</b>
	Pulse	MPB option not present and licensed: <b>STD</b>
	RTSA	
	Avionics	
	All other Modes	<b>STD</b>
	-	

State Saved Save in instrument state

Range Standard Path | Low Noise Path Enable |  $\mu$ W Presel Bypass | Full Bypass Enable

Annotation In the Meas Bar, if the Standard path is chosen:  
 $\mu$ W Path: Standard  
 If Low Noise Path is enabled but the LNP switch is not thrown:  
 $\mu$ W Path: LNP,Off  
 If the Low Noise Path is enabled and the LNP switch is thrown:  
 $\mu$ W Path: LNP,On  
 If the preselector is bypassed:  
 $\mu$ W Path: Bypass  
 If Full Bypass Enable is selected but the LNP switch is not thrown:  
 $\mu$ W Path: FByp,Off  
 If Full Bypass Enable is selected and the LNP switch is thrown:  
 $\mu$ W Path: FByp,On

### $\mu$ W Path Control Auto

In VMA, WLAN, 5G NR, CQM Modes, an **Auto/Man** switch is added to  $\mu$ W Path Control:



3 LTE & LTE-A TDD Mode  
 3.12 IQ Waveform Measurement

This allows the function to automatically switch based on certain Auto Rules as shown below:

VMA Mode

Measurement	$\mu$ W Path Control Auto behavior
Digital Demod	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Custom OFDM	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Presel Bypass
SEM	Always Presel Bypass
Spurious Emissions	Always Standard Path

WLAN Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Always Presel Bypass
Spectral Flatness	Always Presel Bypass
Power vs Time	Always Presel Bypass
Monitor Spectrum	Always Presel Bypass
IQ Waveform	Always Presel Bypass
Channel Power	Always Presel Bypass
Occupied BW	Always Presel Bypass
CCDF	Always Presel Bypass
SEM	For 11be 320M, when 'Enabled Wideband IF for FFT' is OFF or 'Sweep Type Rule' is Best Dynamic Range, auto $\mu$ W path is standard For other cases, auto $\mu$ W path is presel bypass if presel bypass is enabled, auto $\mu$ W path is standard if presel bypass is not enabled
Spurious Emissions	Always Standard Path

5G NR Mode

Measurement	$\mu$ W Path Control Auto behavior
Modulation Analysis	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Channel Power	Always Standard Path
Occupied BW	Always Standard Path
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
ACP	Always Standard Path
SEM	Always Standard Path
Spurious Emissions	Always Standard Path
Transmit On Off Power	Use Standard Path unless tuned frequency > 3.6 GHz and Info BW > 15 MHz, in which case choose Preselector Bypass

#### Channel Quality Mode

Measurement	$\mu$ W Path Control Auto behavior
Group Delay	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Full Bypass if conditions warrant(FBP Option is available and "Allow Full Bypass in Auto" is On ), otherwise choose Preselector Bypass
Monitor Spectrum	Always Standard Path
IQ Waveform	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass
CCDF	Use Standard Path unless tuned frequency > 3.6 GHz and IFBW > 15 MHz, in which case choose Preselector Bypass

Remote Command	<code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:POWer[:RF]:MW:PATH:AUTO?</code>
Example	<code>:POW:MW:PATH:AUTO ON</code> <code>:POW:MW:PATH:AUTO?</code>
Dependencies	Only appears in VMA, WLAN, 5G NR and CQM Modes
Couplings	See " <a href="#">μW Path Control Auto</a> " on page 2188 above
Preset	ON
Range	ON OFF

### Low Noise Path Enable

**Low Noise Path Enable** provides a lower noise floor under some circumstances, particularly when operating in the 21–26.5 GHz region. With the Low Noise Path enabled, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz
- The internal preamp is not installed, or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Low Noise Path Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Low Noise Path Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

For measurements that use IQ acquisition, the low noise path is used when **Center Frequency** is in High Band (> 3.6 GHz) and no preamp is in use. In other words, the rules above are modified to use only the center frequency to qualify which path to switch in. This is not the case for FFTs in the Swept SA measurement; they use the same rules as swept measurements.

Note that the Low Noise Path, while giving improved DANL, has the disadvantage of decreased TOI performance and decreased gain compression performance relative to the standard path.


Note also that the bypass switch is a mechanical switch and has finite life, so if the **Low Noise Path Enable** is selected, it is possible to cause frequent cycling of this switch by frequently changing instrument settings such that the above conditions hold true only some of the time. A user making tests of this nature should consider opting for the **Standard Path**, which will never throw the bypass switch, at the expense of some degraded noise performance.

The low noise path is useful for situations where the signal level is so low that the instrument performance is dominated by noise even with 0 dB attenuation, but still high enough that the preamp option would have excessive third-order intermodulation or compression. The preamp, if purchased and used, gives better noise floor than does the “Low Noise Path.” However, its compression threshold and third-order intercept are much poorer than that of the non-preamp path.

There are some applications, typically for signals around –30 dBm, for which the third-order dynamic range of the standard path is good enough, but the noise floor is not low enough even with 0 dB input attenuation. When the third-order dynamic

range of the preamp path is too little and the noise floor of the standard path is too high, the Low Noise Path can provide the best dynamic range

The graph below illustrates the concept. It shows, in red, the performance of an instrument at different attenuation settings, both with the preamp on and off, in a measurement that is affected by both instrument noise and instrument TOI. The green shows the best available dynamic range, offset by 0.5 dB for clarity. The blue shows how the best available dynamic range improves for moderate signal levels with the low noise path switched in. In this illustration, the preamp improves the noise floor by 15 dB while degrading the third-order intercept by 30 dB, and the low noise path reduces loss by 8 dB. The attenuator step size is 2 dB.

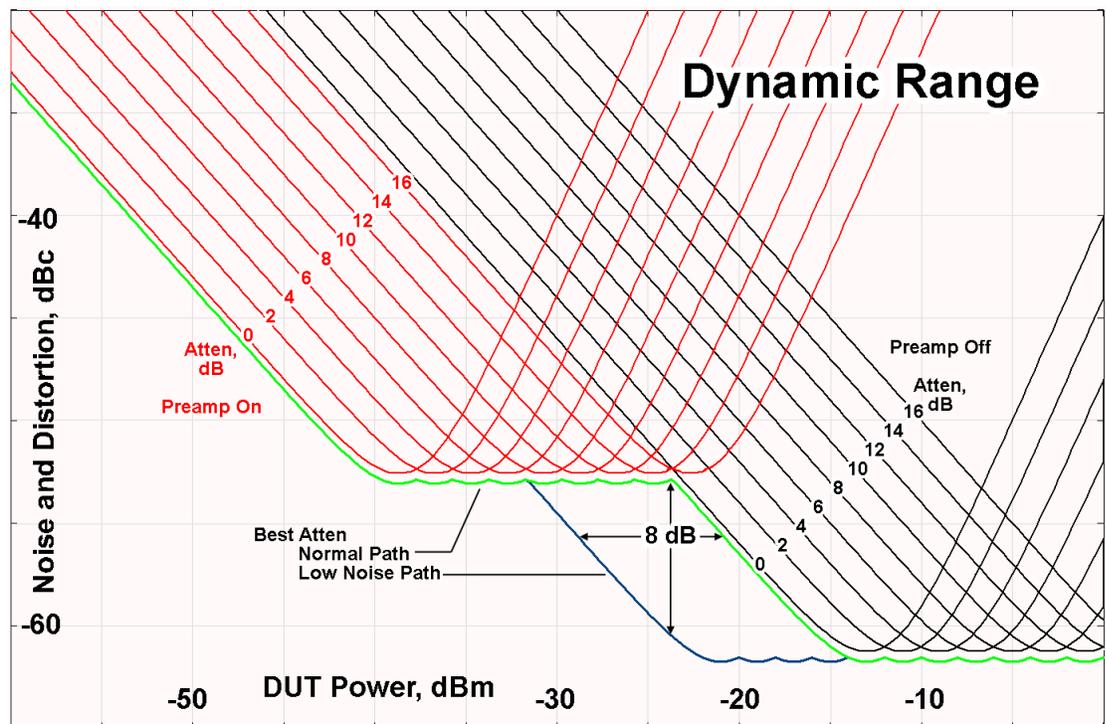

There are other times where selecting the low noise path improves performance, too. Compression-limited measurements such as finding the nulls in a pulsed-RF spectrum can profit from the low noise path in a way similar to the TOI-limited measurement illustrated. Accuracy can be improved when the low noise path allows the optimum attenuation to increase from a small amount like 0, 2 or 4 dB to a larger amount, giving better return loss at the instrument input. Harmonic measurements, such as second and third harmonic levels, are much improved using the low noise path because of the superiority of that path for harmonic (though not intermodulation) distortion performance.

### **μW Preselector Bypass**

Toggles the preselector bypass switch for band 1 and higher. When the microwave preselector is on, the signal path is preselected. When the microwave preselector is off, the signal path is not preselected. The preselected path is the normal path for the instrument.

The preselector is a tunable bandpass filter which prevents signals away from the frequency of interest from combining in the mixer to generate in-band spurious signals (images). The consequences of using a preselector filter are its limited bandwidth, the amplitude and phase ripple in its passband, and any amplitude and phase instability due to center frequency drift.

Option MPB or pre-selector bypass provides an unpreselected input mixer path for certain X-Series signal analyzers with frequency ranges above 3.6 GHz. This signal path allows a wider bandwidth and less amplitude variability, which is an advantage when doing modulation analysis and broadband signal analysis. The disadvantage is that, without the preselector, image signals will be displayed. Another disadvantage of bypassing the preselector is increased LO emission levels at the front panel input port.

Image responses are separated from the real signal by twice the 1st IF. For IF Paths of 10 MHz and 25 MHz, the 1st IF is 322.5 MHz, so the image response and the real signal will be separated by 645 MHz. The 1<sup>st</sup> IF will be different for other IF Path settings. When viewing a real signal and its corresponding image response in internal mixing, the image response will be to the left of the real signal.

Also, the image response and the real signal typically have the same amplitude and exhibit the same shape factor.

However, if Option FS1 (Fast Sweep Capability) is enabled, the image response in the Swept SA measurement appears lower in amplitude and has a much wider shape factor compared to the real signal.

### **Full Bypass Enable**

With **Full Bypass Enable** selected, the microwave preselector is bypassed. In addition, the low band/high band switch and microwave preamp are bypassed whenever *all* the following are true:

- The instrument is not in the Low Band, meaning:
- the start frequency is above 3.5 GHz and
- the stop frequency is above 3.6 GHz.
- the internal preamp is not installed or if installed, is set to **Off** or **Low Band**

Note that this means that, when any part of a sweep is done in Low Band, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user

interface. Also, if the preamp is turned on, the Low Noise Path is not used, whether or not the **Full Bypass Enable** is selected in the user interface. The only time the Low Noise Path is used is when **Full Bypass Enable** is selected, the sweep is completely in High Band (> 3.6 GHz) and no preamp is in use.

**CAUTION**

When **Full Bypass Enable** is selected, and "**Y Scale**" on page 2153 is set to 0 dB, there will be a direct AC connection between the input and the first converter when the Low Noise Path switches in (when Start Freq >3.6 GHz and the Preamp is either not licensed, set to Low Band, or Off). This puts the first converter at considerable risk to be damaged by high AC power. Consequently, whenever **Full Bypass Enable** is selected, a warning message appears in the status bar:

"Full Bypass Enabled, maximum safe input power reduced"

### Microwave Preselector Bypass Backwards Compatibility

Example	Bypass the microwave preselector: :POW:MW:PRES OFF
Notes	Included for Microwave Preselector Bypass backwards compatibility The <b>ON</b> parameter sets the <b>STD</b> path (:POW:MW:PATH STD) The <b>OFF</b> parameter sets path <b>MPB</b> (:POW:MW:PATH MPB)
Preset	ON
Backwards Compatibility SCPI	[ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe] ON   OFF   0   1 [ :SENSe]:POWer[:RF]:MW:PRESelector[:STATe]?

### Frequency Extender Preselection Bypass

Only applies to the high frequency path of the Frequency Extender, and only if the Frequency Extender allows it. For example, the V3050A high frequency path is 50 – 110 GHz and *does* allow control of the preselector bypass.

When the Frequency Extender's preselection is bypassed, flatness is improved, but will be subject to spurs from out-of-band interfering signals. For bandwidths greater than 2.5 [GHz], it is recommended that the signal bypass the Frequency Extender Preselector since the max bandwidth of the Preselector can be as narrow as 2.5 [GHz].

For most applications, the preset state is **OFF**, which gives the best remote-control throughput, minimizes acoustic noise from switching, minimizes out of band spurs, and minimizes the risk of wear in the hardware switches.

### Preselector and Bandwidth Conflict

When the Frequency Extender Preselector is applied and the signal bandwidth is greater than 2.5 [GHz], then a settings alert message will show to warn the user that the signal may be distorted due to the limitation of the Frequency Extender Preselector bandwidth.

An example of the settings alert message is shown below.

Settings Alert message in the Status Bar at the bottom of the display.



Settings Alert message in the error queue

Type	ID	
	159	Settings Alert - DETECTED; Presel/Meas BW conflict

### Software Preselection

Provided in some instruments, either to compensate for issues with provided hardware preselection or to provide the preselection function when there is no hardware preselector.

#### N9041B

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

In N9041B, **Software Preselection** only applies for frequencies above 50 GHz, therefore it is only used for RF Input 2. Even if turned on, it is not used for other inputs, and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that in N9041B, in Swept SA measurement, **Software Preselection** works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT sweep type.

## N9042B+V3050A

**Software Preselection** compensates for the frequency range limit of the microwave preselector. Since the microwave preselector only goes up to 50 GHz, software preselection must be used to suppress and separate images above 50 GHz. The specific algorithm used for software preselection is specified by the SW Preselection Type selection – Normal or Advanced.

For N9042B+V3050A, Software Preselection only applies for frequencies above 50 GHz, therefore it is only used for External RF. Even if it is turned on, it will not be used for other inputs and never for frequencies below 50 GHz. This is why the label of this control contains the parenthetical note “(>~50 GHz)”.

Note that for N9042B+V3050A, in the Swept SA measurement, Software Preselection works even if the measurement is using an FFT Sweep Type. In measurements other than Swept SA, Software Preselection is not used if the measurement is using an FFT Sweep Type.

## VXT models M9410A/11A/15A/16A

**Software Preselection** is used to provide the preselection function, as there is no hardware preselector in these models. Two background traces are taken and compared point by point, and the point with the lowest amplitude from the two traces is used. This provides a method to reduce spurs that are internally generated within the VXT, but you should note the following when using Software Preselection:

- There is some speed cost due to the need to take multiple captures
- Taking the point with the lowest amplitude in each trace will make the average noise level lower at all points that do not have a spur. This can reduce the accuracy of the measurement of noise and noise-like signals

Because of the difficulty in identifying spurs manually, you are recommended to leave Software Preselection **ON** at all times in VXT models M9410A/11A. If you turn it off in order to speed up your measurement or improve noise accuracy, be aware of unwanted onscreen spurs.

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel:STATe 0   1   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel:STAT?</code>
Example	<code>:POW:SWPR:STAT 1</code> <code>:POW:SWPR:STAT?</code>
Dependencies	Only appears in N9041B, N9042B+V2050A, VXT models M9410A/11A and M9410E/11E. Does not appear in all measurements
Couplings	Affects <b>Sweep Time</b> <b>Auto Tune</b> supports <b>Software Preselection</b> , so <b>Auto Tune</b> should be performed after setting the <b>Software Preselection</b> state

Preset	N9041B	OFF
	N9042B+V3050A	ON
	M9410A/11A	ON
State Saved	Saved in instrument state	

### SW Preselection Type

Specifies the algorithm used for software preselection.

Two hidden sweeps occur in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals. Other signals are images, which are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

- **NORMa1** - mathematically removes all image and multiple responses of signals present at the input
- **ADVanced** - any trace processing (such as “max hold” or trace averaging) is performed on the points of both candidate traces before the “select minimum” operation occurs. This form of processing works better for non-stationary signals, such as pulsed-RF signals

Remote Command	[:SENSE]:POWER[:RF]:SWPreSel NORMa1   ADVanced [:SENSE]:POWER[:RF]:SWPreSel?	
Example	:POW:SWPR NORM :POW:SWPR?	
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when "Software Preselection" on page 2195 is OFF. The grayout message is “Unavailable unless SW Presel enabled”	
Preset	N9041B	ADVanced
	N9042B+V3050A	NORMa1
State Saved	Saved in instrument state	

## SW Preselection BW

Specifies the effective bandwidth to be used for Software Preselection.

The options are:

- **NORMa1** – when making Swept measurements, a software preselection algorithm is used which takes up to 4 background acquisitions, then post-processes the result. This algorithm can remove images from signals with an occupied bandwidth up to around 3 GHz. (Default/Preset setting). When making FFT measurements, this algorithm is not used, instead the same algorithm is used as for **NARRow** (below)
- **NARRow**– a software preselection algorithm is used which takes two background acquisitions, then post-processes the result to detect and remove images from wideband signals with occupied bandwidths up to 2 GHz. This increases the risk of images failing to be rejected, but improves the measurement speed

Remote Command	<code>[ :SENSe]:POWer[:RF]:SWPreSel:BW NORMa1   NARRow</code> <code>[ :SENSe]:POWer[:RF]:SWPreSel:BW?</code>
Example	<code>:POW:SWPR:BW NARR</code>
Dependencies	Only appears in N9041B and N9042B+V3050A. Only appears in measurements that use the Swept method Grayed-out when " <b>Software Preselection</b> " on page 2195 is <b>OFF</b> . The grayout message is "Unavailable unless SW Presel enabled" For N9042B+V3050A, the parameter is SCPI-only, and always set to <b>NARRow</b> when <b>Software Preselection</b> is enabled
Preset	N9041B <b>NORMa1</b> N9042B+V3050A <b>NARRow</b>
State Saved	Saved in instrument state

## High Freq Prefilter

Lets you set the state of Prefilter for center frequencies above 1310 MHz.

In VXT Models M9410A/11A and M9410E/11E in bypass frequency range (1310MHz~5GHz), the Receiver RF path has a bank of filters that come after the RF Attenuator in the signal path. Since this bank of filters precedes the mixer they are known as the "Prefilter" bank. Their purpose is to eliminate unwanted in-band mixing products by filtering out all but the desired frequencies before the signals get to the mixer. There are 13 prefilter bands to cover the frequencies between 9 kHz

3 LTE & LTE-A TDD Mode  
 3.12 IQ Waveform Measurement

and 6000 MHz. The Prefilter provides the necessary rejection of the unwanted signal.

Remote Command	<code>[ :SENSe]:&lt;measurement&gt;:PFILter[:STATe] ON   OFF   1   0 [:SENSe]:&lt;measurement&gt;:PFILter[:STATe]?</code>
Example	Enable High Freq Prefilter for the Complex Spectrum Measurement in <b>BASIC</b> Mode: <code>:SPEC:PFIL ON</code>  Enable High Freq Prefilter for the IQ Waveform Measurement, in multiple Modes: <code>:WAV:PFIL ON</code>  Enable High Freq Prefilter for the Swept SA Measurement in <b>SA</b> Mode: <code>:SAN:PFIL ON</code>
Dependencies	Only appears in VXT models M9410A/11A with center frequency above 1310 MHz, and M9410E/11E in frequency range 1310MHz~5GHz
Preset	See " <a href="#">Prefilter Presets</a> " on page 2199 below
State Saved	Saved in instrument state

### Prefilter Presets

Meas	Mode	Preset
SPEC	BASIC	OFF
WAV	BASIC, WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
MON	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA	OFF
RHO	WCDMA	OFF
CDP	WCDMA	OFF
PCON	WCDMA	OFF
EVMQ	WCDMA	OFF
CHP	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
OBW	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
ACP	WCDMA, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
SEM	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PST	WCDMA, WLAN, LTEAFDD, LTEATDD, 5GNR, VMA, SA	OFF
PVT	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
EVM	WLAN, LTEAFDD, LTEATDD, 5GNR	OFF
FLAT	WLAN	OFF
EVMM	WLAN	OFF
CEVM	LTEAFDD, LTEATDD	OFF
PAVT	5GNR, VMA	OFF
DDEM	VMA	OFF
OFDM	VMA	OFF
SAN	SA	ON
HARM	SA	ON

### 3.12.4 BW

Opens the **BW** (Bandwidth) menu. The Digital IF BW functions control filter bandwidth and filter type. There are two filter types: Gaussian and Flattop. The Gaussian filters have a response curve that is parabolic on a log scale. The Flattop filter shape is a close approximation of a rectangular filter.

#### 3.12.4.1 Settings

Contains the basic bandwidth functions. It is the only tab under **Bandwidth**.

#### Digital IF BW

Sets the Digital IF (formerly Info BW) bandwidth of the instrument. When in Auto, it is set to the value that covers carriers set by carrier configuration.

Remote Command	<code>[ :SENSe ]:WAVeform:DIF:BA NDwidth &lt;freq&gt;</code> <code>[ :SENSe ]:WAVeform:DIF:BA NDwidth?</code>								
Example	<code>:WAV:DIF:BA ND 1kHz</code> <code>:WAV:DIF:BA ND?</code>								
Notes	Auto/Man is available only for 5G NR, LTE, LTETDD, LTEAFDD, LTEA TDD Modes								
Dependencies	To set a 2 GHz Span with option R20, the Center Frequency must be equal to or greater than 3.5 GHz To set a 4 GHz Span with option R40, the Center Frequency must be equal to or greater than 10 GHz For applications that have the <b>IF Path</b> Selection menu, such as the <b>BASIC</b> mode:								
	<table border="1"> <thead> <tr> <th>IF Path</th> <th>Maximum Value Criteria</th> </tr> </thead> <tbody> <tr> <td><b>Auto State</b></td> <td></td> </tr> <tr> <td><b>OFF</b></td> <td>The maximum value depends on which IF Path is currently selected If 10 MHz, 25 MHz, 40 MHz, 85 MHz, 125 MHz, 140 MHz or 160 MHz, 255 MHz, or 510 MHz paths are selected, the maximum value of this parameter is 10, 25, 40, 85, 125, 140 or 160 MHz, 255 MHz, or 510 MHz respectively</td> </tr> <tr> <td><b>ON</b></td> <td>The maximum value is the maximum Digital IF BW available in the instrument, regardless of the current IF Path Selection For example, if the instrument has the options B25, B40, and B1X installed, the maximum available Digital IF BW of the instrument is 160 MHz. Thus, if IF Path Auto is <b>ON</b> and IF Path Selection is 25 MHz, the maximum Digital IF BW is <i>not</i> limited to 25 MHz, but is 160 MHz</td> </tr> </tbody> </table>	IF Path	Maximum Value Criteria	<b>Auto State</b>		<b>OFF</b>	The maximum value depends on which IF Path is currently selected If 10 MHz, 25 MHz, 40 MHz, 85 MHz, 125 MHz, 140 MHz or 160 MHz, 255 MHz, or 510 MHz paths are selected, the maximum value of this parameter is 10, 25, 40, 85, 125, 140 or 160 MHz, 255 MHz, or 510 MHz respectively	<b>ON</b>	The maximum value is the maximum Digital IF BW available in the instrument, regardless of the current IF Path Selection For example, if the instrument has the options B25, B40, and B1X installed, the maximum available Digital IF BW of the instrument is 160 MHz. Thus, if IF Path Auto is <b>ON</b> and IF Path Selection is 25 MHz, the maximum Digital IF BW is <i>not</i> limited to 25 MHz, but is 160 MHz
IF Path	Maximum Value Criteria								
<b>Auto State</b>									
<b>OFF</b>	The maximum value depends on which IF Path is currently selected If 10 MHz, 25 MHz, 40 MHz, 85 MHz, 125 MHz, 140 MHz or 160 MHz, 255 MHz, or 510 MHz paths are selected, the maximum value of this parameter is 10, 25, 40, 85, 125, 140 or 160 MHz, 255 MHz, or 510 MHz respectively								
<b>ON</b>	The maximum value is the maximum Digital IF BW available in the instrument, regardless of the current IF Path Selection For example, if the instrument has the options B25, B40, and B1X installed, the maximum available Digital IF BW of the instrument is 160 MHz. Thus, if IF Path Auto is <b>ON</b> and IF Path Selection is 25 MHz, the maximum Digital IF BW is <i>not</i> limited to 25 MHz, but is 160 MHz								
Couplings	Changing " <b>Sample Rate</b> " on page 2237 automatically changes the state to Man								
Preset	See " <b>Preset Values</b> " on page 2202 below								

3 LTE & LTE-A TDD Mode  
3.12 IQ Waveform Measurement

State Saved	Saved in instrument state		
Min	All others: 10 Hz		
Max	<b>Input</b>	<b>Option</b>	<b>Value</b>
	RF	None	10 MHz
		B25	25 MHz
		B40	40 MHz
		B85	85.0 MHz
		B1A	125.0 MHz
		B1X	140 MHz
		B1Y	160 MHz
		B2X	255 MHz
		B5X	510 MHz
		R10	1 GHz
		R15	1.5 GHz
		R20	2 GHz
		R40	4 GHz
		VXT models M9410A/11A	M941xA-B3X
	M941xA-B6X		600 MHz
	M941xA-B12		1.2 GHz
	VXT models M9415A/16A	M941xA-B4X	400 MHz
		M941xA-B8X	800 MHz
		M941xA-B12	1.2 GHz
	M9410E/11E:	M941xE-B3X	300 MHz
		M941xE-B6X	600 MHz
		M941xE-B12	1.2 GHz
	M9415A/16A:	M941xE-B4X	400 MHz
		M941xE-B8X	800 MHz
		M941xE-B12	1.2 GHz
	I/Q	None	10 MHz per channel
			20 MHz for I+jQ
		B25	25 MHz per channel
			50 MHz for I+jQ
		S40	40 MHz per channel
			80 MHz for I+jQ
	All others	Hardware Dependent	

---

-

---

Backwards	<code>[ :SENSe]:WAVeform:BANDwidth[:RESolution]</code>
Compatibility SCPI	<code>[ :SENSe]:WAVeform:BWIDth[:RESolution]</code>
Auto Function	

---

Remote Command	<code>[ :SENSe]:WAVeform:DIF:BANDwidth:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:WAVeform:DIF:BANDwidth:AUTO?</code>
Example	<code>:WAV:DIF:BAND:AUTO 0</code> <code>:WAV:DIF:BAND:AUTO?</code>
Preset	<code>ON</code>

### Preset Values

Mode	Option	Radio Std	Value
GSM/EDGE			510 kHz
LTE, LTETDD, LTEAFDD, LTEATDD, 5G NR			Automatically calculated
WLAN	None		10 MHz
	B25		25 MHz
	B40	802.11a/b/g/n/ac/ax//be (20 MHz)	25 MHz
		802.11n/ac/ax/be (40 MHz)	40 MHz
		802.11ac/ax/be (80 MHz)	80 MHz
		802.11ac/ax/be (160 MHz)	160 MHz
	B1X	802.11be (320 MHz)	320 MHz
802.11ac(80 MHz)		80 MHz	
B1Y	802.11ac(160 MHz)	160 MHz	
All others			100 kHz

### Filter Type

Lets you select the type of bandwidth filter that is used.

The following types are available:

Type	SCPI	Notes
Gaussian	<code>GAUSSian</code>	See " <a href="#">Gaussian</a> " on page 2204
Flat Top	<code>FLATtop</code>	See " <a href="#">Flattop</a> " on page 2204

3 LTE & LTE-A TDD Mode  
 3.12 IQ Waveform Measurement

Type	SCPI	Notes
Short Nyquist	<a href="#">SNYquist</a>	Available only when Option B40, B85, B1A, or B1X WBDIF installed
Raised Short Nyquist	<a href="#">RSNYquist</a>	
Raised Cosine	<a href="#">RCOSine</a>	
Root Raised Cosine	<a href="#">RRCosine</a>	

Remote Command [\[:SENSe\]:WAVeform:DIF:FILTer:TYPE GAUSSian | FLATtop](#)  
[\[:SENSe\]:WAVeform:DIF:FILTer:TYPE?](#)  
 With DIF40 and/or WBDIF:  
[\[:SENSe\]:WAVeform:DIF:FILTer:TYPE GAUSSian | FLATtop | SNYquist | RSNYquist | RCOSine | RRCosine](#)  
[\[:SENSe\]:WAVeform:DIF:FILTer:TYPE?](#)

Example [:WAV:DIF:FILT:TYPE GAUS](#)  
[:WAV:DIF:FILT:TYPE?](#)

Dependencies **Gaussian** and **Flattop** are available in all DIF configurations. For the other filter types, the filters are only available when Option DP2, B40, or a wider IF Bandwidth option is installed  
 When you select a filter type other than **Gaussian** or **Flattop** when using Option B40, B85, B1A, or B1X WBDIF, but then you either explicitly select an IF Path Selection of 10 MHz or 25 MHz (**B10M/B25M**), or set a Digital IF BW equal to or narrower than 25 MHz with IF Path Selection Auto **ON**, the default filter type (**FLATtop**) is automatically selected. If you then again set the IF Path Selection to 85 MHz (**B85**), 125 MHz (**B125M**), or 140 MHz (**B140M**), the filter type remains as **FLATtop**

Couplings See the description above

Preset	Modes	Value
	BASIC with DP2, B40, or wider, IF Bandwidth option	<a href="#">FLATtop</a>
	5G NR, WLAN, Channel Quality	<a href="#">FLATtop</a>
	All others	<a href="#">GAUSSian</a>

State Saved Saved in instrument state

Range [GAUSSian|FLATtop](#)  
 When Option DP2, B40, or wider IF Bandwidth option is installed, the range is as follows  
[GAUSSian|FLATtop|SNYquist|RSNYquist|RCOSine|RRCosine](#)

Backwards [\[:SENSe\]:WAVeform:BANDwidth:SHAPE](#)  
 Compatibility SCPI [\[:SENSe\]:WAVeform:BWIDth:SHAPE](#)  
[\[:SENSe\]:WAVeform:BANDwidth|BWIDth\[:RESolution\]:TYPE](#)

## Gaussian

When Option DP2, B40, or wider IF Bandwidth option is installed, the capability for arbitrary Digital IF bandwidths is available. However, for instruments without DP2, B40, or wider IF Bandwidth option, the selectable Gaussian filter bandwidths are predetermined. There are 160 Info BWs (RBWs) arranged in a 24-per-decade sequence from 1 Hz through 3 MHz, plus 4, 5, 6 and 8 MHz settings.

## Flattop

When Option DP2, B40, or wider IF Bandwidth option is installed, the capability for arbitrary Digital IF bandwidths is available. However, for instruments without Option DP2, B40 or wider IF Bandwidth option, the selectable Flattop filter bandwidths are predefined. There are 134 Digital IF BWs (RBWs) arranged in a 6-per-decade sequence from 3 Hz through 3 MHz, plus 4, 5, 6 and 8 MHz settings.

## Filter BW

This feature is only available when Option DP2, B40, or wider IF Bandwidth option is installed.

Remote Command	<code>[ :SENSe]:WAVeform:DIF:FILTer:BANDwidth &lt;freq&gt;</code> <code>[ :SENSe]:WAVeform:DIF:FILTer:BANDwidth?</code>
Example	<code>:WAV:DIF:FILT:BAND 1MHz</code> <code>:WAV:DIF:FILT:BAND?</code>
Dependencies	Only available when Option DP2, B40, or wider IF Bandwidth option is installed. Disabled when the Filter Type is <b>FLATtop</b>
Couplings	Sets the same value as the current Digital IF BW value on Preset, or when Channel Filter Bandwidth Auto is <b>ON</b>
Preset	Same value as Digital IF BW
State Saved	Saved in instrument state
Min	10 Hz
Max	Clipped to the current Digital IF BW value

### Auto Function

Remote Command	<code>[ :SENSe]:WAVeform:DIF:FILTer:BANDwidth:AUTO ON   OFF   1   0</code> <code>[ :SENSe]:WAVeform:DIF:FILTer:BANDwidth:AUTO?</code>
Example	<code>:WAV:DIF:FILT:BAND:AUTO 0</code> <code>:WAV:DIF:FILT:BAND:AUTO?</code>
Preset	<b>ON</b>
Range	Auto   Man

## Filter Alpha

Sets the filter alpha for the DIF filter. This feature is only available when Option DP2, B40, or wider IF Bandwidth option is installed.

Remote Command	<code>[ :SENSe ] :WAVeform:DIF:FILTer:ALPHA &lt;real&gt;</code> <code>[ :SENSe ] :WAVeform:DIF:FILTer:ALPHA?</code>
Example	<code>:WAV:DIF:FILT:ALPH 0.5</code> <code>:WAV:DIF:FILT:ALPH?</code>
Preset	0.2
State Saved	Saved in instrument state
Min	0.01
Max	1.00
Backwards Compatibility SCPI	<code>[ :SENSe ] :WAVeform:WBIF:FILTer:ALPHA</code>

## Channel Filter Bandwidth (Backwards Compatibility Remote Command Only)

Dependencies	Only available when Option DP2, B40, or wider IF Bandwidth option is installed
Couplings	The value is determined by the following equation $\text{ChannelFilterBwBwcc} = (\text{ChannelFilterBw} / (\text{DigitalIFBw} * \text{OverSampleRatio}))$
Preset	0.8
State Saved	Saved in instrument state
Min	0.01
Max	1.0
Backwards Compatibility SCPI	<code>[ :SENSe ] :WAVeform:WBIF:FILTer:BANDwidth &lt;real&gt;</code> <code>[ :SENSe ] :WAVeform:WBIF:FILTer:BANDwidth?</code>

## 3.12.5 Display

Lets you configure display items for the current Mode, Measurement, View, or Window.

### 3.12.5.1 View

Contains controls for selecting the current **View**, and for editing User Views.

## View

See "Views" on page 2150.

## User View

Lets you choose a View from the saved User Views for the current measurement. This panel only appears if a User View exists for the current measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:SElect &lt;alphanumeric&gt;</code> <code>:DISPlay:VIEW:ADVanced:SElect?</code>
Example	Select Baseband as the current View <code>:DISP:VIEW:ADV:SEL "Baseband"</code>
Notes	<p>You must be in the measurement whose View you are trying to set to send the command. You can only set Views for the current measurement using this command</p> <p>For predefined views, the parameter is derived from the view name that is shown in the View list in the user interface. For example, if you are trying to select the Trace Zoom view in the Swept SA measurement, you send:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <p>because "Trace Zoom" is the name of the View as seen in the Mode/Meas dialog or in the Display, View menu</p> <p>You <i>cannot</i> use the legacy View parameter (which in this case would be <code>TZOOM</code>) with</p> <pre>:DISP:VIEW:ADV:SEL</pre> <p><code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case. Thus, both of the following forms work:</p> <pre>:DISP:VIEW:ADV:SEL "Trace Zoom"</pre> <pre>:DISP:VIEW:ADV:SEL "TRACE ZOOM"</pre> <p>If the specified view is not a valid View, the query returns the error message "-224, Illegal parameter value; View with the name &lt;alphanumeric&gt; does not exist"</p> <p>If the display is disabled (via <code>:DISP:ENAB OFF</code>) then the error message "-221, Settings conflict; View SCPI cannot be used while Display is disabled" is generated</p>
Backwards Compatibility SCPI	<p>The legacy node</p> <pre>:DISPlay:VIEW[:SElect]</pre> <p>is retained for backwards compatibility, but it only supports predefined views</p>

## Restore Layout to Default

Restores the Layout to the default for Basic.

Modified Views are very temporary; if you exit the current measurement they are discarded, and they are not saved in State. To retain this View for later use, and to

be able to return easily to your original Basic View, you can save your edited View as a “User View”.

## Save Layout as New View

Saves your new View as a User View. An alpha keyboard appears, which lets you name your new View; the default is the old View name plus a number.

Remote Command	<code>:DISPlay:VIEW:ADVanced:NAME &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:NAME “Baseband”</code> Creates a new View named <b>Baseband</b> from the current View, and selects it as the current View
Notes	<code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If <code>&lt;alphanumeric&gt;</code> name already exists as a View, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the display is disabled (via <code>:DISP:ENAB OFF</code> ) then the error message “-221, Settings conflict; User View SCPI cannot be used while Display is disabled” is generated

## Re-Save User View

You can re-edit a User View; if you make changes, then an asterisk will appear next to the User View’s name. You can then tap **Re-Save User View** to save it back to its existing name, or **Save Layout as New View** to add another, new User View.

This is a front panel function only, there is no remote command available to perform this function. To do this remotely, you must first perform **Save Layout as New View**, then delete the old User View and rename the new one with the name of the View you just deleted.

## Rename User View

You can rename the current View by giving it a new unique name. Only User Views can be renamed, if the current View is a Predefined View, an error occurs.

Remote Command	<code>:DISPlay:VIEW:ADVanced:REName &lt;alphanumeric&gt;</code>
Example	<code>:DISP:VIEW:ADV:REN “Baseband”</code>
Notes	<code>&lt;alphanumeric&gt;</code> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case If the <code>&lt;alphanumeric&gt;</code> specifying the new name is already present in the list of View names, the error message “-224, Illegal parameter value; View <alphanumeric> already exists” is generated If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot

---

rename a Predefined View” is generated

If the display is disabled (via **:DISP:ENAB OFF**) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated

## Delete User View

You can delete the current View if it is a User View. The default view becomes the current view for the Measurement.

---

Remote Command	<b>:DISPlay:VIEW:ADVanced:DElete</b>
----------------	--------------------------------------

---

Example	<b>:DISP:VIEW:ADV:DEL</b>
---------	---------------------------

---

Notes	<p><b>&lt;alphanumeric&gt;</b> is case insensitive; you can specify mixed case, however the name will be evaluated on a single case</p> <p>If the <b>&lt;alphanumeric&gt;</b> is not present in the list of View names, the error message “-224, Illegal parameter value; View <b>&lt;alphanumeric&gt;</b> does not exist” is generated</p> <p>If the current View is a Predefined View, the error message “-224, Illegal parameter value; Cannot delete a Predefined View” is generated</p> <p>If the display is disabled (via <b>:DISP:ENAB OFF</b>) then the error message “-221, Settings conflict; View SCPI cannot be used while Display is disabled” is generated</p>
-------	--

## Delete All User Views

Deletes all previously saved User Views. The default view becomes the current view for the Measurement if a User View was the current view when this command was executed.

---

Remote Command	<b>:DISPlay:VIEW:ADVanced:DElete:ALL</b>
----------------	--

---

Example	<b>:DISP:VIEW:ADV:DEL:ALL</b>
---------	-------------------------------

---

Notes	Disabled if there are no User Views
-------	-------------------------------------

## View Editor Remote Commands

The following remote commands help you manage Views and User Views. Note that the SCPI node for User Views handles both Predefined and User Views. The legacy nodes, **:DISPlay:VIEW[:SElect]** and **:DISPlay:VIEW:NSEL**, are retained for backwards compatibility, but they only support predefined views.

## View Listing Query

Returns a string containing a comma-separated list of names for *all* the Views, including User Views, available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:CAT?</code>
Notes	Returns a quoted string of the available Views for the current measurement, separated by commas. The list includes names for <i>all</i> the Views, including User Views, available for the current Measurement Example: <code>"Normal,Trace Zoom,Spectrogram,Baseband,myView1,yourView1"</code> No distinction is made between Predefined and User Views If you switch measurements with the display disabled (via <code>:DISP:ENAB OFF</code> ), then query the list of available Views, the result is undefined

## User View Listing Query

Returns a string containing a comma-separated list of names for *only* the User Views available for the current Measurement.

Remote Command	<code>:DISPlay:VIEW:ADVanced:USER:CATalog?</code>
Example	<code>:DISP:VIEW:ADV:USER:CAT?</code>
Notes	Returns a quoted string of the available User Views for the current measurement, separated by commas. Example: <code>"Baseband,myView1,yourView1"</code> If you switch measurements with the display disabled (see <a href="#">"Display Enable (Remote Command Only)" on page 2211</a> ), then query the list of available Views, the result is undefined

### 3.12.5.2 Annotation

Contains controls for setting up the annotation for the current Mode or Measurement.

## Graticule

Turns the display graticule On or Off for all windows with graticules in all measurements in the current Mode. Also turns the graticule Y-Axis annotation on and off.

Remote Command	<code>:DISPlay:GRATicule[:STATe] OFF   ON   0   1</code> <code>:DISPlay:GRATicule[:STATe]?</code>
Example	<code>:DISP:GRAT OFF</code>
Notes	The graticule is the set of horizontal and vertical lines that make up the grid/divisions for the X-Axis and Y-Axis
Preset	<b>ON</b>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:TRACe:GRATicule:GRID[:STATe]?</code> This command is accepted for backwards compatibility with older instruments, but the <b>WINDow</b> , <b>TRACe</b> and <b>GRID</b> parameters are ignored

## Screen Annotation

Controls the display of the annunciation and annotation around the graticule, including any annotation on lines (such as the display line, the threshold line, etc.) and the Y-Axis annotation, for all windows with screen annotation in all measurements in the current Mode.

This does *not* include marker annotation (or the N dB result). When **OFF**, the graticule expands to fill the entire graticule area, leaving only the 1.5% gap above the graticule, as described in the **Trace** section.

Remote Command	<code>:DISPlay:ANNotation:SCReen[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:SCReen[:STATe]?</code>
Example	<code>:DISP:ANN:SCR OFF</code>
Dependencies	Grayed-out and forced to <b>OFF</b> when <b>System Display Settings, Annotation</b> is <b>OFF</b>
Preset	<b>ON</b> This remains <b>OFF</b> through a Preset when <b>System Display Settings, Annotation</b> is set to <b>OFF</b>
State Saved	Saved in instrument state

## Trace Annotation

Turns on and off the labels on the traces, showing their detector (or their Math Mode) as described in the **Trace** section, for all windows in all measurements in the current Mode for which Trace Annotation on/off is supported.

If Trace Math is being performed on a trace, then the Trace Math annotation replaces the detector annotation.

For measurements that support limit lines, this key also turns on and off the labels on the Limit Lines. The label is the Limit number annotation and Limit Comment

displayed on the graph. If the length of the comment is greater than 20 characters, the first 8 characters and the last 8 characters are displayed, joined with ...

Remote Command	<code>:DISPlay:ANNotation:TRACe[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ANNotation:TRACe[:STATe]?</code>
Example	<code>:DISP:ANN:TRAC OFF</code>
Preset	<code>OFF</code>
State Saved	Saved in instrument state

### Control Annotation

Turns on and off the display of values on the Active Function controls for all measurements in the current Mode. This is a security feature.

Remote Command	<code>:DISPlay:ACTivefunc[:STATe] ON   OFF   1   0</code> <code>:DISPlay:ACTivefunc[:STATe]?</code>
Example	<code>:DISP:ACT OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

### Meas Bar

Turns the Measurement Bar at the top of the screen on and off for all measurements in the current Mode. When `OFF`, the graticule area expands to fill the area formerly occupied by the Measurement Bar.

Remote Command	<code>:DISPlay:ANNotation:MBAR[:STATe] OFF   ON   0   1</code> <code>:DISPlay:ANNotation:MBAR[:STATe]?</code>
Example	<code>:DISP:ANN:MBAR OFF</code>
Dependencies	Grayed out and forced to <code>OFF</code> when <b>System Display Settings, Annotation</b> is <code>OFF</code>
Preset	<code>ON</code> This remains <code>OFF</code> through a Preset when <b>System Display Settings, Annotation</b> is set to <code>OFF</code>
State Saved	Saved in instrument state

### Display Enable (Remote Command Only)

Turns the display on/off, including the display drive circuitry. The backlight stays lit to confirm that the instrument is on. The display enable setting is mode global.

There are three reasons for turning the display off:

1. To increase speed as much as possible by freeing the instrument from having to update the display
2. To reduce emissions from the display, drive circuitry
3. For security purposes

If you have turned off the display:

- and you are in local operation, the display can be turned back on by pressing any key or by sending `:SYSTEM:DEFAULTS MISC` or `:DISPLAY:ENABLE ON` (neither `*RST` nor `:SYSTEM:PRESET` enable the display)
- and you are in remote operation, the display can be turned back on by pressing the **Local** or **Esc** keys, or by sending `:SYSTEM:DEFAULTS MISC` or `:DISPLAY:ENABLE ON` (neither `*RST` nor `:SYSTEM:PRESET` enable the display)
- and you are using either the `:SYSTEM:KLOCK` command or GPIB local lockout, then *no* front-panel key press will turn the display back on. You must turn it back on remotely.

If the display is **OFF**, many SCPI commands related to User Views and Multiscreen functionality do not work, and return the error messages “-221, Settings conflict; Screen SCPI cannot be used when Display is disabled” or “221, Settings conflict; View SCPI cannot be used while Display is disabled”. These commands include:

Name	Command
Select User View	<code>:DISPLAY:VIEW:ADVANCED:SELECT</code>
Rename User View	<code>:DISPLAY:VIEW:ADVANCED:RENAME</code>
Delete User View	<code>:DISPLAY:VIEW:ADVANCED:DELETE</code>
Create User View	<code>:DISPLAY:VIEW:ADVANCED:NAME</code>
Select Screen	<code>:INSTRUMENT:SCREEN:SELECT</code>
Delete Screen	<code>:INSTRUMENT:SCREEN:DELETE</code>
Delete All But This Screen	<code>:INSTRUMENT:SCREEN:DELETE:ALL</code>
Add Screen	<code>:INSTRUMENT:SCREEN:CREATE</code>
Rename Screen	<code>:INSTRUMENT:SCREEN:RENAME</code>
Sequencer On/Off	<code>:SYSTEM:SEQUENCER</code>

---

Remote Command	<code>:DISPLAY:ENABLE OFF   ON   0   1</code>
Example	<code>:DISP:ENAB OFF</code>
Couplings	<code>:DISP:ENAB OFF</code> turns Backlight <b>OFF</b> and <code>:DISP:ENAB ON</code> turns Backlight <b>ON</b> , but changing Backlight settings does <i>not</i> change the state of <code>:DISP:ENAB</code>

---

---

Preset	<b>ON</b> Set by <b>:SYST:DEF MISC</b> , but not affected by <b>*RST</b> or <b>:SYSTem:PRESet</b>
State Saved	Not saved in instrument state
Backwards Compatibility Notes	<b>:SYST:PRES</b> no longer turns on <b>:DISPlay:ENABLe</b> as it did in legacy analyzers

---

### 3.12.6 Frequency

Opens the **Frequency** menu, which contains controls that allow you to control the Frequency and Channel parameters of the instrument.

Some features in the **Frequency** menu are the same for all measurements in the current Mode – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset. For example, the Center Freq setting is the same for all measurements – it does not change as you change measurements.

#### 3.12.6.1 Settings

Contains controls that pertain to the X axis parameters of the measurement. These parameters control how data on the vertical (X) axis is displayed and control instrument settings that affect the horizontal axis.

#### Carrier Reference Frequency

Sets the carrier reference frequency. The center frequencies of carriers are defined as offset frequency from this value. This reference frequency is also the reference of carrier configuration preset.

Since LTE-A, MSR and 5G NR Mode measurements often deal with multiple carriers with distinct bandwidths, the simple Center Frequency parameter used in most measurements does not apply here. Instead, the Carrier Reference Frequency is the key parameter. This must be distinct from the Center Frequency parameter used in other measurements, as Center Frequency can be a global parameter, and it would not make sense for Carrier Reference Frequency to take on this global value.

In LTE-A and 5G NR Modes, if the following conditions are satisfied at the same time:

- the Number of Component Carrier equals 1
- the Center Freq Offset equals to 0 Hz
- the mode of the Center Freq is Auto

then **Center Frequency** is equivalent to **Carrier Ref Frequency**. When Center Freq changes in such conditions, the mode of Center Freq remains as Auto, and Carrier Ref Freq changes to the same value. The major purpose of this coupling is for backwards compatibility with legacy LTE/LTE TDD Modes, in which **:SENSe:FREQuency:CENTer** is used to set up the frequency of the measurement.

Available only in 5G NR, LTEAFDD/TDD, and MSR Modes.

See ["More Information" on page 2214](#).

### Mode: 5G NR, LTEAFDD, LTEATDD

Remote Command	<code>[ :SENSe]:CCARrier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:REFerence?</code>
Example	<code>:CCAR:REF 2GHz</code> <code>:CCAR:REF?</code>
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency, as for <a href="#">"Center Frequency" on page 2215</a>

### Mode: MSR

Remote Command	<code>[ :SENSe]:CARRier:REFerence &lt;freq&gt;</code> <code>[ :SENSe]:CARRier:REFerence?</code>
Example	<code>:CARR:REF 2GHz</code> <code>:CARR:REF?</code>
Preset	1GHz
State Saved	Saved in instrument state
Min/Max	Depends on instrument minimum/maximum center frequency, as for <a href="#">"Center Frequency" on page 2215</a>

### More Information

In most applications, **Center Frequency** is generally where the carrier center is located at and thus plays a very important role. However, in LTE-Advanced TDD/FDD Modes, the measurements are done based on carrier center frequencies and its bandwidths, both of which are calculated or obtained according to the carriers' configuration.

The **Center Frequency** defined here only for the Monitor Spectrum, IQ Waveform and CCDF measurements, because those are general type measurements and focus on a certain frequency range, which may be the entire BS RF bandwidth, a frequency range of one of the component carriers or a range far away from the

component carriers to see spurious. The **Center Frequency** in those measurements has a different meaning, therefore it should be a separate setting from Carrier Reference Frequency.

Carrier center frequencies are defined using offsets from Carrier Reference Frequency, which determines absolute frequency locations, and which can be set as both absolute and relative frequency from the carrier reference frequency.

Since **Center Frequency** is only used in those measurements, Monitor Spectrum, IQ Waveform and CCDF, this control only appears on the **Frequency** menu of those measurements.

## Center Frequency

Sets the frequency that corresponds to the horizontal center of the graticule. While adjusting **Center Frequency**, **Span** is held constant.

The center frequency setting is the same for all measurements within a mode, that is, it is Meas Global. Some modes are also able to share a Mode Global center frequency value. If this is the case, the Mode will have a Global tab in its Meas Setup menu.

The Center Freq function sets (and queries) the Center Frequency for the currently selected input. If your instrument has multiple inputs, and you select another input, the Center Freq changes to the value for that input. SCPI commands are available to directly set the Center Freq for a specific input.

Center Freq is remembered as you go from input to input. Thus, you can set a Center Freq of 10 GHz with the RF Input selected, change to BBIQ, and set a Center Freq of 20 MHz, then switch to External Mixing and set a Center Freq of 60 GHz, and when you go back to the RF Input the Center Freq will go back to 10 GHz; back to BBIQ and it is 20 MHz; back to External Mixing and it is 60 GHz.

For more details, see the following:

- ["RF Center Freq \(Remote Command Only\)" on page 2219](#)
- ["Ext Mix Center Freq \(Remote Command Only\)" on page 2219](#)
- ["I/Q Center Freq \(Remote Command Only\)" on page 2220](#)
- ["Center Frequency Presets" on page 2217](#)
- ["VXT Models with Radio Heads/CIU Frequency Range" on page 2218](#)

---

Remote Command	<code>[ :SENSe ] :FREQuency:CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:CENTer?</code>
----------------	--

---

Example	Set <b>Center Frequency</b> to 50 MHz:
---------	--

	<p><code>:FREQ:CENT 50 MHz</code></p> <p>Increment <b>Center Frequency</b> by the value of <b>CF Step</b>:</p> <p><code>:FREQ:CENT UP</code></p> <p>Return the current value of <b>Center Frequency</b>:</p> <p><code>:FREQ:CENT?</code></p>
Notes	<p>Sets the RF, External Mixing or I/Q Center Frequency depending on the selected input</p> <ul style="list-style-type: none"> <li>- For RF input it is equivalent to <code>FREQ:RF:CENT</code></li> <li>- For I/Q input it is equivalent to <code>FREQ:IQ:CENT</code></li> <li>- For External Mixer it is equivalent to <code>FREQ:EMIX:CENT</code></li> </ul> <p>Preset and Max values depend on Hardware Options</p> <p>If no terminator (for example, MHz) is sent the terminator Hz is used. If a terminator with unit other than Frequency is used, an invalid suffix error message is generated</p>
Preset	<p>Depends on instrument maximum frequency, mode, measurement, and selected input</p> <p>See "Center Frequency Presets" on page 2217, "RF Center Freq (Remote Command Only)" on page 2219, "Ext Mix Center Freq (Remote Command Only)" on page 2219, "I/Q Center Freq (Remote Command Only)" on page 2220 and "VXT Models with Radio Heads/CIU Frequency Range" on page 2218</p>
State Saved	Saved in instrument state
Min/Max	<p>Depends on instrument minimum/maximum frequency, mode, measurement, and selected input</p> <p>See "Center Frequency Presets" on page 2217, "RF Center Freq (Remote Command Only)" on page 2219, "Ext Mix Center Freq (Remote Command Only)" on page 2219, "I/Q Center Freq (Remote Command Only)" on page 2220 and "VXT Models with Radio Heads/CIU Frequency Range" on page 2218</p>
Status Bits/OPC dependencies	<p>Non-overlapped</p> <p>Auto Function (MSR, LTE-Advanced FDD/TDD and 5G NR Modes Only)</p>
Remote Command	<p><code>[ :SENSe ] :FREQuency :CENTer :AUTO ON   OFF   1   0</code></p> <p><code>[ :SENSe ] :FREQuency :CENTer :AUTO?</code></p>
Example	<p><code>:FREQ:CENT:AUTO OFF</code></p> <p><code>:FREQ:CENT:AUTO?</code></p>
Dependencies	Only available for Monitor Spectrum, Power Stat CCDF and IQ waveform measurements in the MSR, LTE-Advanced FDD/TDD and 5G NR Modes
Couplings	<p>When <b>Center Frequency</b> is changed, state is automatically changed to <b>Manual</b></p> <p><b>Center Frequency</b>, <b>Center Frequency Offset</b> and <b>Carrier Reference Frequency</b> are coupled. When <b>Carrier Reference Frequency</b> changes:</p> <p>Center Frequency : Auto <b>Center Frequency</b> = <b>Carrier Reference Frequency</b> + <b>Center Frequency Offset</b> (fixed)</p> <p>Center Frequency : Man <b>Center Frequency</b> (fixed) = <b>Carrier Reference Frequency</b> + <b>Center Frequency</b></p>

	<b>Offset</b>
Preset	ON
State Saved	Saved in instrument state
Range	Auto Man

### Center Frequency Presets

The following table provides the Center Frequency Presets for the Spectrum Analyzer mode, and the Max Freq, for the various frequency options:

Freq Option	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
503 (all but CXA)	1.805 GHz	3.6 GHz	3.7 GHz
503 (CXA)	1.505 GHz	3.0 GHz	3.08 GHz
507 (all but CXA)	3.505 GHz	7.0 GHz	7.1 GHz
507 (CXA)	3.755 GHz	7.5 GHz	7.58 GHz
508 (all but MXE)	1.805 GHz	3.6 GHz	8.5 GHz
508 (MXE)	4.205 GHz	8.4 GHz	8.5 GHz
513	6.805 GHz	13.6 GHz	13.8 GHz
526 (except CXA and MXE)	13.255 GHz	26.5 GHz	27.0 GHz*
526 (CXA)	13.255 GHz	26.5 GHz	26.55 GHz
526 (MXE)	1.805 GHz	3.6 GHz	27.0 GHz
532	16.005 GHz	32.0 GHz	32.5 GHz
540	20.005 GHz	40.0 GHz	40.5 GHz
543	21.505 GHz	43.0 GHz	43.0 GHz
544	22.005 GHz	44.0 GHz	45.0 GHz
550	25.005 GHz	50.0 GHz	52 GHz
F03 (CXA-m)	1.505 GHz	3.0 GHz	3.08 GHz
F07 (CXA-m)	3.755 GHz	7.5 GHz	7.575 GHz
F13 (CXA-m)	6.805 GHz	13.6 GHz	13.8 GHz
F26 (CXA-m)	13.255 GHz	26.5 GHz	26.55 GHz
504 (M9421A, M8920A)	2.145 GHz	3.88GHz	3.88 GHz
506 (M9421A, M8920A)	3.245 GHz	6.08GHz	6.08 GHz
F06 (M9410A/11A)	1.0 GHz	6.08 GHz	6.08 GHz
F06 (M9415A)	1 GHz	1.08 GHz	6.6 GHz
F08 (M9415A)	1 GHz	1.08 GHz	8.6 GHz
F12 (M9415A)	1 GHz	1.08 GHz	12.9 GHz

\*For option 526, the Max CF in RTSA is 26.999999995 GHz.

#### N9041B Center Freq Presets

Input	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
Input 1, all models	25.005 GHz	50.0 GHz	52 GHz
Input 2, opt 585	42.505 GHz	85.0 GHz	86 GHz
Input 2, opt 590	45.005 GHz	90.0 GHz	92 GHz
Input 2, opt 5CX	55.005 GHz	110.0 GHz	110 GHz

#### Input 2, CXA and MXE

Model	CF after Mode Preset	Stop Freq after Mode Preset	Max Freq (can't tune above)
CXA opt C75	0.7505 GHz	1.5 GHz	1.58 GHz
MXE	505 MHz	1 GHz	1.000025 GHz

#### Tracking Generator Frequency Limits (CXA only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	9 kHz	3.0 GHz	3.08 GHz
T06	9 kHz	6.0 GHz	6.05 GHz

#### Tracking Generator Frequency Limits(CXA-m only)

Tracking Generator Option	Min Freq (clips to this freq when turn TG on and can't tune below while TG on)	If above this Freq, Stop Freq clipped to this Freq when TG turned on	Max Freq (can't tune above) while TG on
T03	2 MHz	3.08 GHz	3.08 GHz
T07	2 MHz	7.575 GHz	7.575 GHz
T13	2 MHz	13.8 GHz	13.8 GHz
T26	2 MHz	26.55 GHz	26.55 GHz

#### VXT Models with Radio Heads/CIU Frequency Range

The following table shows the Center Frequency Presets and Range for VXT modes with Radio Heads/CIU.

Products with Radio Heads/CIU	Preset	Start frequency	Stop frequency
M9421A + CIU	6 GHz	5.9 GHz	12 GHz

Products with Radio Heads/CIU	Preset	Start frequency	Stop frequency
M9410A + CIU	6 GHz	5.9 GHz	12 GHz
M9410A + CIU + RRH	25 GHz	24.25 GHz	43.5 GHz

### RF Center Freq (Remote Command Only)

Specifies the RF Center Frequency. Sets the **Center Frequency** to use when the RF input is selected, even if the RF input is not the input that is selected at the time the command is sent. Note that the **Center Frequency** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency:RF:CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:RF:CENTer?</code>
Example	<code>:FREQ:RF:CENT 30 MHz</code> <code>:FREQ:RF:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global. So, the value is independent in each Mode and common across all the measurements in the Mode
Dependencies	If the electronic/soft attenuator is enabled, any attempt to set <b>Center Frequency</b> such that the Stop Frequency would be >3.6 GHz fails and results in an advisory message. If the equivalent SCPI command is sent, this same message is generated as part of a “-221, Settings conflict” warning
Preset	See table above
State Saved	Saved in instrument state
Min	-79.999995 MHz
Max	See table above. Basically, instrument maximum frequency - 5 Hz

### Ext Mix Center Freq (Remote Command Only)

Specifies the External Mixer Center Frequency. Sets the **Center Frequency** to use when the External Mixer is selected, even if the External Mixer input is not the input that is selected at the time the command is sent. Note that the **Center Frequency** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency:EMIXer:CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:EMIXer:CENTer?</code>
Example	<code>:FREQ:EMIX:CENT 60 GHz</code> <code>:FREQ:EMIX:CENT?</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global. So, the value is independent in each Mode and common across all the measurements in the Mode
Couplings	When returning to External Mixing after having been switched to one of the other inputs (for example, RF), you return to the settings that existed when you left External Mixing. So, you return to the band you were in, with the <b>Center Frequency</b> that you had. However, <b>Span</b> is not an input-dependent parameter,

	therefore the <b>Span</b> setting from the other input is retained. Thus, the instrument returns to the <b>Span</b> setting from the previous input, limited as necessary by the current mixer setup
Preset	<p>When a <b>Mode Preset</b> is performed while in External Mixing, the Start frequency of the current Mode is set to the nominal Min Freq of the lowest harmonic range in the Harmonic Table for the current mixer setup. Similarly, the Stop frequency of the current Mode is set to the nominal Max Freq of the highest harmonic range in the Harmonic Table. <b>Center Frequency</b> thus presets to the point arithmetically equidistant from these two frequencies</p> <p>Note that, if the current measurement has a limited <b>Span</b> available to it, and cannot achieve the span shown in the table (<b>Span</b> = Stop Freq – Start Freq), the instrument uses the maximum <b>Span</b> the measurement allows, and still sets <b>Center Frequency</b> to the midpoint of the Start and Stop Freq values in the Harmonic Table</p> <p>When <b>Restore Input/Output Defaults</b> is performed, the mixer presets to the 11970A, whose Start and Stop frequencies are 26.5 and 40 GHz respectively. The center of these two frequencies is 33.25 GHz</p> <p>Therefore, after <b>Restore Input/Output Defaults</b>, if you go into External Mixing and do a <i>Mode Preset</i> while in the Spectrum Analyzer Mode, the resulting <b>Center Frequency</b> is 33.25 GHz</p>
State Saved	Yes
Min	The minimum frequency in the currently selected mixer band +5 Hz
Max	The maximum frequency in the currently selected mixer band –5 Hz

### I/Q Center Freq (Remote Command Only)

Specifies the I/Q Center Frequency. Sets the **Center Frequency** to be used when the I/Q input is selected, even if the I/Q input is not the input that is selected at the time the command is sent. Note that the **Center Frequency** function in the **Frequency** menu on the front panel always applies to the currently selected input.

Remote Command	<code>[ :SENSe ] :FREQuency :IQ :CENTer &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency :IQ :CENTer?</code>
Example	<code>:FREQ:IQ:CENT: 30 MHz</code>
Notes	This command is the same in all Modes, but the parameter is Measurement Global. So, the value is independent in each Mode and common across all the measurements in the Mode
Preset	0 Hz
State Saved	Saved in instrument state
Min/Max	-/+40.049995 MHz

### Center Frequency Offset

Sets the **Center Frequency Offset**, which is coupled with "**Center Frequency**" on [page 2215](#), and is only used in the Monitor Spectrum, IQ Waveform, Power Stat CCDF and PAVT measurements. The **Center Frequency**, **Center Frequency Offset** and **Carrier Reference Frequency** are coupled by this equation:

$$\text{Center Frequency} = \text{Carrier Reference Frequency} + \text{Center Frequency Offset}$$

When you change **Center Frequency Offset**, the **Center Frequency** is updated, but **Carrier Reference Frequency** is not.

Remote Command	<code>[ :SENSe ] :FREQuency:CENTer:OFFSet &lt;freq&gt;</code> <code>[ :SENSe ] :FREQuency:CENTer:OFFSet?</code>
Example	<code>:FREQ:CENT:OFFS 100kHz</code> <code>:FREQ:CENT:OFFS?</code>
Dependencies	Only available in the MSR, LTE-A FDD/TDD and 5G NR Modes
Preset	0 GHz
State Saved	Saved in instrument state
Min/Max	-/+500 GHz

### Adjust Center Frequency to Carrier Config

This immediate action control adjusts **Center Frequency** to cover all the configured carriers when "**Digital IF BW**" on page 2200 is **Auto**.

Remote Command	<code>[ :SENSe ] :WAVeform:FREQuency:CENTer:ADJust</code>
Example	<code>:WAV:FREQ:CENT:ADJ</code>
Couplings	When " <b>Digital IF BW</b> " on page 2200 is <b>Man</b> , pressing this control automatically changes it to <b>Auto</b>

### 3.12.7 Marker

Displays a menu that enables you to select, set up and control the markers for the current measurement.

If there are no active markers, **Marker** selects **Marker 1**, sets it to **POSiTion** (Normal) mode, and places it at the center of the display. If the selected marker is **OFF**, it is set to **POSiTion** mode and placed at the center of the screen, on the trace determined by the Marker Trace rules.

For details of the **POSiTion**, **DELTA**, and **OFF** mode options, see "**Marker Mode**" on page 2224.

#### 3.12.7.1 Select Marker

Sets the selected marker. The term "selected marker" is used throughout this document to specify which marker will be affected when you change marker settings, perform a **Peak Search**, etc.

The **Select Marker** control appears above the menu panel, indicating that it applies to all controls in the **Marker** menu panels. **Select Marker** is blanked if you select a tab whose controls do *not* depend on the selected marker (for example, **Counter**).

For any menu that includes **Select Marker**, the first control is always "**Marker Time**" on page 2222.

Notes	The selected marker is remembered even when not in the <b>Marker</b> menu and is used if a Search is done or a Band Function is turned on or for Signal Track or Continuous Peak
Preset	Marker 1
State Saved	The number of the selected marker is saved in instrument state
Annunciation	Appears in the marker results block label for <b>POSiTion</b> and Delta markers

### 3.12.7.2 Settings

The controls on this tab include the Marker active function and a radio button selection for "**Marker Mode**" on page 2224 (**POSiTion**, **DELTA**, or **OFF**) for the selected marker, as well as additional functions that help you use markers.

#### Marker Time

This is the fundamental control that you use to move a marker around on the trace. Because it is the default active function in the **Marker** menu, all you need to do is press **Marker** and turn the knob to move the marker left and right on the display. This is always the first control on any **Marker** menu page that follows the Selected Marker.

The SCPI command sets the marker X-Axis value in the current marker X-Axis Scale unit. The marker that is addressed becomes the selected marker. It has no effect (other than to cause the marker to become selected) if the control mode is **OFF**, but it is the SCPI equivalent of entering an X value if the control mode is **POSiTion** or **DELTA**.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:X &lt;time&gt;</code> <code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:X?</code>
Example	<code>:CALC:WAV:MARK1:X 1</code> <code>:CALC:WAV:MARK1:X?</code>
Notes	If no suffix is sent it will use the fundamental units for the current marker X Axis Scale. If a suffix is sent that does not match the current marker X Axis Scale unit, an invalid suffix message will be generated The query returns the marker's absolute X-Axis value if the control mode is <b>POSiTion</b> . It returns the offset from the marker's reference marker if the control mode is <b>DELTA</b> . The query is returned in the fundamental units for the current marker X-Axis scale: seconds for <b>Time</b> . If the marker is <b>OFF</b> the response is Not A Number
Dependencies	Grayed-out, and displays three dashes, for the value when the selected Marker is <b>OFF</b>

Preset	LTE, LTE-A, 5G NR Modes: 5ms All other Modes: 1.0 ms
Min/Max	-/+infinity Unlike legacy instruments, where the markers were forced to be on screen, X-Series marker values are not limited and do not clip
Backwards Compatibility SCPI	<code>:CALCulate:MARKer[1] 2 ... 4:X:CENTer</code> This alias is provided for compatibility with the Band Power function in PSA and ESA

### Marker X Axis Position (Remote Command Only)

Sets the marker X position in trace points. It has no effect if the control mode is **OFF**, but is the SCPI equivalent of entering a value if the control mode is Normal or Delta. The entered value is immediately translated into the current X Axis Scale units for setting the value of the marker.

Remote Command	<code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:X:POSition &lt;real&gt;</code> <code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:X:POSition?</code>
Example	<code>:CALC:WAV:MARK:X:POS 500</code> <code>:CALC:WAV:MARK:X:POS?</code>
Notes	The query returns the marker's absolute X-Axis value in trace points if the control mode is <b>POSition</b> , or the offset from the marker's reference marker in trace points if the control mode is <b>DELTA</b> . The value is returned as a real number, not an integer, corresponding to the translation from X-Axis Scale units to trace points
Preset	After a preset, all markers are turned <b>OFF</b> , so the query returns a <i>Not A Number (NAN)</i>
State Saved	No
Min/Max	-/+9.9E+37

### Marker Y Axis Value (Remote Query Only)

Queries the marker Y-Axis result value in the current marker Y-Axis unit. The "result" of a marker is the value that is displayed on the second line of the Marker Result block. To properly interpret the returned value, you must also know how the instrument's Y-Axis Unit is set, as described below.

A marker can have up to two results, only one of which is displayed or returned in a query, as follows:

- **Absolute** Result: every marker has an Absolute Result. For **POSition** and **DELTA** markers, the Y-axis value of the trace point the marker is currently on. The Absolute Result is displayed in the result block or returned as a query, unless the marker control mode is **DELTA**
- **Relative** Result: if a marker's control mode is **DELTA**, the *relative* result is displayed in the result block or returned in a query. This is the ratio of the

Absolute Result of a delta marker to the Absolute Result of its reference marker.  
The ratio is expressed in dB

Remote Command	:CALCulate:WAVeform:MARKer[1] 2 ... 12:Y?
Example	:CALC:WAV:MARK1:Y?
Notes	<p>When the marker is on, IQ waveform returns I and Q values</p> <p>Case #1 - Trace RF, I or Q: returns a single double value</p> <pre>&gt;:CALC:WAV:MARK1:Y? -2.402406506109E+001</pre> <p>Case #2 - Trace IQ: returns a double array of two values, the first is I, and the second is Q</p> <pre>&gt;:CALC:WAV:MARK1:Y? -3.006944493834E-003,+9.9870666467354E-004</pre> <p>The IQ selection is for backwards compatibility purposes. For new designs, use the I and/or Q selection instead</p> <p>You must be in a Mode that includes the Waveform measurement to use this command. Use :INSTru-ment:SElect to set the Mode</p>
Preset	Result depends on the marker setup and signal source
State Saved	No
Backwards Compatibility SCPI	:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNction:RESult?

## Marker Mode

Sets the marker control mode to **POSition**, **DELTA**, or **OFF**. All interactions and dependencies detailed under the control description are enforced when the remote command is sent. If the selected marker is **OFF**, pressing **Marker** sets it to **POSition (Normal)** and places it at the center of the screen on the trace determined by the Marker Trace rules. At the same time, Marker X-Axis Value appears on the Active Function area.

The default active function is the active function for the currently selected marker control mode. If the current control mode is **OFF**, there is no active function, and the active function is turned off.

Remote Command	:CALCulate:WAVeform:MARKer[1] 2 ... 12:MODE POSition   DELTA   OFF
Example	:CALC:WAV:MARK:MODE OFF :CALC:WAV:MARK:MODE?
Preset	OFF

State Saved	Saved in instrument state
Range	<b>POSition DELta OFF</b>
Annotation	Mkr # <X value> and <Marker value> upper right on graph When Marker Trace is Polar in WCDMA mode: Mkr # <Chip Value (RHO & QPSKEVM)/Symbol Value (CDP)>, <X value> and <Y value> upper right on graph

### Backwards Compatibility SCPI Command

Sets or queries the state of a marker. Setting a marker that is **OFF** to state **ON** or 1 puts it in **POSition** mode and places it at the center of the screen.

Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>OFF ON</b>
Backwards Compatibility SCPI	<b>:CALCulate:WAVeform:MARKer[1] 2 ... 12:STATe OFF   ON   0   1</b> <b>:CALCulate:WAVeform:MARKer[1] 2 ... 12:STATe?</b>

### Delta Marker (Reset Delta)

Pressing this control has the same effect as pressing the **DELta** selection in "**Marker Mode**" on page 2224. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

### Marker Settings Diagram

Lets you configure the **Marker** system using a visual utility.

### All Markers Off

Turns off all markers.

Remote Command	<b>:CALCulate:WAVeform:MARKer:AOff</b>
Example	<b>:CALC:WAV:MARK:AOff</b>

## Couple Markers

When this function is **ON**, moving any marker causes an equal X-Axis movement of every other marker that is not **OFF**. By “equal X-Axis movement” we mean that we preserve the difference between each marker’s X-Axis value (in the fundamental x-axis units of the trace that marker is on), and the X-Axis value of the marker being moved (in the same fundamental x-axis units).

This may result in markers going off-screen.

Remote Command	:CALCulate:WAVeform:MARKer:COUPlE[:STATe] ON   OFF   1   0 :CALCulate:WAVeform:MARKer:COUPlE[:STATe]?
Example	:CALC:WAV:MARK:COUP ON :CALC:WAV:MARK:COUP?
Preset	OFF Presets on Mode Preset and <a href="#">"All Markers Off" on page 2225</a>
State Saved	Saved in instrument state

### 3.12.7.3 Peak Search

The controls on this tab allow you to move the marker to selected peaks of the signal, giving you enormous analysis capabilities, particularly when combined with the **Delta** marker function.

#### NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

Pressing the **Peak Search** tab once you are already *in* the **Marker** menu does *not* perform a peak search.

## Marker Time

This is the fundamental control that you use to move a marker around on the trace. It is the same as ["Marker Time" on page 2222](#) in **Settings**.

## Peak Search

Moves the selected marker to the trace point that has the maximum Y-Axis value for that marker’s trace.

NOTE

Pressing the **Peak Search** hardkey automatically moves you to the **Peak Search** page of the **Marker** menu *and* performs a peak search.

---

Remote Command	<code>:CALCulate:WAVeform:MARKer[1]   2   ...   12:MAXimum</code>
Example	<code>:CALC:WAV:MARK2:MAX</code> <code>:SYST:ERR?</code> can be used to query the errors to determine if a peak is found. The message "No peak found" (-200) will be returned after an unsuccessful search
Notes	Sending this command selects the subopcoded marker In W-CDMA Mode, this command does <i>not</i> work when the selected marker is located on the Polar trace. In this case, the command is ignored

### Next Peak

Moves the selected marker to the peak that is next lower in amplitude than the current marker value.

If the selected marker was **OFF**, then it is turned **ON** as a **POSition** marker, and a peak search is performed.

---

Remote Command	<code>:CALCulate:WAVeform:MARKer[1]   2   ...   12:MAXimum:NEXT</code>
Example	<code>:CALC:WAV:MARK:MAX:NEXT</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

### Minimum Peak

Moves the selected marker to the minimum Y-Axis value on the current trace.

If the selected marker is **OFF**, it is turned **ON** before the minimum search is performed.

---

Remote Command	<code>:CALCulate:WAVeform:MARKer[1]   2   ...   12:MINimum</code>
Example	<code>:CALC:WAV:MARK:MIN</code>
Notes	Sending this command selects the subopcoded marker
State Saved	Not part of saved state

## Marker Delta

Pressing this control has the same effect as pressing **Delta** in "**Marker Mode**" on page 2224 on the **Settings** tab. The selected marker becomes a **Delta** marker. If the selected marker is already a **Delta** marker, the reference marker is moved to the current position of the selected marker, thus resetting the delta to zero.

The control is duplicated here to allow you to conveniently perform a **Peak Search** and change the marker's control mode to **Delta**, without having to access two separate menus.

### 3.12.7.4 Pk Search Config

Contains controls that let you set up the **Peak Search** functions.

Since the **Pk Search Config** functions are independent of the selected **Marker**, the **Select Marker** control does not appear while in **Pk Search Config**.

## Peak Search Range

Lets you specify the range of trace to perform peak search actions specified in the **Peak Search** menu.

Option	SCPI	Behavior
Full	FULL	<b>Peak Search</b> actions will be performed on the entire trace
Manual	MANual	Specifies the range of the trace to which <b>Peak Search</b> actions will apply
Remote Command	:CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe FULL   MANual	
Example	:CALC:WAV:MARK:PEAK:SEAR:RANG FULL	
Preset	FULL	
State Saved	Saved in instrument state	
Range	FULL   MANual	

## Peak Search Range Start

Specifies the start of the range, in seconds, to which **Peak Search** actions are applied. Displays as a green vertical line, with the label **Pk Search Start** on the left, as shown below.


3 LTE & LTE-A TDD Mode  
3.12 IQ Waveform Measurement



Remote Command	<code>:CALCulate:WAVeform:MARKer:PEAK:SEARch:RANGe:STARt &lt;time&gt;</code> <code>:CALCulate:WAVeform:MARKer:PEAK:SEARch:RANGe:STARt?</code>
Example	<code>:CALC:WAV:MARK:PEAK:SEAR:RANG:STAR 0.001</code>
Dependencies	Disabled when <b>Peak Search Range</b> is set to Full.
Preset	0.0 ms
Min/Max	0.0/+Meas Time

### Peak Search Range Stop

Specifies the end of the range, in seconds, to which **Peak Search** actions are applied. Displays as a green vertical line, with the label **Pk Search Stop** on the left, as shown below.

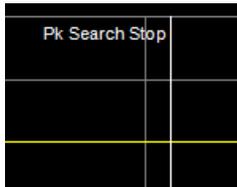

Remote Command	<code>:CALCulate:WAVeform:MARKer:PEAK:SEARch:RANGe:STOP &lt;time&gt;</code> <code>:CALCulate:WAVeform:MARKer:PEAK:SEARch:RANGe:STOP?</code>
Example	<code>:CALC:WAV:MARK:PEAK:SEAR:RANG:STOP 0.001</code>
Dependencies	Disabled when <b>Peak Search Range</b> is set to Full.
Preset	0.0 ms
Min/Max	0.0/+Meas Time

### 3.12.7.5 Marker Function

The controls in this tab perform post-processing operations on marker data.

The **Marker Function** menu controls which marker functions are turned on, and allows you to adjust the setup parameters for each function. These parameters include the following, but only one parameter can be assigned to a given marker:

- Marker Noise
- Interval Power
- Interval Density
- Off

### More Information

In the Waveform measurement, post-processing operations on markers are based on the measurement specifications. **Marker Functions** are distinct from measurement functions, which automatically perform complex sequences of setup, data acquisition, and display operations, to measure specified signal characteristics. **Marker Functions** are specified for each individual marker, and may be turned on individually for each marker.

### Marker Time

This is the fundamental control that you use to move a marker around on the trace. It is the same as "[Marker Time](#)" on page 2222 in **Settings**.

### Interval Function

Sets the marker control function type to one of:

Option	Parameter
Marker Noise	NOISe
Interval Power	BPOWer
Interval Density	BDENsity
Marker Function Off	OFF

All interactions and dependencies detailed under the control description are enforced when the remote command is sent.

Remote Command	:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNcTion NOISe   BPOWer   BDENsity   OFF :CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNcTion?
Example	:CALC:WAV:MARK:FUNC BPOW :CALC:WAV:MARK:FUNC?
Preset	OFF
State Saved	Saved in instrument state
Range	Marker Noise   Interval Power   Interval Density   Off
Annotation	Mkr # <X value> and <Marker value> upper right on graph

## Interval Span

Sets the width of the Span for the selected marker.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:SPAN &lt;time&gt;</code> <code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:SPAN?</code>
Example	<code>:CALC:WAV:MARK:FUNC:BAND:SPAN 20 ms</code> <code>:CALC:WAV:MARK:FUNC:BAND:SPAN?</code>
Couplings	Changing <b>Interval Span</b> necessarily changes " <a href="#">Interval Left</a> " on page 2231 and " <a href="#">Interval Right</a> " on page 2231
Preset	10% of Meas Time
State Saved	Saved in instrument state
Min	0
Max	100 s

## Interval Left

Sets the left edge time for the band of the selected marker.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:LEFT &lt;time&gt;</code> <code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:LEFT?</code>
Example	<code>:CALC:WAV:MARK12:FUNC:BAND:LEFT 1 s</code> <code>:CALC:WAV:MARK12:FUNC:BAND:LEFT?</code>
Couplings	Changing <b>Interval Left</b> necessarily changes " <a href="#">Interval Span</a> " on page 2231 and " <a href="#">Interval Right</a> " on page 2231
Preset	5% of Meas Time
State Saved	Yes
Min	0
Max	100 s

## Interval Right

Sets the right edge time for the band of the selected marker.

Remote Command	<code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:RIGHT &lt;time&gt;</code> <code>:CALCulate:WAVeform:MARKer[1] 2 ... 12:FUNCtion:BAND:RIGHT?</code>
Example	<code>:CALC:WAV:MARK12:FUNC:BAND:RIGH 1 s</code> <code>:CALC:WAV:MARK12:FUNC:BAND:RIGH?</code>

Notes	You must be in the IQ Waveform measurement to use this command
Couplings	Changing <b>Interval Right</b> necessarily changes " <a href="#">Interval Left</a> " on page 2231 and " <a href="#">Interval Span</a> " on page 2231
Preset	5% of Meas Time
State Saved	Yes
Min	0
Max	100 s

### 3.12.7.6 Properties

The controls on this tab are used to set certain properties of the selected marker.

#### Marker Time

This is the fundamental control that you use to move a marker around on the trace. It is the same as "[Marker Time](#)" on page 2222 in **Settings**.

#### Relative To

Selects the marker to which the selected marker is relative (its reference marker).

Every marker has another marker to which it is relative. This marker is referred to as the "*reference marker*" for that marker. This attribute is set by the **Marker, Properties, Relative To** key. The marker must be a **Delta** marker to make this attribute relevant. If it is a **Delta** marker, the reference marker determines how the marker is controlled and how its value is displayed. A marker cannot be relative to itself.

Remote Command	<code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:REFerence &lt;integer&gt;</code> <code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:REFerence?</code>
Example	<code>:CALC:WAV:MARK:REF 8</code> <code>:CALC:WAV:MARK:REF?</code>
Notes	This command causes the marker specified with the subopcode to become selected A marker cannot be relative to itself so that choice is not available, and if sent from SCPI generates error -221: "Settings conflict; marker cannot be relative to itself" When queried, a single value is returned (the specified marker number's relative marker)
Couplings	The act of specifying the selected marker's reference marker makes the selected marker a <b>Delta</b> marker If the reference marker is <b>OFF</b> , it is turned on in <b>POSiTion</b> mode at the <b>Delta</b> marker location
Preset	The preset default "Relative To" marker (reference marker) is the next higher numbered marker (current marker +1). For example, if Marker 2 is selected, then its default reference marker is Marker 3. The

	exception is Marker 12, which has a default reference of Marker 1 Set to default by <b>Restore Mode Defaults</b> . Not reset by <b>Marker Off</b> , <b>All Markers Off</b> , or <b>Preset</b>
State Saved	Saved in instrument state. Not affected by <b>Marker Off</b> and hence not affected by <b>Preset</b> or power cycle
Range	1 to 12 Remote Command only: if the range is exceeded, then the value is clipped
Min	1
Max	12
Annunciation	Appears in the marker label of a <b>Delta</b> marker

### Marker Trace

Assigns the specified marker to the designated trace.

Remote Command	<code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:TRACe RFENvelope   I   Q   IQ</code> <code>:CALCulate:WAVEform:MARKer[1] 2 ... 12:TRACe?</code>
Example	<code>:CALC:WAV:MARK:TRAC RFEN</code> <code>:CALC:WAV:MARK:TRAC?</code>
Notes	The <b>IQ</b> selection is for backwards compatibility. For new designs, use the <b>I</b> and/or <b>Q</b> selection instead
Preset	<b>RFEN</b>
State Saved	Yes
Range	<code>RFENvelope I Q IQ</code>

### Marker Settings Diagram

Lets you configure the Marker system using a visual utility. It is the same as "[Marker Settings Diagram](#)" on page 2225 in **Settings**.

## 3.12.8 Meas Setup

Contains functions for setting up the measurement parameters, and for setting up parameters global to all measurements in the Mode.

### 3.12.8.1 Settings

Contains frequently used **Meas Setup** functions to which you will want the fastest access.

## Avg/Hold Number (Averaging On/Off)

Sets the number of sweeps (average counts) that are averaged. After the specified number of sweeps, the "Average Mode" on page 2234 (terminal control) setting determines the averaging action.

Also lets you turn Averaging on or off.

Remote Command	<code>[ :SENSe]:WAVeform:AVERage:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:WAVeform:AVERage:COUNT?</code>
Example	<code>:WAV:AVER:COUN 1001</code> <code>:WAV:AVER:COUN?</code>
Preset	10
State Saved	Saved in instrument state
Min/Max	1/20001
Annotation	The average count is displayed in the measurement bar on the front panel display. The annotation appears in the format n/N, where n is the current average and N is the average count
Auto Function	

Remote Command	<code>[ :SENSe]:WAVeform:AVERage[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:WAVeform:AVERage[:STATe]?</code>
Example	<code>:WAV:AVER ON</code> <code>:WAV:AVER?</code>
Preset	OFF
State Saved	Saved in instrument state
Range	OFF   ON

## Average Mode

Sets the Average Mode:

- **EXponential**, The measurement averaging continues using the specified number of averages to compute each averaged value. The average is displayed at the end of each sweep
- **REPeat**: The measurement resets the average counter each time the specified number of averages is reached

Remote Command	<code>[ :SENSe]:WAVeform:AVERage:TCONtrol EXponential   REPeat</code> <code>[ :SENSe]:WAVeform:AVERage:TCONtrol?</code>
Example	<code>:WAV:AVER:TCON REP</code>

	<code>:WAV:AVER:TCON?</code>
Preset	<code>EXponential</code>
State Saved	Saved in instrument state
Range	<code>EXponential</code>   <code>REPeat</code>

## Average Type

Sets the type of averaging. When **AUTO** is selected, the instrument chooses the type of averaging. Available Average Types are:

Option	Parameter
Log-Pwr Avg	<code>LOG</code>
Power (RMS)	<code>RMS</code>
Voltage	<code>SCALar</code>

When one of the average types is selected manually, the instrument uses that type regardless of other instrument settings, and shows **Man** on the **Average Type** control.

Remote Command	<code>[ :SENSe ]:WAVeform:AVERage:TYPE LOG   MAXimum   MINimum   RMS   SCALar</code> <code>[ :SENSe ]:WAVeform:AVERage:TYPE?</code> For EXT-C, E6630A, E6640A, M90XA, use the following command <code>[ :SENSe ]:WAVeform:AVERage:TYPE LOG   RMS   SCALar</code>
Example	<code>:WAV:AVER:TYPE RMS</code> <code>:WAV:AVER:TYPE?</code>
Notes	The selections <b>MAX</b> and <b>MIN</b> are retained for backwards compatibility, but they are removed from the front panel access because they are not an Average function
Couplings	<b>AUTO</b> selects Power ( <b>RMS</b> ) averaging if a Marker Function (Marker Noise, Band/Intvl Power) is on
Preset	<code>RMS</code>
State Saved	Saved in instrument state
Range	Log-Pwr Avg   Power (RMS)   Voltage  Auto Function
Remote Command	<code>[ :SENSe ]:WAVeform:AVERage:TYPE:AUTO ON   OFF   1   0</code> <code>[ :SENSe ]:WAVeform:AVERage:TYPE:AUTO?</code>
Example	<code>:WAV:AVER:TYPE:AUTO 0</code> <code>:WAV:AVER:TYPE:AUTO?</code>
Preset	<code>ON</code>

## Time Avg Num

Sets the number of HW averages to be executed per each data acquisition.

### HW Averaging

Changes the number of time averages to be made using hardware. This averaging is much faster than the standard averaging done in software. The hardware averaging is done on the complex voltage time trace data before any measurement application averaging is done. Both types of averaging (HW and SW) can be done on the same measurement data.

When time averaging is being done in HW, each trace update represents N fresh data acquisitions averaged together, where N is the number of time averages. You cannot access the individual time data. Note that this averaging is done prior to the SW averaging done within the application. Thus, if time averaging is turned on, the trace in this measurement shows the result of HW averaging even if the normal (SW) averaging is turned off. Subsequent normal (SW) averaging is orthogonal to this hardware-based time averaging.

Thus, it is possible to turn off normal (SW) averaging within the application but still have the HW averaging set to a certain number greater than 1. In other words, turning averaging off within the measurement will not affect HW averaging. If HW averaging needs to be turned off, simply set the HW Averaging parameter to 1.

The **Auto/Man** feature of **Time Avg Num** works differently than other parameters. Since it is time averaging, a trigger source something other than **Free Run** should be used to synchronize successive data acquisitions to avoid cancelling out the signal to be measured. It is most useful for a periodic signal with known periods used in conjunction with the Periodic trigger. Thus, when in **Auto**, the Trigger Source automatically changes to **Periodic** trigger when **Time Avg Num** is turned **ON**. The trigger period is set to the current Meas Time value. Any changes to Meas Time change the **Periodic** trigger period to the same value and vice versa. If a trigger source other than **Periodic** trigger is manually selected, the **Time Avg Num Auto/Man** toggle is set to **Man**.

Remote Command	<code>[ :SENSe ] :WAVeform:AVERage:TACount &lt;integer&gt;</code> <code>[ :SENSe ] :WAVeform:AVERage:TACount?</code>
Example	<code>:WAV:AVER:TAC 10</code> <code>:WAV:AVER:TAC?</code>
Notes	Only available when Option DP2, B40, or wider IF Bandwidth option is installed
Preset	1
State Saved	Saved in instrument state
Min/Max	1/65535

### Auto Function

Remote Command	<code>[ :SENSe]:WAVeform:AVERage:TACount:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:WAVeform:AVERage:TACount:AUTO?</code>
Example	<code>:WAV:AVER:TAC:AUTO ON</code> <code>:WAV:AVER:TAC:AUTO?</code>
Preset	ON
Range	Auto Man

### Meas Time

Lets you set how long the measurement is performed. X Scale *only* changes the scale of the display.

Remote Command	<code>[ :SENSe]:WAVeform:SWEp:TIME &lt;time&gt;</code> <code>[ :SENSe]:WAVeform:SWEp:TIME?</code>
Example	<code>:WAV:SWE:TIME 50 ms</code> <code>:WAV:SWE:TIME?</code>
Notes	Specifies and returns how long the measurement is performed. It is the time record length of the measurement waveform. The Max time may be reduced when the sample frequency is high due to the memory limitation
Preset	LTE, LTETDD, LTEAFDD, LTEATDD, 5G NR Modes: 10 ms All other Modes: 2.000000 ms
State Saved	Saved in instrument state
Range	1.000 us to 100.00 s
Min/Max	1.000 us/100.0 s 1.000 us/3200 s

### Sample Rate

Sets an arbitrary sample rate for the acquired data to be processed.

Remote Command	<code>[ :SENSe]:WAVeform:SRATe &lt;freq&gt;</code> <code>[ :SENSe]:WAVeform:SRATe?</code>
Example	<code>:WAV:SRAT 1.3636 MHz</code>
Notes	The command and query are available when Option DP2, B40, or wider IF Bandwidth option is installed. For other configurations, only the query is available
Dependencies	To set a 2.4 GHz Sample Rate with Options R15 or R20, <b>Center Frequency</b> must be greater than or equal to 3.5 GHz To set a 5.1 GHz Sample Rate with Option R40, <b>Center Frequency</b> must be greater than or equal to 10 GHz

Preset	Mode	Value
	5G NR, LTEA FDD/TDD	Automatically calculated
	BASIC	125.0 kHz
	BASIC	100 MHz
	EDGE/GSM	637.5 kHz
	MSR	125.0 kHz
	PNOISE	125.0 kHz
	WCDMA	125.0 kHz
	WLAN	31.25 MHz

Min/Max	Value
	12.5 Hz/Option dependent
	For Option DP2, B40 or wider IF Bandwidth option:
	Digital IF 10 MHz path 12.5 MHz
	Digital IF 25 MHz path 31.25 MHz
	Digital IF 40 MHz path 50 MHz
	Option B85 85 MHz path 106.25 MHz
	Option B1A 125 MHz path 156.25 MHz
	Option B1X 140 MHz path 175 MHz
	Option B1Y 160 MHz path 200 MHz
	Option B2X 255 MHz path 300 MHz
	Option B5X 510 MHz path 600 MHz
	Option R10 1 GHz path 1.2 GHz
	Option R15 1.5 GHz path 2.4 GHz
	Option R20 2 GHz path 2.4 GHz
	Option R40 4 GHz path 5.1 GHz
	For all other configurations:
	10 MHz path 15 MHz
	Option B25 25 MHz path 45 MHz

### Meas Setup Summary Table

Lets you view and access many of the parameters in the **Meas Setup** menus on one screen.

## Spur Avoidance

Because VXT models M9410A/11A/15A/16A are direct-conversion (zero-IF) receivers, feedthrough leakage from the local oscillator appears as a spurious signal (spur) at the center frequency. The **Spur Avoidance** function is provided to eliminate this spur, at the expense of some measurement speed.

When **Spur Avoidance** is enabled (the default), the instrument uses a software algorithm to remove this spur from the displayed measurement data, but the algorithm only operates under certain conditions. Specifically, it only operates when the Digital IF BW  $\leq$  maxBW/2.5. See "[More Information](#)" on page 2239.

You can disable this function to speed up your measurement, by setting **Spur Avoidance** to **Disabled**.

Note that when **Spur Avoidance** is not in effect, either because you have disabled it or because the Digital IF BW  $>$  maxBW/2.5, the following warning message appears in the status bar: "Settings Alert; Spur Avoidance Off". This is to alert you that measurement accuracy might be impacted by the fact that **Spur Avoidance** is not in effect.

The spur avoidance function is not available for:

- M9410A/11A with EP6 option at frequency above 6 GHz
- M9415A/16A at frequency below 380 MHz and above 12.3 GHz
- M9410E/11E/15E/16E at frequency below 380 MHz and above 25.9 GHz

Remote Command	<code>[ :SENSe]:WAVeform:SAVoid[:STATe] ON   OFF   0   1</code> <code>[ :SENSe]:WAVeform:SAVoid[:STATe]?</code>
Example	<code>:WAV:SAVoid ON</code> <code>:WAV:SAVoid?</code>
Dependencies	Only appears in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>ON OFF</code>

### More Information

The Maximum Digital IF BW depends on the installed options, and selected **Center Frequency**.

### VXT models M9410A/11A

Option limitation:

Option	Max Digital IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center frequency limitation:

Center Frequency	Max Digital IF BW
330 MHz ~ 380 MHz	(CF – 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 5480 MHz (without Option EP6)	1200 MHz
5480 MHz ~ 6080 MHz (without Option EP6)	(6080 MHz – CF) * 2
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 6000 MHz (Option EP6)	1200 MHz
6000 MHz ~ 6600 MHz (Option EP6)	(6600 MHz – CF) * 2

### VXT models M9415A/16A

Option limitation:

Option	Max Digital IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center frequency limitation:

Center Frequency	Max Digital IF BW
330 MHz ~ 380 MHz	(CF – 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 12300 MHz	1200 MHz
12300 MHz ~ 12900 MHz	(12900 MHz – CF) * 2

## M9410E/11E

Option Limitation:

Option	Maximum IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	(CF - 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 25.9 GHz (without Option EP6)	1200 MHz
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 25.9 GHz (Option EP6)	1200 MHz
25.9 GHz ~ 26.5 GHz	Min(Max BW by option, 2*(26.5 GHz-Center Freq))

## M9415E/16E

Option Limitation:

Option	Maximum IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz

Center Frequency	Maximum IF BW
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	(CF – 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 25.9 GHz	1200 MHz
25.9 GHz ~ 26.5 GHz	Min(Max BW by option, 2*(26.5 GHz–Center Freq))

## Auto Couple

Immediately puts all **Auto/Man** functions into **Auto**. **Auto Couple** is confined to the current measurement only. It does not affect other measurements in the Mode.

In the **Auto** state, **Auto/Man** functions are said to be “coupled”, meaning their values change as you make changes to other values in the measurement. This helps ensure accurate measurements and optimum dynamic range. **Auto Couple** is an immediate action function, and when it is executed, all the **Auto/Man** controls for the current measurement are set to **Auto**, and all measurement settings coupled to the **Auto/Man** parameters are automatically set to their optimal values.

For further details of measurement-specific settings (if any), see "[Measurement-Specific Details](#)" on page 2243 below.

Remote Command	:COUPle ALL
Example	:COUP ALL
Backwards Compatibility SCPI	:COUPLE ALL   NONE
Backwards Compatibility Notes	:COUP:NONE puts all Auto/Man parameters in manual mode, decoupling all the coupled instrument parameters. It is retained for backwards compatibility and is <i>not</i> recommended for making measurements or new designs

All **Auto/Man** parameter couplings in the measurement are set to **Auto**. This includes couplings that may be unavailable or grayed-out due to the current state. For example, in the Swept SA measurement, there is no **Auto/Man** coupling for **RBW** while in Zero Span. Nonetheless, if **Auto Couple** were executed while in Zero Span, it would set **RBW** to Auto "behind the scenes" so that, on exit from Zero Span, it would be in **Auto**.

Any **Auto/Man** selection specific (local) to the other measurements in the current Mode are not affected by **Auto Couple**. Any functions that are *not* coupled with other instrument parameters, such as ranging or leveling variables, such as **AutoRange** or **AutoScale**, are not affected.

Executing **Auto Couple** generates the informational message, "All Auto/Man functions have been set to Auto".

Each parameter, upon being set to **Auto**, selects and sets the appropriate auto-coupled value based on that parameter's coupling rules. The Dependency Resolver orchestrates the couplings for parameters that depend on one or more other parameters. The coupling and dependency rules for each parameter are defined in the section describing that parameter.

Executing **Auto Couple** *does not* affect markers, marker functions, trace or display attributes, or any other instrument setting other than those specifically mentioned above.

## Measurement-Specific Details

### TOI (SA Mode only)

Parameters affected by **Auto Couple** are:

- Center Frequency Step
- Resolution Bandwidth
- Span/RBW Ratio
- Sweep Time
- Video BANDwidth VBW/RBW ratio
- Upper and Lower Tone (set to Sense)
- Zero span measurement Resolution Bandwidth
- Zero span measurement Dwell Time

### Harmonics (SA Mode only)

Parameters affected by **Auto Couple** are:

- Resolution Bandwidth
- Fundamental Frequency

- Dwell Time
- Range Table Resolution Bandwidths
- Range Table Dwell Times

## Meas Preset

Restores all measurement parameters to their default values.

Remote Command	<code>:CONFigure:WAVeform</code>
Example	<code>:CONF:WAV</code>
Notes	Restore default values of all parameters

### 3.12.8.2 Radio

Contains controls to select link direction.

## Direction

Specifies whether the LTE-Advanced signal is an uplink signal or a downlink signal.

The choice of link direction determines the Sync/Format, Chan Profile and Time. Advanced menus all change based on the link direction selected. Also, since downlink and uplink signals use OFDMA and SC-FDMA respectively, the list of trace results available and the default traces presented change based on the link direction parameter.

Remote Command	<code>[ :SENSe ]:RADio:STANdard:DIRection DLINK   ULINK</code> <code>[ :SENSe ]:RADio:STANdard:DIRection?</code>
Example	<code>:RAD:STAN:DIR DLIN</code>
Couplings	TDD: Changing direction affects the sync source of periodic trigger source or gate source If Direction is uplink, the sync source is RF burst If Direction is downlink, the sync source is External1 If direction is downlink, the menu Measure PRACH/SRS is disabled and the value is off FDD/TDD: Changing Direction affects many other modulation analysis setup parameters
Preset	DLIN ULIN on E6640A DLIN on E6650A
State Saved	Yes
Range	Downlink Uplink

---

For E6640A, Direction is restricted to Uplink only, Downlink is not selectable  
 For E6650A, Direction is restricted to Downlink only, Uplink is not selectable

### 3.12.8.3 Component Carriers

Contains settings that let you configure the analyzer to match the component carriers in your LTE-A signal.

#### Number of Component Carriers

Specifies how many component carriers are included in LTE-Advanced TDD/FDD measurements. Each component carrier complies with the LTE specifications.

LTE-Advanced TDD/FDD supports a maximum of five component carriers, so the maximum transmission bandwidth is up to 100 MHz.

Remote Command	<code>[ :SENSe]:CCARrier:COUNT &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:COUNT?</code>
Example	<code>:CCAR:COUN 1</code> <code>:CCAR:COUN?</code>
Notes	The max number of Component carriers can be set greater than one with 9080B/9082B-2FP license
Preset	1
State Saved	Yes
Min	1
Max	5

#### Carrier Allocation

Specifies the carrier frequency allocation. There are two types of allocation, contiguous and non-contiguous. Non-Contiguous frequency allocation is defined as an allocation where two sub-blocks are separated with a sub-block gap:

- CONTiguous – All the component carriers belong to one block and no sub-block gap exists
- NCONTiguous – Component carriers are separated into two sub-blocks. Allocation Break Pt Carrier determines how sub-blocks are configured


Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation CONTiguous   NCONTiguous</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation?</code>
Example	<code>:CCAR:CONF:ALL CONT</code> <code>:CCAR:CONF:ALL?</code>

Preset	CONTiguous
State Saved	Saved in instrument state
Range	Contiguous Non-Contiguous

### Non-Contiguous Break at

Specifies an allocation break point in non-contiguous carrier allocation. First sub-block starts from the lowest frequency carrier and stops at the allocation break point carrier. Next sub-block starts from the next upper frequency carrier and ends at the highest frequency carrier.

one example is shown below. In the example carrier indices are not in the order of carrier frequency. In the example, Allocation Break Pt Carrier is CC1. It means that sub-block 1 ends at carrier CC1 and sub-block 2 starts at carrier CC4. Sub-block gap is located between carrier CC1 and CC4.

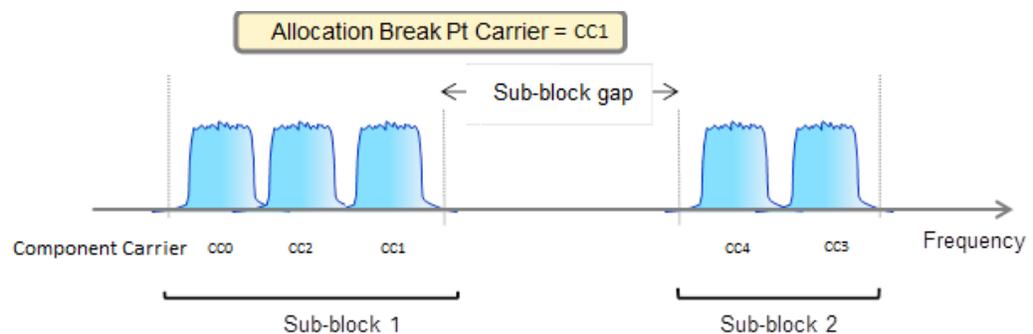

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint CC0   ...   CC4</code> <code>[ :SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint?</code>
Example	<code>:CCAR:CONF:ALL:NCON:ABP CC0</code> <code>:CCAR:CONF:ALL:NCON:ABP?</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Allocation Break Point is coupled to Number of Component Carriers. For example, Allocation Break Point list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Saved in instrument state
Range	CC0 CC1 CC2 CC3 CC4

### Configure Comp Carriers

Lets you perform a detailed configuration of your component carriers, including number of carriers, presets, bandwidth, offset, integration bandwidth, etc.

## Configure CCs

Lets you configure System Bandwidth, frequency offsets, and integration bandwidth, and also lets you exclude certain carriers from the measurement.

### Number of Component Carriers

See ["Number of Component Carriers" on page 2245](#).

### Carrier Allocation

See ["Carrier Allocation" on page 2245](#).

### Non-Contiguous Break at

See ["Non-Contiguous Break at" on page 2246](#).

## System BW

Enables you to set the system bandwidth of each component carrier for LTE-Advanced / NB-IoT signal (which also determines the total number of resource blocks for Modulation Analysis measurement).

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier0 ... 4:RADio:STANdard:BANdwidth?</code>
Example	<code>:CCAR4:RAD:STAN:BANd B5M</code>
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200kHz (NB-IoT)
Backwards Compatibility SCPI	<code>[ :SENSe]:RADio:STANdard:BANdwidth</code>

## Measure Carrier

Sets whether to measure this component carrier or not.

Remote	<code>[ :SENSe]:CCARrier0 ... 4[:STATe] OFF   ON   0   1</code>
--------	---

Command	<code>[ :SENSe]:CCARrier0 ... 4[:STATe]?</code>
Example	<code>:CCAR0 ON</code> <code>:CCAR0?</code>
Notes	The command is used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	ON
State Saved	Saved in instrument state
Range	On Off

## Frequency Offset

Sets the component carrier center frequency as offset from the Carrier Ref Frequency.

Remote Command	<code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier&lt;n&gt;:FREQuency:OFFSet?</code>
Example	<code>:CCAR4:FREQ:OFFS 10MHz</code> <code>:CCAR4:FREQ:OFFS?</code>
Notes	Used with a sub-op code <n> (default=0) to specify the component carrier for configuration. The range of the sub-op code is determined by the number of component carriers
Preset	0Hz
State Saved	Saved in instrument state
Min	-3.5GHz
Max	3.5GHz

## Spectrum

Determines if the spectrum of the incoming data is mirrored or not. The actual mirroring is accomplished by conjugating the complex time data.

Note that only the Modulation Analysis measurement and Conformance EVM measurement support this feature.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SPECTrum NORMal   INVert</code> <code>[ :SENSe]:CCARrier0 ... 4:SPECTrum?</code>
Example	<code>:CCAR0:SPEC INV</code> <code>:CCAR0:SPEC?</code>
Preset	NORM
State Saved	Yes

Range	Normal   Invert
Backwards Compatibility SCPI	<code>[ :SENSe ] :SPECTrum</code>

## UL/DL Configuration

Allows you to set the Uplink and Downlink allocation configuration of the signal being measured. The choice of link direction will determine which slot in the frame is used for uplink transmission, and which slot for downlink transmission.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :ULDL CONF0   ...   CONF6</code> <code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :ULDL ?</code>
Example	<code>:CCAR0 :RAD :STAN :ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUDDDDDD) CONF4: Configuration 4 (DSUDDDDDDDD) CONF5: Configuration 5 (DSUDDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6
Backwards Compatibility SCPI	<code>[ :SENSe ] :RADio :STANdard :ULDL</code>

## Dw/GP/Up Len

This control allows you to set the DwPTS/GP/UpPTS length configuration of the signal being measured. The choice of link direction will determine the length of DwPTS, GP and UpPTS in the Special Subframe.

Remote Command	<code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :DGPU CONF0   ...   CONF9</code> <code>[ :SENSe ] :CCARrier0   ...   4 :RADio :STANdard :DGPU ?</code>
Example	<code>:CCAR0 :RAD :STAN :DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2

	CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9
Backwards Compatibility SCPI	<a href="#">[:SENSe]:RADio:STANdard:DGPU</a>

## CHP Power Integ BW

Specifies the range of integration used in calculating the power in the component carrier s in the CHP measurement.

Remote Command	<a href="#">[:SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration &lt;freq&gt;</a> <a href="#">[:SENSe]:CCARrier0 ... 4:CHPower:BANDwidth:INTEgration?</a>																
Example	<a href="#">:CCAR0:CHP:BAND:INT 20MHz</a> <a href="#">:CCAR0:CHP:BAND:INT?</a>																
Notes	You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode																
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>CHP Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.4 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>3 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>10 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>15 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>20 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>200 kHz</td> </tr> </tbody> </table>	System Bandwidth	CHP Integ BW	1.4 MHz (B1M4)	1.4 MHz	3 MHz (B3M)	3 MHz	5 MHz (B5M)	5 MHz	10 MHz (B10M)	10 MHz	15 MHz (B15M)	15 MHz	20 MHz (B20M)	20 MHz	200 kHz(B200K)	200 kHz
System Bandwidth	CHP Integ BW																
1.4 MHz (B1M4)	1.4 MHz																
3 MHz (B3M)	3 MHz																
5 MHz (B5M)	5 MHz																
10 MHz (B10M)	10 MHz																
15 MHz (B15M)	15 MHz																
20 MHz (B20M)	20 MHz																
200 kHz(B200K)	200 kHz																
Preset	5 MHz																
State Saved	Saved in instrument state																

3 LTE & LTE-A TDD Mode  
3.12 IQ Waveform Measurement

Min	100 kHz
Max	20 MHz
Backwards Compatibility SCPI	<code>[ :SENSe]:CHPower:BANDwidth:INTEgration</code> <code>[ :SENSe]:CHPower:BWIDth:INTEgration</code>

### ACP Power Integ BW

Specifies the Measurement Noise Bandwidth used to calculate the power in the component carriers in the ACP measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:ACPpower:BANDwidth[1] 2:INTEgration?</code>																								
Example	<code>:CCAR0:ACP:BAND:INT 20MHz</code> <code>:CCAR0:ACP:BAND:INT?</code>																								
Notes	Carrier sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in the LTEATDD/LTEAFDD mode. Use :INSTRUMENT:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table.																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS ACP Meas Noise BW</th> <th>MS ACP Meas Noise BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS ACP Meas Noise BW	MS ACP Meas Noise BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Yes																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:ACPpower:CARRier[1] 2:LIST:BANDwidth[:INTEgration]</code> <code>[ :SENSe]:ACPpower:CARRier[1] 2:LIST:BWIDth[:INTEgration]</code>																								

## SEM Power Integ BW

Specifies the integration bandwidth used to calculate the power in the component carriers in SEM measurement.

Remote Command	<code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BAWdwidth[1] 2:INTEgration &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier0 ... 4:SEMAsk:BAWdwidth[1] 2:INTEgration?</code>																								
Example	<code>:CCAR0:SEM:BAWd:INT 20MHz</code> <code>:CCAR0:SEM:BAWd:INT?</code>																								
Notes	Bandwidth sub op code, 1 is for BTS, 2 for MS. Default is BTS You must be in LTEATDD/LTEAFDD Mode to use this command. Use :INSTrument:SElect to set the mode																								
Couplings	When System Bandwidth of the parameter set is changed, the value of this parameter also changes as shown in the following table. Note that you cannot set the value exceeding the corresponding System Bandwidth																								
	<table border="1"> <thead> <tr> <th>System Bandwidth</th> <th>BTS SEM Integ BW</th> <th>MS SEM Integ BW</th> </tr> </thead> <tbody> <tr> <td>1.4 MHz (B1M4)</td> <td>1.095 MHz</td> <td>1.08 MHz</td> </tr> <tr> <td>3 MHz (B3M)</td> <td>2.715 MHz</td> <td>2.7 MHz</td> </tr> <tr> <td>5 MHz (B5M)</td> <td>4.515 MHz</td> <td>4.5 MHz</td> </tr> <tr> <td>10 MHz (B10M)</td> <td>9.015 MHz</td> <td>9.0 MHz</td> </tr> <tr> <td>15 MHz (B15M)</td> <td>13.515 MHz</td> <td>13.5 MHz</td> </tr> <tr> <td>20 MHz (B20M)</td> <td>18.015 MHz</td> <td>18.0 MHz</td> </tr> <tr> <td>200 kHz(B200K)</td> <td>180 kHz</td> <td>180 kHz</td> </tr> </tbody> </table>	System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW	1.4 MHz (B1M4)	1.095 MHz	1.08 MHz	3 MHz (B3M)	2.715 MHz	2.7 MHz	5 MHz (B5M)	4.515 MHz	4.5 MHz	10 MHz (B10M)	9.015 MHz	9.0 MHz	15 MHz (B15M)	13.515 MHz	13.5 MHz	20 MHz (B20M)	18.015 MHz	18.0 MHz	200 kHz(B200K)	180 kHz	180 kHz
System Bandwidth	BTS SEM Integ BW	MS SEM Integ BW																							
1.4 MHz (B1M4)	1.095 MHz	1.08 MHz																							
3 MHz (B3M)	2.715 MHz	2.7 MHz																							
5 MHz (B5M)	4.515 MHz	4.5 MHz																							
10 MHz (B10M)	9.015 MHz	9.0 MHz																							
15 MHz (B15M)	13.515 MHz	13.5 MHz																							
20 MHz (B20M)	18.015 MHz	18.0 MHz																							
200 kHz(B200K)	180 kHz	180 kHz																							
Preset	4.515 MHz 4.5 MHz																								
State Saved	Saved in instrument state																								
Min	100 kHz																								
Max	20 MHz																								
Backwards Compatibility SCPI	<code>[ :SENSe]:SEMAsk:BAWdwidth[1] 2:INTEgration</code>																								

## Carrier Config Presets

Lets you configure the Component Carrier presets.

## Preset ETC

The ETC configuration is applied. The component carrier parameters are dynamically changed using values of the parameters of each test configuration under Carrier Config Presets menu when some test configuration is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig NONE   ETC1   ETC2   ETC3</code> <code>[ :SENSe]:CCARrier:CONFig?</code>
Example	<code>:CCAR:CONF ETC1</code> <code>:CCAR:CONF?</code>
Notes	The control for NONE is not available
State Saved	Saved in instrument state
Range	ETC1 ETC2 ETC3

## Max BTS RF Bandwidth

Sets max BS RF bandwidth used when the carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:RFBW &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:RFBW?</code>
Example	<code>:CCAR:CONF:RFBW 40MHz</code> <code>:CCAR:CONF:RFBW?</code>
Preset	40MHz
State Saved	Saved in instrument state
Min	1.4MHz
Max	200 MHz

## Carrier Spacing Delta

Sets delta channel spacing used when the carrier configuration preset runs. Channel spacing is determined from this value and the default channel spacing defined in the standard, i.e.  $\text{Channel spacing} = (\text{BW}_{\text{chan1}} + \text{BW}_{\text{chan2}}) * 0.5 + [\text{the delta spacing}]$ . Since this value is a difference from the default spacing, this value can be negative to allow narrower channel spacing. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA &lt;freq&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:SPACing:DELTA?</code>
Example	<code>:CCAR:CONF:SPAC:DELTA -200kHz</code>

	<code>:CCAR:CONF:SPAC:DELT?</code>
Preset	0Hz
State Saved	Saved in instrument state
Min	-1.0 MHz
Max	10.0 MHz

## ETC1 Attributes

Sets ETC1 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:CMAx?</code>
Example	<code>:CCAR:CONF:ETC1:CMAx 5</code> <code>:CCAR:CONF:ETC1:CMAx?</code>
Preset	5
State Saved	Saved in instrument state
Max	5
Min/Max	1

### Component Carrier System BW

Sets bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:Bandwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:Bandwidth?</code>
Example	<code>:CCAR:CONF:ETC1:Band B5M</code> <code>:CCAR:CONF:ETC1:Band?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### Component Carrier Narrowest BW

Sets narrowest bandwidth of the component carriers placed when the ETC1 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code> <code>[ :SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest?</code>
Example	<code>:CCAR:CONF:ETC1:BAND:NARR B1M4</code> <code>:CCAR:CONF:ETC1:BAND:NARR?</code>
Preset	B1M4
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### ETC2 Attributes

Sets ETC2 carrier configuration.

### Max Number of Component Carriers

Sets max component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAX &lt;integer&gt;</code> <code>[ :SENSe]:CCARrier:CONFig:ETC2:CMAX?</code>
Example	<code>:CCAR:CONF:ETC2:CMAX 5</code> <code>:CCAR:CONF:ETC2:CMAX?</code>
Preset	5
State Saved	Saved in instrument state
Min	1
Max	5

### Carrier Side (with BTS RF BW)

Select the side of RF bandwidth to place the ETC2 component carriers. When this value is changed, the carrier configuration preset is initiated.

- NEGative – Negative (lower) edge of RF bandwidth. If the option is selected, the available component carriers will be placed sequentially from the lower edge of the RF bandwidth starting from first
- POSitive – Positive (upper) edge of RF bandwidth, If the option is selected, the available component carriers will be placed sequentially from the upper edge of the RF bandwidth starting from first

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE NEGative   POSitive [:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:SIDE NEG :CCAR:CONF:ETC2:BAND:SIDE?</code>
Preset	NEGative
State Saved	Saved in instrument state
Range	NEGative POSitive

## Component Carrier System BW

Sets carrier bandwidth of the component carriers placed when the ETC2 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1] 2 ... 5 B1M4   B3M   B5M   B10M   B15M   B20M   B200K [:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?</code>
Example	<code>:CCAR:CONF:ETC2:BAND:CARR B5M :CCAR:CONF:ETC2:BAND:CARR?</code>
Dependencies	The Carrier Bandwidth is coupled to Max Component Carriers. The settings are enabled following the Max Component Carriers. For example, the 1st Carrier Bandwidth and 2nd Carrier Bandwidth will be available if the Max Component Carriers is 2
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

## ETC3 CC Bandwidth

Sets the bandwidth of the component carriers placed when the ETC3 carrier configuration preset runs. When this value is changed, the carrier configuration preset is initiated.

Remote Command	<code>[[:SENSe]:CCARrier:CONFig:ETC3:BANDwidth B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
----------------	---

	<code>[ :SENSe ] :CCARrier :CONFig :ETC3 :BANDwidth ?</code>
Example	<code>:CCAR :CONF :ETC3 :BAND B5M</code> <code>:CCAR :CONF :ETC3 :BAND ?</code>
Preset	B5M
State Saved	Saved in instrument state
Range	1.4MHz 3MHz 5MHz 10MHz 15MHz 20MHz 200kHz

### 3.12.8.4 Meas Standard

Enables you to access Preset to Standard functions.

In LTE-Advanced TDD Mode, the parameters under Predefined Params impact the gate or trigger length and delay of the following measurements:

- Monitor Spectrum
- Channel Power
- ACP
- Power Stat CCDF
- Occupied BW
- Spectrum Emission Mask
- Spurious Emission

In LTE-Advanced FDD Mode, the Predefined Parameters in this section are used in the Transmit On/Off Power measurement. The Modulation Analysis measurement has its specific Predefined Parameters setting.

In LTE V2X Mode, Predefined parameters apply to all LTE V2X measurements.

### System BW

Sets the demodulator to the specified bandwidth and configures the settings of every component carrier according to the default values listed in table for the current direction (Uplink or Downlink).

For example, when Number of Component is 3, after executing the command `RAD:STAN:PRES B5M` or selecting corresponding Bandwidth in the dropdown menu, all the 3 component carriers are configured as 5Mhz bandwidth, and all the settings of these 3 component carriers are set according to the table.

Remote	<code>[ :SENSe ] :RADio :STANdard :PRESet B1M4   B3M   B5M   B10M   B15M   B20M   B200K</code>
--------	--

Command	
Example	<code>:RAD:STAN:PRES B5M</code>
Notes	B200K selection is available in LTE-A FDD mode B200K option is for NB-IoT which requires N9080EM3E license
Couplings	Preset To Standard presets parameter values listed in section “Values for each Preset To Standard”. And the system bandwidth of each component carrier under the Component Carrier Setup will be preset to the selected one
Preset	B5M
State Saved	Yes
Range	1.4 MHz (6 RB)   3 MHz (15 RB)   5 MHz (25 RB)   10 MHz (50 RB)   15 MHz (75 RB)   20 MHz (100 RB)   200 kHz (NB-IoT)

## UL/DL Config

Sets the TDD UL/DL Allocation parameter of each carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:ULDL CONF0   ...   CONF6</code> <code>[ :SENSe]:RADio:STANdard:PRESet:ULDL?</code>
Example	<code>:RAD:STAN:PRES:ULDL CONF0</code>
Notes	CONF0: Configuration 0 (DSUUUDSUUU) CONF1: Configuration 1 (DSUUDDSUUD) CONF2: Configuration 2 (DSUDDDSUDD) CONF3: Configuration 3 (DSUUUDDDDD) CONF4: Configuration 4 (DSUUDDDDDD) CONF5: Configuration 5 (DSUDDDDDDD) CONF6: Configuration 6 (DSUUUDSUUD)
Dependencies	When the setting is selected, the ULDL Alloc per component carrier under the Component carrier Setup will be preset to the selected value
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6

## Dw/GP/Up Len

Sets the TDD special sub-frame configuration of each component carrier to the selected value.

Remote Command	<code>[ :SENSe]:RADio:STANdard:PRESet:DGPU CONF0   ...   CONF9</code> <code>[ :SENSe]:RADio:STANdard:PRESet:DGPU?</code>
----------------	---

3 LTE & LTE-A TDD Mode  
3.12 IQ Waveform Measurement

Example	<code>:RAD:STAN:PRES:DGPU CONF0</code>
Notes	CONF0: Configuration 0 CONF1: Configuration 1 CONF2: Configuration 2 CONF3: Configuration 3 CONF4: Configuration 4 CONF5: Configuration 5 CONF6: Configuration 6 CONF7: Configuration 7 CONF8: Configuration 8 CONF9: Configuration 9
Dependencies	When the setting is selected, the Dw/GP/Up Len per Component Carrier under the Component Carrier Setup will be preset to the selected value The special sub-frame configuration 9 is only enabled when it is LTE-Advanced TDD
Preset	CONF0
State Saved	Yes
Range	Configuration 0 Configuration 1 Configuration 2 Configuration 3 Configuration 4 Configuration 5 Configuration 6 Configuration 7 Configuration 8 Configuration 9

### Analysis Slot

Specifies the starting analysis slot. The measurement will adjust the gate delay or trigger delay according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:SLOT TS0   TS1   DPTS1   UPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12   TS13   TS14   TS15   TS16   TS17   TS18   TS19</code> <code>[ :SENSe]:RADio:SLOT?</code>
Example	<code>:RAD:SLOT TS0</code>
Couplings	Measurement's gate length or meas interval will couple to the parameter
Preset	TS0
State Saved	Yes
Range	TS0   TS1   DwPTS1   UpPTS1   TS4   TS5   TS6   TS7   TS8   TS9   TS10   TS11   TS12(DwPTS2)   TS13 (UpPTS2)   TS14   TS15   TS16   TS17   TS18   TS19

### Meas Interval

This parameter specifies the desired slots count that needs to be analyzed. The measurement will adjust the gate length or meas interval according to this parameter.

For NB-IoT uplink cases scenarios, when Measure NPRACH is Off, this parameter indicates not only the slots' count to be analyzed, but the time elapse of the off power measurements as well.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:MINInterval &lt;integer&gt;</code> <code>[ :SENSe]:RADio:MINInterval</code>						
Example	<code>:RAD:MIN 1</code>						
Notes	The backwards compatible command <code>[ :SENSe]:PVTime:MINInterval</code> is available in LTE FDD & LTE-A FDD Modes						
Dependencies	This parameter is disabled when all the below conditions are met at the same time: <ul style="list-style-type: none"> <li>- System BW is "200 kHz (NB-IoT)"</li> <li>- Direction is "uplink"</li> <li>- NB-IoT Subcarrier Spacing is "3.75kHz"</li> <li>- Meas NPRACH is "OFF"</li> </ul>						
Couplings	Disabled when the "Measure PRACH" is in scope and its value is not off, then the actual meas interval is the length PRACH or SRS channel For NB-IoT case scenario, when the parameter is disabled, its value is automatically determined by both Meas NPRACH: <table border="1" data-bbox="407 1102 1404 1234"> <thead> <tr> <th>Meas NPRACH</th> <th>Meas Interval</th> </tr> </thead> <tbody> <tr> <td>Preamble0</td> <td>3 slots</td> </tr> <tr> <td>Preamble1</td> <td>4 slots</td> </tr> </tbody> </table>	Meas NPRACH	Meas Interval	Preamble0	3 slots	Preamble1	4 slots
Meas NPRACH	Meas Interval						
Preamble0	3 slots						
Preamble1	4 slots						
Preset	1						
State Saved	Yes						
Min	1						
Max	20, when System BW is NOT "200 kHz (NB-IoT)" 16, otherwise						
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTime:MINInterval</code>						

## CP Length

Specifies whether the cyclic prefix is configured as NORMAL or EXTENDED for power measurement. The parameter will affect the gate length or meas interval parameters.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power measurement.

Remote Command	<code>[ :SENSe]:RADio:CPLength NORMal   EXTended</code> <code>[ :SENSe]:RADio:CPLength?</code>
Example	<code>:RAD:CPL NORM</code>
Notes	The backwards compatible SCPI command <code>[ :SENSe]:PVTTime:CPLength</code> is available in LTE FDD & LTE-A FDD Modes
Dependencies	Disabled when System BW is set to “200 kHz (NB-IoT)” and Direction is “uplink”
Couplings	Set to NORMal when System BW is set to “200 kHz (NB-IoT)”
Preset	NORMal
State Saved	Yes
Range	Normal Extended
Backwards Compatibility SCPI	LTE: <code>[ :SENSe]:PVTTime:CPLength</code>

## Measure PRACH/SRS

Specifies whether the analysis slot is used for PRACH channel or SRS and the PRACH preamble format of the analysis slot.

The measurement will adjust the gate length or meas interval according to this parameter.

Remote Command	<code>[ :SENSe]:RADio:MEASure OFF   PPF0   PPF1   PPF2   PPF3   PPF4   SRS   DSRS</code> <code>[ :SENSe]:RADio:MEASure?</code>
Example	<code>:RAD:MEAS OFF</code>
Couplings	If direction is downlink, the control is disabled and the value is set to off If this control value is not off, Meas Interval is disabled
Preset	OFF
State Saved	Yes
Range	Off Preamble 0 Preamble 1 Preamble 2 Preamble 3 Preamble 4 SRS DSRS

## Reference Config

Specifies which component carrier’s ULDL Allocation Configuration and Dw/Up Length Configuration settings are used to adjust time slot to be measured automatically. For Modulation Analysis measurement, this control specifies which CC is used as the reference CC for time alignment results.

In LTE-A FDD Mode, this parameter only appears in the Transmit On|Off Power and Modulation Analysis measurements.

Remote Command	<code>[ :SENSe]:RADio:RCONfig CC0   ...   CC4</code>
----------------	--

	<code>[ :SENSe]:RADio:RCONfig?</code>
Example	<code>:RAD:RCON CC0</code>
Notes	The options CC1~CC4 can be enabled with 9080B/9082B-2FP license
Dependencies	Reference Configuration is coupled to Number of Component Carriers. For example, reference configuration list will include CC0~CC1 if the number of Component Carriers is 2
Preset	CC0
State Saved	Yes
Range	CC0 CC1 CC2 CC3 CC4

### 3.12.8.5 Advanced

Contains advanced functions that are used for specific applications. These settings should not be changed for most measurements.

Does not appear in VXT.

### Phase Noise Optimization

Sets the LO (local oscillator) phase noise behavior for various desired operating conditions.

Remote Command	<code>[ :SENSe]:WAVEform:FREQuency:SYNThesis[:STATe] 1   ...   5</code> For the meaning of each numeric option value, see <a href="#">"Parameter Options &amp; Installed Options"</a> on page 2263 below <code>[ :SENSe]:WAVEform:FREQuency:SYNThesis[:STATe]?</code>
Example	<code>:WAV:FREQ:SYNT 2</code> Selects optimization for best wide offset phase noise
Dependencies	Does not appear in all models. For models that do not display this control, the SCPI command is accepted for compatibility, but no action is taken Not available in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/116E
Preset	Because this function is in <b>AUTO</b> after <b>Preset</b> , the state of this function after <b>Preset</b> will be automatically calculated
State Saved	Saved in instrument state
Range	See <a href="#">"Ranges"</a> on page 2267 below

#### Auto Function

Remote Command	<code>[ :SENSe]:WAVEform:FREQuency:SYNThesis:AUTO[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:WAVEform:FREQuency:SYNThesis:AUTO[:STATe]?</code>
Example	<code>:WAV:FREQ:SYNT:AUTO ON</code>
Preset	<b>ON</b>

## Parameter Options & Installed Options

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster without regard to noise or with optimum noise characteristics without regard to speed.

### Parameter Values Summary

Option	#	Description
"Balanced" on page 2264	1	<ul style="list-style-type: none"> <li>- In instruments with EPO, balances close-in phase noise with spur avoidance</li> <li>- In instruments without EPO optimizes phase noise for small frequency offsets from the carrier</li> </ul>
"Best Wide-offset" on page 2264	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 2265	3	Optimizes LO for tuning speed
"Best Close-in" on page 2263	4 or 1*	<ul style="list-style-type: none"> <li>- In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance</li> <li>- In instruments without EPO, this setting is accepted but no action is taken</li> </ul>
"Best Spurs" on page 2264	5	<ul style="list-style-type: none"> <li>- In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance</li> <li>- In instruments without EPO, this setting is accepted but no action taken</li> </ul>
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

\*Dependent on Option EPO installation. See "Best Close-in" on page 2263 below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, "Fast Tuning" on page 2265 is identical in effect to "Best Close-in" on page 2263.

### Best Close-in

Without option EPO

:FREQ:SYNT 1

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset <20 kHz]

With option EPO

`:FREQ:SYNT 4`

In instruments with Option EPO, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for close-in measurements than the "Balanced" on page 2264 setting, parameter 1 selects "Balanced" on page 2264 in EPO instruments, in the interests of optimizing code compatibility across the family. Parameter 4 selects "Best Close-in" on page 2263, which is usually not as good a choice as "Balanced" on page 2264.

### Balanced

`:FREQ:SYNT 1`

In instruments with EPO, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within  $\pm 1$  octave around 400 kHz offset. The spurs will always be below  $-70$  dBc.

### Best Spurs

`:FREQ:SYNT 5`

In instruments with EPO, the LO is configured for better phase noise than the "Best Wide-offset" on page 2264 case close to the carrier, but the configuration has 11 dB worse phase noise than the "Best Close-in" on page 2263 case mostly within  $\pm 1$  octave around 300 kHz offset. Spurs are even lower than in the "Balanced" on page 2264 case at better than  $-90$  dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

### Best Wide-offset

`:FREQ:SYNT 2`

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within  $\pm 1$  octave around 400 kHz offset. The spurs will always be below  $-70$  dBc.

### Fast Tuning

`:FREQ:SYNT 3`

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term "[Fast Tuning](#)" on [page 2265](#) refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EP0, this is the same configuration as "[Best Spurs](#)" on [page 2264](#). It is available with the "[Fast Tuning](#)" on [page 2265](#) label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a "[Fast Tuning](#)" on [page 2265](#) option, the settings for "[Best Close-in](#)" on [page 2263](#) are used if "[Fast Tuning](#)" on [page 2265](#) is selected. This gives the fastest possible tuning for that hardware set.)

### Auto

`:FREQ:SYNT:AUTO ON`

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

## Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
<p>EPO</p> <p>Models with option EPO have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)</p>	Center frequency is < 699.9 kHz	"Balanced" on page 2264
	Span > 114.1 MHz, <i>or</i> RBW > 800 kHz	"Fast Tuning" on page 2265
	RBW > 290 kHz, <i>or</i> Span > 4.2 MHz	"Best Wide-offset" on page 2264
	Other conditions	"Balanced" on page 2264
<p>EP1</p> <p>Models with option EP1 have a two-loop local oscillator, which switches to a single loop for fast tuning (available in PXA)</p>	Span > 44.44 MHz, <i>or</i> RBW > 1.9 MHz, <i>or</i> Source Mode is set to "Tracking"	"Fast Tuning" on page 2265
	Center frequency is < 195 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 1.3 MHz <i>and</i> RBW <= 75 kHz	"Best Close-in" on page 2263
	All other conditions	"Best Wide-offset" on page 2264
<p>EP2</p> <p>Models with option EP2 use a different loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 2263; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)</p>	CF < 130 kHz, <i>or</i> CF > 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 40 kHz	"Best Close-in" on page 2263
	Span > 22 MHz, <i>or</i> RBW > 400 kHz, <i>or</i> CF ≤ 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 23 kHz	"Fast Tuning" on page 2265
	All other conditions	"Best Wide-offset" on page 2264
<p>EP4</p> <p>(available in CXA for improved phase noise)</p>	Span > 101 MHz <i>or</i> RBW > 1.15 MHz <i>or</i> Source Mode is set to "Tracking"	"Fast Tuning" on page 2265
	CF is < 109 kHz <i>or</i> CF >= 4.95 MHz <i>and</i> Span <= 666 kHz <i>and</i> RBW < 28 kHz	"Best Close-in" on page 2263
	All other conditions	"Best Wide-offset" on page 2264
All Other Models	Span > 12.34 MHz, <i>or</i> RBW > 250 kHz, <i>or</i>	"Fast Tuning" on page 2265

3 LTE & LTE-A TDD Mode  
3.12 IQ Waveform Measurement

Models with Option	Conditions	Selection
Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 2265 are actually the same as "Best Close-in" on page 2263, but the rules are implemented this way so that the user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning	Source Mode is set to "Tracking"	
	Center frequency is < 25 kHz, or CF >= 1 MHz and Span <= 141.4 kHz and RBW <= 5 kHz	"Best Close-in" on page 2263
	All other conditions	"Best Wide-offset" on page 2264

In all the above cases:

- The RBW to be used in the calculations is the equivalent –3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

## Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EPO	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
	2	Best Wide-offset	[offset > 800 kHz]
EP1	3	Fast Tuning	[same as Best Close-In]
	1	Best Close-in	[offset < 140 kHz]
	2	Best Wide-offset	[offset > 160 kHz]
EP2, EP3, EP5	3	Fast Tuning	[single loop]
	1	Best Close-in	[offset < 70 kHz]
	2	Best Wide-offset	[offset > 100 kHz]
EP4	3	Fast Tuning	[medium loop bw]
	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

## ADC Dither

Toggles the dither function On and Off. The dither function improves linearity for low level signals, at the expense of a higher noise floor.

The reduced clipping-to-noise ratio results in higher noise because the clipping level of the ADC relative to the front terminals remains unchanged with the introduction of dither. The enhanced linearity is mostly improved scale fidelity.

With dither on, the third-order distortions are usually invisible for mixer levels below -35 dBm. With dither off, these distortions can be visible, with typical power levels of -110 dBm referred to the mixer. Detection nonlinearity can reach 1 dB for dither off at mixer levels around -70 dBm and lower, while the specified nonlinearity is many times smaller with dither on.

Remote Command	<code>[ :SENSe]:WAVeform:ADC:DITHer[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:WAVeform:ADC:DITHer[:STATe]?</code>
Example	<code>:WAV:ADC:DITH ON</code> <code>:WAV:ADC:DITH?</code>
Notes	The dither function improves linearity for low level signals, at the expense of a higher noise floor
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>ON OFF</code>
Backwards Compatibility SCPI	<code>[ :SENSe]:WAVeform:WBIF:ADC:DITHer</code> <code>[ :SENSe]:WAVeform:PDITHer</code>
Auto Function	
Remote Command	<code>[ :SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:WAVeform:ADC:DITHer:AUTO[:STATe]?</code>
Example	<code>:WAV:ADC:DITH:AUTO ON</code> <code>:WAV:ADC:DITH:AUTO?</code>
Notes	Sets ADC dithering to automatically select whether dithering is needed The dither function improves linearity for low level signals, at the expense of a higher noise floor
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>Auto Man</code>

## LO Dither

When **LO Dither** is turned on, the local oscillator frequency is rapidly changed by small, random amounts. This helps spread the power of spurious signals within the passband, which lowers their level, thus increasing power dynamic range. This is only required in very wide passbands, so this feature only appears with Option H1G.

Remote Command	<code>[ :SENSe]:WAVeform:LO:DITHer[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:WAVeform:LO:DITHer[:STATe]?</code>
Example	<code>:WAV:LO:DITH 1</code> <code>:WAV:LO:DITH?</code>
Dependencies	<p>Only available when the instrument has the Option H1G installed. If you try to turn <b>ON</b> LO Dither in any other case, an error message is generated, -241, "Hardware missing; Option H1G required"</p> <p>Only appears in some Modes (for example, VMA and IQ Analyzer)</p> <p>The <b>LO Dither</b> function is turned <b>OFF</b> and grayed-out when the <b>IF Path</b> is set to a path other than 1 GHz. If you press the grayed-out control, a warning message "LO Dither only available with IF Path 1 GHz" is shown. If you try to set <b>LO Dither</b> to <b>ON</b> remotely while it is grayed-out, a message "-221,Settings conflict; LO Dither only available with IF Path 1 GHz" is returned</p> <p>When <b>LO Dither</b> is turned <b>ON</b>, the <b>Phase Noise Optimization</b> control is grayed-out. If you try to change the PNO value via front panel or SCPI in that case, an error is generated, "LO Dither must be turned off to change this value"</p>
Couplings	<p>As with most parameters with an <b>AUTO</b> state, "<a href="#">Auto Couple</a>" on page 2242 sets it to Auto, which then selects <b>AUTOorange</b>. Setting any specific value (<b>AUTOorange</b>, <b>LOW</b> or <b>HIGH</b>) sets the <b>AUTO</b> state to false</p> <p>When <b>LO Dither</b> is turned <b>ON</b>, <b>Phase Noise Optimization</b> is set to "Best Close-In". If the <b>Phase Noise Optimization</b> value changes due to turning on <b>LO Dither</b>, a warning message "Phase Noise Optimization changed due to LO Dither activation" is displayed</p>
Preset	<b>OFF</b>
State Saved	Saved in instrument state

## IF Gain

Selects the range of IF gain.

When in **AUTOorange** mode, the IF checks its range once for data acquisition, to provide the best signal to noise ratio. You can specify the range for the best speed, and optimize for noise or for large signals.

When **IF Gain** is set to **AUTOorange**, the IF Gain is set to **HIGH** initially for each chunk of data. The data is then acquired. If the IF overloads, then the IF Gain is set to **LOW**, and the data is re-acquired. Because of this operation, the **AUTOorange** setting requires more measurement time, as the instrument checks/resets its range. You can get faster measurement speed by forcing the range to either the **HIGH** or **LOW**

gain setting, *but* you must ensure that your measurement conditions will not overload the IF (in the **HIGH** gain range), that your signals are well above the noise floor (for the **LOW** gain range), and that the signals are not changing.

When **Digital Bus Out** (under the **Input/Output** menu) is **ON**, the IF Gain State **AUTOrange** selection is not allowed. Thus, in this case IF Gain State will be set to **LOW**.

This only applies to the RF input. It does not apply to baseband I/Q input.

Remote Command	<code>[ :SENSe]:WAVeform:IF:GAIN[:STATe] AUTOrange   LOW   HIGH   OTHer</code> <code>[ :SENSe]:WAVeform:IF:GAIN[:STATe]?</code>
Example	<code>:WAV:IF:GAIN HIGH</code> <code>:WAV:IF:GAIN?</code>
Notes	Only applies to the RF input. Does not apply to baseband I/Q input
Dependencies	If you try to select <b>AUTOrange</b> via SCPI while <b>Digital Bus Out</b> is <b>ON</b> , an error message -224, "Illegal parameter value; "IF Gain Autorange not allowed when Digital Bus Out is on" is displayed If you try to select <b>AUTOrange</b> via the front panel while <b>Digital Bus Out</b> is <b>ON</b> , an error message -221 "Settings conflict; "IF Gain Autorange not allowed when Digital Bus Out is ON" is displayed Other IF Gain is available only in models with DIF40
Couplings	As for most parameters that have an <b>AUTO</b> state, " <b>Auto Couple</b> " on page 2242 sets it to <b>AUTOrange</b> , which then selects <b>LOW</b> or <b>HIGH</b> depending on the IF Path. Setting any specific value ( <b>AUTOrange</b> , <b>LOW</b> , <b>HIGH</b> , or <b>OTHer</b> ) sets the <b>AUTO</b> state to <b>OFF</b>
Preset	<b>LOW</b>
State Saved	Saved in instrument state
Range	Autorange (Slower Follows Signals)   Low (Best for Large Signals)   High (Best Noise Level)   Other (Explicit)
Auto Function	
Remote Command	<code>[ :SENSe]:WAVeform:IF:GAIN:AUTO[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:WAVeform:IF:GAIN:AUTO[:STATe]?</code>
Example	<code>:WAV:IF:GAIN:AUTO ON</code> <code>:WAV:IF:GAIN:AUTO?</code>
Notes	Activates the auto rules for IF Gain
Preset	<b>ON</b>
Range	<b>OFF   ON</b>

## IF Gain Offset

Sets **IF Gain Offset** for the 40 MHz, 140 MHz, 160 MHz IF Paths in 1 dB steps from the minimum gain available to the maximum. Increasing the gain can increase the amplitude of small signals, as long as you do not overdrive the hardware. Wideband gain should usually be adjusted after setting the input attenuation.

Internally, the **IF Gain** value will change based on the current configuration of the Hardware. You can choose to offset this value with this parameter. Hence the value specified is not an absolute value but relative to the current internal **IF Gain** setting.

For example:

- IF Gain Low + IF Gain Offset +4 dB = Total IF Gain of +4 dB (0 + 4 = 4)
- IF Gain High + IF Gain Offset +4 dB = Total IF Gain of +14 dB (10 + 4 = 14)
- IF Gain Low + IF Gain Offset -6 dB = Total IF Gain of -6 dB (0 - 6 = -6)
- IF Gain High + IF Gain Offset -6 dB = Total IF Gain of +6dB (10 - 6 = 4)

The available **IF Gain** depends on the **IF Path** and center frequency. The maximum **IF Gain** may not be achievable at all times, depending on the configuration.

Remote Command	<code>[ :SENSe ] :WAVeform :IF :GAIN :OFFSet &lt;rel_amp1&gt;</code> <code>[ :SENSe ] :WAVeform :IF :GAIN :OFFSet?</code>
Example	Set <b>IF Gain Offset</b> to 2: <code>:WAV :IF :GAIN :OFFS 2</code>
Couplings	Not available in EXM, or UXM When " <b>IF Gain</b> " on page 2269 State is set to <b>OTHer</b> , the " <b>Other IF Gain</b> " on page 2271 value is used and <b>IF Gain Offset</b> is ignored
Preset	0
State Saved	Saved in instrument state
Min/Max	Depends on hardware present

## Other IF Gain

Explicitly specifies the IF gain value.

Only applies when "**IF Gain**" on page 2269 is set to **OTHer**. When **IF Gain** is set to **AUTOrange**, **LOW**, or **HIGH**, this value is ignored.

Available only in models with DIF40.

Remote Command	<code>[ :SENSe ] :WAVeform :IF :GAIN :LEVe1 &lt;rel_amp1&gt;</code> <code>[ :SENSe ] :WAVeform :IF :GAIN :LEVe1?</code>
Example	<code>:WAV :IF :GAIN :LEV -10</code> <code>:WAV :IF :GAIN :LEV?</code>
Preset	0
State Saved	Saved in instrument state
Min/Max	Depends upon hardware present

## Mixing Mode


Lets you alternate between mixing modes for the Local Oscillator (LO). The default setting is **NORMa1** LO mixing mode, which is determined by the instrument configuration to be either “high side” or “low side”. Typically, “high side” mixing mode is used for the **NORMa1** LO mixing mode. Selecting the **ALternate** mixing mode selects “low side” mixing when the **NORMa1** mixing mode is “high side” mixing, and selects “high side” mixing mode when the **NORMa1** mixing mode is “low side” mixing.

This function can be useful in eliminating images that may be seen from adjacent channels. Whenever you have signals that are twice the IF above your signal of interest, they will alias on top of your signal. To eliminate this issue, switch to **ALternate** side mixing and your measurement will be image free.

### Example

When testing a 5G signal with all 8 channels **ON**, where each channel is 100 MHz wide, there may be cases where you see images from adjacent channels. To measure the highest frequency carrier, you will need to switch to alternate side mixing, to avoid the 8th carrier from aliasing on top of other carriers.

3 LTE & LTE-A TDD Mode  
 3.12 IQ Waveform Measurement

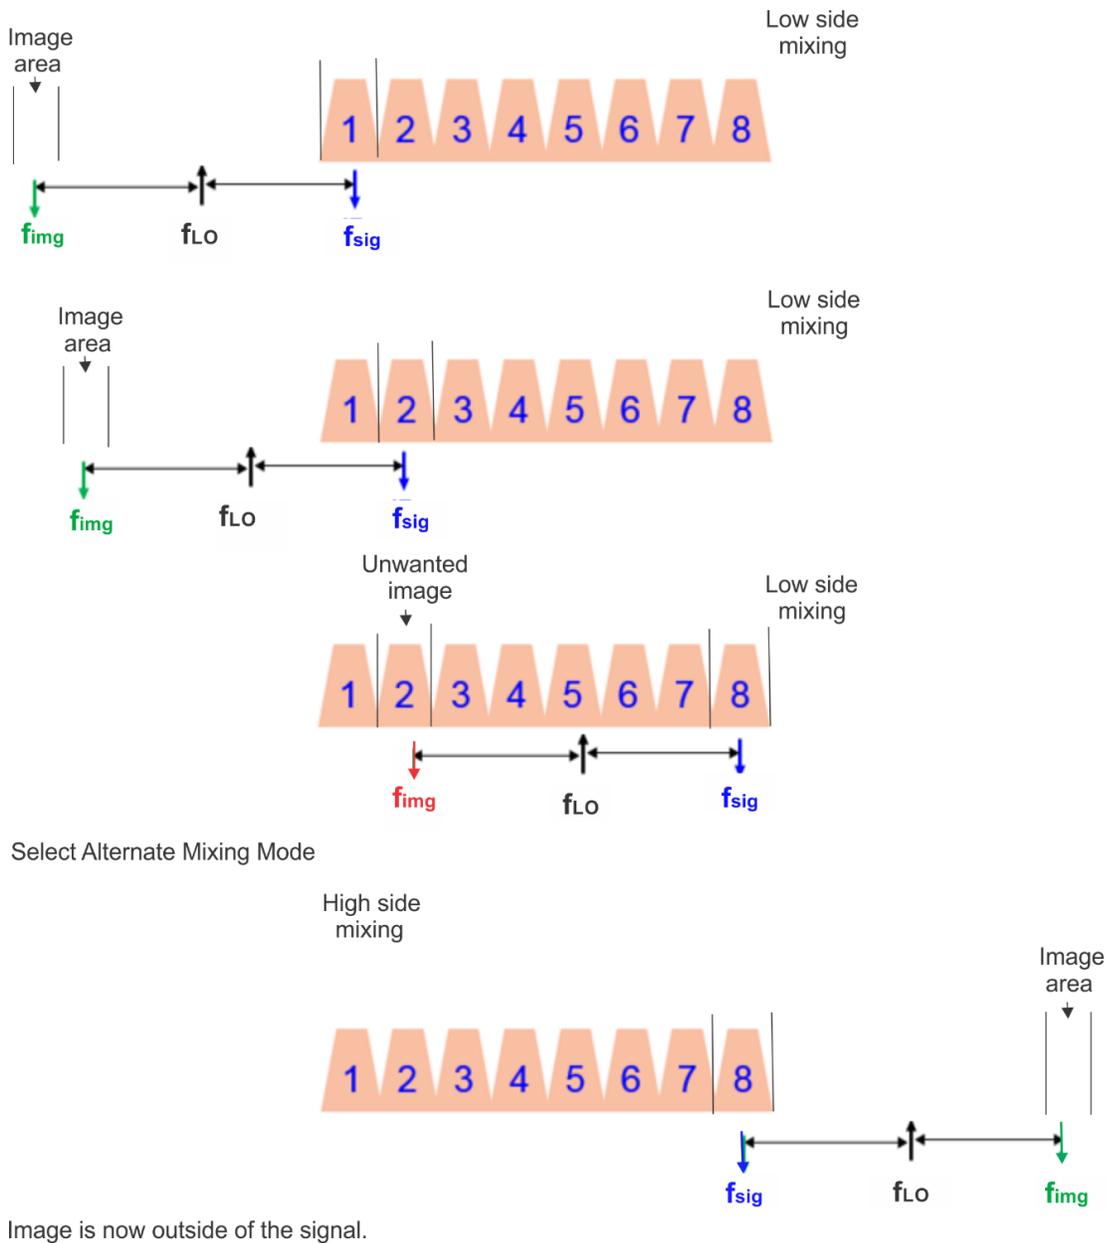

Select Alternate Mixing Mode

Image is now outside of the signal.

Remote Command	<code>[ :SENSe ]:WAVeform:LO:MIXMode NORMal   ALTernate</code> <code>[ :SENSe ]:WAVeform:LO:MIXMode?</code>
Example	<code>:WAV:LO:MIXM NORM</code> <code>:WAV:LO:MIXM?</code>
Dependencies	Not available in N9000B Grayed-out when the RF Input is set to something other than RF (such as External Mixer). If you press

the grayed-out control, a warning message "Feature only available with Signal Input RF" appears  
If you try to set **Mixing Mode** via SCPI when disabled, a message -221, "Settings conflict; Feature only available with signal input RF" is returned

Preset	<b>NORMa1</b>
State Saved	Yes
Range	<b>NORMa1</b>   <b>ALTErnate</b>

## Invert Spectrum

When set to **NORMa1**, the Spectrum toggle has no effect on the measurement. When set to **INVert**, the I/Q data is conjugated, which inverts the spectrum. This parameter also affects the results of the **:MEASure**, **:READ**, and **:FETCh** queries for **WAVeform4** data. If set to **INVert**, the I/Q data returned is conjugated, otherwise the data is raw I/Q.

Remote Command	<b>[ :SENSe ] :WAVeform :SPECTrum NORMa1   INVert</b> <b>[ :SENSe ] :WAVeform :SPECTrum?</b>
Example	<b>:WAV :SPEC INVert</b>
Preset	<b>NORMAL</b>
State Saved	Saved in instrument state

## Power Reference Plane

Allows you to increase the power by 3 dB for Baseband I+jQ measurements. Options are:

Menu	SCPI
Baseband	<b>BASEband</b>
RF	<b>RF</b>

Remote Command	For valid <b>&lt;meas&gt;</b> values, see " <a href="#">Valid Measurement Keywords</a> " on page 2275 <b>[ :SENSe ] :&lt;meas&gt; :POWer :IQ :REFerence :PLANE RF   BASEband</b> <b>[ :SENSe ] :&lt;meas&gt; :POWer :IQ :REFerence :PLANE?</b>
Example	(Complex Spectrum measurement) <b>SPEC :POW :IQ :REF :PLAN BAS</b> <b>SPEC :POW :IQ :REF :PLAN?</b>
Dependencies	Only available if the I/Q input exists Enabled only when the input is I/Q and I/Q Path is I+jQ Disabled for all other conditions
Preset	<b>RF</b>
State Saved	Saved in instrument state

## Valid Measurement Keywords

This function is available *only* in certain Modes and measurements. Only the following listed values of `<meas>` are valid.

Mode(s)	Meas	<meas>
BASIC	Complex Spectrum	SPECTrum
BASIC	IQ Waveform	WAVEform
CQM		
EDGE GSM		
LTEAFDD		
LTEATDD		
MSR		
NR5G		
PNOISE		
SRCOMMS		
VMA		
WCDMA		
WLAN		
WLAN	Modulation Analysis	EVM
WLAN	MIMO Modulation Analysis	EVMMimo

## Mixing Mode State (Remote Command Only)

Available *only* in the Complex Spectrum, Streaming, and Waveform measurements.

Lets you alternate between mixing modes for the Local Oscillator (LO). The default setting is **NORMa1** LO mixing mode, which is determined by the instrument configuration to be either “high side” or “low side”. The query returns “High” or “Low” to determine whether the mixing is “high side” or “low side”. If **Mixing Mode** is toggled between **NORMa1** and **ALternate**, then **Mixing Mode State** also toggles between “High” and “Low”.

Remote Command	<code>[ :SENSe ] :SPECTrum :LO :MIXMode :SIDE?</code> <code>[ :SENSe ] :WAVEform :LO :MIXMode :SIDE?</code>
Example	<code>:SPEC :LO :MIXM :SIDE?</code> <code>:WAV :LO :MIXM :SIDE?</code>
Dependencies	Not available in N9000B
Couplings	When <b>Mixing Mode</b> is toggled between <b>NORMa1</b> and <b>ALternate</b> , <b>Mixing Mode State</b> also toggles

---

	between High and Low
Range	High   Low

---

### IF Frequency (Remote Command Only)

Available *only* in the Complex Spectrum, Streaming, and Waveform measurements.  
Returns the current IF Frequency used in the IF Path.

---

Remote Command	<code>[ :SENSe ] :SPEcTrum:IF:FREQuency?</code> <code>[ :SENSe ] :WAVeform:IF:FREQuency?</code>
Example	<code>:SPEC:IF:FREQ?</code> <code>:WAV:IF:FREQ?</code>
Couplings	A change in <b>Span</b> , <b>Digital IF BW</b> or <b>IF Path</b> parameters can result in a change of the <b>IF Frequency</b> value

---

### 3.12.8.6 Global

The controls in this menu apply to all Modes in the instrument.

Some controls (for example, "**Global Center Freq**" on page 2276) allow you to switch certain Meas Global parameters to a Mode Global state. These switches apply to all Modes that support global settings. For example, no matter what Mode you are in when you set **Global Center Freq** to **ON**, it applies to all Modes that support Global settings.

Other controls (for example, **Extend Low Band**) are actually set in this menu, but apply to all Modes.

### Global Center Freq

The software maintains a Mode Global value called **Global Center Freq**.

When **Global Center Freq** is switched **ON**, the current Mode's center frequency is copied into the **Global Center Frequency**, and from then on all Modes that support global settings use the **Global Center Frequency**, so you can switch between any of these Modes and the **Center Frequency** remains unchanged.

Adjusting the **Center Frequency** of any Mode that supports Global Settings, while **Global Center Freq** is **ON**, modifies the **Global Center Freq**.

When **Global Center Freq** is switched **OFF**, the **Center Frequency** of the current Mode is unchanged, but now the **Center Frequency** of each Mode is once again independent.

When **Mode Preset** is pressed while **Global Center Freq** is **ON**, the **Global Center Freq** is preset to the preset **Center Frequency** of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTRument:COUPle:FREQuency:CENTer ALL   NONE :INSTRument:COUPle:FREQuency:CENTer?
Example	:INST:COUP:FREQ:CENT ALL :INST:COUP:FREQ:CENT?
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE
Preset	OFF
Backwards Compatibility SCPI	:GLOBal:FREQuency:CENTer[:STATe] 1   0   ON   OFF :GLOBal:FREQuency:CENTer[:STATe]?

## Global EMC Std

When this control is switched **ON**, the current Mode's EMC Std is copied into the **Global EMC Std**, and from then on all Modes that support global settings use the **Global EMC Std**, so you can switch between any of these Modes and the EMC Std remains unchanged.

Adjusting the EMC Std of any Mode that supports Global settings, while **Global EMC Std** is **ON** modifies the **Global EMC Std**.

When **Global EMC Std** is switched **OFF**, the EMC Std of the current Mode remains unchanged, but now the EMC Std of each Mode is once again independent. When **Mode Preset** is pressed while **Global EMC Std** is **ON**, **Global EMC Std** is preset to the preset EMC Std of the current Mode.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	:INSTRument:COUPle:EMC:STANdard ALL   NONE :INSTRument:COUPle:EMC:STANdard?
Example	:INST:COUP:EMC:STAN ALL :INST:COUP:EMC:STAN?
Dependencies	Only available if Option EMC is installed
Preset	Set to <b>OFF</b> on <b>Global Settings, Restore Defaults</b> and <b>System, Restore Defaults, All Modes</b>
Range	ALL   NONE

## Extend Low Band

The software maintains a Mode Global value called **Extend Low Band**.

Under the current sweep configuration crossing over two bands, when **Extend Low Band** is turned **ON**, the instrument checks whether one band can cover the whole sweep frequency range or not. If it can, then the instrument locks the band; otherwise, it does nothing (the band crossover occurs).

This function does *not* work when **Band Lock** under **System > Service > Lock Functions** is not -1 (no Band Lock). In that case, **Band Lock** takes priority over **Extend Low Band**.

This function resets to **OFF** when "**Restore Defaults**" on page 2278 is pressed, or when **System, Restore Defaults, All Modes** is pressed.

Remote Command	<code>:INSTRument:COUPle:FREQuency:BAND:EXTend 0   1   ON   OFF</code> <code>:INSTRument:COUPle:FREQuency:BAND:EXTend?</code>
Example	<code>:INST:COUP:FREQ:BAND:EXT 1</code> <code>:INST:COUP:FREQ:BAND:EXT?</code>
Preset	Set to <b>OFF</b> by <b>Global Settings &gt; Restore Defaults</b> and <b>System &gt; Restore Defaults &gt; All Modes</b>
Range	<b>ON OFF</b>

## Restore Defaults

Resets all functions in the **Global** settings menu to **OFF**. Pressing **System, Restore Defaults, All Modes** has the same effect.

Remote Command	<code>:INSTRument:COUPle:DEFault</code>
Example	<code>:INST:COUP:DEF</code>
Backwards Compatibility SCPI	<code>:GLOBal:DEFault</code>

### 3.12.8.7 Sample Period (Aperture) Setting (Remote Query Only)

Returns the time between samples (sample period or aperture).

Remote Command	<code>[ :SENSe ] :WAVeform:APERture?</code>
Example	<code>:WAV:APER?</code>
Couplings	Coupled to Sample Rate by the following equation Sample Period = 1/(Sample Rate)
Preset	1/(Sample Rate Default)
Min/Max	1/(Max Sample Rate)/1/(Min Sample Rate)

### 3.12.9 Sweep

Accesses controls to configure and control the acquisition of data, and the X-axis parameters of the instrument.

Depending on the selected mode and measurement, these controls might include: **Sweep Time**, **Continuous/Single**, **Pause/Resume**, **X Scale** and **Number of Points**.

#### 3.12.9.1 Sweep/Control

Accesses controls that let you operate the sweep and control functions of the instrument, such as **Sweep Time** and **Continuous/Single**.

#### Restart

Restarts the current sweep, or measurement, or set of averaged/held sweeps or measurements. If you are Paused, pressing **Restart** performs a Resume.

The front-panel key **Restart** performs exactly the same function.

The **Restart** function is accessed in several ways:

- Pressing the **Restart** key
- Sending `:INIT:IMM`
- Sending `:INIT:REST`

See "[More Information](#)" on page 2280

Remote Command	<code>:INITiate[:IMMediate]</code> <code>:INITiate:REStart</code>
Example	<code>:INIT:IMM</code> <code>:INIT:REST</code>
Notes	<code>:INIT:REST</code> and <code>:INIT:IMM</code> perform exactly the same function
Couplings	Resets average/hold count k. For the first sweep overwrites all active (update = on) traces with new current data. For application modes, it resets other parameters as required by the measurement
Status Bits/OPC dependencies	This is an Overlapped command The <code>STATUS:OPERation</code> register bits 0 through 8 are cleared , <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous The <code>STATUS:QUESTionable</code> register bit 9 ( <code>INTEGRity</code> sum) is cleared The <code>SWEEPING</code> bit is set The <code>MEASURING</code> bit is set

---

Backwards Compatibility Notes	<p>For Spectrum Analysis Mode in ESA and PSA, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command restarted trace averages (displayed average count reset to 1) for a trace in <b>Clear Write</b>, but did not restart <b>Max Hold</b> and <b>Min Hold</b></p> <p>In X-Series, the <b>Restart</b> hardkey and the <b>:INIT:REST</b> command restart not only <b>Trace Average</b>, but <b>MaxHold</b> and <b>MinHold</b> traces as well</p>
-------------------------------------	--

## More Information

The **Restart** function first aborts the current sweep or measurement as quickly as possible. It then resets the sweep and trigger systems, sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is in the process of aligning when a **Restart** is executed, the alignment finishes before the restart function is performed.

Even when set for **Single** operation, multiple sweeps may be taken when **Restart** is pressed (for example, when averaging/holding is on). Thus, when we say that **Restart** "restarts a measurement", depending on the current settings, we may mean that it:

- Restarts the current sweep
- Restarts the current measurement
- Restarts the current set of sweeps if any trace is in Trace Average, Max Hold or Min Hold
- Restarts the current set of measurements if Averaging, or Max Hold, or Min Hold is on for the measurement

If there is no Average or Max/Min Hold function (no trace in Trace Average or Hold, or **Average/Hold Num** set to 1), and no **Waterfall** window is being displayed, a single sweep is equivalent to a single measurement. A single sweep is taken after the trigger condition is met; and the instrument stops sweeping once that sweep has completed. However, with **Average/Hold Num** >1, and at least one trace set to Trace Average, Max Hold, or Min Hold, or a **Waterfall** window being displayed, multiple sweeps/data acquisitions are taken for a single measurement. The trigger condition must be met prior to each sweep. The sweep is stopped when the average count k equals the number N set for **Average/Hold Num**.

Once the full set of sweeps has been taken, the instrument goes to the idle state. To take one more sweep without resetting the average count, increment the average count by 1, by pressing the **Step-Up** key while **Average/Hold Number** is the active function, or by sending the remote command **:CALC:AVER:TCON UP**.

## Trace Update

The numeric results are not blanked at any time during the restart cycle.

For slow sweeps (see **Trace Update** section in **Trace/Detector**), the traces are updated real-time during the sweep. There may be a special circumstance in application mode measurements where an exception is made and the traces and/or results need to be blanked before displaying the new results.

To summarize, the following list shows what happens to the trace data on various events:

Event	Trace Effect
<b>Clear/Write</b> pressed (even if already in Clear/Write)	Set to mintracevalue
<b>Max Hold</b> pressed (even if already in Max Hold)	Set to mintracevalue
<b>Min Hold</b> pressed (even if already in Min Hold)	Set to maxtracevalue
<b>Trace Average</b> pressed (even if already in Trace Average)	Trace data unaffected but start new sweep/avg/hold
<b>Restart</b> pressed	Trace data unaffected but start new sweep/avg/hold
Parameter requiring restart changed (e.g., RBW)	Trace data unaffected but start new sweep/avg/hold

## Sweep and Trigger Reset

Resetting the sweep system resets the average/hold count  $k$  to 0. It also resets the set point counter to 0. Resetting the trigger system resets the internal auto trig timer to the value set by the **Auto Trig** control.

## Averaging

The weighting factor used for averaging is  $k$ . This  $k$  is also the average/hold count for how many valid sweeps (data acquisitions) have been done. This  $k$  is used for comparisons with  $N$ , as those comparisons always needs to be based on valid completed sweeps.

The displayed average/hold,  $K$ , shows the count for the sweep (data acquisition) in progress.  $K = k + 1$ , with a limit of  $N$ . The displayed value  $K$  changes from its previous value to 1 as soon as the trigger condition for the first data acquisition (sweep) is met.

## Pause/Resume

Pauses a measurement after the current data acquisition is complete.

When paused, the label on the control changes to **Resume**. Pressing **Resume** unpauses the measurement. When paused, pressing **Restart** performs a Resume.

Remote Command	<code>:INITiate:PAUSE</code> <code>:INITiate:RESume</code>
Example	<code>:INIT:PAUS</code> <code>:INIT:RES</code>
Dependencies	Not displayed in Modes that do not support pausing
Annotation	Only on control

## Sweep/Measure

Lets you toggle between **Continuous** and **Single** sweep or measurement operation. The single/continuous state is Meas Global, so the setting affects all measurements.

The front-panel key **Single/Cont** performs exactly the same function

See "[More Information](#)" on page 2283

Remote Command	<code>:INITiate:CONTinuous OFF   ON   0   1</code> <code>:INITiate:CONTinuous?</code>
Example	Put instrument into <b>Single</b> measurement operation: <code>:INIT:CONT 0</code> <code>:INIT:CONT OFF</code> Put instrument into <b>Continuous</b> measurement operation: <code>:INIT:CONT 1</code> <code>:INIT:CONT ON</code>
Preset	<b>ON</b> Note that <code>:SYST:PRES</code> sets <code>:INIT:CONT</code> to <b>ON</b> , but <code>*RST</code> sets <code>:INIT:CONT</code> to <b>OFF</b>
State Saved	Saved in instrument state
Annunciation	The <b>Single/Continuous</b> icon in the Meas Bar changes depending on the setting: <ul style="list-style-type: none"> <li>- A line with an arrow is <b>Single</b></li> <li>- A loop with an arrow is <b>Continuous</b></li> </ul>
Backwards Compatibility Notes	X-Series A-models had <b>Single</b> and <b>Cont</b> hardkeys in place of the <b>SweepSingleCont</b> softkey. In the X-Series A-models, if in single measurement, the <b>Cont</b> hardkey (and <code>INIT:CONT ON</code> ) switched to continuous measurement, but never restarted a measurement and never reset a sweep

---

X-Series B-models have a **Cont/Single** toggle control instead of **Single** and **Cont** hardkeys, but it is still true that, if in single measurement, the **Cont/Single** toggle control never restarts a measurement and never resets a sweep

### More Information

Continuous Mode	<p>The instrument takes repetitive sweeps, averages, measurements, etc., when in continuous mode. If in average or Max/Min Hold, and the average/hold count reaches the <b>Average/Hold Num</b>, the count stops incrementing, but the instrument keeps sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used both before and after the <b>Average/Hold Num</b> is reached. The trigger condition must be met prior to each sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>
Single Mode	<p>The instrument takes a single sweep when in <b>Single</b> mode, or if in average or Max/Min Hold, or if there is a <b>Waterfall</b> window displayed, it takes multiple sweeps until the average/hold count reaches the <b>Average/Hold Num</b>, then the count stops incrementing, and the instrument stops sweeping</p> <p>See the <b>Trace</b> key description under <b>Trace Average</b> for the averaging formula used. The trigger condition must be met prior to the sweep</p> <p>The type of trace processing for multiple sweeps is set under the <b>Trace</b> key, with choices of <b>Trace Average</b>, <b>Max Hold</b>, or <b>Min Hold</b></p>

If the instrument is in **Single** measurement mode, pressing the **Cont/Single** toggle control does not zero the count and does not cause the sweep to be reset; the only action is to put the instrument into Continuous measurement operation.

If the instrument is already in **Continuous** sweep:

- **:INIT:CONT 1** has no effect
- **:INIT:CONT 0** places the instrument in Single Sweep but has no effect on the current sequence until  $k = N$ , at which point the current sequence will stop and the instrument will go to the idle state

See "[Restart](#)" on page 2279 for details of **:INIT:IMMEDIATE**.

If the instrument is already in **Single** sweep, **:INIT:CONT OFF** has no effect.

If the instrument is already in **Single** sweep, then pressing **Cont/Single** in the middle of a sweep does not restart the sweep or sequence. Similarly, pressing **Cont/Single** does not restart the sweep or sequence if the sweep is not in the idle state (for example, if you are taking a very slow sweep, or the instrument is waiting for a trigger). Even though pressing **Cont/Single** in the middle of a sweep does not restart the sweep, sending **:INIT:IMM** does reset it.

If the instrument is in **Single** sweep, and *not* Averaging/Holding, and you want to take one more sweep, press **Restart**.

If the instrument is in **Single** sweep, *and* Averaging/Holding, and you want to take one more sweep without resetting the Average trace or count, go to **Meas Setup** and increment the average count by 1 by pressing the **Step-Up** key while **Average/Hold Num** is the active function. You can also do this by sending **:CALC: AVER: TCON UP**.

### Abort (Remote Command Only)

Stops the current measurement. Aborts the current measurement as quickly as possible, resets the sweep and trigger systems, and puts the measurement into an "idle" state. If the instrument is in the process of aligning when **:ABORT** is sent, the alignment finishes *before* the abort function is performed, so **:ABORT** does not abort an alignment.

If the instrument is set for **Continuous** measurement, it sets up the measurement and initiates a new data measurement sequence with a new data acquisition (sweep) taken once the trigger condition is met.

If the instrument is set for **Single** measurement, it remains in the "idle" state until an **:INIT: IMM** command is received.

Remote Command	<b>:ABORT</b>
Example	<b>:ABOR</b>
Notes	<p>If <b>:INIT:CONT</b> is <b>ON</b>, then a new continuous measurement will start immediately, with sweep (data acquisition) occurring once the trigger condition has been met</p> <p>If <b>:INIT:CONT</b> is <b>OFF</b>, then <b>:INIT:IMM</b> is used to start a single measurement, with sweep (data acquisition) occurring once the trigger condition has been met</p>
Dependencies	<p>For continuous measurement, <b>:ABORT</b> is equivalent to the <b>Restart</b> key</p> <p>Not all measurements support this command</p>
Status Bits/OPC dependencies	<p>The <b>STATus:OPERation</b> register bits 0 through 8 are cleared, <i>except</i> bit 6 (Waiting for Periodic Sync). Initiating a measurement and Waiting for Periodic Sync could be asynchronous</p> <p>The <b>STATus:QUEStionable</b> register bit 9 (<b>INTEgrity</b> sum) is cleared</p> <p>Since all the bits that feed into OPC are cleared by <b>:ABORT</b>, the Abort command will cause the <b>*OPC</b> query to return true</p>

#### 3.12.9.2 X Scale

Accesses controls that enable you to set the horizontal scale parameters.

#### Ref Value

Sets the display X reference value.

3 LTE & LTE-A TDD Mode  
3.12 IQ Waveform Measurement

Remote Command	<code>:DISPlay:WAVeForm:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:RLEVe1 &lt;time&gt;</code> <code>:DISPlay:WAVeForm:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:RLEVe1?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:X:RLEV 10 ms</code> <code>:DISP:WAV:VIEW:WIND:TRAC:X:RLEV?</code>
Notes	View 1 is the RF Envelope View View 2 is the I/Q Waveform View
Couplings	If X "Auto Scaling" on page 2286 is <b>ON</b> , this value is automatically determined by the measurement result. When you set a value manually, X <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	0.000 s
State Saved	Saved in instrument state
Min/Max	-1 s /10.0 s
Annotation	<value> s bottom left of graph

## Scale/Div

Sets the display X scale/division value.

Remote Command	<code>:DISPlay:WAVeForm:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:PDIVision &lt;time&gt;</code> <code>:DISPlay:WAVeForm:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:PDIVision?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:X:PDIV 500 us</code> <code>:DISP:WAV:VIEW:WIND:TRAC:X:PDIV?</code>
Notes	View 1 is the RF Envelope View View 2 is the I/Q Waveform View
Couplings	If X "Auto Scaling" on page 2286 is <b>ON</b> , this value is automatically determined by the measurement result. When you set a value manually, X <b>Auto Scaling</b> automatically changes to <b>OFF</b>
Preset	200.0 us
State Saved	Saved in instrument state
Min	1.00 ns
Max	320 s

## Ref Position

Sets the reference position for the X axis to **LEFT**, **CENTER** or **RIGHT**.

Remote Command	<code>:DISPlay:WAVeForm:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:RPOSition LEFT   CENTER   RIGHT</code> <code>:DISPlay:WAVeForm:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:RPOSition?</code>
Example	<code>:DISP:WAV:VIEW:WIND:TRAC:X:RPOS LEFT</code> <code>:DISP:WAV:VIEW:WIND:TRAC:X:RPOS?</code>

Preset	LEFT
State Saved	Saved in instrument state
Range	LEFT   CENTER   RIGHT

## Auto Scaling

Toggles the scale coupling function ON or OFF.

Remote Command	:DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:COUPle 0   1   OFF   ON :DISPlay:WAVeform:VIEW[1] 2:WINDow[1]:TRACe:X[:SCALe]:COUPle?
Example	:DISP:WAV:VIEW:WIND:TRAC:X:COUP ON :DISP:WAV:VIEW:WIND:TRAC:X:COUP?
Couplings	When <b>Auto Scaling</b> is ON and the <b>Restart</b> front-panel key is pressed, this function automatically determines the scale per division and reference values based on the measurement results When you set the value of either "Scale/Div" on page 2285 or "Ref Value" on page 2284 manually, <b>Auto Scaling</b> automatically changes to OFF
Preset	ON
State Saved	Saved in instrument state
Range	OFF   ON


### 3.12.10 Trace

There are no **Trace** controls in this measurement.

# 4 System



The **System** hardkey and the “gear” icon both open the **System Settings** dialog, which allows you to access various configuration menus and dialogs. The line of tabs down the left side let you choose various pages for configuring your instrument.

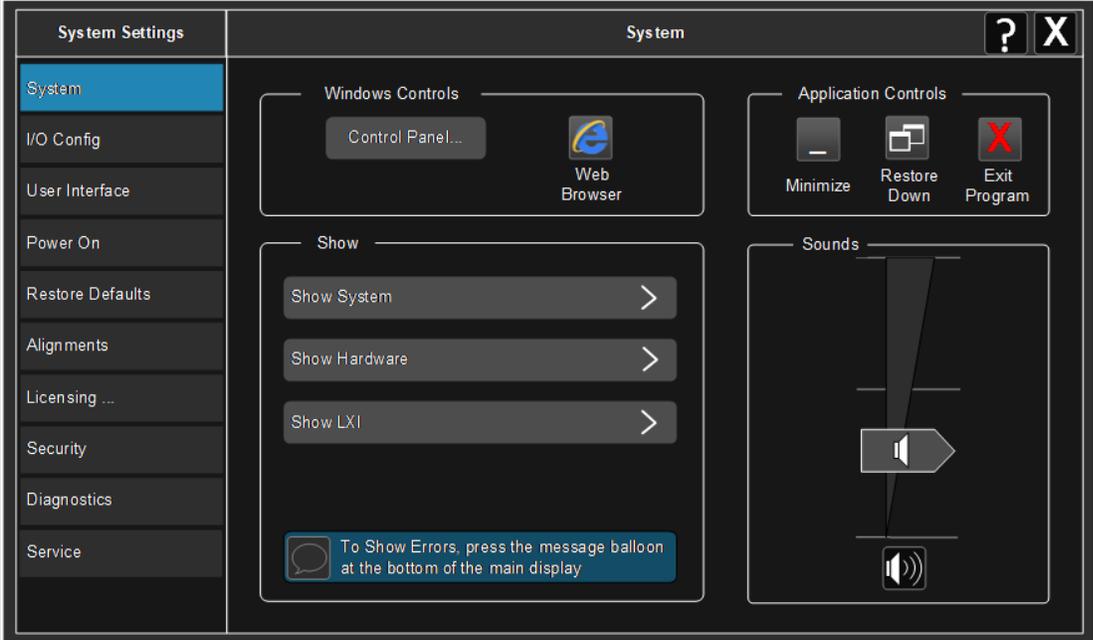

Notes No remote command for this key specifically

## 4.1 System

Allows access to several general system functions, including three **Show** screens for viewing system parameters. Several such **Show** screens are available on this and other **System** menu pages. They can also be accessed with the SCPI command described here.

Remote Command	:SYSTem:SHOW OFF   ERRor   SYSTem   HARDware   LXI   HWSTatistics   ALIGNment   SOFTware   CAPPligation :SYSTem:SHOW?
Example	:SYST:SHOW SYST
Notes	Displays (or exits) the System information screens
Preset	OFF
State Saved	No
Range	OFF  ERRor   SYSTem   HARDware   LXI   HWSTatistics   ALIGNment   SOFTware   CAPPligation

### 4.1.1 Show System

This screen is divided into three groups: product descriptive information, options tied to the hardware, and software products. Swipe up and down on this screen to scroll the display.

System Settings	< System	Show System	? X
System	Keysight Technologies	Keysight UX A	Keysight UX A Signal Analyzer
I/O Config	Product Number	N9040B	
	Serial Number	US00091133	
User Interface	Instrument S/W Revision	A.15.00_P0053	
	Revision Date	11/17/2014 11:37:12 AM	
Power On	Computer System	Windows 7 , Service Pack 1	
Restore Defaults	Computer Name	A-N9040B-91133	
	IP Address	141.121.151.83	
Alignments	IPv6 Address	2002:8d79:9753::8d79:9753	
	Link-Local IPv6 Address	fe80::46e:1db5:7286:68ac%3	
Licensing ...	Host ID	N9040B,US00091133	
Security	mDNS Enabled	Yes	
	mDNS Host Name	A-N9040B-91133	
Diagnostics	mDNS Service Name	Keysight N9040B Signal Analyzer - US00091133	
Service	Option	Name / Description	
	N9040B-PC6	Intel(R) Core(TM) i7-3615QE CPU @ 2.30GHz, 16 GB	
	N9040B-SSD	INTEL SSDSC2BB080G4 ATA DEVICE	
	N9040B-W7X	Windows Embedded Standard 7, 64 bit OS	

---

Example            `:SYST:SHOW SYST`

#### 4.1.1.1 Show System contents (Remote Query Only)

Returns the contents of the **Show System** screen (the entire contents, not just the currently displayed page).

---

Remote Command    `:SYSTem:CONFigure[:SYSTem]?`

---

Example            `:SYST:CONF?`

---

Notes              The output is an IEEE Block format of the **Show System** contents. Each line is separated by a new-line character

#### 4.1.1.2 Computer System description (Remote Query Only)

Returns the **Computer System** description, which consists of the operating system and patch level, as reported by operating system.

---

Remote Command    `:SYSTem:CSYStem?`

---

Example            `:SYST:CSYS?`

---

Notes              Returns the Computer System name and service pack level

### 4.1.2 Show Hardware

Displays details of the installed hardware. This information can be used to determine versions of hardware assemblies and field-programmable devices, in the advent of future upgrades or potential repair needs.

The screen is divided into two groups: product descriptive information and hardware information. The hardware information is listed in a table format.

---

Example            `:SYST:SHOW HARD`

### 4.1.3 Show LXI

Displays the product number, serial number, firmware revision, computer name, IP address, Host ID, LXI Class, LXI Version, MAC Address, and the Auto-MDIX Capability.

---

Example            `:SYST:SHOW LXI`

### 4.1.4 Show Support Subscriptions

Displays the software support subscription information for the licenses available on the instrument.

Shows the software license, description, software support expiration date (format is **YYYY.MMDD**), and the software support status. The **Software Version Date** (format is **YYYY.MMDD**) shown in the header indicates the date required to access the latest software enhancements included in this version of the software. If any license has a **Software Support Expiration Date** earlier than the **Software Version Date**, then enhancements may be available that the license does *not* enable.

System Settings	System		Support Subscriptions
System	Keysight PXA	Keysight PXA Signal Analyzer	
	Product Number	N9030A	
	Instrument S/W Revision	A.20.10	
	Software Version Date	2017.1221	
I/O Config	Software License	Description	Software Support Expiration Date
User Interface	N6141EM0E-1FP	EMC Software for X-Series	2018.0430 ✓
Power On	N9030EMCA-1FP	Basic Electro-Magnetic Compatibility Functionality	2018.0430 ✓
Restore Defaults	N9030FP2A-1FP	Fast Power Measurements, up to 40 MHz bandwidth	2018.0430 ✓
Alignments	N9030FT2A-1FP	Frequency Mask Trigger >3.6 us signal duration	2018.0430 ✓
Licensing	N9030RBEA-1FP	RBW Extended, >10 MHz RBW Filter	2018.0430 ✓
Security	N9030RT2A-1FP	Real-time analysis up to maximum BW, optimum detection	2018.0430 ✓
Diagnostics	N9030TDSA-1FP	Time Domain Scan, requires N6141A/C, and DP2 or B40	2018.0430 ✓
Service	N9054EM0E-1FP	Flexible Digital Demod App, VMA	2018.0430 ✓
Debug	N9054EM1E-1FP	Custom OFDM App, VMA	2018.0430 ✓
	N9061EM0E-1FP	Remote Language Compatibility	2018.0430 ✓
	N9062EM0E-1FP	RS FSP, FSU, FSE, ESU SCPI Language Compatibility	2018.0430 ✓
	N9063EM0E-1FP	Analog Demod Measurement Application	2018.0430 ✓
	N9067EM0E-1FP	Pulse Application	2018.0430 ✓
	N9068EM0E-1FP	Phase Noise Measurement Application	2018.0430 ✓
	N9069EM0E-1FP	Noise Figure Measurement Application	2018.0430 ✓
	N9071EM0E-1FP	GSM/EDGE Measurement Application	2018.0430 ✓
	N9074EM0E-1FP	Single App Combined GSM/EDGE Measurements	2018.0430 ✓

Example `:SYST:SHOW SSINformation`

### 4.1.5 Show Support ID

Displays the Support ID for each license available in the instrument. Shows the **Software License**, **Description**, software support expiration date, and **Support ID** for that license.

Each license has a copy icon, which copies just the **Support ID** for that license to the Windows clipboard. This is useful to avoid typing mistakes when entering this value into another program or web site.

The **Copy all to clipboard ...** control copies all the data to the Windows clipboard, in comma-separated value (CSV) format.

System Settings	System	Support ID
System	Keysight PXA	Keysight PXA Signal Analyzer
	Product Number	N9030A
	Instrument S/W Revision	A.20.10
	Software Version Date	2017.1221
I/O Config	Software License	Description
User Interface	N6141EM0E-1FP	EMC Software for X-Series
Power On	N6141EM0E-1NP	EMC Software for X-Series (Network)
Restore Defaults	N9030EMCA-1FP	Basic Electro-Magnetic Compatibility Functi
Alignments	N9030FP2A-1FP	Fast Power Measurements, up to 40 MHz b
Licensing	N9030FT2A-1FP	Frequency Mask Trigger >3.6 us signal durc
Security	N9030RBEA-1FP	RBW Extended, >10 MHz RBW Filter
Diagnostics	N9030RT2A-1FP	Real-time analysis up to maximum BW, opti
Service	N9030TDSA-1FP	Time Domain Scan, requires N6141A/C, an
Debug	N9054EM0E-1FP	Flexible Digital Demod App, VMA
	N9054FM1F-1FP	Custom OFDM App, VMA

Copy all to clipboard ...

Example `:SYST:SHOW SID`

## 4.1.6 Control Panel...

Opens the Windows Control Panel. **Control Panel** is used to configure certain elements of Windows that are not configured via the Multitouch UI System menus.

**NOTE** This feature is *not* available if Option SF1 is installed.

**Control Panel** is a separate Windows application, so to return to the Instrument Application, either:

- Exit by tapping on the red **X** in the upper right-hand corner
- Use **Alt+Tab**. Press and hold the **Alt** key and press and release the **Tab** key until the Instrument logo is showing in the window in the center of the screen, then release the **Alt** key

Notes No remote command for this key

## 4.1.7 Web Browser

Launches the instrument's default **Web Browser**. Usually, the default is Microsoft Edge. A mouse and external keyboard are highly desirable for using the browser. To return focus to the Instrument Application, close the browser (or use **Alt-Tab**).


NOTE

This feature is *not* available if Option SF1 is installed.

---

## 4.1.8 Application Controls

Lets you Minimize or Exit the application.

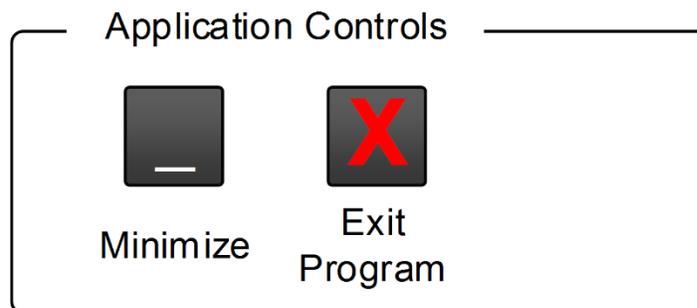

Pressing **Exit Program** displays a prompt asking if you are sure you want to close the program. If you select **OK**, the entire analyzer application will shut down, and you will lose any unsaved trace or measurement data.

---


Notes

No equivalent remote command for this key

## 4.1.9 Sounds

Lets you adjust the speaker volume using the slider, or mute/unmute the speaker, by tapping the **Speaker** icon.

Moving the slider up and down changes the speaker volume, and *also* unmutes the speaker if muted.

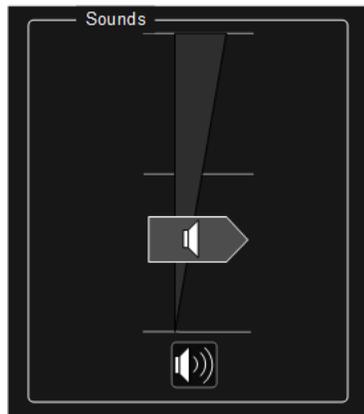

## 4.2 I/O Config

Allows you to specify and change the I/O configuration for remote control. Controls in this menu allow configuration of the I/O ports used for SCPI remote control over GPIB and LAN.

The SCPI LAN parameters are set using controls in this menu, but configuration of LAN settings themselves is performed using the Windows Control Panel (DHCP, Gateway, Subnet Mask, etc.).

The USB port is also available for remote control, but requires no configuration.

### 4.2.1 GPIB

Allows you to configure the GPIB I/O port.

---

Dependencies	Not available in UXM
--------------	----------------------

#### 4.2.1.1 GPIB Address

Select the GPIB remote address.

---

Remote Command	<code>:SYSTem:COMMunicate:GPIB[1][:SELF]:ADDRess &lt;integer&gt;</code>
Example	<code>:SYST:COMM:GPIB:ADDR 17</code>
Notes	If the GPIB port address is changed, all further communication must use the <i>new</i> address
Preset	Unaffected by <b>Preset</b> , but set to 18 by <b>Restore Defaults &gt; "Misc" on page 2343</b>
State Saved	No
Min	0
Max	30

#### 4.2.1.2 GPIB Controller

Sets the GPIB port into Controller (**ON**) or Device (**OFF**) mode. In the normal state, **GPIB Controller** is disabled (**OFF**), which allows the instrument to be controlled by a remote computer. When **GPIB Controller** is enabled (**ON**), the instrument can run software applications that use the instrument's computer as a GPIB controller for devices connected to the GPIB port.

**NOTE**

When **GPIB Controller** is enabled, the analyzer application itself cannot be controlled over GPIB. In this case, it can be controlled via LAN or USB. The GPIB port cannot be a Controller and Device at the same time. Only one Controller can be active on the GPIB bus at any given time. If the instrument is the Controller, an external PC cannot also be a Controller.

To control the instrument from the software that is performing GPIB Controller operation, you can use an internal TCP/IP connection to the analyzer application. Use the following IP Address to send commands to the analyzer application:

`TCPIP0:localhost:inst0:INSTR`

Remote Command	<code>:SYSTem:COMMunicate:GPIB[1][:SELF]:CONTroller[:ENABLE] ON   OFF   0   1</code> <code>:SYSTem:COMMunicate:GPIB[1][:SELF]:CONTroller[:ENABLE]?</code>
Example	Set GPIB port to Controller: <code>:SYST:COMM:GPIB:CONT ON</code>  Set GPIB port to Device: <code>:SYST:COMM:GPIB:CONT OFF</code>
Notes	When the instrument becomes the Controller, Bit 0 in the Standard Event Status Register is set. When the instrument relinquishes Controller capability, bit 0 is cleared
Preset	Unaffected by Preset, but set to <b>OFF</b> (Disabled) by <b>Restore Defaults &gt; "Misc" on page 2343</b>
State Saved	No
Range	Disabled   Enabled

## 4.2.2 SCPI LAN

Displays a menu for identifying and changing SCPI over a LAN configuration. There are several ways to send SCPI remote commands to the instrument over LAN.

Having multiple users simultaneously accessing the instrument over the LAN may lead to communication problems. These controls can help to prevent that, by disabling the telnet, socket, and/or SICL capability.

**NOTE**

When multiple instances of the application are running, Telnet port 5023, socket port 5025, SICL server inst0 and HiSLIP server Device 0 will be assigned to the first instance; Telnet port 5123, socket port 5125, SICL server inst1 and HiSLIP server Device 1 will be assigned to the second instance; Telnet port 5223, socket port 5225, SICL server inst2 and HiSLIP server Device 2 will be assigned to the third instance; Telnet port 5323, socket port 5325, SICL server inst3 and HiSLIP server Device 3 will be assigned to the fourth instance.

- "SCPI Telnet" on page 2296
- "SCPI Socket" on page 2296
- "SICL Server" on page 2297
- "HiSLIP Server" on page 2298
- "Verbose SCPI On/Off" on page 2298
- "SCPI Socket Control Port (Remote Query Only)" on page 2300

### 4.2.2.1 SCPI Telnet

Turns SCPI LAN telnet capability On or Off, allowing you to limit SCPI access over LAN through telnet.

Remote Command	<code>:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle OFF   ON   0   1</code> <code>:SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle?</code>
Example	<code>:SYST:COMM:LAN:SCPI:TELN:ENAB OFF</code>
Preset	Unaffected by <b>Preset</b> , but set to <b>ON</b> by <b>Restore Defaults</b> > "Misc" on page 2343 If not set up or specified, the Secure Instrument Communications configuration setting: is <b>ON</b>
State Saved	No
Range	<b>OFF   ON</b>

### 4.2.2.2 SCPI Socket

Turns the capability to establish Socket LAN sessions **ON** or **OFF**, to limit SCPI access over LAN through socket sessions.

### Connection String & Copy Button

In "SCPI LAN" on page 2295, the full SCPI connection string is displayed to the right of the **SCPI Socket ON/OFF** control. Pressing **Copy**, to the right of the string, copies the connection string to the Windows clipboard.

Remote Command	<code>:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle OFF   ON   0   1</code> <code>:SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle?</code>
Example	<code>:SYST:COMM:LAN:SCPI:SOCK:ENAB OFF</code>
Dependencies	If the Secure Instrument Communications configuration has disabled this connection, local changes are not allowed, and an attempt to do so results in error -221, "Disabled by Secure Instrument Communications configuration"

Preset	Unaffected by <b>Preset</b> , but set to <b>ON</b> by <b>Restore Defaults</b> > " <b>Misc</b> " on page 2343 If not set up or specified, the Secure Instrument Communications configuration setting: is <b>ON</b>
State Saved	No
Range	<b>OFF   ON</b>

### 4.2.2.3 SICL Server

Turns the **SICL Server** capability **ON** or **OFF**, to limit SCPI access over LAN through the SICL server. (SICL IEEE 488.2 protocol.)

Parameter	Description	Setting
Maximum Connections	The maximum number of connections that can be accessed simultaneously	5
Instrument Name	The name (same as the remote SICL address) of your instrument	inst0
Instrument Logical Unit	The unique integer assigned to your instrument when using SICL LAN	8
Emulated GPIB Name	The name (same as the remote SICL address) of the device used when communicating with your instrument	gpib7
Emulated GPIB Logical Unit	The unique integer assigned to your device when it is being controlled using SICL LAN	8
Emulated GPIB Address	The emulated GPIB address assigned to your transmitter tester when it is a SICL server (the same as your GPIB address)	18

### Connection String & Copy Button

In "**SCPI LAN**" on page 2295, the full connection string is displayed to the right of the **SICL Server ON/OFF** control. Pressing **Copy**, to the right of the string copies the connection string to the Windows clipboard.

Remote Command	<b>:SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle OFF   ON   0   1</b> <b>:SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle?</b>
Example	<b>:SYST:COMM:LAN:SCPI:SICL:ENAB OFF</b>
Dependencies	Not available in UXM If the Secure Instrument Communications configuration has disabled this connection, local changes are not allowed, and an attempt to do so results in error -221, "Disabled by Secure Instrument Communications configuration"
Preset	Unaffected by <b>Preset</b> , but set to <b>ON</b> by <b>Restore Defaults</b> > " <b>Misc</b> " on page 2343 If not set up or specified, the Secure Instrument Communications configuration setting: is <b>ON</b>
State Saved	No
Range	<b>OFF   ON</b>

#### 4.2.2.4 HiSLIP Server

Turns the **HiSLIP Server** capability **ON** or **OFF**, to limit SCPI access over LAN through the HiSLIP server.

HiSLIP stands for High-Speed LAN Instrument Protocol, and is part of the IVI-6.1 specification.

Example of a VISA connection string used to connect to the HiSLIP Server on an X-Series Spectrum Analyzer:

`TCPIP0::a-n9030a-93016::hislip0::INSTR`

In the example above, **hislip0** is the HiSLIP device name that VISA users must include in HiSLIP VISA Address strings. Your HiSLIP device name may differ, depending on your VISA settings.

#### Connection String & Copy Button

In "**SCPI LAN**" on page 2295, the full connection string is displayed to the right of the **HiSLIP Server ON/OFF** control. Pressing **Copy**, to the right of the string copies the connection string to the Windows clipboard.

Remote Command	<code>:SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABle OFF   ON   0   1</code>
Example	<code>:SYST:COMM:LAN:SCPI:HISL:ENAB OFF</code>
Preset	Unaffected by <b>Preset</b> , but set to <b>ON</b> by <b>Restore Defaults &gt; "Misc"</b> on page 2343 If not set up or specified, the Secure Instrument Communications configuration setting: is <b>ON</b>
State Saved	No
Range	<b>OFF   ON</b>

#### 4.2.2.5 Verbose SCPI On/Off

When you turn **Verbose SCPI ON**, additional information is returned by `:SYSTem:ERRor?`. The additional information consists of the characters that stimulated the error. This can aid you in debugging your test programs, by indicating where in the parsing of a SCPI command the instrument encountered an invalid command or query.

Specifically, with **Verbose SCPI ON**, `:SYSTem:ERRor?` is expanded to show the SCPI data received, with the indicator `<Err>` at the point in the stream that the error occurred.

**Verbose SCPI** has no effect on the **Show Errors** screen or front-panel Message Line; and only changes the response to `:SYST:ERR?`.

See the example below, where the invalid command `:SENS:BOGUS` is sent:

Normal response to `:SYST:ERR?` (using the Telnet window):

```
SCPI> SENS:BOGUS
SCPI> SYST:ERR?
-113,"Undefined header"
```

After turning on **Verbose SCPI**:

```
SCPI> SYST:BOGUS
SCPI> SYST:ERR?
-113,"Undefined header;SYST:BOGUS<Err>"
```

Remote Command	<code>:SYSTem:ERRor:VERBose OFF   ON   0   1</code> <code>:SYSTem:ERRor:VERBose?</code>
Example	<code>:SYST:ERR:VERB ON</code>
Preset	Unaffected by <b>Preset</b> , but set to <b>OFF</b> by <b>Restore Defaults</b> > " <b>Misc</b> " on page 2343
State Saved	No
Range	<b>OFF   ON</b>

#### 4.2.2.6 Device Clear on Disconnect

When using HiSLIP (High Speed LAN Instrument Protocol), Telnet, or Sockets, a communication session with the instrument is opened when you connect, and closed when you disconnect. This differs from other connections such as GPIB, USB and VXI-11 connections, which are never actually closed but stay open as long as the instrument is running.

When a session is closed, a Device Clear function is generated, which affects the entire instrument, not just the current connection. Thus, when using HiSLIP, Telnet, or Sockets, unexpected Device Clears may occur, which can disrupt measurements in ways that GPIB and VXI-11 “sessions” do not.

**Device Clear on Disconnect** enables these auto-generated Device Clears for Telnet, Socket, and HiSLIP sessions. For backwards compatibility, they are *not* generated unless you explicitly enable them.

There is no change in VXI-11, USB, or GPIB session behavior. These sessions do not close when you disconnect, have never generated Device Clear events, and still do not generate Device Clear events, regardless of the setting of this switch.

Remote Command	<code>:SYSTem:COMMunicate:LAN:SCPI:EOSession:DCLear:ENABLE 0   1   ON   OFF</code> <code>:SYSTem:COMMunicate:LAN:SCPI:EOSession:DCLear:ENABLE?</code>
Example	<code>:SYST:COMM:LAN:SCPI:EOS:DCL:ENAB ON</code>
Preset	Unaffected by <b>Preset</b> , but set to <b>OFF</b> by <b>Restore Defaults</b> > " <b>Misc</b> " on page 2343

State Saved	No
Range	OFF   ON

#### 4.2.2.7 SCPI Socket Control Port (Remote Query Only)

Returns the TCP/IP port number of the control socket associated with the SCPI socket session. This query lets you obtain the unique port number to open when a device clear is to be sent to the instrument. Every time a connection is made to the SCPI socket, the instrument creates a peer control socket. The port number for this socket is random. You must use this command to obtain the port number of the control socket. To force a device clear on this socket, open the port and send the string `DCL\n` to the instrument.

If this query is sent to a non-SCPI Socket interface, then 0 is returned.

Remote Command	<code>:SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTRol?</code>
Example	<code>:SYST:COMM:LAN:SCPI:SOCK:CONT?</code>
Preset	Unaffected by <b>Preset</b> or <b>Restore Defaults</b> > "Misc" on page 2343
State Saved	No
Range	0 to 65534
Min	0
Max	65534
Backwards Compatibility SCPI	<code>:SYSTem:COMMunicate:TCPIp:CONTRol?</code>

#### 4.2.2.8 SCPI Instrument Port (Remote Query Only)

Some MIMO applications need to be able to determine the port to use to communicate with the instrument. This query returns the port number to use for communications.

Remote Command	<code>:SYSTem:COMMunicate:LAN:INSTrument:PORT?</code>
-------------------	---

### 4.2.3 Web Password Reset

The embedded web server contains certain capabilities that are password-protected; modifying the LAN configuration of the instrument, and access to web pages that can change the settings of the instrument. The default password from the factory is:

`measure4u`

This control lets you set the web password as desired, or to reset the password to the factory default.

Selecting **Web Password Reset** displays a control for resetting the password as desired, or to the factory default. The built-in alpha keyboard appears. You may change the password from the factory default of “**measure4u**”.

You can cancel this entry by pressing the **Cancel (ESC)** front-panel key.

---

Dependencies      Not available in UXM

## 4.2.4 System IDN Response

Allows you to specify a response to **\*IDN?**, return the instrument to the **FACTory** response if you have changed it, or, if your test software is expecting the **\*IDN** response to indicate Agilent Technologies, configure the instrument to respond with Agilent as the manufacturer.

The current **\*IDN** response is displayed at the top of the panel, followed by the **System IDN Response** and **User IDN** controls.

### 4.2.4.1 System IDN Response

To select the factory-set response, select **FACTory**. To specify your own response, select **USER**. You can enter your desired response using **"User IDN" on page 2302**.

If your test software expects the response to indicate Agilent Technologies as the Manufacturer, you can configure this response by selecting **AGILent**.

---

Remote Command	<b>:SYSTem:IDN:CONFigure</b> <b>FACTory</b>   <b>AGILent</b>   <b>USER</b>
	For option details, see <b>"More Information" on page 2301</b> <b>:SYSTem:IDN:CONFigure?</b>
Example	<b>:SYST:IDN:CONF</b> <b>FACT</b>
Notes	Affects the response returned by all Modes of the instrument, unless the current Mode has <i>also</i> specified a custom response, in which case the current Mode’s custom IDN response takes precedence over the System’s, but only while that Mode is current Survives shutdown and restart of the software and therefore survives a power cycle
Preset	The <b>*IDN</b> response is reset to <b>FACTory</b> by <b>Restore Defaults &gt;"Misc" on page 2343</b> or <b>Restore Defaults &gt;"All" on page 2344</b> and survives subsequent running of the software

### More Information

Here are details of the options available for the System **\*IDN** response:

## Factory

SCPI example: `:SYST:IDN:CONF FACT`

Selects the factory default configuration of `*IDN?`, which indicates the Manufacturer as Keysight Technologies. For example,

`"Keysight Technologies,N9040B,MY00012345,A.15.00"`

where the fields are Manufacturer, Model Number, Serial Number, Firmware Revision.

NOTE

In products that run multiple instances of the X-Series Application, all instances use the *same* factory System IDN response.

---

## Agilent

SCPI example: `:SYST:IDN:CONF AGIL`

Starting with software version x.14.50, the `*IDN?` response in the Factory configuration indicates the Manufacturer as Keysight Technologies. If your test software is expecting the response to indicate Agilent Technologies, you can configure the response with this menu selection or SCPI command.

For example:

`"Agilent Technologies,N9020A,MY00012345,A.05.01"`

NOTE

In products that run multiple instances of the X-Series Application, all instances use the *same* Agilent System IDN response.

---

## User

SCPI example: `:SYST:IDN:CONF USER`

Selects your customized configuration of `*IDN?`

Enter your desired response using ["User IDN" on page 2302](#).

### 4.2.4.2 User IDN

Allows you to specify your own response to `*IDN?`. You may enter your desired response with the Alpha Editor or a plugin PC keyboard. Once the value is entered, select **USER** under **System IDN Response**.

When you select this control, the active function becomes the current User string and is highlighted, so typing replaces it. If instead you wish to edit the existing string, press the left or right arrow to go to the beginning or the end.

If you enter a null string (for example, by clearing the User String while editing and then pressing **Done**), the instrument automatically reverts to the **FACTory** setting.

**NOTE**

In products that run multiple instances of the X-Series Application, all instances use the *same* User System IDN response.

Remote Command	<code>:SYSTem:IDN &lt;string&gt;</code> <code>:SYSTem:IDN?</code>
Notes	<p>The <code>&lt;string&gt;</code> must consist of four fields, each separated by a comma, example: <code>:SYST:IDN "XYZ Corp,Model 12,012345,A.01.01"</code></p> <p>The four fields are <code>&lt;manufacturer&gt;</code>, <code>&lt;model number&gt;</code>, <code>&lt;serial number&gt;</code>, <code>&lt;firmware revision&gt;</code>. The fields are comma-delimited, so text within a field cannot contain a comma</p> <p>This affects the response given in all Modes of the instrument, unless the current Mode has also specified a custom response, in which case the current Mode's custom IDN response takes precedence over the System's, but only while that Mode is current</p> <p>Survives shutdown and restart of the software and therefore survives a power cycle</p> <p>Null string as parameter restores the <b>FACTory</b> setting, example: <code>:SYST:IDN ""</code></p>
Preset	Unaffected by <b>Preset</b> , but set to the original <b>FACTory</b> setting by <b>Restore Defaults &gt; "Misc"</b> on page 2343

#### 4.2.4.3 SYSTem:PERSONa (Remote Commands Only)

The `:SYSTem:PERSONa` command set permits setting of individual fields of the `*IDN?` response.

- `"SYSTem:PERSONa:DEFault"` on page 2303
- `"SYSTem:PERSONa:MANUFACTurer"` on page 2304
- `"SYSTem:PERSONa:MANUFACTurer:DEFault"` on page 2304
- `"SYSTem:PERSONa:MODel"` on page 2304
- `"SYSTem:PERSONa:MODel:DEFault"` on page 2305

#### SYSTem:PERSONa:DEFault

Resets the `*IDN` response to the instrument default.

Remote Command	<code>:SYSTem:PERSONa:DEFault</code> <code>:SYSTem:PERSONa:DEFault?</code>
Notes	<code>:SYST:PERSON:DEF?</code> returns the default value of <code>*IDN?</code> even if the current setting of <code>*IDN?</code> is the

---

non-default value. The query return type is a `<string>`

`:SYST:PERS:DEF`

is equivalent to:

`:SYSTem:IDN ""`

`:SYSTem:IDN:CONF DEF`

## SYSTem:PERSONa:MANUFACTURER

Sets the **MANUFACTURER** field of the `*IDN?` response. This is the first field of the `*IDN?` response.

---

Remote Command	<code>:SYSTem:PERSONa:MANUFACTURER &lt;string&gt;</code> <code>:SYSTem:PERSONa:MANUFACTURER?</code>
----------------	--

---

Notes	When setting the <b>MANUFACTURER</b> field, the current IDN response string is modified to replace the manufacturer field with the string specified by the command. If the resulting IDN response matches one of the predefined responses ( <code>:SYST:IDN:CONF FACT   AGIL</code> ), then the <code>:SYST:IDN:CONF</code> is set to the corresponding value. If the IDN response with the new manufacturer field is not one of the predefined values, then <code>:SYST:IDN:CONF</code> will be set to <b>USER</b> and <code>:SYST:IDN</code> will be set to the new IDN response string  The query returns the current value of the <code>*IDN?</code> Manufacturer field
-------	---

## SYSTem:PERSONa:MANUFACTURER:DEFAULT

Resets the **MANUFACTURER** field of the `*IDN?` response to the default value.

---

Remote Command	<code>:SYSTem:PERSONa:MANUFACTURER:DEFAULT</code> <code>:SYSTem:PERSONa:MANUFACTURER:DEFAULT?</code>
----------------	---

---

Notes	The query returns the default <b>MANUFACTURER</b> field value of <code>*IDN?</code> even if the current setting of <code>*IDN?</code> is the non-default value. The return type is a <code>&lt;string&gt;</code>
-------	--

## SYSTem:PERSONa:MODEL

Sets the **MODEL** field of the `*IDN?` response. This is the second field of the `*IDN?` response.

---

Remote Command	<code>:SYSTem:PERSONa:MODEL &lt;string&gt;</code> <code>:SYSTem:PERSONa:MODEL?</code>
----------------	--

---

Notes	When setting the <b>MODEL</b> field, the current IDN response string is modified to replace the model field with the string specified by the command. If the resulting IDN response matches one of the predefined responses ( <code>:SYST:IDN:CONF FACT   AGIL</code> ), then <code>:SYST:IDN:CONF</code> is set to the corresponding value. If the IDN response with the new model field is not one of the predefined values, then <code>:SYST:IDN:CONF</code> will be set to <b>USER</b> and <code>:SYST:IDN</code> will be set to the new IDN response string
-------	--

---

The query returns the current value of the `*IDN?MODE1` field

### SYSTem:PERSONa:MODEl:DEFault

Resets the `MODE1` field of the `*IDN?` response to the default value.

---

Remote Command	<code>:SYSTem:PERSONa:MODEl:DEFault</code> <code>:SYSTem:PERSONa:MODEl:DEFault?</code>
Notes	The query returns the default <code>MODE1</code> field value of <code>*IDN?</code> even if the current setting of <code>*IDN?</code> is the non-default value. The return type is a <code>&lt;string&gt;</code>

---

## 4.2.5 LXI

Accesses various `LXI` configuration properties.

---

Dependencies	Not available in UXM
--------------	----------------------

### 4.2.5.1 LAN Reset

Resets the LAN connection. This sets parameters as follows, and restarts the LAN operation:

DHCP	Enabled
Automatic IP Address	Enabled
ICMP Ping Responder	Enabled
Web Password	<code>keysight</code>
Dynamic DNS	Enabled
mDNS and DNS-SD	Enabled
Dynamic Link Local Addressing	Enabled
Auto Negotiation	Enabled

There is no SCPI command for this function.

### 4.2.5.2 Device Identification (Remote Command Only)

Enabling LXI device identification places the LXI Status Indicator in the **Identify** state. Disabling LXI device identification places the LXI Status Indicator in the **No Fault** state. The LXI Status indicator is in the upper left region of the instrument's graphical user interface.

---

Remote Command	<code>:LXI:IDENTify[:STATe] OFF   ON   0   1</code>
----------------	---

	<code>:LXI:IDENTify[:STATE]?</code>
Example	<code>:LXI:IDEN ON</code>
Preset	Not part of <b>Preset</b> , but reset to <b>OFF</b> by <b>Restore Defaults</b> > "All" on page 2344
State Saved	No
Range	<b>OFF</b>   <b>ON</b>

## 4.2.6 Restore I/O Config Defaults

Causes the group of settings associated with the **I/O Config** menu to be reset to their default values. This also happens on **Restore Misc Defaults**, which has a SCPI command.

When **Restore I/O Config Defaults** is selected, a message appears saying:

`This will reset all of the I/O Config variables to their default state, including the GPIB address and SCPI LAN settings`

`It will not affect Alignment data or settings`

`This action cannot be undone. Do you want to proceed?`

The message provides **OK** and **Cancel** buttons so you can affirm or cancel the operation.

## 4.2.7 Query USB Connection (Remote Query Only)

Enables you to determine the speed of the USB connection.

Remote Command	<code>:SYSTem:COMMunicate:USB:CONNectioN?</code>	
Example	<code>:SYST:COMM:USB:CONN?</code>	
Notes	<b>NONE</b>	Indicates no USB connection has been made
	<b>LSpeed</b>	Indicates a USB low speed connection (1.5 Mbps) Note that this is reserved for future use, the T+M488 protocol is not supported on low-speed connections
	<b>HSPeed</b>	Indicates that a USB high speed connection (480 Mbps) has been negotiated
	<b>FSPeed</b>	Indicates that a USB full speed connection (12 Mbps) has been negotiated
State Saved	No	
Range	<b>NONE</b>   <b>LSpeed</b>   <b>HSPeed</b>   <b>FSPeed</b>	

## 4.2.8 USB Connection Status (Remote Query Only)

Lets you determine the current status of the USB connection.

Remote Command	<code>:SYSTem:COMMunicate:USB:STATus?</code>
Example	<code>:SYST:COMM:USB:STAT?</code>
Notes	<p><b>SUSPended</b> – Indicates that the USB bus is currently in its suspended state. The bus is in the suspended state when:</p> <ul style="list-style-type: none"> <li>– The bus is not connected to any controller</li> <li>– The controller is currently powered off</li> <li>– The controller has explicitly placed the USB device into the suspended state</li> </ul> <p>When in the suspended state, no USB activity, including start of frame packets are received</p> <p><b>ACTive</b> – Indicates that the USB device is in the active state. When the device is in the active state, it receives periodic frame starts, but is not necessarily receiving or transmitting data</p>
State Saved	No
Range	<code>SUSPended   ACTive</code>

## 4.2.9 USB Packet Count (Remote Query Only)

Lets you determine the number of packets received and transmitted on the USB bus.

Remote Command	<code>:SYSTem:COMMunicate:USB:PACKets?</code>
Example	<code>:SYST:COMM:USB:PACK?</code>
Notes	<p>Two integers are returned:</p> <ol style="list-style-type: none"> <li>1. The number of packets received since application invocation</li> <li>2. The number of packets transmitted since application invocation</li> </ol> <p>If no packets have been received or transmitted, the response is <code>0,0</code></p> <p>The packet count is initialized to <code>0,0</code> when the instrument application is started</p>
State Saved	No

### 4.2.10 Lock Remote I/O Session (Remote Command only)

An instrument can support multiple remote I/O sessions at the same time. However, you cannot *simultaneously* send remote commands from multiple sessions to the same instrument. The results in such a case are undefined.

Ensure that only *one* session actively controls the instrument at a time. Other sessions must wait until the active session finishes the instrument control.

To help achieve this cooperative instrument sharing, the following remote commands are provided:

- "Lock Remote I/O Request (Remote Query only)" on page 2309
- "Unlock Remote I/O Session (Remote Command only)" on page 2310
- "Remote I/O Session Lock Name (Remote Query only)" on page 2311
- "Remote I/O Session Lock Owner (Remote Query only)" on page 2311

#### Example Procedure for Lock Usage

Step	Action
1	Each session tries to obtain a lock by sending <code>:SYSTem:LOCK:REQuest?</code> This query can be sent simultaneously from multiple sessions
2	Only one session will be granted. The granted session receives <code>1</code> in response to its query
3	The granted session actively controls the instrument Meanwhile, other sessions must wait, and must periodically send <code>:SYSTem:LOCK:REQuest?</code> , requesting the lock
4	When the active session finishes its task, it releases the lock by sending <code>:SYSTem:LOCK:RELease</code>
5	Now the lock has become available, so when one of the waiting sessions sends <code>:SYSTem:LOCK:REQuest?</code> , it receives <code>1</code> in response, granting the lock to that session

By repeating steps 3, 4, and 5 above, multiple sessions can share the same instrument in a cooperative fashion.

**NOTE**

A session can query its own unique session name by sending `:SYSTem:LOCK:NAME?`. This session name is determined by the instrument.

A session also can query the name of the currently granted session by sending `:SYSTem:LOCK:OWNer?`.

NOTE

Remote I/O interfaces are grouped in two types: single-session interface and multi-session interface. Both types of interfaces can be used for cooperative instrument sharing.

The recommended interface is LAN HiSLIP.

Interface	Single-session	Multi-Session
GPIB	ü	
USB-488	ü	
LAN VXI-11 (SICL)	ü	
LAN Socket		ü
LAN HiSLIP		ü
LAN Telnet		ü

If using a single-session interface, care must be taken to ensure only one client uses the single-session interface.

In particular, LAN VXI-11 (SICL) interface is a single-session interface, even though multiple clients could simultaneously connect to this interface. Such multiple VXI-11 clients share the same session context; the same status registers and the same error queue. Even a SCPI query response can be received by another client. Furthermore, the lock obtained by `:SYSTem:LOCK:REQuest?` is shared among all VXI-11 clients, allowing all of them to actively control the instrument.

If a LAN VXI-11 (SICL) interface must be used by multiple clients for a cooperative instrument sharing, then VISA locking *must* be used, *in addition to* Remote I/O Session Lock.

#### 4.2.10.1 Lock Remote I/O Request (Remote Query only)

You can lock the SCPI control of the instrument to the I/O Interface and Session by sending `:SYSTem:LOCK:REQuest?`. This permits cooperative sharing of the instrument between multiple computers, or multiple sessions from the same computer.

Remote Command	<code>:SYSTem:LOCK:REQuest?</code>
Example	<code>:SYST:LOCK:REQ?</code>
Notes	<p>Returns 1 if the lock request is granted, or 0 if the request is denied</p> <p>Lock requests on an individual interface and session can be nested and each request will increase an internal lock count by 1. For every granted request, send <code>:SYST:LOCK:REL</code> to decrement the internal lock count to fully relinquish the lock</p> <p>When the instrument is locked, Bit 0 is set in the Operation Instrument status register</p>

---

Disconnecting the individual interface and session releases the lock if the lock is granted to the interface and session

A Device Clear over any interface and session releases the lock, regardless of the interface and session which obtained the lock

The following queries are permitted over any interface and session, even if an interface has the instrument locked:

- \*IDN?
- \*OPT?
- \*STB?
- \*ESR?
- :SYSTem:DATE?
- :SYSTem:TIME?
- :SYSTem:PON:TIME?
- Queries in the :STATus subsystem
- Queries in the :SYSTem:ERRor subsystem
- Queries in the :SYSTem:LKEY subsystem
- Queries in the :SYSTem:LOCK subsystem
- Queries in the :SYSTem:METRics subsystem
- Queries in the :SYSTem:MODuLe subsystem

All other commands and queries result in error: -203, "Command protected; Instrument locked by another I/O session"

---

State Saved	Not part of Save/Recall
-------------	-------------------------

#### 4.2.10.2 Unlock Remote I/O Session (Remote Command only)

You can unlock the SCPI control of the current I/O Interface and Session by sending **:SYSTem:LOCK:RELease**. Lock requests on an individual interface and session can be nested, and each request increases an internal lock count by 1. For every granted request, you will need to perform a release. The lock is not relinquished until the internal lock count reaches 0.

---

Remote Command	<b>:SYSTem:LOCK:RELease</b>
----------------	-----------------------------

---

Example	<b>:SYST:LOCK:REL</b>
---------	-----------------------

---

Notes	When the instrument is unlocked, Bit 0 is cleared in the Operation Instrument status register
-------	---

### 4.2.10.3 Remote I/O Session Lock Name (Remote Query only)

Use this query to obtain the name of the current I/O Interface and Session.

Remote Command	:SYSTem:LOCK:NAME?
Example	:SYST:LOCK:NAME?
Notes	<p>The information returned is a string of the format:  &lt;I/O Interface&gt;[/&lt;IP address&gt;/&lt;Session ID&gt;]</p> <p>Where <b>IP address</b> and <b>Session ID</b> are only provided for interfaces that provide multiple sessions</p> <p>Single Session interfaces (GPIB, USB-488, and LAN VXI-11) only list interface name</p> <p><b>Session ID</b> is an internally generated identifier. It is not guaranteed to be consistent across instrument software versions (the identifier is subject to change when the software of the instrument is updated). The absolute value of <b>Session ID</b> is not significant, but the identifier will be consistent for a given software version, and can be relied upon for lock owner logic comparisons</p>

### 4.2.10.4 Remote I/O Session Lock Owner (Remote Query only)

Use this query to determine which I/O Interface and Session has the SCPI locked.

If no interface and session has the SCPI locked, then the return value is **NONE**.

Remote Command	:SYSTem:LOCK:OWNer?
Example	:SYST:LOCK:OWN?
Notes	<p>The information returned is a string of the format:  &lt;I/O Interface&gt;[/&lt;IP address&gt;/&lt;Session ID&gt;]</p> <p>Where <b>IP address</b> and <b>Session ID</b> are only provided for interfaces that provide multiple sessions</p> <p>Single Session interfaces (GPIB, USB-488, and LAN VXI-11) only list interface name</p> <p><b>Session ID</b> is an internally generated identifier. It is not guaranteed to be consistent across instrument software versions (the identifier is subject to change when the software of the instrument is updated). The absolute value of <b>Session ID</b> is not significant, but the identifier will be consistent for a given software version, and can be relied upon for lock owner logic comparisons</p> <p>If no interface and session has the SCPI locked, then the return value is <b>NONE</b></p>

## 4.2.11 Multiple Network Interface Card Configuration (Remote Commands Only)

Systems that have multiple Network Interface Cards (NICs) require additional configuration information. The following keys can be added to the XApps configuration file:

- **PrimaryNICIPv4** – IP address value is a string with the exact IP V4 format. Required field in IP v4 networks.
- **PrimaryNICIPv6** – IP address value is a string with the exact IP V6 format. Required field in IP v6 networks.

These commands do not apply to instruments that have only one NIC. The commands apply to all modular deployments that have a controller with multiple NICs.

To configure and query these configuration options, the following remote commands are provided:

- ["Multiple Network Adapters Enabled \(Remote Query Only\)" on page 2312](#)
- ["Config IPV4 Address \(Remote Command Only\)" on page 2313](#)
- ["Config IPV6 Address \(Remote Command Only\)" on page 2313](#)
- ["List All Physical Network Adapter IP Addresses \(Remote Query Only\)" on page 2313](#)

### 4.2.11.1 Multiple Network Adapters Enabled (Remote Query Only)

Remote Command	<code>:SYSTem:COMMunicate:LAN:MULTiple:NIC:ENABled?</code>
Example	<code>:SYSTem:COMMunicate:LAN:MULTiple:NIC:ENABled?</code>
Notes	Applies to Instruments that have multiple Network Adapters. When more than one network adapter is present in the system, and they are <b>Enabled</b> (that is, they have a valid IP Address), this query returns: <ul style="list-style-type: none"><li>- 1, if more than one NIC enabled</li><li>- 0, if only one or No NICs are enabled</li></ul>
State Saved	No

### 4.2.11.2 Config IPV4 Address (Remote Command Only)

Remote Command	<code>:SYSTem:COMMunicate:LAN:IPV4:CONFig &lt;ipaddress&gt;</code> <code>:SYSTem:COMMunicate:LAN:IPV4:CONFig?</code>
Example	<code>:SYSTem:COMMunicate:LAN:IPV4:CONFig "192.168.1.146"</code> <code>:SYSTem:COMMunicate:LAN:IPV4:CONFig?</code>
Notes	<p>Applies to instruments that have multiple Network Adapters. When more than one network adapter is present in the system, you must specify in the instrument config file the IP address to use to enable Remoting channel bindings. If this is not provided, Remoting connections are likely to fail on systems where multiple NICs are enabled</p> <p>Sets the valid IPV4 address, passed in as string in the config file</p> <p>The query returns IPV4 address, as a string</p> <p>If config file is missing, "" (empty string) is returned</p> <p>Changing the IPV4 value requires a restart of the instrument software, to ensure that servers use the configured IP address</p>
State Saved	No

### 4.2.11.3 Config IPV6 Address (Remote Command Only)

Remote Command	<code>:SYSTem:COMMunicate:LAN:IPV6:CONFig &lt;ipaddress&gt;</code> <code>:SYSTem:COMMunicate:LAN:IPV6:CONFig?</code>
Example	<code>:SYSTem:COMMunicate:LAN:IPV6:CONFig "2001:0db8:85a3:0000:0000:8a2e:0370:7334"</code> <code>:SYSTem:COMMunicate:LAN:IPV6:CONFig?</code>
Notes	<p>Applies to instruments that have multiple Network Adapters. When more than one network adapter is present in the system, you must specify in the instrument config file the IP address to use to enable Remoting channel bindings. If this is not provided, Remoting connections are likely to fail on systems where multiple NICs are enabled</p> <p>Sets the valid IPV6 address, passed in as string in the config file</p> <p>The query returns IPV6 address, as a string</p> <p>If config file is missing, "" (empty string) is returned</p> <p>Changing the IPV6 value requires a restart of the instrument software, to ensure servers use the configured IP address</p>
State Saved	No

### 4.2.11.4 List All Physical Network Adapter IP Addresses (Remote Query Only)

Remote Command	<code>:SYSTem:COMMunicate:LAN:PHYSical:IPADdress:LIST?</code>
Example	<code>:SYSTem:COMMunicate:LAN:PHYSical:IPADdress:LIST?</code>

4 System  
4.2 I/O Config

---

: "192.168.1.146, 2001:0db8:85a3:0000:0000:8a2e:0370:7334"

---

Notes Returns the IP Addresses of the physical network adapters found in the PC/Instrument

---

State Saved No

## 4.3 Preload / Unload Modes

The X-Series platform supports many Modes. Each Mode that is loaded uses a portion of the total available memory. At some point, this may result in insufficient free memory. This can occur during a measurement, or when loading a new Mode. A limited number of Modes can be loaded without impacting performance.

**Preload / Unload Modes** allows you to select and enable Modes to be preloaded at startup, and to specify the default **Power-On Mode**.

The dialog includes the following controls:

- "Power-On Mode" on page 2315
- "Table of Modes" on page 2316
- "Preload: Select All, Preload: Deselect All" on page 2316
- "Move Up, Move Down" on page 2316
- "Unload" on page 2316

Modes that are not preloaded may be loaded at runtime as needed, resources permitting. However, note that loading more Modes increases memory consumption and may adversely impact performance.

When a memory-full situation occurs, the instrument notifies you with the following message:

Out of memory; Insufficient resources. Please save state if needed. You have following options:

1. Open System Settings > Configure Preload Modes to unload unused Modes
2. Reconfigure preloaded Modes on the above dialog, close and restart the analyzer SW
3. Close and restart the analyzer SW

Option 1 allows you to unload unused Modes and continue running the software, without having to restart it.

The command `:INSTRument:UNLoad <mode>` provides equivalent functionality; see "Unload" on page 2316.

### 4.3.1 Power-On Mode

Displays a list of licensed Modes. Use this control to change the factory default Power-On Mode. The instrument will execute the selected Mode after power up. Selecting the Power-On Mode here automatically enables that Mode for preloading.

### 4.3.2 Table of Modes

The table of Modes becomes scrollable when the number of Modes exceeds the dialog's displayable size.

Use the check boxes in the **Preload** column to enable or disable the preloading of the Modes that you want.

Use the check boxes in the **Unload** column to select the Modes that you want to unload.

The Unload check boxes are grayed-out when the Modes are used by other Modes.

Example:

5G NR & V2X Mode cannot be loaded when either Sequence Analyzer Mode or Power Amplifier Mode are already loaded, because these Modes use 5G NR & V2X Mode. To unload 5G NR & V2X Mode, both Sequence Analyzer Mode and Power Amplifier Mode must be unloaded first.

When the active Mode is unloaded, the screen becomes blank except for the message; **"No Mode is active"**. You can then select another desired Mode.

When multiple screens are open, and a Mode is unloaded, inactive screens that have that Mode as their active Modes are closed.

The active screen is never closed.

### 4.3.3 Preload: Select All, Preload: Deselect All

Toggles the **Preload** checkbox state for all Applications listed, except for the Power-On Application, which is always selected.

### 4.3.4 Move Up, Move Down

The default order in which Applications are listed in the table is the order in which they are displayed in the **Mode/Measurement/View** Selector dialog. To change the order in this list, select the desired Application row from the table, then click **Move Up** or **Move Down** to move it to the desired position.

### 4.3.5 Unload

Unloads the specified Mode.

---

Remote `:INSTRument:UNLoad <mode>`

Command	
Example	<code>:INST:UNL NR5G</code>
Notes	<p>Error message if the specified Mode is not available, -224,"Illegal parameter value;&lt;mode&gt; is not a valid choice"</p> <p>Error message if the specified Mode is not loaded and therefore cannot be unloaded, -221,"Settings conflict;&lt;mode&gt; is not loaded"</p> <p>Error message if the specified Mode is used by other Modes and therefore cannot be unloaded, -221,"Settings conflict;&lt;mode&gt; is used by &lt;other modes&gt;"</p> <p>Error message if the specified Mode does not support Unload Mode feature and therefore cannot be unloaded, -221,"Settings conflict;Feature not supported for this Mode"</p>

### 4.3.6 Loaded Modes (Remote Query Only)

Returns a list of loaded Modes.

Remote Command	<code>:SYSTem:APPLication:LOADed?</code>
Example	<code>:SYST:APPL:LOAD?</code>
Preset	Not affected by Preset

### 4.3.7 User Interface

Configures functions specific to the User Interface, such as the menu panel orientation and the display color theme.

#### 4.3.7.1 Menu Panel Position

Allows the Menu Panel to be positioned on the **RIGHT** or **LEFT** side of the display.

Remote Command	<code>:SYSTem:DISPlay:MPPosition RIGHT   LEFT</code> <code>:SYSTem:DISPlay:MPPosition?</code>
Example	<code>:SYST:DISP:MPP LEFT</code>
Preset	This is unaffected by <b>Preset</b> but is set to <b>RIGHT</b> by <b>Restore Defaults</b> > <b>"User Interface"</b> on page 2342 or <b>Restore Defaults</b> > <b>"All"</b> on page 2344
State Saved	Power On Persistent (survives shutdown and restart)

### 4.3.7.2 Menu Panel Tabs

Allows the **Menu Panel Tabs** to be positioned on the **RIGHT** or **LEFT** side of the menu panel.

Remote Command	<code>:SYSTem:DISPlay:MPTab RIGHT   LEFT</code> <code>:SYSTem:DISPlay:MPTab?</code>
Example	<code>:SYST:DISP:MPT LEFT</code>
Preset	This is unaffected by <b>Preset</b> but is set to <b>RIGHT</b> by <b>Restore Defaults</b> > "User Interface" on page 2342 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Power On Persistent (survives shutdown and restart)

### 4.3.7.3 Annotations Local Settings/All Off

Overrides the annotation settings for all measurement in all modes and turns them all off. This provides the security based "annotation off" function of previous instruments; hence it uses the legacy SCPI command.

When this control is set to **All Off**, the **Screen Annotation**, **Meas Bar**, **Trace Annotation**, and **Control Annotation** controls under the **Display, Annotation** menu are grayed-out and forced to **OFF** for all measurements in all modes. When **Local Settings** is selected, you can set the local annotation settings on a measurement-by-measurement basis.

Remote Command	<code>:DISPlay:WINDow[1]:ANNotation[:ALL] OFF   ON   0   1</code> <code>:DISPlay:WINDow[1]:ANNotation[:ALL]?</code>
Example	<code>:DISP:WIND:ANN OFF</code>
Preset	This is unaffected by <b>Preset</b> but is set to <b>ON</b> by <b>Restore Defaults</b> > "User Interface" on page 2342, <b>Restore Defaults</b> > "Misc" on page 2343 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Power On Persistent (survives shutdown and restart)
Backwards Compatibility Notes	The <b>WINDow</b> parameter and optional subopcode is included for backwards compatibility but ignored – all windows are equally affected

### 4.3.7.4 Display Theme

Allows you to change the **Display Theme**. This is similar to the Themes selection under Page Setup and Save Screen Image.

The two available themes are:

- **FILLED**: this is the normal theme using filled objects
- **OUTLine**: this theme uses color, but does not use fill for most areas on the display. It is ideal for images that need to be printed on inkjet printers. Although setting **Display Theme** to **OUTLine** does not affect screen image saves or prints, it does show you exactly how screen images will look when using the **OUTLine** theme under **Save Screen Image**, and how prints will look when using the **OUTLine** theme under **Page Setup**.

**NOTE**

Although the **OUTLine** theme eliminates most of the filled area, some objects remain filled. In particular, the selected marker remains filled with the green marker color, to distinguish it from the other markers. This is important, as it is the selected marker whose readout appears in the upper right corner of the display.

Remote Command	<code>:DISPlay:THEMe TDColor   TDMonochrome   FCOLor   FMONochrome   FILLED   OUTLine</code> <code>:DISPlay:THEMe?</code>
Example	<code>:SYST:DISP:THEM OUTL</code> sets the display style to <b>OUTLine</b>
Notes	To permit code compatibility with A-model X-Series Signal Analyzer instruments, the command parameters from the A-models are mapped as follows: <ul style="list-style-type: none"> <li>– <b>TDColor</b> and <b>TDMonochrome</b> are both mapped to <b>FILLED</b> (exact full color representation of what is on the screen)</li> <li>– <b>FCOLor</b> and <b>FMONochrome</b> are both mapped to <b>OUTLine</b> (uses color for traces and other items, but most filled areas are white)</li> </ul> <p>There is no Monochrome theme in the B-model instruments, so the monochrome commands for the A-model instruments yield color themes</p> <p>The query of <code>:DISPlay:THEMe?</code> always returns <b>FILLED</b> or <b>OUTLine</b>. It never returns <b>FCOLor</b>, <b>FMONochrome</b>, <b>TDColor</b>, or <b>TDMonochrome</b></p>
Preset	This is unaffected by <b>Preset</b> but is set to <b>FILLED</b> by <b>Restore Defaults &gt; "User Interface" on page 2342</b> , <b>Restore Defaults &gt; "Misc" on page 2343</b> or <b>Restore Defaults &gt; "All" on page 2344</b>
State Saved	Power On Persistent (survives shutdown and restart)

### 4.3.7.5 Backlight

Turns the display **Backlight** on and off. This setting may interact with settings under the Windows **Power** menu.

When the backlight is **OFF**, pressing ESC, TAB, SPACE, ENTER, UP, DOWN, LEFT, RIGHT, DEL, BKSP, CTRL, or ALT turns the backlight **ON** without affecting the

## 4 System

### 4.3 Preload / Unload Modes

application. Pressing any other key turns backlight **ON**, and could potentially perform the action as well.

Remote Command	<code>:DISPlay:BACKlight ON   OFF</code> <code>:DISPlay:BACKlight?</code>
Example	Turn backlight <b>ON</b> : <code>:DISP:BACK ON</code>  Turn backlight <b>OFF</b> : <code>:DISP:BACK OFF</code>
Preset	Pressing any key turns the backlight back <b>ON</b> , as does <b>Restore Defaults</b> > "User Interface" on page 2342, <b>Restore Defaults</b> > "Misc" on page 2343 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Not saved in State

#### 4.3.7.6 Backlight Intensity

Allows the **Backlight Intensity** to be controlled from the UI settings panel.

Remote Command	<code>:SYSTem:DISPlay:BACKlight:INTensity &lt;integer&gt;</code> <code>:SYSTem:DISPlay:BACKlight:INTensity?</code>
Example	<code>:SYST:DISP:BACK:INT 67</code>
Preset	100
State Saved	Power On Persistent (survives shutdown and restart)
Range	0-100

#### 4.3.7.7 Hints

**Hints** are descriptions that provide additional information for a control. You can set **Hints** to be enabled or disabled.

Remote Command	<code>:SYSTem:DISPlay:HINTs[:STATe] OFF   ON   0   1</code> <code>:SYSTem:DISPlay:HINTs?</code>
Example	<code>:SYST:DISP:HINT OFF</code>
Preset	This is unaffected by <b>Preset</b> but is set to <b>ON</b> by <b>Restore Defaults</b> > "User Interface" on page 2342 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Power On Persistent (survives shutdown and restart)

#### 4.3.7.8 Numeric Entry Auto Open

Configures whether the **Numeric Entry** Panel will appear immediately when an active function control is activated (Auto Open **ON**), or be deferred until you touch it again or begin to enter a value (Auto Open **OFF**). When configured for Auto Open

**OFF** (the default), adjusting the value with the front panel Up/Down keys or the RPG hides the **Numeric Entry** Panel.

Remote Command	:SYSTem:DISPlay:NEPimmediate ON   OFF   1   0
Command	:SYSTem:DISPlay:NEPimmediate?
Example	:SYST:DISP:NEP OFF
Preset	This is unaffected by <b>Preset</b> but is set to <b>ON</b> by <b>Restore Defaults</b> > "User Interface" on page 2342 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Power On Persistent (survives shutdown and restart)

#### 4.3.7.9 Touch On/Off

Turns the touch functionality on and off on the display. If **OFF**, you can turn it back on using the front panel **Touch On/Off** key, or by using a mouse to toggle this control.

Preset	Always starts up <b>ON</b> Unaffected by <b>Preset</b> but is turned <b>ON</b> by <b>Restore Defaults</b> > "User Interface" on page 2342 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Not saved in state, not affected by <b>Preset</b> , not Power On Persistent (does not survive shutdown and restart)

#### 4.3.7.10 Control Size

Configures the size of the controls in the user interface. This can be used to make screen dumps from a large screen instrument match those from a smaller screen instrument, to make the controls more readable on a large-screen instrument, or to display more information on a smaller screen instrument.

Remote Command	:DISPlay:UINTErface:CSIZE SMALL   LARGE
Command	:DISPlay:UINTErface:CSIZE?
Example	:DISP:UINT:CSIZ LARG
Preset	This is unaffected by <b>Preset</b> but is set to <b>SMALL</b> by <b>Restore Defaults</b> > "User Interface" on page 2342 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Power On Persistent (survives shutdown and restart)

#### 4.3.7.11 Quick Save Mode

When **Quick Save Mode** is **NORMa1** (the default setting), the instrument does an immediate save of a new file of the same type and to the same directory as the previous **Save** action. When **Quick Save Mode** is in the **PROMpt** state, instead of immediately performing a **Save**, the Alpha Keyboard appears with the proposed


4 System  
4.3 Preload / Unload Modes

auto-filename in the entry area. You can then press **Enter** to accept the auto filename, or edit the name then press **Enter**. This allows you to easily save a file with a custom file name.

Remote Command	:MME <sup>M</sup> ory:STORe:QSAVe NORMa1   PROMpt
Example	:MME <sup>M</sup> :STOR:QSAV PROM
Preset	This is unaffected by <b>Preset</b> but is set to <b>NORMa1</b> by <b>Restore Defaults &gt; "User Interface"</b> on page 2342 or <b>Restore Defaults &gt; "All"</b> on page 2344
State Saved	Power On Persistent (survives shutdown and restart)

### 4.3.7.12 Screen Tabs Left/Right

This switch, when in the **RIGHT** position, makes the screen tabs start on the right and build across to the left, thus minimizing the finger travel over to the screen tab when there is only one screen. When tabs are added from right to left, they appear as below:

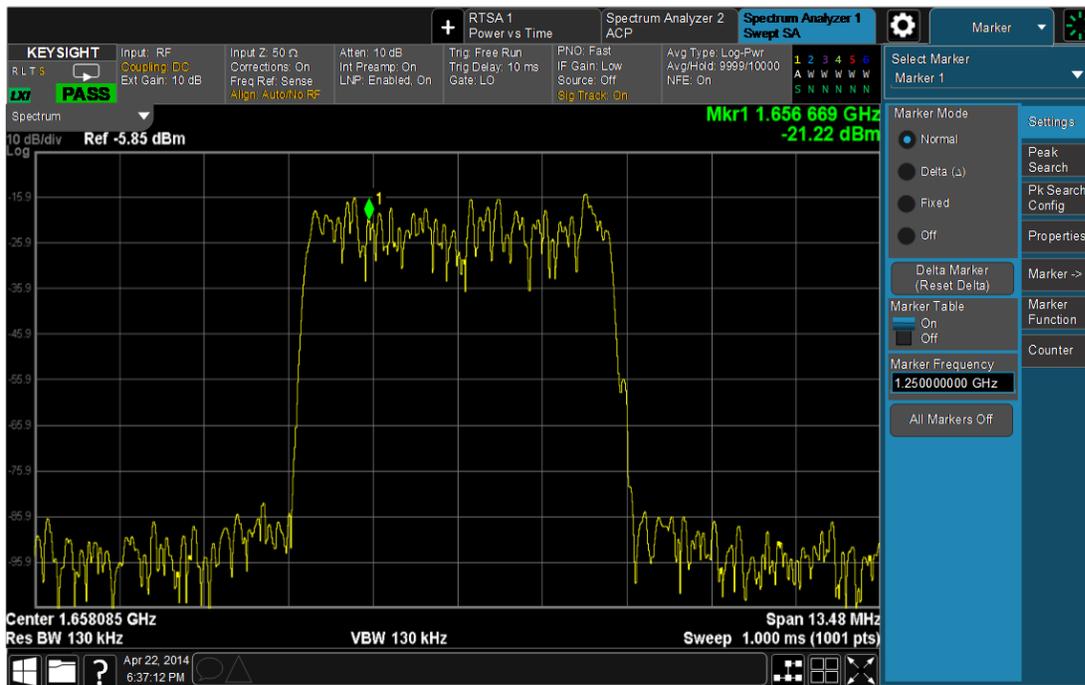


The default is **LEFT**.

Remote Command	:DISPlay:UINTERface:STAB RIGHT   LEFT
	:INSTrument:SCREen:STAB?

Example	:DISP:UINt:STAB RIGH
Preset	This is unaffected by <b>Preset</b> but is set to <b>LEFT</b> by <b>Restore Defaults</b> > "User Interface" on page 2342 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Power On Persistent (survives shutdown and restart)

### 4.3.7.13 Hide Screen Tabs in Full Screen

This switch, when in the **ON** position, causes the Screen Tabs to be hidden when in Full Screen view, thus maximizing the display area available for results. By also turning off the Meas Bar (in the **Display, Annotation** menu), you can maximize the available area for results, as shown below:

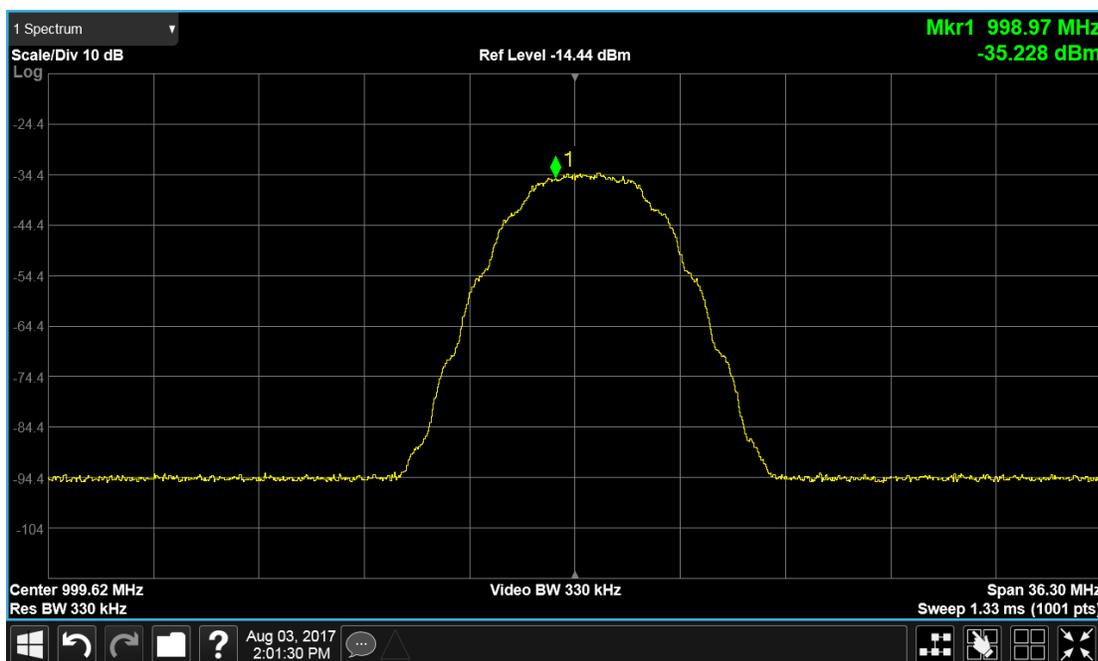


Remote Command	:DISPlay:UINtErface:HTABs ON   OFF   1   0 :DISPlay:UINtErface:HTABs? :DISPlay:UINtErface:STFScreen ON   OFF   1   0 Implemented but with wrong sense; ON turns them off and OFF turns them on; so, don't document to customer
----------------	---


Example	:DISP:UINt:HTAB ON Hide the tabs in full screen
Preset	This is unaffected by <b>Preset</b> but is set to <b>OFF</b> by <b>Restore Defaults</b> > "User Interface" on page 2342 or <b>Restore Defaults</b> > "All" on page 2344
State Saved	Power On Persistent (survives shutdown and restart)

#### 4.3.7.14 2-Screen Orientation

When you add a second Screen using the “+” control on the Screen Tabs bar, normally the screen is added to the right of the first screen. However, sometimes it is better to add the new screen below the first screen rather than to the right, as shown below.

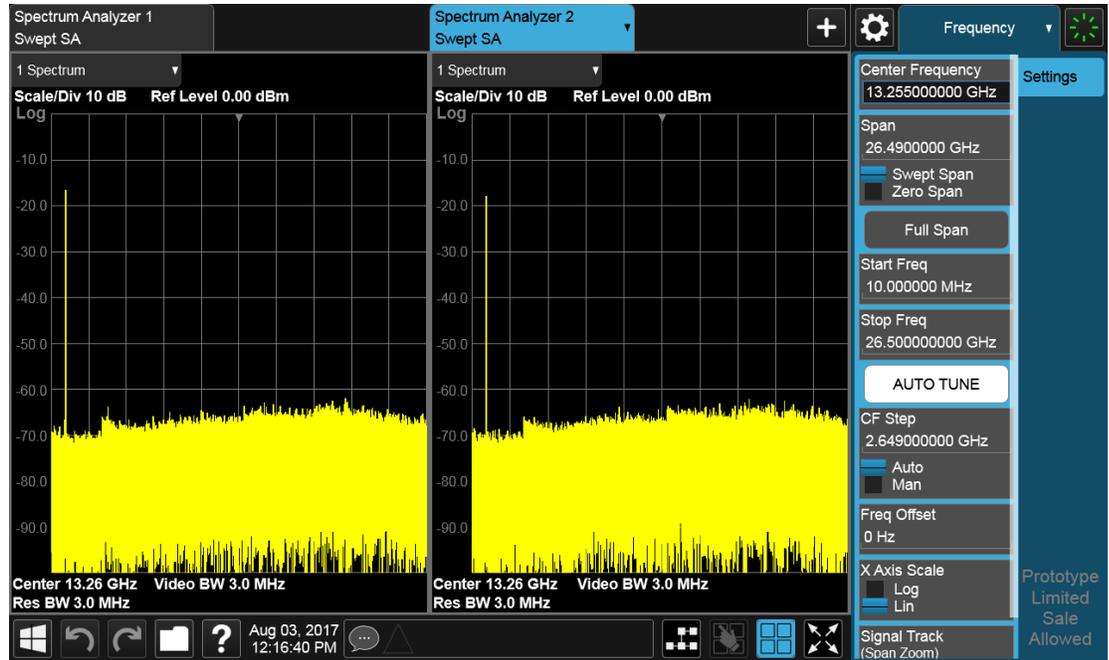

New screen added to the right (horizontal orientation)

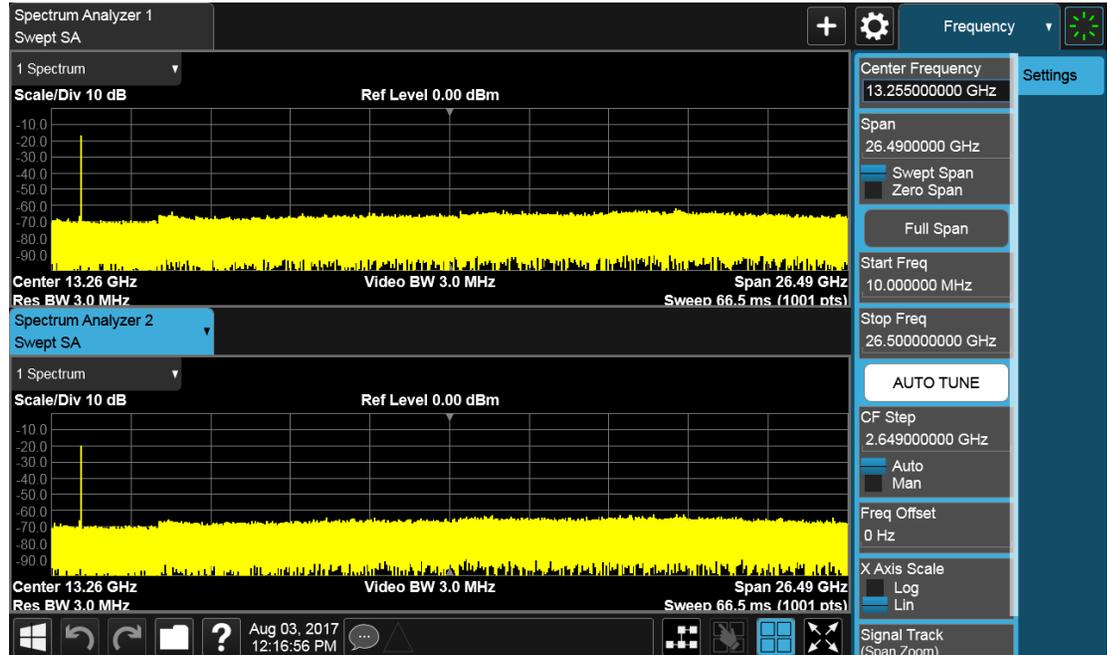

New screen added below (vertical orientation)

The **2-Screen Orientation** switch allows you to choose between these two orientations for 2-Screen configurations. The default is the **HORizontal** configuration, two Screens side-by-side.

Remote Command	<code>:INSTrument:SCReen:ORientation VERTical   HORizontal</code>
Example	<code>:INST:SCR:ORI VERT</code> Set the 2 screens to be above/below each other
Preset	<b>HOR</b> This is unaffected by <b>Preset</b> but is set to <b>HORizontal</b> by <b>Restore Defaults &gt; "User Interface"</b> on page 2342 or <b>Restore Defaults &gt; "All"</b> on page 2344

#### 4.3.7.15 Clock Format

Allows the **Clock Format** to be switched between 12-Hour Format (**HR12**) and 24-Hour Format (**HR24**).

Remote Command	<code>:SYSTem:DISPlay:CFORmat HR12   HR24</code> <code>:SYSTem:DISPlay:CFORmat?</code>
Example	<code>:SYST:DISP:CFOR HR12</code>
Preset	<b>HR12</b>
State Saved	Power On Persistent (survives shutdown and restart)
Range	12-Hour   24-Hour

### 4.3.7.16 Language

Accesses the selection of **Language** displayed on the menus and controls. **ENGLISH** is the default.

All Measurement Applications that share common controls will display the localized controls.

The description on the control labels is bounded by the control size. Any given language will have labels in that language that are shorter or longer than the equivalent label in English. Any localized text on the controls that does not fit the label size remains in English. Thus, for any given menu, controls may be displayed in English *and* the selected language.

- Labels that are acronyms, engineering, or technology specific terms may remain in English.
- All Application and Measurement names remain in English.
- All data in exported files remain in English.
- The Diagnostic and Service menus in the System Subsystem remain in English.
- The Windows operating system must remain in English. Changing the **Region and Language** settings in the Windows Control Panel is not supported.

External keyboards in English are supported. Localized external keyboards are not supported. When the language selected is not English, a message is displayed to explain that any external keyboard must remain in English.

Other aspects of the Graphical User Interface remain in English. The Remote User Interface (SCPI) remains in English.

Remote Command	<code>:SYSTem:DISPlay:LANGuage ENGLISH   RUSSian</code>
Example	<code>:SYST:DISP:LANG ENGL</code> <code>:SYST:DISP:LANG RUSS</code> Requires Option AKT
Preset	This is unaffected by <b>Preset</b> but is set to <b>ENGLISH</b> by <b>Restore Defaults</b> > " <b>User Interface</b> " on page 2342, <b>Restore Defaults</b> > " <b>Misc</b> " on page 2343 or <b>Restore Defaults</b> > " <b>All</b> " on page 2344

### 4.3.7.17 Restore User Interface Defaults

Causes the group of settings associated with the **User Interface** menu to be reset to their default values. This also happens on **Restore Misc Defaults**.

When **User Interface** is selected, a message appears saying:

This will reset all of the User Interface variables to their default state, including the menu panel location, display theme, and language.

It will not affect Alignment data or settings.

This action cannot be undone. Do you want to proceed?

The message provides **OK** and **Cancel** buttons for you to affirm or cancel the operation.

---

Example           :SYST:DEF UINT

#### 4.3.7.18 User Interface Type (Remote Query Only)

Use this query to determine if the instrument is running the Multi-Touch user interface or Softkey user interface. This is an easy way to distinguish between A-models (Softkey) instruments and Touch UI (Multi-Touch) instruments.

---

Remote Command       :DISP:UINterface:TYPE?

---

Example                :DISP:UINT:TYPE?

---

Notes                 The query returns **MULTITOUCH** for instruments with the Multi-Touch UI or **SOFTKEY** for instruments with the Softkey UI

## 4.4 Power On

Lets you select how the instrument should power on.

**NOTE**

In products that run multiple instances of the X-Series Application, the same Power On type is shared between all the instances.

### 4.4.1 Power On State

Lets you select whether the instrument powers up in a default state, or some other state. The options are:

- **MODE** and Input/Output Defaults
- **USER** Preset
- **LAST** State

Remote Command	<code>:SYSTem:PON:TYPE MODE   USER   LAST</code> <code>:SYSTem:PON:TYPE?</code>
Example	<code>:SYST:PON:TYPE MODE</code> <code>:SYST:PON:TYPE USER</code> <code>:SYST:PON:TYPE LAST</code>
Preset	This is unaffected by <b>Preset</b> but is set to <b>MODE</b> by <b>Restore Defaults</b> > "All" on page 2344
State Saved	No
Backwards Compatibility SCPI	<code>:SYSTem:PON:TYPE PRESet</code> The <b>PRESet</b> parameter is supported for backward compatibility only, and behaves the same as <b>MODE</b>

### Mode and Input/Output Defaults

When the instrument is powered-on in **MODE** and Input/Output Defaults, it performs "**Restore Mode Defaults**" on page 2452 for all Modes in the instrument, and performs **Restore Input/Output Defaults**.

Persistent parameters (such as Amplitude Correction tables or Limit tables) are not affected at power-on, even though they are normally cleared by **Restore Input/Output Defaults** and/or **Restore Mode Defaults**.

## User Preset

Sets **Power On State** to **USER** Preset. When the instrument is powered on in User Preset, it will **User Preset** each mode and switch to the "**Power On Application**" on page 2330. **Power OnUser Preset** does not affect any settings other than those set by a normal **User Preset**.

Backwards Compatibility Note: Power On: **User Preset** causes the instrument to power up in the "**Power On Application**" on page 2330, *not* the last Mode the instrument was in prior to shutdown. Also, **Power On: User Preset** will **User Preset** all Modes. This does *not* exactly match legacy behavior.

NOTE

In products that run multiple instances of the X-Series Application, the same **User Preset** is shared between all the instances.

NOTE

An instrument can never power up for the first time in **USER** preset.

## Last State

Sets **Power On State** to **LAST**. When the instrument is powered on, it will put all modes in the last state they were in prior to when the instrument was put into Power Standby, and it will start up in the mode it was last in prior to powering off the instrument. The saving of the active mode prior to shutdown happens behind the scenes when a controlled shutdown is requested, either via the front panel **Standby** key, or the remote command **:SYSTem:PDOWn**. The non-active modes are saved as they are deactivated and recalled by Power On: Last State.

**Power On: Last State** only works if you completed a controlled shutdown prior to powering on in **LAST**. If a controlled shutdown is not completed when in **Power On: Last State**, the instrument powers up in the last active Mode, but it may not power up in the active Mode's last state. If an invalid Mode state is detected, a **Mode Preset** occurs. To control the shutdown under remote control, use **:SYSTem:PDOWn**.

Backwards Compatibility Note: It is no longer possible to power-up the instrument in the last Mode the instrument was running with that Mode in the preset state. (ESA/PSA **SYST:PRESET:TYPE MODE** with **SYST:PON:PRESET**) You can power-on the instrument in the last Mode the instrument was running in its last state (**:SYST:PON:TYPE LAST**), or you can specify the Mode to power-up in its preset state (**:SYST:PON:MODE <mode>**).

NOTE

In products that run multiple instances of the X-Series Application, each instance has a unique **Last State**.

NOTE

An instrument can never power up for the first time in **LAST**.

If line power to the instrument is interrupted, for example by pulling the line cord plug or by switching off power to a test rack, **Power On Last State** may not work properly. For proper operation, **Power On Last State** depends on your shutting down the instrument using the **Standby** key or the `:SYSTem:PDOWn` command. This ensures the last state of each Mode is saved and can be recalled during a power-up.

## 4.4.2 Power On Application

Accesses a menu that lists the available Modes, and lets you select which Mode is to be the **Power On Application**. Whichever application is selected runs at power-on when the Power On Type is set to “**MODE** and Input/Output Defaults”.

**NOTE**

In products that run multiple instances of the X-Series Application, the same Power On Application is shared between all the instances.

Remote Command	<code>:SYSTem:PON:MODE &lt;mode&gt;</code> where <code>&lt;mode&gt;</code> is an item from the same set that can be sent using the <code>:INSTrument[:SElect]</code> command <code>:SYSTem:PON:MODE?</code>						
Example	<code>:SYST:PON:MODE SA</code>						
Notes	The displayed list of possible Modes (and remote parameters) depends on which Modes are installed in the instrument						
Preset	Unaffected by <b>Preset</b> but is set by <b>Restore Defaults</b> > "All" on page 2344 to <b>SA</b> , except in the cases noted below:						
	<table border="1"> <tr> <td>N8973B, N8974B, N8975B, N8976B</td> <td><b>NFIG</b></td> </tr> <tr> <td><b>VXT models</b></td> <td><b>BASIC</b></td> </tr> <tr> <td><b>M9410E/11E/15E/16E</b></td> <td><b>BASIC</b></td> </tr> </table>	N8973B, N8974B, N8975B, N8976B	<b>NFIG</b>	<b>VXT models</b>	<b>BASIC</b>	<b>M9410E/11E/15E/16E</b>	<b>BASIC</b>
N8973B, N8974B, N8975B, N8976B	<b>NFIG</b>						
<b>VXT models</b>	<b>BASIC</b>						
<b>M9410E/11E/15E/16E</b>	<b>BASIC</b>						
State Saved	No						

## 4.4.3 FPGA Configuration

Lets you choose which FPGA image you want loaded into the instrument.

Depending on your hardware configuration, your instrument may contain a Field Programmable Gate Array (FPGA) which handles much of the processing for some of the mathematically intensive features, such as Time Domain Scan (Option TDS) and Enhanced Sweep Speed (Option FS2). The FPGA is not big enough to hold the

functionality for both options, so you must decide which FPGA program you want loaded.

When licenses allow for both FPGA image versions to be available, and you have not explicitly chosen an FPGA image version, then, when the firmware is updated, the Time Domain Scan version will be loaded. In the absence of all licenses, the Enhanced Sweep Speed version will be loaded. Once you have explicitly chosen an FPGA image version, using the FPGA Configuration dialog, any future firmware updates will continue to load the chosen version as long as it is licensed.

Example: loading the Time Domain Scan FPGA image, removing the TDS license, and then updating the firmware will result in the Enhanced Sweep Speed version being loaded.

When multiple capabilities are licensed, the FPGA Configuration presents a dialog that tells you that there is insufficient space to fit all the licensed capabilities, and asks you to choose one of the FPGA programs (images).

If you remove licenses, it is possible to end up with an unlicensed capability loaded in the FPGA while a licensed capability is not loaded. In this case, the dialog does not present the **Preference** group and shows a message about unlicensed/licensed capabilities. You can dismiss the dialog if the licensed capability is not currently needed, and you do not want to take the time to load the licensed FPGA image. However, this dialog will continue to appear each time the instrument is restarted.

### **Behavior when the Enhanced Sweep Speed FPGA Image is Loaded**

When the Enhanced Sweep Speed version of the FPGA image is loaded, sweep behavior still depends on the licenses:

- Option FS2 gives full FPGA enhanced sweep speed
- Option FS1 gives software implemented enhanced sweep speed
- Neither Option FS1 nor FS2 – no enhanced sweep speed
- Both Options FS1 and FS2 – same as Option FS2, the full FPGA enhanced sweep speed

If EMI Receiver Mode and TDS option are licensed, and the Enhanced Sweep Speed FPGA image is loaded, then you will not have the proper FPGA image loaded to fully support EMI Receiver Mode. In particular, the Frequency Scan measurement cannot use Scan Type “Time Domain Scan” (this is the normally the default Scan Type for instruments with the TDS option). Instead, EMI Receiver Mode behaves as if the TDS option is not licensed.

### **Behavior when the Time Domain Scan FPGA Image is loaded**

When the Time Domain Scan version of the FPGA image is loaded, EMI Receiver Mode works as expected with the TDS option licensed, but the Option FS2 capability

silently reverts to FS1 behavior.

### **Switching Between Enhanced Sweep Speed and Time Domain Scan FPGA Images**

You cannot have both full TDS and FS2 images at the same time, so to switch to the other image, you must go through the process of reloading the FPGA by choosing the desired image with the Selected FPGA control, and pressing "Load FPGA" on [page 2334](#), or issuing the "Load FPGA" SCPI command below with the proper parameter.

### **Incorrect FPGA Configuration**

If EMI Receiver Mode, Option TDS, or Option FS2 license is removed while the FPGA image for that license is loaded, the instrument ends up in an incorrect configuration, since the loaded FPGA image version has support for unlicensed functionality that is not accessible and does not support the currently licensed functionality. It will still function, but when the instrument recognizes this situation at startup, it automatically displays the **FPGA Configuration** dialog. The only selections available will be the licensed ones, but you can choose to dismiss the dialog and continue with the current FPGA image version if you do not want to take the time to load the correct FPGA image. The dialog will continue to be presented at each startup until the correct FPGA image is loaded.

### **FPGA Updates When Firmware Installs**

The FPGA image and X-Series firmware are tightly coupled, so whenever the firmware is updated, the FPGA image is also checked and updated if needed. The rules for choosing between Time Domain Scan and Enhanced Sweep Speed versions of the FPGA image are:

1. Always use Time Domain Scan FPGA image for MXE
2. If neither EMC Mode nor Option TDS nor Option FS2 are licensed, the Enhanced Sweep Speed FPGA image is loaded
3. If EMC Mode and Option TDS are licensed and Option FS2 is not licensed, the Time Domain Scan FPGA image is loaded
4. If EMC Mode and Option TDS are not licensed, and Option FS2 is licensed, the Enhanced Sweep Speed FPGA image is loaded
5. If all are licensed
  - a. If "**FPGA Load Preference**" on [page 2333](#) is **Time Domain Scan**, the Time Domain Scan FPGA image is loaded

- b. If **FPGA Load Preference** is **Enhanced Sweep Speed**, the Enhanced Sweep Speed FPGA image is loaded
- c. If **FPGA Load Preference** is **Prompt at Startup**:
  - a. If the last FPGA Configuration Load was Time Domain Scan, the Time Domain Scan FPGA image is loaded
  - b. If the last FPGA Configuration Load was Enhanced Sweep Speed, the Enhanced Sweep Speed FPGA image is loaded
  - c. If no FPGA has been explicitly loaded, the Time Domain Scan FPGA image is loaded

### 4.4.3.1 FPGA Load Preference

Select either image from the radio buttons at the top of the dialog:

Option	SCPI	Description
Time Domain Scan	TDS	Load the Time Domain Scan version of the FPGA image
Enhanced Sweep Speed	FS2	Load the Enhanced Sweep Speed version of the FPGA image
Prompt at Startup	PROMpt	Prompt at each startup, displaying the <b>FPGA Configuration</b> dialog. You can choose to continue with the currently loaded FPGA image version, or load a different version

If you select the image that is already loaded, you will not be prompted again. If you select a different one, the Selected FPGA control changes to that one and you must then press "**Load FPGA**" on page 2334 to load the other image.

When installing new firmware, the **FPGA Load Preference** setting is used to load the preferred FPGA image version if more than one version is available. Selecting **Prompt at Startup** causes you to be prompted at each startup to select the desired version of the FPGA image.

Remote Command	<code>:SYSTem:PON:FPGA:PREference TDS   FS2   PROMpt</code>
Example	<code>:SYST:PON:FPGA:PREF TDS</code> <code>:SYST:PON:FPGA:PREF?</code>
Notes	This SCPI is always available, but if the hardware does not support multiple FPGA image choices, the returned value is always: <b>NA</b> = Not available for this hardware Also, when not supported, any attempt to change away from <b>NA</b> generates error -224, "Illegal parameter value"
Dependencies	Dialogs and menus available only when EMC Mode, Option <b>TDS</b> and Option <b>FS2</b> are all licensed

Preset	<b>PROMpt</b> Not affected by <b>Mode Preset</b> but set to <b>PROMpt</b> by <b>Restore Defaults &gt;"All"</b> on page 2344 or <b>Power On</b>
--------	---

### 4.4.3.2 Load FPGA

Depending on the "**FPGA Load Preference**" on page 2333 selection, there may be a mismatch between the desired FPGA image, and the one that is currently loaded. In that case the **Load FPGA** control at the bottom of the dialog is not grayed-out, and you must press it to actually load the desired FPGA image. The image that is currently loaded is shown on the right:



If you have a mismatch, but do not actually load the other image, the **FPGA Load Preference** is remembered, but the image you had before remains until you return to this dialog and press **Load FPGA**, or until the next time the instrument firmware is updated.

If you press **Load FPGA**, the X-series software exits, the FPGA update program runs, and the instrument reboots. After rebooting, the new image will be loaded in the FPGA.

**NOTE** This can take 15 minutes or more.

**CAUTION** If power is lost during the FPGA load process, the FPGA can become corrupted, in which case the only solution is to return it to Keysight for servicing.

Remote Command	<code>:SYSTem:PON:FPGA:LOAD TDS   FS2</code>
Example	<code>:SYST:PON:FPGA:LOAD TDS</code> For options, see Dependencies row below <code>:SYST:PON:FPGA:LOAD?</code>
Notes	If the specified FPGA image version is the one already loaded, then the command does nothing. If the FPGA image needs to change, the analyzer software exits (terminating the SCPI session), and the FPGA update utility is launched. Once the FPGA has updated, the instrument will reboot This SCPI is always available, but if the hardware does not support multiple FPGA image choices, the value returned is always: <b>NA</b> = Not available for this hardware Also, when not supported, any attempt to change away from <b>NA</b> generates error -224, "Illegal parameter value"
Dependencies	Available only when there are multiple versions of the FPGA image that could be loaded

---

	<p>Selection limited to licensed features:</p> <ul style="list-style-type: none"> <li>- <b>TDS</b> selection requires EMC Mode and Option TDS</li> <li>- <b>FS2</b> requires Option FS2</li> </ul> <p>The UI is blanked when there is only one licensed selection, and that selection is already loaded. Sending the SCPI for an unlicensed selection results in error: -224, "Illegal parameter value; &lt;option&gt; is not licensed"</p>
Preset	None. Not affected by <b>Mode Preset</b> nor any <a href="#">"Restore Defaults" on page 2341</a>

---

#### 4.4.4 Restore Power On Defaults

This selection causes the **Power On** settings to be reset to their default values.

When this button is pressed, a message appears saying:

*This will reset Power On State and Power On Application to their default state.*

*It will not affect Alignment data or settings.*

*This action cannot be undone. Do you want to proceed?*

The message provides **OK** and **Cancel** buttons for you to confirm or cancel the operation.

---

Example	<code>:SYST:DEF PON</code>
---------	----------------------------

#### 4.4.5 Configure Applications – Desktop application

The **Configure Applications** utility runs from the instrument's desktop. You must close the Instrument Application before running **Configure Applications**.

This utility can be used to:

- select applications (Modes) for preload
- determine how many Modes can fit in memory at one time
- specify the order of the Modes in the Mode menu.

The utility consists of a window with instructions, a set of **Select Application** checkboxes, a "fuel bar" style memory gauge, and keys that help you set up your configuration.

**NOTE**

**In products that run multiple instances of the X-Series Application, the same **Configure Applications** utility is shared between all the instances.**

---

For more details, see the following topics:

- "Preloading Applications" on page 2336
- "Access to Configure Applications utility" on page 2336
- "Virtual memory usage" on page 2337

---

Example

Display the Config Applications screen:

```
:SYST:SHOW CAPP
```

### Preloading Applications

During runtime, if a Mode that is not preloaded is selected using the **Mode** menu or by sending SCPI commands, there will be a pause while the Application is loaded. During this pause, a message that says "**Loading application, please wait ...**" is displayed. Once loaded, the application stays loaded, so the next time you select it during a session, there is no delay.

Preloading lets you "preload" at startup, to eliminate the runtime delay. Preloading an application causes it to be loaded into the instrument's memory when the analyzer program starts up. If you do this, the delay will increase the time it takes to start up the analyzer program, but this may be preferable to having to wait the first time you select an application. Note that, once an application is loaded into memory, it cannot be unloaded without exiting and restarting the analyzer program.


Note that there are more applications available for X-Series than can fit into Windows Virtual Memory. By allowing you to choose which licensed applications to load at startup, the **Configure Applications** utility allows you to make optimal use of the instrument memory.

### Access to Configure Applications utility

A version of the utility runs the first time you power up the instrument after purchasing it from Keysight. The utility automatically configures preloads so that as many licensed applications as possible are preloaded while keeping the total estimated virtual memory usage below the limit. This auto-configuration only takes place at the very first run, and after analyzer software upgrades.

At any time, you can manually start the **Configure Applications** utility by closing the analyzer application and double-tapping the **Configure Applications** icon on the desktop.

The utility's main dialog looks like this:

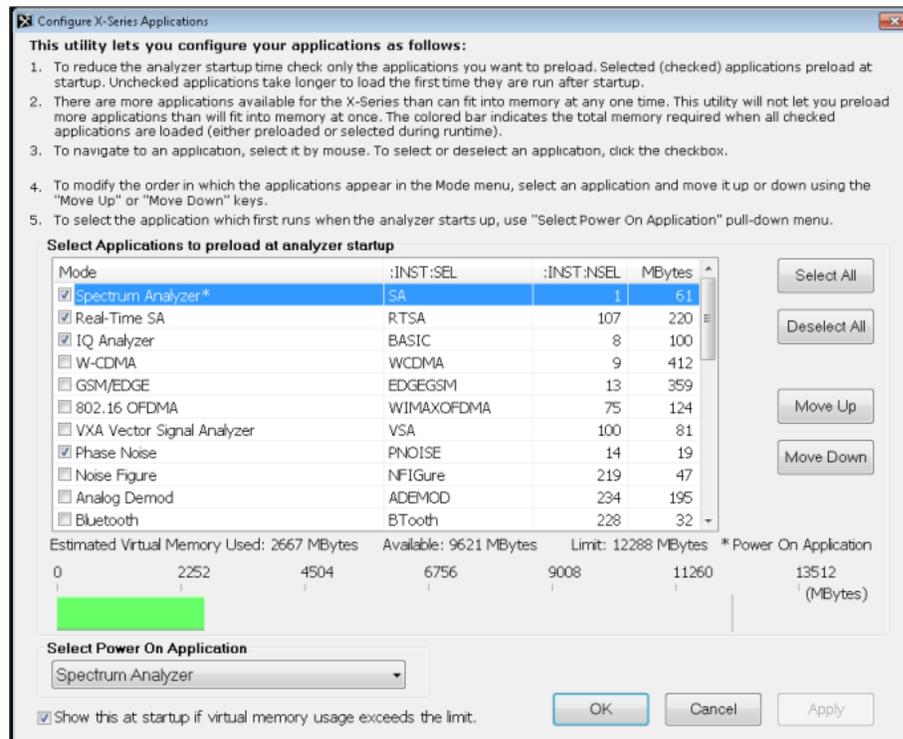

Instructions are provided below and in the utility. Use the utility to find a configuration that works best for you, and then restart the analyzer program.

- Select All**      Marks all applications in the selection list. This allows you to enable all applications licensed on the instrument for pre-loading, or is a convenience for selecting all applications in one operation and then letting you deselect individual applications
- Deselect All**      Clears the marks from all applications in the selection list, except the Power On application. The Power On application cannot be eliminated from the pre-load list
- Move Up**      The application list is the order that applications appear in the Mode Menu. These keys let you shift the selected application up or down in the list, thus moving the selected application earlier or later in the Mode Menu
- Move Down**
- Select Power On Application**      This is the same as the "Power On Application" selection on the Power On page of the System Settings dialog

### Virtual memory usage

There are more applications available for X-Series than can fit into memory at any one time, so the **Configure Applications** utility includes a memory tracker that serves two purposes:

1. It will not let you preload more applications than will fit into memory at once
2. You can determine how many of your favorite applications can reside in memory at one time

The utility provides a graphical representation of the amount of memory (note that the amount of memory shown here is *virtual* memory, which is a limitation imposed by the operating system, not by the amount of physical memory you have in your instrument). You select applications to preload by checking the boxes on the left. Checked applications preload at startup. The colored fuel bar indicates the total memory required when all the checked applications are loaded (either preloaded or selected during runtime).

Here is what the fuel bar colors mean:

- RED: the applications you have selected cannot all fit into the instrument's memory. You must deselect applications until the fuel bar turns yellow
- YELLOW: the applications you have selected can all fit into the instrument's memory, but there is less than 10% of the memory left, probably not enough to load any other applications, either via preload or by selecting a Mode while the instrument is running
- GREEN: The indicator is green when <90% of the memory limit is consumed. This means the applications you have selected can all fit into the instrument's memory with room to spare. You will be able to load one or more other applications without running out of memory

If Sequence Analyzer is selected to be preloaded, all apps that are part of the Sequencer Mode (GSM/EDGE, WCDMA, CDMA2K and 1xEVDO) are preloaded (if licensed).

#### 4.4.6 Configure Applications - Instrument boot-up

When the Instrument Application starts, a dialog box similar to the one you see when you run **Configure Applications** is displayed, allowing you to choose which licensed applications are to be loaded. This dialog is only displayed if the memory required to pre-load all the licensed applications exceeds the virtual memory available.

#### 4.4.7 Configure Applications - Remote Commands

The following topics provide details on using remote commands to configure the list of applications you want to load into the instrument memory, or query the virtual memory utilization for your applications.

- "Configuration list (Remote Command Only)" on page 2339
- "Configuration Memory Available (Remote Query Only)" on page 2339
- "Configuration Memory Total (Remote Query Only)" on page 2339
- "Configuration Memory Used (Remote Query Only)" on page 2340
- "Configuration Application Memory (Remote Query Only)" on page 2340

#### 4.4.7.1 Configuration list (Remote Command Only)

Used to set or query the list of applications to be loaded in-memory.

Remote Command	<code>:SYSTem:PON:APPLication:LLISt &lt;string of INSTRument:SElect names&gt;</code> <code>:SYSTem:PON:APPLication:LLISt?</code>
Example	<code>:SYST:PON:APPL:LLIS "SA,BASIC,WCDMA"</code>
Notes	<code>&lt;string of INSTRument:SElect names&gt;</code> contains items that are valid options for the <code>:INSTRument:SElect</code> command The order of the <code>&lt;INSTRument:SElect names&gt;</code> specifies the order in which the applications are loaded into memory, and the order that they appear in the <b>Mode</b> menu <b>Error message -225 "Out of Memory"</b> is reported when more applications are listed than can reside in virtual memory. When this occurs, the existing applications load list is unchanged
Preset	Not affected by Preset
State Saved	Not saved in instrument state

#### 4.4.7.2 Configuration Memory Available (Remote Query Only)

Returns the amount of Virtual Memory remaining.

Remote Command	<code>:SYSTem:PON:APPLication:VMEMory[:AVAIlable]?</code>
Example	<code>:SYST:PON:APPL:VMEM?</code>
Preset	Not affected by Preset

#### 4.4.7.3 Configuration Memory Total (Remote Query Only)

Returns the limit of Virtual Memory allowed for applications.

Remote Command	<code>:SYSTem:PON:APPLication:VMEMory:TOTal?</code>
Example	<code>:SYST:PON:APPL:VMEM:TOT?</code>
Preset	Not affected by Preset

#### 4.4.7.4 Configuration Memory Used (Remote Query Only)

Returns the amount of Virtual Memory used by all measurement applications.

---

Remote Command	<code>:SYSTem:PON:APPLication:VMEMory:USED?</code>
Example	<code>:SYST:PON:APPL:VMEM:USED?</code>
Preset	Not affected by Preset

---

#### 4.4.7.5 Configuration Application Memory (Remote Query Only)

Returns the amount of Virtual Memory a particular application consumes.

---

Remote Command	<code>:SYSTem:PON:APPLication:VMEMory:USED:NAME? &lt;INSTRument:SElect name&gt;</code>
Example	<code>:SYST:PON:APPL:VMEM:USED:NAME? CDMA2K</code>
Notes	<code>&lt;INSTRument:SElect name&gt;</code> is an item from the same set used by the <code>:INSTRument:SElect</code> command If the name provided is invalid, 0 (zero) is returned
Preset	Not affected by Preset

---

## 4.5 Restore Defaults

Provides initialization of system setting groups, including the option to set the entire instrument back to a factory default state.

**NOTE**

In products that run multiple instances of the X-Series Application, all instances have the same factory default states for **Restore Defaults**.

Remote Command	:SYSTem:DEFault [ALL]   ALIGn   INPut   MISC   MODes   PON   UINTerface   SCReen
Example	:SYST:DEF
State Saved	No

### 4.5.1 Input/Output

**Input/Output Preset** resets the group of settings and data associated with the **Input/Output** front-panel key to their default values. These settings are not affected by a **Mode Preset** because they are associated with connections to the instrument, which you will probably not want to reset every time you press **Mode Preset**.

By using **Input/Output Preset** and "[Restore Mode Defaults](#)" on page 2452, a full preset of the current mode will be performed, with the caveat that since **Input/Output Preset** is a global function, it will affect *all* modes.

This is the same as the **Input/Output Preset** button in the **Preset** dropdown and the **Input/Output** menu.

When **Input/Output** is selected, a message appears saying:

This will reset all of the Input/Output variables to their default state, including which input is selected, all Amplitude Correction settings and data, all External Mixing settings, all Frequency Reference settings and all Output settings

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to confirm or cancel the operation.

Example	:SYST:DEF INP
---------	---------------

## 4.5.2 I/O Config

Causes the group of settings associated with the **I/O Config** menu to be reset to their default values. This also happens on **Restore Misc Defaults**, which has a SCPI command, although **I/O Config** does not.

When **I/O Config** is selected, a message appears saying:

This will reset all of the I/O Config variables to their default state, including the GPIB address and SCPI LAN settings

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

## 4.5.3 User Interface

Causes the group of settings associated with the **User Interface** menu to be reset to their default values. This also happens on a **Restore Misc Defaults**.

When **User Interface** is selected, a message appears saying:

This will reset all of the User Interface variables to their default state, including the menu panel location, display theme, and language

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

---

Example        `:SYST:DEF UINT`

## 4.5.4 Power On

Causes the **Power On** settings to be reset to their default values.

The Power On settings are **Power On State** and **Power On Application**.

When **Power On** is selected, a message appears saying:

This will reset Power On State and Power On Application to their default state

It will not affect Alignment data or settings

This action cannot be undone. Do you want to proceed?

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

---

Example        `:SYST:DEF PON`

## 4.5.5 Alignments

Causes the **Alignments** system settings to be reset to their default values. This does not affect any Alignment data stored in the system.

After performing this function, it may impact the auto-alignment time of the instrument until a new alignment baseline has been established.

When **Alignments** is selected, a message appears saying:

`This will reset all of the settings for the Alignment system to their default values`

`No alignment data will be erased`

`This action cannot be undone. Do you want to proceed?`

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

---

Example        `:SYST:DEF ALIG`

## 4.5.6 Misc

Causes miscellaneous system settings to be reset to their default values.

**CAUTION** This function resets the GPIB address to 18.

---

When **Misc** is selected, a message appears saying:

`This will reset miscellaneous system settings to their default values. This includes settings for I/O Config (GPIB and SCPI LAN), the User Interface, the Save/Recall system, and the Preset type`

`It will not affect Alignment data or settings`

`This action cannot be undone. Do you want to proceed?`

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

This Miscellaneous group contains settings that are *not* part of the other Restore Defaults groups. These include:

- All settings on the **I/O Config** page of the **System Settings** dialog
- All settings in the following table:

4 System  
4.5 Restore Defaults

Miscellaneous Setting	Default Value
The SYST:PRES:TYPE	MODE
Auto File Name Number	000
Save Type	State
State Save To	Register 1
Screen Save To	SCREEN000.png
Save/Recall Shortcuts	Deleted
Display Theme	Filled
Backlight	ON
System Annotation	Local Settings
Language	English
DISP:ENABLE	ON
Full Screen	Off

---

Example `:SYST:DEF MISC`

### 4.5.7 All

Comprehensively resets **All** instrument settings to their factory default values.

Resets all **System Settings** groups, performs "[Restore Mode Defaults](#)" on page 2452 for all Modes in the instrument, and switches back to the power-on mode. Does not affect the User Preset file, or any user saved files.

When **All** is selected, a message appears:

*This will reset all of the settings in the instrument to their factory default values, including the state of all Modes and Screens, the GPIB settings, the Alignment settings, and the Power On Mode*

*It will not affect Alignment data or settings*

*This action cannot be undone. We recommend canceling this operation and restoring settings individually (I/O Config, User Interface, Alignments, etc.) instead*

*Do you want to proceed?*

The dialog includes **OK** and **Cancel** controls, for you to confirm or cancel the operation.

**NOTE**

If you are using a Keysight USB External Mixer, then you will need to perform **Refresh USB Mixer Connection** (SCPI command `:MIX:BAND USB`) after **Restore Defaults > All**.

---

Example	<code>:SYST:DEF ALL</code>
Couplings	<b>All</b> causes the currently running measurement to be aborted, and sets all modes to a consistent state, so it is unnecessary to couple any settings  Backwards Compatibility SCPI
Notes	<code>:SYST:PRES:PERS</code> is the same as <code>:SYST:DEF ALL</code>
Backwards Compatibility SCPI	<code>:SYSTem:PRESet:PERsistent</code>

---

## 4.6 Alignments

Accesses the alignment system of the instrument. You can control the automatic alignments, view alignment statistics and manually perform alignments.

The current setting of the alignment system is displayed in the Meas Bar along the top of the display. For conditions that may cause specifications to be impacted, this annotation will be in amber.

### 4.6.1 Auto Align

Lets you configure the automatic background alignments and the alerts from the automatic alignment system.

---

Dependencies	Does not appear in VXT or M9410E/11E/15E/16E
--------------	--

#### 4.6.1.1 Auto Align

Configures the method the automatic background alignment will use when it runs.

Automatic background alignments are run periodically between measurement acquisitions. The instrument's software determines when alignments are to be performed to maintain warranted operation. The recommended setting for Auto Align is Normal.

**Auto Align** execution *cannot* be aborted with the **Cancel (ESC)** key. To interrupt **Auto Align** execution, select **Auto Align Off**.

---

Remote Command	<code>:CALibration:AUTO ON   LIGHT   PARTial   OFF</code> For details of each option, see " <a href="#">Auto Align Options</a> " on page 2347 <code>:CALibration:AUTO?</code>
Example	<code>:CAL:AUTO ON</code>
Notes	While Auto Align is executing, bit 0 of Status Operation register is set
Couplings	Auto Align is set to Off if Restore Align Data is invoked
Preset	This is unaffected by <b>Preset</b> but is set to <b>ON</b> by <b>Restore Defaults</b> > " <a href="#">Alignments</a> " on page 2343
State Saved	No
Annotation	In the Meas Bar: <ul style="list-style-type: none"> <li>- Normal with "All But RF" off: Auto (white)</li> <li>- Normal with "All But RF" on: Auto/No RF (amber)</li> <li>- Partial: Partial (amber)</li> </ul>

---

	- Off: Off (amber)
Status Bits/OPC dependencies	When <b>Auto Align</b> is executing, Bit 0 in the Status Operational register is set An interfering signal at the RF Input may prevent automatic alignment of the RF subsystem. If this occurs, the Error Condition message “Align RF skipped” is reported, the Status Questionable Calibration bit 11 is set, and the alignment proceeds. When a subsequent alignment of the RF subsystem succeeds, either by the next cycle of automatic alignment or from an Align Now, RF, the Error Condition and Status Questionable Calibration bit 11 are cleared
Backwards Compatibility SCPI	<b>:CALibration:AUTO ALERT</b> Parameter <b>ALERT</b> is for backwards compatibility only, and is mapped to <b>PARTIAL</b>

---

## Auto Align Options

The available settings for Auto Align are as follows:

### Normal

SCPI example **:CAL:AUTO ON**

**Auto Align, Normal** turns on the automatic alignment of all measurement systems. This selection maintains the instrument in warranted operation across varying temperature and over time.

If the condition “Align Now All required” is set, transitioning to **Auto Align, Normal** performs the required alignments, clears the “Align Now All required” condition, then continues with further alignments as required to maintain the instrument adequately aligned for warranted operation.

When **Auto Align, Normal** is selected, the **Auto Align Off** time is set to zero.

When **Auto Align, Normal** is selected, the Meas Bar indicates Align: Auto (in white) or Align: Auto/No RF (in amber). The amber color reminds you that you are responsible for maintaining the RF alignment of the instrument.

Alignment processing because of the transition to **Normal** is executed sequentially. Thus, **\*OPC?** or **\*WAI** following **:CAL:AUTO ON** will return when the alignment processing is complete.

### Light

SCPI example **:CAL:AUTO LIGH**

**Auto Align, Light** turns on the automatic alignment of all measurement systems. The **Auto Align, Light** selection allows more drift in amplitude accuracy to allow much less frequent measurement interruptions to perform alignments. The temperature changes required to trigger each alignment are increased by a factor of three. Alignments also expire from time as well as temperature. In a stable thermal

environment, the alignments occur one-ninth as often as in Normal. With these less frequent alignments, all accuracy specifications (those expressed with  $\pm x$  dB tolerances) change by nominally a factor of 1.4.

If the condition “Align Now, All required” is set, transitioning to **Auto Align, Light** performs the required alignments, clears the “Align Now, All required” condition, and continues with further alignments as required to maintain the instrument adequately aligned for warranted operation.

Alignment processing because of the transition to **Light** is executed sequentially. Thus, **\*OPC?** or **\*WAI** following **:CAL:AUTO LIGHT** will return when the alignment processing is complete.

When **Auto Align, Light** is selected, the **Auto Align Off** time is set to zero.

When **Auto Align, Light** is selected, the Settings Panel indicates Align: Light.

### **Partial**

SCPI example **:CAL:AUTO PART**

**Auto Align, Partial** disables the full automatic alignment and the maintenance of warranted operation for the benefit of improved measurement throughput. Accuracy is retained for the Resolution Bandwidth filters and the IF Passband, which is critical to FFT accuracy, demodulation, and many measurement applications. With Auto Align set to Partial, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The Auto Align, Alert mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the Align All, Now operation. Another is to return the Auto Align selection to Normal.

**Auto Align, Partial** is recommended for measurements where the throughput is so important that a few percent of improvement is more valued than an increase in the accuracy errors of a few tenths of a decibel. One good application of **Auto Align, Partial** would be an automated environment where the alignments can be called during overhead time when the device-under-test is exchanged.

When **Auto Align, Partial**, is selected the elapsed time counter begins for **Auto Align Off** time.

When **Auto Align, Partial** is selected, the Settings Panel indicates Align: Partial in an amber color. The amber color reminds you that you are responsible for maintaining the warranted operation of the instrument.

### **Off**

SCPI example **:CAL:AUTO OFF**

**Auto Align, Off** disables automatic alignment and the maintenance of warranted operation, for the benefit of maximum measurement throughput. With **Auto Align**

set to **Off**, you are now responsible for maintaining warranted operation by updating the alignments when they expire. The Auto Align, Alert mechanism will notify you when alignments have expired. One solution to expired alignments is to perform the **Align All, Now** operation. Another is to return the **Auto Align** selection to **Normal**.

The **Auto Align Off** setting is rarely the best choice, because **Partial** gives almost the same improvement in throughput while maintaining the warranted performance for a much longer time. The choice is intended for unusual circumstances, such as the measurement of radar pulses where you might want the revisit time to be as consistent as possible.

When **Auto AlignOff** is selected, the **Auto Align Off** time is initialized and the elapsed time counter begins.

When **Auto AlignOff** is selected, the Settings Panel indicates Align: Off in an amber color. The amber color reminds you that you are responsible for maintaining the warranted operation of the instrument.

#### 4.6.1.2 All but RF

Configures automatic alignment to include or exclude the RF subsystem. (Eliminating the automatic alignment of the RF subsystem prevents the input impedance from changing. The normal input impedance of 50 ohms can change to an open circuit when alignments are being used. Some devices under test do not behave acceptably under such circumstances, for example by showing instability.)

When **All but RF** is **ON**, the operator is responsible for performing an **Align Now RF** when RF-related alignments expire. The Auto Align, Alert mechanism will notify you to perform an **Align Now All** when the combination of time and temperature variation is exceeded.

When **All But RF** is **ON**, the Settings Panel indicates Align: Auto/No RF (in amber). The amber color reminds you that you are responsible for maintaining the RF alignment of the instrument.

Remote Command	:CALibration:AUTO:MODE ALL   NRF
Example	:CAL:AUTO:MODE NRF
Preset	Unaffected by <b>Preset</b> but set to <b>ALL</b> by <b>Restore Defaults</b> > " <b>Alignments</b> " on page 2343
State Saved	No

#### 4.6.1.3 Alert

The instrument signals an **Alert** when conditions exist such that you will need to perform a full alignment (for example, **Align Now All**). Alert can be configured in one

4 System  
4.6 Alignments

of four settings:

Setting	Option
Time & Temperature	TTEmperture
Time & Temperature Light	LIGHT
7 days	WEEK
None	NONE

With **Auto Align** set to **Normal**, the configuration of **Alert** is not relevant, because the instrument's software maintains the instrument in warranted operation.

A confirmation is required when a selection other than **TTEmperture** is chosen. This prevents accidental deactivation of alerts. When setting **Alert** from the front panel to any value but **TTEmperture**, confirmation is required to transition into this setting of Alert. The confirmation dialog is:

*This will suppress alerts from the Alignment system, which would notify you when an Alignment is required to maintain warranted operation. Without the alerts you will be responsible for performing an Align Now All at appropriate intervals to maintain warranted operation*

*Do you want to proceed?*

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

No confirmation is required when **Alert** is configured through a remote command.

For more information see "[Time & Temperature](#)" on page 2350

Remote Command	:CALibration:AUTO:ALERt TTEmperture   LIGHT   DAY   WEEK   NONE :CALibration:AUTO:ALERt?
Example	:CAL:AUTO:ALER TTEM
Preset	Unaffected by <b>Preset</b> but set to <b>TTEmperture</b> by <b>Restore Alignment Defaults</b>
State Saved	No
Status Bits/OPC dependencies	When an alert is generated, the condition message "Align Now All required" appears in the Status Bar, and bit 14 is set in the Status Questionable Calibration register

The settings for **Alert** are detailed below.

### Time & Temperature

SCPI Example

CAL:AUTO:ALER TTEM

The instrument signals an alert when alignments expire due to the combination of the passage of time and changes in temperature. The alert is the Error Condition message "Align Now All required". If this choice for Alert is selected, the absence of an alert means that the instrument alignment is sufficiently up-to-date to maintain warranted accuracy.

## Time & Temperature Light

SCPI Example

`CAL:AUTO:ALER LIGH`

This is a light version of Time & Temperature which means for this setting the time/temperature changes required to trigger an alert are increased by a factor of three and the time alerts will occur one-ninth as often as for Time and Temperature.

### 24 hours

SCPI Example

`CAL:AUTO:ALER DAY`

The instrument signals an alert after a time span of 24 hours since the last successful full alignment (for example, **Align Now All** or completion of a full **Auto Align**). You may want to select this option in an environment where the temperature is stable on a daily basis, at a small risk of accuracy errors in excess of the warranted specifications. The alert is the Error Condition message “Align Now All required”.

### 7 days

SCPI Example

`CAL:AUTO:ALER WEEK`

The instrument signals an alert after a time span of 168 hours since the last successful full alignment (for example, **Align Now All** or completion of a full **Auto Align**). You may want to select this option in an environment where the temperature is stable on a weekly basis, at a modest risk of accuracy degradations in excess of warranted performance. The alert is the Error Condition message “Align Now All required”.

### None

SCPI Example

`CAL:AUTO:ALER NONE`

The instrument does not signal an alert. This is provided for rare occasions where you are making a long measurement that cannot tolerate **Auto Align** interruptions, and must have the ability to capture a screen image at the end of the measurement without an alert posted to the display. Keysight does not recommend using this selection in any other circumstances, because of the risk of accuracy performance drifting well beyond expected levels without the operator being informed.

## 4.6.2 Align Now

Accesses alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

Executing immediate alignments from SCPI can be problematic due to the length of time required for the alignments to complete. Alignment commands are by their


nature sequential, meaning they must complete before any other SCPI commands can be processed. In many cases the alignment itself will take longer than the typical SCPI timeout value. Furthermore, status cannot be easily queried while a sequential command is running.

For this reason, overlapped versions of the **Align Now** commands are provided. When using these No-Operation-Pending (**NPENDING**) commands, the SCPI thread will not be blocked (will be released immediately), so that you can use **:STATus:OPERation:CONDition?** to query the alignment status bit and use **:STATus:QUEStionable:CALibration:CONDition?** to check the alignment results. As an example, **:CALibration[:ALL]:NPENDING** is the overlapped replacement for **:CALibration[:ALL]**.

While the alignment is executing, the coming NOP calibration will be ignored, and **error message “Setting Conflict, Alignment is in process”** will be posted. Also, any other operations to the instrument will be pended and postponed until the alignment is completed. The operations include: Preset, Initiate a new measurement, Device clear and so on. Accordingly, changing parameters will not take effect although the UI is updated immediately. To avoid unexpected timeouts and results, these operations are not recommended during any such alignments.

NOTE

The Alignments are not performed if the MIMO Sync is running, because the MIMO and Alignments require the same hardware resource. If the instrument is in MIMO Sync and you press a button to execute Alignments, a pop-up window appears as below. Click **OK** to stop MIMO and execute Alignments.

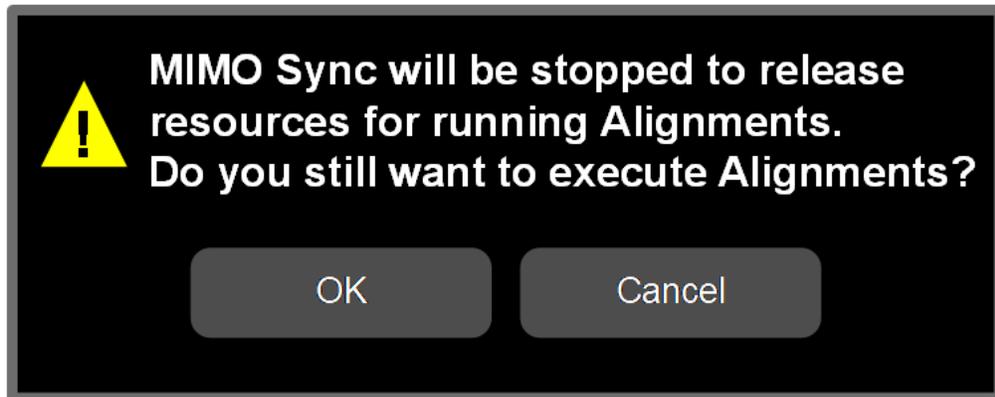

If the instrument is in MIMO sync, and you send a SCPI command to run Alignments, the align process is not executed, and a warning is generated. To execute Alignments, you must first stop MIMO via SCPI (or manually).

---

### Controls in this Dialog

The selection and order of controls displayed in this dialog depends on the instrument type and options. Select the control of interest from the following list:

- "Align Now All" on page 2353
- "Align Now All but RF" on page 2355
- "Align Now RF" on page 2357
- "Align Now Expired" on page 2358
- "Align Now Preselector" on page 2359
- "Align Now All but RF Preselector" on page 2360
- "Align Now RF Presel Only (20 Hz to 3.6 GHz)" on page 2360
- "Align Now External Mixer" on page 2361
- "Align Source" on page 2362
- "Align Receiver" on page 2363
- "Align Fast" on page 2363
- "Align LO Leakage" on page 2364
- "Align IF Cable" on page 2364
- "Align RRH Amplitude" on page 2364
- "Align LO Clock" on page 2365
- "Align VXT Transceiver" on page 2366
- "Align External Mixer Path" on page 2370
- "Align Low Band" on page 2371
- "Align High Band" on page 2371

#### 4.6.2.1 Align Now All

In PXE, the key label is **Align Now All (plus RF Presel 20 Hz – 3.6 GHz)**

Immediately executes an alignment of all subsystems. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

If an interfering user signal is present at the RF Input, the alignment is performed on all subsystems except the RF. After completion, the Error Condition message "Align RF skipped" is generated. In addition, the Error Condition message "Align Now, RF

## 4 System

### 4.6 Alignments

required” is generated, and bits 11 and 12 are set in the Status Questionable Calibration register.

The query form of the remote commands (`:CALibration[:ALL]?` or `*CAL?`) invokes the alignment of all subsystems and returns a success or failure value. An interfering user signal is not grounds for failure; if the alignment was able to succeed on all portions but unable to align the RF because of an interfering signal, the resultant will be the success value.

Successful completion of **Align Now All** will clear the “Align Now All required” Error Condition, and clear bit 14 in the Status Questionable Calibration register. It will also begin the elapsed time counter for Last Align Now All Time, and capture the Last Align Now All Temperature.

If the Align RF subsystem succeeded in aligning (no interfering signal present), the elapsed time counter begins for Last Align Now, RF Time, and the temperature is captured for the Last Align Now, RF Temperature. In addition, the Error Conditions “Align RF skipped” are cleared, the Error Condition “Align Now, RF required” is cleared, and bits 11 and 12 are cleared in the Status Questionable Calibration register

**Align Now All** can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the `:ABORt` SCPI command. When this occurs, the Error Condition message “Align Now All required” is generated, and bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

In many cases, you might find it more convenient to change alignments to **Normal**, instead of executing **Align Now All**. When the Auto Align process transitions to **Normal**, the instrument will immediately start to update only the alignments that have expired, thus efficiently restoring the alignment process.

Remote Command	<code>:CALibration[:ALL]</code> <code>:CALibration[:ALL]?</code>
Example	<code>:CAL</code>
Notes	<p><code>:CALibration[:ALL]?</code> returns 0 if successful, or 1 if failed</p> <p><code>:CALibration[:ALL]?</code> is the same as <code>*CAL?</code></p> <p>While <b>Align Now All</b> is performing the alignment, the Calibrating bit (Bit 0 in the Status Operation register) is set. Completion, or termination, will clear Bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORt</code> command</p> <p>Successful completion will clear bit 14 in the Status Questionable Calibration register</p> <p>An interfering user signal is not grounds for failure of <b>Align Now All</b>. However, Bits 11 and 12 are set in the Status Questionable Calibration register to indicate Align Now, RF is required</p> <p>An interfering user-supplied signal will result in the instrument requiring an Align Now, RF with the</p>

	interfering signal removed
Couplings	<p>Initializes the time for the Last Align Now All Time</p> <p>Records the temperature for the Last Align Now All Temperature</p> <p>If Align RF component succeeded, initializes the time for the Last Align Now, RF Time</p> <p>If Align RF component succeeded, records the temperature for the Last Align Now, RF Temperature</p>
Status Bits/OPC dependencies	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register
IEEE Command	
Remote Command	<code>*CAL</code>
Example	<code>*CAL?</code>
Notes	<p>Returns 0 if successful, or 1 if failed</p> <p><code>:CALibration[:ALL]?</code> is exactly the same as <code>*CAL?</code>, including all conditions, status register bits, and couplings</p> <p>See additional remarks described with <code>:CALibration[:ALL]?</code></p> <p>Overlapped Command</p>
Remote Command	<code>:CALibration[:ALL]:NPending</code>
Example	<code>:CAL:NPEN</code>
Notes	<p><code>:CALibration[:ALL]:NPending</code> is the same as <code>:CALibration[:ALL]</code>, including all conditions, status register bits, except this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not</p> <p>Typical usage is:</p> <ol style="list-style-type: none"> <li>1. <code>:CALibration:ALL:NPending</code> (Start a calibration)</li> <li>2. <code>:STATus:OPERation:CONDition?</code> (Check if the calibration is completed or not, If bit 0 is set, then the system is doing calibration, you should repeat this SCPI query until the bit is cleared)</li> <li>3. <code>:STATus:QUEStionable:CALibration:CONDition?</code> (Check if there are any errors/-failures in previous calibration procedure)</li> </ol>

#### 4.6.2.2 Align Now All but RF

In PXE, the key label is **Align Now All but RF (not including RF Presel)**

Immediately executes an alignment of all subsystems except the RF subsystem. The instrument will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key). This can be used to align portions of the instrument that are not impacted by an interfering user input signal.

4 System  
4.6 Alignments

This operation might be chosen instead of **All** if you do not want the device under test to experience a large change in input impedance, such as a temporary open circuit at the instrument input.

The query form of the remote commands (**:CALibration:NRF?**) invokes the alignment and returns a success or failure value.

Successful completion of **Align Now All but RF** clears the “Align Now All required” Error Condition, and clears Bit 14 in the Status Questionable Calibration register. If “Align Now All required” was in effect prior to executing **All but RF**, the Error Condition message “Align Now RF required” is generated and Bit 12 in the Status Questionable Calibration register is set. It will also begin the elapsed time counter for Last Align Now All Time, and capture the Last Align Now All Temperature.

**Align Now All but RF** can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the **:ABORt** SCPI command. When this occurs, the Error Condition message “Align Now All required” is generated, and Bit 14 is set in the Status Questionable Condition register. This is because new alignment data may be used for an individual subsystem, but not a full new set of data for all subsystems.

Remote Command	<b>:CALibration:NRF</b> <b>:CALibration:NRF?</b>
Example	<b>:CAL:NRF</b>
Notes	Returns 0 if successful, or 1 if failed While <b>Align Now All but RF</b> is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, will clear Bit 0 in the Status Operation register This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <b>:ABORt</b> command Successful completion clears Bit 14 in the Status Questionable Calibration register and sets Bit 12 if invoked with “Align Now All required”
Couplings	Initializes the time for the Last Align Now All Time Records the temperature for the Last Align Now All Temperature
Status Bits/OPC dependencies	Bits 12 or 14 may be set in the Status Questionable Calibration register

Overlapped Command

Remote Command	<b>:CALibration:NRF:NPENDING</b>
Example	<b>:CAL:NRF:NPEN</b>
Notes	<b>:CALibration:NRF:NPENDING</b> is the same as <b>:CALibration:NRF</b> , including all conditions, status register bits, except that this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not Typical usage is:

- 
1. `:CALibration:NRF:NPENDING` (start the All but RF calibration)
  2. `:STATus:OPERation:CONDition?` (If bit 0 is set, then the system is doing calibration, you should do re-query until this bit is cleared)
  3. `:STATus:QUESTionable:CALibration:CONDition?` (to check if there are any errors/-failures in previous calibration procedure)

### 4.6.2.3 Align Now RF

In PXE, the key label is **Align Now RF Only**

Immediately executes an alignment of the RF subsystem. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

This operation might be desirable if the alignments had been set to not include RF alignments, or if previous RF alignments could not complete because of interference which has since been removed.

If an interfering user signal is present at the RF Input, the alignment will terminate and generate the Error Condition message “Align RF skipped”, and Error Condition “Align Now, RF required”. In addition, bits 11 and 12 will be set in the Status Questionable Calibration register.

The query form of the remote commands (`:CALibration:RF?`) invokes the alignment of the RF subsystem and returns a success or failure value. An interfering user signal is grounds for failure.

Successful completion of **Align Now RF** begins the elapsed time counter for Last Align Now, RF Time, and capture the Last Align Now, RF Temperature.

**Align Now RF** can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the `:ABORT` SCPI command. When this occurs, the Error Condition message “Align Now, RF required” is generated, and Bit 12 is set in the Status Questionable Condition register. None of the new alignment data is used.

---

Remote Command	<code>:CALibration:RF</code> <code>:CALibration:RF?</code>
----------------	---

---

Example	<code>:CAL:RF</code>
---------	----------------------

---

Notes	<p>Returns 0 if successful, or 1 if failed (including interfering user signal)</p> <p>While <b>Align Now RF</b> is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, clears Bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORT</code> command</p>
-------	---

4 System  
4.6 Alignments

---

	<p>Successful completion clears the Error Conditions “Align RF skipped” and the Error Conditions “Align RF failed” and “Align Now, RF required”, and clears Bits 3, 11, and 12 in the Status Questionable Calibration register</p> <p>A failure encountered during alignment generates the Error Condition message “Align RF failed” and sets Bit 3 in the Status Questionable Calibration register</p> <p>An interfering user signal will result in Bits 11 and 12 being set in the Status Questionable Calibration register, to indicate Align Now, RF is required</p> <p>An interfering user supplied signal results in the instrument requiring <b>Align Now RF</b> with the interfering signal removed</p>
Couplings	<p>Initializes the time for the Last Align Now, RF Time</p> <p>Records the temperature for the Last Align Now, RF Temperature</p>
Status Bits/OPC dependencies	Bits 11, 12, or 14 may be set in the Status Questionable Calibration register

---

Overlapped Command

---

Remote Command	<code>:CALibration:RF:NPENding</code>
Example	<code>:CAL:RF:NPEN</code>
Notes	<p><code>:CALibration:RF:NPENding</code> is the same as <code>:CALibration:RF</code>, including all conditions, status register bits, except that this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not</p> <p>Typical usage is:</p> <ol style="list-style-type: none"> <li>1. <code>:CALibration:RF:NPENding</code> (Start a RF calibration)</li> <li>2. <code>:STATus:OPERation:CONDition?</code> (If Bit 0 is set, then the system is doing calibration, you should do re-query until this bit is cleared)</li> <li>3. <code>:STATus:QUESTionable:CALibration:CONDition?</code> ( to check if there are any errors/-failures in previous calibration procedure)</li> </ol>

---

#### 4.6.2.4 Align Now Expired

Alignments can be Expired when **Auto Align** is **PARTial** or **OFF**.

This control runs the alignments that have expired. This differs from performing **Align All, Now.**, which performs an alignment of all subsystems regardless of whether they are needed or not, whereas **Execute Expired Alignments** aligns only the individual subsystems that have become due.

---

Remote Command	<code>:CALibration:EXPIred</code>
Example	<code>:CAL:EXP?</code>
Notes	<code>:CALibration:EXPIred?</code> returns 0 if successful, or 1 if failed

---

---

While **Align Now Expired** is performing the alignment, the Calibrating bit (Bit 0 in the Status Operation register) is set. Completion, or termination, clears Bit 0 in the Status Operation register

This command is sequential; that is, it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by **:ABORt**

Successful completion clears bit 14 in the Status Questionable Calibration register

An interfering user signal is not grounds for failure of **Align Now Expired**. However, if RF Alignment was required, Bits 11 and 12 are set in the Status Questionable Calibration register to indicate Align Now, RF is required

---

Status Bits/OPC dependencies      Bits 11, 12, or 14 may be set in the Status Questionable Calibration register

#### 4.6.2.5 Align Now Preselector

Normally, Preselector Alignment runs during power up, and during the twenty minutes after power up, whenever there is a 1-degree internal temperature change.

This alignment is also run when an "**Align Now All**" on page 2353 is performed. This feature is helpful during the 20-minute warm-up time to correct for preselector drift while alignments are being held off. This feature can also be used in lieu of using the Preselector Center functionality, to improve speed throughput for remote testing with minimal impact to amplitude accuracy specs. The algorithm centers the preselector at the upper and lower operating frequencies of the YTF preselector.

The **Align Now Preselector** alignment is *not* a substitute for the Characterizer Preselector Advanced Alignment, which creates the default preselector centering curves for the YTF Preselector and is typically run annually.

---

Remote Command      **:CALibration:PRESelector**  
**:CALibration:PRESelector?**

---

Example      **:CAL:PRES**

---

Notes      Returns 0 if successful, or 1 if failed (including interfering user signal)

While **Align Now Preselector** is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, clears Bit 0 in the Status Operation register

This command is sequential; that is, it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by **:ABORt**

Successful completion clears the Error Conditions "Align Preselector failed" and clears Bit 3 in the Status Questionable Calibration Failure (Extended) register

A failure encountered during alignment generates the Error Condition message "Align Preselector failed" and sets Bit 3 in the Status Questionable Calibration Failure (Extended) register

---

Status Bits/OPC dependencies      Bit 3 may be set in the Status Questionable Calibration Failure (Extended) register

#### 4.6.2.6 Align Now All but RF Preselector

Only available in models with the RF Preselector, such as the N9048B. It is identical to the "Align Now All" on page 2353 (plus RF Presel) function, except that the RF Preselector is only partially aligned. Only the System Gain, Mechanical attenuator and Electronic attenuator alignments on the RF Preselector path are aligned. The purpose of these alignments is to improve the RF Preselector path amplitude variation compared to the bypass path.

Remote Command	<code>:CALibration:NRFPreselector</code> <code>:CALibration:NRFPreselector?</code>
Example	<code>:CAL:NRFPre</code>
Dependencies	Only appears in N9048B. Sending the SCPI command or query in other models generates an error
Status Bits/OPC dependencies	Bits 12 or 14 may be set in the Status Questionable Calibration register

#### 4.6.2.7 Align Now RF Presel Only (20 Hz to 3.6 GHz)

Only available in models with the RF Preselector, such as the N9048B. It executes an alignment of the RF Preselector section. The receiver will stop any measurement currently underway, perform the alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key). *Only* the RF Preselector is aligned; no Align Now All function is performed first.

The query (`:CALibration:RFPreselector:ONLY?`) invokes the alignment of the RF Preselector on both Conducted and Radiated Band, and returns a success or failure value. Successful completion clears the "Align 20 Hz to 3.6 GHz required" Error Condition, and clears Bit 1 and Bit 2 in the Status Questionable Calibration Extended Needed register.

The elapsed time counter will begin for Last Align Now, Conducted Time and Last Align Now Radiated Time and the temperature is captured for Last Align Now, Conducted Temperature and Last Align Now, Radiated Temperature. The alignment can be interrupted by pressing the **Cancel (ESC)** front-panel key or remotely with Device Clear followed by the `:ABORT` SCPI command. When this occurs, the Error Condition "Align 20 Hz to 3.6 GHz required" is set because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

The "Align 20 Hz to 3.6 GHz required" Error Condition will appear when this alignment has expired. The user is now responsible to perform the Align Now, 20 Hz to 3.6 GHz in order to keep the receiver in warranted operation. This alignment can only be performed by the user, as it is not part of the Auto Align process.

Remote Command	<code>:CALibration:RFPreselector:ONLY</code>
----------------	--

	<code>:CALibration:RFPSelector:ONLY?</code>
Example	<code>:CAL:RFPS:ONLY</code>
Notes	<p>Query returns 0 if successful, or 1 if failed</p> <p>When Align 20 Hz to 3.6 GHz is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORt</code> command. Successful completion clears Bits 1 and 2 in the Status Questionable Calibration Extended Needed register and Bits 0 and 1 in Status Questionable Calibration Extended Failure register</p> <p>A failure encountered during alignment sets the Error Condition “20 Hz to 3.6 GHz Alignment Failure”, sets Bits 1 and 2 in the Status Questionable Calibration Extended Needed register, and Bit 9 in Status Questionable Calibration register</p>
Dependencies	<p>Only appears in N9048B. Sending the SCPI command or query in other models generates an error</p> <p>This key is grayed-out if the instrument is displaying an “Align Now All required” message. If you press the key while it is grayed-out, you will see the informational message, “Align Now All required first”</p>
Couplings	<p>Initializes the time for the Last Align Conducted Now, Conducted Time</p> <p>Initializes the time for the Last Align Radiated Now, Radiated Time</p> <p>Records the temperature for the Last Align Conducted Now, Conducted Temperature</p> <p>Records the temperature for the Last Align Radiated Now, Radiated Temperature</p>
Status Bits/OPC dependencies	<p>Bit 8 or 9 may be set in the Status Questionable Calibration register</p> <p>Bit 1 and 2 may be set in the Status Questionable Calibration Extended Needed register</p> <p>Bit 0 and 1 may be set in the Status Questionable Calibration Extended Failure register</p>

#### 4.6.2.8 Align Now External Mixer

Immediately executes an alignment of the External Mixer that is plugged into the USB port. The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key). As this alignment calibrates the LO power to the mixer, this is considered an LO alignment; and failure is classified as an LO alignment failure.

The query (`:CALibration:EMIXer?`) invokes the alignment of the External Mixer and returns a success or failure value.

Remote Command	<code>:CALibration:EMIXer</code> <code>:CALibration:EMIXer?</code>
Example	<code>:CAL:EMIX</code>
Notes	<p>Returns 0 if successful, or 1 if failed</p> <p>While <b>Align Now External Mixer</b> is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, clears Bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed.</p>

	<p>Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <b>:ABORT</b> command</p> <p>A failure encountered during alignment generate the Error Condition message “Align LO failed” and sets Bit 5 in the Status Questionable Calibration register. Successful completion clears the “Align LO failed” message and Bit 5 in the Status Questionable Calibration register</p>
Dependencies	This control does not appear unless option EXM is present and is grayed-out, unless a USB mixer is plugged in to the USB
Status Bits/OPC dependencies	Bit3 may be set in the Status Questionable Calibration Extended Failure register

### 4.6.2.9 Align Source

Accesses source alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

The instrument stops any sequence of the source, performs the alignment, then restarts the sequence from the beginning.

Note: This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, it is required to perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.

There is no alert available for the source alignment. Operators are responsible for checking temperature shift since the last **Align Now Source** to determine whether the source alignment needs to be executed.

Remote Command	<b>:CALibration:INTernal:SOURce[:ALL]</b> <b>:CALibration:INTernal:SOURce[:ALL]?</b>
Example	<b>:CAL:INT:SOUR</b>
Notes	<b>:CAL:INT:SOUR?</b> Initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9410A/11A
Couplings	Initializes the time for the Last Align Source Now, All Time Records the temperature for the Last Align Source Now, All Temperature

#### Overlapped Command

Remote Command	<b>:CALibration:INTernal:SOURce[:ALL]:NPending</b>
Example	<b>:CAL:INT:SOUR:NPEN</b>
Notes	<b>:CALibration:INTernal:SOURce[:ALL]:NPending</b> is the same as <b>:CALibration:INTernal:SOURce[:ALL]</b> , including all conditions and status register bits, except that this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query whether the calibration is successfully completed or not Typical usage is:

---

	<ol style="list-style-type: none"> <li>1. <code>:CALibration:INTernal:SOURce:NPending</code> (start an internal source calibration)</li> <li>2. <code>:STATus:OPERation:CONDition?</code> (Check if the calibration is completed or not, If Bit 0 is set, then the system is doing calibration. Repeat this query until the bit is cleared)</li> <li>3. <code>:STATus:QUEStionable:CALibration:EXTended:FAILure:CONDition?</code> (Check if Bit 14 is set or not. If this bit is set, that means there are some errors in previous internal source calibration)</li> </ol>
Dependencies	Only appears in VXT models M9410A/11A

---

#### 4.6.2.10 Align Receiver

Accesses receiver alignment processes that are immediate action operations. They perform complete operations and run until they are complete.

**NOTE**

**This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, it is required to perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.**

---

There is no alert available for the receiver alignment. Operators are responsible for checking temperature shift since the last Align Now, Align Receiver, to determine whether the receiver alignment needs to be executed.

---

Remote Command	<code>:CALibration:INTernal:RECeiver[:ALL]</code> <code>:CALibration:INTernal:RECeiver[:ALL]?</code>
Example	<code>:CAL:INT:REC</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9410A/11A
Couplings	Initializes the time for the Last Align Receiver Now, All Time Records the temperature for the Last Align Receiver Now, All Temperature

#### 4.6.2.11 Align Fast

Accesses fast alignment processes, which are immediate action operations and perform complete operations, running until they are complete.

This aligns the subsystem that is most sensitive to temperature and time and includes:

- compensating the DC offset, gain imbalance and quadrature phase imbalance of IQ Modulator and/or Demodulator
- compensating the gain offset of RF path

## 4 System

### 4.6 Alignments

It is suggested to perform Fast Alignment every 8 hours or when temperature has changed more than 5°C from the previous Fast Alignment.

Remote Command	<code>:CALibration:INTernal:FAST[:ALL]</code> <code>:CALibration:INTernal:FAST[:ALL]?</code>
Example	<code>:CAL:INT:FAST</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9410A/11A /15A/16A

#### 4.6.2.12 Align LO Leakage

Accesses LO Leakage alignment processes, which are immediate action operations and perform complete operations, running until they are complete.

This alignment reduce the LO Leakage of the instrument.

Remote Command	<code>:CALibration:INTernal:LOLeakage</code> <code>:CALibration:INTernal:LOLeakage?</code>
Example	<code>:CAL:INT:LOL</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9410A/11A /15A/16A

#### 4.6.2.13 Align IF Cable

Accesses IF Cable alignment processes, which are immediate action operations and perform complete operations, running until they are complete.

This alignment aligns the IF cabling to the remote heads.

Remote Command	<code>:CALibration:INTernal:RRHead:IFCable</code> <code>:CALibration:INTernal:RRHead:IFCable?</code>
Example	<code>:CAL:INT:RRH:IFC</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1740A/41A/42A/49A/49B RRH
Backwards Compatibility SCPI	<code>:CALibration:INTernal:IFCable</code> <code>:CALibration:INTernal:IFCable?</code>

#### 4.6.2.14 Align RRH Amplitude

This is an immediate action operation, which runs until complete.

Aligns the Amplitude of Remote Radio Head. This operation could take quite a long time to run.

**CAUTION**

For M1741A/49A/49B RRH, make sure to connect 50-ohm terminations to Head Tx/Rx 1 and 2 ports.

Remote Command	<code>:CALibration:INTernal:RRHead:AMPLitude</code> <code>:CALibration:INTernal:RRHead:AMPLitude?</code>
Example	<code>:CAL:INT:RRH:AMPL?</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
Backwards	<code>:CALibration:INTernal:RRHAmp</code>
Compatibility SCPI	<code>:CALibration:INTernal:RRHAmp?</code>

#### 4.6.2.15 Align Fast RRH Amplitude

This is an immediate action operation, which runs until complete.

Compare to Align RRH Amplitude, it aligns the amplitude of Remote Radio Head with a wider frequency interval. This operation takes about one minute.

Remote Command	<code>:CALibration:INTernal:RRHead:AMPLitude:FAST</code> <code>:CALibration:INTernal:RRHead:AMPLitude:FAST?</code>
Example	<code>:CAL:INT:RRH:AMPL:FAST?</code>
Notes	The query initiates an alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1742A RRH

#### 4.6.2.16 Align RRH LO Power

This is an immediate action operation, which runs until complete.

Aligns the LO Power of Remote Radio Head.

Remote Command	<code>:CALibration:INTernal:RRHead:LOPower</code> <code>:CALibration:INTernal:RRHead:LOPower?</code>
Example	<code>:CAL:INT:RRH:LOP</code>
Notes	The query initiates an alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1741A/49A/49B RRH

#### 4.6.2.17 Align LO Clock

This is an immediate action operation, which runs until complete.

4 System  
4.6 Alignments

Synchronizes RRH LO Clocks.

Remote Command	<code>:CALibration:INTernal:RRHead:LOSync</code> <code>:CALibration:INTernal:RRHead:LOSync?</code>
Example	<code>:CAL:INT:RRH:LOS?</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
Backwards	<code>:CALibration:INTernal:LOSync</code>
Compatibility SCPI	<code>:CALibration:INTernal:LOSync?</code>

#### 4.6.2.18 Align VXT Transceiver

In M941xE(M941xA+M9471A) system, accesses alignment processes in VXT Transceiver(M9410A/11A/15A/16A), which are immediate action operations and perform complete operations, running until they are complete.

The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

There is no alert available for the VXT Transceiver alignment. Operators are responsible for checking temperature shift since the last **Align VXT Transceiver** to determine whether the VXT Transceiver alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:VXT:TRANsceiver</code> <code>:CALibration:INTernal:VXT:TRANsceiver?</code>
Example	<code>:CAL:INT:VXT:TRAN</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears on M9410E/11E/15E/16E

#### 4.6.2.19 Align up down converter

In M941xE(M941xA+M9471A) system, accesses alignment processes in up down converter (M9471A), which are immediate action operations and perform complete operations, running until they are complete.

The instrument stops any measurement currently underway, performs the alignment, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

There is no alert available for the up down converter alignment. Operators are responsible for checking temperature shift since the last **Align up down converter** to determine whether the up down converter alignment needs to be executed.

Remote Command	<code>:CALibration:UPDown:CONVerter</code> <code>:CALibration:UPDown:CONVerter?</code>
Example	<code>:CAL:UPD:CONV</code>
Notes	The query initiates an Alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears on M9410E/11E/15E/16E

#### 4.6.2.20 Align Selected Freq Ranges

VXT models M9410A/11A provide five alignments: **Align Now All**, **Align Source**, **Align Receiver**, **Align Fast** and **Align LO Leakage**. Every time you execute one of these alignments, the system performs a full span alignment. To save time, it is possible to limit the range of alignment frequency settings. **Align Selected Freq Ranges** allows you to set the start and stop frequency of an alignment.

The example below shows the steps for processing Align Receiver on VXT model M9410A, specifying a frequency range from 1.3 GHz to 1.8 GHz, and 2.5 GHz to 3.9 GHz.

- First row: set the Start and Stop Frequency to 1.3 GHz and 1.8 GHz. Enable the first row
- Second row: set the Start and Stop Frequency to 2.5 GHz and 3.9 GHz. Enable the second row
- Click **Align Receiver**. A message appears: “Aligning Selected Freq Ranges 1 of 7”

The equivalent SCPI command sequence is:

```
:CAL:INT:ASFR ON
:CAL:INT:ASFR:FRAN 1.3 GHz, 1.8 GHz, 2.5 GHz, 3.9 GHz
:CAL:INT:REC
```

Remote Command	<code>:CALibration:INTernal:ASFRanges[:STATe] ON   OFF   1   0</code> <code>:CALibration:INTernal:ASFRanges?</code>
Example	<code>:CAL:INT:ASFR ON</code> <code>:CAL:INT:ASFR?</code>
Notes	When <b>Align Selected Freq Ranges</b> is <b>ON</b> , the table is displayed for setting up the frequency ranges to be aligned
Dependencies	Only available in: <ul style="list-style-type: none"> <li>– VXT models M9410A/11A</li> <li>– VXT models M9410A/11A with RRH and/or CIU</li> <li>– M9410E/11E</li> </ul>

---

Only functional for the following alignments:

- Align Now All of VXT models M9410A/11A and M9410E/11E
- Align Source
- Align Receiver
- Align Fast
- Align LO Leakage
- Align VXT Transceiver of M910E/11E
- Align Up Down Converter of M9410E/11E

**Align Selected Freq Ranges** only guarantees the hardware performance within the frequency range

---

Preset **OFF**

### Enable Extended Freq Range

Allows you to set frequency ranges for VXT models M9410A/11A/15A with Remote Head and/or CIU. When Enable Extended Freq Range is not active, the frequency range is limited by VXT models only.

---

Remote Command **:CALibration:INTernal:ASFRanges:EXTend[:STATE] ON | OFF | 1 | 0**  
**:CALibration:INTernal:ASFRanges:EXTend[:STATE]?**

---

Example **:CAL:INT:ASFR:EXT ON**  
**:CAL:INT:ASFR:EXT?**

---

Dependencies Only available in VXT models M9410A/11A/15A/16A with Remote Head and/or CIU  
Only available when **Align Specified Freq Ranges** is **ON**

---

Preset **OFF**

### Frequency Range

Allows you to set the alignment frequency range.

---

Remote Command **:CALibration:INTernal:ASFRanges:FRANges <startFreq>,<stopFreq>[,<startFreq>,<stopFreq>][,<startFreq>,<stopFreq>][,<startFreq>,<stopFreq>][,<startFreq>,<stopFreq>]**

---

Example **:CAL:INT:ASFR:FRAN 1.3 GHz,1.8 GHz,2.5 GHz,3.9 GHz**  
**:CAL:INT:ASFR:FRAN?**

---

Notes **<startFreq>**: Start frequency of an alignment  
**<stopFreq>**: Stop frequency of an alignment  
To process alignment for a single frequency point, set **<startFreq> = <stopFreq>**

Dependencies	<p>Only appears when <b>"Align VXT Transceiver" on page 2366</b> is ON</p> <p><b>Error message "Invalid alignment frequency range"</b> is reported if start and stop frequencies are invalid, such as:</p> <ol style="list-style-type: none"> <li>1. Stop frequency - Start frequency &lt; 0</li> <li>2. the count of start and stop frequency is not even</li> <li>3. the frequency is out of range. See <b>"More Information" on page 2369</b></li> <li>4. more than 5 pairs of start and stop frequency are listed</li> </ol>
Preset	1.0 GHz, 2.0 GHz

### More Information

When **"Enable Extended Freq Range" on page 2368** is not active, the frequency range depends on the VXT models. The table below lists the Start and Stop Frequency Ranges for VXT models M9410A/11A/15A:

Hardware	Options	Min Frequency	Max Frequency
M9410A/11A	F06	330 MHz	6.08 GHz
M9410A/11A	F06 & EP6	330 MHz	6.6 GHz
M9410A/11A	F06 & LFE & EP6	6.5 kHz	6.6 GHz
M9415A/16A	F06	330 MHz	6.6 GHz
M9415A/16A	F08	330 MHz	8.6 GHz
M9415A/16A	F12	330 MHz	12.9 GHz

When **Enable Extended Freq Range** is active, the frequency range depends on the extensions connected to VXT models. The table below lists the Start and Stop Frequency Range of VXT models with Radio Heads/CIU:

Connected with Radio Heads/CIU	Min frequency	Max frequency	IF Frequency range
VXT + CIU	5.9 GHz	12 GHz	1.4 GHz ~ 4.6 GHz
VXT + CIU + RRH	24.25 GHz	43.5 GHz	2.5 GHz ~ 4.5 GHz
VXT + M1742A	10 GHz	32 GHz	3.0 GHz ~ 5.5 GHz

**NOTE**

The Min frequency and Max frequency are also the preset frequencies. It is recommended to keep the preset frequency range for VXT models with extensions. An alignment with the full IF Frequency range will be executed ignoring the specific ranges.

The table below lists the Frequency Range of M941xE(VXT Models with M9471A)

Products with M9471A	Preset	Receiver minimum settable frequency	Source minimum settable (center)frequency	Minimum center frequency with Spec	Receiver maximum settable(center) frequency	Source maximum settable (center) frequency
M941xE without LFE option	1 GHz	330.000005 MHz	330 MHz	380MHz	26.499999995 GHz	26.5GHz
M941xE with LFE option (LFE option in M9411A or M9471A)	1 GHz	750.005 kHz	750 kHz	1MHz	26.499999995 GHz	26.5GHz

**NOTE** The minimum spec frequency is 380 MHz, but the receiver minimum settable center frequency is 330.000005 MHz, the source minimum settable center frequency is 330 MHz.

With Option LFE in M9411A or in M9471A, the receiver minimum settable frequency is 750.005 kHz, the source minimum settable frequency is 750 kHz, but Spec to customer only ensure down to 1 MHz.

## Enable

Enables or disables the selected frequency ranges.

Preset **Row 1: ON**  
**Other rows: OFF**

### 4.6.2.21 Align External Mixer Path

Immediately executes an alignment of the External Mixer Path inside the VXT models M9415A/16A. External Mixer Path is used when the RF Port is connected to an external Remote Radio Head (RRH). It provides a better performance compared to the normal path. External Mixer Path Alignment covers frequencies from 2.4 GHz to 3.4 GHz of the external mixer path.

**NOTE** This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, you need only perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.

There is no alert for the External Mixer Path alignment. You are responsible for checking the temperature shift since the last **Align Now, External Mixer Path**, to determine whether the external mixer path alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:EMPath</code> <code>:CALibration:INTernal:EMPath?</code>
Example	<code>:CAL:INT:EMP</code>
Notes	The query initiates an alignment and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9415A/16A when Option MXP is installed
Couplings	Initializes the time for the Last Align External Mixer Path Now, All Time Records the temperature for the Last Align External Mixer Path Now, All Temperature

#### 4.6.2.22 Align Low Band

Accesses Low Band alignment processes that are immediate action operations. They perform complete operations and run until they are complete. Low Band Alignment covers frequencies from 380 MHz to 4.3 GHz of the non-external mixer path.

**NOTE**

**This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, you need only perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.**

There is no alert for the Low Band alignment. You are responsible for checking the temperature shift since the last **Align Now, Align Low Band**, to determine whether the Low Band alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:LBAND[:ALL]</code> <code>:CALibration:INTernal:LBAND[:ALL]?</code>
Example	<code>:CAL:INT:LBAN</code>
Notes	The query initiates an Alignment, and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9415A/16A
Couplings	Initializes the time for the Last Align Low Band Now, All Time Records the temperature for the Last Align Low Band Now, All Temperature

#### 4.6.2.23 Align High Band

Accesses High Band alignment processes that are immediate action operations. They perform complete operations and run until they are complete. High Band Alignment covers frequencies from 4.3 GHz to 12 GHz of the non-external mixer path.

**NOTE**

This alignment corrects slow-rate drift, which does not impair specifications for time periods shorter than one week. Thus, you need only perform this alignment on a weekly basis to maintain specifications. This alignment typically takes >2 minutes to complete.

There is no alert for the High Band alignment. You are responsible for checking the temperature shift since last **Align Now, Align High Band**, to determine whether the High Band alignment needs to be executed.

Remote Command	<code>:CALibration:INTernal:HBAND[:ALL]</code> <code>:CALibration:INTernal:HBAND[:ALL]?</code>
Example	<code>:CAL:INT:HBAN</code>
Notes	The query initiates an Alignment, and returns 0 if successful, or 1 if failed
Dependencies	Only appears in VXT models M9415A/16A
Couplings	Initializes the external time for the Last Align High Band Now, All Time Records the temperature for the Last Align High Band Now, All Temperature

### 4.6.3 Path Delay Calibration

Path Delay Calibration is used to remove the time delay differences between multiple power channels of a module.

Dependencies	Only available in VXT modules M9410A/11A Only for modules with matched Digital board hardware version, which means the modules are in same FPGA version The matched hardware version information is in below table
--------------	--

	Digital board Hardware version	Matched module
M9410A	2,3,4,6,10,11	Yes
M9410A	12, 13	Yes
M9411A	18	Yes
M9411A	20,21	Yes
M9411A	12,13	Yes
M9411A	0,1,2,3,4,6,10,11	Yes

#### 4.6.3.1 Source Path Delay Calibration

Accesses the Source Path Delay Calibration processes, which are immediate-action operations and perform complete operations, running until they are complete.

---

**NOTE** Connect the RF In of the primary module to the OUT port (COMMON, PORT 1) of the combiner.

---

**NOTE** Before performing Path Delay Calibration of Sources, please confirm that:

---

**NOTE** Each of the RF Out ports is connected to the RF In port of the Primary channel, using an RF combiner.

---

**NOTE** The cables between the combiner and the Source output ports are of the same length.

---

**NOTE** A pop-up window appears (as shown below); press OK to continue calibration.

---

**NOTE** If the is in MIMO sync, and you send a SCPI command to run Calibration, the calibration process is not executed and instrument a warning is generated (“-221,Setting Conflict; Calibrations are not available while MIMO Sync is On”). To execute Calibration, you must first stop MIMO, manually or via SCPI.

---

Remote Command    :CALibration:PDElay:SOURce  
                          :CALibration:PDElay:SOURce?

---

Example             :CAL:PDEL:SOUR

---

Notes                The query initiates an Alignment and returns 0 if successful, or 1 if failed  
                          If the calibration process detected a faulty state, an error will be generated: “Misc/System Alignment Failure”. Calibration will be aborted. Please see event log for more information:

1. Cables are not connected
2. Power control failure
3. Hardware failure
4. M9300A 10MHz reference open failure

---

Dependencies        Only appears in VXT models M9410A/11A  
                          Only for modules with matched Digital board hardware version, which means the modules are in same FPGA version

---

### 4.6.3.2 Path Delay Correction On/Off(Remote Command only)

On/Off the path delay correction to enable the calibration data on the source of the module.

Remote Command	<code>:CALibration:PDElay:CORRection ON   OFF</code> <code>:CALibration:PDElay:CORRection?</code>
Example	<code>:CAL:PDEL:CORR ON</code>
Notes	If the <b>Path Delay Calibration</b> has never been performed and there is no calibration correction data in the controller, an alert is generated
Preset	<code>OFF</code>
Range	<code>ON OFF</code>

### 4.6.4 Show Alignment Statistics

Shows alignment information you can use to ensure that the instrument is operating in a specific manner. The **Show Alignment Statistics** screen is where you can view time and temperature information.

Values displayed are only updated when the **Show Alignment Statistics** screen is invoked. They are not updated while the **Show Alignment Statistics** screen is being displayed. The remote commands that access this information obtain current values.

Note that some of these statistics only display if your instrument supports them; for example, Last Source Align Now All Time only shows up in instruments which contain a source which supports auto alignments.

An example of the **Show Alignment Statistics** screen would be similar to:

Std Header	Product Number: N9020A Serial Number: US46340924 Firmware Revision: A.01.01		
Instrument Info	Time since start-up:	300 hrs	
	Current Temperature:	+28 degC	
Auto Align Info	Time while Auto Align off:	90 min	
Std Align Now	Time since last Align Now All:	12.5 hrs	Times & Temperature delta. Shown as "... " if none since start-up.
	Temperature since last Align Now All:	-1.3 degC	
	Time since last Align Now RF:	5 min	
	Temperature since last Align Now RF:	+0.1 degC	
If TG Option (Not Zorro1)	Time since last Align TG:	2.5 hrs	Time & Temperature 'stamp'
	Temperature since last Align TG:	+0.2 degC	
Opts 508,513 526	Last Characterize Preselector:	Jun 1, 2006 15:00:00	
	Last Characterize Preselector Temperature:	+32.1 degC	

“Time while Auto Align off” is not available in VXT models M9410A/11A.

A successful **Align Now, RF** sets the Last Align RF temperature to the current temperature, and resets the Last Align RF time. A successful **Align Now All** or **Align Now All but RF** sets the Last Align Now All temperature to the current temperature, and resets the Last Align Now All time. A successful **Align Now All** also resets the Last Align RF items if the RF portion of the **Align Now** succeeded.

Example `:SYST:SHOW ALIGN`

Notes The values displayed on the screen are only updated upon entry to the screen, and not updated while the screen is being displayed

The following data-specific queries are available:

### Query Time since Startup

Remote Command `:SYSTem:PON:TIME?`

Example `:SYST:PON:TIME?`

Notes Value is the time since the most recent start-up in seconds

State Saved No

### Query Current Temperature

Remote Command `:CALibration:TEMPerature:CURRent?`

Example `:CAL:TEMP:CURR?`

Notes Value is in degrees Centigrade

State Saved No

### Query Current Temperature at Remote Radio Head

Remote Command	<code>:CALibration:TEMPerature:CURRent:RRHead?</code>
Example	<code>:CAL:TEMP:CURR:RRH?</code>
Notes	Value is in degrees Centigrade
Dependencies	Only appears when Align RRH Amplitude is available
State Saved	No

### Query Current Temperature at Remote Radio Head LO

Remote Command	<code>:CALibration:TEMPerature:CURRent:RRHead:LO?</code>
Example	<code>:CAL:TEMP:CURR:RRH:LO?</code>
Notes	Value is in degrees Centigrade
Dependencies	Only appears when Align RRH LO Power is available
State Saved	No

### Query Time since Last Align Now All

Remote Command	<code>:CALibration:TIME:LALL?</code>
Example	<code>:CAL:TIME:LALL?</code>
Notes	Value is the elapsed time, in seconds, since the last successful <b>Align Now All</b> or <b>Align Now All but RF</b> was executed
State Saved	No

### Query Temperature of Last Align Now All

Remote Command	<code>:CALibration:TEMPerature:LALL?</code>
Example	<code>:CAL:TEMP:LALL?</code>
Notes	Value is in degrees Centigrade at which the last successful <b>Align Now All</b> or <b>Align Now All but RF</b> was executed
State Saved	No

### Query Time since Last Align Now Receiver

Remote Command	<code>:CALibration:TIME:INTernal:RECeiver?</code>
Example	<code>:CAL:TIME:INT:REC?</code>
Notes	Value in hours since the last successful <b>Align Now Receiver</b>
Dependencies	Only appears in VXT models M9410A/11A
State Saved	No

### Query Temperature of Last Align Now Receiver

Remote Command	<code>:CALibration:TEMPerature:INTernal:RECeiver?</code>
Example	<code>:CAL:TEMP:INT:REC?</code>
Notes	Value in degrees Centigrade when the last successful <b>Align Now Receiver</b> was executed
Dependencies	Only appears in VXT models M9410A/11A
State Saved	No

### Query Time since Last Align Now Source

Remote Command	<code>:CALibration:TIME:INTernal:SOURce?</code>
Example	<code>:CAL:TIME:INT:SOUR?</code>
Notes	Value in hours since the last successful <b>Align Now Source</b>
Dependencies	Only appears in VXT models M9410A/11A
State Saved	No

### Query Temperature of Last Align Now Source

Remote Command	<code>:CALibration:TEMPerature:INTernal:SOURce?</code>
Example	<code>:CAL:TEMP:INT:SOUR?</code>
Notes	Value in degrees Centigrade when the last successful <b>Align Now Source</b> was executed
Dependencies	Only appears in VXT models M9410A/11A
State Saved	No

### Query Time since Last Align Now Fast

Remote Command	<code>:CALibration:TIME:INTernal:FAST?</code>
Example	<code>:CAL:TIME:INT:FAST?</code>
Notes	Value in hours since the last successful <b>Align Now Fast</b>
Dependencies	Only appears in VXT models M9410A/11A/15A/16A
State Saved	No

### Query Temperature of Last Align Now Fast

Remote Command	<code>:CALibration:TEMPerature:INTernal:FAST?</code>
Example	<code>:CAL:TEMP:INT:FAST?</code>
Notes	Value in degrees Centigrade when the last successful <b>Align Now Fast</b> was executed
Dependencies	Only appears in VXT models M9410A/11A/15A/16A
State Saved	No

### Query Time since Last Align Now LO Leakage

Remote Command	<code>:CALibration:TIME:INTernal:LOLeakage?</code>
Example	<code>:CAL:TIME:INT:LOL?</code>
Notes	Value in hours since the last successful <b>Align Now LO Leakage</b>
Dependencies	Only appears in VXT models M9410A/11A/15A/16A
State Saved	No

### Query Temperature of Last Align Now LO Leakage

Remote Command	<code>:CALibration:TEMPerature:INTernal:LOLeakage?</code>
Example	<code>:CAL:TEMP:INT:LOL?</code>
Notes	Value in degrees Centigrade when the last successful <b>Align Now LO Leakage</b> was executed
Dependencies	Only appears in VXT models M9410A/11A/15A/16A
State Saved	No

### Query Time since Last Align Now IF Cable

Remote Command	<code>:CALibration:TIME:INTernal:RRHead:IFCable?</code>
Example	<code>:CAL:TIME:INT:RRH:IFC?</code>
Notes	Value in hours since the last successful <b>Align Now IF Cable</b>
Dependencies	Only appears in VXT based solutions with M1740A/41A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TIME:INTernal:IFCable?</code>

### Query Temperature of Last Align Now IF Cable

Remote Command	<code>:CALibration:TEMPerature:INTernal:RRHead:IFCable?</code>
Example	<code>:CAL:TEMP:INT:RRH:IFC?</code>
Notes	Value in degrees Centigrade when the last successful <b>Align Now IF Cable</b> was executed
Dependencies	Only appears in VXT based solutions with M1740A/41A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TEMPerature:INTernal:IFCable?</code>

### Query Time since Last Align LO Clock

Remote Command	<code>:CALibration:TIME:INTernal:RRHead:LOSync?</code>
----------------	--

Example	<code>:CAL:TIME:INT:RRH:LOS?</code>
Notes	Value in hours since the last successful Align LO Clock
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TIME:INTernal:LOSync?</code>

### Query Temperature of Last Align LO Clock

Remote Command	<code>:CALibration:TEMPerature:INTernal:RRHead:LOSync?</code>
Example	<code>:CAL:TEMP:INT:RRH:LOS?</code>
Notes	Value in degrees Centigrade when the last successful Align LO Clock was executed
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TEMPerature:INTernal:LOSync?</code>

### Query Time since Last Align RRH Amplitude

Remote Command	<code>:CALibration:TIME:INTernal:RRHead:AMPLitude?</code>
Example	<code>:CAL:TIME:INT:RRH:AMPL?</code>
Notes	Value in hours since the last successful Align RRH Amplitude
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TIME:INTernal:RRHAmp?</code>

### Query Temperature of Last Align RRH Amplitude

Remote Command	<code>:CALibration:TEMPerature:INTernal:RRHead:AMPLitude?</code>
Example	<code>:CAL:TEMP:INT:RRH:AMPL?</code>
Notes	Value in degrees Centigrade when the last successful Align RRH Amplitude was executed
Dependencies	Only appears in VXT based solutions with M1741A/42A/49A/49B RRH
State Saved	No
Backwards Compatibility SCPI	<code>:CALibration:TEMPerature:INTernal:RRHAmp?</code>

### Query Time since Last Align Fast RRH Amplitude

Remote Command	<code>:CALibration:TIME:INTernal:RRHead:AMPLitude:FAST?</code>
Example	<code>:CAL:TIME:INT:RRH:AMPL:FAST?</code>
Notes	Value in hours since the last successful Align Fast RRH Amplitude
Dependencies	Only appears in VXT based solutions with M1742A RRH
State Saved	No

### Query Temperature of Last Align Fast RRH Amplitude

Remote Command	<code>:CALibration:TEMPerature:INTernal:RRHead:AMPLitude:FAST?</code>
Example	<code>:CAL:TEMP:INT:RRH:AMPL:FAST?</code>
Notes	Value in degrees Centigrade when the last successful Align Fast RRH Amplitude was executed
Dependencies	Only appears in VXT based solutions with M1742A RRH
State Saved	No

### Query Time since Last Align RRH LO Power

Remote Command	<code>:CALibration:TIME:INTernal:RRHead:LOPower?</code>
Example	<code>:CAL:TIME:INT:RRH:LOP?</code>
Notes	Value in hours since the last successful Align RRH LO Power
Dependencies	Only appears in VXT based solutions with M1741A/49A/49B RRH
State Saved	No

### Query Temperature of Last Align RRH LO Power

Remote Command	<code>:CALibration:TEMPerature:INTernal:RRHead:LOPower?</code>
Example	<code>:CAL:TEMP:INT:RRH:LOP?</code>
Notes	Value in degrees Centigrade when the last successful Align RRH LO Power was executed
Dependencies	Only appears in VXT based solutions with M1741A/49A/49B RRH
State Saved	No

### Query Time since Last Align Now RF

Remote Command	<code>:CALibration:TIME:LRF?</code>
Example	<code>:CAL:TIME:LRF?</code>
Notes	Value is the elapsed time, in seconds, since the last successful <b>Align Now, RF</b> was executed, either individually or as a component of <b>Align Now All</b>
State Saved	No

### Query Temperature of Last Align Now RF

Remote Command	<code>:CALibration:TEMPerature:LRF?</code>
Example	<code>:CAL:TEMP:LRF?</code>
Notes	Value is in degrees Centigrade at which the last successful <b>Align Now RF</b> was executed, either individually or as a component of <b>Align Now All</b>
State Saved	No

### Query Time since Last Align IF

Remote Command	<code>:CALibration:TIME:LIF?</code>
Example	<code>:CAL:TIME:LIF?</code>
Notes	Value is the elapsed time, in seconds, since the last successful <b>Align IF</b> was executed
State Saved	No

### Query Temperature of Last Align IF

Remote Command	<code>:CALibration:TEMPerature:LIF?</code>
Example	<code>:CAL:TEMP:LIF?</code>
Notes	Value is in degrees Centigrade at which the last successful <b>Align IF</b> was executed
State Saved	No

### Query Time since Last Characterize Preselector

Remote Command	<code>:CALibration:TIME:LPreselector?</code>
Example	<code>:CAL:TIME:LPR?</code>
Notes	Value is the date and time the last successful <b>Characterize Preselector</b> was executed. The date is separated from the time by a space character Returns "" if no <b>Characterize Preselector</b> has ever been performed on the instrument
Dependencies	In models that do not include preselectors, this command is not enabled and any attempt to set or query yields an error
State Saved	No

### Query Temperature of Last Characterize Preselector

Remote Command	<code>:CALibration:TEMPerature:LPreselector?</code>
Example	<code>:CAL:TEMP:LPR?</code>
Notes	Value is in degrees Centigrade at which the last successful <b>Characterize Preselector</b> was executed

4 System  
4.6 Alignments

Dependencies	In models that do not include preselectors, this command is not enabled and any attempt to set or query yields an error
--------------	---

State Saved	No
-------------	----

### Query Time since Auto Align Off

Remote Command	<code>:CALibration:AUTO:TIME:OFF?</code>
----------------	--

Example	<code>:CAL:AUTO:TIME:OFF?</code>
---------	----------------------------------

Notes	Value is the elapsed time, in seconds, since <b>Auto Align</b> has been set to <b>Off</b> or <b>Off with Alert</b> . The value is 0 if <b>Auto Align</b> is <b>ALL</b> or <b>NORF</b>
-------	---

State Saved	No
-------------	----

### Query Time since Last Align Now 20 Hz - 30 MHz

Remote Command	<code>:CALibration:TIME:RFPSelector:LCONducted?</code>
----------------	--

Example	<code>:CAL:TIME:RFPS:LCON?</code>
---------	-----------------------------------

Notes	Values are the date and time the last successful <b>Align Now, 20 Hz - 30 MHz</b> was executed. The date is separated from the time by a semi-colon character
-------	---

State Saved	No
-------------	----

### Query Temperature of Last Align Now 20 Hz - 30 MHz

Remote Command	<code>:CALibration:TEMPerature:RFPSelector:LCONducted?</code>
----------------	---

Example	<code>:CAL:TEMP:RFPS:LCON?</code>
---------	-----------------------------------

Notes	Value is in degrees Centigrade at which the last successful <b>Align Now, 20 Hz - 30 MHz</b> was executed
-------	---

State Saved	No
-------------	----

### Query Time since Last Align Now 30 MHz - 3.6 GHz

Remote Command	<code>:CALibration:TIME:RFPSelector:LRADiated?</code>
----------------	---

Example	<code>:CAL:TIME:RFPS:LRAD?</code>
---------	-----------------------------------

Notes	Value is the date and time the last successful <b>Align Now, 30 MHz - 3.6 GHz</b> was executed. The date is separated from the time by a semi-colon character
-------	---

State Saved	No
-------------	----

### Query Temperature of Last Align Now 30 MHz - 3.6 MHz

Remote Command	<code>:CALibration:TEMPerature:RFPSelector:LRADiated?</code>
Example	<code>:CAL:TEMP:RFPS:LRAD?</code>
Notes	Value is in degrees Centigrade at which the last successful <b>Align Now, 30 MHz – 3.6 GHz</b> was executed
State Saved	No

### Query Next Scheduled Alignment Time

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:TIME:NEXT?</code> Returns data using the following format: YYYY/MM/DD; HH:MM:SS
Example	<code>:CAL:RFPS:SCH:TIME:NEXT?</code>
Notes	The next run time will be updated based on the start date/time and recurrence set by the user “date” is representation of the date the task will run in the form: <code>YYYY/MM/DD</code> where: <ul style="list-style-type: none"> <li>- <code>YYYY</code> is the four-digit representation of year. (for example, 2009)</li> <li>- <code>MM</code> is the two-digit representation of month. (for example, 01 to 12)</li> <li>- <code>DD</code> is the two-digit representation of the day. (for example, 01 to 28, 29, 30 or 31 depending on the month and year)</li> </ul> “time” is a representation of the time of day the task will run in the form: <code>HH:MM:SS</code> where: <ul style="list-style-type: none"> <li>- <code>HH</code> is the two-digit representation of the hour in 24-hour format</li> <li>- <code>MM</code> is the two-digit representation of minute</li> <li>- <code>SS</code> is the two-digit representation of seconds</li> </ul>
State Saved	No

### Query Time since Last Align Now External Mixer Path

Remote Command	<code>:CALibration:TIME:INTernal:EMPath?</code>
Example	<code>:CAL:TIME:INT:EMP?</code>
Notes	Value in hours since the last successful <b>Align Now External Mixer Path</b>
Dependencies	Only appears option MXP is installed
State Saved	No

### Query Temperature of Last Align Now External Mixer Path

Remote Command	<code>:CALibration:TEMPerature:INTernal:EMPath?</code>
Example	<code>:CAL:TEMP:INT:EMP?</code>
Notes	Value in degrees Centigrade when the last successful <b>Align Now External Mixer Path</b> was executed
Dependencies	Only appears option MXP is installed
State Saved	No

### Query Time since Last Align Now Low Band

Remote Command	<code>:CALibration:TIME:INTernal:LBANd?</code>
Example	<code>:CAL:TIME:INT:LBAN?</code>
Notes	Value in hours since the last successful <b>Align Now Low Band</b>
Dependencies	Only appears in VXT models M9415A/16A
State Saved	No

### Query Temperature of Last Align Now Low Band

Remote Command	<code>:CALibration:TEMPerature:INTernal:LBANd?</code>
Example	<code>:CAL:TEMP:INT:LBAN?</code>
Notes	Value in degrees Centigrade when the last successful <b>Align Now Low Band</b> was executed
Dependencies	Only appears in VXT models M9415A/16A
State Saved	No

### Query Time since Last Align Now High Band

Remote Command	<code>:CALibration:TIME:INTernal:HBAN?</code>
Example	<code>:CAL:TIME:INT:HBAN?</code>
Notes	Value in hours since the last successful <b>Align Now High Band</b>
Dependencies	Only appears in VXT models M9415A/16A
State Saved	No

### Query Temperature of Last Align Now High Band

Remote Command	<code>:CALibration:TEMPerature:INTernal:HBANd?</code>
Example	<code>:CAL:TEMP:INT:HBAN?</code>
Notes	Value in degrees Centigrade when the last successful <b>Align Now High Band</b> was executed
Dependencies	Only appears in VXT models M9415A/16A
State Saved	No

### Query Time since Last Align VXT Transceiver

Remote Command	:CALibration:TIME:INTernal:VXT:TRANsceiver?
Example	:CAL:TIME:INT:VXT:TRAN?
Notes	Value in hours since the last successful <b>Align VXT Transceiver</b> Returns <b>NaN</b> if Align VXT Transceiver has never been performed on the instrument
Dependencies	Only appears in M9410E/11E/15E/16E
State Saved	No

### Query Temperature of Last Align VXT Transceiver

Remote Command	:CALibration:TEMPerature:INTernal:VXT:TRANsceiver?
Example	:CAL:TEMP:INT:VXT:TRAN?
Notes	Value in degrees Centigrade when the last successful <b>Align VXT Transceiver</b> was executed Returns 9.91E+37( <b>NaN</b> ) if Align VXT Transceiver has never been performed on the instrument
Dependencies	Only appears in M9410E/11E/15E/16E
State Saved	No

### Query Time since Last Align Up Down Converter

Remote Command	:CALibration:TIME:UPDown:CONVerter?
Example	:CAL:TIME:UPD:CONV?
Notes	Value in hours since the last successful <b>Align Up Down Converter</b> Returns <b>NaN</b> if Align Up Down Converter has never been performed on the instrument
Dependencies	Only appears in M9410E/11E/15E/16E
State Saved	No

### Query Temperature of Last Align Up Down Converter

Remote Command	:CALibration:TEMPerature:UPDown:CONVerter?
Example	:CAL:TEMP:UPD:CONV?
Notes	Value in degrees Centigrade when the last successful <b>Align Up Down Converter</b> was executed Returns 9.91E+37( <b>NaN</b> ) if Align Up Down Converter has never been performed on the instrument
Dependencies	Only appears in VXT models M9410A/11A and M9410E/11E
State Saved	No

### Query Time since Last Path Delay Calibration

Remote Command	:CALibration:TIME:PDElay:SOURce?
----------------	----------------------------------

Example	<code>:CAL:TIME:PDEL:SOUR?</code>
Notes	The value is the elapsed time in hours since the last successful <b>Path Delay Calibration</b> has been performed Returns NaN if the <b>Path Delay Calibration</b> has never been performed
State Saved	No

### Query Temperature of Last Path Delay Calibration

Remote Command	<code>:CALibration:TEMPerature:PDElay:SOURce?</code>
Example	<code>:CAL:TEMP:PDEL:SOUR?</code>
Notes	The value is in degrees Centigrade at which the last successful <b>Path Delay Calibration</b> has been performed Returns 9.91E+37(NaN) if the <b>Path Delay Calibration</b> has never been performed
State Saved	No

## 4.6.5 Timebase DAC

Lets you change the setting of the **Timebase DAC** from a factory calibrated setting to your own desired setting.

The display shows the current **Timebase DAC** setting at the top, and gives you a choice of **CALibrated** or **USER** setting. There is also a field for you to enter your desired setting.

Dependencies	Does not appear in VXT and M941xE
--------------	-----------------------------------

### 4.6.5.1 Timebase DAC

Allows control of the internal 10 MHz reference oscillator timebase. This may be used to adjust for minor frequency alignment between your signal's reference and the internal frequency reference. This adjustment has no effect if the instrument is operating with an External Frequency Reference.

If the value of the **Timebase DAC** changes (by switching to **CALibrated** from **USER** with **User Value** set to a different value, or in **USER** with a new value entered) an alignment may be necessary. The alignment system will take appropriate action; which will either invoke an alignment or cause an **Alert**.

The **CALibrated** setting sets the **Timebase DAC** to the value established during factory or field calibration. In this case the value displayed at the top of the screen is the calibrated value.

The **USER** setting sets the **Timebase DAC** to the value set on the **User Value** control. In this case the value displayed at the top of the screen is the user value.

Remote Command	<code>:CALibration:FREquency:REFerence:MODE CALibrated   USER</code> <code>:CALibration:FREquency:REFerence:MODE?</code>
Example	<code>:CAL:FREQ:REF:MODE CAL</code>
Notes	If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due
Dependencies	Not available in UXM
Preset	Unaffected by <b>Preset</b> , but set to <b>CALibrated</b> by <b>Restore Defaults &gt; "Alignments" on page 2343</b>
State Saved	No

### 4.6.5.2 User Value

Lets you set the **Timebase DAC** to a value other than the value established during the factory or field calibration. The current value of the DAC is displayed at the top of the screen. This will be the Calibrated value if **Timebase DAC** is set to **CALibrated**.

Remote Command	<code>:CALibration:FREquency:REFerence:FINE &lt;integer&gt;</code> <code>:CALibration:FREquency:REFerence:FINE?</code>
Example	<code>:CAL:FREQ:REF:FINE 8191</code>
Notes	If the value of the timebase is changed the alignment system automatically performs an alignment or alerts that an alignment is due
Couplings	Setting <code>:CAL:FREQ:REF:FINE</code> sets <code>:CAL:FREQ:REF:MODE USER</code>
Preset	Unaffected by <b>Preset</b> , but set to the factory setting by <b>Restore Defaults &gt; "Alignments" on page 2343</b>
State Saved	No
Min	0
Max	16383
Backwards Compatibility SCPI	<code>:CALibration:FREquency:REFerence:COARse</code> ESA hardware contained two DAC controls for the Timebase. In X-Series the command <code>:CALibration:FREquency:REFerence:FINE</code> is the method for adjusting the timebase. The <b>COARse</b> option is provided as an alias to <b>FINE</b>
	Backwards Compatibility Command
Remote Command	<code>:CALibration:FREquency:REFerence:COARse &lt;integer&gt;</code> <code>:CALibration:FREquency:REFerence:COARse?</code>
Example	<code>:CAL:FREQ:REF:COAR 8191</code>
Notes	This is an alias for <code>:CAL:FREQ:REF:FINE</code> . Any change to <b>COARse</b> is reflected in <b>FINE</b> and <i>vice-versa</i> . See <code>:CAL:FREQ:REF:FINE</code> for description of functionality
Couplings	Setting <code>:CAL:FREQ:REF:COAR</code> sets <code>:CAL:FREQ:REF:MODE USER</code>

## 4.6.6 Advanced

Accesses alignment processes that are immediate action operations that perform operations that run until complete. **Advanced** alignments are performed on an irregular basis, or require additional operator interaction.

---

Dependencies	Not available in UXM
--------------	----------------------

### 4.6.6.1 Characterize Preselector

The Preselector tuning curve drifts over temperature and time. Recognize that the Amplitude, Presel Center function adjusts the preselector for accurate amplitude measurements at an individual frequency. Characterize Preselector improves the amplitude accuracy by ensuring the Preselector is approximately centered at all frequencies without the use of the Amplitude, Presel Center function. Characterize Preselector can be useful in situations where absolute amplitude accuracy is not of utmost importance, and the throughput savings or convenience of not performing a Presel Center is desired. Presel Center is required prior to any measurement for best (and warranted) amplitude accuracy.

Keysight recommends that the Characterize Preselector operation be performed yearly as part of any calibration, but performing this operation every three months can be worthwhile.

**Characterize Preselector** immediately executes a characterization of the Preselector, which is a YIG-tuned filter (YTF). The instrument stops any measurement currently underway, performs the characterization, then restarts the measurement from the beginning (similar to pressing the **Restart** key).

The query (**:CALibration:YTF?**) invokes the alignment of the YTF subsystem, and returns a success or failure value.

A failure encountered during alignment generates the Error Condition message “Characterize Preselector failure” and sets Bit 3 in the **STATus:QUESTIONable:CALibration:EXTended:FAILure** status register. Successful completion of **Characterize Preselector** clears this Condition. It also begins the elapsed time counter for Last Characterize Preselector Time, and captures the Last Characterize Preselector Temperature.

The last Characterize Preselector Time and Temperature survives across the power cycle, as this operation is performed infrequently.

---

**NOTE**

**The Characterize Preselector function can be interrupted, by pressing the Cancel (ESC) front-panel key, or remotely with Device Clear followed by the :ABORT SCPI command. None of the new characterization data is then used.**

---

However, since the old characterization data is purged at the beginning of the characterization, you now have an uncharacterized preselector. You should re-execute this function and allow it to finish before making any further preselected measurements.

Remote Command	<code>:CALibration:YTF</code> <code>:CALibration:YTF?</code>
Example	<code>:CAL:YTF</code>
Notes	<p><code>:CALibration:YTF?</code> returns 0 if successful, or 1 if failed (including interfering user signal)</p> <p>While <b>Advanced, Characterize Preselector</b> is performing the alignment, Bit 0 in the Status Operation register is set. Completion, or termination, clears Bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORt</code> command</p> <p>Successful completion clears Bit 9 in the Status Questionable Calibration register</p> <p>A failure encountered during alignment generates the Error Condition message “Characterize Preselector failed” and sets Bit 9 in the Status Questionable Calibration register</p> <p>For Options that support frequencies &gt; 3.6 GHz only</p>
Dependencies	This control does not appear in models that do not contain preselectors. In these models the SCPI command is accepted without error, but no action is taken
Couplings	<p>Initializes the time for the Last Characterize Preselector Time</p> <p>Records the temperature for the Last Characterize Preselector Temperature</p> <p>Overlapped Command</p>
Remote Command	<code>:CALibration:YTF:NPENding</code>
Example	<code>:CAL:YTF:NPEN</code>
Notes	<p><code>:CALibration:YTF:NPENding</code> is the same as <code>:CALibration:YTF</code>, including all conditions, status register bits, except that this SCPI command <i>does not block</i> the SCPI session, so you should use status register bits to query if the calibration is successfully completed or not</p> <p>Typical usage is:</p> <ol style="list-style-type: none"> <li>1. <code>:CALibration:YTF:NPENding</code> (Start a YTF calibration)</li> <li>2. <code>:STATus:OPERation:CONDition?</code> (Check if the calibration is completed or not, If Bit 0 is set, then the system is doing calibration, and you should repeat this query until the bit is cleared)</li> <li>3. <code>:STATus:QUESTionable:CALibration:EXTended:FAILure:CONDition?</code> (Check whether Bit 2 is set. If this bit is set, that means there are some errors in previous internal source calibration)</li> </ol>

### 4.6.6.2 Characterize Reference Clock

Calibrates the Reference Input Phase with the External Reference Output. This feature is only available when either option DP2 or B40 is present. It requires connecting the 10 MHz OUT to the EXT REF IN port with a BNC cable before running the characterization.

See "[Front panel guided calibration sequence](#)" on page 2391


Remote Command	<code>:CALibration:REference:CLOCK?</code>
Example	<code>:CAL:REF:CLOC:INIT?</code> connect cable <code>:CAL:REF:CLOC?</code> disconnect cable <code>:CAL:REF:CLOC:END?</code>
Notes	<code>:CALibration:REference:CLOCK?</code> returns 0 if successful, or 1 if failed
Dependencies	Option DP2 or B40
Couplings	Initializes the time for the Last Characterize Reference Clock Time Records the temperature for the Last Characterize Reference Clock Temperature. Expected to be run after <code>:CAL:REF:CLOC:INIT</code> , and before <code>:CAL:REF:CLOC:END</code>
Remote Command	<code>:CALibration:REference:CLOCK:INITialize?</code>
Example	<code>:CAL:REF:CLOC:INIT?</code>
Notes	Returns 0 if successful, or 1 if failed
Dependencies	Option DP2 or B40
Couplings	Expected to be run before sending <code>:CAL:REF:CLOC?</code> . This will stop the current measurement when it has completed (does not abort the current data acquisition), and prepare the instrument for the expected cabling
Remote Command	<code>:CALibration:REference:CLOCK:END?</code>
Example	<code>:CAL:REF:CLOC:END?</code>
Notes	Returns 0 if successful, or 1 if failed
Dependencies	Option DP2 or B40
Couplings	Expected to be run after sending <code>:CAL:REF:CLOC?</code> , and after removing the cable used in that Characterize Reference Clock step. This will resume any queued measurements, and concludes the reference clock characterization
Remote Command	<code>:CALibration:TIME:REference:CLOCK?</code>
Example	<code>:CAL:TIME:REference:CLOCK?</code>

Notes	Value is the date and time the last successful Characterize Reference Clock was executed. The date is separated from the time by a space character. Returns "" if Characterize Reference Clock has never been performed on the instrument
Dependencies	Option DP2 or B40
State Saved	No


### Front panel guided calibration sequence

When selecting **Characterize Reference Clock** via the front panel, the following form is displayed.


Step 1 of the guided calibration sequence:

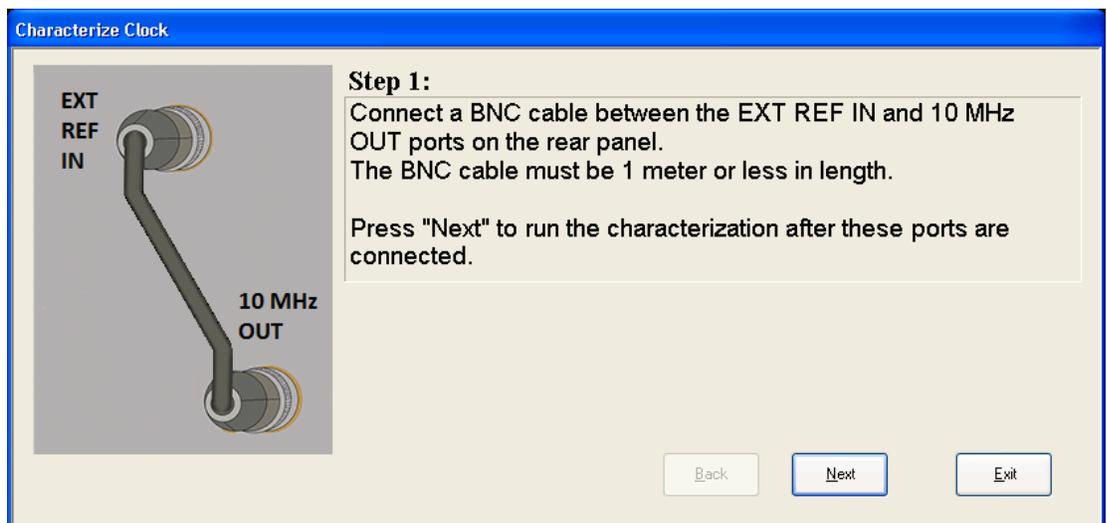

Step 2 of the guided calibration sequence:

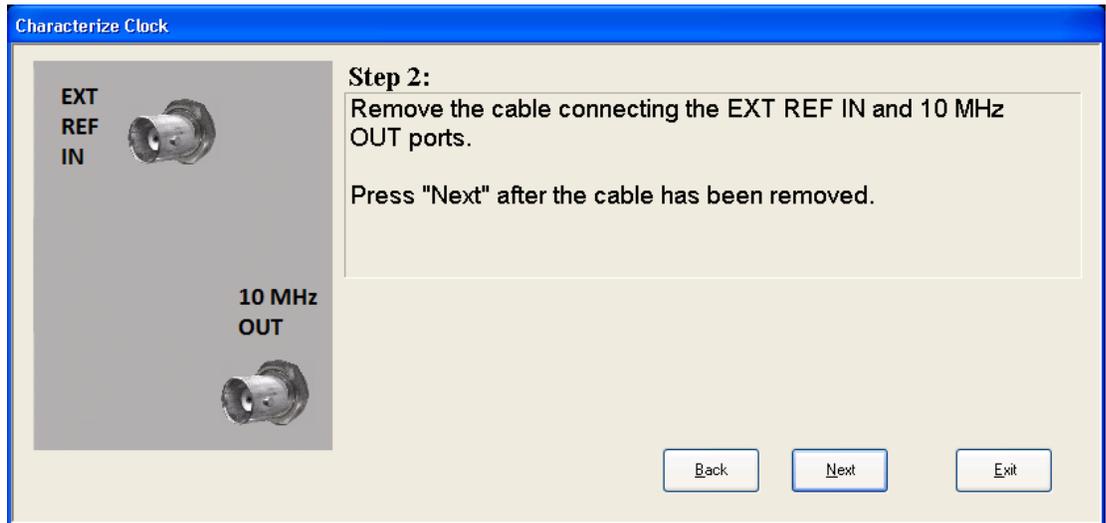

Step 3 of the guided calibration sequence:

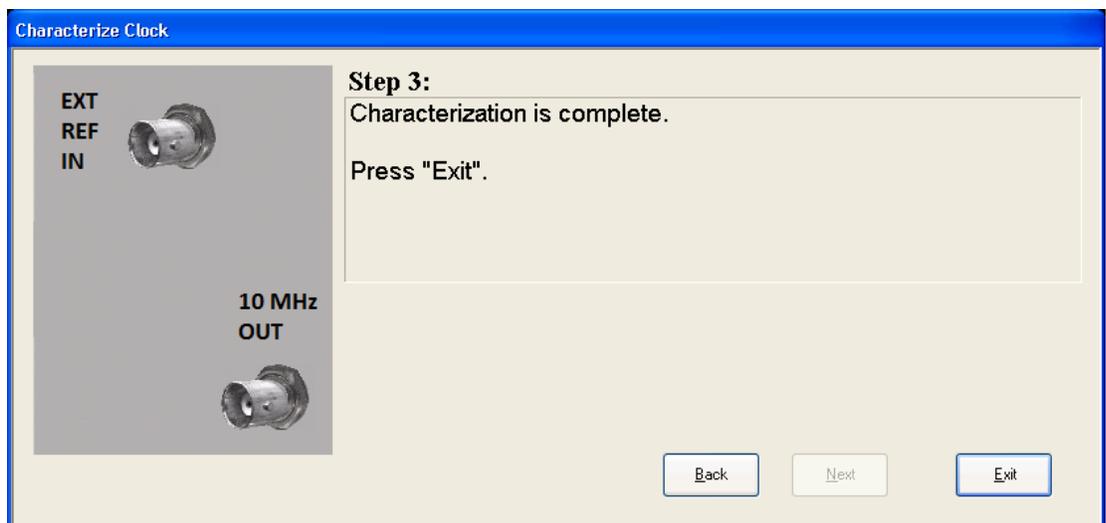

### 4.6.6.3 Characterize Noise Floor

On instruments with the NF2 license installed, the calibrated Noise Floor used by Noise Floor Extensions should be refreshed periodically. To do this, press **Characterize Noise Floor**. When you press this control, the instrument stops any measurement currently underway, and a dialog appears with an **OK** and **Cancel** button that says:

*This action will take several minutes to perform. Please disconnect all cables from the RF input and press Enter to proceed. Press ESC to cancel*

When you press **Enter** or **OK**, the characterization proceeds. After the characterization, the instrument restarts the measurement from the beginning

(similar to pressing the **Restart** key). The characterization takes many minutes to run.

The noise floor model used by Noise Floor Extensions includes an estimation of the temperature behavior of the noise floor, but this is only an estimation. The noise floor changes little with the age of the components. However, even small changes in the estimated level of the noise floor can make large changes in the effective noise floor, because the effective noise floor is the error in the estimation of the noise floor. Keysight recommends that the **Characterize Noise Floor** operation be performed when the instrument is operating at an ambient temperature that is significantly different than the ambient temperature at which this alignment was last run. In addition, Keysight recommends that the **Characterize Noise Floor** operation be performed after the first 500 hours of operation, and once every calendar year.

The noise floor model from the last operation of **Characterize Noise Floor** survives across the power cycle.

**NOTE**

The **Characterize Noise Floor** function can be interrupted, by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by the `:ABORT SCPI` command. None of the new characterization data is then used. However, since the old characterization data is purged at the beginning of the characterization, you now have an uncharacterized noise floor. You should re-execute this function and allow it to finish before making any further measurements with NFE. Until you do, the instrument will display a “Characterize Noise Floor required” message and set bit 12 in the Status Questionable Calibration register (`STATUS:QUESTIONABLE:CALIBRATION:EXTENDED:NEEDED`).

Remote Command	<code>:CALibration:NFLoor</code> <code>:CALibration:NFLoor?</code>
Example	<code>:CAL:NFL</code>
Notes	<code>:CALibration:NFLoor?</code> returns 0 if successful, or 1 if failed (including interfering user signal) This command is sequential; it must complete before further commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORT</code> command
Dependencies	This control does not appear in models that do not contain NF2. In these models the command is accepted without error, but no action is taken
Couplings	Successful completion of <b>Characterize Noise Floor</b> begin the elapsed time counter or the Last Characterize Noise Floor Time
Remote Command	<code>:CALibration:TIME:NFLoor?</code>
Example	<code>:CAL:TIME:NFL?</code>
Notes	Value is the date and time the last successful <b>Characterize Noise Floor</b> was executed. The date is separated from the time by a space character Returns “” if no <b>Characterize Noise Floor</b> has ever been performed on the instrument

4 System  
4.6 Alignments

Dependencies	In models that do not include NF2, this command is not enabled and any attempt to set or query yields an error
State Saved	No
Remote Command	<code>:CALibration:TEMPerature:NFLoor?</code>
Example	<code>:CAL:TEMP:NFL?</code>
Notes	Value is the temperature of the last successful <b>Characterize Noise Floor</b> was executed Returns "" if no <b>Characterize Noise Floor</b> has ever been performed on the instrument
Dependencies	In models that do not include NF2, this command is not enabled and any attempt to set or query yields an error
State Saved	No
Remote Command	<code>:CALibration:TIME:ELAPsed:NFLoor?</code>
Example	<code>:CAL:TIME:ELAP:NFL?</code>
Notes	Value is the elapsed time the instrument was powered-on since the last successful <b>Characterize Noise Floor</b> was executed Returns "" if no <b>Characterize Noise Floor</b> has ever been performed on the instrument
Dependencies	In models that do not include NF2, this command is not enabled and any attempt to set or query yields an error
State Saved	No

#### 4.6.6.4 Calibration Temperature History

The following queries let you retrieve various statistics regarding the Calibration Temperature history.

##### Minimum Temperature Within Last Number of Seconds

Lets you query the minimum temperature within the last number of seconds. If no data exists for the requested time, the returned value is 9.91e+37.

Remote Command	<code>:CALibration:TEMPerature:MINimum? &lt;seconds&gt;</code>
Example	<code>:CAL:TEMP:MIN? 60</code>

##### Maximum Temperature Within Last Number of Seconds

Lets you query the maximum temperature within the last number of seconds. If no data exists for the requested time, the returned value is 9.91e+37.

Remote Command	<code>:CALibration:TEMPerature:MAXimum? &lt;seconds&gt;</code>
Example	<code>:CAL:TEMP:MAX? 60</code>

### Temperature Seconds Ago

Lets you query temperature X seconds ago. If no data exists for the requested time, the returned value is 9.91e+37.

---

Remote Command	<code>:CALibration:TEMPerature:AGO? &lt;seconds&gt;</code>
----------------	--

---

Example	<code>:CAL:TEMP:AGO? 75</code>
---------	--------------------------------

---

### Oldest Temperature Value

Lets you query the oldest recorded temperature value.

---

Remote Command	<code>:CALibration:TEMPerature:OLDest[:TEMPerature]?</code>
----------------	---

---

Example	<code>:CAL:TEMP:OLD?</code>
---------	-----------------------------

---

### Oldest Temperature Time

Lets you query how long ago the oldest temperature value was recorded.

---

Remote Command	<code>:CALibration:TEMPerature:OLDest:SECONDS?</code>
----------------	---

---

Example	<code>:CAL:TEMP:OLD:SEC?</code>
---------	---------------------------------

---

#### 4.6.6.5 TDS Alignment

Only appears in N9038B (MXE-B) when Option TDS is installed and licensed.

The TDS alignment includes [AlignNowAll](#) and [RFPrese1](#) alignment. Immediately executes an alignment of the TDS subsystem. The instrument stops any measurement currently underway, performs the alignment, and then restarts the measurement from the beginning (similar to pressing the **Restart** key).

Align TDS can be interrupted by pressing the **Cancel (ESC)** front-panel key or from remote with Device Clear followed by `:ABORT`. When this occurs, no new TDS alignment data will be employed.

---

Remote Command	<code>:CALibration:TDS</code> Params missing? What does the query return? <code>:CALibration:TDS?</code>
----------------	--

---

Example	<code>:CAL:TDS</code>
---------	-----------------------

---

Notes	This command is sequential; it must complete before further commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORT</code> command
-------	---


---

Dependencies	Only appears in N9038B (MXE-B) models with Option TDS installed and licensed
--------------	--

---

#### 4.6.6.6 Backup or Restore Align Data...

Opens the utility for backing-up or restoring alignment data. Since this utility cannot be run while the instrument software is running, a prompt tells you to shut down the instrument first:

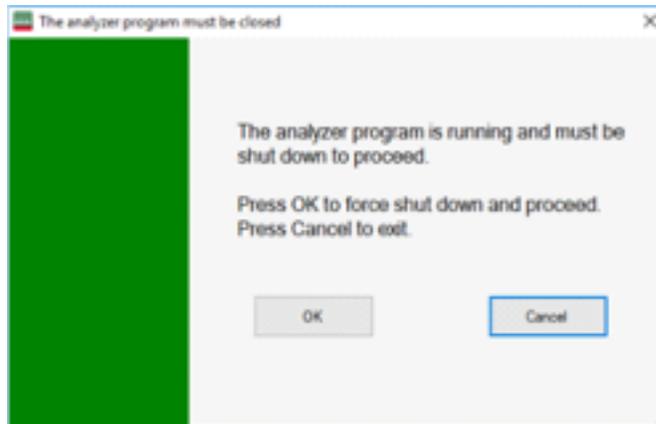

Press **OK** and the instrument will shut down and open the backup utility.

Alignment data for the instrument resides on the hard drive in a database. Keysight uses high quality hard drives; however, it is highly recommended the alignment data be backed-up to storage outside of the instrument. Additionally, for customers who use multiple CPU Assemblies or multiple disk drives, the alignment that pertains to the instrument must be transferred to the resident hard drive after a CPU or hard drive is replaced. This utility facilitates backing-up and restoring the alignment data.

**NOTE**

**This utility allows you to navigate to any location of the Windows file system. If you are backing up alignment data to storage outside of the instrument, then it is assumed that you will use a USB memory device, or Mapped Network Drive.**

---

Processor Assembly types PC6 and PC7 contain a removable SD memory card. When one of these CPUs is installed, the Backup and Restore Alignment Data wizard defaults to the SD card as the backup location. At every power-on, the software will check to determine if the calibration data on the SD memory card (the backup) is newer than the data in use on the disk. In such situations, before the application is loaded, you are given the opportunity to restore the data from the backup. If you respond **Yes**, the Backup and Restore Alignment Data wizard (see ["Alignment Data Wizard \(without Flash\)" on page 2397](#)) will be invoked to perform the restore.

Processor Assembly types PC6S and PC7S contain an internal flash EEPROM, as well as a removable SD card. When one of these CPUs is installed, the Backup and Restore Alignment Data wizard defaults to the internal flash as the backup location.

As with the PC6 and PC7, at every power-on, the software compares the timestamp of the backup on the flash and the timestamp of the alignment data in use on the disk. If the backup on the flash has newer data, you are given the opportunity to restore the data from the backup before the application is loaded. If you respond **Yes**, the Backup and Restore Alignment Data wizard (see "[Alignment Data Wizard \(with Flash\)](#)" on page 2407) will be invoked and will prompt you to restore that backup.



For purposes of these instructions, "alignment data" and "calibration data" are used interchangeably.

Dependencies	Not available in UXM
Remote Command	<code>:CALibration:DATA:DEFault</code>
Example	<code>:CAL:DATA:DEF</code>
Notes	Restores the alignment data files to their default state
Couplings	Sets <b>Auto Align</b> to <b>OFF</b> . Sets Bit 14 in the Status Questionable Calibration register. The Error Condition message "Align Now All required" is generated

### Alignment Data Wizard (without Flash)

Guides you through the operation of backing-up or restoring the alignment data.


4 System  
4.6 Alignments

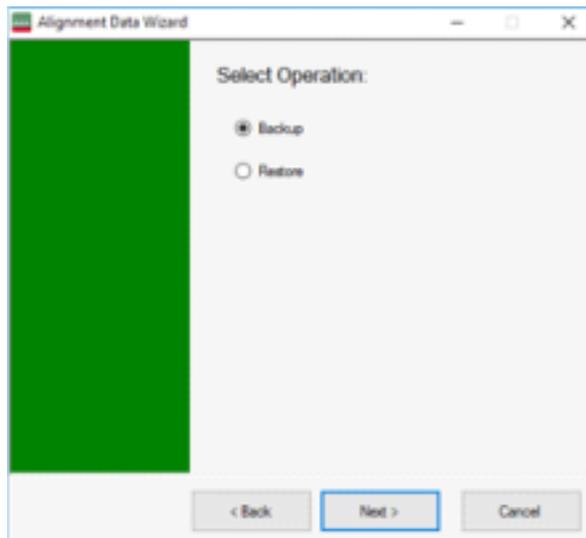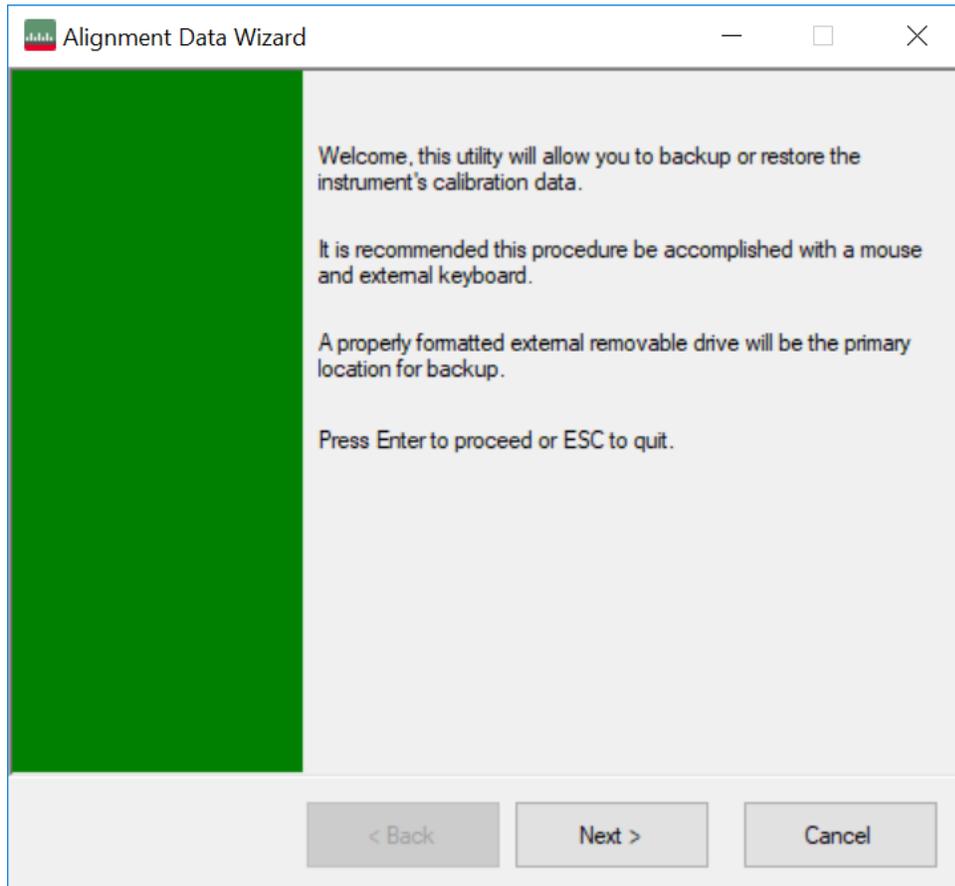

The default backup location for instruments *without* internal flash will be the first drive identified as an external drive (USB or LAN) if such is available; or, if not, the internal D: partition.

The default file name is `<model number>_<serial number>_<date in YYYYMMDDHHMMSS>.bkz`.

The default file extension for legacy backup files was `.bak`. The Backup and Restore operations support both the `.bak` (legacy format) and `.bkz` formats.

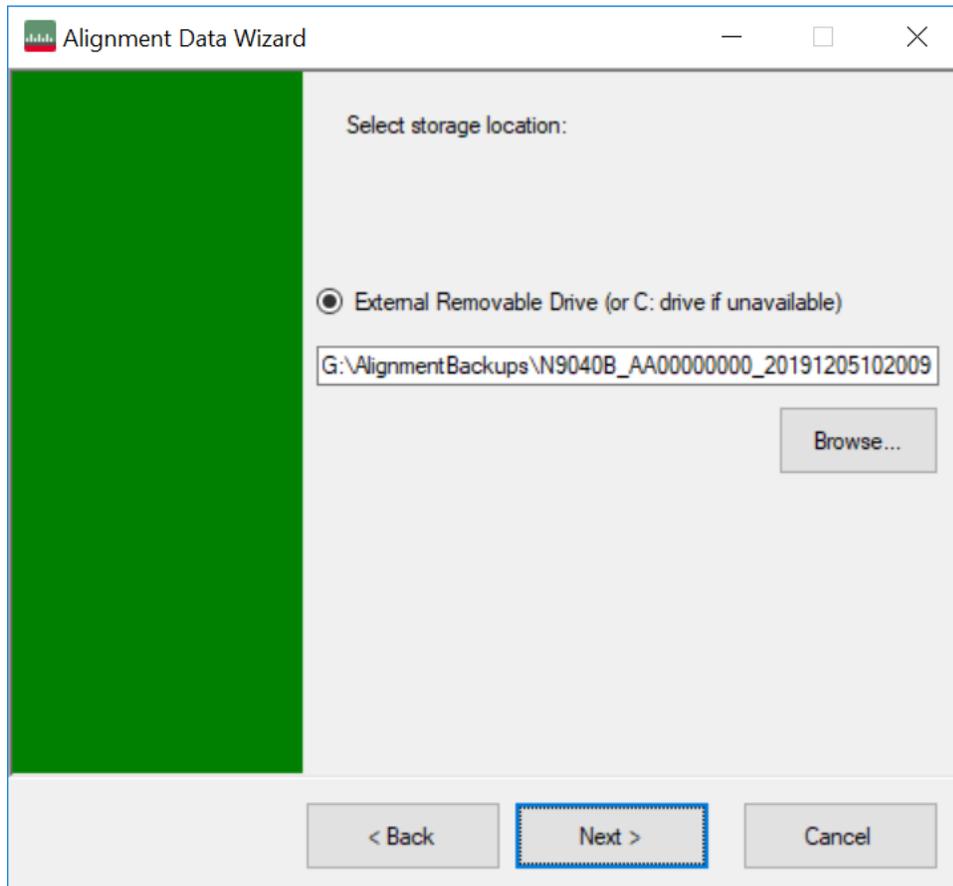


If a USB drive is present, it will be selected by default. The path defaults to the `AlignmentBackups` folder, and a filename is automatically created, in the form: `<model>_<serial number>_<date><time>.bkz`


If you wish to enter a customer filename, you can do so with an external keyboard, or by opening the onscreen Alpha keyboard, by pressing the **Keyboard** hardkey on the front panel:



When the **Next >** button is pressed, you will be prompted to create a new folder if the chosen path does not yet exist.

4 System  
4.6 Alignments

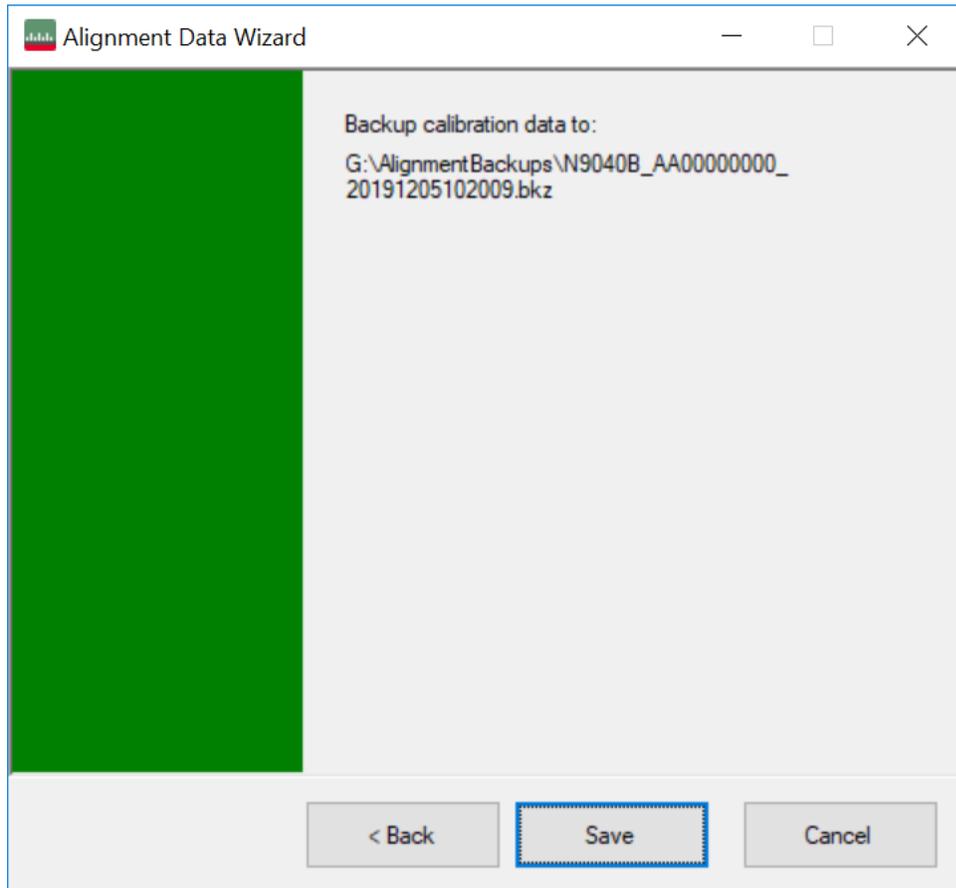


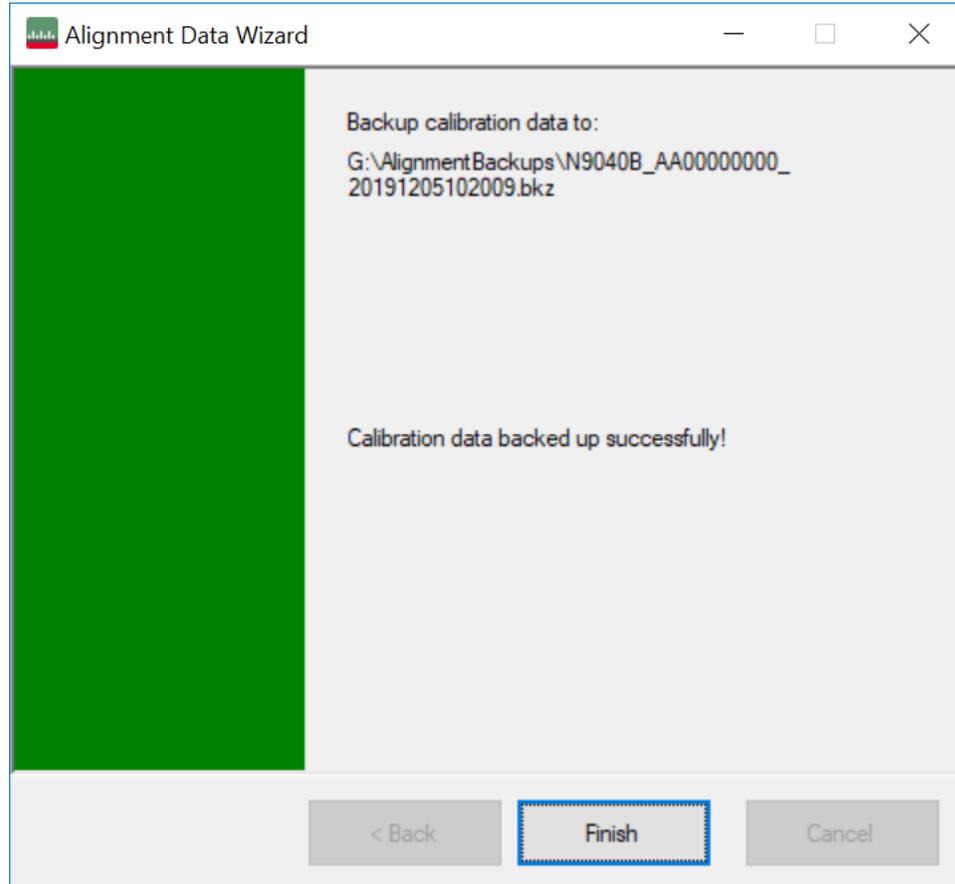


The restore operation checks the validity of the restore file using the database's built-in file validation. If the restore file is corrupt, the existing alignment data will remain in use.

If the serial number information in the backup file being restored is different from that of the instrument, the following message appears (the serial numbers shown are examples):

4 System  
4.6 Alignments

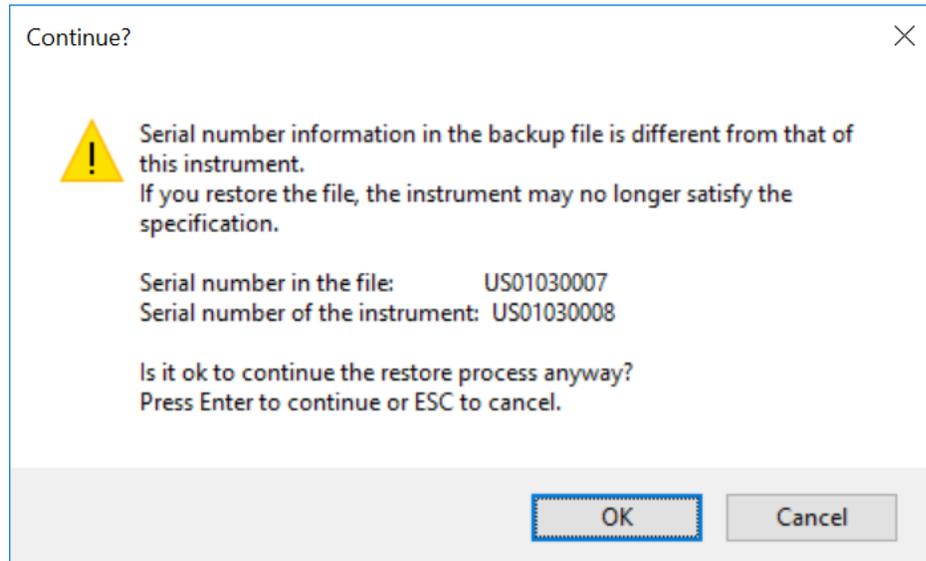


The default restore location for instruments *without* internal flash will be the first drive identified as an external drive (USB or LAN) if such is available; or, if not, the internal D: partition. The default restore file will be the most recent file that matches the default backup file name format: `<model number>_<serial number>_<date>.bkz`

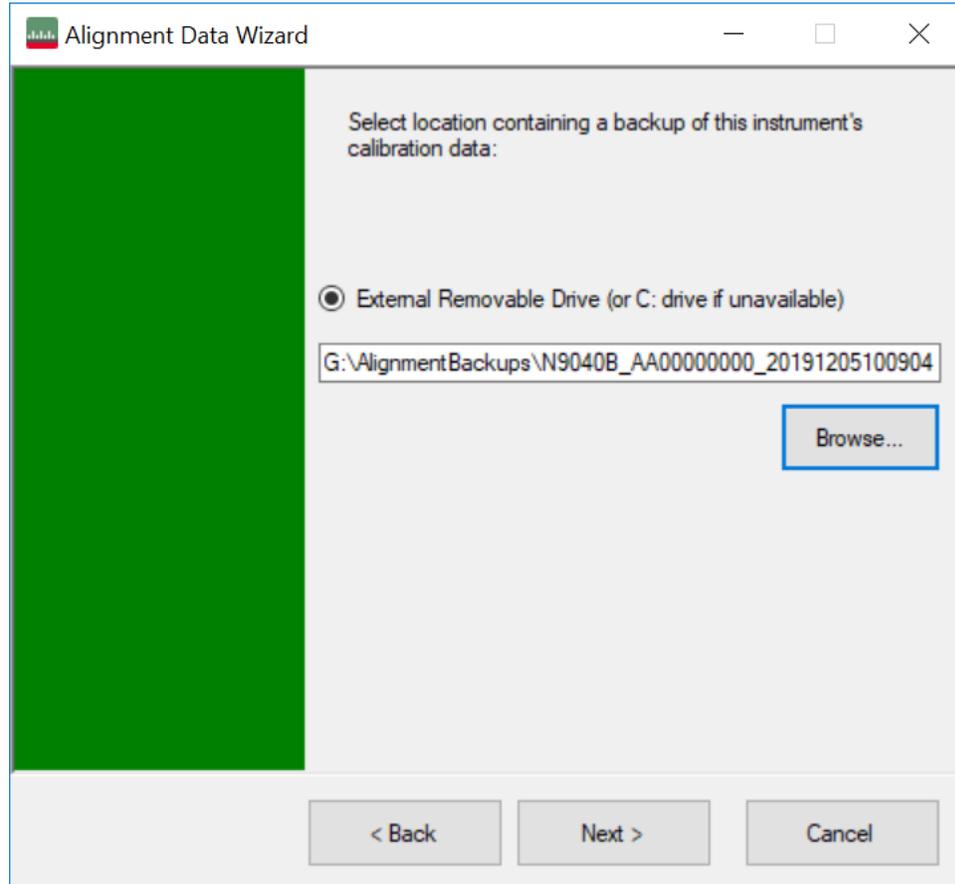


Changing the drive letter also modifies the path displayed in the box below. When this step is first loaded, the drive drop-down menu is populated with connected drives, which provide you with read access.

The path defaults to the **AlignBackups** folder. The most recent backup (\*.bkz or \*.bak) file in the folder will also be selected by default.


4 System  
4.6 Alignments

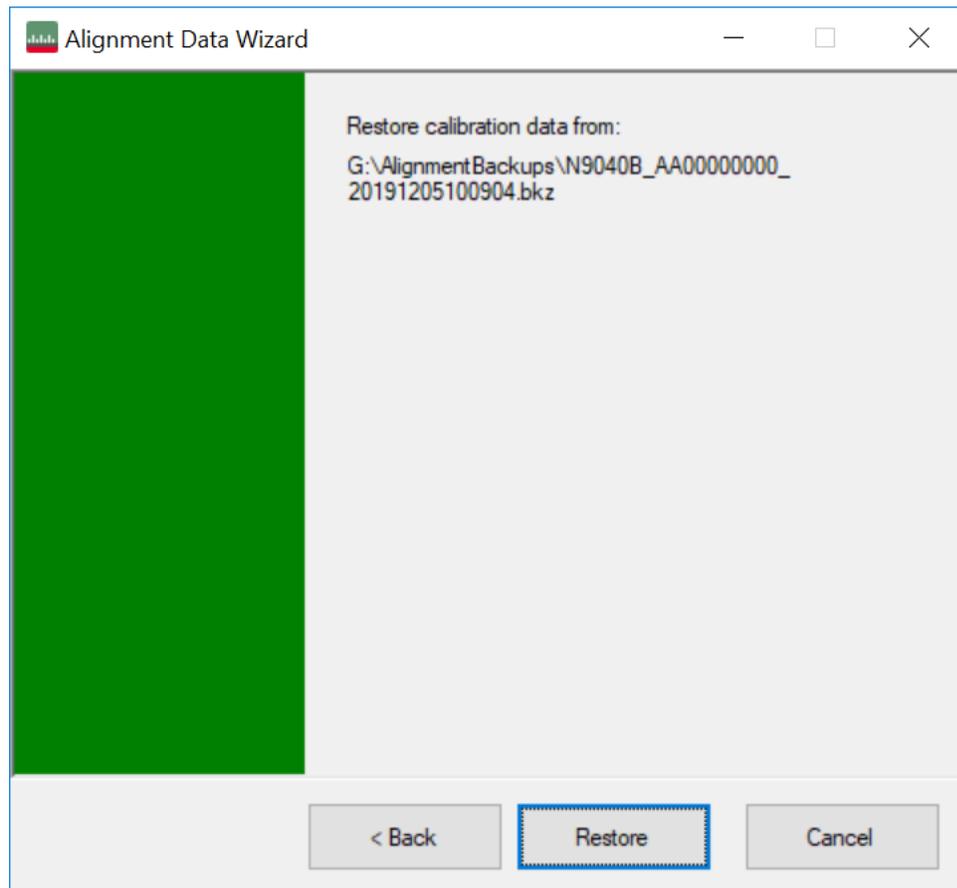

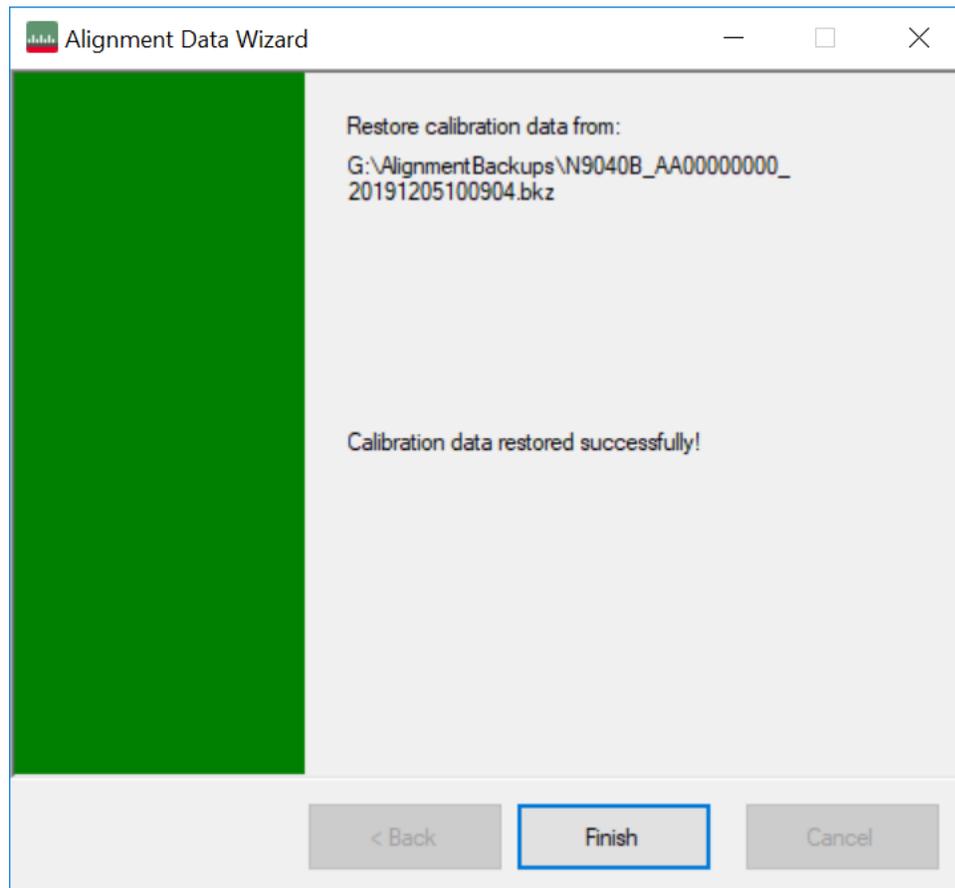

When restoring data in the legacy `.bak` format, Administrator privileges are required. You will be prompted when you attempt a restore (indicated by the UAC Shield on the **Restore** button below).

4 System  
4.6 Alignments

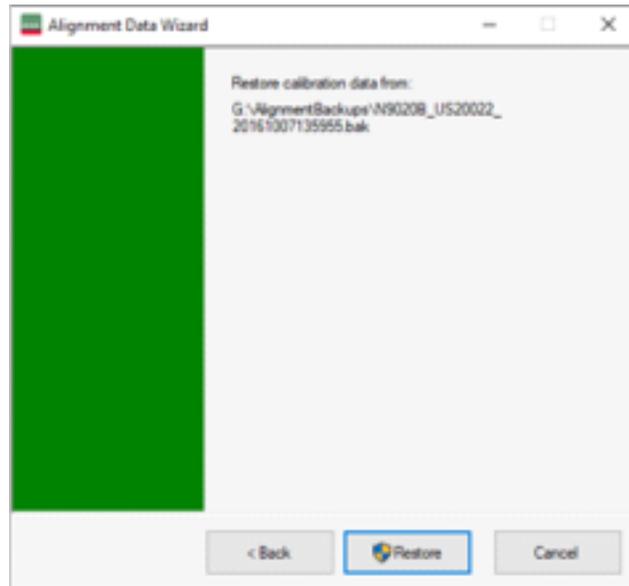

### Perform Backup (without Flash) (Remote Command Only)

Invokes an alignment data backup operation to the provided location.

**NOTE**

Keysight recommends that the specified location should be external to the instrument (USB or Mapped Network Drive).

---

Remote Command        `:CALibration:DATA:BACKup <filename>`

---

Example                `:CAL:DATA:BACK "F:\AlignDataBackup_N9020A_US00000001_2008140100.bkz"`

### Perform Restore (without Flash) (Remote Command Only)

Invokes an alignment data restore operation from the provided filename.


---

Remote Command        `:CALibration:DATA:RESTore <filename>`

---

Example                `:CAL:DATA:REST "F:\ AlignDataBackup_N9020A_US00000001_2008140100.bkz"`


## Alignment Data Wizard (with Flash)

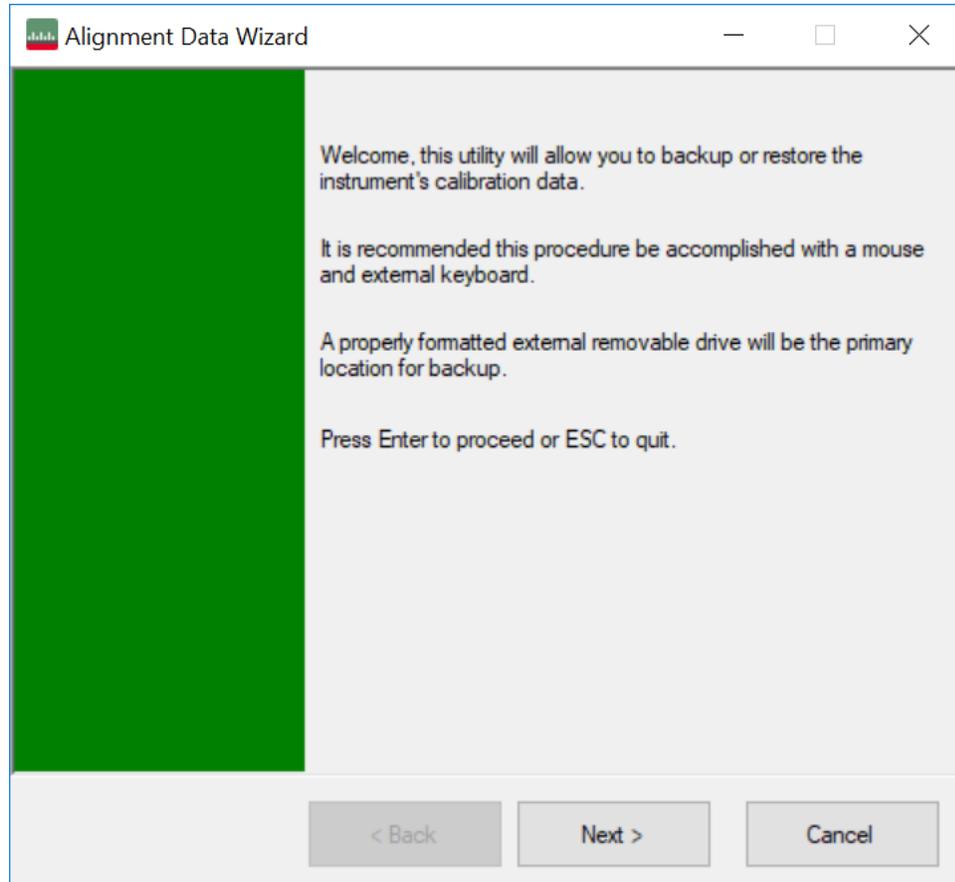

If your instrument has Processor Assembly type PC6S or PC7S (see ["Show System" on page 2288](#)) the instrument has an internal flash EEPROM that can store a backup of the alignment data. In this case, the interface to the Alignment Data Wizard is enhanced to accommodate this internal storage. This section details the use of this internal flash. For details on using external storage, see the previous section (["Alignment Data Wizard \(without Flash\)" on page 2397](#)).


The Alignment Data Wizard guides you through the operations of backing up or restoring alignment data.


4 System  
4.6 Alignments

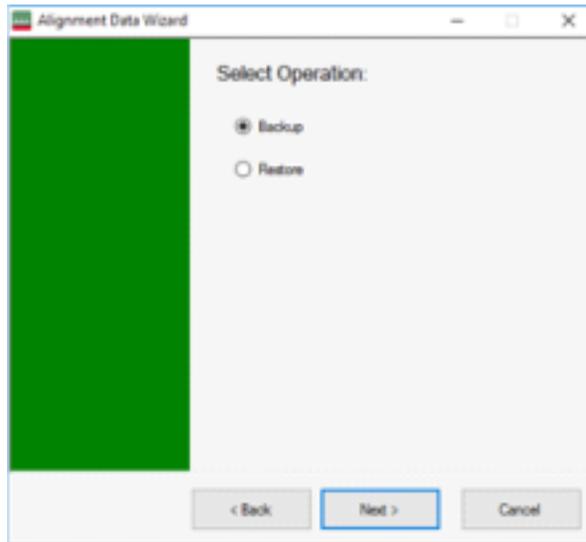

Having selected **Backup** or **Restore**, you then select the source or destination for the alignment data. As shown below, you can select either:


- Internal flash EEPROM, or,
- External Removable Drive (which includes the SD card described in "[Backup or Restore Align Data...](#)" on page 2396)

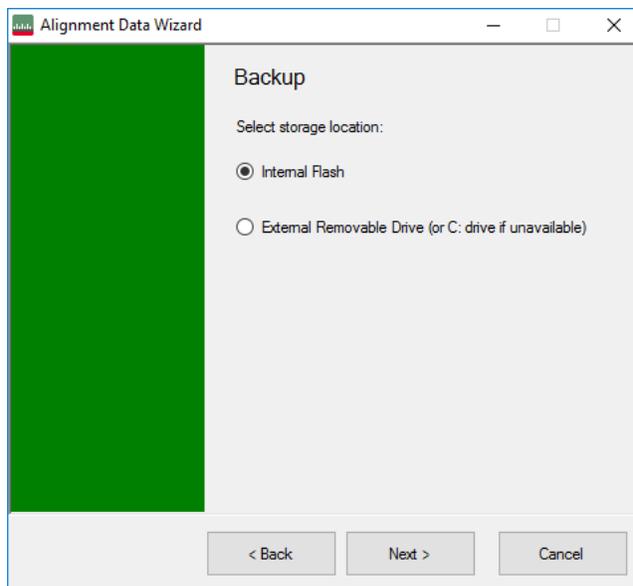

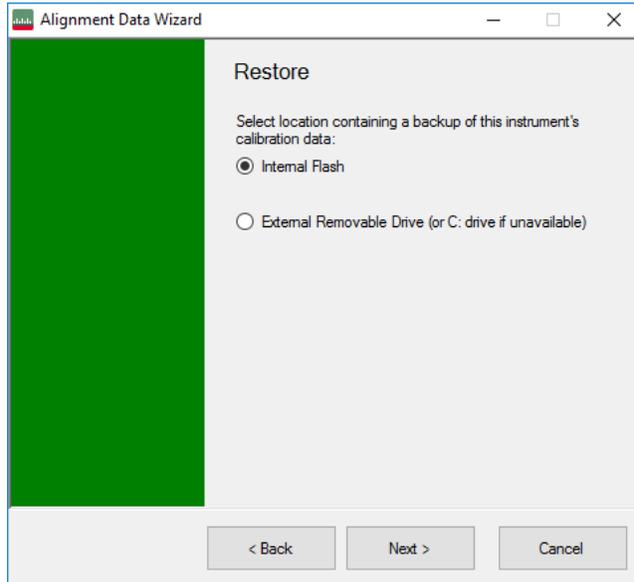


The final page of the wizard asks you to confirm the choices made in the previous pages. When the operation is complete, an indication is displayed on the same page, as below.


## Backup

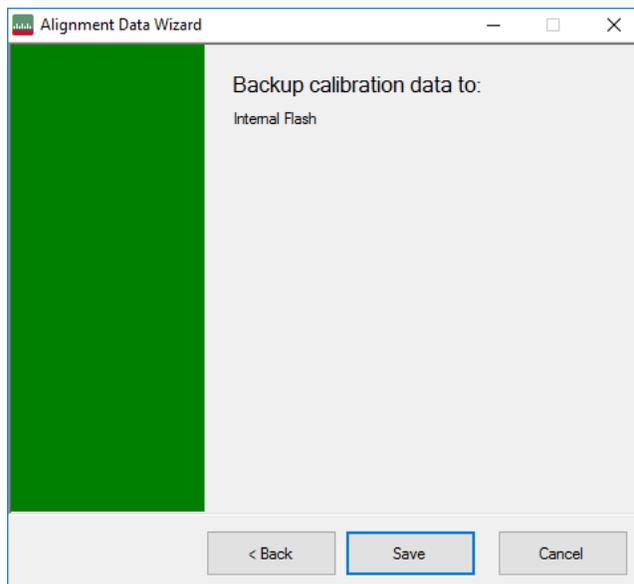


4 System  
4.6 Alignments

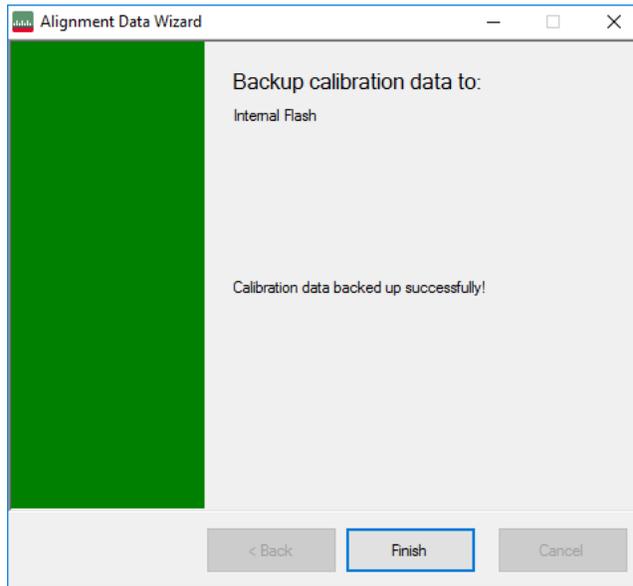


**Restore**

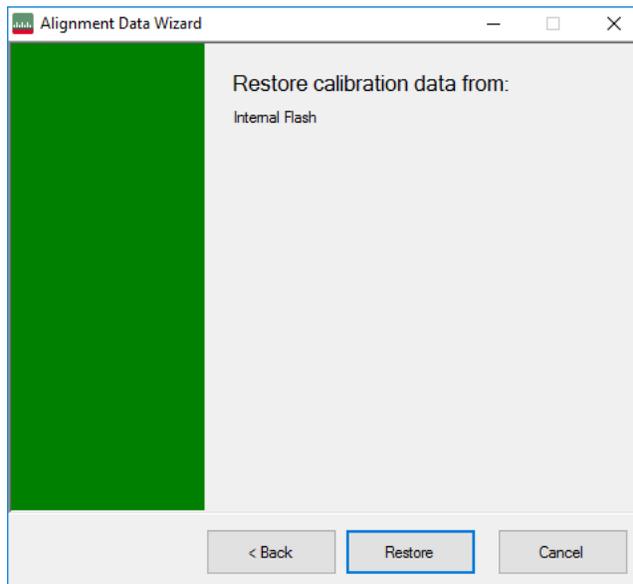


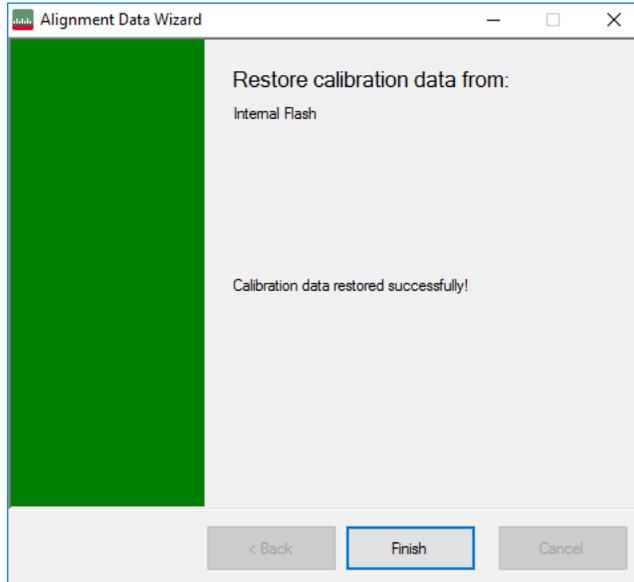

When restoring alignment data, if the serial number information in the backup file being restored is different from that of the instrument, the following message appears (the serial numbers shown are examples):

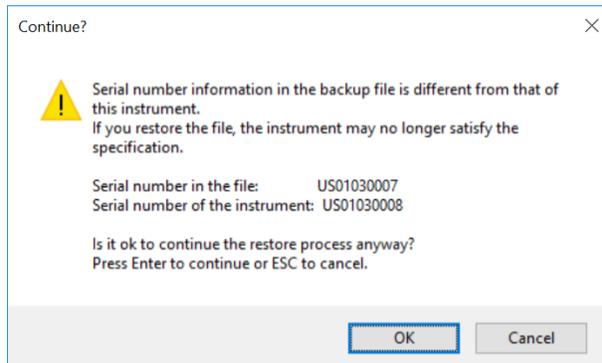


Immediately before the actual restoration, a final confirmation message is displayed detailing what is being restored and the current database that will be overwritten on the disk (the dates and versions are examples):

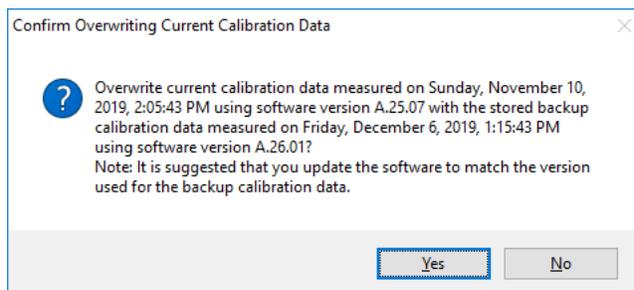

## 4 System

### 4.6 Alignments

When backing up alignment data to the flash, if there is already an existing backup on the flash, a final confirmation message is displayed detailing what is being backed up and what will be overwritten on the flash (again, the dates and versions are examples):

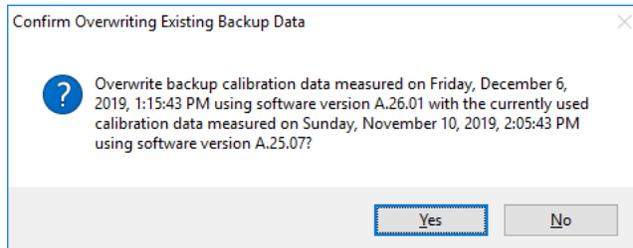

### Perform Backup (with Flash) (Remote Command Only)

Invokes an alignment data backup operation to the internal flash EEPROM.

---

Remote Command `:CALibration:DATA:INTernal:BACKup`

---

Example `:CAL:DATA:INT:BACK`

### Perform Restore (With Flash) (Remote Command Only)

Invokes an alignment data restore operation from the internal flash EEPROM.

---

Remote Command `:CALibration:DATA:INTernal:RESTore`

---

Example `:CAL:DATA:INT:REST`

### Restore Alignment Defaults

Causes the Alignment system settings to be reset to their default values. This does not affect any Alignment data stored in the system.

After performing this function, it may impact the auto-alignment time of the instrument until a new alignment baseline has been established.

When **Alignments** is selected, a message appears saying:

`This will reset all of the settings for the Alignment system to their default values`

`No alignment data will be erased`

`This action cannot be undone. Do you want to proceed?`

The dialog includes **OK** and **Cancel** controls, for you to affirm or cancel the operation.

**Align Now All** must be executed if the value of the Timebase DAC results in a change.

Example	<code>:SYST:DEF ALIG</code>												
Notes	<p>Alignment processing that results as the transition to <b>Auto Align Normal</b> will be executed sequentially; thus <code>*OPC?</code> or <code>*WAI</code> will wait until the alignment processing is complete</p> <p>The parameters affected are:</p> <table border="1"> <thead> <tr> <th>Parameter</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>Timebase DAC</td> <td>Calibrated</td> </tr> <tr> <td>Timebase DAC setting</td> <td>Calibrated value</td> </tr> <tr> <td>Auto Align State</td> <td>Normal (if the instrument is not operating with default alignment data, Off otherwise)</td> </tr> <tr> <td>Auto Align All but RF</td> <td>Off</td> </tr> <tr> <td>Auto Align Alert</td> <td>Time &amp; Temperature</td> </tr> </tbody> </table>	Parameter	Setting	Timebase DAC	Calibrated	Timebase DAC setting	Calibrated value	Auto Align State	Normal (if the instrument is not operating with default alignment data, Off otherwise)	Auto Align All but RF	Off	Auto Align Alert	Time & Temperature
Parameter	Setting												
Timebase DAC	Calibrated												
Timebase DAC setting	Calibrated value												
Auto Align State	Normal (if the instrument is not operating with default alignment data, Off otherwise)												
Auto Align All but RF	Off												
Auto Align Alert	Time & Temperature												

#### 4.6.6.7 oGRF Preselector

This menu and all its submenus are only available in models with the RF Preselector, such as N9038B, or N9048B.

Dependencies	Only available in RF Preselector models
--------------	---

#### Align Now, 20 Hz to 30 MHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform an Align Now All, then perform the RF Preselector alignment, and then restart the measurement from the beginning (similar to pressing the Restart key).

The query `:CALibration:RFPSelector:CONDucted?` invokes the alignment of the RF Preselector on Conducted Band and returns a success or failure value. Successful completion clears the “Align 20 Hz to 30 MHz required” Error Condition, and clears bit 1 in the Status Questionable Calibration Extended Needed register. The elapsed time counter will begin for Last Align Now, Conducted Time, and the temperature is captured for the Last Align Now, Conducted Temperature. The alignment can be interrupted by pressing the Cancel (ESC) front-panel key or remotely with Device Clear followed by the `:ABORt` SCPI command. When this occurs, the Error Condition “Align 20 Hz to 30 MHz required” is set because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

## 4 System

### 4.6 Alignments

The “Align 20 Hz to 30 MHz required” Error Condition will appear when this alignment has expired. User is now responsible to perform the Align Now, 20 Hz to 30 MHz to keep the receiver in warranted operation. This alignment can only be performed by user as it is not part of the Auto Align process.

Remote Command	<code>:CALibration:RFPSelector:CONDUCTed</code> <code>:CALibration:RFPSelector:CONDUCTed?</code>
Example	<code>:CAL:RFPs:COND</code>
Notes	<p>The query returns 0 if successful, or 1 if failed</p> <p>When Align 20 Hz to 30 MHz is performing the alignment, bit 0 in the Status Operation register is set. Completion, or termination, will clear bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by the <code>:ABORT</code> command. Successful completion will clear bit 1 in the Status Questionable Calibration Extended Needed register and bit 0 in Status Questionable Calibration Extended Failure register</p> <p>A failure encountered during alignment will set the Error Condition “20 Hz to 30 MHz Alignment Failure” and set both bit 1 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register</p>
Dependencies	Does not appear in non-RF Preselector models, setting or querying the SCPI will generate an error
Couplings	<p>Initializes the time for the Last Align Conducted Now, Conducted Time</p> <p>Records the temperature for the Last Align Conducted Now, Conducted Temperature</p>
State Saved	No
Status Bits/OPC dependencies	<p>Bit 8 or 9 may be set in the Status Questionable Calibration register</p> <p>Bit 1 may be set in the Status Questionable Calibration Extended Needed register</p> <p>Bit 0 may be set in the Status Questionable Calibration Extended Failure register</p>

### Align Now, 30 MHz to 3.6 GHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform an Align Now All, then perform the RF Preselector alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key).

The query (`:CALibration:RFPSelector:RADiated?`) invokes the alignment of the RF Preselector on Radiated Band and returns a success or failure value. Successful completion clears the “Align 30 MHz to 3.6 GHz required” Error Condition, and clears bit 2 in the Status Questionable Calibration Extended Needed register. The elapsed time counter begins for Last Align Now, Radiated Time, and the temperature is captured for the Last Align Now, Radiated Temperature. The alignment can be interrupted by pressing the **Cancel (ESC)** front-panel key, or remotely with Device Clear followed by `:ABORT`. When this occurs, the Error Condition “Align 30 MHz to 3.6 GHz required” is set, because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

The “Align 30 MHz to 3.6 GHz required” Error Condition appears when this alignment has expired. You must now perform **Align Now, 30 MHz to 3.6 GHz** to keep the receiver in warranted operation.

Remote Command	<code>:CALibration:RFPSelector:RADiated</code> <code>:CALibration:RFPSelector:RADiated?</code>
Example	<code>:CAL:RFPS:RAD</code>
Notes	<p>The query returns 0 if successful, or 1 if failed</p> <p>When <b>Align 30 MHz to 3.6 GHz</b> is performed, alignment, bit 0 in the Status Operation register is set. Completion, or termination, clears bit 0 in the Status Operation register</p> <p>This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear followed by <code>:ABORT</code>. Successful completion clears bit 2 in the Status Questionable Calibration Extended Needed register and bit 1 in Status Questionable Calibration Extended Failure register</p> <p>A failure encountered during alignment sets the Error Condition “30 MHz to 3.6 GHz Alignment Failure” and sets both bit 2 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register</p>
Dependencies	Does not appear in non-RF Preselector models, setting or querying the SCPI will generate an error
Couplings	Initializes the time for the Last Align Radiated Now, Radiated Time Records the temperature for the Last Align Radiated Now, Radiated Temperature
State Saved	No
Status Bits/OPC dependencies	<p>May set Bit 8 or 9 in the Status Questionable Calibration register</p> <p>May set Bit 2 in the Status Questionable Calibration Extended Needed register</p> <p>May set Bit 1 in the Status Questionable Calibration Extended Failure register</p>

## Align Now, 20 Hz to 3.6 GHz

Immediately executes an alignment of the receiver subsystem. The receiver will stop any measurement currently underway, perform an Align Now All, then perform the RF Preselector alignment, and then restart the measurement from the beginning (similar to pressing the **Restart** key).

The query (`:CALibration:RFPSelector:FULL?`) invokes the alignment of the RF Preselector on both Conducted and Radiated Band and return a success or failure value. Successful completion clears the “Align 20 Hz to 3.6 GHz required” Error Condition, and clears bit 1 and bit 2 in the Status Questionable Calibration Extended Needed register. The elapsed time counter begins for Last Align Now, Conducted Time and Last Align Now Radiated Time and the temperature is captured for Last Align Now, Conducted Temperature and Last Align Now, Radiated Temperature. The alignment can be interrupted by pressing the **Cancel (ESC)** front-panel key or remotely with Device Clear, followed by `:ABORT`. When this occurs, the Error Condition “Align 20 Hz to 3.6 GHz required” is set, because new alignment data may be employed for an individual subsystem, but not a cohesive set of data for all subsystems.

4 System  
4.6 Alignments

The “Align 20 Hz to 3.6 GHz required” Error Condition appears when this alignment has expired. You must now perform the Align Now, 20 Hz to 3.6 GHz to keep the receiver in warranted operation.

Remote Command	<code>:CALibration:RFPSelector:FULL</code> <code>:CALibration:RFPSelector:FULL?</code>
Example	<code>:CAL:RFPS:FULL</code>
Notes	The query returns 0 if successful, or 1 if failed When Align 20 Hz to 3.6 GHz is performed, alignment, bit 0 in the Status Operation register is set. Completion, or termination, clears bit 0 in the Status Operation register This command is sequential; it must complete before further SCPI commands are processed. Interrupting the alignment from remote is accomplished by invoking Device Clear, followed by <code>:ABORT</code> . Successful completion clears bit 1, bit 2 in the Status Questionable Calibration Extended Needed register and bit 0, bit 1 in Status Questionable Calibration Extended Failure register A failure encountered during alignment sets the Error Condition “20 Hz to 3.6 GHz Alignment Failure” and sets bit 1, bit 2 in the Status Questionable Calibration Extended Needed register and bit 9 in Status Questionable Calibration register
Dependencies	Does not appear in non-RF Preselector models, setting or querying the SCPI generates an error
Couplings	Initializes the time for the Last Align Conducted Now, Conducted Time Initializes the time for the Last Align Radiated Now, Radiated Time Records the temperature for the Last Align Conducted Now, Conducted Temperature Records the temperature for the Last Align Radiated Now, Radiated Temperature
State Saved	No
Status Bits/OPC dependencies	May set Bit 8 or 9 in the Status Questionable Calibration register May set Bit 1 and 2 in the Status Questionable Calibration Extended Needed register May set Bit 0 and 1 in the Status Questionable Calibration Extended Failure register

## Alert

Enables or disables the display of RF Preselector alignment required message on the status line. The instrument powers up with Alert **ON**.

Remote Command	<code>:CALibration:RFPSelector:ALERT ON   OFF   0   1</code> <code>:CALibration:RFPSelector:ALERT?</code>
Example	<code>:CAL:RFPS:ALER OFF</code>
Notes	Error Condition is generated when alert is <b>ON</b> and any of the RF Preselector alignments has expired
Preset	Unaffected by Preset, but set to <b>ON</b> by <b>Restore Defaults &gt; "Alignments" on page 2343</b>
State Saved	No
Range	<b>OFF   ON</b>

### 4.6.6.8 Scheduler

Setting the Scheduler to **ON** triggers execution of the scheduled task based on the recurrence and time set in the scheduler since the last successful of the specific alignment. A warning condition of “RF Preselector alignment scheduler is ON” appears when the scheduler is set to **ON**. **OFF** prevents the Scheduler from running any scheduled task.

Remote Command	:CALibration:RFPSelector:SCHeDuler:STATe ON   OFF   0   1
Example	:CAL:RFPS:SCH:STAT OFF
Preset	Unaffected by Preset, but set to <b>ON</b> by <b>Restore Defaults</b> > " <b>Alignments</b> " on page 2343
State Saved	No
Range	OFF   ON

### Schedule Setup

Lets you schedule a task to run automatically at the background based on the recurrence and time set in the scheduler. Make sure that the instrument’s local time is accurate, because the Scheduler relies on this information to execute the task.

This dialog contains the following controls:

- "Task" on page 2417
- "Date/Time" on page 2418
- "Hour" on page 2419
- "Minute" on page 2419
- "Recurrence" on page 2419
- "Number of Weeks" on page 2419
- "Day" on page 2420

### Task

There are 3 tasks that can be selected for the scheduler to run.

- Task 1 is the 20 Hz to 30 MHz alignment
- Task 2 is the 30 MHz to 3.6 GHz alignment

4 System  
4.6 Alignments

- Task 3 is the 20 Hz to 3.6 GHz alignment

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:TASK T1   T2   T3</code> <code>:CALibration:RFPSelector:SCHeduler:TASK?</code>
Example	<code>:CAL:RFPS:SCH:TASK T1</code>
Notes	Changing the task does not reset the Scheduler time, and the alignment is based on the current scheduled configuration to occur
Preset	Unaffected by <b>Preset</b> but set to <b>T3</b> by <b>Restore Defaults</b> > <a href="#">"Alignments" on page 2343</a>
State Saved	No
Range	Task 1   Task 2   Task 3

### Date/Time

Lets you configure the scheduler to run a task starting from this date and time. The date and time rely on the instrument's local time to execute a scheduled task. The date format is "YYYY/MM/DD" and the time is 24-hour clock.

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:TIME:START "date", "time"</code> <code>:CALibration:RFPSelector:SCHeduler:TIME:START?</code> This query returns data using the format "YYYY/MM/DD; HH:MM:SS"
Example	<code>:CAL:RFPS:SCH:TIME:STAR "2009/8/20", "12:00:00"</code>
Notes	<p><b>"date"</b> is the date the task will run, in the form <b>YYYY/MM/DD</b> where:</p> <ul style="list-style-type: none"> <li>- <b>YYYY</b> is the four-digit representation of year (for example, 2009)</li> <li>- <b>MM</b> is the two-digit representation of month (for example, 01 to 12)</li> <li>- <b>DD</b> is the two-digit representation of the day (for example, 01 to 28, 29, 30 or 31 depending on the month and year)</li> </ul> <p><b>"time"</b> is the time of day the task will run, in the form <b>HH:MM:SS</b> where:</p> <ul style="list-style-type: none"> <li>- <b>HH</b> is the two-digit representation of the hour in 24-hour format</li> <li>- <b>MM</b> is the two-digit representation of minute</li> <li>- <b>SS</b> is the two-digit representation of seconds</li> </ul>
Preset	Unaffected by <b>Preset</b> but set to Current date and 00:00:00 by <b>Restore Defaults</b> > <a href="#">"Alignments" on page 2343</a>
State Saved	No

## Hour

Lets you configure the hour for the scheduled task. The command to configure the date and time parameters of the scheduler is the same; but they each have their own front panel-control.

Notes	See <a href="#">"Date/Time" on page 2418</a>
Preset	Unaffected by <b>Preset</b> but set to Current hour and 00 by <b>Restore Defaults</b> > <a href="#">"Alignments" on page 2343</a>
State Saved	No

## Minute

Lets you configure the minute for the scheduled task. The command to configure the date and time parameters of the scheduler is the same; but they each have their own front panel-control.

Notes	See <a href="#">"Date/Time" on page 2418</a>
Preset	Unaffected by <b>Preset</b> but set to Current minute and 00 by <b>Restore Defaults</b> > <a href="#">"Alignments" on page 2343</a>
State Saved	No

## Recurrence

Lets you configure the scheduler to run the task recurrently on a scheduled date and time. You can schedule it to run daily, weekly, or alternate weeks.

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:REcurrence DAY   WEEK   OFF</code>
Example	<code>:CAL:RFPS:SCH:REC DAY</code>
Preset	Unaffected by <b>Preset</b> but set to <b>OFF</b> by <b>Restore Defaults</b> > <a href="#">"Alignments" on page 2343</a>
State Saved	No
Range	<code>DAY   WEEK   OFF</code>

## Number of Weeks

Lets you set the number of weeks that the scheduler will wait to trigger a task.

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:REcurrence:WEEK &lt;integer&gt;</code>
	<code>:CALibration:RFPSelector:SCHeduler:REcurrence:WEEK?</code>

4 System  
4.6 Alignments

---

Example	<code>:CAL:RFPS:SCH:REC:WEEK 2</code>
Notes	New scheduled date to run the alignment task is updated when this parameter is changed
State Saved	No
Range	1-52
Min	1
Max	52

---

### *Day*

Lets you set the Day of the Week the scheduler will run a scheduled task.

---

Remote Command	<code>:CALibration:RFPSelector:SCHeduler:RECurrence:DAY SUN   MON   TUE   WED   THU   FRI   SAT</code> <code>:CALibration:RFPSelector:SCHeduler:RECurrence:DAY?</code>
Example	<code>:CAL:RFPS:SCH:REC:DAY SUN</code>
State Saved	No
Range	Sunday   Monday   Tuesday   Wednesday   Thursday   Friday   Saturday

---

## 4.7 Licensing

Accesses capabilities for configuring the licenses in your instrument.

### 4.7.1 License Manager

Opens the License Explorer for Fixed and Transportable licenses.

NOTE

This feature is not available if Option SF1 is installed.

---

For help on licensing, select **Help** in the menu bar at the top of the License Explorer window.

There are also several remote commands available for licensing. See:

- ["Install License \(Remote Command Only\)" on page 2429](#)
- ["Remove License \(Remote Command Only\)" on page 2429](#)
- ["List Licenses \(Remote Query Only\)" on page 2430](#)
- ["Validate License \(Remote Query Only\)" on page 2431](#)
- ["Host ID Query \(Remote Query Only\)" on page 2431](#)
- ["List Borrowed Licenses \(Remote Query Only\)" on page 2426](#)
- ["Return a Borrowed License \(Remote Command Only\)" on page 2427](#)

---

Notes

No equivalent remote command for this control

### 4.7.2 System Software Version Date

The date of the newest features introduced in this release of the firmware. This is *not* necessarily the same as the build date of the firmware, because the version date only changes when new features are added. For example, if A.18.06 has only defect fixes and no new features compared to A.18.05, then both A.18.05 and A.18.06 would have the same software version date.

For any feature to be enabled, the SW Support Expiration Date of the enabling license must be greater than or equal to the software version date when that feature was first introduced. See the Keysight web site for features related to a specific software application and their required support date.

The SCPI response is 3 integer values: `<year>, <month>, <day>`.

---

Remote Command    :SYSTem:SOFTware:VERSion:DATE?

---

Example            :SYST:SOFT:VERS:DATE?

---

### 4.7.3 Software Support Expiration Date

This date is encoded in each software license's Version field in the **YYYY.MMDD** format. It specifies the end date of the support contract associated with this license. When a support contract is renewed, a new license is issued with an updated Version corresponding to the new contract's end date. The functionality available for a license is determined by the features available before the expiration date. For example, if feature X is introduced in a release with System Software Version Date of **2017.0831**, then a license with a Software Support Expiration Date of **2017.0831** or greater would enable feature X, but **2017.0830** or earlier would not enable feature X.

The SCPI response is 3 integer values: **<year>, <month>, <day>**.

---

Remote Command    :SYSTem:LKEY:SOFTware:SUPPort:EXPIration:DATE? <feature>

---

Example            :SYST:LKEY:SOFT:SUPP:EXP:DATE? "N9084EM0E-1FP"

---

Dependencies      When **<feature>** is not a valid license, one of the following errors will be issued:

- -224, "IllegalParameterValue;License is not installed"
- -224, "IllegalParameterValue;Unknown license feature"
- -224, "IllegalParameterValue;Support contract not offered for this license"

### 4.7.4 Network Licenses

**Network Licenses** are available over the customer's network from a server the customer configures. The server has a count for each license and will only allow instruments to "check-out" a license up to that count. Once the count is reached for a specific license, further check-outs fail until one of the licenses is checked back in to the server. What this means is that it is possible for an instrument to have different features available to it based on what licenses are still available on the server when it tries to get licenses.

Setting up network licenses is done via the [Keysight Floating License Manager](#) (available on external Keysight web) and it has an Installation Guide that can be downloaded from that web page.

#### 4.7.4.1 Application Licenses

**Application Licenses** (like N9077EM0E-1NP) are automatically checked out when entering the Mode that uses them, and they are automatically checked-in when leaving that Mode. Because the server may have already checked out the last license for the application to another instrument, there is now the possibility that a mode switch will fail because a required license could not be checked out from the server. If the server has a limited number of licenses compared to the number of users desiring to use that license, this may mean that switching from Mode A to Mode B then back to Mode A may fail when returning to Mode A because another instrument checked out the last available license while the user was in Mode B. Also, for Modes with multiple licenses for different features (like Multi-Standard Radio), the features available may also change when switching out of the Mode and back into it.

So, when using network licenses, it is necessary to check `:SYST:ERR?` after every Mode switch, to verify that it successfully switched. If the Mode's required licenses were not successfully checked out, the instrument posts the error:

```
-310,"System error; feature not licensed"
```

There is also a potential performance issue when using network licenses, because the instrument must communicate with the server on each license check-out and check-in. This operation is usually fast (a few milliseconds), but it depends on the network communication lag between the instrument and server. For remote servers on slow or congested networks, this could be significantly slower than that.

#### 4.7.4.2 Instrument Software Options

Instrument software licenses are those that are reported via `*OPT?` the same as HW options. For example, N9040RT1B-1NP is an instrument software option, and is reported via `*OPT?` as `RT1`. Note that the license is composed of the model number (in this case `N9040B`) combined with the option code (`RT1`).

When instrument software options are available from a network server, the instrument automatically checks them out at start-up, and only checks them in when shutting down.

#### 4.7.4.3 License Checked Out Query (Remote Query Only)

Shows whether the specified license is checked out from a server. Since network served licenses may not always be available when there are limited licenses available compared to the desired number of users, the features available on an instrument can vary. Use this query to see whether the feature is currently checked-out to the instrument. The return value is boolean (0 or 1), returning 1 if the feature

exists and is checked out from a server. Note that querying a license that is local to the instrument (-xFP or -xTP) also returns 0, even though the license exists and is valid, because it does not require a check-out. Also, querying a license that does not exist returns 0.

---

Remote Command	<code>:SYSTem:LKEY:COU? &lt;feature&gt;</code>
Example	<code>:SYST:LKEY:COU? "N9080EM0E"</code> <code>1</code>
Notes	<code>&lt;"OptionInfo"&gt;</code> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one Return Value: 0 if not checked out, 1 if checked out

---

#### 4.7.4.4 List Licenses Checked Out (Remote Query Only)

Lists the licenses checked out from a server. Since network served licenses may not always be available when there are limited licenses available compared to the desired number of users, the features available on an instrument can vary. Use this query to see which features are currently checked-out to the instrument.

---

Remote Command	<code>:SYSTem:LKEY:COU:LIST?</code>
Example	<code>:SYST:LKEY:COU:LIST?</code> <code>#284</code> <code>N9073EM0E,2018.0831</code> <code>N9077EM0E,2018.0831</code> <code>N9080EM0E,2018.0831</code> <code>N9081EM0E,2018.0831</code>

---

#### 4.7.4.5 Borrowed Network Licenses


Network licenses can be borrowed from the network license server for a time. The maximum amount of time a license can be borrowed is specified in the license installed on the server and is set at the time the license is generated by Keysight. As part of the borrow operation, you specify how long to borrow the license. This borrow period is in hours and can be any time up to the maximum allowed by the license. Once borrowed, the license appears as a local license and can be used even when not connected to the network, and the instrument software treats them the same as other time-based licenses that are installed on the instrument. This means the licenses are validated when the instrument is started and then are used without the overhead of checking them out and back in when switching Modes. At the time of the borrow, a time is specified for how long the license will be borrowed. When that time expires, the license is automatically returned to the network license server

even if the instrument is not connected to the network. If you are done with the license before it automatically returns to the network server, the license can be explicitly returned earlier.

#### 4.7.4.6 Borrow a License

Licenses are borrowed by using the Keysight License Manager 6 application. This can be launched from the **System Licensing** screen.

#### Graphic

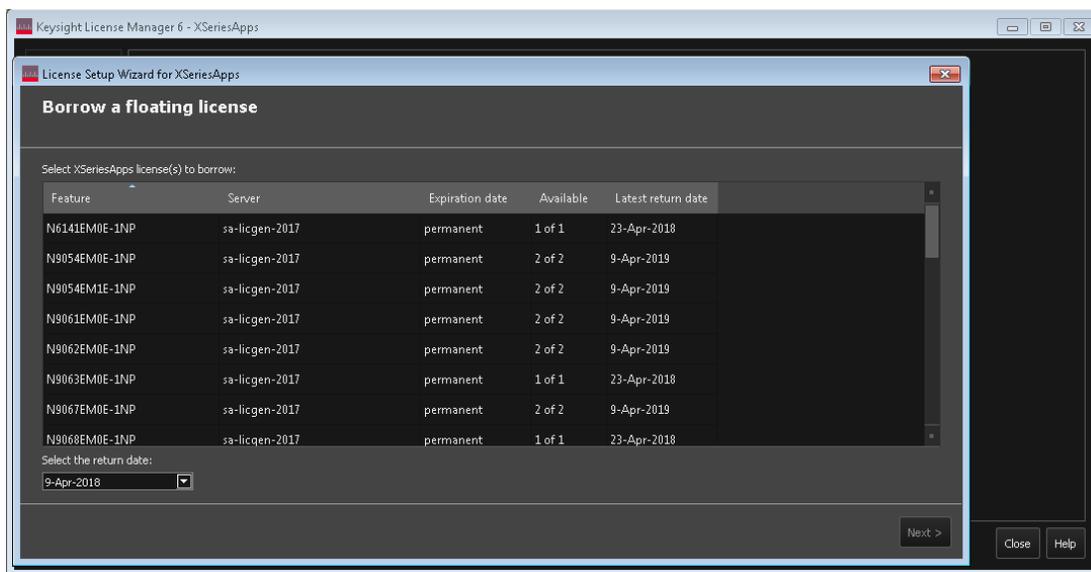

The corresponding remote command is:

Remote Command	<code>:SYSTem:LKEY:BORRow "&lt;feature&gt;[,&lt;version&gt;]",&lt;return date&gt;</code> <code>:SYSTem:LKEY:BORRow? "&lt;feature&gt;[,&lt;version&gt;]"</code>
Example	<code>:SYST:LKEY:BORR "N9080EM0E", "20-Aug-2018"</code> <code>:SYST:LKEY:BORR? "N9080EM0E"</code> <code>: "20-Aug-2018"</code>
Notes	If <code>&lt;version&gt;</code> is not specified, the highest available version will be borrowed The <code>&lt;return date&gt;</code> is the day when the borrow will automatically be returned to the server
Dependencies	For the command, when <code>&lt;feature&gt;</code> is not a valid license, or when a license is not currently available for borrowing, one of the following errors is issued: <ul style="list-style-type: none"> <li>- -224, "IllegalParameterValue;License is not installed"</li> <li>- -224, "IllegalParameterValue;Unknown license feature"</li> </ul>

- 
- -224, "IllegalParameterValue;License not available for borrowing"

Additionally, the return date is evaluated. If it is not a valid date, the following error is issued:

- -224, "IllegalParameterValue;Invalid return date"
- -200, "Execution error; No Available Borrow Licenses For Feature: <feature>"

The return date may be clipped to the maximum borrow allowed by the license. When this happens, the following warning is issued:


- -221, "Return date clipped to maximum of <max date>"

For the query, the return is the borrow return date (as a string in **dd-mmm-yyyy** format) if the license is borrowed. In all other cases, (not borrowed, not installed, etc.) the return is an empty string

#### 4.7.4.7 Listing Borrowed Licenses and Return a Borrowed License

The Keysight License Manager 6 can also be used to see the currently borrowed licenses or return a license before the automatic return time.

#### Graphic

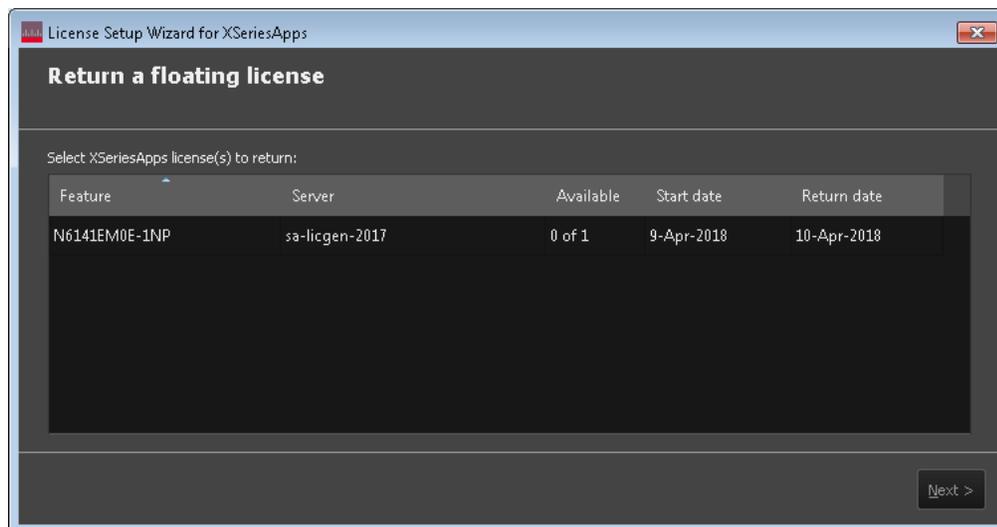

#### List Borrowed Licenses (Remote Query Only)

---

Remote Command    :SYSTem:LKEY:BORRow:LIST?

---

Example            :SYST:LKEY:BORR:LIST?  
                  #266

---

N9073EM0E, 2018.0831, 20-Aug-2018

N9077EM0E, 2018.0831, 20-Aug-2018

### Return a Borrowed License (Remote Command Only)

Remote Command	:SYSTem:LKEY:BORRow:RETurn "<feature>"
Example	:SYST:LKEY:BORR:RET "N9080EM0E"
Dependencies	When <feature> is not a valid license or when a license is not borrowed, one of the following errors is issued: <ul style="list-style-type: none"> <li>- -224, "IllegalParameterValue;License is not installed"</li> <li>- -224, "IllegalParameterValue;Unknown license feature"</li> <li>- -224, "IllegalParameterValue;License not borrowed"</li> </ul>

#### 4.7.4.8 Enabling Network Checkouts While Borrowed

The default for borrowed license use is that you will be explicitly borrowing all desired network licenses, and that all other available network licenses should be ignored. This allows you to intentionally limit the functionality available to the instrument to what is explicitly borrowed.

For example, the RT1/RT2 options that enable the RTSA Mode are automatically checked out when the instrument is started, because the hardware must be configured for them at startup time. If you do not intend to use RTSA, then by borrowing only the licenses you want to use and disabling other network checkouts, the RT1/RT2 licenses will not be checked out at startup. This leave more RTSA licenses available for others to use. Note that the instrument must be restarted after the borrowing has been done to ensure the release of any network licenses already acquired.

If your intent in borrowing is to ensure access to a particular feature or application, but you still want to opportunistically use other features or applications, the default behavior can be changed to enable network license checkouts even when licenses have been borrowed.

Remote Command	:SYSTem:LKEY:BORRow:NETWork:COU:ENABle
Example	:SYST:LKEY:BORR:NETW:COU:ENAB 0 :SYST:LKEY:BORR:NETW:COU:ENAB?
Dependencies	Only visible when licensing is configured to use a network server. SCPI is always available
Preset	Unaffected by <b>Preset</b> but set to 0 by <b>Restore Defaults &gt; "Misc" on page 2343</b> or <b>Restore Defaults &gt; "All" on page 2344</b>
State Saved	Power On Persistent (survives shutdown and restart)

### 4.7.5 USB Portable Licenses

The USB Portable license is implemented with a physical dongle that is a USB device, like a USB thumb drive. It has a Host ID fixed in the dongle HW. It does not contain any writable data and so is acceptable to high security A/D customers. Transporting licenses from one instrument to another just requires moving the dongle and license files to the desired instrument. The license files can be installed on many instruments, but they will only be valid the one instrument that has the dongle. The use of USB portable licenses requires that the Keysight Floating License Manager is installed on the instrument. The licenses can then be added to the instrument's server.

USB Portable licenses are checked out and in like Network licenses. Because the licenses are local, there will be no network latency involved in the check-out/check-in, but there can still be a slight performance degradation compared to Fixed and Transportable licenses. If the instrument allows multiple concurrent instances of the X-Series software (as is the case for modular products), there may also be availability issues if all licenses are already checked out to other X-Series instances. Plugging/un-plugging the dongle is equivalent to transporting a license to/from the instrument, however, the software must be restarted whenever the dongle is plugged in.

### 4.7.6 Configuring Network and USB Portable Licenses

The Keysight Floating License Manager must be used to configure the Network or USB Portable licenses before the licenses can be used. Currently, an instrument can only be configured for Network or USB Portable licenses or both.

- To set up USB Portable licenses, in the Keysight Floating License Manager select “Start a floating license server with a license file” and add files containing the USB Portable licenses desired
- To set up Network licenses, in the Keysight Floating License Manager select “Connect to a floating license server” and enter the network server's name preceded by the “@” character (example: “@myserver”)
- To set up both Network and USB Portable license, first configure the USB Portable license, then configure the Network licenses, but append “;@localhost” to the server name (example: “@myserver;@localhost”). Whenever the configuration is changed, the X-Series software must be restarted

### 4.7.7 Floating License Manager

Opens the License Explorer for Network and USB Portable licenses.

**NOTE** This feature is not available if Option SF1 is installed.

For help on licensing, select **Help** in the menu bar at the top of the License Explorer window.

### 4.7.8 Install License (Remote Command Only)

Used to add a license to the instrument.

An example of such a command would be as below. The parameter is a unique 120-character code for each license.

```
SYST:LKEY "N9073A-1FP", "027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1017638211AC9F60D9C639FE539735909C551DE0A91"
```

Another example using one of the optional clauses.

```
SYST:LKEY "N9063EM0E-1FP,2019.0330", "02220210867E187713C9AFD4C90EA0DE2B674615DD0255798EE5B237A146A0D4E411E0ABFE04D3CAFDFFA", "ISSUED=30-Mar-2018"
```

**NOTE** This command does not work for Transportable, Network or USB Portable licenses.

Remote Command	<code>:SYSTem:LKEY &lt;"OptionInfo"&gt;, &lt;"LicenseInfo"&gt;,&lt;"Optional1"&gt;,&lt;"Optional2"&gt;,&lt;"Optional3"&gt;,&lt;"Optional4"&gt;,&lt;"Optional5"&gt;</code>
Notes	<p><code>&lt;"OptionInfo"&gt;</code> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, since the system knows which version is supported for each feature</p> <p><code>&lt;"LicenseInfo"&gt;</code> contains the signature, the expiration date, and serial number for transport if transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the serial number, the system regards it as non-transportable. As a result, this supports reverse compatibility</p> <p><code>&lt;"Optional#"&gt;</code> are optional parameters that may be needed to match the information in the original license</p>

### 4.7.9 Remove License (Remote Command Only)

Removes a particular license.

An example of such a command would be as below. The parameter is a unique 120-character code for each license.

```
SYST:LKEY:DEL "N9073A-
```

4 System  
4.7 Licensing

```
1FP", "027253AD27F83CDA5673A9BA5F427FDA5E4F25AEB1017638211AC9F60D9C639FE53973590  
9C551DE0A91"
```

NOTE

This command does not work for Transportable, Network or USB Portable licenses.

---

Remote Command	<code>:SYSTem:LKEY:DElete &lt;"OptionInfo"&gt;,&lt;"LicenseInfo"&gt;</code>
----------------	---

---

Notes	<p><code>&lt;"OptionInfo"&gt;</code> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one, if more than one version is installed</p> <p><code>&lt;"LicenseInfo"&gt;</code> contains the signature, the expiration date, and whether be transportable. You must specify the signature, but you can omit the other information. If you omit the expiration date, the system regards it as permanent. If you omit the transportability, the system regards it as non-transportable. As a result, this supports reverse compatibility</p>
-------	--

## 4.7.10 List Licenses (Remote Query Only)

Returns a list of installed licenses.

---

Remote Command	<code>:SYSTem:LKEY:LIST?</code>
----------------	---------------------------------

---

Notes	<p>Return Value:</p> <p>An <code>&lt;arbitrary block data&gt;</code> of all the installed instrument licenses</p> <p>The format of each license is as follows</p> <pre>&lt;Feature&gt;,&lt;Version&gt;,&lt;Signature&gt;,&lt;Expiration Date&gt;,&lt;Serial Number for Transport&gt;,...</pre> <p>Return Value Example:</p> <pre>#3136 N9073A-1FP,1.000,B043920A51CA N9060A-2FP,1.000,4D1D1164BE64 N9020A-508,1.000,389BC042F920 N9073A-1F1,1.000,5D71E9BA814C,13-aug-2005</pre> <p><code>&lt;arbitrary block data&gt;</code> is:</p> <pre>#NMMM&lt;data&gt;</pre> <p>Where:</p> <p><b>N</b> is the number of digits that describes the number of <b>MMM</b> characters. For example, if the data was 55 bytes, N would be 2</p> <p><b>MMM</b> would be the ASCII representation of the number of bytes. In the previous example, N would be 55</p> <p><code>&lt;data&gt;</code> ASCII contents of the data</p> <p>Additional fields may appear depending on the type of license (Fixed, Transportable, Network, USB Portable)</p>
-------	--

### 4.7.11 Validate License (Remote Query Only)

Lets you query whether a particular license is currently valid.

Remote Command	<code>:SYSTem:LKEY? &lt;"OptionInfo"&gt;</code>
Example	<code>:SYST:LKEY? "N9073A-1FP"</code>
Notes	<p><code>&lt;"OptionInfo"&gt;</code> contains the feature and the version. You must specify the feature but can omit the version. If you omit the version, the system regards it as the latest one</p> <p>Return Value:  <code>&lt;"LicenseInfo"&gt;</code> if the license is valid, null otherwise  <code>&lt;"LicenseInfo"&gt;</code> contains the signature, the expiration date, and serial number if transportable</p> <p>Return Value Example:  <code>"B043920A51CA"</code></p>

### 4.7.12 Host ID Query (Remote Query Only)

Returns the Host ID as a string.

Remote Command	<code>:SYSTem:HID?</code>
----------------	---------------------------

## 4.8 Security

Accesses capabilities for operating the instrument in a security-controlled environment.

The **Security** page of the **System** menu has two controls: **USB Read/Write** and **Restore Security Defaults**.

---

Dependencies	Not available in UXM
--------------	----------------------

### 4.8.1 USB Write Protect

The Windows operating system can be configured to disable write access to the USB ports for users who are in a secure environment where transferring data from the instrument is prohibited. The **USB Write Protect** control is a convenient way for you to disable write access to USB.

**NOTE**

**This control is only available to users with Administrator privileges.**

---

Remote Command	<code>:SYSTem:SECurity:USB:WPRotect[:ENABle] ON   OFF   0   1</code> <code>:SYSTem:SECurity:USB:WPRotect[:ENABle]?</code>
Example	Set USB ports to Read-only: <code>:SYST:SEC:USB:WPR ON</code>  Set USB ports to Read-Write: <code>:SYST:SEC:USB:WPR OFF</code>
Notes	When the USB ports are in Read-only mode, then no data can be stored to USB, including the internal USB memory used for a back-up location for the calibration data
Dependencies	Grayed-out unless the current user has Administrator privileges
Preset	Unaffected by <b>Preset</b> or any <b>"Restore Defaults"</b> on page 2341. A Keysight Recovery sets the USB to write protect <b>OFF</b>
State Saved	No
Range	Read-Write   Read only

### 4.8.2 Restore Security Defaults

Sets USB Read/Write to Enable.

**NOTE**

**This control is only available to users with Administrator privileges.**

## 4.9 Diagnostics

Displays a slider that allows you to view Hardware Statistics.

---

Dependencies	Not available in UXM
--------------	----------------------

### 4.9.1 Show Hardware Statistics

Provides a display of various hardware statistics. The statistics include the following:

- Mechanical relay cycles (on models with mechanical relays)
- High and Low temperature extremes
- Elapsed time that the instrument has been powered-on (odometer)

Modular instruments display only time and temperature information.

---

Example	<code>:SYST:SHOW HWST</code>
---------	------------------------------

---

Notes	The values displayed on the screen are only updated upon entry to the screen and not updated while the screen is being displayed
-------	--

### 4.9.2 Pathwave Calibration Advisor...

This is a separate application that helps maintain your instrument at peak performance. You can set the cal interval, configure cal due reminders, check the cal status, view cal certificates and test reports, and contact Keysight for a cal service.

The embedded help documentation can be accessed in the instrument at: <C:\Program Files\Keysight\Calibration Advisor\PCA.chm>, or via the ? button at the top right of the **PathWave Calibration Advisor** window.

### 4.9.3 Query the Mechanical Relay Cycle Count (Remote Query Only)

Returns the count of mechanical relay cycles.

---

Remote Command	<code>:SYSTem:MRELAY:COUNT?</code>
----------------	------------------------------------

---

Example	<code>:SYST:MREL:COUNT?</code>
---------	--------------------------------

---

Notes	Query Only
-------	------------

The return value is a comma-separated list of the individual counts for each mechanical relay  
The position of the relays in the list is:

---

“<Cal Signal>, <AC/DC>, <2dB #1 Atten>, <2dB #2 Atten>, <6dB Atten>, <10dB Atten>, <20dB Atten>, <30dB Atten>, <Fixed Atten>, <Low Noise Path Switch>, <PreSel Bypass>”

Items in the list not pertaining to your hardware configuration return as -999 for those items

---

Dependencies *Not supported by E6607C*

#### 4.9.4 Query the Operating Temperature Extremes (Remote Query Only)

Returns the low operating temperature extreme value. The value survives a power-cycle and is the temperature extreme encountered since the value was reset by the factory or service center.

---

Remote Command `:SYSTem:TEMPerature:LEXTreme?`

Example `:SYST:TEMP:LEXT?`

Notes Value is in degrees Celsius at which the lowest operating temperature has been recorded since 1st power-up

State Saved No

Returns the high operating temperature extreme value. The value survives a power-cycle and is the temperature extreme encountered since the value was reset by the factory or service center.

---

Remote Command `:SYSTem:TEMPerature:HEXTreme?`

Example `:SYST:TEMP:HEXT?`

Notes Value is in degrees Celsius at which the highest operating temperature has been recorded since 1st power-up

State Saved No

#### 4.9.5 Query the Elapsed Time since 1<sup>st</sup> power on (Remote Query Only)

Returns the elapsed on-time in minutes since 1<sup>st</sup> power-on.

---

Remote Command `:SYSTem:PON:ETIMe?`

Example `:SYST:PON:ETIM?`

Notes Query Only

## 4.10 Service

Accesses capabilities performed in the factory or under instructions from repair procedures. This key is only visible when the logged-in user is “**advanceduser**” or “**saservice**”. The first access to the **Service** menu after invoking the instrument application will require an authentication Service Code.

---

Dependencies	Not available in UXM
--------------	----------------------

## 4.11 SCPI Recorder

Allows you to view active recording content, and edit the content. Right-click or touch and hold on any UI control to display a menu allowing you to record the SCPI associated with the control.

Selecting this tab displays the **Recorder** dialog on the right. The dialog displays the recorder table with the data in chronological order of recording. The Function Label column shows the feature name, for example, Center Frequency, and the SCPI column shows the full mnemonic corresponding to the feature.

### 4.11.1 Continuous SCPI Recording

Toggles the state of continuous recording.

When enabled (**ON**), *all* user interaction with settings that are Immediate Actions, and that have associated SCPI commands or queries, are added as recording entries in chronological order. Not every User Interface action has a corresponding SCPI command/query, for example, navigation actions between dialogs and menus in the User Interface do not have corresponding SCPI commands. All settings or a measurement that are accessible via menus have SCPI commands, so modifying those settings will create entries in the Recorder.

As a convenience, this feature can also be toggled (without visiting the SCPI Recording menu) by clicking the SCPI icon which has been added to the left of the “gear” icon (as illustrated below):



**NOTE**

When recording is turned on, some entries are automatically created and added to the recording. These are: `:INST:CONF:<mode>:<meas>` (see ["Mode" on page 106](#)) and `*OPC?` (see ["\\*OPC? - Operation Complete" on page 2991](#)). These commands set the current Mode and Measurement, perform a **Mode Preset**, then cause the instrument to wait for the completion of any previous commands. When **Continuous SCPI Recording** fills the recording container to the limit, a warning message is displayed to notify you that the recording container is full

and recording will be stopped, unless the recording limit is increased.

---

NOTE

To maintain the integrity of recording, stop recording *before* sending remote commands to the instrument. Changes made to the instrument via remote SCPI are *not* recorded.

---

### 4.11.2 Recording Limit

When "[Continuous SCPI Recording](#)" on page 2436 is enabled, every change you make is recorded into the recording system, which can lead to extremely large recordings.

This value limits how much content can be saved into the recording table. You may change this number to suit your needs, but the value cannot be less than 0 or greater than 500. When the recording length reaches the limit, a warning is displayed to indicate that the recording size has reached the limit and recording will be stopped.

The default limit is 250. If the limit is reduced after recording entries are added, the reduced count cannot be less than the current number of entries in the recording. If the newly-entered limit is smaller than the existing number of entries, then the actual new limit is set to the current number of entries. Increasing the limit will increase memory consumption.

### 4.11.3 Play All

Clicking this control causes each of the entries in the SCPI Recorder table to be executed.

If execution results in any errors, then a message box showing the SCPI command, and its corresponding error are displayed after play has completed.

### 4.11.4 Play Selected

You can select a row in the SCPI recording table, then click **Play Selected** to play that entry. **Play Selected** is disabled if the recording table is empty, or when no row is selected. You can then select another row and play the selection, but, if you want to play back in a particular order, you must execute the plays in the desired sequence.

After playing the selected entry, the selected row is moved down by one entry.

### 4.11.5 Copy

Copies the SCPI column data to the system clipboard, to make it available for Paste operations.

### 4.11.6 Insert \*OPC? Below

Certain queries and commands must be sent during instrument programming, but there is no corresponding user-interface control for these commands. This control allows you to insert one such query: **\*OPC?** below the selected row.

### 4.11.7 Move Up

Moves the selected / highlighted row up by 1 slot. Note that moving a mode or measurement switch entry in the table may impact context for subsequent entries in the table.

### 4.11.8 Move Down

Moves the selected / highlighted row down by 1 slot. Note that moving a mode or measurement switch entry in the table may impact context for subsequent entries in the table.

### 4.11.9 Delete Row

Deletes the selected entry from the recording table. Note that some entries may have subsequent entries related to the row that you delete, for example, **\*OPC?**, which may be added automatically after a mode or measurement switch.

### 4.11.10 Delete All

Deletes all entries from the recording table. A warning message is displayed: "All recording data will be deleted".

To confirm that you want to delete the entire recording content, click **OK**, or click **Cancel** to avoid deleting it.

## 4.12 System Remote Commands (Remote Commands Only)

These commands have no front-panel key equivalent.

- "List installed Options (Remote Query Only)" on page 2439
- "Lock the Front-panel keys (Remote Command Only)" on page 2440
- "Lock Workstation (Remote Command Only)" on page 2440
- "List SCPI Commands (Remote Query Only)" on page 2442
- "Front Panel activity history (Remote Query only)" on page 2442
- "SCPI activity history (Remote Query only)" on page 2443
- "Instrument start time (Remote Query only)" on page 2443
- "SCPI Version Query (Remote Query Only)" on page 2444
- "Date (Remote Command Only)" on page 2444
- "Time (Remote Command Only)" on page 2444
- "Input Overload Enable (Remote Command Only)" on page 2445
- "Power Up (Remote Query Only)" on page 2445

### 4.12.1 List installed Options (Remote Query Only)

Lists the installed options that pertain to the instrument (signal analyzer).

Remote Command	<code>:SYSTem:OPTions?</code>
Example	<code>:SYST:OPT?</code>
Notes	The return string is a comma-separated list of the installed options. For example: <code>"503,P03,PFR"</code> <code>:SYSTem:OPTions?</code> and <code>*OPT?</code> are the same
State Saved	No

### 4.12.2 Lock the Front-panel keys (Remote Command Only)

Disables the instrument keyboard to prevent local input when the instrument is controlled remotely. Annunciation showing a “K” for **KLOCK** (keyboard lock) alerts the local user that the keyboard is locked. **KLOCK** is similar to the GPIB Local Lockout function; namely that no front-panel keys are active except for the **Power Standby** key. (The instrument is allowed to be turned-off if **KLOCK** is **ON**.) The **KLOCK** command is used in remote control situations where Local Lockout cannot be used.

Although primary intent of **KLOCK** is to lock-out the front panel, it will lock-out externally connected keyboards through USB. **KLOCK** has no effect on externally connected pointing devices (mice).


The front panel ‘**Local**’ key (**Cancel/Esc**) has no effect if **KLOCK** is **ON**.

See also "[Local Button](#)" on page 153.

Remote Command	<code>:SYSTem:KLOCK OFF   ON   0   1</code> <code>:SYSTem:KLOCK?</code>
Example	<code>:SYST:KLOC ON</code>
Notes	Keyboard lock remains in effect until turned-off, or until the instrument is power-cycled
Preset	Initialized to <b>OFF</b> at startup, unaffected by <b>Preset</b>
State Saved	No

### 4.12.3 Lock Workstation (Remote Command Only)

Performs the same functionality as the **Win+L** function or the “Lock” function on the **CTL-ALT-DEL** screen in Windows.

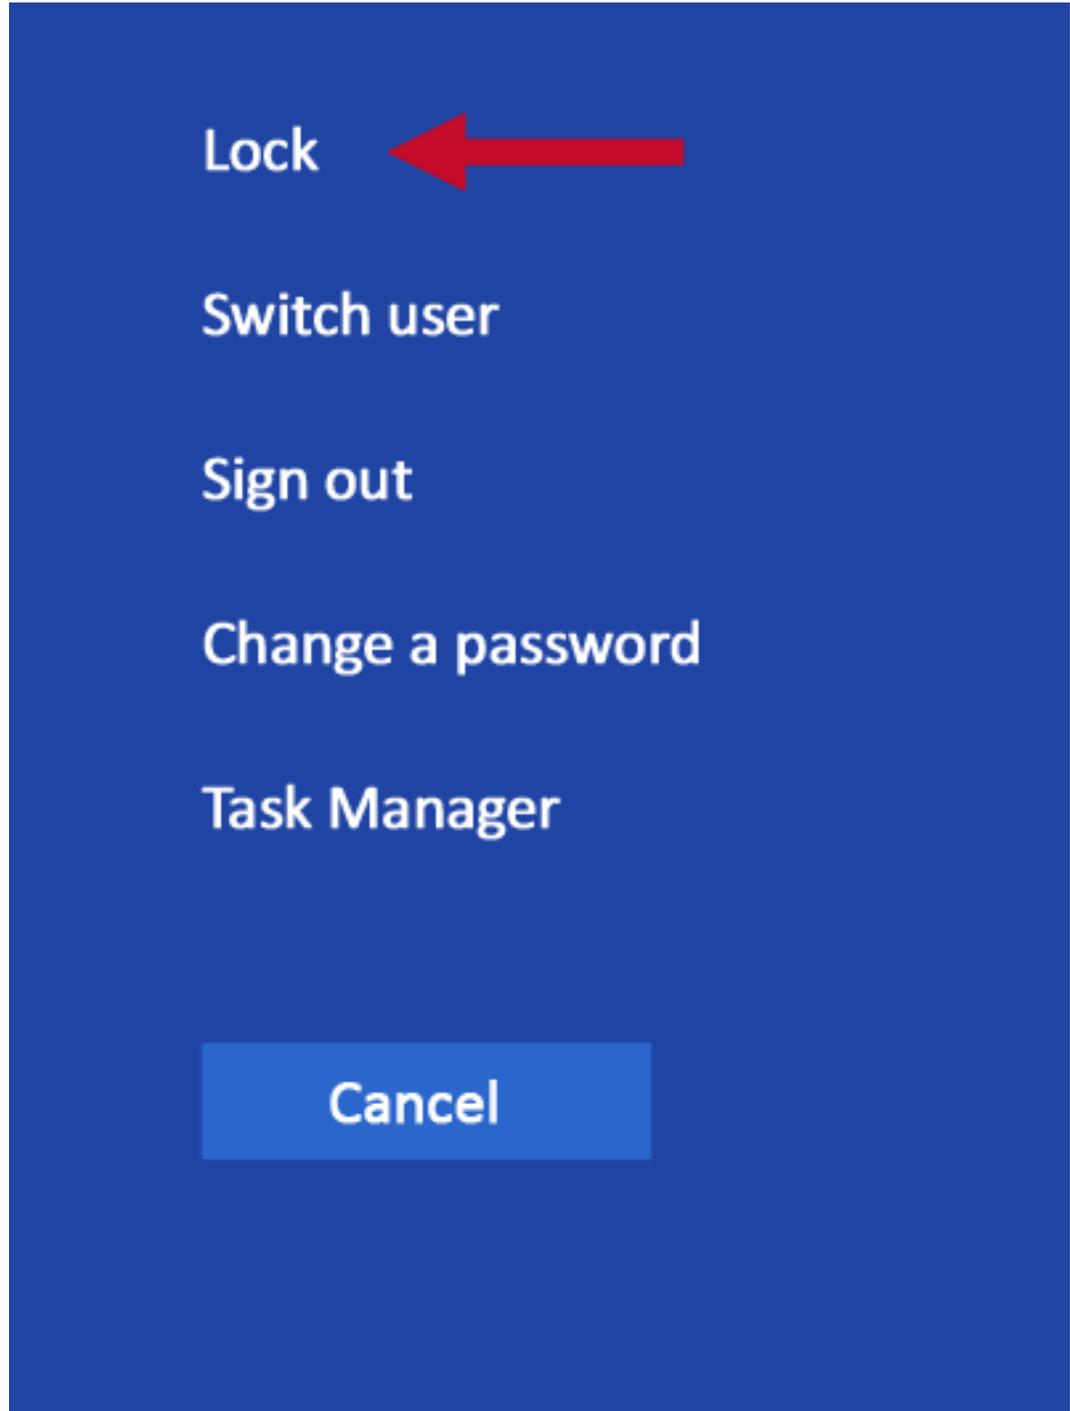

As soon as you do this, the computer is locked. The initial login screen appears; no one can access the computer at that point unless they have an account and know the account's password.

Failure to initiate adds an error to the Windows event log for SA;

4 System  
4.12 System Remote Commands (Remote Commands Only)

"LockWorkStation - Failed to initiate function"

See also "Local Button" on page 153.

Remote Command	:SYSTem:LWSTation
Example	:SYST:LWST
Notes	The lock remains in effect until a user logs in
State Saved	No

#### 4.12.4 List SCPI Commands (Remote Query Only)

Outputs a list of the valid SCPI commands for the currently selected Mode.

Remote Command	:SYSTem:HELP:HEADers?
Example	:SYST:HELP:HEAD?
Notes	The output is an IEEE Block format, with each command separated with the New-Line character (0x0A)

#### 4.12.5 Front Panel activity history (Remote Query only)

Instrument front panel usage can be monitored using :SYSTem:METRics:FPANel?. The monitoring occurs for front panel hardkey or softkey operation (including mouse or touch operation on instruments with Multi-Touch User Interface). The information of the usage pertains to the activity since the instrument application was started; the information does not persist after the application is terminated, or the instrument has been rebooted.

To prevent the front panel from being placed into Remote the monitoring must occur via an I/O protocol such as LAN Socket, or the remote program performing the monitoring must explicitly place the instrument into Local after the query has been performed.

Remote Command	:SYSTem:METRics:FPANel?
Example	:SYST:METR:FPAN?
Notes	The return value is a string with the format "YYYY-MM-DD<space>HH:MM:SS", in instrument local time If no front panel activity has occurred since the instrument was booted (instrument application started), the return value will be the time the instrument application started. The instrument application start time can be obtained with the query :SYSTem:METRics:STIme?

### 4.12.6 SCPI activity history (Remote Query only)

Instrument remote operation usage via SCPI can be monitored using `:SYSTem:METRics:SCPI?`. The monitoring occurs for SCPI control from any I/O channel (GPIB, USB, or LAN). The information of the usage pertains to the activity since the instrument application was started; the information does not persist after the application is terminated, or the instrument has been rebooted.

Remote Command	<code>:SYSTem:METRics:SCPI?</code>
Example	<code>:SYST:METR:SCPI?</code>
Notes	<p>The return value is a string with the format “YYYY-MM-DD&lt;space&gt;HH:MM:SS”, in instrument local time</p> <p>The following commands are excluded from the history accounting:</p> <ul style="list-style-type: none"> <li>- <code>*IDN?</code></li> <li>- <code>*OPT?</code></li> <li>- <code>:SYSTem:DATE?</code></li> <li>- <code>:SYSTem:TIME?</code></li> <li>- <code>:SYSTem:PON:TIME?</code></li> <li>- Queries in the <code>:SYSTem:ERRor</code> subsystem</li> <li>- Queries in the <code>:SYSTem:LKEY</code> subsystem</li> <li>- Queries in the <code>:SYSTem:METRics</code> subsystem</li> <li>- Queries in the <code>:SYSTem:MODUle</code> subsystem</li> </ul> <p>If no SCPI activity has occurred since the instrument was booted (instrument application started), the return value will be the time the instrument application started. The instrument application start time can be obtained with <code>:SYSTem:METRics:STIME?</code></p>

### 4.12.7 Instrument start time (Remote Query only)

To determine if instrument activity has occurred, `:SYSTem:METRics:STIME?` can be used to determine the instrument application start time.

Remote Command	<code>:SYSTem:METRics:STIME?</code>
Example	<code>:SYST:METR:STIM?</code>
Notes	<p>The return value is a string with the format “YYYY-MM-DD&lt;space&gt;HH:MM:SS”, in instrument local time</p>

### 4.12.8 SCPI Version Query (Remote Query Only)

Returns the SCPI version number with which the instrument complies. The SCPI industry standard changes regularly. This command indicates the version used when the instrument SCPI commands were defined.

---

Remote Command	:SYSTem:VERSion?
----------------	------------------

---

Example	:SYST:VERS?
---------	-------------

### 4.12.9 Date (Remote Command Only)

The recommended access to the Date, Time, and Time zone of the instrument is through the Windows native control (Control Panel, or accessing the Task Bar). You may also access this information remotely, as shown in here and in "[Time \(Remote Command Only\)](#)" on page 2444.

Sets or queries the date in the instrument.

---

Remote Command	:SYSTem:DATE "<year>,<month>,<day>"
----------------	-------------------------------------

---

	:SYSTem:DATE?
--	---------------

---

Example	:SYST:DATE "2006,05,26"
---------	-------------------------

---

Notes	<year> is the four-digit representation of year (for example, 2006) <month> is the two-digit representation of year (01 to 12) <day> is the two-digit representation of day (01 to 28, 29, 30, or 31, depending on the month and year) Unless the current account has Power User or Administrator privileges, sending this command generates an error, and no action is taken
-------	--

### 4.12.10 Time (Remote Command Only)

Sets or queries the time in the instrument.

---

Remote Command	:SYSTem:TIME "<hour>,<minute>,<second>"
----------------	---

---

	:SYSTem:TIME?
--	---------------

---

Example	:SYST:TIME "13,05,26"
---------	-----------------------

---

Notes	<hour> is the two-digit representation of the hour in 24-hour format <minute> is the two-digit representation of minute <second> is the two-digit representation of second Unless the current account has Power User or Administrator privileges, sending this command generates an error, and no action is taken
-------	--

### 4.12.11 Input Overload Enable (Remote Command Only)

Input Overload errors are reported using the Input Overload status bit (bit 12 in the Measurement Integrity Status Register). Input Overloads (for example, ADC Overload errors) can come and go with great frequency, generating many error events (for example, for signals just on the verge of overload), and so are not put into the SCPI error queue by default. Normally the status bit is the only way for detecting these errors remotely.

Use this command to enable or disable Input Overload reporting to the SCPI queue. By default, reporting is disabled. Send `:SYSTem:ERRor:OVERload ON` to enable, or `:SYSTem:ERRor:OVERload OFF` to disable. In either case, Input Overloads *always* set the status bit.

#### NOTE

For versions of firmware before A.10.01, Input Overload was only a Warning and so was never available in the SCPI queue, although it did set the status bit. For A.10.01 and later, Input Overload is an error, which can be enabled to the SCPI queue using this command.

Remote Command	<code>:SYSTem:ERRor:OVERload[:STATe] 0   1   OFF   ON</code>
Example	Enable overload errors: <code>:SYST:ERR:OVER 1</code>
Preset	Set to <b>OFF</b> by <b>Restore Misc Defaults</b> (no Overload errors go to SCPI)
State Saved	Saved in instrument state

### 4.12.12 Power Up (Remote Query Only)

Returns a list of errors encountered during the application boot-up, such as: mismatch FW-FPGA, missing Calibration data, missing hardware, and construction errors.

Remote Command	<code>:SYSTem:ERRor:PUP?</code>
Notes	If no error occurs, the return value is: "No Power Up Errors" Return Value: <code>&lt;List of error strings&gt;</code> in <code>&lt;IEEE488 Block&gt;</code> format Return Value Example: "Power up errors, see details in Windows Event Log" "Unmatched FPGA Version(s), See details in Windows Event Log"

## 5 Preset

The Preset functions can be accessed in two ways:

- By pressing the **Mode Preset** or **User Preset** front panel keys:



- From the menu "**Preset Dropdown**" on page 2449, which appears when you press the green **Preset** icon (in the upper right corner of the display):



### Types of Preset

The table below shows all possible presets, their corresponding SCPI commands and front-panel access methods.

Instrument settings are tiered in scope from those local to the current measurement to those global to all measurements and Modes. There are presets tailored to each scope. The table identifies the scope of each preset type.

**NOTE**

To get a Mode back to a fully predefined state, you should execute "**Restore Mode Defaults**" on page 2452 and "**Input/Output Preset**" on page 2453, but since **Input/Output Preset** is a global function, it affects *all* Modes.


Type Of Preset	SCPI Command	Scope of Preset	Front Panel Access
"Auto Couple" on page 2242	:COUPle ALL	Local to the current measurement, only affects Auto/Man variables	Meas Setup menu
Meas Preset	:CONFigure:<meas>	Local to the current measurement Does not preset the RF Source	Meas Setup menu
"Mode Preset" on page 2450	:SYSTem:PRESet	Local to the current Mode, global to all measurements in the Mode, affects most but not all parameters in the Mode  Does not affect <b>Input/Output</b> or <b>System</b> variables Presets the RF Source	<b>Mode Preset</b> key  " <b>Preset Dropdown</b> " on page 2449
"Restore Mode	:INSTrument:DEFault	Local to the current Mode, global to	" <b>Preset</b> "

Type Of Preset	SCPI Command	Scope of Preset	Front Panel Access
Defaults" on page 2452		all measurements in the Mode, affects all parameters in the Mode, but does not affect <b>Input/Output</b> or <b>System</b> variables Does not preset the RF Source.	Dropdown" on page 2449
"Restore Defaults All Modes" on page 2459	:SYSTem:DEFault MODEs	Affects all parameters in <i>all</i> Modes, but does not affect <b>Input/Output</b> or <b>System</b> variables Presets the RF Source	"Preset Dropdown" on page 2449
"Restore Screen Defaults" on page 2462	:SYSTem:DEFault SCReen	Deletes all Screens but one, restores that screen to its default mode and performs Mode Preset for that mode Does not affect <b>Input/Output</b> or <b>System</b> variables Presets the RF Source	"Preset Dropdown" on page 2449
"User Preset" on page 2455	:SYSTem:PRESet:USER	Local to the current Mode, global to all measurements in the Mode, affects all parameters in the Mode, as well as <b>Input/Output</b> variables Does not affect <b>System</b> variables	User Preset key "Preset Dropdown" on page 2449
"User Preset All Modes" on page 2458	:SYSTem:PRESet:USER:ALL	Same as <b>User Preset</b> , but affects all Modes in the current Screen	"Preset Dropdown" on page 2449
"User Preset All Screens" on page 2460		Affects the entire Screen Configuration; global to all Modes and Screens	"Preset Dropdown" on page 2449
*RST	*RST	Same as <b>Mode Preset</b> . Additionally always sets <b>Single/Cont</b> to <b>Single</b>	Not available from front panel
"Input/Output Preset" on page 2453	:SYSTem:DEFault INPut	Affects all <b>Input/Output</b> variables Does not preset the RF Source	Input/Output menu "Preset Dropdown" on page 2449 System > Restore Defaults
"Full Mode Preset" on page 2454	:SYSTem:PRESet:FULL	Same as <b>Mode Preset + Restore Mode Defaults + Input/Output Preset</b> . Essentially a factory preset of the current Mode Presets the RF Source	"Preset Dropdown" on page 2449
"Restore User	:SYSTem:DEFault UINTErface	Affects all variables in the "User	System > Restore

Type Of Preset	SCPI Command	Scope of Preset	Front Panel Access
Interface Defaults" on page 2326		Interface" group Does not preset the RF Source	Defaults User Interface tabs
"Restore Power On Defaults" on page 2335	<code>:SYSTem:DEFault PON</code>	Affects all variables in the "Power On" group Presets the RF Source	System > Restore Defaults Power On tabs
"Restore Alignment Defaults" on page 2412	<code>:SYSTem:DEFault ALIGn</code>	Affects all variables in the "Alignments" group Presets the RF Source	System > Restore Defaults Alignments tabs
"Restore Defaults" on page 2341 (Misc)	<code>:SYSTem:DEFault MISC</code>	Affects various variables not reset by other commands Presets the RF Source	System > Restore Defaults
"Restore Defaults" on page 2341 (All)	<code>:SYSTem:DEFault [ALL]</code> <code>:SYSTem:PRESet:PERSistent</code>	Affects all variables Presets the RF Source	System > Restore Defaults

## 5.1 Preset Dropdown

The Preset dropdown contains the following controls. In the image below, click a control for details of that control.

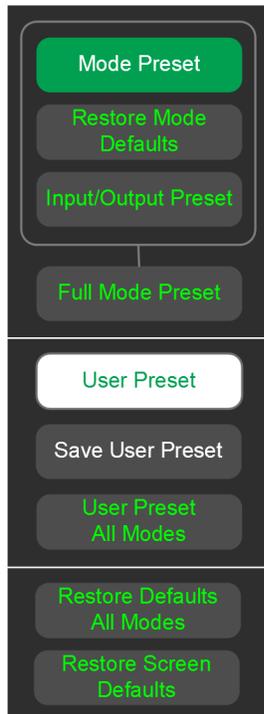

## 5.2 Mode Preset

Returns the current Mode to a known state. **Mode Preset** only presets the current Screen; it does not affect any other Screens.

**Mode Preset** also presets the RF Source. In this sense, it is equivalent to pressing **Source Preset** on the **Input/Output, RF Source** menu panel.

**Mode Preset** can be executed from the "**Preset Dropdown**" on page 2449, or by pressing the **Mode Preset** front panel key:



It does the following for the currently active Mode:

- Aborts the currently running measurement
- Switches to the default measurement and displays the default menu for that measurement
- Sets most parameters for the Mode and all its Measurements to a preset state
- Clears the input and output buffers
- Sets Status Byte to 0

**Mode Preset** does *not* cause a Mode switch, nor affect any **Input/Output** or **System** settings (those set in the **System Settings** dialog).

Furthermore, some Mode settings are unaffected by **Mode Preset** (for example, Noise Floor Extensions, Limit Line data, reference marker numbers, etc.) These are only reset by "**Restore Mode Defaults**" on page 2452. In each parameter's definition table there is a note that indicates whether it is reset by **Mode Preset** or by **Restore Mode Defaults**.

See "**Preset**" on page 2446 for more details.

Remote Command	:SYSTem:PRESet
Example	:SYST:PRES
Notes	*RST is preferred over :SYST:PRES for remote operation. *RST performs <b>Mode Preset</b> , as done by the :SYST:PRES command, and sets the measurement mode to <b>Single</b> measurement rather than <b>Continuous</b> , for optimal remote control throughput See also " <b>*RST - Reset</b> " on page 2992
Status Bits/OPC dependencies	Clears all pending OPC bits. The Status Byte is set to 0

## 5 Preset

### 5.2 Mode Preset

---

#### Backwards Compatibility Notes

In X-Series, the legacy “Factory Preset” has been replaced by **Mode Preset**, which only presets the currently active Mode, not the entire instrument. In X-Series, you preset the entire instrument by using **System, Restore System Defaults All**, which behaves essentially the same way as restore System Defaults did in ESA and PSA

There is also no “Preset Type” as there was in PSA. The green **Mode Preset** front-panel key does a Mode Preset, and the **User Preset** front-panel key does a User Preset. The old **PRESet:TYPE** command is ignored (without generating an error), and **SYST:PRES** without a parameter does **Mode Preset**

The settings and correction data under the **Input/Output** front-panel key (examples: Input Z Corr, Ext Amp Gain, etc.) are no longer part of any Mode, so they are not preset by **Mode Preset**. They are preset by **Restore Input/Output Defaults, Restore System Defaults All**. Note that because “**User Preset**” on [page 2455](#) performs Recall State, and all these settings are saved in State, they *are* recalled when using **User Preset**

## 5.3 Restore Mode Defaults

Most settings within a Mode are affected by "[Mode Preset](#)" on page 2450, but some Mode settings are unaffected (for example, Noise Floor Extensions, Limit Line data, reference marker numbers, etc.) **Restore Mode Defaults** resets all these additional settings, as well as all the **Mode Preset** settings, *except* the RF Source.

In each parameter's definition table, there is a note that indicates whether that parameter is reset by **Mode Preset** or by **Restore Mode Defaults**.

Note that a Recall State affects all a Mode's settings, both the **Mode Preset** settings and the ones additionally affected by **Restore Mode Defaults**.

**Restore Mode Defaults** can be executed from the "[Preset Dropdown](#)" on page 2449.

When **Restore Mode Defaults** is selected, a message appears saying

*This will reset all of the current Mode's variables to their default state.  
This action cannot be undone. Do you want to proceed?*

The message provides **OK** and **Cancel** buttons, to let you confirm or cancel the reset operation.

Remote Command	<code>:INSTRUMENT:DEFAULT</code>
Example	<code>:INST:DEF</code>
Notes	Clears all pending OPC bits. The Status Byte is set to 0
Couplings	Causes the currently running measurement to be aborted, and causes the default measurement to be active. Sets the Mode to a consistent state, with all default couplings set

## 5.4 Input/Output Preset

Resets the group of settings and data associated with the **Input/Output** front-panel key to their default values. These settings are not affected by "**Mode Preset**" on page 2450, because they are generally associated with connections to the instrument, which generally should remain unaltered.

All the variables set under the **Input/Output** front panel key are reset by **Input/Output Preset**, including Amplitude Corrections and Data (described in the **Corrections** section), with the exception of **RF Source** settings, which are unaffected.

By using **Input/Output Preset** and "**Restore Mode Defaults**" on page 2452, a full preset of the current Mode can be performed, with the caveat that, since **Input/Output Preset** is a global function, it affects *all* Modes.

**Input/Output Preset** can be executed from the **Input/Output** menu, from the "**Preset Dropdown**" on page 2449, or from the **Restore Defaults** menu under the **System** key.

When **Input/Output Preset** is selected, a message appears saying:

"This will reset all of the Input/Output variables to their default state, including which input is selected, all Amplitude Correction settings and data, all External Mixing settings, all Frequency Reference settings and all Output settings.

It will not affect Alignment data or settings.

It will not affect RF Source settings.

This action cannot be undone. Do you want to proceed?"

The message provides **OK** and **Cancel** buttons, to let you confirm or cancel the operation.

---

Example

```
:SYST:DEF INP
```

Presets all **Input/Output** variables to their factory default values

## 5.5 Full Mode Preset

Same as performing "Mode Preset" on page 2450, "Restore Mode Defaults" on page 2452, and "Input/Output Preset" on page 2453. Essentially a factory preset of the current Mode.

When **Full Mode Preset** is selected, a message appears saying:

This will reset all of the current Mode's variables and all of the Input/Output variables to their default state, including Input and Output selection and settings, Amplitude Correction, Frequency Reference and RF Source settings.

It will not affect Alignment data or settings.

This action cannot be undone. Do you want to proceed?

The message provides **OK** and **Cancel** buttons, to let you confirm or cancel the operation.

Remote Command	:SYSTem:PRESet:FULL
Example	:SYST:PRES:FULL
Status Bits/OPC dependencies	Clears all pending OPC bits. The Status Byte is set to 0

## 5.6 User Preset

Recalls a state previously saved using ["Save User Preset" on page 2457](#). You can save a **User Preset** state for each Mode, allowing you to define your own favorite state for each Mode and recall it at the touch of a single button.

**User Preset** can be executed by pressing the **User Preset** front panel key, or from the ["Preset Dropdown" on page 2449](#).



Because **User Preset** is actually a Recall State, rather than a predefined Preset, it works a little differently from ["Mode Preset" on page 2450](#), in that it affects all the variables that normally only reset on ["Restore Mode Defaults" on page 2452](#), and it affects the **Input/Output** variables, because both of these are included in State files.

A default **User Preset** file is provided for each Mode, which simply matches the current Mode's state after **Restore Mode Defaults** and ["Input/Output Preset" on page 2453](#) has been performed.

**NOTE**

In products that run multiple instances of the X-Series Application, all instances use the same location to save User Preset state. So, saving User Preset of one instance will overwrite the Save User Preset of another instance.

Remote Command	<code>:SYSTem:PRESet:USER</code>
Example	Save the User Preset: <code>:SYST:PRES:USER:SAVE</code>  Recall the User Preset: <code>:SYST:PRES:USER</code>
Notes	<code>:SYST:PRES:USER:SAVE</code> is used to save the current state as the user preset state  If loading a User Preset file from a different instrument, some settings may be limited and/or coupled differently, since the capabilities of the mode may have changed from when the User Preset file was saved
Status Bits/OPC dependencies	Clears all pending OPC bits. The Status Byte is set to 0
Backwards Compatibility Notes	In X-Series A-models, the <b>User Preset</b> key opened a menu that let you select from User Preset, Save User Preset, or User Preset All Modes. In B-models, the <b>User Preset</b> key immediately performs a <b>User Preset</b> , and the menu items are found under the <b>Preset</b> dropdown  <b>User Preset</b> actually loads a state, and in legacy analyzers, it was possible to load a state without affecting the trace data, limit lines or correction data. Similarly, it was possible to do a User Preset without affecting the trace data, limit lines or correction data

---

In X-Series, “state” always includes all of this data; so whenever state is loaded, or **User Preset** is executed, all the traces, limit lines and corrections are affected

In ESA and PSA, **User Preset** affected the entire instrument’s state. In X-Series, **User Preset** only recalls the state for the active Mode. There is a User Preset file for each Mode. **User Preset** can never cause a Mode switch as it could in legacy analyzers. If you want to recall all Modes to their user preset file state, perform User Preset *after* switching into each Mode

**User Preset** recalls Mode state, which can now include data, such as traces, whereas in ESA and PSA, User Preset did not affect data

## 5.7 Save User Preset

Saves the state of the currently active Mode in a unique location, for recall by the key "**User Preset**" on page 2455. Each Mode has one such location, so, for each Mode, one User Preset can be defined.

**Save User Preset** can be executed from the "**Preset Dropdown**" on page 2449.

All the Mode variables are saved, including those reset by "**Mode Preset**" on page 2450, those only reset by "**Restore Mode Defaults**" on page 2452, and all **Input/Output** variables, so when you subsequently press **User Preset**, the instrument returns to the exact same setup that existed when you pressed **Save User Preset**. Thus, **User Preset** has wider scope than **Mode Preset**.

---

Remote Command	<code>:SYSTem:PRESet:USER:SAVE</code>
Example	<code>:SYST:PRES:USER:SAVE</code>
Notes	<code>:SYST:PRES:SAVE</code> creates the same file as if you requested <code>*SAV</code> or <code>:MMEM:STOR:STAT</code> , except that <b>Save User Preset</b> does not allow you to specify the file name or location

---

## 5.8 User Preset All Modes

Recalls all the User Preset files for each Mode, switches to the Power-on Mode, and activates the saved measurement from the Power-on Mode **User Preset** file.

**User Preset All Modes** can be executed from the "[Preset Dropdown](#)" on page 2449

See also "[User Preset](#)" on page 2455.

Remote Command	<code>:SYSTem:PRESet:USER:ALL</code>
Example	<code>:SYST:PRES:USER:SAVE</code> <code>:SYST:PRES:USER:ALL</code>
Notes	<code>:SYST:PRES:USER:SAVE</code> is used to save the current state as the user preset state
Status Bits/OPC dependencies	Clears all pending OPC bits. The Status Byte is set to 0

## 5.9 Restore Defaults All Modes

Resets all Modes in the current Screen back to their default states, just as **Restore Mode Defaults** does, switches the current Screen to the Power-on Mode, and causes the default measurement for the **Power On Mode** to be active in the current Screen. Only the current Screen is affected.

**Restore Defaults All Modes** can be executed from the "Preset Dropdown" on page 2449.

When **Restore Defaults All Modes** is selected, a message appears saying:

*This will reset all of the variables for all of the Modes in the current Screen to their default state. This action cannot be undone. Do you want to proceed?*

The message provides **OK** and **Cancel** buttons.

---

Example	<code>:SYST:DEF MOD</code>
Couplings	Causes the currently running measurement to be aborted, a switch to the Power-on Mode, and activates the default measurement for the Power-on Mode

---

## 5.10 User Preset All Screens

Recalls a screen configuration previously saved using "[Save User Preset All Screens](#)" on page 2461. The complete configuration of all Screens is loaded, including the state of each Screen.

Because **User Preset All Screens** performs a Recall State as part of its function, it affects all variables that are normally only reset by "[Restore Mode Defaults](#)" on page 2452, and affects **Input/Output** variables, because both are included in State files.

Note that recalling a screen configuration in this manner wipes out your current screen configuration, and all states of all Screens.

---

Notes	<p>"<a href="#">Save User Preset All Screens</a>" on page 2461 is used to save the current screen configuration as the "user preset all screens" configuration</p> <p>If loading a <b>User Preset All Screens</b> file from a different instrument, some settings may be limited and/or coupled differently, since the capabilities of the Mode may have changed from when the <b>User Preset All Screens</b> file was saved</p>
Status Bits/OPC dependencies	<p>Clears all pending OPC bits</p> <p>The Status Byte is set to 0</p>

---

## 5.11 Save User Preset All Screens

Saves the current Screen Configuration in a unique location, for recall by "[User Preset All Screens](#)" on page 2460.

**Save User Preset All Screens** can be executed from the "[Preset Dropdown](#)" on page 2449.

Besides the screen configuration, *all* Mode variables of all Screens are saved, including those reset by "[Mode Preset](#)" on page 2450, and those only reset by "[Restore Mode Defaults](#)" on page 2452, as well as all **Input/Output** variables, so when you subsequently press **User Preset All Screens**, the instrument returns to the exact Screen setup that existed when you pressed **Save User Preset All Screens**.

---

Notes

Creates the same file as if you requested **Screen Config + State** save, except that **Save User Preset All Screens** does not allow you to specify the file name or location

## 5.12 Restore Screen Defaults

Resets the Screen configuration to the factory default; deleting all screens, all screen names, all screen states, and setting "Multiscreen" on page 193 to Off. A single screen will remain, set to the Power-on Mode, in a preset state with the default screen name.

**Restore Screen Defaults** can be executed from the "Preset Dropdown" on page 2449.

When **Restore Screen Defaults** is selected, a message appears saying:

This function will delete all defined screens and their settings. This action cannot be undone.

Do you want to proceed?

The message provides **OK** and **Cancel** buttons.

---

Example      `:SYST:DEF SCReen`

## 5.13 Preset Type (Remote Command Only)

Remote Command	<code>:SYSTem:PRESet:TYPE FACTory   MODE   USER</code> <code>:SYSTem:PRESet:TYPE?</code>
Example	<code>:SYST:PRES:TYPE FACT</code>
Notes	Supported for backwards compatibility only. It is a no-op, which does not change the behavior of any preset operation
Preset	Unaffected by Preset, but set to <b>MODE</b> by <b>Restore System Defaults-&gt;All</b>
State Saved	No

## 5.14 Restart Instrument (Shutdown)

Shuts down the instrument, then reboots it.

---

Remote Command    :SYSTem:PUP

---

Example            :SYST:PUP

## 5.15 Restart Application (Application Shutdown)

Restarts the instrument application without rebooting the instrument. Before you send this command, make sure you have saved any trace or measurement data that you want to preserve.

---

Remote Command	<code>:SYSTem:PUP:PROcess</code>
Example	<code>:SYST:PUP:PROC</code> After sending this command, you must wait for the instrument software to restart
Notes	You cannot use <code>*WAI</code> or <code>*OPC?</code> to synchronize operation after a restart. This command stops and restarts the instrument application, so the SCPI operation is terminated and restarted A remote program must wait a fixed time before resuming sending commands to the instrument. The appropriate wait time depends on which applications are pre-loaded

## 5.16 System Log Off (Remote Command Only)

Provides a means to terminate all open Windows applications, and log off the current user. This is equivalent to performing the Windows command:

```
shutdown -l -f -t0
```

---

Remote Command	:SYSTem:LOFF
Example	:SYST:LOFF
Notes	Initiates an immediate log off of the current user. Exits the instrument application, so any unsaved measurement results will be lost. You cannot use <b>*WAI</b> or <b>*OPC?</b> to synchronize operation. In addition to the instrument application, all other Windows programs will be terminated, without the opportunity to save any work in progress. To perform a subsequent login, and regain instrument operation, human intervention will be required

---

## 5.17 Power Standby (Instrument Shutdown)

Pressing the power switch powers down the instrument. You are warned that shutting down will cause the application to lose unsaved data, and the instrument lets you respond to this warning before shutting down.

The command below has the same effect, except that you can specify Normal mode (**NORMa1**) or Forced mode(**FORCe**):

- In **NORMa1** mode, the system waits until you respond to the warning prompt
- In **FORCe** mode, the system shuts down after 20 seconds, and all data will be lost

If the instrument is not properly shut down prior to removal of line power, the system will validate the Journaling File System and the Power-On Last State (if the instrument is in Power-On Last State) during the following power-on. If a problem is detected, a message appears indicating that the system 'recovered' from an inappropriate shutdown. This is only an issue if **Power-On Type** is Last State. If the Last State is not valid, the instrument will power up in the last active Mode, but will perform "**Mode Preset**" on page 2450.

---

Remote Command	:SYSTem:PDOWn [NORMa1   FORCe]
Example	:SYST:PDOW Executes a normal shutdown
Notes	If no parameter is sent, <b>NORMa1</b> is assumed

---

## 6 Input/Output

Accesses menus that let you control the Input/Output parameters of the instrument. In general, these are functions associated with external connections to the instrument, either to the inputs or the outputs.

Input/output connections tend to be based on situation-specific hardware set up. For that reason, input/output settings do *not*, in general, change when you perform a Mode Preset. You can revert to the default values in one of three ways:

- Use **Restore Input/Output Defaults**, in the **Input/Output** menu
- Use **System->Restore System Defaults->Input/Output Settings**
- Use **System -> Restore System Defaults->All**

The settings survive a Preset and a Power cycle.

A few Input/Output settings *do* respond to Mode Preset. For example, if the Calibrator is on, **Preset** turns it off, and if DC coupling is in effect, **Preset** switches it to AC. These exceptions are noted in the SCPI tables for the excepted functions.

Input/Output features are common across multiple Modes and Measurements. In general, they do not change when you change Mode or Measurement, although some controls appear only in certain measurements.

## 6.1 RF Source

Lets you control and configure the internal RF Source. This tab only appears in models that support a built-in independent RF Source, which include E7760B, and modular products such as EXM and VXT.

External Source Control and built-in Tracking Sources are controlled using the **Source** tab in **Meas Setup**.

---

Dependencies	Only appears in models that support a built-in independent RF Source, such as E7760B, EXM and VXT
--------------	---

### 6.1.1 RF Output

Sets the source RF power output state.

---

Remote Command	<code>:OUTPut[:EXTernal][:STATe] ON   OFF   1   0</code> <code>:OUTPut[:EXTernal][:STATe]?</code>
Example	<code>:OUTP OFF</code> <code>:OUTP?</code>
Notes	This setting is for the independent mode and has no effect on the " <a href="#">List Sequencer</a> " on page 2479. If <b>Sequencer</b> is <b>ON</b> , the List Sequencer controls the source output, and this key is grayed-out When <b>Sequencer</b> is <b>OFF</b> , makes source leave List Sequencer and this setting is blanked out, taking effect immediately
Dependencies	For E7760B, the RF Output cannot be set to <b>ON</b> if the RF Output port is set to <b>NONE</b> . If you attempt to set RF Output to <b>ON</b> in this situation, the error message -221, "Settings conflict; Source Output is not available while Output Port is None" is displayed <code>:OUTPut:EXTernal[:STATe]</code> is supported only when Option ESC is installed. Otherwise, only <code>:OUTPut[:STATe]</code> is supported
Preset	<b>OFF</b>
Range	<b>ON OFF</b>

### 6.1.2 RF Output Port

Specifies the RF Output Port used by the internal source.

Switching from the RF Output port to one of the RFIO ports changes the transmitter performance of the instrument.

The **NONE** selection is available to allow setting a half-duplex port to an Input, if it was previously assigned as an Output. Set the Output to **NONE** first, then any port can be assigned as an Input.

When using VXT M9410A/11A/15A/16A with Remote Radio Heads (such as the Keysight M1740A mmWave Transceiver for 5G), the choices in the dropdown menu appear as:

Head h RFHD p

For example, if you have two Radio Heads (numbered 1 and 2), each of which have two RF half-duplex ports, the choices for these ports will appear as below:

Head and Port	Choice in dropdown	SCPI parameter
Head 1, port RF Tx/Rx 1	Head 1 RFHD 1	RRH1RFHD1
Head 1, port RF Tx/Rx 2	Head 1 RFHD 2	RRH1RFHD2
Head 2, port RF Tx/Rx 1	Head 2 RFHD 1	RRH2RFHD1
Head 2, port RF Tx/Rx 2	Head 2 RFHD 2	RRH2RFHD2

When using the E7770A Common Interface Unit, outputs may come from the DUT IF OUT ports on the rear of the CIU or the half-duplex ports on the front of the CIU labeled DUT IF In/Out. You would select GUI parameter IF Out n or SCPI parameter IFOutn for the DUT IF OUT ports or GUI parameter IFHD n or SCPI parameter IFHDn for the DUT IF In/Out ports. See ["RF Input Port" on page 2583](#) "Parameters for VXT M9410A/11A/15A/16A and EXM when used with Radio Heads/CIU" for more details.

---

Remote Command `[ :SENSe]:FEED:RF:PORT:OUTPut RFOut | RFIO1 | RFIO2 | RFIO3 | RFIO4 | RFHD | RFFD | A1 | A2 | A3 | B1 | B2 | B3 | IFIO1 | IFIO2 | GEN | TR | RRHhRFHDp | IFOutn | IFHDn | NONE`

For details of each option, see ["Port Options" on page 2471](#)

`[ :SENSe]:FEED:RF:PORT:OUTPut?`

---

Example

Set output to RF Output:

`:FEED:RF:PORT:OUTP RFO`

Set output to Radio Head 1, RF Tx/Rx Port 2:

`:FEED:RF:PORT:OUTP RRH1RFHD2`

---

Dependencies

Only appears in models that support multiple output ports. If the SCPI command is sent with unsupported parameters in any other model, an error is generated, -221, "Settings conflict; option not installed"

**RFHD** and **RFFD** are only available on VXT. Option HDX is required to enable RFHD port. Option FDX is required to enable RFFD port

For E7760B: Ports IFIO1 and IFIO2 are available if Option RF2 is installed. Ports A1, A2, A3, B1, B2, B3 are available if Option RF3 is installed. Attempting to select a port for which the option is not present generates the error, -241, "Hardware missing; Output not available"

A port cannot be selected as an Output while it is occupied as an Input. If the SCPI command is sent while the port is occupied, an error is generated, -221, "Settings conflict; Output Port is not available while occupied by Input"

Additionally, the mmWave ports are divided into two banks: the A Bank and the B Bank. A port cannot be selected as an Output if any port on the *same* bank is occupied as an Input. If the SCPI command is sent for this situation, an error is generated, -221 "Settings conflict; Output Port is not available while

6 Input/Output  
6.1 RF Source

---

	<p>port bank is occupied by Input”</p> <p>Lastly, if RF3 is present, and RF4 is absent, a mmWave port cannot be selected as an Output if the Input Port is occupied by wwWave Transceiver with a different frequency range. If the SCPI command is sent for this situation an error is generated, -221 “Settings conflict; Output Port is not available while occupied by Input of incompatible frequency”</p> <p>Ports <b>GEN</b> and <b>TR</b> are only available in modular analyzers, and only when the M9470A module is installed, such as in M8920A. Option HDX is required to enable the T/R port</p> <p>When any output is selected in a measurement that does not support it, the "No result; Meas invalid with this output" error condition occurs, and the measurement returns invalid data when queried</p>
Preset	Unaffected by <b>Mode Preset</b> , but set to default by <b>Source Preset</b> or <b>Restore System Defaults -&gt; All</b>
State Saved	Saved in State
Backwards Compatibility SCPI	<p><b>:FEED:RF:PORT:OUTPut IFIO1</b></p> <p><b>IFIO1</b> is treated as <b>IF01</b> and sets the IF output to be the port labeled <b>DUT IF Out</b> on the CIU rear panel. This is for compatibility with earlier implementations on EXM and VXT when using the E7770A Common Interface Unit</p>

### Port Options

Value	Notes
RF Output <b>RFOut</b>	<p>On EXM with hardware M9430A, if RF Output is selected as RF Output Port, use the settings in the <b>Half Duplex Config</b> menu to determine which port (<b>RFIO3</b> or <b>RFIO4</b>) will be used</p> <p>On EXM with hardware M9431A, this setting is not supported. If the SCPI command is sent with this setting, an error is generated, -221, “Settings conflict; option not installed”</p>
<b>RFHD</b>	<p>RFHD port is exclusive for RF Input and RF Output. If HD Port is chosen as RF Input port, pressing this key, or sending SCPI to set it, generates error message: “-221, Settings conflict; RFHD is being used as RF Input Port”</p> <p>Option HDX is required to enable RFHD port</p>
<b>RFFD</b>	Option FDX is required to enable RFFD port
<b>GEN</b>	Selects the Gen port on M8920A/20B
T/R <b>TR</b>	Selects the T/R port on M8920A/20B
<b>RRHhRFHDp</b>	<p>Used to select a port on a Radio Head (such as the Keysight M1740A mmWave Transceiver) as an output</p> <p><b>RRHhRFHDp</b> corresponds to <b>Head h</b>, port <b>RF Tx/Rx p</b>. For example, <b>RRH1RFHD2</b> = the port labeled <b>RF Tx/Rx 2</b> on <b>Head 1</b></p>

### 6.1.3 Half Duplex Output Port

Specifies whether **RFIO3** or **RFIO4** is the Half Duplex Output port.

---

Remote Command	<b>[ :SENSE ]:HDUPlex:PORT:OUTPut RFIO3   RFIO4</b>
----------------	---

Example	<code>:HDUPlex:PORT:OUTPut RFI03</code> <code>:HDUPlex:PORT:OUTPut?</code>
Dependencies	Only appears in EXM If <b>RFI03</b> is selected as “Half Duplex Input Port”, then “Half Duplex Output Port” will be set to <b>RFI04</b> automatically If <b>RFI04</b> is selected as “Half Duplex Input Port”, then “Half Duplex Output Port” will be set to <b>RFI03</b> automatically
Preset	<b>RFI04</b>
State Saved	Saved in State

## 6.1.4 RF Power

Lets you control the amplitude of the Source output. Same as "RF Power" on page 2472 in **Amplitude Setup**.

Example	<code>:SOUR:POW -100 dBm</code>
---------	---------------------------------

## 6.1.5 T/R Port High Power Attenuator

Controls whether additional attenuation is added at the T/R Port. The T/R port has two output paths, one that provides a 16 dB attenuator, another that bypasses this attenuator. When this control is **ON**, the path includes the 16 dB attenuator, so the maximum output level for this path is 0 dBm. When this control is **OFF**, the 16 dB attenuator is bypassed, so the maximum output level for this path is +5 dBm.

Example	<code>:FEED:RF:PORT:TR:HPOW:ATT ON</code>
---------	---

## 6.1.6 Amplitude Setup

Lets you access the **Amplitude Setup** panel.

Notes	This menu under this control is for independent mode, and has no effect on "List Sequencer" on page 2479. If "Sequencer" on page 2480 is <b>ON</b> , the List Sequencer controls the source output, and this control is grayed-out on the front panel, to indicate out-of-scope. When you set "Sequencer" on page 2480 to <b>OFF</b> , makes source leave List Sequencer and this control is blanked out
-------	--

### 6.1.6.1 RF Power

Lets you adjust the power level of the source using the numeric keypad, step keys, or RPG. Pressing any digit, 0 through 9 on the numeric keypad displays the unit terminator.

6 Input/Output  
6.1 RF Source

Please refer to the "RF Power Range" on page 2473 table below for the valid ranges.

Remote Command	<code>:SOURce:POWer[:LEVel][:IMMediate][:AMPLitude] &lt;ampl&gt;</code> <code>:SOURce:POWer[:LEVel][:IMMediate][:AMPLitude]?</code>
Example	<code>:SOUR:POW -100 dBm</code>
Notes	<p>Amplitude corrections can be specified for use with the source. In the event of amplitude corrections being applied, the valid ranges for the RF power do not change dependent on the current amplitude correction setting. If the combination of RF power + amplitude correction is higher or lower than the source output range, the Source Unleveled bit is set, and the "Source Unleveled" indicator will appear on status panel to indicate that the source cannot maintain the output power that has been requested</p> <p>When signal generator is unable to maintain the requested output level, the "Source Unleveled" indicator will appear on status panel. When the source output setting is restored to the normal range, the "Source Unleveled" is removed from status panel</p> <p>Internal source has list sequence mode, which comprises of several steps which contain separate output power, frequency and waveform etc. When the source list sequence playing is complete, the last step keeps playing, and user can use this command to change the list sequence last step's output power</p> <p>For EXT, The multiport adapter RFIO TX ports and GPS ports cannot ensure power accuracy when power setting is lower than -130dBm, this power setting value is defined by the sum of RF Power setting and related amplitude correction value. But user settable value could be lower than this limit. When application detected there exists power setting lower than -130dBm on MPA RFIO TX ports, then popup warning message . When application detected there exists power setting lower than -130dBm on MPA GPS ports, then popup warning message . This is only warning message, and check is performed when RF is <b>ON</b></p>
Dependencies	The RF power is dependent on the RF output port and frequency, such that the current frequency and selected output port determine the valid range of power values
Couplings	For if AWGN State is <b>ON</b> and ARB State is <b>ON</b> , this setting is adjusted to the value to maintain the AWGN power relationship defined by Power Control Mode and other noise settings
Preset	-100 dBm
Min	The range of values depends on the current frequency and selected RF output port. See "RF Power Range" on page 2473 below for the valid ranges
Max	The range of values depends on the current frequency and selected RF output port. Refer to "RF Power Range" on page 2473 below for the valid ranges

## RF Power Range

RF Output Port	Frequency Range	Min Output Power	Max Output Power
High Power RF Out	10 MHz ≤ f ≤ 6 GHz	-150 dBm	20 dBm
RFIO 1 & RFIO 2	10 MHz ≤ f ≤ 6 GHz	-150 dBm	0 dBm

Note: This is the UI power range, which is larger than the actual specification.

### VXT model M9420A

RF Output Port	Frequency Range	Min Output Power	Max Output Power without Option "1EA"	Max Output Power with Option "1EA"
RF Output	60 MHz $\leq$ f $\leq$ 6 GHz	-150 dBm	10 dBm	25 dBm
RFHD	60 MHz $\leq$ f $\leq$ 6 GHz	-150 dBm	10 dBm	15 dBm
RFFD	60 MHz $\leq$ f $\leq$ 6 GHz	-150 dBm	0 dBm	0 dBm

Note 1: This is the UI power range, which is larger than the actual specification.

Note 2: Max output power with Option 1EA can be set to 25 dBm, but Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when output power set higher than 20 dBm.

### VXT models M9410A/11A

Ports	Option LFE	Frequency Range	Min Output Power	Max Output Power without option "1EA"	Max Output Power with "1EA"
RF Output	With Option LFE	1 MHz $\leq$ f $\leq$ 60 MHz	-150 dBm	5 dBm	5 dBm
		60 MHz $\leq$ f $\leq$ 380MHz	-150 dBm	5 dBm	25 dBm
	Without Option LFE	380 MHz $\leq$ f $\leq$ 6 GHz	-150 dBm	5 dBm	25 dBm
RFHD		1 MHz $\leq$ f $\leq$ 6 GHz	-150 dBm	5 dBm	5 dBm

Note 1: Min Output Power is the UI power range, which is smaller than the actual specification.

Note 2: Max output power with Option 1EA can be set to 25 dBm for RF Output Port, but Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the output power is set higher than 20 dBm.

Note 3: Option LFE provides Low Frequency Extension, which covers frequency from 1 MHz to 380 MHz.

### VXT models M9415A/16A

RF Output Port	Frequency Range	Min Output Power	Max Output Power without Option "1EA"	Max Output Power with Option "1EA"
RF Output	380 MHz ≤ f ≤ 12.3 GHz	-150 dBm	5 dBm	25 dBm
RFHD	380 MHz ≤ f ≤ 12.3 GHz	-150 dBm	5 dBm	18 dBm

**Note 1:** For RF output port, the Max output power with Option 1EA can be set to 25 dBm for RF Output Port, but Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the output power is set higher than 20 dBm.

**Note 2:** For RFHD port, the Max output power with Option 1EA can be set to 18 dBm for RF Output Port, but Meas Uncal (measurement uncalibrated) warning is given in the Status Bar in the lower right corner of the screen when the output power is set higher than 15 dBm.

### M9410E/11E/15E/16E

Ports	Option LFE	Frequency Range	Min Output Power	Max Output Power
RF Output	With Option LFE	1 MHz ≤ f ≤ 380 MHz	-150 dBm	13 dBm
		380 MHz ≤ f ≤ 25.9 GHz	-150 dBm	25 dBm
	Without Option LFE	380 MHz ≤ f ≤ 25.9 GHz	-150 dBm	25 dBm
RFHD		1 MHz ≤ f ≤ 25.9 GHz	-150 dBm	5 dBm

### VXT Models with Remote Radio Heads/CIU

RRH	Port	Frequency Range	Min Output Power	Max Output Power
M1742A	Head h RFHD p	10 GHz ≤ f ≤ 32 GHz	-150 dBm	10 dBm

## M8920A/20B

RF Output Port	Frequency Range	Min Output Power	Max Output Power
Gen	100 kHz ≤ f ≤ 6 GHz	-150 dBm	without option 1EA: 3 dBm with option 1EA: 15 dBm
T/R	100 kHz ≤ f ≤ 6 GHz	-150 dBm	T/R port high power attenuator On: -15 dBm T/R port high power attenuator Off: 3 dBm

Note: This is the UI power range, which is larger than the actual specification.

### 6.1.6.2 Set Reference Power

Turns the power reference state to **ON**, sets the reference power value to the current RF output power, maintains this power at the RF output, and sets the displayed power to 0.00 dB. All subsequent RF power values entered under **Source**, **Amplitude**, **RF Power** are interpreted as being relative to this reference power.

When you use a power reference, the signal generator outputs an RF power that is set relative to the reference power by the value entered under **Source**, **Amplitude**, **RF Power** as follows:

Output power = reference power – entered power

Where:

- reference power equals the original RF Power entered under **Source>Amplitude>RF Power** and set as the reference power
- entered power equals a new value entered under **Source>Amplitude>Amptd Offset**

In addition, the displayed power value is the same as a new value entered under **Source**, **Amplitude**, **RF Power**.

#### NOTE

If Power Ref is **ON** with a reference value set, entering a value under **Source**, **Amplitude**, **RF Power** and pressing **Set Reference Power** adds that value to the existing Power Ref value.

If you wish to change the reference power value to a new value entered under **Source**, **Amplitude**, **RF Power**, first set Power Ref to **OFF**, then press **Set Reference Power**.

---

Dependencies      Unavailable, and grayed-out, when "List Sequencer" on page 2479 is **ON**

### 6.1.6.3 Power Ref

Lets you toggle the state of the power reference. When you use a power reference, the signal generator outputs an RF power that is set relative to the reference power by the value entered under **Source>Amplitude>RF Power** as follows:

Output power = reference power + entered power

Where:

- reference power equals the original RF Power entered under **Source>Amplitude>RF Power** and set as the reference power
- entered power equals a new value entered under **Source>Amplitude>Amptd Offset**

For more information on Reference Frequency, see "[Set Reference Power](#)" on page 2476.

Remote Command	<code>:SOURce:POWer:REFerence &lt;ampl&gt;</code> <code>:SOURce:POWer:REFerence?</code>
Example	<code>:SOUR:POW:REF 0.00 dBm</code>
Dependencies	Unavailable and grayed-out when " <a href="#">List Sequencer</a> " on page 2479 is <b>ON</b>
Couplings	Coupled to " <a href="#">Set Reference Power</a> " on page 2476, such that pressing <b>Set Reference Power</b> updates the reference power with the current output power
Preset	0.00 dBm
Min	-125.00 dBm
Max	10.00 dBm
Auto Function	

Remote Command	<code>:SOURce:POWer:REFerence:STATe OFF   ON   0   1</code> <code>:SOURce:POWer:REFerence:STATe?</code>
Example	<code>:SOUR:POW:REF:STATe ON</code>
Preset	OFF

### 6.1.6.4 Power Unit

Modifies the units for RF Power and Power Ref. The change is immediate and does not force a restart.

Remote Command	<code>:SOURce:POWer[:LEVel][:IMMEDIATE][:AMPLitude]:UNIT DBM   W   V   DBUV</code> <code>:SOURce:POWer[:LEVel][:IMMEDIATE][:AMPLitude]:UNIT?</code>
Example	Set the RF Power units to volts:

---

	<code>:SOUR:POW:UNIT V</code>
Couplings	RF Power and Power Ref units are modified by Power Unit
Preset	dBm
State Saved	Saved in Instrument State

---

### 6.1.6.5 Amptd Offset

Lets you specify the RF output power offset value.

When the amplitude offset is set to zero (0) and you set a new offset value (positive or negative), the displayed amplitude value changes as follows, and the RF output power does not change:

Displayed value = output power + offset value

Where:

- output power equals the original RF Power entered under **Source, Amplitude, RF Power**
- offset value equals the value entered under **Source, Amplitude, Amptd Offset**

When the amplitude offset is set to a value other than zero (0) and you enter a new RF power value under **Source, Amplitude, RF Power**, the displayed power will be the same as the value entered and the RF output power will be equal to the value entered minus the offset value as follows:

Output power = entered power – offset power

Displayed Power = output power + offset power

Displayed power = entered power

Where:

- entered power equals the amplitude entered under **Source, Amplitude, RF Power**
- offset power equals the value previously entered and set under **Source, Amplitude, Amptd Offset**

---

Remote Command	<code>:SOURce:POWer[:LEVel][:IMMEDIATE]:OFFSet &lt;rel_amp1&gt;</code> <code>:SOURce:POWer[:LEVel][:IMMEDIATE]:OFFSet?</code>
Example	<code>:SOUR:POW:OFFS 0.00 dB</code>
Notes	The amplitude Offset unit follows the units set in Power Unit
Dependencies	Unavailable, and grayed-out, when List Sequencer is <b>ON</b>
Preset	0.00 dB

---

## 6 Input/Output

### 6.1 RF Source

---

Min	-200.00 dB
Max	200.00 dB

---

#### 6.1.6.6 Amplitude Increment

Changes the step size for the RF Power function. Once an increment size has been selected and the RF Amplitude function is active, the step keys (and the **UP | DOWN** parameters for RF Power from remote commands) change the RF Power by the set value. This feature exists in EXG and MXG.

---

Remote Command	<code>:SOURce:POWer:STEP[:INCRement] &lt;amp1&gt;</code> <code>:SOURce:POWer:STEP[:INCRement]?</code>
Example	<code>:SOUR:POW:STEP 1</code>
Notes	The Amplitude Increment unit follows the units set in Power Unit
Couplings	Coupled to the Step size of the RF Power function
Preset	1 dB
Min	0.1 dB
Max	10 dB

---

#### 6.1.7 Frequency

Lets you control the frequency of the Source. Same as "[Frequency](#)" on page 2504 under "[Frequency Setup](#)" on page 2504.

---

Example	<code>:SOUR:FREQ 1.00 GHz</code>
---------	----------------------------------

---

#### 6.1.8 List Sequencer

Accesses sub-menus for configuring the **List Sequencer**.

List sequences allow you to enter frequencies and amplitudes at unequal intervals in nonlinear ascending, descending or random order. Each step within the list can also include its own waveform file for playback, step duration, trigger event and trigger output.

The complexities involved in configuring the **List Sequencer** do not lend themselves to manual configuration; hence the manual configuration for this feature is limited. For easier configuration of the List Sequencer, it is recommended that you use either SCPI, or load a tab-delimited file containing the setup parameters in a tabular form. The details of the SCPI for configuring the List Sequencer can be found in "[Step Configuration \(Remote Command Only\)](#)" on page 2495.

Once the **List Sequencer** has been configured using the front panel, SCPI, or by loading a tab-delimited file, the sequence must be initiated using the front panel **Initiate Sequence** key, or the corresponding SCPI command.

Dependencies	Not available in E7760B
--------------	-------------------------

### 6.1.8.1 Sequencer

Sets the state of "[List Sequencer](#)" on page 2479

- When **List Sequencer** is **ON**, the source outputs the sequence defined by the sequencer
- When **List Sequencer** is **OFF**, the source outputs a single waveform segment or sequence (independent mode) at a single frequency and amplitude

Remote Command	<code>:SOURce:LIST[:STATe] ON   OFF   1   0</code> <code>:SOURce:LIST[:STATe]?</code>
----------------	--

Example	<code>:SOUR:LIST OFF</code>
---------	-----------------------------

Notes	When the sequencer is <b>ON</b> , the List Sequencer controls the output of the source
-------	--

Dependencies	Not available in E7760B
--------------	-------------------------

Couplings	When in Sequence Analyzer Mode, and the List Sequencer state is <b>OFF</b> , <b>Include Source</b> is forced to <b>NO</b> , and the <b>Include Source</b> key is grayed-out When in Sequence Analyzer Mode, and the List Sequencer state is <b>ON</b> , <b>Include Source</b> is available to set, and an ARB memory related operation such as load or delete will be rejected
-----------	---

Preset	<b>OFF</b>
--------	------------

Range	<b>ON</b>   <b>OFF</b>
-------	------------------------

### 6.1.8.2 Initiate Sequence

Arms the sequence for single execution. Once the sequence is armed, the source begins the sequence as soon as the trigger is received. If trigger is set to **Free Run**, the sequence starts immediately.

Remote Command	<code>:SOURce:LIST:TRIGger[:IMMediate]</code>
----------------	---

Example	<code>:SOUR:LIST:TRIG</code>
---------	------------------------------

Notes	When in Sequence Analyzer Mode, and <b>Include Source</b> is <b>ON</b> , the Initiate List Sequencer operation is rejected, and the key is grayed-out if the file needed by the sequencer is not already in ARB memory, the sequence cannot be initiated, and an error is generated There is a blocking SCPI query that can be used to check whether source list sequence was initiated successfully (see " <a href="#">Remote Software Trigger (Remote command Only)</a> " on page 2504)
-------	--

Dependencies	In Sequence Analyzer Mode, if <b>Meas Setup</b> , <b>Include Source</b> is set to <b>YES</b> , <b>Source</b> , <b>List Sequencer</b> , <b>Initiate Sequence</b> is disabled Not available in E7760B
--------------	--

### 6.1.8.3 Repetition

Accesses a sub-menu to select the repetition type for the List Sequencer globally. It cannot be changed between different sequence steps.

In **Single**, the Source list plays one time after initiation. In **Continuous**, the Source list plays continuously after initiation.

This setting is available on EXM.

Remote Command	<code>:SOURce:LIST:REPetition:TYPE SINGle   CONTInuous</code>
Example	<code>:SOUR:LIST:REP:TYPE SING</code> <code>:SOUR:LIST:REP:TYPE?</code>
Dependencies	Available on EXM Not available in E7760B
Preset	<code>SINGle</code>
Range	<code>SINGle   CONTInuous</code>

### 6.1.8.4 Trig Out Type

Accesses a sub-menu to select the output trigger type for the List Sequencer globally. It cannot be changed between different sequence steps. It sets the output trigger type for the whole source sequence.

Remote Command	<code>:SOURce:LIST:TRIGger:OUTPut:TYPE STEP   MARKer</code> <code>:SOURce:LIST:TRIGger:OUTPut:TYPE?</code>
Notes	<code>STEP</code> = Start of Step <code>MARKer</code> = Data Marker
Dependencies	Available on EXM Not available in E7760B
Preset	<code>STEP</code>
Backwards Compatibility SCPI	<code>:SOURce:LIST:TRIGgerout:TYPe BEGInningofstep   DATAmarker</code>

### 6.1.8.5 Select Data Marker

When "**Trig Out Type**" on page 2481 is set to Data **MARKer**, specifies which marker to route.

Remote Command	<code>:SOURce:LIST:TRIGger:OUTPut:TYPE:MARKer M1   ...   M4</code> <code>:SOURce:LIST:TRIGger:OUTPut:TYPE:MARKer?</code>
----------------	---

---

Backwards Compatibility :SOURce:LIST:TRIGgerout:TYPe:Marker  
SCPI

### 6.1.8.6 Manual Trigger Now

Provides a software trigger event to the List Sequencer. During execution of a sequence, if the sequencer is halted on any step that has been configured with a “Manual” step trigger, then this keypress causes the sequencer to continue and execute the step.

---

Notes No remote command, front panel only

### 6.1.8.7 List Sequencer Setup

Accesses the List Sequencer setup menus.

#### Number of Steps

Lets you specify the number of steps within the list sequence.

---

Remote Command :SOURce:LIST:NUMBer:STEPs <integer>  
:SOURce:LIST:NUMBer:STEPs?

---

Example :SOUR:LIST:NUMB:STEP 1

---

Notes Increasing the number of steps creates additional steps at the end of the list, with all the settings within the steps set to their default values  
Decreasing the number of steps removes steps from the end of the list. The settings within the removed steps are not reset. This means that increasing the number of steps again would allow you to retrieve these steps

---

Dependencies The Step Count parameter is increased or decreased when you insert or delete a point from within the GUI interface to the sequencer  
Not available in E7760B

---

Preset 1

---

Min 1

---

Max 1000

#### Go To Step

Lets you select the step number you wish to view or edit.

---

Preset 1

Min	1
Max	Step Count

### Insert Step Before

Inserts a new step, with default values, before the currently selected step. Inserting a step automatically increases the Step Count parameter by 1. If a sequence has already reached the upper limit of 1000 steps, then this operation is rejected, and error -221, "Setting Conflict; Cannot insert more steps, maximum number of steps reached" is displayed.

Notes	If the list already contains the maximum limit (1000 steps), pressing this control has no effect
-------	--

### Delete Step

Deletes the current step. Deleting a step automatically decreases the Step Count parameter by 1. If the sequence only has one step left, then this operation is rejected, and error -221, "Setting conflict; Cannot delete current step, minimum number of steps reached" is displayed

Notes	If the list already contains the minimum limit of 1 step, pressing this control has no effect
-------	---

### Clear List

Clears the list. Clearing the list sets the number of steps to the default value (1) and sets the parameters for the only step to their default values.

### Step Trigger

Lets you select the trigger input for the current step.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:INPut:TRIGger IMMEDIATE   INTERNAL   EXTERNAL2   KEY   BUS   EXTERNAL4</code> For details of options, see " <a href="#">More Information</a> " on page 2484 <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:INPut:TRIGger?</code>
Example	<code>:SOUR:LIST:STEP2:SET:INP:TRIG BUS</code> <code>:SOUR:LIST:STEP2:SET:INP:TRIG?</code>
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B
Preset	<code>IMMEDIATE</code>
Range	<code>IMMEDIATE INTERNAL EXTERNAL2 KEY BUS EXTERNAL4</code>

## More Information

Parameter	SCPI	Notes
Free Run	<a href="#">IMM</a>	Sets the trigger input for the current step to Free Run
Internal	<a href="#">INT</a>	Sets the trigger input for the current step to Internal
Manual (Trigger Key)	<a href="#">KEY</a>	Sets the trigger input for the current step to Manual (Trigger Key). Any step in the sequence set to Manual will cause the sequence execution to stop until the manual trigger key is pressed. Sending the Bus Trigger SCPI command will have no effect. At any point in the sequence where the List Sequencer is paused waiting for a software trigger, a pop-up dialog is displayed until the trigger event occurs
Bus	<a href="#">BUS</a>	Sets the trigger input for the current step to Bus. Any step in the sequence set to Bus will cause the sequence execution to stop until the Bus Trigger command is sent. Pressing the manual trigger key has no effect. At any point in the sequence where the List Sequencer is paused waiting for a software trigger, a pop-up dialog is displayed until the trigger event occurs
External 2	<a href="#">EXT2</a>	Sets the trigger input for the current step to External 2 Note: When on EXM, trigger 2 is a bi-directional trigger port. So, when trigger 2 has been configured as OUTPUT type, choosing External 2 as the input trigger for the current step will generate error

## Transition Time

Lets you specify the transition time for the current step.

The following table lists recommended values for appropriate settling times to allow for changes within the source.

Value Changed	Recommended Transition Time
Frequency	500 $\mu$ s
Amplitude	100 $\mu$ s to within 0.1 dB 20 $\mu$ s to within 1.0 dB

If the Transition Time value is shorter than the time necessary for the hardware to settle and a List Sequence is initiated, a **warning** is generated. If the Transition Time value is longer than the Step Duration, an error is generated when initiating a source list sequence. For source list sequence, transition time is included in the step duration length. If the Transition Time value is longer than the Step Duration Time, the real step duration length is extended to equal the transition time and cause a timing shift.

Remote Command	<a href="#">:SOURce:LIST:STEP[1] 2 ... 1000:SETup:TRANSition:TIME &lt;time&gt;</a> <a href="#">:SOURce:LIST:STEP[1] 2 ... 1000:SETup:TRANSition:TIME?</a>
Example	<a href="#">:SOUR:LIST:STEP2:SET:TRAN:TIME 1ms</a>

6 Input/Output  
6.1 RF Source

	<code>:SOUR:LIST:STEP2:SET:TRAN:TIME?</code>
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B
Preset	1.0 ms
Min	0.0 ms
Max	4.0 ks

## Band

Lets you select the radio band for use in the current step.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:RADio:BAND &lt;band&gt;</code>
	where <b>&lt;band&gt;</b> is one of: NONE   PGSM   EGSM   RGSM   DCS1800   PCS1900   GSM450   GSM480   GSM700   GSM850   TGSM810   USCELL   USPCS   JAPAN   KOREAN   NMT   IMT2K   UPPER   SECOND   PAMR400   PAMR800   IMTEXT   PCS1DOT9G   AWS   US2DOT5G   PUBLIC   LOWER   BANDI   BANDII   BANDIII   BANDIV   BANDV   BANDVI   BANDVII   BANDVIII   BANDIX   BANDX   BANDXI   BANDXII   BANDXIII   BANDXIV   BANDXIX   BAND1   BAND2   BAND3   BAND4   BAND5   BAND6   BAND7   BAND8   BAND9   BAND10   BAND11   BAND12   BAND13   BAND14   BAND17   BAND18   BAND19   BAND20   BAND21   BAND24   BAND25   BAND26   BAND27   BAND28   BAND29   BAND30   BAND31   BAND65   BAND66   BAND67   BAND68   BAND71   BAND252   BAND255   BAND33   BAND34   BAND35   BAND36   BAND37   BAND38   BAND39   BAND40   BAND41   BAND42   BAND43   BAND44   BAND45   BAND46   BANDA   BANDB   BANDC   BANDD   BANDE   BANDF   N1   N2   N3   N5   N7   N8   N12   N20   N25   N28   N34   N38   N39   N40   N41   N50   N51   N66   N70   N71   N74   N75   N76   N77   N78   N79   N80   N81   N82   N83   N84   N86   N257   N258   N260   N261 <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:RADio:BAND?</code>

Example	<code>:SOUR:LIST:STEP2:SET:RAD:BAND PGSM</code> <code>:SOUR:LIST:STEP2:SET:RAD:BAND?</code>
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B

Here are the Radio Standards for each Band, and a SCPI example for each (Step 2 is assumed):

Band	Standard	SCPI Example
None	None	<code>:SOUR:LIST:STEP2:SET:RAD:BAND NONE</code>
P-GSM	GSM/EDGE	<code>:SOUR:LIST:STEP2:SET:RAD:BAND PGSM</code>
E-GSM	GSM/EDGE	<code>:SOUR:LIST:STEP2:SET:RAD:BAND EGSM</code>
R-GSM	GSM/EDGE	<code>:SOUR:LIST:STEP2:SET:RAD:BAND RGSM</code>
DCS 1800	GSM/EDGE	<code>:SOUR:LIST:STEP2:SET:RAD:BAND DCS1800</code>

Band	Standard	SCPI Example
PCS 1900	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND PCS1900
GSM 450	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND GSM450
GSM 480	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND GSM480
GSM 700	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND GSM700
GSM 850	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND GSM850
T-GSM 810	GSM/EDGE	:SOUR:LIST:STEP2:SET:RAD:BAND T-GSM810
US Cell	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND USCELL
US PCS	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PCS
Japan Cell	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND JAPAN
Korean PCS	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND KOREAN
NMT 450	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND NMT
IMT 2000	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND IMT2K
Upper 700	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND UPPER
Secondary 800	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND SECOND
400 Euro PAMR	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PAMR400
800 PAMR	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PAMR800
2.5 GHz IMT EXT	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND IMTEXT
US PCS 1.9 GHz	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PCS1D0T9G
AWS	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND AWS
US 2.5 GHz	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND US2D0T5G
700 Public Safety	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND PUBLIC
C2K Lower 700	CDMA 2000	:SOUR:LIST:STEP2:SET:RAD:BAND LOWER
Band I	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDI
Band II	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDII
Band III	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDIII
Band IV	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDIV
Band V	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDV
Band VI	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDVI
Band VII	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDVII
Band VIII	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDVIII
Band IX	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDIX
Band X	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDX
Band XI	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXI
Band XII	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXII
Band XIII	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXIII
Band XIV	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXIV

6 Input/Output  
6.1 RF Source

Band	Standard	SCPI Example
Band XIX	W-CDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDXIX
Band 1	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND1
Band 2	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND2
Band 3	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND3
Band 4	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND4
Band 5	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND5
Band 6	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND6
Band 7	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND7
Band 8	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND8
Band 9	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND9
Band 10	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND10
Band 11	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND11
Band 12	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND12
Band 13	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND13
Band 14	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND14
Band 17	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND17
Band 18	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND18
Band 19	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND19
Band 20	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND20
Band 21	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND21
Band 24	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND24
Band 25	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND25
Band 26	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND26
Band 27	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND27
Band 28	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND28
Band 29	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND29
Band 30	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND30
Band 31	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND31
Band 65	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND65
Band 66	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND66
Band 67	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND67
Band 68	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND68
Band 71	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND71
Band 252	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND252
Band 255	LTE FDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND255
Band 33	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND33

Band	Standard	SCPI Example
Band 34	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND34
Band 35	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND35
Band 36	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND36
Band 37	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND37
Band 38	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND38
Band 39	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND39
Band 40	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND40
Band 41	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND41
Band 42	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND42
Band 43	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND43
Band 44	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND44
Band 45	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND45
Band 46	LTE TDD	:SOUR:LIST:STEP2:SET:RAD:BAND BAND46
Band A	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDA
Band B	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDB
Band C	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDC
Band D	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDD
Band E	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDE
Band F	TD-SCDMA	:SOUR:LIST:STEP2:SET:RAD:BAND BANDF
N 1	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N1
N 2	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N2
N 3	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N3
N 5	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N5
N 7	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N7
N 8	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N8
N 12	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N12
N 20	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N20
N 25	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N25
N 28	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N28
N 34	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N34
N 38	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N38
N 39	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N39
N 40	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N40
N 41	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N41
N 50	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N50
N 51	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N51

6 Input/Output  
6.1 RF Source

Band	Standard	SCPI Example
N 66	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N66
N 70	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N70
N 71	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N71
N 74	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N74
N 75	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N75
N 76	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N76
N 77	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N77
N 78	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N78
N 79	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N79
N 80	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N80
N 81	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N81
N 82	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N82
N 83	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N83
N 84	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N84
N 86	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N86
N 257	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N257
N 258	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N258
N 260	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N260
N 261	5G NR	:SOUR:LIST:STEP2:SET:RAD:BAND N261

## Device

Lets you specify the radio band link direction for the steps within the list sequence. The link is used in conjunction with the channel band and channel number to determine the output frequency.

Setting	Option	Description
Uplink	UP	The source calculates the uplink frequency according to an uplink formula together with selected channel band and channel number
Downlink	DOWN	The source calculates the downlink frequency according to a downlink formula together with selected channel band and channel number

Remote Command	:SOURce:LIST:STEP[1] 2 ... 1000:SETup:RADio:BAND:LINK DOWN   UP :SOURce:LIST:STEP[1] 2 ... 1000:SETup:RADio:BAND:LINK?
Example	:SOUR:LIST:STEP2:SET:RAD:BAND:LINK UP :SOUR:LIST:STEP2:SET:RAD:BAND:LINK?
Notes	SCPI is supported after A.09.40

Dependencies	Not available in E7760B
Preset	DOWN
Range	DOWN   UP

## Freq/Chan

Lets you select the frequency or channel value for the current step. If the Band selection for the current row is **NONE**, you enter a frequency. Otherwise, enter a channel, which causes the frequency to be automatically selected, based on the Band selection.

### Entering a Frequency

If the Band selection for the current row is **NONE**, enter a Frequency. This field in the table allows you to select the frequency value for the current step.

Remote Command	:SOURCE:LIST:STEP[1] 2 ... 1000:SETup:CNFRrequency <double> :SOURCE:LIST:STEP[1] 2 ... 1000:SETup:CNFRrequency?	
Example	:SOUR:LIST:STEP2:SET:CNFR 1GHz :SOUR:LIST:STEP2:SET:CNFR?	
Notes	SCPI is supported after A.09.40 Used to setup channel number or frequency setting, according to the current Radio Band setting. If Radio Band is <b>NONE</b> , then the value is frequency. If Radio Band is not <b>NONE</b> , then the value is channel number	
Dependencies	Not available in E7760B	
Couplings	The frequency value is coupled to the channel band and number for the step, such that updates to the radio band and channel number will update the frequency value to the corresponding absolute frequency. The reverse is also true, changing the frequency value causes the value of the channel number to be updated	
Preset	1.00 GHz	
Min	10.00 MHz	
Max	Hardware Dependent:	
	Option 503	3.6 GHz
	Option 504	3.9 GHz
	Option 506	6.00 GHz
	Option F06	6.08 GHz
	Option F06 & EP6	6.60 GHz

## Entering a Channel

If the Band selection for the current row is not **NONE**, enter a Channel Number. This field in the table allows you to select the channel value for the current step. The frequency is selected automatically, based on the Band.

Example	<code>:SOUR:LIST:STEP2:SET:CNFR 124</code> <code>:SOUR:LIST:STEP2:SET:CNFR?</code>
Notes	SCPI is supported after A.09.40 Used to setup channel number or frequency setting, according to current Radio Band setting. If Radio Band is <b>NONE</b> , then the value is a frequency. If Radio Band is not <b>NONE</b> , then the value is a channel number
Dependencies	Not available in E7760B
Couplings	The channel number is coupled to the step frequency value. When the step frequency value is changed, the channel number increases or decreases to match the new step frequency. If the step frequency is not at an exact match for a channel number, the nearest channel number is displayed, along with a greater-than or less-than sign, to indicate the frequency is above or below the channel number
Preset	1
Min/Max	0/10838 (See " <a href="#">Channel</a> " on page 2507 for valid ranges)

## Power

Lets you specify the power value for the current step.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:AMPLitude &lt;double&gt;</code> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:AMPLitude?</code>
Example	<code>:SOUR:LIST:STEP2:SET:AMPL -50dBm</code> <code>:SOUR:LIST:STEP2:SET:AMPL?</code>
Dependencies	The RF power is dependent on the RF output port and frequency, such that the current frequency and selected output port determine the valid range of power values Not available in E7760B
Preset	-100 dBm
Min/Max	The range of values depends on the current frequency and selected RF output port See " <a href="#">RF Power</a> " on page 2472 and the RF Power Range table for valid ranges

## Waveform

Lets you select the waveform to be played back during the current step. Options are: CW, a Waveform file, Continue the previous step's waveform, or Off.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:WAVEform &lt;string&gt;</code>
----------------	--

	<p>where <code>&lt;string&gt;</code> is one of:  "CW", "waveform name", "Cont", "Off"  For full details of options, see <a href="#">"More Information" on page 2492</a>  <code>:SOURce:LIST:STEP[1]   2   ...   1000:SETup:WAVeform?</code></p>
Example	<code>:SOUR:LIST:STEP2:SET:WAV "CW"</code> <code>:SOUR:LIST:STEP2:SET:WAV?</code>
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B For VXT models M9410A/11A/16A, if the Waveform is not Continue Previous, there is always a time gap between the current step and the previous step
Preset	CW
Range	"CW", "waveform name", "Cont", "Off"

## More Information

Parameter	SCPI	Notes
CW	"CW"	Sets the current step to output a CW tone
Selected Waveform	"waveform name"	Inserts a waveform from the Select Waveform dialog as the waveform for playback during the current step If the selected waveform contains header (which contains ARB play parameters), source list sequence will automatically apply header settings of the selected waveform in that step
Continue Previous	"Cont"	Sets the current step to continue with playback of the waveform from the previous step. When continuing the previous waveform, the ARB playback will not pause while the source retunes to the new frequency or amplitude that may be defined for the new step
Off	"Off"	Disable RF output of the current step

## Waveform File

Pressing the slide-aside field of this column (>) opens the ["Select Waveform" on page 2548](#) screen, which lets you select a waveform in ARB memory to playback during the current step. When you select a waveform, and press **OK**, it returns to the List Sequencer Setup screen with that file name in the table.

## Step Duration

Lets you select the duration of play for the current step.

6 Input/Output  
6.1 RF Source

The duration can be set to be either the number of times for the ARB file associated with the sequence to play, or a specific time value, or continuous. If the step is set to play a CW tone, the step duration cannot be set to a play count.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TYPE TIME   COUNT   CONTInuous   CABort</code> See <a href="#">"Option Details" on page 2493</a> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TYPE?</code>
Example	<code>:SOUR:LIST:STEP2:SET:DUR:TYPE TIME</code> <code>:SOUR:LIST:STEP2:SET:DUR:TYPE?</code>
Dependencies	Not available in E7760B If in VXT models M9410A/11A/16A, <b>Step Duration</b> is <b>TIME</b> or Play <b>COUNT</b> , only <b>Free Run</b> is available for the next step. Otherwise, an error message is generated: "Parameter error; only Free Run is available as step trigger on step<n>"
Range	<b>TIME   COUNT   CONTInuous   CABort</b>

### Option Details

Parameter	SCPI	Notes
Time	<b>TIME</b>	Sets the duration of the current step to be a time value for the length of time the step will play When <b>TIME</b> is selected, the Time may be set using the second field under <b>Step Duration</b> and/or by the <a href="#">"Duration Time" on page 2493</a> command
Count	<b>COUNT</b>	Sets the duration of the current step to be an integer value for the number of times (play count) the ARB file is selected for playback during this step. For example, a 5 second ARB will be set to play 5 times during the step When <b>COUNT</b> is selected, the Count may be set using the second field under <b>Step Duration</b> and/or by the <a href="#">"Play Count" on page 2494</a> command
Continuous	<b>CONTInuous</b>	Sets the current step to be played continuously until the next step starts. The waveform will always play completely before transitioning to the next step
Continuous Abort	<b>CABort</b>	Sets the current step to be played continuously or until the trigger event of the next step is detected. When a trigger event is received, the waveform play will be aborted after the interval specified by the Duration Time parameter and it will then transition to the next step When Continuous Abort is selected, the Duration Time may be set using the second field under Step Duration and/or by the <a href="#">"Duration Time" on page 2493</a> command

### Duration Time

Lets you specify the length of time the current step will play when ["Step Duration" on page 2492](#) is Time.

When "Step Duration" on page 2492 is Continuous Abort, this parameter specifies the maximum duration that the waveform will continue to play after a step trigger is received before the transition to the next waveform will occur. Duration is limited to a maximum of 20 seconds.

If the Transition Time value is longer than the Step Duration Time, an error is generated when initiating a source list sequence. For source list sequence, transition time is included in the step duration length (not occupy additional time). If the Transition Time value is longer than the Step Duration Time, the real step duration length is extended to equal the transition time and cause a timing shift.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TCOunt &lt;double&gt;</code> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TCOunt?</code>
Example	<code>:SOUR:LIST:STEP2:SET:DUR:TCO 1s</code> <code>:SOUR:LIST:STEP2:SET:DUR:TCO?</code>
Notes	When Repetition is <b>Single</b> , the last step continues playing after the sequence is completed. In this extended playing time, <code>:STAT:OPER:COND?</code> returns 0 for the Source Sweeping Status Bit (bit 9) SCPI is supported after A.09.40 If current <b>Duration Type</b> is <b>Continuous</b> , then error -221, "Settings conflict; Cannot accept time or count input when step duration type is Continuous on step #" is displayed
Dependencies	Not available in E7760B
Preset	VXT models M9410A/11A/16A: 2.0 ms All others: 1.00 ms
Min	For VXT models M9410A/11A/16A, the minimum duration time for first step is 1.2 ms. If the Waveform is "waveform name", the minimum duration time is 1.2 ms All others: 100 µs
Max	1800 s

## Play Count

Lets you specify the number of times the current ARB waveform file will play during a step when "Step Duration" on page 2492 is Count.

"Duration Time" on page 2493

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TCOunt &lt;double&gt;</code> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:DURation:TCOunt?</code>
Example	<code>:SOUR:LIST:STEP2:SET:DUR:TCO 10</code> <code>:SOUR:LIST:STEP2:SET:DUR:TCO?</code>
Notes	SCPI is supported after A.09.40 This command is reused by <b>Play Count</b> and <b>Duration Time</b> if <b>Duration Type</b> is set to <b>Play Count</b> or <b>Duration Time</b> If <b>Duration Type</b> is <b>Continuous</b> , then error -221, "Settings conflict; Cannot accept time or count input

6 Input/Output  
6.1 RF Source

	when step duration type is Continuous on step #" is displayed If <b>Play Count</b> is set for the last step, the last step of ARB keeps playing as if set to <b>Continuous</b> after play count setting is reached
Dependencies	Not available in E7760B
Preset	1
Min	1
Max	65536

## Trig Out

Lets you specify the trigger output for the current step. The trigger output signal is sent at the start of the step.

When this is **ON**, a trigger event occurs on both Internal and External2 paths. Selecting **OFF** turns off trigger output.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:OUTPut:TRIGger ON   OFF   1   0</code> <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup:OUTPut:TRIGger?</code>
Example	<code>:SOUR:LIST:STEP2:SET:OUTP:TRIG ON</code> <code>:SOUR:LIST:STEP2:SET:OUTP:TRIG?</code>
Notes	SCPI is supported after A.09.40
Dependencies	Not available in E7760B
Preset	<b>OFF</b>
Range	<b>ON OFF</b>

## Step Configuration (Remote Command Only)

Used to configure the List Sequencer, as detailed in the table below. The command is defined such that you send one command per step, with the step number being specified as a subopcode of the SCPI command. Each command includes all the parameter settings for the step. As a step is set up, the values entered are run through several levels of validation.

Remote Command	<code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup &lt;step_trigger&gt;, &lt;trans_time&gt;, &lt;band&gt;, &lt;link_type&gt;, &lt;freq_chan&gt;, &lt;power&gt;, &lt;waveform&gt;, &lt;duration&gt;, &lt;time_count&gt;, &lt;trig_state&gt;</code> For details of each option, see " <a href="#">Step Configuration Parameters</a> " on page 2496 below <code>:SOURce:LIST:STEP[1] 2 ... 1000:SETup?</code>
Example	<code>:SOUR:LIST:STEP1:SET INT, 1ms, PGSM, DOWN, 10, -25 dBm, "GSM_Test1.bin", TIME, 10ms, OFF</code>
Dependencies	The range of subopcode values is 1 to 1000, and the value you enter is determined by the number of

steps you have configured. For details see ["Number of Steps" on page 2482](#)  
If you attempt to remotely set or query a subopcode that is out of range, an error is generated

## Step Configuration Parameters

There are 10 parameters for each step, which must be in the following order in the command:

- |   |  |   |
|---|--|---|
| 1 | Step Trigger<br><code>&lt;step_trigger&gt;</code>          | Data Type: enum<br>Specifies the input trigger for the step. For further details, see <a href="#">"Step Trigger" on page 2483</a>   |
| 2 | Transition Time<br><code>&lt;trans_time&gt;</code>         | Data Type: enum<br>Specifies the transition time for the step, in seconds. For further details, see <a href="#">"Transition Time" on page 2484</a>  |
| 3 | Radio Band<br><code>&lt;band&gt;</code>                    | Data Type: enum<br>Specifies the radio band for the step, as any one of:<br><br>NONE   PGSM   EGSM   RGSM   DCS1800   PCS1900   TGSM810   GSM450   GSM480   GSM700   GSM850   BANDI   BANDII   BANDIII   BANDIV   BANDV   BANDVI   BANDVII   BANDVIII   BANDIX   BANDX   BANDXI   BANDXII   BANDXIII   BANDXIV   BANDXIX   USCELL   USPCS   JAPAN   KOREAN   NMT   IMT2K   UPPER   SECOND   PAMR400   PAMR800   IMTEXT   PCS1DOT9G   AWS   US2DOT5G   PUBLIC   LOWER   NONE   BAND1   BAND2   BAND3   BAND4   BAND5   BAND6   BAND7   BAND8   BAND10   BAND11   BAND12   BAND13   BAND14   BAND17   BAND18   BAND19   BAND20   BAND21   BAND24   BAND25   BAND26   BAND33   BAND34   BAND35   BAND36   BAND37   BAND38   BAND39   BAND40   BAND41   BAND42   BAND43   BANDA   BANDB   BANDC   BANDD   BANDE   BANDF   N1   N2   N3   N5   N7   N8   N12   N20   N25   N28   N34   N38   N39   N40   N41   N50   N51   N66   N70   N71   N74   N75   N76   N77   N78   N79   N80   N81   N82   N83   N84   N86   N257   N258   N260   N261<br><br>For further details, see <a href="#">"Band" on page 2485</a> |
| 4 | Radio Band Link<br><code>&lt;link_type&gt;</code>          | Data Type: enum<br>Specifies the radio band link direction for the step, as either of:<br><br>DOWN   UP<br><br>For further details, see <a href="#">"Device" on page 2489</a><br>The old <b>Device</b> BTS MS is obsolete, but is still supported, acting as an alias for the <b>Link</b> parameter   |
| 5 | Frequency/Channel Number<br><code>&lt;freq_chan&gt;</code> | Data Type: freq/chan num<br>Specifies the frequency in Hz or the channel number for the step. The channel number and frequency are combined as one parameter that represents the frequency or channel number depending on the radio band setting. If the radio band is set to <b>NONE</b> , this value is interpreted as a frequency value in Hz. If the radio band is set to a valid band, this value is interpreted as a channel number<br><br>For further details, see <a href="#">"Freq/Chan" on page 2490</a>  |

## 6 Input/Output

### 6.1 RF Source

6	Power <power>	Data Type: ampl Specifies the output power for the step in dBm. For details of the valid ranges see <a href="#">"Power" on page 2491</a>								
7	Waveform <waveform>	Data Type: string Specifies the waveform for playback during the step. The step can output either a new ARB waveform, continue playback of the previous waveform, or output a CW tone. The options for specifying these are:  <table border="0" style="margin-left: 20px;"> <tr> <td style="vertical-align: top;">&lt;filename&gt;</td> <td>Plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated</td> </tr> <tr> <td style="vertical-align: top;">CONT</td> <td>Continues playback of the ARB file from the previous step</td> </tr> <tr> <td style="vertical-align: top;">CW</td> <td>Outputs a CW tone</td> </tr> <tr> <td style="vertical-align: top;">OFF</td> <td>Disables RF output</td> </tr> </table> For further details, see <a href="#">"Waveform" on page 2491</a> and <a href="#">"Waveform File" on page 2492</a>	<filename>	Plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated	CONT	Continues playback of the ARB file from the previous step	CW	Outputs a CW tone	OFF	Disables RF output
<filename>	Plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated									
CONT	Continues playback of the ARB file from the previous step									
CW	Outputs a CW tone									
OFF	Disables RF output									
8	Step Duration <duration>	Data Type: enum Specifies the duration of the step, as one of: <a href="#">TIME</a>   <a href="#">COUNT</a>   <a href="#">CONTinuous</a>  The duration can be specified to be either time, or play count of the ARB file associated with the step, or continuous. If Waveform is set to <a href="#">CW</a> , this value cannot be set to Play Count and an error will be generated. If <a href="#">CONTinuous</a> is selected, the following Time or Count value is ignored. For further details, see <a href="#">"Step Duration" on page 2492</a>								
9	Time or Count <time_count>	Data Type: time/int Specifies time duration in seconds, or play count of the ARB file associated with the step  For further details, see <a href="#">"Play Count" on page 2494</a>								
10	Output Trigger <trig_state>	Data Type: boolean Specifies the output trigger state for the step, as one of: <a href="#">ON</a>   <a href="#">OFF</a>   <a href="#">1</a>   <a href="#">0</a>  For further details, see <a href="#">"Trig Out" on page 2495</a>								

### Step Configuration of Step Trigger parameter list (Remote Command Only)

Configures the "Step Trigger" parameter array of the whole List Sequencer at one time. The number of arrays is the same as the step number defined in ["Number of](#)

[Steps](#) on page 2482. As a step is setup, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:INPut:TRIGger &lt;enum&gt;, &lt;enum&gt;, &lt;enum&gt;, ...</code> <code>:SOURce:LIST:SETup:INPut:TRIGger?</code>
Example	<code>:SOUR:LIST:SET:INP:TRIG IMM,INT,EXT2</code> <code>:SOUR:LIST:SET:INP:TRIG?</code>
Notes	The command is to setup below parameter array of whole list sequence Step Trigger <b>&lt;enum&gt;</b> - specifies the input trigger for the step. For details of the valid types of step trigger see <a href="#">"Step Trigger" on page 2483</a> If input parameter number exceeds the step number defined by <a href="#">"Number of Steps" on page 2482</a> , then error -221 "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls in number of steps will be updated
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see <a href="#">"Number of Steps" on page 2482</a>

### Step Configuration of Transition Time parameter list (Remote Command Only)

Configures the "Transition Time" parameter array of the whole List Sequencer at once. The array size is the same as step number defined in ["Number of Steps" on page 2482](#). As a step is setup, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:TRANSition:TIME &lt;time&gt;, &lt;time&gt;, &lt;time&gt;, ...</code> <code>:SOURce:LIST:SETup:TRANSition:TIME?</code>
Example	<code>:SOUR:LIST:SET:TRAN:TIME 1ms,1ms,1ms</code> <code>:SOUR:LIST:SET:TRAN:TIME?</code>
Notes	The command is to setup below parameter array of whole list sequence Transition Time <b>&lt;time&gt;</b> - specifies the transition time for the step in seconds. For details of the valid ranges for the transition time see <a href="#">"Transition Time" on page 2484</a> If input parameter number exceeds the step number defined by <a href="#">"Number of Steps" on page 2482</a> , then the error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls in number of steps will be updated
Dependencies	The range is 1 to 1000 which is determined by the number of steps you have configured. For details see <a href="#">"Number of Steps" on page 2482</a>

### Step Configuration of Radio Band parameter list (Remote Command Only)

Configures the **Radio Band** parameter array of the whole List Sequencer at once. The size of the array is the same as the step number defined in ["Number of Steps"](#)

on page 2482. As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:RADio:BAND &lt;enum&gt;, &lt;enum&gt;, &lt;enum&gt;, ...</code> <code>:SOURce:LIST:SETup:RADio:BAND?</code>
Example	<code>:SOUR:LIST:SET:RAD:BAND PGSM, EGSM, RGSM</code> <code>:SOUR:LIST:SET:RAD:BAND?</code>
Notes	The command sets up the parameter array of whole list sequence Radio Band <enum> - specifies the radio band for the step. For available options, see "Band" on page 2485 If the input parameter number exceeds the step number defined by "Number of Steps" on page 2482, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within the number of steps will be updated
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 2482

### Step Configuration of Radio Band Link parameter list (Remote Command Only)

Configures the **Radio Band Link** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in "Number of Steps" on page 2482. As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:RADio:BAND:LINK &lt;enum&gt;, &lt;enum&gt;, &lt;enum&gt;, ...</code> <code>:SOURce:LIST:SETup:RADio:BAND:LINK?</code>
Example	<code>:SOUR:LIST:SET:RAD:BAND:LINK DOWN,UP,UP</code> <code>:SOUR:LIST:SET:RAD:BAND:LINK?</code>
Notes	The command sets up the parameter array of whole list sequence Radio Band Link <enum> - specifies the radio band link direction for the step. Options are: <code>DOWN UP</code> If input parameter number exceeds the step number defined by "Number of Steps" on page 2482, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within the number of steps will be updated
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see "Number of Steps" on page 2482

## Step Configuration of Frequency/Channel Number parameter list (Remote Command Only)

Configures the **Frequency** or **Channel Number** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in ["Number of Steps" on page 2482](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:CNFRrequency &lt;double&gt;, &lt;double&gt;, &lt;double&gt;, ...</code> <code>:SOURce:LIST:SETup:CNFRrequency?</code>
Example	<code>:SOUR:LIST:SET:CNFR 1GHz,100MHz,100MHz</code> <code>:SOUR:LIST:SET:CNFR?</code> <code>:SOUR:LIST:SET:CNFR 124,124,124</code> <code>:SOUR:LIST:SET:CNFR?</code>
Notes	<p>The command sets up the parameter array of whole list sequence</p> <p>Frequency/Channel Number &lt;freq&gt;/&lt;chan num&gt; - specifies the frequency in Hz or the channel number for the step. The channel number and frequency are combined as one parameter that represents the frequency or channel number depending on the radio band setting. If the radio band is set to <b>NONE</b>, this value is interpreted as a frequency value in Hz. If the radio band is set to a valid band, this value is interpreted as a channel number. For details of the valid ranges for frequency and channel numbers, see <a href="#">"Freq/Chan" on page 2490</a> and <a href="#">"Freq/Chan" on page 2490</a></p> <p>This command is used to setup/query channel number or frequency setting, according to current Radio Band setting of that step. If Radio Band is <b>NONE</b>, then it is frequency. If Radio Band is not <b>NONE</b>, then it is channel number</p> <p>If input parameter number exceeds the step number defined by <a href="#">"Number of Steps" on page 2482</a>, then generate error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number", and only those parameters whose index number falls in legal step number will be updated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see <a href="#">"Number of Steps" on page 2482</a>

## Step Configuration of Power parameter list (Remote Command Only)

Configures the **Power** parameter array of the whole List Sequencer at one time. The number of arrays is the same as step number defined in ["Number of Steps" on page 2482](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:AMPLitude &lt;ampl&gt;, &lt;ampl&gt;, &lt;ampl&gt;, ...</code> <code>:SOURce:LIST:SETup:AMPLitude?</code>
Example	<code>:SOUR:LIST:SET:AMPL -50dBm,-40dBm,-30dBm</code> <code>:SOUR:LIST:SET:AMPL?</code>
Notes	The command sets up the parameter array of whole list sequence

Power **<ampl>** - specifies the output power for the step in dBm. For details of the valid ranges, see ["Power" on page 2491](#)

If input parameter number exceeds the step number defined by ["Number of Steps" on page 2482](#), then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within legal step number will be updated

Dependencies The range is 1 to 1000, which is determined by the number of steps you have configured. For details see ["Number of Steps" on page 2482](#)

### Step Configuration of Waveform parameter list (Remote Command Only)

Configures the **Waveform** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in ["Number of Steps" on page 2482](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command `:SOURce:LIST:SETup:WAVEform <string>, <string>, <string>, ...`  
`:SOURce:LIST:SETup:WAVEform?`

Example `:SOUR:LIST:SET:WAV "CW", "Off", "CONT"`  
`:SOUR:LIST:SET:WAV?`

Notes Sets up or queries the parameter array of whole list sequence  
Waveform **<string>** - specifies the waveform for playback during the step. The step can output either a new ARB waveform, continue playback of the previous waveform, or output a CW tone. The options for specifying these are:

<b>&lt;filename&gt;</b>	Plays the specified waveform from the start. The filename value is the name of the file within ARB playback memory, it is does not include the windows path to the file on the HDD. If you enter a filename for a waveform that does not reside within ARB playback memory, an error is generated
<b>CONT</b>	Continues playback of the ARB file from the previous step
<b>CW</b>	Outputs a CW tone
<b>OFF</b>	Disables the RF output

If input parameter number exceeds the step number defined by ["Number of Steps" on page 2482](#), then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within number of steps will be updated

Dependencies The range is 1 to 1000 which is determined by the number of steps you have configured. For details see ["Number of Steps" on page 2482](#)

Range `"filename" | "CW" | "Off" | "CONT"`

## Step Configuration of Step Duration parameter list (Remote Command Only)

Configures the **Step Duration** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in "[Number of Steps](#)" on [page 2482](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:DURation:TYPE &lt;enum&gt;, &lt;enum&gt;, &lt;enum&gt;, ...</code> <code>:SOURce:LIST:SETup:DURation:TYPE?</code>
Example	<code>:SOUR:LIST:SET:DUR:TYPE COUN,TIME,CONT</code> <code>:SOUR:LIST:SET:DUR:TYPE?</code>
Notes	<p>Sets up or queries the parameter array of whole list sequence</p> <p>Step Duration <b>&lt;enum&gt;</b> - specifies the duration of the step. The duration can be specified to be either time, or play count of the ARB file associated with the step, or continuous. If Waveform is set to "CW", this value cannot be set to Play Count and an error will be generated. If continuous is selected, the following Time or Count value is ignored. For further details of this setting, see "<a href="#">Step Duration</a>" on <a href="#">page 2492</a></p> <p>Options are: <b>TIME   COUNT   CONTInuous</b></p> <p>If input parameter number exceeds the step number defined by "<a href="#">Number of Steps</a>" on <a href="#">page 2482</a>, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within number of steps will be updated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see " <a href="#">Number of Steps</a> " on <a href="#">page 2482</a>

## Step Configuration of Duration Time or Play Count parameter list (Remote Command Only)

Configures the **Duration Time** or **Play Count** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in "[Number of Steps](#)" on [page 2482](#). As a step is set up, the value entered runs through several levels of validation.

Remote Command	<code>:SOURce:LIST:SETup:TOCount &lt;time/int&gt;, &lt;time/int&gt;, &lt;time/int&gt;, ...</code> <code>:SOURce:LIST:SETup:TOCount?</code>
Example	<code>:SOUR:LIST:SET:TOC 1s,2s,3s</code> <code>:SOUR:LIST:SET:TOC?</code> <code>:SOUR:LIST:SET:TOC 5,6,7</code> <code>:SOUR:LIST:SET:TOC?</code>
Notes	Sets up or queries the parameter array of whole list sequence

---

	<p>Time or Count &lt;time/int&gt; - specifies time duration in seconds or play count of the ARB file associated with the step</p> <p>If input parameter number exceeds the step number defined by <a href="#">"Number of Steps" on page 2482</a>, then an error is generated, and only those parameters whose index number falls within number of steps will be updated</p> <p>If current <a href="#">"Step Duration" on page 2492</a> is "Continuous", then error -221, "Settings conflict; Cannot accept time or count input when step duration type is Continuous on step #" is generated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see <a href="#">"Number of Steps" on page 2482</a>

---

### Step Configuration of Output Trigger parameter list (Remote Command Only)

Configures the **Output Trigger** parameter array of the whole List Sequencer at one time. The number of arrays is same as step number defined in ["Number of Steps" on page 2482](#). As a step is set up, the value entered runs through several levels of validation.

---

Remote Command	<pre>:SOURce:LIST:SETup:OUTPut:TRIGger &lt;bool&gt;, &lt;bool&gt;, &lt;bool&gt;, ... :SOURce:LIST:SETup:OUTPut:TRIGger?</pre>
Example	<pre>:SOUR:LIST:SET:OUTP:TRIG ON,OFF,ON :SOUR:LIST:SET:OUTP:TRIG?</pre>
Notes	<p>Sets up or queries the parameter array of whole list sequence</p> <p>Output Trigger &lt;Boolean&gt; - specifies the output trigger for the step. Options are: <a href="#">ON OFF 1 0</a></p> <p>If input parameter number exceeds the step number defined by <a href="#">"Number of Steps" on page 2482</a>, then error -221, "Settings conflict; The number of input parameters is too large and is truncated to current list step number" is generated, and only those parameters whose index number falls within legal step number are updated</p>
Dependencies	The range is 1 to 1000, which is determined by the number of steps you have configured. For details see <a href="#">"Number of Steps" on page 2482</a>

---

### Clear List (Remote Command Only)

The SCPI equivalent of the Clear List UI feature described in ["Clear List" on page 2483](#).

---

Remote Command	<pre>:SOURce:LIST:SETup:CLEar</pre>
Example	<pre>:SOUR:LIST:SETup:CLE</pre>
Dependencies	Not available in E7760B

---

### 6.1.8.8 Remote Software Trigger (Remote command Only)

During execution of a list sequence, the sequence halts and waits at any step that has Step Trigger set to “Bus”. Sending this command triggers the step and continues the sequence.

Remote Command	<code>:SOURce:LIST:TRIGger:INITiate[:IMMediate]</code>
Example	<code>:SOUR:LIST:TRIG:INIT</code>
Dependencies	Not available in E7760B

### 6.1.8.9 Query List Sequence Initiation Armed Status (Remote Query Only)

This is a blocking SCPI query to determine whether a source list sequence has been initiated successfully.

Remote Command	<code>:SOURce:LIST:INITiation:ARMed?</code>
Example	<code>:SOUR:LIST:INIT:ARMed?</code>
Notes	<p>Returns “1” if list sequence has been initiated successfully, or “0” if not. If the response is “0”, use <code>:SYST:ERR?</code> to query the actual error</p> <p>Like <code>*OPC?</code>, this command can be blocked until event/status “IsSourceSweeping” occurs, and then returns. Doing so can help a script query the armed status only once during the time interval of the initiation. As an ancillary to the existing <code>:SOUR:LIST:TRIGger[:IMMediate]</code> (see <a href="#">"Initiate Sequence" on page 2480</a>), send this query after <code>:SOUR:LIST:TRIG</code>. Otherwise, this query will return “1” immediately</p> <p>The return data is in the following format: Integer</p> <p>There is an alias: <code>:SOURce:LIST:TRIGger:INITiation:ARMed?</code></p>
Dependencies	Not available in E7760B

## 6.1.9 Frequency Setup

Lets you access the Frequency Setup sub-menu panel.

Notes	The menu under this control is for independent mode and has no effect on the <a href="#">"List Sequencer" on page 2479</a> . If <a href="#">"Sequencer" on page 2480</a> is <b>ON</b> , the List Sequencer controls the source output and this key is grayed-out, to indicate out-of-scope. When <a href="#">"Sequencer" on page 2480</a> is <b>OFF</b> , source leaves List Sequencer and this button is blanked out
-------	---

### 6.1.9.1 Frequency

Lets you set the RF Output Frequency. You can adjust the frequency of the source using the numeric keypad, step keys, or RPG. Pressing any digit (0 through 9) on the

6 Input/Output  
6.1 RF Source

numeric keypad displays the unit terminator.

Remote Command	:SOURce:FREQuency[:CW] <freq> :SOURce:FREQuency[:CW]?	
Example	:SOUR:FREQ 1.00 GHz	
Notes	Internal source has list sequence mode, which comprises of several steps that contain separate output power, frequency and waveform etc. When the source list sequence playing is complete, the last step keeps playing, and you can use this command to change the list sequence last step's output frequency	
Couplings	The frequency value is coupled to the current channel band and number, such that updates to the band and number will update the frequency value to the corresponding absolute frequency	
Preset	E7760B	Depends on port selected
	EXM, with license F1A or 5WC	2.412 GHz
	VXT Models with Radio Heads/CIU	See " <a href="#">VXT Models with Remote Radio Heads/CIU</a> " on page 2506
	M941xE(VXT Models with M9471A)	See " <a href="#">M941xE(VXT Models with M9471A)</a> " on page 2506
	All other models	1.00 GHz
Min	E7760B	Depends on port selected
	VXT model M9420A	60 MHz
	VXT models M9410A/11A/15A/16A	380 MHz
	VXT model M9411A with Option LFE	1 MHz
	VXT Models with Radio Heads/CIU	See " <a href="#">VXT Models with Remote Radio Heads/CIU</a> " on page 2506
	M941xE(VXT Models with M9471A)	See " <a href="#">M941xE(VXT Models with M9471A)</a> " on page 2506
	All other models	10.00 MHz
Max	Hardware Dependent:	
	Option 503	3.6 GHz
	Option 504	3.8 GHz
	Option 506	6.00 GHz
	Option F06	6.00 GHz
	Parameters for " <a href="#">VXT models M9415A/16A</a> " on page 2506	
	Parameters for " <a href="#">VXT Models with Remote Radio Heads/CIU</a> " on page 2506	
	Parameters for " <a href="#">M941xE(VXT Models with M9471A)</a> " on page 2506	
	For E7760B: Depends on port selected	
	For EXM, if license 5WC is present, the frequency range should be limited to: 1.1GHz-1.7GHz, 2.4GHz-2.5GHz, 4.8GHz-6.0GHz. If the user-defined frequency is outside of range, reports error message "Settings conflict; Frequency is outside available range"	

### VXT models M9410A/11A

RF Output Port	Preset	Min Without Option “LFE”	Min With Option “LFE”	Max
RF Output	1 GHz	380 MHz	1 MHz	6 GHz
RFHD	1 GHz	380 MHz	1 MHz	6 GHz

### VXT models M9415A/16A

Freq Option	Preset	Min	Max
F06	1 GHz	380 MHz	6.0 GHz
F08	1 GHz	380 MHz	8.0 GHz
F12	1 GHz	380 MHz	12.3 GHz

### E7760B

RF Output Port	Preset	Min	Max
IFIO	16 GHz	2 GHz	18 GHz
M1650A	58.32 GHz	55 GHz	69 GHz
M1720A	28 GHz	25 GHz	29 GHz

### VXT Models with Remote Radio Heads/CIU

Products with Radio Heads/CIU	Preset	Min frequency	Max frequency
VXT + CIU	6 GHz	5.9 GHz	12 GHz
VXT + CIU + RRH	28 GHz	24.25 GHz	43.5 GHz
VXT + M1742A RRH	28 GHz	10 GHz	32 GHz

### M941xE(VXT Models with M9471A)

Products with M9471A	Preset	Minimum settable frequency	Minimum frequency with Spec	Maximum settable frequency
M941xE without LFE option	1 GHz	330 MHz	380MHz	26.5GHz
M941xE with LFE option (LFE option in M9411A or M9471A)	1 GHz	750 kHz	1MHz	26.5GHz

**NOTE**

The minimum spec frequency is 380 MHz, minimum settable center frequency is 330 MHz.

With Option LFE in M9411A or in M9471A, the minimum settable frequency is 750 kHz, but Spec to customer only ensure down to 1 MHz.

### 6.1.9.2 Channel

The frequency of the source can be specified by a channel number of a given frequency band. This control allows you to specify the current channel number. For the appropriate range of channel numbers for a given frequency band, see the following tables: ["GSM/EDGE Channel Number Ranges" on page 2507](#), ["W-CDMA Channel Number Ranges" on page 2508](#), ["LTE FDD Channel Number Ranges" on page 2509](#), and ["LTE TDD Channel Number Ranges" on page 2511](#).

Channel is not available on E7760B.

Remote Command	:SOURce:FREQuency:CHANnels:NUMBER <int>
Example	:SOUR:LIST:STEP2:SET:RAD:NUMB 1
Notes	Grayed-out when the <a href="#">"Radio Standard/Radio Band" on page 2512</a> is set to <b>NONE</b>
Couplings	The channel number is coupled to the frequency value when <a href="#">"Radio Standard/Radio Band" on page 2512</a> is not set to <b>NONE</b> When the frequency value is changed, the channel number increases or decreases to match the new frequency. If the frequency is not at an exact match for a channel number, the nearest channel number is displayed, with > or < indicating whether the frequency is above or below the channel number
Preset	1
Min/Max	See <a href="#">"GSM/EDGE Channel Number Ranges" on page 2507</a> , <a href="#">"W-CDMA Channel Number Ranges" on page 2508</a> , <a href="#">"LTE FDD Channel Number Ranges" on page 2509</a> , and <a href="#">"LTE TDD Channel Number Ranges" on page 2511</a>

#### GSM/EDGE Channel Number Ranges

Band	Link (Device)	Range	Frequency (MHz)
P-GSM	Uplink (MS)	1 £ n £ 124	890.0 + 0.2*n
	Downlink (BS)	1 £ n £ 124	935.0 + 0.2*n
E-GSM	Uplink (MS)	0 £ n £ 124	890.0 + 0.2*n
		975 £ n £ 1023	890.0 + 0.2*(n-1024)
	Downlink (BS)	0 £ n £ 124	935.0 + 0.2*n
DCS 1800	Uplink (MS)	512 £ n £ 885	1710.200 + 0.20*(n-512)
		Downlink (BS)	512 £ n £ 885
PCS 1900	Uplink (MS)	512 £ n £ 810	1850.200 + 0.2*(n-512)
		Downlink (BS)	512 £ n £ 810
R-GSM	Uplink (MS)	0 £ n £ 124	890.0 + 0.2*n
		955 £ n £ 1023	890.0 + 0.2*(n-1024)
	Downlink (BS)	0 £ n £ 124	935.0 + 0.2*n

Band	Link (Device)	Range	Frequency (MHz)
GSM 450	Uplink (MS)	955 £ n £ 1023	935.0 + 0.2*(n-1024)
	Downlink (BS)	256 £ n £ 293	450.6 + 0.2*(n-259)
GSM 480	Uplink (MS)	256 £ n £ 293	460.6 + 0.2*(n-259)
	Downlink (BS)	306 £ n £ 340	479.000 + 0.20*(n-306)
GSM 850	Uplink (MS)	306 £ n £ 340	489.000 + 0.20*(n-306)
	Downlink (BS)	128 £ n £ 251	824.200 + 0.20*(n-128)
GSM 700	Uplink (MS)	128 £ n £ 251	869.200 + 0.20*(n-128)
	Downlink (BS)	438 £ n £ 516	777.200 + 0.20*(n-438)
T-GSM810	Uplink (MS)	438 £ n £ 516	747.200 + 0.20*(n-438)
	Downlink (BS)	350 £ n £ 425	806.0 + 0.20*(n-350)
		350 £ n £ 425	851.0 + 0.20*(n-350)

### W-CDMA Channel Number Ranges

Band	Link (Device)	Range	Frequency (MHz)
Band I	Downlink	10562 £ n £ 10838	n÷5
	Uplink	9612 £ n £ 9888	n÷5
Band II	Downlink	412 £ n £ 687	n÷5 + 1850.1
		9662 £ n £ 9938	n÷5
	Uplink	12 £ n £ 287	n÷5 + 1850.1
		350 £ n £ 425	n÷5
Band III	Downlink	1162 ≤ n ≤ 1513	n÷5 + 1575
	Uplink	937 ≤ n ≤ 1288	n÷5 + 1525
Band IV	Downlink	537 ≤ n ≤ 1738	n÷5 + 1805
		1887 ≤ n ≤ 2087	n÷5 + 1735.1
	Uplink	1312 ≤ n ≤ 1513	n÷5 + 1450
		1662 ≤ n ≤ 1862	n÷5 + 1380.1
Band V	Downlink	1007 ≤ n ≤ 1087	n÷5 + 670.1
		4357 ≤ n ≤ 4458	n÷5
	Uplink	782 ≤ n ≤ 862	n÷5 + 670.1
		4132 ≤ n ≤ 4233	n÷5
Band VI	Downlink	1037 ≤ n ≤ 1062	n÷5 + 670.1
		4387 ≤ n ≤ 4413	n÷5
	Uplink	812 ≤ n ≤ 837	n÷5 + 670.1
		4162 ≤ n ≤ 4188	n÷5
Band VII	Downlink	2237 ≤ n ≤ 2563	n÷5 + 2175
		2587 ≤ n ≤ 2912	n÷5 + 2105.1

6 Input/Output  
6.1 RF Source

Band	Link (Device)	Range	Frequency (MHz)
	Uplink	2012 ≤ n ≤ 2338	n ÷ 5 + 2100
		2362 ≤ n ≤ 2687	n ÷ 5 + 2030.1
Band VIII	Downlink	2937 ≤ n ≤ 3088	n ÷ 5 + 340
		Uplink	2712 ≤ n ≤ 2863
Band IX	Downlink	9237 ≤ n ≤ 9387	n ÷ 5
		Uplink	8762 ≤ n ≤ 8912
Band X	Downlink	3112 ≤ n ≤ 3388	n ÷ 5 + 1490
		3412 ≤ n ≤ 3687	n ÷ 5 + 1430.1
	Uplink	2887 ≤ n ≤ 3163	n ÷ 5 + 1135
Band XI	Downlink	3187 ≤ n ≤ 3462	n ÷ 5 + 1075.1
		3712 ≤ n ≤ 3812	n ÷ 5 + 736
	Uplink	3487 ≤ n ≤ 3587	n ÷ 5 + 733
Band XII	Downlink	3837 ≤ n ≤ 3903	n ÷ 5 - 37
		3927 ≤ n ≤ 3992	n ÷ 5 - 54.9
	Uplink	3612 ≤ n ≤ 3678	n ÷ 5 - 22
		3702 ≤ n ≤ 3767	n ÷ 5 - 39.9
Band XIII	Downlink	4017 ≤ n ≤ 4043	n ÷ 5 - 55
		4067 ≤ n ≤ 4092	n ÷ 5 - 64.9
	Uplink	3792 ≤ n ≤ 3818	n ÷ 5 + 21
		3702 ≤ n ≤ 3767	n ÷ 5 - 39.9
Band XIV	Downlink	4117 ≤ n ≤ 4143	n ÷ 5 - 63
		4167 ≤ n ≤ 4192	n ÷ 5 - 72.9
	Uplink	3892 ≤ n ≤ 3918	n ÷ 5 + 12
Band XIX	Downlink	3942 ≤ n ≤ 3967	n ÷ 5 + 2.1
		712 ≤ n ≤ 763	n ÷ 5 + 735
		787 ≤ n ≤ 837	n ÷ 5 + 720.1
	Uplink	312 ≤ n ≤ 363	n ÷ 5 + 770
		387 ≤ n ≤ 437	n ÷ 5 + 755.1

### LTE FDD Channel Number Ranges

The carrier frequency in the uplink and downlink is designated by the E-UTRA Absolute Radio Frequency Channel Number (EARFCN) in the range 0 - 65535. The relation between EARFCN and the carrier frequency in MHz for the downlink is given by the following equation, where  $F_{DL\_low}$  and  $N_{Offs-DL}$  are given in table 5.4.4-1 and  $N_{DL}$  is the downlink EARFCN.

$$F_{DL} = F_{DL\_low} + 0.1(N_{DL} - N_{Offs-DL})$$

The relation between EARFCN and the carrier frequency in MHz for the uplink is given by the following equation where  $F_{UL\_low}$  and  $N_{Offs-UL}$  are given in table 5.4.4-1 and  $N_{UL}$  is the uplink EARFCN.

$$F_{UL} = F_{UL\_low} + 0.1(N_{UL} - N_{Offs-UL})$$

Band	Downlink			Uplink		
	$F_{DL\_low}$ (MHz)	$N_{Offs-DL}$	Range of $N_{DL}$	$F_{UL\_low}$ (MHz)	$N_{Offs-UL}$	Range of $N_{UL}$
1	2110	0	0 – 599	1920	18000	18000 – 18599
2	1930	600	600 – 1199	1850	18600	18600 – 19199
3	1805	1200	1200 – 1949	1710	19200	19200 – 19949
4	2110	1950	1950 – 2399	1710	19950	19950 – 20399
5	869	2400	2400 – 2649	824	20400	20400 – 20649
6	875	2650	2650 – 2749	830	20650	20650 – 20749
7	2620	2750	2750 – 3449	2500	20750	20750 – 20449
8	925	3450	3450 – 3799	880	21450	21450 – 21799
9	1844.9	3800	3800 – 4149	1749.9	21800	21800 – 22149
10	2110	4150	4150 – 4749	1710	22150	22150 – 22749
11	1475.9	4750	4750 – 4949	1427.9	22750	22750 – 22949
12	729	5010	5010 – 5179	699	23010	23010 – 23179
13	746	5180	5180 – 5279	777	23180	23180 – 23279
14	758	5280	5280 – 5379	788	23280	23280 – 23379
...						
17	734	5730	5730 – 5849	704	23730	23730 – 23849
18	860	5850	5850 – 5999	815	23850	23850 – 23999
19	875	6000	6000 – 6149	830	24000	24000 – 24149
20	791	6150	6150 – 6449	832	24150	24150 – 24449
21	1495.9	6450	6450 – 6599	1447.9	24450	24450 – 24599
...						
24	1525	7700	7700 – 8039	1626.5	25700	25700 – 26039
25	1930	8040	8040 – 8689	1850	26040	26040 – 26689
26	859	8690	8690 – 9039	814	26690	26690 – 27039
...						

**Note:** The channel numbers that designate carrier frequencies so close to the operating band edges that the carrier extends beyond the operating band edge shall not be used. This implies that the first 7, 15, 25, 50, 75 and 100 channel numbers at the lower operating band edge and the last 6, 14, 24, 49, 74 and 99 channel numbers at the upper operating band edge shall not be used for channel bandwidths of 1.4, 3, 5, 10, 15 and 20 MHz respectively.

### LTE TDD Channel Number Ranges

The carrier frequency in the uplink and downlink is designated by the E-UTRA Absolute Radio Frequency Channel Number (EARFCN) in the range 0 - 65535. The relation between EARFCN and the carrier frequency in MHz for the downlink is given by the following equation, where  $F_{DL\_low}$  and  $N_{Offs-DL}$  are given in table 5.4.4-1 and  $N_{DL}$  is the downlink EARFCN.

$$F_{DL} = F_{DL\_low} + 0.1(N_{DL} - N_{Offs-DL})$$

The relation between EARFCN and the carrier frequency in MHz for the uplink is given by the following equation where  $F_{UL\_low}$  and  $N_{Offs-UL}$  are given in table 5.4.4-1 and  $N_{UL}$  is the uplink EARFCN.

$$F_{UL} = F_{UL\_low} + 0.1(N_{UL} - N_{Offs-UL})$$

Band	Downlink			Uplink		
	$F_{DL\_low}$ (MHz)	$N_{Offs-DL}$	Range of $N_{DL}$	$F_{UL\_low}$ (MHz)	$N_{Offs-UL}$	Range of $N_{UL}$
33	1900	36000	36000 - 36199	1900	36000	36000 - 36199
34	2010	36200	36200 - 36349	2010	36200	36200 - 36349
35	1850	36350	36350 - 36949	1850	36350	36350 - 36949
36	1930	36950	36950 - 37549	1930	36950	36950 - 37549
37	1910	37550	37550 - 37749	1910	37550	37550 - 37749
38	2570	37750	37750 - 38249	2570	37750	37750 - 38249
39	1880	38250	38250 - 38649	1880	38250	38250 - 38649
40	2300	38650	38650 - 39649	2300	38650	38650 - 39649
41	2496	39650	39650 - 41589	2496	39650	39650 - 41589
42	3400	41590	41590 - 43589	3400	41590	41590 - 43589
43	3600	43590	43590 - 45589	3600	43590	43590 - 45589

**Note:** The channel numbers that designate carrier frequencies so close to the operating band edges that the carrier extends beyond the operating band edge shall not be used. This implies that the first 7, 15, 25, 50, 75 and 100 channel numbers at the lower operating band edge and the last 6, 14, 24, 49, 74 and 99 channel numbers at the upper operating band edge shall not be used for channel bandwidths of 1.4, 3, 5, 10, 15 and 20 MHz respectively.

#### 6.1.9.3 Radio Setup

Lets you select the radio standard and associated radio band. You can also set the Radio Band Link to Uplink or Downlink.

## Radio Standard/Radio Band

Lets you select the radio standard and associated radio band. The first column in the dialog lets you set the Radio Standard; for each standard, and the second column in the dialog changes to show you the available bands.

Once you have selected the radio standard, you can then set an active channel band. The radio standard and the active channel band allow you to use the ["Channel" on page 2507](#) control to set Channel numbers, thus setting ["Frequency" on page 2504](#) automatically.

Remote Command	<pre>:SOURce:FREQuency:CHANnels:BAND &lt;band&gt;</pre> <p>where &lt;band&gt; is one of:</p> <p>NONE   PGSM   EGSM   RGSM   DCS1800   PCS1900   GSM450   GSM480   GSM700   GSM850   TGSM810   USCELL   USPCS   JAPAN   KOREAN   NMT   IMT2K   UPPER   SECOND   PAMR400   PAMR800   IMTEXT   PCS1DOT9G   AWS   US2DOT5G   PUBLIC   LOWER   BANDI   BANDII   BANDIII   BANDIV   BANDV   BANDVI   BANDVII   BANDVIII   BANDIX   BANDX   BANDXI   BANDXII   BANDXIII   BANDXIV   BANDXIX   BAND1   BAND2   BAND3   BAND4   BAND5   BAND6   BAND7   BAND8   BAND9   BAND10   BAND11   BAND12   BAND13   BAND14   BAND17   BAND18   BAND19   BAND20   BAND21   BAND24   BAND25   BAND26   BAND27   BAND28   BAND29   BAND30   BAND31   BAND65   BAND66   BAND67   BAND68   BAND71   BAND252   BAND255   BAND33   BAND34   BAND35   BAND36   BAND37   BAND38   BAND39   BAND40   BAND41   BAND42   BAND43   BAND44   BAND45   BAND46   BANDA   BANDB   BANDC   BANDD   BANDE   BANDF   N1   N2   N3   N5   N7   N8   N12   N20   N25   N28   N34   N38   N39   N40   N41   N50   N51   N66   N70   N71   N74   N75   N76   N77   N78   N79   N80   N81   N82   N83   N84   N86   N257   N258   N260   N261</p> <pre>:SOURce:FREQuency:CHANnels:BAND?</pre>
Example	<pre>:SOUR:LIST:STEP2:SET:RAD:BAND PGSM</pre>
Notes	<p>Setting this to <b>NONE</b> grays-out <a href="#">"Channel" on page 2507</a> under <b>Frequency Setup</b></p> <p>Here are the members of each group in Radio Standard and a SCPI example for each:</p> <p>None – no Radio Standard</p> <p>None <code>:SOUR:FREQ:CHAN:BAND NONE</code></p> <p>GSM</p> <p>Sets GSM/EDGE as the radio standard for use and accesses the GSM/EDGE specific channel band sub-menus.</p> <p>P-GSM <code>:SOUR:FREQ:CHAN:BAND PGSM</code></p> <p>E-GSM <code>:SOUR:FREQ:CHAN:BAND EGSM</code></p> <p>R-GSM <code>:SOUR:FREQ:CHAN:BAND RGSM</code></p> <p>DCS 1800 <code>:SOUR:FREQ:CHAN:BAND DCS1800</code></p>

## 6 Input/Output

### 6.1 RF Source

PCS 1900	:SOUR:FREQ:CHAN:BAND PCS1900
GSM 450	:SOUR:FREQ:CHAN:BAND GSM450
GSM 480	:SOUR:FREQ:CHAN:BAND GSM480
GSM 700	:SOUR:FREQ:CHAN:BAND GSM700
GSM 850	:SOUR:FREQ:CHAN:BAND GSM850
T-GSM 810	:SOUR:FREQ:CHAN:BAND T-GSM810

#### W-CDMA

Sets WCDMA as the radio standard for use and accesses the W-CDMA specific channel band sub-menus.

Band I	:SOUR:FREQ:CHAN:BAND BANDI
Band II	:SOUR:FREQ:CHAN:BAND BANDII
Band III	:SOUR:FREQ:CHAN:BAND BANDIII
Band IV	:SOUR:FREQ:CHAN:BAND BANDIV
Band V	:SOUR:FREQ:CHAN:BAND BANDV
Band VI	:SOUR:FREQ:CHAN:BAND BANDVI
Band VII	:SOUR:FREQ:CHAN:BAND BANDVII
Band VIII	:SOUR:FREQ:CHAN:BAND BANDVIII
Band IX	:SOUR:FREQ:CHAN:BAND BANDIX
Band X	:SOUR:FREQ:CHAN:BAND BANDX
Band XI	:SOUR:FREQ:CHAN:BAND BANDXI
Band XII	:SOUR:FREQ:CHAN:BAND BANDXII
Band XIII	:SOUR:FREQ:CHAN:BAND BANDXIII
Band XIV	:SOUR:FREQ:CHAN:BAND BANDXIV
Band XIX	:SOUR:FREQ:CHAN:BAND BANDXIX

#### LTE

Sets LTE FDD as the radio standard for use and accesses the LTE FDD specific channel band sub-menus.

Band 1	:SOUR:FREQ:CHAN:BAND BAND1
Band 2	:SOUR:FREQ:CHAN:BAND BAND2
Band 3	:SOUR:FREQ:CHAN:BAND BAND3
Band 4	:SOUR:FREQ:CHAN:BAND BAND4
Band 5	:SOUR:FREQ:CHAN:BAND BAND5
Band 6	:SOUR:FREQ:CHAN:BAND BAND6
Band 7	:SOUR:FREQ:CHAN:BAND BAND7
Band 8	:SOUR:FREQ:CHAN:BAND BAND8

Band 9	: SOUR : FREQ : CHAN : BAND BAND9
Band 10	: SOUR : FREQ : CHAN : BAND BAND10
Band 11	: SOUR : FREQ : CHAN : BAND BAND11
Band 12	: SOUR : FREQ : CHAN : BAND BAND12
Band 13	: SOUR : FREQ : CHAN : BAND BAND13
Band 14	: SOUR : FREQ : CHAN : BAND BAND14
Band 17	: SOUR : FREQ : CHAN : BAND BAND17
Band 18	: SOUR : FREQ : CHAN : BAND BAND18
Band 19	: SOUR : FREQ : CHAN : BAND BAND19
Band 20	: SOUR : FREQ : CHAN : BAND BAND20
Band 21	: SOUR : FREQ : CHAN : BAND BAND21
Band 24	: SOUR : FREQ : CHAN : BAND BAND24
Band 25	: SOUR : FREQ : CHAN : BAND BAND25
Band 26	: SOUR : FREQ : CHAN : BAND BAND26
Band 27	: SOUR : FREQ : CHAN : BAND BAND27
Band 28	: SOUR : FREQ : CHAN : BAND BAND28
Band 29	: SOUR : FREQ : CHAN : BAND BAND29
Band 30	: SOUR : FREQ : CHAN : BAND BAND30
Band 31	: SOUR : FREQ : CHAN : BAND BAND31
Band 65	: SOUR : FREQ : CHAN : BAND BAND65
Band 66	: SOUR : FREQ : CHAN : BAND BAND66
Band 67	: SOUR : FREQ : CHAN : BAND BAND67
Band 68	: SOUR : FREQ : CHAN : BAND BAND68
Band 71	: SOUR : FREQ : CHAN : BAND BAND71
Band 252	: SOUR : FREQ : CHAN : BAND BAND252
Band 255	: SOUR : FREQ : CHAN : BAND BAND255

#### LTE TDD

Sets LTE TDD as the radio standard for use and accesses the LTE TDD specific channel band sub-menus.

Band 33	: SOUR : FREQ : CHAN : BAND BAND33
Band 34	: SOUR : FREQ : CHAN : BAND BAND34
Band 35	: SOUR : FREQ : CHAN : BAND BAND35
Band 36	: SOUR : FREQ : CHAN : BAND BAND36
Band 37	: SOUR : FREQ : CHAN : BAND BAND37
Band 38	: SOUR : FREQ : CHAN : BAND BAND38
Band 39	: SOUR : FREQ : CHAN : BAND BAND39

## 6 Input/Output

### 6.1 RF Source

Band 40	:SOUR:FREQ:CHAN:BAND BAND40
Band 41	:SOUR:FREQ:CHAN:BAND BAND41
Band 42	:SOUR:FREQ:CHAN:BAND BAND42
Band 43	:SOUR:FREQ:CHAN:BAND BAND43
Band 44	:SOUR:FREQ:CHAN:BAND BAND44
Band 45	:SOUR:FREQ:CHAN:BAND BAND45
Band 46	:SOUR:FREQ:CHAN:BAND BAND46

### 5G NR

Sets 5G NR as the radio standard for use and accesses the 5G NR specific channel band sub-menus.

N 1	:SOUR:FREQ:CHAN:BAND N1
N 2	:SOUR:FREQ:CHAN:BAND N2
N 3	:SOUR:FREQ:CHAN:BAND N3
N 5	:SOUR:FREQ:CHAN:BAND N5
N 7	:SOUR:FREQ:CHAN:BAND N7
N 8	:SOUR:FREQ:CHAN:BAND N8
N 12	:SOUR:FREQ:CHAN:BAND N12
N 20	:SOUR:FREQ:CHAN:BAND N20
N 25	:SOUR:FREQ:CHAN:BAND N25
N 28	:SOUR:FREQ:CHAN:BAND N28
N 34	:SOUR:FREQ:CHAN:BAND N34
N 38	:SOUR:FREQ:CHAN:BAND N38
N 39	:SOUR:FREQ:CHAN:BAND N39
N 40	:SOUR:FREQ:CHAN:BAND N40
N 41	:SOUR:FREQ:CHAN:BAND N41
N 50	:SOUR:FREQ:CHAN:BAND N50
N 51	:SOUR:FREQ:CHAN:BAND N51
N 66	:SOUR:FREQ:CHAN:BAND N66
N 70	:SOUR:FREQ:CHAN:BAND N70
N 71	:SOUR:FREQ:CHAN:BAND N71
N 74	:SOUR:FREQ:CHAN:BAND N74
N 75	:SOUR:FREQ:CHAN:BAND N75
N 76	:SOUR:FREQ:CHAN:BAND N76
N 77	:SOUR:FREQ:CHAN:BAND N77
N 78	:SOUR:FREQ:CHAN:BAND N78
N 79	:SOUR:FREQ:CHAN:BAND N79
N 80	:SOUR:FREQ:CHAN:BAND N80

N 81	:SOUR:FREQ:CHAN:BAND N81
N 82	:SOUR:FREQ:CHAN:BAND N82
N 83	:SOUR:FREQ:CHAN:BAND N83
N 84	:SOUR:FREQ:CHAN:BAND N84
N 86	:SOUR:FREQ:CHAN:BAND N86
N 257	:SOUR:FREQ:CHAN:BAND N257
N 258	:SOUR:FREQ:CHAN:BAND N258
N 260	:SOUR:FREQ:CHAN:BAND N260
N 261	:SOUR:FREQ:CHAN:BAND N261

## Radio Band Link

Lets you specify the channel band type as either uplink or downlink link direction. This value is used in conjunction with the channel band and channel number to determine the absolute frequency output by the source.

- When set to **Uplink (UP)**, the source calculates the uplink frequency using an uplink formula together with the selected channel band and channel number
- When set to **Downlink (DOWN)** the source calculates the downlink frequency using a downlink formula together with the selected channel band and channel number

Remote Command	:SOURce:RADio:BAND:LINK DOWN   UP :SOURce:RADio:BAND:LINK?
Example	:SOUR:RAD:BAND:LINK UP
Preset	DOWN
Range	DOWN   UP
Backwards Compatibility SCPI	:SOURce:RADio:DEVIce BTS   MS :SOURce:RADio:DEVIce?
Backwards Compatibility Notes	DOWN = BTS UP = MS

### 6.1.9.4 Set Reference Frequency

Lets you set the frequency reference. Pressing this control turns the frequency reference state to **ON**, sets the reference frequency value to the current frequency, maintains this frequency at the RF output, and sets the displayed frequency to 0.00 Hz. All subsequent frequencies entered under Source>Frequency>Frequency are interpreted as being relative to this reference frequency.

6 Input/Output  
6.1 RF Source

When you use a frequency reference, the signal generator outputs a frequency that is set relative to the reference frequency by the value entered under **Source, Frequency, Frequency** as follows:

Output frequency = reference frequency - entered frequency

Where:

- reference frequency equals the original RF frequency entered under **Source>Frequency>Frequency** and set as the reference frequency
- entered frequency equals a new value entered under **Source, Frequency, Frequency**

In addition, the displayed frequency value will be the same as the value entered under **Source>Frequency>Frequency**.

NOTE

If **Freq Reference** is **ON** with a reference value set, entering a value under **Source, Frequency, Frequency** and pressing **Set Frequency Reference** adds that value to the existing **Freq Reference** value.

If you wish to change the reference frequency value to the new value entered under **Source, Frequency, Frequency**, first set **Freq Reference** **OFF** then press **Set Frequency Reference**.

---

Remote Command	: <b>SOUR</b> ce: <b>FREQ</b> uency: <b>REF</b> erence: <b>SET</b>
Example	: <b>SOUR</b> : <b>FREQ</b> : <b>REF</b> : <b>SET</b>
Dependencies	Unavailable, and grayed-out, when List Sequencer is <b>ON</b>

---

### 6.1.9.5 Freq Reference

Lets you toggle the state of the frequency reference. When the frequency reference state is **ON**, an annunciator is displayed on the main source view to indicate this state to the user.

When you use a frequency reference, the signal generator outputs a frequency that is set relative to the reference frequency by the value entered under **Source, Frequency, Frequency** as follows:

Output frequency = reference frequency + entered frequency

Where:

- reference frequency equals the original RF frequency entered under **Source, Frequency, Frequency** and set as the reference frequency
- entered frequency equals a new value entered under **Source, Frequency, Frequency**

For more information on Reference Frequency, see ["Set Reference Frequency" on page 2516](#).

Remote Command	<code>:SOURce:FREQuency:REFerence &lt;freq&gt;</code> <code>:SOURce:FREQuency:REFerence?</code>						
Example	<code>:SOUR:FREQ:REF 0.00 Hz</code>						
Dependencies	Unavailable, and grayed-out, when List Sequencer is <b>ON</b>						
Couplings	The frequency reference state is coupled to the frequency reference set immediate action. When the reference set immediate action key is pressed, or the SCPI command issued, it turns the frequency reference state <b>ON</b>						
Preset	0.00 Hz						
Min	0.00 Hz						
Max	Hardware Dependent: <table border="1" data-bbox="406 772 1404 903"> <tr> <td>Option 503</td> <td>3.6 GHz</td> </tr> <tr> <td>Option 504</td> <td>3.8 GHz</td> </tr> <tr> <td>Option 506</td> <td>6.00 GHz</td> </tr> </table> For E7760B: Dependent on port selected  Auto Function	Option 503	3.6 GHz	Option 504	3.8 GHz	Option 506	6.00 GHz
Option 503	3.6 GHz						
Option 504	3.8 GHz						
Option 506	6.00 GHz						
Remote Command	<code>:SOURce:FREQuency:REFerence:STATe OFF   ON   0   1</code> <code>:SOURce:FREQuency:REFerence:STATe?</code>						
Example	<code>:SOUR:FREQ:REF:STATe ON</code>						
Preset	<b>OFF</b>						

### 6.1.9.6 Freq Offset

Lets you specify the frequency offset value. When the frequency offset state is **ON**, an annunciator is displayed on the main source view to indicate this state.

When the frequency offset is set to zero (0) and you set a new offset value, the displayed frequency value changes as follows, and the RF output frequency does not change:

Displayed value = output frequency + offset value

Where:

- output frequency equals the original frequency entered under **Source, Frequency, Frequency**
- offset value equals the value entered under **Source, Frequency, Freq Offset**



---

Option 506 6.00 GHz

For E7760B: Dependent on port selected

For EXM, if license 5WC is present, the frequency range should be limited to: 1.1GHz-1.7GHz, 2.4GHz-2.5GHz, 4.8GHz-6.0GHz. If the user-defined frequency is outside of range, reports error message "Settings conflict; Frequency is outside available range"

### 6.1.9.8 Rx/Tx Coupling

Allows coupling between the frequency of the Internal Source, RF Output Frequency, and the instrument Center Frequency. For all settings except **NONE**, this parameter couples the **Center Frequency** of the instrument to the RF Output Frequency of the source. Valid setting changes result in the Analyzer CF and RF Output Frequency parameters being set to the same value, plus the "Rx/Tx Offset" on page 2521.

The four states for coupling are:

<b>SOURCE</b>	Source follows Analyzer Coupling is in one direction only. Changes to the Center Frequency will result in the RF Output Frequency being set to the same value, with any Rx/Tx Frequency Offset applied. Changes to the RF Output Frequency will not change the Center Frequency and will change Rx/Tx Frequency Coupling to None
<b>ANALYZER</b>	Analyzer follows Source Coupling is in one direction only. Changes to the RF Output Frequency will result in the Center Frequency being set to the same value, with any Rx/Tx Frequency Offset applied. Changes to the Center Frequency will not change the RF Output Frequency and will change Rx/Tx Frequency Coupling to None
<b>BOTH</b>	Analyzer/Source Coupled Coupling is bi-directional. Changes to the Center Frequency will result in the RF Output Frequency being set to the same value, with any Rx/Tx Frequency Offset applied. Changes to the RF Output Frequency will result in the Center Frequency being set to the same value, with any Rx/Tx Frequency Offset applied
<b>NONE</b>	None RF Output Frequency and CF Frequency are independently controlled

---

Remote Command `:SOURCE:FREQUENCY:COUPLING NONE | BOTH | SOURCE | ANALYZER`  
`:SOURCE:FREQUENCY:COUPLING?`

---

Example `:SOUR:FREQ:COUP BOTH`

---

Dependencies Only appears in Radio Test Mode

---

Preset **NONE**

Input/Output Preset

---

State Saved Yes

### 6.1.9.9 Rx/Tx Offset

Lets you offset the RF Output Frequency of the source from the **Center Frequency** of the instrument. See ["Rx/Tx Coupling" on page 2520](#) for coupling behavior.

Remote Command	<code>:SOURce:FREQuency:COUPling:OFFSet &lt;freq&gt;</code> <code>:SOURce:FREQuency:COUPling:OFFSet?</code>						
Example	<code>:SOUR:FREQ:COUP:OFF 100 kHz</code>						
Dependencies	Grayed-out when <a href="#">"Rx/Tx Coupling" on page 2520</a> is set to <b>NONE</b> . If the grayed-out control is selected, the following message appears: "The parameter cannot be changed when Rx/Tx Coupling is Off" Only appears in Radio Test Mode						
Preset	0 Hz (Input/Output Preset)						
Min	-6 GHz						
Max	Hardware Dependent: <table border="1" data-bbox="406 903 1404 1039"> <tr> <td>Option 503</td> <td>3.6 GHz</td> </tr> <tr> <td>Option 504</td> <td>3.8 GHz</td> </tr> <tr> <td>Option 506</td> <td>6.00 GHz</td> </tr> </table> For E7760B: Dependent on port selected For E6640A, if license 5WC is present, the frequency range should be limited to: 1.1GHz-1.7GHz, 2.4GHz-2.5GHz, 4.8GHz-6.0GHz. If the user-defined frequency is outside of range, UI reports an error message: "Settings conflict; Frequency is outside available range"	Option 503	3.6 GHz	Option 504	3.8 GHz	Option 506	6.00 GHz
Option 503	3.6 GHz						
Option 504	3.8 GHz						
Option 506	6.00 GHz						

### 6.1.10 Modulation

Lets you toggle the state of modulation.

Remote Command	<code>:OUTPut:MODulation[:STATe] ON   OFF   1   0</code> <code>:OUTPut:MODulation[:STATe]?</code>
Example	<code>:OUTP:MOD OFF</code>
Notes	This setting is for independent mode and has no effect on the <a href="#">"List Sequencer" on page 2479</a> . If <b>Sequencer</b> is <b>ON</b> , the List Sequencer controls the source output, and this key is grayed-out When <b>Sequencer</b> is <b>OFF</b> , source leaves List Sequencer, and this setting is blanked out, taking effect immediately When Modulation is <b>ON</b> , the "MOD" annunciator is displayed in the system settings panel. When Modulation is <b>OFF</b> , the "MOD" annunciator is cleared If <b>Sequencer</b> is <b>ON</b> , the "MOD" annunciator will be replaced by "SEQ" in the system settings panel, indicating that the output is controlled by List Sequencer

Preset	OFF
Range	ON OFF

## 6.1.11 Modulation Setup

Allows access to the menus for setting up the available modulation types.

Not available in E7760B.

AM/FM/PM are not available for VXT models M9415A/16A and M9415E/16E .

### 6.1.11.1 AM

Enables or disables amplitude modulation.

Turning **AMON** when another modulation format is already on results in the previous modulation format being turned off, and generates an error.

Remote Command	<code>:SOURce:AM:STATe ON   OFF   1   0</code> <code>:SOURce:AM:STATe?</code>
Example	<code>:SOUR:AM:STAT OFF</code>
Dependencies	Not available in E7760B
Preset	OFF
Range	ON OFF

### 6.1.11.2 AM Mod Depth

Lets you set the amplitude modulation depth in percent.

Remote Command	<code>:SOURce:AM[:DEPTh][:LINear] &lt;real&gt;</code> <code>:SOURce:AM[:DEPTh][:LINear]?</code>
Example	<code>:SOUR:AM 0.1</code>
Dependencies	Not available in E7760B
Preset	0.1 %
Min	0.1 %
Max	95.0 %

### 6.1.11.3 AM Rate

Lets you set the internal amplitude modulation rate.

6 Input/Output  
6.1 RF Source

Remote Command	<code>:SOURce:AM:INTernal:FREQuency &lt;freq&gt;</code> <code>:SOURce:AM:INTernal:FREQuency?</code>
Example	<code>:SOUR:AM:INT:FREQ 40.0 Hz</code>
Dependencies	Not available in E7760B
Preset	400.0 Hz
Min	10 Hz
Max	40 kHz

#### 6.1.11.4 AM Rate Increment

Changes the step size for "AM Rate" on page 2522. Once an increment size has been selected and **AM Rate** is active, the step keys (and the **UP | DOWN** parameters for **AM Rate** from remote commands) change **AM Rate** by the increment value.

Remote Command	<code>:SOURce:AM:INTernal:FREQuency:STEP[:INCRement] &lt;freq&gt;</code> <code>:SOURce:AM:INTernal:FREQuency:STEP[:INCRement]?</code>
Example	<code>:SOUR:AM:INT:FREQ:STEP 100 Hz</code> <code>:SOUR:AM:INT:FREQ:STEP?</code>
Couplings	Coupled to the increment size of <b>AM Rate</b>
Preset	10 Hz
State Saved	Yes
Min	1 Hz
Max	40 kHz

#### 6.1.11.5 FM

Enables or disables frequency modulation.

Turning **FMON** when another modulation format is already on results in the previous modulation format being turned off and the generation of an error.

Remote Command	<code>:SOURce:FM:STATe ON   OFF   1   0</code> <code>:SOURce:FM:STATe?</code>
Example	<code>:SOUR:FM:STAT OFF</code>
Dependencies	Not available in E7760B
Preset	<b>OFF</b>
Range	<b>ON OFF</b>

### 6.1.11.6 FM Deviation

Lets you set the frequency modulation deviation.

Remote Command	<code>:SOURce:FM[:DEVIation] &lt;freq&gt;</code> <code>:SOURce:FM[:DEVIation]?</code>
Example	<code>:SOUR:FM 1.00 kHz</code>
Dependencies	Not available in E7760B
Preset	1.00 Hz
Min	1.00 Hz
Max	100.00 kHz

### 6.1.11.7 FM Rate

Lets you set the internal frequency modulation rate.

Remote Command	<code>:SOURce:FM:INTernal:FREQuency &lt;freq&gt;</code> <code>:SOURce:FM:INTernal:FREQuency?</code>
Example	<code>:SOUR:FM:INT:FREQ 40.0 Hz</code>
Dependencies	Not available in E7760B
Preset	400.0 Hz
Min	10 Hz
Max	40 kHz

### 6.1.11.8 FM Rate Increment

Changes the step size for "FM Rate" on page 2524. Once an increment size has been selected and **FM Rate** is active, the step keys (and the **UP | DOWN** parameters for **FM Rate** from remote commands) change **FM Rate** by the increment value.

Remote Command	<code>:SOURce:FM:INTernal:FREQuency:STEP[:INCRement] &lt;freq&gt;</code> <code>:SOURce:FM:INTernal:FREQuency:STEP[:INCRement]?</code>
Example	<code>:SOUR:FM:INT:FREQ:STEP 100 Hz</code> <code>:SOUR:FM:INT:FREQ:STEP?</code>
Couplings	Coupled to the increment size of <b>FM Rate</b>
Preset	10 Hz
State Saved	Yes
Min	1 Hz
Max	40 kHz

### 6.1.11.9 PM

Enables or disables phase modulation.

Turning **PMON** when another modulation format is already on results in the previous modulation format being turned **OFF** and the generation of an error.

Remote Command	<code>:SOURce:PM:STATe ON   OFF   1   0</code> <code>:SOURce:PM:STATe?</code>
Example	<code>:SOUR:PM:STAT OFF</code>
Dependencies	Not available in E7760B
Preset	<b>OFF</b>
Range	<b>ON OFF</b>

### 6.1.11.10 PM Deviation

Lets you set the phase modulation deviation in radian.

Remote Command	<code>:SOURce:PM[:DEVIation] &lt;real&gt;</code> <code>:SOURce:PM[:DEVIation]?</code>	
Example	<code>:SOUR:PM 1.00</code>	
Dependencies	Not available in E7760B	
Preset	0.1 rad	
Min	0.1 rad	
Max	<b>Instrument Type</b>	<b>Value</b>
	M9410A/11A	10.0 rad
	All Others	20.0 rad

### 6.1.11.11 PM Rate

Lets you set the internal phase modulation rate.

Remote Command	<code>:SOURce:PM:INTernal:FREQuency &lt;freq&gt;</code> <code>:SOURce:PM:INTernal:FREQuency?</code>
Example	<code>:SOUR:PM:INT:FREQ 40.0 Hz</code>
Dependencies	Not available in E7760B
Preset	400.0 Hz

Min	10 Hz
Max	40 kHz

### 6.1.11.12 PM Rate Increment

Changes the step size for "PM Rate" on page 2525. Once an increment size has been selected and **PM Rate** is active, the step keys (and the **UP | DOWN** parameters for **PM Rate** from remote commands) change **PM Rate** by the increment value.

Remote Command	<code>:SOURce:PM:INTernal:FREQuency:STEP[:INCRement] &lt;freq&gt;</code> <code>:SOURce:PM:INTernal:FREQuency:STEP[:INCRement]?</code>
Example	<code>:SOUR:PM:INT:FREQ:STEP 100 Hz</code> <code>:SOUR:PM:INT:FREQ:STEP?</code>
Couplings	Coupled to the increment size of PM Rate
Preset	10 Hz
State Saved	Yes
Min	1 Hz
Max	40 kHz

### 6.1.11.13 ARB Setup

Accesses menus for setting up the Arbitrary Waveform Generator.

#### Basic Control

Lets you set up the basic ARB parameters and select a waveform to play.

#### ARB State

Lets you toggle the state of the ARB function. When the ARB is **ON**, a "MOD" annunciator is displayed in the system settings panel. When the ARB is **OFF**, the MOD annunciator is cleared

Remote Command	<code>:SOURce:RADio:ARB[:STATe] ON   OFF   1   0</code> <code>:SOURce:RADio:ARB[:STATe]?</code>
Example	<code>:SOUR:RAD:ARB OFF</code> <code>:SOUR:RAD:ARB?</code>
Notes	If ARB is <b>ON</b> , and you then load or delete another file to ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished

## 6 Input/Output

### 6.1 RF Source

Dependencies	<p>This setting is for the independent mode, and has no effect on <a href="#">"List Sequencer" on page 2479</a>. If <b>Sequencer</b> is <b>ON</b>, this will make the source enter List Sequencer mode, and even if ARB state is <b>ON</b>, the ARB file will not be played. When <b>Sequencer</b> is <b>OFF</b>, source leaves List Sequencer and this setting takes effect immediately</p> <p>The ARB can only be turned on when there is a waveform file selected for playback. On the GUI, If no waveform is selected, this key is grayed out. If you send the SCPI command to turn the ARB on with no waveform selected for playback, the ARB state remains <b>OFF</b> and an error is generated</p> <p>-If you try to recall a certain set of states in which the selected waveform is not in ARB memory and the ARB state is <b>ON</b>, errors are reported</p>
Preset	<b>OFF</b>
Range	<b>ON OFF</b>

## Sample Rate

Lets you set the ARB waveform playback sample rate.

See ["More Information" on page 2528](#)

Remote Command	<pre>:SOURce:RADio:ARB:SCLock:RATE &lt;freq&gt;</pre> <pre>:SOURce:RADio:ARB:SCLock:RATE?</pre>	
Example	<pre>:SOUR:RAD:ARB:SCL:RATE 48.00 MHz</pre>	
Notes	<p>If there is a sample rate specified in the header of the waveform file, changing that sample rate is not recommended, as it may cause problems with burst timing</p> <p>For E7760B, the Sample Rate is fixed. If this control is attempted to be set the error -221, "Settings conflict; Sample Rate is fixed" is generated</p>	
Dependencies	<p>When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The sample rate is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the sample rate is updated with the value from the header file. The sample rate will remain unchanged if the newly selected waveform does not have an associated header file</p>	
Preset		
	E7760B	2.64 GHz
	Option B40	50 MHz
	Option B85	100 MHz
	Option B1X	200 MHz
	Option B3X	375 MHz
	Option B6X	750 MHz
	Option B4X	500 MHz
	Option B8X	1.0 GHz
	Option B12	1.5 GHz

Min	E7760B: 2.64 GHz All Others: 1.00 kHz		
Max	Hardware Dependent:		
	E7760B		2.64 GHz
	VXT model M9420A	Option B40	50 MHz
		Option B85	100 MHz
		Option B1X	200 MHz
	VXT models M9410A/11A and M9410E/11E	Option B40	50 MHz
		Option B3X	375 MHz
		Option B6X	750 MHz
		Option B12	1.5 GHz
	VXT models M9415A/16A and M9415E/16E	Option B4X	500 MHz
		Option B8X	1.0 GHz
		Option B12	1.5 GHz

For VXT models M9410A/11A/15A/16A, M9410E/11E/15E/16E and E6680A/81A, the sample rate is only limited by the option, but the IF BW is limited by center frequency in addition to options. See ["More Information" on page 2528](#). Performance is guaranteed only when the bandwidth of the selected waveform is smaller than the Max IF BW

### More Information

Although the range of Sample Rate only depends on the installed option, the Maximum IF BW depends on options as well as the Center Frequency.

### VXT models M9410A/11A, E6680A and E6681A

Option Limitation:

Option	Maximum IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
6.5 kHz ~ 9 kHz (Option LFE)	(CF - 6.5 kHz) * 2
9 kHz ~ 100 kHz (Option LFE)	5 kHz

6 Input/Output  
6.1 RF Source

Center Frequency	Maximum IF BW
100 kHz ~ 1 MHz (Option LFE)	50 kHz
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	(CF - 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 5480 MHz (without Option EP6)	1200 MHz
5480 MHz ~ 6080 MHz (without Option EP6)	(6080 MHz - CF) * 2
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 6000 MHz (Option EP6)	1200 MHz
6000 MHz ~ 6600 MHz (Option EP6)	(6600 MHz - CF) * 2

### VXT models M9415A/16A

Option Limitation:

Option	Maximum IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
330 MHz ~ 380 MHz	(CF - 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 12300 MHz	1200 MHz
12300 MHz ~ 12900 MHz	(12900 MHz - CF) * 2

### M9410E/11E

Option Limitation:

Option	Maximum IF BW
B40	40 MHz
B3X	300 MHz
B6X	600 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz
330 MHz ~ 380 MHz (without Option LFE)	(CF - 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz (without Option EP6)	600 MHz
2000 MHz ~ 25.9 GHz (without Option EP6)	1200 MHz
1310 MHz ~ 1900 MHz (Option EP6)	600 MHz
1900 MHz ~ 25.9 GHz (Option EP6)	1200 MHz
25.9 GHz ~ 26.5 GHz	Min(Max BW by option, 2*(26.5 GHz-Center Freq))

## M9415E/16E

Option Limitation:

Option	Maximum IF BW
B4X	400 MHz
B8X	800 MHz
B12	1200 MHz

Center Frequency Limitation:

Center Frequency	Maximum IF BW
1 MHz ~ 10 MHz (Option LFE)	500 kHz
10 MHz ~ 20 MHz (Option LFE)	5 MHz
20 MHz ~ 60 MHz (Option LFE)	10 MHz
60 MHz ~ 80 MHz (Option LFE)	20 MHz
80 MHz ~ 380 MHz (Option LFE)	40 MHz

6 Input/Output  
6.1 RF Source

Center Frequency	Maximum IF BW
330 MHz ~ 380 MHz (without Option LFE)	(CF - 330 MHz) * 2
380 MHz ~ 550 MHz	100 MHz
550 MHz ~ 1310 MHz	200 MHz
1310 MHz ~ 2000 MHz	600 MHz
2000 MHz ~ 25.9 GHz	1200 MHz
25.9 GHz ~ 26.5 GHz	Min(Max BW by option, 2*(26.5 GHz-Center Freq))

## Run-Time Scaling

Lets you adjust the run-time scaling value. The run-time scaling value is applied in real-time while the waveform is playing.

Remote Command	<code>:SOURce:RADio:ARB:RSCaling &lt;real&gt;</code> <code>:SOURce:RADio:ARB:RSCaling?</code>
Example	<code>:SOUR:RAD:ARB:RSC 100.00</code>
Notes	Cannot be set in EXM and VXT. Grayed-out in menu, and the value is fixed at 70.00%
Dependencies	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The run-time scaling is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the run-time scaling is updated with the value from the header file. The run-time scaling will remain unchanged if the newly selected waveform does not have an associated header file
Preset	70.00 %
Min	1.00 %
Max	100.00 %

## Baseband Freq Offs

Lets you adjust the value by which the baseband frequency is offset relative to the carrier.

Remote Command	<code>:SOURce:RADio:ARB:BASEband:FREQuency:OFFSet &lt;freq&gt;</code> <code>:SOURce:RADio:ARB:BASEband:FREQuency:OFFSet?</code>
Example	<code>:SOUR:RAD:ARB:BAS:FREQ:OFFS 0.00 Hz</code>
Dependencies	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The baseband frequency offset is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the baseband frequency offset is updated with the value from the header file. The baseband frequency offset will remain unchanged if the newly selected waveform does not have an associated header file Not available in E7760B

Preset	0.00 Hz
Min	-50.00 MHz
Max	50.00 MHz

## Baseband Power

Lets you quickly control the power of the modulator prior to up-conversion to the RF carrier.

Remote Command	<code>:SOURce:RADio:ARB:BASEband:POWer &lt;ampl&gt;</code> <code>:SOURce:RADio:ARB:BASEband:POWer?</code>
Example	<code>:SOUR:RAD:ARB:BAS:POW -10 dB</code>
Notes	The Source Power level equals RF Power plus Baseband Power. For example, if the RF Power is set to -10 dBm and the Baseband Power is set to -4 dB, the actual Source Power level is -14 dBm Can be used to change the output level very quickly compared to the RF Power
Dependencies	Only appears in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	0 dB
Min	-50 dB
Max	20 dB

## Mkr 1-4 Polarity

Lets you set the polarity of markers 1 through 4 respectively.

Remote Command	<code>:SOURce:RADio:ARB:MPOLarity:MARKer1 ... 4 POSitive   NEGative</code> <code>:SOURce:RADio:ARB:MPOLarity:MARKer1 ... 4?</code>
Example	<code>:SOUR:RAD:ARB:MPOL:MARK1 NEG</code>
Dependencies	When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The marker polarity is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the marker polarity is updated with the value from the header file. The marker polarity will remain unchanged if the newly selected waveform does not have an associated header file Not available in E7760B
Preset	<code>POSitive</code>
Range	<code>POSitive NEGative</code>

## Pulse/RF Blank

Lets you select which marker is used for **Pulse/RF Blank**. This function blanks the RF when the marker signal goes low. The marker polarity determines when the

## 6 Input/Output

### 6.1 RF Source

marker signal is high. For a positive polarity, this is during the marker points. For a negative polarity, this is when there are no marker points.

Marker points should be set before using this function. Enabling this function without setting maker points may create a continuous low or high signal, dependent on the marker polarity. This causes either no RF output, or a continuous RF output.

---

Remote Command    `:SOURce:RADio:ARB:MDEStination:PULSe NONE | M1 | M2 | M3 | M4`

For option details, see ["More Information" on page 2533](#)

`:SOURce:RADio:ARB:MDEStination:PULSe?`

---

Example            `:SOUR:RAD:ARB:MDES:PULS NONE`

---

Dependencies      When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The **Pulse/RF Blank** setting is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the **Pulse/RF Blank** setting is updated with the value from the header file. The **Pulse/RF Blank** setting remains unchanged if the newly selected waveform does not have an associated header file

---

Range              `NONE | M1 | M2 | M3 | M4`

#### More Information

Parameter	SCPI	Notes
None	<code>NONE</code>	Sets no marker to be used for <b>Pulse/RF Blank</b> function, essentially turning the RF blanking function off
Marker 1	<code>M1</code>	Sets marker 1 to be used for <b>Pulse/RF Blank</b>
Marker 2	<code>M2</code>	Sets marker 2 to be used for <b>Pulse/RF Blank</b>
Marker 3	<code>M3</code>	Sets marker 3 to be used for <b>Pulse/RF Blank</b>
Marker 4	<code>M4</code>	Sets marker 4 to be used for <b>Pulse/RF Blank</b>

#### ALC Hold

Lets you specify which marker is routed for use within **ALC Hold**. This function holds the ALC circuitry at the average value of the sample points set by the marker.

**ALC Hold** operates during the low periods of the marker signal. The marker polarity determines when the marker signal is high. For positive polarity, this is during the marker points. For a negative polarity, this is when there are no maker points.

---

Remote Command    `:SOURce:RADio:ARB:MDEStination:ALCHold NONE | M1 | M2 | M3 | M4`

For option details, see ["Option Details" on page 2534](#)

`:SOURce:RADio:ARB:MDEStination:ALCHold?`

---

Example            `:SOUR:RAD:ARB:MDES:ALCH NONE`

---

Dependencies      When a new waveform is selected for playback the settings contained within the associated waveform header file are applied to the ARB. The **ALC Hold** setting is one of the values stored within the header file. If the newly selected waveform file has an associated header file, the **ALC Hold** setting is updated

with the value from the header file. The **ALC Hold** setting remains unchanged if the newly selected waveform does not have an associated header file

Not available in E7760B, and VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E

Range [NONE](#) | [M1](#) | [M2](#) | [M3](#) | [M4](#)

### Option Details

Parameter	SCPI	Notes
None	<a href="#">NONE</a>	Use no marker for <b>ALC Hold</b> , essentially turning <b>ALC Hold</b> off
Marker 1	<a href="#">M1</a>	Use marker 1 for <b>ALC Hold</b>
Marker 2	<a href="#">M2</a>	Use marker 2 for <b>ALC Hold</b>
Marker 3	<a href="#">M3</a>	Use marker 3 for <b>ALC Hold</b>
Marker 4	<a href="#">M4</a>	Use marker 4 for <b>ALC Hold</b>

### Trigger Type

Determines the behavior of the waveform when it plays.

Remote Command	<a href="#">:SOURce:RADio:ARB:TRIGger:TYPE CONTInuous</a>   <a href="#">SINGle</a>   <a href="#">SADVance</a> <a href="#">:SOURce:RADio:ARB:TRIGger:TYPE?</a>
Example	<a href="#">:SOUR:RAD:ARB:TRIG:TYPE CONT</a> <a href="#">:SOUR:RAD:ARB:TRIG:TYPE?</a>
Preset	<a href="#">CONTInuous</a>
Range	Continuous   Single   Seg Adv

### Continuous trigger

Sets the active trigger type to **Continuous**. If **Continuous** is already selected as the active trigger type, pressing this control allows access to the **Continuous trigger** type setup menu. In **Continuous** trigger mode, the waveform repeats continuously.

Remote Command	<a href="#">:SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE] FREE</a>   <a href="#">TRIGger</a>   <a href="#">RESet</a> See " <a href="#">Option Details</a> " on page 2535 <a href="#">:SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE]?</a>
Example	<a href="#">:SOUR:RAD:ARB:TRIG:TYPE:CONT FREE</a>
Preset	<a href="#">FREE</a>
Range	Free Run   Trigger + Run   Reset + Run

### Option Details

Parameter	SCPI	Notes
Free Run	<b>FREE</b>	Sets the waveform generator to play a waveform sequence or segment continuously, without waiting for a trigger. In this mode, the waveform generator does not respond to triggers
Trigger + Run	<b>TRIGger</b>	Sets the waveform generator to play a waveform sequence or segment continuously when the first trigger is received, and to ignore any subsequent triggers
Reset + Run	<b>RESet</b>	Sets the waveform generator to play a waveform sequence or segment continuously when the first trigger is received. Subsequent triggers reset the waveform sequence or segment to the start, and then play it continuously

### Single trigger

Sets the active trigger type to **Single**. If **Single** is already selected as the active trigger type, pressing this control allows access to the single trigger type setup menu. In **Single** trigger mode, the waveform plays once.

Remote Command	<b>:SOURce:RADio:ARB:RETRigger ON   OFF   IMMEDIATE</b> See <a href="#">"Option Details" on page 2535</a> <b>:SOURce:RADio:ARB:RETRigger?</b>	
Example	<b>:SOUR:RAD:ARB:RETR OFF</b>	
Notes	<b>ON</b> : Buffered Trigger <b>OFF</b> : No Retrigger <b>IMMEDIATE</b> : Restart on Trigger This is defined as an enumerated SCPI command, with <b>ON   OFF</b> being considered as enumerated types rather than Boolean. This means the query returns <b>OFF</b> instead of 0, and <b>ON</b> instead of 1	
Preset	<b>ON</b>	

### Option Details

Parameter	SCPI	Notes
No Retrigger	<b>OFF</b>	Sets the waveform generator to play a waveform sequence or segment once when a trigger is received. Any triggers then received during playback are ignored
Buffered Trigger	<b>ON</b>	Sets the waveform generator to play a waveform sequence or segment once when a trigger is received. If a trigger is received during playback, the waveform generator plays the sequence or segment to the end, then plays the sequence or segment once more
Restart on Trigger	<b>IMMEDIATE</b>	Sets the waveform generator to play a waveform sequence or segment once when a trigger is received. If a trigger is received during playback, the waveform generator resets and plays the sequence or segment from the start

## Segment Advance trigger

Sets the active trigger type to **Segment Advance**. If **Segment Advance** is already selected as the active trigger type, pressing this control allows access to the segment advance trigger type setup menu.

**Segment Advance** triggering allows you to control the playback of waveform segments within a waveform sequence. When a trigger is received the ARB advances to the next waveform segment within the waveform sequence. This type of triggering ignores the repetition count for the waveform segment within the waveform sequence. For example, if a waveform segment has a repetition count of 10 and you select single segment advance triggering mode, the waveform segment will only play once.

**Segment Advance** triggering can also be used for waveform segments only. In this situation, the same waveform segment is played again when a trigger is received.

Remote Command	<code>:SOURce:RADio:ARB:TRIGger:TYPE:SADVance[:TYPE] SINGle   CONTinuous</code> See " <a href="#">Option Details</a> " on page 2536 <code>:SOURce:RADio:ARB:TRIGger:TYPE:SADVance[:TYPE]?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:TYPE:SADV SING</code>
Dependencies	Not available in E7760B
Preset	<code>CONTinuous</code>
Range	<code>SINGle CONTinuous</code>

### Option Details

Parameter	SCPI	Notes
Single	<code>SINGle</code>	Once a trigger is received a segment is played once. If a trigger is received during playback of a segment, the segment plays to completion and the next segment is played once
Continuous	<code>CONTinuous</code>	Once a trigger is received a segment is played continuously. When subsequent triggers are received, the currently playing segment plays to completion and then the next segment is played continuously
Trigger Initiate	Front panel only	If " <a href="#">Trigger Source</a> " on page 2536 is set to <code>KEY</code> , initiates an immediate trigger event

## Trigger Source

Determines how the source receives the trigger that starts the waveform playing. Grayed-out if "[Trigger Type](#)" on page 2534 is free run, since free run triggers immediately with no trigger source required.

## 6 Input/Output

### 6.1 RF Source

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce] KEY   BUS   EXTerna11   EXTerna12   PXI</code> See <a href="#">"Option Details" on page 2537</a> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]?</code>
Example	<code>:SOUR:RAD:ARB:TRIG KEY</code>
Notes	For E7760B, the available selections are <a href="#">KEY   BUS</a>
Dependencies	Grayed-out if <b>Trigger Type</b> is Continuous, Free Run
Preset	<a href="#">EXTerna12</a> For E7760B: <a href="#">BUS</a>
Range	<a href="#">Key</a>   <a href="#">Bus</a>   <a href="#">External11</a>   <a href="#">External 2</a>   <a href="#">PXI</a>

#### Option Details

Parameter	SCPI	Notes
Key	<a href="#">KEY</a>	The waveform is triggered when you press the front panel <b>Trigger</b> key
Bus	<a href="#">BUS</a>	Enables triggering over GPIB, LAN, or USB using: <a href="#">:SOURce:RADio:ARB:TRIGger:INITiate</a>
External 1	<a href="#">EXTerna11</a>	Enables triggering a waveform by an externally-applied signal
External 2	<a href="#">EXTerna12</a>	Enables triggering a waveform by an externally-applied signal Note: in EXM, trigger 2 is a bi-directional trigger port, so when trigger 2 has been configured as OUTPUT type, selecting External 2 as the input trigger for the current step generates an error Note 2: in VXT model M9420A, triggers on an externally connected trigger source marked <b>Trigger 1</b> on the front panel
PXI	<a href="#">PXI</a>	Enables triggering a waveform by a PXI backplane Line applied signal


#### Bus Trigger Command (Remote Command Only)

Used to initiate an immediate trigger event if ["Trigger Source" on page 2536](#) is set to [BUS](#).

Remote Command	<code>:SOURce:RADio:ARB:TRIGger:INITiate</code>
Example	<code>:SOUR:RAD:ARB:TRIG:INIT</code>

#### Sync to Trigger Source

There is a time interval (system processing time) between the trigger event and the beginning of playing waveform. Turn on this control to compensate the system latency at the cost of cutting off the beginning of the ARB. The figure below shows the turn-on and turn-off behavior of the control.

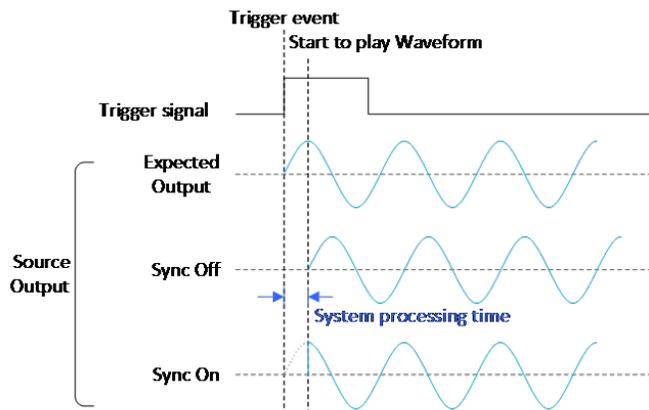

Remote Command	<code>:SOURce:RADio:ARB:TRIGger:SYNC[:STATe] ON   OFF   1   0</code> <code>:SOURce:RADio:ARB:TRIGger:SYNC[:STATe]?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:SYNC ON</code> <code>:SOUR:RAD:ARB:TRIG:SYNC?</code>
Notes	Compensates for the instrument internal latency. The negative trigger delay compensates the external latency (that is, heads and cables). See <a href="#">"External Trigger Delay" on page 2538</a> and <a href="#">"PXI Trigger Delay" on page 2541</a> The first PerARB trigger is cut off if <b>Sync to Trigger Source</b> is <b>ON</b>
Dependencies	Only available when <a href="#">"Trigger Source" on page 2536</a> is <b>EXTernal1</b> , <b>EXTernal2</b> , or <b>PXI</b>
Preset	<b>OFF</b>
Range	<b>ON OFF</b>

## External Trigger Delay

Lets you toggle the state and value of external trigger delay. The value you enter sets a delay time between when an external trigger is received and when it is applied to the waveform. Only active if ["Trigger Source" on page 2536](#) is **EXTernal1** or **EXTernal2**.

Negative trigger delay is only supported by VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E (see ["More Information" on page 2539](#)).

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:DELay &lt;time&gt;</code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:DELay?</code>
----------------	--

6 Input/Output  
6.1 RF Source


Example	:SOUR:RAD:ARB:TRIG:EXT:DEL 100ns :SOUR:RAD:ARB:TRIG:EXT:DEL?		
Notes	External trigger delay time set by users will be rounded to the nearest integer multiple of the resolution		
Dependencies	Unavailable and grayed-out when <b>Trigger Source</b> is not set to <b>EXTernal11</b> or <b>EXTernal12</b> Not available in E7760B		
Preset	1 ms		
Min	VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E: -10 s All others: 0 s		
Max	<b>Instrument/Condition</b>	<b>Value</b>	<b>Derivation</b>
	VXT models M9410A/11A/15A/16A	11.45324612 s	2.666667ns*(2 <sup>32</sup> -1)
	M9410E/11E/15E/16E	11.45324612 s	2.666667ns*(2 <sup>32</sup> -1)
	Continuous – Trigger + Run	11.45324612 s	2.666667ns*(2 <sup>32</sup> -1)
	Other trigger conditions	17.17986918 s	4 ns*(2 <sup>32</sup> -1)
	All others	8.589934588 s	4ns*(2 <sup>31</sup> - 1) = 8589934588 ns

Auto Function

Remote Command	:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:DELay:STATe OFF   ON   0   1 :SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:DELay:STATe?
Example	:SOUR:RAD:ARB:TRIG:EXT:DEL:STAT ON :SOUR:RAD:ARB:TRIG:EXT:DEL:STAT?
Preset	OFF

**More Information**

There is a time interval (system processing time) between the trigger event and the beginning of playing waveform. The figure below shows you the behavior. The negative trigger delay allows you to specify the beginning of a waveform.

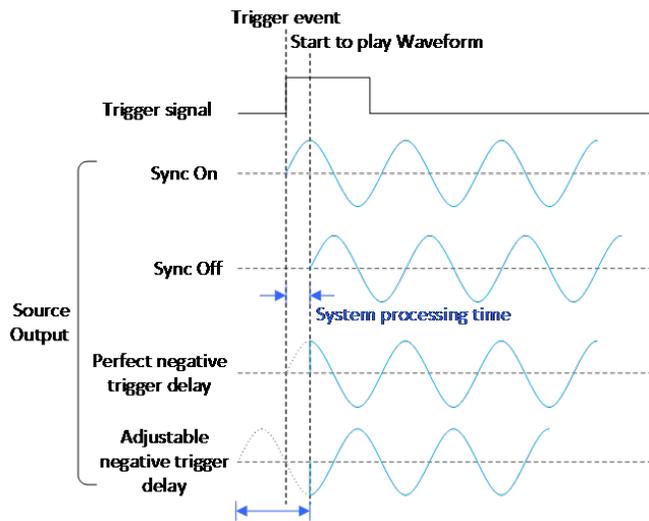

Note: the first PerArb trigger signal will be missed when the trigger delay is negative.

## External Trigger Polarity

Sets the polarity of the external trigger. When **POSitive** is selected, trigger event happens on a rising edge of the external trigger in signal. When **NEGative** is selected, trigger event happens on a falling edge of the external trigger in signal.

Active only if "**Trigger Source**" on page 2536 is **EXTernal1** or **EXTernal2**.

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:SLOPe POSitive   NEGative</code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:EXTernal:SLOPe?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:EXT:SLOP POS</code> <code>:SOUR:RAD:ARB:TRIG:EXT:SLOP?</code>
Dependencies	Unavailable and grayed-out when " <b>Trigger Source</b> " on page 2536 is not <b>EXTernal1</b> or <b>EXTernal2</b> Not available in E7760B
Preset	<b>POSitive</b>
Range	<b>POSitive</b>   <b>NEGative</b>

## Select PXI Line

Controls which `PXI_TRIG[0..7]` backplane line is used for the trigger source.  
Only appears in modular analyzer products.

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:LINE &lt;line&gt;</code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:LINE?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:PXI:LINE 2</code>
Dependencies	Unavailable and grayed-out when "Trigger Source" on page 2536 is not set to <code>PXI</code> Not available in E7760B
Preset	0
State Saved	Saved in instrument state
Range	[0,7]

## PXI Trigger Delay

Lets you toggle the state and value of PXI trigger delay. The value you enter sets a delay time between when an PXI trigger is received and when it is applied to the waveform.

Only active if "Trigger Source" on page 2536 is `PXI`.

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DElay &lt;time&gt;</code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DElay?</code>		
Example	<code>:SOUR:RAD:ARB:TRIG:PXI:DEL 100ns</code> <code>:SOUR:RAD:ARB:TRIG:PXI:DEL?</code>		
Notes	PXI trigger delay time set by users will be rounded to the nearest integer multiple of the resolution		
Dependencies	Unavailable and grayed-out when "Trigger Source" on page 2536 is not <code>PXI</code> Not available in E7760B		
Preset	1 ms		
Min	VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E: -10 s		
Max	<b>Instrument/Condition</b>	<b>Value</b>	<b>Derivation</b>
	VXT models M9410A/11A/15A/16A	11.45324612 s	$2.666667\text{ns} * (2^{32}-1)$
	M9410E/11E/15E/16E	11.45324612 s	$2.666667\text{ns} * (2^{32}-1)$
	Continuous - Trigger + Run" trigger	11.45324612 s	$2.666667\text{ns} * (2^{32}-1)$
	Other trigger conditions	17.17986918 s	$4\text{ ns} * (2^{32}-1)$
	All Others	8.589934588 s	$4\text{ns} * (2^{31} - 1)$

## Auto Function

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DELay:STATe OFF   ON   0   1</code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DELay:STATe?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:PXI:DEL:STAT ON</code> <code>:SOUR:RAD:ARB:TRIG:PXI:DEL:STAT?</code>
Preset	OFF

## PXI Trigger Polarity

Sets the polarity of the PXI trigger:

- When **POSitive** is selected, trigger event happens on a rising edge of the PXI trigger in signal
- When **NEGative** is selected, trigger event happens on a falling edge of the PXI trigger in signal

Active only if "[Trigger Source](#)" on page 2536 is **PXI**.

Remote Command	<code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:SLOPe POSitive   NEGative</code> <code>:SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:SLOPe?</code>
Example	<code>:SOUR:RAD:ARB:TRIG:PXI:SLOP POS</code> <code>:SOUR:RAD:ARB:TRIG:PXI:SLOP?</code>
Dependencies	Unavailable and grayed-out when " <a href="#">Trigger Source</a> " on page 2536 is <b>PXI</b> Not available in E7760B
Preset	POSitive
Range	POSitive NEGative

## I/Q Adjustments

Enables or disables the I/Q adjustments.

Remote Command	<code>:SOURce:RADio:ARB:IQADjustment:[STATe] OFF   ON   0   1</code> <code>:SOURce:RADio:ARB:IQADjustment:[STATe]?</code>
Example	<code>:SOUR:RAD:ARB:IQAD ON</code> <code>:SOUR:RAD:ARB:IQAD?</code>
Dependencies	Not available in E7760B
Preset	OFF

## I/Q Gain

Lets you adjust the ratio of I to Q while preserving the composite, vector magnitude. Adding Gain (+x dB) to the signal increases the I component and decreases the Q component proportionally. Reducing Gain (-x dB) decreases the I component and increases the Q component proportionally.

Remote Command	<code>:SOURce:RADio:ARB:IQADjustment:GAIN &lt;value&gt;&lt;unit&gt;</code> <code>:SOURce:RADio:ARB:IQADjustment:GAIN?</code>
Example	<code>:SOUR:RAD:ARB:IQAD:GAIN 0.5</code> <code>:SOUR:RAD:ARB:IQAD:GAIN?</code>
Notes	Effective only if the I/Q adjustment function is <b>ON</b>
Dependencies	Unavailable and grayed-out when the ARB state is <b>OFF</b> Not available in E7760B
Preset	+0.00000000E+000
Min	-1 dB
Max	1 dB

## I/Q Delay

Lets you change the absolute phase of both I and Q with respect to triggers and markers. A positive value delays I and Q. This value affects both the external I/Q out signals and the baseband signal modulated on the RF output. This adjustment does not affect external I/Q inputs.

Remote Command	<code>:SOURce:RADio:ARB:IQADjustment:DELaY &lt;value&gt;&lt;unit&gt;</code> <code>:SOURce:RADio:ARB:IQADjustment:DELaY?</code>									
Example	<code>:SOUR:RAD:ARB:IQAD:DEL 10ps</code> <code>:SOUR:RAD:ARB:IQAD:DEL?</code>									
Notes	User-set IQ delay time values are rounded to the nearest integer multiple of the resolution									
Dependencies	Unavailable and grayed-out when the ARB state is off Not available in E7760B									
Preset	+0.00000000E+000									
Min/Max	<table border="1"> <thead> <tr> <th>Instrument Type</th> <th>Min</th> <th>Max</th> </tr> </thead> <tbody> <tr> <td>M9410A/11A/15A/16A</td> <td>-80ns</td> <td>80ns</td> </tr> <tr> <td>All Others</td> <td>-250ns</td> <td>250ns</td> </tr> </tbody> </table>	Instrument Type	Min	Max	M9410A/11A/15A/16A	-80ns	80ns	All Others	-250ns	250ns
Instrument Type	Min	Max								
M9410A/11A/15A/16A	-80ns	80ns								
All Others	-250ns	250ns								

## RMS

Lets you directly specify current RMS value used to playback currently selected waveform.

For EXM, note that an incorrect RMS value may cause inaccurate power output that is sensitive to RMS value.

This setting is also updated by RMS in waveform header or updated when invoking RMS calculation operation.

This setting can be saved to the header of currently selected waveform by ["Save Header" on page 2564](#).

Remote Command	<code>:SOURCE:RADio:ARB:RMS &lt;float&gt;</code> <code>:SOURCE:RADio:ARB:RMS?</code>
Example	<code>:SOUR:RAD:ARB:HEAD:RMS 0.7</code> <code>:SOUR:RAD:ARB:HEAD:RMS?</code>
Notes	The valid range for this setting is 0 to 1.414 (linear). Values outside the range are clipped to the closest boundary  This value does not affect Source List Sequencer, which always uses the RMS value included in each ARB header. If this setting is to take effect in List Sequencer, use <a href="#">"Save Header" on page 2564</a> to save the current RMS value to the header, then play the ARB in Source List Sequencer
Dependencies	When a new waveform is selected for playback this setting is updated by the RMS value included in the associated waveform header file. If the selected waveform has no associated header file or the header file does not include the RMS value then the instrument will try to calculate the value automatically based on the RMS Calculation Mode setting  Pressing <b>Calculate</b> also updates this setting
Preset	0
Range	0 ~ 1.414

## RMS Calculation Mode

Lets you specify the mode to calculate the current RMS.

Remote Command	<code>:SOURCE:RADio:ARB:RMS:CALCulation:MODE AUTO   M1   M2   M3   M4</code> See <a href="#">"Option Details" on page 2545</a> <code>:SOURCE:RADio:ARB:RMS:CALCulation:MODE?</code>
Example	<code>:SOUR:RAD:ARB:RMS:CALC:MODE AUTO</code>
Notes	If no waveform is selected, or selected waveform is waveform sequence, the key is grayed-out
Preset	<code>AUTO</code>
Range	<code>AUTO   M1   M2   M3   M4</code>

### Option Details

Parameter	SCPI	Notes
Auto	<a href="#">AUTO</a>	In Auto, RMS is calculated based on the whole sample range of the currently selected waveform
Marker 1	<a href="#">M1</a>	Marker 1 designates the sample range for RMS calculation
Marker 2	<a href="#">M2</a>	Marker 2 designates the sample range for RMS calculation
Marker 3	<a href="#">M3</a>	Marker 3 designates the sample range for RMS calculation
Marker 4	<a href="#">M4</a>	Marker 4 designates the sample range for RMS calculation

### Calculate

Lets you calculate current RMS based on mode selected. Updates the setting in the ["RMS" on page 2544](#) control.

Remote Command	<a href="#">:SOURce:RADio:ARB:RMS:CALCulate</a>
Example	<a href="#">:SOUR:RAD:ARB:RMS:CALC</a>
Notes	<p>If no waveform is selected, invoking this operation generates error “-221 Setting conflict; No waveform is selected for RMS operation”</p> <p>Grayed-out if no waveform is selected, or selected waveform is waveform sequence</p> <p>If selected waveform does not contain marker data, but <a href="#">"RMS Calculation Mode" on page 2544</a> is set to marker, invoking a calculation operation generates error “-221 Setting conflict; There is no marker for currently selected waveform, auto RMS calculation mode is used instead”, and <a href="#">"RMS Calculation Mode" on page 2544</a> is coupled to <b>Auto</b> mode automatically</p> <p>RMS calculation is not suitable for waveform sequence. If selected waveform is waveform sequence file, invoking this operation generates error “-221 Setting conflict; RMS calculation does not apply to waveform sequence”</p> <p>You can still edit current RMS as play parameter, and save current RMS to waveform sequence header for later use</p>

### Use Header RMS

Lets you quickly set RMS to value in ARB header. Updates the setting in the ["RMS" on page 2544](#) control.

Notes	<p>Grayed-out if no waveform is selected</p> <p>If no waveform is selected, invoking this operation generates error “-221 Setting conflict; No waveform is selected for RMS operation”</p>
-------	--

## Real-Time 5G NR Compensation

Phase compensation is a new concept introduced into 5G NR baseband signal generation in TS38.211 as below, to address a typical 5G scenario that Tx and Rx frequencies may not be the same. In that case, without properly compensating the phase, receiver would not be able to correctly demodulate the received signal.

Modulation and up-conversion to the carrier frequency  $f_0$  of the complex-valued OFDM baseband signal for antenna port  $p$ , subcarrier spacing configuration  $\mu$ , and OFDM symbol  $l$  in a subframe assumed to start at  $t = 0$  is given by the following equation for all channels and signals except PRACH:

$$Re \left\{ s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0(t - t_{start,l}^\mu - N_{CP,l}^\mu T_c)} \right\}$$

$$Re \left\{ s_l^{(p,\mu)}(t) \cdot e^{j2\pi f_0(t - t_{start,l}^\mu - N_{CP,l}^\mu T_c)} \right\}$$

From the 3GPP specification equation above, it can be observed that phase compensation is performed for a specific transmission frequency  $f_0$ . So that means, even if a same signal configuration needs to be transmitted at multiple frequencies, we'll have to generate a different waveform for each frequency point. As a result, the number of test waveforms will increase significantly along with the frequency number. This would be a big challenge for test engineers, considering the complexity of 5G NR signal configurations - they have to maintain a large waveform library and identify each waveform carefully with its "frequency tag".

Real-Time 5G NR Phase Compensation allows you to play the same 5G NR waveform while performing phase compensation along with transmission frequency change automatically. This control allows you to turn on or off the real-time phase compensation for 5G NR waveform.

Remote Command	<code>:SOURCE:RADio:ARB:NR5G:PHASe[:STATe] ON   OFF   1   0</code> <code>:SOURCE:RADio:ARB:NR5G:PHASe[:STATe]?</code>
Example	<code>:SOURCE:RAD:ARB:NR5G:PHAS ON</code> <code>:SOURCE:RAD:ARB:NR5G:PHAS?</code>
Dependencies	Only appears when Option RPC is present If the waveform is not for 5G NR, there may be error message and the output signal may be incorrect To ensure that you do <i>not</i> compensate for phase twice, once at waveform generation and again during playback, turn off this control if you had turned on phase compensation while generating the waveform
Preset	<code>OFF</code>
Range	<code>ON OFF</code>

## SCS

Sets the SCS for real-time 5G NR phase compensation.

Remote Command	:SOURce:RADio:ARB:NR5G:PHASe:SCS SCS15K   SCS30K   SCS60K   SCS60KECP   SCS120K   SCS240K   SCS480K		
	:SOURce:RADio:ARB:NR5G:PHASe:SCS?		
Example	:SOUR:RAD:ARB:NR5G:PHAS:SCS SCS15K		
	:SOUR:RAD:ARB:NR5G:PHAS:SCS?		
Preset	SCS30K		
Range	<b>μ</b>	<b>CP</b>	<b>Value</b>
	0		15 kHz
	1		30 kHz
	2	Normal	60 kHz
		Extended	60 kHz
	3		120 kHz
	4		240 kHz
	5		480 kHz

## Filter

Sets the state of Filter usage after real-time 5G NR phase compensation.

Remote Command	:SOURce:RADio:ARB:NR5G:PHASe:FILTer[:STATe] ON   OFF   1   0		
	:SOURce:RADio:ARB:NR5G:PHASe:FILTer[:STATe]?		
Example	:SOUR:RAD:ARB:NR5G:PHAS:FILT ON		
	:SOUR:RAD:ARB:NR5G:PHAS:FILT?		
Preset	OFF		
Range	ON OFF		

## Filter Bandwidth

Sets the Filter Bandwidth if Filter is used.

By searching <FilterBandwidth> node in the \*.scp file, you can get the correct filter bandwidth value for phase compensation.

Remote	:SOURce:RADio:ARB:NR5G:PHASe:FILTer:BANDwidth <freq>
--------	--

Command	<code>:SOURce:RADio:ARB:NR5G:PHASe:FILTer:BANDwidth?</code>
Example	<code>:SOUR:RAD:ARB:NR5G:PHAS:FILT:BAND 99MHz</code> <code>:SOUR:RAD:ARB:NR5G:PHAS:FILT:BAND?</code>
Preset	100 MHz
Min	10 Hz
Max	1200 MHz

## Select Waveform

Lets you select a waveform segment or sequence to be played by the ARB player. Presents you with a list of waveform segments files and waveform sequence files. The list of waveform segment files and waveform sequence files contains the names of all the waveform segments and waveform sequence files currently loaded into ARB playback memory.

Waveform sequences are not available in E7760B.

Waveforms formatted as `*.mat`, `*.csv` and `*.txt` are supported by models with a built-in source, such as VXT and EXM.

### NOTE

To load a file from the hard drive into ARB memory, go to the **Recall, Waveform dialog**

### NOTE

Selecting a waveform file does not result in automatic adjustments to burst timing; that adjustment occurs only when a waveform is loaded to ARB memory.

Remote Command	<code>:SOURce:RADio:ARB:WAVEform &lt;string&gt;</code> <code>:SOURce:RADio:ARB:WAVEform?</code>
Example	<code>:SOUR:RAD:ARB:WAV "test_waveform.bin"</code>
Notes	<p>If the intended waveform is not in the memory yet, then issuing this command invokes ARB loading operation first, which involves a delay of unpredictable length, so this command should be followed by <code>*OPC?</code>, which holds off subsequent commands until the loading operation is complete</p> <p><code>&lt;string&gt;</code> - specifies the name of the waveform segment or waveform sequence to be played by the ARB</p> <p>Sequence Analyzer Mode only:</p> <ul style="list-style-type: none"> <li>- If Include Source is Yes, and you attempt to play a waveform sequence but not all the required waveform segments are in the ARB playback memory, the application rejects the loading operation and an error is generated</li> <li>- If Include Source is No, and you attempt to play a waveform sequence but not all the required waveform segments are contained in the ARB playback memory, the application attempts to load the required segments from either the default directory or the current directory. If the ARB memory</li> </ul>

---

does not have enough space for all the waveform segments to be loaded, an error is generated and none of the waveform segments is loaded

If ARB is **ON**, and you attempt to play a waveform sequence but not all the waveform segments within the sequence could be found to be loaded into ARB memory, an error is generated. The selected waveform keeps the previous value and ARB state remains On

If you specify a waveform segment via SCPI but the waveform segment is not present within ARB playback memory, and cannot be found for auto loading within the current directory or the default directory, an error is generated and the file selection remains unchanged

If you select a waveform for playback and the waveform requires a license that is not installed on the instrument, an error is generated

If ARB is **ON** and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform will be replayed after the ARB operation is finished

## Segments in ARB Memory

Shows you which files are loaded into the ARB memory and lets you select a file for playback.

## Recall Waveform

This is the same as **Recall From File** in the **Recall, Waveform** dialog.

## Delete Segment From ARB Mem

This is the same as **Delete Segment From ARB Mem** in the **Recall, Waveform** dialog.

## Delete All From ARB Memory

This is the same as **Delete All From ARB Memory** in the **Recall, Waveform** dialog.

## Query ARB Memory File List (Remote Query Only)

Queries the test set for the list of waveform segments in the ARB memory.

**NOTE**

Returns a string for waveform segment names in ARB memory. If you require a string list of waveform segments in the ARB memory, use **"Query ARB Memory Full File List (Remote Query Only)"** on page 2550

Remote Command	<code>:SOURce:RADio:ARB:CATalog?</code>						
Example	<code>:SOUR:RAD:ARB:CAT?</code>						
Notes	The return data is in the following format:						
	<table border="1"> <tr> <td><code>&lt;integer&gt;</code></td> <td>Memory used, in kB</td> </tr> <tr> <td><code>&lt;integer&gt;</code></td> <td>Memory free, in kB</td> </tr> <tr> <td><code>&lt;string&gt; ...</code></td> <td>Comma-separated list of waveform segments within ARB memory</td> </tr> </table>	<code>&lt;integer&gt;</code>	Memory used, in kB	<code>&lt;integer&gt;</code>	Memory free, in kB	<code>&lt;string&gt; ...</code>	Comma-separated list of waveform segments within ARB memory
<code>&lt;integer&gt;</code>	Memory used, in kB						
<code>&lt;integer&gt;</code>	Memory free, in kB						
<code>&lt;string&gt; ...</code>	Comma-separated list of waveform segments within ARB memory						

### Query ARB Memory Full File List (Remote Query Only)

Queries the test set for the string list of waveform segments in the ARB memory. Returns a string list for waveform segment names in the ARB memory.

Remote Command	<code>:SOURce:RADio:ARB:FCATalog?</code>								
Example	<code>:SOUR:RAD:ARB:FCAT?</code>								
Notes	The return data is in the following format:								
	<table border="1"> <tr> <td><code>&lt;integer&gt;</code></td> <td>Memory used, in kB</td> </tr> <tr> <td><code>&lt;integer&gt;</code></td> <td>Memory free, in kB</td> </tr> <tr> <td><code>&lt;integer&gt;</code></td> <td>File count in ARB memory</td> </tr> <tr> <td><code>&lt;string&gt;, &lt;string&gt;, ... &lt;string&gt;</code></td> <td>Comma-separated string list of waveform segments within ARB memory</td> </tr> </table>	<code>&lt;integer&gt;</code>	Memory used, in kB	<code>&lt;integer&gt;</code>	Memory free, in kB	<code>&lt;integer&gt;</code>	File count in ARB memory	<code>&lt;string&gt;, &lt;string&gt;, ... &lt;string&gt;</code>	Comma-separated string list of waveform segments within ARB memory
<code>&lt;integer&gt;</code>	Memory used, in kB								
<code>&lt;integer&gt;</code>	Memory free, in kB								
<code>&lt;integer&gt;</code>	File count in ARB memory								
<code>&lt;string&gt;, &lt;string&gt;, ... &lt;string&gt;</code>	Comma-separated string list of waveform segments within ARB memory								

EXT returns: 27499,2069653,3,"c2k.wfm", "gsm.wfm", "wcdma.wfm"

### Waveform Sequences

Not available in E7760B.

Lets you build new sequences or edit existing sequences. The Sequences table displayed in this dialog shows you the sequences in the current directory. You may build a new sequence or select one of the sequences in the table and tap **Edit Selected Sequence**. The default current directory is `C:\NVARB`. Tapping any element of this path lets you select an alternate route. Tapping the **Computer** arrow lets you select a different drive. Tapping the **Back** arrow navigates to the previously selected directory.

### Build New Sequence

Lets you build a new sequence of waveform segments. When you build a sequence you are building the "current sequence", and the next time you press "Build New

6 Input/Output  
6.1 RF Source

Sequence” the sequence you have been building will still be there, allowing you to add or remove segments from it.

## Segment

Shows the segment number assigned to this row.

## Waveform

Shows the file name for the waveform inserted into this row. Use ["Insert Waveform" on page 2552](#) to insert a waveform.

## Repetitions

Lets you specify the number of times the currently selected waveform is played within the sequence.

---

Preset	1
Min	1
Max	65535

---

## Marker 1 – Marker 4

Lets you enable or disable Marker 1, 2, 3, or 4 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence, but not for others.

---

Preset	Enabled
Range	Enabled   Disabled

---

## Sync Seq File

Enables or disables the saving of secondary modules' waveform sequence files based on the current primary module segment's waveform settings.

---

Remote Command	<code>:SOURce:RADio:ARB:SEQuence:SYNC ON   OFF</code> <code>:SOURce:RADio:ARB:SEQuence:SYNC?</code>
Example	<code>:SOUR:RAD:ARB:SEQ:SYNC OFF</code>
Notes	Available only on primary modules If this setting is <b>ON</b> , when Sync Config is not <b>NONE</b> , the responding secondary module's waveform

---

---

	sequence file will be saved accordingly when save sequence... on the primary module, and the primary sequence file name should end with <b>xxx0.seq</b> , so the secondary module will be named according to the <b>"Naming Rule" on page 2552</b>
	Waveform names in sequence files should also follow the <b>Naming Rule</b>
Dependencies	Not available in E7760B
Preset	<b>OFF</b>
Range	<b>ON OFF</b>

---

## Naming Rule

If Sync Config is not 2x2 +2x2 or 1x1+1x1, the waveform files to be used should follow this naming convention: the waveform file for the primary source should end in 0; the waveform files for the controlled sources should end in 1, 2, or 3 (reflecting the order of the TRXs). For example, for DL 11AC80 3X3 MIMO, sequence file names for TRX1, TRX2 and TRX3 should be xxx0.xx, xxx1.xx and xxx2.xx

If Sync Config is 2x2+2x2, the waveform files to be used should follow this naming convention: the waveform file for the primary source of first 2x2 should end in 0\_0; the waveform files for the secondary source of first 2x2 should end in 0\_1; the waveform files for the primary source of second 2x2 should end in 1\_0; the waveform files for the secondary source of second 2x2 should end in 1\_1. For example, for DL 11AC80 2x2 + 2x2 MIMO, waveform file names for TRX1, TRX2, TRX3 and TRX4 should be xxx0\_0.xx, xxx0\_1.xx, xxx1\_0.xx and xxx1\_1.xx

If Sync Config is 1x1+1x1, the waveform files to be used should follow this naming convention: the waveform file for the first source should end in 0\_0; the waveform files for the second source should end in 1\_0. For example, for DL 11AC80 1x1 + 1x1 MIMO, waveform file names for TRX1 and TRX2 should be xxx0\_0.xx and xxx1\_0.xx

## Insert Waveform

Lets you select a waveform segment to be added to the sequence.

**NOTE**

To load a file from the hard drive into ARB memory, go to the **Recall, Waveform** dialog

---

## Segments in ARB Memory

Shows you which files are loaded into the ARB memory and lets you select a file for inclusion in the sequence.

### Delete Segment From ARB Mem

This is the same as **Delete Segment From ARB Mem** in the **Recall, Waveform** dialog.

### Delete All From ARB Memory

This is the same as **Delete All From ARB Memory** in the **Recall, Waveform** dialog.

### Delete Segment

Lets you delete the selected segment from the waveform sequence.

### Save Sequence

Lets you save the newly built Waveform Sequence to the disk drive.

Sequence files have the extension `.seq`. The default filename is `WfmSequence_0000.seq`, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory. Use “File Name” and “File Type” to specify your waveform sequence. The newly build sequence will be stored in the current directory.

### Build New Sequence (Remote Command Only)

This is the SCPI equivalent of the waveform sequence creation features described in ["Build New Sequence" on page 2550](#).

Writes a waveform sequence file to the hard disk. You must specify the waveform sequence file path and filename which will be saved on the hard disk, and the waveform segment file path and name which will be nested into the waveform sequence file. You can utilize mass storage unit specifier (MSUS) “NVWFM” or use a real full path representation. See the example below. MSUS “NVWFM” is mapped to D:\NVARB directory on test set hard disk.

Any number of segments, up to a segment count limit of 64, can be used to create a sequence. Repeated segments are included in the count limit.

Each waveform segment name string length upper limit is 128 chars. Do not attempt to insert a waveform with a name string that exceeds 128 chars.

The internal source does not support nesting one waveform sequence file into another waveform sequence file.

---

Remote `:SOURce:RADio:ARB:SEquence[:MWAVeform] <filename>, <waveform1>, <reps>, NONE`

---

Command	<pre>  M1   M2   M3   M4   M1M2   M1M3   M1M4   M2M3   M2M4   M3M4   M1M2M3   M1M2M4   M1M3M4   M2M3M4   M1M2M3M4   ALL, \{&lt;waveform2&gt;, &lt;reps&gt;, NONE   M1   M2   M3   M4   M1M2   M1M3   M1M4   M2M3   M2M4   M3M4   M1M2M3   M1M2M4   M1M3M4   M2M3M4   M1M2M3M4   ALL,\} ...</pre>
---------	--

For additional description of each item, see ["For Setup SCPI" on page 2554](#) below

`:SOURce:RADio:ARB:SEQuence[:MWAVEform]? <filename>`

For additional description of each item, see ["For Query SCPI" on page 2555](#) below

---

Example	<p>For setup:</p> <pre>:SOUR:RAD:ARB:SEQ "NVWFM:testSeq1.seq", "NVWFM:wfmSegment1.wfm",10, M2M3M4, "NVWFM:wfmSegment2.wfm", 20, M1M3</pre>
---------	--

Or

```
:SOUR:RAD:ARB:SEQ "D:\NVARB\testSeq1.seq", "D:\NVARB\wfmSegment1.wfm",10,
M2M3M4, "D:\NVARB\wfmSegment2.wfm", 20, M1M3
```

For query, must specify which waveform sequence file to query

```
:SOUR:RAD:ARB:SEQ? "NVWFM:testSeq1.seq"
```

Or

```
:SOUR:RAD:ARB:SEQ? "D:\NVARB\testSeq1.seq"
```

### For Setup SCPI

For the Setup SCPI command, the parameters are:

**<filename>** - String Type

This variable specifies the path and name for the waveform sequence file. The path supports MSUS (NVWFM) or a real full path representation. See example.

**<waveform1>** - String Type

This variable specifies the path and name of the first existing waveform segment. The path supports MSUS (NVWFM) or a real full path representation. See example.

The segment file must reside within ARB playback memory before it can be played by the ARB player.

**<reps>** - Integer Type

This variable specifies the number of times a segment or sequence plays before moving on to the next segment or sequence.

**<marker>** - Enum Type

**NONE** – This choice disables all four markers for the waveform. Disabling markers means that the waveform sequence ignores the segments or sequence marker settings.

**M1, M2, M3, M4** – these choices, either individually or a combination of them, enable the markers for the waveform segment or sequence. Markers not specified are ignored for that segment or sequence.

**ALL** – This choice enables all four markers in the waveform segment or sequence.

**<waveform2>** - String type.

This variable specifies the name of a second existing waveform segment. The path supports MSUS (NVWFM) and real full path representation both. See example.

The segment file must reside within ARB playback memory before it can be played by the ARB player.

**<reps>** same as above, for the 2<sup>nd</sup> waveform segment.

**<marker>** same as above, for the 2<sup>nd</sup> waveform segment.

You can insert several waveform segments into a waveform sequence file. Just repeat inserting waveform segments as described above.

Error Checks for Setup SCPI command:

If you do not specify a filename, or you use an unsupported MSUS (that is, not NVWFM), or have an error in the waveform sequence file path, an error is generated. If the specified waveform sequence file name suffix is not “.seq”, error is generated.

If you use an unsupported MSUS (that is, not NVWFM), or have an error in the waveform segment file path, an error is generated.

If the first specified waveform file cannot be found, an error is generated.

If you nest one waveform sequence file into another waveform sequence file, an error is generated.

If the specified repetition value is larger than 65535 or smaller than 1, an error is generated.

If the specified marker type is unrecognized, an error is generated.

### For Query SCPI

For the Query the parameters are:

**<filename>** - String type.

This variable specifies the path and name of the waveform sequence file being queried. The path supports MSUS (NVWFM) or a real full path representation. See example.

The return value is a **<string>**, which includes each waveform segment file name, repetitions, and marker type. For example:

```
>:SOUR:RAD:ARB:SEQ? "NVWFM:testSeq1.seq",  
<"wfmSegment1. wfm, 10, ALL, wfmSegment2.wfm, 20, M1M3",
```

Error Checks for Query SCPI command:

If you do not specify a filename, an error is generated.

If the waveform sequence file name is empty, an error is generated. If the specified waveform sequence file cannot be found, an error is generated.

## Edit Selected Sequence

This dialog lets you edit an existing sequence of waveform segments. A table of the segments in the currently selected sequence displays, allowing you to insert waveform segments or edit the characteristics of each segment.

### Segment

This field in the table shows the segment number assigned to this row.

### Waveform

This field in the table shows the file name for the waveform inserted into this row. Use "[Insert Waveform](#)" on page 2552 to insert a waveform.

### Repetitions

Lets you specify the number of times the currently selected waveform is played within the sequence.

Preset	1
Min	1

### Marker 1 – Marker 4

Lets you enable or disable Marker 1, 2, 3, or 4 for the currently selected waveform. For a waveform sequence, you can enable and disable markers on a per-segment basis, allowing you to output markers from some waveform segments within the sequence, but not for others.

Notes	No remote command, front panel only
Preset	Enabled
Range	Enabled   Disabled

## Sync Seq File

Change this setting to enable/disable the function of saving secondary modules' waveform sequence files based on the current primary segment's waveform settings.

Remote Command	See <a href="#">"Sync Seq File" on page 2551</a>
Notes	Available only on primary modules If this setting is <b>ON</b> , when Sync Config is not <b>NONE</b> , the responding secondary module's waveform sequence file will be saved accordingly when save sequence... on the primary module, and the primary sequence file name should end with <b>xxx0.seq</b> , so the secondary module will be named according to the <a href="#">"Naming Rule" on page 2557</a> Waveform names in sequence files should also follow the Naming Rule
Dependencies	Not available in E7760B
Preset	<b>OFF</b>
Range	<b>ON OFF</b>

## Naming Rule

If Sync Config is not 2x2 + 2x2 or 1x1 + 1x1, the waveform files to be used should follow this naming convention: the waveform file for the primary source should end in 0; the waveform files for the controlled sources should end in 1, 2, or 3 (reflecting the order of the TRXs). For example, for DL 11AC80 3X3 MIMO, sequence file names for TRX1, TRX2 and TRX3 should be xxx0.xx, xxx1.xx and xxx2.xx

If Sync Config is 2x2+2x2, the waveform files to be used should follow this naming convention: the waveform file for the primary source of first 2x2 should end in 0\_0; the waveform files for the secondary source of first 2x2 should end in 0\_1; the waveform files for the primary source of second 2x2 should end in 1\_0; the waveform files for the secondary source of second 2x2 should end in 1\_1. For example, for DL 11AC80 2x2 + 2x2 MIMO, waveform file names for TRX1, TRX2, TRX3 and TRX4 should be xxx0\_0.xx, xxx0\_1.xx, xxx1\_0.xx and xxx1\_1.xx

If Sync Config is 1x1+1x1, the waveform files to be used should follow this naming convention: the waveform file for the first source should end in 0\_0; the waveform files for the second source should end in 1\_0. For example, for DL 11AC80 1x1 + 1x1 MIMO, waveform file names for TRX1 and TRX2 should be xxx0\_0.xx and xxx1\_0.xx

## Insert Waveform

This dialog p select a waveform segment to be added to the sequence.

**NOTE**

To load a file from the hard drive into ARB memory, go to the Recall, Waveform dialog

---

## Segments in ARB Memory

This table shows you which files are loaded into the ARB memory and lets you select a file for inclusion in the sequence.

## Delete Segment From ARB Mem

Deletes a segment from ARB memory. This is the same as **Delete Segment From ARB Mem** in the **Recall, Waveform** dialog.

## Delete All From ARB Memory

Removes all segments from ARB memory. This is the same as **Delete All From ARB Memory** in the **Recall, Waveform** dialog.

## Delete Segment

Lets you delete the current segment from the waveform sequence.

---

Notes No remote command, front panel only

## Waveform Utilities

Not available in E7760B.

Only appears if there is at least one Multi-pack license installed in the instrument.

On modular instruments, such as EXM , multi-pack license operations are only allowed on the default module, that is, “TRX1” module for EXM.

For EXM, if access multi-pack license sub-menu from modules other than “TRX1”, an advisory message like “Please go to “TRX1” to operate multi-pack license” will display.

## Add Waveform

Use this dialog to select and add waveforms. Pressing **OK** in this dialog adds the currently highlighted waveform to the next available slot, and returns you to the **"Waveform Utilities" on page 2558** dialog.

6 Input/Output  
6.1 RF Source

Remote Command	<code>:SYSTem:LKEY:WAVeform:ADD &lt;string&gt;</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:ADD &lt;string&gt;</code>
Example	<code>:SYST:LKEY:WAV:ADD "mywaveform.wfm"</code> or <code>:SYST:LIC:WAV:ADD "mywaveform.wfm"</code>
Notes	<p>The second form, <code>:SYSTem:LICense[:FPACK]:WAVeform:ADD</code>, is provided for consistency with Keysight signal sources. You can use either form</p> <p>Since adding a waveform segment to a Multi-Pack license causes the license slot to enter the trial period of only 48 hours, pressing this key causes a confirmation dialog to be displayed to ensure you do want to add the waveform segment to the Multi-Pack</p> <p>If you attempt to license a waveform that is already licensed using another slot an error is generated</p> <p>For EXM, if current module is not "TRX1" module, the key is grayed-out, and error message is generated "-221 Setting conflict; Not allowed on current module. Go to "TRX1" to operate multi-pack license" when invoking SCPI</p>
Dependencies	Only available if the currently selected file is a secure waveform requiring a license, and there is at least one slot available within at least one multi-pack license. Unavailable if the waveform highlighted is a secure waveform, but is already licensed

## Replace Selected Waveform

Lets you replace the waveform in the currently selected slot with the waveform currently selected in the Multi-Pack License Waveform Add view. Pressing **OK** in this dialog replaces the waveform in the currently selected slot with that currently highlighted, and returns you to the ["Waveform Utilities" on page 2558](#) dialog.

Remote Command	<code>:SYSTem:LKEY:WAVeform:REPLace &lt;int&gt;, &lt;string&gt;</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:REPLace &lt;int&gt;, &lt;string&gt;</code>
Example	<code>:SYST:LKEY:WAV:REPL 1, "myotherwaveform.wfm"</code> or <code>:SYST:LIC:WAV:REPL 1, "myotherwaveform.wfm"</code>
Notes	<p>The second command form, <code>:SYSTem:LICense[:FPACK]:WAVeform:REPLace</code> is provided for consistency with Keysight signal sources. You can use either form</p> <p>If you attempt to license a waveform that is already licensed using another slot an error is generated</p> <p>Waveform slot number &lt;int&gt; is positive. If you attempt to input a slot number less than or equals 0, an error is generated</p> <p>For EXM, if current module is not "TRX1" module, the key is grayed-out, and error message is generated "-221 Setting conflict; Not allowed on current module. Go to "TRX1" to operate multi-pack license" when invoking SCPI</p>

## Clear Waveform from Slot

Lets you clear the waveform from the selected slot.

Remote Command	<code>:SYSTem:LKEY:WAVeform:CLEar &lt;int&gt;</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:CLEar &lt;int&gt;</code>
Example	<code>:SYST:LKEY:WAV:CLE 1</code> or <code>:SYST:LIC:WAV:CLE 1</code>
Notes	The second form: <code>:SYSTem:LICense[:FPACK]:WAVeform:CLEar</code> is provided for consistency with the style of Keysight signal sources. You can use either form Waveform slot number <code>&lt;int&gt;</code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated For EXM, if current module is not "TRX1" module, the key is grayed-out, and error message is generated "-221 Setting conflict; Not allowed on current module. Go to "TRX1" to operate multi-pack license" when invoking SCPI
Dependencies	Only available if the currently selected slot is in the trial state

## Lock Waveform in Slot

If the selected slot is in the trial state or the lock required state, the waveform that occupies the slot is locked and permanently licensed.

Remote Command	<code>:SYSTem:LKEY:WAVeform:LOCK &lt;int&gt;</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:LOCK &lt;int&gt;</code>
Example	<code>:SYST:LKEY:WAV:LOCK 1</code> or <code>:SYST:LIC:WAV:LOCK 1</code>
Notes	The command form <code>:SYSTem:LICense[:FPACK]:WAVeform:LOCK</code> is provided for consistency with Keysight signal sources. You can use either form Waveform slot number <code>&lt;int&gt;</code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated For EXM, if current module is not "TRX1" module, the key is grayed-out, and error message is generated "-221 Setting conflict; Not allowed on current module. Go to "TRX1" to operate multi-pack license" when invoking SCPI
Dependencies	Only available if the currently selected slot is in the trial state, or the lock required state

### Slot Status Query (Remote Command Only)

Returns the status of the specified slot.

---

Remote Command	<code>:SYSTem:LKEY:WAVeform:STATus? &lt;int&gt;</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:STATus? &lt;int&gt;</code>
Example	<code>:SYST:LKEY:WAV:STAT? 1</code>  <"Locked" or <code>:SYST:LIC:WAV:STAT? 1</code>  <"Locked"
Notes	The command form <code>:SYSTem:LICense[:FPACK]:WAVeform:STATus</code> is provided for consistency with Keysight signal sources. You can use either form Waveform slot number <code>&lt;int&gt;</code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated Result type is string. If input slot number exceeds total available slot numbers, "Nonexistent" is returned
Range	"Locked"   "Available"   "Trail"   "LockRequired"   "Nonexistent"

---

### Slots Free Query (Remote Query Only)

Returns the number of license slots free.

---

Remote Command	<code>:SYSTem:LKEY:WAVeform:FREE?</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:FREE?</code>
Example	<code>:SYST:LKEY:WAV:FREE?</code> or <code>:SYST:LIC:WAV:FREE?</code>
Notes	The second form: <code>:SYSTem:LICense[:FPACK]:WAVeform:FREE</code> is provided for consistency with the style of Keysight signal sources. You can use either one

---

### Slots Used Query (Remote Query Only)

Returns the number of license slots used.

---

Remote Command	<code>:SYSTem:LKEY:WAVeform:USED?</code> or <code>:SYSTem:LICense[:FPACK]:WAVeform:USED?</code>
----------------	---

---

---

Example	<code>:SYST:LKEY:WAV:USED?</code>  or <code>:SYST:LIC:WAV:USED?</code>
---------	---

---

Notes	The second form: SCPI <code>:SYSTEM:LICense[:FPACK]:WAVEform:USED</code> is provided for consistency with the style of Keysight signal sources. You can use either form
-------	---

### Slot Waveform Name Query (Remote Command Only)

Returns the waveform name of the specified slot.

---

Remote Command	<code>:SYSTEM:LKEY:WAVEform:NAME? &lt;int&gt;</code>  or <code>:SYSTEM:LICense[:FPACK]:WAVEform:NAME? &lt;int&gt;</code>
----------------	---

---

Example	<code>:SYST:LKEY:WAV:NAME? 1</code>  <"CDMA2K_22.wfm"  or <code>:SYST:LIC:WAV:NAME? 1</code>  <"CDMA2K_22.wfm"
---------	---

---

Notes	Waveform slot number <code>&lt;int&gt;</code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated  Result type is string. If input slot number exceeds total available slot numbers, "Nonexistent" is returned  If no waveform stored in the specified slot, then empty string is returned
-------	--

### Slot Waveform Unique ID Query (Remote Command Only)

Returns the waveform unique ID of the specified slot.

---

Remote Command	<code>:SYSTEM:LKEY:WAVEform:UID? &lt;int&gt;</code>  or <code>:SYSTEM:LICense[:FPACK]:WAVEform:UID? &lt;int&gt;</code>
----------------	---

---

Example	<code>:SYST:LKEY:WAV:UID? 2</code>  <"1346752140"  or <code>:SYST:LIC:WAV:UID? 2</code>  <"1346752140"
---------	---

---

Notes	Waveform slot number <code>&lt;int&gt;</code> is positive. If you attempt to input a slot number less than or equal to 0, an error is generated  Result type is string. If input slot number exceeds total available slot numbers, "Nonexistent" is returned
-------	--

---

Only Signal Studio waveform has a unique ID, which is a positive number. User-generated waveforms have no unique ID. If no waveform is stored in the specified slot, returns "0"

### Locked Waveform Name List Query (Remote Query Only)

Returns the waveform name list of locked.

---

Remote Command           : **SOURce:RADio:ARB:MPLicensed:NAME:LOCKed?**

---

Example                   : **SOUR:RAD:ARB:MPL:NAME:LOCKed?**  
                               < "CDMA2K\_27.wfm","GSM\_MCS1.WFM","c2kWfm.wfm"

### Locked Waveform Unique ID List Query (Remote Query Only)

Returns the waveform unique id list of locked.

---

Remote Command           : **SOURce:RADio:ARB:MPLicensed:UID:LOCKed?**

---

Example                   : **SOUR:RAD:ARB:MPL:UID:LOCKed?**  
                               < "2996927136","3812603511","3710986266"

---

Notes                    Each Signal Studio waveform has a unique id recorded in header. If the unique ids are same, that means they are the same waveform. For this reason, in addition to the locked waveform name list query, there is also a locked waveform unique id list query

### Multi-Pack License multi-module control state (Remote Command Only)

When **ON**, multi-pack license operations (such as adding/locking/replacinwaveform etc.) from TRXs other than TRX1 are allowed. If **OFF**, only TRX1 is allowed to operate multi-pack license, while other TRXs are only able to show the related multi-pack license information.

---

Remote Command           : **:SERVice[:PRODUCTION]:SOURce:MCONtrol:MPLicense[:STATE] ON | OFF | 1 | 0**  
                               **:SERVice[:PRODUCTION]:SOURce:MCONtrol:MPLicense[:STATE]?**

---

Example                   : **:SERV:SOUR:MCON:MPL OFF**

---

Notes                    Only effective in modular-based OBTs, such as EXM

---

Preset                   **OFF**

---

Range                   **ON|OFF**

## Header Utilities

If there is currently a waveform selected for playback, this table shows you the header information for the file. You can clear the header information out or edit it and save it.

---

Dependencies	Only available if there is currently a waveform selected for playback. Grayed-out if no waveform is selected
--------------	--

### Clear Header

Lets you clear the header information from the file header associated with the currently selected waveform.

---

Remote Command	<code>:SOURce:RADio:ARB:HEADer:CLEar</code>
Example	<code>:SOUR:RAD:ARB:HEAD:CLE</code>
Notes	Attempting to clear the header details via SCPI when no waveform was selected for playback generates an error

### Save Header

Lets you save new file header information details to the file.

---

Remote Command	<code>:SOURce:RADio:ARB:HEADer:SAVE</code>
Example	<code>:SOUR:RAD:ARB:HEAD:SAVE</code>
Notes	Attempting to save the header details via SCPI when no waveform was selected for playback generates an error

### Query Waveform Unique ID (Remote Query Only)

Each Signal Studio waveform contains a unique waveform ID, which recorded in the header. This command allows you to query the unique waveform ID from the header.

---

Remote Command	<code>:MMEMory:HEADer:ID? "&lt;file name&gt;"</code>
Example	Query the waveform already loaded into the ARB memory: <code>:MMEM:HEAD:ID? "test.wfm"</code>  Query the waveform on the hard disk by absolute path: <code>:MMEM:HEAD:ID? "D:\NVARB\test.wfm"</code>

---

Query the waveform on the hard disk by MSUS:  
:MMEM:HEAD:ID? "NVWFM:test.wfm"

Notes The queried waveform file can be in ARB memory, or on hard disk. If want to query ARB in ARB memory, then give out the file name directly. If want to query ARB on the hard disk, then absolute file path or MSUS should be given along with the file name. The valid MSUS is **NVWFM**, which is mapped to **D:\NVARB** on the hard disk  
If the file cannot be found in ARB memory or on hard disk, an error is generated and value -1 is returned

### Query Selected Waveform Header info (Remote Query Only)

Returns a listing of the current selected ARB header info. If no ARB selected, then empty string is returned.

---

Remote Command :SOURCE:RADio:ARB:HEADer:INFormation?

Example :SOUR:RAD:ARB:HEAD:INF?

Notes After each colon of field title string, related header info string is appended  
The field title string in "Range" part cannot change, for Sequence Studio needs to accurately match those string character to know which header info field it is  
Below are the abbreviation descriptions:

DESC	Description
SR	Sample Rate
RTS	Run Time Scaling
RMS	Root Mean Square
M1P	Marker 1 Polarity
M2P	Marker 2 Polarity
M3P	Marker 3 Polarity
M4P	Marker 4 Polarity
ALCHR	ALC Hold Routing
RFBR	RF Blank Routing
FOFF	Frequency Offset
AWGNST	AWGN State
AWGNCN	AWGN C/N Ratio
AWGNCBW	AWGN Carrier Bandwidth
AWGNNBW	AWGN Noise Bandwidth
AWGNCRMS	AWGN Carrier RMS
ORP	DAC Over Range Protection

	UID	Unique ID
	LICSTS	License Status
Range	"DESC:", "SR:", "RTS:", "RMS:", "M1P:", "M2P:", "M3P:", "M4P:", "ALCHR:", "RFBR:", "FOFF:", "AWGNST:", "AWGNCN:", "AWGNCBW:", "AWGNNBW:", "AWGNCRMS:", "ORP:", "UID:", "LICSTS"	

## 6.1.12 Trigger Initiate

Initiates an immediate trigger event if the trigger source (under ARB Setup) is set to **KEY**.

Dependencies      Grayed-out unless Trigger Source is set to **KEY** and an ARB waveform is configured

## 6.1.13 Source Sync

Accesses a menu for setting up Source Synchronization for multiple models.

Only appears in modular products such as VXT, and only when the instrument is configured for MIMO analysis.

### 6.1.13.1 Sync Config

Lets you config MIMO type for source.

Grayed-out when Primary and Secondary modules are in Sync State.

Remote Command      :SOURce:SYNC:CONFig NONE | TWO | THRee | FOUR | SIX | EIGHt | DONE | DTWO | DTHR | DFOU

See "[Option Details](#)" on page 2567

:SOURce:SYNC:CONFig?

Example                :SOUR:SYNC:CONF TWO

Dependencies	EXM	2x2 and 1x1+1x1 MIMO are supported when license E6640A-M22 is enabled
		2x2 and 3x3 MIMO are supported when license E6640A-M33 is enabled
		2x2, 3x3, 4x4 and 2x2+2x2 MIMO are supported when license E6640A-M44 is enabled
	VXT models M9410A/11A	No-Across chassis MIMO is supported when license M941xA-MMO is enabled
		Across chassis MIMO is supported when license M941xA-MTS is enabled

6 Input/Output  
6.1 RF Source

	VXT models M9415A/16A	No-Across chassis MIMO is supported when license M941xA-MMO is enabled
Range	NONE   TWO   THRee   FOUR   SIX   EIGHT   DONE   DTWO   DTHR   DFOU	

### Option Details

Parameter	SCPI	Notes
None	NONE	Sets MIMO Config type as None
2x2	TWO	Sets 2x2 as MIMO Config Type. 2 models are configured to Sync
3x3	THRee	Sets 3x3 as MIMO Config Type. 3 models are configured to Sync
4x4	FOUR	Sets 4x4 as MIMO Config Type. 4 models are configured to Sync
6x6	SIX	Sets 6x6 as MIMO Config Type. 6 models are configured to Sync
8x8	EIGHT	Sets 8x8 as MIMO Config Type. 8 models are configured to Sync
1x1+1x1	DONE	Sets 1x1+1x1 as MIMO Config Type. 2 models are configured to Sync with different center frequency. Use Segment 2 Setup to config the second model
2x2+2x2	DTWO	Sets 2x2+2x2 as MIMO Config Type. 2 groups of 2x2 MIMO. First group consists of Primary and TRX1. Second group consists of TRX2 and TRX3. Segment 2 Setup allows you to config the second group
3x3+3x3	DTHR	Sets 3x3+3x3 as MIMO Config Type. 2 groups of 3x3 MIMO. First group consists of Primary, TRX1 and TRX2. Second group consists of TRX3, TRX4 and TRX5. Segment 2 Setup allows you to config the second group
4x4+4x4	DFOU	Sets 4x4+4x4 as MIMO Config Type. 2 groups of 4x4 MIMO. First group consists of Primary, TRX1, TRX2 and TRX3. Second group consists of TRX4, TRX5, TRX6 and TRX7. Segment 2 Setup allows you to config the second group

#### 6.1.13.2 Sync Type

Grayed-out when models are in Sync State.

Remote Command	:SOURce:SYNC:TYPE PRIMary   SECondary   OFF For details of parameter options, see <a href="#">"Options" on page 2568</a> :SOURce:SYNC:TYPE?
Example	:SOUR:SYNC:TYPE PRIM
Preset	OFF
Range	PRIMary   SECondary   OFF

## Options

Parameter	Notes
OFF	This model is not listed in the Secondary module List
SECondary	Use <code>:SOURce:SYNC:CONNected:NAME?</code> to obtain the Primary's name in Sync State
PRIMary	Sync Setup is only available for Primary

### 6.1.13.3 Sync Settings

Grayed-out when Primary and Secondary are in Sync State.

---

Dependencies      Grayed-out when Sync Type is set to **OFF** or Secondary

### Secondary Module List

Lists the parameters of Secondary modules. The Selected checkbox in each row allows you to select the Secondary module when the Sync Type is set to Primary.

- When Sync Config is set to NxN, use this control to enable N-1 Secondary modules
- When Sync Config is set to NxN+NxN, use this control to enable 2N-1 Secondary modules

See "[More Information](#)" on page 2568

---

Remote Command	<code>:SOURce:SYNC:REMOte:SECOndary&lt;integer&gt; ON   OFF   1   0</code> <code>:SOURce:SYNC:REMOte:SEC&lt;integer&gt;?</code>
Example	<code>:SOUR:SYNC:REM:SEC1 ON</code> <code>:SOUR:SYNC:REM:SEC2 OFF</code>
Notes	<code>&lt;integer&gt;</code> Secondary module number in Available Models
Preset	OFF

### More Information

Parameter	SCPI Example	Notes
Available Secondary modules	<code>:SOUR:SYNC:REM:SEC:List?</code>	All the available Secondary models are listed
IP Address	<code>:SOUR:SYNC:REM:SEC1:ADDR?</code>	Refer to Remote Chassis to add the IP Address for remote chassis

6 Input/Output  
6.1 RF Source

Parameter	SCPI Example	Notes
Slot Number	:SOUR:SYNC:REM:SEC2:SLOT?	“Local Host” indicates that the Primary and Secondary modules share the same chassis
Socket Port	:SOUR:SYNC:REM:SEC2:SPOR?	Indicates the slot number of available models
Secondary module Order		Indicates the socket port of available models
		Shows you the models to be Secondary devices
		Use Selected to choose from available Secondary models

## Sync Settings

Lets you apply the source settings of the Primary module to its Secondary modules.

Remote Command	:SOURce:SYNC:SETTings:ENABle ON   OFF   1   0 :SOURce:SYNC:SETTings:ENABle?
Example	:SOUR:SYNC:SETT:ENAB ON :SOUR:SYNC:SETT:ENAB?
Notes	When Sync Settings is <b>ON</b> , the source settings of Primary are applied to Secondary modules. The supported settings are Amplitude, Frequency, Trigger Source, Trigger Type, RF Output and waveform related information When Sync Segment 2 is switched <b>ON</b> , this Toggle is set <b>ON</b> simultaneously
Dependencies	Waveform files naming convention: For NxN MIMO: <ul style="list-style-type: none"> <li>- xxx0.wfm for Primary</li> <li>- xxx[n].wfm for TRX[n]</li> </ul> For example, in 3x3 MIMO: <ul style="list-style-type: none"> <li>- xxx0.wfm for Primary</li> <li>- xxx1.wfm for TRX1</li> <li>- xxx2.wfm for TRX2</li> </ul> For NxN+NxN MIMO, in the first group: <ul style="list-style-type: none"> <li>- xxx0_0.wfm for Primary</li> <li>- xxx0_n.wfm for TRX[n]</li> </ul> in the second group: <ul style="list-style-type: none"> <li>- xxx1_n.wfm for TRX[n+N]</li> </ul> For example, in 3x3+3x3 MIMO: <ul style="list-style-type: none"> <li>- xxx0_0 for Primary</li> </ul>

---

	- xxx0_1.wfm for TRX1
	- xxx0_2.wfm for TRX2
	- xxx1_0.wfm for TRX3
	- xxx1_1.wfm for TRX4
	xxx1_2.wfm for TRX5
Preset	OFF
Range	ON OFF

---

## Sync Segment 2

Lets you config the models in the second group of NxN+NxN MIMO.

---

Remote Command	:SOURCE:SYNC:SETTINGS:SEGMENT2:ENABLE ON   OFF   1   0 :SOURCE:SYNC:SETTINGS:SEGMENT2:ENABLE?
Example	:SOUR:SYNC:SETT:SEGM2:ENAB ON :SOUR:SYNC:SETT:SEGM2:ENAB?
Notes	Only Frequency in settings is supported
Dependencies	When this setting is ON, Sync Settings will be turned on accordingly
Preset	OFF
Range	ON OFF

---

## Segment 2 Frequency

When Sync Segment 2 is ON, allows you to set the frequency of models in the second group of NxN+NxN MIMO.

---

Remote Command	:SOURCE:SYNC:SETTINGS:SEGMENT2:FREQUENCY <freq> :SOURCE:SYNC:SETTINGS:SEGMENT2:FREQUENCY?
Example	:SOUR:SYNC:SETT:SEGM2:FREQ 1.00 GHz :SOUR:SYNC:SETT:SEGM2:FREQ?
Preset	1.00 GHz
Min	VXT models M9410A/11A/15A/16A: 380 MHz
Max	Hardware Dependent VXT models M9410A/11A/15A/16A: - Option F06 = 6.0 GHz

---

## IP Address

Sets up the controller's IP address of Remote Secondary models.

---

Remote Command	<code>:SOURCE:SYNC:REMOte:ADDReSS &lt;string&gt;</code>
Example	<code>:SOUR:SYNC:REM:ADDR "192.168.1.2"</code>
Notes	<code>&lt;string&gt;</code> - IP Address

---

## SCPI Socket Port

Sets up the controller's SCPI socket port of Remote Secondary models.

---

Remote Command	<code>:SOURCE:SYNC:REMOte:IPPoRT &lt;integer&gt;</code>
Example	<code>:SOUR:SYNC:REM:IPP 5025</code>
Notes	<code>&lt;integer&gt;</code> - Port

---

## Add Secondary Module

Lets you connect the remote chassis specified by IP Address and Socket Port.

---

Remote Command	<code>:SOURCE:SYNC:REMOte:ADDReSS:ADD</code>
Example	<code>:SOUR:SYNC:REM:ADDR:ADD</code>
Notes	Example of how to add a remote chassis: <code>:SOUR:SYNC:REM:ADDR "192.168.1.2"</code> <code>:SOUR:SYNC:REM:IPP 5025</code> <code>:SOUR:SYNC:REM:ADDR:ADD</code> Once a remote chassis is connected, the <a href="#">"Secondary Module List" on page 2568</a> shows you the available Secondary modules

---

## Delete Secondary Module

Lets you delete a selected remote chassis IP Address from the ["Secondary Module List" on page 2568](#) .

---

Remote Command	<code>:SOURCE:SYNC:REMOte:ADDReSS:DELeTe</code>
Example	<code>:SOUR:SYNC:REM:ADDR:DEL</code>
Notes	Example of how to delete a remote chassis: <code>:SOUR:SYNC:REM:ADDR "192.168.1.2"</code>

---

---

```
:SOUR:SYNC:REM:ADDR:DEL
```

### Sync Runtime Settings (Remote Command Only)

Lets you Sync runtime settings to the Secondary modules without restarting Sync.

Remote Command	<pre>:SOURce:SYNC:RTSetting:STATe ON   OFF   1   0</pre> <pre>:SOURce:SYNC:RTSetting:STATe?</pre>
Example	<pre>:SOUR:SYNC:RTS:STAT ON</pre> <pre>:SOUR:SYNC:RTS:STAT?</pre>
Notes	When <b>OFF</b> , Sync is interrupted when changing frequency or power settings on the Primary module. After applying the new settings to the Secondary modules, Sync will restart When <b>ON</b> , setting changes on the Primary module are applied to the Secondary modules immediately without interrupting Sync status. This is the default behavior. The supported settings are <b>Amplitude</b> and <b>Frequency</b>
Preset	<b>ON</b>
Range	<b>ON OFF</b>

#### 6.1.13.4 Sync Start

Lets you start synchronizing Primary and Secondary modules to play Arb synchronously.

When the Sync connection is built successfully, Primary and Secondary modules are in the Sync State.

Sync Start and Sync Config menu are grayed-out when Primary and Secondary modules are in Sync State.

Remote Command	<pre>:SOURce:SYNC:START</pre>
Example	<pre>:SOUR:SYNC:STAR</pre>
Notes	If you change the source settings during Sync State, an error message appears in the status bar: "Settings conflict; Sync connection is already established" and the change will not be applied until Sync Stop

#### 6.1.13.5 Sync Stop

Stops the synchronization.

When Sync Stops, Sync Config menu and Sync Start will be available.

Remote Command	<pre>:SOURce:SYNC:STOP</pre>
Example	<pre>:SOUR:SYNC:STOP</pre>

### 6.1.13.6 Sync Connected (Remote Query Only)

Lets you query the state of synchronization.

---

Remote Command	<code>:SOURce:SYNC:CONNected?</code>
----------------	--------------------------------------

---

Example	<code>:SOUR:SYNC:CONN?</code>
---------	-------------------------------

Returns: 1 when synchronization is established, 0 when synchronization is stopped

### 6.1.14 Source Preset

Lets you preset the source settings to their default values.

---

Remote Command	<code>:SOURce:PRESet</code>
----------------	-----------------------------

---

Example	<code>:SOUR:PRES</code>
---------	-------------------------

## 6.2 Input

The controls on this tab let you select and configure the instrument's inputs.

### 6.2.1 Select Input

Lets you choose which signal input you want to analyze:

- "RF Input" on page 2576
- "External Mixer" on page 2576
- "I/Q" on page 2579

See also:

- "External Mixer Setup" on page 2601
- "I/Q Setup" on page 2621

Remote Command	<code>[ :SENSe ] :FEED RF   AIQ   EMIXer</code> <code>[ :SENSe ] :FEED?</code>
Example	Select the RF Input: <code>:FEED RF</code>  Select External Mixing: <code>:FEED EMIX</code>  Select BBIQ: <code>:FEED AIQ</code>
Dependencies	I/Q only appears when Option BBA present Ext Mix only appears when Option EXM present
Couplings	Connecting a U7227A USB Preamplifier to one of the instrument's USB ports causes the Input to automatically switch to the RF Input. If the RF Calibrator is on, it is turned off. Subsequently disconnecting the USB Preamp from USB does not change the Input selection, nor restore the previous selection  <code>[ :SENSe ] :FEED RF</code> turns the calibrator <b>OFF</b>
Preset	Unaffected by Preset or power cycle. Survives a Mode Preset and mode changes Set to <b>RF</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in instrument state
Annotation	Displayed in the Meas Bar as "Input:." followed by: RF or Ext Mix or I/Q depending on which input is selected

6 Input/Output  
6.2 Input

Backwards Compatibility SCPI	<p><code>[ :SENSe ]:FEED AREFERENCE</code></p> <p>In the PSA the calibrator was one of the inputs and selected using the AREF parameter to the same :FEED command that switched the inputs. In the X-Series, it is controlled in a separate menu and overrides the input selection. For code compatibility, <code>[ :SENSe ]:FEED AREFERENCE</code> is provided, and is aliased to <code>[ SENSe ]:FEED:AREF REF50</code>, which causes the input to be switched to the 50 MHz calibrator. <code>[ :SENSe ]:FEED RF</code> switches the input back to the RF port and turns the calibrator <b>OFF</b>, thus providing full compatibility with the PSA calibrator function</p> <p>Note that after sending this, <code>[ :SENSe ]:FEED?</code> does <i>not</i> return “AREF” but instead the currently selected input:</p> <pre>[ :SENSe ]:FEED IQ   IONLy   QONLy [ :SENSe ]:FEED?</pre> <p>The parameters <code>IQ   IONLy   QONLy</code> are supported for backwards compatibility with the E44406A</p> <pre>[ :SENSe ]:FEED IQ aliases to [ :SENSe ]:FEED: IQ:TYPE IQ [ :SENSe ]:FEED IONLy aliases to [ :SENSe ]:FEED:IQ:TYPE IONLy [ :SENSe ]:FEED QONLy aliases to [ :SENSe ]:FEED:IQ:TYPE QONLy [ :SENSe ]:FEED? always returns AIQ, whatever type of legacy parameter IQ   IONLy   QONLy has been used</pre>
Backwards Compatibility Notes	<p>Most of the settings in the X-Series Input/Output system, including External Gain, Amplitude Corrections settings and data, etc., are shared by all modes and are not changed by a mode switch. Furthermore, most variables under the <b>Input/Output</b> menu are not affected by Mode Preset. Both of these behaviors represent a departure from legacy behavior</p> <p>In X-Series, Input/Output settings are reset by using <b>Restore Input/Output Defaults</b>. They can also be reset to their default values by <b>System-&gt;Restore System Defaults-&gt; In/Out Config</b>, or by <b>System -&gt;Restore System Defaults -&gt; All</b> (and corresponding SCPI)</p> <p>While this matches most use cases better, it does create some code compatibility issues. For example, Amplitude Corrections are no longer turned off by Mode Preset, but instead by <b>Restore Input/Output Defaults</b></p> <p>Although Input/Output settings are not part of each Mode’s State, they are saved in Save State files, so that all of the instrument settings can be recalled with <b>Recall, State</b>, as in legacy instruments</p>
Notes	<p>In legacy analyzers you choose between the Internal mixer or an External Mixer. In X-Series, the External Mixer is one of the choices for the Input and is selected using the <b>FEED</b> command (<code>:SENSe:FEED EXTMixer</code>)</p> <p>For compatibility, the <code>:INPut:MIXer EXTernal INTernal</code> legacy command is mapped as follows:</p> <ol style="list-style-type: none"> <li>1. When <code>:INPut:MIXer EXTernal</code> is received, <code>:SENSe:FEED EMIXer</code> is executed</li> <li>2. When <code>:INPut:MIXer INTernal</code> is received, <code>:SENSe:FEED RF</code> is executed</li> <li>3. When <code>:INPut:MIXer?</code> is received, the response is <b>INT</b> if any input other than the external mixer is selected, and <b>EXT</b> if the external mixer is selected</li> </ol>
Preset	<b>INT</b>

---

Backwards Compatibility SCPI	<code>:INPut:MIXer EXTERNAL   INTERNAL</code>
	<code>:INPut:MIXer?</code>

---

Backwards Compatibility Notes	PSA supports the following SCPI Command :
	<code>:INPut:MIXer:TYPE PRESelected   UNPReselect</code>
	<code>:INPut:MIXer:TYPE?</code>
	PXA does not support the <code>:INPut:MIXer:TYPE</code> command

## RF Input

Selects the front-panel RF input port to be the instrument signal input. If RF is already selected, pressing this key accesses the RF input setup functions.

### External Mixer

Lets you select an External Mixer through which to apply signal input to the instrument. When selected, the LO/IF port becomes the input to the instrument.


External Mixing requires option EXM. The External Mixer key will not appear unless option EXM is installed. The presence of the LO/IF connector alone does not indicate that you have Option EXM licensed. To verify that option EXM is installed, press **System, Show, System**.

When External Mixer is selected, the **Center Freq** key controls the setting of the Center Freq in external mixing, which is separate from the settings of Center Freq for the RF Input or BBIQ. Each input retains its unique settings for Center Freq. A unique SCPI command is provided solely for the external mixing Center Freq (see the **Center Freq** key description), which only affects the External Mixer CF, although sending the generic Center Freq command while External Mixer is selected also controls the External Mixer CF.

Unless option EXM is present, the External Mixer key is blanked, and all SCPI commands associated with menus accessed by this key return an error. Manual FFT mode is available with external mixing, but not with Signal ID. All settings under this key, and all Frequency settings, are remembered when you go out of External Mixer, so that when **External Mixer** is chosen again, all the external mixer functions will retain their previous settings, with the exception of Signal ID which is set to OFF (Signal ID is also set to Off unless External Mixer is the selected Input). Note that this differs from ESA and PSA, in which all external mixer settings including Center Frequency are lost when you turn off External Mixing or Preset the instrument.


X-series instruments have a combined LO Out/IF In connection, whereas earlier instruments used separate ports for the LO Out and the IF in. Internal diplexers in the instrument and the mixer simplify the connection for users – only a single SMA cable is required.

6 Input/Output  
6.2 Input

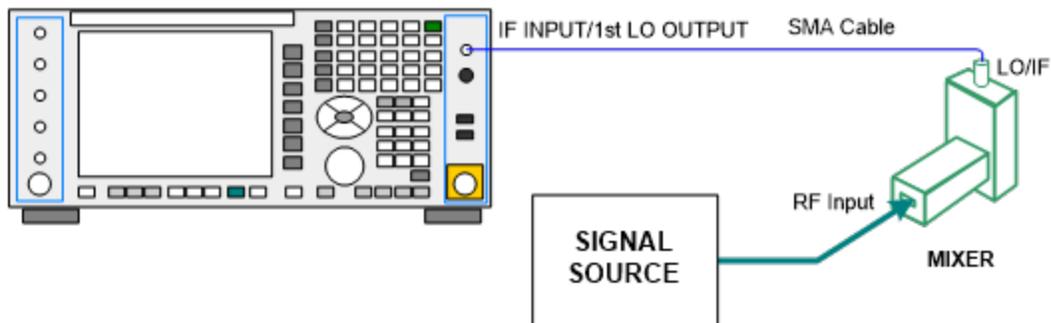


Legacy HP/Agilent and some third-party mixers have separate LO In and IF out connections. This requires you to use an external diplexer to connect these mixers. A diplexer can easily be purchased for this purpose (for example, Diplexer Model # DPL.26 or # DPL.313B from OML Inc., Morgan Hill, California, USA).

The connection diagram for such a legacy mixer is:

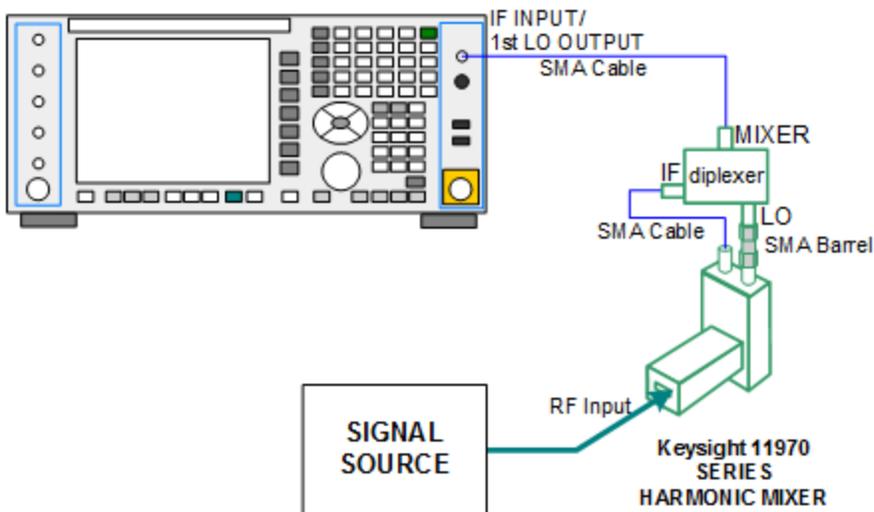


In addition, External Mixing in the X-Series supports the new Keysight M1970 series of Harmonic Mixers, which provide a USB connection for download of calibration data and additional control.

The connection diagram for one of the Keysight USB mixers is:

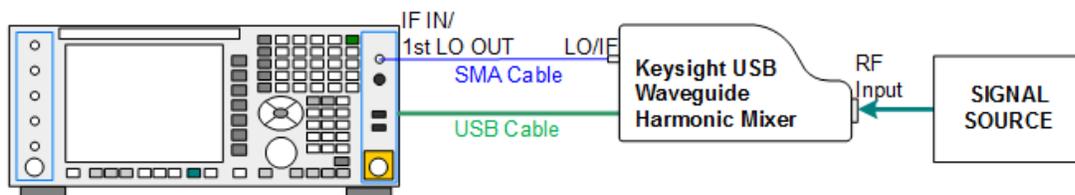


Also available in the M197x series are the M1971 series USB Mixers, which provide additional inputs and outputs for special functionality as described below. These mixers have multiple signal paths which allow them to function in three different states:


- Normal, in which the mixer functions as a classic external mixer with a single conversion:

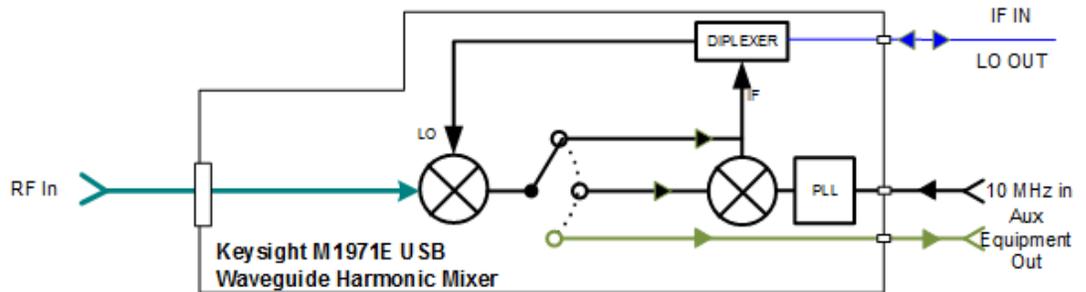

- Dual Conversion, which gives you a wider image-free range. In Dual Conversion, the first conversion is to a higher IF frequency and you provide a 10 MHz signal to which an internal PLL is locked, to effect a second downconversion:

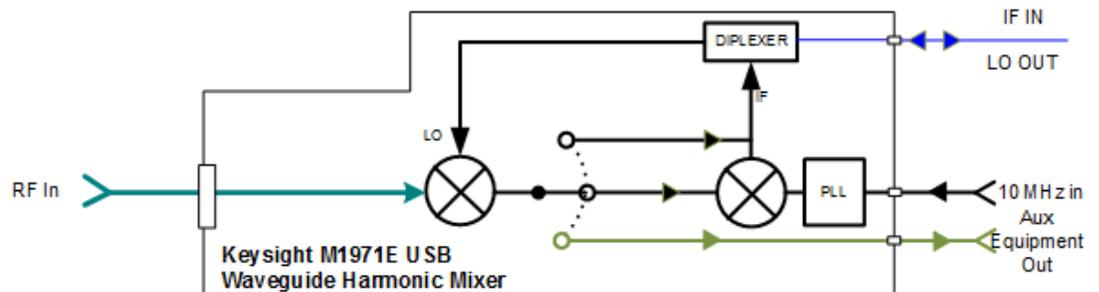

- Aux Equipment, wherein the first mixer output drives an output connector on the mixer and the instrument is out of the circuit:

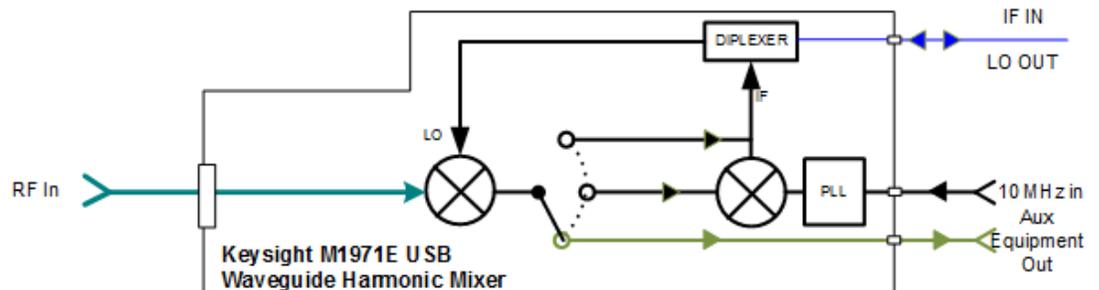

External Mixing is only supported in certain Modes and Measurements in the X-Series, as shown in the table below. When External Mixer is selected in a

6 Input/Output  
6.2 Input

measurement that does not support it, the "No result; Meas invalid with Ext Mixing" error condition occurs:

Mode	Measurements	Sig ID (Image Suppress only)
Spectrum Analyzer	Swept SA	Y*
	TOI	Y
	Harmonics	N
	Spurious Emissions	Y
	Channel Power	Y
	Occupied BW	Y
	ACP	Y
	Spectrum Emissions Mask	Y
	CCDF	N
	Burst Power	N
	List Sweep	N
Phase Noise	Monitor Spectrum	Y
	Log Plot	Y
	Spot Frequency	N
	Waveform	N
I/Q Analyzer	Complex Spectrum	N
	Waveform	N
Vector Signal Analyzer	Vector Analysis	N
	Analog Demod	N
	Digital Demod	N
Analog Demod	AM	N
	FM	N
	PM	N
	FM Stereo	N

\* the Swept SA measurement also supports Image Shift

### I/Q

Selects the front-panel I/Q input ports to be the instrument signal input. If I/Q is already selected, pressing this key accesses the I/Q setup menu.

The Baseband I/Q functionality is a hardware option. It is option BBA. If the option is not installed, none of the I/Q functionality is enabled.

The Baseband I/Q has four input ports and one output port. The input ports are I, I-bar, Q, and Q-bar. The I and I-bar together compose the I channel, and the Q and Q-

bar together compose the Q channel. Each channel has two modes of operation, Single-Ended (also called "unbalanced") and Differential Input (also called "balanced"). When in Single-Ended operation, only the main port (I or Q) is used, and the complementary port (I-bar or Q-bar) is ignored. When in Differential Input mode, both main and complementary ports are used.

The input settings (range, attenuation, skew, impedance, external gain) apply to the channels, not the individual ports.

The system supports a variety of 1 M $\Omega$  input passive probes as well as the Keysight 113x Series active differential probes using the Infinimax probe interface.

The Keysight 113x Series active probes can be used for both single ended and differential measurements. In either case a single connection is made for each channel (on either the I or Q input). The input is automatically configured to 50  $\Omega$  single ended and the probe power is supplied through the Infinimax interface. The probe can be configured for a variety of input coupling and low frequency rejection modes. In addition, a wide range of offset voltages and probe attenuation accessories are supported at the probe interface. The active probe has the advantage that it does not significantly load the circuit under test, even with unity gain probing.

With passive 1 M $\Omega$  probes, the probe will introduce a capacitive load on the circuit, unless higher attenuation is used at the probe interface. Higher attenuation reduces the signal level and degrades the signal-to-noise-ratio of the measurement. Passive probes are available with a variety of attenuation values for a moderate cost. Most Keysight passive probes can be automatically identified by the system, setting the input impedance setting required as well as the nominal attenuation. For single ended measurements a single probe is used for each channel. Other passive probes can be used, with the attenuation and impedance settings configured manually.

For full differential measurements, the system supports probes on each of the four inputs. The attenuation of the probes should be the same for good common mode rejection and channel match.

Both active and passive probes in single ended and differential configurations can be calibrated. This calibration uses the Cal Out BNC connection and a probe connection accessory. The calibration achieves excellent absolute gain flatness in a probed measurement. It matches both the gain and frequency response of the I and Q channels as well as any delay skew, resulting in high accuracy in derived measurements such as Error Vector Magnitude (EVM).

When a probe is connected a status message will be displayed. The message will indicate if calibration data is available or not. Calibration data is saved for each type of probe (including "none") for each port and will be reapplied whenever that type of probe is re-connected to the same port. For probes with EEPROM identification, the calibration data will be stored based on the unique probe identifier and will reapply data for that particular probe if it is available. The data will not follow a probe from one port to another. For probes without EEPROM identification, the instrument

## 6 Input/Output

### 6.2 Input

cannot distinguish between different probes of the same type, and it will use the data from the last calibration for that probe type on that port.

When in differential mode, both the main and complementary probes are expected to be of the same type.

In some situations, the I and Q channels should be configured identically. In other situations, it is convenient to control them independently. Some menus have a "Q Same as I" setting that will cause the Q channel configuration to mirror the I channel configuration, avoiding the overhead of double data entry when the channels should be the same.

The output port is for calibrating the I/Q input ports, although it can also be manually controlled.

There are two types of calibrations available: cable calibration and probe calibration. The cable calibration will guide the user through connecting each input port in turn. All ports must be calibrated together. The probe calibration is done for a specific channel (I or Q). If in Single-Ended mode, only the main port is calibrated. When in Differential Input mode, the user is guided through calibrating both main and complementary ports.

The front panel I/Q port LEDs indicate the current state of that port. On (green) indicates it is active, and off (dark) indicates it is not in use. For example, the Cal Out port LED is on if and only if there is signal coming out of that port.

The input is a context, and some parameters have separate values for each context. The SCPI for these parameters has an optional "[:RF|IQ]" node. If the specific context is omitted, the command acts on the current input context's value. Here are the parameters that are input context sensitive:

- Center Frequency
- Trigger Source

It is important to distinguish between the I and Q input ports and the displayed I and Q data values. The I and Q input ports feed into a digital receiver that does digital tuning and filtering. The I and Q data seen by the user (either on the display or through SCPI) corresponds to the real ("I") and the imaginary ("Q") output from the digital receiver. When the input path is I+jQ or I Only and the center frequency is 0 Hz the I input ends up in as the real output from the receiver and appears as "I" data. Likewise, when the input path is I+jQ and the center frequency is 0 Hz, the Q input ends up as the imaginary output from the receiver and appears as "Q" data. However, when the input path is Q Only, the Q input is sent to the receiver as Q+j0, so the receiver output has the Q input coming out on the real output, and so in Q Only, the signal from the Q input port appears as the "I" data. Another situation where the I and Q data do not necessarily correspond directly to the I and Q inputs is when the center frequency is non-zero. The digital processing involved in the tuning

is a complex operation. This will result in I Only data appearing as both "I" and "Q" data, the same as that signal would appear if seen through the RF input port.

BBIQ is only supported in certain Modes and Measurements in the X-Series. When I/Q is selected in a measurement that does not support it, the "No Result; Meas invalid with I/Q inputs" message appears. This is error 135

### Baseband I/Q Remote Language Compatibility

For the Agilent E4406A VSA Series Transmitter Tester, Option B7C provided baseband I/Q inputs. Code compatibility has been provided to allow many of the commands for Option B7C to function properly with X-Series. X-Series has hardware differences and additional capabilities (for example, E4406A does not have independent settings of I & Q, nor does it provide for probe calibrations), which make 100% compatibility impossible.

The following commands are supported:

```
:CALibration:IQ:FLATness
```

```
:INPut:IMPedance:IQ U50 | B50 | U1M | B1M
```

```
:INPut:IMPedance:REFerence <integer>
```

[ :SENSe ]:FEED RF | IQ | IONLY | QONLY | AREFERENCE | IFALign supports all parameters except IFALign. The FEED? query returns only RF | AIQ | AREF.

The following commands are not supported:

```
:CALibration:GIQ
```

```
:CALibration:IQ:CMR
```

```
:INPut:IQ:ALIGn OFF | ON | 0 | 1
```

The Rohde & Schwarz FSQ-B71 also provides baseband I/Q inputs. A certain amount of code compatibility is provided in X-Series, but hardware differences make this a somewhat limited set.

Supported:

The "<1|2>" is supported as "[1]".

```
INPut<1|2>:IQ:BALanced[:STATe] ON | OFF
```

```
INPut<1|2>:IQ:TYPE I | Q | IQ
```

```
INPut<1|2>:IQ:IMPedance LOW | HIGH
```

Not Supported:

```
DIAGnostic<1|2>:SERVice:IQ:CALibration:DC 0 | 0.1 | 0.178 | 0.316 | 0.562 | 1.0
```

```
DIAGnostic<1|2>:SERVice:IQ:CALibration:DESTination IHIGH | ILOW | QHIGH | QLOW
```

```
DIAGnostic<1|2>:SERVice:IQ:CALibration:PULSe: PRATe 10 kHz | ... | 4 MHz
```

```
DIAGnostic<1|2>:SERVice:IQ:INPut IQ | GND | CALDc | CALPulse
```

## 6 Input/Output

### 6.2 Input

```
INPut<1|2>:SElect AIQ | RF
TRACe<1|2>:IQ:DATA:FORMat COMPatible | IQBlock | IQPair>
TRACe<1|2>:IQ:DATA:MEMory? <offset samples>,<# of samples>
TRACe<1|2>:IQ:DATA?
TRACe<1|2>:IQ:SET <filter type>,<rbw>,<sample rate>,<trigger source>,<trigger
slope>,<pretrigger samples>,<# of samples>
TRACe<1|2>:IQ:SRATe 10.0kHz to 81.6MHz
TRACe<1|2>:IQ[:STATe] ON | OFF
```

The Rohde & Schwarz FMU has the following SCPI, which is *not* supported (these commands start/abort the probe calibration procedure, which is manually interactive from the front panel):

```
CALibration:ABORT
CALibration:PROBe[:START]
```

## 6.2.2 RF Input Port

Specifies the RF input port used. Only appears on units with multiple RF inputs, and lets you switch between the inputs.

Instruments that include multiple RF Input ports include:

- N9041B
- N9000B (CXA)
- N9048B (PXE)
- VXT, M941xE and EXM
- M8920A/20B
- E7760B

#### NOTE

Switching input ports may change the receiver performance of the instrument.

See ["Instruments with 2 Inputs" on page 2585](#)

---

Remote Command `[ :SENSe ] :FEED [ :RF ] :PORT [ :INPut ] <port>`

For instrument-specific definitions of `<port>`, see:

["Parameters for UXA/PXA/MXA/EXA/CXA/MXE/PXE/NFA" on page 2585](#)

["Parameters for EXT, EXF and EXM Wireless Test Sets" on page 2586](#)

---

	<p>"Parameters for VXT M9410A/11A/15A16A, M9410E/11E/15E/16E and M9420A Vector Transceivers" on page 2586</p> <p>"Parameters for VXT M9410A/11A/15A/16A and EXM when used with Radio Heads/CIU" on page 2588</p> <p>"Parameters for E7760B Wideband Transceiver" on page 2591</p> <p>"Parameters for M8920A/20B Radio Test Set" on page 2592</p> <p>"Parameters for UXM Wireless Test Set" on page 2592</p> <p><code>[ :SENSe ] : FEED [ :RF ] : PORT [ :INPut ] ?</code></p>
Example	<p>Use the port labeled RF Input when the selected input is RF: <code>:FEED:RF:PORT RFIN</code></p> <p>Use the port labeled RF Input 2 when the selected input is RF: <code>:FEED:RF:PORT RFIN2</code></p>
Dependencies	<p>Only appears when RF Input is selected as the Input</p> <p>Only appears in models that support multiple inputs. If the SCPI command is sent with unsupported parameters in any other model, an error is generated, -221, "Settings conflict; option not installed"</p> <p>When any input is selected in a measurement that does not support it, the "No result; Meas invalid with this input" error condition occurs, and the measurement returns invalid data when queried</p>
Couplings	<p>When switching between inputs, you may find the new input has a different frequency range than the current input. This means the frequency at the new input may be limited, depending on where you were tuned</p> <p>When you switch from an input whose maximum frequency is greater than the input to which you are switching:</p> <ol style="list-style-type: none"> <li>1. If the current Stop Freq is below the Max Freq for the new input, then neither Stop Freq or Start Freq needs to change</li> <li>2. But if the current Stop Freq is above the Max Freq for the new input, Stop Freq must change; so, it is set to the Max Freq for the new input</li> <li>3. If the Stop Freq is forced to change then, if possible, the Span is preserved with the new Stop Freq; however, the Start Freq can't go below zero</li> </ol> <p>Example: Input 2 has a Max Freq of 110 GHz and Input 1 has a Max Freq of 52 GHz</p> <p>Case 1: Input 2 is selected and Start Freq=40 GHz, Stop Freq=60 GHz. Change to Input 1. Stop Freq changes to 52 GHz so, to preserve Span, Start Freq is set to 32 GHz</p> <p>Case 2: Input 2 is selected and Start Freq=40 GHz, Stop Freq=110 GHz. Change to Input 1. Stop Freq changes to 52 GHz. Span was 70 GHz, but new Span maximum is 52 GHz so Start Freq is set to 0 Hz</p> <p>Case 3: Input 2 is selected and Start Freq=10 GHz, Stop Freq=20 GHz. Change to Input 1. No change is necessary, Start Freq and Stop Freq don't change</p>
Preset	<p>Unaffected by Mode Preset, but set to <code>RFIN</code> on <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults -&gt; All</b>, unless noted in the platform-specific sections below</p>
State Saved	<p>Saved in instrument state</p>
Annotation	<p>Annotation in the Meas Bar reads as follows: When input is RF In: Input: RF</p>

---

6 Input/Output  
6.2 Input

---

	When input is RF In 2: Input: RF2
Backwards	<code>:INPut&lt;1 2&gt;:TYPE INPUT1   INPUT2</code>
Compatibility SCPI	<code>:INPut&lt;1 2&gt;:TYPE?</code>
	Included for R&S ESU compatibility. In MXE, the INPUT1 parameter is aliased to RFIN and the INPUT2 parameter is aliased to RFIN2

### Instruments with 2 Inputs

In models with two inputs, the second input usually has a different maximum frequency than the first input. For your convenience, the actual “Max Freq” value is allowed to go slightly higher than the nominal Max Freq for the second input, just as is the case with the first input.

Model	Nominal Input 2 Max Freq	Absolute Input 2 Max Freq	Transition rule for switching from Input 1 to Input 2
N9038A	1 GHz	1.000025 GHz	If Stop Freq is above 1.000025 GHz, it is set to 1.000025 GHz, otherwise it does not change If Start Freq is above 1.000024990 Hz, Start Freq is set to 1.000024990 Hz and Span to 10 Hz, otherwise nothing changes
N9000A with option C75	1.5 GHz	1.58 GHz	If Stop Freq is above 1.58 GHz, it is set to 1.58 GHz, otherwise it does not change If Start Freq is above 1.579999990 GHz, Start Freq is set to 1.579999990 GHz and Span to 10 Hz, otherwise nothing changes

### Parameters for UXA/PXA/MXA/EXA/CXA/MXE/PXE/NFA

<port>	Input
<code>RFIN</code>	RF Input
<code>RFIN2</code>	RF Input 2
<code>ERFIN</code>	External RF

---

Example	Set the RF input to be RF Input: <code>:FEED:RF:PORT RFIN</code>
	Set the RF input to be RF Input 2 if that port exists: <code>:FEED:RF:PORT RFIN2</code>
	Set the RF input to be External RF if the V3050A unit is connected: <code>:FEED:RF:PORT ERFIN</code>

---

Dependencies	If the command is sent with <code>RFIN2</code> or <code>ERFIN</code> and that port does not exist, an error is generated, -221, “Settings conflict; option not installed” <code>ERFIN</code> requires option “EXW”
--------------	---

Couplings	Connecting a V3050A changes the Preset to <b>ERFIN</b> and automatically switches the input to <b>ERFIN</b> . Disconnecting the V3050A changes the Preset back to <b>RFIN</b> and automatically switches the input to <b>RFIN</b>
Preset	<b>ERFIN</b> when V3050A is connected, otherwise <b>RFIN</b>
Annotation	Annotation in the Meas Bar reads as follows: <ul style="list-style-type: none"> <li>- When input is RFIN: Input: RF</li> <li>- When input is RFIN2: Input: RF2</li> <li>- When input is ERFIN: Input: Ext RF</li> </ul>

### Parameters for EXT, EXF and EXM Wireless Test Sets

<port>	Input
<b>RFIO1</b>	RFIO 1
<b>RFIO2</b>	RFIO 2
<b>RFIO3</b>	RF3 I O
<b>RFIO4</b>	RF4 I O

See also "[Parameters for VXT M9410A/11A/15A/16A and EXM when used with Radio Heads/CIU](#)" on page 2588

Example	Set the RF input to RFIO 1: <b>:FEED:RF:PORT RFIO1</b>
Dependencies	In EXF, or in EXM with hardware M9430A, if RF Input is selected as RF Input Port, you need to choose the settings in the Half Duplex Config menu to determine which port (RFIO3 or RFIO4) will be used In EXM with hardware M9431A, this setting is not supported. If the SCPI command is sent with this setting, an error is generated, -221, "Settings conflict; option not installed"
Preset	<b>RFIO1</b>
Annotation	Annotation in the Meas Bar reads as follows: <ul style="list-style-type: none"> <li>- When input is RFIO1: Input: RFIO1</li> <li>- When input is RFIO2: Input: RFIO2</li> <li>- When input is RFIO3: Input: RFIO3</li> <li>- When input is RFIO4: Input: RFIO4</li> </ul>

### Parameters for VXT M9410A/11A/15A/16A, M9410E/11E/15E/16E and M9420A Vector Transceivers

<port>	Input
<b>RFIN</b>	RF Input

6 Input/Output  
6.2 Input

<port>	Input
RFFD	RFIO FD
RFHD	RFIO HD, Half Duplex

Example

```
:FEED:RF:PORT RFIN
:FEED:RF:PORT RFFD
:FEED:RF:PORT RFHD
:FEED:RF:PORT NONE
```

Notes


**RFIN** sets the RF input to be the RF Input port, labeled RF Input

**RFFD** sets the RF input to be the full duplex port, labeled RFIO FD. Note that Option “FDX” is required to enable this port


**RFHD** sets the RF input to be the half duplex port, labeled Half Duplex (M9410A/11A/15A/16A) or RFIO HD (M9420A)

M9410E/11E/15E/16E also has HD port, which is the HD port on M9471A module

**NONE** sets the RF In port and Half Duplex port (if HD Port is not set to RF Output) to connect to 50Ω load, as shown below:

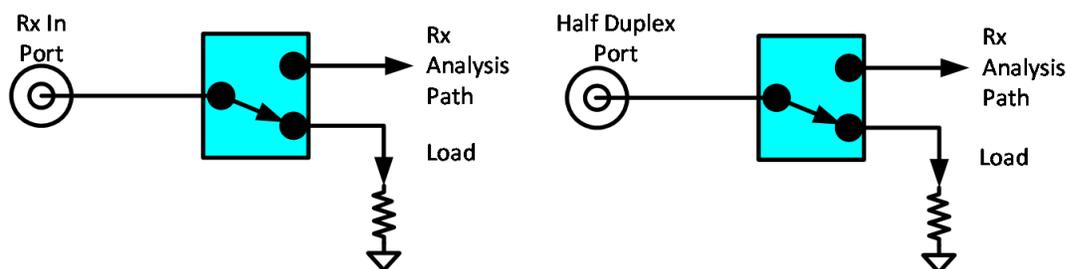

When using Source only, set RF Input to **NONE** to provide better isolation. When the input port is set to **NONE**, an error appears in the status area:

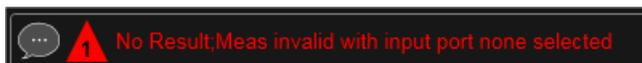

Dependencies

Option HDX is required to enable the Half Duplex (RFIO HD) port

You cannot set this port to be the input if it is already set to be the output. Attempting to do so generates error message: “-221, Settings conflict; RF Input cannot be set to RFIO HD when RF Output is RFIO HD”

**NONE** is not available in VXT model M9420A

Preset

**RFIN**

Annotation

Annotation in the Meas Bar reads as follows:

When input is RF Input: Input: RF

When input is RFIO FD: Input: RFFD


When input is RFIO HD or Half Duplex: Input: RFHD

When input is None: Input: NONE


## Parameters for VXT M9410A/11A/15A/16A and EXM when used with Radio Heads/CIU

<port>	Input
RRH $h$ RFHD $p$	Head $h$ , RF Tx/Rx $p$ , for example <b>RRH1RFHD2</b> = Head 1, RF Tx/Rx 2
IFIN $n$	DUT IF IN for Channel $n$ , for example <b>IFIN1</b> = DUT IF IN for Channel 1
IFHD $n$	DUT IF In/Out for Channel $n$ , for example <b>IFHD1</b> = DUT IF In/Out for Channel 1

When using a Remote Radio Head (RRH), such as the Keysight M1740A mmWave Transceiver for 5G, with the VXT or EXM, the choices in the dropdown are dependent on which heads are installed. For example, in the case where two M1740As are present, each with two ports, the dropdown will look like this:

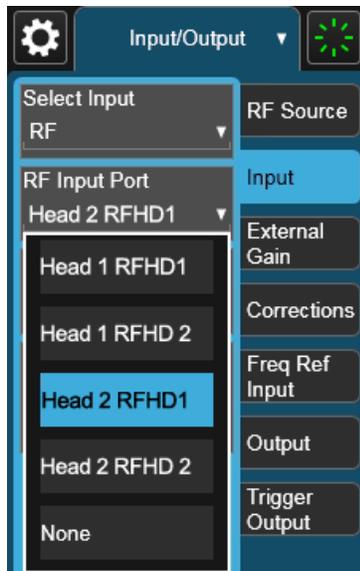

Note the inclusion of the **None** choice, which allows the input port to become unassigned, and thus allows any Output port to be assigned without concern about an Input port conflict. When the input port is unassigned, an error appears in the status area:

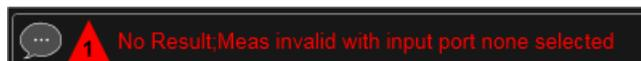


The user interface parameter RFHD  $p$  corresponds to the port labeled RF Tx/Rx  $p$ ; for example, RFHD 2 means the port labeled RF Tx/Rx 2 on the M1740A.

When using a E7770A Common Interface Unit, you may make connections to the half-duplex port on the front of the CIU labeled DUT IF In/Out, and/or to ports on the rear of the CIU labeled DUT IF IN and DUT IF OUT. For example, if your DUT has an IF Output you will usually connect it to one of the DUT IF IN ports on the rear panel of the CIU. The user interface parameter IFIN  $n$  corresponds to the DUT IF IN port for Channel  $n$  on the CIU, so you would choose IFIN 1 in the dropdown to

6 Input/Output  
6.2 Input

connect to the DUT IF IN port for Channel 1, and the corresponding SCPI parameter would be IFIN1. See the figure below:

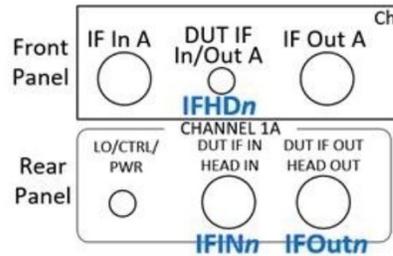


The following table lists the GUI parameter for each input or output on the CIU, and the SCPI parameter for the RF Input Port command (`[ :SENSe ] :FEED[ :RF ] :PORT [ :INPut ]`) and the RF Output Port command (`[ :SENSe ] :FEED:RF:PORT:OUTPut`):

Port	Port name on CIU	Name displayed in GUI	SCPI parameter for RF Input Port and Output Port commands
IF input port	DUT IF IN	IF In n	<b>IFIN<sub>n</sub></b> , for example <b>IFIN1</b>
IF output port	DUT IF OUT	IF Out n	<b>IFOut<sub>n</sub></b> , for example <b>IFO1</b>
IF port, half duplex	DUT IF In/Out	IFHD n	<b>IFHD<sub>n</sub></b> , for example, <b>IFHD1</b>

**NOTE**

The value of n for each port, in the multiple-port use case, may vary according to your system configuration. For the value of n for your use case, consult the Startup Guide for your particular system (for example S9100A).

An example of the GUI for the CIU ports appears below:

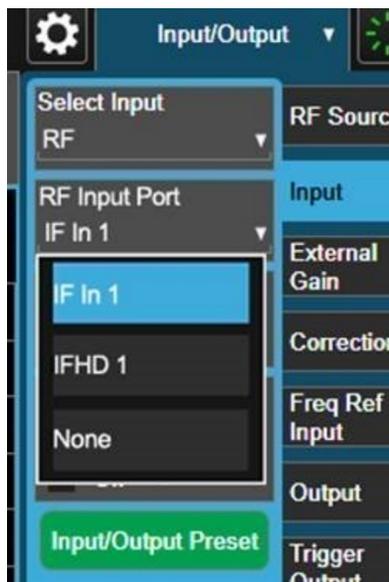

Example	<p>Set the RF input to be the port labeled RF Tx/Rx 2 on Head 1: :FEED:RF:PORT RRH1RFHD2</p> <p>Set the RF input to be the Channel 1 port labeled DUT IF IN on the CIU: :FEED:RF:PORT IFIN1</p>
Notes	<p>Parameter <b>RRHhRFHDp</b> corresponds to <b>Head h</b>, port <b>RF Tx/Rx p</b>; for example, <b>RRH1RFHD2</b> = the port labeled <b>RF Tx/Rx 2</b> on <b>Head 1</b></p> <p>For the CIU, the parameter <b>IFINc</b> corresponds to the <b>DUT IF IN</b> for channel <b>c</b>. For example, <b>IFIN1</b> would connect to the <b>DUT IF IN</b> port for Channel 1</p>
Dependencies	<p>The Radio Head and CIU parameters only appear when a Remote Radio Head or CIU is connected to the instrument. If these parameters are sent at any other time, an error is generated, “-221, Settings conflict; option not installed”</p>
Preset	<b>RRH1RFHD1</b>
Annotation	<p>Annotation in the Meas Bar reads as follows: Input:Hd <i>h</i> RFHD <i>p</i></p> <p>For example, in the case above, with RFHD 2 on Head 1 selected: Input:Hd 1 RFHD 1</p> <p>When using the CIU:</p> <ul style="list-style-type: none"> <li>- When input is IFIN1: Input: IFIN 1</li> <li>- When input is IFIN2: Input: IFIN 2</li> <li>- When input is IFIN3: Input: IFIN 3</li> <li>- When input is IFIN4: Input: IFIN 4</li> </ul>
Backwards	:FEED:RF:PORT A1

6 Input/Output  
6.2 Input

---

Compatibility SCPI A1 is treated as RRH1RFHD1 and sets the RF input to be the port labeled RF Tx/Rx 1 on Head 1  
:FEED:RF:PORT B1

B1 is treated as RRH1RFHD2 and sets the RF input to be the port labeled RF Tx/Rx 2 on Head 1  
:FEED:RF:PORT IFIO2

IFIO2 is treated as IFIN1, and sets the IF input to be the port labeled “DUT IF In/Out” on the CIU rear panel

**Parameters for E7760B Wideband Transceiver**

<port>	Input
A $n$	Bank A, Channel $n$ , for example A1
B $n$	Bank B, Channel $n$ , for example B1
IFIO $n$	IF In/Out for Channel $n$ , for example IFIO1

---

Example Set the RF input to A1:  
:FEED:RF:PORT A1

Set the RF input to B3:  
:FEED:RF:PORT B3

Set the RF input to IFIO1:  
:FEED:RF:PORT IFIO1

---

Dependencies Ports A1, A2, A3, B1, B2, and B3 are available if Option RF3 is installed. Ports IFIO1 and IFIO2 are available if option RF2 is installed

Note that for E7760B:

- Attempting to select a port for which the option is not present will generate the error, -241, “Hardware missing; Input not available”
- A port cannot be selected as an Input while it is occupied as an Output. Sending such a command while the port is occupied generates error: -221, “Settings conflict; Input Port is not available while occupied by Output”
- The mmWave ports are divided into two banks; the A Bank and the B Bank. A port cannot be selected as an Input if any port on the same bank is occupied as an Output. Sending a command for this situation generates error: -221 “Settings conflict; Input Port is not available while port bank is occupied by Output”

If RF3 is present and RF4 is absent, a mmWave port cannot be selected as an Input if the Output Port is occupied by mmWave Transceiver with a different frequency range. Sending a command for this situation generates error: -221 “Settings conflict; Input Port is not available while occupied by Output of incompatible frequency”

---

Preset E7760B with Option RF2: IFIO1  
E7760B without Option RF2: the first port with mmWave Transceiver attached. If no mmWave Transceiver attached: NONE

---

Annotation Annotation in the Meas Bar reads as follows:

- When input is A1: Input: A1
- When input is A2: Input: A2
- When input is A3: Input: A3
- When input is B1: Input: B2
- When input is B2: Input: B2
- When input is B3: Input: B3
- When input is IFIO1: Input: IFIO1
- When input is IFIO2: Input: IFIO2

### Parameters for M8920A/20B Radio Test Set

<port>	Input
ANT	Ant
TR	T/R

**Example** Set the RF input to be the Antenna port on M9470A, labeled **Ant**:  
`:FEED:RF:PORT ANT`

Set the RF input to be the T/R port on M9470A and M8920A/20B, labeled **T/R**. Note that Option HDX is required to enable the T/R port:  
`:FEED:RF:PORT TR`

**Dependencies** **ANT** and **TR** are only available in modular analyzers, and only when the M9470A module is installed, such as in M8920A. Option HDX is required to enable the T/R port

**Preset** **ANT**

**Annotation** Annotation in the Meas Bar reads as follows:

- When input is Ant: Input: Ant
- When input is T/R: Input: T/R

### Parameters for UXM Wireless Test Set

<port>	Input
RFIN	RF Input
RFIO1	RFIO 1
RFIO2	RFIO 2

**Example** Set the RF input to RFIO 2:  
`:FEED:RF:PORT RFIO2`

**Preset** **RFIN**

### 6.2.3 SA Frequency Extender Firmware Update (Front Panel Only)

When a Frequency Extender device (for example, V3050A) is connected and selected, if a firmware update is available for that device, this control will be visible. Because the measurement will be stopped for the duration of the firmware update, and because the update cannot be un-done, a confirmation dialog will be presented before proceeding with the firmware update. The update can take some time, so while in process, a modal dialog will be shown indicating that the update is in process and warning not to disconnect the device or turn off power. Typically, the update will take about a minute, but time can vary with the model of the Frequency Extender. When complete, the modal dialog will be dismissed, and a pop-up message will be shown for a few seconds indicating the success or failure of the update.

See ["Error Messages" on page 2593](#)

---

Notes	Measurement is stopped while the update is in process
Dependencies	Not available unless an External RF device is connected, External RF is the selected RF Input Port, and there is a firmware update available for the device

---

#### Error Messages

##### Update Already in Process Error

If a firmware update is already in process, the following message is displayed:

`Another external device FW update is already in process. Only one update is allowed at a time`

If received, wait until the current FW update is complete and then try again if still needed.

##### Unknown Assembly Error

When updating the firmware, the target hardware assembly needs to be identified. If for some reason the assembly cannot be identified, the firmware will not be able to initiate the update, and this error message will be displayed:

`Error updating FW for external device model <model number>' serial number <serial number>`

`Could not find HW assembly, cannot perform FW update`

The `<model number>` and `<serial number>` contain the actual numbers for the device.

This is a failure that warrants investigation, so you should contact Keysight Customer Support for service.

##### Error During Firmware Update Process

If there is an execution problem during the FW update, the specific error message(s) is written to the SA Event Log and this error message is displayed:

```
Error updating FW for external device model <model number> serial number
<serial number>
```

Error during FW update. See windows event log for more details

The <model number> and <serial number> contain the actual numbers for the device.

## 6.2.4 SA Frequency Extender Cable Correction

An SA Frequency Extender, such as V3050A, is attached to the instrument with several cables. Keysight provides several cables for purchase with the frequency extender. Typically, these are 1-, 2-, or 3-meter cables for the RF and IF connections. Keysight has characterized these cables and can correct for their loss. This control allows you to specify which cable is being used.

If you are using another type of cable, the instrument *cannot* automatically correct for it, so this function must be set to **OFF**. In this case, you can use RCal to characterize the corrections.

Remote Command	<code>:INPut:FEXtender:CABLe:CORRection OFF   V3050A1M   V3050A2M   V3050A3M</code>
Example	<code>:INP:FEXT:CABL:CORR V3050A1M</code>
Notes	The RF Input Port selections that support an SA Frequency Extender (such as V3050A) are: N9042B: External RF No other instruments support an SA Frequency Extender
Dependencies	An SA Frequency Extender must be attached, and the frequency extender's port must be the selected input for this control to be visible <ul style="list-style-type: none"> <li>- If the instrument does not support frequency extenders, the SCPI command returns error -241, "Hardware missing; option not available"</li> <li>- If the instrument does support frequency extenders, but a frequency extender is not attached, the SCPI command returns error -241, "Hardware missing; Cable selection only available when supporting frequency extender attached"</li> </ul> <p>When a frequency extender is attached, the control is not visible unless the frequency extender's port is the selected RF input, but the command will still be available. Setting the cable selection when the frequency extender's port is not active has no effect until the port is selected</p>
Preset	Unaffected by <b>Mode Preset</b> but set to preset value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults -&gt; All</b>
State Saved	Saved in instrument state

## 6.2.5 Half Duplex Input Port

Specify whether **RFIO3** or **RFIO4** is the Half Duplex Input port.

6 Input/Output  
6.2 Input

Remote Command	<code>[ :SENSe]:HDUPlex:PORT:INPut RFI03   RFI04</code>
Example	<code>:HDUPlex:PORT:INPut RFI03</code> <code>:HDUPlex:PORT:INPut?</code>
Dependencies	Only appears in EXM If <b>RFI03</b> is selected as “Half Duplex Output Port”, then “Half Duplex Input Port” will be set to <b>RFI04</b> automatically. If <b>RFI04</b> is selected as “Half Duplex Output Port”, then “Half Duplex Input Port” will be set to <b>RFI03</b> automatically
Preset	<b>RFI03</b>
State Saved	Saved in State

### 6.2.6 Port Information (Remote Command Only)

Provides information about an instrument port. The return information consists of two comma-separated fields:

- Field 1: the connection status (0 or 1)
- Field 2: a string of port information

The return information is device-dependent.

Remote Command	<code>[ :SENSe]:FEED[:RF]:PORT:INformation? RFIN   RFIN2   RFFD   RFHD   A1   A2   A3   B1   B2   B3   IFIO1   IFIO2   ANT   TR</code>
Example	<code>:FEED:PORT:INF? A1</code> example = <code>1,"US56160060"</code> where <code>1</code> is the connection status and <code>"US56160060"</code> is the port information
Notes	For E7760B: The connection status (first field in the return value) indicates: 0 – the port is either not licensed for use or is not connected to a mmWave Transceiver 1 – the port is licensed; and for the case of mmWave ports, the port is connected to a mmWave Transceiver The port information (second field in the return value) contains: "" (empty string) – no applicable information Serial Number – the serial number of the connected mmWave Transceiver If you send an incompatible parameter, the return values are: <code>0,""</code>
Dependencies	Only valid for E7760B

### 6.2.7 RF Preselector

In models that support the RF Preselector, such as PXE (N9048B), allows you to turn the preselector on or off.

NOTE

When using the RF Preselector, if your measurement starts below 3.6 GHz and finishes above 3.6 GHz, the preselector bypass switch will have to switch in and out for every measurement. When this is the case, you will hear a clicking sound from the instrument and a warning message will be displayed: “Settings Alert: Mechanical switch cycling”. You are advised to *avoid* such setups as much as possible, to minimize switch wear. Pressing **Mode Preset** resets Stop Freq to 3.6 GHz, to exit this state, or you can manually set Stop Freq to be below 3.6 GHz.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RFPSelector[:STATe] 1   0   ON   OFF</code> <code>[ :SENSe]:POWer[:RF]:RFPSelector[:STATe]?</code>
Example	<code>:POW:RFPS 1</code> <code>:INP:PRES:STAT ON</code>
Notes	Set full compliance measurement: <code>[ :SENSe]:POWer[:RF]:RFPSelector[:STATe] 1   ON</code> Set pre-compliance measurement: <code>[ :SENSe]:POWer[:RF]:RFPSelector[:STATe] 0   OFF</code>
Dependencies	Only appears when RF Input is selected as the Input Only appears in MXE and PXE The RF Preselector is not available in all measurements. The key is grayed out in measurements that do not support it, unless you are in a Mode in which no measurements support it, in which case the key does not appear at all. If the preselector is unavailable, it is forced to Off. Attempting to turn it on or off in measurements that do not support it generates the error message: -221, Settings conflict; Feature not supported for this measurement The RF Preselector is not available when FFT Sweep Type is manually selected. Attempting to turn it on or off when this is the case generates an error message: -221, Settings conflict; RF Presel unavailable when Sweep Type=Manual FFT Only appears in Modes that support the RF Preselector, in other Modes, sending the SCPI command or query generates an error In Frequency Scan measurement, this key is grayed-out when final measurement is running. Warning message “Function not available while measurement is running” appears if the grayed-out key is pressed
Preset	<b>ON</b>
Annotation	When RF Preselector=On, “RF PRESEL” is displayed on the Settings Panel
Backwards Compatibility SCPI	<code>:INPut&lt;1 2&gt;:PRESelection[:STATe] ON   OFF</code> <code>:INPut&lt;1 2&gt;:PRESelection[:STATe]?</code> Included for R&S ESU compatibility

## 6.2.8 Notch Filter

In some models that support the RF Preselector, such as PXE, there is also a notch filter to suppress signals in the frequency band from 2.4 GHz to 2.5 GHz. This control allows you to turn the notch filter on or off.

Remote Command	<code>[ :SENSe]:POWer[:RF]:RFPSelector:NFIlter[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:POWer[:RF]:RFPSelector:NFIlter[:STATe]?</code>
Example	<code>:POW:RFPS:NFIL 1</code> <code>:POW:RFPS:NFIL?</code>
Dependencies	<p>Only appears when RF Input is selected as the Input</p> <p>Only appears in models that support the notch filter, such as PXE. Attempting to turn it on or off via SCPI in models that do not support it generates error message: -241 Hardware missing; Not available for this model number</p> <p>Only appears in measurements that support the Notch Filter, such as EMI Receiver measurements. Attempting to turn it on or off via SCPI in measurements that do not support it generates error message: -221, Settings conflict; Feature not supported for this measurement</p> <p>In Frequency Scan measurement, this control is grayed-out when final measurement is running, aligned with the <b>RF Preselector</b> key. The warning message "Function not available while measurement is running" appears if the grayed-out control is pressed</p>
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>OFF   ON</code>
Annotation	<p>Due to limited space in the Measurement Bar, Notch Filter annotation is shown as part of the RF Presel state</p> <ul style="list-style-type: none"> <li>- <code>RF Presel: On, NF</code>, when both RF Presel and Notch Filter are turned on</li> <li>- <code>RF Presel: On</code>, when RF Presel = on and Notch Filter= off</li> <li>- <code>RF Presel: Off</code>, when RF Presel = off</li> </ul>
Backwards	<code>:INPut&lt;1 2&gt;:PRESelection:FILTer:NOTCh[:STATe] ON   OFF</code>
Compatibility SCPI	<code>:INPut&lt;1 2&gt;:PRESelection:FILTer:NOTCh[:STATe]?</code>

## 6.2.9 RF Calibrator

Lets you choose a calibrator signal to look at or turns the calibrator off.

Remote Command	<code>[ :SENSe]:FEED:AREFERENCE REF50   REF4800   OFF</code> <code>[ :SENSe]:FEED:AREFERENCE?</code>
Example	Select the 50 MHz amplitude reference as the signal input: <code>:FEED:AREF REF50</code>

---

	Select the 4.8 GHz amplitude reference as the signal input: <code>:FEED:AREF REF4800</code>
	Turn the calibrator "off" (switches back to the selected input - RF or I/Q): <code>:FEED:AREF OFF</code>
Dependencies	Only appears when RF Input is selected as the Input Selecting an input (RF, Ext Mix or I/Q) turns the Calibrator <b>OFF</b> . This is true whether the input is selected using the menu panel or <code>[ :SENSe ]:FEED</code> The 4.8 GHz internal reference is only available in some models and frequency range options. If the 4.8 GHz reference is not present, the <b>4.8 GHz</b> choice does not show, and if the REF4800 parameter is sent, the instrument generates an error
Couplings	When one of the calibrator signals is selected, the instrument routes that signal (an internal amplitude reference) to the instrument, and changes the main input selection to RF so the calibrator signal can be seen. When you turn the calibrator off it does not switch back to the previously selected input
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Annunciation	An advisory message is sent, indicating that the input is set to internal
	Backwards Compatibility SCPI
Notes	For ESA backwards compatibility In the ESA the calibrator was a separate output which you connected to the input and switched on with this command In X-Series, the <b>ON</b> parameter is aliased to <code>[ :SENSe ]:FEED:AREF REF50</code> and the <b>OFF</b> parameter is aliased to <code>[ :SENSe ]:FEED:AREF OFF</code> When <code>:CALibration:SOURce:STATe?</code> is received, 1 is returned if any of the references is selected, or 0 if the Calibrator is <b>OFF</b>
Preset	<b>OFF</b>
Backwards Compatibility SCPI	<code>:CALibration:SOURce:STATe OFF   ON   0   1</code> <code>:CALibration:SOURce:STATe?</code>

---

## 6.2.10 RF Coupling

Specifies alternating current (**AC**) or direct current (**DC**) coupling at the instrument RF input port. Selecting **AC** coupling switches in a blocking capacitor that blocks any DC voltage present at the instrument input. This decreases the input frequency range of the instrument, but prevents damage to the input circuitry of the instrument if there is a DC voltage present at the RF input.

**NOTE**

**When operating in DC coupled mode, ensure protection of the instrument input circuitry by limiting the DC part of the input level to within 200 mV of 0 Vdc. In AC or DC coupling, limit the input RF power to +30 dBm (1 Watt).**

## 6 Input/Output

### 6.2 Input

Remote Command	<code>:INPut:COUPling AC   DC</code> <code>:INPut:COUPling?</code>
Example	<code>:INP:COUP DC</code>
Dependencies	Only appears when RF Input is selected as the Input Does not appear in models that are always AC coupled. When the SCPI command to set DC coupling is sent to these models, it generates the error "Illegal parameter value; This model is always AC coupled" In these models, <code>:INP:COUP?</code> always returns <b>AC</b> Does not appear in models that are always DC coupled. When the SCPI command to set AC coupling is sent to these models, it generates the error "Illegal parameter value; This instrument is always DC coupled" In these models, <code>:INP:COUP?</code> always returns <b>DC</b>
Preset	<b>AC</b> on models that support AC coupling On models that are always DC coupled, such as millimeter wave models (frequency ranges 30 GHz and above), the preset is <b>DC</b>
State Saved	Saved in instrument state

Annunciation When the RF Input is selected, and AC coupling is selected, annunciators appear in the Meas Bar to that effect:



appears in the settings panel (the row of annunciators across the top of the display) to that effect, as shown below:

When the RF Input is selected, and DC coupling is in effect, the annunciator changes as shown below:



Note the amber color, which indicates that you should exercise caution when applying a signal to any DC coupled input (see note above this table for the specific cautions)

On models that support both AC and DC coupling: when DC coupling is selected, a warning condition message appears in the status line "DC coupled" as shown below:



On models that support both AC and DC coupling: when AC coupling is selected, and any part of the displayed frequency range is below 10 MHz, a warning condition message appears in the status line: "AC: Accy unspec'd below 10 MHz"

In AC coupling mode, you can view signals below the corner frequency of the DC block, but below a certain frequency the amplitude accuracy is not specified.

The lowest frequency for which specifications apply is:

X-Series Model	Lowest Freq for meeting specs when AC coupled	Lowest Freq for meeting specs when DC coupled
CXA-503/507	100 kHz	n/a

X-Series Model	Lowest Freq for meeting specs when AC coupled	Lowest Freq for meeting specs when DC coupled
CXA-C75 Input 2	1 MHz	n/a
CXA-513/526	10 MHz	9 kHz
CXA-m	10 MHz	9 kHz
EXA	10 MHz	9 kHz
MXA	10 MHz	20 Hz
PXA	10 MHz	3 Hz
UXA	10 MHz	3 Hz

Some amplitude specifications apply only when coupling is set to DC. Refer to the appropriate amplitude specifications and characteristics for your instrument.

### 6.2.11 Input Z Correction

Sets the input impedance for unit conversions. This affects the results when the y-axis unit is voltage or current units (dBmV, dB $\mu$ V, dB $\mu$ A, V, A), but not when it is power units (dBm, W). The impedance you select is for computational purposes only, since the actual impedance is set by internal hardware to 50 ohms. Setting the computational input impedance to 75 ohms is useful when using a 75 ohm to 50-ohm adapter to measure a 75-ohm device on an instrument with a 50-ohm input impedance.

There are a variety way to make 50-to-75-ohm transitions, such as impedance transformers or minimum loss pads. The choice of the solution that is best for your measurement situation requires balancing the amount of loss that you can tolerate with the amount of measurement frequency range that you need. If you are using one of these pads/adaptors with the **Input Z Corr** function, you might also want to use the **Ext Gain** key. This function is used to set a correction value to compensate for the gain (loss) through your pad. This correction factor is applied to the displayed measurement values.

Remote Command	<code>[ :SENSe]:CORRection:IMPedance[:INPut][:MAGNitude] 50   75</code> <code>[ :SENSe]:CORRection:IMPedance[:INPut][:MAGNitude]?</code>
Example	Set the input impedance correction to 75 ohms: <code>:CORR:IMP 75</code>
Couplings	In CXA option C75, when RF Input 2 is selected, the Input Z Correction automatically changes to 75 ohms. You may then change it to whatever is desired. When the main RF Input is selected, the Input Z Correction automatically changes to 50 ohms. You may then change it to whatever is desired
Preset	Unaffected by Preset, but set to 50 ohms by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b> Some instruments/options may have 75 ohms available
State Saved	Saved in instrument state

## 6.2.12 All Screens Use Same Input

If **ON**, then all Screens share the same Input settings. This is the default state.

If **OFF**, then certain settings are allowed to be local to each Screen, meaning one Screen can have them set one way and another can have them set another way.

The Input settings that become local to each Screen when **All Screens Use Same Input** is **OFF** are:

Input Tab:

- Selected Input (RF, Ext Mix, BBIQ)
- RF Input Port (only appears in instruments with multiple RF ports, such as N9041B, MXE, and CXA)
- RF Coupling (AC/DC)
- Input Z Correction

External Gain Tab:

- External Preamp
- MS
- BTS

Corrections Tab:

- For each Correction, whether it is on or off

Note that if **All Screens Use Same Input** is **OFF** and you press the + control to create a new Screen, the new Screen contains a copy of the old Screen's state, including all its Input/Output variables.

---

Remote Command	:INSTrument:COUPle:SCReen:INPut ON   OFF   1   0
----------------	--

Example	:INST:COUP:SCR:INP OFF
---------	------------------------

---

Preset	ON
--------	----

Not affected by **Input/Output Preset**, but set to **ON** by **Restore Input/Output Defaults**

## 6.2.13 External Mixer Setup

Lets you select the mixer type, and lets you configure your mixer (if necessary). The first page of the dialog shows you the current settings for the selected mixer. These

settings may be dependent on which IF path is currently in use, whether a + or – harmonic is currently selected, etc.

To apply any amplitude correction factors needed to correct mixer flatness, you enter values into one of the Correction tables (under **Input/Output, Corrections**). The correction conversion loss values can be extracted from data supplied with the mixer or from manual measurements you make to determine the conversion loss. Note that the correction applied by the Correction tables is global to the instrument; therefore, you should make sure to turn off the External Mixer corrections when you are not using the External Mixer input.

**NOTE**

**Keysight USB Mixers automatically supply their flatness data to the instrument, and the correction is applied internally. No correction needs be entered, and the correction does not appear in the user-accessible Corrections tables. You are free to enter additional corrections into the Correction tables under **Input/Output, Corrections**.**

Notes	The setup summary on the menu panel appears just above this control, showing the current external mixer setup
Dependencies	Only appears when External Mixer is selected as the Input
State Saved	All settings in the External Mixer Setup dialog are part of the Input/Output system, and hence are saved whenever State is saved

The **External Mixer Setup** screen looks like this:



## 6 Input/Output

### 6.2 Input

The current Mixer selection (the current or most recently connected USB Mixer, or the most recent Mixer Preset, or **Custom** if you have modified the setup) reads out at the top of this screen as **Mixer Selection**

The Harmonic Table currently being used reads out below the Mixer Selection. It shows each range being used for the current mixer. Note that a band may be made up of up to 3 ranges. Each range represents a choice of mixer harmonic and doubler state. When you select a Mixer Preset, it sets the instrument Start and Stop frequency to the values shown in the Harmonic Table; Start Freq is set to the Min Freq for the bottom range, and Stop Freq is set to the Max Freq for the top range. In many cases you can exceed these nominal values; the absolute maximum and minimum frequency for each preset are shown in the tables that accompany the control descriptions for the Mixer Presets.

#### NOTE

**If the current measurement has a limited Span available to it and cannot achieve the Span shown in the table (Span = Stop Freq - Start Freq), the instrument uses the maximum Span the measurement allows, and sets **Center Frequency** to the midpoint of the Start and Stop Freq values in the Harmonic Table.**

---

You may edit some of the Harmonic and LO Doubler fields in the Harmonic Table, as shown by the gray backgrounds of these fields. When you edit the Harmonic Table, the Mixer Selection changes to **Custom**. To change it back you must go back into the Mixer Presets menu and select a Preset.

When you edit the Harmonic Table, the nominal Min Freq and Max Freq that are available will usually be different than the Preset you were using; and the absolute frequency limits will change as well. This may result in a change to your Start and/or Stop Freq, if the current values fall outside the new range, requiring you to retune your Center Freq to get your signal back in the center.


The instrument supports the Keysight M1970 Series Harmonic Mixers with USB connection. While in External Mixing, if one of these mixers is plugged in to a USB port, it is automatically detected and displayed in the "USB Mixer" area of the setup screen, including its model number and serial number.

The instrument assumes that if you plug a mixer into the USB you want to use that mixer, so:

1. If a USB mixer is connected to the USB port, the Mixer Presets button is grayed-out, as none of the presets make sense with a USB Mixer connected. Note that once the instrument has acquired the USB Mixer, the mixer selection will remain if it is subsequently unplugged from the USB, allowing you to plug it back in with no change to your settings. However, once you unplug it, the Mixer Presets control ceases to be grayed-out, allowing you to preset to a different mixer
2. When Restore Input/Output Defaults is performed, if a Keysight USB Mixer is plugged into the instrument's USB port, the Mixer Selection remains unchanged

- When recalling an instrument state, if a Keysight USB Mixer is plugged into the instrument's USB port, and the Mixer Selection in the recalled state is for a USB Mixer that does not match the mixer currently plugged in, you will have to unplug your mixer and then plug it back in to get the instrument to recognize your mixer

As long as the selection in Ext Mixer Setup shows one of the USB mixers, the **Mixer Bias** control is grayed-out and the Harmonic Table is no longer editable, as shown by the fact that the fields in the Harmonic Table are now black and the **Table Type** control is grayed-out.

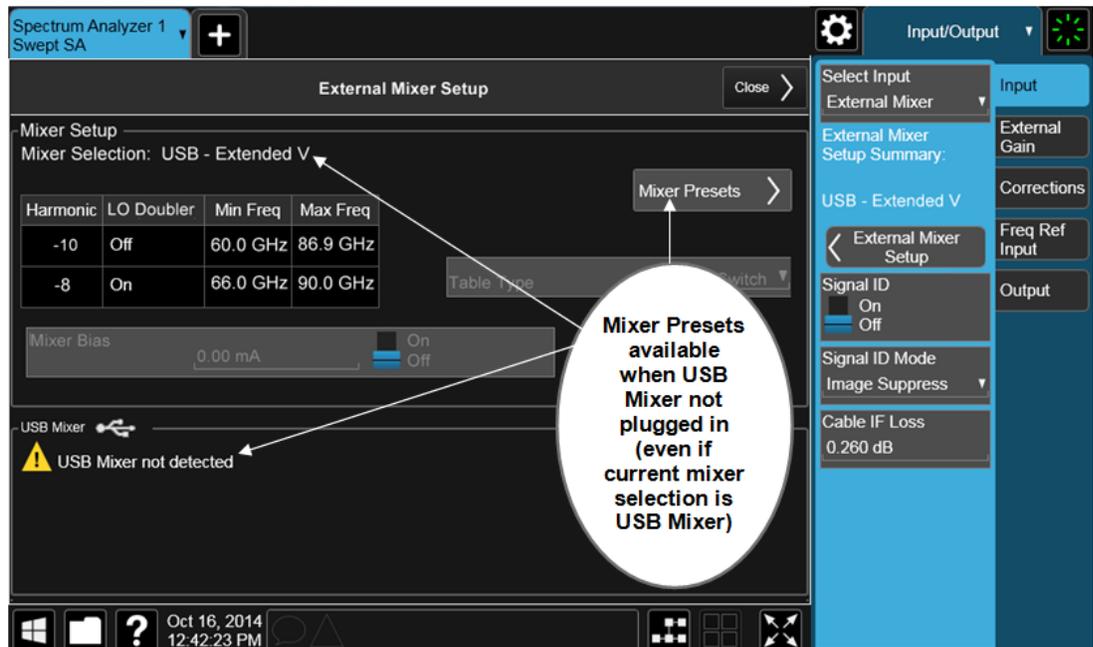

Only one USB Mixer is supported at a time. To switch to a different USB Mixer, disconnect the one that is no longer being used prior to connecting a new one.

The **Mixer Selection** displayed and menu panel readback for the Keysight M1970 series mixers is:

Mixer Model	Mixer Selection display on Setup Screen	Readback
Keysight M1970E: Option 001: 60 to 90 GHz Waveguide Harmonic Mixer	USB - M1970E-001 E-Band	USB Mixer E-Band
Keysight M1971E: Option 001: 60 to 90 GHz Waveguide Harmonic Mixer	USB - M1971E-001 E-Band	USB Mixer E-Band
Keysight M1971E: Option 003: 55 to 90 GHz	USB - M1971E-003 Extended E-Band	USB Mixer

6 Input/Output  
6.2 Input

Mixer Model	Mixer Selection display on Setup Screen	Readback
GHz Waveguide Harmonic Mixer		Extended E
Keysight M1971V: Option 001: 50 to 75 GHz Waveguide Harmonic Mixer	<b>USB - M1971E-001 V-Band</b>	USB Mixer V-Band
Keysight M1971W: Option 001: 75 to 110 GHz Waveguide Harmonic Mixer	<b>USB - M1971E-001 W-Band</b>	USB Mixer W-Band
Keysight M1970V Option 001: 50 to 75 GHz Waveguide Harmonic Mixer	<b>USB - M1970V-001 V-Band</b>	USB Mixer V-Band
Keysight M1970V Option 002: 50 to 80 GHz Waveguide Harmonic Mixer	<b>USB - M1970V-002 Extended V-Band</b>	USB Mixer Extended V
Keysight M1970W Option 001: 75 to 110 GHz Waveguide Harmonic Mixer	<b>USB - M1970W-001 W-Band</b>	USB Mixer W-Band

The Keysight USB mixer essentially acts as a “remote front end” and is fully calibrated over the specified frequency range, without requiring any user interaction. This is particularly useful at high mm-wave frequencies, where cable loss is typically quite large, and it is desirable to bring the front end right up to the device under test, rather than bringing the mm-wave signal to the instrument using a lossy and uncalibrated cable or waveguide connection.

Connecting the mixer to the USB port on the instrument switches you to External Mixing, aborts the current measurement, and initiates an alignment of the mixer. A popup message, “USB Mixer connected” appears on the display. When a USB mixer and the LO/IF cable are connected the alignment is performed. When the alignment begins, an “Aligning” popup replaces the previous message on the display. When the alignment completes, the current measurement restarts.

### 6.2.13.1 Mixer Presets

Presets the mixer setup for the particular type of mixer that you are using.

These presets are divided into four groups:

- One for legacy HP/Agilent/Keysight mixers (11970)
- Three for general purpose mixers:

- presets that use a single harmonic and no doubling
- presets that use a single harmonic but double the LO
- presets that use multiple harmonics

Note that the IF/LO port provides a 3.8-14 GHz LO in two bands: 3.8-8.7 (LO fundamental), and 8.6-14 GHz (doubled LO).

In most cases, once you have executed the preset, you will not need to adjust any further settings.

Remote Command	<pre>[ :SENSe]:MIXer:BAND A   Q   U   V   W   NA   ND   NE   NF   NG   NJ   NK   NQ   NU   NV   NW   NY   NEXT   DD   DF   DG   DJ   DK   DQ   DV   DW   DY   DEXT   MA   ME   MU   MCOAX   USB   VDIWR6PT5M4  [:SENSe]:MIXer:BAND?</pre>								
Example	<pre>:MIX:BAND A :MIX:BAND?</pre>								
Notes	<p><b>A Q U V W</b> select HP/Agilent/Keysight 11970 mixer presets  <b>NA ND NE NF NG NJ NK NQ NU NV NW NY NEXT</b>  select single harmonic, non-doubled LO presets  <b>DD DF DG DJ DK DQ DV DW DY DEXT</b> select single harmonic, doubled LO presets  <b>MA ME MU MCOAX</b> select multiple harmonic presets  VDIWR6PT5M4 selects presets for the VDI WR6.5CCD-M4 external mixer (a Compact Down-Converter in the Keysight N9029ACST Series)  <b>VDIWR6PT5M4</b> requires Model N9042B with the EXW option. To use this selection, you must connect cables from the external mixer to the High LO Out and High IF In ports (not the Ext Mixer port) of the N9042B  All these presets are detailed in their respective control descriptions  The query returns the most recent preset, <i>unless</i> the harmonic table has been edited after the preset was executed. If the harmonic table has been edited, returns <b>CUSTOM</b>  The command <b>USB</b> refreshes the USB mixer connection and automatically detects the mixer band. The query returns the following if a Keysight USB Mixer is plugged into the instrument's USB port:</p> <table border="1"> <tr> <td><b>USBE</b></td> <td>Keysight E-Band USB Mixer</td> </tr> <tr> <td><b>USBV</b></td> <td>Keysight V-Band USB Mixer</td> </tr> <tr> <td><b>USBVEXT</b></td> <td>Keysight Extended V-Band USB Mixer</td> </tr> <tr> <td><b>USBW</b></td> <td>Keysight W-Band USB Mixer</td> </tr> </table> <p>Note that the parameters <b>CUSTOM</b>, <b>USBV</b>, <b>USBVEXT</b>, and <b>USBW</b> are query responses only, and cannot be sent to the instrument  The following cross-reference matches the mixer band designators used by Keysight to the EIA waveguide designations:</p>	<b>USBE</b>	Keysight E-Band USB Mixer	<b>USBV</b>	Keysight V-Band USB Mixer	<b>USBVEXT</b>	Keysight Extended V-Band USB Mixer	<b>USBW</b>	Keysight W-Band USB Mixer
<b>USBE</b>	Keysight E-Band USB Mixer								
<b>USBV</b>	Keysight V-Band USB Mixer								
<b>USBVEXT</b>	Keysight Extended V-Band USB Mixer								
<b>USBW</b>	Keysight W-Band USB Mixer								

6 Input/Output  
6.2 Input

EIA	Keysight	Freq Range
WR-28	A	26.5 - 40 GHz
WR-22	Q	33 - 50 GHz
WR-19	U	40 - 60 GHz
WR-15	V	50 - 75 GHz
WR-12	E	60 - 90 GHz
WR-10	W	75 - 110 GHz
WR-8	F	90 - 140 GHz
WR-6	D	110 - 170 GHz
WR-5	G	140 - 220 GHz
WR-3	J	220 - 325 GHz

Preset

When **Restore Input/Output Defaults** is performed, an “A” mixer preset is also issued (11970A band), unless a Keysight USB Mixer is plugged into the instrument’s USB port, in which case the Mixer Selection remains unchanged

When using Keysight USB Mixers, if **Restore All Defaults (:SYSTEM:DEFault)** has been performed, either remove and reinsert the USB cable or press the **Refresh USB Mixer Connection** control


### VDI CCD (N9029)

These presets select a setup that uses a single harmonic and no LO doubling.

This setup is used with an external mixer in the series VDI CCD (N9029ACST). The currently supported example is the D-band mixer VDI WR6.5CCD-M4.

Mixer	Readout on setup dialog and menu panel	Harm #	RF start	RF stop	RF center
WR6.5 M4 (D-band)	VDI WR6.5CCD-M4	-4	110	170	140

This mixer setup is enabled only for model N9042B with the EXW option. You must connect cables from this external mixer to the High LO Out and High IF In ports (not the Ext Mixer port) of the N9042B, as illustrated below:

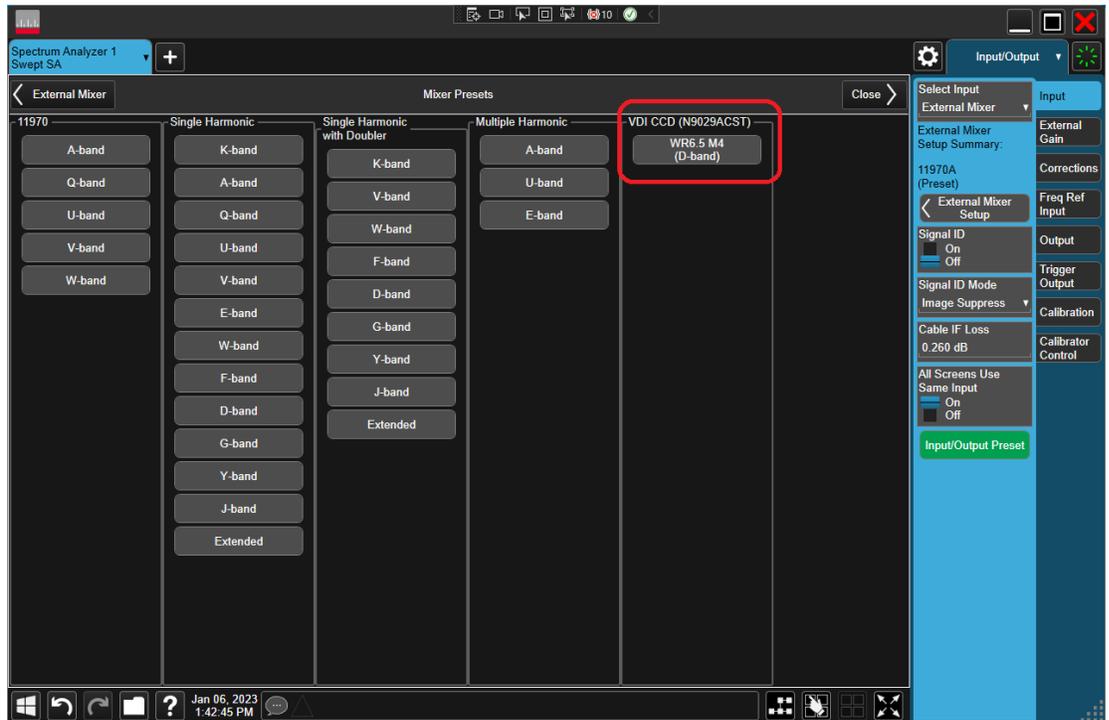

## 11970

Lets you preset for a model in the HP/Agilent/Keysight 11970 series.

Because the X-Series has an LO range of 3.8 - 14 GHz, and older analyzers had an LO range of 3.0 - 6.8 GHz, the harmonic numbers used in the X-Series may differ from those used on older analyzers for the same mixers. Additionally, some of the 11970 mixers cannot be operated over their full range with the X-Series without switching harmonics. Consequently, you will find that some of the bands (A-Band, for example) are broken into two ranges for use with the X-Series.

6 Input/Output  
6.2 Input

Below are the 11970A presets. The 11970U and the 11970W use a single harmonic. The other three switch harmonic mid-band. Both harmonic ranges are shown in the table. None of these mixers use LO doubling.

The 11970 K-band mixer and the 11974 preselected mixer series are not supported.

Preset	Readout on setup dialog and menu panel	Range	Harm #	RF start	RF stop	RF center
A-band	11970A	1	-6	26.5	30.45	28.475
		2	-8	30.35	40	35.175
Q-band	11970Q	1	-8	33	40.8	36.9
		2	-10	39.8	50	44.9
U-band	11970U	..	-10	40	60	50
V-band	11970V	1	-12	50	66	58
		2	-14	53	75	64
W-band	11970W	..	-18	75	110	92.5

### Single Harmonic

These presets select a setup that uses a single harmonic and no doubling for the LO.

Mixer	Readout on setup dialog and menu panel	Harm #	RF start	RF stop	RF center
K-band	K-band Single Harmonic, no doubler	-4	18	26.5	22.25
A-band	A-band Single Harmonic, no doubler	-6	26.5	40	33.25
D-band	D-band Single Harmonic, no doubler	-20	110	170	140
E-band	E-band Single Harmonic, no doubler	-12	60	90	75
F-band	F-band Single Harmonic, no doubler	-18	90	140	115
Q-band	Q-band Single Harmonic, no doubler	-6	33	50	41.5
U-band	U-band Single Harmonic, no doubler	-8	40	60	50
V-band	V-band Single Harmonic, no doubler	-10	50	75	62.5
W-band	W-band Single Harmonic, no doubler	-14	75	110	92.5
G-band	G-band Single Harmonic, no doubler	-26	140	220	180
Y-band	Y-band Single Harmonic, no doubler	-30	170	260	215
J -band	J-band Single Harmonic, no doubler	-38	220	325	272.5
Extended	Extended Single Harmonic, no doubler	-40	155	345	250

### Single Harmonic with doubler

These presets select a setup that uses a single harmonic and doubling for the LO.

Mixer	Readout on setup dialog and menu panel	Harm #	RF start	RF stop	RF center
D-band	D-band Single Harmonic w/doubler	-14	110	170	140
F-band	F-band Single Harmonic w/doubler	-10	90	140	115
G-band	G-band Single Harmonic w/doubler	-16	140	220	180
J-band	J-band Single Harmonic w/doubler	-24	220	325	272.5
K-band	K-band Single Harmonic w/doubler	-2	18	26.5	22.25
Q-band	Q-band Single Harmonic w/doubler	-4	33	50	41.5
V-band	V-band Single Harmonic w/doubler	-6	50	75	62.5
W-band	W-band Single Harmonic w/doubler	-8	75	110	92.5
Y-band	Y-band Single Harmonic w/doubler	-20	170	260	215
Extended	Extended Single Harmonic w/doubler	-28	245	390	317.5

### Multiple Harmonics

These presets select a setup that uses multiple harmonics and may or may not use doubling for the LO.

Mixer	Readout on setup dialog and menu panel	Range	Harm #	Dblr?	RF start	RF stop	RF Center
A-band	A-band Multiple Harmonic	1	-4	N	26.5	34.1	30.3
		2	-4	Y	33.1	40	36.55
E-band	E-band Multiple Harmonic	1	-6	Y	60	83	71.5
		2	-8	Y	65	90	77.5
U-band	U-band Multiple Harmonic	1	-6	N	40	51.5	45.75
		2	-6	Y	49.5	60	54.75
Coaxial	Coaxial Multiple Harmonic	1	-4	N	26.5	34	30.25
		2	-4	Y	32.5	55	43.75
		3	-6	Y	50	70	60

### 6.2.13.2 Mixer Bias

Adjusts an internal bias source for use with external mixers. The bias signal is present on the center conductor of the IF input connector on the front panel. The shunt current range is from -10 mA to 10 mA, and it can be set whether Mixer Bias state is On or Off, but it will only be applied if it is On.

The bias remains as set if you switch to another input (for example, the RF Input).


---

Remote	<code>[ :SENSe ] :MIXer :BIAS &lt;real&gt;</code>
Command	<code>[ :SENSe ] :MIXer :BIAS?</code>

6 Input/Output  
6.2 Input

Example	<code>:MIX:BIAS 0</code> <code>:MIX:BIAS?</code>
Preset	Unaffected by Preset, but set to <b>OFF</b> (0) by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state
Min	-10 mA
Max	10 mA

Annunciation When the bias is turned on this (together with the bias polarity) is indicated in the Meas Bar with a plus or minus sign:

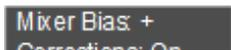

otherwise, it reads "Off"

#### Auto Function

Remote Command	<code>[ :SENSe ]:MIXer:BIAS:STATe OFF   ON   0   1</code> <code>[ :SENSe ]:MIXer:BIAS:STATe?</code>
Example	<code>:MIX:BIAS:STAT 0</code> <code>:MIX:BIAS:STAT?</code>
Preset	<b>OFF</b>

### 6.2.13.3 Table Type

Determines the Custom Mixer configuration type. You can choose: Single Row, Harmonic Switching, or Doubler Switching. For details, see ["Available Types" on page 2611](#).

The Harmonic Table can be configured as:

- A single row (meaning only one harmonic number is used and the LO Doubler is either on or off)
- Two rows where the harmonic number switches between the first row and the second
- Two rows where the LO Doubler state switches between the first row and the second

#### Available Types

Table Type	Behavior
Single Row	The External Mixer always stays in the same Harmonic Number and the LO Doubler is either on or off and does not change state during a sweep. You may change the Harmonic Number and you may change the state of the Doubler
Harmonic	The External Mixer switches the Harmonic Number in the middle of the sweep. The LO Doubler may be on

Table Type	Behavior
Switching	or off, but it is the same for both Harmonic Numbers. You can set the initial Harmonic Number, and when it switches it decrements by two when the harmonic is negative and increments by two when the harmonic is positive For example, if you set the initial number to -6, when it switches it will go to -8. If you set the harmonic number to 8, when it switches it will go to 10
Doubler Switching	The External Mixer switches the doubler from Off to On in the middle of the sweep. You can set the Harmonic Number, but it stays the same for the Doubler Off state as for the Doubler On state. The LO Doubler control is grayed-out in this table type

### Editable Fields

Table Type	Fields you can edit
Single Row	Harmonic and LO Doubler cells
Harmonic Switching	Harmonic and LO Doubler cells (only the first row)
Doubler Switching	Harmonics cell (only the first row)

Note that you cannot add or delete rows from the table; you can only modify the rows that are already there.

Remote Command	<code>[ :SENSe]:MIXer:TTYPe SINGLE   HARMonic   DOUBler</code> <code>[ :SENSe]:MIXer:TTYPE?</code>
Example	<code>:MIX:TTYP SING</code>
Couplings	When you change the Table Type, the Mixer Selection changes to <b>Custom</b>
Preset	Depends on the current Mixer Preset. Unaffected by <b>Mode Preset</b> , but <b>Restore Input/Output Defaults</b> presets the Mixer to 11970A, for which the Table Type is Harmonic Switching
State Saved	Saved in instrument state

#### 6.2.13.4 Select VDI CCD Correction

Selects the appropriate VDI CCD Correction data by mixer Serial Number.

Remote Command	<code>[ :SENSe]:VCORrection:SElect NONE   &lt;serialNumber&gt;</code> <code>[ :SENSe]:VCORrection:SElect?</code>
Example	<code>:VCOR:SEL NONE</code> <code>:VCOR:SEL 123123</code>
Dependencies	Requires EXW (External Mixing Wide Bandwidth) and Ampcor (Amplitude Correction) licenses
Couplings	When the External Mixer Model or VDI CCD Corrections data changes, this field checks whether VDI CCD corrections are stored for the currently-selected External Mixer Model, and automatically selects the first serial number found, or <b>NONE</b> if no matching corrections are found When setting this parameter via SCPI, if no match is found for the given serial number, the parameter

---

is set to **NONE**. If the correction should be automatically selected, this can be done by setting the value via SCPI to **Any** (see "[External Mixer Setup](#)" on page 2601)

---

State Saved Saved in instrument state

---

### 6.2.13.5 Delete All VDI CCD Corrections

Erases all stored VDI CCD corrections.

---

Remote Command	<code>[:SENSe]:VCORrection:DELeTe</code>
Example	<code>:VCOR:DEL</code>
Dependencies	Requires EXW (External Mixing Wide Bandwidth) and Ampcor (Amplitude Correction) licenses
Couplings	When the VDI CCD corrections are deleted from memory, " <a href="#">Select VDI CCD Correction</a> " on page 2612 is set to <b>NONE</b>

---

### 6.2.13.6 Harmonic

Lets you enter the **Harmonic** value with its associated sign (mixing mode). Only the first row of the table is editable. When you edit a value or change "[Table Type](#)" on [page 2611](#), the Mixer Selection changes to **Custom**.

In **Custom** mode, the maximum start and stop frequencies are strictly set by the LO range and the harmonic number you have chosen. The undoubled LO range is approximately 3.8 - 8.7 GHz, and (for LOs that support doubling) the doubled range is approximately 8.0 - 14.0 GHz. That range times the harmonic you have selected determines the tuning range. If your frequency is currently outside that range when you edit the Harmonic Table, the frequency will be changed to fall at the edge of the range. To change it back, go to the **Mixer Presets** menu and select a Preset.

The harmonic number is a signed integer, where the sign distinguishes between positive and negative mixing products. Desired mixing products occur at an IF frequency that equals the difference between the RF frequency ( $f_{RF}$ ) and the LO frequency ( $Nf_{LO}$ ). When this difference is positive, we can say  $f_{IF} = f_{RF} - Nf_{LO}$ . When this difference is negative, we can say  $f_{IF} = Nf_{LO} - f_{RF}$ . Thus, a negative harmonic means the instrument will be tuned such that the harmonic of the LO is higher than the indicated frequency by the frequency of the first IF. A positive harmonic means the instrument will be tuned such that the harmonic of the LO is lower than the indicated frequency by the frequency of the first IF.

---

Remote Command	<code>[:SENSe]:MIXer:HARMonic &lt;integer&gt;</code>
Example	<code>:MIX:HARM -28</code> <code>:MIX:HARM?</code>
Notes	The query returns the harmonic value of the first row of the harmonic table

---

Couplings	When you set a value for <b>Harmonic</b> via SCPI, the Mixer Selection changes to <b>Custom</b>
Preset	Unaffected by <b>Mode Preset</b> , but <b>Restore Input/Output Defaults</b> turns editing off, the Harmonic Table returns to normal, and the Mixer is preset to 11970A, which has -6 in the first row of its Harmonic Table
State Saved	Saved in instrument state
Min	-400
Max	400

### 6.2.13.7 LO Doubler

Lets you specify whether the Doubler is on or off. Only the first row of the table is editable, and the LO Doubler field is only editable in Single Row and Harmonic Switching table types. When you edit a value or change the Table Type, the Mixer Selection changes to **Custom**.

The LO Doubler setting controls the choice of the LO doubler state for LO's that support doubled operation. In Single Row mode it is either on or off for the one row in the table. In Harmonic Switching mode it is on for both rows or off for both rows. In Doubler switching it is off for row 1 and on for row 2, so it is not editable.

In LOs that support doubling, the fundamental band is approximately 3.8 – 8.7 GHz, and the doubled band is approximately 8.0 – 14 GHz. The higher LO frequency can result in a lower mixer harmonic and reduced mixer conversion loss.

Remote Command	<code>[ :SENSe ]:MIXer:LODoubler ON   OFF   0   1</code> <code>[ :SENSe ]:MIXer:LODoubler?</code>
Example	<code>:MIX:LOD 0</code> <code>:MIX:LOD?</code>
Notes	The query returns the doubler value of the first row of the harmonic table
Dependencies	Grayed-out and set to <b>OFF</b> when " <b>Table Type</b> " on page 2611 is set to Doubler Switching Grayout message: "-221 Settings conflict; Function unavailable while Table Type=Doubler Switching"
Couplings	When you set a value via SCPI, the Mixer Selection changes to <b>Custom</b>
Preset	Unaffected by <b>Mode Preset</b> , but <b>Restore Input/Output Defaults</b> turns off editing, the Harmonic Table returns to normal, and the Mixer is preset to 11970A, which has the doubler Off in the first row of its Harmonic Table
State Saved	Saved in instrument state

### 6.2.13.8 Refresh USB Mixer Connection

Re-reads the USB devices and refreshes connection to Keysight USB mixers. This operation is the same as physically removing and reinserting the mixer's USB connection.

Example	<code>:MIX:BAND USB</code>
Notes	When using Keysight USB Mixers, if <b>Restore All Defaults</b> ( <code>:SYSTem:DEFault</code> ) has been performed, either remove and reinsert the USB cable or press <b>Refresh USB Mixer Connection</b>

### 6.2.14 Mixer Path

Determines which path you wish to use when using M1971 series USB mixers:

- **NORMa1**, in which they function as a classic external mixer with a single conversion
- **DUAL** Conversion, in which the first conversion is to a higher IF frequency (nominally 1.5 GHz) and you provide a 10 MHz signal to which an internal PLL is locked, to effect a second downconversion. The higher IF frequency used in Dual Conversion increases the image frequency offset, giving you a wider image-free conversion range. This reduces aliasing effects and improves the image suppress functionality for wideband signals
- **AUX** Equipment, wherein the first mixer output drives an output connector on the mixer and the instrument is out of the circuit. When you connect an M1971 Mixer to USB, the instrument will pull the IF and RF flatness data from the USB mixer and write this data to a user-accessible file in CSV format for your use when Aux Equipment is selected

Remote Command	<code>[ :SENSe]:MIXer:MPATH NORMa1   DUAL   AUX</code> <code>[ :SENSe]:MIXer:MPATH?</code>
Example	<code>:MIX:MPAT NORM</code>
Dependencies	<p>Only appears when an M1971 series Mixer is connected to the USB port of the instrument</p> <p>When <b>AUX</b> Equipment is the selection, Sig Id is turned off to avoid shifting the LO. It is <i>not</i> turned back on when a different path is selected</p> <p>When <b>AUX</b> Equipment is the selection, there is no valid result, so the instrument displays a “No Result; Meas invalid with Aux Equip” error condition message (error 135)</p> <p><b>DUAL</b> Conversion is grayed-out unless in the Swept SA measurement. If grayed-out and the command is sent, generates error:”-221, Settings Conflict; Dual Conversion mixer path is only available in Swept SA”</p> <p>If in <b>DUAL</b> Conversion and you exit Swept SA, reverts to <b>NORMa1</b> setting. If you subsequently return to Swept SA, does <i>not</i> automatically return to <b>DUAL</b> Conversion</p> <p>When <b>DUAL</b> Conversion is selected, if no signal is sensed at the 10 MHz input port, an error condition is generated, “Ref missing or out of range; M1971” (error 521). This also lights the Error LED on the mixer itself</p>
Couplings	When <b>AUX</b> path is selected, the instrument switches to Zero Span
Preset	<b>NORMa1</b>
State Saved	Saved in instrument state

Annotation	In the Meas Bar, if an M1971 series Mixer is connected to the USB port of the instrument, the field Mixer Path appears and says: <ul style="list-style-type: none"> <li>- Normal for Normal</li> <li>- 2xConv for Dual Conversion</li> <li>- Aux for Aux Equipment</li> </ul>
------------	---

### 6.2.15 User IF Freq

Specifies the desired IF frequency when using the Aux Equipment path. This setting determines the LO frequency that the instrument will drive into the mixer to correspond to the specified center frequency. Note that the Aux Equipment path always uses “Negative Mixing”, that is, the LO frequency is always higher than the RF frequency.

Remote Command	<code>[ :SENSe]:MIXer:UIFFreq &lt;real&gt;</code> <code>[ :SENSe]:MIXer:UIFFreq?</code>
Example	<code>:MIX:UIFF 300 MHz</code>
Dependencies	Only appears if an M1971 mixer is connected to USB and the Mixer Path is Aux Equipment
Preset	1.2 GHz
State Saved	Saved in Input/Output state
Min	0 GHz
Max	4 GHz

### 6.2.16 Signal ID On/Off

Toggles the Signal ID (signal identification) function On or Off. This function lets you identify multiple responses of a single input signal that are generated when using un-preselected external mixers. The use of mixers without pre-selecting filters offers the advantage of improved receiver sensitivity because of the absence of the filter insertion loss, but results in multiple responses due to images and undesired harmonic mixing products.

While in **Signal ID**, basic spectrum analyzer functions work normally (for example, you can change Span normally), but some functions are disabled (for example, some traces are unavailable).

There are two forms of **Signal ID**, Image Suppress and Image Shift. Choose the one most appropriate for your application. For Image Shift, an LO-shifted and an unshifted trace are taken in Trace 1 and Trace 2 and displayed together. Any peaks that are not the same in both traces are images. For Image Suppress, image

6 Input/Output  
6.2 Input

cancellation is performed in the background using two hidden traces, and the result displayed in Trace 1, which shows only the valid signals.

When **Signal ID** is **ON**, this is indicated in the Meas Bar as Signal ID: On. The annotation is displayed in amber to alert you, because it can cause unexpected behavior if you are not aware that it is on.

Remote Command	<code>[ :SENSe]:SIDentify[:STATe] OFF   ON   0   1</code> <code>[ :SENSe]:SIDentify[:STATe]?</code>
Example	<code>:SID 0</code> <code>:SID?</code>
Notes	<b>Signal ID</b> uses data from two successive sweeps. Therefore, if the instrument is in single sweep mode, two sweep triggers are used to generate the data needed for signal identification For the Log Plot measurement in the Phase Noise Mode, <b>Signal ID</b> works only in the segment of LO sweeping where the offsets are greater than the Rejection Offset setting. When turning it on, you may notice a discontinuity in the Phase Noise trace at the Rejection Offset setting frequency by a few dB due to the under response inherent to <b>Signal ID</b>
Dependencies	Only appears when External Mixer is selected as the Input Not available in some measurements. If <b>Signal ID</b> does not appear or is grayed-out while in your measurement, then it is not available Because <b>Signal ID</b> uses data from two successive sweeps, several trace and sweep functions are grayed-out in <b>Signal ID</b> . See the documentation for your measurement for details on which trace functions are grayed-out Not available with Signal Track, in which case <b>Signal ID</b> is grayed-out Turned off when External Mixer is turned off. <b>Signal ID</b> cannot be turned on when using internal mixing Rules for auto coupling of the Sweep and FFT controls are changed with <b>Signal ID ON</b> . For both the dynamic range case and the speed case, swept is chosen whenever any form of <b>Signal ID</b> is on. If Manual FFT is selected, <b>Signal ID</b> is grayed-out If <b>Signal ID</b> is selected in a measurement that does not support it, a warning message is generated
Couplings	The Auto Rules for detector selection select Normal for all active traces when <b>Signal ID</b> is turned <b>ON</b>
Preset	Unaffected by Preset, but set to <b>OFF</b> by <b>Restore Input/Output Defaults</b>
Annunciation	When Signal ID is on this is indicated in the Meas Bar as Signal ID: On. The annotation is displayed in amber color to alert you to the fact that Signal ID is on, as it can cause unexpected behavior if you are not aware that it is on

### 6.2.17 Signal ID Mode

Determines the **Signal ID** mode to use, either Image Suppress or Image Shift.

#### Image Suppress

Mathematically removes all image and multiple responses of signals present at the mixer input. Two hidden sweeps are taken in succession. The second sweep is offset in LO frequency by  $2 * IF / N$ . For each point in each trace, the smaller amplitude

from the two traces is taken and placed in that point in the selected trace. The Peak detector is auto-selected to improve the image suppression effectiveness. Responses of each trace that lie on top of one another will remain and are valid signals, others are images and are suppressed. The action of taking the smaller of the two traces will make the average noise level lower in all points that do not have an image, thus reducing the accuracy of the measurement of noise and noise-like signals.

**NOTE**

When changing from Image Shift to Image Suppress mode, Trace 2 is blanked, as it was used for Image Shift and contains data that you will probably not want to see in Image Suppress

---

### Image Shift

Like the Image Suppress mode, Image Shift is a two-sweep sequence. The data from the first sweep is placed in Trace 1 and the data from the second (LO frequency shifted by  $2 * IF / N$ ) sweep is placed in Trace 2. On alternate sweeps, the alternate trace (trace 2) is placed in front of trace 1. This way, you can see a signal at the same place on alternate sweeps, showing in yellow (trace1) and blue (trace2). Signal responses of Trace 1 and Trace 2 that have the same horizontal position are considered to be in the current band and therefore can be analyzed with the amplitude and frequency measurement systems of the SA. All other responses are invalid and should be ignored.

**NOTE**

This function takes control of and uses Trace 1 and Trace 2. Any data in these traces prior to activating Image Shift will be lost.

---

Remote Command	<code>[ :SENSe]:SIDentify:MODE ISUPpress   IShift</code> <code>[ :SENSe]:SIDentify:MODE?</code>
Example	<code>:SID:MODE ISUP</code> <code>:SID:MODE ISH</code> <code>:SID:MODE?</code>
Dependencies	Only appears when External Mixer is selected as the Input
Preset	Unaffected by Preset, but set to <b>ISUPpress</b> by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

### 6.2.18 Cable IF Loss

The loss at the IF in the IF/LO cable can be compensated for with this function, by entering the loss in dB for your cable.

6 Input/Output  
6.2 Input

The cable loss will depend on the IF frequency. The IF frequency varies depending on which IF path your measurement is using. For best accuracy, characterize your cable's loss for the IF frequency or frequencies you will be using.

## IF Frequencies

10 MHz path	322.5 MHz
25 MHz path	322.5 MHz
40 MHz path	250 MHz
140 MHz path	300 MHz

Remote Command	<code>[ :SENSe]:MIXer:CIFLoss &lt;rel_amp1&gt;</code> <code>[ :SENSe]:MIXer:CIFLoss?</code>
Example	<code>:MIX:CIFL 0.23 DB</code> <code>:MIX:CIFL?</code>
Dependencies	Only appears when External Mixer is selected as the Input
Preset	0.26 dB
State Saved	Saved in instrument state
Min	-100
Max	100

### 6.2.19 I/Q Path

Selects which I/Q input channels are active. The LED next to each I/Q input port will be on when that port is active.

The analysis bandwidth for each channel is the same as that of the instrument. For example, the base N9020A has a bandwidth of 10 MHz. With I/Q input the I and Q channels would each have an analysis bandwidth of 10 MHz, giving 20 MHz of bandwidth when the I/Q Path is I+jQ. With option B25, the available bandwidth becomes 25 MHz, giving 25 MHz each to I and Q and 50 MHz to I+jQ.

I/Q voltage to power conversion processing is dependent on the I/Q Path selected:

- With I+jQ input, we know that the input signal may not be symmetrical about 0 Hz, because it has a complex component. Therefore, above 0 Hz only the positive frequency information is displayed, and below 0 Hz only the negative frequency information is displayed
- With all other Input Path selections, the input signal has no complex component and therefore is always symmetrical about 0 Hz. In this case, by convention, the power conversion shows the combined voltage for both the positive and negative frequencies. The information displayed below 0 Hz is the mirror of the

information displayed above 0 Hz. This results in a power reading 6.02 dB higher (for both) than would be seen with only the positive frequency voltage. Note also that, in this case the real signal may have complex modulation embedded in it, but that must be recovered by further signal processing

Remote Command	<code>[ :SENSe]:FEED:IQ:TYPE IQ   IONLy   QONLy</code> For option details, see <a href="#">More Information</a> <code>[ :SENSe]:FEED:IQ:TYPE?</code>
Example	Set the input to be both the I and Q channels, combined as $I + j * Q$ : <code>:FEED:IQ:TYPE IQ</code> Set the input to be only the I channel: <code>:FEED:IQ:TYPE IONL</code> Set the input to be only the Q channel: <code>:FEED:IQ:TYPE QONL</code> Turn on both I and Q channels and treat I as channel 1 and Q as channel 2: <code>:FEED:IQ:TYPE IND</code>
Dependencies	Only appears when I/Q is the selected input
Preset	<code>IQ</code>
State Saved	Yes Unaffected by Preset, but set to the default value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>  Backwards Compatibility SCPI
Notes	For R&S FSQ-B71 compatibility
Preset	<code>IQ</code>
Backwards Compatibility SCPI	<code>:INPut[1]:IQ:TYPE IQ   I   Q</code> <code>:INPut[1]:IQ:TYPE?</code>

## More Information

### I+jQ

Sets the signal input to be both the I and Q channels. The I and Q channel data will be combined as  $I + j * Q$ .

### I Only

Sets the signal input to be only the I channel. The Q channel will be ignored. The data collected is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant.

### Q Only

## 6 Input/Output

### 6.2 Input

Sets the signal input to be only the Q channel. The I channel will be ignored. The Q channel will be sent to the digital receiver block as  $Q+j0$ . The receiver's output is still complex. When the center frequency is 0 the imaginary part will always be zero, but for any other center frequency both the real and imaginary parts will be significant. Note that since the receiver's real output is displayed as the "I" data, when the center frequency is 0, the Q Only input appears as the "I" data.

#### 6.2.20 Reference Z

Sets the value of the impedance to be used in converting voltage to power for the I and Q channels. This does not change the hardware's path impedance (see ["Input Z" on page 2622](#)).

Remote Command	<code>:INPut:IMPedance:REference &lt;integer&gt;</code> <code>:INPut:IMPedance:REference?</code>
Example	Set the I/Q reference impedance to 50 $\Omega$ <code>:INP:IMP:REF 50</code>
Dependencies	Only appears when I/Q is the selected input
Preset	50 $\Omega$
State Saved	Yes Unaffected by a Preset, but set to the default value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Min/Max	1 $\Omega$ - 1 M $\Omega$

#### 6.2.21 I/Q Setup

Lets you set up and calibrate various parameters for the I/Q inputs.

Dependencies	Only appears when I/Q is the selected input
--------------	---

##### 6.2.21.1 I Setup

Accesses the channel setup parameters for the I channel.

#### Differential

Selects differential input on or off for the I channel. For differential input (also called balanced input), the instrument uses both main and complementary ports. When differential input is off (also called single-ended or unbalanced input), the instrument uses only the main port.

Remote Command	<code>:INPut:IQ[:I]:DIFFerential OFF   ON   0   1</code> <code>:INPut:IQ[:I]:DIFFerential?</code>
Example	Put the I channel in Differential mode: <code>:INP:IQ:DIFF ON</code>  Put the I channel in Single Ended mode: <code>:INP:IQ:DIFF OFF</code>
Notes	When I Differential Input = On, the instrument checks for attenuation mismatches between the I and I-bar ports. If the difference in attenuation values exceeds 0.5 dB, a Settings Alert error condition, error 159 is set  When I Differential Input = On, and IQ Path is I+jQ, the Q Differential input must also be On. Similarly, when I Differential Input = Off, and IQ Path is I+jQ, the Q Differential input must also be Off. If the states of the two inputs do not match, an error condition message is generated, 159, Settings Alert; I/Q mismatch: Differential
Couplings	Some active probes include built-in differential capability. When one of these probes is sensed, this key is disabled. Since the differential capability is handled in the probe, the Instrument will use only the main port and the key will show that the Instrument's Differential Input mode is Off (indicating that the complementary port is not in use)  When Q Same as I is On, the value set for I will also be copied to Q
Preset	<b>OFF</b> (Single Ended) Unaffected by Mode Preset, but set to the default value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Yes
Annotation	The LED on the I-bar port indicates the Differential Input setting  Backwards Compatibility Command
Notes	For R&S FSQ-B71 compatibility, with no independent settings for the I and Q channels. Therefore, it is tied only to the I channel and does not provide an equivalent for the Q channel. For proper operation of the backwards compatibility command, Q Same as I should be <b>ON</b>
Preset	<b>OFF</b>
Backwards Compatibility SCPI	<code>:INPut[1]:IQ:BALanced[:STATe] OFF   ON   0   1</code> <code>:INPut[1]:IQ:BALanced[:STATe]?</code>

## Input Z

Selects the input impedance for the I channel. The impedance applies to both the I and I-bar ports.

The input impedance controls the hardware signal path impedance match. It is not used for converting voltage to power. The voltage to power conversion always uses the Reference Z parameter. The Reference Z parameter applies to both I and Q channels.

## 6 Input/Output

### 6.2 Input

Remote Command	<code>:INPut[1]:IQ[:I]:IMPedance LOW   HIGH</code> <code>:INPut[1]:IQ[:I]:IMPedance?</code>
Example	Set the I channel input impedance to 1 M $\Omega$ : <code>:INP:IQ:IMP HIGH</code>  Set the I channel input impedance to 50 $\Omega$ : <code>:INP:IQ:IMP LOW</code>
Notes	<b>LOW</b> = 50 $\Omega$ , <b>HIGH</b> = 1 M $\Omega$  When IQ Path is I+jQ, the I Input Z setting must be the same as the Q Input Z setting. If the settings of the two inputs do not match, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Input Z
Couplings	Input impedance is a built-in characteristic of a probe. Therefore, whenever a probe is sensed, this key is disabled, and the value is set to match the probe  When no probe is sensed on Q and Q Same as I is On, the value set for I will also be copied to Q
Preset	<b>LOW</b>  Unaffected by Mode Preset, but set to the default value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Yes
Annotation	"I:<I Input Z>" (examples, "I:50 $\Omega$ " or "I:1M $\Omega$ ") in the Measurement Bar. The annotation shows both the I and Q Input Z values

## Skew

Sets the skew factor for the I channel. The skew will shift the channel's data in time. Use this to compensate for differences in the electrical lengths of the input paths due to cabling.

Remote Command	<code>[:SENSe]:CORRection:IQ[:I]:SKEW &lt;seconds&gt;</code> <code>[:SENSe]:CORRection:IQ[:I]:SKEW?</code>
Example	Delay the data for the I channel by 10 ns: <code>:CORR:IQ:SKEW 10 ns</code>
Preset	0
State Saved	Yes  Unaffected by Mode Preset, but set to the default value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Range	0 s to 100 ns
Min	0 s
Max	+100 ns

### Combined Differential/Input Z (Remote Command Only)

For backwards compatibility only. It combines the Differential Input and Input Z selections into a single command.

Notes	<p>Provided for E4406A code compatibility</p> <p>The enum values translate as follows:</p> <table border="1"> <tr> <td><b>U50</b></td> <td>Differential Input = Off, Input Z = 50 <math>\Omega</math></td> </tr> <tr> <td><b>B50</b></td> <td>Differential Input = On, Input Z = 50 <math>\Omega</math></td> </tr> <tr> <td><b>U1M</b></td> <td>Differential Input = Off, Input Z = 1 M<math>\Omega</math></td> </tr> <tr> <td><b>B1M</b></td> <td>Differential Input = On, Input Z = 1 M<math>\Omega</math></td> </tr> </table> <p>Combines the Input Z (50 <math>\Omega</math> or 1 M <math>\Omega</math>) parameter with the Differential Input (Off = "Unbalanced", On = "Balanced") parameter into a single enumeration</p> <p>This backwards-compatibility command was for an instrument without independent settings for the I and Q channels. Therefore, it is tied only to the I channel and does not provide an equivalent for the Q channel. For proper operation of the backwards-compatibility command, Q Same as I should be set to <b>ON</b></p> <p>Note also the subtle difference between this command and the backwards-compatibility command for Input Z. The Input Z SCPI has "<b>IQ</b>" before "<b>IMP</b>", while this command has that order reversed</p>	<b>U50</b>	Differential Input = Off, Input Z = 50 $\Omega$	<b>B50</b>	Differential Input = On, Input Z = 50 $\Omega$	<b>U1M</b>	Differential Input = Off, Input Z = 1 M $\Omega$	<b>B1M</b>	Differential Input = On, Input Z = 1 M $\Omega$
<b>U50</b>	Differential Input = Off, Input Z = 50 $\Omega$								
<b>B50</b>	Differential Input = On, Input Z = 50 $\Omega$								
<b>U1M</b>	Differential Input = Off, Input Z = 1 M $\Omega$								
<b>B1M</b>	Differential Input = On, Input Z = 1 M $\Omega$								
Couplings	Does not have an independent parameter, but instead is tied to the Differential Input and Input Z parameters. The coupling for those parameters apply to this command too								
Preset	<b>U50</b>								
Backwards Compatibility SCPI	<b>:INPut:IMPedance:IQ U50   B50   U1M   B1M</b> <b>:INPut:IMPedance:IQ?</b>								

#### 6.2.21.2 I Probe

Access the probe setup parameters for the I channel.

Dependencies	<p>Only appears when I/Q is the selected input</p> <p>The set of I/Q probe setup parameters will change based on the type of probe that is sensed. All probe types have the Attenuation parameter, and all probe types can be calibrated. The remaining parameters are only available for some probe types and will not be shown when not available. The probe type is determined by and reported for only for the I and Q ports, never the I-bar or Q-bar ports. The menu title will be "&lt;ch&gt;: &lt;probe id&gt;", where "&lt;ch&gt;" is either "I" or "Q" and "&lt;probe id&gt;" is the type of probe. For example, for the I Probe setup with an Keysight 1130A probe connected to the I port, the title will be "I: 1130A".</p>
--------------	--

6 Input/Output  
6.2 Input

Probe calibration data is stored for each probe type for each channel. When no probe is sensed, the probe type "Unknown" is used, and this is also treated like a probe type with its own calibration data. When a probe is changed, the calibration data for that probe type for that port is restored. An advisory message will be displayed showing the new probe type and the calibration status. The calibration data is stored permanently (survives a power cycle) and is not affected by a Preset or any of the Restore commands. When the probe has EEPROM identification (most newer Keysight probes have this), the calibration data is stored by probe serial number and port, so if you have two probes of the same type, the correct calibration data will be used for each. For probes that do not have EEPROM identification, the calibration data is stored by probe type and port and the instrument cannot distinguish between different probes of the same type. In all cases (with or without EEPROM identification), the calibration data is port specific, so it will not follow a specific probe from port to port if the probe is moved.

The "Unknown" probe type is used whenever no probe is sensed. When no calibration data exists for "Unknown" the latest cable calibration data is used.

## Attenuation

The attenuation is part of the calibration data stored with the probe type and is initially the value that was returned by the last calibration. You can modify this value and any changes will be stored with the calibration data and will survive power cycles and presets. When a probe calibration is performed the attenuation value will be overwritten by the calibration.

Remote Command	<code>[ :SENSe]:CORRection:IQ:I:ATTenuation:RATio &lt;real&gt;</code> <code>[ :SENSe]:CORRection:IQ:I:ATTenuation:RATio?</code>
Example	Set the attenuation for the current I probe to 100.00:1: <code>:CORR:IQ:I:ATT:RAT 100</code>
Notes	Each probe type has its own attenuation setting. As probes are changed the attenuation value will reflect the new probe's setting. Changing the attenuation affects only the current probe type's setting and leaves all others unchanged  When the IQ Path is I+jQ, the Q probe attenuation setting must match the I Probe attenuation setting within 1 dB. If this is not the case, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Attenuation
Preset	1
State Saved	Saved with probe calibration data. Survives a power cycle and is not affected by Preset or Restore
Min/Max	0.001/10000  This is an alternate form of the SCPI command that allows input as a power instead of a ratio.
Remote Command	<code>[ :SENSe]:CORRection:IQ:I:ATTenuation &lt;rel_amp1&gt;</code> <code>[ :SENSe]:CORRection:IQ:I:ATTenuation?</code>

Example	Set the attenuation for the current I probe type to 100.00:1: <code>:CORR:IQ:I:ATT 20 dB</code>
Min/Max	-60 dB /+80 dB

## Offset

Some active probes have DC offset capability. When one of these probes is connected, this control will be visible. The signal is adjusted for the DC offset before entering the instrument's port. This allows for removal of a DC offset before reaching the instrument's input port voltage limits. For example, a signal that varies 1 V peak-to-peak with a DC offset equal to the instrument's max input voltage would exceed the input limits of the instrument for half its cycle. Removing the DC offset allows the instrument to correctly process the entire signal.

Remote Command	<code>:INPut:OFFSet:I &lt;voltage&gt;</code> <code>:INPut:OFFSet:I?</code>
Example	Remove a DC offset of -0.5 V from the I channel input: <code>:INP:OFFS:I -0.5</code>
Notes	Only some probe types support <b>Offset</b> . For those that do, each probe type has its own <b>Offset</b> setting. As probes are changed, the <b>Offset</b> value will reflect the new probe's setting. Changing <b>Offset</b> affects only the current probe type's setting and leaves all others unchanged
Preset	0 V
State Saved	Saved with probe calibration data. Survives power cycle and is not affected by Preset or Restore
Min/Max	-18 V/+18 V

## Coupling

Some probe types allow coupling to reject low frequencies. This filters out the DC component of a signal that is composed of a DC bias plus some AC signal. This control is visible only for probe types that have this capability.

Remote Command	<code>:INPut:COUPling:I DC   LFR1   LFR2</code> <code>:INPut:COUPling:I?</code>
Example	Turn off low frequency rejection on the I channel, allowing signals down to DC: <code>:INP:COUP:I DC</code>  Turn on low frequency rejection on the I channel for frequencies lower than 1.7 Hz: <code>:INP:COUP:I LFR1</code>  Turn on low frequency rejection on the I channel for frequencies lower than 0.14 Hz: <code>:INP:COUP:I LFR2</code>
Notes	Only some probe types support <b>Coupling</b> . For those that do, each probe type has its own <b>Coupling</b> setting. As probes are changed, the <b>Coupling</b> value will reflect the new probe's setting. Changing

## 6 Input/Output

### 6.2 Input

---

	<b>Coupling</b> affects only the current probe type's setting and leaves all others unchanged
Preset	DC
State Saved	Saved with probe calibration data. Survives a power cycle and is not affected by a Preset or Restore
Range	DC   AC 1.7 Hz LFR1   AC 0.14 Hz LFR2

---

### Clear Calibration

Clears the calibration data for the current port and probe. It does not clear the data for other probe types or other ports. If the sensed probe has EEPROM identification, only the data for that specific probe is cleared. After this command has completed, the probe calibration state will be the same as if no probe calibration had ever been performed for the specified channel and probe. The probe attenuation will be the default value for that probe type and the Cable Calibration frequency response corrections will be used. This command is dependent on the Differential Input state. When Differential Input is on, both the data for the probe attached to the main port and the data for the probe attached to the complementary port are cleared. When Differential Input is off, only data for the probe attached to the main port is cleared.

---

Remote Command	<code>:CALibration:IQ:PROBe:I:CLEar</code>
Example	Clear the calibration data for the I channel and the current probe (with EEPROM identification) or probe type (without EEPROM identification): <code>:CAL:IQ:PROBe:I:CLE</code>

---

### 6.2.21.3 Calibrate

Invokes the guided probe calibration. The guided probe calibration is context sensitive and depends on the channel (I or Q) and the Differential Input state. The calibration is only performed on the selected channel. When the Differential control is switched to Differential, both the probe attached to the main port and the probe attached to the complementary port are calibrated. When the Differential control is switched to Single Ended, only the probe attached to the main port is calibrated.

Calibrating the Baseband I/Q ports requires several steps and manual connections. The Guided Calibration will interactively step you through the required steps, displaying diagrams to help with the connections. The steps will vary depending on the setup.

In the Guided Calibration windows, the date and time of the last calibration are displayed. If any of the items listed are displayed in yellow, this indicates that the calibration for that item is inconsistent with the latest calibration, and you should complete the entire calibration process before you exit the calibration. For passive probes with Differential On, any calibration that is more than a day older than the most recent calibration will be displayed with the color amber.

The I/Q probe calibration creates correction data for one of the front panel I/Q channels. When the probe has EEPROM identification, the data is unique to that specific probe. When the probe does not have EEPROM identification, the data will be used for all probes of the same type. The data is also unique to the channel, so calibration data for the I channel will not be used for the Q channel and vice versa.

The guided calibration (front panel only) will show connection diagrams and guide you through the I/Q Isolation Calibration and through calibrating each port. The calibration data for each port is stored separately, so as soon as a port is calibrated that data is saved and will be used. If a user presses "Exit" to exit the calibration process, the data for the port already completed will still be used. It is recommended that a calibration be completed once started, or if exited, that it be properly done before the next use of the probe. The "Next" button will perform the calibration for the current port and then proceed to the next step in the calibration procedure. The "Back" button will return to the prior port in the procedure. Both softkeys and dialog buttons are supplied for ease of use. The dialog buttons are for mouse use and the softkeys for front panel use.

The calibration can also be done via SCPI, but no connection diagrams will be shown. You will need to make the correct connections before issuing each port calibration command. Again, it is recommended that all ports be calibrated at the same time.

For Active probes or when Differential is Off, only the main port is calibrated, otherwise both the main and complementary ports are calibrated.

The instrument state remains as it was prior to entering the calibration procedure except while a port is actually being calibrated. Once a port is calibrated it returns to the prior state. A port calibration is in process only from the time the "Next" button is pressed until the next screen is shown. For SCPI, this corresponds to the time from issuing the CAL:IQ:PROB:I|B|Q|QB command until the operation is complete.

For example, if the prior instrument state is Cal Out = Off, Input = I+jQ, and Differential = Off, then up until the time the "Next" button is pressed the I Input and Q Input LEDs are on and the Cal Out, I-bar Input and Q-bar Input LEDs are off. Once the "Next" button is pressed for the I port calibration, only the Cal Out and I Input LEDs will be on, and the others will be off. When the screen progresses to the next step ("Next" button again enabled), the prior state is restored and only the I Input and Q Input LEDs are on (Cal Out is off again).

## I/Q Isolation Calibration

I/Q Isolation Calibration must be run before calibrating any port with either the I/Q Cable Calibration or I/Q Probe Calibration. This calibration is performed with nothing connected to any of the front panel I/Q ports. This is the first step in both the I/Q Cable Calibration and the I/Q Probe Calibration. This dialog appears if the Calibration is being run for the first time. It can also be accessed by pressing Back

## 6 Input/Output

### 6.2 Input

from the I Input Cal, the Q Input Cal, or the I/Q Cable Cal. Pressing Next from this dialog runs the calibration

Remote Command	<code>:CALibration:IQ:ISOLation</code>
Example	<code>:CAL:IQ:ISOL</code>
Notes	All front panel I/Q ports must be unconnected
State Saved	No

### I/Q Isolation Calibration Time (Remote Query Only)

Returns the last date and time that the I/Q Isolation Calibration was performed.

Remote Command	<code>:CALibration:IQ:ISOLation:TIME?</code>
Example	<code>:CAL:IQ:ISOL:TIME?</code>
Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0
Annunciation	Guided Calibration, Isolation Calibration, Last Calibration

### I Port

The I port calibration is performed with the probe body attached to the front panel's I port, and the probe tip connected via an adapter to the Cal Out port. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:PROBe:I</code>
Example	<code>:CAL:IQ:PROB:I</code>
Notes	The I port must be connected to the Cal Out port before issuing the command The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands
State Saved	No

### I Port Probe Calibration Time (Remote Query Only)

Return the last date and time that the I/Q Probe Calibration was performed for a specific port.

Remote Command	<code>:CALibration:IQ:PROBe:I :TIME?</code>
Example	<code>:CAL:IQ:PROB:I:TIME?</code>

---

Notes	This returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected
-------	---

## I-bar Port

The I-bar port calibration is performed with the probe body attached to the front panel's I-bar port and the probe tip connected via an adapter to the Cal Out port. The I-bar probe calibration is only available for passive probes with Differential On. The guided calibration will show a diagram of the required connections.

---

Remote Command	<code>:CALibration:IQ:PROBe:IBar</code>
----------------	---

---

Example	<code>:CAL:IQ:PROB:IB</code>
---------	------------------------------

---

Notes	The I-bar port must be connected to the Cal Out port before issuing the command The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands
-------	--

---

State Saved	No
-------------	----

## I-bar Port Probe Calibration Time (Remote Query Only)

Return the last date and time that the I/Q Probe Calibration was performed for a specific port.

---

Remote Command	<code>:CALibration:IQ:PROBe:IBAR:TIME?</code>
----------------	---

---

Example	<code>:CAL:IQ:PROB:IBAR:TIME?</code>
---------	--------------------------------------

---

Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected
-------	--

---

Annunciation	Guided Calibration, Probe Calibration, Last Calibration
--------------	---

### 6.2.21.4 Q Setup

Access the channel setup parameters for the Q channel.

---

Dependencies	Only appears when I/Q is the selected input
--------------	---

## Q Same as I

Many, but not all, usages require the I and Q channels have an identical setup. To simplify channel setup, the Q Same as I will cause the Q channel parameters to be

6 Input/Output  
6.2 Input

mirrored from the I channel. That way you only need to set up one channel (the I channel). The I channel values are copied to the Q channel, so at the time Q Same as I is turned off the I and Q channel setups will be identical. This does not apply to Probe settings or to parameters that are determined by the probe.

Remote Command	<code>:INPut:IQ:MIRROred OFF   ON   0   1</code> <code>:INPut:IQ:MIRROred?</code>
Example	Turn off the mirroring of parameters from I to Q: <code>:INP:IQ:MIRR OFF</code>
Couplings	Only displayed for the Q channel. When Yes, the I channel values for some parameters are mirrored (copied) to the Q channel. However, when a parameter is determined by the type of probe and a probe is sensed, the probe setting is always used and the I channel setting is ignored. The following parameters are mirrored: Differential Input (when not determined by probe) Input Z (when not determined by probe)
Preset	Unaffected by Preset, but set to the default value (Q Same as I set to <b>ON</b> ) by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>

## Differential

Selects differential input on or off for the Q channel. For differential input (also called balanced input), the instrument uses both the Q and Q-bar ports. When differential input is off (also called single-ended or unbalanced input), the instrument uses only the Q port.

Remote Command	<code>:INPut:IQ:Q:DIFFerential OFF   ON   0   1</code> <code>:INPut:IQ:Q:DIFFerential?</code>
Example	Put the Q channel in Differential mode: <code>:INP:IQ:Q:DIFF ON</code>  Put the Q channel in Single Ended mode: <code>:INP:IQ:Q:DIFF OFF</code>
Notes	When Differential Input = <b>ON</b> , the instrument checks for attenuation mismatches between the Q and Q-bar ports. If the difference in attenuation values exceeds 0.5 dB a Settings Alert error condition, error 159 will be set  When Q Differential Input = <b>ON</b> , and IQ Path is I+jQ, the I Differential input must also be <b>ON</b> . Similarly, when Q Differential Input = <b>OFF</b> , and IQ Path is I+jQ, the I Differential input must also be <b>OFF</b> . If the states of the two inputs do not match, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Differential
Couplings	Some active probes include built-in differential capability. When one of these probes is sensed, this key is disabled. Since the differential capability is handled in the probe, the Instrument will use only the main port and the key will show that the Instrument's Differential Input mode is Off (indicating that the

	complementary port not in use) When a differential probe is not sensed and Q Same as I is On, the value set for I will be copied to Q. This key is disabled when Q Same as I is On
Preset	<b>OFF</b>
State Saved	Yes Unaffected by a Preset, but set to the default value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Range	<b>OFF   ON</b>
Annotation	The LED on the Q-bar port indicates the Differential Input setting

## Input Z

Selects the input impedance for the Q channel. The impedance applies to both the Q and Q-bar ports.

The input impedance controls the hardware signal path impedance match. It is not used for converting voltage to power. The voltage to power conversion always uses the Reference Z parameter. The Reference Z parameter applies to both I and Q channels.

Remote Command	<b>:INPut[1]:IQ:Q:IMPedance LOW   HIGH</b> <b>:INPut[1]:IQ:Q:IMPedance?</b>
Example	Set the Q channel input impedance to 1 M $\Omega$ : <b>:INP:IQ:Q:IMP HIGH</b>  Set the Q channel input impedance to 50 $\Omega$ : <b>:INP:IQ:Q:IMP LOW</b>
Notes	<b>LOW = 50 <math>\Omega</math> , HIGH = 1 M<math>\Omega</math></b> When IQ Path is I+jQ, the I Input Z setting must be the same as the Q Input Z setting. If the settings of the two inputs do not match, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Input Z
Couplings	Input impedance is a built-in characteristic of a probe. Therefore, whenever a probe is sensed, this key is disabled, and the value is set to match the probe  When no probe is sensed and Q Same as I is On, the value set for I will also be copied to Q. This key is disabled when Q Same as I is On
Preset	<b>LOW</b>
State Saved	Yes Unaffected by a Preset, but set to the default value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Range	<b>50 <math>\Omega</math>   1 M<math>\Omega</math></b>
Annotation	"Q:<Q Input Z>" (examples, "Q:50 $\Omega$ " or "Q:1M $\Omega$ ") in the Measurement Bar. The annotation shows both the I and Q Input Z values

## Skew

Sets the skew factor for the Q channel. The skew will shift the channel's data in time. Use this to compensate for differences in the electrical lengths of the input paths due to cabling and probes.

Remote Command	<code>[ :SENSe]:CORRection:IQ:Q:SKEW &lt;seconds&gt;</code> <code>[ :SENSe]:CORRection:IQ:Q:SKEW?</code>
Example	Delay the data for the Q channel by 10 ns <code>:CORR:IQ:Q:SKEW 10 ns</code>
Preset	0
State Saved	Yes Unaffected by a Preset, but set to the default value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Min/Max	0 s/ 100 ns

### 6.2.21.5 Q Probe

Accesses the probe setup parameters for the Q channel. See "[Combined Differential/Input Z \(Remote Command Only\)](#)" on page 2624.

Dependencies	Only appears when I/Q is the selected input
--------------	---

## Attenuation

The attenuation is part of the calibration data stored with the probe type and is initially the value that was returned by the last calibration. You can modify this value and any changes will be stored with the calibration data and will survive power cycles and presets. When a probe calibration is performed the attenuation value will be overwritten by the calibration.

Remote Command	<code>[ :SENSe]:CORRection:IQ:Q:ATTenuation:RATio &lt;real&gt;</code> <code>[ :SENSe]:CORRection:IQ:Q:ATTenuation:RATio?</code>
Example	Set the attenuation for the current Q probe to 100.00:1: <code>:CORR:IQ:Q:ATT:RAT 100</code>
Notes	Each probe type has its own attenuation setting. As probes are changed the attenuation value will reflect the new probe's setting. Changing the attenuation affects only the current probe type's setting and leaves all others unchanged  When the IQ Path is I+jQ, the Q probe attenuation setting must match the I Probe attenuation setting within 1 dB. If this is not the case, an error condition message is generated, 159; Settings Alert; I/Q mismatch: Attenuation

Preset	Each probe type has its own default. The default for the "Unknown" probe type is 1:1
State Saved	Saved with probe calibration data. Survives a power cycle and is not affected by Preset or Restore
Min/Max	0.001/10000  This is an alternate form of the SCPI command that allows input as a power instead of a ratio.
Remote Command	<code>[ :SENSe]:CORRection:IQ:Q:ATTenuation &lt;rel_ampl&gt;</code> <code>[ :SENSe]:CORRection:IQ:Q:ATTenuation?</code>
Example	Set the attenuation for the current Q probe type to 100.00:1: <code>:CORR:IQ:Q:ATT 20 dB</code>
Min/Max	-60 dB /+80 dB

## Offset

Some active probes have DC offset capability. When one of these probes is connected this control will be visible. The signal is adjusted for the DC offset before entering the instrument's port. This allows for removal of a DC offset before reaching the instrument's input port voltage limits. For example, a signal that varies 1 V peak-to-peak with a DC offset equal to the instrument's max input voltage would exceed the input limits of the instrument for half its cycle. Removing the DC offset allows the instrument to correctly process the entire signal.

Remote Command	<code>:INPut:OFFSet:Q &lt;voltage&gt;</code> <code>:INPut:OFFSet:Q?</code>
Example	Remove a DC offset of -0.5 V from the Q channel input: <code>:INP:OFFS:Q -0.5</code>
Notes	Only some probe types support <b>Offset</b> . For those that do, each probe type has its own <b>Offset</b> setting. As probes are changed, the <b>Offset</b> value will reflect the new probe's setting. Changing <b>Offset</b> affects only the current probe type's setting and leaves all others unchanged
Preset	0 V
State Saved	Saved with probe calibration data. Survives power cycle and is not affected by Preset or Restore
Min/Max	-18 V/+18 V

## Coupling

Some probe types allow coupling to reject low frequencies. This filters out the DC component of a signal that is composed of a DC bias plus some AC signal. This control is visible only for probe types that have this capability.

Remote Command	<code>:INPut:COUPling:Q DC   LFR1   LFR2</code> <code>:INPut:COUPling:Q?</code>
----------------	--

## 6 Input/Output

### 6.2 Input

Example	<p>Turn off low frequency rejection on the Q channel, allowing signals down to DC:  <code>:INP:COUP:Q DC</code></p> <p>Turn on low frequency rejection on the Q channel for frequencies lower than 1.7 Hz:  <code>:INP:COUP:Q LFR1</code></p> <p>Turn on low frequency rejection on the Q channel for frequencies lower than 0.14 Hz:  <code>:INP:COUP:Q LFR2</code></p>
Notes	Only some probe types support <b>Coupling</b> . For those that do, each probe type has its own <b>Coupling</b> setting. As probes are changed, the <b>Coupling</b> value will reflect the new probe's setting. Changing <b>Coupling</b> affects only the current probe type's setting and leaves all others unchanged
Preset	DC
State Saved	Saved with probe calibration data. Survives a power cycle and is not affected by a Preset or Restore
Range	DC   AC 1.7 Hz LFR1   AC 0.14 Hz LFR2

### Clear Calibration

Clears the calibration data for the current port and probe. It does not clear the data for other probe types or other ports. If the sensed probe has EEPROM identification, only the data for that specific probe is cleared. After this command has completed, the probe calibration state will be the same as if no probe calibration had ever been performed for the specified channel and probe. The probe attenuation will be the default value for that probe type and the Cable Calibration frequency response corrections will be used. This command is dependent on the Differential Input state. When Differential Input is on, both the data for the probe attached to the main port and the data for the probe attached to the complementary port are cleared. When Differential Input is off, only data for the probe attached to the main port is cleared.

Remote Command	<code>:CALibration:IQ:PROBe:Q:CLEar</code>
Example	<p>Clear the calibration data for the Q channel and the current probe (with EEPROM identification) or probe type (without EEPROM identification):  <code>:CAL:IQ:PROBe:I:CLE</code></p>

### 6.2.21.6 Calibrate

Invokes the guided probe calibration. The guided probe calibration is context sensitive and depends on the channel (I or Q) and the Differential Input state. The calibration is only performed on the selected channel. When the Differential control is switched to Differential, both the probe attached to the main port and the probe attached to the complementary port are calibrated. When the Differential control is switched to Single Ended, only the probe attached to the main port is calibrated.

The I/Q Isolation Calibration must be run before calibrating any port with either the I/Q Cable Calibration or I/Q Probe Calibration. See "[I/Q Isolation Calibration](#)" on [page 2628](#)

## Q Port

The Q port calibration is performed with the probe body attached to the front panel's Q port and the probe tip connected via an adapter to the Cal Out port. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:PROBe:Q</code>
Example	<code>:CAL:IQ:PROB:Q</code>
Notes	The Q port must be connected to the Cal Out port before issuing the command The calibration data is saved as soon as the port is calibrated and survives power cycles. It is not reset by any preset or restore data commands
State Saved	No

## Q Port Probe Calibration Time (Remote Query Only)

Return the last date and time that the I/Q Probe Calibration was performed for a specific port.

Remote Command	<code>:CALibration:IQ:PROBe:Q:TIME?</code>
Example	<code>:CAL:IQ:PROB:Q:TIME?</code>
Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected
Annunciation	Guided Calibration, Probe Calibration, Last Calibration

## Q-bar Port

The Q-bar port calibration is performed with the probe body attached to the front panel's Q-bar port and the probe tip connected via an adapter to the Cal Out port. The Q-bar probe calibration is only available for passive probes with Differential On. The guided calibration will show a diagram of the required connections.

Remote Command	<code>:CALibration:IQ:PROBe:QBar</code>
Example	<code>:CAL:IQ:PROB:QB</code>
Notes	The Q-bar port must be connected to the Cal Out port before issuing the command

## 6 Input/Output

### 6.2 Input

---

The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands

---

State Saved      No

#### Q-bar Probe Calibration Time (Remote Query Only)

Return the last date and time that the I/Q Probe Calibration was performed for a specific port.

---

Remote Command      `:CALibration:IQ:PROBe:QBAR:TIME?`

---

Example      `:CAL:IQ:PROB:QBAR:TIME?`

---

Notes      Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0. The value is specific to both the port and probe, so the value will change as probes are connected or disconnected

---

Annunciation      Guided Calibration, Probe Calibration, Last Calibration

#### 6.2.22 I/Q Cable Calibrate

The I/Q cable calibration creates correction data for each of the front panel I/Q ports. This calibration data is used whenever no probe specific calibration data is available. It is important that all ports are calibrated using the same short BNC cable so that the data is comparable from port to port.

The guided calibration (front panel only) will show connection diagrams and guide you through the isolation calibration and calibrating each port. The calibration data for each port is stored separately, so as soon as a port is calibrated that data is saved and will be used. If you press "Exit" to exit the calibration process, the data for the ports already completed will still be used. It is recommended that a calibration be completed once started, or if exited, that it be properly done before the next use of the I/Q ports. The "Next" button will perform the calibration for the current port and then proceed to the next step in the calibration procedure. The "Back" button will return to the prior port in the procedure. Both keys and dialog buttons are supplied for ease of use. The dialog buttons are for mouse use and the softkeys for front panel use.

The calibration can also be done via SCPI, but no connection diagrams will be shown. You will have to make the correct connections before issuing each port calibration command. Again, it is recommended that all ports be calibrated at the same time.

The instrument state remains as it was prior to entering the calibration procedure except while a port is actually being calibrated. Once a port is calibrated it returns to the prior state. A port calibration is in process only from the time the "Next" button is

pressed until the next screen is shown. For SCPI, this corresponds to the time from issuing the CAL:IQ:FLAT:I|B|Q|QB command until the operation is complete.

For example, if the prior instrument state is Cal Out = Off, Input = I+jQ, and Differential = Off, then up until the time the "Next" button is pressed the I Input and Q Input LEDs are on and the Cal Out, I-bar Input and Q-bar Input LEDs are off. Once the "Next" button is pressed for the I port calibration, only the Cal Out and I Input LEDs will be on and the others will be off. When the screen progresses to the next step ("Next" button again enabled), the prior state is restored and only the I Input and Q Input LEDs are on (Cal Out is off again).

The last calibration date and time for each port will be displayed. Any calibrations that are more than a day older than the most recent calibration will be displayed with the color amber.

The I/Q Isolation Calibration must be run before calibrating any port with either the I/Q Cable Calibration or I/Q Probe Calibration. See "[I/Q Isolation Calibration](#)" on [page 2628](#)

---

Dependencies	Only appears when I/Q is the selected input
--------------	---

### 6.2.22.1 I Port

The I port calibration is performed with the front panel's I port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

---

Remote Command	:CALibration:IQ:FLATness:I
----------------	----------------------------

---

Example	:CAL:IQ:FLAT:I
---------	----------------

---

Notes	<p>The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure</p> <p>The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands</p> <p>The I port must be connected to the Cal Out port before issuing the command</p>
-------	--

---

State Saved	No
-------------	----

### 6.2.22.2 I-bar Port

The I-bar port calibration is performed with the front panel's I-bar port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

---

Remote Command	:CALibration:IQ:FLATness:IBAR
----------------	-------------------------------

## 6 Input/Output

### 6.2 Input

---

Example	<code>:CAL:IQ:FLAT:IBAR</code>
Notes	<p>The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure</p> <p>The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands</p> <p>The I-bar port must be connected to the Cal Out port before issuing the command</p>
State Saved	No

---

#### 6.2.22.3 Q Port

The Q port calibration is performed with the front panel's Q port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

---

Remote Command	<code>:CALibration:IQ:FLATness:Q</code>
Example	<code>:CAL:IQ:FLAT:Q</code>
Notes	<p>The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure</p> <p>The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands</p> <p>The Q port must be connected to the Cal Out port before issuing the command</p>
State Saved	No

---

#### 6.2.22.4 Q-bar Port

The Q-bar port calibration is performed with the front panel's Q-bar port connected via a short BNC cable to the Cal Out port. The guided calibration will show a diagram of the required connections.

---

Remote Command	<code>:CALibration:IQ:FLATness:QBAR</code>
Example	<code>:CAL:IQ:FLAT:QBAR</code>
Notes	<p>The recommended procedure is to use the same BNC cable to calibrate all I/Q ports. All I/Q ports should be calibrated sequentially during the procedure</p> <p>The calibration data is saved as soon as the port is calibrated and will survive power cycles. It is not reset by any preset or restore data commands</p> <p>The Q-bar port must be connected to the Cal Out port before issuing the command</p>
State Saved	No

---

### 6.2.22.5 I/Q Cable Calibration Time (Remote Query Only)

Returns the last date and time that the I/Q Cable Calibration was performed for a specific port.

Remote Command	<code>:CALibration:IQ:FLATness:I IBAR Q QBAR:TIME?</code>
Example	<code>:CAL:IQ:FLAT:I:TIME?</code>
Notes	Returns 6 integer values: year, month, day, hour, minute, second. When no calibration has been performed, all values are 0
Annunciation	Guided Calibration, Cable Calibration, Last Calibration

### 6.2.23 Audio Input Channel

Determines which Audio Input to be used for audio measurements.

Remote Command	<code>[ :SENSe]:FEED:AFINput:PORT CH1   CH2</code> <code>[ :SENSe]:FEED:AFINput:PORT?</code>
Example	<code>:FEED:AFIN CH1</code>
Dependencies	Only appears in Radio Test Mode Only appears in modular products, and only if an M9260A Audio Analyzer module is installed
Preset	Unaffected by Mode Preset, but set to Channel 1 by <b>Input/Output Preset</b>

### 6.2.24 Audio Calibrator

Lets you turn on the internal calibrator in the X-Series Audio board.

Remote Command	<code>[ :SENSe]:FEED:AFALign OFF   REF10</code> <code>[ :SENSe]:FEED:AFALign?</code>
Example	<code>:FEED:AFAL REF10</code>
Dependencies	Only appears in Measuring Receiver Mode's Audio Measurements when Option 107 is present
Preset	<code>OFF</code>

### 6.2.25 Audio Coupling

Lets you set AC or DC coupling for the currently selected audio input.

Remote Command	<code>[ :SENSe]:AFINput[1] 2:COUPling AC   DC</code> <code>[ :SENSe]:AFINput[1] 2:COUPling?</code>
----------------	---

## 6 Input/Output

### 6.2 Input

Example	<code>:AFIN:COUP AC</code>
Dependencies	Only appears in Measuring Receiver Mode and Radio Test Mode In Measuring Receiver Mode, only appear in Audio Measurements, and only if Option 107 is present In Radio Test Mode, only appears in modular products, and only if an M9260A Audio Analyzer module is installed
Preset	<code>AC</code>

#### 6.2.26 Audio Input Ground

Lets you float or ground the low side of the currently selected audio input channel. When you choose `FLOat`, the low side of the input is disconnected from ground.

Remote Command	<code>[ :SENSe]:AFINput[1] 2:LOW FLOat   GROund</code> <code>[ :SENSe]:AFINput[1] 2:LOW?</code>
Example	<code>:AFIN2:LOW FLO</code>
Dependencies	Only appears in Radio Test Mode Only appears in modular products, and only if an M9260A Audio Analyzer module is installed
Preset	Unaffected by Mode Preset, but set to <code>GROund</code> by <b>Input/Output Preset</b>

#### 6.2.27 Audio In Impedance

Lets you set the Impedance of the currently selected audio input channel. The value you enter is rounded up to the nearest allowed value.

Remote Command	<code>[ :SENSe]:AFINput[1] 2:IMPedance 50   600   1000000</code> <code>[ :SENSe]:AFINput[1] 2:IMPedance?</code>
Example	<code>:AFIN:IMP 50</code>
Dependencies	Only appears in Radio Test Mode Only appears in modular products, and only if an M9260A Audio Analyzer module is installed
Preset	Unaffected by Mode Preset, but set to 600 by <b>Input/Output Preset</b>

#### 6.2.28 Input/Output Preset

Resets the group of settings and data associated with the **Input/Output** front-panel key to their default values. These settings are not affected by **Mode Preset** because they are generally associated with connections to the instrument, which you generally would not want to reset every time you press **Mode Preset**.

This is the same as the control in the **Preset** dropdown, and also the same as **Input/Output** button in the **Restore Defaults** menu under **System**.

All the variables set under the **Input/Output** front panel key are reset by **Input/Output Preset**, including Amplitude Corrections and Data (described in the **Corrections** section), with the exception of RF Source settings, which are unaffected.

By using **Input/Output Preset** and **Restore Mode Defaults**, a full preset of the current mode will be performed, with the caveat that since **Input/Output Preset** is a global function it will affect *all* Modes.

When **Input/Output Preset** is selected, a message appears saying:

“This will reset all of the Input/Output variables to their default state, including which input is selected, all Amplitude Correction settings and data, all External Mixing settings, all Frequency Reference settings and all Output settings.

It will not affect Alignment data or settings.

It will not affect RF Source settings.

This action cannot be undone. Do you want to proceed?”

Use the **OK** or **Cancel** buttons to affirm or cancel the operation.

---

Example

**:SYST:DEF INP**

presets all Input/Output variables to their factory default values

## 6.3 External Gain

Contains controls that allow you to compensate for gain or loss in the measurement system outside the instrument. The External Gain is subtracted from the amplitude readout (or the loss is added to the amplitude readout). So, the displayed signal level represents the signal level at the output of the device-under-test, which can be the input of an external device that provides gain or loss.

Entering an External Gain value does not affect the Reference Level, therefore the trace position on screen changes, as do all of the values represented by the trace data. Thus, the values of exported trace data, queried trace data, marker amplitudes, trace data used in calculations such as N dB points, trace math, peak threshold, etc., are all affected by External Gain. Changing the External Gain, even on a trace that is not updating, immediately changes all of the above, without new data needing to be taken.

### NOTE

**Changing the External Gain causes the instrument to immediately stop the current sweep and prepare to begin a new sweep. The data will not change until the trace data updates because the offset is applied to the data as it is taken. If a trace is exported with a nonzero External Gain, the exported data will contain the trace data with the offset applied.**

---

In Spectrum Analyzer Mode, a Preamp is the common external device providing gain or loss. In a measurement application mode like GSM or W-CDMA, the gain or loss could be from a BTS (Base Transceiver Station) or an MS (Mobile Station). So, in the Spectrum Analyzer mode MS and BTS would be grayed out and the only choice would be Ext Preamp. Similarly, in some of the digital communications applications, Ext Preamp will be grayed out and you would have a choice of MS or BTS.

The Ext Preamp, MS, and BS controls may be grayed-out depending on which measurement is currently selected. If any of the grayed-out controls are pressed, or the equivalent SCPI command is sent, an advisory message is generated.

### 6.3.1 External Preamp

This function is similar to the reference level offset function. Both affect the displayed signal level. Ref Lvl Offset is a mathematical offset only, no instrument configuration is affected. Ext Preamp gain is used when determining the auto-coupled value of the Attenuator. The External Gain value and the Maximum Mixer Level settings are both part of the automatic setting equation for the RF attenuation setting. (10 dB of Attenuation is added for every 10 dB of External Gain.)

Note that the Ref Lvl Offset and Maximum Mixer Level are described in the Amplitude section. They are reset by Mode Preset. The External Preamp Gain is reset by the "Restore Input/Output Defaults" or "Restore System Defaults->All" functions.

The Swept SA Measurement in SA Mode only supports the "Ext Preamp" function under External Gain. The other External Gain functions are grayed-out, and generate a settings conflict, if the SCPI for them is sent.

See ["More Information" on page 2644](#)

Remote Command	<code>[ :SENSe]:CORRection:SA[:RF]:GAIN &lt;rel_amp1&gt;</code> <code>[ :SENSe]:CORRection:SA[:RF]:GAIN?</code>
Example	Set the Ext Gain value to 10 dB: <code>:CORR:SA:GAIN 10</code>  Set the Ext Gain value to -10 dB (that is, an attenuation of 10 dB): <code>:CORR:SA:GAIN -10</code>
Notes	Does not auto return This command is new in X-Series
Dependencies	The reference level limits are determined in part by the External Gain/Atten, Max Mixer Level, and RF Atten Grayed-out in Modes that do not support External Gain
Preset	Unaffected by Preset, but set to 0 dB by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b> 0.00 dB, Gain
State Saved	Saved in instrument state
Min	-120 dB
Max	120 dB
Annotation	Displayed in the Meas Bar as "Ext Gain <value>". When the gain is zero, no annotation is shown
Backwards Compatibility SCPI	<code>[ :SENSe]:CORRection:OFFSet[:MAGNitude]</code> The legacy <b>Ext Preamp Gain</b> key is now called <b>Ext Gain</b> and the sub-menu has choices of Ext Preamp   MS   BTS for backwards compatibility The MS and BTS choices are unavailable in Swept SA and the Ext Preamp is unavailable in the cell comms measurements

## More Information

The U7227A USB Preamplifier is an accessory for the X-Series Signal Analyzer that provides gain externally, and whose gain settings are automatically loaded into the instrument over USB whenever it is connected to one of the instrument's USB ports.

While the USB Preamplifier is plugged into one of the instrument's USB ports, the instrument will consider it to be in the signal path of the RF Input and will apply the

## 6 Input/Output

### 6.3 External Gain

calibration data from the USB Preamp to measurements taken at the RF Input (on 2 input boxes, it will be considered to be in the signal path of RF Input 1; it is not supported for RF Input 2).

The USB Preamplifier contains its own cal data. This includes a noise trace suitable for use with NFE, for those models which support NFE. The act of connecting the Preamp to USB will cause the cal data to be downloaded from the preamp. When this happens, an informational message is provided saying "Cal data loaded from USB Preamp". The instrument will then automatically apply the calibration factors loaded from the Preamp in any measurement that supports the USB Preamp.

The External Preamp Gain setting may still be used, even though it is not required for the USB Preamp (since the USB Preamp supplies its own gain data to the instrument which is applied automatically). Connecting the USB Preamp does not change the External Preamp Gain setting, however unless you have another gain or attenuation element in the signal path, the appropriate setting for External Preamp Gain is 0 dB.

Overload detection and reporting will apply when the USB preamplifier is connected to USB. The USB Preamplifier has its own overload detector which reports overloads to the instrument over USB. This generates an error condition, "Input Overload; USB Preamp."

If, while the USB Preamp is connected to USB, a measurement is selected that does not support the USB preamplifier, the "No result; Meas invalid with Preamp" error condition is generated.

#### 6.3.2 External Gain - MS

Sets an external gain/attenuation value for MS (Mobile Station) tests.

Remote Command	<code>[ :SENSe]:CORRection:MS[:RF]:GAIN &lt;rel_amp1&gt;</code> <code>[ :SENSe]:CORRection:MS[:RF]:GAIN?</code>
Example	Set the Ext Gain value to 10 dB: <code>:CORR:MS:GAIN 10</code>  Set the Ext Gain value to -10 dB (that is, a loss of 10 dB): <code>:CORR:MS:GAIN -10</code>
Notes	Does not auto return
Dependencies	The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten Grayed-out in modes that do not support MS
Preset	Unaffected by Preset, but set to 0 dB by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b> 0.00 dB, Gain
State Saved	Saved in instrument state

Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	
Example	Set the Ext Gain value to -10 dB, and subsequently querying :LOSS will give 10 dB: <code>:CORR:MS:LOSS 10</code> Set the Ext Gain value to 10 dB. Subsequently querying :LOSS will return -10 dB: <code>:CORR:MS:LOSS -10</code>
Notes	A positive value of <code>&lt;rel_amp1&gt;</code> in the above command means a loss and a negative value indicates a gain If <code>:LOSS</code> is set, <code>:GAIN</code> is set to the negative value of the parameter sent If <code>:LOSS</code> is queried, it returns the negative of <code>:GAIN</code>
Preset	Unaffected by Preset, but set to 0 dB by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Min/Max	-/+100 dB
Backwards Compatibility SCPI	<code>[ :SENSe]:CORRection:MS[:RF]:LOSS &lt;rel_amp1&gt;</code> <code>[ :SENSe]:CORRection:MS[:RF]:LOSS?</code>

### 6.3.3 External Gain - BTS

Sets an external attenuation value for BTS (Base Transceiver Station) tests.

Remote Command	<code>[ :SENSe]:CORRection:BTS[:RF]:GAIN &lt;rel_amp1&gt;</code> <code>[ :SENSe]:CORRection:BTS[:RF]:GAIN?</code>
Example	Set the Ext Gain value to 10 dB: <code>:CORR:BTS:GAIN 10</code> Set the Ext Gain value to -10 dB (that is, a loss of 10 dB): <code>:CORR:BTS:GAIN -10</code>
Notes	Does not auto return
Dependencies	The reference level limits are determined in part by the External Gain, Max Mixer Level, RF Atten Grayed-out in modes that do not support BTS
Preset	Unaffected by Preset, but set to 0 dB by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b> 0.00 dB, Gain
State Saved	Saved in instrument state
Min	-100 dB
Max	100 dB
Backwards Compatibility SCPI	

## 6 Input/Output

### 6.3 External Gain

Example	<p>Set the Ext Gain value to -10 dB, and subsequently querying :LOSS will give 10 dB:  <b>:CORR:BTS:LOSS 10</b></p> <p>Set the Ext Gain value to 10 dB. Subsequently querying :LOSS will return -10 dB:  <b>:CORR:BTS:LOSS -10</b></p>
Notes	<p>A positive value of &lt;rel_amp1&gt; in the above command means a loss and a negative value indicates a gain</p> <p>If :LOSS is set, :GAIN is set to the negative value of the parameter sent</p> <p>If :LOSS is queried, it returns the negative of :GAIN</p>
Preset	Unaffected by Preset, but set to 0 dB by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Min/Max	-/+100 dB
Backwards Compatibility SCPI	<p><b>[ :SENSe]:CORRection:BTS[:RF]:LOSS &lt;rel_amp1&gt;</b></p> <p><b>[ :SENSe]:CORRection:BTS[:RF]:LOSS?</b></p>

#### 6.3.4 I Ext Gain

Affects the I channel input. However, when Q Gain in I+jQ is set to Same as I Gain, this value is applied to both I and Q channel inputs.

Remote Command	<p><b>[ :SENSe]:CORRection:IQ:I:GAIN &lt;rel_amp1&gt;</b></p> <p><b>[ :SENSe]:CORRection:IQ:I:GAIN?</b></p>
Example	<p>Set the I Ext Gain to 10 dB:  <b>:CORR:IQ:I:GAIN 10</b></p> <p>Set the I Ext Gain to -10 dB (that is, a loss of 10 dB):  <b>:CORR:IQ:I:GAIN -10</b></p>
Dependencies	<p>Not available unless option BBA is installed</p> <p>Grayed-out when I/Q Path is Q Only</p>
Preset	<p>0 dB</p> <p>Unaffected by Preset, but set to 0 dB by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b></p>
State Saved	Yes
Min/Max	-/+100 dB
Annotation	<p>Ext Gain: &lt;I Ext Gain&gt; dB</p> <p>No annotation is shown when Input is not I/Q. Also not shown when I Ext Gain is 0.00 dB. I Ext Gain is not shown for Input Path Q Only. When the Input Path is Independent I and Q and I Ext Gain is not the same as Q Ext Gain, both are shown. "Ext Gain: &lt;I Ext Gain&gt; dB, &lt;Q Ext Gain&gt; dB"</p>

### 6.3.5 Q Ext Gain

Affects the Q channel input.

Remote Command	<code>[ :SENSe]:CORRection:IQ:Q:GAIN &lt;rel_amp1&gt;</code> <code>[ :SENSe]:CORRection:IQ:Q:GAIN?</code>
Example	Set the Q Ext Gain to 10 dB: <code>:CORR:IQ:Q:GAIN 10</code>  Set the Q Ext Gain to -10 dB (that is, a loss of 10 dB): <code>:CORR:IQ:Q:GAIN -10</code>
Dependencies	Not available unless option BBA is installed Grayed-out when Q gain in I+jQ is set to Same as I Gain
Preset	0 dB Unaffected by Preset, but set to 0 dB by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in instrument state
Min/Max	-/+100 dB
Annotation	Ext Gain: <Q Ext Gain> dB No annotation is shown when Input is not I/Q. Also not shown when Q Ext Gain is 0.00 dB. Q Ext Gain is not shown for Input Path I Only or I+jQ. When Input Path is Independent I and Q and when I and Q Ext Gain are both non-zero but are the same the annotation will be "Ext Gain: <Ext Gain> dB" and when I Ext Gain is not the same as Q Ext Gain, both are shown. "Ext Gain: <I Ext Gain> dB, <Q Ext Gain> dB"

### 6.3.6 Q Gain in I+jQ

When Same as I Gain (**ON**) is selected, I Ext Gain value is applied to both I and Q channel input if the Input Path is I+jQ.

When Independent (**OFF**) is selected, I and Q Ext Gain values are applied to I and Q channel input independently.

Remote Command	<code>[ :SENSe]:CORRection:IQ:Q:GAIN:COUPle ON   OFF   0   1</code> <code>[ :SENSe]:CORRection:IQ:Q:GAIN:COUPle?</code>
Example	<code>:CORR:IQ:Q:GAIN:COUP ON</code> <code>:CORR:IQ:Q:GAIN:COUP?</code>
Preset	<b>ON</b>
State Saved	Yes
Range	Same as I Gain   Independent

## 6.4 Data Source

Contains controls that let you select the source of the data being fed to the instrument analysis engine.

The ability to Save and Record files of I/Q data is an important feature of some X-Series applications, and the Data Source controls allow you to switch back and forth from actual data at the instrument input and recorded data from a File.

In addition, some measurements allow you to retain a single measurement record in a Capture Buffer, and some measurements allow you to retain a specified length data record internally in a Recorded data area.

So, for measurements that support it, the controls on this tab allow you to select data from the instrument inputs, a recalled recording File, the Capture Buffer, or the Recorded data area. For measurements that do not support these features, the **Data Source** tab does not appear, and if `:FEED:DATA SCPI` is sent, an Undefined Header error is generated.

The available choices depend on which measurement you are running. All measurements support Input; Capture Buffer and File are only available in certain measurements, as shown in the table below. The choice of the internal Recorded data area is only available in Pulse Mode.


Measurement	Capture Buffer	File
WCDMA Code Domain	x	
WCDMA Mod Accuracy	x	
VMA Digital Demod		x
VMA Custom OFDM		x
5G NR Modulation Analysis		x
FDD LTE-A Modulation Analysis		x
TDD LTE-A Modulation Analysis		x
WLAN Modulation Analysis	x	x
WLAN Spectral Flatness		x
WLAN MIMO Modulation Analysis		x
Analog Demod AM		x
Analog Demod PM		x
Analog Demod FM		x
Analog Demod FM Stereo		x
Bluetooth Transmit Analysis	x	x
IoT & SRComms LoRa CSS Demod		x

## How to Record and Playback I/Q Data

In several Demod measurements (and certain other measurements), it is possible to record I/Q data to files on your hard drive or network, and then recall these files for subsequent playback. These are the measurements shown in the table above with an “x” in the **File** column.

The Recording and Playback of signal data files is a multi-step process which involves controls in several menus (listed below).

### Menus involved in Record/Playback:

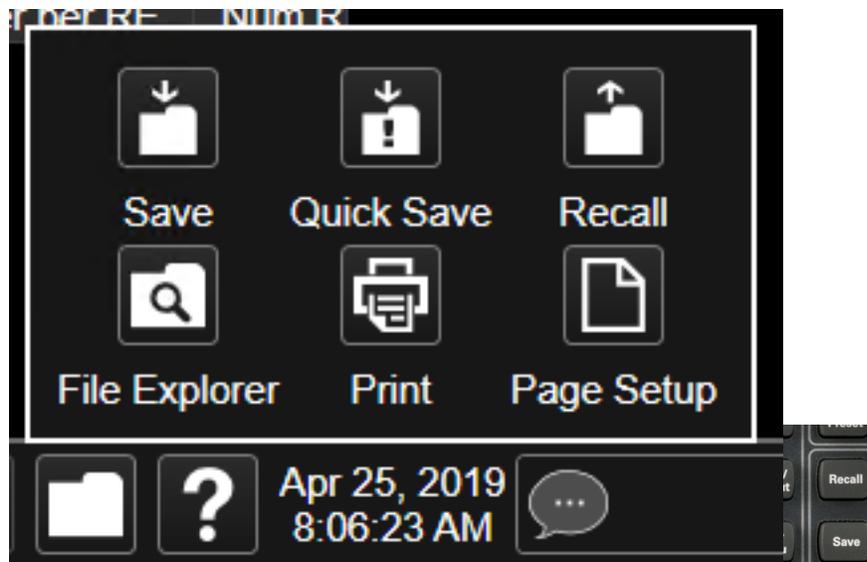

- Save, Recording (under the **Save** hardkey or the **Save** icon in the **File** panel)
- Recall, Recording (under the **Recall** hardkey or the **Recall** icon in the **File** panel)
- Sweep, Recording tab
- Sweep, Playback tab
- Input/Output, Data Source tab (this tab)


### Saving a Recording

When you save a recording, a certain number of measurement records are saved to a Recording file. The amount of data that is saved varies depending on the measurement and measurement settings. The following example uses VMA Digital Demod to illustrate the process.


## 6 Input/Output

### 6.4 Data Source


If you press the **Recording** tab in the **Sweep** menu, you will see a certain number of parameters displayed on the menu panel. Before you save a Recording, these parameters are all 0, as shown below:

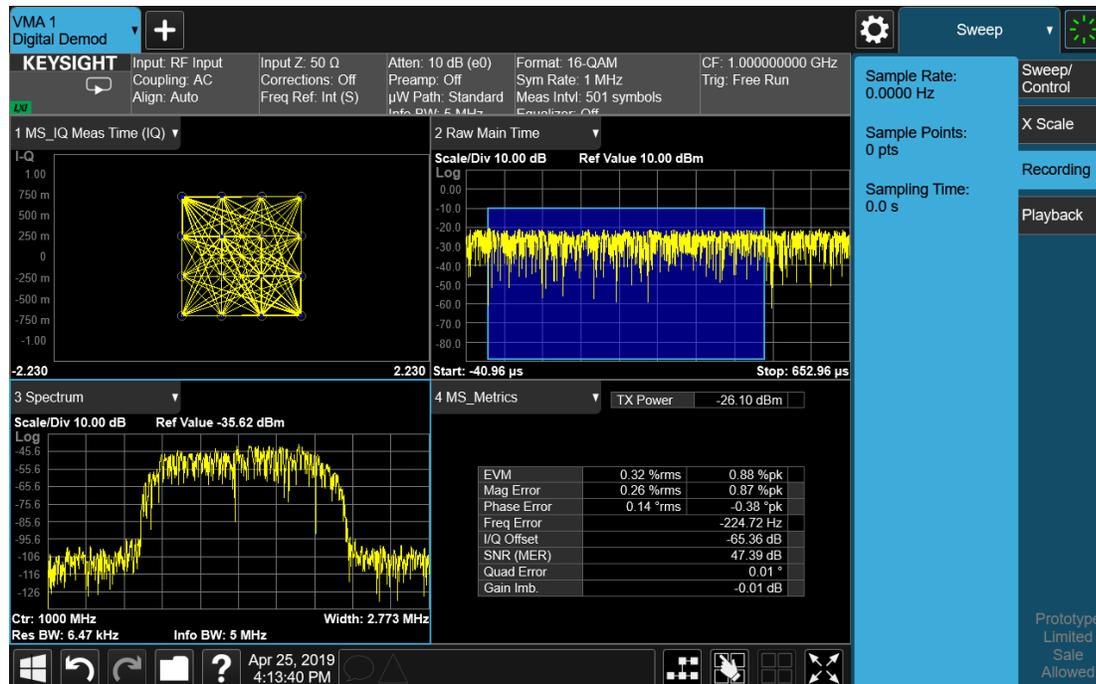

To save the data for the current measurement, press the **Save** hardkey (or the **Save** icon in the **File** panel) and press the **Recording** tab on the left side of the **Save** panel:

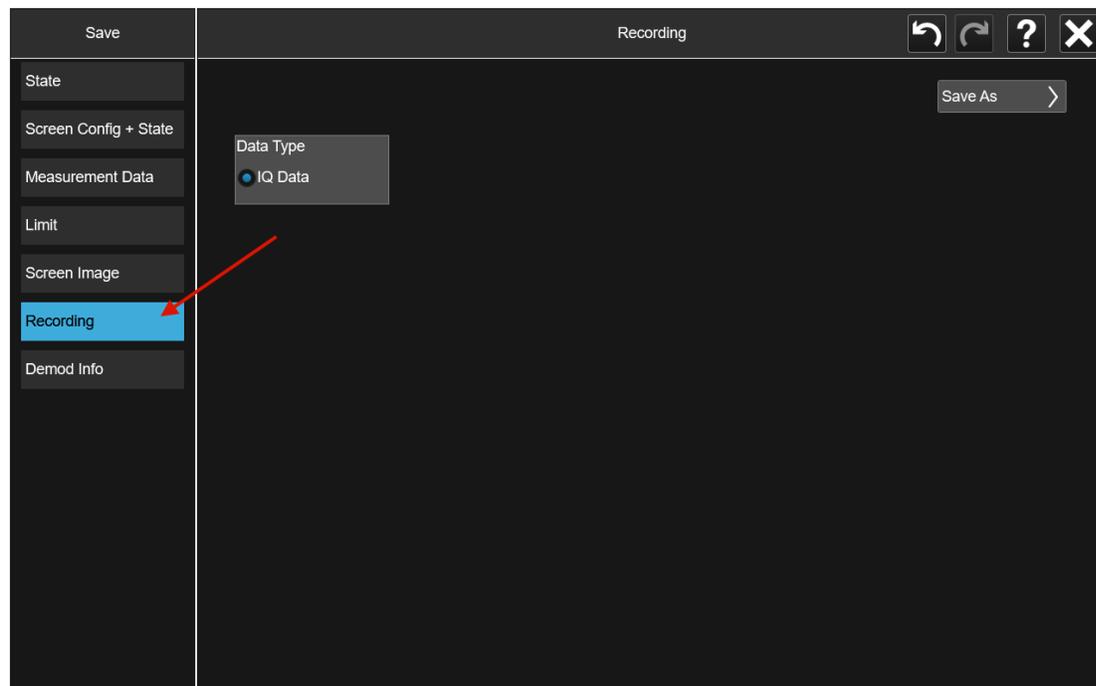

Then press **Save As** and choose the file type you would like to use for the Save (**CSV**, **SDF**, **TXT**, **BIN**, **BINX**). You can find details of the file formats in **Save > Recording**.

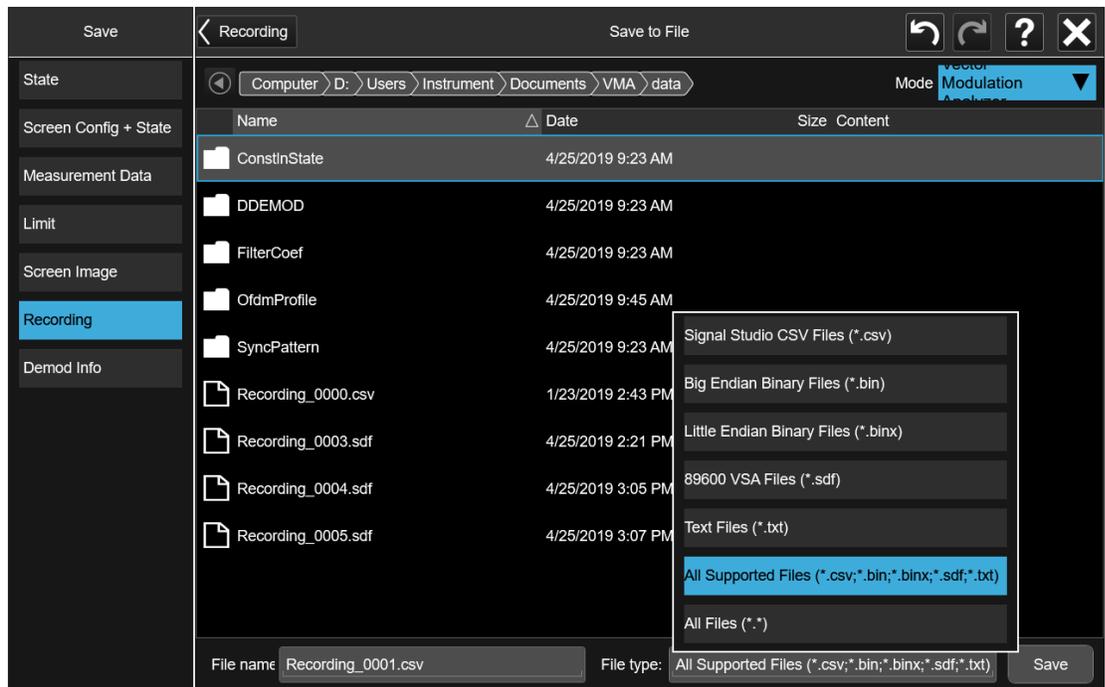


Then press **Save** to save the raw I/Q data of the current measurement.

After the Save, you will see that the data on the Recording panel has changed to describe the data in the file you just saved. You should note this data in case you need to refer to it when you recall the file, particularly as not all file formats include the Sample Rate that was used to save the data. In particular, **BIN** and **BINX** files do not include sampling rate information inside the file, so after recalling one of these file types, you will need to set the Sample Rate manually in the **Sweep, Playback** menu.


## 6 Input/Output

### 6.4 Data Source

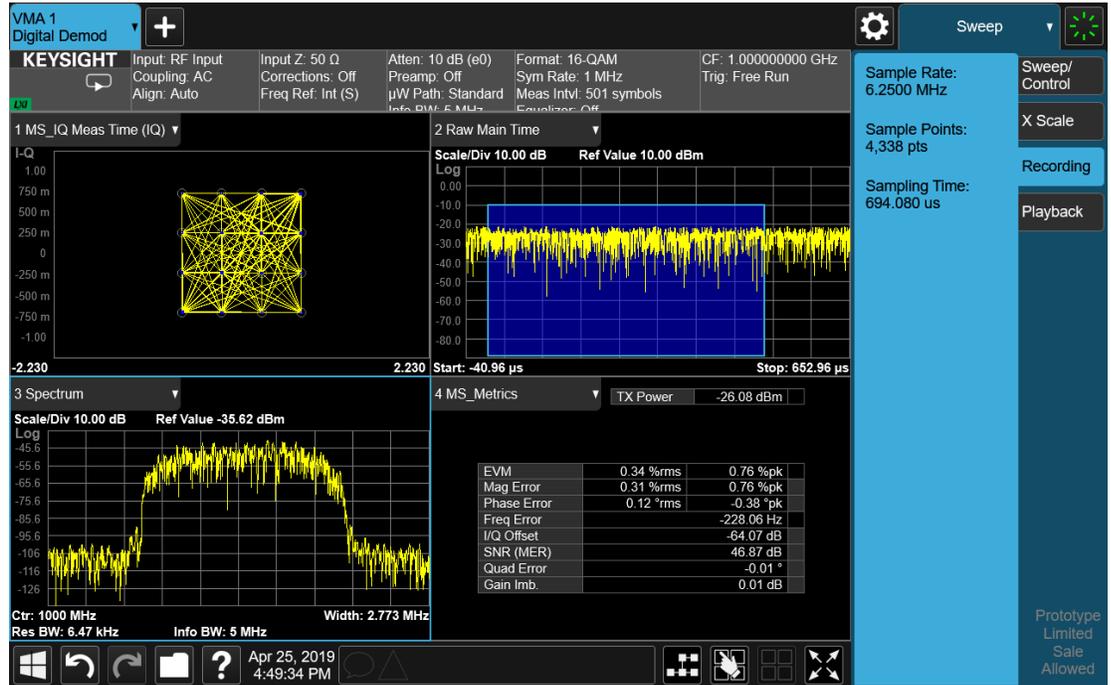

### Step 2: Recalling a Recording

If you press the **Playback** tab in the **Sweep** menu, you will see a certain number of parameters displayed on the menu panel. Before you recall a Recording, these parameters are all 0, as shown below:

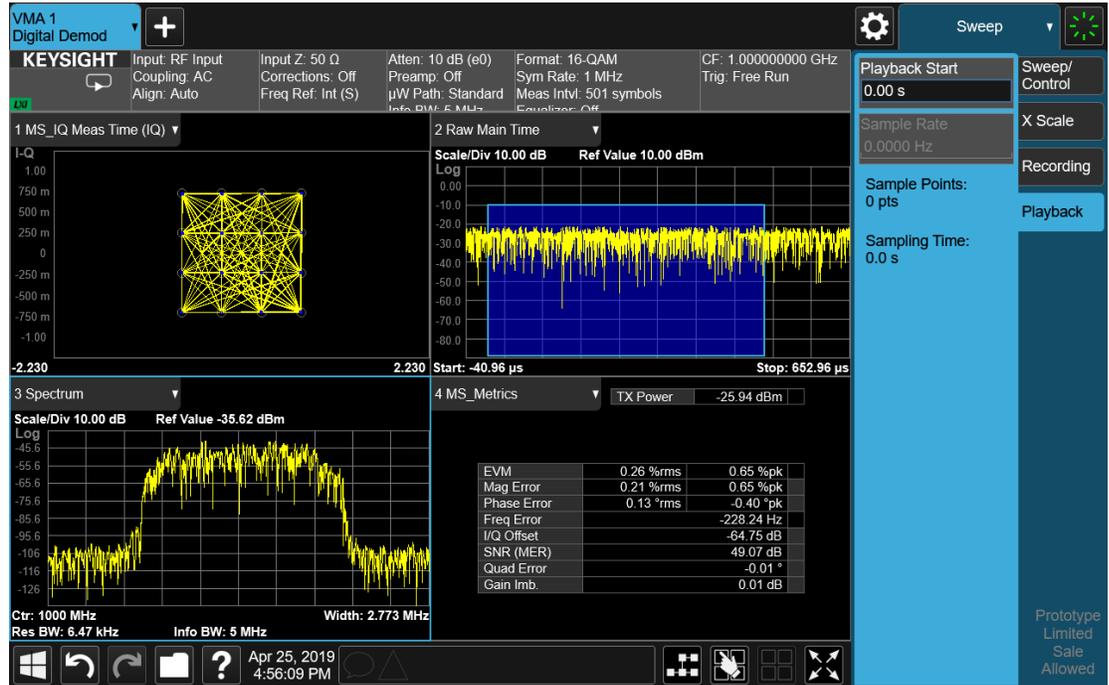


To recall a Recording, press the **Recall** hardkey (or the **Recall** icon in the **File** panel) and press the **Recording** tab on the left side of the **Recall** panel. Then press **Recall From** and choose the file you would like to recall. This will read the raw I/Q data from the specified file and feed it to the current measurement.

After the Recall, you will see that the data on the Recording panel has changed to describe the data in the file you just recalled:


## 6 Input/Output

### 6.4 Data Source

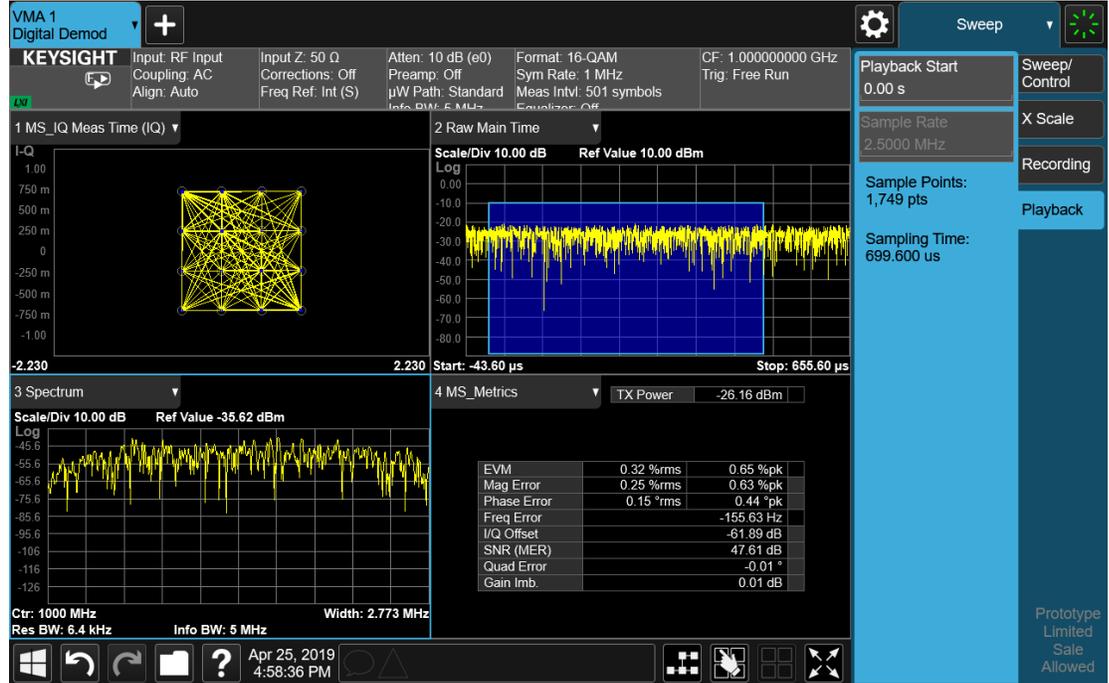


Note that the **Sample Rate** key is grayed out if the file type you loaded contains Sample Rate information. **BIN** and **BINX** files do not include sampling rate information inside the file, so after recalling one of these file types, you will need to set the Sample Rate. You should have noted the Sample Rate that was displayed on the **Sweep, Recording** menu panel after you saved the file.

After the recall is performed, you will also see that the **Data Source** control has switched to **File**. You can see this on the **Data Source** menu panel, and also on the dropdown from the Measurement Bar on the far-left side of the instrument:

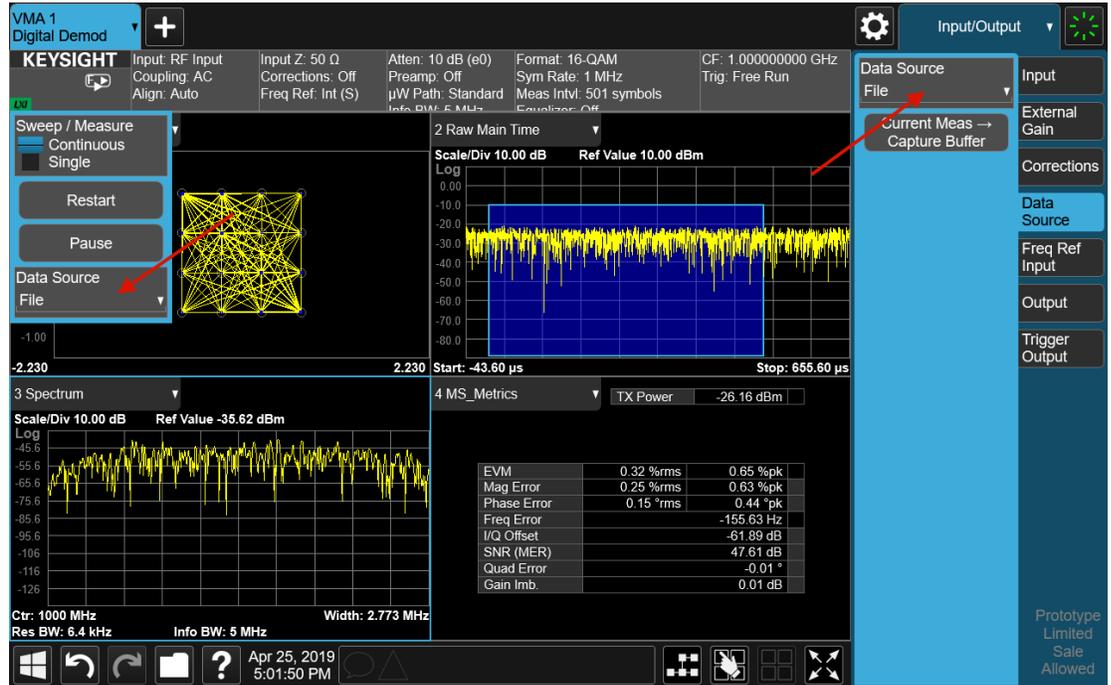


You can also see that the control indicator on the measurement bar has an “F” in it and the playback symbol (right facing triangle) displayed:

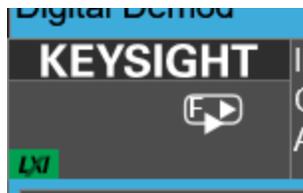

This indicates that the instrument is in **Continuous Playback** mode and is using data from a File.

If you select **Single** in the control dropdown, the indicator will change to show that it is in **Single Pause** mode as below:

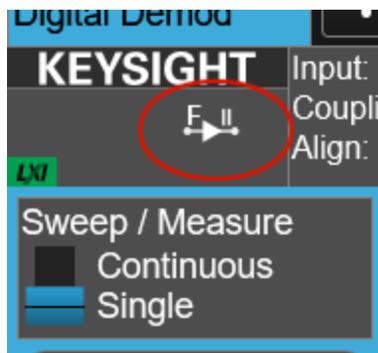

## 6 Input/Output

### 6.4 Data Source

You can now examine data in the recorded file which you loaded. How you do this depends on whether you are in **Continuous Playback** mode or **Single Pause** mode.


If you wish to return to looking at data at the instrument input, simply change the **Data Source** control from **File** back to **Input**.

### Looking at your Recorded data

To examine the data you loaded, go to the **Playback** menu panel under **Sweep**. How you proceed from here depends on whether you are in **Continuous Playback** mode or **Single Pause** mode.

#### Continuous Playback mode


In this mode, turn the knob clockwise or use the **Up** key on the front panel to move through successive records in the recording. You will see the Playback Start control change from 0 to successively higher values as you move through the records.

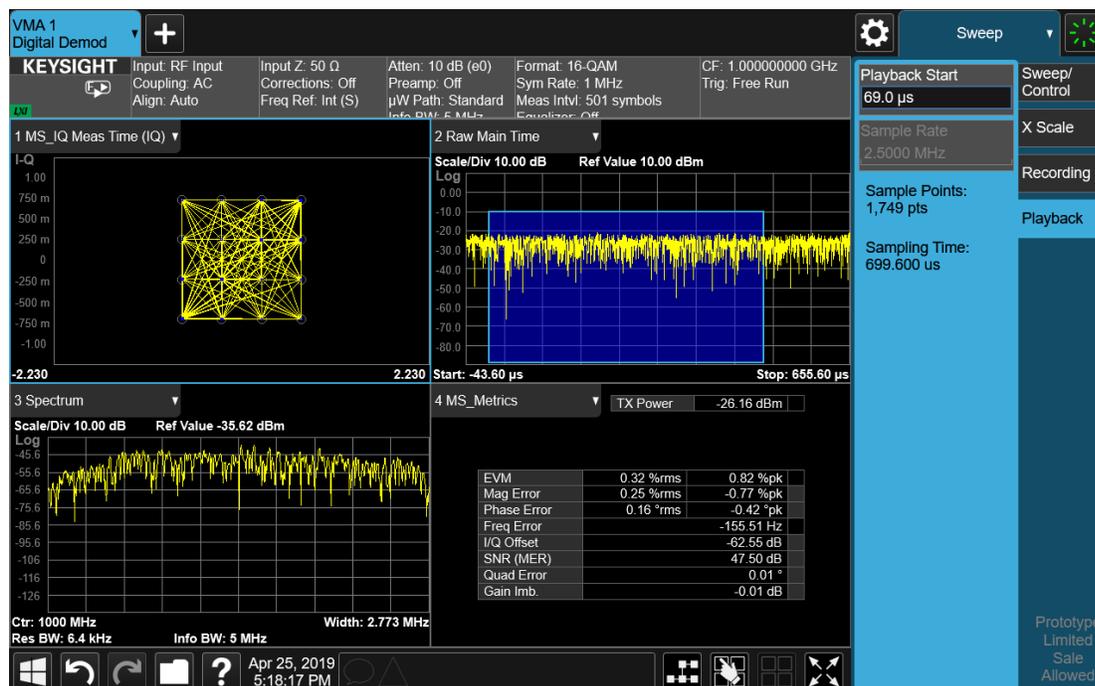


#### Single Pause mode

In this mode, you can only look at one record. Set the Playback Start time to the desired offset from zero and press **Restart**. A single record will be displayed.

Note that until you press **Restart**, the “invalid data” indicator (yellow asterisk) will be displayed in each window as below:

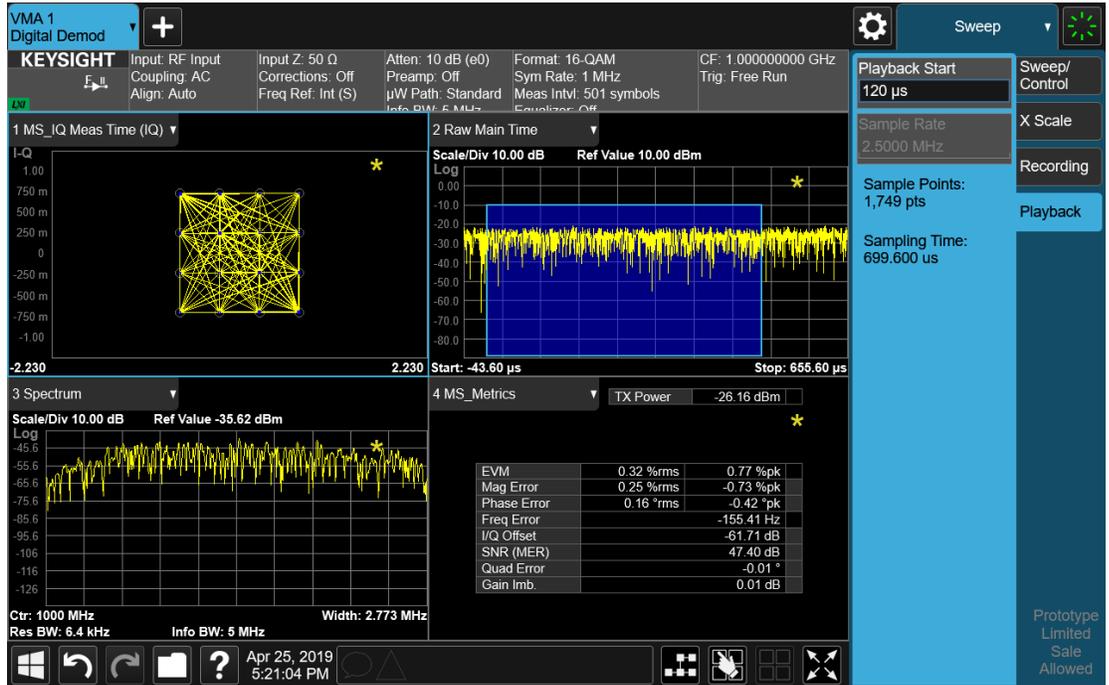

Once you press Restart, the invalid data indicator will disappear, as below:

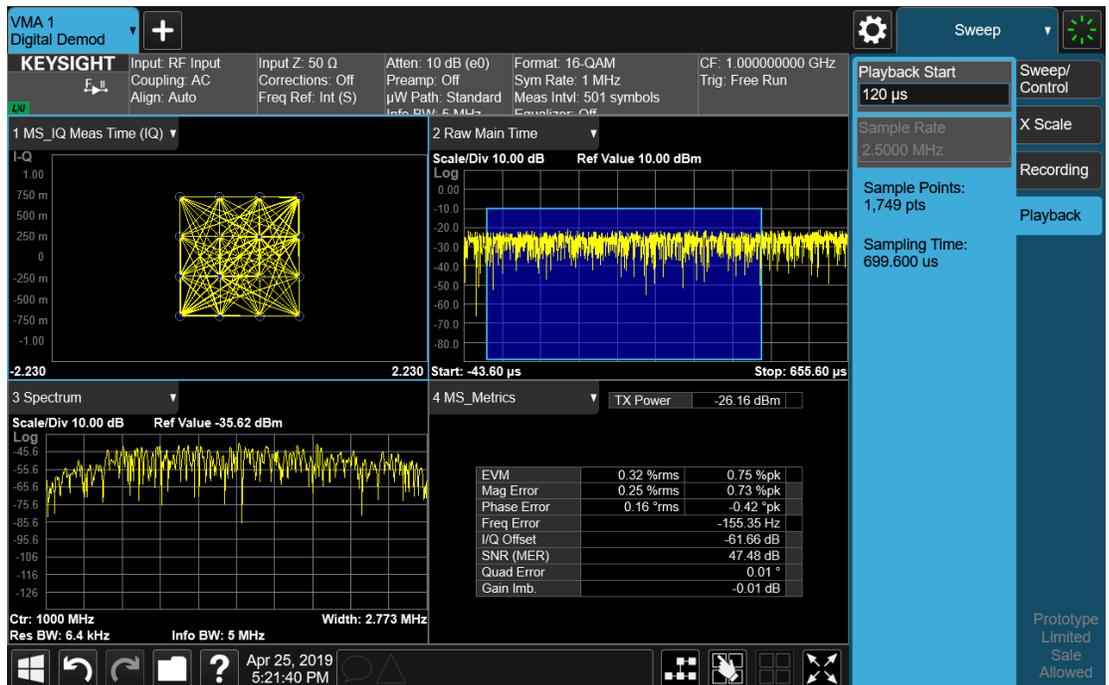

## 6.4.1 Data Source

Lets you select the input to the analysis engine. The following options are available:

Input	<b>INPut</b>	A hardware input signal (the default). This causes the measurement to take its input data from the hardware input (for example RF, I/Q, or EXTMixer) currently selected on the Input tab under Input/Output
Capture Buffer	<b>STORed</b>	Data stored in a storage buffer from a single earlier acquisition. Selecting "Capture Buffer" allows you to use data that has been previously stored using the "Current Meas -> Capture Buffer" control. You can make a measurement and then, if you want to make a different measurement using the exact same data, store the raw data using the "Current Meas -> Capture Buffer" control and select "Capture Buffer" as the Data Source, then switch to the other measurement. You must have previously done a "Current Meas -> Capture Buffer" before the Capture Buffer choice is available for use
Recorded	<b>RECORded</b>	Data recorded to memory from a set of earlier acquisitions. Selecting "Recorded" lets you use the record buffer, previously filled by using the "Recording" tab in the Sweep menu, as the input (only available in the Pulse measurement)
File	<b>FILE</b>	Data recorded on a storage device from a set of earlier acquisitions. If you load a Recording using Recording under the Recall key, "File" is automatically selected, which lets you use the recorded data as though it were coming from the Input

See "[Data Source](#)" on page 2649 for a table of available choices on a per-measurement basis.

Remote Command	<code>[ :SENSe]:FEED:DATA INPut   STORed   RECORded   FILE</code> <code>[ :SENSe]:FEED:DATA?</code>
Example	Cause the measurement to look at the input selection: <code>:FEED:DATA INP</code>  Cause stored measurement data to be used with a different measurement that supports this: <code>:FEED:DATA STOR</code>
Dependencies	If you switch to a measurement that does not support the currently selected Data Source, the instrument switches Data Source to "Input". Attempting to select an unavailable Data Source via SCPI generates an error  The Data Source setting is independent for each mode. Not all Data Sources are available in all modes
Preset	Unaffected by Preset, but set to <b>INPut</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>[ :SENSe]:FEED:SOURce INPut   STORed</code> <code>[ :SENSe]:FEED:SOURce?</code>

## 6.4.2 Current Meas -> Capture Buffer

Stores the raw data of one measurement in the internal memory of the instrument where it can then be used by a different measurement by pressing **Stored Data**. When raw data is stored, then the data source selection switch automatically changes to **Stored Data**. Stored raw data cannot be directly accessed. There is no save/recall function to save the raw data in an external media. If you want to get the stored raw data, you must first perform a measurement using the stored raw data. Now you can access the used raw data, which is the same as stored raw data, using the **:FETch** or **:READ** commands.

Remote Command	<b>[ :SENSe ] :FEED:DATA:STORe</b>
Example	<b>:FEED:DATA:STOR</b> stores recorded data
Notes	Command only; no query
Dependencies	Grayed-out in the SA measurement
Backwards Compatibility SCPI	<b>[ :SENSe ] :FEED:SOURce:STORe</b>

## 6.5 Corrections

Accesses the **Corrections** menu, which lets you select, turn on and off, and configure and edit Corrections. You can also select, turn on and off and configure Complex Corrections and Corrections Groups.

Corrections arrays provide Amplitude Corrections, and can be entered by the user, sent over SCPI, or loaded from a file. They allow you to correct the response of the instrument for various use cases. X-Series supports eight separate Corrections arrays, each of which can contain up to 2000 points. They can be turned on and off individually and any or all can be on at the same time. Corrections Groups let you load several (Amplitude) Corrections at a time into a Correction Group.

Complex Correction arrays provide both Amplitude and Phase Corrections, and can be loaded from a file. Currently the file type supported has the extension .s2p. Complex Corrections operate in much the same manner as Corrections - the X-series supports eight separate Complex Corrections arrays, each of which can contain up to 30000 points, and each Complex Correction can be turned on and off individually and any or all can be on at the same time. Some Modes, such as Spectrum Analyzer Mode, only support only the Amplitude (Magnitude) element of Complex Corrections. Other Modes, such as IQ Analyzer Mode and VMA, support both the Amplitude and Phase elements of Complex Corrections. If a Complex Correction is turned on in a Measurement that does not support Phase, only the Magnitude information will be used for the Correction.

Trace data is in absolute units and corrections data is in relative units. You can edit the Corrections arrays in the Corrections editor using the "Edit Correction" dialog (you cannot edit the Complex Corrections arrays; they can only be loaded from a file).

In zero span measurements (such as Zero Span in the Swept SA measurement), where the frequency is always the center frequency of the instrument, we apply the (interpolated) correction for the center frequency to all points in the trace. In the event where there are two correction amplitudes at the center frequency, we apply the first one in the table.

Note that the corrections are applied as the data is taken; therefore, a trace in **View** (Update Off) will not be affected by changes made to the corrections after the trace is put in **View**.

The **Corrections** tab only appears in Modes and Measurements that support Corrections and/or Complex Corrections. In other Modes, sending SCPI for Corrections and/or Complex Corrections will generate a Settings Conflict message

Corrections and Complex Corrections arrays are not affected by a Preset, because they are in the Input/Output system. They also survive shutdown and restarting of the instrument application, which means they will survive a power cycle. Corrections

and Complex Corrections arrays are reset (deleted) by Restore Input/Output Defaults. The following commands delete the correction registers:

- User Preset the current mode :**SYST:PRES:USER**
- User Preset all modes :**SYST:PRES:USER ALL**
- Full mode preset :**SYST:PRES:FULL**
- Restore power on default :**SYST:DEF PON**
- Restore all defaults :**SYST:DEF; :SYST:DEF ALL**
- Preset Input/Output variables :**SYST:DEF INP**
- Delete all corrections :**CORR:CSET:ALL:DEL**

The instrument Save State and Save Screen Config + State includes the data in the correction registers. If a measurement setup is saved and then recalled at a later time, the correction data will be recalled as well. This feature is useful for recreating the full instrument condition, but the user has to be careful that the recalled correction data is the desired data. For example, if the state is recalled on a different instrument different correction data might be needed. Or if the system is recalibrated, the correction data in the save state would then be stale. Applications that use measured data for corrections will generally need to reload the correction data from file whenever a state is recalled; this ensures that the correction data is current and applies to hardware in use.

In the EXM and EXF, on the RF Input/Output panel, there are two full-duplex RF ports (RFIO1 and RFIO2), RF Input and RF Output. When RF Input is selected, it will correspond to one input port from two half-duplex RF ports (RFIO3 and RFIO4), and when RF Output is selected, it will correspond to one output port from two half-duplex RF ports (RFIO3 and RFIO4). So, there are 8 sets of corrections in all that can be applied to the RF ports. Ports cannot share the same set of corrections, but a single port can have multiple corrections applied to it. The correction data is applied to incoming signals as well as transmitted signals and is in the form of a list of spot frequencies and amplitude correction levels.

---

Annotation	In EMI Mode, you can choose to display the correction details in the graph area by turning on Display, Annotation, Correction Annotation
------------	--

### 6.5.1 Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

---

Notes	The selected correction is remembered even when not in the correction menu
Preset	Set to Correction 1 by Restore Input/Output Defaults

## 6.5.2 Correction On/Off

Turning the Selected Correction from **OFF** to **ON** allows the values in it to be applied to the data. This state transition also automatically turns on "Apply Corrections" (sets it to **ON**), otherwise the correction would not take effect.

A new sweep is initiated if an amplitude correction is switched on or off. Note that changing, sending or loading corrections data does *not* directly initiate a sweep, however in general these operations will turn corrections on, which *does* initiate a sweep.

Remote Command	<code>[ :SENSe]:CORRection:CSET[1] 2 ... 16[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 16[:STATe]?</code>
Example	<code>:SENS:CORR:CSET1 ON</code>
Dependencies	Changing this from <b>OFF</b> to <b>ON</b> automatically turns on "Apply Corrections" Note that if any Correction is turned on that has a transducer unit set (other than "None"), the Y-Axis Unit of the instrument is forced to that Transducer Unit. All other Y-Axis Unit choices are grayed-out This command generates an "Option not available" error unless you have the proper option installed in your instrument
Preset	Not affected by Preset. Set to <b>OFF</b> by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state
Annotation	If <i>any</i> Correction is turned on, Corr in the Meas Bar displays in amber to indicate Corrections are in use
Backwards Compatibility Notes	Unlike legacy instruments, Preset does not turn Corrections off ( <b>Restore Input/Output Defaults</b> does)

## 6.5.3 Correction Port

Maps one of the sets of corrections to a particular I/O port. This control allows any Input port (including External Mixing, BBIQ, the RF2 input, etc.) to be mapped to a specific Correction, so that the Correction is only applied when that Port is being used by the current Screen. You can also map any internal source Output port to a specific Correction.

When Current Input (CINPut) is selected for **Correction Port**, it chooses the current input port of the current Screen for the selected Correction. In other words, the Correction applies to whichever input is selected. If the input changes, the correction applies to the new input.

When using the VXT M9410A/11A with Remote Radio Heads (such as the Keysight M1740A mmWave Transceiver for 5G), the choices in the dropdown menu appear as :

Head h RFHD p

For example, if you have two Radio Heads (numbered 1 and 2), each of which have two RF half duplex ports, the choices for these ports appear as below:

Head and Port	Choice in dropdown	SCPI parameter
Head 1, port RF Tx/Rx 1	Head 1 RFHD 1	RRH1RFHD1
Head 1, port RF Tx/Rx 2	Head 1 RFHD 2	RRH1RFHD2
Head 2, port RF Tx/Rx 1	Head 2 RFHD 1	RRH2RFHD1
Head 2, port RF Tx/Rx 2	Head 2 RFHD 2	RRH2RFHD2

Remote Command `[ :SENSe]:CORRection:CSET[1]|2|...|16:RF:PORT CINPut | RFIN | RFIN2 | AIQ | EMIXer | RFIO1 | RFIO2 | RFIO3 | RFIO4 | RFOut | RFHD | RFFD | ANT | GEN | TR | A1 | A2 | A3 | B1 | B2 | B3 | IFIO1 | IFIO2 | RRHnRFHDp | ERFIN`

See "Parameter Options" on page 2664

`[ :SENSe]:CORRection:CSET[1]|2|...|16:RF:PORT?`

Example Set Correction Port for Correction 1 to apply to the currently selected input:

`:CORR:CSET:RF:PORT CINP`

Set Correction Port for Correction 4 to apply to Radio Head 1, RF Tx/Rx Port 2:

`:CORR:CSET4:RF:PORT RRH1RFHD2`

Notes The **RF** node in this command is retained for backwards compatibility, even though the scope of the Correction Port command goes beyond the RF ports and includes BBIQ and External Mixing

Dependencies **RFIN2** | **AIQ** | **EMIXer** are only available on C/E/M/P/UXA analyzers with the appropriate options loaded

**RFOut** is only available on modular products such as VXT

**ANT**, **GEN** and **TR** are only available in VXT and only when the M9470A module is installed, such as in the M8920A. Option "HDX" is required to enable the TR port

**RFHD** and **RFFD** are only available on VXT. Option HDX is required to enable RFHD port and option FDX is required to enable RFFD port

**RFIO3** and **RFIO4** are only available on EXM with hardware M9431A

**RFIN** and **RFOut** are not available on EXM with hardware M9431A

**ERFIN** requires option "EXW"

Preset Unaffected by Preset. Set as below by **Restore Input/Output Defaults**:

For VXT: **RFIN**

For EXM, EXF: **RFIO1**

For all other models: **CINPut** (the currently selected input)

State Saved Saved in State

## Parameter Options

Note that the presence of these ports is highly hardware dependent.

## 6 Input/Output

### 6.5 Corrections

Correction Port	SCPI	Note
Current Input	<b>CINPut</b>	The correction will be applied to whichever input is currently selected in the Input menu
RF Input	<b>RFIN</b>	Main RF Port Not available on EXM with hardware M9431A
RF Input 2	<b>RFIN2</b>	Second RF Port, labeled <b>RF Input 2</b> Only available on certain instruments. Not available on modular instruments
BBIQ input	<b>AIQ</b>	Requires option BBA Not available on modular instruments
External Mixer	<b>EMIXer</b>	Requires option EXM Not available on modular instruments
Antenna	<b>ANT</b>	Antenna input port on M9470A, labeled <b>Ant</b>
Generator	<b>GEN</b>	Generator output port on M9470A, labeled <b>Gen</b>
T/R	<b>TR</b>	T/R port on M9470A, labeled <b>T/R</b>
RF Full Duplex	<b>RFFD</b>	On modular instruments, labeled <b>RFFD</b> . Option “FDX” is required to enable RFFD port
RF Half Duplex	<b>RFHD</b>	On modular instruments, labeled <b>RFHD</b> . Option “HDX” is required to enable RFHD port
A1	<b>A1</b>	On E7760B
A2	<b>A2</b>	On E7760B
A3	<b>A3</b>	On E7760B
B1	<b>B1</b>	On E7760B
B2	<b>B2</b>	On E7760B
B3	<b>B3</b>	On E7760B
IFIO1	<b>IFIO1</b>	On E7760B
IFIO2	<b>IFIO2</b>	On E7760B
RF Output	<b>RFOut</b>	Appears on some modular instruments Not available on EXM with hardware M9431A
RFIO1	<b>RFIO1</b>	Appears on some modular instruments
RFIO2	<b>RFIO2</b>	Appears on some modular instruments
RFIO3	<b>RFIO3</b>	Only available in EXM with hardware M9431A
RFIO4	<b>RFIO4</b>	Only available in EXM with hardware M9431A
GPS out	<b>GPS</b>	Appears on some modular instruments
GNSS out	<b>GNSS</b>	Appears on some modular instruments

#### 6.5.4 Correction Direction

Selects whether corrections will be applied when the device associated with the specified correction is being used as an input, an output or in both directions. The choices are:

<b>INPut</b>	Correct the port only when the port is used as an Input
<b>OUTPut</b>	Correct the port only when the port is used as an Output
<b>BOTH</b>	Correct the port when the port is used as either an Input or an Output (or both)

A port that is only an Output is always corrected as an output if the Correction is On. A port that is only an Input is always corrected as an Input if the Correction is On. For a port that can be either an Input or an Output (or both), the Correction is determined by the Correction Direction setting. The default is **BOTH**, which means that by default a port that can be either an Input or an Output (or both) is corrected in both directions if the Correction is On.

Remote Command	<code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:DIRection INPut   OUTPut   BOTH</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:DIRection?</code>
Example	<code>:CORR:CSET2:DIR INP</code>
Dependencies	The Correction Direction control only appears when Correction Port selects a port that can either function as an input or an output (or both simultaneously), such as RFIO HD, RFFD or T/R. If the SCPI command is sent to any other port, it is accepted but ignored
Preset	Not affected by a Preset. Set to <b>BOTH</b> by <b>Restore Input/Output Defaults</b>
State Saved	Saved in State
Backwards Compatibility SCPI	The following SCPI results in the selection of <b>BOTH</b> (included for compatibility with early Multitouch implementations): <code>[ :SENSe]:CORRection:CSET[1] 2 ... 8:DIRection BIDirectiona</code> included for compatibility with A-models modular products: <code>[ :SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFFD SOURce   ANALyzer   BOTH</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFIO1 SOURce   ANALyzer   BOTH</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFIO2 SOURce   ANALyzer   BOTH</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFIO3 SOURce   ANALyzer   BOTH</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 8:RF:PORT:RFIO4 SOURce   ANALyzer   BOTH</code>

### 6.5.5 Edit Correction

Invokes the integrated editing facility for this correction set. When entering the menu, the editor window turns on, the selected correction is turned **On**, **Apply Corrections** is set to **On**, the amplitude scale is set to **Log**, and the Amplitude Correction (“Ampcor”) trace is displayed. The actual, interpolated correction trace is shown in green for the selected correction. Note that since the actual interpolated correction is shown, the correction trace may have some curvature to it. This trace represents only the correction currently being edited, rather than the total, accumulated amplitude correction for all amplitude corrections which are currently on, although the total, accumulated correction for all corrections which are turned on is still applied to the data traces.

Because corrections data is always in dB, but the Y-axis of the instrument is in absolute units, it is necessary to establish a reference line for display of the Corrections data. The reference line is halfway up the display and represents 0 dB of correction. It is labeled "0 dB CORREC". It is drawn in blue. Corrections data is always in dB. Whatever dB value appears in the correction table represents the correction to be applied to that trace at that frequency. So, if a table entry shows 30 dB that means we ADD 30 dB to each trace to correct it before displaying it. By definition all points are connected. If a gap is desired for corrections data, enter 0 dB.

Note that a well-designed Corrections array should start at 0 dB and end at 0 dB. This is because whatever the high-end point is will be extended to the top frequency of the instrument, and whatever the low-end point is will be extended down to 0 Hz. So, for a Corrections array to have no effect outside its range, you should start and end the array at 0 dB.

**NOTE**

**The table editor only operates properly if the instrument is sweeping, because its updates are tied to the sweep system. Thus, you should not try to use the editor in single sweep, and its response will be sluggish during compute-intensive operations like narrow-span FFT sweeps.**

---

When exiting the edit menu (by using the **Return** key or by pressing an instrument front-panel key), the editor window turns off and the Ampcor trace is no longer displayed; however, **Apply Corrections** remains **On**, any correction that was on while in the editor remains on, and the amplitude scale returns to its previous setting.

Corrections arrays are not affected by a Preset, because they are in the Input/Output system. They also survive shutdown and restarting of the instrument application, which means they will survive a power cycle.

When editing a correction, the editor remembers which correction and which element in the correction array you were editing, and returns you to that correction and that element when you return to the editor after leaving it.

### 6.5.5.1 Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

---

Notes	The selected correction is remembered even when not in the correction menu
Preset	Set to Correction 1 by Restore Input/Output Defaults

---

### 6.5.5.2 Frequency

Touching a frequency value makes the touched row the current row and lets you edit the frequency.

Min	0
Max	1 THz

### 6.5.5.3 Amplitude

Touching an amplitude value makes the touched row the current row and lets you edit the amplitude.

Min	-1000 dB
Max	1000 dB

### 6.5.5.4 Go to Row

Lets you move through the table to edit the desired point.

Min	1
Max	2000

### 6.5.5.5 Insert Row Below

Inserts a point below the current point. The new point is a copy of the current point and becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in light gray. To enter the row into the table, press the **Enter** key, or tap either value and edit it.

### 6.5.5.6 Delete Row

Deletes the currently-selected point, whether or not that point is being edited, and selects the Navigate functionality. The point following the currently-selected point (or the point preceding if there is none) will be selected.

### 6.5.5.7 Scale X Axis

Matches the X-Axis to the selected Correction, as well as possible. Sets the Start and Stop Frequency to contain the minimum and maximum Frequency of the selected Correction. The range between Start Frequency and Stop Frequency is 12.5% above the range between the minimum and maximum Frequency, so that span exceeds this range by one graticule division on either side. If in zero-span, or there is no data in the Ampcor table, or the frequency range represented by the table is zero, no action is taken. Standard clipping rules apply if the value in the table is outside the allowable range for the X-Axis.

6 Input/Output  
6.5 Corrections

Dependencies If either the first or last point in the array is outside the frequency range of the current input, an error message is generated:  
“-221. Settings conflict; Start or Stop Freq out of range for current input settings”

### 6.5.5.8 Delete Correction

Deletes the correction values for this set. When this key is pressed, a prompt appears on the screen saying “Please press **Enter** or **OK** key to delete correction. Press **ESC** or **Cancel** to close this dialog.” The deletion is only performed if you press **OK** or **Enter**.


Remote Command `[ :SENSe]:CORRection:CSET[1]|2|...|16:DELeTe`

Example `:CORR:CSET:DEL`  
`:CORR:CSET1:DEL`  
`:CORR:CSET4:DEL`

Notes Pressing this key when no corrections are present is accepted without error

### 6.5.5.9 Correction Graph

The **Correction Graph** embedded in the Edit Correction dialog lets you edit the Amplitude Correction visually. Each node in the Correction is represented by a gray circle. The current node has a blue outline in the table and a blue circle in the graph. Touch any circle and drag it where you want it to go.

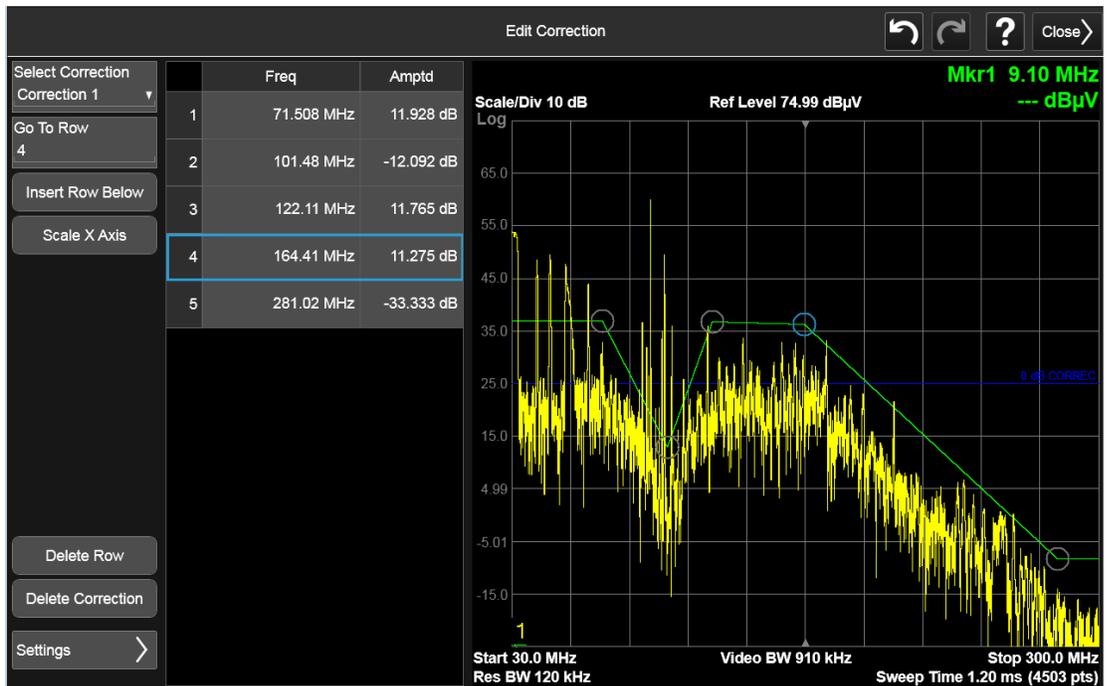

## 6.5.6 Edit Correction Settings

Opens another menu page that lets you set certain properties of the selected correction, such as Interpolation, Transducer Unit, Description and Comment.

### 6.5.6.1 Select Correction

Specifies the selected correction. The term "selected correction" is used throughout this document to specify which correction will be affected by the functions.

Notes	The selected correction is remembered even when not in the correction menu
Preset	Set to Correction 1 by Restore Input/Output Defaults

### 6.5.6.2 Freq Interpolation

Controls how the correction values per-bucket are calculated. We interpolate between frequencies in either the logarithmic or linear scale.

This setting is handled and stored individually per correction set.

VXT models M9410A/11A/15A/16A only support Linear Interpolation. For more details, see ["Interpolation" on page 2670](#)

Remote Command	<code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:X:SPACing LINear   LOGarithmic</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:X:SPACing?</code>
Example	<code>:CORR:CSET:X:SPAC LIN</code>
Preset	Unaffected by Preset. Set to Linear by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

### Interpolation


For each bucket processed by the application, all of the correction factors at the frequency of interest (center frequency of each bucket) are summed and added to the amplitude. All trace operations and post processing treat this post-summation value as the true signal to use.

To effect this correction, the goal, for any particular start and stop frequency, is to build a correction trace, whose number of points matches the current Sweep Points setting of the instrument, which will be used to apply corrections on a bucket-by-bucket basis to the data traces.

6 Input/Output  
6.5 Corrections


For amplitudes that lie between two user specified frequency points, we interpolate to determine the amplitude value. You may select either linear or logarithmic interpolation between the frequencies.

If we interpolate on a log scale, we assume that the line between the two points is a straight line on the log scale. For example, let's say the two points are (2,4) and (20,1). A straight line between them on a log scale looks like:

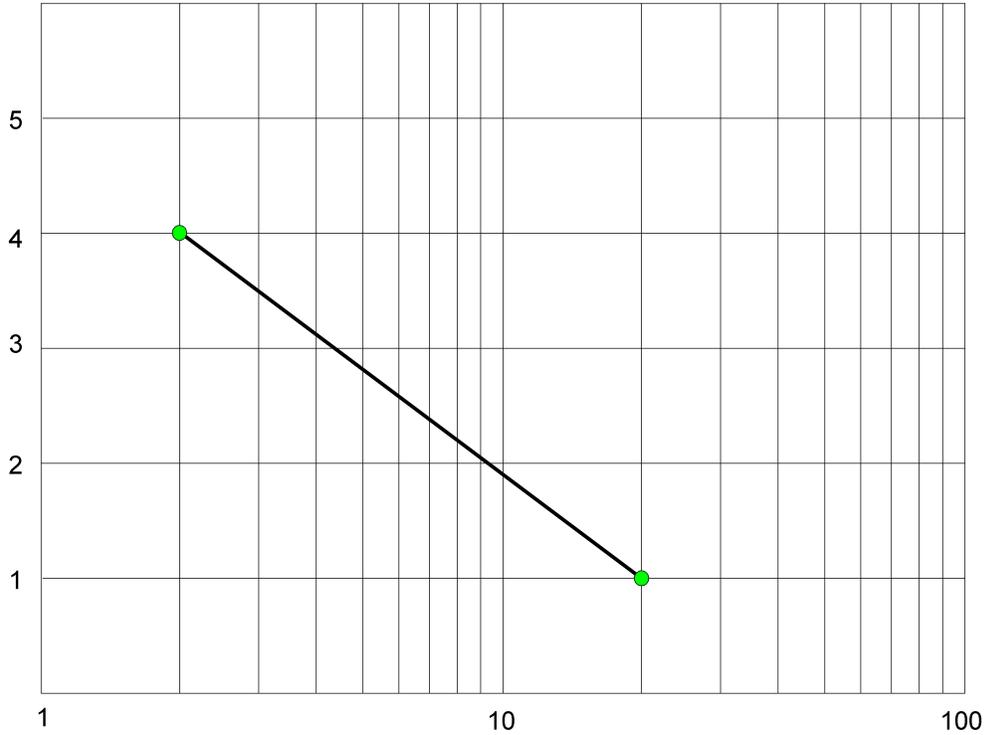


vsd17

On a linear scale (like that of the spectrum analyzer), this translates to:

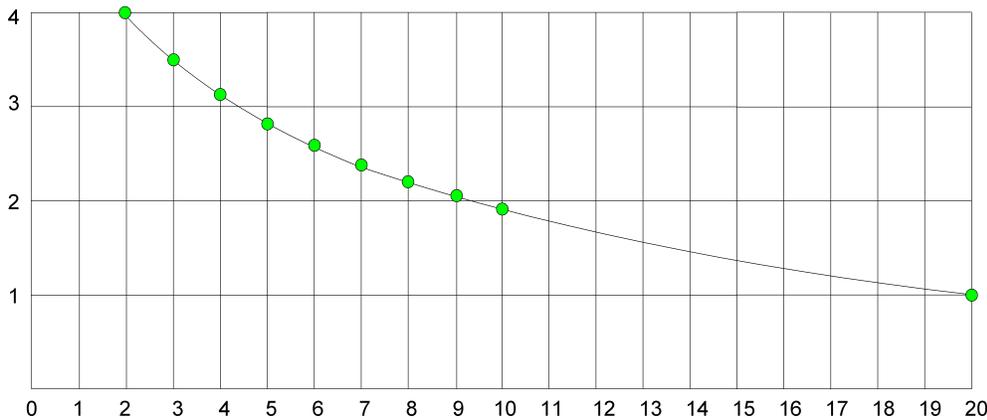

vsd19

If we interpolate on a linear scale, we assume that the two points are connected by a straight line on the linear scale, as below:

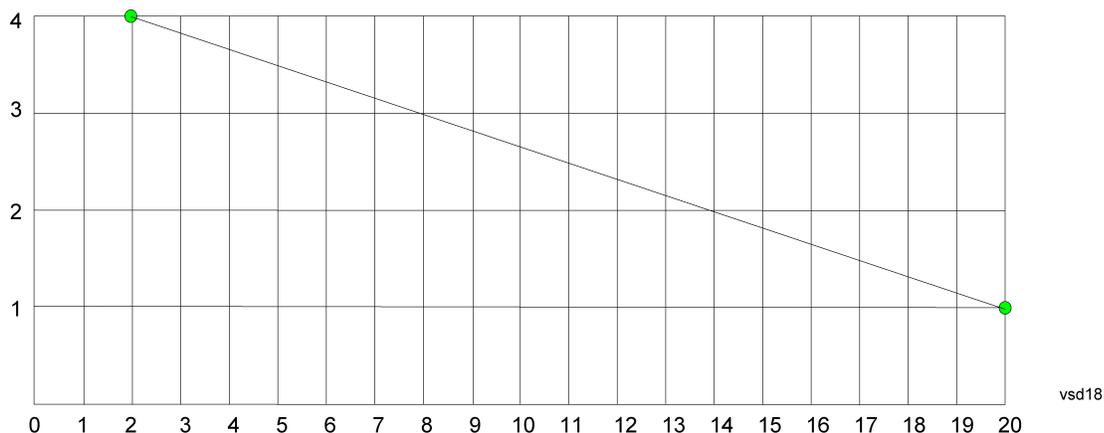

The correction to be used for each bucket is taken from the interpolated correction curve at the center of the bucket.

### 6.5.6.3 Transducer Unit

For devices (like antennas) that make measurements of field strength or flux density, the correction array should contain within its values the appropriate conversion factors such that, when the data on the instrument is presented in dBμV, the display is calibrated in the appropriate units. The "Transducer Unit" used for the conversion is contained within the corrections array database. It may be specified or loaded in from an external file or SCPI.

When an array with a Transducer Unit other than "None" is turned on, the Y Axis Unit of the instrument is forced to that unit. When this array is turned on, and it contains a Transducer Unit other than "None", the Y Axis Unit of the instrument is forced to that Transducer Unit., and all other Y Axis Unit choices are grayed out.

Transducer Unit only appears in certain Modes, it does not appear in all Modes that support Corrections.

See ["Examples" on page 2673](#)

Remote Command	<code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:ANTenna[:UNIT] GAUSS   PTES1a   UVM   UAM   UA   NOConversion</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:ANTenna[:UNIT]?</code>
Example	<code>:CORR:CSET:ANT GAUS</code>
Dependencies	Only one Transducer units can be on at any given time. Note that this means that if a correction file with a Transducer Unit is loaded into a particular Correction, all other Corrections are set to that same Transducer unit When <b>Normalize</b> is On (in the <b>Trace, Normalize</b> menu) Transducer Unit is grayed-out and forced to None
Preset	Unaffected by Preset. Set to NOC by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

## Examples

The units that may be specified and what appears in the file and on the screen are shown below:

Transducer Unit	SCPI Example	In the Correction file	On the screen (also Y Axis Unit forced to)
dB $\mu$ V/m	:CORR:CSET:ANT UVM	Antenna Unit= $\mu$ V/m	dB $\mu$ V/m
dB $\mu$ A/m	:CORR:CSET:ANT UVA	Antenna Unit= $\mu$ A/m	dB $\mu$ A/m
dB $\mu$ A	:CORR:CSET:ANT UA	Antenna Unit= $\mu$ A	dB $\mu$ A
dBpT	:CORR:CSET:ANT PTES	Antenna Unit=pTesla	dBpT
DBG	:CORR:CSET:ANT GAUS	Antenna Unit=Gauss	DBG
None	:CORR:CSET:ANT NOC	Antenna Unit= (or no line at all)	none (not forced)

### 6.5.6.4 Description

Sets an ASCII description field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to appear in a screen capture.

Remote Command	<code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:DESCRiption "text"</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:DESCRiption?</code>
Example	<code>:CORR:CSET1:DESC "11941A Antenna correction"</code>
Notes	45 chars max; may not fit on display if max chars used
Preset	Unaffected by a Preset. Set to empty by Restore Input/Output Defaults
State Saved	Saved in instrument state

### 6.5.6.5 Comment

Sets an ASCII comment field which will be stored in an exported file. Can be displayed in the active function area by selecting as the active function, if desired to appear in a screen capture.

Remote Command	<code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:COMMeNT "text"</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:COMMeNT?</code>
----------------	--

Example	<code>:CORR:CSET1:COMM "this is a comment"</code>
Notes	60 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

## 6.5.7 Complex Corrections

This dialog is used to set up and display information about the **Complex Corrections** set. It also lets you view and edit certain information such as the Description and Comment for the selected Complex Correction.

Complex Corrections (loaded from `.s2p` files) support both magnitude and phase corrections, whereas standard corrections (loaded from standard Ampcor `.csv` files) support only magnitude corrections.

When loading an `.s2p` file, the component representing S21 is the one that is used to generate the complex correction. If no S21 component is present, a Mass Storage error is reported.

### NOTE

**Data types RI, MA, and DB are supported.**

**The phase components of the S2P file are taken to be in degrees, not in radians. You must provide the phase correction in degrees.**

**Unlike Correction files, S2P files describe device characteristics, rather than the correction required to compensate for those characteristics; so, when an S2P file is loaded, both the magnitude and phase are negated to turn it into a correction**

Complex Corrections and standard corrections can be turned on at the same time. For example, you could turn on Correction 2, Correction 4, and Complex Correction 1 and 2, all at the same time. The magnitude part of all the corrections would add, and the phase part of the complex corrections would add.

You can have up to 64 Complex Corrections loaded simultaneously. Each Complex Correction can hold up to 30,000 points.

You can load a standard correction into Complex Corrections, but it will only provide a magnitude correction, not a phase correction.

### NOTE

**A standard correction (from a CSV file) can be loaded into a Complex Correction, but when it is loaded the Phase correction is set to 0 for all points.**

**Some measurements, like Swept SA, have no phase component to the measurement, but nonetheless support Complex Corrections. For such measurements, only the Magnitude part of the Complex Correction is applied.**

### 6.5.7.1 Go To Row (Select Correction)

Specifies the selected complex correction. The selected correction will be identified by the blue outlined row in the dialog.

The "selected complex correction" is an important concept when sending SCPI commands to the Complex Corrections system, because in each case the SCPI command is directed to the currently selected Complex Correction and that will be the Correction which is modified by the SCPI command.

Remote Command	<code>[ :SENSe]:CCORrection:CSET:SElect &lt;integer&gt;</code> <code>[ :SENSe]:CCORrection:CSET:SElect?</code>
Example	<code>:CCOR:CSET:SEL 3</code> <code>:CCOR:CSET:SEL?</code>
Notes	The selected correction is remembered even when not in the correction menu
Preset	Set to Correction 1 by Restore Input/Output Defaults
Min	1
Max	64

### 6.5.7.2 Delete Row

Deletes the currently-selected Complex Correction and clears all entries in that row to the default.

Remote Command	<code>[ :SENSe]:CCORrection:CSET:DElete</code>
Example	Select correction 3: <code>:CCOR:CSET:SEL 3</code>  Delete correction 3: <code>:CCOR:CSET:DEL</code>

### 6.5.7.3 Delete All

Deletes all complex corrections and clears all entries in all rows to the default.

When this key is pressed a prompt is placed on the screen that says "Please press Enter or OK key to delete all complex corrections. Press ESC or Cancel to close this dialog." The deletion is only performed if you press **OK** or **Enter**.

Remote Command	<code>[ :SENSe]:CCORrection:CSET:ALL:DElete</code>
Example	<code>:CCOR:CSET:ALL:DEL</code>

### 6.5.7.4 Correction On

Checking or unchecking this box turns the Selected Complex Correction **ON** or **OFF**. Turning it **ON** causes the values in it to be applied to the data. This state transition also automatically turns on "Apply Corrections" (sets it to **ON**), otherwise the correction would not take effect.

A new sweep/acquisition is initiated if a complex correction is switched on or off. Note that changing, sending or loading corrections data does *not* directly initiate a sweep, however in general these operations will turn corrections on, which *does* initiate a sweep.

Remote Command	<code>[ :SENSe]:CCORrection:CSET[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:CCORrection:CSET[:STATe]?</code>
Example	Select correction 3: <code>:CCOR:CSET:SEL 3</code>  Turn correction 3 on: <code>:CCOR:CSET ON</code>
Dependencies	Changing this from <b>OFF</b> to <b>ON</b> automatically turns on "Apply Corrections" Grayed-out if Complex Corrections is not supported by the current measurement. A warning or SCPI error is generated if you try to turn it on under these circumstances: "Feature not supported for this measurement"
Preset	Not affected by Preset. Set to <b>OFF</b> by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state
Annotation	If <i>any</i> Complex Correction is turned on, CC in the Meas Bar will display in amber to indicate Complex Corrections are in use

### 6.5.7.5 Correction Port

Maps one of the sets of corrections to a particular I/O port. This control allows any Input port (including External Mixing, BBIQ, the RF2 input, etc.) to be mapped to a specific Correction, so that the Correction is only applied when that Port is being used by the current Screen. You can also map any internal source Output port to a specific Correction.

When Current Input (CINPut) is selected for **Correction Port**, it chooses the current input port of the current Screen for the selected Correction. In other words, the Correction applies to whichever input is selected. If the input changes, the correction applies to the new input.

When using the VXT M9410A/11A with Remote Radio Heads (such as the Keysight M1740A mmWave Transceiver for 5G), the choices in the dropdown menu will appear as

Head h RFHD p

6 Input/Output  
6.5 Corrections

For example, if you have two Radio Heads (numbered 1 and 2), each of which have two RF half duplex ports, the choices for these ports will appear as below:

Head and Port	Choice in dropdown	SCPI parameter
Head 1, port RF Tx/Rx 1	Head 1 RFHD 1	RRH1RFHD1
Head 1, port RF Tx/Rx 2	Head 1 RFHD 2	RRH1RFHD2
Head 2, port RF Tx/Rx 1	Head 2 RFHD 1	RRH2RFHD1
Head 2, port RF Tx/Rx 2	Head 2 RFHD 2	RRH2RFHD2

See also the parameters, notes and examples table under "[Correction Port](#)" on page 2663.

Remote Command	<pre>[ :SENSe]:CCORrection:CSET:PORT CINPut   RFIN   RFIN2   AIQ   EMIXer   RFOut   RFIO1   RFIO2   RFIO3   RFIO4   RFHD   RFFD   ANT   GEN   TR   A1   A2   A3   B1   B2   B3   IFIO1   IFIO2   RRHnRFHD   ERFIN  [:SENSe]:CCORrection:CSET:PORT?</pre>
Example	<p>Select correction 2: :CCOR:CSET:SEL 2</p> <p>Set correction 2 to RFIN: :CCOR:CSET:PORT RFIN</p> <p>Set Correction 2 to Radio Head 1, RF Tx/Rx Port 2: :CCOR:CSET:PORT RRH1RFHD2</p>
Dependencies	<p><b>RFIN2</b>   <b>AIQ</b>   <b>EMIXer</b> are only available on C/E/M/P/UXA analyzers with the appropriate options loaded</p> <p><b>RFOut</b> is only available on modular products such as VXT</p> <p><b>ANT</b>, <b>GEN</b> and <b>TR</b> are only available in VXT and only when the M9470A module is installed, such as in the M8920A. Option "HDX" is required to enable the TR port</p> <p><b>RFHD</b> and <b>RFFD</b> are only available on VXT. Option HDX is required to enable RFHD port and Option FDX is required to enable RFFD port</p> <p><b>RFIO3</b> and <b>RFIO4</b> are only available on EXM with hardware M9431A</p> <p><b>RFIN</b> and <b>RFOut</b> are not available on EXM with hardware M9431A</p> <p><b>ERFIN</b> requires option "EXW"</p>
Preset	Not affected by Preset. Set to <b>CINPut</b> by <b>Restore Input/Output Defaults</b>
State Saved	Saved in State

### 6.5.7.6 Direction

Selects whether corrections will be applied when the device associated with the specified correction is being used as an input, an output or in both directions. The choices are:

**INPut**            Correct the port only when the port is used as an Input

	<b>OUTPut</b>	Correct the port only when the port is used as an Output
	<b>BOTH</b>	Correct the port when the port is used as either an Input or an Output (or both)
Remote Command	<code>[ :SENSe]:CCORrection:CSET:DIRection INPut   OUTPut   BOTH</code> <code>[ :SENSe]:CCORrection:CSET:DIRection?</code>	
Example	Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code>  Set correction 4 to Input: <code>:CCOR:CSET:DIR INP</code>	
Dependencies	For Inputs, the only choice is <b>INPut</b> , so an empty table cell is displayed. For Outputs, the only choice is <b>OUTPut</b> , so an empty table cell is displayed. If the SCPI command is sent while one of these ports is selected, it is accepted but ignored  For a port that can be either an Input or an Output (or both), such as RFHD, RFFD or T/R, all three choices are available	
Preset	Not affected by Preset. Set to <b>BOTH</b> by <b>Restore Input/Output Defaults</b>	
State Saved	Saved in State	
Backwards Compatibility SCPI	The following SCPI will result in the selection of <b>BOTH</b> (included for compatibility with early Multitouch implementations): <code>[ :SENSe]:CCORrection:CSET:DIRection BIDirectiona</code>	

### 6.5.7.7 Description

Shows the Description field for the selected Complex Correction. The Description field is loaded from the second line of the `.s2p` file. (Note that, if line 2 begins with “!”, the ! is not displayed in the Description field.)

Remote Command	<code>[ :SENSe]:CCORrection:CSET:DESCription "text"</code> <code>[ :SENSe]:CCORrection:CSET:DESCription?</code>	
Example	Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code>  <code>:CCOR:CSET:DESC "PNA data import 1-1-18"</code>	
Notes	45 chars max; may not fit on display if max chars used	
Preset	Unaffected by Preset. Set to empty by <b>Restore Input/Output Defaults</b>	
State Saved	Saved in instrument state	

### 6.5.7.8 Comment

Shows the Comment field for the selected Complex Correction. The Comment field is loaded from the third line of the `.s2p` file. (Note that, if line 3 begins with “!”, the ! is not displayed in the Comment field.)

6 Input/Output  
6.5 Corrections

Remote Command	<code>[ :SENSe]:CCORrection:CSET:COMMeNt "text"</code> <code>[ :SENSe]:CCORrection:CSET:COMMeNt?</code>
Example	Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code> <code>:CCOR:CSET:COMM "this is a comment"</code>
Notes	60 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

### 6.5.7.9 File

Shows the file from which the selected correction was loaded. If correction was loaded with a SCPI command (see ["Set Data \(Remote Command Only\)" on page 2680](#)) displays "(SCPI)". If no correction is loaded, displays "(No correction loaded)"

Notes	60 chars max; may not fit on display if max chars used
State Saved	Saved in instrument state

### 6.5.7.10 Freq Interpolation (Remote Command Only)

Controls how the correction values per-bucket are calculated. We interpolate between frequencies in either the logarithmic or linear scale.

This setting is handled and stored individually per correction set.

VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E only support Linear Interpolation.

See ["Interpolation" on page 2670](#) under Corrections.

Remote Command	<code>[ :SENSe]:CCORrection:CSET:X:SPACing LINear   LOGarithmic</code> <code>[ :SENSe]:CCORrection:CSET:X:SPACing?</code>
Example	Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code>  Set linear interpolation: <code>:CCOR:CSET:X:SPAC LIN</code>
Preset	Unaffected by Preset. Set to <b>LINear</b> by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

### 6.5.7.11 Set Data (Remote Command Only)

Lets you set the magnitude part of a complex correction's data via a SCPI command. This is provided for compatibility with the similar command for standard corrections, to allow you to use Complex Corrections as an extension to standard corrections.

Sending this command sets the phase part of the selected correction to 0 for all points.

The command takes an ASCII series of alternating frequency and amplitude points, each value separated by commas.

The values sent in the command will totally replace all existing correction points in the specified set.

A Complex Correction array can contain 30000 points maximum.

Remote Command	<code>[ :SENSe]:CCORrection:CSET:DATA &lt;freq&gt;, &lt;ampl&gt;, ...</code> <code>[ :SENSe]:CCORrection:DATA?</code>		
Example	<p>Firstly, select correction 4: <code>:CCOR:CSET:SEL 4</code></p> <p>This defines two correction points at (10 MHz, -1.0 dB) and (20 MHz, 1.0 dB) for correction set 4: <code>:CCOR:CSET:DATA 10000000,-1.0,20000000,1.0</code></p>		
Preset	Empty after <b>Restore Input/Output Defaults</b> . Survives a shutdown or restart of instrument application (including a power cycle)		
State Saved	Saved in instrument state		
Min/Max		<b>Min</b>	<b>Max</b>
	Freq	0 Hz	1 THz
	Amptd	-1000 dBm	+1000 dBm


## 6.5.8 Apply Corrections

When you turn on Apply Corrections, all of the Corrections that are turned On are applied to the measured data. When you turn off Apply Corrections, no Corrections are applied, even if they are turned On.

With this switch you can turn the entire Corrections system on and off without affecting the settings of any individual Corrections. Turning Apply Corrections On and Off has no effect on the On/Off switches under the individual Corrections.

6 Input/Output  
6.5 Corrections

Apply Corrections affects both normal Corrections and Complex Corrections. Normal Corrections are turned On and Off using the Correction switch under Select Correction:

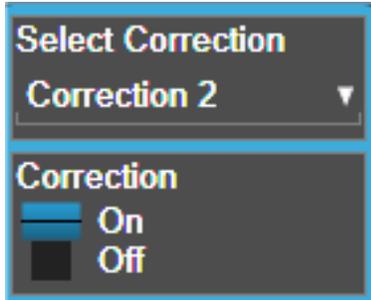

Complex Corrections are turned On and Off using the checkboxes in the Complex Corrections dialog:

Correction	On	Port	Direction	
1	<input checked="" type="checkbox"/>	Current Input	Input	D
2	<input type="checkbox"/>	Current Input	Input	

See "[Correction On/Off](#)" on page 2663) and "[Complex Corrections](#)" on page 2674.

Remote Command	<code>[ :SENSe]:CORRection:CSET:ALL[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:CSET:ALL[:STATe]?</code>
Example	<code>:SENS:CORR:CSET:ALL OFF</code> This command makes sure that no amplitude corrections are applied, regardless of their individual on/off settings
Couplings	Whenever you turn on any Correction or Complex Correction, <b>Apply Corrections</b> is automatically set to <b>ON</b>
Preset	Not affected by Preset. Set to <b>OFF</b> by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state
Annunciation	When <b>ON</b> , 'CORREC' appears in the Meas Bar as long as at least one of the individual corrections is enabled

### 6.5.9 Delete All Corrections

Erases all correction values for all Amplitude Correction sets and Complex Corrections.

When this key is pressed a prompt is placed on the screen that says “Please press Enter or OK key to delete all corrections. Press ESC or Cancel to close this dialog.” The deletion is only performed if you press **OK** or **Enter**.

Remote Command	<code>[:SENSe]:CORRection:CSET:ALL:DELeTe</code>
----------------	--

Example	<code>:CORR:CSET:ALL:DEL</code>
---------	---------------------------------

### 6.5.10 Correction Group On/Off

Turns the Correction Group on and off. The Correction Group allow you to preload Correction files and associate them with specific frequency ranges, so that they can be switched in and out during a sweep at the appropriate frequencies. Use the control “Edit Correction Group” below to set up your Correction Group.

The state of each Correction will be set dynamically depending on the active measurement frequency. Only the correction selected for the range that matches the active measurement frequency will be turned on, and vice versa.

Note that the Corrections in the Correction Group, although they are loaded into memory, are independent of the main Correction registers at the top of the Corrections menu, and will not display under the Select Correction, Correction On/Off or Edit Correction functions.

Remote Command	<code>[:SENSe]:CORRection:CSET:GRoup[:STATe] ON   OFF   1   0</code> <code>[:SENSe]:CORRection:CSET:GRoup[:STATe]?</code>
----------------	--

Example	<code>:SENS:CORR:CSET:GRO ON</code>
---------	-------------------------------------

Dependencies	Correction group is supported in EMI Receiver Mode, and in Spectrum Analyzer Mode if option EMC or EMI Receiver Mode is present. If you switch to other measurements or modes, correction group is turned off and the Correction Group functions are not visible
--------------	--

Couplings	When on, Correction 1 through 8 is set to <b>OFF</b> and the correction on/off state keys are grayed out. If the grayed-out key is pressed, it generates an advisory message. If sending the SCPI to turn it on, this same message is generated as part of Settings conflict
-----------	--

Preset	Not affected by Preset. Set to <b>OFF</b> by <b>Restore Input/Output Defaults</b>
--------	---


State Saved	Saved in instrument state
-------------	---------------------------

### 6.5.11 Break

If break is turned on, the scan or sweep will be paused when it reaches the boundary of correction group ranges. At the same time, a window at the size of ~ 6.5cm x 3.5 cm is prompt at the upper right-hand corner of the graticule.


When running Frequency Scan measurement of Emi Receiver application, the message prompt is like below. You are given the option to resume the scan or stop the scan.

6 Input/Output  
6.5 Corrections

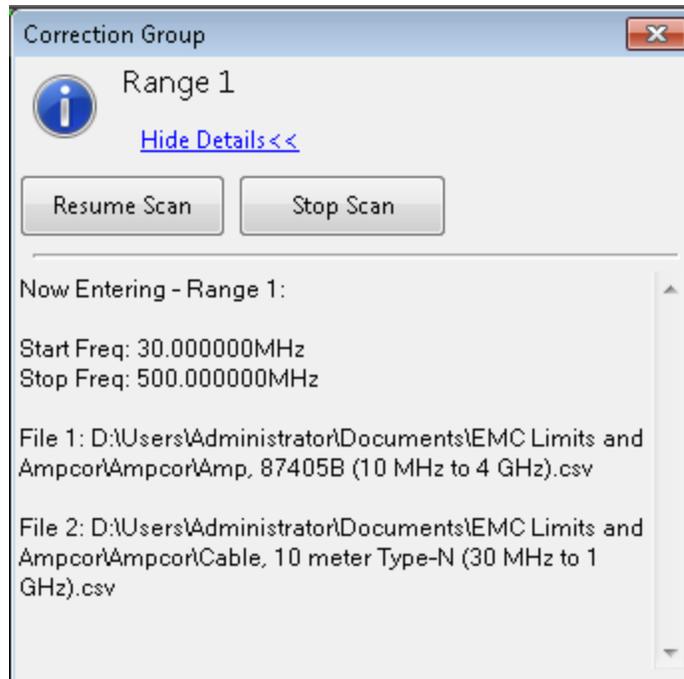

When running the Swept SA measurement in Spectrum Analyzer Mode, the message prompt is as below. You are given the option to resume the sweep or turn off the break. If in Continuous sweep, the sweep will resume after the break is turned off.



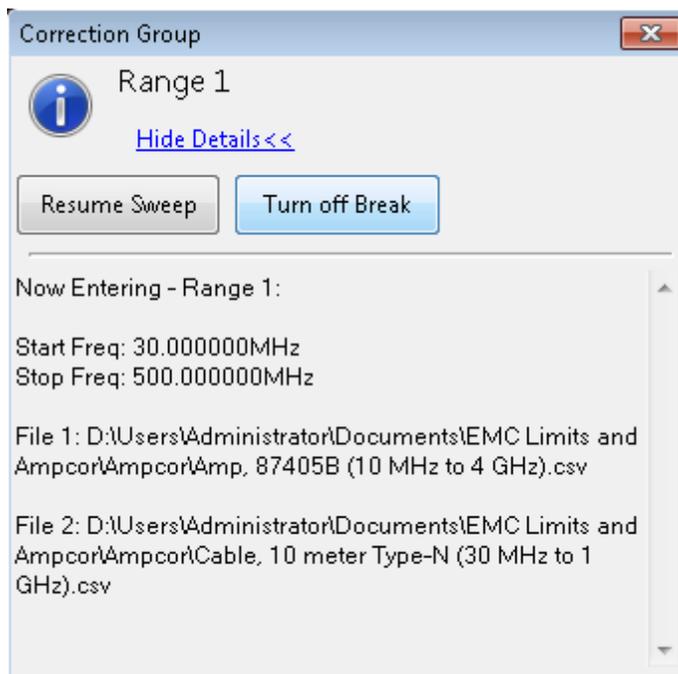

Remote Command	<code>[ :SENSe]:CORRection:CSET:GROup:BRake ON   OFF   1   0</code> <code>[ :SENSe]:CORRection:CSET:GROup:BRake?</code>
Example	<code>:SENS:CORR:CSET:GRO:BR ON</code>
Notes	<p>When running the Frequency Scan measurement in EMI Receiver Mode, if break is turned on when a SCPI is sent to start the scan, the scan pauses when it reaches the boundary of correction group ranges. Bit 8 (Paused) of status operation register is set to true. To resume, send <code>:INITiate2:RESume</code>. To stop the scan, send <code>:ABORT</code></p> <p>When running the Swept SA measurement in Spectrum Analyzer Mode, the break state does not affect the operation of sweep when SCPI to control the sweep is sent. Instead, the SCPI commands close the message prompt if it is showing at the point the commands are sent, and the break is turned off. The SCPI includes:</p> <p><code>:INITiate:IMMEdiate</code> <code>:INITiate:REStart</code> <code>:INITiate:CONTinuous ON   OFF   1   0</code> <code>:ABORT</code></p>
Dependencies	Correction group is supported in EMI Receiver Mode, and in Spectrum Analyzer Mode if option EMC or EMI Receiver mode is present. If you switch to other measurements or modes, correction group is turned off and the Correction Group functions (like Break) are not visible
Preset	Not affected by Preset. Set to <b>OFF</b> by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

## 6.5.12 Reload Corrections From Files

Because the Correction data for the Correction Group is loaded into memory from Correction files at the time the Group is defined, it will be necessary to reload some or all of the data if any of the files changes. This function reloads all of the correction data from all of the correction files defined in all of the ranges in the Correction Group.

Remote Command	<code>[ :SENSe ] :CORRection:CSET:GROup:RELoad</code>
Example	<code>:MMEM:STOR:CORR:GRO:REL</code>
Notes	If invalid data is found in the files, the correction group will be set to off, and an Execution error is generated. Error icon appears on the status column correction group table
Dependencies	Correction group is supported in EMI Receiver Mode, and in Spectrum Analyzer mode if option EMC or EMI Receiver Mode is present. If you switch to other measurements or modes, correction group is turned off and the Correction Group functions (like Reload Correction From File) are not visible
Annotation	If reload fails, error icons appear in the status column of correction group editor for the range that has the error

## 6.5.13 Edit Correction Group

Opens the Table Editor for the correction group. The content of correction group table including the correction data loaded from the files is not affected by Preset, and it survives power cycle. You can set it to empty with **Restore Input/Output Defaults**.

Dependencies	Correction group is supported in EMI Receiver Mode, and in Spectrum Analyzer Mode if option EMC or EMI Receiver Mode is present. If you switch to other measurements or modes, correction group is turned off and the Correction Group functions (like Edit Correction Group) are not visible
--------------	---

### 6.5.13.1 Go to Row

Lets you move through the table to edit the desired point.

Min	1
Max	2000

### 6.5.13.2 Insert Row Below

Inserts a point below the current point. The new point starts from the current range stop frequency and becomes the current point. The new point is not yet entered into the underlying table, and the data in the row is displayed in light gray.

### 6.5.13.3 Delete Row

Deletes the currently-selected point, whether or not that point is being edited, and selects the Navigate functionality. The point following the currently-selected point (or the point preceding if there is none) will be selected.

### 6.5.13.4 Select File

Indicate the correction files in which the specify file and remove file operations will take effect.

---

Preset	Unaffected by a Preset. Set to empty by <b>Restore Input/Output Defaults</b>
--------	--

### 6.5.13.5 Specify File

Displays the file browsing menu. When a file is selected, correction data will be loaded from the file. The correction data remains until the file is removed or the range is deleted.

---

Notes	<p>If the file is empty, error -250 is reported. If the file does not exist error -256 is reported. If there is a mismatch of data type, error -250 is reported</p> <p>Only one file with antenna unit can be supported per range. If you try to add another file which contains an antenna unit, a Mass Storage error is generated</p> <p>All ranges have to use a common antenna unit. If you try to add a correction file that contains a different antenna unit, a Mass Storage error is generated</p> <p>If you try to add a correction file that contains data that does not cover the range frequency, the file cannot be added, and an Execution error is generated</p>
-------	---

### 6.5.13.6 Remove File

Removes the selected file. When a file is removed, correction data for that file will be removed as well.

---

Dependencies	The key is grayed-out if there the file has not been specified. If the grayed-out key is pressed, an advisory message is generated
--------------	--

### 6.5.13.7 Correction Trace Display

Enables you to view the correction traces of all corrections that are added to the range currently selected. A 2-column table in the function of frequency and the accumulated amplitude correction is displayed at the left pane.

Preset	OFF
State Saved	Saved in instrument state

### 6.5.13.8 Description

Provides a description of up to 60 characters by which you can easily identify the correction group. The descriptions will be stored in the exported file and can be displayed in the active function area by selecting them as the active function, if desired to be in a saved screen dump.

Remote Command	<code>[ :SENSe]:CORRection:CSET:GROup:DESCription "text"</code>
Example	<code>:CORR:CSET:GRO:DESC "Radiated Setup"</code>
Notes	60 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

### 6.5.13.9 Comment

Provides a comment of up to 60 characters by which you can easily identify the correction group. The comments will be stored in the exported file and can be displayed in the active function area by selecting them as the active function, if desired to be in a saved screen dump.

Remote Command	<code>[ :SENSe]:CORRection:CSET:GROup:COMMeNt "text"</code>
Example	<code>:CORR:CSET:GRO:COMM "For internal only"</code>
Notes	60 chars max; may not fit on display if max chars used
Preset	Unaffected by Preset. Set to empty by <b>Restore Input/Output Defaults</b>
State Saved	Saved in instrument state

### 6.5.13.10 Start Frequency

Touching a **Start Frequency** value makes the touched row the current row and lets you edit the start frequency.

Notes	You cannot set the Start Frequency to a value greater than Stop Frequency or equal to Stop Frequency. You cannot set the Start Frequency to a value that would create a span of less than 10 Hz. If you try to do any of these, the Stop Frequency will change to maintain a minimum span of 10 Hz If you change the Start Frequency of the selected range to a value smaller than the previous range's Stop Frequency, the Stop Frequency of the previous range will be changed to the same value
-------	---

	If you change the Start Frequency of the selected range to a value out of the correction data frequency range, an error icon appears on the status column and an Execution error is generated
Preset	Unaffected by Preset. Set to empty by <b>Restore Input/Output Defaults</b>
Min	0
Max	1 THz

### 6.5.13.11 Stop Frequency

Touching a **Stop Frequency** value makes the touched row the current row and lets you edit the stop frequency.

Notes	You cannot set the Stop Frequency to a value greater than Start Frequency or smaller than Start Frequency. You cannot set the Stop Frequency to a value that would create a span of less than 10 Hz. If you try to do any of these, the Start Frequency will change to maintain a minimum span of 10 Hz If you change the Stop Frequency of the selected range to a value greater the next range's Start Frequency, the Start Frequency of the next range will be changed to the same value If you change the Stop Frequency of the selected range to a value out of the correction data frequency range, an error icon appears on the status column and an Execution error is generated
Preset	Unaffected by Preset. Set to empty by <b>Restore Input/Output Defaults</b>
Min	0
Max	1 THz

### 6.5.14 Merge Correction Data (Remote Command Only)

Accepts an ASCII series of alternating frequency and amplitude points, each value separated by commas. The difference between this command and **Set Data** is that this merges new correction points into an existing set.

If any new point has the same frequency as an existing correction point, the existing point's amplitude is replaced by that of the new point.

An Ampcor array can contain 2000 total points, maximum.

Remote Command	<code>[[:SENSE]:CORRection:CSET[1] 2 ... 16:DATA:MERGe &lt;freq&gt;, &lt;ampl&gt;, ...</code>
Example	<code>:CORR:CSET1:DATA:MERGE 15000000,-5.0,25000000,5.0</code> This adds two correction points at (15 MHz, -5.0 dB) and (25 MHz, 5.0 dB) to whatever values already exist in correction set 1
Preset	Empty after <b>Restore Input/Output Defaults</b> . Survives shutdown/restart of instrument application (including power cycle)

Min/Max	Min	Max
Freq	0 Hz	1 THz
Amptd	-1000 dBm	+1000 dBm

### 6.5.15 Set (Replace) Data (Remote Command Only)

Accepts an ASCII series of alternating frequency and amplitude points, each value separated by commas.

The values sent in the command totally replace all existing correction points in the specified set.

An Ampcor array can contain 2000 points maximum.

Remote Command	<code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:DATA &lt;freq&gt;, &lt;amp1&gt;, ...</code> <code>[ :SENSe]:CORRection:CSET[1] 2 ... 16:DATA?</code>
Example	<code>:CORR:CSET1:DATA 10000000,-1.0,20000000,1.0</code> This defines two correction points at (10 MHz, -1.0 dB) and (20 MHz, 1.0 dB) for correction set 1
Preset	Empty after <b>Restore Input/Output Defaults</b> . Survives a shutdown or restart of instrument application (including a power cycle)
State Saved	Saved in instrument state
Min	Freq: 0 Hz Amptd: -1000 dBm
Max	Freq: 1 THz Amptd: +1000 dBm

### 6.5.16 Correction Group Range Data (Remote Command Only)

Accepts an ASCII series of alternating start frequency, stop frequency and file names, each value separated by commas.

The values sent in the command replace the content of correction group.

The default path for CSV files is:

`D:\My Documents\amplitudeCorrections\`

Remote Command	<code>[ :SENSe]:CORRection:CSET:GR0up[1] 2 ... 10:DATA &lt;startFreq&gt;,&lt;stopFreq&gt;,&lt;filename1&gt;,&lt;filename2&gt;,...,&lt;filename8&gt;</code> See Notes below for explanation of the <filenameN> parameters <code>[ :SENSe]:CORRection:CSET:GR0up[1] 2 ... 10:DATA?</code>
----------------	---

Example	<code>:CORR:CSET:GRO:DATA 10000000,20000000,"myAmpcor.csv"</code>  <code>myAmpcor.csv</code> refers to the Amplitude Correction data from the file <code>myAmpcor.csv</code> in the default path
Notes	<code>&lt;filename&gt;</code> is the string containing the path of the correction files <code>&lt;filename2&gt;</code> , <code>&lt;filename3&gt;</code> , <code>&lt;filename4&gt;</code> , <code>&lt;filename5&gt;</code> , <code>&lt;filename6&gt;</code> , <code>&lt;filename7&gt;</code> , <code>&lt;filename8&gt;</code> are optional. You can define only <code>&lt;filename1&gt;</code> . The file name defined is added to corresponding File keys based on the sequence sent in the command. File keys with no file name set in the SCPI will be emptied Data for ranges 1 to 10 must be set in ascending order. If you try to set the data for a correction group range that is not connecting to the range currently available, a Data out of range error is generated If the file defined in data is empty, error -250 is reported. If the file does not exist, error -256 is reported. If there is a mismatch of data type, error -250 is reported Only one file with antenna unit can be supported per range. If you try to add another file that contains an antenna unit, a Mass Storage error is generated All ranges have to use a common antenna unit. If you try to add a correction file that contains a different antenna unit, a Mass Storage error is generated
Preset	Reset to Not a Number (9.91e+37) for frequencies and "" for File 1 through File 8 after <b>Restore Input/Output Defaults</b> . Survives a shutdown or restart of instrument application (including a power cycle)
State Saved	Saved in instrument state
Min	Start Freq and Stop Freq: 0 Hz
Max	Start Freq and Stop Freq:1 THz

### 6.5.17 Delete Correction Group Range (Remote Command Only)

Deletes all range values of corrections Group.

Remote Command	<code>[ :SENSe ] :CORRection:CSET:GROup:DELeTe</code>
Example	<code>:CORR:CSET:GRO:DEL</code>
Notes	Sending this command when no range is defined in table is accepted without error

## 6.6 Freq Ref Input

Lets you configure the External Frequency Reference input on the rear panel.

### 6.6.1 Freq Ref Input

Specifies the frequency reference as being the internal reference, an external reference at the rear panel input labeled EXT REF IN, a 1 pulse per second signal at the EXT REF IN input, or automatically sensing the appropriate reference.

See "[More Information](#)" on page 2693

Remote Command	<code>[ :SENSe ]:ROSCillator:SOURce:TYPE INTernal   EXTernal   SENSe   PULSe</code> <code>[ :SENSe ]:ROSCillator:SOURce:TYPE?</code>
Example	<code>:ROSC:SOUR:TYPE SENS</code> <code>:ROSC:SOUR:TYPE INT</code> <code>:ROSC:SOUR:TYPE EXT</code> <code>:ROSC:SOUR:TYPE PULS</code>
Dependencies	The <b>PULSe</b> parameter, and support of the 1 pps signal at the EXT REF IN input, are not available in some models. If not available, the choice does not appear, and sending the <b>PULSe</b> parameter via SCPI generates an error  For VXT models M9420A/10A/11A/15A and M9410E/11E/15E/16E the only available selection is <b>EXTernal1</b> , unless M9420A/10A/11A/15A is configured in MIMO mode as Primary module. If configured in MIMO mode as Primary module, the available selection is <b>INTernal   EXTernal   SENSe</b>  For EXM the only available selections are <b>INTernal   EXTernal   SENSe</b>  For E7760B and M8920A/20B the only available selections are <b>INTernal   EXTernal</b>  Not available in UXM
Preset	Unaffected by Preset, but set to <b>EXTernal</b> in VXT models M9420A/10A/11A/15A, <b>INTernal</b> for E7760B, and <b>SENSe</b> for other models, by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in instrument state
Annunciation	In the Meas Bar:  If you set this to Internal and no external reference is plugged in: Freq Ref: Internal  If you set this to Internal and an external reference between 1 and 50 MHz, or a 1 pps signal, IS plugged in: Freq Ref: Internal (in amber, as a warning sign)  If you set this to External and an External Reference between 1 and 50 MHz is plugged in: Freq Ref: External

---

	<p>If you set this to External and no External Reference is sensed: Freq Ref: External (in amber, as a warning sign) When set to Pulse and a 1 pps signal is plugged in: Freq Ref: Pulse If you set this to Pulse and no Pulse Reference is sensed: Freq Ref: Pulse (in amber, as a warning sign) When set to Sense and neither a signal between 1 and 50 MHz nor a 1 pps signal is detected at the EXT REF IN input, "Sense:Int" is displayed: Freq Ref: Sense,Int When set to Sense and a signal within 5 ppm of the External Ref Freq (as set on the Ext Ref Freq control) is detected at the EXT REF IN input: Freq Ref: Sense,Ext When set to Sense and a 1 pps signal is detected at the EXT REF IN input, "Sense:Pulse" is displayed: Freq Ref: Sense,Pls</p>
Status Bits/OPC dependencies	<p><b>STATUS:QUESTIONABLE:FREQUENCY</b> bit 1 set if unlocked Note: In EXM, the status bit is not set for non-controlling instances. To determine if the frequency reference is unlocked, the controlling instance must be queried</p>
Backwards Compatibility Notes	<p>Freq Ref In was not saved in state in the legacy instruments. It is part of state in the X-Series</p>
Remote Query	
Remote Command	<p><b>[ :SENSe ] :ROSCillator :SOURce?</b></p>
Notes	<p>Returns the current switch setting. This means:</p> <ol style="list-style-type: none"> <li>1. If it was set to <b>SENSe</b> but there is no external reference nor 1 pps signal, so the instrument is actually using the internal reference, then this query returns <b>INTernal1</b>, not <b>SENSe</b></li> <li>2. If it was set to <b>SENSe</b> and there is an external reference present, the query returns <b>EXTernal1</b>, not <b>SENSe</b></li> <li>3. If it was set to <b>SENSe</b> and there is a 1 pps signal present, the query returns <b>PULSe</b>, not <b>SENSe</b></li> <li>4. If it was set to <b>EXTernal1</b>, then the query returns <b>EXTernal1</b></li> <li>5. If it was set to <b>INTernal1</b>, then the query returns <b>INTernal1</b></li> <li>6. If it was set to <b>PULSe</b>, then the query returns <b>PULSe</b></li> </ol> <p>Note: In EXM, the SCPI query always returns <b>INTernal1</b> for non-controlling instances</p>
Preset	<p>For VXT models M9420A/10A/11A/15A: <b>EXTernal1</b> For E7760B, M8920A/20B: <b>INTernal1</b> All other models: <b>SENSe</b></p>
Backwards	<p><b>[ :SENSe ] :ROSCillator :SOURce?</b> was query-only in ESA which always returned whichever</p>

## 6 Input/Output

### 6.6 Freq Ref Input

---

Compatibility Notes	reference the instrument was using. The instrument automatically switched to the ext ref if it was present  In PSA (which had no sensing), [:SENSe]:ROSCillator:SOURce set the reference (INT or EXT), so again its query returned the actual routing  Thus, the query is 100% backwards compatible with both instruments  Backwards Compatibility Command
Notes	For PSA compatibility the command form is provided and is directly mapped to [:SENSe]:ROSCillator:SOURce:TYPE  Note: In EXM, the command does nothing for non-controlling instances
Backwards Compatibility SCPI	[:SENSe]:ROSCillator:SOURce INTERNAL   EXTERNAL

---

### More Information

When the frequency reference is set to internal, the internal 10 MHz reference is used even if an external reference is connected.

When the frequency reference is set to external, the instrument will use the external reference. However, if there is no external signal present, or it is not within the proper amplitude range, a condition error message is generated. When the external signal becomes valid, the error is cleared.

When the frequency reference is set to Pulse, the instrument expects a 1 pulse per second signal at the EXT REF IN input. The instrument uses this signal to adjust the frequency of the internal reference.

If Sense is selected, the instrument checks whether a signal is present at the external reference connector. If it senses a signal within 5 ppm of the External Ref Freq (as set on the **External Ref Freq** control), it will automatically switch to the external reference. If it senses a 1 pulse per second signal, it enters Pulse mode, wherein the signal is used to adjust the internal reference. When no signal is present, it automatically switches to the internal reference. No message is generated as the reference switches between pulse, external and internal. The monitoring of the external reference occurs approximately on 1 millisecond intervals, and never occurs in the middle of a measurement acquisition, only at the end of the measurement (end of the request).

If for any reason the instrument's frequency reference is not able to obtain lock, Status bit 1 in the Questionable Frequency register will be true and a condition error message is generated. When lock is regained, Status bit 1 in the Questionable Frequency register will be cleared and the condition error will be cleared.

If an external frequency reference is being used, you must enter the frequency of the external reference if it is not exactly 10 MHz. The **External Ref Freq** key is provided for this purpose.

For VXT models M9420A/10A/11A/15A, there is no internal frequency reference. To work correctly, a 100MHz external frequency reference signal is needed to connect to the front panel of the module. The default Freq Ref In setting is “External” and it cannot be set to any other types.

For VXT models M9410A/11A, External Freq Ref Input controls the “100 MHz In” port on the front panel. For VXT models M9415A/16A, External Freq Ref Input controls the “REF In” port on the front panel. For M941xE, the External Freq Ref Input is the reference in port on M941xA module.

**NOTE**

In EXM, a common frequency reference module serves all instrument instances, but only one instance of the software application can change the reference input type (INT or EXT or SENSE). The software application allowed to change the reference input is called the primary or controlling instance; by default, the leftmost instrument instance is the controlling instance. This can be changed in the config file “[E66XXModules.config](#)” located in the folder [E:\Keysight\Instrument](#). For the non-controlling instance(s) the reference input types (in SCPI commands, and in the Virtual Front Panel menus) are blanked and unavailable for use.

---

## Sense

If **Sense** is selected, the instrument checks whether a signal is present at the external reference connector. If it senses a signal within 5 ppm of the External Ref Freq (as set by **External Ref Freq**), it uses this signal as an External Reference. If it senses a 1 pulse per second signal, it uses this signal to adjust the internal reference by adjusting the User setting of the Timebase DAC. When no signal is present, it automatically switches to the internal reference.

If set to **SENSe** and the instrument senses a 1 pulse per second signal, it sets the **System, Alignments, Timebase DAC** setting to **User**. This setting survives Preset and Power Cycle but is set to **Calibrated** by **System, Restore Defaults, Align** or **System, Restore Defaults, All**

## Internal

The internal reference is used. A 1 pps signal at the EXT REF IN port, or a signal there between 1 and 50 MHz, causes a warning triangle to appear in the settings panel next to the word “INTERNAL”, but will otherwise be ignored.

## External

The external reference is used.

## Pulse

The internal reference continues to be the frequency reference for the instrument in that it determines the reference contribution to the phase noise, but its average frequency is adjusted to follow the 1 pps signal at the EXT REF IN input. Therefore, the instrument frequency accuracy will be dominated by the aging rate of the 1 pps signal instead of the aging rate of the internal reference, except during the time it takes to lock to a new 1 pps signal, approximately 10 minutes.

Sets the System, Alignments, Timebase DAC setting to “User”. This setting survives Preset and Power Cycle, but it set to “Calibrated” on a System, Restore Defaults, Align or a System, Restore Defaults, All

When a 1 pps signal is present at the EXT REF IN input, and either **Pulse** or **Sense** is selected, the internal reference frequency is affected by this signal; in effect, it “learns” a new accuracy setting. This setting can be seen by going to the **System, Alignments, Timebase Dac** menu, and looking at the **User** key in that menu. You will note that User has become automatically selected, and that the value shown on the **User** key is the updated value of the timebase DAC as “learned” from the 1 pps signal. Note that this replaces any value the user might have previously set on this key.

Once the setting is learned the user may remove the 1 pps signal; the User setting for the Timebase DAC is retained until you manually select “Calibrated” or execute a System, Restore Defaults, Align or a System, Restore Defaults, All. If you want to make the User setting permanent there is information in the Service Guide that tells you how to change the Calibrated setting of the Timebase DAC.

Note also that if the 1 pps signal is removed when Sense is selected, the instrument will simply switch to the normal state of the Internal reference and display SENSE:INT in the Settings Panel. However, if the 1 pps signal is removed when Pulse is selected, the instrument will generate an error

The J7203A Atomic Frequency Reference is an accessory for the X-Series Signal Analyzer that provides a highly accurate 1 pps timebase to use in conjunction with the Pulse setting. With the J7203A, the 1 pps signal is guaranteed to meet the input requirements of the EXT REF IN port, and the improved accuracy of the instrument’s internal frequency reference is specified. This is the only 1 pps signal that is guaranteed to function properly with the X-Series.

## 6.6.2 Ext Ref Freq

This key tells the instrument the frequency of the external reference. When the external reference is in use (either because the reference has been switched to External or because the Reference has been switched to Sense and there is a valid external reference present) this information is used by the instrument to determine the internal settings needed to lock to that particular external reference signal.

For the instrument to stay locked, the value entered must be within 5 ppm of the actual external reference frequency. So, it is important to get it close, or you risk an unlock condition.

Note that this value only affects the instrument's ability to lock. It does not affect any calculations or measurement results. See "Freq Offset" in the Frequency section for information on how to offset frequency values.

Remote Command	<code>[ :SENSe]:ROSCillator:EXTernal:FREQuency &lt;freq&gt;</code> <code>[ :SENSe]:ROSCillator:EXTernal:FREQuency?</code>
Example	Set the external reference frequency to 20 MHz, but does not select the external reference: <code>:ROSC:EXT:FREQ 20 MHz</code>  Select the external reference: <code>:ROSC:SOUR:TYPE EXT</code>
Dependencies	Still available with Internal or Pulse selected, to allow setup for when External is in use. However, the setting has no effect if the Internal Reference is in use (Freq Ref In set to Internal, Pulse, or SENSE:INT or SENSE:PULSE)  Not available in UXM  For VXT models M9420A/10A/11A/15A/16A and M9410E/11E/15E/16E: only 100 MHz is available
Preset	Unaffected by <b>Mode Preset</b> , <b>Input/Output Preset</b> , or <b>Restore Defaults, Input/Output</b> , but set to 100 MHz for VXT models and 10 MHz for other models, by <b>Restore Defaults, Misc</b> , or <b>Restore Defaults, All</b> , or <b>Default External Ref Freq</b>
State Saved	Power On Persistent (survives power cycle)
Min/Max	See " <a href="#">Minimum &amp; Maximum Values</a> " on page 2696

### Minimum & Maximum Values

Model	Min	Max
CXA, N897xB, E7760B, M8920A/20B, CXA-m	10 MHz	10 MHz
EXA without option R13	10 MHz	10 MHz
EXA with option R13	10 MHz	20 MHz
MXA, PXA, EXM	10 MHz	50 MHz

6 Input/Output  
6.6 Freq Ref Input

Model	Min	Max
VXT models	100 MHz	100 MHz
M9410E/11E/15E/16E	100 MHz	100 MHz
All other models	1 MHz	100 MHz

### 6.6.3 Default External Ref Freq

Restores the External Ref Freq to its default of 10 MHz.

When you set an External Ref Freq value with the **Ext Ref Freq** control, that Frequency is persistent; is not affected by Mode Preset or Input/Output Preset, and survives shutdown and power cycle. This control allows you to reset the External Ref Freq to its default value.

**NOTE**

The persistence of the External Ref Freq is a new behavior as of firmware version A.18.00, necessitating the addition of this control. In versions before A.18.00, the frequency reset on a power cycle/restart. Thus, you may need to use this command to retain backwards compatibility.

Remote Command	<code>[ :SENSe ]:ROSCillator:EXTernal:FREQuency:DEFault</code>
Example	<code>:ROSC:EXT:FREQ:DEF</code> resets the external ref frequency
Notes	Command only; no query
Dependencies	Grayed-out if the Ext Ref Freq is already set to the default Does not appear in EXM, UXM, VXT models or M8920A/20B

### 6.6.4 LO Ref Input

This parameter sets the LO Reference signal Input to External or Internal.

Remote Command	<code>[ :SENSe ]:ROSCillator:LO:INPut INTernal   EXTernal</code> See " <a href="#">Option Details</a> " on page 2698 <code>[ :SENSe ]:ROSCillator:LO:INPut?</code>
Example	<code>:ROSC:LO:INP EXT</code> <code>:ROSC:LO:INP?</code>
Dependencies	Only available in VXT models M9410A/11A/15A/16A when MIMO is on
Preset	<code>INTernal</code>
State Saved	Saved in instrument state

### Option Details

Parameter	SCPI	Notes
Internal	<code>INTernal</code>	When Internal is selected, internal reference signal will be used to synchronize the LO board
External	<code>EXTernal</code>	When External is selected, external reference signal will be used to synchronize the LO board. Route the correct reference signal to the specified port before changing the LO Ref Input to External For VXT models M9410A/11A, a 4.8 GHz reference signal is required to rout to the 4.8 GHz In port

### 6.6.5 Ref Lock BW

Lets you adjust the Frequency Reference phase lock bandwidth. This control is available in some models of the X-Series.

It is possible to improve the phase noise of the instrument by several dB, even tens of dB, by using an external reference with excellent phase noise. When an external reference is used the instrument's close-in phase noise improves to match that of the reference.

Normally a narrow loop bandwidth is used to phase lock to the external reference. However, the Ref Lock BW control allows you to choose a wider loop bandwidth to reduce the phase noise at low offset frequencies, especially 4 to 400 Hz offset. The Wide setting represents about a 60 Hz loop bandwidth, the Narrow setting about 15 Hz.

When using an external reference with superior phase noise, Keysight recommends setting the external reference phase-locked-loop bandwidth to Wide to take advantage of that superior performance.

When using an external reference with inferior phase noise performance, Keysight recommends setting the bandwidth to Narrow.

In these relationships, inferior and superior phase noise are with respect to  $-134$  dBc/Hz at 30 Hz offset from a 10 MHz reference. Because most reference sources have phase noise behavior that falls off at a rate of 30 dB/decade, this is usually equivalent to  $-120$  dBc/Hz at 10 Hz offset.

In instruments with EP1 or EP2, this control only affects the external reference loop bandwidth. In instruments with EP0, this control also affects the loop bandwidth used when the Internal reference is selected (reference set manually to Internal or Pulse, or set to Sense and set by sensing to Internal or Pulse).

---

Remote Command `[:SENSe]:ROSCillator:BANDwidth WIDE | NARRow`  
`[:SENSe]:ROSCillator:BANDwidth?`

6 Input/Output  
6.6 Freq Ref Input

Example	<code>:ROSC:BAND WIDE</code>
Dependencies	In instruments with EP1 or EP2: the control is available (not grayed-out) even with Internal or Pulse selected, to allow setup for when External is in use. However, the setting has no effect if the Internal Reference is in use Only appears in instruments equipped with the required hardware Does not appear in EXM, UXM, VXT models, or E7760B
Preset	Unaffected by Preset, but set to <b>NARRow</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults -&gt; All</b>
State Saved	Saved in Input/Output state

### 6.6.6 Reference Oscillator On/Off (Remote Command Only)

Provided for PSA code compatibility.

In PSA it turned the Reference Oscillator on and off, however in the X-Series the reference oscillator cannot be turned off, so no hardware is affected when it is received.

If queried it returns the state you set with the command, but note that this does not necessarily reflect the actual state of the Reference Oscillator, which is always **ON**.

Example	<code>:ROSCillator:OUTP ON</code>
Preset	Unaffected by Preset, but set to <b>ON</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults -&gt; All</b>
Backwards Compatibility SCPI	<code>[ :SENSe]:ROSCillator:OUTPut[:STATe] ON   OFF   1   0</code> <code>[ :SENSe]:ROSCillator:OUTPut[:STATe]?</code>

#### 6.6.6.1 Select Ref

Lets you select the reference model to control.

The reference status is not saved in a state file, because Reference is a standard alone module.

Remote Command	<code>[ :SENSe]:ROSCillator:PXIReference:SElect NONE   M9300a</code> <code>[ :SENSe]:ROSCillator:PXIReference:SElect?</code>
Example	<code>:ROSC:PXIR:SEL M9300</code> <code>:ROSC:PXIR:SEL?</code>
Dependencies	Only Keysight M9300A Frequency Reference is supported
State Saved	No

### 6.6.6.2 Freq Ref In

Specifies the frequency reference as being the internal reference, an external reference at the front panel input labeled **Ref In**.

Remote Command	<code>[ :SENSe]:ROSCillator:PXIReference:SOURce INTernal   EXTernal</code> <code>[ :SENSe]:ROSCillator:PXIReference:SOURce?</code>
Example	<code>:ROSC:PXIR:SOUR INT</code> <code>:ROSC:PXIR:SOUR?</code>
Dependencies	Only available when <b>Select Ref</b> is not <b>NONE</b>
Preset	<b>INTernal</b>
State Saved	Saved in instrument state

### 6.6.6.3 External Freq Ref

Tells the PXIe Ref module the frequency of the external reference. When the external reference is in use this information is used by the Ref module to determine the internal settings needed to lock to that particular external reference signal.

For the instrument to stay locked, the value entered must be within 5 ppm of the actual external reference frequency. So, it is important to get it close, or you risk an unlock condition.

Remote Command	<code>[ :SENSe]:ROSCillator:PXIReference:EXTernal:FREQuency &lt;freq&gt;</code> <code>[ :SENSe]:ROSCillator:PXIReference:EXTernal:FREQuency?</code>
Example	Set the external reference frequency to 20 MHz, but does not select the external reference: <code>:ROSC:PXIR:EXT:FREQ 20 MHz</code>  Select the external reference: <code>:ROSC:PXIR:SOUR EXT</code>
Dependencies	Only available when <b>Select Ref</b> is not <b>NONE</b>
Preset	10 MHz
State Saved	Yes
Min	1 MHz
Max	110 MHz

### 6.6.6.4 Ext Ref Locked (Remote Query Only)

Returns the External Reference locked status

Remote Command	<code>[ :SENSe]:ROSCillator:PXIReference:EXTernal:LOCK?</code>
----------------	--

## 6 Input/Output

### 6.6 Freq Ref Input

---

Example	<code>:ROSC:PXIR:EXT:LOCK?</code>
Notes	Returns "1" if the Freq Ref Input is External and Reference is locked. Otherwise returns "0" When the Freq Ref Input is External and Reference is unlocked, the following warning message appears in the status bar: <code>Settings Alert; M9300A Ext Ref Unlocked</code>
Dependencies	Only available when <b>Select Ref</b> is not <b>NONE</b>

---

## 6.7 Output

Accesses controls that configure various output settings, like the frequency reference output, IF outputs and analog output.

Not all measurements support all output functions. For example, the Swept SA Measurement does not support the Digital Bus function or the I/Q Cal Out function under the **Output** tab; although the controls are visible, the outputs do not function in this measurement.

In addition, if the appropriate license is not present, some controls may not appear. In Modes/Measurements that do not support particular controls, the controls may appear, but no output will be generated if they are selected.

This tab does not appear in EXM or VXT model M9420A.

### 6.7.1 Analog Out

Lets you control which signal is fed to the “Analog Out” connector on the instrument rear panel.

In the Auto state, the Analog Output will automatically be set to the most sensible setting for the current mode or measurement.

If you make a selection manually from the **Analog Out** menu, the manually selected choice will remain in force until you change it (or re-select Auto), even if you switch to a mode or measurement for which the selected output does not apply.

Remote Command	<a href="#">:OUTPut:ANALog OFF   SVIDeo   LOGVideo   LINVideo   DAUDio!See Option Details</a> <a href="#">:OUTPut:ANALog?</a>
Example	<a href="#">:OUTP:ANAL SVIDeo</a> causes the analog output type to be Screen Video
Preset	Unaffected by Preset, but set to <a href="#">DAUDio</a> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in Input/Output State
Backwards Compatibility Notes	Prior to A.04.00, <b>OFF</b> was the default functionality except when in the Analog Demod application or with Tune and Listen, in which case it was <a href="#">DAUDio</a> , and there was no selection menu. For backwards compatibility with earlier X-Series firmware versions, Auto ( <a href="#">:OUTP:ANAL:AUTO ON</a> ) duplicates the prior behavior  The <a href="#">DNWB</a> and <a href="#">SANalyzer</a> parameters, which were legal in PSA but perform no function in the X-Series, are accepted without error  Auto Function

6 Input/Output  
6.7 Output

Remote Command	<code>:OUTPut:ANALog:AUTO OFF   ON   0   1</code> <code>:OUTPut:ANALog:AUTO?</code>
Example	<code>:OUTP:ANAL:AUTO ON</code>
Preset	ON

### Option Details

Source	SCPI	Notes
Off	OFF	The Analog Output is off
Screen Video	SVIDeo	Selects the analog output to be the screen video signal. In this mode, the pre-detector data is output to the Analog Out connector. The output looks very much like the trace displayed on the instrument's screen, and depends on the Log/Lin display Scale, Reference Level, and dB per division, but is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging)
Log Video	LOGVidéo	Selects the analog output to be the log of the video signal. In this mode, the pre-detector data is output to the Analog Out connector with a Log scaling. The output is referenced to the current level at the mixer, does not depend on display settings like Reference Level or dB per division, and it is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging), but does change with input attenuation
Linear Video	LINVidéo	Selects the analog output to be the envelope signal on a linear (voltage) scale. In this mode, the pre-detector data is output to the Analog Out connector with a Linear scaling. The output is based on the current Reference Level, and is not influenced by the selected detector or any digital flatness corrections or trace post-processing (like Trace Averaging)
Demod Audio	DAUDio	Selects the analog output to be the demodulation of the video signal. When Demod Audio is selected, the demodulated audio signal appears at this output whenever the Analog Demod application is demodulating a signal or when <b>Analog Demod Tune and Listen</b> is operating in the Swept SA measurement  When Analog Out is in the Auto state, this output is auto-selected when in the Analog Demod mode or when <b>Analog Demod Tune and Listen</b> is operating in the Swept SA measurement

The table below specifies the range for each output.

Analog Out	Nominal Range exc (10% overrange)	Scale Factor	Notes
Off	0 V		
Screen Video	0 – 1 V open circuit	10%/division	8566 compatible
Log Video	0 – 1 V terminated	1/(192.66 dB/V)	dB referenced to mixer level, 1V out for –10 dBm at the mixer
Linear Video	0 – 1 V terminated	100%/V	Linear referenced to Ref Level, 1 V out for RF envelope at the Ref Level

Analog Out	Nominal Range exc (10% overrange)	Scale Factor	Notes
Demod Audio	(varies with instrument setting)		

### Notes about the Analog Outputs

#### Screen Video

This mode is similar to the Analog Output of the HP 8566 family and the Video Out (opt 124) capability of the Keysight PSA analyzer (E444x), although there are differences in the behavior.

Screen Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Screen Video output will look different than it does in swept mode

Because the Screen Video output uses one of the two IF processing channels, only one detector is available while Screen Video is selected. All active traces will change to use the same detector as the selected trace when Screen Video is activated.

Screen Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Screen Video output.

The output holds at its last value during an alignment and during a marker count. After a sweep:

- If a new sweep is to follow (as in Continuous sweep mode), the output holds at its last value during the retrace before the next sweep starts. If the instrument is in zero-span, there is no retrace, as the instrument remains tuned to the Center Frequency and does not sweep. Therefore, in zero-span, the output simply remains live between display updates
- If no new sweep is to follow (as in Single sweep mode), the output remains live, and continues to show the pre-detector data

This function depends on optional capability; the selection is not available, and the command will generate an “Option not available” error unless you have Option YAV or YAS licensed in your instrument.

The Screen Video function is intended to be very similar to the 8566 Video Output and the PSA Option 124. However, unlike the PSA, it is not always on; it must be switched on by the Screen Video key. Also, unlike the PSA, there are certain dependencies (detailed above) – for example, the Quasi Peak Detector is unavailable when Screen Video is on.

## 6 Input/Output

### 6.7 Output

Furthermore, the PSA Option 124 hardware was unipolar, and its large range was padded to be exactly right for use as a Screen Video output. In the X-Series, the hardware is bipolar and has a wider range to accommodate the other output choices. Therefore, the outputs won't match up exactly and users may have to modify their setup when applying the X-Series in a PSA application.

#### Log Video

Log Video shows the RF Envelope with the Reference equal to the Mixer Level. The output is designed so that full scale (1 V) corresponds to -10 dBm at the mixer. The full range (0-1 V) covers 192.66 dB ; thus, 0 V corresponds to -202.66 dBm at the mixer.

Because the Log Video output uses one of the two IF processing channels, only one detector is available while Screen Video is selected. All active traces will change to use the same detector as the selected trace when Log Video is activated.

Log Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing channels. Consequently, if the user chooses an EMI Detector, there will be no Log Video output.

The output holds at its last value during an alignment, during a marker count, and during retrace (after a sweep and before the next sweep starts).

This function depends on optional capability. The choice will not appear, and the command will generate an "Option not available" error unless you have Option YAV licensed in your instrument.

Log Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Log Video output will look different than it does in swept mode.

#### Linear Video

Linear Video shows the RF Envelope with the Reference equal to the Ref Level. The scaling is set so that 1 V output occurs with an instantaneous video level equal to the reference level, and 0 V occurs at the bottom of the graticule. This scaling gives you the ability to control the gain without having another setup control for the key. But it requires you to control the look of the display (the reference level) in order to control the analog output.

This mode is ideal for looking at Amplitude Modulated signals, as the linear envelope effectively demodulates the signal.

Because the Linear Video output uses one of the two IF processing channels, only one detector is available while Linear Video is selected. All active traces will change to use the same detector as the selected trace when Log Video is activated.

Linear Video output is not available while any EMI Detector is selected (Quasi Peak, RMS Average or EMI Average), because these detectors use both IF processing

channels. Consequently, if the user chooses an EMI Detector, there will be no Linear Video output.

The output holds at its last value during an alignment and during a marker count and during retrace (after a sweep and before the next sweep starts).

This function depends on optional capability; the choice will not appear, and the command will generate an “Option not available” error unless you have Option YAV licensed in your instrument. Linear Video output changes while in FFT Sweeps, so for measurements that use exclusively FFT Sweeps, or if the user manually chooses FFT Sweeps, the Linear Video output will look different than it does in swept mode.

#### Demod Audio

When Analog Out is in the Auto state, this output is auto-selected when in the Analog Demod mode or when **Analog Demod Tune and Listen** is operating in the Swept SA measurement.

If any other Analog Output is manually selected when in the Analog Demod mode or when **Analog Demod Tune and Listen** is operating in the Swept SA measurement, a condition warning message appears. This choice only appears if the Analog Demod application (N9063A), the N6141A or W6141A application, or Option EMC is installed and licensed, otherwise the choice will not appear, and the command will generate an “Option not available” error.

The output holds at its last value during an alignment and during a marker count. It is not held between sweeps, in order for Tune and Listen to work properly.

When Demod Audio is the selected Analog Output, all active traces are forced to use the same detector, and the CISPR detectors (QPD, EMI Avg, RMS Avg) are unavailable

## 6.7.2 Screen Video Level

Lets you control the amplitude of the Analog Output when Screen Video is selected.

- The 1V (**NORMAL**) setting provides a nominal output of 1 V peak-to-peak into an open circuit. This matches the traditional behavior of X-series instruments
- The 2V (**COMPATIBLE**) setting provides a nominal output of 2 V peak-to-peak into an open circuit. This matches the legacy behavior of PSA and earlier analyzers

---

Remote Command    **:OUTPut:ANALog:SVIDeo NORMAL | COMPATible**  
                           **:OUTPut:ANALog:SVIDeo?**

---

Example                **:OUTP:ANAL:SVID COMP**  
                           causes the Screen Video level to be 2 V

6 Input/Output  
6.7 Output

Dependencies	Only appears if Screen Video is the selected Analog Output
Preset	Unaffected by Preset, but set to <b>NORM</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in Input/Output State

### 6.7.3 Digital Bus Out

Turns on the LVDS Digital Output port for outputting digital acquisition data.

- When **ON**, all acquisitions are streamed to the output port including acquisitions for internal purposes such as Alignment. The internal processing and routing of acquisitions continues as usual and is unaffected by the state of Bus Out
- When **OFF**, no signal appears on the LVDS port

Remote Command	<code>:OUTPut:DBUS[1][:STATe] ON   OFF   1   0</code> <code>:OUTPut:DBUS[1][:STATe]?</code>
Example	<code>:OUTP:DBUS ON</code>
Dependencies	Requires option RTL or control is not displayed <b>Digital Bus Out</b> and <b>Wideband Digital Bus</b> cannot both be <b>ON</b> at the same time, so: <ul style="list-style-type: none"> <li>– When <b>Wideband Digital Bus</b> is turned <b>ON</b>, if <b>Digital Bus Out</b> is already <b>ON</b>, an advisory message is displayed, “Wideband Digital Bus On, Digital Bus (narrow band) forced to Off”</li> <li>– When <b>Digital Bus Out</b> is turned <b>ON</b>, if <b>Wideband Digital Bus</b> is already <b>ON</b>, an advisory message is displayed, “Digital Bus (narrow band) On, Wideband Digital Bus forced to Off”</li> </ul>
Preset	<b>OFF</b> Set by <b>Restore Input/Output Defaults</b>
State Saved	Saved in Input/Output State

### 6.7.4 Wideband Digital Bus

Turns on the LVDS port on the Wideband IF, which causes the I/Q pairs from the current measurement to be sent to this port.


NOTE

**This control is grayed-out in all Modes except RTSA, which offers the only measurement that supports wideband streaming.**

- When **ON**, the internal processing and routing of acquisitions continues as usual, and the display of measurement data is unaffected
- When **OFF**, no signal appears on the LVDS port

Remote Command	<code>:OUTPut:DBUS2[:STATe] OFF   ON   0   1</code> <code>:OUTPut:DBUS2[:STATe]?</code>
Example	<code>:OUTP:DBUS2 ON</code>
Notes	If this command is sent while running a measurement that does not support <b>Wideband Digital Bus</b> , the message “Settings conflict; Feature not supported for this measurement” is displayed
Dependencies	Requires option RTS or control is not displayed <b>Digital Bus Out</b> and <b>Wideband Digital Bus</b> cannot both be <b>ON</b> at the same time, so: <ul style="list-style-type: none"> <li>– When <b>Wideband Digital Bus</b> is turned <b>ON</b>, if <b>Digital Bus Out</b> is already <b>ON</b>, an advisory message is displayed, “Wideband Digital Bus On, Digital Bus (narrow band) forced to Off”</li> <li>– When <b>Digital Bus Out</b> is turned <b>ON</b>, if <b>Wideband Digital Bus</b> is already <b>ON</b>, an advisory message is displayed, “Digital Bus (narrow band) On, Wideband Digital Bus forced to Off”</li> </ul>
Preset	<b>OFF</b> Set by <b>Restore Input/Output Defaults</b>
State Saved	Saved in Input/Output State

Here is the Wideband LVDS connector as viewed from the rear panel. The pin assignments are listed below:

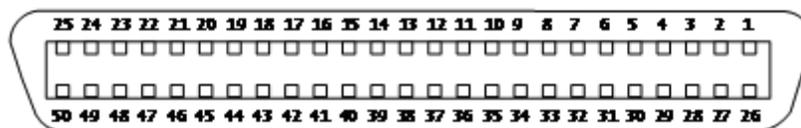

I-Cable

Connection	“-“ pin #	+“ pin #
GND	1	26
N/C	2	27
Stream_I[00]	3	28
Stream_I[01]	4	29
Stream_I[02]	5	30
Stream_I[03]	6	31
GND	7	32
Stream_I[04]	8	33
Stream_I[05]	9	34
Stream_I[06]	10	35
Stream_I[07]	11	36
GND	12	37
Stream_I[08]	13	38
Stream_I[09]	14	39

6 Input/Output  
6.7 Output

Connection	“-“ pin #	“+” pin #
Stream_I[10]	15	40
Stream_I[11]	16	41
GND	17	42
Stream_I[12]	18	43
Stream_I[13]	19	44
Stream_I[14]	20	45
Stream_I[15]	21	46
GND	22	47
GND	23	48
Stream_VALID	24	49
Stream_CLK	25	50

Q-Cable

Connection	“-“ pin #	“+” pin #
GND	1	26
Stream_ALT	2	27
Stream_Q[00]	3	28
Stream_Q[01]	4	29
Stream_Q[02]	5	30
Stream_Q[03]	6	31
GND	7	32
Stream_Q[04]	8	33
Stream_Q[05]	9	34
Stream_Q[06]	10	35
Stream_Q[07]	11	36
GND	12	37
Stream_Q[08]	13	38
Stream_Q[09]	14	39
Stream_Q[10]	15	40
Stream_Q[11]	16	41
GND	17	42
Stream_Q[12]	18	43
Stream_Q[13]	19	44
Stream_Q[14]	20	45
Stream_Q[15]	21	46
GND	22	47

Connection	“-“ pin #	“+” pin #
GND	23	48
Stream_MARK_1	24	49
Stream_MARK_2	25	50
Stream_I	16 bit "I" Data	
Stream_Q[15:0]	16 bit "Q" Data	
Stream_VALID	Data valid, when '1' then I/Q data is valid	
Stream_CLK	150 MHz DDR clock	
Stream_MARK_1	Stream Mark Bit 1	
Stream_MARK_2	Stream Mark Bit 2	
Stream_ALT	currently unused	

### 6.7.5 Data Stream

Lets you choose data or a test pattern to output to the Wideband IF LVDS port. This can help you set up your streaming target devices.

Remote Command	<code>:OUTPut:DBUS2:DATA MEASure   TEST</code> <code>:OUTPut:DBUS2:DATA?</code>
Example	<code>:OUTP:DBUS2:DATA TEST</code>
Notes	Selecting <b>TEST</b> routes a test pattern to the Wideband Digital Bus stream output
Preset	<b>MEAS</b> (set by Restore Input/Output Defaults)
State Saved	Saved in Input/Output State

### 6.7.6 I/Q Cal Out

The Baseband I/Q "Cal Out" port can be turned on with either a 1 kHz or a 250 kHz square wave. This can be turned on independent of the input selection. Preset resets this to **OFF**.

Remote Command	<code>:OUTPut:IQ:OUTPut IQ1   IQ250   OFF</code> <code>:OUTPut:IQ:OUTPut?</code>
Example	<code>:OUTP:IQ:OUTP IQ1</code>
Dependencies	Only available with Option BBA
Couplings	An I/Q Cable Calibration or an I/Q Probe Calibration will change the state of the Cal Out port as needed by the calibration routine. When the calibration is finished the I/Q Cal Out is restored to the pre-calibration state
Preset	<b>OFF</b>

6 Input/Output  
6.7 Output

State Saved	Saved in instrument state
Range	1 kHz Square Wave   250 kHz Square Wave   Off

### 6.7.7 Aux IF Out

Controls the signals that appear on the SMA output on the rear panel labeled **AUX IF OUT**

**NOTE**

**Aux IF Out** is valid for the RF Input and for the External Mixer input. In external mixing, the Aux IF output level is set by factory default to accommodate expected IF levels for the RF path. When using the External Mixing path, the **Aux IF Out** levels (for all three options CR3, CRP and ALV) will therefore be uncalibrated.

Remote Command	<code>:OUTPut:AUX SIF   AIF   LOGVideo   OFF</code> See " <a href="#">Option Details</a> " on page 2711 and " <a href="#">Notes on the Aux IF Outputs</a> " on page 2712 below <code>:OUTPut:AUX?</code>
Dependencies	Does not appear in models that do not support the Aux IF Out
Preset	Unaffected by Preset, but set to <b>OFF</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in Input/Output state
Backwards Compatibility Notes	In PSA, the IF output had functionality equivalent to the <b>SIF</b> option in X-Series' <b>Aux IF Out</b> menu. In X-Series, it is necessary to switch <b>Aux IF Out</b> to <b>SIF</b> to get this functionality, whereas in PSA it is always on, since there are no other choices Hence, if you are migrating remote code from PSA, and you use the IF Output in PSA, you will need to add a command to switch this function to <b>SIF</b>

#### Option Details

The Aux IF Output options are:

Source	SCPI	Notes
Off	<b>OFF</b>	No signal is output from the <b>AUX IF OUT</b> connector on the rear panel The connector appears as an open-circuit (that is, it is not terminated in any way)
Second IF	<b>SIF</b>	The 2 <sup>nd</sup> IF output is routed to the rear panel connector. Annotation on the menu panel shows the current 2 <sup>nd</sup> IF frequency in use in the instrument
Arbitrary IF	<b>AIF</b>	The 2 <sup>nd</sup> IF output is mixed with a local oscillator and mixer to produce an arbitrary IF output between 10 MHz and 75 MHz with 500 kHz resolution. The phase noise in this mode will not be as good as in Second IF mode The IF output frequency is adjustable, through an active function which appears on the menu panel, from 10 MHz to 75 MHz with 500 kHz resolution Note that, in instruments with Options B2X or B5X, the Arbitrary IF Output is only

Source	SCPI	Notes
Fast Log Video	LOGVideo	<p>practical when the IF Bandwidth is <math>\leq 40</math> MHz, IF Path is <math>\leq 40</math> MHz, or FFT Width is <math>\leq 40</math> MHz</p> <p>The 2<sup>nd</sup> IF output is passed through a log amp and the log envelope of the IF signal is sent to the rear panel. The open circuit output level varies by about 25 mV per dB, with a top-of-screen signal producing about 1.6 Volts. The output impedance is nominally 50 ohms</p> <p>This mode is intended to meet the same requirement as Option E4440A-H7L Fast Rise Time Video Output on E4440A PSA Series, allowing you to characterize pulses with fast rise times using standard measurement suites on modern digital scopes</p>

### Notes on the Aux IF Outputs

#### Second IF

Does not appear unless Option CR3 is installed.

The frequency of the 2<sup>nd</sup> IF depends on the current IF signal path as shown in the table below:

IF Path Selected	Frequency of "Second IF" Output
10 MHz	322.5 MHz
25 MHz	322.5 MHz
40 MHz	250 MHz
85-160 MHz	300 MHz
255 MHz	750 MHz
510 MHz	877.1484375 MHz

The signal quality, such as signal to noise ratio and phase noise, are excellent in this mode.

#### Arbitrary IF

Does not appear unless Option CRP is installed.

The bandwidth of this IF output varies with band and center frequency, but is about 40 MHz at the -3 dB width. When the output is centered at lower frequencies in its range, signal frequencies at the bottom of the bandwidth will "fold". For example, with a 40 MHz bandwidth (20 MHz half-bandwidth), and a 15 MHz IF center, a signal -20 MHz relative to the spectrum analyzer center frequency will have a relative response of about -3 dB with a frequency 20 MHz below the 15 MHz IF center. This -5 MHz frequency will fold to become a +5 MHz signal at the IF output. Therefore, lower IF output frequencies are only useful with known band-limited signals.

#### Fast Log Video

Does not appear unless Option ALV is installed.

The output is off during an alignment but not during a marker count, and is not blanked during retrace (after a sweep and before the next sweep starts).

### 6.7.8 Arbitrary IF Freq

Sets the frequency of the Arbitrary IF when "Aux IF Out" on page 2711 is set to AIF.

**NOTE**

In instruments with Options B2X or B5X, the Arbitrary IF Output is only practical when the IF Bandwidth is  $\leq 40$  MHz, IF Path is  $\leq 40$  MHz, or FFT Width is  $\leq 40$  MHz.

Remote Command	<code>:OUTPut:AUX:AIF &lt;value&gt;</code> <code>:OUTPut:AUX:AIF?</code>
Example	<code>:OUTP:AUX:AIF 50 MHZ</code>
Dependencies	Only appears if "Aux IF Out" on page 2711 is AIF
Preset	Unaffected by a Preset, but set to 70 MHz by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in Input/Output State
Min	10 MHz
Max	75 MHz

### 6.7.9 Ext/Wide IF Out

Causes the signal that is normally routed to the IF to be routed instead to the **Ext IF Out** connector on the rear panel (N9041B) or **Wide IF Out** connector on the front panel (N9042B) or rear panel (N9032B). This is available in N9041B when RF Input 2 is the selected input port and in N9032B/N9042B on RF Input and, when V3050A is attached, External RF Input.

Only one IF output (**Ext/Wide IF Out**, IF2 Out, or Aux IF Out) can be selected at a time, so switching Ext/Wide IF Out to **ON** changes IF2 Out and Aux IF Out to **OFF**, and setting Aux IF Out to something other than **OFF** or IF2 Out to **ON** forces Ext/Wide IF Out to **OFF**.

Remote Command	<code>:OUTPut:EIF ON   OFF   1   0</code> <code>:OUTPut:EIF?</code>
Example	<code>:OUTP:EIF ON</code>
Dependencies	Only appears in N9041B, N9032B, and N9042B For N9041B, enabled when RF Input 2 is the selected input. When RF Input 2 is not selected, the control is grayed out and forced to Off and attempting to set it On will result in an error message

	For N9032B/N9042B, enabled on RF Input and on External RF Input when V3050A is attached When this switch is <b>ON</b> , no measurement is displayed, and the error “No result; meas invalid with Ext/Wide IF Out set to On” appears in the Status bar
Preset	<b>OFF</b> Not affected by <b>Mode Preset</b> , but set to <b>OFF</b> by <b>Input/Output Preset</b>
State Saved	Saved in Input/Output state
Annotation	None (but error message appears when on)
Status Bits/OPC dependencies	<b>STATUS:QUESTIONABLE:INTEGRITY</b> bit 1 is set when <b>Ext/Wide IF Out</b> is <b>ON</b> . This indicates an error, because no valid data is on the screen or available via SCPI. However, the signal at the <b>Ext/Wide IF Out</b> port is still valid given the other settings

### 6.7.10 IF2 Out

Causes the signal that is normally routed to the IF, when the 1 GHz IF Path is selected, to be routed instead to the **IF2 Out** connector on the rear panel.

Only one IF output (Ext IF Out, **IF2 Out**, or Aux IF Out) can be selected at a time, so switching IF2 Out to On changes Ext IF Out and Aux IF Out to Off, and setting Aux IF Out to something other than Off or Ext IF Out to On forces IF2 Out to Off.

This control only appears if Option H1G is installed. It is only available when the 1 GHz IF Path is chosen, either directly or indirectly. In all other paths it is visible but grayed out and forced to Off. Attempting to set it On when the 1GHz path is not selected generates an error.

- Direct selection of the 1 GHz path: Measurements that directly support the 1 GHz path have a 1 GHz selection in the IF Path menu in Meas Setup
- Indirect selection of the 1 GHz path: certain measurements, like CCDF, always choose the widest available path, and so will choose the 1 GHz path if it is available, even if there is no IF Path menu in the measurement. IF2 Out will be visible when this results in the 1 GHz path being selected, even if there is no control or readout indicating that the 1 GHz path is chosen


Remote Command	<b>:OUTPut:IF2 ON   OFF   1   0</b> <b>:OUTPut:IF2?</b>
Example	<b>:OUTP:IF2 ON</b>
Dependencies	Only appears in UXA and only when Option H1G is installed When this is <b>ON</b> , no measurement is displayed, and the error “No result; meas invalid with IF2 Out set to On” appears in the Status bar
Preset	<b>OFF</b> Not affected by Mode Preset but set to <b>OFF</b> by Input/Output Preset
State Saved	Saved in Input/Output state

6 Input/Output  
6.7 Output

Annotation	None (but error message appears when on)
Status Bits/OPC dependencies	<b>STATUS:QUESTIONABLE:INTEGRITY</b> bit 1 is set when IF2 Out is <b>ON</b> . This indicates an error, because no valid data is on the screen or available via SCPI. However, the signal at the <b>IF2 Out</b> port is still valid given the other settings

### 6.7.11 REF Out

Lets you toggle the state of REF Out. The REF Out port is designed for MIMO, which provides the reference daisy chain for the Primary and Secondary modules.

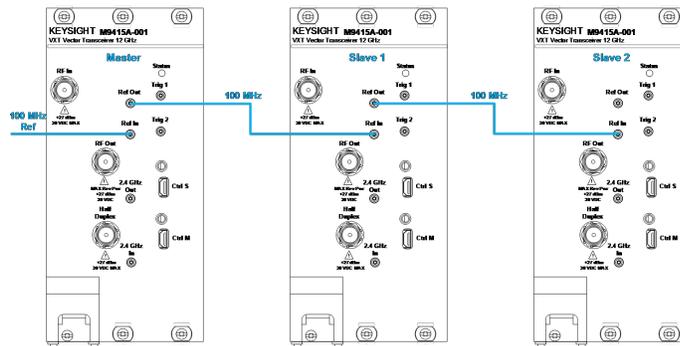

Remote Command	<code>:OUTPut:EREFerence:OUTPut ON   OFF   1   0</code> <code>:OUTPut:EREFerence:OUTPut?</code>
Example	<code>:OUTP:EREF:OUTP ON</code> <code>:OUTP:EREF:OUTP?</code>
Notes	Used to route the 100 MHz reference signal on the REF In port to the REF Out port
Dependencies	Only available in VXT models M9415A/16A and M9415E/16E when <b>Freq Ref Input</b> is External, and <b>Ext Ref Freq</b> is 100 MHz
Preset	OFF
Range	ON OFF

### 6.7.12 LO Ref Out

Turns the LO Reference Signal Out on or off. **LO Ref Out** is used to provide reference daisy chain in MIMO or Phase Coherency.

For VXT models M9410A/11A, controls the **4.8 GHz Out** port on the front panel. Setting it **ON** outputs a 4.8 GHz reference signal.

Remote Command	<code>:OUTPut:ROSCillator:LO:OUTPut ON   OFF   1   0</code> <code>:OUTPut:ROSCillator:LO:OUTPut?</code>
Example	<code>:OUTP:ROSC:LO:OUTP ON</code> <code>:OUTP:ROSC:LO:OUTP?</code>
Dependencies	Only available in VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	<code>OFF</code>

## 6.8 Trigger Output

Accesses controls that configure the **Trigger Output** settings.

### 6.8.1 Trig 1 – 4 Out

Selects the type of output signal that will be output from the available **Trig n Out** connectors, where **n** = 1, 2, 3, or 4.

Some instruments do *not* support **Trig 2 Out** through **Trig 4 Out** outputs, nor their associated controls.

For most instruments, **Trig 1 Out** applies to the connector labeled **Trigger 1**, but for VXT model M9420A, it is labeled **Trigger 4**.

The front panel includes separate controls for each available trigger: **Trig 1 Out – Trig 4 Out**. The remote command can be used for *any* of the **Trig n Out** connectors, by specifying the appropriate parameter (for example **TRIG1**, **TRIG2**, etc.).

**NOTE**

Option **TARMed** is *not* available in modular instruments.

Remote Command	<pre>:TRIGger[1] 2 ... 4[:SEquence]:OUTPut HSWP   MEASuring   MAIN   GATE   GTRigger   OEVen   TARMed   SP0int   S1Marker   S2Marker   S3Marker   S4Marker   PARB   FSYNc   OFF</pre> <p>See "<a href="#">Trigger Out Options</a>" on page 2718</p> <pre>:TRIGger[1] 2 ... 4[:SEquence]:OUTPut?</pre>
Example	<pre>:TRIG:OUTP HSWP :TRIG2:OUTP GATE</pre>
Notes	<p><b>Trig 2 Out</b> is used as the source trigger out in EXM and VXT model M9420A</p> <p>The available choices in EXM and VXT model M9420A are <b>S1Marker</b>, <b>S2Marker</b>, <b>S3Marker</b>, <b>S4Marker</b> and <b>OFF</b></p> <p>For Power Amplifier Mode, <b>Trig 2 Out</b> is set to Source Marker2 when <b>Burst Shape &amp; Mask</b> is <b>ON</b>. In this case, <b>Trigger 2</b> is used to output PA Enable Mask</p>
Dependencies	<p><b>Trig 2 Out</b> through <b>Trig 4 Out</b> are not supported in all models. In models that do not support them, the <b>Trig n Out</b> control is blanked, and sending the SCPI command for this output generates an error, "Hardware missing; Not available for this model number"</p> <p>Querying <b>Trig 2 Out</b> through <b>Trig 4 Out</b> in models that do not support them returns <b>OFF</b></p> <p>For VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E:</p> <ul style="list-style-type: none"> <li>- When <b>Trig n Out Device</b> is <b>ANALyzer</b>, only <b>MEASuring</b>, <b>MAIN</b> and <b>OFF</b> are available</li> <li>- When <b>Trig n Out Device</b> is <b>SOURce</b>, only <b>S1Marker</b>, <b>S2Marker</b>, <b>S3Marker</b>, <b>S4Marker</b>, <b>PARB</b>, <b>FSYNc</b> and <b>OFF</b> are available</li> </ul>

	For VXT model M9421A, <b>Trig 2 Out</b> is used as the Analyzer trigger output								
Preset	Unaffected by Preset, but preset to the following values by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b> :								
	<table border="1"> <tr> <td>Trigger 1</td> <td>Sweeping (<b>HSWP</b>)</td> </tr> <tr> <td>Trigger 2</td> <td>Gate</td> </tr> <tr> <td>Trigger 3</td> <td>Sweeping (<b>HSWP</b>)</td> </tr> <tr> <td>Trigger 4</td> <td>Gate</td> </tr> </table>	Trigger 1	Sweeping ( <b>HSWP</b> )	Trigger 2	Gate	Trigger 3	Sweeping ( <b>HSWP</b> )	Trigger 4	Gate
Trigger 1	Sweeping ( <b>HSWP</b> )								
Trigger 2	Gate								
Trigger 3	Sweeping ( <b>HSWP</b> )								
Trigger 4	Gate								
State Saved	Saved in instrument state								

### Trigger Out Options

Source	SCPI	Notes
Off	<b>OFF</b>	Selects no signal to be output to the <b>Trig n Out</b> connector
Sweeping	<b>HSWP</b>	Selects the Sweeping Trigger signal to be output to the <b>Trig n Out</b> connector when a measurement is made  This signal has historically been known as <b>HSWP</b> (High = Sweeping), and is 5 V TTL level with 50 $\Omega$ output impedance
Measuring	<b>MEASuring</b>	Selects the Measuring trigger signal to be output to the <b>Trig n Out</b> connector. This signal is true while the Measuring status bit is true
Main Trigger	<b>MAIN</b>	Selects the current instrument trigger signal to be output to the <b>Trig n Out</b> connector  Note: For multi segment sweeps, only the first sweep segment uses the selected trigger signal. All other sweep segments trigger using Free-Run and the trigger output will reflect that
Gate Trigger	<b>GTRigger</b>	Selects the gate trigger signal to be output to the <b>Trig n Out</b> connector. This is the source of the gate timing, not the actual gate signal
Gate	<b>GATE</b>	Selects the gate signal to be output to the <b>Trig n Out</b> connector. The gate signal has been delayed and its length determined by delay and length settings. When the polarity is positive, a high on the <b>Trig n Out</b> connector represents the time the gate is configured to pass the signal
Odd/Even Trace Point	<b>OEVen</b>	Selects either the odd or even trace points as the signal to be output to the <b>Trig n Out</b> connector when performing swept spectrum analysis. When the polarity is positive, this output goes high during the time the instrument is sweeping past the first point (Point 0) and every other following trace point. The opposite is true if the polarity is negative
Trigger Armed	<b>TARMed</b>	Selects the “trigger armed” trigger signal to be output to the <b>Trig n Out</b> connector. This signal is true when the instrument reaches its trigger armed state  <i>Not available in modular instruments</i>
Source Point Trigger	<b>SPOint</b>	Selects the gate signal to be output to the <b>Trig n Out</b> connector for use as the Point Trigger when operating an external source in Tracking mode. When Ext Trigger 1 is

Source	SCPI	Notes
		selected as the Point Trigger under <b>Source</b> , the Source Point Trigger under <b>Trig 1 Out</b> automatically gets selected. A similar pattern is used for the other Ext Trigger inputs; for example, when Ext Trigger 2 is selected as the Point Trigger under <b>Source</b> , the Source Point Trigger under <b>Trig 2 Out</b> automatically gets selected
Source Marker 1	<b>S1Marker</b>	Only available in VXT and M941xE. For M9420A, only for <b>TRIG2</b> , for M9410A/11A/15A/16A available for both <b>TRIG1</b> and <b>TRIG2</b> Selects the Trigger Output at Marker 1 in the Waveform file that is currently playing
Source Marker 2	<b>S2Marker</b>	Only available in VXT and M941xE. For M9420A, only for <b>TRIG2</b> , for M9410A/11A/15A/16A and M9410E/11E/15E/16E available for both <b>TRIG1</b> and <b>TRIG2</b> Selects the Trigger Output at Marker 2 in the Waveform file that is currently playing
Source Marker 3	<b>S3Marker</b>	Only available in VXT and M941xE. For M9420A, only for <b>TRIG2</b> , for M9410A/11A/15A/16A and M9410E/11E/15E/16E available for both <b>TRIG1</b> and <b>TRIG2</b> Selects the Trigger Output at Marker 3 in the Waveform file that is currently playing
Source Marker 4	<b>S4Marker</b>	Only available in VXT and M941xE. For M9420A, only for <b>TRIG2</b> , for M9410A/11A/15A/16A and M9410E/11E/15E/16E available for both <b>TRIG1</b> and <b>TRIG2</b> Selects the Trigger Output at Marker 4 in the Waveform file that is currently playing
PerArb	<b>PARB</b>	Only available in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E Selects the Trigger Output as PerArb. PerArb is a synchronization trigger which is generated by the ARB at the beginning of each repetition of playing the signal
FSYnc	<b>FSYnc</b>	Only available in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E Selects the Trigger Output as <b>FSYnc</b> , routing the Periodic Timer Sync Source signal to the specified Trigger output. That is, the signal selected by <b>:TRIGger[:SEquence]:FRAMe:SYnc</b> is routed to the specified trigger output The following example specifies that External 1 trigger will be used as the Periodic Timer Sync Source, and this signal will then be routed to the <b>Trigger 2</b> output: <b>TRIG:FRAM:SYnc EXT1</b> <b>TRIG2:OUTP FSYnc</b>
		–

## 6.8.2 Trig 1 – 4 Out Polarity

Sets the output to the **Trig n Out** connector to trigger on either the positive or negative polarity.

Remote Command	<b>:TRIGger[1] 2 ... 4[:SEquence]:OUTPut:POLarity POSitive   NEGative</b> <b>:TRIGger[1] 2 ... 4[:SEquence]:OUTPut:POLarity?</b>
Example	<b>:TRIG1:OUTP:POL POS</b>

Dependencies	You can only send <b>TRIG</b> parameters for the hardware you have; for example, you cannot send a <b>TRIG3</b> parameter if your hardware does not support <b>TRIG3</b> . Sending the command for an output you do not have generates an error, “Hardware missing; Not available for this model number” Querying a non-existent output returns <b>OFF</b> <b>Trig 2 Out Polarity</b> does not appear in EXM or VXT
Preset	Unaffected by Preset, but set to <b>POSitive</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in instrument state

### 6.8.3 Trig 1 – 4 Out Device

Sets the output to the **Trig n Out** connector to trigger on either **ANALyzer** or **SOURce**.

Remote Command	<code>:TRIGger[1] 2 ... 4[:SEquence]:OUTPut:DIRection ANALyzer   SOURce</code> <code>:TRIGger[1] 2 ... 4[:SEquence]:OUTPut:DIRection?</code>						
Example	<code>:TRIG1:OUTP:DIR ANAL</code>						
Dependencies	Only available on VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E						
Preset	Unaffected by Preset <b>Restore Input/Output Defaults</b> and <b>Restore System Defaults-&gt;All</b> preset the triggers as follows:						
	<table border="1"> <thead> <tr> <th>Trig n Out Device</th> <th>Preset</th> </tr> </thead> <tbody> <tr> <td>1, 3, 4</td> <td><b>ANALyzer</b></td> </tr> <tr> <td>2</td> <td><b>SOURce</b></td> </tr> </tbody> </table>	Trig n Out Device	Preset	1, 3, 4	<b>ANALyzer</b>	2	<b>SOURce</b>
Trig n Out Device	Preset						
1, 3, 4	<b>ANALyzer</b>						
2	<b>SOURce</b>						
State Saved	Saved in instrument state						

### 6.8.4 Src PXI Trig Out

Selects which signal will be routed to the backplane Source PXI Trigger Output Line.

Remote Command	<code>:TRIGger:PXIE:SOURce[:SEquence]:OUTPut S1Marker   S2Marker   S3Marker   S4Marker   PARB   OFF</code> See " <a href="#">Option details</a> " on page 2721 <code>:TRIGger:PXIE:SOURce[:SEquence]:OUTPut?</code>
Example	<code>:TRIG:PXIE:SOUR:OUTP S1M</code> <code>:TRIG:PXIE:SOUR:OUTP?</code>
Dependencies	Only appears in EXM, VXT and M941xE
Preset	<b>OFF</b>
State Saved	Saved in instrument state

## Option details

Here are details of all Source PXI Trigger Output options:

Source	SCPI	Notes
Off	<b>OFF</b>	Selects no signal to be output to the Source PXI backplane line
Source Marker 1	<b>S1Marker</b>	Selects the Trigger Output at Marker 1 in the Waveform file that is currently playing to be output to the Source PXI backplane line
Source Marker 2	<b>S2Marker</b>	Selects the Trigger Output at Marker 2 in the Waveform file that is currently playing to be output to the Source PXI backplane line
Source Marker 3	<b>S3Marker</b>	Selects the Trigger Output at Marker 3 in the Waveform file that is currently playing to be output to the Source PXI backplane line
Source Marker 4	<b>S4Marker</b>	Selects the Trigger Output at Marker 4 in the Waveform file that is currently playing to be output to the Source PXI backplane line
PerArb	<b>PARB</b>	A synchronization trigger that is generated by the ARB at the beginning of each repetition of playing the signal. This selection causes the PerArb Trigger Output that is currently playing to be output to the Source PXI backplane line Only available in VXT Models M9410A/11A/15A/16A and M9410E/11E/15E/16E

### 6.8.5 Src Trig Out Polarity

Sets the output to the Source PXI backplane trigger line to trigger on either the positive or negative polarity.

Remote Command	<code>:TRIGger:PXIE:SOURce[:SEquence]:OUTPut:POLarity POSitive   NEGative</code> <code>:TRIGger:PXIE:SOURce[:SEquence]:OUTPut:POLarity?</code>
Example	<code>:TRIG:PXIE:SOUR:OUTP:POL POS</code>
Dependencies	Only appears in EXM, VXT and M941xE
Preset	Unaffected by Preset, but set to <b>POSitive</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in instrument state

### 6.8.6 Select Src PXI Line

Controls which backplane trigger line `TRIG[0..7]` is used for the Source Trigger Output.

Remote Command	<code>:TRIGger:PXIE:SOURce[:SEquence]:OUTPut:LINE &lt;line&gt;</code> <code>:TRIGger:PXIE:SOURce[:SEquence]:OUTPut:LINE?</code>
----------------	--

Example	<code>:TRIGger:PXIE:SOURce:OUTPut:LINE 0</code>
Dependencies	Only appears in EXM, VXT and M941xE
Preset	4
State Saved	Saved in instrument state
Range	[0,7]

## 6.8.7 Analyzer PXI Trig Out

Selects the signal that will be output from Analyzer PXI Trigger Line (Backplane Trigger Line 0~3).

Remote Command	<code>:TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut HSWP   MEASuring   MAIN   GATE   GTRigger   OEVEN   OFF</code> See " <a href="#">Option Details</a> " on page 2722 <code>:TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut?</code>
Example	<code>:TRIG:PXIE:ANAL:OUTP HSWP</code>
Dependencies	Only available on certain modular analyzers, such as CXA-m, VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E For VXT models M9410A/11A/15A/16A, only <b>OFF</b> , <b>MEASuring</b> and <b>MAIN</b> are available
Preset	Unaffected by <b>Preset</b> but is preset to <b>OFF</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
State Saved	Saved in instrument state

### Option Details

Here are details of all Analyzer PXI Trigger Output options:

Source	SCPI	Notes
Off	<b>OFF</b>	Selects no signal to be output to the Analyzer PXI backplane trigger line
Sweeping (HSWP)	<b>HSWP</b>	Selects the Sweeping Trigger signal to be output to the Analyzer PXI backplane trigger line when a measurement is made. This signal has historically been known as "HSWP" (High = Sweeping), and is 5 V TTL level with 50-ohm output impedance
Measuring	<b>MEAS</b>	Selects the Measuring trigger signal to be output to the Analyzer PXI backplane trigger line. This signal is true while the Measuring status bit is true
Main Trigger	<b>MAIN</b>	Selects the current instrument trigger signal to be output to the Analyzer PXI backplane trigger line
Gate Trigger	<b>GTR</b>	Selects the gate trigger signal to be output to the Analyzer PXI backplane trigger line. This is the source of the gate timing, not the actual gate signal
Gate	<b>GATE</b>	Selects the gate signal to be output to the Analyzer PXI backplane trigger line. The gate signal has been delayed and its length determined by delay and length settings. When the

6 Input/Output  
6.8 Trigger Output

Source	SCPI	Notes
Odd/Even Trace Point	OEV	polarity is positive, a high on the Trig Out connector represents the time the gate is configured to pass the signal Selects either the odd or even trace points as the signal to be output to the Analyzer PXI backplane trigger line when performing swept spectrum analysis. When the polarity is positive, this output goes high during the time the instrument is sweeping past the first point (Point 0) and every other following trace point. The opposite is true if the polarity is negative

### 6.8.8 Analyzer Trig Out Polarity

Sets the output to the Analyzer PXI backplane trigger line to trigger on either the positive or negative polarity.

Remote Command	<code>:TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:POLarity POSitive   NEGative</code> <code>:TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:POLarity?</code>
Example	<code>:TRIG:PXIE:ANAL:OUTP:POL POS</code>
Dependencies	Only available on certain modular analyzers, such as CXA-m, VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	Unaffected by Preset, but set to <b>POSitive</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All POSitive</b>
State Saved	Saved in instrument state

### 6.8.9 Select Analyzer PXI Line

Controls which `PXI_TRIG[0...3]` is used for the Analyzer Trigger Output.

Remote Command	<code>:TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:LINE &lt;line&gt;</code> <code>:TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:LINE?</code>
Example	<code>:TRIGger:PXIE:ANALyzer:OUTPut:LINE 0</code>
Dependencies	Only available on certain modular analyzers, such as CXA-m, VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	0
State Saved	Saved in instrument state
Range	[0,3]

### 6.8.10 Source Internal Trig Out

Selects the signal which will be output from Source Internal Trigger Line.

## NOTE

In some software released in 2018 and 2019, the SCPI command for this function was as below:

```
:TRIGger:SOURce:INTernal[:SEquence]:OUTPut
S1Marker|S2Marker|S3Marker|S4Marker|OFF
```

It was necessary to change this SCPI in release A.24.00 due to internal conflicts in the software. User code written for the A.22.xx or A.23.xx instrument software which used the old form must be rewritten to use the form below.

Remote Command	<code>:TRIGger[:SEquence]:INTernal:SOURce:OUTPut S1Marker   S2Marker   S3Marker   S4Marker   PARB   OFF</code> <code>:TRIGger[:SEquence]:INTernal:SOURce:OUTPut?</code>
Example	<code>:TRIG:INT:SOUR:OUTP S1M</code>
Notes	<b>PARB</b> (Per ARB) -A synchronization trigger that is generated by the ARB at the beginning of each repetition of playing the signal
Dependencies	Only available on VXT models M9420A, M9410A/11A/15A/16A and M9410E/11E/15E/16E
Preset	Unaffected by Preset but preset by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b> . The value is Mode-dependent: Power Amplifier Mode: <b>S1Marker</b> All other Modes: <b>OFF</b>
State Saved	Saved in instrument state

### 6.8.11 Source Internal Trig Out Polarity

Sets the output to the Source Internal trigger line to trigger on either the positive or negative polarity.

## NOTE

In some software released in 2018 and 2019, the SCPI command for this function was as below:

```
:TRIGger:SOURce:INTernal[:SEquence]:OUTPut:POLarity
POSitive|NEGative
```

It was necessary to change this SCPI in release A.24.00 due to internal conflicts in the software. User code written for the A.22.xx or A.23.xx instrument software which used the old form must be rewritten to use the form below.

Remote Command	<code>:TRIGger[:SEquence]:INTernal:SOURce:OUTPut:POLarity POSitive   NEGative</code> <code>:TRIGger[:SEquence]:INTernal:SOURce:OUTPut:POLarity?</code>
Example	<code>:TRIG:INT:SOUR:OUTP:POL POS</code>
Dependencies	Only available on VXT models and M9410E/11E/15E/16E
Preset	Unaffected by <b>Preset</b> , but set to <b>POSitive</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System</b>

6 Input/Output  
6.8 Trigger Output

---

	<b>Defaults-&gt;All</b>
State Saved	Saved in instrument state

---

## 6.9 Calibration

Lets you configure the Comb Calibrator. This tab only appears when an RCal license is installed. Settings associated with the Calibrator are configured here.

### 6.9.1 Configuration

Opens the dialog shown below. This is a full screen dialog. Configuring of Cals is done using this dialog. The table consists of rows of Cals and Columns of Cal settings. You can scroll or swipe vertically or horizontally to view Cals or settings not currently shown on the screen.

Dialog with Example Table entries:

Calibration Configuration ? Close >

Cal Group  
1

Cal Input  
RF Input

Calibrate Checked Rows

Apply Cal Group  
On  
Off

Copy From Cal Group  
2

Copy

Select Calibrator  
RCal Module 1

Serial #: SN1234567  
Version 1.20

RCal Reference  
Internal

Identify RCal Module

Cal Status >

Description  
Switch and Amplifier

Go to Row 2    Insert Row Below    Use Current Meas    Duplicate Row    Delete Row    Delete All

	Calibrate	Apply	Name	Last Cal	Applied	Type	Start Freq	Stop Fr
1	✓	✓	Entire Instrument	Jul 23 2019 03:32 PM	--	Magnitude	910.0 MHz	910.0 M
2	✓	✓	Switch Cal	May 14 2019 09:35 AM	--	Complex	1.000 GHz	2.000 G
3	✓	✓	Amp Cal	May 14 2019 09:35 AM	--	Magnitude	10 Hz	26.5 GH

Full Cal Group Table with Example entries:

6 Input/Output  
6.9 Calibration

**RCal Calibrations Table**

Table will scroll vertically and horizontally

	Calibrate	Apply	Name	Last Cal	Applied	External Mixer	Cal Type
1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Entire Instrument	Aug 30 2018 03:32 PM	Yes	11970A : Normal	Vector
2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Wednesday with remote head	Sep 1 2018 02:27 PM	No	Custom : Normal	Vector
3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	20190119 3:54pm	--	--	11970U : Normal	Vector
4	<input type="checkbox"/>	<input type="checkbox"/>	1 GHz – 3 GHz	--	--	11970V : Normal	Scalar
5	<input type="checkbox"/>	<input type="checkbox"/>	2 GHz – 4 GHz	--	--	K Band Single Harmonic No Doubler : Normal	Scalar
6	<input type="checkbox"/>	<input type="checkbox"/>	External Preamp	--	--	W Band Single Harmonic No Doubler : Normal	Scalar
7	<input type="checkbox"/>	<input type="checkbox"/>	(None)				
8	<input type="checkbox"/>	<input type="checkbox"/>	(None)				
9	<input type="checkbox"/>	<input type="checkbox"/>	(None)				
10	<input type="checkbox"/>	<input type="checkbox"/>	(None)				

Only shows when External Mixer is the selected Cal Input

Scalar
Vector

Start Freq	Stop Freq	Freq Step	Freq Points	Mech Atten	Mech Atten Start	Mech Atten Stop	Mech Atten Step	Elec Atten	Elec Atten Start
910.0 MHz	910.0 MHz	0 Hz	1	Step	0 dB	10 dB	2 dB	Step	0 dB
1.000 GHz	2.000 GHz	100.000 MHz	100	Reference	00 dB	00 dB	00 dB	Bypass	00 dB
10 Hz	26.5 GHz	0 Hz	3	All	00 dB	20 dB	2 dB	All	00 dB
1.000 GHz	3.000 GHz	100.00 MHz	20	Step	10 dB	50 dB	10 dB	Step	10 dB
2.000 GHz	4.000 GHz	10.000 MHz	200	Bypass	00 dB	20 dB	2 dB	All	00 dB
2.000 GHz	2.000 GHz	0 Hz	1	Reference	00 dB	00 dB	00 dB	Reference	00 dB

Step
All
Bypass

Step
All
Bypass

Elec Atten Stop	Elec Atten Step	Full Atten	Full Atten Start	Full Atten Stop	Freq Ext Atten	Freq Ext Atten Start	Freq Ext Atten Stop	RF Path
10 dB	5 dB	Step	0 dB	6 dB	Step	0 dB	6 dB	10 MHz
00 dB	00 dB	All	00 dB	00 dB	All	00 dB	00 dB	510 MHz
20 dB	10 dB	All	00 dB	200 dB	All	00 dB	200 dB	25 MHz
20 dB	2 dB	Step	6 dB	20 dB	Step	6 dB	20 dB	10 MHz
20 dB	10 dB	All	00 dB	200 dB	All	00 dB	200 dB	25 MHz
000 dB	00 dB	All	000 dB	000 dB	All	000 dB	000 dB	40 MHz

Step	Step	10 MHz
All	All	25 MHz
		40 MHz
		510 MHz
		1 GHz
		2 GHz
		4 GHz


### 6.9.1.1 Cal Group

This is the same as "Cal Group" on page 2761 in the Calibration tab.


### 6.9.1.2 Calibrate Checked Rows

Executes the Cals within the currently selected Cal Group that have the Calibrate box checked in the RCal Configuration Table.

Once selected, the following dialog box is displayed;

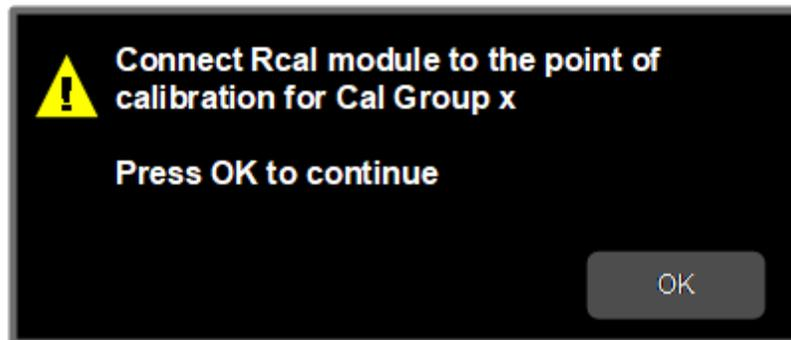

When you click OK, the following dialog is displayed;

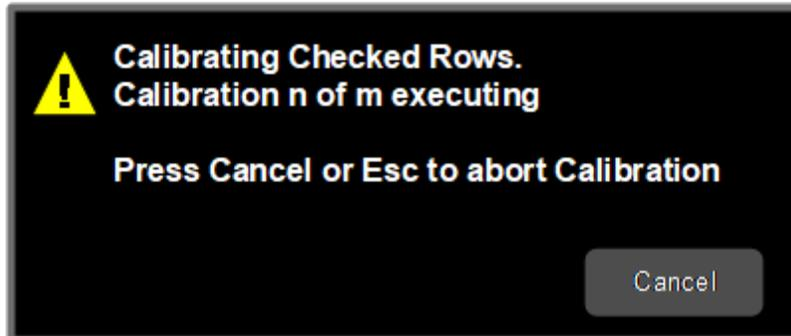

If there are multiple Cals being executed in a Cal Group, this dialog advises you when each Cal is complete. It also provides the ability to abort the Execute Cal Request. If you choose to abort, calibrations that have completed use the new Cal data and update the Last Cal field. Calibrations that have not completed retain the existing Cal data and Last Cal timestamp, or show “---” if the Cal had never been executed.

Remote Command	<code>:SYSTem:CALibration:INITiate:SElected</code>
Example	<code>:SYST:CAL:INIT:SEL</code>
Notes	Cals cannot be applied until they have been calibrated. Once a Cal has been calibrated, the Last Cal field in the table displays the date and time the Cal was last calibrated
Dependencies	Applied to the currently selected Cal Group
Couplings	<b>Calibrate Selected</b> is disabled if there are no Calibrate checkboxes checked. If the disabled control is selected, the advisory message “Check the Calibrate box for the Cals you want to calibrate” is displayed


### 6.9.1.3 Apply Cal Group

This is the same as ["Apply Cal Group" on page 2761](#) in the **Calibration** tab.

### 6.9.1.4 Abort Calibration

Aborts the Calibration routine of the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:ABORt</code>
Example	<code>:SYST:CAL:ABOR</code>
Dependencies	Aborts the currently running calibration. The previously-run calibrations will still be available, but the current calibration is halted, and next calibrations selected are not executed. Once the calibration starts, the modal dialog appears, and the abort can be executed by selecting <b>Cancel</b>

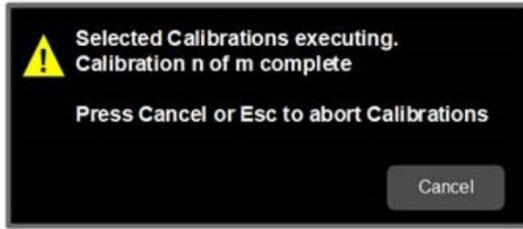

### 6.9.1.5 Copy From Cal Group

Determines the Cal Group from which existing rows are copied when using the "Copy" on page 2730 Group feature.

Remote Command	:SYSTem:CALibration:CGRoup:COPIY:FROM <integer>
Example	:SYST:CAL:CGR:COPIY:FROM 2 :SYST:CAL:CGR:COPIY:FROM?
Preset	1
Min	1
Max	100

### 6.9.1.6 Copy

Lets you copy the settings in the Cal Group specified by the **Copy From Cal Group** parameter.

All the rows in the table are copied to the selected Cal Group. The columns **Apply**, **Last Cal** and **Applied** are set to their default values.

The group level parameters are also copied, with the exception of **Apply Cal Group** and **Copy From Cal Group**.

Remote Command	:SYSTem:CALibration:CGRoup:COPIY
Example	:SYST:CAL:CGRoup:COPIY
Dependencies	Applied to the currently selected Cal Group
Couplings	Disabled if <b>Copy From Cal Group</b> is the same as the currently selected Cal Group. If the disabled control is selected, the advisory message "Unable to Copy from same Cal Group" is displayed, and the same message is returned remotely as a Settings Conflict  If you attempt to copy from a Cal Group that is empty, the advisory message "Copy From Cal Group is empty" is displayed, and the same message is returned remotely as a Settings Conflict

### 6.9.1.7 Cal Input

Maps the currently selected Cal Group to a particular I/O port. This control allows any Input port (including External Mixing, the RF2 input, etc.) to be mapped to a specific Cal Group

Remote Command	<code>:SYSTem:CALibration:INPut RFIN   RFIN2    EMIXer   ERFIN</code> See <a href="#">"Option Details" on page 2731</a> <code>:SYSTem:CALibration:INPut?</code>
Example	<code>:SYST:CAL:INPut RFIN2</code>
Dependencies	<code>RFIN2</code>   <code>EMIXer</code> are only available on C/E/M/P/UXA analyzers with the appropriate options loaded <code>ERFIN</code> is only available if a V3050A unit is connected
State Saved	Saved in State

#### Option Details

Note that the presence of these ports is highly hardware dependent.

Cal Input	SCPI	Notes
RF Input	<code>RFIN</code>	Main RF Port Not available on EXM with hardware M9431A
RF Input 2	<code>RFIN2</code>	Second RF Port, labeled RF Input 2 Only available on certain instruments
External Mixer	<code>EMIX</code>	Requires option EXM
External RF	<code>ERFIN</code>	Only available if a V3050A unit is connected

### 6.9.1.8 Freq Offset

Specifies any frequency offset that is to be applied to the currently selected Cal Group. This can be used when using an external mixer.

Remote Command	<code>:SYSTem:CALibration:FREQuency:OFFSet &lt;freq&gt;</code> <code>:SYSTem:CALibration:FREQuency:OFFSet?</code>
Example	<code>:SYST:CAL:FREQ:OFFS 1e9</code>
Dependencies	The query applies to the currently selected Cal Group
Preset	All 0 Hz
State Saved	Saved in instrument state
Min	0 Hz
Max	100.0 GHz

### 6.9.1.9 Select Calibrator

Selects the calibrator for the currently selected Cal Group to use for executing the calibration when multiple modules are connected.

Remote Command	<code>:SYSTem:CALibration:MODule:SElect NONE   RCM1   RCM2   RCM3   RCM4   RCM5   RCM6   RCM7   RCM8   RCM9   RCM10</code> <code>:SYSTem:CALibration:MODule:SElect?</code>
Example	<code>:SYST:CAL:MODule:SElect RCM1</code>
Notes	Details of the RCal module are displayed beneath the control. If there are no modules connected, the text states “No Modules Connected” For SCPI, if the parameter sent is for a module that is not currently connected to the instrument, the message “Selected RCal module not connected” is generated
Dependencies	The SCPI command is applied to the currently selected Cal Group
State Saved	Saved in instrument state
Range	All connected RCal modules

### 6.9.1.10 Identify RCal Module

Control to connect to the RCal module of the currently selected Cal Group and blink its identity light

### 6.9.1.11 RCal Module Serial Number (Remote Query Only)

Returns the serial number of the specified module

Remote Command	<code>:SYSTem:CALibration:MODule[1] 2 ... 10:SNUMber?</code>
Example	<code>:SYST:CAL:MOD:SNUM?</code>
Notes	If there is no module associated with the specified module number, returns an empty string

### 6.9.1.12 RCal Reference

Determines the reference type used by the RCal module of the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:REFerence INTernal   EXTernal</code> <code>:SYSTem:CALibration:REFerence?</code>
Example	<code>:SYST:CAL:REF EXT</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group

Preset	EXternal
State Saved	Saved in instrument state
Range	Internal   External

### 6.9.1.13 RCal Status

Opens a dialog that is used to provide the status of all active rows in all groups. Status can be one of the following: Calibrated, Applied, Calibration Failed or Apply Failed.

If a Calibration Fails, an error icon is shown in the **Calibrate** column of the row(s) that failed, with a message indicating the nature of the failure. If the failure cannot be addressed by the user, the error message “Calibration Failed. See Error Log” will be shown and details of the failure will be written to the SA Event Log.

Applying the Calibration can result in a warning if there is a mismatch between the currently executing instrument state and any of the following parameter settings;

- Cal Input
- Frequency
- IF Path
- IF Gain
- Phase Noise Optimization
- Preamp
- Coupling
- Mechanical Attenuator
- Electrical Attenuator
- Full Range Attenuator
- uW Path Control
- Mixing Mode
- External Mixer

When there is a mismatch a warning icon will be shown in the Applied column of the row(s) that had the mismatch with details in the format “<Parameter Name> does not match meas state”.

The Status dialog provides you with the group and row of a Calibration and its current state and any error details if the status is not OK.

### RCal Status (Remote Query Only)

Returns a comma-separated list of the status of an individual row status in the format “Group”, “Row”, ‘Status’, “Details”

Remote Command	<code>:SYSTem:CALibration:ROW[1]   2   ...   100:STATus?</code>
Example	Return a comma-separated list for the status of an individual row, in the format “Group”, “Row”, ‘Status’, “Details”: <code>:SYST:CAL:ROW2:STAT?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

### All RCal Status (Remote Query Only)

Returns a comma-separated list of all entries in the Cal Status table in the format “Group”, “Row”, ‘Status’, “Details”, which is repeated for each row in the table. If there are no entries in the table, returns an empty string.

Remote Command	<code>:SYSTem:CALibration:STATus:ALL?</code>
Example	Return a comma-separated list of all entries in the Cal Status table in the format “Group”, “Row”, ‘Status’, “Details”, repeated for each row in the table: <code>:SYST:CAL:STAT:ALL?</code>

#### 6.9.1.14 Go to Row

Sets the selected row in the Cal table for the currently selected Cal Group.

Notes	You can only go to a row that has already been added
Preset	1
State Saved	Saved in instrument state
Min	1
Max	32

### 6.9.1.15 Insert Row Below

Adds a new row to the currently selected Cal Group, under the currently selected row in the table or after the sub opcode used in the SCPI command. The default values for each of the settings in the row is used.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:INSert</code>
Example	<code>:SYST:CAL:ROW2:INSert</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group  If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

### 6.9.1.16 Description

Provides a description for the currently selected Cal Group from which the operator can easily identify the Cal Group.

Remote Command	<code>:SYSTem:CALibration:DESCription "Description"</code> <code>:SYSTem:CALibration:DESCription?</code>
Example	<code>:SYST:CAL:DESC "Description"</code>
Notes	Also shown on the <b>Calibration</b> menu panel, but limited to the first 18 characters
Dependencies	The SCPI command is applied to the currently selected Cal Group
State Saved	Saved in instrument state

### 6.9.1.17 Use Current Meas

Takes the settings from the current running measurement state to populate the Cal Row settings of the currently selected Cal Group.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:UCMeas</code>
Example	<code>:SYST:CAL:ROW2:UCM</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group  If the group table is empty and subopcode is omitted or 1, a new row is created and populated using the current running measurement  If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated  Pressing the control or sending the SCPI command in measurements that do not support this parameter generates error -221, “Settings conflict; Feature not supported for this measurement”

### 6.9.1.18 Duplicate Row

Creates a new row the currently selected row, and populates the new row with the settings from the selected row of the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:DUPLicate</code>
Example	<code>:SYST:CAL:ROW2:DUPL</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group  If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated

### 6.9.1.19 Delete Row

Deletes the settings from the selected row of the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:DELeTe</code>
Example	<code>:SYST:CAL:ROW2:DEL</code>
Notes	Disabled if the Cal Group contains no Cal rows
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group  If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

### 6.9.1.20 Delete All

Deletes all the Cals in the currently selected Cal Group

Remote Command	<code>:SYSTem:CALibration:DELeTe:ALL</code>
Example	<code>:SYST:CAL:DEL:ALL</code>
Notes	Disabled if the Cal Group contains no Cal rows
Dependencies	The SCPI command is applied to the currently selected Cal Group

### 6.9.1.21 Calibrate

Determines whether the Cal row should be included when Calibrate Selected is executed.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:CALibrate:STATe ON   OFF   1   0</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:CALibrate:STATe?</code>
----------------	--

Example	<code>:SYST:CAL:ROW2:CAL:STAT ON</code> <code>:SYST:CAL:ROW2:CAL:STAT?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	All <b>OFF</b>
State Saved	Saved in instrument state
Range	<b>ON OFF</b>

### 6.9.1.22 Apply

Determines the Cal that is applied.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:APPLy:STATe ON   OFF   1   0</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:APPLy:STATe?</code>
Example	<code>:SYST:CAL:ROW2:APPL:STAT ON</code> <code>:SYST:CAL:ROW2:APPL:STAT?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated You can only check the <b>Apply</b> checkbox for a Cal that has been executed. If you attempt to select the <b>Apply</b> checkbox for Cal's that have not been executed, the advisory message “Cal must be executed before it can be applied” is displayed If Apply Cal is <b>ON</b> , and you attempt to check the <b>Apply</b> checkbox for a Cal that is invalid for use with the current measurement state, the error “Cal invalid with current measurement settings is shown, and the checkbox remains unchecked
Couplings	When the <b>Apply</b> check box is checked, if the Apply Cal Group setting is <b>OFF</b> , it will be turned on. Calibrations are only applied when the Apply Cal Group is <b>ON</b>
Preset	All <b>OFF</b>
State Saved	Saved in instrument state
Range	<b>ON OFF</b>
Annotation	If <i>any</i> Cal check box in any group is checked and Apply Cal Group for that group is <b>ON</b> , RCal in the Meas Bar displays in amber to indicate Calibrations are in use

### 6.9.1.23 Name

Sets an ASCII text field allowing you to name the selected Cal

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:NAME &lt;string&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:NAME?</code>
Example	<code>:SYST:CAL:ROW2:NAM "Monday AM Cal"</code>
Notes	45 chars max; may not fit on display if max chars used
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	“Cal #”, where # is corresponding Cal number
State Saved	Saved in instrument state

### 6.9.1.24 Last Cal

Displays the date and time the selected Cal was last executed. Read only field.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:LAST?</code>
Example	Return data and time Cal 2 was last executed: <code>:SYST:CAL:ROW2:LAST?</code>
Notes	Returns a string containing the date and time the Cal was executed. If the Cal has never been executed, or any of the settings are changed, SCPI returns an empty string, and the front panel displays “---”
Dependencies	The SCPI query applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

### 6.9.1.25 Cal Applied

Displays the status of a Cal once it is applied. Is either Yes or No, depending on if the Cal was successfully applied or not. See RCalStatus for more details. If it is not being applied, the field shows “---”. Read-only field.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:CAPLied?</code>
Example	Return Cal Stats of Cal 2: <code>:SYST:CAL:ROW2:CAPP?</code>
Notes	Returns a string containing the date and time the Cal was executed. If the Cal has never been executed, or any of the settings are changed, SCPI returns an empty string, and the front panel displays “---”
Dependencies	The SCPI query applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

### 6.9.1.26 Cal Type

Specifies how the calibration is to be performed on the selected Cal. Options are;

- **MAGNitude**: A single CW tone is measured at the center of the screen for each frequency point
- **COMPLex**: A comb signal is measured across the full IF passband at each frequency point. Magnitude and Phase are measured

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:TYPE MAGNitude   COMPLex</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:TYPE?</code>
Example	<code>:SYST:CAL:ROW2:TYPE COMP</code>
Dependencies	Only available if the selected RCal module has a license for complex calibrations. If it does not, this control is disabled  The SCPI command applies to the currently selected Cal Group  If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<b>MAGNitude</b>
State Saved	Saved in instrument state
Range	<b>MAGNitude COMPLex</b>

### 6.9.1.27 Start Freq

Specifies the start frequency of the selected Cal.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:START &lt;freq&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:START?</code>
Example	<code>:SYST:CAL:ROW2:FREQ:STAR 1e9</code>
Notes	Max values depend on Hardware Options (503, 507, 508, 513, 526)
Dependencies	The SCPI command applies to the currently selected Cal Group  If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated  By direct entry:  You cannot set Start Frequency > Stop Frequency. You can set the Start frequency = Stop frequency. If you set Start Frequency = Stop Frequency, " <b>Freq Step</b> " on page 2741 is adjusted to 0, and " <b>Freq Points</b> " on page 2741 is adjusted to 1  With the knob or step keys:  If you set Start Frequency = Stop Frequency, <b>Freq Step</b> is adjusted to 0, and <b>Freq Points</b> is adjusted to 1
Couplings	If you change the start frequency of the selected range to a value > the range's stop frequency, the

	<p>stop frequency of the previous range is changed to the same value. <b>Freq Step</b> is set to 0 Hz and <b>Freq Points</b> is set to 1</p> <p>If you change the start frequency <math>\leq</math> min frequency of the instrument, the start frequency of the selected range is set to the minimum frequency of the instrument</p> <p>If you change the start frequency <math>\geq</math> maximum frequency of the instrument, the start frequency of the selected range is set to the maximum frequency of the instrument and the stop frequency of selected range is set to the maximum frequency of the instrument. <b>Freq Step</b> is set to 0 Hz and <b>Freq Points</b> is set to 1</p>
Preset	Depends on the instrument maximum frequency
State Saved	Saved in instrument state
Min	If <b>Scale Type</b> is set to Lin, the min Start Frequency changes to -80 MHz
Max	Depends on the instrument maximum frequency – 10 Hz minimum span

### 6.9.1.28 Stop Freq

Specifies the stop frequency of the selected Cal.

Remote Command	<pre>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:STOP &lt;freq&gt; :SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:STOP?</pre>
Example	<pre>:SYST:CAL:ROW2:FREQ:STOP 1e9</pre>
Notes	Max values depend on Hardware Options
Dependencies	<p>The SCPI command applies to the currently selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p> <p>By direct entry:</p> <p>You cannot set Stop frequency &lt; Start frequency. You cannot set Start frequency = Stop frequency. You can set Start frequency = Stop frequency. If you set Start Frequency = Stop Frequency, "<b>Freq Step</b>" on page 2741 is adjusted to 0, and "<b>Freq Points</b>" on page 2741 is adjusted to 1</p> <p>With the knob or step keys:</p> <p>If you set Start Frequency = Stop Frequency, <b>Freq Step</b> is adjusted to 0, and <b>Freq Points</b> is adjusted to 1</p>
Couplings	<p>If you change the stop frequency of the selected range to a value &lt; the range's start frequency the start frequency of the range is changed to the same value. <b>Freq Step</b> is set to 0 Hz and <b>Freq Points</b> is set to 1</p> <p>If you change the stop frequency <math>\geq</math> the maximum frequency of the instrument, the stop frequency of the selected range is set to the maximum frequency of the instrument</p> <p>If you change stop frequency <math>\leq</math> the minimum frequency of the instrument, the stop frequency of the selected range is set to the minimum frequency of the instrument and the start frequency of the selected range is set to the minimum frequency of the instrument. <b>Freq Step</b> is set to 0 Hz and <b>Freq Points</b> is set to 1</p>
Preset	Depends on the instrument maximum frequency

State Saved	Saved in instrument state
Min	If <b>Scale Type</b> is Lin, the min Stop Frequency is changed to -79.999990 MHz
Max	Depends on the instrument maximum frequency

### 6.9.1.29 Freq Step

Specifies the step frequency of the selected Cal. This determines the points between the start and stop frequencies to use for Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:STEP &lt;freq&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:STEP?</code>
Example	<code>:SYST:CAL:ROW2:FREQ:STEP 1e9</code>
Notes	Max values depend on Hardware Options
Dependencies	The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated You cannot set <b>Freq Step</b> > Stop frequency - Start frequency Attempts to set <b>Freq Step</b> > Stop frequency - Start frequency results in <b>Freq Step</b> being set to Stop frequency - Start frequency
Couplings	Coupled to " <b>Freq Points</b> " on page 2741. Changing <b>Freq Step</b> adjusts <b>Freq Points</b> using $((\text{Stop Freq} - \text{Start Freq}) / \text{Freq Step} + 1)$ and clips to the next integer value, which may result in <b>Freq Step</b> being clipped too If <b>Freq Step</b> is set to a value > Stop Freq - Start Freq <b>Stop Freq</b> is increased, and <b>Freq Points</b> is set to 1
Preset	All 10 kHz
State Saved	Saved in instrument state
Min	1 Hz
Max	Depends on the instrument maximum frequency

### 6.9.1.30 Freq Points

Specifies the frequency points of the selected Cal. This determines the points between the start and stop frequencies to use for Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:POINTs</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQUENCY:POINTs?</code>
Example	<code>:SYST:CAL:ROW2:FREQ:POIN 100</code>
Couplings	Coupled to " <b>Freq Step</b> " on page 2741. Changing <b>Freq Points</b> adjusts <b>Freq Step</b> using $(\text{Stop Freq} - \text{Start Freq}) / (\text{Freq Points} - 1)$ and clips to the next integer value, which may result in <b>Freq Step</b> being clipped

Preset	1
Min	1
Max	100000

### 6.9.1.31 Mech Atten Type

Specifies the Mech Atten type to use:

- **STEP**: Use multiple Mech Atten states determined by Mech Atten Start, Mech Atten Stop and Mech Atten Step
- **ALL**: Use all the attenuator states
- **BYPass**: Bypasses the attenuator

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:TYPE STEP   ALL   BYPass</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:TYPE?</code>
Example	<code>:SYST:CAL:ROW3:ATT:TYPE STEP</code>
Dependencies	The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<b>STEP</b>
State Saved	Saved in instrument state
Range	<b>STEP ALL BYPass</b>

### 6.9.1.32 Mech Atten Start

Determines the first Mechanical Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:START &lt;rel_amp&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:START?</code>
Example	<code>:SYST:CAL:ROW3:ATT:START 20</code>
Dependencies	Disabled unless " <b>Mech Atten Type</b> " on page 2742 is <b>STEP</b> The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated
Couplings	Coupled to " <b>Mech Atten Stop</b> " on page 2743. <b>Mech Atten Start</b> must be $\leq$ <b>Mech Atten Stop</b> . If <b>Mech Atten Start</b> $>$ <b>Mech Atten Stop</b> , then <b>Mech Atten Stop</b> = <b>Mech Atten Start</b>
Preset	10 dB
State Saved	Saved in instrument state
Min	0 dB

6 Input/Output  
6.9 Calibration

	The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it must be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value, which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased
Max	CXA Option 503 or 507: 50 dB EXA: 60 dB All other models: 70 dB  Note that, in the single attenuator configuration, the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and is reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB

### 6.9.1.33 Mech Atten Stop

Determines the last Mechanical Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:STOP &lt;rel_amp1&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:STOP?</code>	
Example	<code>:SYST:CAL:ROW3:ATT:STOP 30</code>	
Dependencies	Disabled unless " <a href="#">Mech Atten Type</a> " on page 2742 is <b>STEP</b> The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated	
Couplings	Coupled to " <a href="#">Mech Atten Start</a> " on page 2742. <b>Mech Atten Start</b> must be $\leq$ <b>Mech Atten Stop</b> . If <b>Mech Atten Start</b> $>$ <b>Mech Atten Stop</b> , then <b>Mech Atten Stop</b> = <b>Mech Atten Start</b>	
Preset	10 dB	
State Saved	Saved in instrument state	
Min	0 dB  The attenuation set by this control cannot be decreased below 6 dB with the knob or step keys. To get to a value below 6 dB it must be directly entered from the keypad or via SCPI. This protects from adjusting the attenuation to a dangerously small value which can put the instrument at risk of damage to input circuitry. However, if the current mechanical attenuation is below 6 dB it can be increased with the knob and step keys, but not decreased	
Max	CXA Option 503 or 507	50 dB
	EXA	60 dB
	All other models	70 dB
	Note that, in the single attenuator configuration, the total of ATT and EATT cannot exceed 50 dB, so if the EATT is set to 24 dB first, the main attenuation cannot be greater than 26 dB and is reduced accordingly; if the main attenuator is set to 40 dB first, EATT cannot be greater than 10 dB	

### 6.9.1.34 Mech Atten Step

Determines the Mech Attenuation Step. This determines the points between the Mechanical Attenuation min and max to use for Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:STEP &lt;rel_amp1&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:ATTenuation:STEP?</code>
Example	<code>:SYST:CAL:ROW2:ATT:STEP 2dB</code>
Dependencies	Disabled unless " <b>Mech Atten Type</b> " on page 2742 is <b>STEP</b> The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Preset	2 dB
State Saved	Saved in instrument state
Min	2 dB
Max	10 dB

### 6.9.1.35 Elec Atten Type

Specifies the Elec Atten type to use:

- **STEP**: Use multiple Elec Atten states determined by Elec Atten Start, Elec Atten Stop and Elec Atten Step
- **ALL**: Use all the attenuator states
- **BYPass**: Bypasses the attenuator

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:TYPE STEP   ALL   BYPass</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:TYPE?</code>
Example	<code>:SYST:CAL:ROW3:EATT:TYPE STEP</code>
Dependencies	The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Preset	<b>STEP</b>
State Saved	Saved in instrument state
Range	<b>STEP ALL BYPass</b>

### 6.9.1.36 Elec Atten Start

Determines the first Electronic Attenuator to be used in the Calibration

6 Input/Output  
6.9 Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:START &lt;rel_amp&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:START?</code>
Example	<code>:SYST:CAL:ROW3:EATT:START 0</code>
Dependencies	<p>Only appears in Dual Attenuator models with an Electronic Attenuator installed and licensed. It does not appear in models with the Single Attenuator configuration, as in the single attenuator configuration there is no “electronic attenuator” there is only a single integrated attenuator (which has both a mechanical and electronic stage)</p> <p>Disabled unless <b>"Elec Atten Type" on page 2744</b> is <b>STEP</b></p> <p>The electronic attenuator is unavailable above the low band (0-3.6 GHz, 0-3.4 GHz, or 0-3 GHz, depending on the model). If the low band ranges from 0-3.6 GHz, and Stop Frequency of the Calibration is &gt; 3.6 GHz, then this parameter is grayed out</p> <p>If the Internal Preamp is on, meaning it is set to Low Band or Full, or the electronic attenuator is unavailable, then this parameter is grayed-out</p> <p>If either of the above is true, and if the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is sent</p> <p>If both of the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>The SCPI command applies to the currently selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p>
Couplings	Coupled to Elec Atten Stop. Elec Atten Start must be <= Elec Atten Stop. If Elec Atten Start > Elec Atten Stop, Elec Atten Stop = Elec Atten Start
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	24 dB

### 6.9.1.37 Elec Atten Stop

Determines the last Electrical Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:STOP &lt;rel_amp&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:STOP?</code>
Example	<code>:SYST:CAL:ROW3:EATT:STOP 10</code>
Dependencies	<p>Only appears in Dual Attenuator models with an Electronic Attenuator installed and licensed. It does not appear in models with the Single Attenuator configuration, as in the single attenuator configuration there is no “electronic attenuator” there is only a single integrated attenuator (which has both a mechanical and electronic stage)</p> <p>Disabled unless <b>"Elec Atten Type" on page 2744</b> is <b>STEP</b></p> <p>The electronic attenuator is unavailable above the low band (0-3.6 GHz, 0-3.4 GHz or 0-3 GHz, depending on the model). If the low band ranges from 0-3.6 GHz, and Stop Frequency of the</p>

---

	<p>Calibration is &gt; 3.6 GHz, then this parameter is grayed out</p> <p>If the Internal Preamp is on, meaning it is set to Low Band or Full, the electronic attenuator is unavailable, then this parameter is grayed out</p> <p>If either of the above is true, and if the SCPI command is sent, an error indicating that the electronic attenuator is unavailable is sent</p> <p>If both of the above are true, pressing the control generates error message -221, in other words, the frequency range lockout takes precedence</p> <p>For SCPI, this query applies to the currently selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p>
Couplings	Coupled to Elec Atten Start. Elec Atten Stop must be >= Elec Atten Start. If Elec Atten Stop < Elec Atten Start, Elec Atten Start = Elec Atten Stop
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	24 dB

### 6.9.1.38 Elec Atten Step

Determines the Elec Attenuation Step. This determines the points between the Electric Attenuation min and max to use for Calibration.

---

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:STEP &lt;rel_amp&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:EATTenuation:STEP?</code>
Example	<code>:SYST:CAL:ROW2:EATT:STEP 2dB</code>
Dependencies	<p>Disabled unless "<a href="#">Elec Atten Type</a>" on page 2744 is STEP</p> <p>The SCPI command applies to the currently selected Cal Group</p> <p>If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated</p>
Preset	1 dB
State Saved	Saved in instrument state
Min	1 dB
Max	24 dB

### 6.9.1.39 Full Range Atten Type

Specifies the Full Range Atten type to use. The Full Range Attenuator adds a second input attenuator at the beginning of the RF Input 2, which enhances the protection and optimizes the performance of the extra internal mixers used by RF Input 2.

- **STEP**: Use multiple Full Range Atten states determined by Full Range Atten Start and Full Range Atten Stop
- **ALL**: Use all the attenuator states

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:TYPE STEP   ALL  </code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:TYPE?</code>
Example	<code>:SYST:CAL:ROW3:FATT:TYPE STEP</code>
Dependencies	Only appears if input RF is selected, and RF Input Port 2 is selected, and the Full Range Attenuator exists The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<b>STEP</b>
State Saved	Saved in instrument state
Range	<b>STEP ALL </b>

#### 6.9.1.40 Full Range Atten Start

Determines the first Full Range Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:START &lt;rel_amp&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:START?</code>
Example	<code>:SYST:CAL:ROW3:FATT:START 0</code>
Dependencies	Only appears in N9041B, when the RF input is selected, and the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed Disabled unless " <b>Full Range Atten Type</b> " on page 2746 is <b>STEP</b> The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Couplings	Coupled to Full Range Atten Stop. Full Range Atten Start must be <= Full Range Atten Stop. If Full Range Atten Start > Full Range Atten Stop, Full Range Atten Stop = Full Range Atten Start
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB

#### 6.9.1.41 Full Range Atten Stop

Determines the last Full Range Attenuator to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:STOP &lt;rel_amp1&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FATTenuation:STOP?</code>
Example	<code>:SYST:CAL:ROW3:FAT:PT:STOP 10</code>
Dependencies	Only appears in N9041B, when the RF input is selected, and the RF Input Port is set to RF Input 2, and the Full Range Attenuator is installed Disabled unless " <a href="#">Full Range Atten Type</a> " on page 2746 is <b>STEP</b> The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Couplings	Coupled to Full Range Atten Start. Full Range Atten Stop must be $\geq$ Full Range Atten Start. If Full Atten Stop $<$ Full Range Atten Start, Full Range Atten Start = Full Range Atten Stop
Preset	20 dB
State Saved	Saved in instrument state
Min	0 dB
Max	Only valid values are 0, 6, 14, 20 dB

#### 6.9.1.42 Frequency Extender Attenuation Type

Specifies the Frequency Extender Attenuation type to use. **Frequency Extender Attenuation** is applied to the frequency extender’s high frequency input signal path (for example, with a V3050A frequency extender, the high frequency path is 50 GHz to 110 GHz).

- **STEP**: Use multiple Frequency Extender Attenuation states determined by Frequency Extender Attenuation Start and Frequency Extender Attenuation Stop
- **ALL**: Use all the attenuator states

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:TYPE STEP   ALL</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:TYPE?</code>
Example	<code>:SYST:CAL:ROW3:FEAT:TYPE STEP</code>
Dependencies	Only applies, and is only visible, when the External RF (ERFIN) input is selected The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<b>STEP</b>
State Saved	No
Range	<b>STEP ALL REFerence</b>

### 6.9.1.43 Frequency Extender Attenuation Start

Determines the first Frequency Extender Attenuator to be used in the Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:START &lt;rel_amp1&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:START?</code>
Example	<code>:SYST:CAL:ROW3:FEAT:START 0</code>
Dependencies	Only applies, and is only visible, when the External RF (ERFIN) input is selected Disabled unless "Frequency Extender Attenuation Type" on page 2748 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Couplings	Coupled to Frequency Extender Attenuation Stop. Frequency Extender Attenuation Start must be <= Frequency Extender Attenuation Stop. If Frequency Extender Attenuation Start > Frequency Extender Attenuation Stop, Frequency Extender Attenuation Stop = Frequency Extender Attenuation Start
Preset	0 dB
State Saved	Saved in instrument state
Min	0 dB
Max	V3050A: 26 dB

### 6.9.1.44 Frequency Extender Attenuation Stop

Determines the last Frequency Extender Attenuation to be used in the Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:STOP &lt;rel_amp1&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:STOP?</code>
Example	<code>:SYST:CAL:ROW3:FEAT:PT:STOP 26</code>
Dependencies	Only applies, and is only visible, when the External RF (ERFIN) input is selected Disabled unless "Frequency Extender Attenuation Type" on page 2748 is STEP The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message "-221, Settings conflict; Subopcode does not reference an existing Cal row" is generated
Couplings	Coupled to Frequency Extender Attenuation Start. Frequency Extender Attenuation Stop must be >= Frequency Extender Attenuation Start. If Frequency Extender Attenuation Stop < Frequency Extender Attenuation Start, Frequency Extender Attenuation Start = Frequency Extender Attenuation Stop
Preset	26 dB
State Saved	Saved in instrument state
Min	0 dB
Max	V3050A: 26 dB

### 6.9.1.45 Frequency Extender Atten Step

Determines the Frequency Extender Attenuation Step. This determines the points between the Frequency Extender Attenuation min and max to use for Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:STEP &lt;rel_amp1&gt;</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FEATtenuation:STEP?</code>
Example	<code>:SYST:CAL:ROW2:FEAT:STEP 2dB</code>
Dependencies	Only applies, and is only visible, when the External RF ( <b>ERFIN</b> ) input is selected The SCPI command applies to the currently selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	1 dB
State Saved	No
Min	1 dB
Max	V3050A: 26 dB

### 6.9.1.46 IF Path

Determines the IF Path to be used in the Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:IF:PATH B10M   B25M   B40M   B85M   B125M   B140M   B160M   B255M   B510M   B1G   B1500M   B2G   B4G   EXT</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:IF:PATH?</code>																								
Example	<code>:SYST:CAL:ROW2:IF:PATH B25M</code>																								
Notes	<table border="1"> <tr><td><b>B10M</b></td><td>10 MHz</td></tr> <tr><td><b>B25M</b></td><td>25 MHz</td></tr> <tr><td><b>B40M</b></td><td>40 MHz</td></tr> <tr><td><b>B85M</b></td><td>85 MHz</td></tr> <tr><td><b>B125M</b></td><td>125 MHz</td></tr> <tr><td><b>B140M</b></td><td>140 MHz</td></tr> <tr><td><b>B160M</b></td><td>160 MHz</td></tr> <tr><td><b>B255M</b></td><td>255 MHz</td></tr> <tr><td><b>B510M</b></td><td>510 MHz</td></tr> <tr><td><b>B1G</b></td><td>1 GHz</td></tr> <tr><td><b>B1500M</b></td><td>1.5 GHz</td></tr> <tr><td><b>B2G</b></td><td>2 GHz</td></tr> </table>	<b>B10M</b>	10 MHz	<b>B25M</b>	25 MHz	<b>B40M</b>	40 MHz	<b>B85M</b>	85 MHz	<b>B125M</b>	125 MHz	<b>B140M</b>	140 MHz	<b>B160M</b>	160 MHz	<b>B255M</b>	255 MHz	<b>B510M</b>	510 MHz	<b>B1G</b>	1 GHz	<b>B1500M</b>	1.5 GHz	<b>B2G</b>	2 GHz
<b>B10M</b>	10 MHz																								
<b>B25M</b>	25 MHz																								
<b>B40M</b>	40 MHz																								
<b>B85M</b>	85 MHz																								
<b>B125M</b>	125 MHz																								
<b>B140M</b>	140 MHz																								
<b>B160M</b>	160 MHz																								
<b>B255M</b>	255 MHz																								
<b>B510M</b>	510 MHz																								
<b>B1G</b>	1 GHz																								
<b>B1500M</b>	1.5 GHz																								
<b>B2G</b>	2 GHz																								

6 Input/Output  
6.9 Calibration

	<b>B4G</b>	4 GHz
	<b>EXT</b>	Depends on the hardware
	In cases where the path is not available but is selected via SCPI, generates error -241, "Hardware missing; Option not installed"	
Dependencies	<b>Path</b>	<b>Availability requires Installation of:</b>
	25 MHz	25 MHz or wider IF Bandwidth option
	40 MHz	40 MHz or wider IF Bandwidth option
	85 MHz	85 MHz or wider IF Bandwidth option
	125 MHz	125 MHz or wider IF Bandwidth option
	140 MHz	Option B1X
	160 MHz	Option B1Y. B1Y cannot be installed without B1X
	255 MHz	Option B2X or wider IF Bandwidth option
	510 MHz	Option B5Y or wider IF Bandwidth option
	1 GHz	Option H1G/B1G or wider IF Bandwidth option
	2 GHz	Option B2G(R20) or wider IF Bandwidth option
	4 GHz	Option B4G(R40) or wider IF Bandwidth option
	1.5 GHz	Option R15
	If Option B85 <i>and</i> either Option B1A or Option B1X are installed, the 85 MHz option does not appear, and <b>B85M</b> is disabled. Sending the command to select <b>B85M</b> in this case generates an error -221, "Settings Conflict; Use wider bandwidth selection"	
	If Option B1A <i>and</i> Option B1X are both installed, the 125 MHz option does not appear, and <b>B125M</b> is disabled. Sending the command to select <b>B125M</b> in this case generates an error -221, "Settings Conflict; Use wider bandwidth selection"	
	In cases where the path is not available, but is selected via SCPI, error -241, "Hardware missing; Option not installed" is generated	
	The preset value depends on the Digital IF BW setting of the default measurement	
Preset	If the 25 MHz path is not available, presets to 10 MHz	
State Saved	No	
Range	<b>B10M   B25M   B40M   B85M   B125M   B140M   B160M   B255M   B510M   B1G   B1500M   B2G   B4G   EXT</b>	

### 6.9.1.47 IF Gain

Determines the IF Gain to be used in the Calibration

Remote Command	<b>:SYSTem:CALibration:ROW[1] 2 ... 100:IF:GAIN[:STATE]AUTO HIGH LOW ALL</b> <b>:SYSTem:CALibration:ROW[1] 2 ... 100:IF:GAIN[:STATE]?</b>
----------------	--

Example	<code>:SYST:CAL:ROW3:IF:GAIN ALL</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<code>AUTO</code>
State Saved	Saved in instrument state
Range	Auto   High Gain   Low Gain   All

### 6.9.1.48 Preamp

Determines if the Preamp is to be used in the Calibration

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer[:RF]:GAIN:BAND OFF   LOW   FULL</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer:GAIN:BAND?</code>
Example	<code>:SYST:CAL:ROW2:POWer:GAIN:BAND OFF</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<code>OFF</code>
State Saved	Saved in instrument state
Range	<code>OFF   LOW   FULL</code>

### 6.9.1.49 Low Noise Amplifier (LNA)

Determines if the LNA is to be used in the Calibration.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer[:RF]:GAIN:LNA[:STATE] ON   OFF   1   0</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:POWer[:RF]:GAIN:LNA[:STATE]?</code>
Example	<code>:SYST:CAL:ROW2:POW:GAIN:LNA ON</code> <code>:SYST:CAL:ROW2:POW:GAIN:LNA?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<code>OFF</code>
State Saved	No
Range	<code>ON   OFF</code>

### 6.9.1.50 $\mu$ W Path Control

Determines the  $\mu$ W Path Control to be used in the Calibration.

Option	SCPI
Standard Path	STD
Low Noise Path	LNPath
$\mu$ W Presel Bypass	MPBypass
Full Bypass	FULL

---

Remote Command	<code>:SYSTEM:CALibration:ROW[1] 2 ... 100:POWer[:RF]:MW:PATH STD   LNPath   MPBypass   FULL</code> <code>:SYSTEM:CALibration:ROW[1] 2 ... 100:POWer[:RF]:MW:PATH?</code>
Example	<code>:SYST:CAL:ROW2:POW:MW:PATH FULL</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated This column is not shown in the table unless <i>either</i> Option MPB or Option LNB is present and licensed The Low Noise Path selection does not appear unless Option LNP is present and licensed The $\mu$ W Presel Bypass selection does not appear unless Option MPB is present and licensed The Full Bypass selection does not appear unless Options LNP, MPB and FBP are installed and licensed In any of these cases, if the required options are not present and the SCPI command is sent, error - 241, "Hardware missing; Option not installed" is generated
Preset	STD
State Saved	Saved in instrument state
Range	STD LNPath MPBypass FULL

### 6.9.1.51 Coupling

Determines the Coupling to be used in the Calibration

Remote Command	<code>:SYSTEM:CALibration:ROW[1] 2 ... 100:COUPling AC   DC</code> <code>:SYSTEM:CALibration:ROW[1] 2 ... 100:COUPling?</code>
Example	<code>:SYST:CAL:ROW3:COUP AC</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	AC

State Saved	Saved in instrument state
Range	AC DC

### 6.9.1.52 Phase Noise Optimization

Selects the LO (local oscillator) phase noise behavior for various desired operating conditions.

For full details, see "[Parameter Options & Installed Options](#)" on page 2754 below.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQuency:SYNTHeSis[:STATe] 1   ...   5</code> For the meaning of each numeric option value, see " <a href="#">Parameter Options &amp; Installed Options</a> " on page 2754 below <code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQuency:SYNTHeSis[:STATe]?</code>
Example	Select optimization for best wide offset phase noise: <code>:SYST:CAL:ROW1:FREQ:SYNT 2</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Couplings	Coupled with " <a href="#">Phase Noise Optimization All Option</a> " on page 2759 When <b>Phase Noise Optimization All</b> is <b>ON</b> , selects all available LO mappings, and Phase Noise Optimization parameter will display <b>All</b> in the Configuration table. SCPI Query is still available to determine which parameter will be displayed when <b>Phase Noise Optimization All</b> is <b>OFF</b>
Preset	2
State Saved	Yes
Range	See " <a href="#">Ranges</a> " on page 2759 below
Min	1
Max	5

### Parameter Options & Installed Options

The Phase Noise Optimization control lets you optimize the setup and behavior of the Local Oscillator (LO) depending on your specific measurement conditions. You may wish to trade off noise and speed, for example, to make a measurement faster without regard to noise or with optimum noise characteristics without regard to speed.

Parameter Values Summary

Option	#	Description
<a href="#">"Balanced" on page 2756</a>	1	– In instruments with EPO, balances close-in phase noise with spur avoidance

Option	#	Description
		– In instruments without EPO optimizes phase noise for small frequency offsets from the carrier
"Best Wide-offset" on page 2756	2	Optimizes phase noise for wide frequency offsets from the carrier
"Fast Tuning" on page 2756	3	Optimizes LO for tuning speed
"Best Close-in" on page 2755	4 or 1*	– In instruments with EPO, emphasizes close-in phase noise performance without regard to spur avoidance – In instruments without EPO, this setting is accepted but no action is taken
"Best Spurs" on page 2756	5	– In instruments with EPO, emphasizes spur avoidance over close-in phase noise performance – In instruments without EPO, this setting is accepted but no action taken
Auto	-	Automatically selects LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions

\*Dependent on Option EPO installation. See ["Best Close-in" on page 2755](#) below.

The actual behavior varies somewhat depending on model number and option; for example, you always get Fast Tuning by choosing Option #3, but in some models, ["Fast Tuning" on page 2756](#) is identical in effect to ["Best Close-in" on page 2755](#).

### Best Close-in

Without option EPO

`:FREQ:SYNT 1`

The LO phase noise is optimized for smaller offsets from the carrier, at the expense of phase noise farther out.

The actual frequency offset within which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset < 20 kHz]

With option EPO

`:FREQ:SYNT 4`

In instruments with Option EPO, the LO is configured for the best possible close-in phase noise (offsets up to 600 kHz from the carrier), regardless of spurious products that occur with some center frequencies. Because this is generally less desirable for close-in measurements than the ["Balanced" on page 2756](#) setting, parameter 1 selects ["Balanced" on page 2756](#) in EPO instruments, in the interests of optimizing

code compatibility across the family. Parameter 4 selects "Best Close-in" on page 2755, which is usually not as good a choice as "Balanced" on page 2756.

### Balanced

:FREQ:SYNT 1

In instruments with EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within  $\pm 1$  octave around 400 kHz offset. The spurs will always be below  $-70$  dBc.

### Best Spurs

:FREQ:SYNT 5

In instruments with EP0, the LO is configured for better phase noise than the "Best Wide-offset" on page 2756 case close to the carrier, but the configuration has 11 dB worse phase noise than the "Best Close-in" on page 2755 case mostly within  $\pm 1$  octave around 300 kHz offset. Spurs are even lower than in the "Balanced" on page 2756 case at better than  $-90$  dBc, whether or not the carrier is on-screen.

This setting is never selected when Phase Noise Optimization is in Auto, you must select it manually.

### Best Wide-offset

:FREQ:SYNT 2

The LO phase noise is optimized for wider offsets from the carrier. Optimization is especially improved for offsets from 70 kHz to 300 kHz. Closer offsets are compromised and the throughput of measurements (especially remote measurements where the center frequency is changing rapidly), is reduced.

The actual frequency offset beyond which noise is optimized is shown with in square brackets, as this can vary depending on the hardware set in use. For example, in some instruments this annotation appears as [offset >30 kHz]

In instruments with Option EP0, the LO is configured for the best possible phase noise at offsets up to 600 kHz from the carrier whenever there are no significant spurs within the span observed with an on-screen carrier. When there will be such a spur, the LO is reconfigured in a way that allows the phase noise to increase by 7 dB mostly within  $\pm 1$  octave around 400 kHz offset. The spurs will always be below  $-70$  dBc.

### Fast Tuning

:FREQ:SYNT 3

In this mode, the LO behavior compromises phase noise at many offsets from the carrier in order to allow rapid measurement throughput when changing the center frequency or span. The term ["Fast Tuning" on page 2756](#) refers to the time it takes to move the local oscillator to the start frequency and begin a sweep; this setting does not impact the actual sweep time in any way.

In instruments with EP1, the LO behavior compromises phase noise at offsets below 4 MHz in order to improve measurement throughput. The throughput is especially affected when moving the LO more than 2.5 MHz and up to 10 MHz from the stop frequency to the next start frequency.

In instruments with Option EPO, this is the same configuration as ["Best Spurs" on page 2756](#). It is available with the ["Fast Tuning" on page 2756](#) label for convenience, and to make the user interface more consistent with other X-Series instrument family members.

(In models whose hardware does not provide for a ["Fast Tuning" on page 2756](#) option, the settings for ["Best Close-in" on page 2755](#) are used if ["Fast Tuning" on page 2756](#) is selected. This gives the fastest possible tuning for that hardware set.)

### Auto

`:FREQ:SYNT:AUTO ON`

Selects the LO (local oscillator) phase noise behavior to optimize dynamic range and speed for various instrument operating conditions. The selection rules are as follows.

### Auto Optimization Rules

X-Series instruments have several grades of LO, offering different configurations when in the Auto Mode. The rules for Auto selection are as follows:

Models with Option	Conditions	Selection
EPO	Center frequency is < 699.9 kHz	<a href="#">"Balanced" on page 2756</a>
Models with option EPO have a two stage local oscillator, which switches to a single loop for fast tuning (available in UXA)	Span > 114.1 MHz, <i>or</i>	<a href="#">"Fast Tuning" on page 2756</a>
	RBW > 800 kHz	<a href="#">"Fast Tuning" on page 2756</a>
	RBW > 290 kHz, <i>or</i>	<a href="#">"Best Wide-offset" on page 2756</a>
	Span > 4.2 MHz	<a href="#">"Best Wide-offset" on page 2756</a>
	Other conditions	<a href="#">"Balanced" on page 2756</a>
EP1	Span > 44.44 MHz, <i>or</i>	<a href="#">"Fast Tuning" on page 2756</a>
Models with option EP1 have a two-	RBW > 1.9 MHz, <i>or</i>	<a href="#">"Fast Tuning" on page 2756</a>

Models with Option	Conditions	Selection
loop local oscillator, which switches to a single loop for fast tuning (available in PXA)	Source Mode is set to "Tracking" Center frequency is < 195 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 1.3 MHz <i>and</i> RBW <= 75 kHz All other conditions	"Best Close-in" on page 2755  "Best Wide-offset" on page 2756
EP2 Models with option EP2 use a different loop bandwidth for the fast-tuning choice, which is a compromise between tuning speed and phase noise, giving good tuning speed at all offsets. Although not as good as for "Best Close-in" on page 2755; this is useful when you have to look across a wide range of spans (available, for example, in MXA for excellent phase noise)	CF < 130 kHz, <i>or</i> CF > 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 40 kHz  Span > 22 MHz, <i>or</i> RBW > 400 kHz, <i>or</i> CF ≤ 12 MHz <i>and</i> Span < 495 kHz <i>and</i> RBW < 23 kHz All other conditions	"Best Close-in" on page 2755  "Fast Tuning" on page 2756  "Best Wide-offset" on page 2756
EP4 (available in CXA for improved phase noise)	Span > 101 MHz <i>or</i> RBW > 1.15 MHz <i>or</i> Source Mode is set to "Tracking" CF is < 109 kHz <i>or</i> CF >= 4.95 MHz <i>and</i> Span <= 666 kHz <i>and</i> RBW < 28 kHz All other conditions	"Fast Tuning" on page 2756  "Best Close-in" on page 2755  "Best Wide-offset" on page 2756
All Other Models Note that in these models, the hardware does not actually provide for an extra-fast tuning option, so the settings for "Fast Tuning" on page 2756 are actually the same as "Best Close-in" on page 2755, but the rules are implemented this way so that the user who doesn't care about phase noise but does care about tuning speed doesn't have to remember which of the other two settings gives faster tuning	Span > 12.34 MHz, <i>or</i> RBW > 250 kHz, <i>or</i> Source Mode is set to "Tracking"  Center frequency is < 25 kHz, <i>or</i> CF >= 1 MHz <i>and</i> Span <= 141.4 kHz <i>and</i> RBW <= 5 kHz All other conditions	"Fast Tuning" on page 2756  "Best Close-in" on page 2755  "Best Wide-offset" on page 2756

In all the above cases:

- The RBW to be used in the calculations is the equivalent -3 dB bandwidth of the current RBW filter
- The rules apply whether in swept spans, zero span, or FFT spans

## Ranges

Option	Option #	Phase Noise Option	Range
No EPx Option	1	Best Close-in	[offset < 20 kHz]
	2	Best Wide-offset	[offset > 30 kHz]
	3	Fast Tuning	[same as Best Close-In]
EPO	4	Best Close-in	[offset < 600 kHz]
	1	Balanced	[offset < 600 kHz]
	5	Best Spurs	[offset < 600 kHz]
EP1	2	Best Wide-offset	[offset > 800 kHz]
	3	Fast Tuning	[same as Best Close-In]
	1	Best Close-in	[offset < 140 kHz]
EP2, EP3, EP5	2	Best Wide-offset	[offset > 160 kHz]
	3	Fast Tuning	[single loop]
	1	Best Close-in	[offset < 70 kHz]
EP4	2	Best Wide-offset	[offset > 100 kHz]
	3	Fast Tuning	[medium loop bw]
	1	Best Close-in	[offset < 90 kHz]
	2	Best Wide-offset	[offset > 130 kHz]
	3	Fast Tuning	[same as Best Close-In]

### 6.9.1.53 Phase Noise Optimization All Option

Selects all available LO settings

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:FREQuency:SYNTHeSis:ALL[:STATe] ON   OFF   1   0 :SYSTem:CALibration:ROW[1] 2 ... 100:FREQuency:SYNTHeSis:ALL[:STATe]?</code>
Example	<code>:SYST:CAL:ROW1:FREQ:SYNT:ALL ON</code>
Notes	When this parameter is <b>ON</b> , it overrides the Phase Noise Optimization parameter, and selects all available LO settings
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated

Couplings	Coupled with " <a href="#">Phase Noise Optimization</a> " on page 2754. When this parameter is <b>ON</b> , it selects all available LO mappings, and <b>Phase Noise Optimization</b> parameter displays <b>All</b> in the Configuration table. When this parameter is <b>OFF</b> , the <b>Phase Noise Optimization</b> parameter displays its previously set value in the Configuration table
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>ON OFF</b>

### 6.9.1.54 Mixing Mode

Determines the LO Mixing Mode to be used.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:LO:MMODE NORMa1   ALTErnate   ALL</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:LO:MMODE?</code>
Example	<code>:SYST:CAL:ROW3:LO:MMOD NORM</code>
Dependencies	The SCPI command applies to the current selected Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221,Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	<b>NORMa1</b>
State Saved	Saved in instrument state
Range	<b>NORMa1 ALTErnate ALL</b>

### 6.9.1.55 Match State

Determines if the Cal settings must match exactly when applying the correction. If not, the system may find the closest matching state or interpolate between states.

Remote Command	<code>:SYSTem:CALibration:ROW[1] 2 ... 100:MATCH[:STATE] ON   OFF   1   0</code> <code>:SYSTem:CALibration:ROW[1] 2 ... 100:MATCH[:STATE]?</code>
Example	<code>:SYST:CAL4:MATC ON</code> <code>:SYST:CAL4:MATC?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group. The subopcode is used to identify the Cal row in the Cal Group If the subopcode does not reference an existing Cal row in the Cal Group, the error message “-221, Settings conflict; Subopcode does not reference an existing Cal row” is generated
Preset	All True
State Saved	Saved in instrument state
Range	True   False

## 6.9.2 Cal Group

Specifies the selected Calibration Group. You can use different Cal Groups for different external hardware configurations. The Cal Group is also an important concept when sending SCPI commands to the Calibration System, because in each case the SCPI command is directed to the currently-selected Cal Group, which is the Cal Group that is modified by the SCPI command.

Remote Command	<code>:SYSTem:CALibration:CGRoup &lt;integer&gt;</code> <code>:SYSTem:CALibration:CGRoup?</code>
Example	<code>:SYST:CAL:CGR 2</code> <code>:SYST:CAL:CGR?</code>
Preset	1
Min	1
Max	100

## 6.9.3 Apply Cal Group

Controls whether or not the checked **Apply** rows of the currently selected Cal Group are applied.

Remote Command	<code>:SYSTem:CALibration:CGRoup:APPLy &lt;bool&gt;</code> <code>:SYSTem:CALibration:CGRoup:APPLy?</code>
Example	<code>:SYST:CAL:CGR:APPL ON</code> <code>:SYST:CAL:CGR:APPL?</code>
Dependencies	The SCPI command is applied to the currently selected Cal Group You can only turn on <b>Apply Cal Group</b> if at least one Cal for the currently selected group has been executed. If you attempt to select <b>Apply Cal Group</b> before any Cals have been executed, the advisory message "At least one Row must be calibrated before it can be applied" is displayed
Preset	<b>OFF</b>
State Saved	Saved in instrument state
Range	<b>ON OFF</b>
Annotation	If <i>any</i> Cal Group is <b>ON</b> , RCal in the Meas Bar displays in amber, to indicate that Calibrations are in use

## 6.9.4 All Apply Cal Group Off

Turns off **Apply Cal Group** for all groups.

Remote	<code>:SYSTem:CALibration:CGRoup:APPLy:AOff</code>
--------	--

---

Command

---

Example           :SYST:CAL:CGR:APPL:AOFF

## 6.9.5 Connection

Opens the **Connection** dialog, which provides step-by-step instructions for its use.

## 6.10 Calibrator Control

Lets you select a calibrator and control the calibrator settings.

### 6.10.1 Select Cal Source

Lets you select the calibrator to control.

Remote Command	<code>:SYSTem:CALibration:TUNE[:SELEcted] NONE   REF50   REF4800   TUNAb1e   CALOUT   RCM1   RCM2   RCM3   RCM4   RCM5   RCM6   RCM7   RCM8   RCM9   RCM10</code> <code>:SYSTem:CALibration:TUNE[:SELEcted]?</code>												
Example	<code>:SYST:CAL:TUNE:SEL TUNABLE</code> <code>:SYST:CAL:TUNE?</code>												
Notes	Options are: <table border="1"> <tr> <td><code>NONE</code></td> <td>No calibrator selected</td> </tr> <tr> <td><code>TUNAb1e</code></td> <td>Tunable internal calibrator present in N9042B</td> </tr> <tr> <td><code>CALOUT</code></td> <td>Tunable calibrator available through CALOUT front panel port in N9042B</td> </tr> <tr> <td><code>REF50</code></td> <td>50 MHz calibrator</td> </tr> <tr> <td><code>REF4800</code></td> <td>4.8 GHz calibrator</td> </tr> <tr> <td><code>RCM1 – RCM10</code></td> <td>RCal module</td> </tr> </table>	<code>NONE</code>	No calibrator selected	<code>TUNAb1e</code>	Tunable internal calibrator present in N9042B	<code>CALOUT</code>	Tunable calibrator available through CALOUT front panel port in N9042B	<code>REF50</code>	50 MHz calibrator	<code>REF4800</code>	4.8 GHz calibrator	<code>RCM1 – RCM10</code>	RCal module
<code>NONE</code>	No calibrator selected												
<code>TUNAb1e</code>	Tunable internal calibrator present in N9042B												
<code>CALOUT</code>	Tunable calibrator available through CALOUT front panel port in N9042B												
<code>REF50</code>	50 MHz calibrator												
<code>REF4800</code>	4.8 GHz calibrator												
<code>RCM1 – RCM10</code>	RCal module												
Dependencies	If the selected calibrator is not available, it does not appear in the dropdown. If you send SCPI to select a calibrator that is not available, the instrument generates an error												
Couplings	Selecting <code>REF50</code> sets the RF Calibrator to <code>REF50</code> Selecting <code>REF4800</code> sets the RF Calibrator to <code>REF4800</code> Selecting a calibrator source other than <code>REF50</code> or <code>REF4800</code> sets RF Calibrator to <code>OFF</code>												
Preset	Unaffected by <b>Mode Preset</b> . Set to <code>NONE</code> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>												

### 6.10.2 Cal Output

Lets you set the selected calibrator's RF power output state.

Remote Command	<code>:SYSTem:CALibration:TUNE:OUTput[:STATe] ON   OFF   1   0</code> <code>:SYSTem:CALibration:TUNE:OUTput[:STATe]?</code>
Example	<code>:SYST:CAL:TUNE:OUTP ON</code> <code>:SYST:CAL:TUNE:OUTP?</code>

---

Preset	Unaffected by <b>Mode Preset</b> . Set to <b>OFF</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
--------	--

### 6.10.3 Cal Frequency

Lets you set the selected calibrator's frequency.

---

Remote Command	<code>:SYSTem:CALibration:TUNE:FREQuency &lt;freq&gt;</code> <code>:SYSTem:CALibration:TUNE:FREQuency?</code>
Example	Set source frequency to 150 MHz: <code>:SYST:CAL:TUNE:FREQ 150000000</code>
Preset	Unaffected by <b>Mode Preset</b> . Set to 1 GHz by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Min/Max	Depend on the selected calibrator

### 6.10.4 Cal Signal Type

Lets you set the selected calibrator's signal type.

---

Remote Command	<code>:SYSTem:CALibration:TUNE:TYPE CW   COMB</code> <code>:SYSTem:CALibration:TUNE:TYPE?</code>
Example	<code>:SYST:CAL:TUNE:TYPE CW</code> <code>:SYST:CAL:TUNE:TYPE?</code>
Dependencies	If the selected calibrator does not support a signal type, then that type is disabled in the dropdown Changing the signal type to a disabled option generates an error
Preset	Unaffected by <b>Mode Preset</b> . Set to <b>CW</b> by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>

### 6.10.5 Cal Comb Spacing

Lets you set the calibrator's comb spacing, when the signal type is **COMB**.

---

Remote Command	<code>:SYSTem:CALibration:TUNE:SPACing &lt;freq&gt;</code> <code>:SYSTem:CALibration:TUNE:SPACing?</code>
Example	Set comb spacing to 1 MHz: <code>:SYST:CAL:TUNE:SPAC 1000000</code>
Dependencies	Only appears when <b>COMB</b> is selected as <b>"Cal Signal Type"</b> on page 2764 If the selected calibrator does not support the Comb signal, attempting to set the spacing generates an error

6 Input/Output  
6.10 Calibrator Control

---

Preset	Unaffected by <b>Mode Preset</b> . Set to 0 Hz by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Min/Max	Dependent on the selected calibrator

---

### 6.10.6 Calibrator Reference

Determines the frequency reference type used by the RCal module of the currently selected Cal Group

---

Remote Command	<code>:SYSTem:CALibration:TUNE:REFerence INTERNAL   EXTERNAL</code> <code>:SYSTem:CALibration:TUNE:REFerence?</code>
Example	Set the calibrator frequency reference to Internal: <code>:SYSTem:CALibration:TUNE:REFerence INTERNAL</code>
Dependencies	Only displayed when an RCal module is the selected calibrator
Preset	Unaffected by <b>Mode Preset</b> . Set to preset value by <b>Restore Input/Output Defaults</b> or <b>Restore System Defaults-&gt;All</b>
Range	<code>INTERNAL   EXTERNAL</code>

---


## 6.11 Advanced

### 6.11.1 T/R Port High Power Attenuator

Controls whether additional attenuation is added at the T/R Port. The T/R port has two input paths, one that provides a 16 dB attenuator, and the other that bypasses this attenuator.

- When **ON**, the path includes the 16 dB attenuator, so the max input level for this path is +47 dBm (50 W)
- When **OFF**, the 16 dB attenuator is bypassed, so the max input level for this path is +33 dBm (2 W)

If the attenuator is turned off, the following warning message is displayed and confirmation that the attenuator is to be turned off is required;

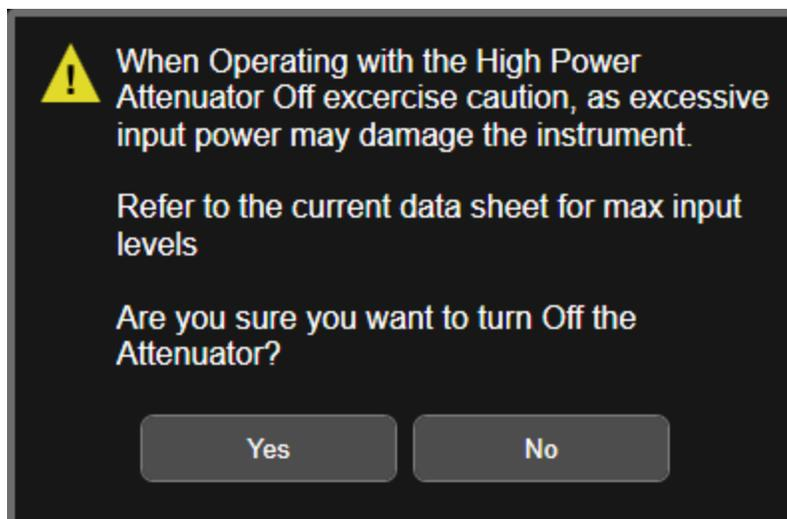

Whenever the attenuator is bypassed (**OFF**), a warning appears in the status bar: "Input caution; T/R unprotected"

In the case of an input overload at the T/R input, (>2 W with Attenuator off, or >50 W with attenuator on), or an over-temperature at the T/R input, the input is disconnected, and a dialog is displayed, stating:

"CAUTION! Excessive power has been detected at the T/R Port. The input has been disconnected. Remove the high signal power and press OK"

Or:

6 Input/Output  
6.11 Advanced

“CAUTION! Over temperature has been detected at the T/R Port. The input has been disconnected. Remove the signal, allow to cool & press OK”

Until you press **OK**, the input remains disconnected, and no measurement can be made.

Remote Command	<code>[ :SENSe]:FEED:RF:PORT:TR:HPOWer:ATTenuator[:STATe] ON   OFF</code> <code>[ :SENSe]:FEED:RF:PORT:TR:HPOWer:ATTenuator[:STATe]?</code>
Example	<code>:FEED:RF:PORT:TR:HPOW:ATT ON</code> <code>:FEED:RF:PORT:TR:HPOW:ATT?</code>
Dependencies	Only appears in modular analyzers, and only when the M9470A module is installed, such as in M8920A. Option HDX is required to enable the T/R port
Preset	<code>ON</code>
State Saved	Saved in instrument state

## 6.12 Aux I/O Control

This menu is only available with Option LSN, indicating that the LISN IO board is installed. It is used to control each of the eight control lines out of the rear panel connector independently. There are eight bits of control lines. The LISN Control (Mode setup) of the EMI Receiver application affects the **AUX I/O Control** settings. Whenever you change the LISN Control in Mode Setup, the corresponding AUX I/O Control data lines will also be changed. The selection at the AUX I/O Control does not affect the LISN Control (Mode Setup) setting.

### 6.12.1 Data 0 – Data 7

Sets the value for Data 0 through Data 7 respectively.

Remote Command	<code>:OUTPut:AUX:IO:DATA&lt;n&gt; OFF   ON   0   1</code> where <n> in an integer 0 - 7
Example	<code>:OUTP:AUX:IO:DATA0 OFF</code>
Notes	Unaffected by <b>Mode Preset</b> , but <b>Input/Output Preset</b> presets the value to <b>ON</b> for all 8 data lines
Preset	<b>ON</b>
Range	<b>OFF   ON</b>


### 6.12.2 Aux IO Control (Remote Command Only)

Sets/Queries the value for all 8 data lines.

Remote Command	<code>:OUTPut:AUX:IO &lt;Value&gt;</code> <code>:OUTPut:AUX:IO?</code>
Example	<code>:OUTP:AUX:IO 31</code>
Notes	Unaffected by <b>Mode Preset</b> , but <b>Input/Output Preset</b> presets the value to <b>ON</b> for all 8 data lines
Couplings	The states of Data 0 to Data 7 under the <b>AUX I/O Control</b> panel ( <b>Input/Output</b> menu) change according to the keyed-in AUX IO value
Preset	31
Min	0
Max	255
Backwards Compatibility SCPI	<code>:OUTPut:UPORt &lt;Value&gt;</code>

## 7 Save/Recall/Print


This section describes the functions that can be accessed via the front panel **Save**, **Quick Save**, and **Recall** hardkeys, as well as via the controls in the front-panel folder icon, as shown below.

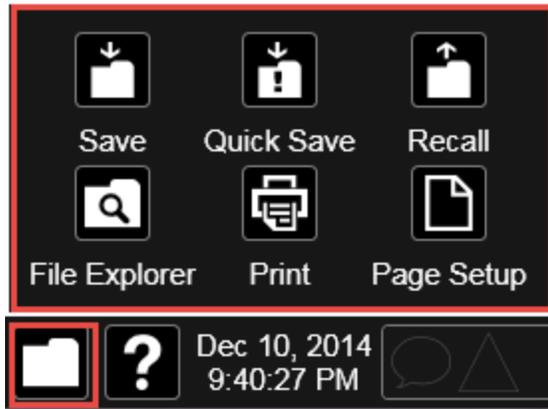

## 7.1 Quick Save

**Quick Save** repeats the previous Save at the touch of a single button. Whatever you saved before gets saved again to the same directory, and with a filename derived from the previous filename.

You access Quick Save by pressing the **Quick Save** hardkey, or by pressing the folder icon at the bottom of the display and then pressing the **Quick Save** icon. In addition, if you have a PC keyboard plugged in, the sequence **CTL-Q** will perform a Quick Save.

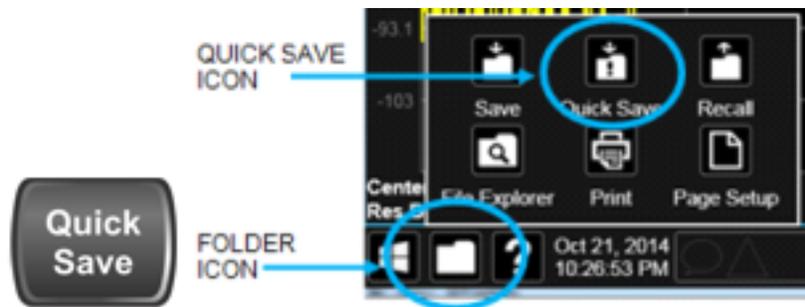

The **Quick Save** front-panel key repeats the most recent save that was performed from the **Save** menu, with the following exceptions:

- Register saves are not remembered as Saves for the purpose of the Quick Save function
- If the current measurement does not support the last non-register save that was performed, an informational message is generated, “File type not supported for this measurement”

**Quick Save** repeats the last type of qualified save (that is, a save qualified by the above criteria) in the last save directory by creating a unique filename using the Auto File Naming algorithm described below.

If the previous save was a Screen Image save, Quick Save saves a Screen Image when the Quick Save button is pressed. This image is *exactly* what is on the screen when the **Quick Save** button is pressed. Quick Save does *not* force a dialog exit or navigate in any way, it simply snaps the image on the screen and saves it. This lets you save images of dialogs and setup screens that would be impossible to save using the **Save** dialog.

**NOTE**

When **Quick Save** is pressed the display theme changes to the theme specified by the **Screen Image Theme** control in order to take the screen shot, and then changes back to the Display Theme, but no navigation is performed, and no dialogs are exited.

If **Quick Save** is pressed after startup and before any qualified Save has been performed, the Quick Save function performs a Screen Image save using the current settings for Screen Image saves (current theme, current directory), which then becomes the “last save” for the purpose of subsequent Quick Saves.

The Auto File Naming feature automatically generates a file name for use when saving a file. The filename consists of a prefix and suffix separated by a dot, as is standard for the Windows file system. A default prefix exists for each of the available file types:

Type	Default Prefix	Menu
State	State_	(Save/Recall)
Trace + State	State_	(Save/Recall)
Screen	Screen_	(Save/Recall)
Amplitude Corrections	Ampcor_	(Import/Export)
Traces	Trace_	(Import/Export)
Limit Lines	Limit_	(Import/Export)
Measurement Result	MeasR_	(Import/Export)
Capture Buffer	CapBuf_	(Import/Export)

A four-digit number is appended to the prefix to create a unique file name. The numbering sequence starts at 0000 within each Mode for each file type and updates incrementally to 9999, then wraps to 0000 again. It remembers where it was through a Mode Preset and when leaving and returning to the Mode. It is reset by Restore Misc Defaults and Restore System Defaults and subsequent running of the instrument application. So, for example, the first auto file name generated for State files is **State\_0000.state**. The next is **State\_0001**, and so forth.

One of the key features of Auto File Name is that we guarantee that the Auto File Name will never conflict with an existing file. The algorithm looks for the next available number. If it gets to 9999, then it looks for holes. If it find no holes, that is no more numbers are available, it gives an error.

For example, if when we get to State\_0010.state there is already a State\_0010.state file in the current directory, it advances the counter to State\_0011.state to ensure that no conflict will exist (and then it verifies that State\_0011.state also does not exist in the current directory and advances again if it does, and so forth).

If you enter a file name for a given file type, then the prefix becomes the filename you entered instead of the default prefix, followed by an underscore. The last four letters (the suffix) are the 4-digit number.

For example, if you save a measurement results file as “**fred.csv**”, then the next auto file name chosen for measurement results save will be **fred\_0000.csv**.

**NOTE**

Although 0000 is used in the example above, the number that is used is actually the current number in the Meas Results sequence, that is, the number that would

have been used if you had not entered your own file name.

---

NOTE

If the filename you entered ends with `_dddd`, where `d`=any digit, making it look just like an auto file name, then the next auto file name picks up where you left off with the suffix being `dddd + 1`.

---

#### Quick Save Mode

**Quick Save** can be operated in the Normal mode and in a special “Prompt” mode. There is a switch on the User Interface page of the **System** menus that lets you control this.

When Quick Save Mode is in Normal (the default setting), the instrument does an immediate save of a new file of the same type and to the same directory as the previous Save action. When Quick Save Mode is in the Prompt state, instead of immediately performing a Save, the Alpha Keyboard pops up with the proposed auto-filename in the entry area. The user can then press Enter to accept the auto filename, or edit the name and press Enter. This allows you to easily save a file with a custom file name.


---

Notes

No remote command for this key specifically

## 7.2 Recall

The **Recall** dialog lets you recall previously saved states, traces and other items to the instrument from files on the instrument's internal storage, from removable devices, and from directories on the network. You access the Recall dialog by pressing the **Recall** hardkey, or by pressing the folder icon at the bottom of the display and then pressing the **Recall** icon.

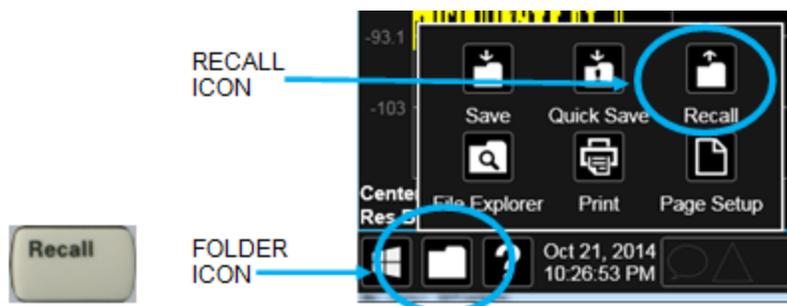

The dialog has section tabs running down the left side, which you use to specify what you want to recall, similar to the **Save** dialog. You choose the recall item and then complete the recall by choosing a register or file location from which to recall the item.

---

Notes No remote command for this key specifically, but `:MMEM:LOAD` is available for specific file types. For example: `:MMEM:LOAD:STATE <filename>`  
If you try to recall a State file for a mode that is not licensed or not available in the instrument, an error message will occur and the state will not change

---

Backwards Compatibility Notes In legacy analyzers, it was possible to load a state without affecting the trace data, limit lines or correction data. Similarly (since User Preset is actually loading a state), it was possible to do a User Preset without affecting the trace data, limit lines or correction data  
In the X-Series, "state" always includes all of this data; so, whenever state is loaded, all of the traces, limit lines and corrections are affected. Although this differs from previous behavior, it is desirable behavior, and should not cause adverse issues for users  
Recall for the X-Series supports backward compatibility in the sense that you can recall a state file from any X-Series model number and any version of X-Series software. This is only possible if part of the recalling process goes through a limiting step after recalling the mode settings, at least for settings that may vary with version number, model number, option and license differences. If you try to recall a state file onto an instrument with less capability than what was available on the instrument during the save, the recall will ignore the state it doesn't support, and it will limit the recalled setting to what it allows  
Example: if the saved state includes preamp ON, but the recalling instrument does not have a preamp; the preamp is limited to OFF. Conversely, if you save a state without a preamp, the preamp is OFF in the state file. When this saved file is recalled on an instrument with a licensed preamp, the preamp is changed to OFF. Another example is if the saved state has center frequency set to 20 GHz, but the instrument recalling the saved state is a different model and only supports 13.5 GHz. In this case, the

---

center frequency is limited along with any other frequency-based settings. Since the center frequency can't be preserved in this case, the recall limiting tries to at least preserve span to keep the measurement setup as intact as possible

Note that there is no state file compatibility outside of the X-Series. For example, you cannot recall a state file from ESA or PSA

## 7.2.1 Recall From File / Open

For every Recall type, a button appears called **Recall From File** or **Open**. “Recall From File” appears for recall types that also include registers (like State and Trace+State), and “Open” appears for all other recall types.

When you push the “Recall From File” or “Open” button, a dialog slides in from the right which allows you to see what files are saved in the current directory. See the “Save to File/Save As” section (3.1) for a depiction of this screen for the Save menu, which is similar to Recall.

The default directory is the internal directory for the current Mode and save type, on the D: drive. You may also change to another Mode's state directory by pressing the dropdown in the upper right corner labeled “Mode”. Once you have chosen a directory, the files in that directory whose extension matches the current data type (e.g., .state or .trace) are displayed in the right-hand window of the dialog. You can sort this list by name, date, file size or extension by tapping the Name, Date, Size, or Content header at the top of each column. A second tap toggles the sort order between Ascending and Descending.

Also displayed is a path depiction showing the path to the current directory. In the example shown, the path is D:\Users\Instrument\Documents\SA\screen. Tapping any element of this path lets you select an alternate route. Tapping the “Computer” arrow lets you select a different drive.



Tapping the “back” arrow navigates to the previously selected directory.

If you plug in a removable drive (e.g., a thumb drive), the browser immediately navigates to the root of that drive. Furthermore, if you had a thumb drive in and you were in a directory on the thumb, and then you exit the browser, when you come back in you are still in the same directory on that removable drive. If you remove the thumb drive, you return to the directory you had been in before the thumb drive was plugged in.

Note that for each data type there is a “current” directory, and it is the last directory used by either Save or Recall for that Mode. For example, if in SA Mode you save a Corrections file to a particular directory, then when you go to recall a Correction in SA Mode, you should be pointing at that directory. Or if in EMC Mode you recall a Limit from a particular directory then when in EMC Mode you go to save a Limit, it

should be pointing at that same directory. There is one “current” directory for each data type for each Mode (not one for Save and one for Recall).

The Filename field, just below the Path field, shows the filename that will be used. The **File Name** field is loaded with the name of the selected file. You may edit the filename by tapping it, which brings up the onscreen alpha keyboard. Press the “Done” button on this keyboard when you are done editing.

Select a file to load and press Recall. After a successful recall, a message "File <filename> recalled" or "State Register <register number> recalled" is displayed in an info box for a few seconds.

The **Files of Type** field shows the file suffix for the type of file you have selected to recall. This field only appears for files which have multiple file types that can be recalled. These file types are:

Amplitude Corrections:

- Amplitude Corrections (\*.csv)
- Legacy Cable Corrections (\*.cbl)
- Legacy User Corrections (\*.amp)
- Legacy Other Corrections (\*.oth)
- Legacy Antenna Corrections (\*.ant)

Limits:

- Limit Data (\*.csv)
- Legacy Limit Data (\*.lim)

## 7.2.2 State

Lets you choose a register or file from which to recall the state.

See the Save State description for information on state files and their contents and the default paths. State files have the extension “.state”.

For rapid recall, the State menu lists 16 registers from which you can recall states. Pressing a Register button initiates the recall. You can also select a file from which to recall by pressing “Recall From File”.

Since each state file is only for one Mode, the settings for other Modes are unaffected when it is loaded. Recall State will cause a mode switch if the state being recalled is not from the current active mode.

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so make sure you know from what instance a file or register was saved before recalling it.

---

Remote Command	<code>:MMEMory:LOAD:STATe &lt;filename&gt;</code>
Example	Load the state file data (on the default file directory path) into the instrument state: <code>:MMEM:LOAD:STAT "MyStateFile.state"</code>
Notes	<p>When you pick a file to recall, the instrument first verifies that the file is recallable in the current instrument by checking the software version and model number of the instrument. If there is a mismatch between the file and the instrument, the recall function tries to recall as much as possible. It may limit settings that differ based on model number, licensing or version number. In general, variables in the instrument which are not contained in the state file will be unaffected, and variables in the state file which are not contained in the instrument will be ignored</p> <p>The recall proceeds by aborting the currently running measurement, clearing any pending operations, and then loading the State from the saved state file. You can open state files from any Mode, so recalling a State file switches the instrument to the Mode that was active when the save occurred. After switching to the Mode of the saved state file, Mode settings and data (if any for the Mode) become those from the saved file. The active measurement becomes the measurement which was running when the state file was saved and the data relevant to the measurement (if there is any) is recalled</p> <p>After recalling the state, the Recall State function does the following:</p> <ul style="list-style-type: none"><li>- Clears the input and output buffers</li><li>- Status Byte is set to 0</li><li>- Executes <code>*CLS</code></li></ul> <p>If the file specified is empty an error is generated. If the specified file does not exist, another error is generated. If there is a mismatch between the file and the proper file type, an error is generated. If there is a mismatch between file version or model number or instrument version or model number, a warning is displayed. Then it returns to the State menu and File Open dialog goes away</p> <p>After the Recall, the instrument exits the Recall menu and returns to the previous menu</p>
Backwards Compatibility SCPI	<code>:MMEMory:LOAD:STATe 1,&lt;filename&gt;</code> The "1" is simply ignored

---

### 7.2.2.1 Recall Type

If you have a built-in Source in your instrument, you may wish, when recalling State, to recall only the part of the State file that applies to the instrument, and leave the Source unaffected. Or you may wish to recall only the part of the State file that applies to the Source, and leave the instrument unaffected.

Lets you choose whether you wish to recall the entire Analyzer + Source state (**ALL**), just the Analyzer State **ANALyzer**), or just the Source State (**SOURce**).

Remote Command	:MMEMory:LOAD:RTYPe ALL   ANALyzer   SOURce
Example	:MMEM:LOAD:RTYP ALL
Dependencies	Only available in models with a built-in source, such as VXT models
Preset	ALL
Range	ALL   ANALyzer   SOURce

### 7.2.2.2 Register 1 thru Register 16

Selecting any one of these register buttons causes the State to be recalled from the specified Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can edit any of the register names to enter custom names for any register.

Although these 16 registers are the only registers available from the front panel, there are 128 state registers available in the instrument. Registers 17-128 are only available from the SCPI interface, using the **\*RCL** command.

There is one set of 128 state registers in the instrument, not one set for each Mode. When a state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

#### NOTE

**In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so make sure you know from what instance a file or register was saved before recalling it.**

The date displayed follows the format specified in the **Date Format** setting in the **Control Panel**. The time shows hours and minutes.

After the recall completes, the message "Register <register number> recalled" is displayed.

If you are in the Spectrum Analyzer Mode, and you are recalling a register that was saved in the Spectrum Analyzer Mode, then after the recall, you will still be in the Recall Register menu. If the Recall causes you to switch modes, then after the Recall, you will be in the Frequency menu.

If a requested register is empty an error is generated.

Example	<b>*RCL 1</b>
Range	1-16 from front panel, 1-128 from SCPI

### 7.2.2.3 Edit Register Names

You may enter a custom name on any of the **Register** keys, to help you remember what you are using that state to recall. To do this, press the **Name** field for the register you want to rename, which brings up the onscreen alpha keyboard. Press the **Done** button on this keyboard when you are done editing.

The maximum number of characters for a register name is 30. If you delete all the characters in the custom name, it restores the default (time and date).

For more information and the SCPI command, see ["Edit Register Names" on page 2802](#) under **Save, State**.

### 7.2.3 Trace+State

Lets you choose a register or file for recalling the state.

See **Save, "State" on page 2801** for information on state files and their contents and the default paths. State files have the extension **".state"**.

For rapid recall, the **Trace+State** menu lists 16 registers from which you can recall trace+state files. Pressing a **Register** control initiates the recall. You can also select a file from which to recall by pressing **Recall From File**.

Since each trace+state file is only for one Mode, the settings for other Modes are unaffected when it is loaded. **Recall Trace+State** will cause a mode switch if the trace+state being recalled is not from the current active Mode.

**NOTE**

**In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so make sure you know from what instance a file or register was saved before recalling it.**

---

Trace+State files have the extension **.trace**.

The Trace+State selection only appears for measurements that support trace saves. It is blanked for modes that do not support trace saves. Saving Trace is identical to saving State, except that a **.trace** extension is used on the file instead of **.state**, and internal flags are set in the file indicating which trace was saved.

---

Remote Command	<code>:MMEMory:LOAD:TRACe TRACE1   ...   TRACE6,&lt;filename&gt;</code> <code>:MMEMory:LOAD:TRACe:REGister TRACE1   ...   TRACE6,&lt;integer&gt;</code>
Example	Loads the trace file data (on the default file directory path) into the specified trace; if it is a "single trace" save file, that trace is loaded to trace 2, and is set to be not updating: <code>:MMEM:LOAD:TRAC TRACE2,"MyTraceFile.trace"</code> Restore the trace data in register 2 to Trace 1:

---

```
:MMEM:LOAD:TRAC:REG TRACE1,2
```

---

## Notes

When you perform the recall, the recalling Trace function must first verify the file is recallable in this instrument by checking instrument software version and model number, since it includes State. If everything matches, a full recall proceeds by aborting the currently running measurement, and loading the state from the saved state file to as close as possible to the context in which the save occurred. You can open .trace files from any mode that supports them, so recalling a Trace file switches to the mode that was active when the save occurred. After switching to the mode of the saved state file, mode settings and data (if any for the mode) are loaded with values from the saved file and the saved measurement of the mode becomes the newly active measurement, and the data relevant to the measurement (if there is any) is recalled

Once the state is loaded, the trace data must be loaded. The internal flags are consulted to see which trace to load and the "To Trace" setting to see where to load it. Trace data is always loaded with the specified trace set to View, so that the data is visible and not updating (so as not to erase the recalled data). If the file is an "all trace" file, all traces are loaded with the saved data (to the original trace the data was saved from) and set to View. Traces whose data is not loaded are restored to the update state that existed when they were saved

After recall, the instrument exits the **Recall** menu and returns to the previous menu

Some Modes and measurements do not have 6 available traces. For example, Phase Noise Mode:

```
:MMEMory:LOAD:TRACe TRACE1|TRACE2|TRACE3,<filename>
```

Some Modes and measurements have more than 6 traces. For example, Realtime SA Mode:

```
:MMEMory:STORe:TRACe TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 |  
TRACE6 | TRACE7 | TRACE8 | TRACE9 | TRACE10 | TRACE11 | TRACE12 |  
ALL,<filename>
```

### 7.2.3.1 Recall To Trace

Lets you select which Trace to recall to. Not all Modes have the same number of available traces. The default is the currently selected trace, selected in this or any other menu with **Trace** selection. If you have selected **ALL**, then that remains selected until you specifically change it to a single trace, regardless of the trace selected in the **Trace** menu.

If the .trace file is an "all trace" type, **To Trace** is ignored, and the traces each go back to the trace from which they were saved.

### 7.2.3.2 Register 1 thru Register 16

Selecting any one of these register buttons causes the specified trace(s) and the state of the currently active mode to be recalled from the specified Register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can edit any of the register names to enter custom names for any register.

7 Save/Recall/Print  
7.2 Recall

There is one set of 16 trace+state registers in the instrument, not one set for each Mode. When trace+state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

NOTE

**In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so make sure you know from what instance a file or register was saved before recalling it.**

---

The date displayed follows the format specified in the **Date Format** setting under the **Control Panel**. The time shows hours and minutes.

After the recall completes, the message **Register <register number> recalled** is displayed. If a requested register is empty, an error is generated.

Recalling state from a Register is the same as recalling state from a **Trace+State File**.

---

Example	<b>*RCL 1</b>
Range	1-16

---

### 7.2.3.3 Edit Register Names

You may enter a custom name on any of the **Register** keys, to help you remember what you are using that state to recall. To do this, press the **Name** field for the register you want to rename, which brings up the onscreen alpha keyboard. Press the **Done** button on this keyboard when you are done editing.

The maximum number of characters for a register name is 30. If you delete all the characters in the custom name, it restores the default (time and date).

For more information and the SCPI command, see ["Edit Register Names" on page 2802](#) under **Save, State**.

## 7.2.4 Screen Config + State

Lets you load the complete configuration of all your screens from a file which you specify.

Note that recalling a screen config file wipes out your current screen configuration; you do not see a warning before it loads, but there is a note on the **Recall** page letting you know what is going to happen.

The filenames are of the form:

`State_0001.screen`

---

Remote	<code>:MMEMory:LOAD:SCONfig &lt;filename&gt;</code>
--------	---

---

---

 Command
 

---

 Example      Load the screen configuration from the file `MyScreenConfig.screen` in the default directory:  
                  `:MMEM:LOAD:SCON "myScreenConfig.screen"`

## 7.2.5 Measurement Data

Lets you specify a data type (for example, trace data) and choose a file from which to import the data.

**Measurement Data** files are comma-separated value (CSV) files, and contain the requested data in a form that can be imported into Excel or other spreadsheets, as well as header data that gives information on relevant instrument settings at the time the save occurred.

For more on **Measurement Data** files, see "[Measurement Data](#)" on page 2807 under **Save**.

Since the commonly exported data files are in CSV format, you can edit the data prior to importing it. This allows you to export a data file, manipulate the data in Excel (for example) and then import it.

### 7.2.5.1 Data Type

Lets you select the data type to recall.

---

 Notes            There is no SCPI command for Data Type, as the type is implied in the SCPI command for each item
 

---

 Dependencies    The **Data Type** menu for any given measurement only contains data types that are supported by that measurement. Data types that are not importable do not appear, even if they *do* appear in the corresponding **Save** menu
 

---

## Trace

Allows you to import Trace files in the PC-readable CSV format.

**Trace** data files have the extension `.csv`. The trace file contains a "metadata" header which describes the state of the instrument when the file was saved. This metadata is compared to the current state of the instrument when the file is recalled; if it does not match the current state, the "invalid data indicator" (\*) is displayed.

The metadata is detailed in Trace File Contents in the **Save** section.

---

 Remote Command    `:MMEMory:LOAD:TRACe:DATA TRACE1 | ... | TRACE6,<filename>`


---

 Example            Import the 2nd trace from the file `myTrace2.csv` in the current path. For SA Mode, the default path is:
 

---

---

[My Documents\SA\data\traces](#)

[:MMEM:LOAD:TRAC DATA TRACE2,"myTrace2.csv"](#)

---

Dependencies	<p>For SA measurements, a trace cannot be recalled from a trace file that was exported with <b>ALL</b> traces selected</p> <p>A trace cannot be imported if the number of trace points in the file do not match the number of sweep points currently set for the measurement. If this happens, an error message is generated</p> <p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type</p>
Couplings	When a trace is imported, <b>Trace Update</b> is always turned <b>OFF</b> for that trace and <b>Trace Display</b> is always turned <b>ON</b>
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which trace file was loaded
Status Bits/OPC dependencies	Sequential - aborts the current measurement

## 7.2.6 Limit

Lets you select a file from which to import the **Limit** data.

**Limit** files are CSV files, and contain the limit data in a form that can be imported into Excel or similar spreadsheets, as well as header data that provides information on the limit.

See the **Save Limit** description ("**Limit**" on page 2837) for information on Limit files and their contents and the default paths. **Limit** files have the extension **.csv**.

For backwards compatibility, older limit files with the extension **.lim** can be read into the instrument, but you can only save limits as **.csv** files.

A set of preloaded **Limits** files can be found in the directory:

[My Documents/EMC Limits and Ampcor/Limits](#)

---

Remote Command	<a href="#">:MMEMory:LOAD:LIMit LLINE1   LLINE2   LLINE3   LLINE4   LLINE5   LLINE6,&lt;-filename&gt;</a>
Example	<p>Import the 2nd Limit Line from the file <a href="#">myLimitLine2.csv</a> in the current path:</p> <p><a href="#">:MMEM:LOAD:LIM LLINE2,"myLimitLine2.csv"</a></p>
Dependencies	<p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type</p> <p>In the Log Plot measurement in Phase Noise Mode, there are only three Limit Lines, so the valid parameters are <a href="#">LLINE1   LLINE2   LLINE3</a></p> <p>This key only appears if you have the proper option installed in your instrument</p>
Couplings	When a limit line is loaded from mass storage, it is automatically turned on. This allows the user to see it, thus confirming the load. The Margin settings will match those when the limit was saved

---

	The instrument cannot mix <b>Limits</b> domains (X Axis Unit must be <b>Frequency</b> or <b>Time</b> for both <b>Limits</b> ). So, when a <b>Limits</b> file is loaded, the instrument sets the <b>Limits</b> domain (X Axis Unit) to match that of the file. If this changes the <b>Limits</b> domain from what it was before the file was loaded, all <b>Limits</b> data in all <b>Limits</b> sets is erased before the data loads. If this operation is over the remote interface, there is no warning if this occurs, so care should be taken to know the domain of the file you are loading
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which limit file was loaded
Status Bits/OPC dependencies	Sequential - aborts the current measurement

---

### 7.2.6.1 Select Limit

Selects the Limit register into which the recalled **Limit** will be placed, for example, **Limit 1**.

---

Preset	Not part of <b>Preset</b> , but is reset to LLINE1 by <b>Restore Mode Defaults</b> Survives shutdown
--------	---

---

### 7.2.7 Correction

Allows you to import Amplitude Corrections files in the PC-readable CSV format.

**Amplitude Correction** files contain the correction data in a form that can be imported into Excel or similar spreadsheets, as well as header data that provides information on the correction.

For backwards compatibility, older limit files with the extensions **.amp**, **.cb1**, **.ant** and **.oth** can be read into the instrument.

A set of preloaded **Corrections** files can be found in the directory:

**My Documents\EMC Limits and Ampcor\Ampcor**

The default path for CSV files is:

**My Documents\amplitudeCorrections\**

Antenna corrections are a particular kind of Amplitude Corrections – they are distinguished in the corrections file by having **Antenna Unit** set to a value other than **None**. When the Amplitude Correction is an Antenna correction and the **Antenna Unit** in the file is not **None**, the Y-Axis Unit setting changes to match the Antenna (Transducer) Unit in the file.

---

Remote Command	<b>:MMEMory:LOAD:CORRection 1   ...   8, &lt;filename&gt;</b>
Example	Recall the Amplitude Correction data from the file <b>myAmpcor.csv</b> in the current directory to the 2nd Amplitude Correction table, and turns on Correction 2: <b>:MMEM:LOAD:CORR 2, "myAmpcor.csv"</b>

---

7 Save/Recall/Print  
7.2 Recall

Dependencies	<p>Only one Transducer units can be on at any given time. Note that this means that if a correction file with a Transducer Unit is loaded into a particular Correction, all other Corrections are set to that same Transducer unit</p> <p>Corrections are not supported by all Measurements. If in a Mode in which some Measurements support it, this key is grayed-out in measurements that do not. The key does not show at all if no measurements in the Mode support it</p> <p>Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type</p> <p>This key does not appear unless you have the proper option installed in your instrument</p> <p>This command will generate an "Option not available" error unless you have the proper option installed in your instrument</p>
Couplings	When a correction file is loaded from mass storage, it is automatically turned on ( <b>CorrectionON</b> ) and <b>Apply Corrections</b> is set <b>ON</b> . This allows you to see its effect, thus confirming the load
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which file was recalled
Backwards Compatibility SCPI	<code>:MMEMory:LOAD:CORRection ANTenna   CABLe   OTHer   USER, &lt;filename&gt;</code> For backwards compatibility, <b>ANTenna</b> maps to 1, <b>CABLe</b> maps to 2, <b>OTHer</b> maps to 3 and <b>USER</b> maps to 4

### 7.2.7.1 Select Correction

Selects the register into which the recalled **Correction** will be placed, for example, **Correction 1**.

Preset	Not part of <b>Preset</b> , but reset to <b>Correction 1</b> by <b>Restore Input/Output Defaults</b> Survives a shutdown
--------	---

## 7.2.8 Complex Correction

Imports **Complex Corrections** files in the PC-readable **.s2p** format.

**Complex Correction** files contain amplitude and phase correction data in a form that can be imported into Excel or similar spreadsheets, as well as header data that gives information on the correction.

The default path for Complex Corrections files is:

`My Documents\complexCorrections\`

Remote Command	<code>:MMEMory:LOAD:CCORrection &lt;integer&gt;, &lt;filename&gt;</code>
Example	Recall the <b>Complex Correction</b> data from the file <code>mycor.s2p</code> in the current directory to the 2nd Complex Correction table, and turns on <b>Complex Correction 2</b> : <code>:MMEM:LOAD:CCOR 2, "mycor.s2p"</code>
Dependencies	Not supported by all measurements. The tab does not appear at all if no measurements in the Mode

	support it Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type
Couplings	When a complex correction file is loaded from mass storage, it is automatically turned <b>ON</b> and <b>Apply Corrections</b> is set <b>ON</b> . This allows you to see its effect, thus confirming the load
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which file was recalled

### 7.2.8.1 Select Complex Correction

Selects the register into which the recalled **Complex Correction** will be placed, for example, **Complex Correction 1**.

Preset	Not part of <b>Preset</b> , but is reset to Correction 1 by <b>Restore Input/Output Defaults</b> Survives a shutdown
--------	---

### 7.2.9 Recall VDI CCD Correction

Imports VDI CCD External Mixer Correction files in the PC-readable CSV (.csv) format.

The default path for VDI CCD External Mixer Correction files is the instrument's **My Documents** folder.

Remote Command	<code>:MMEMory:LOAD:VCORrection &lt;filename&gt;</code>
Example	<code>:MMEM:LOAD:VCOR "vdi_ccd_corr.csv"</code>
Dependencies	Requires the EXW (External Mixing Wide Bandwidth) and Ampcor (Amplitude Correction) licenses VDI CCD Corrections are not supported by all measurements. The tab does not appear at all if no measurements in the Mode support it Errors are reported if the file is empty or missing, or if the file type does not match, or if there is a mismatch between the file type and the destination data type If the file is empty, message -250 is reported. If the file does not exist, message -256 is reported. If there is a mismatch between the file and the destination data type, message -250 is reported
Couplings	When a VDI CCD correction file is loaded into memory, if the correction matches the current external mixer setup and " <b>Select VDI CCD Correction</b> " on page 2612 is <b>NONE</b> , the selected VDI CCD Correction is set to the serial number of the matching correction data
Annotation	After recall is complete, an advisory is displayed in the message bar confirming which file was recalled

### 7.2.10 SCPI Recorder

Contains controls to let you recall SCPI recordings.

### 7.2.10.1 Recall From File

Recalls a previously saved SCPI Recorder file. For details of the SCPI Recording feature, see "[SCPI Recorder](#)" on page 2436.

After the file contents have been read, each of the SCPI commands or queries present in the file at the time of recall is applied to the system. If the file is from another instrument, or from a different model, some commands may cause unexpected data changes as each is applied. If any commands result in errors, the command(s) and the corresponding error(s) are displayed after playback is completed.

Recalling a SCPI recording plays the contents of the file immediately after recall. You can view the content of the file in the SCPI recorder dialog. If there are any entries in the SCPI recorder, you are prompted either to keep the previously recorded data, or let it be discarded.

If you choose to discard the data, all existing recording entries are cleared, and the SCPI recorder is populated with the recalled data.

If you choose to keep the existing recorded data, the recalled file content is appended to the existing recording.

**NOTE**

**Some SCPI entries in the recorded file may require the presence of other files, if a command in the recorded file specifies the recall of other files.**

---

### 7.2.11 Mask

The **Mask** data type is used to import and export Mask files for measurements that use masks, such as cellular comms and real-time measurements.

### 7.2.12 Sequence


These need to be brought over for the EXT and/or Sequence Analyzer when they are available in the Touch UI

### 7.2.13 Waveform

Recalls waveforms into the ARB memory of an Internal Source.

When you select the **Waveform** tab in the **Save** dialog,, a hint appears saying "Recalls files from Mass Storage to the ARB and lets you manage the ARB memory at the same time."

You then tap **Recall From File** to display the **Recall Waveform** dialog.

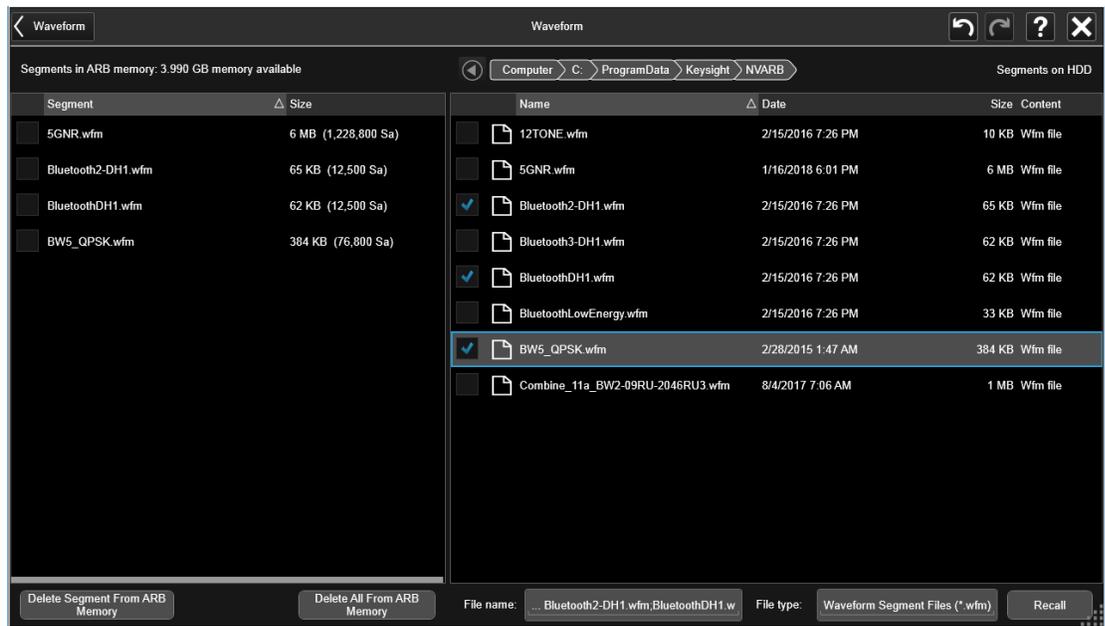

The left-hand window shows the files in ARB memory. The right-hand window shows the files on the hard drive.

You can select one or more waveform files in the right-hand window. Each file selected has a blue check box in it. To select a single file, tap that file's row. To select additional files, tap the check box in the row of the desired additional files.

When you have selected the file or files that you wish to recall, tap **Recall**. The file(s) are recalled into the ARB memory, and appear in the left-hand window.

If a file of the same name already exists within ARB memory, it is overwritten. If you wish to load two segments of the same name, you must rename one of the segments before loading it into ARB memory. To rename a segment, you can either use Windows File Explorer, or **:MMEMory:COPI**.

You can select one or more segments in the left-hand window and tap "Delete Segments from ARB memory" to delete the selected files. You can also delete all files in ARB memory by tapping "Delete All from ARB memory."

You can change the current directory by tapping on an element of the file path at the top of the screen and selecting the desired subdirectory in the list that appears, and repeating until you have the path you want. The current directory is used for manually loading waveform segments into ARB memory for playback, and as a search location for waveform segments that are required to be loaded into ARB memory for playback of a waveform sequence or a list sequence.

File Type allows you to specify a waveform format. The available file types are listed below:

7 Save/Recall/Print  
7.2 Recall

Type	Extension	Notes
Waveform Files	<code>.wfm</code>	Keysight Signal Studio files
Binary Files	<code>.bin</code>	Interleaved IQ data files. They could be single precision or double precision customer created files. One-byte marker may be added
CSV Files	<code>.csv</code>	Comma-separated value file. Could be generated by Excel
Text Files	<code>.txt</code>	
Matlab Files	<code>.mat</code>	Should be Level 4, Level 5 or HDF5 MAT-files (only Level 5 Matlab file is supported in X24)

Waveforms in `.csv`, `.txt` and `.mat` formats are supported by models with a built-in source, such as VXT and EXM.

`.txt` files are formatted according to the following rules:

1. Text files only contain the IQ information. Data in the right column represents the amplitude of real(I) points, Data in the left column represents the amplitude of imaginary(Q) points
2. The amount of data should be multiple of two (IQ pairs)
3. The data range is from  $-1e10$  to  $1e10$ , the data type should be `int`, `float` or `double`. 16 digits or fewer for every data is acceptable
4. The values are separated by comma or tab. Extra commas or tabs are ignored
5. Use **Enter** to separate IQ pairs

Example for text file data:

```
0.46425922, -0.57411048  
0.47184454, -0.58435995  
0.48107329, -0.59014958  
0.49223323, -0.58998679  
0.50419607, -0.58558843  
0.51679158, -0.57721768  
0.53005322, -0.56481976  
0.54373011, -0.54879346  
0.55759183, -0.52950807  
0.57141409, -0.50732489
```

Rules 1-3 above also apply to `.csv` data.

---

Dependencies	Only appears if your hardware includes an Internal Source, such as in VXT
--------------	---

### 7.2.13.1 Load Segment to ARB Memory

Loads a single segment to ARB memory. Same as pressing the **Recall** button with a single waveform selected.

Remote Command	<code>:SOURce:RADio:ARB:LOAD &lt;string&gt;</code> <code>&lt;string&gt;</code> - specifies the path name of the file to load from the HDD into ARB memory. May be a <full path + filename>, or <"NVWFM" MSUS + colon + filename>
Example	<code>:SOUR:RAD:ARB:LOAD "D:\NVARB\testwaveform.bin"</code> or <code>:SOUR:RAD:ARB:LOAD "NVWFM:testwaveform.bin"</code>
Notes	<p>Because loading the file involves a delay of unpredictable length, this command should be followed by <code>*OPC?</code>, which holds off subsequent commands until the loading operation is complete</p> <p>If you specify a file over SCPI, but the file is not at the specified location, an error is generated. If you try to load a waveform file but the file contains less than 500 IQ samples, an error is generated</p> <p>VXT models M9410A/11A/15A/16A and M9410E/11E/15E/16E:</p> <p>If you try to load a waveform file but the file contains less than 1024 IQ samples, an error is generated</p> <p>If you try to load a Signal Studio waveform <code>*.wfm</code> that contains invalid waveform header, an error is generated</p> <p>If the ARB is <b>ON</b> when you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform is replayed after the ARB operation is finished</p> <p>ARB can be loaded into ARB memory even if required licenses are not present on the instrument. In this case, a GUI-only warning message -800, "Operation complete; Loaded &lt;filename&gt; successfully, but no license &lt;required licenses&gt; installed". You can install required licenses according to &lt;required licenses&gt; string to license it, or multi-pack license it</p> <p>When in Sequence Analyzer Mode, and <b>Include Source</b> is <b>Yes</b>, an attempt to load a file to ARB memory is rejected with an error. When <b>Include Source</b> is <b>No</b>, and if there is insufficient free ARB memory to load the selected waveform, an error is generated</p>
Remote Command	<code>:SOURce:RADio:ARB:LOAD:ALL &lt;string&gt;</code> <code>&lt;string&gt;</code> specifies the directory on the HDD to load the files into ARB memory from
Example	<code>:SOUR:RAD:ARB:LOAD:ALL "D:\nvarb"</code>
Notes	<p>Loads all the segment files within the currently selected directory into ARB memory. If a file of the same name already exists within ARB memory, it is overwritten. If you wish to load two segments of the same name, you must rename one of the segments before loading it into ARB memory. To rename a segment, either use Windows File Explorer, or <code>:MEMory:COpy</code></p> <p>If you specify a directory over SCPI, but the directory does not exist, an error is generated</p> <p>If the ARB is <b>ON</b>, and you then load or delete a file to ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform is replayed after the ARB operation is finished</p> <p>When in Sequence Analyzer Mode, and <b>Include Source</b> is <b>Yes</b>, an attempt to load all files from a</p>

---

directory to ARB memory is rejected with an error. When **Include Source** is **No** and there is insufficient free ARB memory to load all the waveforms, when the ARB memory is full, the copy ceases, and an error is generated

### 7.2.13.2 Delete Segment From ARB Mem

Deletes a segment from ARB memory.

---

Remote Command	<code>:SOURCE:RADio:ARB:DElete &lt;string&gt;</code> <string> specifies the waveform to be deleted from the ARB playback memory
Example	<code>:SOUR:RAD:ARB:DEL "testwaveform.bin"</code>
Notes	<p>It is possible to delete files from within the ARB memory when the ARB is <b>ON</b>. However, if you attempt to delete the file that is currently playing an error is generated</p> <p>It is possible to delete a file from within the ARB memory when the sequencer state is <b>ON</b>, and the file is not being used by the List Sequencer. If you attempt to delete a file that is being used by the list sequencer, an error is generated</p> <p>When the Sequencer state of the List Sequencer is <b>On</b>, even if ARB state is <b>On</b>, the selected waveform will not be played. In this case, if the selected waveform is not used in List Sequence, it can be deleted, and the ARB state is turned <b>Off</b></p> <p>If the ARB is <b>ON</b> and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform is replayed after the ARB operation is finished</p> <p>When in Sequence Analyzer Mode, and <b>Include Source</b> is <b>Yes</b>, an attempt to delete a file from ARB memory is rejected with an error. When <b>Include Source</b> is <b>No</b>, and you specify a file that does not exist within ARB memory, an error is generated</p>

---

### 7.2.13.3 Delete All From ARB Memory

Removes all segments from ARB memory.

---

Remote Command	<code>:SOURCE:RADio:ARB:DElete:ALL</code>
Example	<code>:SOUR:RAD:ARB:DElete:ALL</code>
Notes	<p>If you attempt to delete all files from ARB memory when there are waveform files used in the Sequencer function of the List Sequencer and the Sequencer state is <b>ON</b>, all files except the files currently being used in list sequencer are deleted, and an error is generated</p> <p>If the ARB is <b>ON</b> and you load a file to ARB memory or delete a file from ARB memory, the playing waveform segment may not keep phase continuity during the ARB memory operation. The waveform is replayed after the ARB operation is finished</p> <p>When in Sequence Analyzer Mode, and <b>Include Source</b> is <b>Yes</b>, an attempt to delete all files from ARB memory is rejected with an error. When <b>Include Source</b> is <b>No</b>, and you attempt to delete all files from ARB memory when the ARB is currently playing a file, all files except the one playing are deleted and an error is generated</p>

---

#### 7.2.13.4 Set Default Directory (Remote Command Only)

Sets the default directory for loading ARB files from SCPI.

Remote Command	<code>:SOURce:RADio:ARB:DEFault:DIRectory &lt;string&gt;</code> <code>:SOURce:RADio:ARB:DEFault:DIRectory?</code>
Example	<code>:SOUR:RAD:ARB:DEF:DIR "D:\ArbFiles"</code> <code>:SOUR:RAD:ARB:DEF:DIR?</code>
Notes	Sets the default directory to be used as a search location for waveform segments that are required to be loaded into ARB memory for playback of a waveform sequence, and as a search location for selecting waveforms using SCPI
State Saved	Persistent, survives a power cycle and a preset but not saved in the instrument state

#### 7.2.13.5 Query ARB Memory File List (Remote Query Only)

Queries the instrument for the list of waveform segments in the ARB memory.

**NOTE**

Returns a string for waveform segment names in ARB memory. If you want a string list of waveform segments in the ARB memory, use **"Query ARB Memory Full File List (Remote Query Only)" on page 2791**.

Remote Command	<code>:SOURce:RADio:ARB:CATalog?</code>						
Example	<code>:SOUR:RAD:ARB:CATalog?</code>						
Notes	The return data is in the following format:  <table border="1"> <tr> <td><code>&lt;integer&gt;</code></td> <td>memory used</td> </tr> <tr> <td><code>&lt;integer&gt;</code></td> <td>memory free</td> </tr> <tr> <td><code>&lt;string&gt;...</code></td> <td>comma separated list of waveform segments within ARB memory</td> </tr> </table>	<code>&lt;integer&gt;</code>	memory used	<code>&lt;integer&gt;</code>	memory free	<code>&lt;string&gt;...</code>	comma separated list of waveform segments within ARB memory
<code>&lt;integer&gt;</code>	memory used						
<code>&lt;integer&gt;</code>	memory free						
<code>&lt;string&gt;...</code>	comma separated list of waveform segments within ARB memory						

#### 7.2.13.6 Query ARB Memory Full File List (Remote Query Only)

Queries the instrument for the string list of waveform segments in the ARB memory. Returns a string list for waveform segment names in the ARB memory.

Remote Command	<code>:SOURce:RADio:ARB:FCATalog?</code>
Example	<code>:SOUR:RAD:ARB:FCATalog?</code>
Notes	The return data is in the following format:

<integer>	Memory used
<integer>	Memory free
<integer>	File count in ARB memory
<string>, <string>, ... <string>	Comma-separated string list of waveform segments within ARB memory

Example:

```
:SOUR:RAD:ARB:FCAT?
```

EXT returns: 27499,2069653,3,"c2k.wfm","gsm.wfm","wcdma.wfm"

### 7.2.14 Power Sensor Cal Factor

Selects a file to which to export the Power Sensor Cal factor data.

**Cal Factor** files are XML files, and contain the cal factor data and header data that gives information on the power sensor.

The default path for **Cal Factor** Files is:

```
My Documents\<mode name>\data\PSCF
```

where <mode name> is the parameter used to select the mode with **:INST:SEL** (for example, **MRECEIVE** for Measuring Receiver Mode). Hence, a **Cal Factor** file from any measurement in the Measuring Receiver mode would be stored in:

```
My Documents\MRECEIVE\data\PSCF
```

**Cal Factor** files have the extension **.xml**. The default filename is **<Sensor Model>\_<Sensor Serial Number>\_0000.xml**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory. If the sensor model or serial number is blank, the default filename is **PSCF\_0000.xml**.

Remote Command	<b>:MMEMory:STORe:PSCFactor &lt;file_name&gt;</b>
Example	<b>:MMEM:STOR:PSCF "myPSCF.xml"</b>
Notes	<p>If the save is initiated via SCPI, and the file already exists, the file will be overwritten</p> <p>Using the <b>C:</b> drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade</p> <p>Both single and double quotes are supported for any filename parameter over SCPI</p>
Dependencies	Only appears if you have the proper option installed in your instrument

### 7.2.15 Recording

Lets you specify a data type (for example, I/Q data) and select a file from which to import the data, then the data can be routed to the measurement engine as though it were being acquired from the Input.

The recording and playback of signal data files is a multi-step process that involves controls in several menus.

The menus that are involved in Record/Playback are:

- **Save**, "**Recording**" on page 2850 (under the **Save** hardkey or the **Save** icon in the **File** panel)
- **Recall**, **Recording** (this menu)
- **Sweep**, **Recording** tab
- **Sweep**, **Playback** tab
- **Input/Output**, "**Data Source**" on page 2649 tab

**NOTE**

A complete tutorial for the Record/Playback functionality, including how to load and save Recording files, can be found under the **Data Source** tab in **Input/Output**.

---

Dependencies	Only available in the following modes and measurements: <ul style="list-style-type: none"><li>- VMA (Digital Demod and Custom OFDM)</li><li>- 5G NR (Modulation Analysis)</li><li>- LTE (Modulation Analysis)</li><li>- WLAN (Modulation Analysis, MIMO Modulation Analysis, Spectral Flatness)</li><li>- Analog Demod</li><li>- Bluetooth (Transmit Analysis)</li><li>- IoT &amp; SRComms (LoRa CSS Demod)</li></ul>
--------------	---

### 7.2.15.1 Data Type

Allows you to recall IQ data from the measurement using a specified file type (**CSV**, **SDF**, **TXT**, **BIN**, **BINX**, **BINF**, **ORB**). See "**Recording**" on page 2792 for details about the available file types.

Note that **BIN**, **BINX** and **BINF** files do not include sampling rate information inside the file, so after recalling one of these file types you will need to set the Sample Rate in **Sweep**, **Playback**., based on your note of the Sample Rate that was displayed on the **Sweep**, **Recording** menu panel when you saved the file.

---

Example	<code>:MMEM:LOAD:RECORDING "C:\TEMP\MyIQData.csv"</code>
---------	--

### 7.2.15.2 Channel

Select data channels to recall. This is only supported in the 5G NR EVM, VMA Digital Demod, VMA Custom OFDM and WLAN MIMO EVM measurements.

The `<meas>` param in the command must be replaced with the node of the active measurement:

- `EVM` for 5G NR EVM
- `EVMM` for WLAN MIMO EVM
- `DDEM` for VMA Digital Demod
- `OFDM` for VMA Custom OFDM

Remote Command	<code>:MMEMory:LOAD:&lt;meas&gt;:RECORDing:CHANnel ALL   CH1   CH2   CH3   CH4   CH5   CH6   CH7   CH8</code> <code>:MMEMory:LOAD:&lt;meas&gt;:RECORDing:CHANnel?</code>
Example	<code>:MMEM:LOAD:EVM:REC:CHAN CH1</code> <code>:MMEM:LOAD:EVM:REC:CHAN?</code>
Preset	<code>ALL</code>
State Saved	No
Range	<code>ALL   CH1   CH2   CH3   CH4   CH5   CH6   CH7   CH8</code>

### 7.2.15.3 Reset

Clears all recalled data channels.

This is only supported by 5G NR EVM, VMA Digital Demod, VMA Custom OFDM and WLAN MIMO EVM measurements.

The `<meas>` param in the command must be replaced with the node of the active measurement:

- `EVM` for 5G NR EVM
- `EVMM` for WLAN MIMO EVM
- `DDEM` for VMA Digital Demod
- `OFDM` for VMA Custom OFDM

Remote Command	<code>:MMEMory:LOAD:&lt;meas&gt;:RECORDing:RESet</code>
Example	<code>:MMEM:LOAD:EVM:REC:RES</code>

### 7.2.15.4 Recalled data channel table (Display only)

Displays recalled IQ data file for each channel in a table.

## 7.2.16 Component Carrier Setup

Lets you export LTE-A Component Carrier Setup files for the specified Component Carrier. Selecting this control displays a menu that enables you to specify which Component Carrier Setup configuration will be exported. Select the desired configuration, then press **Save As...** to display a file dialog that you can use to select the directory and define the exported file name. This function is valid for Modulation Analysis and Conformance EVM measurements only.

EVM Setup File Format

Extension: `evms`

LTE EVM Setup parameters of specific component carriers in LTE-Advanced FDD/TDD EVM or CEVM measurement are stored in special binary files with a `.evms` extension. The specific set of component carrier configuration parameters that are exported depend on the Component Carrier specified.

The default path is for the files is:

`My Documents\LTEATDD | LTEAFDD\data\evmsetup`

(`My Documents` is an alias to a directory, the exact name of which depends on which user is logged in)

The default file name of the EVM Setup File is assembled from the DuplexMode, Bandwidth, and ComponentCarrierNumber values, plus a file number. For example, the file name could be:

`FDD_BW5MHz_CC0_0000.evms`

Remote Command	<code>:MMEMory:STORe:EVMSetup CC0   ...   CC4,&lt;string&gt;</code>
Example	<code>:MMEM:STORe:EVMSetup CC0, "FDD_BW5MHz_CC0_0000.evms"</code>
Notes	<p><code>CC*</code> is used to export LTE-A setup file for the specified component carrier</p> <p>Available only for the Modulation Analysis and Conformance EVM measurements</p> <p>For X-Series Measurement Application LTE Component Carrier EVM Setup Files (<code>*.evms</code>), the settings below are saved/recalled:</p> <ul style="list-style-type: none"> <li>Mode Level – Direction (Meas Setup – Radio)</li> <li>– Bandwidth (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)</li> </ul>

## 7 Save/Recall/Print

### 7.2 Recall

Meas Level	<ul style="list-style-type: none"><li>- UL/DL Allocation (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)</li><li>- Dw/GP Up Length(Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)</li><li>- Meas Time parameters(Meas Setup – Meas Time)</li><li>- Cell ID Mode (Meas Setup – Sync/Format)</li><li>- Cell ID Value (Meas Setup – Sync/Format)</li><li>- RS PRS (Meas Setup – Sync/Format)</li><li>- CP Length (Meas Setup – Sync/Format – Advanced Sync Setup)</li><li>- PDSCH IQ ref (Meas Setup – Sync/Format – Advanced Demod Setup)</li><li>- Basic Control Channel settings (Meas Setup – Channel Profile – Control and User Channels – Edit Basic Control Channels)</li><li>- PDCCH Control channel Settings (Meas Setup – Channel Profile – Control and User Channels – Edit PDCCH Control channels)</li><li>- Channel Include Settings (Meas Setup – Channel Profile – Control and User Channels)</li><li>- PDSCH Configuration Settings (Meas Setup – Channel Profile – Edit User Mapping)</li></ul>
------------	---

#### 7.2.17 Loss Comp

Sets the import file type to Loss Compensation Before DUT Table or to Loss Compensation After DUT Table.

Mode	NFIGURE
Parameter Name	Recall Loss Comp
Control Path	Recall
Parameter Type	ImmediateAction
SCPI Command	<code>:MMEMory:LOAD:LOSS BEFore   AFTEr,&lt;file_name&gt;</code>
SCPI Example	<code>:MMEM:LOAD:LOSS BEF, "C:\LossBefore.csv"</code> <code>:MMEM:LOAD:LOSS AFT, "C:\LossAfter.csv"</code>
Notes	Three file formats are supported: <ul style="list-style-type: none"><li>- Loss Compensation file (<code>.csv</code>)</li><li>- Legacy Loss Compensation file (<code>.loss</code>)</li><li>- S parameter file (<code>.s2p</code>)</li></ul>
Soft Key Label	Loss Comp

Backwards Compatibility SCPI :MMEMory:LOAD:LOSS  
Initial S/W Revision A.04.00

For `.s2p` files, only the `S21` component is used for the loss compensation.

The CSV format contains the following data:

File Type

Application Name: Measurement Name

Version and Model Number

Loss Comp Data

Below is an example of a valid CSV Loss Compensation file:

```
[Filetype LossCompensation]
```

```
[NF:NFIG]
```

```
Ver. ***, Model ***
```

```
10, 1.0000
```

```
20, 2.0000
```

```
30, 3.0000
```


```
40, 4.0000
```

```
50, 5.0000
```

```
60, 6.0000
```

## 7.3 Save

The **Save** dialog lets you save states, traces, screen images and other items from the instrument to files on the instrument's internal storage, to removable devices, and to directories on the network. You access the dialog by pressing the **Save** hardkey, or by pressing the folder icon at the bottom of the display and then pressing the **Save** icon.

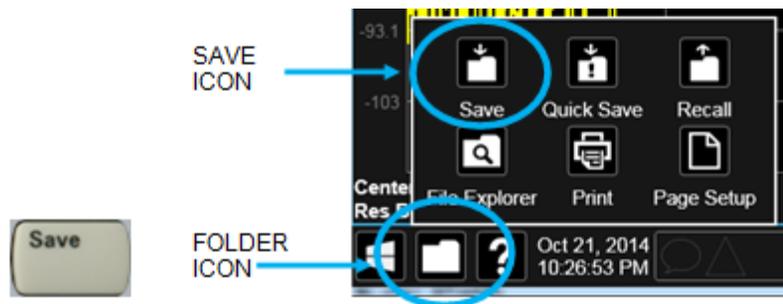

The dialog has tabs running down the left side, which you use to specify what you want to save.



You choose the save item and then complete the save by choosing a register or file location to which to save the item.


Notes

No remote command for this key specifically, but **:MMEM:STORE** is available for specific file types  
 Example: **:MMEM:STOR:STATE <filename>**

### 7.3.1 Save to File / Save As

For every Save type, a control appears labeled **Save to File** or **Save As**. **Save to File** appears for save types that also include registers (like State and Trace+State), and **Save As** appears for all other save types.

When you press **Save to File** or **Save As**, a dialog slides in from the right that allows you to see what files are already saved in the current directory.

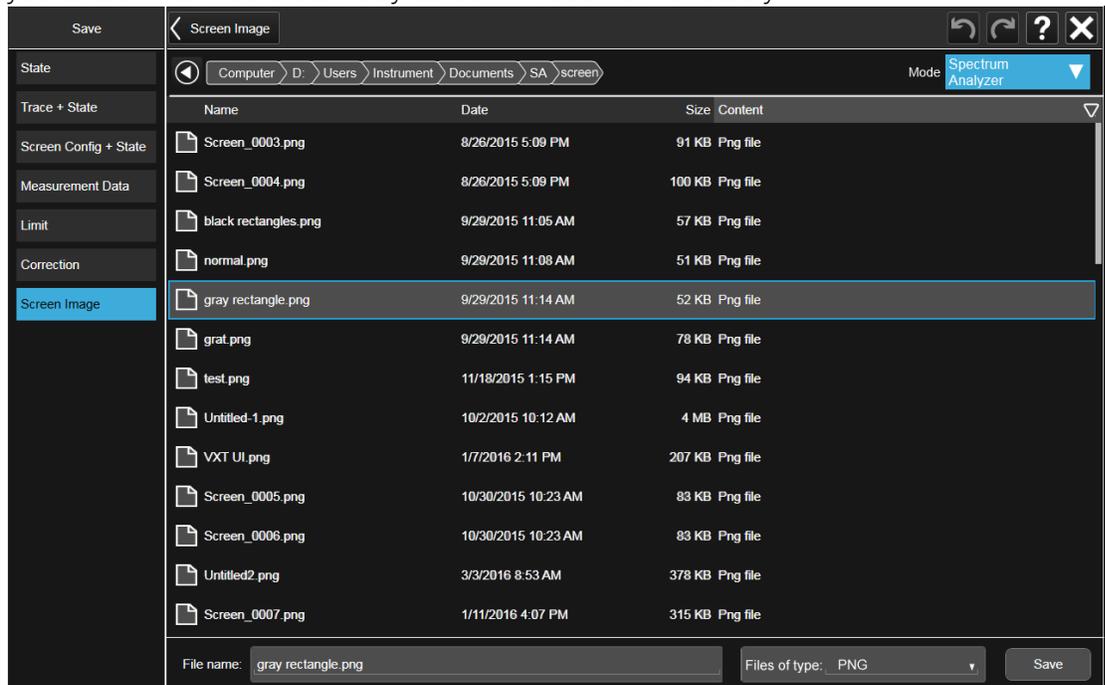

The default directory is the internal directory for the current Mode and save type, on

the **D:** drive. You may also change to another Mode's state directory by pressing the dropdown in the upper right corner labeled **Mode**. Once you have chosen a directory, the files in that directory whose extension matches the current data type (for example, **.state** or **.trace**) are displayed in the right-hand window of the dialog. You can sort this list by name, date, file size or extension by tapping the Name, Date, Size, or Content header at the top of each column. A second tap toggles the sort order between Ascending and Descending.

Also displayed is a path depiction showing the path to the current directory. In the example above, the path is **D:\Users\Instrument\Documents\SA\screen**. Tapping any element of this path lets you select an alternate route. Tapping the **Computer** arrow lets you select a different drive.



Tapping the "Back" arrow navigates to the previously selected directory.

Note: Using the C: drive is strongly discouraged, due to the risk of data being overwritten during an instrument software upgrade.

If you plug in a removable drive (for example, a thumb drive), the browser immediately navigates to the root of that drive. Furthermore, if you had a thumb drive in and you were in a directory on the thumb, and then you exit the browser, when you come back in you are still in the same directory on that removable drive. If you remove the thumb drive, you return to the directory you had been in before the thumb drive was plugged in.

Note that for each data type there is a "current" directory, and it is the last directory used by either Save or Recall for that Mode. For example, if in SA Mode you save a Corrections file to a particular directory, then when you go to recall a Correction in SA Mode, you should be pointing at that directory. Or if in EMC Mode you recall a Limit from a particular directory then when in EMC Mode you go to save a Limit, it should be pointing at that same directory. There is one "current" directory for each data type for each Mode (not one for Save and one for Recall).

The Filename field, just below the Path field, shows the filename that will be used. The **File Name** field is initially loaded with an automatically generated filename specific to the appropriate Save Type. The automatically generated filename is guaranteed not to conflict with any filename currently in the directory. You may edit the filename by tapping it, which brings up the onscreen alpha keyboard. Press the "Done" button on this keyboard when you are done editing.

Select a file to overwrite, type in a file name, or use the name suggested by the instrument (guaranteed not to conflict with any file in the current directory), and press Save. If the file specified already exists, a dialog will appear that allows you to replace the existing file by selecting **OK**, or you can Cancel the request.

After a successful save, a message "File <filename> saved" or "State Register <register number> saved" is displayed in an info box for a few seconds.

See ["Quick Save" on page 2770](#) for details of the automatic file naming algorithm.

## 7.3.2 State

Selects a register or file for saving the state.

**State** files contain essentially all the information required to return the instrument to the measurement and settings that were in effect at the time of the save. **State** files are in a proprietary binary form (for speed) and cannot be read or edited by PC software, but can be loaded back into the instrument to restore the state.

**State** files contain all the settings of the **Input/Output** system as well, even though **Input/Output** variables are outside of the Mode's state and unaffected by **Mode Preset**, because these are needed to restore the complete setup.

Persistent System settings (for example, GPIB address) are affected by neither **Mode Preset** nor **Restore Mode Defaults**, nor are they included in a saved **State** file.

For rapid saving, the **State** menu lists 16 registers to which you can save states. Pressing a **Register** button initiates the save. You can also select a file to which to save by pressing **Save to File**.

The default path for all **State** files is:

`My Documents\<<mode name>\state`

where `<mode name>` is the parameter used to select the Mode with `:INST:SEL` (for example, `SA` for Spectrum Analyzer Mode).

**State** files have the extension `.state`. The default filename is `State_0000.state`, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

**NOTE**

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so take care not to overwrite files and/or registers from one instance that were saved by another instance.

Remote Command	<code>:MMEMory:STORe:STATe &lt;filename&gt;</code>
Example	Store the current instrument state data in the file <code>MyStateFile.state</code> in the default directory: <code>:MMEM:STOR:STATe "MyStateFile.state"</code>
Notes	Both single and double quotes are supported for any filename parameter over remote After saving to a register, that register's menu key is updated with the date the time, unless a custom label has been entered for that key After saving to a register, you remain in the <b>Save State</b> menu, so that you can see the <b>Register</b> key update. After saving to a file, the instrument automatically returns to the previous menu and any <b>Save As</b> dialog goes away

---

Backwards	:MMEMory:STORe:STATe 1,<filename>
Compatibility	The "1" is simply ignored. The command is sequential
SCPI	

### 7.3.2.1 Register 1 thru Register 16

Selecting any one of these register buttons causes the state of the currently active Mode to be saved to the specified **Register**. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can edit any of the register names to enter custom names for any register.

Although these 16 registers are the only registers available from the front panel, there are 128 state registers available in the instrument. Registers 17-128 are only available from the SCPI interface, using the **\*SAV** command.

There is one set of 128 state registers in the instrument, not one set for each Mode. When a state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

**NOTE**

**In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so take care not to overwrite files and/or registers from one instance that were saved by another instance.**

---

The date displayed follows the format specified in the **Date Format** setting under the **Control Panel**. The time shows hours and minutes.

After the save completes, the corresponding register menu key annotation is updated with the date and time and the message **Register <register number> saved** is displayed.

---

Example	<b>*SAV 1</b>
Range	1-16 from front panel, 1-128 from SCPI

### 7.3.2.2 Edit Register Names

You may enter a custom name for any of the **Registers**, to help you remember what you are using that state to save. To do this, press the **Name** field for the register you want to rename, which displays the onscreen alpha keyboard. Press **Done** on this keyboard when you are done editing.

The maximum number of characters for a register name is 30. If you delete all the characters in the custom name, it restores the default (time and date).

The register names are stored within the state files, but they are not part of the instrument state; that is, once you have edited a register name, loading a new state will not change that register name. Another consequence of this is that the names will be persistent through a power cycle. Also, if a named state file is transferred to another instrument, it will bring its custom name along with it.

If you try to edit the name of an empty register, the instrument first saves the state to have a file to put the name in. If you load a named state file into an instrument with older firmware, it ignores the metadata.

The **\*SAV** and **\*RCL** commands are not affected by the custom register names, nor are the **:MMEM** commands.

Remote Command	<b>:MMEMory:REGister:STATe:LABel</b> <reg number>,"label"
Example	<b>:MMEM:REG:STAT:LAB 1,"my label"</b>
Notes	<p>&lt;reg number&gt; is an integer from 1 to 16. If the SCPI specifies an invalid register number an error message is generated, -222, "Data out of range; Invalid register label number"</p> <p>"label" is a string from 0 to 30 characters in length. If a label exceeds 30 characters, an error message is generated, -150, "String data error; Label clipped to 30 characters"</p> <p>"label" of zero length erases the custom label and restores the default (time and date) label. For example, <b>:MMEM:REG:STAT:LAB 1,""</b></p>
Preset	The names are unaffected by <b>Preset</b> or power cycle but are set to the default label (time and date) on <b>Restore System Defaults&gt;Misc</b>

### 7.3.3 Trace+State

Selects a register or file for saving selected traces and the state.

**Trace+State** files contain essentially all the information required to return the instrument to the measurement and settings that were in effect at the time of the save, as well as the data for one or all traces. **Trace+State** files are in a proprietary binary form (for speed) and cannot be read or edited by PC software, but can be loaded back into the instrument to restore the state and trace(s).

**Trace+State** files contain all the settings of the **Input/Output** system as well, even though **Input/Output** variables are outside of the Mode's state and unaffected by **Mode Preset**, because these are needed to restore the complete setup.

Persistent **System** settings (for example, GPIB address) are affected by neither **Mode Preset** nor **Restore Mode Defaults**, nor are they included in a saved **Trace+State** file.

For rapid saving, the **Trace+State** menu lists 16 registers to which you can save trace+state files. The **Trace+State** registers are separate registers from the **State** registers. Pressing a **Register** button initiates the save. You can also select a file to which to save by pressing **Save to File**.

The default path for all **Trace+State** files is the same as that for **State** files:

7 Save/Recall/Print  
7.3 Save

My Documents\`<mode name>`\state

where `<mode name>` is the parameter used to select the mode with `:INST:SEL` (for example, `BASIC` for IQ Analyzer Mode).

NOTE

In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so take care not to overwrite files and/or registers from one instance that were saved by another instance.

**Trace+State** files have the extension `.trace`. The default filename is `State_0000.trace`, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

The **Trace+State** selection only appears for measurements that support trace saves. It is blanked for modes that do not support trace saves. Saving **Trace** is identical to saving **State** except a `.trace` extension is used on the file instead of `.state`, and internal flags are set in the file indicating which trace was saved.

See "[More Information](#)" on page 2805.

---

Remote Command	<code>:MMEMory:STORe:TRACe TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   ALL,&lt;filename&gt;</code> <code>:MMEMory:STORe:TRACe:REGister TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   ALL,&lt;integer&gt;</code>
----------------	--

---

Example	Save the file <code>myState.trace</code> on the default path and flags it as a "single trace" file with Trace 1 as the single trace (even though all of the traces are in fact stored): <code>:MMEM:STOR:TRAC TRACE1,"myState.trace"</code>  Save the file <code>myState.trace</code> on the default path and flags it as an "all traces" file: <code>:MMEM:STOR:TRAC ALL,"myState.trace"</code>  Store trace 1 data in trace register 2: <code>:MMEM:STOR:TRAC:REG TRACE1,2</code>
---------	--

---

Notes	This command actually performs a <b>Save State</b> , which in the Swept SA measurement includes the trace data. However, it flags it (in the file) as a "save trace" file of the specified trace (or all traces)  Some Modes and measurements do not have available all 6 traces. The Phase Noise Mode command, for example, is: <code>:MMEMory:STORe:TRACe TRACE1   TRACE2   TRACE3   ALL,&lt;filename&gt;</code>  Some modes and measurements have more than 6 traces available. The Realtime SA Mode command, for example, is: <code>:MMEMory:STORe:TRACe TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6   TRACE7   TRACE8   TRACE9   TRACE10   TRACE11   TRACE12   ALL,&lt;filename&gt;</code>  The range for the register parameter is 1-5  When you initiate a save, if the file already exists, a dialog will appear that allows you to replace the existing file by selecting <b>OK</b> or you can cancel the request. If you select <b>OK</b> , the file will be overwritten. Using the <b>C:</b> drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade
-------	--

Both single and double quotes are supported for any filename parameter over remote

After saving to a register, that register's menu key is updated with the date and time of the save

After saving to a register, you remain in the **Save Trace** menu, so that you can see the **Register** key update. After saving to a file, the instrument automatically returns to the previous menu and any **Save As** dialog goes away

#### More Information

In measurements that support saving **Traces**, for example, Swept SA, the **Trace** data is saved along with the **State** in the **State** file. When recalling the **State**, the **Trace** data is recalled as well. Traces are recalled exactly as they were stored, including the writing mode and update and display modes. If a Trace was updating and visible when the **State** was saved, it returns updating and visible, and its data will be rewritten right away. When you use **State** to save and recall traces, any trace whose data must be preserved should be placed in **View** or **Blank** mode before saving.

The following table describes the **Trace Save** and **Recall** possibilities:

You want to recall state and one trace's data, leaving other traces unaffected	<b>Save Trace+State</b> from 1 trace. Make sure that no other traces are updating (they should all be in View or Blank mode) when the save is performed	On recall, specify the trace you want to load the one trace's data into. This trace loads in view. All other traces' data will be unaffected, although their trace mode will be as it was when the state save was performed
You want to recall all traces	<b>Save Trace+State</b> from <b>ALL</b> traces	On recall, all traces come back in <b>View</b> (or <b>Blank</b> if they were in <b>Blank</b> or <b>Background</b> when saved)
You want all traces to load exactly as they were when saved	<b>Save State</b>	On recall, all traces' mode and data will be exactly as they were when saved. Any traces that were updating will have their data immediately overwritten

### 7.3.3.1 Save From Trace

Selects the trace to be saved. The default is the currently selected trace, selected in this this or any other menu with Trace selection. If you have chosen All then it remains chosen until you specifically change it to a single trace, regardless of the trace selected in the **Trace** menu.

When you select a trace, it makes that trace the current trace, so it displays on top of all of the other traces.

### 7.3.3.2 Register 1 thru Register 16

Selecting any one of these register buttons causes the specified trace(s) and the state of the currently active mode to be saved to the specified register. The registers are provided for rapid saving and recalling, since you do not need to specify a filename or navigate to a file. Each of the register menu keys annotates whether it is empty or at what date and time it was last modified. In addition, you can edit any of the register names to enter custom names for any register.

There is one set of 16 trace+state registers in the instrument, not one set for each Mode. When trace+state is saved, the Mode it was saved from is saved with it; then when it is recalled, the instrument switches to that Mode.

**NOTE**

**In products that run multiple simultaneous instances of the X-Series Application, all instances share the same registers and file directories, so take care not to overwrite files and/or registers from one instance that were saved by another instance.**

---

The date displayed follows the format specified in the **Date Format** setting in **Control Panel**. The time shows hours and minutes.

After the save completes, the corresponding register menu key annotation is updated with the date and time and the message **Register <register number> saved** is displayed.

---

Example	*SAV 1
Range	1-16

---

### 7.3.3.3 Edit Register Names

You may enter a custom name for any of the registers, to help you remember what you are using that trace+state to save. To do this, press the **Name** field for the register you want to rename, which displays the onscreen alpha keyboard. Press the **Done** button on this keyboard when you are done editing.

The maximum number of characters for a register name is 30. If you delete all the characters in the custom name, it restores the default (time and date).

The register names are stored within the trace+state files, but they are not part of the instrument state; that is, once you have edited a register name, loading a new state does not change that register name. Another consequence of this is that the names are persistent through a power cycle. Also, if a named state file is transferred to another instrument, it brings its custom name along with it.

If you try to edit the name of an empty register, the instrument will first save the trace+state to have a file to put the name in. If you load a named state file into an instrument with older firmware, it ignores the metadata.

Remote Command	<code>:MMEMory:REGister:TRACe:LABel &lt;reg number&gt;,"label"</code> <code>:MMEMory:REGister:TRACe:LABel? &lt;reg number&gt;</code>
Example	<code>:MMEM:REG:TRAC:LAB 1,"my label"</code>
Notes	<code>&lt;reg number&gt;</code> is an integer from 1 to 16. If the SCPI specifies an invalid register number an error message is generated, -222, "Data out of range; Invalid register label number" <code>"label"</code> is a string from 0 to 30 characters in length. If a label exceeds 30 characters, an error message is generated, -150, "String data error; Label clipped to 30 characters" <code>"label"</code> of zero length erases the custom label and restores the default (time and date) label, e.g., <code>:MMEM:REG:TRAC:LAB 1,""</code>
Preset	The names are unaffected by <b>Preset</b> or power cycle but are set to the default label (time and date) on <b>Restore System Defaults &gt; Misc</b>

### 7.3.4 Screen Config + State

Saves the complete configuration of all your screens to a file. You choose a file to which to export the data.

Remote Command	<code>:MMEMory:STORe:SCONfig &lt;filename&gt;</code>
Example	Store the current screen configuration in the file <code>myScreenConfig.screen</code> in the default directory: <code>:MMEM:STOR:SCON "myScreenConfig.screen"</code>

### 7.3.5 Measurement Data

Specifies a data type (for example, trace data) and choose a file to which to export the data.

**Measurement Data** files are comma-separated Value (CSV) files, and contain the requested data in a form that can be imported into Excel or similar spreadsheets, as well as header data that gives information on relevant instrument settings at the time the save occurred.

The main application of **Measurement Data** files is for importing data to a PC for analysis, but in some cases **Measurement Data** files can also be imported back into the instrument to recreate the data object that existed at the time of the save. For example, most **Trace** data files can be imported back into the instrument.

The default path for **Measurement Data** Files is:

`My Documents\<mode name>\data`

7 Save/Recall/Print  
7.3 Save

with the subdirectory reflecting the data type and where **<mode name>** is the parameter used to select the Mode with **:INST:SEL** (for example, **SA** for Spectrum Analyzer Mode) and **<measurement name>** is the parameter used to select the measurement with **:CONF** (for example, **SAN** for Swept SA). For example, a Peak Table file from Swept SA in SA Mode would be stored in:

My Documents\SA\data\SAN\results

**Measurement Data** files have extension **.csv**. The default filename is **Prefix\_0000.csv**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory, and “Prefix” is dependent on the data type:

Type	Default Prefix
Traces	Trace_
Measurement Result	MeasR_
Capture Buffer	CapBuf_

For example, the default filename for a trace data file in an empty directory would be **Trace\_0000.csv**

### 7.3.5.1 Save From

Selects the specific item to be saved, for example, if you are exporting trace data you may specify Trace 1, Trace 2, etc.

The default for traces is the currently selected trace, selected in this this or any other menu with Trace selection. If you have chosen **All** then it remains chosen until you specifically change it to a single trace, regardless of the trace selected in the Trace menu. The **All** selection saves all six traces in one CSV file with the x-axis data in the first column and the individual trace data in succeeding columns. The header data and x-axis data in this file reflect the current settings of the measurement. Note that any traces that are in **View** or **Blank** may have different x-axis data than the current measurement settings; but this different x-axis data is *not* output to the file.

---

Preset	Not part of <b>Preset</b> , but is reset to by <b>Restore Mode Defaults</b> Survives shutdown
--------	--

### 7.3.5.2 Data Type

You choose the data type to save by using the radio button selection box. Below are the specifications for Data files for each measurement.

---

Notes	There is no SCPI command for <b>Data Type</b> , as the type is implied in the SCPI command for each item
Dependencies	The <b>Data Type</b> menu for any given measurement only contains data types that are supported by that measurement

## Meas Results

**Meas Results** files contain information that describes the current state of the instrument, as detailed in Meas Result File Contents below.

This command is only available in certain measurements, such as:

- PowerSuite: Channel Power, OBW, ACP, Spectrum Emissions Mask, Spurious Emissions, Power Stat CCDF, Transmit Power, Monitor Spectrum, IQ Waveform
- IQ Analyzer: Complex Spectrum
- Phase Noise: Log Plot and Spot Frequency
- WCDMA: Code Domain, Mod Accuracy, Power Control, and QPSK EVM
- Analog Demod: AM, FM, PM and FM Stereo
- Noise Figure
- Pulse

In general, the data in the Meas Results file matches the data which is returned to a measurement data query (`:FETCh?`, `:READ?`, `:MEASure?`). These queries and the results they return are documented for each measurement, and can be found in the Help for that measurement (or in the manual for that measurement) in the section titled **Remote Command Results**.

In the **MeasResults** file, you will see a column for each value of *n*. Each column contains the value for the corresponding value of *n* in the **Remote Command Results** table.

For example, Complex Spectrum allows values of *n* up to 17, and the **MeasResults** file for Complex Spectrum has 17 columns. So, the data returned when you send `:FETCh:SPECTrum1?` matches the data in the column labeled **MeasResult1** of the Meas Results file. See the example below:

Response to FETCh:SPECTrum1?

```
2.125444221E+01,6.487077992E+07,2.050000000E+02,6.004725051E+07,3.9215
68627E+04,2.370000000E+02,0.000000000E+00,1.000000000E-
07,1.000000000E+00,2.360000000E-05,2.500000000E+01
```

MeasResult1 column from Meas Results file

```
MeasResult1
-21.25444221
64870779.92
```

7 Save/Recall/Print  
7.3 Save

205  
60047250.51  
39215.68627  
237  
0  
1.00E-07  
1  
2.36E-05  
25

In addition, examples of the Meas Results files are given for each data type in the Help below.

Remote Command	<code>:MMEMory:STORe:RESults &lt;string&gt;</code>
Example	<code>:MMEM:STOR:RES "MeasR_0000.csv"</code>
Notes	<p>If the save is initiated via SCPI and the file already exists, the file will be overwritten</p> <p>The SCPI command exports measurement results to the file specified as the parameter in the current path. The default path is:</p> <p><code>My Documents\&lt;current mode&gt;\data\&lt;measurement name&gt;\results</code></p> <p>where <code>&lt;mode name&gt;</code> is the parameter used to select the mode with the <code>:INST:SEL</code> command (for example, <code>SA</code> for Spectrum Analyzer Mode) and <code>&lt;measurement name&gt;</code> is the parameter used to select the measurement with the <code>:CONF:</code> command (for example, <code>SAN</code> for the Swept SA measurement)</p> <p>Using the <code>C:</code> drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade</p> <p>The SCPI parameter is a quoted string, which specifies the filename. Both single and double quotes are supported for any filename parameter over SCPI</p>
Annotation	After the save is complete, an advisory is displayed in the window so that the user can confirm which file was saved
Status Bits/OPC dependencies	Sequential – waits for the previous measurement to complete

### CHP Meas Results File Contents

The file contains measurement results, preceded by the following header information.

- File ID string, which is `MeasResult`
- Mode ID: Measurement ID, for example, `SA:CHP`

- Firmware rev and model number
- Option string
- Auto Sweep Time Rules
- Average Mode
- Average Number
- Average State
- Center Frequency
- Detector
- Electrical Atten
- Electrical Atten State
- IFGain
- IFGainAuto
- Impedance
- Integ BW
- Internal Preamp
- Internal Preamp Band
- Mechanical Atten
- MechanicalAttenStepEnum
- PSD Unit
- Resolution Band Width
- Resolution Bandwidth Shape
- RRC Filter Alpha
- RRC Filter BW
- RRC Filter State
- Span

## 7 Save/Recall/Print

### 7.3 Save

- Sweep Points
- Sweep Time
- Sweep Time Auto
- TriggerSource
- Video Bandwidth
- Y Axis Unit

Following the header entries above is a line containing only **MeasResult1** and **MeasResult2**, which flags the start of the measurement results. Each subsequent line consists of two comma-separated values, the **MeasResult1** value and the **MeasResult2** value.

- **MeasResult1** contains the same results as `:MEAS|:READ|:FETCh:CHPower1`
- **MeasResult2** contains the same results as `:MEAS|:READ|:FETCh:CHPower2`

The exported file is in CSV format. When imported into Microsoft Excel or a similar spreadsheet application, a typical file appears as follows:

#### MeasResult

##### SA:CHP

A.10.53	N9030A
526 ALV ATP B1X B1Y B25 B40 BBA CR3 CRP DCF DDA DP2 DRD EA3 EDP EMC EP1 ERC ESC ESP EXM FSA LFE LNP MAT MPB NFE NUL P26 PFR PNC RTL RTS S40 SB1 SEC SM1 TVT YAS YAV	1
Auto Sweep Time Rules	Normal
Average Mode	Exponential
Average Number	10
Average State	TRUE
Center Frequency	13255000000
Detector	Average
IFGain	FALSE
IFGainAuto	FALSE
Impedance	50
Integ BW	2000000
Internal Preamp	FALSE
Internal Preamp Band	Low
PSD Unit	DbmHz
Resolution Band Width	27000

Resolution Bandwidth Shape	Gaussian
RRC Filter Alpha	0.22
RRC Filter BW	3840000
RRC Filter State	FALSE
Span	3000000
Sweep Points	1001
Sweep Time	0.004933333
Sweep Time Auto	TRUE
TriggerSource	Free
Video Bandwidth	270000
Y Axis Unit	DecibelMilliwatt
MeasResult1	MeasResult2
-76.8141133132837	-95.29174
-139.824413269924	-94.99601
	-94.95281
	-95.17146

## OBW Meas Results File Contents

The first lines in the OBW Meas results file consist of header information, as follows.

- File ID string, which is “MeasResult”
- Measurement ID following Mode ID, which is “SA:OBW” for example.
- Firmware rev and model number
- Option string
- Auto Sweep Time Rules
- Average Mode
- Average Number
- Average State
- Center Frequency
- Detector
- Electrical Atten

## 7 Save/Recall/Print

### 7.3 Save

- Electrical Atten State
- IFGain
- IFGainAuto
- Internal Preamp
- Internal Preamp Band
- Limit
- Limit State
- Max Hold
- Mechanical Atten
- MechanicalAttenStepEnum
- OBW Percent Pwr
- Resolution Band Width
- Resolution Bandwidth Shape
- Span
- Sweep Points
- Sweep Time
- Sweep Time Auto
- TriggerSource
- Video Bandwidth
- x DB

The data above is followed in the file by a line containing “MeasResult1” and “MeasResult2”. This line forms a header for each set of measurement results, which appear in subsequent lines. Each line of Measurement Results consists of two comma-separated values, for MeasResult1 and MeasResult2 respectively.

The MeasResult1 set in the file corresponds to the data returned by `:MEAS|:READ|:FETCh:OBwidth1`, and the MeasResult2 set corresponds to the data returned by `:MEAS|:READ|:FETCh:OBwidth2`.

The exported file is in CSV format, with a `.csv` extension.

Meas Results File Example

When imported into Microsoft Excel, a typical Meas Results CSV file appears as shown in the example below.

MeasResult	
SA:OBW	
A.10.53	N9030A
526 ALV ATP B1X B1Y B25 B40 BBA CR3 CRP DCF DDA DP2 DRD EA3 EDP EMC EP1 ERC ESC ESP EXM FSA LFE LNP MAT MPB NFE NUL P26 PFR PNC RTL RTS S40 SB1 SEC SM1 TVT YAS YAV	1
Auto Sweep Time Rules	Normal
Average Mode	Exponential
Average Number	10
Average State	TRUE
Center Frequency	1.33E+10
Detector	Average
IFGain	FALSE
IFGainAuto	FALSE
Internal Preamp	FALSE
Internal Preamp Band	Low
Limit	5000000
Limit State	FALSE
Max Hold	FALSE
OBW Percent Pwr	99
Resolution Band Width	27000
Resolution Bandwidth Shape	Gaussian
Span	3000000
Sweep Points	1001
Sweep Time	0.004933
Sweep Time Auto	TRUE
TriggerSource	Free
Video Bandwidth	270000
x DB	-26
MeasResult1	MeasResult2
2971020.10835045	-94.3702543927405
-74.9741251886604	-94.1447790390963

## ACP Meas Results File Contents

An ACP Meas Results File contains measurement results with the following header information, columns A and B unless otherwise stated:

## 7 Save/Recall/Print

### 7.3 Save

- File ID string, which is **MeasResult**
- Mode ID: Measurement ID, for example, **SA:ACP**
- Firmware rev and model number
- Option string
- Auto Scaling
- Auto Sweep Time Rules
- Automatic Trigger Time
- Automatic Trigger Time State
- Average Mode
- Average Number
- Average State
- Bar Graph
- Carrier Coupling (columns A thru S, TRUE or FALSE)
- Carrier Pwr Present (columns A thru S, Yes or No)
- Carrier Spacing (columns A thru S, in Hz)
- Carriers
- Center Frequency
- Center Frequency Step
- Center Frequency Step State
- Detector Auto
- Detector Selection
- Electrical Atten
- Electrical Atten State
- External Array Trigger Delay (columns A thru E)
- External Array Trigger Delay State (columns A thru E)

- External Array Trigger Level (columns A thru E)
- External Array Trigger Slope (columns A thru E)
- Filter Alpha (columns A thru S)
- Filter BW
- Filter Type
- Internal Preamp
- Internal Preamp Band
- Limit Test
- Line Trigger Delay
- Line Trigger Delay State
- Line Trigger Slope
- Meas Method
- Meas Type
- Measurement Noise Bandwidth (columns A thru S, in Hz)
- Mechanical Atten
- MechanicalAttenStepEnum
- Method (columns A thru S)
- Noise Correction
- Offset Abs Limit (columns A thru G)
- Offset Fail (columns A thru G)
- Offset Filter Alpha
- Offset Filter BW (columns A thru G)
- Offset Filter Type (columns A thru G)
- Offset Freq (columns A thru G)
- Offset Freq State (columns A thru G)

## 7 Save/Recall/Print

### 7.3 Save

- Offset Integ BW (columns A thru G)
- Offset Method
- Offset Rel Lim (Car) (columns A thru G)
- Offset Rel Lim (PSD) (columns A thru G)
- Offset Res BW (columns A thru G)
- Offset Res BW Mode (columns A thru G)
- Offset Video BW (columns A thru G)
- Offset Video BW Mode (columns A thru G)
- Periodic Timer Period
- Periodic Timer Sync Source
- Periodic Timer Trigger Delay
- Periodic Timer Trigger Delay State
- Points
- Power Ref
- Power Ref State
- Preselector Adjust
- PSD Ref
- PSD Unit
- Ref Car Freq
- Ref Car Freq State
- Ref Carrier
- Ref Carrier Mode
- Ref Position
- Ref Value
- Res BW

- Res BW Mode
- RFBurst Trigger Delay
- RFBurst Trigger Delay State
- RFBurst Trigger Level Abs
- RFBurst Trigger Level Rel
- RFBurst Trigger Level Type
- RFBurst Trigger Slope
- Scale/Div
- Span
- Sweep Time
- Sweep Time Auto
- Trigger Holdoff
- Trigger Holdoff State
- Trigger Source
- Video BW
- Video BW Auto

The file contains this header, followed by a line containing **MeasResult1**, **MeasResult2**, and **MeasResult3**. This line flags the start of the measurement results. Each line of Measurement Results consists of three comma separated values, for **MeasResult1**, **MeasResult2**, and **MeasResult3**.

**MeasResult1** contains the same result as **MEAS | READ | FETCh:ACPower1**; **MeasResult2**, **MEAS | READ | FETCh:ACPower2**; **MeasResult3**, **MEAS | READ | FETCh:ACPower3**.

The exported file is in CSV format, with a **.csv** extension. When imported into Microsoft Excel or a similar spreadsheet application, the *first three* columns of a typical file appear as follows:

Column A	Column B	Additional columns (if any)
<b>MeasResult</b>		
<b>SA:ACP</b>		

7 Save/Recall/Print  
7.3 Save

Column A	Column B	Additional columns (if any)
A.10.53	N9030A	
526 ALV ATP B1X B1Y B25 B40 BBA CR3 CRP DCF DDA DP2 DRD EA3 EDP EMC EP1 ERC ESC ESP EXM FSA LFE LNP MAT MPB NFE NUL P26 PFR PNC RTL RTS S40 SB1 SEC SM1 TVT YAS YAV	01	
Auto Scaling	True	
Auto Sweep Time Rules	Accy	
Automatic Trigger Time	0.1	
Automatic Trigger Time State	False	
Average Mode	Exponential	
Average Number	10	
Average State	True	
Bar Graph	True	
Carrier Coupling	True	Columns A thru S: True/False
Carrier Pwr Present	Yes	Columns A thru S: Yes/No
Carrier Spacing	5000000	Columns A thru S: Hz
Carriers	1	
Center Frequency	13255000000	
Center Frequency Step	800000	
Center Frequency Step State	True	
Detector Auto	True	
Detector Selection	Average	
Electrical Atten	0	
Electrical Atten State	False	
External Array Trigger Delay	1E-06	Columns A thru E
External Array Trigger Delay State	False	Columns A thru E
External Array Trigger Level	1.2	Columns A thru E
External Array Trigger Slope	Positive	Columns A thru E
Filter Alpha	0.22	Columns A thru S
Filter BW	Minus3dB	
Filter Type	Gaussian	
Internal Preamp	False	
Internal Preamp Band	Low	

Column A	Column B	Additional columns (if any)
Limit Test	False	
Line Trigger Delay	1E-06	
Line Trigger Delay State	False	
Line Trigger Slope	Positive	
Meas Method	IbwSpeed	
Meas Type	TPRef	
Measurement Noise Bandwidth	2000000	Columns A thru S: Hz
Mechanical Atten	10	
MechanicalAttenStepEnum	S2dB	
Method	IBW	Columns A thru S
Noise Correction	False	
Offset Abs Limit	0	0
Offset Fail	Relative	Columns A thru G
Offset Filter Alpha	0.22	
Offset Filter BW	Minus3dB	Columns A thru G
Offset Filter Type	Gaussian	Columns A thru G
Offset Freq	3000000	Columns A thru G
Offset Freq State	True	Columns A thru G
Offset Integ BW	2000000	Columns A thru G
Offset Method	False	
Offset Rel Lim (Car)	-45	Columns A thru G
Offset Rel Lim (PSD)	-28.87	Columns A thru G
Offset Res BW	220000	Columns A thru G
Offset Res BW Mode	True	Columns A thru G
Offset Video BW	22000	Columns A thru G
Offset Video BW Mode	True	Columns A thru G
Periodic Timer Period	0.02	
Periodic Timer Sync Source	None	
Periodic Timer Trigger Delay	1E-06	
Periodic Timer Trigger Delay State	False	
Points	1001	
Power Ref	-76.81 dBm	
Power Ref State	On	
Preselector Adjust	0	

7 Save/Recall/Print  
7.3 Save

Column A	Column B	Additional columns (if any)
PSD Ref	-139.82 dBm/Hz	
PSD Unit	DbmHz	
Ref Car Freq	13.255000000 GHz	
Ref Car Freq State	On	
Ref Carrier	1	
Ref Carrier Mode	On	
Ref Position	Top	
Ref Value	-30	
Res BW	220000	
Res BW Mode	False	
RFBurst Trigger Delay	1E-06	
RFBurst Trigger Delay State	False	
RFBurst Trigger Level Abs	-20	
RFBurst Trigger Level Rel	-6	
RFBurst Trigger Level Type	Absolute	
RFBurst Trigger Slope	Positive	
Scale/Div	10	
Span	8000000	
Sweep Time	0.02	
Sweep Time Auto	True	
Trigger Holdoff	0.1	
Trigger Holdoff State	False	
Trigger Source	Free	
Video BW	22000	
Video BW Auto	True	
<b>MeasResult1</b>	<b>MeasResult2</b>	<b>MeasResult3</b>
-76.8058517744559	0	1
0.084790019950006	-76.8058517744559	0
0.0283929128313787	-999	1
... and so on	-999	0
	-999	1

### SPUR Meas Results File Contents

A Spurious Emissions Meas Results File contains measurement results with the following header information, columns A and B unless otherwise stated:

- File ID string, which is “MeasResult”
- Measurement ID following Mode ID, which is “SA:SPUR” for example.
- Firmware rev and model number
- Option string
- Abs Start Limit (columns A thru K)
- Abs Stop Limit (columns A thru K)
- Abs Stop Limit Mode (columns A thru K, TRUE or FALSE)
- Auto Scaling
- Auto Sweep Time Rules
- Automatic Trigger Time
- Automatic Trigger Time State
- Average Mode
- Average Number
- Average State
- Detector 1 (columns A thru K)
- Detector 2 (columns A thru K)
- Electrical Atten
- Electrical Atten State
- External Array Trigger Delay (columns A thru E)
- External Array Trigger Delay State (columns A thru E)
- External Array Trigger Level (columns A thru E)
- External Array Trigger Slope (columns A thru E)
- Filter Type (columns A thru K)
- IF Gain Auto (columns A thru K, TRUE or FALSE)
- IF Gain State (columns A thru K, TRUE or FALSE)

## 7 Save/Recall/Print

### 7.3 Save

- Internal Preamp
- Internal Preamp Band
- Line Trigger Delay
- Line Trigger Delay State
- Line Trigger Slope
- Meas Type
- Mechanical Atten
- MechanicalAttenStepEnum
- Peak Excursn (columns A thru K)
- Periodic Timer Period
- Periodic Timer Sync Source
- Periodic Timer Trigger Delay
- Periodic Timer Trigger Delay State
- Pk Threshold (columns A thru K)
- Points (columns A thru K)
- Points Mode (columns A thru K)
- Range State (columns A thru K)
- Ref Value
- Res BW (columns A thru K)
- Res BW Mode (columns A thru K)
- RFBurst Trigger Delay
- RFBurst Trigger Delay State
- RFBurst Trigger Level Abs
- RFBurst Trigger Level Rel
- RFBurst Trigger Level Type

- RFBurst Trigger Slope
- Scale/Div
- Spurious Report Mode
- SpurRangeStartFrequencyArray (columns A thru K)
- SpurRangeStopFrequencyArray (columns A thru K)
- Sweep Time (columns A thru K)
- Sweep Time Mode (columns A thru K)
- Trigger Holdoff
- Trigger Holdoff State
- TriggerSource
- Video BW (columns A thru K)
- Video BW Mode (columns A thru K)

The data above is followed in the file by a line containing “MeasResult1” to “MeasResult42”. This line forms a header for each set of measurement results, which appear in subsequent lines. Each line of Measurement Results consists of 42 comma-separated values, from the MeasResult1 value to the MeasResult42 value.

The MeasResult1 set in the file corresponds to the data returned by MEAS/READ/FETCH:SPURious1; the MeasResult2 set corresponds to the data returned by MEAS/READ/FETCH:SPURious2, and so on.

The exported file is in CSV format, with a .csv extension.

#### Meas Results File Example

When imported into Excel, a typical Meas Results file will show the header information above followed by the data. A sample of what the data rows look like appears below. Only the columns for Meas Result 1 through 6 are shown, due to lack of space:

MeasResult 1	MeasResult 2	MeasResult 3	MeasResult 4	MeasResult 5	MeasResult 6
19	-80.27209	-80.87862	-90.94577	-89.27086	-76.77856
1	-78.28497	-80.93996	-91.00485	-90.56063	-76.33968

## SEM Meas Results File Contents

SEM Meas Results Files are CSV files, with a **.csv** extension. Each file contains sets of measurement results, preceded by a header section.

The header section items are as follows. They span columns A and B, unless otherwise stated:

- File ID string, which is **MeasResult**
- Mode ID: Measurement ID, for example, **SA:SEM**
- Firmware rev and model number
- Option string
- Automatic Trigger Time
- Automatic Trigger Time State
- Center Frequency
- ChanIntegBW
- ChannelDetector
- ChannelDetectorState
- ChanPwrRefAuto
- ChanResBW
- ChanResBWAuto
- ChanSpan
- ChanSweepTime
- ChanSweepTimeAuto
- ChanSweepTypeAuto
- ChanVbwRbwRatio
- ChanVbwRbwRatioAuto
- ChanVideoBW
- ChanVideoBWAuto

- Electrical Atten
- Electrical Atten Bypass
- Electrical Atten State
- External1 Trigger Delay
- External1 Trigger Delay State
- External1 Trigger Level
- External1 Trigger Slope
- External2 Trigger Delay
- External2 Trigger Delay State
- External2 Trigger Level
- External2 Trigger Slope
- FilterAlpha
- FrontEnd Gain
- FrontEnd Gain Mode
- Input Port
- Internal Preamp
- Internal Preamp Band
- Line Trigger Delay
- Line Trigger Delay State
- Line Trigger Slope
- LowNoiseAmplifier
- Measure Trace
- Mechanical Atten
- Mechanical Atten Auto
- MergedTraceNumPoints

## 7 Save/Recall/Print

### 7.3 Save

- OffsetAverageType
- OffsetDetector
- OffsetDetectorState
- OffsetLimit2ndFailMaskBTS
- OffsetLimit2ndFailMaskMS
- OffsetLimitAbs2ndStartBTS
- OffsetLimitAbs2ndStartMS
- OffsetLimitAbs2ndStopBTS
- OffsetLimitAbs2ndStopMS
- OffsetLimitAbsStartBTS
- OffsetLimitAbsStartMS
- OffsetLimitAbsStopBTS
- OffsetLimitAbsStopMS
- OffsetLimitFailMaskBTS
- OffsetLimitFailMaskMS
- OffsetLimitRelStartBTS
- OffsetLimitRelStartMS
- OffsetLimitRelStopBTS
- OffsetLimitRelStopMS
- OffsetMeasBWBTS
- OffsetMeasBWMS
- OffsetResolutionBWAUTOBTS
- OffsetResolutionBWAUTOMS
- OffsetResolutionBWBTS
- OffsetResolutionBWMS

- OffsetSideBTS
- OffsetSideMS
- OffsetStartFrequencyBTS
- OffsetStartFrequencyMS
- OffsetStateBTS
- OffsetStateMS
- OffsetStopFrequencyBTS
- OffsetStopFrequencyMS
- OffsetSweepTimeAutoBTS
- OffsetSweepTimeAutoMS
- OffsetSweepTimeBTS
- OffsetSweepTimeMS
- OffsetSweepTypeAutoBTS
- OffsetSweepTypeAutoMS
- OffsetSweepTypeBTS
- OffsetSweepTypeMS
- OffsetVbwRbwRatioAutoBTS
- OffsetVbwRbwRatioAutoMS
- OffsetVbwRbwRatioBTS
- OffsetVbwRbwRatioMS
- OffsetVideoBWAutoBTS
- OffsetVideoBWAutoMS
- OffsetVideoBWbts
- OffsetVideoBWMS
- PeakReference

## 7 Save/Recall/Print

### 7.3 Save

- Periodic Timer Period
- Periodic Timer Sync Source
- Periodic Timer Trigger Delay
- Periodic Timer Trigger Delay State
- PowerReference
- PSDReference
- Radio Device
- RefAverageType
- RFBurst Trigger Delay
- RFBurst Trigger Delay State
- RFBurst Trigger Level Abs
- RFBurst Trigger Level Rel
- RFBurst Trigger Level Type
- RFBurst Trigger Slope
- RrcFilter
- SemAverageNumber
- SemAverageState
- SemRbwShape
- Span
- Sweep Type
- TotalAtten
- Trace Display
- Trace Math Function
- Trace Math Log Offset
- Trace Math Log Reference

- Trace Math Operand 1
- Trace Math Operand 2
- Trace Update
- TraceTypeArray
- Trigger Holdoff
- Trigger Holdoff State
- TriggerSource
- Video Trigger Delay
- Video Trigger Delay State
- Video Trigger Level
- Video Trigger Slope
- ViewCenterFreq
- ViewSelection
- ViewSpan
- XScaleAuto
- XScalePerDiv
- XScaleRefFreq
- XScaleRefPos
- YAutoScaling
- YRefValue
- YScalePerDiv

The header section is followed by a line containing items **MeasResult1** to **MeasResult20**, which flags the start of the measurement results. Each line of Measurement Results consists of 20 comma-separated values, from **MeasResult1** through **MeasResult20**.

**MeasResult1** contains the same results as **MEAS/READ/FETCH:SEMask1**; **MeasResult2**, **MEAS/READ/FETCH:SEMask2**; **MeasResult3**, **MEAS/READ/FETCH:SEMask3**; and so on.

7 Save/Recall/Print  
7.3 Save

When imported into Microsoft Excel or a similar spreadsheet application, a typical Meas Results file displays the header information above, followed by the data section. A sample of the data rows appears below. Only the columns for **MeasResult1** through **MeasResult6** are shown, due to lack of space:

<b>MeasResult1</b>	<b>MeasResult2</b>	<b>MeasResult3</b>	<b>MeasResult4</b>	<b>MeasResult5</b>	<b>MeasResult6</b>	<b>...etc.</b>
-999	0	-13	999	15.59025	-999	
15.590253	0	-13	999	-999	-999	
59						

## CCDF Meas Results File Contents

CCDF Meas Results Files are in CSV format, with a **.csv** extension. Each file contains sets of measurement results, preceded by a header section. The header section contains the following lines:

- File ID string, which is **MeasResult**
- Mode ID: Measurement ID, for example **SA:PST**
- Firmware rev and model number
- Option string
- Automatic Trigger Time
- Automatic Trigger Time State
- CcdfCurrentCounts
- Center Frequency
- Center Frequency Step
- Center Frequency Step State
- Counts
- Electrical Atten
- Electrical Atten State
- External Array Trigger Delay
- External Array Trigger Delay State
- External Array Trigger Level

- External Array Trigger Slope
- Gaussian Line
- IF Gain Auto
- IF Gain State
- Info BW
- Internal Preamp
- Internal Preamp Band
- Line Trigger Delay
- Line Trigger Delay State
- Line Trigger Slope
- Meas Cycles
- MeasInterval
- Mechanical Atten
- MechanicalAttenStepEnum
- Periodic Timer Period
- Periodic Timer Sync Source
- Periodic Timer Trigger Delay
- Periodic Timer Trigger Delay State
- Preselector Adjust
- Ref Trace
- RFBurst Trigger Delay
- RFBurst Trigger Delay State
- RFBurst Trigger Level Abs
- RFBurst Trigger Level Rel
- RFBurst Trigger Level Type

## 7 Save/Recall/Print

### 7.3 Save

- RFBurst Trigger Slope
- Scale/Div
- Trigger Holdoff
- Trigger Holdoff State
- TriggerSource

The header section is followed by a line containing items **MeasResult1** through **MeasResult4**. This line forms a header for each set of measurement results, which are listed in subsequent lines. Each line of Measurement Results consists of 4 comma-separated values, from the **MeasResult1** value to the **MeasResult4** value.

The **MeasResult1** set in the file corresponds to the data returned by **MEAS|READ|FETCH:PStatistic1**; the **MeasResult2** set corresponds to the data returned by **MEAS|READ|FETCH:PStatistic2**, and so on.

#### Meas Results File Example

When imported into Microsoft Excel or a similar spreadsheet application, a typical Meas Results file appears as shown in the example below.

#### MeasResult

##### SA:PST

A.10.53	N9030A
526 ALV ATP B1X B1Y B25	1
B40 BBA CR3 CRP DCF	
DDA DP2 DRD EA3 EDP	
EMC EP1 ERC ESC ESP EXM	
FSA LFE LNP MAT MPB NFE	
NUL P26 PFR PNC RTL RTS	
S40 SB1 SEC SM1 TVT YAS	
YAV	
Automatic Trigger Time	0.1
Automatic Trigger Time State	FALSE
CcdfCurrentCounts	6087500
Center Frequency	1.33E+10
Center Frequency Step	5000000
Center Frequency Step State	TRUE
Counts	10000000
Electrical Atten	0
Electrical Atten State	FALSE

External Array Trigger Delay	1.00E-06	1.00E-06	
External Array Trigger Delay State	FALSE	FALSE	
External Array Trigger Level	1.2	1.2	
External Array Trigger Slope	Positive	Positive	
Gaussian Line	TRUE		
IF Gain AUto	FALSE		
IF Gain State	FALSE		
Info BW	5000000		
Internal Preamp	FALSE		
Internal Preamp Band	Low		
Line Trigger Delay	1.00E-06		
Line Trigger Delay State	FALSE		
Line Trigger Slope	Positive		
Meas Cycles	1600		
MeasInterval	0.001		
Mechanical Atten	10		
MechanicalAttenStepEnum	S2dB		
Periodic Timer Period	0.02		
Periodic Timer Sync Source	None		
Periodic Timer Trigger Delay	1.00E-06		
Periodic Timer Trigger Delay State	FALSE		
Preselector Adjust	0		
Ref Trace	FALSE		
RFBurst Trigger Delay	1.00E-06		
RFBurst Trigger Delay State	FALSE		
RFBurst Trigger Level Abs	-20		
RFBurst Trigger Level Rel	-6		
RFBurst Trigger Level Type	Absolute		
RFBurst Trigger Slope	Positive		
Scale/Div	2		
Trigger Holdoff	0.1		
Trigger Holdoff State	FALSE		
TriggerSource	Free		
<b>MeasResult1</b>	<b>MeasResult2</b>	<b>MeasResult3</b>	<b>MeasResult4</b>
-73.0651058869747	36.9712197125257	36.7879441171442	
36.9712197125257	36.8850431211499	36.7032368203129	

## IQ Waveform Meas Results File Contents

An IQ Waveform Meas Results File contains measurement results with the following header information:

- File ID string, which is "MeasResult"
- Measurement ID following Mode ID, for example, [WCDMA:WAV](#)
- Firmware rev and model number
- Option string
- Center Frequency
- Input Port
- Info BW
- Capture Time

The data above is followed in the file by a line containing [MeasResult0](#), [MeasResult1](#), and [MeasResult2](#). This line forms a header for each set of measurement results, which appear in subsequent lines. Each line of Measurement Results consists of 3 comma-separated values.

The [MeasResult0](#) set in the file corresponds to the data returned by [MEAS|READ|FETCh:WAVeform0](#); the [MeasResult1](#) set corresponds to the data returned by [:MEAS|READ|FETCh WAVeform1](#), and the [MeasResult2](#) set corresponds to the data returned by [:MEAS|READ|FETCh WAVeform2](#). See "[Remote Command Results](#)" on [page 2149](#) for details.

The exported file is in CSV format, with a [.csv](#) extension.

### Meas Results File Example

When imported into Microsoft Excel or a similar spreadsheet application, a typical Meas Results CSV file appears as shown in the example below.

```
MeasResult
WCDMA:WAV
A.20.10_P0003                                N9040B
503 508 513 526 AKT ALV ATP B1A B1X B1Y B25 B2X    1
B40 B85 CR3 CRP DP2 EA3 EDC EDP EMC EP0 ERC
ESC ESP EXM FBP FP1 FP2 FS1 FS2 FSA FT2 LFE LNP
MPB NF2 NUL P26 PFR RBE RT2 RTL RTS TDS YAV
Center Frequency                                1000000000
```

Input Port	RF	
WAV_InfoBw	100000	
WAV_Used_CaptureTime	0.002	
<b>MeasResult0</b>	<b>MeasResult1</b>	<b>MeasResult2</b>
3.24E-06	8.00E-06	-99.79862
7.28E-08	-96.51288923	-95.87017
2.43E-06	-96.51288923	-101.4529
-4.47E-06	251	-94.5003
7.65E-07	7.796300857	-95.8662
-2.56E-06	-88.71658837	-97.78934
4.79E-07	-125.5631137	-101.0861
5.94E-06		-97.72218
4.71E-06		-96.72934
1.93E-06		-100.7464
4.04E-07		-99.8119

(rows continue until all data is displayed)

### 7.3.6 Limit

Lets you choose a file to which to export the **Limit** data.

**Limit** files are CSV files, and contain the limit data in a form that can be imported into Excel or similar spreadsheets, as well as header data that gives information on the limit.

The default path for most Limits files is:

`My Documents\<mode name>\data\limits`

where **<mode name>** is the parameter used to select the mode with the `:INST:SEL` command (for example, **SA** for Spectrum Analyzer). Hence a **Limit** file from any measurement in Spectrum Analyzer Mode would be stored in:

`My Documents\SA\data\limits`

The default path for **Limit** files from the Log Plot measurement in Phase Noise Mode is:

`My Documents\PNOISE\data\LPL\limits`

The default filename is `Limit_0000.csv`, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

For backwards compatibility, older limit files with the extension `.lim` can be read into the instrument, but you can only save limits as `.csv` files.

7 Save/Recall/Print  
7.3 Save

Remote Command	<code>:MMEMory:STORe:LIMit LLINE1   ...   LLINE6,&lt;filename&gt;</code>
Example	Save the 2nd Limit Line to the file <code>myLimitLine2.csv</code> in the current path: <code>:MMEM:STOR:LIM LLINE2,"myLimitLine2.csv"</code>
Notes	If the save is initiated via SCPI, and the file already exists, the file will be overwritten Using the <b>C:</b> drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade Both single and double quotes are supported for any filename parameter over SCPI
Dependencies	Only appears if you have the proper option installed in your instrument In the Log Plot measurement in Phase Noise Mode, there are only three Limit Lines, so the valid parameters are <code>LLINE1   LLINE2   LLINE3</code>
Preset	1 Not part of <b>Preset</b> , but reset by <b>Restore Mode Defaults</b> Survives power cycles
State Saved	The selected Limit number is saved in instrument state
Status Bits/OPC dependencies	Sequential - waits for previous measurement to complete

### Limit File Contents

Limits may be exported into a data file with a `.csv` extension. They may be imported from that data file; they may also be imported from a legacy limit file with a `.lim` extension. The `.lim` files meet the specification for limit files contained in the EMI measurement guide, HP E7415A.

#### `.csv` file format

Except for information in quotes, limit line files are not case sensitive. Information in bold is required verbatim; other text is example text, and italic text is commentary which should not be present in the file.

The first five lines are system-required header lines, and must be in the correct order:

<b>Limit</b>	<i>Data file type name</i>
<b>"FCC Part 15"</b>	<i>File Description</i>
<b>"Class B Radiated"</b>	<i>Comment</i>
<b>A.01.00.R0001,N9020A</b>	<i>Instrument Version, Model Number</i>
<b>P13 EA3 UK6 ,01</b>	<i>Option List, File Format Version</i>

The next few lines describe the parameters; on export they will be in the order shown, on import they can be in any order. If some parameters are missing, they will revert to the default.

Type, Upper	Upper Lower
X Axis Unit, MHz	MHz S; other units should be converted; this also specifies the domain
Amplitude Unit, dBm	dBm V; all other units should be converted appropriately
Frequency Interpolation, Linear	Logarithmic Linear
Amplitude Interpolation, Logarithmic	Logarithmic Linear
X Control, Fixed	Fixed Relative; on input we consider only the first three characters
Y Control, Fixed	Fixed Relative; on input we consider only the first three characters
Margin, 0	Always in dB. A 0 margin is equivalent to margin off
X Offset, 10	Expressed in the X axis units
Y Offset, 5	Expressed in the Amplitude units

The Amplitude Unit line in the limits file may contain a transducer (formerly “antenna”) factor unit, for example:

Amplitude Unit=dBuV/m

Transducer factor units are dBuV/m, dBuA/m, dBpT, and dBG. In this case, the unit is treated exactly as though it were dBuV, meaning that all of the limits are interpreted to have units of dBuV. The box does NOT change Y Axis Units when such a limit is loaded in.

The X-Axis unit also specifies the domain (time or frequency). It is not possible to have both time-domain lines and frequency-domain lines at the same time; if a time-domain line is imported while the other lines are in the frequency domain (or vice-versa), all limit lines will be deleted prior to import.

If the sign of the margin is inappropriate for the limit type (for example a positive margin for an upper limit), the sign of the margin will be changed internally so that it is appropriate.

The remaining lines describe the data. Each line in the file represents an X-Y pair. The X values should be monotonically non-decreasing, although adjacent lines in the file can have the same X value as an aid to building a stair-stepped limit line. To specify a region over which there is no limit, use +1000 dBm for upper limits or -1000 dBm for lower limits.

The data region begins with the keyword **DATA**:

<b>DATA</b>
200.000000,-10.00
300.000000,-10.00
300.000000,-20.00
500.000000,-20.00

.lim file format

This is a legacy format which allows files saved from older instruments to be loaded into the X-Series. *Design of files in this format is not recommended.*

Except for name and description text (which is taken verbatim), limit line files are not case sensitive.

The file may optionally start with a description block, consisting of the single line **[DESCRIPTION]** followed by arbitrary text. If there is no Limit Line Name header,

7 Save/Recall/Print  
7.3 Save

the description text will be used as the limit line description in the GUI. If there is a Limit Line Name header, the Limit Line Name will be used instead.

Arbitrary text

The header block begins with the single line **[HEADER]**, followed by some or all of the following fields, each with **<parameter name>=<parameter value>**. Excess white space around the “=” is ignored. If a field is not present or the data is invalid, the value is not changed when the limit line is loaded. Ordering of the fields is unimportant.

Limit Line Name="FCC Part 15;Class B Radiated"

<b>Type</b> =Upper	Upper Lower
<b>Frequency Unit</b> =MHz	For time domain limits, this should say "Time Unit"
Amplitude Unit=dBm	
Frequency Interpolation=Lin	Log Lin; on input we consider only the first three characters
Amplitude Interpolation=Log	Log Lin; on input we consider only the first three characters
Mode=Fixed	Fixed Relative
Margin=0	Always in dB. A 0 margin is equivalent to margin off
Domain=Frequency	Frequency Time
Delimiter=TAB	

The data block begins with the line **[DATA]**, and consists of any number of segments.

The Data lines represent segments – X1, Y1, X2, Y2. If the list of segments includes a gap in the middle on input, the space inside the gap will be set to ensure the limit does not fail: for upper limits maxtracevalue, for lower limits mintracevalue. If two segments overlap on input, the stricter of the two segments is used – for upper limits the lower segment, for lower limits the upper segment.

Thus, the following segments indicate into a –5 dB limit from 10 MHz to 20 MHz and 30 MHz to 40MHz:

10	-5	20	-5
30	-5	40	-5

If this was an upper limit, this would be translated into the following set of limit points:

10	-5
20	-5
20	maxtracevalue

30				maxtracevalue	
30				-5	
40				-5	
	30	-29.5	88	-29.5	
	88	-33	216	-33	note that we are stair-stepping the line
	230	-35.6	960	-35.6	The gap between 216 MHz and 230 MHz will never fail
	960	-43.5	5000	-43.5	

### 7.3.6.1 Select Limit

Selects the specific Limit to be saved, for example, Limit 1.

---

Preset	Not part of <b>Preset</b> , but reset to <b>LLINE1</b> by <b>Restore Mode Defaults</b> Survives shutdown
--------	---

### 7.3.7 Correction

Exports Amplitude Corrections files in the PC-readable **.csv** format.

Amplitude Correction files contain the correction data in a form that can be imported into Excel or similar spreadsheets, as well as header data that gives information on the correction.

The default filename is **Ampcor\_0000.csv**, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

The default path for Corrections files is:

**My Documents\amplitudeCorrections**

For backwards compatibility, older limit files with the extensions **.amp**, **.cbl**, **.ant** and **.oth** can be read into the instrument, but you can only save corrections as **.csv** files.

See "[Correction Data File](#)" on page 2842

---

Remote Command	<b>:MMEMory:STORe:CORRection 1   ...   8, &lt;filename&gt;</b>
----------------	--

Example	Save Correction 2 to the file <b>myAmpcor.csv</b> on the current path: <b>:MMEM:STOR:CORR 2 "myAmpcor.csv"</b>
---------	---

Notes	If the save is initiated via SCPI, and the file already exists, the file will be overwritten Using the <b>C:</b> drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade Both single and double quotes are supported for any filename parameter over SCPI
-------	--

7 Save/Recall/Print  
7.3 Save

Dependencies	Corrections are not supported by all measurements. If in a Mode in which some measurements support it, this key is grayed-out in measurements that do not. Does not appear at all if no measurements in the Mode support it  Does not appear unless you have the proper option installed in your instrument
Annotation	After save is complete, an advisory is displayed in the message bar confirming which file was saved
Backwards Compatibility SCPI	:MMEMory:STORE:CORREction ANTenna   CABLe   OTHer   USER, <filename>  For backwards compatibility, <b>ANTenna</b> maps to 1, <b>CABLe</b> maps to 2, <b>OTHer</b> maps to 3 and <b>USER</b> maps to 4

Correction Data File

A Correction Data File contains a copy of one of the instrument correction tables. Corrections provide a way to adjust the trace display for predetermined gain curves (such as for cable loss).

Corrections files are text files in **.csv** (Comma-Separated Values) form, to make them importable into Excel or other spreadsheet programs. The format for Corrections files is as follows:

Line #	Type of field	Example	Notes
1	File type, must be "Amplitude Correction"	Amplitude Correction	May not be omitted
2	File Description (in quotes)	"Correction Factors for 11966E"	60 characters max; may be empty but may not be omitted. If exceeds 60 characters, error -233 Too much data reported
3	Comment (in quotes)	"Class B Radiated"	60 characters max; may be empty but may not be omitted. . If exceeds 60 characters, error -233 Too much data reported
4	Instrument Version, Model #	A.02.06,N9020A	May be empty but may not be omitted
5	Option List, File Format Version	K03 LFE EXM ,01	May be empty but may not be omitted
6	Freq Unit to be used for all frequency values in the file	Frequency Unit, MHz	assumed to be Hz if omitted
7	Transducer Unit	Antenna Unit, None	If omitted leaves the Transducer unit unchanged. The amplitude unit in the Transducer Unit field is a conversion factor that is used to adjust the Y Axis Units of the current mode, if the mode supports Transducer Units. For more details

Line #	Type of field	Example	Notes
			on transducer correction data, refer to the Input/Output, Corrections key description. Allowable values: dBuV/m, dBuA/m, dBG, dBpT, None
8	Freq Interpolation	Frequency Interpolation, Linear	if omitted leaves the Freq Interpolation unchanged. Allowable values: Linear, Logarithmic
9	Bias value in mA	Bias,0.00	If omitted leaves the Bias value unchanged (added as of A.08.50)
10	Bias State	Bias State,On	If omitted leaves the Bias State unchanged. Allowable values: On, Off (added as of A.08.50)
11	Overlap, two values, Freq1 and Freq2, separated by commas	Overlap,33500,40000	Uses Freq Unit from line 6. Thus, in this example Freq1=33.5 GHz, Freq2= 40.0 GHz (see note below). If omitted leaves the overlap unchanged (added as of A.08.50)
12	DATA marker	DATA	Corrections data begins in the next line

Lines 2 through 5 can be empty but must appear in the file. Lines 6 through 11 are optional, the lines can be left out of the file altogether.

The Overlap row and the two Bias rows apply only to external mixing. Both are read-only, they are never written by the instrument. The only way to insert or modify these rows is to edit the file with a text editor or a spreadsheet editor. These rows are intended for use by mixer manufacturers, as they allow the manufacturer to insert data about how the mixer corrections were generated and how they should be applied. The Bias rows allow you to specify whether to turn Bias on or off when the Correction is turned on and to specify a Bias value (turning off the Correction does not change the Bias, but turning it back on again sets it to the value specified in the file). The Overlap row allows you to specify an overlap region in which two different corrections may be applied. It is expected that in the corrections data itself, there will be TWO corrections values exactly at Max Freq, otherwise Overlap is ignored. The way the overlap is processed is as follows: if at any given time the current instrument Start Freq is greater than Freq 1 and lower than Freq 2, and the current Stop Freq is greater than Freq 2, extend the first correction point at or above Freq 2 down to Freq 1, rather than using the correction data between Freq1 and Freq2.

Only one Transducer units can be on at any given time. Note that this means that if a correction file with a Transducer Unit is loaded into a particular Correction, all other Corrections are set to that same Transducer unit. Note that the legacy term "Antenna Unit" is still used in the correction file, even though the more modern term "Transducer Unit" is used in the user interface.

7 Save/Recall/Print  
7.3 Save

Similarly, the Bias rows can only be used in Correction register 1, because there can only be one setting for Bias at any given time. If a Correction file with a Bias or Bias State row is loaded into any Correction register but 1, an error is generated: Mass storage error; Can only load Bias Settings into Correction 1

The data follows the DATA row, as comma separated X, Y pairs; one pair per line.

For example, suppose you have an Antenna to correct for on an N9020A version A.02.06 and the correction data is:

- 0 dB at 200 MHz
- 17 dB at 210 MHz
- 14.8 dB at 225 MHz

Then the file will look like:

- Amplitude Correction
- "Correction Factors for 11966E"
- "Class B Radiated"
- A.02.06,N9020A
- P13 EA3 UK6,01
- Frequency Unit, MHz
- Antenna Unit, dBuV/m
- Frequency Interpolation, Linear
- DATA
- 200.000000,0.00
- 210.000000,17.00
- 225.000000,14.80

The choices for the 1 of N fields in the metadata are as follows:

- Frequency Unit: Hz, kHz, MHz, GHz
- Antenna Unit: dBuV/m, dBuA/m, dBG, dBpT, None
- Frequency Interpolation: Logarithmic, Linear

### 7.3.7.1 Select Correction

Selects the specific Correction to be saved, for example, Correction 1.

---

Preset	Not part of a <b>Preset</b> , but reset to <b>Correction 1</b> by <b>Restore Input/Output Defaults</b> Survives a shutdown
--------	---

## 7.3.8 SCPI Recorder

Contains controls to allow you to save SCPI recordings.

### 7.3.8.1 Save To File

Saves SCPI recording content to a file. For details of the SCPI Recording feature, see "[SCPI Recorder](#)" on page 2436.

There are two possible file formats:

Type	Extension	Details
Text	<code>.txt</code>	Default
Python Script	<code>.py</code>	Generates a Python script that can be executed in Python environment.. For details, see " <a href="#">Saving a SCPI Recording as a Python Script</a> " on page 2845

The saved file content does not include the label of each recorded entry, just the SCPI mnemonics. The file is saved to the following folder:

```
<user_name>:\Documents\Keysight\Infrastructure\ScpiRecording folder
```

### Saving a SCPI Recording as a Python Script

To execute the generated Python script:

- Install the Python version required by PyVISA
- Download the PyVISA library from: <https://pypi.org/project/PyVISA/>
- Modify the connection string, to specify *your* instrument's connection string

Example Script

An example of the generated script is shown below.

```
#_install location: https://pypi.org/project/PyVISA/
import pyvisa
```

## 7 Save/Recall/Print

### 7.3 Save

```
import re
# connected instrument
_inst = ""
# SCPI Recording commands and queries
# Add/Modify the instrument address to execute the script
_connectionString = 'your instrument connection string here'
#Example SCPI Recording Entries
_recordingEntries = ['Active Mode & Measurement|':INST:CONF:SA:SANalyzer',
'Query Operation Complete|'*OPC?',
'Active Mode & Measurement|':INST:CONF:SA:SANalyzer',
'Query Operation Complete|'*OPC?',
'Center Frequency|':SENSe:FREQuency:CENTer 12000000000',
'Freq Offset|':SENSe:FREQuency:OFFSet 10',
'Ref Level|':DISPlay:WINDow:TRACe:Y:SCALE:RLEVEL 5']
def ConnectToInstrument():
    rm = pyvisa.ResourceManager()
    _inst = rm.open_resource(_connectionString)
    _inst.read_termination = '\n'
    _inst.write_termination = '\n'
    idn = _inst.query('IDN?')
    print("Sending Recording Entries to: " + idn)
def CheckError()
    err = _inst.query('SYST:ERR?')
    return err.lower.find("no error")
def SendCommand(recordingEntry):
    # split the recording entry into label and mnemonic
    labelAndMnemonic = recordingEntry.split('|')
    label = labelAndMnemonic[0]
    mnemonic = labelAndMnemonic[1]
    # check and see if this is OPC query
```

```

opcIndex = mnemonic.find('OPC?')
#if OPC query send the query and get OPC query value
if opcIndex >= 0:
    opcQueryValue = _inst.query(mnemonic)
    print(opcQueryValue)
else:
    print(mnemonic)
    _inst.write(mnemonic)
err = CheckError()
# publish any errors from the previous command
if err:
    print('Error for command ' + label + ': ' + err)
for entry in _recordingEntries
    SendCommand(entry)

```

### 7.3.9 Mask

The **Mask** data type is used to import and export Mask files for measurements that use masks, such as cellular comms and real-time measurements.

### 7.3.10 Waveform Sequence

Saves waveform sequences from the ARB memory of an Internal Source. When you open the Save **Waveform Sequence** dialog and press **Save**, the current waveform sequence is saved to the selected directory.

---

Notes	No remote command, front panel only
Dependencies	Only appears if your hardware includes an Internal Source, such as in VXT

---

### 7.3.11 Screen Image

Selects a file for saving the contents of the display.

**Screen Image** files are PNG (Portable Network Graphics) files with the same resolution as the data display. They contain the image that was on the screen before you opened the **Save** dialog. When the **Screen Image** key is pressed, a "thumbnail"

of the captured image is displayed, with the note “This is the image that will be saved” below it.

After you have completed the save, a message “File image.png saved” (assuming `image.png` was the filename you used).

NOTE

As of firmware release A.17.50, sending `*CLS` (Clear Status) removes any message displayed on the screen. If you do not want to see the “File saved” message after sending `:MMEM:STOR:SCR` (described below), send the following sequence (substituting your file name for `filename.png`): `:MMEM:STOR:SCR “filename.png”;*CLS`

NOTE

As of firmware release A.19.50, saving a screen image removes any informational message displayed on the screen before it captures the screen. This is useful if you are sending “save image” commands in rapid sequence, as it keeps the “File saved” message from one screen capture from appearing in the next screen capture. Error messages are still captured.

If you send a succession of screen image commands *too* rapidly, the system may not have time to remove the previous message before the next screen capture. Sending screen image commands more rapidly than twice per second is not advised.

The default path for State Files is:

`My Documents\<mode name>\screen`

where `<mode name>` is the parameter used to select the mode with `:INST:SEL`, for example, `SA` for Spectrum Analyzer Mode.

**Screen Image** files have extension `.png`. The default filename is `Screen_0000.png`, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory.

After you have completed the save, the **Quick Save** front-panel key lets you quickly repeat the last save performed, using an auto-named file, with new current screen data.

---

Remote Command	<code>:MMEMory:STORe:SCReen &lt;filename&gt;</code>
----------------	---

---

Example	Store the current screen image in the file <code>MyScreenFile.png</code> in the default directory: <code>:MMEM:STOR:SCR "myScreen.png"</code>
---------	--

---

Backwards Compatibility SCPI	<code>:HCOpy:SDUMp:DATA?</code> returns the screen image in a <code>&lt;DEFINITE LENGTH ARBITRARY RESPONSE DATA&gt;</code> element. The response data is IEEE Block format; the controlling computer can strip the header and store the result as a <code>.png</code> file
------------------------------	---

Blocking Screen Capture (Remote Command Only)

This command works *only* when the measurement is in **Single** mode (see "[Sweep/Measure](#)" on page 2282). When the command is sent, it blocks the SCPI client, waits for the current refresh to complete, then captures the screen shot and saves it. In some instances, a single measurement is taken, and a screen shot of that measurement is captured.

This command ensures that the last-measured data is refreshed on the screen before it is captured, by blocking the command and waiting for refresh to complete. The command may time out, in which case it must be re-sent.

If timeout occurs, or if the active measurement is in **Continuous** mode, an error is returned.

Remote Command	<code>:MMEMory:STORe:SCReem:BLORked &lt;filename&gt;</code>
Example	Wait for the current screen refresh to complete before capturing the screen shot, then store the current screen image in the file <code>MyScreenFile.png</code> in the default directory: <code>:MMEM:STOR:SCR:BLOR "myScreen.png"</code>

### 7.3.11.1 Theme

Accesses a menu of functions that enable you to choose the theme to be used when saving the screen image. You can choose between themes to be used when saving the screen image.

See "[More Information](#)" on page 2849 for examples of the themes.

Remote Command	<code>:MMEMory:STORe:SCReem:THEME FILLed   OUTLine</code> <code>:MMEMory:STORe:SCReem:THEME?</code>
Example	<code>:MMEM:STOR:SCR:THEM OUTL</code>
Preset	<b>FILLed</b> ; not part of <b>Preset</b> , but reset by <b>Restore Misc Defaults</b> or <b>Restore System Defaults All</b>
Backwards Compatibility SCPI	<code>:MMEMory:STORe:SCReem:THEMe TDCoLor   TDMonochrome   FCOLor   FMONochrome</code>
Backwards Compatibility Notes	To permit code compatibility with A-model X-Series Signal Analyzer instruments, the command parameters from the A-models are mapped as follows: <code>TDCoLor</code> and <code>TDMonochrome</code> are both mapped to <b>FILLed</b> (exact full color representation of what is on the screen) <code>FCOLor</code> and <code>FMONochrome</code> are both mapped to <b>OUTLine</b> (uses color for traces and other items, but most filled areas are white) There is no Monochrome theme in B-models, so the A-models monochrome commands yield color <code>:MMEM:STOR:SCR:THEM?</code> always returns <b>FILLed</b> or <b>OUTLine</b> , never <code>FCOLor</code> , <code>FMONochrome</code> , <code>TDCoLor</code> , or <code>TDMonochrome</code> There is no monochrome theme in the X-Series Touch UI  More Information

- The **FILLed** theme is an exact representation of the information on the display
- The **OUTLine** theme eliminates most of the filled areas, in order to save ink when the image is printed. In addition, the yellow trace color is changed to be more orange, to improve visibility against a white background. Note that some objects remain filled. In particular, the selected marker remains filled with the green marker color, in order to distinguish it from the other markers. This is important, as it is the selected marker whose readout appears in the upper right corner of the display

### 7.3.12 Power Sensor Cal Factor

Selects a file to which to export the Power Sensor Cal factor data.

**Cal Factor** files are XML files, and contain the cal factor data and header data that gives information on the power sensor.

The default path for **Cal Factor** Files is:

`My Documents\<<mode name>\data\PSCF`

where `<mode name>` is the parameter used to select the mode with `:INST:SEL` (for example, `MRECEIVE` for Measuring Receiver Mode). Hence, a **Cal Factor** file from any measurement in the Measuring Receiver mode would be stored in:

`My Documents\MRECEIVE\data\PSCF`

**Cal Factor** files have the extension `.xml`. The default filename is `<Sensor Model>_<Sensor Serial Number>_0000.xml`, where the 4-digit number is the lowest number that does not conflict with any filename in the current directory. If the sensor model or serial number is blank, the default filename is `PSCF_0000.xml`.

Remote Command	<code>:MMEMory:STORE:PSCFactor &lt;file_name&gt;</code>
Example	<code>:MMEM:STOR:PSCF "myPSCF.xml"</code>
Notes	<p>If the save is initiated via SCPI, and the file already exists, the file will be overwritten</p> <p>Using the <b>C:</b> drive is strongly discouraged, since it runs the risk of being overwritten during an instrument software upgrade</p> <p>Both single and double quotes are supported for any filename parameter over SCPI</p>
Dependencies	Only appears if you have the proper option installed in your instrument

### 7.3.13 Recording

Lets you save to a file data being acquired by the measurement, so that it can later be recalled and played back as though it were coming from the input.

You may specify a data type (for example, I/Q data) and choose a file to which to save the data.

The recording and playback of signal data files is a multi-step process that involves controls in several menus.

The menus that are involved in Record/Playback are:

- **Save, Recording** (this menu)
- **Recall, "Recording" on page 2792** (under the **Recall** hardkey or the **Recall** icon in the **File** panel)
- **Sweep, Recording** tab
- **Sweep, Playback** tab
- **Input/Output, "Data Source" on page 2649** tab

**NOTE**

A complete tutorial for the Record/Playback functionality, including how to load and save Recording files, can be found under the **Data Source** tab in **Input/Output**.

---

Dependencies	<p>Only available in the following Modes and measurements:</p> <ul style="list-style-type: none"> <li>- VMA (Digital Demod and Custom OFDM)</li> <li>- 5G NR (Modulation Analysis)</li> <li>- LTE (Modulation Analysis)</li> <li>- WLAN (Modulation Analysis, MIMO Modulation Analysis, Spectral Flatness)</li> <li>- Analog Demod</li> <li>- Bluetooth (Transmit Analysis)</li> <li>- IoT &amp; SRComms (LoRa CSS Demod)</li> </ul>
--------------	--

### 7.3.13.1 Data Type

Lets you save IQ data from the measurement using a specified file type (**CSV**, **SDF**, **TXT**, **BIN**, **BINX**, **BINF**, **ORB**).

<b>CSV</b>	Comma-Separated Values. Excel compatible format. Plain text roughly three times the size of BINF
<b>TXT</b>	Text format. Plain text roughly three times the size of BINF
<b>SDF</b>	Format developed for Keysight 89600 VSA Software. Note that due to differences in the internal file structure, SDF files saved by X-Series are not guaranteed to work perfectly with 89600
<b>BIN</b>	Interleaved 16-bit Q15 signed IQ file, in Big Endian format. Q15 is a DSP format in which the most significant bit is the sign bit, followed by 15 bits of fraction. The Q15 number

7 Save/Recall/Print  
7.3 Save

has a decimal range between -32768 and -32767. The data is scaled to fit within this decimal range

BIN files do not include sampling rate information inside the file, there will be associated txt file including sampling rate and scaling information

**BINX** Interleaved 16-bit Q15 signed IQ file, in Little Endian format. The data is scaled to fit within the decimal range

BINX files do not include sampling rate information inside the file, there will be associated txt file including sampling rate and scaling information

**BINF** 32-bit IEEE 754 floating-point number in Little Endian format. The data is raw IQ data

BINF files do not include sampling rate information inside the file, there will be associated txt file including sampling rate information

**ORB** Format developed for Keysight ORAN Studio. This format is only supported by 5G NR, LTEAFDD and LTEATDD Modulation Analysis measurements, LTEAFDD and LTEATDD CEVM measurements

---

Example `:MMEM:STORe:RECORDing "C:\TEMP\MyIQData.csv"`

### 7.3.13.2 Channel

Select data channels to save. This is only supported by 5G NR Mode's EVM, VMA Digital Demod, VMA Custom OFDM measurements, and by WLAN Mode's MIMO EVM measurement.

The `<meas>` param in the command must be replaced with the node of the active measurement:

Parameter	Mode	Measurement
EVM	5G NR	EVM
EVMM	WLAN	MIMO EVM
DDEM	VMA	Digital Demod
OFDM	VMA	Custom OFDM

---

Remote Command `:MMEMory:STORe:<meas>:RECORDing:CHANnel ALL | CH1 | CH2 | CH3 | CH4 | CH5 | CH6 | CH7 | CH8`

`:MMEMory:STORe:<meas>:RECORDing:CHANnel?`

---

Example `:MMEM:STOR:EVM:REC:CHAN CH1`

`:MMEM:STOR:EVM:REC:CHAN?`

---

Preset `ALL`

---

State Saved `No`

---

Range `ALL | CH1 | CH2 | CH3 | CH4 | CH5 | CH6 | CH7 | CH8`

### 7.3.14 Component Carrier Setup

Lets you export LTE-A Component Carrier Setup files for the specified Component Carrier. Selecting this control displays a menu that enables you to specify which Component Carrier Setup configuration will be exported. Select the desired configuration, then press **Save As...** to display a file dialog that you can use to select the directory and define the exported file name. This function is valid for Modulation Analysis and Conformance EVM measurements only.

#### EVM Setup File Format

Extension: `evms`

LTE EVM Setup parameters of specific component carriers in LTE-Advanced FDD/TDD EVM or CEVM measurement are stored in special binary files with a `.evms` extension. The specific set of component carrier configuration parameters that are exported depend on the Component Carrier specified.

The default path is for the files is:

`My Documents\LTEATDD | LTEAFDD\data\evmsetup`

(`My Documents` is an alias to a directory, the exact name of which depends on which user is logged in)

The default file name of the EVM Setup File is assembled from the DuplexMode, Bandwidth, and ComponentCarrierNumber values, plus a file number. For example, the file name could be:

`FDD_BW5MHz_CC0_0000.evms`

Remote Command	<code>:MMEMory:STORe:EVMSSetup CC0   ...   CC4,&lt;string&gt;</code>
Example	<code>:MMEM:STORe:EVMSSetup CC0, "FDD_BW5MHz_CC0_0000.evms"</code>
Notes	<p><code>CC*</code> is used to export LTE-A setup file for the specified component carrier</p> <p>Available only for the Modulation Analysis and Conformance EVM measurements</p> <p>For X-Series Measurement Application LTE Component Carrier EVM Setup Files (<code>*.evms</code>), the settings below are saved/recalled:</p> <ul style="list-style-type: none"> <li>Mode Level <ul style="list-style-type: none"> <li>- Direction (Meas Setup – Radio)</li> <li>- Bandwidth (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)</li> <li>- UL/DL Allocation (Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)</li> </ul> </li> </ul>

7 Save/Recall/Print  
7.3 Save

- |            |  |
|------------|--|
| Meas Level | <ul style="list-style-type: none"> <li>- Dw/GP Up Length(Meas Setup – Component Carriers – Configure Comp Carriers – Configure CCs)</li> <li>- Meas Time parameters(Meas Setup – Meas Time)</li> <li>- Cell ID Mode (Meas Setup – Sync/Format)</li> <li>- Cell ID Value (Meas Setup – Sync/Format)</li> <li>- RS PRS (Meas Setup – Sync/Format)</li> <li>- CP Length (Meas Setup – Sync/Format – Advanced Sync Setup)</li> <li>- PDSCH IQ ref (Meas Setup – Sync/Format – Advanced Demod Setup)</li> <li>- Basic Control Channel settings (Meas Setup – Channel Profile – Control and User Channels – Edit Basic Control Channels)</li> <li>- PDCCH Control channel Settings (Meas Setup – Channel Profile – Control and User Channels – Edit PDCCH Control channels)</li> <li>- Channel Include Settings (Meas Setup – Channel Profile – Control and User Channels)</li> <li>- PDSCH Configuration Settings (Meas Setup – Channel Profile – Edit User Mapping)</li> </ul> |
|------------|--|

### 7.3.15 Remote Only Commands

The following commands execute file system operations such as move, copy, and transfer data from a file.

#### 7.3.15.1 Mass Storage Catalog (Remote Command Only)

Remote Command	<p><b>:MMEMory:CATalog? [&lt;directory_name&gt;]</b></p> <p>The string &lt;directory_name&gt; must be a valid logical path. If no string then it uses the current directory</p>
Example	<p><b>:MMEM:CAT? "C:\"</b></p>
Notes	<p>Queries disk usage information (drive capacity, free space available) and obtains a list of files and directories in a specified directory in the following format:</p> <p><b>&lt;numeric_value&gt;,&lt;numeric_value&gt;,\{&lt;file_entry&gt;\}</b></p> <p>It returns two numeric parameters and as many strings as there are files and directories</p> <p>The first parameter indicates the total amount of storage currently used in bytes</p> <p>The second parameter indicates the total amount of storage available, also in bytes. &lt;file_entry&gt; is a string. Each &lt;file_entry&gt; indicates the name, type, and size of one file in the directory list:</p> <p><b>&lt;file_name&gt;,&lt;file_type&gt;,&lt;file_size&gt;</b></p> <p>As the Windows file system has an extension that indicates file type, &lt;file_type&gt; is always empty.</p>

---

`<file_size>` provides the size of the file in bytes. For directories, `<file_entry>` is surrounded by square brackets and both `<file_type>` and `<file_size>` are empty

### 7.3.15.2 Mass Storage Change Directory (Remote Command Only)

Remote Command	<code>:MMEMory:CDIRectory [&lt;directory_name&gt;]</code> <code>&lt;directory_name&gt;</code> must be a valid logical path <code>:MMEMory:CDIRectory?</code>
Example	<code>:MMEM:CDIR "C:\Program Files"</code>
Notes	Changes the current directory for a mass memory file system. The <code>&lt;directory_name&gt;</code> parameter is a string. If no parameter is specified, the directory is set to the <code>*RST</code> value At <code>*RST</code> , this value is set to the default user data storage area, that is defined as <code>System.Environment.SpecialFolder.Personal</code> Query returns full path of the current directory as a quoted string

### 7.3.15.3 Mass Storage Copy (Remote Command Only)

Remote Command	<code>:MMEMory:COPY &lt;string&gt;,&lt;string&gt;[,&lt;string&gt;,&lt;string&gt;]</code> <code>&lt;string&gt;</code> must be a valid logical path
Example	<code>:MMEM:COPY "C:\TEMP\Screen_0000.png", "C:\\"</code>
Notes	Copies an existing file to a new file or an existing directory to a new directory If no directory is specified, uses the current directory Two forms of parameters are allowed. The first form has two parameters. In this form, the first parameter specifies the source, and the second parameter specifies the destination The second form has four parameters. In this form, the first and third parameters specify the source. The second and fourth parameters specify the directories. The first pair of parameters specifies the source. The second pair specifies the destination. An error is generated if the source doesn't exist or the destination file already exists This command will generate an "access denied" error if the destination is a restricted folder (for example, <code>C:\Windows</code> ) and you do not have Power User or Administrator privileges

### 7.3.15.4 Mass Storage Device Copy (Remote Command Only)

Transfers data to/from a file and a peripheral device.

Remote Command	<code>:MMEMory:COPY:DEvice &lt;source_string&gt;,&lt;dest_string&gt;</code> <code>&lt;source_string&gt;</code> and <code>&lt;dest_string&gt;</code> must be valid logical paths
Notes	The strings must be a valid logical path or a valid device keyword. If <code>dest_string</code> is a device keyword, the data is copied from the source file to the device. If <code>source_string</code> is a device keyword, the data is copied to the source file from the device

---

Valid device keywords are:

**SNS** (smart noise source)

An error is generated if the file or device is not found

### 7.3.15.5 Mass Storage Delete (Remote Command Only)

---

Remote Command	<code>:MMEMory:DELeTe &lt;file_name&gt;[,&lt;directory_name&gt;]</code> <file_name> and <directory_name> must be valid logical paths
----------------	---

---

Example	<code>:MMEM:DEL "Screen_0000.png"</code>
---------	--

---

Notes	If no directory is specified, uses the current directory Removes a file from the specified directory. <file_name> specifies the file name to be removed. This command generates an "access denied" error if the file is in a restricted folder (for example, <b>C:\Windows</b> ) and you do not have Power User or Administrator privileges
-------	--

### 7.3.15.6 Mass Storage Data (Remote Command Only)

Creates a file containing the specified data or queries the data from an existing file.

---

Remote Command	<code>:MMEMory:DATA &lt;file_name&gt;, &lt;data&gt;</code> <file_name> must be a valid logical path <code>:MMEMory:DATA? &lt;file_name&gt;</code>
----------------	---

---

Example	<code>:MMEM:DATA? "MyFile.txt"</code>
---------	---------------------------------------

---

Notes	If no directory is specified, uses the current directory The command form <code>:MMEMory:DATA &lt;file_name&gt;,&lt;data&gt;</code> loads <data> into the file <file_name>. <data> is in 488.2 block format. <file_name> is string data The response to <code>:MMEMory:DATA? &lt;file_name&gt;</code> is the associated <data> in block format
-------	--

### 7.3.15.7 Mass Storage Make Directory (Remote Command Only)

---

Remote Command	<code>:MMEMory:MDIRectory &lt;directory_name&gt;</code> <directory_name> must be a valid logical path
----------------	--

---

Example	<code>:MMEM:MDIR "C:\TEMP\NewDir"</code>
---------	--

---

Notes	Creates a new directory. <directory_name> specifies the name to be created Generates an "access denied" error if the new directory would be in a restricted folder (for example, <b>C:\Windows</b> ) and you do not have Power User or Administrator privileges
-------	--

### 7.3.15.8 Mass Storage Move (Remote Command Only)

Remote Command	<code>:MMEMory:MOVE &lt;string&gt;,&lt;string&gt;[,&lt;string&gt;,&lt;string&gt;]</code> <code>&lt;string&gt;</code> must be valid logical paths
Example	<code>:MMEM:MOVE "C:\TEMP\Screen_0000.png", "C:\"</code>
Notes	<p>Moves an existing file to a new file or an existing directory to a new directory</p> <p>Two forms of parameters are allowed. The first form has two parameters. In this form, the first parameter specifies the source, and the second parameter specifies the destination</p> <p>The second form has four parameters. In this form, the first and third parameters specify the source. The second and fourth parameters specify the directories. The first pair of parameters specifies the source. The second pair specifies the destination. An error is generated if the source doesn't exist or the destination file already exists</p> <p>This command generates an "access denied" error if the destination is a restricted folder (for example, <code>C:\Windows</code>) and you do not have Power User or Administrator privileges</p>

### 7.3.15.9 Mass Storage Remove Directory (Remote Command Only)

Remote Command	<code>:MMEMory:RDIrectory &lt;directory_name&gt;</code> <code>&lt;directory_name&gt;</code> must be a valid logical path
Example	<code>:MMEM:RDIR "C:\TEMP\NewDir"</code>
Notes	<p>Removes a directory. The <code>&lt;directory_name&gt;</code> parameter specifies the directory name to be removed. All files and directories under the specified directory will also be removed</p> <p>This command generates an "access denied" error if the folder is a restricted folder (for example, <code>C:\Windows</code>) or is in a restricted folder and you do not have Power User or Administrator privileges</p>

### 7.3.15.10 Mass Storage Determine Removable Media (Remote Query Only)

Used to determine whether any removable media devices are connected to the instrument. Primarily, these are USB memory devices plugged-in to the front panel or rear panel USB ports. On instruments with PC6 or PC7 CPUs, one SD card slot is available for removable media. The instrument's primary disk drive is *not* a removable media device.

Remote Command	<code>:MMEMory:RMEDIA:LIST?</code>
Example	<code>:MMEM:RMED:LIST?</code>
Notes	<p>The return value is a string containing a list of partition identifiers, which are removable media devices. Each identifier will be separated by a comma. If no removable media is present, an empty string is returned</p> <p>Examples:</p>

- 
- One removable device present results in a return string of "F:"
  - Two removable devices present results in a return string of "F:,G:"

No removable devices present results in a return string of ""

### 7.3.15.11 Mass Storage Determine Removable Media Label (Remote Command Only)

Used to set or query a removable media device's label.

---

Remote Command	<code>:MMEemory:RMEDIA:LABel &lt;partition&gt;,&lt;string&gt;</code> <code>:MMEemory:RMEDIA:LABel? &lt;partition&gt;</code>
Example	<code>:MMEem:RMED:LAB "F:","My Device"</code>
Notes	If the <code>&lt;partition&gt;</code> specified does not exist or is not a removable media device, the error -252, "Missing Media" is generated  Setting the removable media label requires Administrative privileges. If the currently logged-in user does not have appropriate privileges, error "-221, Settings conflict; Administrator privileges required" is generated

---

### 7.3.15.12 Mass Storage Determine Removable Media Write-protect status (Remote Query Only)

Used to query a removable media device's write-protect status.

---

Remote Command	<code>:MMEemory:RMEDIA:WPRotect? &lt;partition&gt;</code>
Example	<code>:MMEem:RMED:WPR? "F:"</code>
Notes	The return value is 1 if the device is write-protected, and 0 if the device is write-enabled  If the <code>&lt;partition&gt;</code> specified does not exist or is not a removable media device the error -252, "Missing Media" is generated
Preset	The return value depends on the SD card installed

---

### 7.3.15.13 Mass Storage Determine Removable Media size (Remote Query Only)

Queries a removable media device's total memory size (not available memory size).

---

Remote Command	<code>:MMEemory:RMEDIA:SIZE? &lt;partition&gt;</code>
Example	<code>:MMEem:RMED:SIZE? "F:"</code>
Notes	The return value is integer value in GBytes. Any device that is less than 1 GB returns 0 GB  If the <code>&lt;partition&gt;</code> specified does not exist or is not a removable media device, the error -252, "Missing Media" is generated


---

### 7.3.15.14 :SYSTem:SET (Remote Command Only)

Obtains the state of the currently active mode in a form that can then be loaded back into the instrument quickly.

Remote Command	<code>:SYSTem:SET &lt;instrument state in IEEE Block&gt;</code> <code>:SYSTem:SET?</code>
Notes	<p>The query returns current instrument state of the active mode in IEEE Block data format. The state is in a machine-readable format only, as follows:</p> <p><code>&lt;sys t set preamble&gt;&lt;state block data&gt;</code></p> <p>Where:</p> <p><code>&lt;sys t set preamble&gt;</code> is the format:</p> <p><code>#NMMM</code></p> <ul style="list-style-type: none"> <li>- <code>N</code> = number of digits that comprise <code>MMM</code></li> <li>- <code>MMM</code> = length in bytes of following data</li> </ul> <p><code>&lt;state block data&gt;</code> is machine readable state data</p> <p>Example response: <code>#42016&lt;state data&gt;</code></p> <p>The state is recalled by sending the <code>:SYST:SET?</code> response data to the instrument. From example above: <code>:SYST:SET #42016&lt;state data&gt;</code></p>

## 7.4 Print

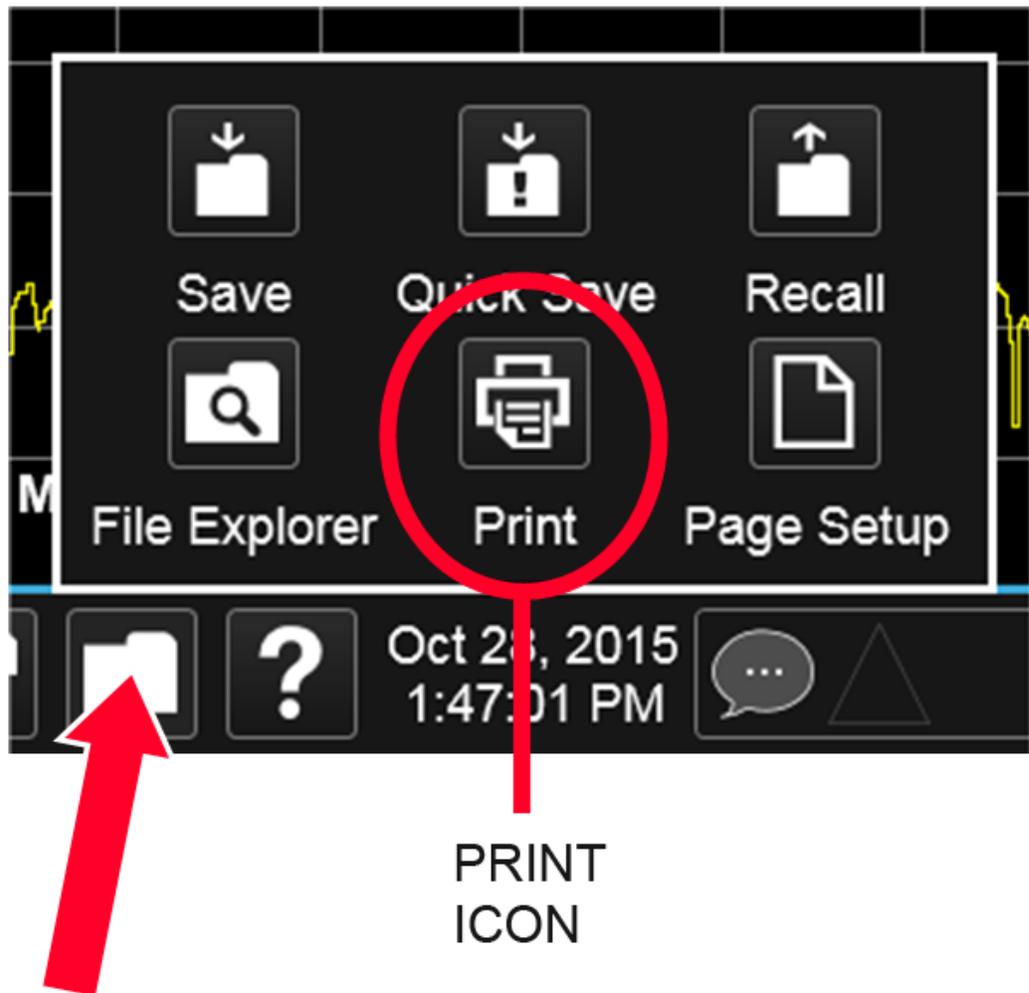

Opens a dialog for configuring printing (to the printer of your choice).

The `:HCOPY` command is equivalent to pressing the `PRINT` key.

---


Remote Command `:HCOPY[:IMMEDIATE]`

`:HCOPY:ABORT` can be used to abort a print that is already in progress. Sending `:HCOPY:ABORT` causes the instrument to stop sending data to the printer, although the printer may continue or even complete the print, depending on how much data was sent to the printer before you sent the `:ABORT` command.

---

Remote Command `:HCOPY:ABORT`

## 7.5 Page Setup

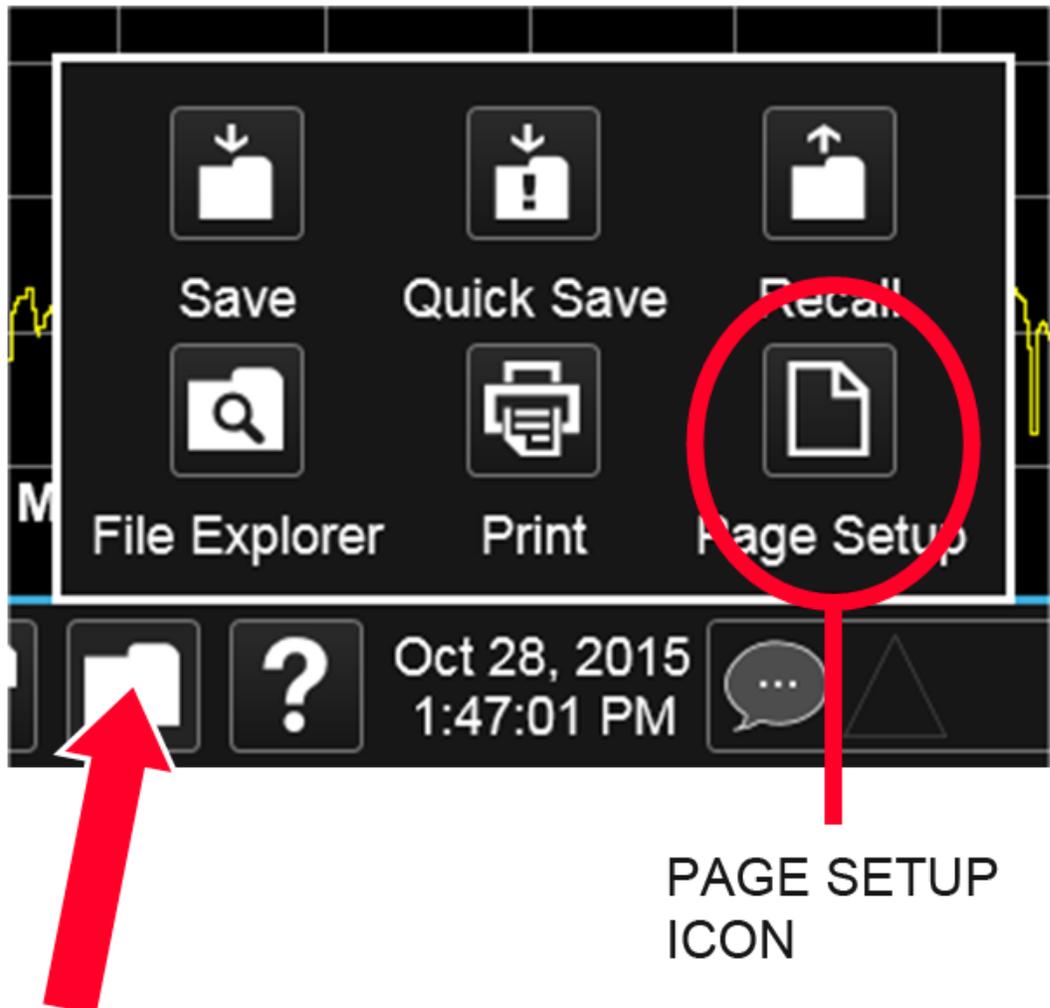

Opens a Windows Page Setup dialog that allows you to control aspects of the pages sent to the printer when the **PRINT** hardkey is pressed.

Depending on the abilities of the attached printer, paper size, paper source, page orientation and margins may all be set. There are no SCPI commands for controlling these parameters.

The dialog also has a dropdown control to let you select the Display Theme to use when printing. **Page Setup** themes are the same as those for **Screen Image "Theme"** on page 2849.

The **Theme** control has a corresponding SCPI command:

7 Save/Recall/Print  
7.5 Page Setup

Remote Command	<code>:SYSTem:PRINt:THEMe FILLed   OUTLine</code> <code>:SYSTem:PRINt:THEMe?</code>
Example	<code>:SYST:PRIN:THEM OUTL</code>
Preset	<b>OUTL</b> ; not part of <b>Preset</b> , but reset by <b>Restore Misc Defaults</b> or <b>Restore System Defaults All</b> and survives subsequent running of the modes
State Saved	No
Backwards Compatibility SCPI	<code>:SYSTem:PRINt:THEMe TDColor   TDMonochrome   FCOLor   FMONochrome</code>
Backwards Compatibility Notes	<p>To permit code compatibility with A-model X-Series Signal Analyzer instruments, the command parameters from A-models are mapped as follows:</p> <p><b>TDColor</b> and <b>TDMonochrome</b> are both mapped to <b>FILLed</b>: Exact full color representation of what is on the screen</p> <p><b>FCOLor</b> and <b>FMONochrome</b> are both mapped to <b>OUTLine</b>: Uses color for traces and other items, but most filled areas are white</p> <p>There is no Monochrome theme in B-models, so the A-models' monochrome commands yield color</p> <p><code>:SYST:PRINt:THEM?</code> always returns <b>FILLed</b> or <b>OUTLine</b>; never <b>FCOLor</b>, <b>FMONochrome</b>, <b>TDColor</b>, or <b>TDMonochrome</b></p>

## 8 Trigger

Controls the **Trigger** system of the instrument. In general, these are functions associated with internal triggers or trigger inputs. Trigger Output functions are configured under **Input/Output**.

**Trigger** functions are common across multiple Modes and Measurements, although some controls appear only in certain Modes and/or certain Measurements. Additionally, some of the tabs on the **Trigger** menu are only available in certain Modes.

Many of the Trigger functions can be set graphically using the Trigger Setting Diagram. For more information see: "[Trigger Optimization](#)" on page 2909

In general, each Measurement can have a different Trigger, and each Measurement remembers its previous-trigger setting.

## 8.1 Trigger

Contains controls that let you select the trigger source, and setup of each of the trigger sources. The instrument is designed to allow triggering from many sources, for example, Free Run, Video, External, RF Burst, etc.

In general, each Measurement can have a different Trigger Source, and each Measurement remembers its previous-Trigger Source.

### 8.1.1 Select Trig Source

Specifies the trigger source for the currently selected instrument input (RF or I/Q). If you change inputs, the new input remembers the trigger source it was last programmed to for the current measurement and uses that trigger source. When in External Mixing, the instrument uses the RF trigger source. You can directly set the trigger source for the RF Input and for the I/Q input using SCPI commands; see ["Trigger Source Presets" on page 2872](#), ["RF Trigger Source \(Remote Command Only\)" on page 2874](#), and ["I/Q Trigger Source \(Remote Command Only\)" on page 2876](#).

In general, each Measurement can have a different Trigger Source, and each Measurement remembers its previously-set Trigger Source. Not every Trigger Source is available for every Measurement, so the available choices for Select Trig Source may vary from Mode to Mode and Measurement to Measurement. The trigger sources that are available for each measurement are shown in the "List of Available Trigger sources" dropdown below.

Note that the controls available on the Trigger Tab change depending on which trigger source is selected. Tap each trigger source in the table in the "List of Available Trigger sources" dropdown to see what parameters are available for that trigger source.

Note that most measurements require the inclusion of a <measurement> parameter in the Trigger Source command. However, for the Swept SA measurement and RTSA this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement or RTSA.

#### Waiting for Trigger

After you select a trigger source, the instrument will start its next measurement when that trigger source is satisfied. For example, if you choose External 1, the next measurement will start when the appropriate signal appears at the Trigger 1 In connector.

If the trigger source is not satisfied (for example, if no signal at the appropriate level appears at the Trigger 1 In connector), after approximately 2 seconds a popup

message will appear that says, "Waiting for trigger". The trigger annotation in the Meas Bar will also turn amber, as shown below:



Tap anywhere on the screen (except on the message itself) to clear the popup. The annotation will remain amber until the trigger conditions are satisfied.

### List of available Trigger sources

The tables show which Trigger sources are available for which Modes and Measurements, with the following exceptions:

- the Noise Figure Mode does not support Triggering at all
- the Disturbance Analyzer measurement in the EMI Mode does not support Triggering
- the Tx Band Spur measurement in the GSM/EDGE Mode does not support Triggering
- For some models (like N9042B) with ADC trigger: some IF Paths do not support Video trigger, instead they support ADC trigger

"Free Run" on page 2877

**IMMediate**

All Modes and measurements, except those measurements that support no triggers at all

"Video/ADC" on page 2877

**VIDeo**

All Modes except RTSA and Pulse  
In Spectrum Analyzer Mode, all measurements except ACP and List Sweep  
In WCDMA, MSR, Short Range Comms, VMA and LTE, all measurements

## 8 Trigger

### 8.1 Trigger

		except ACP
		In WLAN, all measurements
		In Phase Noise, all measurements except Log Plot and Spot Frequency
"ADC Trigger" on page 2878	<b>ADC</b>	All Modes and measurements supporting Video or Level, except Spectrum Analyzer mode
		Only supported in certain model's IF Paths
"Line" on page 2879	<b>LINE</b>	All Modes except EMI, Avionics and Analog Demod
		In Spectrum Analyzer, all measurements except List Sweep
		In WLAN and GSM/EDGE, all measurements except Power vs. Time
		In LTE and 5G NR, all measurements except Transmit On/Off Power
		In Short Range Comms, all measurements except Modulation Analysis
		In MSR, all measurements
Level [Mode: RTSA, PULSEX]	<b>LEVe1</b>	RTSA and Pulse Modes only
FMT [Mode: RTSA, PULSEX]	<b>FMT</b>	RTSA and Pulse Modes only
"External 1" on page 2879	<b>EXTernal1</b>	All Modes and measurements
"External 2" on page 2880	<b>EXTernal2</b>	All Modes and measurements
"External 3" on page 2881	<b>EXTernal3</b>	See <a href="#">"External 3 Support" on page 2867</a>
"RF Burst" on page 2882	<b>RFBurst</b>	All Modes except EMI
		In Spectrum Analyzer, all measurements except List Sweep
"Periodic" on page 2883	<b>FRAMe</b>	All Modes except EMI
		In Spectrum Analyzer, all measurements except List Sweep
TV [Mode: SA]	<b>TV</b>	Spectrum Analyzer Mode only, and only in the Swept SA measurement

## I/Q Triggers

"I/Q Mag" on page 2885	<b>IQMag</b>	All Modes except EMI, Avionics, RTSA, Analog Demod and Pulse In Spectrum Analyzer, only in Power Stat CCDF and Burst Power
"Input I" on page 2885	<b>IINPut</b>	In WCDMA, only in Power Stat CCDF and IQ Waveform
"Input Q" on page 2886	<b>QINPut</b>	In GSM/EDGE, only in EVM, GMSK Phase & Freq Error, Transmit Power and IQ Waveform In Phase Noise, only in IQ Waveform
"I (Demodulated)" on page 2886	<b>IDEMod</b>	In Bluetooth, only in Transmit Analysis In LTE, only in Power Stat CCDF, Modulation Analysis, Conformance EVM, and IQ Waveform
"Q (Demodulated)" on page 2887	<b>QDEMod</b>	In WLAN, only in Power Stat CCDF, Modulation Analysis, Spectral Flatness, and IQ Waveform In Short Range Comms, only in Power Stat CCDF and Modulation Analysis
"Aux I/Q Mag" on page 2887	<b>AIQMag</b>	In VMA, only in Power Stat CCDF, Digital Demod and IQ Waveform In CQM, only in Group Delay, Power Stat CCDF, and IQ Waveform
"PXI" on page 2888	<b>PXI</b>	All Modes and measurements (only found in modular analyzers)
"Internal" on page 2888	<b>INTernal</b>	All Modes and measurements (only found in modular analyzers)
"Audio External" on page 2882	<b>AEXTernal</b>	Via the TRIG IN connector on the M9260A Audio Analyzer module
"Prot Channel Detection" on page 2889	<b>PRTChandet</b>	Base Station Emulation; valid UL signal detected (PUSCH/PUCCH/PRACH/SRS)
"Prot Frame Aligned" on page 2889	<b>PRTFrame</b>	Base Station Emulation; periodic technology format radio frame with data frame aligned to the BSE timing
"Prot Event" on page 2890	<b>PRTEvent</b>	Base Station Emulation events

## External 3 Support

Trigger Source **External 3** is available only in certain Modes and measurements, as follows:

<b>5GNR</b>	Transmit On Off, Modulation Analysis, Power Stat CCDF, and IQ Waveform measurements only
<b>ADEMODO</b>	Not supported
<b>AVIONICS</b>	Not supported
<b>BT</b>	Not supported
<b>CQM</b>	Group Delay, Power Stat CCDF, and IQ Waveform measurements only
<b>EMI</b>	Not supported
<b>GSMEDGE</b>	IQ Waveform and Transmit Power measurements only
<b>LTEAFDD,</b>	Power Stat CCDF, IQ Waveform, and Transmit On Off measurements only

## 8 Trigger

### 8.1 Trigger

LTEATDD	
MSR	Power Stat CCDF, and IQ Waveform measurements only
PA	Power Amplifier measurement
PNOISE	IQ Waveform measurement only
PULSEX	Pulse measurement only
SA	Power Stat CCDF and Burst Power measurements only
SRCOMMS	Modulation Analysis, Power Stat CCDF, and IQ Waveform measurements only
VMA	Digital Demod, Custom OFDM, IQ Waveform, and Power Stat CCDF measurements only
WCDMA	QPSK EVM, Power Stat CCDF, and IQ Waveform measurements only
WLAN	Spectral Flatness, Modulation Analysis, Power Vs Time, Power Stat CCDF, and IQ Waveform measurements only

### Backwards Compatibility SCPI

The following SCPI commands are provided for Backwards Compatibility:

---

Backwards Compatibility SCPI	<b>:TRIGger[:SEQuence]:SOURCe EXTernal</b> For backward compatibility, the parameter <b>EXTernal</b> is mapped to <b>EXTernal1</b> <b>[:SENSe]:&lt;measurement&gt;:TRIGger:SOURce</b> This backwards compatibility alias command is provided for ESA/PSA compatibility This backwards compatibility command does not apply to the Swept SA measurement, for that just use <b>:TRIGger:SOURce</b> This backwards compatibility command does not apply to the monitor spectrum, log plot and spot frequency measurements <b>[:SENSe]:&lt;measurement&gt;:TRIGger:SOURce IF</b> In earlier instruments, the parameter IF was used by apps for the video trigger, so using the IF parameter selects <b>VIDeo</b> triggering. Sending IF in the command causes <b>VID</b> to be returned to a query <b>[:SENSe]:ACPR:TRIGger:SOURce</b> This backwards Compatibility SCPI command is provided to support the same functionality as <b>[:SENSe]:ACPr:TRIGger:SOURce</b> (PSA W-CDMA, PSA cdma2000 and PSA 1xEVDO) due to the fact that the <b>ACPr</b> node conflicts with the <b>ACPower</b> node The legacy command: <b>:TRIGger[:SEQuence]:RFBurst:FSElectivity[:STATe] OFF   ON   0   1</b> is not supported in the X-Series, as the hardware to do Frequency Selective burst triggers does not exist in X-Series
------------------------------------	---

### More Information

The **Trigger** menus let you select the trigger source and trigger settings for a sweep or measurement. In triggered operation (basically, any trigger source other than Free Run), the instrument will begin a sweep or measurement only when the

selected trigger conditions are met, generally when your trigger source signal meets the specified trigger level and polarity requirements. (In FFT measurements, the trigger controls when the data acquisition begins for FFT conversion.)

For each of the trigger sources, you may define a set of operational parameters or settings, which will be applied when that source is selected as the current trigger source. Examples of these settings are Trigger Level, Trigger Delay, and Trigger Slope. You may apply different settings for each source; so, for example, you could have a Trigger Level of 1v for External 1 trigger and -10 dBm for Video trigger.

Once you have established the settings for a given trigger source, they generally will remain unchanged for that trigger source as you go from measurement to measurement within a Mode (although the settings can change as you go from Mode to Mode). Furthermore, the trigger settings within a Mode are the same for the **Trigger** menu, the **Gate Source** menu, and the **Periodic Sync Src** menu. That is, if **Ext1** trigger level is set to 1v in the **Trigger** menu, it will appear as 1v in both the **Gate Source** and the **Periodic Sync Src** menus. For these reasons the trigger settings commands are not qualified with the measurement name, the way the trigger source commands are.


### Trigger Setup Parameters:

The following examples show trigger setup parameters using an external trigger source.

Example 1 illustrates the trigger conditions with negative slope and no trigger occurs during trigger Holdoff time.

Example 2 illustrates the trigger conditions with positive slope, trigger delay, and auto trigger time.

8 Trigger  
8.1 Trigger

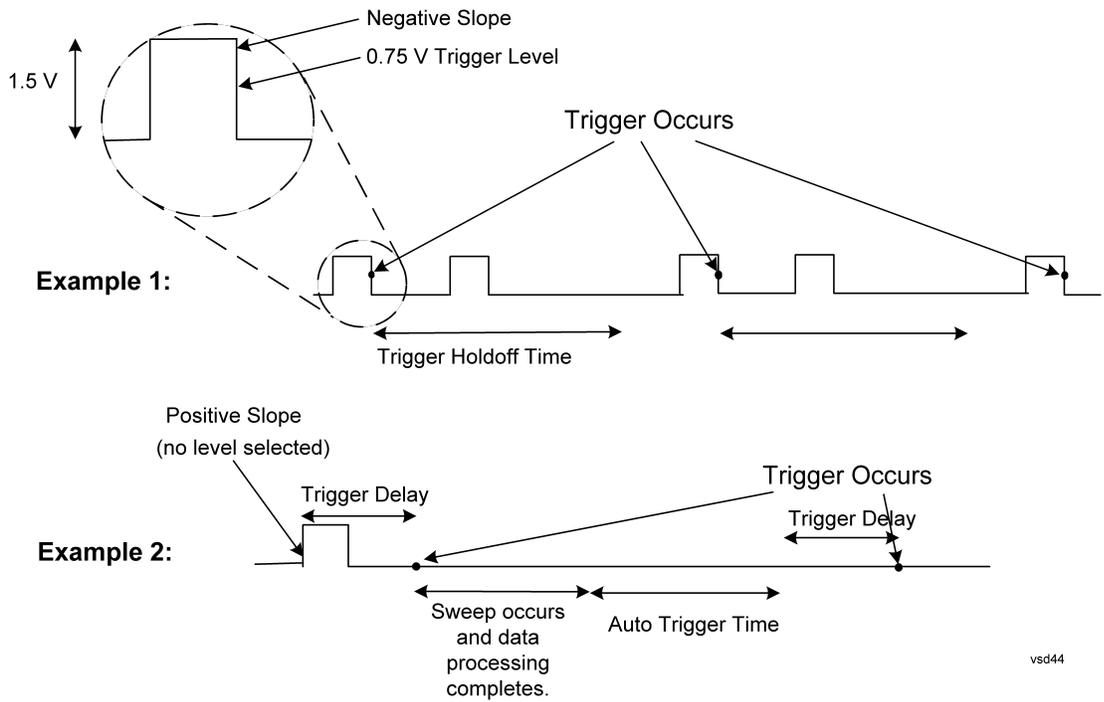

vsd44

---

Remote Command Swept SA and RTSA measurements:  
`:TRIGger[:SEquence]:SOURce EXTERNAL1 | EXTERNAL2 | EXTERNAL3 | IMMEDIATE | LINE | FRAME | RFBURST | VIDEO | TV | PXI | INTERNAL`  
`:TRIGger[:SEquence]:SOURce?`

All other measurements  
`:TRIGger:<measurement>[:SEquence]:SOURce EXTERNAL1 | EXTERNAL2 | EXTERNAL3 | AEXTERNAL | IMMEDIATE | LEVEL | FMT | LINE | ADC | FRAME | RFBURST | VIDEO | IQMAG | IDEMOD | QDEMOD | IINPUT | QINPUT | AIQMAG | PXI | INTERNAL | PRTCHANDET | PRTFRAME | PRTEVENT`  
`:TRIGger:<measurement>[:SEquence]:SOURce?`

---

Example The following commands set the External 1 trigger input for various measurements

Swept SA and RTSA measurements:  
`:TRIG:SOUR EXT1`

Other Spectrum Analyzer Mode measurements:  
 Harmonics:  
`:TRIG:HARM:SOUR EXT1`

Power Suite measurements (appear in many Modes):  
 Channel Power:  
`:TRIG:CHP:SOUR EXT1`

Occupied BW, Output Spectrum BW:  
`:TRIG:OBW:SOUR EXT1`

---

Notes	<p>For some of the trigger parameters, the tie-in to the parameter is not obvious. These are:</p> <ul style="list-style-type: none"><li><b>IMMEDIATE</b>, selects Free Run</li><li><b>FRAME</b>, selects Periodic Trigger</li><li><b>FMT</b>, selects Frequency Mask Trigger</li><li><b>AEXTERNAL</b>, selects Audio External trigger, using the TRIG IN connector on the M9260A Audio Analyzer module</li></ul> <p>For most measurements, the <code>&lt;measurement&gt;</code> keyword follows <b>TRIGGER</b>. For Swept SA and RTSA Modes, do <i>not</i> use the <code>&lt;measurement&gt;</code> keyword. Using the wrong command form will result in an Undefined Header error</p> <p>Other trigger-related commands are found in the <b>:INITiate</b> and <b>:ABORT</b> SCPI command subsystems</p> <p><b>*OPC</b> should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned</p> <p>Available ranges and presets can vary from mode to mode</p> <p><b>FMT (Pulse and RTSA apps):</b></p> <p>The amplitude resolution of the Frequency Mask is coupled to the Scale/Division. There are 256 vertical points therefore the amplitude resolution is computed using the algorithm: <math>(10 * \text{Scale/Div}) / \# \text{ Vertical Points}</math></p>
Dependencies	<p>Not all trigger sources are available for each input. See the "<a href="#">RF Trigger Source (Remote Command Only)</a>" on page 2874 and "<a href="#">I/Q Trigger Source (Remote Command Only)</a>" on page 2876 commands for detailed information on which trigger sources are available for each input</p> <p>In some models, there is no second External input. In these models, the External 2 selection is not shown and the <b>EXTERNAL2</b> parameter will generate a "Hardware missing; Not available for this model number" message</p> <p><b>EXTERNAL3</b> is available only when Option H1G is installed</p> <p>For the E7760 the only available selections are: <b>EXTERNAL1   IMMEDIATE   INTERNAL   RFBURST   VIDEO</b></p> <p>For UXM the only available selections are: <b>EXTERNAL1   IMMEDIATE   PRTCHANDET   PRTFRAME   PRTEVENT</b></p> <p>In the Pulse app, when Option B2X and H1G are installed and Digital IF BW is greater than 255.176 MHz, only three trigger sources, <b>IMMEDIATE</b>, <b>LEVEL</b>, and <b>EXTERNAL3</b> are available</p> <p><b>Level Trigger (Pulse and RTSA apps):</b></p> <p>Level trigger is allowed in average detector mode</p> <p>When Level Trigger is the selected Trigger Source in the Spectrum measurement, Spectrum minimum Acquisition Time is limited to the PVT minimum Acquisition Time. If the Spectrum Acquisition Time changed as a result of going into Level Trigger, a message is posted "Min Acq Time is 200 usec when Level Trigger is ON". When Level Trigger is no longer the selected Trigger Source, Spectrum minimum Acquisition Time is restored</p> <p><b>FMT (Pulse and RTSA apps):</b></p> <p>If you were not in Free Run when you entered the FMT Setup View, you can change Trigger Source to Free Run while in the editor. This will allow you to configure the mask with a continually updating trace. When exiting FMT Setup View, the Trigger Source will be changed back to FMT</p>

---

## 8 Trigger

### 8.1 Trigger

For Power Stat CCDF and IQ Waveform in 5G NR and LTEATDD, switching the radio direction changes this parameter to the preset value

In Transmit On|Off Power in 5G NR and LTEATDD, the value changes as follows

- If changed to uplink: Periodic
- If changed to downlink: External 1 except for models with the H1G option. With the H1G option, it changes as follows
  - External 1, when Info BW  $\leq$  255 MHz
  - External 3, when Info BW  $\geq$  256 MHz

Couplings	<p><b>FMT (Pulse and RTSA apps):</b></p> <p>A remote user can enter or access FMT data via  <code>:TRIGger[:SEquence]:FMT[1] 2:DATA</code></p> <p>The upper and lower masks can have different freq/ampl pairs therefore subop code 1 is for the upper mask and subop code 2 is for the lower mask</p>
Preset	See "Trigger Source Presets" below
Status Bits/OPC dependencies	The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears

### Trigger Source Presets

The following Trigger Source presets are used for these measurements after a Mode Preset or Meas Preset:

Meas	Mode	Preset for RF	Preset for IQ
Swept SA	SA	IMM	IQ not supported
CHP	SA, WCDMA, MSR, SRCOMMS, 5GNR, WLAN	IMM	IQ not supported
OBW	SA, WCDMA, LTEAFDD, LTEATDD, BT, 5GNR, WLAN	1xEVDO: EXT1 Others: IMM	IQ not supported
Transmit Analysis	BT	RFB	IQM
Adjacent Channel Power	BT	IMM	IQ not supported
LE In-band Emissions	BT	IMM	IQ not supported
EDR In-band Spurious Emissions	BT	RF Burst	IQ not supported
CCDF	SA, WCDMA, LTEAFDD, LTEATDD, MSR, SRCOMMS, 5GNR, WLAN, CQM	LTEATDD:	LTEATDD: - BTS: EXT1

Meas	Mode	Preset for RF	Preset for IQ
		- BTS: External 1 - MS: Periodic Timer Others: IMM	- MS: FRAM Others: IMM
ACP	SA, WCDMA, LTEAFDD, LTEATDD, MSR, SRCOMMS, 5GNR	IMM	IQ not supported
Tx Power	SA, GSM	RFBurst	IMM
SPUR	SA, WCDMA, MSR, LTEAFDD, LTEATDD, 5GNR, WLAN	IMM	IQ not supported
SEM	SA, WCDMA, MSR, LTEAFDD, LTEATDD, SRCOMMS, 5G NR, WLAN	IMM	IQ not supported
CDP	WCDMA	IMM	IMM
RHO	WCDMA	IMM	IMM
PCON	WCDMA	IMM	IMM
QPSK	WCDMA	EXT1	IMM
MON	All except: SA, BASIC	IMM	IQ not supported
WAV	All except: SA	LTEATDD: - BTS: External 1 - MS: Periodic Timer GSM/EDGE: RFBurst All others: IMM	LTEATDD: - BTS: EXT1 - MS: FRAM GSM/EDGE: IQM All others: IMM
EVM	LTEAFDD, LTEATDD, SRCOMMS, 5GNR, WLAN	IMM	IMM
PVT	WLAN	RFB	IQ not supported
Spectral Flatness	WLAN	IMM	IMM
SPEC	BASIC	IMM	IMM
LOG Plot	PN	IMM	IQ not supported
Spot Freq	PN	IMM	IQ not supported
GMSK PVT	EDGE/GSM	RFB	IMM
GMSK PFER	EDGE/GSM	RFB	IQM
GMSK ORFS	EDGE/GSM	RFB	IQ not supported
EDGE PVT	EDGE/GSM	RFB	IMM

8 Trigger  
8.1 Trigger

Meas	Mode	Preset for RF	Preset for IQ
EDGE EVM	EDGE/GSM	RFB	IQM
EDGE ORFS	EDGE/GSM	Periodic Timer	IQ not supported
Combined WCDMA	WCDMA	IMM	IQ not supported
Combined GSM	EDGE/GSM	RFB	IQ not supported
List Power Step	WCDMA, EDGE/GSM	IMM	IQ not supported
Transmit On/Off Power	LTETDD, LTEATDD, 5GNR	BTS: External 1 (External3 when IFBW $\geq$ 256 MHz with H1G option) MS: Periodic Timer	BTS: EXT1 MS: FRAM
Transmit Analysis	BLUETOOTH	RFB	IQ not supported
Adjacent Channel Power	BLUETOOTH	IMM	IQ not supported
LE In-band Emissions	BLUETOOTH	IMM	IQ not supported
EDR In-band Spurious Emissions	BLUETOOTH	Periodic Timer	IQ not supported
Conformance EVM Spectrum & PVT	LTEAFDD, LTEATDD, MSR RTSA	IMM IMM	IMM IQ not supported
Pulse	PULSEX	IMM	IQ not supported
AM, FM, PM, FM Stereo	ADEMODO	IMM	IQ not supported
PAvT	SA, 5GNR, VMA	IMM	IMM
Group Delay	CQM	IMM	IMM

### RF Trigger Source (Remote Command Only)

Selects the trigger to be used for the specified measurement when RF is the selected input. The RF trigger source can be queried and changed even while another input is selected, but it is inactive until RF becomes the selected input.

Note the inclusion of the <measurement> parameter in the command below. Because each measurement remembers its own Trigger Source, the command must be qualified with the measurement name. Note that for the Swept SA measurement

this is not the case; for backwards compatibility, no <measurement> parameter is used when setting the Trigger Source for the Swept SA measurement.

---

Remote Command    `:TRIGger:<measurement>[:SEquence]:RF:SOURce EXTernal1 | EXTernal2 | IMMEDIATE | LEVel | FMT | LINE | FRAME | RFBurst | VIDEo | IF | TV | PXI | INTernal | PRTChandet | PRTFrame | PRTEvent`  
                           `:TRIGger:<measurement>[:SEquence]:RF:SOURce?`

Note that the available parameters are model number and hardware dependent

---

Example            Select the external 1 trigger input for the ACP measurement and the RF input:  
                           `:TRIG:ACP:RF:SOUR EXT1`

Select video triggering for the **SANalyzer** measurement and the RF input. For **SAN**, do not use the <measurement> keyword:  
                           `:TRIG:RF:SOUR VID`

---

Notes              Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available

Note that not all trigger sources are available for each input, and that the available parameters are model number and hardware dependent

For the **RF Trigger Source**, the following trigger sources are available:

<b>IMMEDIATE</b>	free run triggering
<b>VIDEo</b>	triggers on the video signal level
<b>LEVe1</b>	triggers on the video signal level with time qualified triggering
<b>FMT</b>	triggers on the amplitude spectrum with frequency mask triggering
<b>LINE</b>	triggers on the power line signal
<b>EXTernal1</b> or <b>EXTernal</b>	triggers on an externally connected trigger source marked "Trigger 1 In" on the rear panel of standalone instruments, "Trigger 3" on the front panel of EXM and VXT model M9421A, and "Trigger 1" on the front panel of VXT models M9410A/11A/15A/16A
<b>EXTernal2</b>	triggers on an externally connected trigger source marked "Trigger 2 In" on the front panel of standalone instruments, and "Trigger 1" on the front panel of EXM and VXT model M9421A, and "Trigger 2" on the front panel of VXT models M9410A/11A/15A/16A. In some models, there is no second External input. In these models, the External 2 selection is not shown and the <b>EXTernal2</b> parameter will generate a "Hardware missing; Not available for this model number" message
<b>RFBurst</b>	triggers on the bursted frame
<b>FRAME</b>	triggers on the periodic timer
<b>IF (video)</b>	same as video, for backwards compatibility only
<b>PRTChandet</b>	triggers on Base Station Emulation detecting a valid UL signal (PUSCH/PUCCH/PRACH/SRS)

## 8 Trigger

### 8.1 Trigger

	<p><b>PRTFrame</b> triggers on the Base Station Emulation periodic technology format radio frame with data frame aligned to the BSE timing</p> <p><b>PRTEvent</b> triggers on the Base Station Emulation events</p> <p><b>INTernal</b> triggers on the internal source trigger output, for models with an internal source such as VXT</p> <p><b>PXI trigger</b> only supported in PXI (modular) instruments</p> <p><b>*OPC</b> should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned</p> <p>Available ranges, and presets can vary from mode to mode</p>
Dependencies	<p>The available choices for VXT are: Free Run, Video, Internal, External 1, External 2, RF Burst, Periodic and PXI</p> <p>In VXT, Internal is only in VXT models M9410A/11A/15A/16A, not in models M9420/21A, and Internal and Periodic are not available in Spectrum Analyzer Mode</p> <p><b>PXI</b> is only found in VXT</p> <p>The available choices for EXM are Free Run, Video, Internal, External 1, External 2, RF Burst, and Periodic</p> <p>The available choices for UXM are Free Run, External 1, Prot Channel Detection, Prot Frame Aligned, and Prot Event</p> <p>Prot Channel Detection, Prot Frame Aligned, and Prot Event are only available in UXM</p> <p>The available choices for E7760 are Free Run, External 1, Internal, Video and RF Burst</p> <p>In some models, there is no second External input. In these models, the External 2 selection is not shown and the <b>EXTernal12</b> parameter will generate a "Hardware missing; Not available for this model number" error</p>
Status Bits/OPC dependencies	<p>The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 seconds. This message goes away when a trigger signal appears</p>
<h3>I/Q Trigger Source (Remote Command Only)</h3> <p>Selects the trigger to be used for the specified measurement when I/Q (which requires option BBA) is the selected input. The I/Q trigger source can be queried and changed even while another input is selected, but it is inactive until I/Q becomes the selected input.</p>	
Remote Command	<pre>:TRIGger:&lt;measurement&gt;[:SEquence]:IQ:SOURce EXTernal1   EXTernal2   IMMEDIATE   IQMag   IDEMod   QDEMod   IINPut   QINPut   AIQMag</pre> <pre>:TRIGger:&lt;measurement&gt;[:SEquence]:IQ:SOURce?</pre>
Example	<pre>:TRIG:WAVEform:SOUR IQM</pre> <p>Selects I/Q magnitude triggering for the IQ Waveform measurement and the I/Q input</p>

Notes	<p>Not all measurements have all the trigger sources available to them. Check the trigger source documentation for your specific measurement to see what sources are available</p> <p>Note that not all trigger sources are available for each input, and that the available parameters are model number and hardware dependent</p> <p>For the <b>I/Q Trigger Source</b>, the following trigger sources are available:</p> <table border="1" data-bbox="407 512 1409 940"> <tr> <td><b>IMMediate</b></td> <td>free run triggering</td> </tr> <tr> <td><b>EXTernal1</b></td> <td>triggers on an externally connected trigger source on the rear panel or EXTernal</td> </tr> <tr> <td><b>EXTernal2</b></td> <td>triggers on an externally connected trigger source on the front panel</td> </tr> <tr> <td><b>IQMag</b></td> <td>triggers on the magnitude of the I/Q signal</td> </tr> <tr> <td><b>IDEMod</b></td> <td>triggers on the I/Q signal's demodulated I voltage</td> </tr> <tr> <td><b>QDEMod</b></td> <td>triggers on the I/Q signal's demodulated Q voltage</td> </tr> <tr> <td><b>IINPut</b></td> <td>triggers on the I channel's ADC voltage</td> </tr> <tr> <td><b>QINPut</b></td> <td>triggers on the Q channel's ADC voltage</td> </tr> <tr> <td><b>AIQMag</b></td> <td>triggers on the magnitude of the auxiliary receiver channel I/Q signal</td> </tr> </table> <p><b>*OPC</b> should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned</p> <p>Available ranges, and from mode-to-mode presets can vary</p>	<b>IMMediate</b>	free run triggering	<b>EXTernal1</b>	triggers on an externally connected trigger source on the rear panel or EXTernal	<b>EXTernal2</b>	triggers on an externally connected trigger source on the front panel	<b>IQMag</b>	triggers on the magnitude of the I/Q signal	<b>IDEMod</b>	triggers on the I/Q signal's demodulated I voltage	<b>QDEMod</b>	triggers on the I/Q signal's demodulated Q voltage	<b>IINPut</b>	triggers on the I channel's ADC voltage	<b>QINPut</b>	triggers on the Q channel's ADC voltage	<b>AIQMag</b>	triggers on the magnitude of the auxiliary receiver channel I/Q signal
<b>IMMediate</b>	free run triggering																		
<b>EXTernal1</b>	triggers on an externally connected trigger source on the rear panel or EXTernal																		
<b>EXTernal2</b>	triggers on an externally connected trigger source on the front panel																		
<b>IQMag</b>	triggers on the magnitude of the I/Q signal																		
<b>IDEMod</b>	triggers on the I/Q signal's demodulated I voltage																		
<b>QDEMod</b>	triggers on the I/Q signal's demodulated Q voltage																		
<b>IINPut</b>	triggers on the I channel's ADC voltage																		
<b>QINPut</b>	triggers on the Q channel's ADC voltage																		
<b>AIQMag</b>	triggers on the magnitude of the auxiliary receiver channel I/Q signal																		
Status Bits/OPC dependencies	<p>The Status Operation Register bit 5 "Waiting for Trigger" is set at the same time as the Sweeping or Measuring bit is set. It is cleared when the trigger actually occurs (that is, after the trigger event occurs and all the applicable trigger criteria have been met). A corresponding pop-up message ("Waiting for trigger") is generated if no trigger signal appears after approximately 2 sec. This message goes away when a trigger signal appears</p>																		

### 8.1.1.1 Free Run

**Free Run** triggering occurs immediately after the sweep/measurement is initiated.

Example	<p>Swept SA measurement: <b>:TRIG:SOUR IMM</b></p> <p>Measurements other than Swept SA: <b>:TRIG:&lt;meas&gt;:SOUR IMM</b></p>
Annunciation	Free Run (in the Meas Bar)

### 8.1.1.2 Video/ADC

The Video trigger condition is met when the video signal at the left edge of the graticule (the filtered and detected version of the input signal, including both RBW and VBW filtering) crosses the video trigger level with the chosen slope.

## 8 Trigger

### 8.1 Trigger

The Video trigger level is shown as a labeled line on the display. The line is displayed as long as Video is the selected trigger source. The Trigger Level line can be adjusted using the step keys, knob, or numeric keypad. It can also be dragged on the display with your finger or with a mouse.

When the detector selected for all active traces is the average detector, the video signal for triggering does not include any VBW filtering.

Log Plot and Spot Frequency measurements, in the Phase Noise Mode, do not support Video Trigger.

The **Trigger** tab contains the following Trigger Source dependent controls when Video Trigger is selected:

- "Prot Frame Aligned" on page 2889
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present, which are not dependent on the selected Trigger Source.

Note that Video Trigger is a software trigger of the acquired trace for some measurements and a hardware trigger of the IF envelope for others. Most measurements support one method or the other, although some (like ACP) don't support Video Trigger at all. For those measurements that support Video Trigger as a software trigger, the Trigger Level units will be dependent on the current Y Axis Unit for the measurement; for those that support Video Trigger as an IF Envelope trigger, the units are typically in dBm.

---

Example	Swept SA measurement: :TRIG:SOUR VID
	Measurements other than Swept SA: :TRIG:<meas>:SOUR VID

---

Annunciation Video (in the Meas Bar)

#### 8.1.1.3 ADC Trigger

Some IF Paths in certain models (like N9042B) in IQ Measurements have an ADC trigger. ADC is like the Video trigger, but with 2 limitations due to a lack of post-processing.

First, the trigger is not limited to the current measurement's setup IF BW. The trigger sees everything in the passband, so measurements like IQA Complex Spectrum can be triggered outside of the current Digital IF BW.

The final limitation is, due to lack of post-processing, the amplitude accuracy of the ADC trigger is less than the video trigger.

If ADC trigger is available for at least one IF Path on a model, then the ADC trigger will always be seen as a trigger option in IQ Measurements. However, it will only be available (not grayed out) to select when using IF Paths that support it.

If Video Trigger is selected and measurement setup (IF Path or IF BW) is changed to a path that only supports the ADC trigger instead, then ADC trigger will be selected and *vice versa*.

---

Example	Measurements other than Swept SA: :TRIG:<meas>:SOUR ADC
Annunciation	ADC (in the Meas Bar)

---

#### 8.1.1.4 Line

When **Line** is selected, start of a new sweep/measurement will be synchronized with the next cycle of the line voltage.

Line trigger is not available when operating from a "dc power source", for example, when the instrument is powered from batteries.

Line trigger is not available when using modular instruments like the VXT.

The **Trigger** tab contains the following Trigger Source dependent controls when **Line** Trigger is selected:

- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	:TRIG:SOUR LINE  Swept SA measurement :TRIG:<meas>:SOUR LINE  Measurements other than Swept SA
Annunciation	LINE (in the Meas Bar)

---

#### 8.1.1.5 External 1

When **External 1** is selected, a new sweep/measurement starts when the external trigger condition is met using the TRIGGER 1 IN input connector on the rear panel.

Grayed-out if Ext 1 is in use by Point Trigger in the Source Setup menu of Swept SA. Forced to "Free Run" on page 2877 if already selected and Point Trigger is set to External 1.

## 8 Trigger

### 8.1 Trigger

The **Trigger** tab contains the following Trigger Source dependent controls when External 1 Trigger is selected:

- "Prot Frame Aligned" on page 2889
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:SOUR EXT1</code> Swept SA measurement <code>:TRIG:&lt;meas&gt;:SOUR EXT1</code> Measurements other than Swept SA
Annunciation	External 1 (in the Meas Bar)

---

#### 8.1.1.6 External 2

When **External 2** is selected, a new sweep/measurement starts when the external trigger condition is met using the TRIGGER 2 IN input connector on the rear panel.

Grayed-out if Ext 2 is in use by Point Trigger in the Source Setup menu of Swept SA. Forced to "Free Run" on page 2877 if already selected and Point Trigger is set to External 2.

The **Trigger** tab contains the following Trigger Source dependent controls when External 2 Trigger is selected:

- "Prot Frame Aligned" on page 2889
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:SOUR EXT2</code> Swept SA measurement <code>:TRIG:&lt;meas&gt;:SOUR EXT2</code> Measurements other than Swept SA
Annunciation	External 2 (in the Meas Bar)

---

### 8.1.1.7 External 3

When **External 3** is selected, a new sweep/measurement starts when the external trigger condition is met using the TRIGGER 3 IN input connector on the rear panel.

This control only appears in certain instrument and option combinations, as follows.

- For N9042B, selects the Precision External Trigger, but available only when IF Path is 255 MHz or wider. The resolution will be within one sample count of the 4.8 GHz ADC sampling rate for 255 ~ 2 GHz IF Paths, and within one sample count of the 10.2 GHz sampling rate for the 4 GHz IF Path
- For all other instruments, available only if Option H1G is installed. It is only available when the 1 GHz path is chosen, either directly or indirectly; in all other paths it is visible but grayed-out. Direct and indirect selection of the 1 GHz path occurs as follows:
  - **Direct:** Measurements that directly support the 1 GHz path have a 1 GHz selection in the **IF Path** menu in **Meas Setup**
  - **Indirect:** Certain measurements, such as Power Statistics CCDF (**PST**), always choose the widest available path, and so will choose the 1 GHz path if it is available, even if there is no **IF Path** menu for the measurement. **External 3** will be visible when this results in the 1 GHz path being selected, even if there is no control or readout indicating that the 1 GHz path has been selected

For a full list of Modes and measurements that support **External 3**, see "[External 3 Support](#)" on page 2867 in the section "[Select Trig Source](#)" on page 2864.

When **External 3** is set, and then becomes disabled because you switched away from the 1 GHz path, the Trigger Source selection reverts to the default ("[Free Run](#)" on page 2877).

When **External 3** Trigger is selected, the **Trigger** tab displays the following Trigger Source dependent controls:

- "[Prot Frame Aligned](#)" on page 2889
- "[Trigger Delay](#)" on page 2892
- "[Trigger Slope](#)" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	:TRIG:SPEC:SOUR EXT3 Sets External 3 as the trigger source for the Complex Spectrum measurement
Annunciation	External 3 (in the Meas Bar)

---

### 8.1.1.8 Audio External

When **Audio External** is selected, a new sweep/measurement starts when the external trigger condition is met using the TRIG IN input connector on the front panel of the M9260A Audio Analyzer module. This is a TTL level input (not analog) that supports both rising edge and falling edge triggers.

Only appears in modular instruments, and only when the M9260A Audio Analyzer module is installed, such as in M8920A.

The **Trigger** tab contains the following Trigger Source dependent controls when Audio External Trigger is selected:

- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example

`:TRIG:RTES:SOUR AEXT`

Sets Audio External as the trigger source for the Radio Test measurement

---

Annunciation

Audio Ext (in the Meas Bar)

### 8.1.1.9 RF Burst

When **RF Burst** is selected, a new sweep/measurement starts when an RF burst envelope signal is identified from the signal at the RF Input connector.

In some models, a variety of burst trigger circuitry is available, resulting in various available burst trigger bandwidths. The instrument automatically chooses the appropriate trigger path based on the hardware configuration and other settings of the instrument.

The **Trigger** tab contains the following Trigger Source dependent controls when RF Burst is selected:

- "Trigger Level Absolute/Relative" on page 2897
- "Absolute Trigger Level" on page 2898
- "Relative Trigger Level" on page 2898
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:SOUR RFB</code> Swept SA measurement <code>:TRIG:&lt;meas&gt;:SOUR RFB</code> Measurements other than Swept SA
Annunciation	RF Burst (in the Meas Bar)

---

### 8.1.1.10 Periodic

When **Periodic** is selected, the instrument uses a built-in periodic timer signal as the trigger. Trigger occurrences are set by the **Periodic Timer** parameter, which is modified by the **Offset** and Periodic Sync Src.

Use this trigger when there is a periodic signal but no reliable signal on which to trigger. You can synchronize the periodic signal with outside events (using the Periodic Sync Src) to get closer to a reliable trigger signal (see ["More Information" on page 2884](#) below).

If you do not have a sync source selected (**OFF**), then the internal timer will not be synchronized with any external timing events.

The **Trigger** tab contains the following Trigger Source dependent controls when Periodic Trigger is selected:

- ["Period" on page 2900](#)
- ["Offset" on page 2901](#)
- ["Reset Offset Display" on page 2902](#)
- ["Sync Source" on page 2903](#)
- ["Trigger Delay" on page 2892](#)

Additional controls are also present that are not dependent on the selected Trigger Source.


---

Example	<code>:TRIG:SOUR FRAM</code> Swept SA measurement <code>:TRIG:&lt;meas&gt;:SOUR FRAM</code> Measurements other than Swept SA
Annunciation	Periodic (in the Meas Bar)

---

## More Information

The graphic below shows the action of the periodic timer trigger.

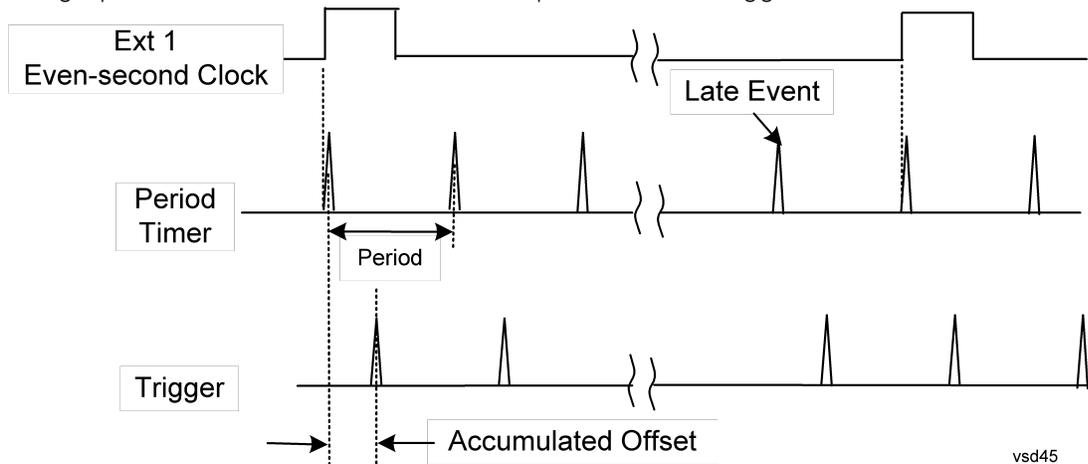

A common application is measuring periodic burst RF signals for which a trigger signal is not easily available. For example, we might be measuring a TDMA radio that bursts every 20 ms. Let's assume that the 20 ms period is very consistent. Let's also assume that we do not have an external trigger source available that is synchronized with the period, and that the signal-to-noise ratio of the signal is not high enough to provide a clean RF burst trigger at all of the analysis frequencies. For example, we might want to measure spurious transmissions at an offset from the carrier that is larger than the bandwidth of the RF burst trigger. In this application, we can set the Periodic Timer to a 20.00 ms period and adjust the offset from that timer to position our trigger just where we want it. If we find that the 20.00 ms is not exactly right, we can adjust the period slightly to minimize the drift between the period timer and the signal to be measured.

A second way to use this feature would be to use **Sync Source** temporarily, instead of **Offset**. In this case, we might tune to the signal in a narrow span and use the RF Burst trigger to synchronize the periodic timer. Then we would turn the sync source off so that it would not miss-trigger. Miss-triggering can occur when we are tuned so far away from the RF burst trigger that it is no longer reliable.

A third example would be to synchronize to a signal that has a reference time element of much longer period than the period of interest. In some CDMA applications, it is useful to look at signals with a short periodicity, by synchronizing that periodicity to the "even-second clock" edge that happens every two seconds. Thus, we could connect the even-second clock trigger to Ext1 and use then Ext1 as the sync source for the periodic timer.

The figure below illustrates this third example. The top trace represents the even-second clock. It causes the periodic timer to synchronize with the leading edge

shown. The instrument trigger occurs at a time delayed by the accumulated offset from the period trigger event. The periodic timer continues to run, and triggers continue to occur, with a periodicity determined by the instrument time base. The timer output (labeled "late event") will drift away from its ideal time due to imperfect matching between the time base of the signal being measured and the time base of the instrument, and also because of imperfect setting of the period parameter. But the synchronization is restored on the next even-second clock event. ("Accumulated offset" is described in the in the **Offset** function section.)

### 8.1.1.11 I/Q Mag

When **I/Q Mag** is selected, the trigger condition is met when the I/Q magnitude crosses the I/Q magnitude trigger level. The magnitude is measured at the output of the main I/Q digital receiver.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when I/Q Mag Trigger is selected:

- "Prot Frame Aligned" on page 2889
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:&lt;meas&gt;:SOUR IQM</code>
Annunciation	I/Q Mag (in the Meas Bar)

---

### 8.1.1.12 Input I

When **Input I** is selected, the condition is met when the voltage at the I Input crosses the trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when Input I Trigger is selected:

- "Prot Frame Aligned" on page 2889
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

## 8 Trigger

### 8.1 Trigger

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:&lt;meas&gt;:SOUR IINP</code>
---------	---

---

Annunciation	Input I (in the Meas Bar)
--------------	---------------------------

#### 8.1.1.13 Input Q

When **Input Q** is selected, the condition is met when the voltage at the I Input crosses the trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when Input Q Trigger is selected:

- ["Prot Frame Aligned" on page 2889](#)
- ["Trigger Delay" on page 2892](#)
- ["Trigger Slope" on page 2896](#)

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:&lt;meas&gt;:SOUR QINP</code>
---------	---

---

Annunciation	Input Q (in the Meas Bar)
--------------	---------------------------

#### 8.1.1.14 I (Demodulated)

When **I (Demodulated)** is selected, the trigger condition is met when the I voltage crosses the I voltage trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when I (Demodulated) Trigger is selected:

- ["Prot Frame Aligned" on page 2889](#)
- ["Trigger Delay" on page 2892](#)
- ["Trigger Slope" on page 2896](#)

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:&lt;meas&gt;:SOUR IDEM</code>
---------	---

---

Annunciation	I (Demod) (in the Meas Bar)
--------------	-----------------------------

### 8.1.1.15 Q (Demodulated)

When **Q (Demodulated)** is selected, the trigger condition is met when the Q voltage crosses the Q voltage trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when Q (Demodulated) Trigger is selected:

- "Prot Frame Aligned" on page 2889
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:&lt;meas&gt;:SOUR QDEM</code>
---------	---

---

Annunciation	Q (Demod) (in the Meas Bar)
--------------	-----------------------------

### 8.1.1.16 Aux I/Q Mag

When **Aux I/Q Mag** is selected, the trigger condition is met when the auxiliary receiver's I/Q magnitude output crosses the Auxiliary I/Q magnitude trigger level.

This trigger type is only valid for measurements that support the I/Q inputs.

The **Trigger** tab contains the following Trigger Source dependent controls when Aux I/Q Mag Trigger is selected:

- "Prot Frame Aligned" on page 2889
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896
- "Trigger Center Frequency" on page 2906
- "Trigger BW" on page 2906

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	<code>:TRIG:&lt;meas&gt;:SOUR AIQM</code>
---------	---

---

Annunciation	Aux I/Q Mag (in the Meas Bar)
--------------	-------------------------------

### 8.1.1.17 PXI

When **PXI** is selected, a new sweep/measurement will start when detecting the signal from the PXI backplane trigger line.

This trigger type is only found in the modular instrument products.

The **Trigger** tab contains the following Trigger Source dependent controls when PXI Trigger is selected:

- "Select PXI Line" on page 2907
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

---

Example	Swept SA measurement: :TRIG:SOUR PXI  Measurements other than Swept SA: :TRIG:<meas>:SOUR PXI
---------	---

---

Annunciation	PXI (in the Meas Bar)
--------------	-----------------------

### 8.1.1.18 Internal

When **Internal** is selected, the trigger condition is met when detecting the signal from the internal RF Source module.

This trigger type is only found in the modular instrument products.

The **Trigger** tab contains the following Trigger Source dependent controls when Aux I/Q Mag Trigger is selected:

- "Prot Frame Aligned" on page 2889
- "Trigger Delay" on page 2892
- "Trigger Slope" on page 2896

Additional controls are also present that are not dependent on the selected Trigger Source.

For an Internal trigger to occur, there must be a trigger output from the internal RF source. This means that you must configure the Source Trigger Output before selecting Internal as the Trigger Source. To enable the Source Trigger Output,

output trigger should not be off if internal source works as list sequence mode and Trig 2 Out should not be off if internal source works as MXG mode. Otherwise, no trigger occurs, and measurement does not start.

---

Example	Swept SA measurement: :TRIG:SOUR INTernal  Measurements other than Swept SA: :TRIG:<meas>:SOUR INTernal
Annunciation	Internal (in the Meas Bar)

---

### 8.1.1.19 Prot Channel Detection

Selects a protocol channel detection Base Station Emulation as the trigger. When Prot Channel Detection is selected, a new sweep/measurement will start when the protocol channel detection trigger condition is met.

Protocol Channel Detection Trigger is defined as the Base Station Emulation protocol channel detection event of PUSCH, PUCCH, PRACH or SRS. With this trigger, the IQ data, and therefore the measurement, is aligned at the beginning of the LTE sub-frame where the particular event was detected. Channel transmission is aligned to the sub-frame boundary; therefore, the measurement is aligned with its transmission with the exception of SRS, which might not start at the beginning of the sub-frame containing the SRS as it might have an offset from the start of the sub-frame base on the SRS configuration, In this case, the trigger and measurement are aligned to the beginning of the sub-frame containing SRS as defined by this trigger type (which is not the beginning of the SRS itself due to the offset).

This trigger type is only available in UXM.

---

Example	:TRIG:<meas>:SOUR PRTC
Annunciation	Prot Chan Det (in the Meas Bar)

---

### 8.1.1.20 Prot Frame Aligned

Selects a protocol frame aligned Base Station Emulation as the trigger. When Prot Frame Aligned is selected, a new sweep/measurement will start when the protocol frame aligned data trigger condition is met.

**Prot Frame Aligned** Trigger is aligned with the Base Station Emulation Protocol uplink frame timing boundary. It depends on the technology format of the base station call processing.

This trigger type is only available in UXM.

---

Example	:TRIG:<meas>:SOUR PRTF
Annunciation	Prot Frame (in the Meas Bar)

---

### 8.1.1.21 Prot Event

Selects a protocol frame aligned Base Station Emulation as the trigger. When Prot Frame Aligned is selected, a new sweep/measurement will start when the protocol frame aligned data trigger condition is met.

**Prot Event** Trigger is defined as the Base Station Emulation protocol internal event such as the starting of a predefined uplink pattern for a relative power control ramp. With this trigger, the IQ data, and therefore the measurement, is aligned with the start of the desired uplink pattern.

This trigger type is only available in UXM.

---

Example	:TRIG:<meas>:SOUR PRTF
Annunciation	Prot Frame (in the Meas Bar)

---

### 8.1.2 Trigger Level

Sets the amplitude level for Trigger and Gate sources that use level triggering. When the video signal crosses this level, with the chosen slope, the trigger occurs.

For any given Trigger, Gate, or Periodic Sync Src, the same Trigger Level is used for the Trigger source in the Trigger menu, for the Gate source in the Gate Source menu, and for the Periodic Sync source in the Periodic Sync Src menu.

If **Video** is the selected trigger source, the trigger level displays as a green horizontal line with the label TRIG LVL just above it on the right:



If the value of trigger level is off screen low this line displays along the bottom of the graticule. If the value of trigger level is off screen high this line displays above the graticule but no farther above than 1.5 % of the graticule height (the same as the trace itself). Note that the TRIG LVL label cannot display above the graticule so the label itself stops at the top of the graticule.

For the I/Q Triggers, the I/Q reference impedance is used for converting between power and voltage.

### Trigger Level Parameters

Source	Example	Min	Max	Prese t	Resoluti on	Step Key Incr	Knob Incr
Video	<code>TRIG:VID:LEV -40 dBm</code>	-170 dBm	+30 dBm	-25 dBm	.01 dB	Scale/Div (Log), 1 dB (Lin)	Step/10, but never < 0.1 dB
Level	<code>TRIG:LEV:LEV -40 dBm</code>	-170 dBm	+30 dBm	-25 dBm	.01 dB	Scale/Div (Log), 1 dB (Lin)	Step/10, but never < 0.1 dB
External 1 2	<code>TRIG:EXT1:LEV 0.4 V</code>	-5 V VXT models M9410A/11A/15A /16A: 0 V	5 V VXT models M9410A/11A/15A /16A: 2.5 V	1.2 V	10 mV	0.5 V	0.1 V
I/Q Mag	<code>TRIG:IQM:LEV -30 dBm</code>	-200 dBm	100 dBm	-25 dBm	.1 dB	Scale/Div (Log), 1 dB (Lin)	Step/10, but never < 0.1 dB
I (Demod)	<code>TRIG:IDEM:LEV 0.5 V</code>	-1 V	1 V	0.25 V	4 significant digits	Scale/Div	Step/100, but never < 1 μV
Q (Demod)	<code>TRIG:QDEM:LEV 0.5 V</code>	-1 V	1 V	0.25 V	4 significant digits	Scale/Div	Step/100, but never < 1 μV
Input I	<code>TRIG:IINP:LEV 0.5 V</code>	-1 V	1 V	0.25 V	4 significant digits	Scale/Div	Step/100, but never < 1 μV
Input Q	<code>TRIG:QINP:LEV 0.5 V</code>	-1 V	1 V	0.25 V	4 significant digits	Scale/Div	Step/100, but never < 1 μV
Aux Chan I/Q Mag	<code>TRIG:AIQM:LEV -30 dBm</code>	-200 dBm	100 dBm	-25 dBm	.1 dB	Scale/Div (Log), 1 dB (Lin)	Step/10, but never < 0.1 dB
Internal	<code>TRIG:INT:LEV 1.2 V</code>	-5 V VXT models M9410A/11A/15A /16A: 0 V	5 V VXT models M9410A/11A/15A /16A: 2.5 V	1.2 V	10 mV	.5 V	.1 V
ADC	<code>TRIG:ADC:LEV -40 dBm</code>	-170 dBm	30 dBm	-25 dBm	.01 dB	Scale/Div	Step/10,

8 Trigger  
8.1 Trigger

Source	Example	Min	Max	Prese t	Resoluti on	Step Key Incr	Knob Incr
	EV -30 dBm				dBm	iv (Log), 1 dB (Lin)	but never < 0.1 dB

### More Information

For Video Trigger Level, when sweep type = FFT, the video trigger uses the amplitude envelope in a bandwidth wider than the FFT width as a trigger source. This can be useful but does not have the same relationship between the displayed trace and the trigger level as in swept triggering.

For Video Trigger Level the settable resolution of the function is 0.01 dB, even when the Y Axis Unit is linear. In Linear Y Axis Unit (for example, Volts) this requires 4 significant digits to display on the control.

For the Level trigger source, used in RTSA and other measurements, External Gain and Ref Level Offset modify the actual trace data as it is taken and are taken into account by Trig Level.

Remote Command	<pre>:TRIGger[:SEquence]:&lt;trig_source&gt;:LEVel &lt;ampl&gt; :TRIGger[:SEquence]:&lt;trig_source&gt;:LEVel?</pre> <p>where &lt;trig_source&gt; is one of:</p> <pre>EXTernal1   EXTernal2   EXTernal3   VIDEo   ADC   LEVel   IQMag   IDEMod   QDEMod   IINPut   QINPut   AIQMag   INTernal</pre>
Example	<pre>:TRIG:VID:LEV -40 dBm</pre>
Dependencies	Only appears when Video, External 1 2, or an I/Q trigger is selected as the Trigger Source
State Saved	Saved in instrument state
Backwards	<pre>:TRIGger[:SEquence]:IF:LEVel</pre>
Compatibility SCPI	<p>taken as video trigger level</p> <pre>:TRIGger[:SEquence]:IF:LEVel?</pre> <p>taken as video trigger level query</p> <pre>:TRIGger[:SEquence]:EXTernal:LEVel</pre> <p>the parameter EXTernal is mapped to EXTernal1</p> <pre>:TRIGger[:SEquence]:FRAMe:EXTernal1:LEVel</pre>

### 8.1.3 Trigger Delay

Controls a time delay that the instrument will wait to begin a sweep after meeting the trigger criteria, for Trigger and Gate sources that support Trigger Delay.

For any given Trigger, Gate, or Periodic Sync source, the same Trigger Delay is used for the Trigger source in the Trigger menu, for the Gate source in the Gate Source menu, and for the Periodic Sync source in the Periodic Sync Src menu.

Negative trigger delays can be used. Negative trigger delay makes intuitive sense in time domain and works well in FFT mode where the bandwidth of the filter before the video trigger is about 1.25 span. You can use negative delay to pre-trigger the instrument in the time domain or FFT, but not in swept spans. Video trigger delay may be set to negative values, in time domain, FFT and even swept, but in swept spans, negative settings of Trig Delay are treated as a zero setting within the internal hardware and the advisory message "Neg. Trig Delay unavailable in Swept Mode, zero delay used." is generated when such a delay is set.

Remote Command	<pre>:TRIGger[:SEquence]:&lt;trig_source&gt;:DElay &lt;time&gt; :TRIGger[:SEquence]:&lt;trig_source&gt;:DElay?</pre> <p>where &lt;trig_source&gt; is one of: LINE   EXTernal1   EXTernal2   EXTernal3   AEXTernal   VIDeo   ADC   RFBurst   FRAME   LEVel   FMT   IQMag   IDEMod   QDEMod   IINPut   QINPut   AIQMag   PXI   INTernal</p>
Example	<pre>:TRIG:VID:DEL:STAT ON :TRIG:VID:DEL 100 ms</pre>
Dependencies	Only appears when Video, Line, External 1 2, RF Burst, Periodic Timer or an I/Q trigger is selected as the Trigger Source
Couplings	When FMT Trigger Criteria is <b>INSIDE</b> or <b>OUTSIDE</b> , FMT Trigger Delay State is forced to <b>OFF</b> FMT Trigger Delay MaxValue is dependent on the current AcquisitionTime. The equation is: MaxValue = 2 <sup>16</sup> x AcqTime, but never to exceed 70 sec. Ex: In PVT View with a min PVT Acq Time of 200 us, this Trigger Delay MaxValue is 13.26 sec. In RT Spectrum and Spectrogram with a min Acq Time of 100 us, this Trigger Delay MaxValue is 6.55 sec. When the Acq Time is increased, this MaxValue also increases
State Saved	Saved in instrument state
Annotation	Trig Delay (in the Measurement Bar)
Backwards Compatibility Notes	<p>For backward compatibility with VSA/PSA comms apps</p> <pre>:TRIGger[:SEquence]:IF:DElay :TRIGger[:SEquence]:DElay</pre> <p>The legacy <code>:TRIGger[:SEquence]:DElay</code> command affects the delay for the <b>VID</b>, <b>LINE</b>, <b>EXT1</b>, <b>EXT2</b>, and <b>RFB</b> triggers</p> <p>Auto Function</p>
Remote Command	<pre>:TRIGger[:SEquence]:&lt;trig_source&gt;:DElay:STATe OFF   ON   0   1 :TRIGger[:SEquence]:&lt;trig_source&gt;:DElay:STATe?</pre> <p>where &lt;trig_source&gt; is one of: LINE   EXTernal1   EXTernal2   EXTernal3   AEXTernal   VIDeo   ADC   RFBurst   FRAME   LEVel   FMT   IQMag   IDEMod   QDEMod   IINPut   QINPut   AIQMag   PXI   INTernal</p>
Preset	OFF

## Backwards Compatibility Commands

Example	<code>:TRIG:DEL 1 ms</code>
Preset	1 us
State Saved	Saved in instrument state
Backwards Compatibility	<code>:TRIGger[:SEquence]:DELay &lt;time&gt;</code>
SCPI	<code>:TRIGger[:SEquence]:DELay?</code> <code>:TRIGger[:SEquence]:DELay:STATE OFF   ON   0   1</code> <code>:TRIGger[:SEquence]:DELay:STATE?</code>

Example	<code>:TRIG:OFFS ON</code> <code>:TRIG:OFFS -100 ms</code>
---------	---

Notes  
ESA commands for trigger offset, which allowed you to use a positive or negative delay when in zero span and in a Res BW  $\geq$  1 kHz. For ESA compatibility, X-series instruments keep track of this offset and adds it to the Trigger Delay for VIDEO, LINE, EXTERNAL1 or EXTERNAL2 whenever the value is sent to the hardware, if in Zero Span and RBW  $\geq$  1 kHz

Preset	Off, 0 s
State Saved	Saved in instrument state
Min	-11 s
Max	+11 s
Backwards Compatibility	<code>:TRIGger[:SEquence]:OFFSet &lt;time&gt;</code>
SCPI	<code>:TRIGger[:SEquence]:OFFSet?</code>

### Auto Function

Remote Command	<code>:TRIGger[:SEquence]:OFFSet:STATE OFF   ON   0   1</code> <code>:TRIGger[:SEquence]:OFFSet:STATE?</code>
----------------	--

Preset	OFF
--------	-----

## Trigger Delay Parameters

Note: in Swept SA, when transitioning from Zero Span to Swept spans, the trigger delay is clipped to -150 ms if it had been longer in Zero Span.

Source	Example	Preset	Min	Max	Resolution
Video	<code>TRIG:VID:DEL:STAT ON</code> <code>TRIG:VID:DEL 100 ms</code>	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
Level	<code>TRIG:LEV:DEL:STAT ON</code>	Off, 30 ms	0 ms	70 sec (but	Multiple of Acq

Source	Example	Preset	Min	Max	Resolution
	TRIG:LEV:DEL 100 ms			dependent on Acq Time like FMT)	Time (as is FMT)
FMT	TRIG:FMT:DEL:STAT ON TRIG:FMT:DEL 100 ms	Off, 30 ms	0 ms	70 sec (but dependent on Acq Time like FMT)	Multiple of Acq Time (as is FMT)
External 1 2	TRIG:EXT1:DEL:STAT ON TRIG:EXT2:DEL 100 ms	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
Line	TRIG:LINE:DEL:STAT ON TRIG:LINE:DEL 100 ms	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
RF Burst	TRIG:RFB:DEL:STAT ON TRIG:RFB:DEL 100 ms	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
Periodic Timer	TRIG:FRAM:DEL:STAT ON TRIG:FRAM:DEL 100 ms	Off, 1 us	-150 ms (-10s in Swept SA Zero Span)	+500 ms	100 ns
I/Q Mag	TRIG:IQM:DEL:STAT ON TRIG:IQM:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
I (Demod)	TRIG:IDEM:DEL:STAT ON TRIG:IDEM:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
Q (Demod)	TRIG:QDEM:DEL:STAT ON TRIG:QDEM:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
Input I	TRIG:IINP:DEL:STAT ON TRIG:IINP:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
Input Q	TRIG:QINP:DEL:STAT ON TRIG:QINP:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
Aux Chan I/Q Mag	TRIG:AIQM:DEL:STAT ON TRIG:AIQM:DEL 10 ms	Off, 1 us	-2.5 s	+10 s	10 ns
PXI	TRIG:PXI:DEL:STAT ON TRIG:PXI:DEL 10 ms	Off, 1 us	-150 ms	+500 ms	100 ns
Internal	TRIG:INT:DEL:STAT ON TRIG:INT:DEL 10 ms	Off, 1 us	-150 ms	+500 ms	100 ns
Prot Channel Detection	TRIG:PRTC:DEL:STAT ON TRIG:PRTC:DEL 1 ms	Off, 1 ms	-10 ms	+10 ms	100 ns

## 8 Trigger


### 8.1 Trigger

Source	Example	Preset	Min	Max	Resolution
Prot Frame Aligned	<code>TRIG:PRTF:DEL:STAT ON</code> <code>TRIG:PRTF:DEL 1 ms</code>	Off, 1 ms	-10 ms	+10 ms	100 ns
Prot Event	<code>TRIG:PRTE:DEL:STAT ON</code> <code>TRIG:PRTE:DEL 1 ms</code>	Off, 1 ms	-10 ms	+10 ms	100 ns

Note: in Bluetooth Mode, the preset value of Trigger Delay is always (On, -20us).

#### More Information

Here is the diagram for Frequency Mask Trigger (FMT) Trigger Delay:

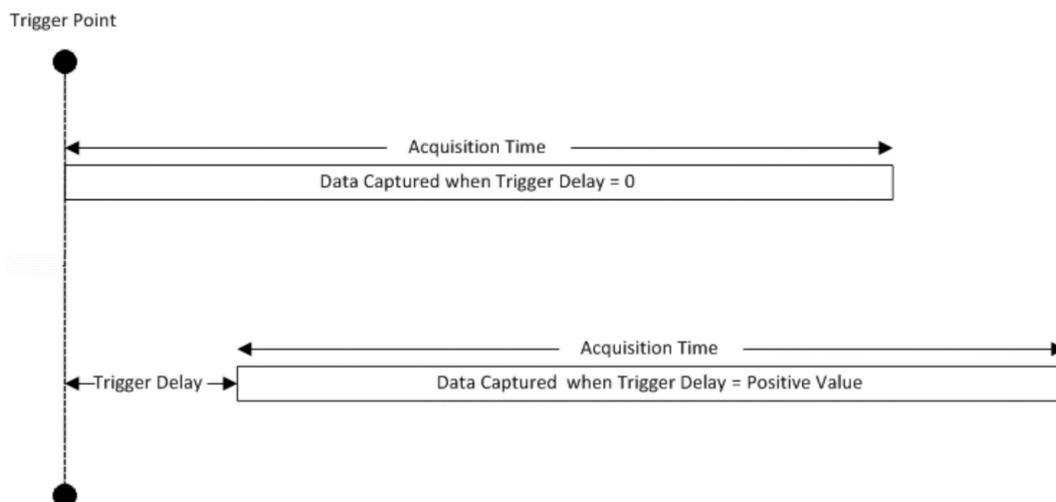

#### 8.1.4 Trigger Slope

Sets the trigger polarity for Trigger and Gate sources that support Trigger Slope. It is set positive to trigger on a rising edge and negative to trigger on a falling edge.

For any given Trigger, Gate, or Periodic Sync source, the same Trigger Slope is used for the Trigger source in the Trigger menu, for the Gate source in the Gate Source menu, and for the Periodic Sync source in the Periodic Sync Src menu.

---

Remote Command `:TRIGger[:SEquence]:<trig_source>:SLOPe POSitive | NEGative`  
`:TRIGger[:SEquence]:<trig_source>:SLOPe?`

where `<trig_source>` is one of:

`LINE | EXTernal1 | EXTernal2 | EXTernal3 | AEXTernal | VIDEo | ADC RFBurst |`

	<a href="#">IQMag</a>   <a href="#">IDEMod</a>   <a href="#">QDEMod</a>   <a href="#">IINPut</a>   <a href="#">QINPut</a>   <a href="#">AIQMag</a>   <a href="#">PXI</a>   <a href="#">INTernal</a>
Example	<code>:TRIG:VID:SLOP NEG</code> <code>:TRIG:VID:SLOP?</code> <code>:TRIG:EXT1: SLOP NEG</code>
Dependencies	Only appears when Video, Line, External 1 2, RF Burst or an I/Q trigger is selected as the Trigger Source
Preset	<a href="#">POSitive</a>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:IF:SLOPe NEGative</code>   <code>POSitive</code> <code>:TRIGger[:SEquence]:IF:SLOPe?</code> For backward compatibility with VSA/PSA comms apps <code>:TRIGger[:SEquence]:EXTernal:SLOPe</code> For backward compatibility, the parameter <code>EXTernal</code> is mapped to <code>EXTernal1</code> <code>:TRIGger[:SEquence]:FRAMe:EXTernal1:SLOPe</code> <code>:TRIGger[:SEquence]:FRAMe:EXTernal2:SLOPe</code>

Example	<code>:TRIG:SLOP NEG</code>
Preset	<a href="#">POSitive</a>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:SLOPe POSitive</code>   <code>NEGative</code> <code>:TRIGger[:SEquence]:SLOPe?</code>

Note: when transitioning from Zero Span to Swept spans, the trigger delay is clipped to -150 ms if it had been longer in Zero Span.

### 8.1.5 Trigger Level Absolute/Relative

Selects either Absolute or Relative Burst Triggering.

Remote Command	<code>:TRIGger[:SEquence]:RFBurst:LEVel:TYPE ABSolute</code>   <code>RELative</code> <code>:TRIGger[:SEquence]:RFBurst:LEVel:TYPE?</code>
Example	Set the trigger level type of the RF burst trigger to Relative: <code>:TRIG:RFB:LEV:TYPE REL</code>
Dependencies	Only appears when RF Burst is selected as the Trigger Source
Preset	<a href="#">ABSolute</a>
State Saved	Saved in instrument state

## 8.1.6 Absolute Trigger Level

Sets the absolute trigger level for the RF burst envelope.

**NOTE**

When using the External Mixing path, the Absolute Trigger Level is uncalibrated because the factory default was set to accommodate the expected IF levels for the RF path.

Remote Command	<code>:TRIGger[:SEquence]:RFBurst:LEVel:ABSolute &lt;ampl&gt;</code> <code>:TRIGger[:SEquence]:RFBurst:LEVel:ABSolute?</code>
Example	Set the trigger level of the RF burst envelope signal to the absolute level of 10 dBm: <code>:TRIG:RFB:LEV:ABS 10 dBm</code>
Notes	Sending this command does not switch the setting from relative to absolute; to switch it you need to send <code>:TRIGger[:SEquence]:RFBurst:LEVel:TYPE</code> For Bluetooth Mode, the default value is -50 dBm
Dependencies	Only appears when RF Burst is selected as the Trigger, Gate or Periodic Sync Source
Couplings	This same level is used for the RF Burst trigger source in the Trigger menu, for the RF Burst selection in the Gate Source menu, and also for the RF Burst selection in the Periodic Sync Src menu
Preset	LTEA FDD/TDD modes: -40 dBm or -50 dBm depending on the hardware 5G NR mode: -40 dBm All other modes: -20 dBm
State Saved	Saved in instrument state
Min	-200 dBm
Max	100 dBm
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:FRAMe:RFBurst:LEVel:ABSolute</code>

## 8.1.7 Relative Trigger Level

Sets the relative trigger level for the RF burst envelope.

In some models, the relative burst trigger function is implemented in hardware. In other models, without the advanced triggering hardware required, the relative burst trigger function is implemented in software in some measurements, and is unavailable in other measurements.

When implemented in software, the relative RF Burst trigger function is implemented as follows:

1. The measurement starts with the absolute RF Burst trigger setting. If it cannot get a trigger with that level, auto trigger fires and the acquisition starts anyway.

After the acquisition, the measurement searches for the peak in the acquired waveform and saves it

2. In the next cycle of the measurement, the measurement determines a new absolute RF Burst level based on the peak value from the first measurement and the Relative RF Burst Trigger Level (always 0 or negative dB) set by the user. The following formula is used: absolute RF Burst level = peak level of the previous acquisition + relative RF Burst level
3. If the new absolute RF Burst level differs from the previous by more than 0.5 dB, the new level is sent to the hardware; otherwise, it is not updated (to avoid slowing down the acquisition)

Steps 2 and 3 repeat for subsequent measurements.

Remote Command	<code>:TRIGger[:SEquence]:RFBurst:LEVel:RELative &lt;rel_ampl&gt;</code> <code>:TRIGger[:SEquence]:RFBurst:LEVel:RELative?</code>
Example	Set the trigger level of the RF burst envelope signal to the relative level of -10 dB: <code>:TRIG:RFB:LEV:REL -10 dB</code>
Notes	Sending this command does not switch the setting from absolute to relative; to switch it you need to send <code>:TRIGger[:SEquence]:RFBurst:LEVel:TYPE</code> The relative trigger level is not available in some measurements. In those measurements the <code>RELative</code> parameter, and <code>:TRIGger[:SEquence]:RFBurst:LEVel:TYPE</code> generates an error if sent
Dependencies	This control is grayed-out and Absolute Trigger Level selected if the required hardware is not present in your instrument and the current measurement does not support Relative triggering Only appears when RF Burst is selected as the Trigger Source
Preset	-6 dB GSM: -25 dB
State Saved	Saved in instrument state
Min	-45 dB
Max	0 dB
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:RFBurst:LEVel</code> This legacy command is aliased to <code>:TRIGger[:SEquence]:RFBurst:LEVel:RELative</code> because PSA had <i>only</i> relative burst triggering  In some models, a variety of burst trigger circuitry is available, resulting in various available burst trigger bandwidths. The instrument automatically chooses the appropriate trigger path based on the hardware configuration and other settings of the instrument. Here is the RF Burst Trigger Bandwidth table for Swept SA Measurement in SA mode:

8 Trigger  
8.1 Trigger

Model	Option	Span	Swp Type	FFT Width	Trigger BW, -10 dB	Notes
EXA	any	All	all	all	16 MHz	
MXA	w/o B25	All	all	all	16 MHz	
MXA	B25	Zero	N/A	N/A	16 MHz	
MXA	B25	All	Swept	N/A	16 MHz	
MXA	B25	< 8 MHz	FFT	all	16 MHz	
MXA	B25	≥ 8 MHz	FFT	25 MHz	30 MHz	
PXA	any	all	all	all	> 80 MHz	Exceptions(*)

(\*) Exceptions: When the RF Burst Trigger Level Type is Absolute, the start frequency is below 300 MHz, and the sweep type is either Swept or FFT with an FFT width of less than 25 MHz, then the RF Burst Trigger Bandwidth is not >80 MHz. It would be 16 MHz except in the subcase of Sweep Type = FFT and FFT Width between 8 and 25 MHz inclusive, where it would be 30 MHz.

### 8.1.8 Period

Sets the period of the internal periodic timer clock. For digital communications signals, this is usually set to the frame period of your current input signal. In the case that sync source is not set to OFF, and the external sync source rate is changed for some reason, the periodic timer is synchronized at every external synchronization pulse by resetting the internal state of the timer circuit.

Remote Command	<code>:TRIGger[:SEquence]:FRAMe:PERiod &lt;time&gt;</code> <code>:TRIGger[:SEquence]:FRAMe:PERiod?</code>
Example	<code>:TRIG:FRAM:PER 100 ms</code>
Dependencies	The invalid data indicator turns on when the period is changed, until the next sweep/measurement completes Only appears when Periodic Timer is selected as the Trigger or Gate Source
Couplings	The same period is used in the Gate Source selection of the period timer
Preset	20 ms unless noted below: GSM: 4.615383 ms 5G NR: 10 ms
State Saved	Saved in instrument state
Min	100.000 ns
Max	559.0000 ms

### 8.1.9 Offset

Adjusts the accumulated offset between the periodic timer events and the trigger event. Adjusting the accumulated offset is different than setting an offset and requires explanation.

The periodic timer is usually not synchronized with any external events, so the timing of its output events has no absolute meaning. Since the timing relative to external events (RF signals) is important, you need to be able to adjust (offset) it. However, you have no direct way to see when the periodic timer events occur. All that you can see is the trigger timing. When you want to adjust the trigger timing, you will be changing the internal offset between the periodic timer events and the trigger event. Because the absolute value of that internal offset is unknown, we will just call that the accumulated offset. Whenever the Offset parameter is changed, you are changing that accumulated offset. You can reset the displayed offset using Reset Offset Display. Changing the display does not change the value of the accumulated offset, and you can still make additional changes to accumulated offset.

To avoid ambiguity, we define that an increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event.

Remote Command	<code>:TRIGger[:SEQuence]:FRAMe:OFFSet &lt;time&gt;</code> <code>:TRIGger[:SEQuence]:FRAMe:OFFSet?</code>
Example	<code>:TRIG:FRAM:OFFS 1.2 ms</code>
Notes	<p>The front panel interface (for example, the knob), and this command, adjust the accumulated offset, which is shown on the control</p> <p>However, the actual amount sent to the hardware each time the offset is updated is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value. Note that the accumulated offset value is essentially arbitrary; it represents the accumulated offset from the last time the offset was zeroed (with the Reset Offset Display key)</p> <p>Note that this command does not change the period of the trigger waveform. Note also that Offset is used only when the sync source is set to <b>OFF</b>, otherwise delay is used, see <a href="#">"Trigger Delay" on page 2892</a></p> <p>An increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event</p> <p>When the SCPI command is sent the value shown on the control is updated with the new value. However, the actual amount sent to the hardware is the delta value, that is, the current accumulated offset value minus the previous accumulated offset value</p> <p>The SCPI query simply returns the value currently showing on the key</p>
Dependencies	<p>The invalid data indicator turns on when the offset is changed, until the next sweep/measurement completes</p> <p>Only appears when Periodic Timer is selected as the Trigger or Gate Source</p>

## 8 Trigger

### 8.1 Trigger

Couplings	The same offset is used in the Gate Source selection of the period timer
Preset	0 s
State Saved	Saved in instrument state
Min	-10.000 s
Max	10.000 s

#### 8.1.10 Reset Offset Display

Resets the value of the periodic trigger offset display setting to 0.0 seconds. The current displayed trigger location may include an offset value defined with the **Offset** key. Pressing this control redefines the currently displayed trigger location as the new trigger point that is 0.0 s offset. The **Offset** control can then be used to add offset relative to this new timing.

Remote Command	<code>:TRIGger[:SEquence]:FRAMe:OFFSet:DISPlay:RESet</code>
Example	<code>:TRIG:FRAM:OFFS:DISP:RES</code>
Dependencies	Only appears when Periodic Timer is selected as the Trigger or Gate Source

#### 8.1.11 Offset Adjust (Remote Command Only)

Lets you advance the phase of the frame trigger by the amount you specify. It does *not* work in the same way as the related front panel keys.

The command does not change the period of the trigger waveform. If the command is sent multiple times, it advances the phase of the frame trigger an additional amount each time it is sent. Negative numbers are permitted.

Remote Command	<code>:TRIGger[:SEquence]:FRAMe:ADJust &lt;time&gt;</code>
Example	<code>:TRIG:FRAM:ADJ 1.2 ms</code>
Notes	<p>Note also that Offset is used only when the sync source is set to OFF, otherwise delay is used, see section <a href="#">"Trigger Delay" on page 2892</a></p> <p>An increase in the "offset" parameter, either from the knob or the SCPI adjust command, serves to delay the timing of the trigger event</p> <p>The front panel interface (for example, the knob) and the <code>:TRIG:FRAM:OFFS</code> command adjust the accumulated offset, which is shown on the active function display. However, the actual amount sent to the hardware is the delta value, that is, the current offset value minus the previous offset value</p> <p>When the SCPI command is sent the value shown on the control (and the Active Function, if this happens to be the active function) is updated by increasing it (or decreasing it if the value sent is negative) by the amount specified in the SCPI command</p> <p>This is no query for this command</p>
Dependencies	The invalid data indicator turns on when the offset is changed, until the next sweep/measurement

	completes
Couplings	The same offset is used in the Gate Source selection of the period timer
Preset	0 s
State Saved	Saved in instrument state
Min	-10.000 s
Max	10.000 s

### 8.1.12 Sync Source

For convenience, you can select the Periodic Timer Sync Source using this dropdown. You can also select it from the Periodic Sync Src tab, which also contains controls that let you configure the Sync Source.

Selects a signal source for you to synchronize your periodic timer trigger to, otherwise you might be triggering at some arbitrary location in the frame. Synchronization reduces the precision requirements on the setting of the period.

Example	<pre>:TRIG:FRAM:SYNC EXT1 :TRIG:FRAM:SYNC EXT2 :TRIG:FRAM:SYNC RFB :TRIG:FRAM:SYNC OFF</pre>
Dependencies	Only appears when Periodic Timer is selected as the Trigger or Gate Source
Preset	OFF
State Saved	Saved in instrument state

### 8.1.13 TV Line

Selects the **TV Line** number on which to trigger. Line number range is dependent on the settings of the **"Standard"** on page 2905 and **"Field"** on page 2904 menus within the TV trigger setup functions. When the line number is incremented beyond the upper limit, the value will change to the lower limit and continue incrementing from there. When the line number is decremented below the lower limit, the value will change to the upper limit and continue decrementing from there.

Remote Command	<pre>:TRIGger[:SEquence]:TV:LINE &lt;integer&gt; :TRIGger[:SEquence]:TV:LINE?</pre>
Example	<pre>:TRIG:TV:LINE 20 :TRIG:TV:LINE?</pre>
Dependencies	<p>Only available in the Swept SA measurement</p> <p>Only appears when <b>TV</b> is selected as the Trigger Source</p>

## 8 Trigger

### 8.1 Trigger

Preset	17
State Saved	Saved in instrument state
Min	1 The minimum value is the minimum line and rolls over to the maximum value. The minimum line number depends on which Field and standard are selected
Max	The maximum value is the maximum line and rolls over to the minimum value. The maximum line number depends on which Field and standard are selected Field 1 ( <b>ODD</b> ): <ul style="list-style-type: none"> <li>Maximum line is 263 for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60</li> <li>Maximum line is 313 for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L</li> </ul> Field 2 ( <b>EVEN</b> ): <ul style="list-style-type: none"> <li>The maximum line 262 for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60</li> <li>The maximum line is 312 for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L</li> </ul> Field = <b>ENTire</b> Frame: <ul style="list-style-type: none"> <li>525, for formats NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M and PAL-60</li> <li>625, for formats PAL-B, D, G, H, I, PAL-N, PAL-N Combin, and SECAM-L</li> </ul>

#### 8.1.14 Field

Selects the **Field** on which to trigger:

Entire Frame	<b>ENTire</b>	Causes the selected line number to be viewed as an offset into the entire frame starting with line 1, the first line in Field One
Field One	<b>ODD</b>	Causes the selected line number to be viewed as an offset into the first field starting with Line 1, the first line in Field One
Field Two	<b>EVEN</b>	Causes the selected line number to be viewed as an offset into the second field. If Line 1 is selected, it is the 264th line of the frame (NTSC-M, NTSC-Japan, NTSC-4.43, PAL-M, PAL-60) or the 314th line of the frame (PAL-B,D,G,H,I, PAL-N, PAL-N-Combin, SECAM-L)

Remote Command	<code>:TRIGger[:SEquence]:TV:FMODE ENTire   ODD   EVEN</code> <code>:TRIGger[:SEquence]:TV:FMODE?</code>
Example	<code>:TRIG:TV:FMOD ENT</code> <code>:TRIG:TV:FMOD EVEN</code> <code>:TRIG:TV:FMOD ODD</code>
Dependencies	Only available in the Swept SA measurement Only appears when TV is selected as the Trigger Source

	This command is available only when Option B7B (TV trigger) is installed
Preset	<code>ENTire</code>
Range	<code>ENTire ODD EVEN</code>

## 8.1.15 Standard

Accesses the **Standard** menu keys, which select from the following TV standards:

NTSC-M	<code>MNTSc</code>
NTSC-Japan	<code>JNTSc</code>
NTSC-4.43	<code>NTSC443</code>
PAL-M	<code>MPAL</code>
PAL-B,D,G,H,I	<code>BPAL</code>
PAL-N	<code>NPAL</code>
PAL-N-Combin	<code>CPAL</code>
PAL-60	<code>PAL60</code>
SECAM-L	<code>LSEC</code>

As the TV standard is changed, the current line value is clipped as necessary to keep it valid for the chosen standard and field mode. For example, line 600 is selected in Entire Frame mode in PAL-N; if NTSC-M is selected, the line number is clipped to 525. Or, if line 313 is selected in Field 1 mode in PAL-N and NTSC-M is selected, the line number is clipped to 263. Changing back to the PAL-N standard will leave the line number at 263.

Remote Command	<code>:TRIGger[:SEquence]:TV:STANdard MNTSc   JNTSc   NTSC443   MPAL   BPAL   NPAL   CPAL   PAL60   LSEC</code> <code>:TRIGger[:SEquence]:TV:STANdard?</code>
Example	Sets NTSC-M <code>:TRIG:TV:STAN MNTS</code>  Queries Standard <code>:TRIG:TV:STAN?</code>
Dependencies	Only available in the Swept SA measurement Only appears when <b>TV</b> is selected as the Trigger Source
Preset	<code>MNTS</code>
State Saved	Saved in instrument state
Range	<code>MNTSc JNTSc NTSC443 MPAL BPAL NPAL CPAL PAL60 LSEC</code>

### 8.1.16 Trigger Center Frequency

Sets the center frequency to be used by the auxiliary receiver for the **Auxiliary Channel I/Q Magnitude** trigger.

Remote Command	<code>:TRIGger[:SEquence]:AIQMag:CENTer &lt;freq&gt;</code> <code>:TRIGger[:SEquence]:AIQMag:CENTer?</code>
Example	<code>:TRIG:AIQM:CENT 10 MHz</code>
Notes	Trigger CF + 1/2 Trigger BW < Max Trigger CF - 1/2 Trigger BW > Min
Dependencies	Only appears when Aux Channel I/Q Mag is selected as the Trigger Source
Preset	0 Hz
State Saved	Saved in instrument state
Range	-40 MHz to 40 MHz
Min	-40 MHz
Max	40 MHz

### 8.1.17 Trigger BW

Sets the information bandwidth used by the auxiliary receiver for the Auxiliary Channel I/Q Magnitude trigger.

Remote Command	<code>:TRIGger[:SEquence]:AIQMag:BANDwidth &lt;freq&gt;</code> <code>:TRIGger[:SEquence]:AIQMag:BANDwidth?</code>
Example	<code>:TRIG:AIQM:BAND 8 MHz</code>
Notes	The combined sample rate for the main and auxiliary receivers cannot exceed 100 MSa/sec. The bandwidth available to <b>Trigger BW</b> is limited to what is available after the main receiver's bandwidth (Info BW, sometimes pre-FFT BW) is set. Because of this limitation, the Max is not always achievable. The combination of " <b>Trigger Center Frequency</b> " on page 2906 and <b>Trigger BW</b> is also limited: <ul style="list-style-type: none"> <li>- Trigger CF + 1/2 Trigger BW &lt; Max</li> <li>- Trigger CF - 1/2 Trigger BW &gt; Min</li> </ul>
Dependencies	Only appears when Aux Channel I/Q Mag is selected as the Trigger Source
Preset	Bandwidth option dependent: <ul style="list-style-type: none"> <li>- No Opt: 10 MHz</li> <li>- Opt B25: 25 MHz</li> <li>- Opt S40: 40 MHz</li> </ul>

State Saved	Saved in instrument state
Range	10 Hz to Maximum
Min	10 Hz
Max	Bandwidth option & I/Q input path-dependent: <ul style="list-style-type: none"> <li>- No Opt, I or Q Only: 10 MHz, I+jQ: 20 MHz</li> <li>- Opt B25, I or Q Only: 25 MHz, I+jQ: 50 MHz</li> <li>- Opt S40, I or Q Only: 40 MHz, I+jQ: 80 MHz</li> </ul>

### 8.1.18 Zero Span Delay Compensation On/Off

In **Zero Span**, there is a natural delay in the signal path, which comes from the RBW filter. This is usually desirable, as it lets you trigger on events and also see those events, because the signal is delayed from the trigger event. However, in some cases it is desirable to eliminate this delay, so that trigger events line up exactly with the zero-time point in **Zero Span**. You can use the **Zero Span Delay Comp On/Off** feature to enable or disable zero span delay compensation.

Remote Command	<code>:TRIGger[:SEquence]:EXTernal1 EXTernal2 RFBurst:DELay:COMPensation OFF   ON</code> <code>  0   1</code>  <code>:TRIGger[:SEquence]:EXTernal1 EXTernal2 RFBurst:DELay:COMPensation?</code>
Example	<code>:TRIG:EXT1:DEL:COMP ON</code> <code>:TRIG:EXT1:DEL:COMP?</code> <code>:TRIG:EXT2:DEL:COMP ON</code> <code>:TRIG:RFB:DEL:COMP ON</code>
Dependencies	No effect except in zero-span, but not locked out in nonzero spans <b>Zero Span Delay Compensation</b> only appears in the Swept SA and List Power Step measurements. Only External and RF Burst triggers support it Does not appear in VXT If the SCPI command is sent when the control is not shown, an error is returned: -221, "Settings conflict; Feature not supported for this measurement" Only appears when External 1 2 or RF Burst is selected as the Trigger, Gate or Periodic Sync Source
Preset	<code>OFF</code>
State Saved	Saved in instrument state

### 8.1.19 Select PXI Line

Controls which `PXI_TRIG[0..7]` backplane line is used for the trigger source.  
Only found in modular analyzer products.

## 8 Trigger


### 8.1 Trigger

Remote Command	<code>:TRIGger[:SEquence]:PXI:LINE &lt;line&gt;</code> <code>:TRIGger[:SEquence]:PXI:LINE?</code>
Example	<code>:TRIG:PXI:LIN 2</code>
Preset	0
State Saved	Saved in instrument state
Range	[0,7]


#### 8.1.20 Reset Sync Monitor

Lets you reset the status of Synchronization for **Periodic** trigger This control works together with bit 6 “Waiting for Periodic Sync Source” in the `:STATus:OPERation:CONDition` status register.

When you first switch to periodic trigger, RF Burst is the default Sync Source. The register will be set immediately. A “Periodic Trigger, Waiting for Sync Source” message will be generated after 2 seconds (if the instrument is not synchronized). The system is waiting for a RF Burst signal. You can tap the screen to remove the message.

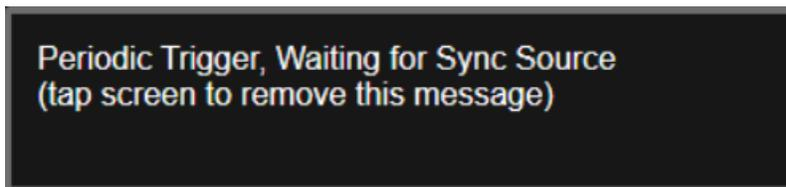

Once RF burst signal is provided and the hardware synchronized, the register will be cleared and a “Periodic Trigger Synchronized” message will be generated.

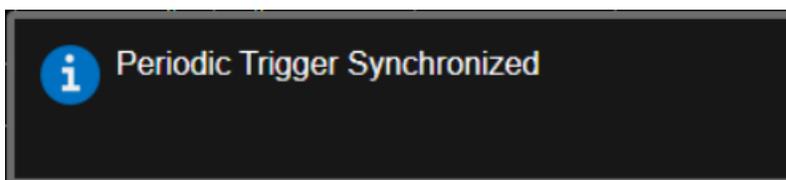

When change to a new Sync Source other than Off, take External1 as an example. You'll get the condition register set to 1 and a pop-up message again. There are the possible following conditions:

- External1 is provided: the register is cleared, message is updated.
- External1 is not provided, you set the Sync Source to Off: the register is cleared, message is cleared.
- External1 is not provided, you set the Sync Source to External2: the register and message keep the same.

- External1 is not provided, you set the Sync Source back to RF Burst: the register is cleared, message is also cleared. That’s because the instrument is synchronized to RF Burst already. If you want to make a new synchronization, you have to press “Reset Sync Monitor” you send SCPI command “:TRIG:FRAM:SMON:RES”.

Remote Command	:TRIGger[:SEquence]:FRAMe:SMONitor:RESet
Example	:TRIG:FRAM:SMON:RES
Notes	<p>This control works together with bit 1 “Waiting for Periodic Sync Source” in the :STATus:OPERation:INSTRument:CONDition status register</p> <p>A “Periodic Trigger, Waiting for Sync Source” message will be generated after pressing this control, and the status bit will be set</p> <p>A “Periodic Trigger Synchronized” message will be generated after successfully synchronizing to Sync Source, and the status bit will be cleared</p>
Dependencies	<p>Only functional when Periodic Trigger is selected as the Trigger or Gate Source, and Sync Source is not Off</p> <p>Only available in VXT models M9410A/11A/15A/16A</p>
Status Bits/OPC dependencies	Bit 6 of :STATus:OPERation:CONDition will be set after pressing this control

## 8.1.21 Trigger Optimization

Sets the trigger behavior for various desired operation conditions.

Remote Command	:TRIGger[:SEquence]:OPTimize:MODE NORMAL   MJITter
	<p>For option details, see "<a href="#">Options</a>" on page 2909</p> <p>:TRIGger[:SEquence]:OPTimize:MODE?</p>
Example	<p>Select trigger optimization for minimum jitter:</p> <p>:TRIG:OPT:MOD MJIT</p>
Dependencies	<p>Only appears in VXT models M9410A/11A/15A/16A</p> <p>Minimum jitter is functional only when digital IF BW is lower than 300 MHz. When <b>Trigger Optimization</b> is set to <b>MJITter</b> and it is not in effect, the following warning message appears in the status bar:</p> <p><b>Settings Alert; Minimum Jitter is not available</b></p>
Preset	NORMAL
State Saved	Yes
Range	NORMAL   MJITter

### Options

Trigger optimization options are:

## 8 Trigger

### 8.1 Trigger

Trigger Optimization	SCPI	Notes
Normal	<code>NORMa1</code>	No optimization
Minimum Jitter	<code>MJITter</code>	Optimizes trigger for minimum jitter. A software resample method is provided to reduce jitter, at the expense of some measurement speed  The acquisition jitter depends on the digital IF BW, the jitter will be smaller when digital IF BW gets larger. For example, when the digital IF BW is 98.3 MHz in 5GNR, the jitter varies under 15ns. When set MJITter as trigger optimization type, the jitter will be reduced to 1ns  This setting applies to all the Trigger Sources

#### 8.1.22 Trigger Settings Diagram

Lets you configure the **Trigger** system using a visual utility.

First, select what you want to configure (the Trigger, Gate or Periodic Sync Source) by tapping the box for **Trigger**, **Gate** or **Periodic Sync Source**.

Next, tap any box in the gray row to choose a Trigger Source to connect to. For **Periodic Sync Source**, you can also tap **Off**.

The **Trigger Settings Diagram** changes depending on context. The Trigger Sources that are available change depending on which input you have selected.

## 8.2 Gate Source

Contains controls that let you select and configure Gate control signals.

This tab appears in the **Trigger** menu panel for measurements that support gating. In measurements that do not support gating, this tab does not appear.

The menus under the **Gate Source** tab are the same as those under the **Trigger** tab, with these exceptions:

A smaller set of sources is available for gating.

The Free Run and Video selections are not provided for Gate

- The Trig Delay controls are not present
- Relative RF Burst Triggering is not available, just Absolute
- There is an additional control, Sync Holdoff, under Gate Source

Any changes to the settings in the setup menus under each Gate Source selection (for example: Trigger Level, Trigger Delay, etc.) also affect the corresponding settings under the Trigger menu keys. The gate system uses the Trigger SCPI commands for the setup functions, since each setting affects both Gate and Trigger.

Example: to set the Trigger Level for External 1 Trigger you use the command `:TRIG:EXT1:LEV`; to set the Trigger Level for External 1 Gate you use the same command, `:TRIG:EXT1:LEV`. By the same token, once you set the External 1 Trigger Level to 1v, it is 1v whether External 1 is being used as a Gate Source or a Trigger Source.

If a command is sent to the **TRIG** node to set the functions that are omitted from the **Gate Source** menus (Auto Trig, Holdoff, Trig Delay), it is accepted and the values stored, but the values are not visible from the **Gate Source** menus.

### 8.2.1 Select Gate Source

Selects the source of the Gate signal for doing Gated Trigger measurements.

This version of the **Select Gate Source** function is used in all measurements except the Pulse measurement application.

For the selection of the gate source the SCPI node, `:TRIGger[:SEquence]:` is replaced by `[:SENSe]:SWEep:EGATe:` as shown in the remote command below. Because you can independently set the Gate Source and the Trigger Source, there is a separate SCPI command for the Gate Source.

---

Remote Command `[:SENSe]:SWEep:EGATe:SOURce EXTerna11 | EXTerna12 | LINE | FRAME | RFBurst`

8 Trigger  
8.2 Gate Source

	TV   VIDEo   PXI   INTernal [:SENSe]:SWEep:EGATe:SOURce?
Example	:SWE:EGAT:SOUR EXT1 :SWE:EGAT:SOUR?
Dependencies	Available selections differ depending on models as below
	Benchtop Line, External 1, External 2, RF Burst, Periodic, TV (Swept SA only)
	VXT Video, Internal, External 1, External 2, RF Burst, Periodic, PXI Internal and Periodic are not available in Spectrum Analyzer Mode - Internal is available only in M9410A/11A/15A/16A and unavailable in M9420/21A
	EXM Video, Internal, External 1, External 2, RF Burst, Periodic Not available in E7760 In some models, there is no second External input. In these models, the External 2 selection is not shown and the EXTernal12 parameter will generate a "Hardware missing; Not available for this model number" error
Preset	GSM/EDGE, Phase Noise: FRAM MSR: EXT1 LTEATDD, 5G NR: - Direction is Downlink: EXT1 - Direction is Uplink: FRAM All Others: EXT1

### 8.2.2 Sync Holdoff

Applies only to the Periodic Timer. Specifies the duration that the sync source signal for the Periodic Timer must be kept false before the transition to true to be recognized as the sync timing. The periodic timer phase is aligned when the sync source signal becomes true, after the Holdoff time is satisfied.

A holdoff of 2 ms works with most WiMAX signals, but there may be cases where the burst off duration is less than 1 ms and this value will need to be changed.

Remote Command	:TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff <time> :TRIGger[:SEQuence]:FRAMe:SYNC:HOLDoff?
Example	:TRIG:FRAM:SYNC:HOLD 5 :TRIG:FRAM:SYNC:HOLD?
Dependencies	Only appears if <b>Periodic</b> is the selected Gate Source Does not appear in all Measurements. For example, does not appear in Swept SA

Preset	LTEATDD: ON, 1 ms 5G NR: ON, 250.0 us 1xEVDO: OFF, 0 ms (SCPI only) Other than above: OFF, 4 msec
State Saved	Saved in instrument state
Min	0 ms
Max	+500 ms
Auto Function	
Remote Command	<code>:TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff:STATe OFF   ON   0   1</code> <code>:TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff:STATe?</code>
Preset	LTEATDD, 5G NR: ON Others: OFF

## 8.3 Gate Settings

Contains controls that let you control the gating function. The Gate functionality is used to view signals best viewed by qualifying them with other events.

This tab appears in the **Trigger** menu panel for measurements that support gating. In measurements that do not support gating, this tab does not appear.

In the Swept SA measurement, the Gate controls, and all SCPI under the `[ :SENSe ] :SWEep :EGATe` SCPI node are unavailable when Source Mode is set to Tracking. This is because the Gate circuitry is used to sync the external source. If the Tracking Source is turned on, the Gate is turned off.

Gate setup parameters are the same for all measurements – they do not change as you change measurements. Settings like these are called “Meas Global” and are unaffected by Meas Preset.

Note that Sweep Time auto coupling rules and annotation are changed when Gate is on.

### 8.3.1 Gate On/Off

Turns the gate function on or off.

When the Gate Function is **ON**, the selected Gate Method is used along with the gate settings and the signal at the gate source to control the sweep and video system with the gate signal. Not all measurements allow every type of Gate Methods.

If the Gate were to be turned **ON** without a gate signal present, Marker Count operation would be unreliable, so it is locked out whenever Gate is on for measurements that support Marker Count.

Remote Command	<code>[ :SENSe ] :SWEep :EGATe [ :STATe ] OFF   ON   0   1</code> <code>[ :SENSe ] :SWEep :EGATe [ :STATe ] ?</code>
Example	<code>:SWE :EGAT ON</code> <code>:SWE :EGAT ?</code>
Dependencies	The function is unavailable (grayed-out) and <b>OFF</b> when: <ul style="list-style-type: none"> <li>– Gate Method is LO or Video and FFT Sweep Type is manually selected</li> <li>– Gate Method is FFT, and Swept Sweep Type is manually selected</li> <li>– Marker Count is ON</li> </ul> <p>The following are unavailable whenever Gate is on:</p> <ul style="list-style-type: none"> <li>– FFT under Sweep Type when Method=LO or Video or Swept under Sweep Type when Method=FFT</li> </ul>

---

	<ul style="list-style-type: none"> <li>- <b>Marker Count</b></li> </ul> <p>While Gate is on, the Auto Rules for Sweep Type are modified so that the choice agrees with the Gate Method: i.e., FFT for Method = FFT and Swept for Method = LO or Video</p> <p>When in the ACP measurement:</p> <ul style="list-style-type: none"> <li>- When Meas Method is RBW or FAST, this function is unavailable, and the control is grayed-out</li> <li>- Whenever Gate is on, Meas Method, RBW, or FAST is unavailable and keys for those are grayed-out</li> <li>- When Gate is on, Offset Res BW and Offset Video BW are ignored (if you set these values) and the measurement works as if all Offset Res BW and all Offset Video BW are coupled with the Res BW and the Video BW under the BW menu. When Gate is on, the Offset BW control in the Offset/Limit menu is grayed-out</li> </ul>
Preset	LTEATDD Mode: <b>ON</b> Other modes: <b>OFF</b>
State Saved	Saved in instrument state
Range	<b>OFF   ON</b>
Annunciation	Annunciated in the Meas Bar ; if Gate is on, the word "Gate:" followed by the gate type appears, where <ul style="list-style-type: none"> <li>- LO = Gated LO</li> <li>- Vid = Gated Video</li> <li>- FFT = Gated FFT</li> </ul>
Backwards Compatibility SCPI	<b>[ :SENSe ] :SWEep :TIME :GATE [ :STATE ]</b> <b>Available in SA and SCPI LC Modes</b> ESA compatibility
Backwards Compatibility Notes	In ESA, Trig Delay (On) and Gate (On) could not be active at the same time. This dependency does not exist in PSA or in the X-Series

### 8.3.2 Gate View On/Off

Turning on Gate View puts the instrument into Gate View. When in Gate View, the regular view of the current measurement traces and results are reduced vertically to about 70% of the regular height. The Zero Span window, showing the positions of the Gate, is shown between the Measurement Bar and the reduced measurement window. By reducing the height of the measurement window, some of the annotation on the Data Display may not fit and is not shown.

---

Remote Command	<b>[ :SENSe ] :SWEep :EGATe :VIEW ON   OFF   1   0</b> <b>[ :SENSe ] :SWEep :EGATe :VIEW?</b>
Example	Turn on the gate view:

## 8 Trigger

### 8.3 Gate Settings

:SWE:EGAT:VIEW ON	
Dependencies	<p>In the Swept SA measurement:</p> <p>In Gate View, the regular Sweep Time (or Acquisition Time) control is grayed out, to avoid confusing the user who wants to set Gate View Sweep Time. When pressed, the grayed-out control puts up the informational message "Use Gate View Sweep Time in the Gate menu"</p> <p>In other measurements:</p> <p>When you turn Gate View on, the lower window takes on the current state of the instrument. Upon leaving Gate View, the instrument takes on the state of the lower window</p> <p>When you turn Gate View on, the upper window Sweep Time (or Acquisition Time) is set to Gate View Sweep Time (or Gate View Acquisition Time)</p>
Couplings	<p>These couplings apply to the Swept SA measurement:</p> <ul style="list-style-type: none"> <li>- When Gate View is turned on, the instrument is set to Zero Span</li> <li>- Gate View automatically turns off whenever a Span other than Zero is selected</li> <li>- Gate View automatically turns off if you press the Swept Span toggle under Freq while in Gate View, and the instrument returns to the Span it was in before entering Gate View (even if that is Zero Span)</li> <li>- When Gate View is turned on, the sweep time used is the Gate View Sweep Time. This is set according to the rules in <a href="#">"Gate View Sweep Time" on page 2922</a></li> <li>- When Gate View is turned off, Sweep Time is set to the normal Swept SA measurement sweep time</li> <li>- If Gate View is on and Gate is off, then turning on Gate turns off Gate View</li> </ul>
Preset	OFF
State Saved	Saved in instrument state
Range	ON OFF
Annunciation	<p>For Gate View to work properly, a gate signal must be present at the selected Gate Source. Therefore, in Gate View, any time more than 2 seconds passes with no gate signal, a pop-up message "Waiting for gate input" appears. This message goes away when a gate signal appears</p>

Turning Gate View off returns the instrument to the Normal measurement view.

In Swept SA, the normal measurement view is the single-window Swept SA view. When returning to this view, the Swept SA measurement returns to the Span it was in before entering **Gate View** (even if that is Zero Span).

The **Gate View** window is triggered from the Gate Source, with zero trigger delay. Also, when updating the **Gate View** window, the Gate itself must not operate. So, it is internally shut off while the gate view window is being updated. For the Swept SA measurement, this means that the Gate is internally shut off whenever the gate view window is displayed. The measurement bar and controls continue to show the Trigger source for the main sweep window and give no indication that the Gate is shut off or that the Gate View window is triggered from the Gate Source.

When in **Gate View**, vertical lines are displayed in the Gate View window as follows:

Green lines labeled GATE START and GATE STOP are displayed at the gate edges as follows: in Edge Gate, a line is shown for Delay and one for the end of the Gate period, defined by Length. In Level Gate a line is shown only for Delay. You can adjust the position of the green lines by adjusting the gate length and the gate delay or by dragging them with your finger or the mouse.. These lines update in the Gate View window as the active function changes, even if the window is not being updated. In Gated LO and Gated Video, these lines are positioned relative to the delay reference line (not relative to 0 time). In Gated FFT, their location is relative to the left edge of the screen.

A blue line is displayed showing the delay reference, that is, the reference point for the Gate Delay within the Zero Span window. The blue line represents where (in time) the effective location of the gate start would be if the gate were programmed to zero delay.

- A second blue line is displayed at the location that represents the boundary between "compensated IF" and "compensated LO" operating modes. The second blue line is labeled "MIN FAST" because it represents the minimum Gate Delay for fast Gated LO operation. This line is only displayed in Gated LO. You cannot scroll (knob) or decrement (down key) the Gate Delay to less than that represented by the position of this line, it can only be set below this position manually, although once there it can be moved freely with the knob while below the line.

A yellow line in the Gated Video case only, is displayed at  $B_{length}$ , where  $B_{length}$  is the display point (bucket) length for the swept trace, which is given by the Sweep Time (or Acquisition Time) for that trace divided by number of Points - 1. So, it is referenced to 0 time, not to the delay reference. This line is labeled NEXT PT (it is not shown in the figure above because the figure above is for Gated LO). The yellow line represents the edge of a display point (bucket). Normally in Gated Video, the bucket length must be selected so that it exceeds the off time of the burst. There is another way to use the instrument in Gated Video measurements, and that is to set the bucket width much shorter than the off time of the burst. Then use the Max Hold trace function to fill in "missing" buckets more slowly. This allows you to see some of the patterns of the Gated Video results earlier, though seeing a completely filled-in spectrum later.

### 8.3.3 Gate Delay

Controls the length of time from the time the gate condition goes True until the gate is turned on.


Remote Command	<code>[ :SENSe ] :SWEp :EGATe :DELay &lt;time&gt;</code>
Example	<code>:SWE :EGAT :DELay 500ms</code> <code>:SWE :EGAT :DELay ?</code>

8 Trigger  
8.3 Gate Settings

Notes	Units of time are required, or no units; otherwise, an invalid suffix error message is generated
Preset	WiMAX OFDMA: 71 us GSM/EDGE: 600 us WLAN: 500 us 5G NR: 5 ms Others: 57.7 us
State Saved	Saved in instrument state
Min	0.0 us
Max	100 s
Backwards Compatibility SCPI	<code>[ :SENSe]:SWEep:TIME:GATE:DELay</code> <i>This backward compatibility command is available in SA and SCPI LC Modes</i> ESA compatibility

### 8.3.4 Gate Length

Controls the length of time that the gate is on after it opens.

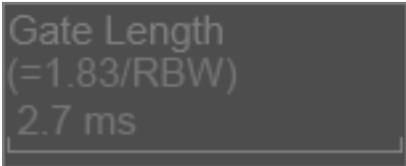Remote Command	<code>[ :SENSe]:SWEep:EGATe:LENGth &lt;time&gt;</code> <code>[ :SENSe]:SWEep:EGATe:LENGth?</code>
Example	<code>:SWE:EGAT:LENG 1</code> <code>:SWE:EGAT:LENG?</code>
Notes	Units of time are required, or no units; otherwise, an invalid suffix error message is generated
Dependencies	Grayed-out when Gate Method is set to <b>FFT</b> , in which case the label changes to that shown below 
	The control is also grayed-out if Gate Control = <b>LEVe1</b>
Preset	WiMAX OFDMA: 50 us GSM/EDGE: 200 us WLAN: 1.54 ms Others: 461.6 us
State Saved	Saved in instrument state
Min	100 ns
Max	5 s
Backwards Compatibility SCPI	<code>[ :SENSe]:SWEep:TIME:GATE:LENGth</code> <i>This backward compatibility command is available in SA and SCPI LC Modes</i>

---

 ESA compatibility
 

---

### 8.3.5 Gate Method

Lets you choose one of the three different types of gating. Not all types of gating are available for all measurements.

Remote Command	<code>[ :SENSe ] :SWEep :EGATe :METHod LO   VIdEo   FFT</code> For option details, see " <a href="#">"LO" on page 2919</a> ", " <a href="#">"Video" on page 2919</a> " or " <a href="#">"FFT" on page 2920</a> " <code>[ :SENSe ] :SWEep :EGATe :METHod ?</code>
Example	<code>:SWE :EGAT :METH FFT</code>
Dependencies	This function is only available in the Swept SA measurement in Spectrum Analyzer Mode This control is unavailable when Gate is On and FFT Sweep Type manually selected When selected, Sweep Type is forced to Swept, and the FFT selection in Sweep Type is grayed-out Only the <a href="#">FFT</a> method is supported in non-SA products Only the <a href="#">FFT</a> method is supported by VXT models M9410A/11A/15A/16A
Preset	<a href="#">LO</a>
State Saved	Saved in instrument state
Range	<a href="#">Video</a>   <a href="#">LO</a>   <a href="#">FFT</a>
Annunciation	In Meas Bar

#### LO

In [LO](#) gating, when Gate is [ON](#), the LO sweeps whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source.

This form of gating is more sophisticated, and results in faster measurements. With Gated LO, the instrument only sweeps while the gate conditions are satisfied. This means that a sweep could take place over several gate events. It would start when the gate signal goes true and stop when it goes false, and then continue when it goes true again. But since the LO is sweeping as long as the gate conditions are satisfied, the sweep typically finishes much more quickly than with Gated Video.

When in zero span, there is no actual sweep performed. But data is only taken while the gate conditions are satisfied. So even though there is no sweep, the gate settings will impact when data is acquired.

#### Video

In [Video](#) gating, when Gate is [ON](#), the video signal is allowed to pass through whenever the gate conditions as specified in the Gate menu are satisfied by the

signal at the Gate Source.

This form of gating may be thought of as a simple switch, which connects the signal to the input of the spectrum analyzer. When the gate conditions are satisfied, the switch is closed, and when the gate conditions are not satisfied, the switch is open. So we only look at the signal while the gate conditions are satisfied.

With this type of gating, you usually set the instrument to sweep very slowly. In fact, a general rule is to sweep slowly enough that the gate is guaranteed to be closed at least once per data measurement interval (bucket). Then if the peak detector is used, each bucket will represent the peak signal as it looks with the gate closed.

## FFT

In **FFT** gating, when Gate is **ON**, an FFT is performed whenever the gate conditions as specified in the Gate menu are satisfied by the signal at the Gate Source. This is an FFT measurement that begins when the gate conditions are satisfied. Since the time period of an FFT is approximately  $1.83/\text{RBW}$ , you get a measurement that starts under predefined conditions and takes place over a predefined period. So, in essence, this is a gated measurement. You have limited control over the gate length, but it works in FFT sweeps, which the other two methods do not.

Gated FFT is not possible in zero span since the instrument is not sweeping, so in zero span the Gated LO method is used. Data is still only taken while the gate conditions are satisfied, so the gate settings do impact when data is acquired.

The Gate Length will be  $1.83/\text{RBW}$ .

This is a convenient way to make a triggered FFT measurement under control of an external gating signal.

### 8.3.6 Control Edge/Level

Sets the method of controlling the gating function from the gating signal.

- EDGE**            The gate opens (after the Delay) on the selected edge (for example, positive) of the gate signal and closes on the alternate edge (for example, negative)
- LEVe1**           The gate opens (after the Delay) when the gate signal has achieved a certain level and stays open as long as that level is maintained

---

Remote Command    `[ :SENSe ] :SWEp:EGATe:CONTRol EDGE | LEVe1`  
`[ :SENSe ] :SWEp:EGATe:CONTRol?`

---

Example             `:SWE:EGAT:CONT EDGE`

---


Dependencies        If the Gate Method is **FFT**, this control is grayed-out and **EDGE** is selected  
                           If the Gate Source is TV, Frame, or Line, this control is grayed-out and **EDGE** is selected

Preset	EDGE
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<p><code>[ :SENSe ] :SWEep :EGATe :TYPE</code></p> <p>This backwards-compatibility command is available when the primary command is available</p> <p><code>[ :SENSe ] :SWEep :TIME :GATE :TYPE</code></p> <p>This backwards-compatibility command is available in SA and SCPILC Modes ESA Compatibility</p>

### 8.3.7 Gate Holdoff

Lets you increase or decrease the wait time after a gate event ends before the instrument will respond to the next gate signal.

After any Gate event finishes, the instrument must wait for the sweep system to settle before it can respond to another Gate signal. The instrument calculates a "wait time," taking into account a number of factors, including RBW and Phase Noise Optimization settings. The goal is to achieve the same accuracy when gated as in ungated operation. The figure below illustrates this concept:

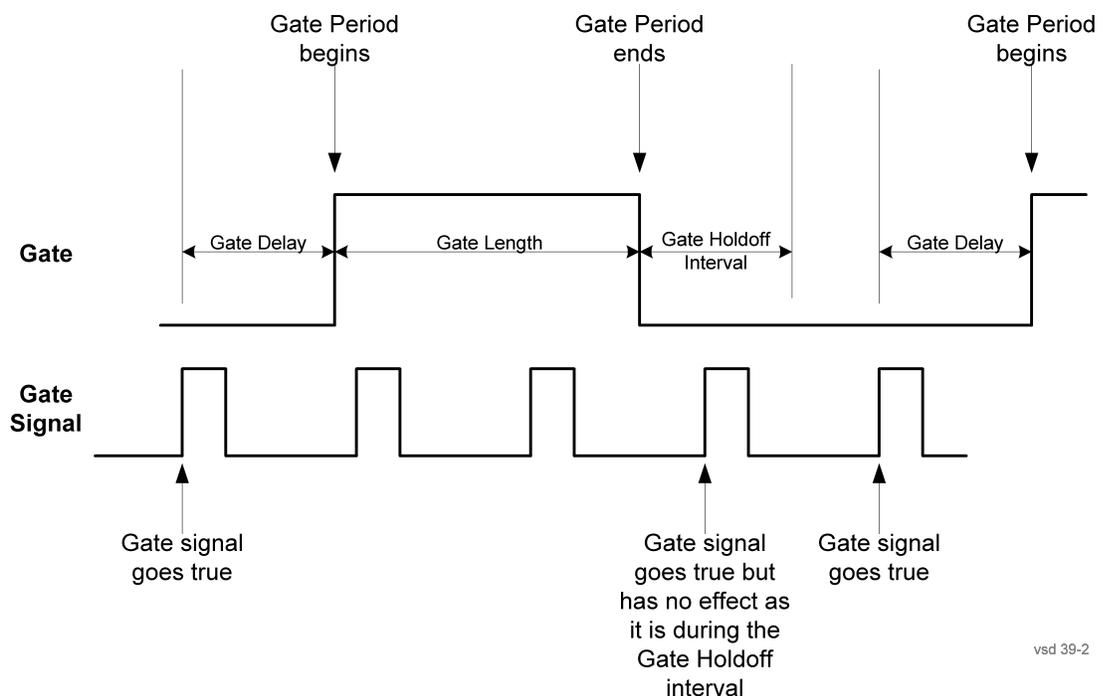

vsd 39-2

When **Gate Holdoff** is Auto, the wait time calculated by the instrument is used. When Gate Time is in Manual, the user may adjust the wait time, usually decreasing it in order to achieve greater speed, but at the risk of decreasing accuracy.

8 Trigger  
8.3 Gate Settings

When the **Method** control is set to **Video** or **FFT**, the **Gate Holdoff** function has no effect.

In measurements that do not support "**Auto Function**" on page 2922, the value shown when Auto is selected is "---" and the manually set holdoff is returned to a query.

Remote Command	<code>[ :SENSe]:SWEep:EGATe:HOLDoff &lt;time&gt;</code> <code>[ :SENSe]:SWEep:EGATe:HOLDoff?</code>
Example	<code>:SWE:EGAT:HOLD 0.0002</code> <code>:SWE:EGAT:HOLD?</code>
Couplings	<p>When <b>Gate Holdoff</b> is <b>Auto</b>, the <b>Gate Holdoff</b> control shows the value calculated by the instrument for the wait time</p> <p>Pressing the <b>Gate Holdoff</b> control while it is in <b>Auto</b> and not selected, causes the control to become selected and allows the user to adjust the value. If the value is adjusted, the setting changes to <b>Man</b></p> <p>Pressing the <b>Gate Holdoff</b> key, while it is in <b>Auto</b> and selected, does not change the value of <b>Gate Holdoff</b>, but causes the setting to change to <b>Man</b>. Now the user can adjust the value</p> <p>Pressing the control while it is in <b>Man</b> and selected, cause the value to change back to <b>Auto</b></p> <p>Pressing the control while it is in <b>Man</b> and not selected, causes the control to become selected and allows the user to adjust the value</p> <p>When <b>Method</b> is set to <b>Video</b> or <b>FFT</b>, the <b>Gate Holdoff</b> function has no effect</p>
Preset	Auto
State Saved	Saved in instrument state
Min	1 μsec
Max	1 sec

### Auto Function

Remote Command	<code>[ :SENSe]:SWEep:EGATe:HOLDoff:AUTO OFF   ON   0   1</code> <code>[ :SENSe]:SWEep:EGATe:HOLDoff:AUTO?</code>
Example	<code>:SWE:EGAT:HOLD:AUTO ON</code> <code>:SWE:EGAT:HOLD:AUTO?</code>
Preset	Auto/On
State Saved	Saved in instrument state
Range	Auto Man

### 8.3.8 Gate View Sweep Time

Controls the Sweep Time in the Gate View window. To provide an optimal view of the gate signal, the instrument initializes **Gate View Sweep Time** based on the current settings of Gate Delay and Gate Length.

NOTE

Since **Gate View Sweep Time** is used to calculate Gate Delay and Gate Length increments, it is maintained even when not in **Gate View**.

NOTE

In instruments without sweeping hardware such as some modular analyzers, this control may be labeled **Gate View Acquisition Time**

Remote Command	<code>[ :SENSe ] :SWEep:EGATe:TIME &lt;time&gt;</code> <code>[ :SENSe ] :SWEep:EGATe:TIME?</code>
Example	<code>:SWE:EGAT:TIME 500 ms</code>
Dependencies	Gate View Sweep Time is initialized: <ul style="list-style-type: none"> <li>- On Preset (after initializing delay and length)</li> <li>- Every time the Gate Method is set/changed</li> </ul> <p>Additionally, in the Swept SA measurement, whenever you do a Preset, or leave Gate View, the instrument remembers the Gate Delay and Gate Length settings. Then, when returning to Gate View, if the current Gate Delay and/or Gate Length do not match the remembered values Gate View Sweep Time is re-initialized</p>
Preset	WiMAX OFDMA: 5 ms GSM/EDGE: 1 ms 5G NR: 10 ms Others: 800 $\mu$ s
State Saved	Saved in instrument state
Min	1 $\mu$ s
Max	6000 s
Annotation	The gate view Sweep Time is displayed in the lower-right corner of the gate view window

### 8.3.9 Gate View Start Time

Controls the time at the left edge of the Gate View.

Remote Command	<code>[ :SENSe ] :SWEep:EGATe:VIEW:START &lt;time&gt;</code> <code>[ :SENSe ] :SWEep:EGATe:VIEW:START?</code>
Example	<code>:SWE:EGAT:VIEW:STAR 10ms</code>
Notes	Units of time are required or no units; otherwise, an invalid suffix error message is generated
Preset	0 ms
State Saved	Saved in instrument state
Min	0
Max	500 ms

### 8.3.10 Gate Delay Compensation

Allows you to select an RBW-dependent value by which to adjust the gate delay, to compensate for changes in the delay caused by RBW effects. You can select between uncompensated operation and two types of compensation:

<b>Uncompensated</b>	<b>OFF</b>
<b>Delay Until RBW Settled</b>	<b>SETTled</b>
<b>Compensate for RBW Group Delay</b>	<b>GDElay</b>

For full details of these options, see ["More Information" on page 2924](#)

Remote Command	<code>[ :SENSe]:SWEep:EGATe:DELay:COMPensation:TYPE OFF   SETTled   GDElay</code> <code>[ :SENSe]:SWEep:EGATe:DELay:COMPensation:TYPE?</code>
Example	<code>:SWE:EGAT:DEL:COMP:TYPE SETT</code> <code>:SWE:EGAT:DEL:COMP:TYPE?</code>
Notes	<p>Although this function is Meas Global, there are some measurements that do not support this function. In those measurements the control is not displayed, and the operation will be Uncompensated</p> <p>If some but not all measurements in a Mode support this function, then selecting a measurement that does not support it will not change the Meas Global selection; it will simply be “Uncompensated” while in that measurement. The SCPI command is still accepted while in that measurement</p> <p>If Gate Delay Compensation is not supported at all within a particular mode, the control is not displayed, and if the SCPI command is sent while in a measurement within that mode, an “Undefined Header” message is generated</p> <p>Note that, for modular products such as EXM and VXT, this function is not supported. In those products the control is not displayed and the SCPI is ignored, although it is accepted without error</p>
Preset	TD-SCDMA, LTEA FDD/TDD, 5G NR Modes: <b>GDElay</b> All other Modes: <b>SETTled</b>
State Saved	Saved in instrument state
Range	<b>OFF   SETTled   GDElay</b>

#### More Information

Selecting **Uncompensated** means that the actual gate delay is as you set it.

Selecting **Delay Until RBW Settled** causes the gate delay to be increased above the user setting by an amount equal to  $3.06/\text{RBW}$ . This compensated delay causes the GATE START and GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** control does *not* change.

**Delay Until RBW Settled** allows excellent measurements of gated signals, by allowing the IF to settle following any transient that affects the burst. Excellent measurements also require that the analysis region not extend into the region affected by the falling edge of the burst. Thus, excellent measurements can only be made over a width that declines with narrowing RBWs, which is achieved by decreasing the gate length below the user setting by an amount equal to  $2.53/\text{RBW}$ . Therefore, for general purpose compensation, you will still want to change the gate length with changes in RBW even if the gate delay is compensated. The compensated Gate Length is limited by the instrument so that it will never go below 10% of the value shown on the Gate Length key, as otherwise the sweep times could get very long. Anytime the **Gate Length** and **RBW** values combine in such a way that this limiting takes place, a warning is displayed. For measurements that contain multiple sweeps with different RBW like SEM and SPUR, the smallest RBW is used for this limiting.

Selecting **Compensate for RBW Group Delay** causes the gate delay to be increased above the user setting by an amount equal to  $1.81/\text{RBW}$ . This compensated delay causes the GATE START, GATE STOP lines on the display to move by the compensation amount, and the actual hardware gate delay to be increased by the same amount. All the other gate lines (for example, MIN FAST) are unaffected. If the RBW subsequently changes, the compensation is readjusted for the new RBW. The value shown on the **Gate Delay** control does *not* change. **Compensate for RBW Group Delay** also includes gate length compensation; the gate length itself is adjusted as necessary to attempt to compensate for delay effects imposed by the RBW.

**Compensate for RBW Group Delay** is similar to **Delay Until RBW Settled** but compensates for the group delay of the RBW filter, rather than the filter settling time. As the RBW gets narrow, this can allow the settling tail of the RBW to affect the beginning part of the gated measurement and allow the beginning of the RBW settling transient to affect the end of the gated measurement. These two effects are symmetric because the RBW response is symmetric. Because the gate length is not automatically compensated, some users might find this compensation to be more intuitive than compensation for RBW settling.

### 8.3.11 Min Fast Position Query (Remote Query Only)

Queries the position of the MIN FAST line, relative to the delay reference (REF) line. See "[Gate View On/Off](#)" on page 2915. If this query is sent while not in Gate view, the MinFast calculation is performed based on the current values of the appropriate parameters and the result is returned. Reading this value lets you set an optimal gate delay value for the current measurement setup.

---

Example	<code>:SWE:EGAT:MIN?</code>
Backwards Compatibility SCPI	<code>[ :SENSe ] :SWEep:EGATe:MINFast?</code>

---

### 8.3.12 Gate Preset (Remote Command Only)

Presets the time-gated spectrum analysis capability.

This command sets gate parameter values to the ESA preset values, as follows:

- Gate trigger type = edge
- Gate polarity = positive
- Gate delay = 1 us
- Gate length = 1 us

---

Backwards Compatibility	<code>[ :SENSe ] :SWEp :TIME :GATE :PRESet</code>
SCPI	ESA Compatibility

### 8.3.13 Gate Level (Remote Command Only)

Sets the gate input transition point level for the external **TRIGGER** inputs on the front and rear panel. This is a legacy command for PSA compatibility. It is simply an alias to the equivalent trigger level command.

---

Notes	This command is simply an alias to <code>:TRIGger [ :SEQuence ] :EXTeRnal [ 1 ]   2 :LEVe1</code>
Backwards Compatibility	<code>[ :SENSe ] :SWEp :EGATe :EXTeRnal [ 1 ]   2 :LEVe1 &lt;voltage&gt;</code>
SCPI	<code>[ :SENSe ] :SWEp :EGATe :EXTeRnal [ 1 ]   2 :LEVe1?</code>

### 8.3.14 Gate Polarity (Remote Command Only)

Sets the polarity for the gate signal. This setup is now done using the gate trigger's slope setting.

When **POSitive** is selected, a positive-going edge (Edge) or a high voltage (Level) will satisfy the gate condition, after the delay set with the Gate Delay key. When **NEGative** is selected, a negative-going edge (Edge) or a low voltage (Level) will satisfy the gate condition after the delay.

---

Example	<code>:SWE :EGAT :POL NEG</code>
	<code>:SWE :EGAT :POL ?</code>

---

Preset	<b>POSitive</b>
--------	-----------------

---

State Saved	Saved in instrument state
-------------	---------------------------

---

Backwards Compatibility SCPI	<p><code>[ :SENSe]:SWEep:EGATE:POLarity NEGative   POSitive</code></p> <p><code>[ :SENSe]:SWEep:EGATE:POLarity?</code></p> <p>This backwards-compatibility command is available in Modes that support Gate Polarity parameter</p> <p><code>[ :SENSe]:SWEep:TIME:GATE:POLarity</code></p> <p>This backwards-compatibility command is available in SA and SCPI LC Modes</p> <p>ESA compatibility</p>
------------------------------------	--

---

Preset	<code>HIGH</code>
--------	-------------------

---

Backwards Compatibility SCPI	<p><code>[ :SENSe]:SWEep:TIME:GATE:LEVel HIGH   LOW</code></p> <p><code>[ :SENSe]:SWEep:TIME:GATE:LEVel?</code></p> <p>ESA compatibility</p>
---------------------------------	--

## 8.4 Enables the hardware accelerated stepped FFT gating feature (Display only)

Enables or disables the hardware-accelerated stepped FFT gating feature:

- Enabling the Hardware Acceleration feature means that the Stepped FFT algorithm will run on the FPGA for configurations where speed improvements are possible
- Disabling the hardware-accelerated stepped FFT gating means the Stepped FFT software algorithm will always run on the CPU instead of the FPGA

When enabled it is only used when applicable and determined by the current sweep configuration.

The default value is **ON** and its value is power-on persistent.

Remote Command	<code>[ :SENSe ] :SWEep:EGATe:HACCeLerate:ENABle OFF   ON   0   1</code>
Example	<code>:SWEep:EGATe:HACCeLerate:ENABle ON</code>
Notes	Value <b>ON</b> means the hardware accelerated stepped FFT gating is used intelligently Value <b>OFF</b> means the hardware accelerated stepped FFT gating is always disabled
Dependencies	Only valid in ACP, CHP and SEM measurements
State Saved	Saved in instrument state

## 8.5 Periodic Sync Src

Contains controls that let you select and configure the sync signal for the **Periodic Timer** Trigger.

For convenience controls for adjusting the level and slope of the selected sync source are provided here. Note that these settings match those in the **Trigger** and **Gate Source** menus; that is, each trigger source has only one value of level and slope, regardless of which menu it is accessed from.

### 8.5.1 Select Periodic Timer Sync Source

Selects a signal source for you to synchronize your periodic timer trigger to, otherwise you are triggering at some arbitrary location in the frame. Synchronization reduces the precision requirements on the setting of the period.

Note that, with Sync Source **OFF**, the timing will drift unless the signal source frequency is locked to the instrument frequency reference.

Remote Command	<code>:TRIGger[:SEquence]:FRAMe:SYNC EXTErnal1   EXTErnal2   RFBurst   PXI   INTernal   OFF</code> <code>:TRIGger[:SEquence]:FRAMe:SYNC?</code>
Example	<code>:TRIG:FRAM:SYNC EXT1</code> <code>:TRIG:FRAM:SYNC EXT2</code> <code>:TRIG:FRAM:SYNC RFB</code> <code>:TRIG:FRAM:SYNC OFF</code>
Dependencies	<b>PXI</b> and <b>INTernal</b> triggers are only found in modular analyzers such as VXT Not available in E7760 or UXM In some models, there is no second External input. In these models, the External 2 selection is not shown, and the <b>EXTErnal2</b> parameter generates a “Hardware missing; Not available for this model number” message
Preset	<b>OFF</b> GSM/EDGE, LTE, LTETDD, 5G NR: <b>RFBurst</b>
State Saved	Saved in instrument state
Backwards Compatibility SCPI	<code>:TRIGger[:SEquence]:FRAMe:SYNC EXTErnal</code> For backwards-compatibility, the parameter <b>EXTErnal</b> is mapped to <b>EXTErnal1</b>

## 8.6 Auto/Holdoff

Contains controls that let you adjust Auto Trigger and Trigger Holdoff parameters  
This tab does not appear in Spectrum Analyzer Mode in VXT model M9421A.

### 8.6.1 Trig Holdoff

Sets the holdoff time between triggers. When the trigger condition is satisfied, the trigger occurs, the delay begins, and the holdoff time begins. New trigger conditions will be ignored until the holdoff time expires. For a free-running trigger, the holdoff value is the minimum time between triggers.

Remote Command	<code>:TRIGger[:SEquence]:HOLDoff &lt;time&gt;</code> <code>:TRIGger[:SEquence]:HOLDoff?</code>
Example	<code>:TRIG:HOLD:STAT ON</code> <code>:TRIG:HOLD 100 ms</code>
Dependencies	Unavailable if the selected Input is <b>BBIQ</b> . If this is the case, the control is grayed-out if it is pressed the informational message "Feature not supported for this Input" is displayed. If the SCPI command is sent, the error "Settings conflict; Feature not supported for this Input" is generated
Preset	All modes except GSM/EDGE, LTEAFDD/TDD and 5G NR: 100 ms GSM/EDGE, Bluetooth: 10 $\mu$ s LTEATDD: 19 ms 5G NR: 4 ms
State Saved	Saved in instrument state
Min	0 s
Max	0.5 s VXT models M9410A/11A/15A/16A: 2.86 s
Auto Function	
Remote Command	<code>:TRIGger[:SEquence]:HOLDoff:STATe OFF   ON   0   1</code> <code>:TRIGger[:SEquence]:HOLDoff:STATe?</code>
Preset	All modes but GSM/EDGE: <b>OFF</b> GSM/EDGE mode: <b>ON</b>

### 8.6.2 Auto Trig

Sets the time that the instrument will wait for the trigger conditions to be met. If they are not met after that much time, then the instrument is triggered anyway.

Remote Command	<code>:TRIGger[:SEquence]:ATRigger &lt;time&gt;</code> <code>:TRIGger[:SEquence]:ATRigger?</code>
Example	<code>:TRIG:ATR:STAT ON</code> <code>:TRIG:ATR 100 ms</code>
Notes	The "time that the instrument will wait" starts when the instrument is ready for a trigger, which may be hundreds of ms after the data acquisition for a sweep is done. The "time" ends when the trigger condition is satisfied, not when the delay ends
Dependencies	Not available in Real Time Spectrum Analyzer Mode
Preset	Off, 100 ms
State Saved	Saved in instrument state
Min	1 ms
Max	100 s
Auto Function	
Remote Command	<code>:TRIGger[:SEquence]:ATRigger:STATe OFF   ON   0   1</code> <code>:TRIGger[:SEquence]:ATRigger:STATe?</code>
Preset	OFF

### 8.6.3 Holdoff Type

Enables you to set the Trigger **Holdoff Type**.

#### NOTE

**Holdoff Type** is not supported by all measurements. If the current measurement does not support it, this control does not appear, and **Holdoff Type** is Normal. If **Holdoff Type** SCPI is sent while in such a measurement, the SCPI is accepted and the setting remembered, but it has no effect until a measurement is in force that supports **Holdoff Type**.

Trigger Holdoff Type functionality

<b>NORMa1</b>	This is the "oscilloscope" type of trigger holdoff and is the setting when the <b>Holdoff Type</b> control does not appear. In this type of holdoff, no new trigger will be accepted until the holdoff interval has expired after the previous trigger
<b>ABOVe</b>	If the trigger slope is positive, a trigger event is generated only if the signal characteristic of interest crosses the trigger threshold (with positive slope) and then remains above the threshold for at least the holdoff time. For negative slope, the trigger event is generated if the signal characteristic crosses the threshold (with negative slope) after having been above the threshold for at least the holdoff time. In either case, the trigger event is associated with the time the level was crossed
<b>BELow</b>	If the trigger slope is positive, a trigger event is generated only if the signal characteristic of interest crosses the trigger threshold (with positive slope) after

8 Trigger  
 8.6 Auto/Holdoff

having been below the threshold for at least the holdoff time. For negative slope, the trigger event is generated if the signal characteristic crosses the threshold (with negative slope) and then remains below the threshold for at least the holdoff time. In either case, the trigger event is associated with the time the level was crossed

Remote Command	:TRIGger[:SEquence]:HOLDoff:TYPE NORMa1   ABOVe   BELow :TRIGger[:SEquence]:HOLDoff:TYPE?	
Example	:TRIG:HOLD:TYPE NORM	
Preset	<b>Modes</b>	<b>Setting</b>
	GSM/EDGE	BELow
	Bluetooth	
	All others	NORMa1
State Saved	Saved in instrument state	

## 9 Programming the Instrument

This section provides information about the instrument's SCPI programming interface. You can also operate the instrument remotely using some legacy programming languages by running the N9061C Remote Language Compatibility measurement application and the N9062C SCPI Language Compatibility measurement application.

## 9.1 List of Supported SCPI Commands

The SCPI commands available while using this application are listed below.

To find a command in the list, search according to its first alphanumeric character, ignoring any leading ":" or "[" characters. The sole exception to this is the asterisk [\*] prefix, identifying IEEE 488.2 Common commands and queries; all these appear at the start of the list.

Note that most commands also have query forms. In cases where a command and its query are described in the same topic, the list below includes the command and query as a *single* item, with no suffix.

Suffix	Interpretation
No suffix	Command & Query, <i>or</i> Command only For details, click the link to view the command definition
?	Query only

\*

- \*CAL
- \*CAL
- \*CLS
- \*ESE
- \*ESR?
- \*IDN?
- \*OPC
- \*OPT?
- \*RCL
- \*RST
- \*SAV
- \*SRE
- \*STB?
- \*TRG
- \*TST?
- \*WAI

A

- ABORt
- ABORt
- ABORt
- ABORt

**C**

```

CALCulate[:<meas>]:MATH?
CALCulate:<meas>:MATH
CALCulate:<meas>:MTRace
CALCulate:<meas>:PLAY:MODE
CALCulate:<meas>:PLAY:SRATe
CALCulate:<meas>:PLAY:START
CALCulate:<meas>:PLAY:STEP:FORWard
CALCulate:<meas>:PLAY:STOP
CALCulate:ACPower:LIMit:STATe
CALCulate:ACPower:MARKer[1]|2|...|12:MAXimum
CALCulate:ACPower:MARKer[1]|2|...|12:MAXimum:LEFT
CALCulate:ACPower:MARKer[1]|2|...|12:MAXimum:NEXT
CALCulate:ACPower:MARKer[1]|2|...|12:MAXimum:RIGHT
CALCulate:ACPower:MARKer[1]|2|...|12:MINimum
CALCulate:ACPower:MARKer[1]|2|...|12:MODE
CALCulate:ACPower:MARKer[1]|2|...|12:PTPeak
CALCulate:ACPower:MARKer[1]|2|...|12:REFerence
CALCulate:ACPower:MARKer[1]|2|...|12:TRACe
CALCulate:ACPower:MARKer[1]|2|...|12:X
CALCulate:ACPower:MARKer[1]|2|...|12:X:POSition
CALCulate:ACPower:MARKer[1]|2|...|12:Y?
CALCulate:ACPower:MARKer:AOFF
CALCulate:ACPower:MARKer:COUPle[:STATe]
CALCulate:ACPower:OFFSet[1]|2[:OUTer]:LIST:LIMit:NEGative
[:UPPer]:DATA
CALCulate:ACPower:OFFSet[1]|2[:OUTer]:LIST:LIMit:POSitive
[:UPPer]:DATA
CALCulate:CEVM:PLAY:SRATe
CALCulate:CEVM:PLAY:START
CALCulate:CEVM:RESult:NAMes?
CALCulate:CHPower:LIMit:POWER
CALCulate:CHPower:LIMit:POWER:FAIL?
CALCulate:CHPower:LIMit:POWER:STATe
CALCulate:CHPower:LIMit:PSDensity
CALCulate:CHPower:LIMit:PSDensity:STATe
CALCulate:CHPower:LIMit:PSD:FAIL?
CALCulate:CHPower:MARKer[1]|2|...|12:MAXimum
CALCulate:CHPower:MARKer[1]|2|...|12:MODE
CALCulate:CHPower:MARKer[1]|2|...|12:REFerence
CALCulate:CHPower:MARKer[1]|2|...|12:TRACe
CALCulate:CHPower:MARKer[1]|2|...|12:X
CALCulate:CHPower:MARKer[1]|2|...|12:X:POSition
CALCulate:CHPower:MARKer[1]|2|...|12:Y?
CALCulate:CHPower:MARKer:AOFF
CALCulate:CLIMits:FAIL?
CALCulate:DATA<n>:COMPRESS?
  
```

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

CALCulate:DATA[1]|2|...|6:PEAKs?  
 CALCulate:EVM:DATA<m>?  
 CALCulate:EVM:DATA<m>:POINTs?  
 CALCulate:EVM:DATA<m>:RAW?  
 CALCulate:EVM:DATA<m>:RAW:POINTs?  
 CALCulate:EVM:DATA<m>:TABLE:STRing?  
 CALCulate:EVM:MARKer[1]|2|...|12:CFORmat  
 CALCulate:EVM:MARKer[1]|2|...|12:CPSearch[:STATe]  
 CALCulate:EVM:MARKer[1]|2|...|12:FCOut[:STATe]  
 CALCulate:EVM:MARKer[1]|2|...|12:FCOut:X?  
 CALCulate:EVM:MARKer[1]|2|...|12:FUNCTion  
 CALCulate:EVM:MARKer[1]|2|...|12:FUNCTion:BAND:CENTer  
 CALCulate:EVM:MARKer[1]|2|...|12:FUNCTion:BAND:LEFT  
 CALCulate:EVM:MARKer[1]|2|...|12:FUNCTion:BAND:RIGHT  
 CALCulate:EVM:MARKer[1]|2|...|12:FUNCTion:BAND:SPAN  
 CALCulate:EVM:MARKer[1]|2|...|12:FUNCTion:BDensity:CTYPE  
 CALCulate:EVM:MARKer[1]|2|...|12:FUNCTion:BPOwer:CTYPE  
 CALCulate:EVM:MARKer[1]|2|...|12:MAXimum  
 CALCulate:EVM:MARKer[1]|2|...|12:MAXimum:LEFT  
 CALCulate:EVM:MARKer[1]|2|...|12:MAXimum:NEXT  
 CALCulate:EVM:MARKer[1]|2|...|12:MAXimum:PREVious  
 CALCulate:EVM:MARKer[1]|2|...|12:MAXimum:RIGHT  
 CALCulate:EVM:MARKer[1]|2|...|12:MINimum  
 CALCulate:EVM:MARKer[1]|2|...|12:REFerence  
 CALCulate:EVM:MARKer[1]|2|...|12:WINDow  
 CALCulate:EVM:MARKer[1]|2|...|12:X  
 CALCulate:EVM:MARKer[1]|2|...|12[:X]:POSition  
 CALCulate:EVM:MARKer[1]|2|...|12:X:UNIT?  
 CALCulate:EVM:MARKer[1]|2|...|12:Y:IMAGinary  
 CALCulate:EVM:MARKer[1]|2|...|12:Y[:REAL]  
 CALCulate:EVM:MARKer[1]|2|...|12:Y:UNIT?  
 CALCulate:EVM:MARKer[1]|2|...|12:Z  
 CALCulate:EVM:MARKer[1]|2|...|12:Z:UNIT?  
 CALCulate:EVM:MARKer:COUPlE[:STATe]  
 CALCulate:EVM:WIND[1]|2|...|6:ACPpower:CARRier:FILTer:RRC:ALPHA  
 CALCulate:EVM:WINDow  
 [1]|2|...|6:ACPpower:CARRier:BANDwidth|BWIDth:INTegration  
 CALCulate:EVM:WINDow[1]|2|...|6:ACPpower:CARRier:FILTer:RRC:STATe  
 CALCulate:EVM:WINDow[1]|2|...|6:ACPpower:CARRier:FREQUency  
 CALCulate:EVM:WINDow[1]|2|...|6:ACPpower:OFFSet:FILTer:RRC:STATe  
 CALCulate:EVM:WINDow  
 [1]|2|...|6:ACPpower:OFFSet:LIST:BANDwidth|BWIDth:INTegration  
 CALCulate:EVM:WINDow  
 [1]|2|...|6:ACPpower:OFFSet:LIST:FILTer:RRC:ALPHA  
 CALCulate:EVM:WINDow[1]|2|...|6:ACPpower:OFFSet:LIST:FREQUency  
 CALCulate:EVM:WINDow[1]|2|...|6:ACPpower:OFFSet:LIST:RCARRier  
 CALCulate:EVM:WINDow[1]|2|...|6:ACPpower:OFFSet:LIST:RCARRier:TEST  
 CALCulate:EVM:WINDow[1]|2|...|6:ACPpower:OFFSet:LIST:STATe  
 CALCulate:EVM:WINDow[1]|2|...|6:ACPpower:STATe  
 CALCulate:EVM:WINDow[1]|2|...|6:OBwidth:LIMit:FBLimit

CALCulate:EVM:WINDow[1]|2|...|6:OBWidth:LIMit[:TEST]  
 CALCulate:EVM:WINDow[1]|2|...|6:OBWidth:PERCent  
 CALCulate:EVM:WINDow[1]|2|...|6:OBWidth:STATE  
 CALCulate:EVM:WINDow[1]|2|...|6:OBWidth:STATE  
 CALCulate:FPOwer:POWer[1,2,...,999]?  
 CALCulate:FPOwer:POWer[1,2,...,999]:CONFigure  
 CALCulate:FPOwer:POWer[1,2,...,999]:DEFine?  
 CALCulate:FPOwer:POWer[1,2,...,999]:FETCh?  
 CALCulate:FPOwer:POWer[1,2,...,999]:INITiate  
 CALCulate:FPOwer:POWer[1,2,...,999]:READ?  
 CALCulate:FPOwer:POWer[1,2,...,999]:READ1?  
 CALCulate:FPOwer:POWer[1,2,...,999]:READ2?  
 CALCulate:FPOwer:POWer[1,2,...,999]:RESet  
 CALCulate:MARKer[1]|2|...|12:MODE  
 CALCulate:MARKer[1]|2|...|12:STATE  
 CALCulate:MATH  
 CALCulate:MONitor:MARKer[1]|2|...|12:FUNCTION  
 CALCulate:MONitor:MARKer[1]|2|...|12:FUNCTION:BAND:LEFT  
 CALCulate:MONitor:MARKer[1]|2|...|12:FUNCTION:BAND:RIGHT  
 CALCulate:MONitor:MARKer[1]|2|...|12:FUNCTION:BAND:SPAN  
 CALCulate:MONitor:MARKer[1]|2|...|12:MAXimum  
 CALCulate:MONitor:MARKer[1]|2|...|12:MAXimum:NEXT  
 CALCulate:MONitor:MARKer[1]|2|...|12:MODE  
 CALCulate:MONitor:MARKer[1]|2|...|12:REFeRence  
 CALCulate:MONitor:MARKer[1]|2|...|12:STATE  
 CALCulate:MONitor:MARKer[1]|2|...|12:TRACe  
 CALCulate:MONitor:MARKer[1]|2|...|12:X  
 CALCulate:MONitor:MARKer[1]|2|...|12:X:POSition  
 CALCulate:MONitor:MARKer[1]|2|...|12:Y?  
 CALCulate:MONitor:MARKer:AOFF  
 CALCulate:MONitor:MARKer:COUPle[:STATE]  
 CALCulate:OBWidth:LIMit:FBLimit  
 CALCulate:OBWidth:LIMit:FBLimit  
 CALCulate:OBWidth:LIMit:FBLimit:AUTO  
 CALCulate:OBWidth:LIMit[:TEST]  
 CALCulate:OBWidth:LIMit[:TEST]  
 CALCulate:OBWidth:MARKer[1]|2|...|12:MAXimum  
 CALCulate:OBWidth:MARKer[1]|2|...|12:MODE  
 CALCulate:OBWidth:MARKer[1]|2|...|12:REFeRence  
 CALCulate:OBWidth:MARKer[1]|2|...|12:TRACe  
 CALCulate:OBWidth:MARKer[1]|2|...|12:X  
 CALCulate:OBWidth:MARKer[1]|2|...|12:X:POSition  
 CALCulate:OBWidth:MARKer[1]|2|...|12:Y?  
 CALCulate:OBWidth:MARKer:AOFF  
 CALCulate:PStatistic:MARKer[1]|2|...|12:MODE  
 CALCulate:PStatistic:MARKer[1]|2|...|12:REFeRence  
 CALCulate:PStatistic:MARKer[1]|2|...|12:TRACe  
 CALCulate:PStatistic:MARKer[1]|2|...|12:X  
 CALCulate:PStatistic:MARKer[1]|2|...|12:Y?  
 CALCulate:PStatistic:MARKer:AOFF  
 CALCulate:PStatistic:MARKer:COUPle[:STATE]

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

CALCulate:PStatistic:RANge[:PROBability]:MINimum  
 CALCulate:PStatistic:STORe:REFerence  
 CALCulate:PVTime:MARKer[1]|2|...|12:MAXimum  
 CALCulate:PVTime:MARKer[1]|2|...|12:MODE  
 CALCulate:PVTime:MARKer[1]|2|...|12:REFerence  
 CALCulate:PVTime:MARKer[1]|2|...|12:STATe  
 CALCulate:PVTime:MARKer[1]|2|...|12:TRACe  
 CALCulate:PVTime:MARKer[1]|2|...|12:X  
 CALCulate:PVTime:MARKer[1]|2|...|12[:X]:POSition  
 CALCulate:PVTime:MARKer[1]|2|...|12:X:UNIT?  
 CALCulate:PVTime:MARKer:AOff  
 CALCulate:PVTime:MARKer:COUple[:STATe]  
 CALCulate:RHO:MARKer:AOff  
 CALCulate:SEMask:LLIne:STATe  
 CALCulate:SEMask:MARKer[1]|2|...|12:MODE  
 CALCulate:SEMask:MARKer[1]|2|...|12:TRACe  
 CALCulate:SEMask:MARKer[1]|2|...|12:X  
 CALCulate:SEMask:MARKer[1]|2|...|12:X:POSition  
 CALCulate:SEMask:MARKer[1]|2|...|12:Y?  
 CALCulate:SEMask:MARKer:AOff  
 CALCulate:SEMask:MARKer:COUple[:STATe]  
 CALCulate:SPURious:MARKer[1]|2|...|12:MAXimum  
 CALCulate:SPURious:MARKer[1]|2|...|12:MAXimum:LEFT  
 CALCulate:SPURious:MARKer[1]|2|...|12:MAXimum:NEXT  
 CALCulate:SPURious:MARKer[1]|2|...|12:MAXimum:RIGHT  
 CALCulate:SPURious:MARKer[1]|2|...|12:MINimum  
 CALCulate:SPURious:MARKer[1]|2|...|12:MODE  
 CALCulate:SPURious:MARKer[1]|2|...|12:PTPeak  
 CALCulate:SPURious:MARKer[1]|2|...|12:REFerence  
 CALCulate:SPURious:MARKer[1]|2|...|12:TRACe:ATTached  
 CALCulate:SPURious:MARKer[1]|2|...|12:X  
 CALCulate:SPURious:MARKer[1]|2|...|12:X:POSition  
 CALCulate:SPURious:MARKer[1]|2|...|12:Y?  
 CALCulate:SPURious:MARKer:AOff  
 CALCulate:SPURious:MARKer:COUple[:STATe]  
 CALCulate:SPURious[:RANge][:LIST]:LIMit:ABSolute[:UPPer]:DATA  
 [:START]  
 CALCulate:SPURious[:RANge][:LIST]:LIMit:ABSolute  
 [:UPPer]:DATA:STOP  
 CALCulate:SPURious[:RANge][:LIST]:LIMit:ABSolute  
 [:UPPer]:DATA:STOP:AUTO  
 CALCulate:WAVEform:MARKer[1]|2|...|12:FUNCTion  
 CALCulate:WAVEform:MARKer[1]|2|...|12:FUNCTion:BAND:LEFT  
 CALCulate:WAVEform:MARKer[1]|2|...|12:FUNCTion:BAND:RIGHT  
 CALCulate:WAVEform:MARKer[1]|2|...|12:FUNCTion:BAND:SPAN  
 CALCulate:WAVEform:MARKer[1]|2|...|12:MAXimum  
 CALCulate:WAVEform:MARKer[1]|2|...|12:MAXimum:NEXT  
 CALCulate:WAVEform:MARKer[1]|2|...|12:MINimum  
 CALCulate:WAVEform:MARKer[1]|2|...|12:MODE  
 CALCulate:WAVEform:MARKer[1]|2|...|12:REFerence

CALCulate:WAVEform:MARKer[1]|2|...|12:TRACe  
CALCulate:WAVEform:MARKer[1]|2|...|12:X  
CALCulate:WAVEform:MARKer[1]|2|...|12:X:POSition  
CALCulate:WAVEform:MARKer[1]|2|...|12:Y?  
CALCulate:WAVEform:MARKer:AOFF  
CALCulate:WAVEform:MARKer:COUPle[:STATe]  
CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe  
CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe:START  
CALCulate:WAVEform:MARKer:PEAK:SEARch:RANGe:STOP  
CALibration[:ALL]  
CALibration[:ALL]:NPENding  
CALibration:AUTO  
CALibration:AUTO:ALERT  
CALibration:AUTO:MODE  
CALibration:AUTO:TIME:OFF?  
CALibration:DATA:BACKup  
CALibration:DATA:DEFault  
CALibration:DATA:INTernal:BACKup  
CALibration:DATA:INTernal:RESTore  
CALibration:DATA:RESTore  
CALibration:EMIXer  
CALibration:EXPIred  
CALibration:FREQuency:REFerence:COARse  
CALibration:FREQuency:REFerence:FINE  
CALibration:FREQuency:REFerence:MODE  
CALibration:INTernal:ASFRanges?  
CALibration:INTernal:ASFRanges:EXTend[:STATe]  
CALibration:INTernal:ASFRanges:FRANGes  
CALibration:INTernal:ASFRanges[:STATe]  
CALibration:INTernal:EMPath  
CALibration:INTernal:FAST[:ALL]  
CALibration:INTernal:HBAND[:ALL]  
CALibration:INTernal:LBAND[:ALL]  
CALibration:INTernal:LOLeakage  
CALibration:INTernal:RECeiver[:ALL]  
CALibration:INTernal:RRHead:AMPLitude  
CALibration:INTernal:RRHead:AMPLitude:FAST  
CALibration:INTernal:RRHead:IFCable  
CALibration:INTernal:RRHead:LOPower  
CALibration:INTernal:RRHead:LOSync  
CALibration:INTernal:SOURce[:ALL]  
CALibration:INTernal:SOURce[:ALL]:NPENding  
CALibration:INTernal:VXT:TRANsceiver  
CALibration:IQ:FLATness:I  
CALibration:IQ:FLATness:I|IBAR|Q|QBAR:TIME?  
CALibration:IQ:FLATness:IBAR  
CALibration:IQ:FLATness:Q  
CALibration:IQ:FLATness:QBAR  
CALibration:IQ:ISOLation  
CALibration:IQ:ISOLation:TIME?  
CALibration:IQ:PROBe:I

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

CALibration:IQ:PROBe:I|:TIME?  
CALibration:IQ:PROBe:IBar  
CALibration:IQ:PROBe:IBAR:TIME?  
CALibration:IQ:PROBe:I:CLEar  
CALibration:IQ:PROBe:Q  
CALibration:IQ:PROBe:QBar  
CALibration:IQ:PROBe:QBAR:TIME?  
CALibration:IQ:PROBe:Q:CLEar  
CALibration:IQ:PROBe:Q:TIME?  
CALibration:NFLoor  
CALibration:NRF  
CALibration:NRF:NPending  
CALibration:NRFSelector  
CALibration:PDElay:CORRection  
CALibration:PDElay:SOURce  
CALibration:PRESelector  
CALibration:REFerence:CLOCK?  
CALibration:REFerence:CLOCK:END?  
CALibration:REFerence:CLOCK:INITialize?  
CALibration:RF  
CALibration:RF:NPending  
CALibration:RFSelector:ALERT  
CALibration:RFSelector:CONDUCTed  
CALibration:RFSelector:FULL  
CALibration:RFSelector:ONLY  
CALibration:RFSelector:RADiated  
CALibration:RFSelector:SCHeduler:RECurrence  
CALibration:RFSelector:SCHeduler:RECurrence:DAY  
CALibration:RFSelector:SCHeduler:RECurrence:WEEK  
CALibration:RFSelector:SCHeduler:STATE  
CALibration:RFSelector:SCHeduler:TASK  
CALibration:RFSelector:SCHeduler:TIME:NEXT?  
CALibration:RFSelector:SCHeduler:TIME:START  
CALibration:TDS  
CALibration:TEMPerature:AGO?  
CALibration:TEMPerature:CURRent?  
CALibration:TEMPerature:CURRent:RRHead?  
CALibration:TEMPerature:CURRent:RRHead:LO?  
CALibration:TEMPerature:INTernal:EMPath?  
CALibration:TEMPerature:INTernal:FAST?  
CALibration:TEMPerature:INTernal:HBAND?  
CALibration:TEMPerature:INTernal:LBAND?  
CALibration:TEMPerature:INTernal:LOLeakage?  
CALibration:TEMPerature:INTernal:RECeiver?  
CALibration:TEMPerature:INTernal:RRHead:AMPLitude?  
CALibration:TEMPerature:INTernal:RRHead:AMPLitude:FAST?  
CALibration:TEMPerature:INTernal:RRHead:IFCable?  
CALibration:TEMPerature:INTernal:RRHead:LOPower?  
CALibration:TEMPerature:INTernal:RRHead:LOSync?  
CALibration:TEMPerature:INTernal:SOURce?

CALibration:TEMPerature:INTernal:VXT:TRANSceiver?  
CALibration:TEMPerature:LALL?  
CALibration:TEMPerature:LIF?  
CALibration:TEMPerature:LPReselector?  
CALibration:TEMPerature:LRF?  
CALibration:TEMPerature:MAXimum?  
CALibration:TEMPerature:MINimum?  
CALibration:TEMPerature:NFLoor?  
CALibration:TEMPerature:OLDest:SEConds?  
CALibration:TEMPerature:OLDest[:TEMPerature]?  
CALibration:TEMPerature:PDElay:SOURce?  
CALibration:TEMPerature:RFPSelector:LCONducted?  
CALibration:TEMPerature:RFPSelector:LRADiated?  
CALibration:TEMPerature:UPDown:CONVerter?  
CALibration:TIME:ELAPsed:NFLoor?  
CALibration:TIME:INTernal:EMPath?  
CALibration:TIME:INTernal:FAST?  
CALibration:TIME:INTernal:HBAN?  
CALibration:TIME:INTernal:LBANd?  
CALibration:TIME:INTernal:LOLeakage?  
CALibration:TIME:INTernal:RECeiver?  
CALibration:TIME:INTernal:RRHead:AMPLitude?  
CALibration:TIME:INTernal:RRHead:AMPLitude:FAST?  
CALibration:TIME:INTernal:RRHead:IFCable?  
CALibration:TIME:INTernal:RRHead:LOPower?  
CALibration:TIME:INTernal:RRHead:LOSync?  
CALibration:TIME:INTernal:SOURce?  
CALibration:TIME:INTernal:VXT:TRANSceiver?  
CALibration:TIME:LALL?  
CALibration:TIME:LIF?  
CALibration:TIME:LPReselector?  
CALibration:TIME:LRF?  
CALibration:TIME:NFLoor?  
CALibration:TIME:PDElay:SOURce?  
CALibration:TIME:REFerence:CLOCK?  
CALibration:TIME:RFPSelector:LCONducted?  
CALibration:TIME:RFPSelector:LRADiated?  
CALibration:TIME:UPDown:CONVerter?  
CALibration:UPDown:CONVerter  
CALibration:YTF  
CALibration:YTF:NPENding  
CONFigure?  
CONFigure:<measurement>[:NDEFault]  
CONFigure:ACPower  
CONFigure:ACPower  
CONFigure:ACPower:NDEFault  
CONFigure:CATalog?  
CONFigure:CEVM  
CONFigure:CEVM:NDEFault  
CONFigure:CHPower  
CONFigure:CHPower

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

CONFigure:CHPower:NDEFault  
CONFigure:EVM  
CONFigure:MONitor  
CONFigure:MONitor  
CONFigure:MONitor:NDEFault  
CONFigure:OBWidth  
CONFigure:OBWidth  
CONFigure:OBWidth:NDEFault  
CONFigure:PStatistic  
CONFigure:PStatistic  
CONFigure:PStatistic:NDEFault  
CONFigure:PVTime  
CONFigure:PVTime  
CONFigure:PVTime:NDEFault  
CONFigure:SEMask  
CONFigure:SEMask  
CONFigure:SEMask:NDEFault  
CONFigure:SPURious  
CONFigure:SPURious  
CONFigure:SPURious:NDEFault  
CONFigure:WAVEform  
CONFigure:WAVEform  
CONFigure:WAVEform:NDEFault  
COUple

**D**

DISPlay:<meas>:WINDow[1]:TRACe:Y[:SCALe]:RANGe  
DISPlay:ACPower:VIEW[1]:WINDow[1]:TRACe:X[:SCALe]:COUple  
DISPlay:ACPower:VIEW:NSElect  
DISPlay:ACPower:VIEW:RTYPE  
DISPlay:ACPower:VIEW[:SElect]  
DISPlay:ACPower:VIEW:WINDow:CINFormation:FREQuency  
DISPlay:ACPower:WINDow[1]:BGRaph  
DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:COUple  
DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:PDIVision  
DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:RLEVel  
DISPlay:ACPower:WINDow[1]:TRACe:Y[:SCALe]:RPOStion  
DISPlay:ACTivefunc[:STATe]  
DISPlay:ANNotation:MBAR[:STATe]  
DISPlay:ANNotation:SCReen[:STATe]  
DISPlay:ANNotation:TRACe[:STATe]  
DISPlay:BACKlight  
DISPlay:CEVM:VIEW[:SElect]  
DISPlay:CHPower:VIEW:NSElect  
DISPlay:CHPower:VIEW[:SElect]  
DISPlay:CHPower:VIEW:WINDow:CINFormation:FREQuency  
DISPlay:CHPower:WINDow[1]:BGRaph  
DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALe]:COUple

DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALe]:PDIvIson  
DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALe]:RLEvEl  
DISPlay:CHPower:WINDow[1]:TRACe:Y[:SCALe]:RPOStion  
DISPlay:ENABle  
DISPlay:EVM:AFPoints  
DISPlay:EVM:FANotation  
DISPlay:EVM:TRACe|2|3|4|5|6:FEED  
DISPlay:EVM:TRACe[1]|2|...|6:FORMat  
DISPlay:EVM:TRACe:ALL:SELEcted  
DISPlay:EVM:VIEW:PRESet  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:ALIN?  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:ALINE  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:EYE:COUNT  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:SYMBol  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:SYMBol:FORMat  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:SYMBol:SHAPE  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:SYMBol:SIZE  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:UNIT:FREQuency  
DISPlay:EVM:WINDow[1]|2|...|6:DDEMod:UNIT:TIME  
DISPlay:EVM:WINDow[1]|2|...|6:FORMat:DELAy:APERture  
DISPlay:EVM:WINDow[1]|2|...|6:FORMat:PHASe:OFFSet  
DISPlay:EVM:WINDow[1]|2|...|6:FORMat:PHASe:UNWRap:REFerence  
DISPlay:EVM:WINDow[1]|2|...|9:RLINE  
DISPlay:EVM:WINDow[1]|2|...|9:VHCenter  
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:COUple  
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:RLEvEl  
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:RPOStion  
DISPlay:EVM:WINDow[1]|2|...|9:X[:SCALe]:SPAN  
DISPlay:EVM:WINDow[1]|2|...|9:Y:LRATio  
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:AUTO:ONCE  
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:PDIvIson  
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:RLEvEl  
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:RLEvEl:AUTO  
DISPlay:EVM:WINDow[1]|2|...|9:Y[:SCALe]:RPOStion  
DISPlay:EVM:WINDow[1]|2|...|9:Y:UNIT?  
DISPlay:EVM:WINDow[1]|2|...|9:Y:UNIT:PREFerence  
DISPlay:EVM:WINDow:FORMat  
DISPlay:FSCREEN[:STATe]  
DISPlay:GRATICule[:STATe]  
DISPlay:MONitor:VIEW:WINDow:CATtribute  
DISPlay:MONitor:VIEW:WINDow:CINformation:FREQuency  
DISPlay:MONitor:VIEW:WINDow:SATtribute[:STATe]  
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:COUple  
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:PDIvIson  
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RANGE  
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RLEvEl  
DISPlay:MONitor:WINDow[1]:TRACe:Y[:SCALe]:RPOStion  
DISPlay:OBwidth:VIEW:NSElect  
DISPlay:OBwidth:VIEW[:SElect]  
DISPlay:OBwidth:WINDow[1]:TRACe:Y[:SCALe]:COUple  
DISPlay:OBwidth:WINDow[1]:TRACe:Y[:SCALe]:PDIvIson

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RLEVel  
DISPlay:OBWidth:WINDow[1]:TRACe:Y[:SCALe]:RPOStion  
DISPlay:OBWidth:WINDow[1]:XDB  
DISPlay:OBWidth:WINDow2:BOUNdaries:FREQuency  
DISPlay:PStatistic:GAUSSian[:STATe]  
DISPlay:PStatistic:RTRACe[:STATe]  
DISPlay:PStatistic:VIEW[1]:WINDow2:TRACe:X[:SCALe]:PDIVision  
DISPlay:PVTime:RAMP[:STATe]  
DISPlay:PVTime:VIEW[1]:WINDow[1]:BLINes[:STATe]  
DISPlay:PVTime:VIEW[1]:WINDow[1]:LIMit:MASK  
DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:BURSt[:STATe]  
DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:MAXHold[:STATe]  
DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:MINHold[:STATe]  
DISPlay:PVTime:VIEW[1]:WINDow[1]:TRACe:POFF[:STATe]  
DISPlay:PVTime:VIEW[1]:WINDow[1]:TRIGger[:STATe]  
DISPlay:PVTime:VIEW:NSElect  
DISPlay:PVTime:VIEW[:SElect]  
DISPlay:PVTime:WINDow[1]|2|3:TRACe:X[:SCALe]:COUPle  
DISPlay:PVTime:WINDow[1]|2|3:TRACe:X[:SCALe]:PDIVision  
DISPlay:PVTime:WINDow[1]|2|3:TRACe:X[:SCALe]:RLEVel  
DISPlay:PVTime:WINDow[1]|2|3:TRACe:X[:SCALe]:RPOStion  
DISPlay:PVTime:WINDow[1]|2|3:TRACe:Y[:SCALe]:COUPle  
DISPlay:PVTime:WINDow[1]|2|3:TRACe:Y[:SCALe]:PDIVision  
DISPlay:PVTime:WINDow[1]|2|3:TRACe:Y[:SCALe]:RLEVel  
DISPlay:PVTime:WINDow[1]|2|3:TRACe:Y[:SCALe]:RPOStion  
DISPlay:SEMAsk:OFFSet:SABSolute  
DISPlay:SEMAsk:VIEW[1]:WINDow[1]:CINFormation:FREQuency  
DISPlay:SEMAsk:VIEW:NSElect  
DISPlay:SEMAsk:VIEW[:SElect]  
DISPlay:SEMAsk:WINDow[1]:TRACe:X[:SCALe]:COUPle  
DISPlay:SEMAsk:WINDow[1]:TRACe:X[:SCALe]:PDIVision  
DISPlay:SEMAsk:WINDow[1]:TRACe:X[:SCALe]:RLEVel  
DISPlay:SEMAsk:WINDow[1]:TRACe:X[:SCALe]:RPOStion  
DISPlay:SEMAsk:WINDow[1]:TRACe:Y[:SCALe]:COUPle  
DISPlay:SEMAsk:WINDow[1]:TRACe:Y[:SCALe]:PDIVision  
DISPlay:SEMAsk:WINDow[1]:TRACe:Y[:SCALe]:RLEVel  
DISPlay:SEMAsk:WINDow[1]:TRACe:Y[:SCALe]:RPOStion  
DISPlay:SPURious:FREQuency:CENTer[:STATe]  
DISPlay:SPURious:VIEW:RANGe:TABLE:FMODE  
DISPlay:SPURious:VIEW[:SElect]  
DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:COUPle  
DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:PDIVision  
DISPlay:SPURious:WINDow[1]:TRACe:Y[:SCALe]:RLEVel  
DISPlay:THEMe  
DISPlay:UINterface:CSIZE  
DISPlay:UINterface:HTABs  
DISPlay:UINterface:STAB  
DISPlay:UINterface:STFScreen  
DISPlay:UINterface:TYPE?  
DISPlay:VIEW:ADVanced:CATalog?

DISPlay:VIEW:ADVanced:DElete  
DISPlay:VIEW:ADVanced:DElete:ALL  
DISPlay:VIEW:ADVanced:NAME  
DISPlay:VIEW:ADVanced:REName  
DISPlay:VIEW:ADVanced:SElect  
DISPlay:VIEW:ADVanced:USER:CATalog?  
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:X[:SCALE]:COUple  
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:X[:SCALE]:PDIVision  
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:X[:SCALE]:RLEVel  
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:X[:SCALE]:RPOStion  
DISPlay:WAVEform:VIEW[1]|2:WINDow[1]:TRACe:Y[:SCALE]:COUple  
DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:PDIVision  
DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RANGe  
DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RLEVel  
DISPlay:WAVEform:VIEW[1]:WINDow[1]:TRACe:Y[:SCALE]:RPOStion  
DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:PDIVision  
DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RANGe  
DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RLEVel  
DISPlay:WAVEform:VIEW2:WINDow[1]:TRACe:Y[:SCALE]:RPOStion  
DISPlay:WAVEform:VIEW:NSElect  
DISPlay:WAVEform:VIEW[:SElect]  
DISPlay:WINDow[1]:ANNOtation[:ALL]

## E

EVM:CCAR0:ULIN:PROF:USER1:PUSC:ADD:SLOT  
EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT1:DEL  
EVM:CCAR0:ULIN:PROF:USER1:PUSC:SLOT2:POS?

## F

FETCh:<measurement>[n]?  
FETCh:ACPower?  
FETCh:CEVM[n]?  
FETCh:CHPower:DENSity[n]?  
FETCh:CHPower[n]?  
FETCh:MONitor[n]?  
FETCh:OBwidth:FERRor?  
FETCh:OBwidth[n]?  
FETCh:OBwidth:OBwidth?  
FETCh:OBwidth:XDB?  
FETCh:PStatistic?  
FETCh:PVTime[n]?  
FETCh:SEMAsk[n]?  
FETCh:SPURious[n]?  
FETCh:WAVEform?  
FORMat:BORDER  
FORMat[:TRACe][:DATA]

## H

HCOPY:ABORt  
HCOPY[:IMMediate]

## I

INITiate:<measurement>  
INITiate:ACPower  
INITiate:CEVM  
INITiate:CHPower  
INITiate:CONTinuous  
INITiate:CONTinuous  
INITiate:CONTinuous  
INITiate:CONTinuous  
INITiate[:IMMediate]  
INITiate[:IMMediate]  
INITiate[:IMMediate]  
INITiate[:IMMediate]  
INITiate:MONitor  
INITiate:OBwidth  
INITiate:PAUSE  
INITiate:PAUSE  
INITiate:PAUSE  
INITiate:PAUSE  
INITiate:PStatistic  
INITiate:PVTime  
INITiate:REStart  
INITiate:REStart  
INITiate:REStart  
INITiate:REStart  
INITiate:RESume  
INITiate:RESume  
INITiate:RESume  
INITiate:RESume  
INITiate:SEMask  
INITiate:SPURious  
INITiate:WAVEform  
INPut[1]:IQ[:I]:IMPedance  
INPut[1]:IQ:Q:IMPedance  
INPut:COUPling  
INPut:COUPling:I  
INPut:COUPling:Q  
INPut:FEXTender:CABLE:CORRection  
INPut:IMPedance:REFeRence  
INPut:IQ[:I]:DIFFerential  
INPut:IQ:MIRROred

INPut:IQ:Q:DIFFerential  
INPut:OFFSet:I  
INPut:OFFSet:Q  
INSTRument:CATalog?  
INSTRument:CONFigure:<mode\_id>:<meas>  
INSTRument:COUPle:DEFault  
INSTRument:COUPle:EMC:STANdard  
INSTRument:COUPle:FREQuency:BAND:EXTend  
INSTRument:COUPle:FREQuency:CENTer  
INSTRument:COUPle:SCReen:INPut  
INSTRument:DEFault  
INSTRument:NSElect  
INSTRument:SCReen:CATalog?  
INSTRument:SCReen:CREate  
INSTRument:SCReen:DELeTe  
INSTRument:SCReen:DELeTe:ALL  
INSTRument:SCReen:MUlTiple?  
INSTRument:SCReen:MUlTiple[:STATe]  
INSTRument:SCReen:ORientation  
INSTRument:SCReen:REName  
INSTRument:SCReen:SElect  
INSTRument:SCReen:STAB?  
INSTRument[:SElect]  
INSTRument[:SElect]  
INSTRument[:SElect]  
INSTRument[:SElect]  
INSTRument[:SElect]  
INSTRument[:SElect]  
INSTRument[:SElect]  
INSTRument:UNLoad

## L

LXI:IDENtify[:STATe]

## M

MEASure:<measurement>[n]?  
MEASure:ACPower[n]?  
MEASure:CEVM[n]?  
MEASure:CHPower:DENSity[n]?  
MEASure:CHPower[n]?  
MEASure:MONitor[n]?  
MEASure:OBwidth:FERRor?  
MEASure:OBwidth[n]?  
MEASure:OBwidth:OBwidth?  
MEASure:OBwidth:XDB?  
MEASure:PStatistic[n]?

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

MEASure:PVTime[n]?  
MEASure:SEMask[n]?  
MEASure:SPURious[n]?  
MEASure:WAVEform[n]?  
MEMory:EVM:STORe:ECFResponse  
MEMory:CATalog?  
MEMory:CDIRectory  
MEMory:COPIY  
MEMory:COPIY:DEVIce  
MEMory:DATA  
MEMory:DELeTe  
MEMory:HEADer:ID?  
MEMory:LOAD:<meas>:RECOrding:CHANnel  
MEMory:LOAD:<meas>:RECOrding:RESEt  
MEMory:LOAD:CCORrection  
MEMory:LOAD:CORRection  
MEMory:LOAD:LIMit  
MEMory:LOAD:LOSS  
MEMory:LOAD:RTS:DATA:PATTern  
MEMory:LOAD:RTYPE  
MEMory:LOAD:SCONfig  
MEMory:LOAD:STATe  
MEMory:LOAD:TRACe  
MEMory:LOAD:TRACe:DATA  
MEMory:LOAD:TRACe:REGister  
MEMory:LOAD:VCORection  
MEMory:MDIRectory  
MEMory:MOVE  
MEMory:RDIRectory  
MEMory:REGister:STATe:LABel  
MEMory:REGister:TRACe:LABel  
MEMory:RMEDIA:LABel  
MEMory:RMEDIA:LIST?  
MEMory:RMEDIA:SIZE?  
MEMory:RMEDIA:WPROtect?  
MEMory:STORe:<meas>:RECOrding:CHANnel  
MEMory:STORe:CORRection  
MEMory:STORe:EVMSetup  
MEMory:STORe:EVMSetup  
MEMory:STORe:LIMit  
MEMory:STORe:PSCFactor  
MEMory:STORe:PSCFactor  
MEMory:STORe:QSAVe  
MEMory:STORe:RESults  
MEMory:STORe:SCONfig  
MEMory:STORe:SCReen  
MEMory:STORe:SCReen:BLOCKed  
MEMory:STORe:SCReen:THEMe  
MEMory:STORe:STATe  
MEMory:STORe:TRACe

MMEmory:STORe:TRACe:REGister

## O

OUTPut:ANALog  
OUTPut:ANALog:AUTO  
OUTPut:ANALog:SVIDeo  
OUTPut:AUX  
OUTPut:AUX:AIF  
OUTPut:AUX:IO  
OUTPut:AUX:IO:DATA<n>  
OUTPut:DBUS[1][:STATe]  
OUTPut:DBUS2:DATA  
OUTPut:DBUS2[:STATe]  
OUTPut:EIF  
OUTPut:EREference:OUTPut  
OUTPut[:EXTeRnal][:STATe]  
OUTPut:IF2  
OUTPut:IQ:OUTPut  
OUTPut:MODulation[:STATe]  
OUTPut:ROSCillator:LO:OUTPut

## R

READ:<measurement>[n]?  
READ:ACPower[n]?  
READ:CEVM[n]?  
READ:CHPower:DENSity[n]?  
READ:CHPower[n]?  
READ:MONitor[n]?  
READ:OBwidth:FERRor?  
READ:OBwidth[n]?  
READ:OBwidth:OBwidth?  
READ:OBwidth:XDB?  
READ:PStatistic[n]?  
READ:PVTime[n]?  
READ:SEMAsk[n]?  
READ:SPURious[n]?  
READ:WAVEform[n]?

## S

[:SENSe]:<meas>:POWer:IQ:REFErence:PLANE  
[:SENSe]:<meas>:SWEep:ACQuisition:TIME  
[:SENSe]:<meas>:SWEep:ACQuisition:TIME:AUTO  
[:SENSe]:<meas>:SWEep:ETIME?  
[:SENSe]:<meas>:SWEep:TIME

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

```

[:SENSe]:<meas>:SWEep:TIME:AUTO
[:SENSe]:<measurement>:PFILter[:STATe]
[:SENSe]:ACPower:AVERage:COUNT
[:SENSe]:ACPower:AVERage[:STATe]
[:SENSe]:ACPower:AVERage:TCONtrol
[:SENSe]:ACPower:BANDwidth[:RESolution]
[:SENSe]:ACPower:BANDwidth[:RESolution]:AUTO
[:SENSe]:ACPower:BANDwidth[:RESolution]:FPOWer:MODE
[:SENSe]:ACPower:BANDwidth:SHApe
[:SENSe]:ACPower:BANDwidth:TYPE
[:SENSe]:ACPower:BANDwidth:VIDeo
[:SENSe]:ACPower:BANDwidth:VIDeo:AUTO
[:SENSe]:ACPower:CARRier[1]|2:AUTO[:STATe]
[:SENSe]:ACPower:CARRier[1]|2:COUNT
[:SENSe]:ACPower:CARRier[1]|2:CPSD
[:SENSe]:ACPower:CARRier[1]|2:INDEX
[:SENSe]:ACPower:CARRier[1]|2:LIST:BANDwidth[:INTEgration]
[:SENSe]:ACPower:CARRier[1]|2:LIST:COUPLe
[:SENSe]:ACPower:CARRier[1]|2:LIST:FILTer:ALPHa
[:SENSe]:ACPower:CARRier[1]|2:LIST:FILTer[:RRC][:STATe]
[:SENSe]:ACPower:CARRier[1]|2:LIST:PPResent
[:SENSe]:ACPower:CARRier[1]|2:LIST:WIDTh
[:SENSe]:ACPower:CARRier[1]|2[:POWer]
[:SENSe]:ACPower:CARRier[1]|2:PREFerence:TYPE
[:SENSe]:ACPower:CARRier[1]|2:RCARRier
[:SENSe]:ACPower:CARRier[1]|2:RCARRier:AUTO
[:SENSe]:ACPower:CARRier[1]|2:RCARRier:ZBASE
[:SENSe]:ACPower:CARRier[1]|2:RCFRequency
[:SENSe]:ACPower:CARRier[1]|2:RCFRequency:AUTO
[:SENSe]:ACPower:CORRection:NOISe[:AUTO]
[:SENSe]:ACPower:DETEctor:AUTO
[:SENSe]:ACPower:DETEctor[:FUNction]
[:SENSe]:ACPower:FILTer:BANDwidth[:INTEgration]
[:SENSe]:ACPower:FREQuency:SPAN
[:SENSe]:ACPower:FREQuency:SYNThesis:AUTO[:STATe]
[:SENSe]:ACPower:FREQuency:SYNThesis[:STATe]
[:SENSe]:ACPower:IF:GAIN:FPOWer
[:SENSe]:ACPower:METHod
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:ABSolute
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:BANDwidth[:INTEgration]
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:BANDwidth:RESolution
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:BANDwidth:RESolution:AUTO
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:BANDwidth:SHApe
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:BANDwidth:TYPE
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:BANDwidth:VIDeo
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:BANDwidth:VIDeo:AUTO
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:FILTer:ALPHa
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:FILTer[:RRC][:STATe]
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST[:FREQuency]
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:PREFerence
  
```

```

[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:PREFerence:AUTO
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:RCARrier
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:RPSDensity
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:SIDE
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:STATe
[:SENSe]:ACPower:OFFSet[1]|2:INNER:LIST:TEST
[:SENSe]:ACPower:OFFSet[1]|2:INNER:TYPE
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:ABSolute
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth[:INTEgration]
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:RESolution
[:SENSe]:ACPower:OFFSet[1]|2
[:OUTer]:LIST:BANDwidth:RESolution:AUTO
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:SHAPE
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:TYPE
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDEO
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDEO:AUTO
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:FILTer:ALPHA
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:FILTer[:RRC][:STATe]
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST[:FREquency]
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:RCARrier
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:RPSDensity
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:SIDE
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:STATe
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:TEST
[:SENSe]:ACPower:OFFSet[1]|2[:OUTer]:LIST:TYPE
[:SENSe]:ACPower:OFFSet:MAXNumber
[:SENSe]:ACPower:SAVoid[:STATe]
[:SENSe]:ACPower:SWEEP:POINTS
[:SENSe]:ACPower:SWEEP:TIME:AUTO:RULEs
[:SENSe]:ACPower:TYPE
[:SENSe]:AFINput[1]|2:COUPling
[:SENSe]:AFINput[1]|2:IMPedance
[:SENSe]:AFINput[1]|2:LOW
[:SENSe]:CARRier:REFerence
[:SENSe]:CARRier:REFerence
[:SENSe]:CARRier:REFerence
[:SENSe]:CARRier:REFerence
[:SENSe]:CARRier:REFerence
[:SENSe]:CARRier:REFerence
[:SENSe]:CARRier:REFerence
[:SENSe]:CARRier:REFerence
[:SENSe]:CARRier:REFerence
[:SENSe]:CCARrier<n>:FREquency:OFFSet
[:SENSe]:CCARrier0|...|4:ACPower:BANDwidth[1]|2:INTEgration
[:SENSe]:CCARrier0|...|4:CHPower:BANDwidth:INTEgration
[:SENSe]:CCARrier0|...|4:RADio:SLINK:MODE
[:SENSe]:CCARrier0|...|4:RADio:STANDard:BANDwidth
[:SENSe]:CCARrier0|...|4:RADio:STANDard:DGPU
[:SENSe]:CCARrier0|...|4:RADio:STANDard:ULDL
[:SENSe]:CCARrier0|...|4:SEMAsk:BANDwidth[1]|2:INTEgration
[:SENSe]:CCARrier0|...|4:SPECTrum
  
```

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

```

[:SENSe]:CCARrier0|...|4:SPECTrum
[:SENSe]:CCARrier0|...|4[:STATe]
[:SENSe]:CCARrier:CONFig
[:SENSe]:CCARrier:CONFig:ALLocation
[:SENSe]:CCARrier:CONFig:ALLocation:NCONtiguous:ABPoint
[:SENSe]:CCARrier:CONFig:ETC1:BANDwidth
[:SENSe]:CCARrier:CONFig:ETC1:BANDwidth:NARRowest
[:SENSe]:CCARrier:CONFig:ETC1:CMAx
[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier?
[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:CARRier[1]|2|...|5
[:SENSe]:CCARrier:CONFig:ETC2:BANDwidth:SIDE
[:SENSe]:CCARrier:CONFig:ETC2:CMAx
[:SENSe]:CCARrier:CONFig:ETC3:BANDwidth
[:SENSe]:CCARrier:CONFig:RFBW
[:SENSe]:CCARrier:CONFig:SPACing:DELTA
[:SENSe]:CCARrier:COUNT
[:SENSe]:CCARrier:REFerence
[:SENSe]:CCORrection:CSET:COMMent
[:SENSe]:CCORrection:CSET:ALL:DELeTe
[:SENSe]:CCORrection:CSET:DATA
[:SENSe]:CCORrection:CSET:DELeTe
[:SENSe]:CCORrection:CSET:DESCRiption
[:SENSe]:CCORrection:CSET:DIRection
[:SENSe]:CCORrection:CSET:PORT
[:SENSe]:CCORrection:CSET:SELeCt
[:SENSe]:CCORrection:CSET[:STATe]
[:SENSe]:CCORrection:CSET:X:SPACing
[:SENSe]:CCORrection:DATA?
[:SENSe]:CEVM:AVERAge:COUNT
[:SENSe]:CEVM:AVERAge[:STATe]
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:BRBS:COUNT
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANne1<n>:SET0:FHO
Pping
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANne1<n>:SET0:REP
etition:MNUMBER
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANne1<n>:SET0:REP
etition:NUMBER
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANne1<n>:SET1:FHO
Pping
  
```

```

[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel<n>:SET1:REP
etition:MNUMBER
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel<n>:SET1:REP
etition:NUMBER
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:ACTive
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET0:NB
:INDEX
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET0:RB
Pair:ALlocation
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET0:RB
Pair:NUMBER
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET0:SC
Rambling
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET0:TX
TYpe
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET1:EN
ABLE
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET1:NB
:INDEX
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET1:RB
Pair:ALlocation
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET1:RB
Pair:NUMBER
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET1:SC
Rambling
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET1:TX
TYpe
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:COUNT
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:SSNumber
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:NRBHo
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:EMTC:SSNumber
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:PDSch:MTITable
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:PROFile:MPDCch
[:SENSe]:CEVM:CCARrier0|...|4:DLINK:PROFile:PBCH:REPetition:ACTive
[:SENSe]:CEVM:CCARrier0|...|4:EVMMinimize:IQIMbalance
[:SENSe]:CEVM:CCARrier0|...|4:IQIMbalance:FCOMpen
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:ADD:USER
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:COUNT?
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:EUSers:COUNT
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:PSCCh:RB:START
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:SUBChannel:ADJacency
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:SUBChannel:COUNT
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:SUBChannel:RB:START
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:SUBChannel:SIZE
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:ADD:ALlocation
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:ALlocation<m>:D
ELete
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:ALlocation<m>:P
SCCh:INDEX
  
```

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

```

[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:ALLocation<m>:P
SSCh:MODulation:TYPE
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:ALLocation<m>:S
UBChannel:LENGth
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:ALLocation<m>:S
UBChannel:START
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:ALLocation<m>:S
UBFrame:START
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:DECoded:PSCCh
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:DECoded:PSCCh:D
MRS
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:DECoded:PSSCh
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:DECoded:PSSCh:A
CTive
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:DECoded:PSSCh:D
MRS
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:DElete
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:PSCCh
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:PSCCh:ACTive
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:PSCCh:DMRS
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:PSSCh
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:PSSCh:ACTive
[:SENSe]:CEVM:CCARrier0|...|4:SLINK:PROFile:USER<n>:PSSCh:DMRS
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:AUTO:DCID
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:AUTO:DCID:ENABle
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:FHOPping
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:NRBHo
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:FORMAt45:ACT
ive
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:M:FOUR
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:N:FIVE
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:N:FOUR
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:DCID
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:DCID:ENABle
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:FHOPping
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:NRBHo
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:M:FOUR
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:M:FOUR:CO
UPle
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:FIVE
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:FIVE:CO
UPle
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:FOUR
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:FOUR:CO
UPle
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:M
:FOUR
[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:N
:FIVE
  
```

```

[:SENSe]:CEVM:CCARrier0|...|4:ULINK:PROFfile:USER<n>:PUCCh:SLOT<m>:N
:FOUR
[:SENSe]:CEVM:CCARrier[0]|1|...|4:DLINK:EMTC:PROFfile:UNUMber?
[:SENSe]:CEVM:CCARrier
[0]|1|...|4:DLINK:EMTC::PROFfile:USER1|12:DECoded:CEMode
[:SENSe]:CEVM:CCARrier
[0]|1|...|4:DLINK:EMTC::PROFfile:USER1|12:DECoded:CHANnel:TYPE
[:SENSe]:CEVM:CCARrier
[0]|1|...|4:DLINK:EMTC:PROFfile:USER1|12:DECoded:PDSCh:ASNumber
[:SENSe]:CEVM:CCARrier
[0]|1|...|4:DLINK:EMTC:PROFfile:USER1|12:DECoded:PDSCh:CEMode:A:MREP
etition
[:SENSe]:CEVM:CCARrier
[0]|1|...|4:DLINK:EMTC:PROFfile:USER1|12:DECoded:PDSCh:CEMode:B:MREP
etition
[:SENSe]:CEVM:CCARrier
[0]|1|...|4:DLINK:EMTC:PROFfile:USER1|12:DECoded:PDSCh:TRANsmission:
SPAN
[:SENSe]:CEVM:CCARrier
[0]|1|...|4:DLINK:EMTC:PROFfile:USER1|12:DECoded:PUSCh:CEMode:A:MREP
etition
[:SENSe]:CEVM:CCARrier
[0]|1|...|4:DLINK:EMTC:PROFfile:USER1|12:DECoded:PUSCh:CEMode:B:MREP
etition
[:SENSe]:CEVM:COpy
[:SENSe]:CEVM:DLINK:RESult
[:SENSe]:CEVM:DLINK:RESult:ALL
[:SENSe]:CEVM:EVM:COpy[:IMMediate]
[:SENSe]:CEVM:METhod
[:SENSe]:CEVM:SAVoid[:STATe]
[:SENSe]:CEVM:SElected
[:SENSe]:CEVM:ULINK:RESult
[:SENSe]:CEVM:ULINK:RESult:ALL
[:SENSe]:CHPower:AVERage:COUNT
[:SENSe]:CHPower:AVERage[:STATe]
[:SENSe]:CHPower:AVERage:TCONtrol
[:SENSe]:CHPower:BANDwidth:INTegration
[:SENSe]:CHPower:BANDwidth[:RESolution]
[:SENSe]:CHPower:BANDwidth[:RESolution]:AUTO
[:SENSe]:CHPower:BANDwidth:SHAPE
[:SENSe]:CHPower:BANDwidth:VIDeo
[:SENSe]:CHPower:BANDwidth:VIDeo:AUTO
[:SENSe]:CHPower:DETEctor:AUTO
[:SENSe]:CHPower:DETEctor[:FUNction]
[:SENSe]:CHPower:FILTer[:RRC]:ALPHa
[:SENSe]:CHPower:FILTer[:RRC]:BANDwidth
[:SENSe]:CHPower:FILTer[:RRC][:STATe]
[:SENSe]:CHPower:FREQuency:SPAN
[:SENSe]:CHPower:FREQuency:SPAN:AUTO
[:SENSe]:CHPower:FREQuency:SPAN:FULL
  
```

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

```
[ :SENSe]:CHPower:FREQuency:SYNThesis:AUTO[:STATe]
[ :SENSe]:CHPower:FREQuency:SYNThesis[:STATe]
[ :SENSe]:CHPower:IF:GAIN:AUTO[:STATe]
[ :SENSe]:CHPower:IF:GAIN[:STATe]
[ :SENSe]:CHPower:SAVoid[:STATe]
[ :SENSe]:CHPower:SWep:POINts
[ :SENSe]:CHPower:SWep:TIME:AUTO:RULes
[ :SENSe]:CORRection:BTS[:RF]:GAIN
[ :SENSe]:CORRection:CSET[1]|2|...|16:ANTenna[:UNIT]
[ :SENSe]:CORRection:CSET[1]|2|...|16:COMMENT
[ :SENSe]:CORRection:CSET[1]|2|...|16:DATA
[ :SENSe]:CORRection:CSET[1]|2|...|16:DATA:MERGe
[ :SENSe]:CORRection:CSET[1]|2|...|16:DELeTe
[ :SENSe]:CORRection:CSET[1]|2|...|16:DESCRiption
[ :SENSe]:CORRection:CSET[1]|2|...|16:DIRection
[ :SENSe]:CORRection:CSET[1]|2|...|16:RF:PORT
[ :SENSe]:CORRection:CSET[1]|2|...|16[:STATe]
[ :SENSe]:CORRection:CSET[1]|2|...|16:X:SPACing
[ :SENSe]:CORRection:CSET:ALL:DELeTe
[ :SENSe]:CORRection:CSET:ALL[:STATe]
[ :SENSe]:CORRection:CSET:GRoup[1]|2|...|10:DATA
[ :SENSe]:CORRection:CSET:GRoup:BReak
[ :SENSe]:CORRection:CSET:GRoup:COMMENT
[ :SENSe]:CORRection:CSET:GRoup:DELeTe
[ :SENSe]:CORRection:CSET:GRoup:DESCRiption
[ :SENSe]:CORRection:CSET:GRoup:RELoad
[ :SENSe]:CORRection:CSET:GRoup[:STATe]
[ :SENSe]:CORRection:IMPedance[:INPut][:MAGNitude]
[ :SENSe]:CORRection:IQ:I:ATTenuation
[ :SENSe]:CORRection:IQ:I:ATTenuation:RATio
[ :SENSe]:CORRection:IQ:I:GAIN
[ :SENSe]:CORRection:IQ[:I]:SKEW
[ :SENSe]:CORRection:IQ:Q:ATTenuation
[ :SENSe]:CORRection:IQ:Q:ATTenuation:RATio
[ :SENSe]:CORRection:IQ:Q:GAIN
[ :SENSe]:CORRection:IQ:Q:GAIN:COUPlE
[ :SENSe]:CORRection:IQ:Q:SKEW
[ :SENSe]:CORRection:MS[:RF]:GAIN
[ :SENSe]:CORRection:NOISe:FLoor
[ :SENSe]:CORRection:NOISe:FLoor
[ :SENSe]:CORRection:NOISe:FLoor
[ :SENSe]:CORRection:NOISe:FLoor
[ :SENSe]:CORRection:NOISe:FLoor
[ :SENSe]:CORRection:NOISe:FLoor
[ :SENSe]:CORRection:NOISe:FLoor:ADApTive
[ :SENSe]:CORRection:NOISe:FLoor:ADApTive
[ :SENSe]:CORRection:NOISe:FLoor:ADApTive
[ :SENSe]:CORRection:NOISe:FLoor:ADApTive
[ :SENSe]:CORRection:SA[:RF]:GAIN
[ :SENSe]:EVM:ACQuisition
```

```

[:SENSe]:EVM:AVERage:COUNT
[:SENSe]:EVM:AVERage:FAST
[:SENSe]:EVM:AVERage:FAST:URATe
[:SENSe]:EVM:AVERage:FAST:URATe:AUTO
[:SENSe]:EVM:AVERage[:STATe]
[:SENSe]:EVM:AVERage:TYPE
[:SENSe]:EVM:CCARrier0|...|4:DLINK:AENumber
[:SENSe]:EVM:CCARrier0|...|4:DLINK:AESpacing
[:SENSe]:EVM:CCARrier0|...|4:DLINK:BRBS:COUNT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:DF1A:INCLude
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:DFTwo:PRFour
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:DFTwo:PROne
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:DFTwo:PRTThree
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:DFTwo:PRTwo
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:PBCH
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:PCFich
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:PDCCh
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:PDSch
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:RNTI:MAXimum:RA
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:RNTI:MAXimum:TPC
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:RNTI:MINimum:RA
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:RNTI:MINimum:TPC
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:TMINclude
[:SENSe]:EVM:CCARrier0|...|4:DLINK:DECode:ULBW
[:SENSe]:EVM:CCARrier0|...|4:DLINK:EMTC:MPDCch:CHANnel1|12:SET0:ENABle
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PDSch:CSRatio
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PDSch:IQ:REfERENCE
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PDSch:MTItable
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:ADD:USER
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO[:DETECT]:CCPower
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO[:DETECT]:MODE
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO[:DETECT]:POWer
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO
[:DETECT]:POWer:PMODE
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO
[:DETECT]:POWer:ROUND
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:CBINdex
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:CDD
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:NCODEwords
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:NLAYers
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:PRECoding
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:QAM1024:CWONE
:ENABle
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:QAM1024:CWONE
:MCS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:QAM1024:CWONE
:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROfile:AUTO:PDSch:QAM1024:CWZer
o:ENABle
  
```

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM1024:EPRE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM1024:MCS  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM1024:PWRBo  
ost  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM16:CWOne:E  
NABLE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM16:CWOne:M  
CS  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM16:CWOne:P  
WRBoost  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM16:CWZero:  
ENABLE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM16:EPRE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM16:MCS  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM16:PWRBoos  
t  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM256:CWOne:  
ENABLE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM256:CWOne:  
MCS  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM256:CWOne:  
PWRBoost  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM256:CWZero  
:ENABLE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM256:EPRE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM256:MCS  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM256:PWRBoo  
st  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM64:CWOne:E  
NABLE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM64:CWOne:M  
CS  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM64:CWOne:P  
WRBoost  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM64:CWZero:  
ENABLE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM64:EPRE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM64:MCS  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QAM64:PWRBoos  
t  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QPSK:CWOne:EN  
ABLE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QPSK:CWOne:MC  
S  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QPSK:CWOne:PW  
RBoost  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QPSK:CWZero:E  
NABLE  
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSch:QPSK:EPRE

```

[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSCh:QPSK:MCS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PDSCh:QPSK:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:AUTO:PMCH:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:COUNT?
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:CSIRs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:CSIRs:Active
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:CSIRs:INdex
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:CSIRs:PORTs:NUMBer
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:CSIRs:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:CSIRs:SUBFrame:INdex
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:EPRE:PANTenna
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:EUSers:COUNT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:EXCLude:ALL
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:INCLude:ALL
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:Active
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:AID
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:NMRLength
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFN:NMRLength?
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:SUBFrame3:Active
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:SUBFrame4:Active
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:SUBFrame7:Active
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:SUBFrame8:Active
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:MBSFn:SUBFrame9:Active
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PBCH
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PBCH:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PCFich
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PCFich:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:AUTO
[:DETECT]
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame0:SYMBOLs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame1:SYMBOLs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame2:SYMBOLs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame3:SYMBOLs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame4:SYMBOLs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame5:SYMBOLs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame6:SYMBOLs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame7:SYMBOLs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALlocation:SUBFrame8:SYMBOLs

```

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

```
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:ALLocation:SUBFrame9:SYMBOLs
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:CCScheduling
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:CIFPresence
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:PSOSymbol
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:PWRBoost:STEP
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PDCCh:SCID
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PHICH
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PHICH:ALLocation:RATIo
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PHICH:DESPread
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PHICH:DURation
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PHICH:MIDefinition
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PHICH:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PHICH:PWRBoost:STEP
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame3:ACTive
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame3:MODulation:TYPE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame3:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame4:ACTive
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame4:MODulation:TYPE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame4:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame7:ACTive
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame7:MODulation:TYPE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame7:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame8:ACTive
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame8:MODulation:TYPE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame8:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame9:ACTive
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame9:MODulation:TYPE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PMCH:SUBFrame9:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PRS
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PRS:ACTive
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PRS: BANDwidth
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PRS: INDeX
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PRS: PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PRS: SUBFrame: NUMBer
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PSS
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:PSS: PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM1024
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM1024: RNTI
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM1024: UERS
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM1024: UERS: ACTive
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM1024: UERS: PORT
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM1024: UERS: PWRBoost
```

```

[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM1024:UERS:SCID
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM16
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM16:RNTI
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM16:UERS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM16:UERS:ACTive
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM16:UERS:PORT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM16:UERS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM16:UERS:SCID
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM256
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM256:RNTI
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM256:UERS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM256:UERS:ACTive
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM256:UERS:PORT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM256:UERS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM256:UERS:SCID
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM64
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM64:RNTI
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM64:UERS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM64:UERS:ACTive
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM64:UERS:PORT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM64:UERS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QAM64:UERS:SCID
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QPSK
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QPSK:RNTI
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QPSK:UERS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QPSK:UERS:ACTive
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QPSK:UERS:PORT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QPSK:UERS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:QPSK:UERS:SCID
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:RS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:RS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:SCINdex
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:SSS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:SSS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:DECoded:PDSCh
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:DECoded:PDSCh:CW
One:ENABle
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:DECoded:PDSCh:CW
One:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:DECoded:PDSCh:CW
Zero:ENABle
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:DECoded:PDSCh:CW
Zero:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:DECoded:PDSCh:EP
RE
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:DELeTe
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh:ADD:ALLoca
tion
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh:CBINdex
  
```

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

```
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CDD
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:COUNT?
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CWONe:ENAB
le
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CWONe:MCS
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CWONe:MCS:
COUPlE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CWONe:MODu
lation:TYPE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CWONe:MODu
lation:TYPE:COUPlE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CWONe:PWRB
oost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CWONe:PWRB
oost:COUPlE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:CWZero:ENA
Ble
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:EPRE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:EPRE:COUPl
e
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:FINDEx
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:FINDEx:COU
PlE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:MCS
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:MODulation
:TYPE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:MODulation
:TYPE:COUPlE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:NCODEwords
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:PRECoding
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:PWRBoost:C
OUPlE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:RBALloc<m>
:CWONe:MCS
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:RBALloc<m>
:CWONe:MODulation:TYPE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:RBALloc<m>
:CWONe:PWRBoost
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:RBALloc<m>
:DELeTe
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:RBALloc<m>
:EPRE
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:RBALloc<m>
:FINDEx
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:RBALloc<m>
:MCS
[ :SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSch:RBALloc<m>
:MODulation:TYPE
```

```

[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh:RBALloc<m>
:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh:RBALloc<m>
:RB:END
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh:RBALloc<m>
RB:START?
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh:RBALloc<m>
:RB:START
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh:RBALloc<m>
:SLOT:END
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:PDSCh:RBALloc<m>
:SLOT:START
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:RNTI
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:UERS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:UERS:ACTiVe
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:UERS:PORT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:UERS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER<n>:UERS:SCID
[:SENSe]:EVM:CCARrier0|...|4:DLINK:PROFile:USER1|50:PDSCh:NLAYers
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:ANTenna:DETEct:THREshold
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:ANTenna:INACTiVe:PATHS
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:ANTenna:NUMBer
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:ANTenna:PORT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:ANTenna:PORT:AUTO
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:CID
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:CID:MODE
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:CPLength
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:CPLength:AUTO
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:MIMO:DECOding
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:RSPRs
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:SLOT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:SS:ANTenna:PORT
[:SENSe]:EVM:CCARrier0|...|4:DLINK:SYNC:TYPE
[:SENSe]:EVM:CCARrier0|...|4:DLINK:UERS:CFRCompen
[:SENSe]:EVM:CCARrier0|...|4:DLINK:UERS:WEIGHts:DISPlay
[:SENSe]:EVM:CCARrier0|...|4:DLINK:UERS:WEIGHts:RIFormat
[:SENSe]:EVM:CCARrier0|...|4:EETTime
[:SENSe]:EVM:CCARrier0|...|4:EQualizer:TRAIning
[:SENSe]:EVM:CCARrier0|...|4:EQualizer:TRAIning:MAFilter
[:SENSe]:EVM:CCARrier0|...|4:EQualizer:TRAIning:MAFilter:LENGth
[:SENSe]:EVM:CCARrier0|...|4:EQualizer:TRAIning:MCFNormalize
[:SENSe]:EVM:CCARrier0|...|4:EQualizer:TRAIning:MODE
[:SENSe]:EVM:CCARrier0|...|4:EVMMinimize
[:SENSe]:EVM:CCARrier0|...|4:EVMMinimize:AMPLitude
[:SENSe]:EVM:CCARrier0|...|4:EVMMinimize:FREQuency
[:SENSe]:EVM:CCARrier0|...|4:EVMMinimize:IQIMbalance
[:SENSe]:EVM:CCARrier0|...|4:EVMMinimize:IQOFFset
[:SENSe]:EVM:CCARrier0|...|4:EVMMinimize:TIMing
[:SENSe]:EVM:CCARrier0|...|4:EXTended:FREQuency:LOCK:RANGe
[:SENSe]:EVM:CCARrier0|...|4:FREQuency:SYNThesis[:STATe]

```

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

```

[:SENSe]:EVM:CCARrier0|...|4:HOModulation:STATe
[:SENSe]:EVM:CCARrier0|...|4:MCFilter:STATe
[:SENSe]:EVM:CCARrier0|...|4:NIOT:DLINK:INBand:EUTra:CID
[:SENSe]:EVM:CCARrier0|...|4:ODActive
[:SENSe]:EVM:CCARrier0|...|4:POWer:BOOSt:NORMAlize
[:SENSe]:EVM:CCARrier0|...|4:PROFile:AUTO[:DETECT]
[:SENSe]:EVM:CCARrier0|...|4:PROFile:CARRier:ALlocated
[:SENSe]:EVM:CCARrier0|...|4:PROFile:COpy[:IMMediate]
[:SENSe]:EVM:CCARrier0|...|4:PROFile:MFAAnalysis
[:SENSe]:EVM:CCARrier0|...|4:PROFile:NAAllocation
[:SENSe]:EVM:CCARrier0|...|4:PROFile:NAAllocation
[:SENSe]:EVM:CCARrier0|...|4:PROFile:SMAPping[:SElect]
[:SENSe]:EVM:CCARrier0|...|4:REPort:DB
[:SENSe]:EVM:CCARrier0|...|4:REPort:POWer:RELative
[:SENSe]:EVM:CCARrier0|...|4:SLINK:PROFile:SUBChannel:ADJacency?
[:SENSe]:EVM:CCARrier0|...|4:SYMBOL:TIMing:ADJust
[:SENSe]:EVM:CCARrier0|...|4:SYMBOL:TIMing:ADJust:USER
[:SENSe]:EVM:CCARrier0|...|4:TIME:ASBoundary
[:SENSe]:EVM:CCARrier0|...|4:TIME:INTerval:SLOT
[:SENSe]:EVM:CCARrier0|...|4:TIME:INTerval:SYMBOL
[:SENSe]:EVM:CCARrier0|...|4:TIME:OFFSet:SLOT
[:SENSe]:EVM:CCARrier0|...|4:TIME:OFFSet:SYMBOL
[:SENSe]:EVM:CCARrier0|...|4:TIME:RESult:LENGth
[:SENSe]:EVM:CCARrier0|...|4:TIME:SCALE:FACTor
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:ANFMode
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUCCh
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUCCh:CQI:ISIZE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUCCh:CQI:ISIZE:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUCCh:HARQ:ISIZE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUCCh:HARQ:ISIZE:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:CQI:ISIZE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:CQI:ISIZE:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:CQI:OFFSet
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:HARQ:ISIZE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:HARQ:ISIZE:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:HARQ:OFFSet
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:RI:ISIZE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:RI:ISIZE:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:DECode:PUSCh:RI:OFFSet
[:SENSe]:EVM:CCARrier0|...|4:ULINK:FLATness:CHANnel:CONDition
[:SENSe]:EVM:CCARrier0|...|4:ULINK:FREQuency:CENTer
[:SENSe]:EVM:CCARrier0|...|4:ULINK:FREQuency:HIGH
[:SENSe]:EVM:CCARrier0|...|4:ULINK:FREQuency:LOW
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:ADD:USER
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:CID
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:DCID
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:DCID:ENABLE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO[:DETECT]:POWer
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:HOPping:GROUp
  
```

```

[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:HOPping:SEquence
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:ACTive
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:CINdex
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:CSSet
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:LRsindex
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:NCsConfig
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:NRAPrb
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:PINdex
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PRACH:SRESource
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:ACTive
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:CSHift
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:DMRS
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:DMRS:GROup
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:DMRS:PARams
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:DMRS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:FNPucch:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:FORMat
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:FORMat45:ACTi
ve
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:ID
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:ID:ENABle
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:M:FOUR
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:NCS:ONE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:N:FIVE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:N:FOUR
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:N:ONE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:NRB:TWO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:N:THRee
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:N:TWO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:OS
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:RB
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:SHIFt
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:SSLot
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUCCh:SSLot:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:ACTive
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:CSFDci
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:CSField
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DMRS
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DMRS:CSHift
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DMRS:GROup
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DMRS:ONE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DMRS:PARams
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DMRS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DMRS:SESequence
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DMRS:TWO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:DSS

```

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

```

[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:FHOpping
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:ID
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:ID:ENABLE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:LINDex
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:MODulation:TY
PE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:NRBHo
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:NSB
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:OCCode
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:RB:END
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:RB:START
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:SSLot
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:PUSCh:SSLot:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:RNTI
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SFNumber
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:ACTive
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:BCONfig
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:BWIDth
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:CINDex
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:CSHift
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:FDPosition
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:HBWidth
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:MUPTs
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:NRA:SONE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:NRA:SSIX
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:SFConfig
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:SSLot
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:SSLot:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:AUTO:SRS:TCOMB
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:CID
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:DCID
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:DCID:ENABLE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:DElete
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:HOPping:GRoup
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:HOPping:SEQUence
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:ACTive
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:CINDex
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:CSSet
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:LRsindex
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:NCSCONfig
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:NRAPrb
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:PINDex
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PRACH:SRESOURCE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:ACTive
  
```

```

[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:ADD:SLOT
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:CSHift
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:CSHift:COU
Ple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:DMRS
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:DMRS:GROup
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:DMRS:GROup
:COUPle
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:DMRS:PARAm
S
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:DMRS:PWRBo
ost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:DMRS:PWRBo
ost:COUPle
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:FORMAt
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:FORMAt:COU
Ple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:ID
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:ID:ENABle
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:M:FOUR
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:M:FOUR:COU
Ple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:NCS:ONE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:FIVE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:FIVE:COU
Ple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:FOUR
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:FOUR:COU
Ple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:ONE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:ONE:COUP
le
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:NRB:TWO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:THRee
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:THRee:CO
UPle
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:N:TWO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:OS
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:OS:COUPle
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:PWRBoost:C
OUPle
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:RB
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:RB:COUPle
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SHIFt
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:CS
Hift
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:DE
Lete
  
```

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:DMRS:GROup  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:DMRS:PWRBoost  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:FORMat  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:M:FOUR  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:N:FIVE  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:N:FOUR  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:N:ONE  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:N:THRee  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:OS  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:POsition?  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:PWRBoost  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SLOT<m>:RB  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SSLot  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUCCh:SSLot:AUTO  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:CSField  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:CTNB  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:CTNB:COUPl  
e  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:CSHif  
t  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:CSHif  
t:COUPl  
e  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:GROup  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:GROup  
:COUPl  
e  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:ONE  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:PARAm  
s  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:PWRBo  
ost  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:PWRBo  
ost:COUPl  
e  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:SEQue  
nce  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:SEQue  
nce:COUPl  
e  
[ :SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DMRS:TWO

```

[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:DSS
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:ID
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:ID:ENABLE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:LINDEX
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:MODulation
:TYPE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:MODulation
:TYPE:COUple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:NRBHo
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:NSB
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:OCCode
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:PWRBoost:C
OUple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:RB:END
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:RB:END:COU
Ple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:RB:START
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:RB:START:C
OUple
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:CT
NB
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:DE
lete
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:DM
RS:CShifT
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:DM
RS:GROup
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:DM
RS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:DM
RS:SEQuence
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:MO
dulation:TYPE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:PO
sition?
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:PW
RBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:RB
:END
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:PUSCh:SLOT<m>:RB
:START
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:RNTI
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SFNumber
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:BConfig
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:BWIDth
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:CINDEX
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:CShifT
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:FDPosition
  
```

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

```

[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:HBWidth
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:MUPTs
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:NRA:SONE
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:NRA:SSIX
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:PWRBoost
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:SfConfig
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:SSLot
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:SSLot:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:SSLot:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER<n>:SRS:TComB
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER1|50:PUSch:ACTive
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER1|50:PUSch:ADD:SLOT
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER1|50:PUSch:CSFDci
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER1|50:PUSch:CTNB
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER1|50:PUSch:FHOpping
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER1|50:PUSch:SSLot
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER1|50:PUSch:SSLot:AUT
0
[:SENSe]:EVM:CCARrier0|...|4:ULINK:PROFile:USER1|50:SRS:ACTive
[:SENSe]:EVM:CCARrier0|...|4:ULINK:SYNC:CPLength
[:SENSe]:EVM:CCARrier0|...|4:ULINK:SYNC:CPLength:AUTO
[:SENSe]:EVM:CCARrier0|...|4:ULINK:SYNC:HSSHift
[:SENSe]:EVM:CCARrier0|...|4:ULINK:SYNC:PDSwap
[:SENSe]:EVM:CCARrier0|...|4:ULINK:SYNC:TYPE
[:SENSe]:EVM:CCARrier0|...|4:WINDow:LENGth
[:SENSe]:EVM:CCARrier0|...|4:WINDow:LENGth:CUSTom
[:SENSe]:EVM:COpy
[:SENSe]:EVM:RANGe:OPTimize
[:SENSe]:EVM:SAVoid[:STATe]
[:SENSe]:EVM:SElected
[:SENSe]:FEED
[:SENSe]:FEED:AFALign
[:SENSe]:FEED:AFINput:PORT
[:SENSe]:FEED:AREFERENCE
[:SENSe]:FEED:DATA
[:SENSe]:FEED:DATA:STORe
[:SENSe]:FEED:IQ:TYPE
[:SENSe]:FEED[:RF]:PORT:INformation?
[:SENSe]:FEED[:RF]:PORT[:INPut]
[:SENSe]:FEED:RF:PORT:OUTPut
[:SENSe]:FEED:RF:PORT:TR:HPower:ATTenuator[:STATe]
[:SENSe]:FREQuency:CENTer
[:SENSe]:FREQuency:CENTer
[:SENSe]:FREQuency:CENTer
[:SENSe]:FREQuency:CENTer
[:SENSe]:FREQuency:CENTer
[:SENSe]:FREQuency:CENTer
[:SENSe]:FREQuency:CENTer
[:SENSe]:FREQuency:CENTer
[:SENSe]:FREQuency:CENTer:AUTO

```

[ :SENSe ]:FREQuency:CENTer:AUTO  
[ :SENSe ]:FREQuency:CENTer:AUTO  
[ :SENSe ]:FREQuency:CENTer:OFFSet  
[ :SENSe ]:FREQuency:CENTer:OFFSet  
[ :SENSe ]:FREQuency:CENTer:OFFSet  
[ :SENSe ]:FREQuency:CENTer:STEP:AUTO  
[ :SENSe ]:FREQuency:CENTer:STEP[ :INCRement ]  
[ :SENSe ]:FREQuency:EMIXer:CENTer  
[ :SENSe ]:FREQuency:IQ:CENTer  
[ :SENSe ]:FREQuency:RF:CENTer  
[ :SENSe ]:HDUPlex:PORT:INPut  
[ :SENSe ]:HDUPlex:PORT:OUTPut  
[ :SENSe ]:MIXer:BAND  
[ :SENSe ]:MIXer:BIAS  
[ :SENSe ]:MIXer:BIAS:STATe  
[ :SENSe ]:MIXer:CIFLoss  
[ :SENSe ]:MIXer:HARMonic  
[ :SENSe ]:MIXer:LODoubler  
[ :SENSe ]:MIXer:MPATH

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

```
[ :SENSe ]:MIXer:TTYPe
[ :SENSe ]:MIXer:TTYPe?
[ :SENSe ]:MIXer:UIFFreq
[ :SENSe ]:MONitor:AVERage:COUNT
[ :SENSe ]:MONitor:AVERage[:STATe]
[ :SENSe ]:MONitor:AVERage:TCONtrol
[ :SENSe ]:MONitor:BANDwidth[:RESolution]
[ :SENSe ]:MONitor:BANDwidth[:RESolution]:AUTO
[ :SENSe ]:MONitor:BANDwidth:VIDeo
[ :SENSe ]:MONitor:BANDwidth:VIDeo:AUTO
[ :SENSe ]:MONitor:BANDwidth:VIDeo:RATio
[ :SENSe ]:MONitor:BANDwidth:VIDeo:RATio:AUTO
[ :SENSe ]:MONitor:CONversion:TYPE
[ :SENSe ]:MONitor:DETEctor:TRACe?
[ :SENSe ]:MONitor:DETEctor:TRACe[1]|2|3:AUTO
[ :SENSe ]:MONitor:DETEctor:TRACe[1]2|3
[ :SENSe ]:MONitor:FREQuency:SPAN
[ :SENSe ]:MONitor:FREQuency:SPAN:ADJust
[ :SENSe ]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio
[ :SENSe ]:MONitor:FREQuency:SPAN:BANDwidth[:RESolution]:RATio:AUTO
[ :SENSe ]:MONitor:PNOise:OPTion
[ :SENSe ]:MONitor:SAVoid[:STATe]?
[ :SENSe ]:MONitor:SWEp:POINTs
[ :SENSe ]:OBwidth:AVERage:COUNT
[ :SENSe ]:OBwidth:AVERage[:STATe]
[ :SENSe ]:OBwidth:AVERage:TCONtrol
[ :SENSe ]:OBwidth:BANDwidth[:RESolution]
[ :SENSe ]:OBwidth:BANDwidth[:RESolution]:AUTO
[ :SENSe ]:OBwidth:BANDwidth:SHApe
[ :SENSe ]:OBwidth:BANDwidth:VIDeo
[ :SENSe ]:OBwidth:BANDwidth:VIDeo:AUTO
[ :SENSe ]:OBwidth:DETEctor:AUTO
[ :SENSe ]:OBwidth:DETEctor[:FUNction]
[ :SENSe ]:OBwidth:FREQuency:SPAN
[ :SENSe ]:OBwidth:FREQuency:SPAN:AUTO
[ :SENSe ]:OBwidth:FREQuency:SPAN:FULL
[ :SENSe ]:OBwidth:IF:GAIN:AUTO[:STATe]
[ :SENSe ]:OBwidth:IF:GAIN[:STATe]
[ :SENSe ]:OBwidth:INTegration[:METHod]
[ :SENSe ]:OBwidth:MAXHold
[ :SENSe ]:OBwidth:PERCent
[ :SENSe ]:OBwidth:PREFerence
[ :SENSe ]:OBwidth:SAVoid[:STATe]
[ :SENSe ]:OBwidth:SWEp:POINTs
[ :SENSe ]:OBwidth:SWEp:TIME:AUTO:RULes
[ :SENSe ]:OBwidth:XDB
[ :SENSe ]:POWer:IQ[:I]:RANGe[:UPPer]
[ :SENSe ]:POWer:IQ:Q:RANGe[:UPPer]
[ :SENSe ]:POWer:IQ:RANGe:AUTO
[ :SENSe ]:POWer[:RF]:ATTenuation
```

```
[ :SENSE ] :POWER [ :RF ] :ATTenuation :AUTO  
[ :SENSE ] :POWER [ :RF ] :ATTenuation :STEP [ :INCRement ]  
[ :SENSE ] :POWER [ :RF ] :EATTenuation  
[ :SENSE ] :POWER [ :RF ] :EATTenuation :STATE  
[ :SENSE ] :POWER [ :RF ] :FRATten  
[ :SENSE ] :POWER [ :RF ] :GAIN :BAND  
[ :SENSE ] :POWER [ :RF ] :GAIN :LNA [ :STATE ]  
[ :SENSE ] :POWER [ :RF ] :GAIN [ :STATE ]  
[ :SENSE ] :POWER [ :RF ] :MW :PATH  
[ :SENSE ] :POWER [ :RF ] :MW :PATH :AUTO  
[ :SENSE ] :POWER [ :RF ] :PADJust  
[ :SENSE ] :POWER [ :RF ] :PCENter  
[ :SENSE ] :POWER [ :RF ] :RANGe  
[ :SENSE ] :POWER [ :RF ] :RANGe :MIXer :OFFSet  
[ :SENSE ] :POWER [ :RF ] :RANGe :OPTimize  
[ :SENSE ] :POWER [ :RF ] :RANGe :OPTimize  
[ :SENSE ] :POWER [ :RF ] :RANGe :OPTimize :ATTenuation  
[ :SENSE ] :POWER [ :RF ] :RANGe :OPTimize :ATTenuation  
[ :SENSE ] :POWER [ :RF ] :RANGe :OPTimize :TYPE  
[ :SENSE ] :POWER [ :RF ] :RANGe :PARatio  
[ :SENSE ] :POWER [ :RF ] :RFPSelector :NFILter [ :STATE ]  
[ :SENSE ] :POWER [ :RF ] :RFPSelector [ :STATE ]  
[ :SENSE ] :POWER [ :RF ] :SWPreseL  
[ :SENSE ] :POWER [ :RF ] :SWPreseL :BW  
[ :SENSE ] :POWER [ :RF ] :SWPreseL :STAT?  
[ :SENSE ] :POWER [ :RF ] :SWPreseL :STATE  
[ :SENSE ] :PSTATistic :BANDwidth  
[ :SENSE ] :PSTATistic :BANDwidth :AUTO  
[ :SENSE ] :PSTATistic :COUNts  
[ :SENSE ] :PSTATistic :FREQuency :CENter :ADJust  
[ :SENSE ] :PSTATistic :IF :GAIN :AUTO [ :STATE ]  
[ :SENSE ] :PSTATistic :IF :GAIN [ :STATE ]  
[ :SENSE ] :PSTATistic :MEAS :OFFSet  
[ :SENSE ] :PSTATistic :SLTView [ :STATE ]  
[ :SENSE ] :PSTATistic :SWEep :CYCLes  
[ :SENSE ] :PSTATistic :SWEep :TIME  
[ :SENSE ] :PSTATistic :URATio  
[ :SENSE ] :PVT :BANDwidth  
[ :SENSE ] :PVTime :AVERAge :COUNt  
[ :SENSE ] :PVTime :AVERAge [ :STATE ]  
[ :SENSE ] :PVTime :AVERAge :TCONtrol  
[ :SENSE ] :PVTime :AVERAge :TYPE  
[ :SENSE ] :PVTime :BANDwidth :AUTO  
[ :SENSE ] :PVTime :CORRection :NOISe [ :AUTO ]  
[ :SENSE ] :PVTime :IF :GAIN :AUTO [ :STATE ]  
[ :SENSE ] :PVTime :IF :GAIN [ :STATE ]  
[ :SENSE ] :PVTime :IGNore :BURSt :FOUND  
[ :SENSE ] :PVTime :LIMit :POFF :DLINK  
[ :SENSE ] :PVTime :LIMit :POFF :ULINK  
[ :SENSE ] :PVTime :LIMit :PON :ULINK :REFerence  
[ :SENSE ] :PVTime :LIMit :PON :ULINK :STATE
```

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

[ :SENSe ]:PVTime:LIMit:PON:ULINK:TOLerance  
[ :SENSe ]:PVTime:LIMit:RAMP:DRTIME  
[ :SENSe ]:PVTime:LIMit:RAMP:URTime  
[ :SENSe ]:PVTime:LIMit:TRANSient:DLINK  
[ :SENSe ]:PVTime:POFF:MEAS:RULEs  
[ :SENSe ]:PVTime:RAMP:SEARCh:LENGTh  
[ :SENSe ]:PVTime:SAVoid[:STATe]  
[ :SENSe ]:PVTime:THReshold:DOWN:END  
[ :SENSe ]:PVTime:THReshold:DOWN:STARt  
[ :SENSe ]:PVTime:THReshold:UP:END  
[ :SENSe ]:PVTime:THReshold:UP:STARt  
[ :SENSe ]:PVTime:TIMing:REFerence:AUTO  
[ :SENSe ]:PVTime:ULINK:CCARrier  
[ :SENSe ]:RADio:CPLength  
[ :SENSe ]:RADio:IMODulation:INTerference:FREQUency:OFFSet  
[ :SENSe ]:RADio:IMODulation:INTerference:REGion  
[ :SENSe ]:RADio:IMODulation:INTerference:SIDE  
[ :SENSe ]:RADio:IMODulation:INTerference:SPAN  
[ :SENSe ]:RADio:IMODulation:INTerference[:STATe]  
[ :SENSe ]:RADio:MEASure  
[ :SENSe ]:RADio:MINterval  
[ :SENSe ]:RADio:RCONfig  
[ :SENSe ]:RADio:SLOT  
[ :SENSe ]:RADio:STANdard:DIRection  
[ :SENSe ]:RADio:STANdard:EMTC[:STATe]  
[ :SENSe ]:RADio:STANdard:PRESet  
[ :SENSe ]:RADio:STANdard:PRESet:DGPU  
[ :SENSe ]:RADio:STANdard:PRESet:ULDL  
[ :SENSe ]:ROSCillator:BANDwidth  
[ :SENSe ]:ROSCillator:EXTernal:FREQUency  
[ :SENSe ]:ROSCillator:EXTernal:FREQUency:DEFault  
[ :SENSe ]:ROSCillator:LO:INPut  
[ :SENSe ]:ROSCillator:PXIReference:EXTernal:FREQUency  
[ :SENSe ]:ROSCillator:PXIReference:EXTernal:LOCK?  
[ :SENSe ]:ROSCillator:PXIReference:SElect  
[ :SENSe ]:ROSCillator:PXIReference:SOURce  
[ :SENSe ]:ROSCillator:SOURce?  
[ :SENSe ]:ROSCillator:SOURce:TYPE  
[ :SENSe ]:SEMask:AVERage:CARRier:TYPE  
[ :SENSe ]:SEMask:AVERage:COUNT  
[ :SENSe ]:SEMask:AVERage:OFFSet:TYPE  
[ :SENSe ]:SEMask:AVERage[:STATe]  
[ :SENSe ]:SEMask:BANDwidth[1]|2:INTegration  
[ :SENSe ]:SEMask:BANDwidth[1]|2[:RESolution]  
[ :SENSe ]:SEMask:BANDwidth[1]|2[:RESolution]:AUTO  
[ :SENSe ]:SEMask:BANDwidth[1]|2:VIDeo  
[ :SENSe ]:SEMask:BANDwidth[1]|2:VIDeo:AUTO  
[ :SENSe ]:SEMask:BANDwidth[1]|2:VIDeo:RATio  
[ :SENSe ]:SEMask:BANDwidth[1]|2:VIDeo:RATio:AUTO  
[ :SENSe ]:SEMask:BANDwidth:SHAPE

```

[:SENSe]:SEMask:CARRier:AUTO[:STATe]
[:SENSe]:SEMask:CARRier:AUTO[:STATe]
[:SENSe]:SEMask:CARRier:CPSD
[:SENSe]:SEMask:CARRier:INDEX
[:SENSe]:SEMask:CARRier:MEASure:ALL
[:SENSe]:SEMask:CARRier:PEAK[:POWER]
[:SENSe]:SEMask:CARRier[:POWER]
[:SENSe]:SEMask:CARRier:PREference:TYPE
[:SENSe]:SEMask:DETEctor:CARRier:AUTO
[:SENSe]:SEMask:DETEctor:CARRier[:FUNCTION]
[:SENSe]:SEMask:DETEctor:OFFSet:AUTO
[:SENSe]:SEMask:DETEctor:OFFSet[:FUNCTION]
[:SENSe]:SEMask:FILTer[:RRC]:ALPHA
[:SENSe]:SEMask:FILTer[:RRC][:STATe]
[:SENSe]:SEMask:FREquency[1]|2:SPAN
[:SENSe]:SEMask:FREquency[1]|2:SPAN:AUTO
[:SENSe]:SEMask:NCONtiguous:REGion
[:SENSe]:SEMask:OFFSet[1]|2:INNER:CMASK:FREquency:STOP
[:SENSe]:SEMask:OFFSet[1]|2:INNER:CMASK[:STATe]
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth:IMULti
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth[:RESolution]
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth
[:RESolution]:AUTO
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth:VIDEO
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth:VIDEO:AUTO
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth:VIDEO:RATio
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:BANDwidth:VIDEO:RATio:AUTO
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:FREquency:START
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:FREquency:STOP
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SIDE
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:START:ABSolute
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:START:RCARRier
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:START:SABSolute
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STATE
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:ABSolute
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:ABSolute:COUple
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:RCARRier
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:RCARRier:COUple
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:SABSolute
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:STOP:SABSolute:COUple
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:ACQuisition:TIME
[:SENSe]:SEMask:OFFSet
[1]|2:INNER:LIST:SWEEp:ACQuisition:TIME:AUTO
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:ETIME?
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:TIME
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:TIME:AUTO
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:TYPE
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:SWEEp:TYPE:AUTO
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:TEST
[:SENSe]:SEMask:OFFSet[1]|2:INNER:LIST:TEST:SABSolute

```

9 Programming the Instrument  
 9.1 List of Supported SCPI Commands

```

[:SENSe]:SEMask:OFFSet[1]|2:INNER:TYPE
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:IMULti
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth[:RESolution]
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth
[:RESolution]:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:BANDwidth:VIDeo:RATio
[:SENSe]:SEMask:OFFSet[1]|2
[:OUTer]:LIST:BANDwidth:VIDeo:RATio:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:FREQuency:START
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:FREQuency:STOP
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SIDE
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:START:ABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:START:RCARrier
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:START:SABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STATE
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:ABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:ABSolute:COUple
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:RCARrier
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:RCARrier:COUple
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:SABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:STOP:SABSolute:COUple
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEp:ACQuisition:TIME
[:SENSe]:SEMask:OFFSet[1]|2
[:OUTer]:LIST:SWEp:ACQuisition:TIME:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEp:ETIME?
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEp:TIME
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEp:TIME:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEp:TYPE
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:SWEp:TYPE:AUTO
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:TEST
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:LIST:TEST:SABSolute
[:SENSe]:SEMask:OFFSet[1]|2[:OUTer]:TYPE
[:SENSe]:SEMask:OFFSet[1]|2:TYPE
[:SENSe]:SEMask:SAVoid[:STATE]?
[:SENSe]:SEMask:SWEp[1]|2:TIME
[:SENSe]:SEMask:SWEp[1]|2:TIME:AUTO
[:SENSe]:SEMask:SWEp[1]|2:TYPE
[:SENSe]:SEMask:SWEp[1]|2:TYPE:AUTO
[:SENSe]:SEMask:SWEp:ACQuisition:TIME
[:SENSe]:SEMask:SWEp:ACQuisition:TIME:AUTO
[:SENSe]:SEMask:SWEp:ETIME?
[:SENSe]:SEMask:SWEp:POINTs
[:SENSe]:SEMask:SWEp:TYPE:AUTO:RULEs
[:SENSe]:SEMask:TYPE
[:SENSe]:SEMask:WBFFt:ENABLE
[:SENSe]:SIDentify:MODE
[:SENSe]:SIDentify[:STATE]
[:SENSe]:SPECtrum:IF:FREQuency?

```

```

[:SENSe]:SPEcTrum:LO:MIXMode:SIDE?
[:SENSe]:SPURious:AVERage:COUNT
[:SENSe]:SPURious:AVERage[:STATe]
[:SENSe]:SPURious:AVERage:TCONtrol
[:SENSe]:SPURious:AVERage:TYPE
[:SENSe]:SPURious:FSMeas
[:SENSe]:SPURious:IF:GAIN:AUTO[:STATe]
[:SENSe]:SPURious:IF:GAIN[:STATe]
[:SENSe]:SPURious:MCONdition:IMMediate
[:SENSe]:SPURious[:RANGe]:ALL:SWEEp:TYPE:AUTO
[:SENSe]:SPURious[:RANGe][:LIST]:ATTenuation
[:SENSe]:SPURious[:RANGe][:LIST]:ATTenuation:AUTO
[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:IMULti
[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution]
[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth[:RESolution]:AUTO
[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:SHAPE
[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo
[:SENSe]:SPURious[:RANGe][:LIST]:BANDwidth:VIDeo:AUTO
[:SENSe]:SPURious[:RANGe][:LIST]:DETEctor[1][:FUNction]
[:SENSe]:SPURious[:RANGe][:LIST]:DETEctor2[:FUNction]
[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:CENTer
[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:SPAN
[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:START
[:SENSe]:SPURious[:RANGe][:LIST]:FREQuency:STOP
[:SENSe]:SPURious[:RANGe][:LIST]:PEAK:EXCURsion
[:SENSe]:SPURious[:RANGe][:LIST]:PEAK:THREShold
[:SENSe]:SPURious[:RANGe][:LIST]:STATe
[:SENSe]:SPURious[:RANGe][:LIST]:SWEEp:POINts
[:SENSe]:SPURious[:RANGe][:LIST]:SWEEp:POINts:AUTO
[:SENSe]:SPURious[:RANGe][:LIST]:SWEEp:TIME
[:SENSe]:SPURious[:RANGe][:LIST]:SWEEp:TIME:AUTO
[:SENSe]:SPURious:REPT:MODE
[:SENSe]:SPURious:SPUR
[:SENSe]:SPURious:SWEEp:TIME:AUTO:RULEs
[:SENSe]:SPURious:TYPE
[:SENSe]:SWEEp:EGATE:CONtrol
[:SENSe]:SWEEp:EGATE:DELay
[:SENSe]:SWEEp:EGATE:DELay:COMPensation:TYPE
[:SENSe]:SWEEp:EGATE:HACcelerate:ENABle
[:SENSe]:SWEEp:EGATE:HOLDoff
[:SENSe]:SWEEp:EGATE:HOLDoff:AUTO
[:SENSe]:SWEEp:EGATE:LENGth
[:SENSe]:SWEEp:EGATE:METHod
[:SENSe]:SWEEp:EGATE:SOURce
[:SENSe]:SWEEp:EGATE[:STATe]
[:SENSe]:SWEEp:EGATE:TIME
[:SENSe]:SWEEp:EGATE:VIEW
[:SENSe]:SWEEp:EGATE:VIEW:START
[:SENSe]:SWEEp:IF:DITHer
[:SENSe]:SWEEp:IF:DITHer
[:SENSe]:SWEEp:IMAGeprot
  
```

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

```
[ :SENSe ]:SWep:IMAGeprot  
[ :SENSe ]:VCORection:DELeTe  
[ :SENSe ]:VCORection:SELeCt  
[ :SENSe ]:VOLTage|POWer:IQ:MIRROred  
[ :SENSe ]:VOLTage:IQ[:I]:RANGe[:UPPer]  
[ :SENSe ]:VOLTage:IQ:Q:RANGe[:UPPer]  
[ :SENSe ]:VOLTage:IQ:RANGe:AUTO  
[ :SENSe ]:WAVeform:ADC:DITHer:AUTO[:STATe]  
[ :SENSe ]:WAVeform:ADC:DITHer[:STATe]  
[ :SENSe ]:WAVeform:APERTure?  
[ :SENSe ]:WAVeform:AVERAge:COUNT  
[ :SENSe ]:WAVeform:AVERAge[:STATe]  
[ :SENSe ]:WAVeform:AVERAge:TACount  
[ :SENSe ]:WAVeform:AVERAge:TACount:AUTO  
[ :SENSe ]:WAVeform:AVERAge:TCONtrol  
[ :SENSe ]:WAVeform:AVERAge:TYPE  
[ :SENSe ]:WAVeform:AVERAge:TYPE:AUTO  
[ :SENSe ]:WAVeform:DIF:BANDwidth  
[ :SENSe ]:WAVeform:DIF:BANDwidth:AUTO  
[ :SENSe ]:WAVeform:DIF:FILTer:ALPha  
[ :SENSe ]:WAVeform:DIF:FILTer:BANDwidth  
[ :SENSe ]:WAVeform:DIF:FILTer:BANDwidth:AUTO  
[ :SENSe ]:WAVeform:DIF:FILTer:TYPE  
[ :SENSe ]:WAVeform:FREQuency:CENTer:ADJust  
[ :SENSe ]:WAVeform:FREQuency:SYNThesis:AUTO[:STATe]  
[ :SENSe ]:WAVeform:FREQuency:SYNThesis[:STATe]  
[ :SENSe ]:WAVeform:IF:FREQuency?  
[ :SENSe ]:WAVeform:IF:GAIN:AUTO[:STATe]  
[ :SENSe ]:WAVeform:IF:GAIN:LEVeL  
[ :SENSe ]:WAVeform:IF:GAIN:OFFSet  
[ :SENSe ]:WAVeform:IF:GAIN[:STATe]  
[ :SENSe ]:WAVeform:LO:DITHer[:STATe]  
[ :SENSe ]:WAVeform:LO:MIXMode  
[ :SENSe ]:WAVeform:LO:MIXMode:SIDE?  
[ :SENSe ]:WAVeform:SAVoid[:STATe]  
[ :SENSe ]:WAVeform:SPECTrum  
[ :SENSe ]:WAVeform:SRATe  
[ :SENSe ]:WAVeform:SWep:TIME  
SERvice[:PRODUCTION]:SOURce:MCONtrol:MPLicense[:STATe]  
SOURce:AM[:DEPTH][:LINear]  
SOURce:AM:INTernal:FREQuency  
SOURce:AM:INTernal:FREQuency:STEP[:INCRement]  
SOURce:AM:STATe  
SOURce:FM[:DEViation]  
SOURce:FM:INTernal:FREQuency  
SOURce:FM:INTernal:FREQuency:STEP[:INCRement]  
SOURce:FM:STATe  
SOURce:FREQuency:CHANnELs:BAND  
SOURce:FREQuency:CHANnELs:NUMBer  
SOURce:FREQuency:COUPLing
```

SOURce:FREQuency:COUPling:OFFSet  
 SOURce:FREQuency[:CW]  
 SOURce:FREQuency:OFFSet  
 SOURce:FREQuency:REFeRence  
 SOURce:FREQuency:REFeRence:SEt  
 SOURce:FREQuency:REFeRence:STATe  
 SOURce:FREQuency:STEP[:INCRement]  
 SOURce:LIST:INITiation:ARMed?  
 SOURce:LIST:NUMBer:STEPs  
 SOURce:LIST:REPetition:TYPE  
 SOURce:LIST:SEtUp:AMPLitude  
 SOURce:LIST:SEtUp:CLear  
 SOURce:LIST:SEtUp:CNFRequency  
 SOURce:LIST:SEtUp:DURation:TYPE  
 SOURce:LIST:SEtUp:INPut:TRIGger  
 SOURce:LIST:SEtUp:OUTPut:TRIGger  
 SOURce:LIST:SEtUp:RADio:BAND  
 SOURce:LIST:SEtUp:RADio:BAND:LINK  
 SOURce:LIST:SEtUp:TOCount  
 SOURce:LIST:SEtUp:TRANSition:TIME  
 SOURce:LIST:SEtUp:WAVeform  
 SOURce:LIST[:STATe]  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:AMPLitude  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:CNFRequency  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:DURation:TOCount  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:DURation:TOCount  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:DURation:TYPE  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:INPut:TRIGger  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:OUTPut:TRIGger  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:RADio:BAND  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:RADio:BAND:LINK  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:TRANSition:TIME  
 SOURce:LIST:STEP[1]|2|...|1000:SEtUp:WAVeform  
 SOURce:LIST:TRIGger[:IMMediate]  
 SOURce:LIST:TRIGger:INITiate[:IMMediate]  
 SOURce:LIST:TRIGger:OUTPut:TYPE  
 SOURce:LIST:TRIGger:OUTPut:TYPE:MARKer  
 SOURce:PM[:DEVIation]  
 SOURce:PM:INTernal:FREQuency  
 SOURce:PM:INTernal:FREQuency:STEP[:INCRement]  
 SOURce:PM:STATe  
 SOURce:POWer[:LEVEl][:IMMediate][:AMPLitude]  
 SOURce:POWer[:LEVEl][:IMMediate][:AMPLitude]:UNIT  
 SOURce:POWer[:LEVEl][:IMMediate]:OFFSet  
 SOURce:POWer:REFeRence  
 SOURce:POWer:REFeRence:STATe  
 SOURce:POWer:STEP[:INCRement]  
 SOURce:PRESet  
 SOURce:RADio:ARB:BASEband:FREQuency:OFFSet  
 SOURce:RADio:ARB:BASEband:POWer

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

SOURce:RADio:ARB:CATalog?  
SOURce:RADio:ARB:CATalog?  
SOURce:RADio:ARB:DEFault:DIRectory  
SOURce:RADio:ARB:DELeTe  
SOURce:RADio:ARB:DELeTe:ALL  
SOURce:RADio:ARB:FCATalog?  
SOURce:RADio:ARB:FCATalog?  
SOURce:RADio:ARB:HEADer:CLear  
SOURce:RADio:ARB:HEADer:INFormation?  
SOURce:RADio:ARB:HEADer:SAVE  
SOURce:RADio:ARB:IQADjustment:DELay  
SOURce:RADio:ARB:IQADjustment:GAIN  
SOURce:RADio:ARB:IQADjustment:[STATe]  
SOURce:RADio:ARB:LOAD  
SOURce:RADio:ARB:LOAD:ALL  
SOURce:RADio:ARB:MDEStination:ALCHold  
SOURce:RADio:ARB:MDEStination:PULSe  
SOURce:RADio:ARB:MPLicensed:NAME:LOCKed?  
SOURce:RADio:ARB:MPLicensed:UID:LOCKed?  
SOURce:RADio:ARB:MPOLarity:MARKer1|...|4  
SOURce:RADio:ARB:NR5G:PHASe:FILTer:BANDwidth  
SOURce:RADio:ARB:NR5G:PHASe:FILTer[:STATe]  
SOURce:RADio:ARB:NR5G:PHASe:SCS  
SOURce:RADio:ARB:NR5G:PHASe[:STATe]  
SOURce:RADio:ARB:RETRigger  
SOURce:RADio:ARB:RMS  
SOURce:RADio:ARB:RMS:CALCulate  
SOURce:RADio:ARB:RMS:CALCulation:MODE  
SOURce:RADio:ARB:RSCaling  
SOURce:RADio:ARB:SCLock:RATE  
SOURce:RADio:ARB:SEQuence[:MWAVEform]  
SOURce:RADio:ARB:SEQuence:SYNC  
SOURce:RADio:ARB[:STATe]  
SOURce:RADio:ARB:TRIGger:INITiate  
SOURce:RADio:ARB:TRIGger[:SOURce]  
SOURce:RADio:ARB:TRIGger[:SOURce]:EXTErnal:DELay  
SOURce:RADio:ARB:TRIGger[:SOURce]:EXTErnal:DELay:STATe  
SOURce:RADio:ARB:TRIGger[:SOURce]:EXTErnal:SLOPe  
SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DELay  
SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:DELay:STATe  
SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:LINE  
SOURce:RADio:ARB:TRIGger[:SOURce]:PXI:SLOPe  
SOURce:RADio:ARB:TRIGger:SYNC[:STATe]  
SOURce:RADio:ARB:TRIGger:TYPE  
SOURce:RADio:ARB:TRIGger:TYPE:CONTInuous[:TYPE]  
SOURce:RADio:ARB:TRIGger:TYPE:SADVance[:TYPE]  
SOURce:RADio:ARB:WAVEform  
SOURce:RADio:BAND:LINK  
SOURce:SYNC:CONFIg  
SOURce:SYNC:CONNEcted?

SOURce:SYNC:REMOte:ADDReSS  
SOURce:SYNC:REMOte:ADDReSS:ADD  
SOURce:SYNC:REMOte:ADDReSS:DELeTe  
SOURce:SYNC:REMOte:IPPort  
SOURce:SYNC:REMOte:SEC<integer>?  
SOURce:SYNC:REMOte:SECOndary<integer>  
SOURce:SYNC:RTSetting:STATe  
SOURce:SYNC:SETTings:ENABLe  
SOURce:SYNC:SETTings:SEGMeNt2:ENABLe  
SOURce:SYNC:SETTings:SEGMeNt2:FREQuency  
SOURce:SYNC:STARt  
SOURce:SYNC:STOP  
SOURce:SYNC:TYPE  
STATus:OPERation:CONDition?  
STATus:OPERation:ENABLe  
STATus:OPERation:ENABLe  
STATus:OPERation[:EVENT]?  
STATus:OPERation:INSTRument:CONDition?  
STATus:OPERation:INSTRument:ENABLe  
STATus:OPERation:INSTRument[:EVENT]?  
STATus:OPERation:INSTRument:NTRansition  
STATus:OPERation:INSTRument:PTRansition  
STATus:OPERation:NTRansition  
STATus:OPERation:PTRansition  
STATus:PRESet  
STATus:QUESTionable:CALibration:CONDition?  
STATus:QUESTionable:CALibration:ENABLe  
STATus:QUESTionable:CALibration[:EVENT]?  
STATus:QUESTionable:CALibration:EXTended:FAILure:CONDition?  
STATus:QUESTionable:CALibration:EXTended:FAILure:ENABLe  
STATus:QUESTionable:CALibration:EXTended:FAILure[:EVENT]?  
STATus:QUESTionable:CALibration:EXTended:FAILure:NTRansition  
STATus:QUESTionable:CALibration:EXTended:FAILure:PTRansition  
STATus:QUESTionable:CALibration:EXTended:NEEDed:CONDition?  
STATus:QUESTionable:CALibration:EXTended:NEEDed:ENABLe  
STATus:QUESTionable:CALibration:EXTended:NEEDed[:EVENT]?  
STATus:QUESTionable:CALibration:EXTended:NEEDed:NTRansition  
STATus:QUESTionable:CALibration:EXTended:NEEDed:PTRansition  
STATus:QUESTionable:CALibration:NTRansition  
STATus:QUESTionable:CALibration:PTRansition  
STATus:QUESTionable:CALibration:SKIPPed:CONDition?  
STATus:QUESTionable:CALibration:SKIPPed:ENABLe  
STATus:QUESTionable:CALibration:SKIPPed[:EVENT]?  
STATus:QUESTionable:CALibration:SKIPPed:NTRansition  
STATus:QUESTionable:CALibration:SKIPPed:PTRansition  
STATus:QUESTionable:CONDition?  
STATus:QUESTionable:ENABLe  
STATus:QUESTionable[:EVENT]?  
STATus:QUESTionable:FREQuency:CONDition?  
STATus:QUESTionable:FREQuency:ENABLe  
STATus:QUESTionable:FREQuency[:EVENT]?

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

STATus:QUESTionable:FREQuency:NTRansition  
STATus:QUESTionable:FREQuency:PTRansition  
STATus:QUESTionable:INTEgrity:CONDition?  
STATus:QUESTionable:INTEgrity:ENABle  
STATus:QUESTionable:INTEgrity[:EVENT]?  
STATus:QUESTionable:INTEgrity:NTRansition  
STATus:QUESTionable:INTEgrity:OUTPut:CONDition?  
STATus:QUESTionable:INTEgrity:OUTPut:ENABle  
STATus:QUESTionable:INTEgrity:OUTPut[:EVENT]?  
STATus:QUESTionable:INTEgrity:OUTPut:NTRansition  
STATus:QUESTionable:INTEgrity:OUTPut:PTRansition  
STATus:QUESTionable:INTEgrity:PTRansition  
STATus:QUESTionable:INTEgrity:SIGNal:CONDition?  
STATus:QUESTionable:INTEgrity:SIGNal:ENABle  
STATus:QUESTionable:INTEgrity:SIGNal[:EVENT]?  
STATus:QUESTionable:INTEgrity:SIGNal:NTRansition  
STATus:QUESTionable:INTEgrity:SIGNal:PTRansition  
STATus:QUESTionable:INTEgrity:UNCalibrated:CONDition?  
STATus:QUESTionable:INTEgrity:UNCalibrated:ENABle  
STATus:QUESTionable:INTEgrity:UNCalibrated[:EVENT]?  
STATus:QUESTionable:INTEgrity:UNCalibrated:NTRansition  
STATus:QUESTionable:INTEgrity:UNCalibrated:PTRansition  
STATus:QUESTionable:NTRansition  
STATus:QUESTionable:POWer:CONDition?  
STATus:QUESTionable:POWer:ENABle  
STATus:QUESTionable:POWer[:EVENT]?  
STATus:QUESTionable:POWer:NTRansition  
STATus:QUESTionable:POWer:PTRansition  
STATus:QUESTionable:POWer:PTRansition?>  
STATus:QUESTionable:PTRansition  
STATus:QUESTionable:TEMPerature:CONDition?  
STATus:QUESTionable:TEMPerature:ENABle  
STATus:QUESTionable:TEMPerature[:EVENT]?  
STATus:QUESTionable:TEMPerature:NTRansition  
STATus:QUESTionable:TEMPerature:PTRansition  
SYSTem:APPLication:CATalog[:NAME]?  
SYSTem:APPLication:CATalog[:NAME]:COUNT?  
SYSTem:APPLication:CATalog:OPTion?  
SYSTem:APPLication:CATalog:REVision?  
SYSTem:APPLication[:CURRent][:NAME]?  
SYSTem:APPLication[:CURRent]:OPTion?  
SYSTem:APPLication[:CURRent]:REVision?  
SYSTem:APPLication:LOAded?  
SYSTem:CALibration:ABORT  
SYSTem:CALibration:CGRoup  
SYSTem:CALibration:CGRoup:APPLy  
SYSTem:CALibration:CGRoup:APPLy:AOFF  
SYSTem:CALibration:CGRoup:COpy  
SYSTem:CALibration:CGRoup:COpy:FROM  
SYSTem:CALibration:DELeTe:ALL

```

SYSTEM:CALibration:DESCRiption
SYSTEM:CALibration:FREQuency:OFFSet
SYSTEM:CALibration:INITiate:SElected
SYSTEM:CALibration:INPut
SYSTEM:CALibration:MODUle[1]|2|...|10:SNUMber?
SYSTEM:CALibration:MODUle:SElect
SYSTEM:CALibration:REFerence
SYSTEM:CALibration:ROW[1]|2|...|100:APPLy:STATe
SYSTEM:CALibration:ROW[1]|2|...|100:ATTenuation:START
SYSTEM:CALibration:ROW[1]|2|...|100:ATTenuation:STEP
SYSTEM:CALibration:ROW[1]|2|...|100:ATTenuation:STOP
SYSTEM:CALibration:ROW[1]|2|...|100:ATTenuation:TYPE
SYSTEM:CALibration:ROW[1]|2|...|100:CALibrate:STATe
SYSTEM:CALibration:ROW[1]|2|...|100:CAPPLied?
SYSTEM:CALibration:ROW[1]|2|...|100:COUPLing
SYSTEM:CALibration:ROW[1]|2|...|100:DElete
SYSTEM:CALibration:ROW[1]|2|...|100:DUPLicate
SYSTEM:CALibration:ROW[1]|2|...|100:EATTenuation:START
SYSTEM:CALibration:ROW[1]|2|...|100:EATTenuation:STEP
SYSTEM:CALibration:ROW[1]|2|...|100:EATTenuation:STOP
SYSTEM:CALibration:ROW[1]|2|...|100:EATTenuation:TYPE
SYSTEM:CALibration:ROW[1]|2|...|100:FATTenuation:START
SYSTEM:CALibration:ROW[1]|2|...|100:FATTenuation:STOP
SYSTEM:CALibration:ROW[1]|2|...|100:FATTenuation:TYPE
SYSTEM:CALibration:ROW[1]|2|...|100:FEAttenuation:START
SYSTEM:CALibration:ROW[1]|2|...|100:FEAttenuation:STEP
SYSTEM:CALibration:ROW[1]|2|...|100:FEAttenuation:STOP
SYSTEM:CALibration:ROW[1]|2|...|100:FEAttenuation:TYPE
SYSTEM:CALibration:ROW[1]|2|...|100:FREQuency:POINts
SYSTEM:CALibration:ROW[1]|2|...|100:FREQuency:START
SYSTEM:CALibration:ROW[1]|2|...|100:FREQuency:STEP
SYSTEM:CALibration:ROW[1]|2|...|100:FREQuency:STOP
SYSTEM:CALibration:ROW[1]|2|...|100:FREQuency:SYNThesis:ALL[:STATe]
SYSTEM:CALibration:ROW[1]|2|...|100:FREQuency:SYNThesis[:STATe]
SYSTEM:CALibration:ROW[1]|2|...|100:IF:GAIN[:STATe]?
SYSTEM:CALibration:ROW[1]|2|...|100:IF:GAIN
[:STATe]AUTO|HIGH|LOW|ALL
SYSTEM:CALibration:ROW[1]|2|...|100:IF:PATH
SYSTEM:CALibration:ROW[1]|2|...|100:INSert
SYSTEM:CALibration:ROW[1]|2|...|100:LAST?
SYSTEM:CALibration:ROW[1]|2|...|100:LO:MMode
SYSTEM:CALibration:ROW[1]|2|...|100:MATCh[:STATe]
SYSTEM:CALibration:ROW[1]|2|...|100:NAME
SYSTEM:CALibration:ROW[1]|2|...|100:POWer:GAIN:BAND?
SYSTEM:CALibration:ROW[1]|2|...|100:POWer[:RF]:GAIN:BAND
SYSTEM:CALibration:ROW[1]|2|...|100:POWer[:RF]:GAIN:LNA[:STATe]
SYSTEM:CALibration:ROW[1]|2|...|100:POWer[:RF]:MW:PATH
SYSTEM:CALibration:ROW[1]|2|...|100:STATus?
SYSTEM:CALibration:ROW[1]|2|...|100:TYPE
SYSTEM:CALibration:ROW[1]|2|...|100:UCMeas
  
```

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

SYSTem:CALibration:STATus:ALL?  
SYSTem:CALibration:TUNE:FREQuency  
SYSTem:CALibration:TUNE:OUTput[:STATe]  
SYSTem:CALibration:TUNE:REFerence  
SYSTem:CALibration:TUNE[:SElected]  
SYSTem:CALibration:TUNE:SPACing  
SYSTem:CALibration:TUNE:TYPE  
SYSTem:COMMunicate:GPIB[1][:SELF]:ADDress  
SYSTem:COMMunicate:GPIB[1][:SELF]:CONTroller[:ENABle]  
SYSTem:COMMunicate:LAN:INSTrument:PORT?  
SYSTem:COMMunicate:LAN:IPV4:CONFig  
SYSTem:COMMunicate:LAN:IPV6:CONFig  
SYSTem:COMMunicate:LAN:MULTiple:NIC:ENABled?  
SYSTem:COMMunicate:LAN:PHYSical:IPADdress:LIST?  
SYSTem:COMMunicate:LAN:SCPI:EOSession:DCLear:ENABle  
SYSTem:COMMunicate:LAN:SCPI:HISLip:ENABle  
SYSTem:COMMunicate:LAN:SCPI:SICL:ENABle  
SYSTem:COMMunicate:LAN:SCPI:SOCKet:CONTRol?  
SYSTem:COMMunicate:LAN:SCPI:SOCKet:ENABle  
SYSTem:COMMunicate:LAN:SCPI:TELNet:ENABle  
SYSTem:COMMunicate:USB:CONNection?  
SYSTem:COMMunicate:USB:PACKets?  
SYSTem:COMMunicate:USB:STATus?  
SYSTem:CONFigure[:SYSTem]?  
SYSTem:CSYSTem?  
SYSTem:DATE  
SYSTem:DEFault  
SYSTem:DISPlay:BACKlight:INTensity  
SYSTem:DISPlay:CFORmat  
SYSTem:DISPlay:HINTs?  
SYSTem:DISPlay:HINTs[:STATe]  
SYSTem:DISPlay:LANGuage  
SYSTem:DISPlay:MPPosition  
SYSTem:DISPlay:MPTab  
SYSTem:DISPlay:NEPimmediate  
SYSTem:ERRor[:NEXT]?  
SYSTem:ERRor:OVERload[:STATe]  
SYSTem:ERRor:PUP?  
SYSTem:ERRor:VERBose  
SYSTem:HELP:HEADers?  
SYSTem:HID?  
SYSTem:IDN  
SYSTem:IDN:CONFigure  
SYSTem:KLOCK  
SYSTem:LICense[:FPACK]:WAVEform:ADD  
SYSTem:LICense[:FPACK]:WAVEform:CLEar  
SYSTem:LICense[:FPACK]:WAVEform:FREE?  
SYSTem:LICense[:FPACK]:WAVEform:LOCK  
SYSTem:LICense[:FPACK]:WAVEform:NAME?  
SYSTem:LICense[:FPACK]:WAVEform:REPLace

SYSTem:LiCense[:FPACK]:WAVeform:STATus?  
SYSTem:LiCense[:FPACK]:WAVeform:UID?  
SYSTem:LiCense[:FPACK]:WAVeform:USED?  
SYSTem:LKEY?  
SYSTem:LKEY  
SYSTem:LKEY:BORRow  
SYSTem:LKEY:BORRow:LIST?  
SYSTem:LKEY:BORRow:NETWork:COU:ENABle  
SYSTem:LKEY:BORRow:RETurn  
SYSTem:LKEY:COU?  
SYSTem:LKEY:COU:LIST?  
SYSTem:LKEY:DELeTe  
SYSTem:LKEY:LIST?  
SYSTem:LKEY:SOFTware:SUPPort:EXPIration:DATE?  
SYSTem:LKEY:WAVeform:ADD  
SYSTem:LKEY:WAVeform:CLear  
SYSTem:LKEY:WAVeform:FREE?  
SYSTem:LKEY:WAVeform:LOCK  
SYSTem:LKEY:WAVeform:NAME?  
SYSTem:LKEY:WAVeform:REPLace  
SYSTem:LKEY:WAVeform:STATus?  
SYSTem:LKEY:WAVeform:UID?  
SYSTem:LKEY:WAVeform:USED?  
SYSTem:LOCK:NAME?  
SYSTem:LOCK:OWNer?  
SYSTem:LOCK:RELease  
SYSTem:LOCK:REQuest?  
SYSTem:LOFF  
SYSTem:LWStation  
SYSTem:METRics:FPANel?  
SYSTem:METRics:SCPI?  
SYSTem:METRics:STIME?  
SYSTem:MRELay:COUNT?  
SYSTem:OPTions?  
SYSTem:PDOWN  
SYSTem:PERSONa:DEFault  
SYSTem:PERSONa:MANufacturer  
SYSTem:PERSONa:MANufacturer:DEFault  
SYSTem:PERSONa:MODEl  
SYSTem:PERSONa:MODEl:DEFault  
SYSTem:PON:APPLication:LLISt  
SYSTem:PON:APPLication:VMEMory[:AVAilable]?  
SYSTem:PON:APPLication:VMEMory:TOTal?  
SYSTem:PON:APPLication:VMEMory:USED?  
SYSTem:PON:APPLication:VMEMory:USED:NAME?  
SYSTem:PON:ETIME?  
SYSTem:PON:FPGA:LOAD  
SYSTem:PON:FPGA:PREFerence  
SYSTem:PON:MODE  
SYSTem:PON:TIME?  
SYSTem:PON:TYPE

9 Programming the Instrument  
9.1 List of Supported SCPI Commands

SYSTem:PRESet  
SYSTem:PRESet:FULL  
SYSTem:PRESet:TYPE  
SYSTem:PRESet:USER  
SYSTem:PRESet:USER:ALL  
SYSTem:PRESet:USER:SAVE  
SYSTem:PRINT:THEMe  
SYSTem:PUP  
SYSTem:PUP:PROcEss  
SYSTem:SECurity:USB:WPRotect[:ENABle]  
SYSTem:SEQuencer  
SYSTem:SET  
SYSTem:SHOW  
SYSTem:SOFTware:VERSIon:DATE?  
SYSTem:TEMPerature:HEXTreme?  
SYSTem:TEMPerature:LEXTreme?  
SYSTem:TIME  
SYSTem:VERSIon?

T

TRACe[:<meas>]:CLEar:ALL  
TRACe:<meas>:COPY  
TRACe:<meas>:EXCHange  
TRACe[:<meas>]:PRESet:ALL  
TRACe[1]|2|...|6:DISPLay[:STATe]  
TRACe[1]|2|...|6:TYPE  
TRACe[1]|2|...|6:UPDate[:STATe]  
TRACe[1]|2|3:<meas>:DISPLay[:STATe]  
TRACe[1]|2|3:<meas>:TYPE  
TRACe[1]|2|3:<meas>:UPDate[:STATe]  
TRACe:CLEar  
TRACe:COPY  
TRACe[:DATA]  
TRACe:EXCHange  
TRACe:MONitor:CLEar:ALL  
TRIGger:<measurement>[:SEQuence]:IQ:SOURce  
TRIGger:<measurement>[:SEQuence]:RF:SOURce  
TRIGger:<measurement>[:SEQuence]:SOURce  
TRIGger[1]|2|...|4[:SEQuence]:OUTPut  
TRIGger[1]|2|...|4[:SEQuence]:OUTPut:DIRectiOn  
TRIGger[1]|2|...|4[:SEQuence]:OUTPut:POLarity  
TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut  
TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:LINE  
TRIGger:PXIE:ANALyzer[:SEQuence]:OUTPut:POLarity  
TRIGger:PXIE:SOURce[:SEQuence]:OUTPut  
TRIGger:PXIE:SOURce[:SEQuence]:OUTPut:LINE  
TRIGger:PXIE:SOURce[:SEQuence]:OUTPut:POLarity  
TRIGger[:SEQuence]:<trig\_source>:DELay

TRIGger[:SEquence]:<trig\_source>:DElay:STATe  
TRIGger[:SEquence]:<trig\_source>:LEVel  
TRIGger[:SEquence]:<trig\_source>:SLOPe  
TRIGger[:SEquence]:AIQMag:BANDwidth  
TRIGger[:SEquence]:AIQMag:CENTer  
TRIGger[:SEquence]:ATRigger  
TRIGger[:SEquence]:ATRigger:STATe  
TRIGger[:SEquence]:EXternal1|EXternal2|RFBurst:DElay:COMPensation  
TRIGger[:SEquence]:FRAMe:ADJust  
TRIGger[:SEquence]:FRAMe:OFFSet  
TRIGger[:SEquence]:FRAMe:OFFSet:DISPlay:RESet  
TRIGger[:SEquence]:FRAMe:PERiod  
TRIGger[:SEquence]:FRAMe:SMONitor:RESet  
TRIGger[:SEquence]:FRAMe:SYNC  
TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff  
TRIGger[:SEquence]:FRAMe:SYNC:HOLDoff:STATe  
TRIGger[:SEquence]:HOLDoff  
TRIGger[:SEquence]:HOLDoff:STATe  
TRIGger[:SEquence]:HOLDoff:TYPE  
TRIGger[:SEquence]:INTernal:SOURce:OUTPut  
TRIGger[:SEquence]:INTernal:SOURce:OUTPut:POLarity  
TRIGger[:SEquence]:OFFSet:STATe  
TRIGger[:SEquence]:OPTimize:MODE  
TRIGger[:SEquence]:PXI:LINE  
TRIGger[:SEquence]:RFBurst:LEVel:ABSolute  
TRIGger[:SEquence]:RFBurst:LEVel:RELative  
TRIGger[:SEquence]:RFBurst:LEVel:TYPE  
TRIGger[:SEquence]:SOURce  
TRIGger[:SEquence]:TV:FMODe  
TRIGger[:SEquence]:TV:LINE  
TRIGger[:SEquence]:TV:STANdard

## U

UNIT:ACPower:POWer:PSD  
UNIT:CHPower:POWer:PSD

## 9.2 IEEE 488.2 Common Commands

The instrument supports the following subset of IEEE 488.2 Common Commands, as defined in Chapter 10 of [IEEE Standard 488.2–1992](#). As indicated below, some of these commands correspond directly to instrument front-panel functionality, while others are available only as remote commands.

- ["\\*CAL? - Calibration Query" on page 2988](#) (Align Now All equivalent)
- ["\\*CLS - Clear Status" on page 2989](#)
- ["\\*ESE - Standard Event Status Enable" on page 2989](#)
- ["\\*ESR? - Standard Event Status Register Query" on page 2990](#)
- ["\\*IDN? - Identification Query" on page 2990](#)
- ["\\*OPC? - Operation Complete" on page 2991](#)
- ["\\*OPT? - Query Instrument Options" on page 2992](#)
- ["\\*RCL - Recall Instrument State" on page 2992](#) (Recall State equivalent)
- ["\\*RST - Reset" on page 2992](#) (Mode Preset equivalent)
- ["\\*SAV - Save Instrument State" on page 2993](#) (Save State equivalent)
- ["\\*SRE - Service Request Enable" on page 2993](#)
- ["\\*STB? - Status Byte Query" on page 2994](#)
- ["\\*TRG - Trigger" on page 2994](#)
- ["\\*TST? - Self Test Query" on page 2994](#)
- ["\\*WAI - Wait-to-Continue" on page 2995](#)

### 9.2.1 \*CAL? - Calibration Query

**\*CAL?** Performs a full alignment and returns a number indicating the success of the alignment. A zero is returned if the alignment is successful. A one is returned if any part of the alignment fails. The equivalent SCPI command is [:CALibrate\[:ALL\]?](#)

See ["Align Now All" on page 2353](#)

---

Remote Command

**\*CAL**

---

Example	<b>*CAL?</b>  Runs a full alignment and returns 0 if no problems encountered
Status Bits/OPC dependencies	See <a href="#">"Align Now All" on page 2353</a>

---

### 9.2.2 \*CLS - Clear Status

Clears the ["Status Byte Register" on page 3025](#), by emptying the error queue and clearing all bits in all of the event registers, and consequently all bits in the Status Byte Register.

The Status Byte Register summarizes the states of the other registers. It is also responsible for generating service requests.

---

Remote Command	<b>*CLS</b>
Example	<b>*CLS</b>  Clears the error queue and the Status Byte Register
Notes	For related commands, see <a href="#">:SYSTEM:ERROR[:NEXT]?</a> See also <a href="#">:STATUS:PRESet</a> and all commands in the <a href="#">"Status Register System &amp; STATUS Subsystem" on page 3016</a>
Status Bits/OPC dependencies	Resets all bits in all event registers to 0, which resets all the status byte register bits to 0 also

---

### 9.2.3 \*ESE - Standard Event Status Enable

Sets the desired bits in the Event Enable sub-register of the ["Standard Event Status Register" on page 3029](#), which enables the corresponding bits in the Standard Event Status Register. This register monitors I/O errors and synchronization conditions such as operation complete, request control, query error, device-dependent error, status execution error, command error, and power on. The selected bits are **ORed** to become a summary bit (bit 5) in the ["Status Byte Register" on page 3025](#), which can be queried.

The query returns the state of this register.

Numeric values for bit patterns can be entered using decimal or hexadecimal representations (0 to 32767, equivalent to **#H0** to **#H7FFF**).

---

Remote Command	<b>*ESE &lt;integer&gt;</b> <b>*ESE?</b>
Example	<b>*ESE 36</b>  Enables the Standard Event Status Register to monitor query and command errors (bits 2 and 5)

---

---

	<b>*ESE?</b>
	Returns a 36 indicating that the query and command status bits are enabled
Notes	For related commands, see the <a href="#">"Status Register System &amp; STATus Subsystem" on page 3016</a> and <a href="#">:SYSTem:ERRor[:NEXT]?</a>
Preset	255
State Saved	Not saved in state
Min	0
Max	255

### 9.2.4 \*ESR? - Standard Event Status Register Query

Queries and clears the ["Standard Event Status Register" on page 3029](#). (This is a destructive read.) The value returned is a hexadecimal number that reflects the current state (0/1) of all the bits in the register.

---

Remote Command	<b>*ESR?</b>
Example	<b>*ESR?</b> Returns a 1 if there is either a query or command error, otherwise it returns a zero
Notes	For related commands, see <a href="#">"Status Register System &amp; STATus Subsystem" on page 3016</a>
Min/Max	0 / 255
Status Bits/OPC dependencies	Standard Event Status Register (bits 0 – 7)

### 9.2.5 \*IDN? - Identification Query

Returns a string of instrument identification information. The string contains the model number, serial number, and firmware revision.

The response is organized into four fields separated by commas. The field definitions are as follows:

1. Manufacturer
2. Model
3. Serial number
4. Firmware version

---

Remote Command	<b>*IDN?</b>
----------------	--------------

Example	<p><b>*IDN?</b></p> <p>Returns instrument identification information, such as:  <b>Keysight Technologies,N9040B,US01020004,A.15.02</b></p> <p>Backwards Compatibility Command</p>
Example	<p><b>:ID?</b></p> <p>Returns model number, such as:  <b>N9040B</b></p>
Notes	<p>Provided for backwards compatibility:          In Remote Language Compatibility Mode, <b>ID?</b> returns the model number of the emulated instrument          In any other Mode, the returned model number is that of the actual instrument</p>
Backwards Compatibility SCPI	<p><b>:ID?</b></p>

### 9.2.6 \*OPC? - Operation Complete

Sets bit 0 in the "Standard Event Status Register" on page 3029 (SESR) to "1" when pending operations have finished, that is when all overlapped commands are complete. It does not hold off subsequent operations. You can determine when the overlapped commands have completed either by polling the OPC bit in SESR, or by setting up the status system so that a service request (SRQ) is asserted when the OPC bit is set.

**\*OPC?** returns "1" after all the current overlapped commands are complete, so it holds off subsequent commands until the "1" is returned, then the program continues. This query can be used to synchronize events of other instruments on the external bus.

Remote Command	<p><b>*OPC</b></p> <p><b>*OPC?</b></p>
Example	<p>Select single sweeping:  <b>:INIT:CONT 0</b></p> <p>Initiate a sweep:  <b>:INIT:IMM</b></p> <p>Hold off any further commands until the sweep is complete:  <b>*OPC?</b></p>
Notes	<p>Not global to all remote ports or front panel. <b>*OPC</b> only affects operations that were initiated on the same port that the <b>*OPC</b> command was issued from</p> <p><b>*OPC</b> is an overlapped command, but <b>*OPC?</b> is sequential</p> <p><b>*OPC?</b> does <i>not</i> holdoff the completion of GUI update commands , such as <b>:MMEM:LOAD:SCON</b>  <b>"myScreenConfig.screen"</b></p>

### 9.2.7 \*OPT? - Query Instrument Options

Returns a string of all installed instrument options. It is a comma-separated list, with quotes, for example:

```
"550,B25,B40,BBA,CRP,CRW,EA3,EDP,ESC,EXM,FBP,LNP,MPB,NF2,RTS,EMC,FP2"
```

---

Remote Command	<code>*OPT?</code>
----------------	--------------------

### 9.2.8 \*RCL - Recall Instrument State

Recalls the instrument state from the specified instrument memory register.

- If the state being loaded has a newer firmware revision than the revision of the instrument, no state is recalled and an error is reported
- If the state being loaded has an equal firmware revision than the revision of the instrument, the state will be loaded
- If the state being loaded has an older firmware revision than the revision of the instrument, then the instrument will only load the parts of the state that apply to the older revision

---

Remote Command	<code>*RCL &lt;register #&gt;</code>
Example	Recall the instrument state that is currently stored in register 7 (register 8 in the UI): <code>*RCL 7</code>
Notes	Registers 0 through 15 are accessible from the front panel in menu keys for Recall Registers. Register 0 corresponds to front panel Register 1
Min	0
Max	127
Status Bits/OPC dependencies	The command is sequential

### 9.2.9 \*RST - Reset

`*RST` is equivalent to `:SYST:PRES;:INIT:CONT OFF`, which is a Mode Preset in the **Single** measurement state. This command is preferred over the Mode Preset command `:SYST:PRES`, because optimal remote programming occurs with the instrument in the **Single** measurement state.

`*RST` clears all pending OPC bits and sets the Status Byte to 0.

Remote Command	<code>*RST</code>
Notes	Sequential
Couplings	<code>*RST</code> causes the currently running measurement to be aborted and causes the default measurement to be active. <code>*RST</code> gets the mode to a consistent state, with all of the default couplings set
Status Bits/OPC dependencies	Clears all pending OPC bits. The " <a href="#">Status Byte Register</a> " on page 3025 is set to 0

### 9.2.10 \*SAV - Save Instrument State

Saves the current instrument state and mode to the specified instrument memory register.

Remote Command	<code>*SAV &lt;register #&gt;</code>
Example	Save the instrument state in register 9 (register 10 in the UI): <code>*SAV 9</code>
Notes	Registers 0 through 15 are accessible from the front panel in menu keys for Save Registers. Register 0 corresponds to the front panel Register 1
Min/Max	0 / 127
Status Bits/OPC dependencies	The command is sequential

### 9.2.11 \*SRE - Service Request Enable

Enables the desired bits of the "[Service Request Enable Register](#)" on page 3028.

The query returns the value of the register, indicating which bits are currently enabled.

Numeric values for bit patterns can be entered using decimal or hexadecimal representations (0 to 32767, equivalent to `#H0` to `#H7FFF`).

Remote Command	<code>*SRE &lt;integer&gt;</code> <code>*SRE?</code>
Example	Enable bits 1, 2, and 4 in the service request enable register: <code>*SRE 22</code>
Notes	For related commands, see " <a href="#">Status Register System &amp; STATus Subsystem</a> " on page 3016 and <code>:SYSTem:ERRor[:NEXT]?</code>
Preset	0
Min/Max	0 / 255

---

Status Bits/OPC dependencies      Service Request Enable Register (all bits, 0 – 7)

### 9.2.12 \*STB? - Status Byte Query

Returns the value of the "Status Byte Register" on page 3025 without erasing its contents.

---

Remote Command	*STB?
Example	Return a decimal value for the bits in the Status Byte Register: *STB?  For example, if 16 is returned, it indicates that bit 5 is set and one of the conditions monitored in the standard event status register is set
Notes	See related command " <a href="#">*CLS - Clear Status</a> " on page 2989
Status Bits/OPC dependencies	Status Byte Register (all bits, 0 – 7)

### 9.2.13 \*TRG - Trigger

Triggers the instrument. Use `:TRIGger[:SEquence]:SOURce` to select the trigger source.

---

Remote Command	*TRG
Example	Trigger the instrument to take a sweep or start a measurement, depending on the current instrument settings: *TRG
Notes	See related command <code>:INITiate:IMMEDIATE</code>

### 9.2.14 \*TST? - Self Test Query

Performs the internal self-test routines and returns a number indicating the success of the testing. The value returned is 0 if the test is successful, or 1 if it fails.

---

Remote Command	*TST?
Example	Run the self-test routines: *TST?

### 9.2.15 \*WAI - Wait-to-Continue

Causes the instrument to wait until all overlapped commands are completed before executing any additional commands. There is no equivalent query.

Remote Command	<code>*WAI</code>
Example	Set the instrument to single sweep. Start a sweep, then wait for its completion: <code>:INIT:CONT OFF;INIT;*WAI</code>
Notes	<code>*WAI</code> does <i>not</i> wait for the completion of user-interface-related commands, such as <code>:MMEM:LOAD:SCON "myScreenConfig.screen"</code>
Status Bits/OPC dependencies	Not global to all remote ports or front panel. <code>*OPC</code> only considers operation that was initiated on the same port that the <code>*OPC</code> command was issued from

## 9.3 SCPI Operation and Results Query

You can use SCPI commands for remote control of measurements and querying of measurement results data. There are several alternative commands you can use to control the measurement, depending on how you wish to operate the instrument. There are also a number of queries that you can use to extract the measurement data.

In this section, “Mode” refers to a Measurement Application, for example, Spectrum Analyzer or 5G NR.

### 9.3.1 Mode Control

Use either `:INSTRument:SElect` or `:INSTRument:NSElect` to select the Mode. See ["Mode" on page 106](#).


`:INSTRument:CONFigure` causes a Mode *and* Measurement switch at the same time. This results in faster overall switching than sending `:INSTRument:SElect` and `:CONFigure` separately, as described in ["Mode" on page 106](#).

### 9.3.2 Measurement Control

This section describes the measurement control commands listed below, and their functions.

<a href="#">"CONFigure" on page 2997</a>	Switches to the desired measurement. Presets all measurement settings to their defaults, <i>unless</i> <code>:NDEFault</code> is specified
<a href="#">"INITiate" on page 2998</a>	Starts the measurement
<a href="#">"FETCh" on page 2998</a>	Queries the data without starting the measurement. If a measurement is already in progress, waits for completion
<a href="#">"READ" on page 2999</a>	Starts the measurement with the current settings and queries the data
<a href="#">"MEASure" on page 3000</a>	Switches to the desired measurement, presets all measurement settings to their defaults, starts the measurement and queries the data

The relationship between the command forms is illustrated in the diagram below. `:FETCh`, `:READ` and `:MEASure` are queries that return measurement data.

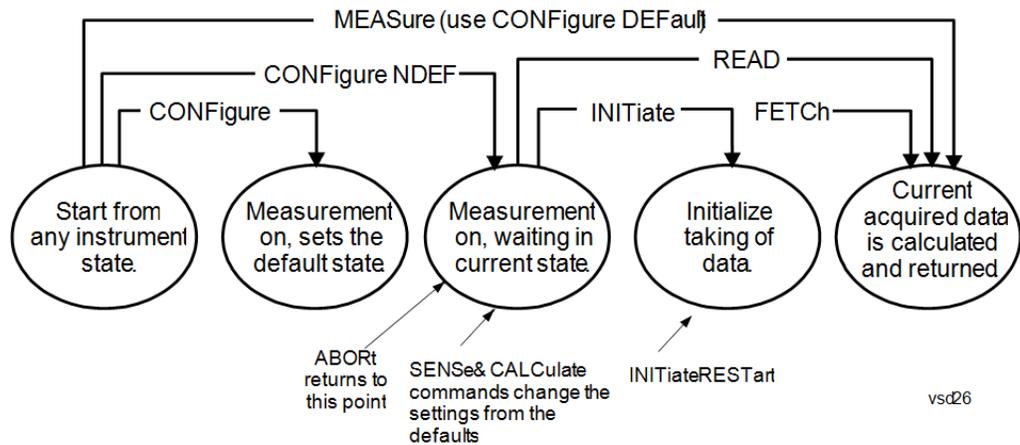

### 9.3.2.1 CONFigure

Stops the current measurement (if any) and sets up the instrument for the specified measurement using the measurement’s default settings. Does not initiate the collection of measurement data unless `:INIT:CONT` is `ON`. If you change any measurement settings after using `:CONFigure`, `"READ"` on page 2999 can be used to initiate a measurement without changing the settings back to their defaults.

Normally `:CONFigure` presets the measurement after selecting it; but, if sent with the `NDEFault` parameter, it selects it without performing a Preset.

---

Remote Command    `:CONFigure:<measurement>[:NDEFault]`  
                           `:CONFigure?`

---

Example            Select and preset the Swept SA measurement:  
                           `:CONF:SAN`

                          Select the Swept SA measurement *without* presetting:  
                           `:CONF:SAN:NDEF`

                          Query the current measurement:  
                           `:CONF?`

---

Remote Command    `:CONFigure:CATalog?`

---

Example            `:CONF:CATalog?`

                          returns a quoted string of all licensed measurement names in the current mode. For example, `"SAN, CHP, OBW, ACP, PST, TXP, SPUR, SEM, LIST"` for the Spectrum Analyzer mode

### 9.3.2.2 INITiate

Initiates a trigger cycle for the specified measurement, but does not output any data. You must then use `:FETCh<meas>` to return data. If a measurement other than the current one is specified, the instrument will switch to that measurement and then initiate it.

---

Remote Command      `:INITiate:<measurement>`

---

Example      Switch to the `SANalyzer` (Swept SA) measurement if not already there, then start the measurement:

`:INIT:SAN`

`:INITiate` does not change any of the measurement settings. For example, if you have already run the ACP measurement and you send `:INIT:ACP?` it initiates a new ACP measurement using the same instrument settings as the last time ACP was run.

If another measurement is running, `:INIT` switches to the specified measurement. For example, suppose you are running the channel power measurement. If you send `:INIT:ACP?` it changes from channel power to ACP and initiates an ACP measurement.

If your selected measurement is currently in the idle state, it restarts the measurement. Depending upon the measurement and the number of averages, there may be multiple data acquisitions, with multiple trigger events, for one full trigger cycle.

**CAUTION**

`:INIT` allows additional commands *while* the measurement is in progress.

Be aware that such additional commands may change measurement settings. They may cause the measurement in progress to be discarded, and a new measurement may start.

---

To wait for the completion of a measurement after sending `:INITiate`, send `*WAI - Wait-to-Continue` on page 2995, or `*OPC? - Operation Complete` on page 2991, or use `FETCh` on page 2998.

### 9.3.2.3 FETCh

Places selected data from the most recent measurement into the output buffer. Use `:FETCh` if you have already made a valid measurement and you want to retrieve data. You can issue `:FETCh` multiple times with differing `[n]` values without restarting or re-making the measurement, for example, both scalars and trace data from a single measurement.

---

Remote Command      `:FETCh:<measurement>[n]?`

---

---

Example Fetch item 2 (Trace 2) from the **SAN** (Swept SA) measurement when the measurement completes. If not in the Swept SA measurement, returns an error:

**:FETCh:SAN2?**

**:FETCh** does not change any of the measurement settings, it simply reads the results of the current measurement. **:FETCh** may be used to return results other than those specified with the original **:READ** or **:MEASure** query that you sent.

You can only **:FETCh** results from the measurement that is currently active, it does not change to a different measurement. An error message is reported if a measurement other than the current one is specified.

If you need to get new measurement data, use **"READ"** on page 2999, which is equivalent to **"INITiate"** on page 2998 followed by **:FETCh**.

The measurement results for **n = 1** (usually the scalar result) will be returned if the optional **[n]** value is not included, or is set to 1. If the **[n]** value is set to a value other than 1, the selected data results will be returned. See each measurement for details of what types of scalar results or trace data results are available. The binary data formats should be used for handling large blocks of data since they are smaller and transfer faster than the ASCII format. See **"Format Data: Numeric Data (Remote Command Only)"** on page 3004.

Note that the data returned by **:FETCh?** uses the data setting specified by **"Format Data: Numeric Data (Remote Command Only)"** on page 3004 and **"Format Data: Byte Order (Remote Command Only)"** on page 3005 commands, and can return real or ASCII data. If the format is set to **INT, 32**, it returns **REAL, 32** data.

### 9.3.2.4 READ

Initiates a trigger cycle for the specified measurement and outputs the requested data. If a measurement other than the current one is specified, the instrument will switch to that measurement before it initiates the measurement and returns results.

---

Remote Command **:READ:<measurement>[n]?**

Example Switch to the **SANalyzer** (Swept SA) measurement if not already there, start the measurement, and return item 2 (Trace 2) from the measurement when the measurement completes:

**:READ:SAN2?**

**:READ** does not change any of the measurement settings. For example, if you have already run the ACP measurement and you send **:READ:ACP?**, it initiates a new ACP measurement using the same instrument settings as the last time ACP was run.

**:READ** switches to the specified measurement if the instrument is not already there. For example, suppose you have already run the ACP measurement but now you are running the Channel Power measurement. When you send **:READ:ACP?**, it changes

from Channel Power back to ACP and, using the previous ACP settings, initiates the measurement and return results.

The measurement results for  $n = 1$  (usually the scalar result) will be returned if the optional `[n]` value is not included, or is set to 1. If the `[n]` value is set to a value other than 1, the selected data results will be returned. See each measurement for details of what types of scalar results or trace data results are available. The binary data formats should be used for handling large blocks of data since they are smaller and transfer faster than the ASCII format. See ["Format Data: Numeric Data \(Remote Command Only\)" on page 3004](#).

Note that the data returned by `:READ?` uses the data setting specified by ["Format Data: Byte Order \(Remote Command Only\)" on page 3005](#) and ["Format Data: Numeric Data \(Remote Command Only\)" on page 3004](#), and can return real or ASCII data. If the format is set to `INT, 32` it returns `REAL, 32` data.

`:READ` blocks other SCPI communication, waiting until the measurement is complete before returning results.

For more details of how measurements proceed, see also ["INITiate" on page 2998](#).

### 9.3.2.5 MEASure

Stops the current measurement (if any) and sets up the instrument for the specified measurement using the measurement's default settings, initiates a trigger cycle for the specified measurement, and outputs the requested data.

---

Remote Command	<code>:MEASure:&lt;measurement&gt;[n]?</code>
----------------	---

---

Example	Switch to the <code>SANalyzer</code> (Swept SA) measurement, start the measurement, and read back item 2 (Trace 2) when the measurement completes <code>:MEAS:SAN2?</code>
---------	---

This is a fast single-command way to make a measurement using the measurement's default settings. These are the settings and units that conform to the Mode Setup settings (for example, Radio Standard) that you have currently selected.

Stops the current measurement (if any) and sets up the instrument for the specified measurement using the measurement's defaults.

Initiates the data acquisition for the measurement.

Blocks other SCPI communication, waiting until the measurement is complete before returning results.

Depending on the measurement and the number of averages, there may be multiple data acquisitions, with multiple trigger events.

After the data is valid, returns the scalar results, or the trace data, for the specified measurement. The type of data returned may be defined by an `[n]` value that is sent with the command.

If the optional `[n]` value is not included, or is set to 1, scalar measurement results will be returned. If the `[n]` value is other than 1, the selected trace data results will be returned. See each command for details of which types of scalar results or trace data results are available.

The default format for data output is ASCII. (Older versions of Spectrum Analysis and Phase Noise mode measurements only use ASCII.) The binary data formats should be used for handling large blocks of data, because transfers are smaller and faster than when using the ASCII format. See ["Format Data: Numeric Data \(Remote Command Only\)" on page 3004](#) for more information.

If you need to change some of the measurement parameters from the measurement's default settings, you can set up the measurement with `:CONFigure`. Use the commands in the `:SENSe:<measurement>` and `:CALCulate:<measurement>` subsystems to change the settings, then you can use `:READ?` to initiate the measurement and query the results.

Measurement settings persist if you initiate a different measurement and then return to a previous one. Use `:READ?` if you want to use those persistent settings. If you want to go back to the default settings, use `:MEASure?`.

Note that the data returned to `:MEASure?` uses the data setting specified by ["Format Data: Byte Order \(Remote Command Only\)" on page 3005](#) and ["Format Data: Numeric Data \(Remote Command Only\)" on page 3004](#), and can return real or ASCII data. If the format is set to `INT, 32` it returns `REAL, 32` data.

### 9.3.3 Trace Formatting Commands

The following commands and queries are available to format and manipulate trace data.

#### 9.3.3.1 Clear Trace (Remote Command Only)

Clears the selected trace (from the front panel) or the specified trace (from SCPI). Does not affect the state of any function or variable in the instrument. Loads `mintracevalue` into all of the points in the selected trace, unless the trace is in Min Hold in which case it loads `maxtracevalue`. This occurs even if `Update = Off`.

Remote Command	<code>:TRACe:CLEAr TRACE1   ...   TRACE6</code>
Example	Clear Trace 1: <code>:TRAC:CLE TRACE1</code>

### 9.3.3.2 Send/Query Trace Data (Remote Command Only)

Allows trace data to be sent to the instrument or queried from the instrument. The response to the query is a list of the amplitude points which comprise the requested trace in the current Y Axis Unit of the instrument. The X Axis Unit is that of the destination trace (for send) or the source trace (for query).

See:

- "Query Trace Data" on page 3002
- "More Information" on page 3003

Remote Command	<code>:TRACe[:DATA] TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6, &lt;data&gt;</code>
Notes	<p>The <code>TRACe[:DATA]</code> command is of the form:  <code>:TRACe:DATA &lt;trace&gt;,&lt;data&gt;</code></p> <p>where <code>&lt;trace&gt;</code> can be one of the following parameters:  <code>TRACE1, TRACE2, TRACE3, TRACE4, TRACE5, TRACE6</code></p> <p>and where <code>&lt;data&gt;</code> can be</p> <ul style="list-style-type: none"> <li>- ASCII data, which consists of a string of values separated by comma</li> <li>or</li> <li>- <code>REAL</code> or <code>INTEger</code> sent as a definite length block, with a header describing the data to follow</li> </ul>
Couplings	<p>Sweep points will affect the amount of data</p> <p><code>:FORMat:DATA</code> describes the different types of data formats that can be used with trace data</p> <p>Use <code>:FORMat:BORDER</code> to set the byte order</p>

### Query Trace Data

Remote Command	<code>:TRACe[:DATA]? TRACE1   TRACE2   TRACE3   TRACE4   TRACE5   TRACE6</code>
Example	<p>Send five points to Trace 1. Assuming that <code>:FORMat:DATA</code> is set to <code>ASCIi</code>, Y Axis Unit is set to dBm, and sweep points is set to 5, this will result in Trace 1 consisting of the five points -1 dBm, -2 dBm, -3 dBm, -4 dBm, and -5 dBm:</p> <p><code>:TRAC TRACE1, -1, -2, -3, -4, -5</code></p> <p>Query the instrument for the contents of trace 2:</p> <p><code>:TRAC? TRACE2</code></p>
Backwards Compatibility Notes	In X-Series, the legacy <code>RAWTRACE, LLINE1, LLINE2</code> parameters for trace data query are no longer available

## More Information

The format and byte order of the sent or received data depend on "[Format Data: Numeric Data \(Remote Command Only\)](#)" on page 3004 and "[Format Data: Byte Order \(Remote Command Only\)](#)" on page 3005. **ASCII** data consists of a string of comma separated values. **REAL** or **INTEger** data is sent as a definite length block, with a header describing the data to follow.

For example, a four point trace might look like this if in ASCII (**FORMat:DATA ASCii**):

```
-5.87350E+01, -5.89110E+01, -5.87205E+01, -5.12345E+01<NL><END>
```

and like this if in **INTEger** with 4 bytes per point (**FORMat:DATA INT, 32**):

```
#216<16 bytes of data><NL><END>
```

where the 2 in the #216 means "2 digits of numeric data to follow", and the 16 is the 2 digits and means "16 binary bytes to follow" (this is the definite length block format).

Note that the data is terminated with **<NL><END>**. (For GPIB this is newline, or linefeed, followed by EOI set true. For LAN, this is newline only.)

The data format set by "[Format Data: Numeric Data \(Remote Command Only\)](#)" on page 3004 and "[Format Data: Byte Order \(Remote Command Only\)](#)" on page 3005 is used both for sending data to the instrument and receiving data from the instrument.

When sending data to the instrument, the data block must contain exactly the number of points currently specified in **Sweep, Points** or an error message will be generated and there will be no change to the target trace.

No units terminator (for example, dB or V) is used when sending data; the data is taken as being in the current Y Axis Unit of the instrument.

When a trace is sent to the instrument, it immediately overwrites all of the data in the target trace. Consequently the trace should be inactive in order to achieve predictable results. If you send trace data while a trace is active, and particularly if a sweep or an **Average** or **Max/Min Hold** sequence is already in progress, you may end up with a trace that combines the data you sent with measurement data. Similarly, when querying trace data, it is best if the instrument is not sweeping during the query.

Therefore, it is generally advisable to be in **Single** sweep, or have the trace in **View**, when sending trace data to the instrument or querying trace data from the instrument.

### 9.3.3.3 Format Data: Numeric Data (Remote Command Only)

Specifies the format of the trace data input and output.

Specifies the formats used for trace data during data transfer across any remote port. Affects only the data format for setting and querying trace data for `:TRACe[:DATA]`, `:TRACe[:DATA]?`, `:CALCulate:DATA[n]?` and `:FETCh:SANalyzer[n]?`.

Remote Command	<code>:FORMat[:TRACe][:DATA] ASCii   INTeger,32   REAL,32   REAL,64</code> <code>:FORMat[:TRACe][:DATA]?</code>
Notes	The query response is: <code>ASCii</code> : ASC,8 <code>REAL,32</code> : REAL,32 <code>REAL,64</code> : REAL,64 <code>INTeger,32</code> : INT,32 When the numeric data format is REAL or ASCii, data is output in the current Y Axis unit. When the data format is INTeger, data is output in units of m dBm (.001 dBm) The <code>INT,32</code> format returns binary 32-bit integer values in internal units (m dBm), in a definite length block
Dependencies	Sending a data format spec with an invalid number (for example, <code>INT,48</code> ) generates no error. The instrument simply uses the default (8 for <code>ASCii</code> , 32 for <code>INTeger</code> , 32 for <code>REAL</code> ) Sending data to the instrument which does not conform to the current <code>FORMat</code> specified, results in an error. Sending ASCII data when a definite block is expected generates message -161 "Invalid Block Data" and sending a definite block when ASCII data is expected generates message -121 "Invalid Character in Number"
Preset	<code>ASCii</code>
Backwards Compatibility Notes	Note that the <code>INT,32</code> format is only applicable to <code>:TRACe:DATA</code> . This preserves backwards compatibility for the Swept SA measurement. For all other commands/queries that honor <code>:FORMat:DATA</code> , if <code>INT,32</code> is sent the instrument will behave as though it were set to <code>REAL,32</code>

The specifications for each output type are:

<code>ASCii</code>	Amplitude values are in ASCII, in the current Y Axis Unit, one ASCII character per digit, values separated by commas, each value in the form: <code>SX.YYYYYEsZZ</code> , where: S = sign (+ or -) X = one digit to left of decimal point Y = 5 digits to right of decimal point E = E, exponent header s = sign of exponent (+ or -) ZZ = two digit exponent
<code>REAL,32</code>	Binary 32-bit real values in the current Y Axis Unit, in a definite length block
<code>REAL,64</code>	Binary 64-bit real values in the current Y Axis Unit, in a definite length block

### 9.3.3.4 Format Data: Byte Order (Remote Command Only)

Selects the binary data byte order for data transfer and other queries.

Controls whether binary data is transferred in normal or swapped mode. Affects only the byte order for setting and querying trace data for `:TRACe[:DATA]`, `:TRACe[:DATA]?`, `:CALCulate:DATA[n]?` and `:FETCh:SANalyzer[n]?`.

By definition, any command that depends on this setting uses *any* format supported by `:FORMat:DATA`.

- **NORMal** order is a byte sequence that begins with the most significant byte (MSB) first, and ends with the least significant byte (LSB) last in the sequence: 1|2|3|4
- **SWAPped** order is when the byte sequence begins with the LSB first, and ends with the MSB last in the sequence: 4|3|2|1

---

Remote Command	<code>:FORMat:BORDER NORMal   SWAPped</code> <code>:FORMat:BORDER?</code>
Preset	<code>NORMal</code>

---

### 9.3.3.5 Calculate/Compress Trace Data Query (Remote Command Only)

Returns compressed data for the currently selected measurement and sub-opcode `[n]`.

`n` = any valid sub-opcode for that measurement. See the `:MEASure:<measurement>?` query description of your specific measurement for information on the data that can be returned.

The data is returned in the current Y Axis Unit of the instrument. The command is used with a sub-opcode `<n>` (default = 1) to specify the trace. With trace queries, it is best if the instrument is not sweeping during the query. Therefore, it is generally advisable to be in **Single** sweep, or Update = Off.

This command is used to compress or decimate a long trace to extract and return only the desired data. A typical example would be to acquire N frames of GSM data and return the mean power of the first burst in each frame. The command can also be used to identify the best curve fit for the data.

---

Remote Command	<code>:CALCulate:DATA&lt;n&gt;:COMPRESS? BLOCK   CFIT   MAXimum   MINimum   MEAN   DMEan   RMS   SAMPLE   SDEVIation   PPHase [,&lt;soffset&gt;[,&lt;length&gt;[,&lt;roffset&gt;[,&lt;rlimit&gt;]]]]</code>
----------------	---

---

Notes The command supports 5 parameters, but the last 4 (`<soffset>`, `<length>`, `<roffset>`, `<rlimit>`) are optional. The optional parameters must be entered in the specified order. For example, if you want to specify `<length>`, then you must also specify `<soffset>`. See details below for a definition

of each of these parameters

This command uses the data in the format specified by "[Format Data: Byte Order \(Remote Command Only\)](#)" on page 3005, returning either binary or ASCII data

As an example, to query the mean power of a set of GSM bursts:

- Supply a signal that is a set of GSM bursts
- Select the IQ Waveform measurement (in IQ Analyzer Mode)
- Set the sweep time to acquire at least one burst
- Set the triggers such that acquisition happens at a known position relative to a burst
- Query the mean burst levels using, `:CALC:DATA2:COMP? MEAN, 24e-6, 526e-6` (These parameter values correspond to GSM signals, where 526e-6 is the length of the burst in the slot and you just want 1 burst)

### **BLOCK or block data**

Returns all the data points from the region of the trace data that you specify. For example, it could be used to return the data points of an input signal over several timeslots, excluding the portions of the trace data that you do not want. (This is x,y pairs for trace data and I,Q pairs for complex data.)

### **CFIT or curve fit**

Applies curve fitting routines to the data. `<soffset>` and `<length>` are required to define the data that you want. `<roffset>` is an optional parameter for the desired order of the curve equation. The query will return the following values: the x-offset (in seconds) and the curve coefficients ((order + 1) values).

`MIN`, `MAX`, `MEAN`, `DME`, `RMS`, `SAMP`, `SDEV` and `PPH` return one data value for each specified region (or `<length>`) of trace data, for as many regions as possible until you run out of trace data (using `<roffset>` to specify regions), or they return the number of regions you specify (using `<rlimit>`) ignoring any data beyond that.

### **MINimum**

Returns the minimum data point (y value) for the specified region(s) of trace data. For I/Q trace data, the minimum magnitude of the I/Q pairs is returned.

### **MAXimum**

Returns the maximum data point (y value) for the specified region(s) of trace data. For I/Q trace data, the maximum magnitude of the I/Q pairs is returned.

## MEAN

Returns a single value that is the arithmetic mean of the data point values (in dB/ dBm) for the specified region(s) of trace data. For I/Q trace data, the mean of the magnitudes of the I/Q pairs is returned. See the following equations.

### NOTE

If the original trace data is in dB, this function returns the arithmetic mean of those log values, not log of the mean power which is a more useful value. The mean of the log is the better measurement technique when measuring CW signals in the presence of noise. The mean of the power, expressed in dB, is useful in power measurements such as Channel Power. To achieve the mean of the power, use the RMS option.

Equation 1: Mean Value of Data Points for Specified Region(s)

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i$$

where  $X_i$  is a data point value, and  $n$  is the number of data points in the specified region(s).

Equation 2: Mean Value of I/Q Data Pairs for Specified Region(s)

$$\text{MEAN} = \frac{1}{n} \sum_{X_i \in \text{region}(s)} |X_i|$$

where  $|X_i|$  is the magnitude of an I/Q pair, and  $n$  is the number of I/Q pairs in the specified region(s).

## DMEan

Returns a single value that is the mean power (in dB/ dBm) of the data point values for the specified region(s) of trace data. See the following equation:

Equation 3: DMEan Value of Data Points for Specified Region(s)

$$\text{DME} = 10 \times \log_{10} \left( \frac{1}{n} \sum_{X_i \in \text{region}(s)} 10^{\frac{X_i}{10}} \right)$$

## RMS

Returns a single value that is the average power on a root-mean-squared voltage scale (arithmetic rms) of the data point values for the specified region(s) of trace data. See the following equation.

**Equation 4: RMS Value of Data Points for Specified Region(s)**

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i^2}$$

where  $X_i$  is a data point value, and  $n$  is the number of data points in the specified region(s).

For I/Q trace data, the rms of the magnitudes of the I/Q pairs is returned. See the following equation.

NOTE

**This function is very useful for I/Q trace data. However, if the original trace data is in dB, this function returns the rms of the log values which is not usually needed.**

---

**Equation 5: RMS Value of I/Q Data Pairs for Specified Region(s)**

$$\text{RMS} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} X_i X_i^*}$$

where  $X_i$  is the complex value representation of an I/Q pair,  $X_i^*$  its conjugate complex number, and  $n$  is the number of I/Q pairs in the specified region(s).

Once you have the rms value for a region of trace data (linear or I/Q), you may want to calculate the mean power. You must convert this rms value (peak volts) to power in dBm:

$$10 \times \log[10 * (\text{rms value})^2]$$

**SAMPLE**

Returns the first data value (x,y pair) for the specified region(s) of trace data. For I/Q trace data, the first I/Q pair is returned.

**SDEViation**

Returns a single value that is the arithmetic standard deviation for the data point values for the specified region(s) of trace data. See the following equation.

**Equation 6: Standard Deviation of Data Point Values for Specified Region(s)**

$$\text{SDEV} = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (X_i - \bar{X})^2}$$

where  $X_i$  is a data point value,  $X$  is the arithmetic mean of the data point values for the specified region(s), and  $n$  is the number of data points in the specified region(s).

For I/Q trace data, the standard deviation of the magnitudes of the I/Q pairs is returned. See the following equation.

**Equation 7: Standard Deviation of I/Q Data Pair Values for Specified Region(s)**

$$SDEV = \sqrt{\frac{1}{n} \sum_{X_i \in \text{region}(s)} (|X_i| - \bar{X})^2}$$

where  $|X_i|$  is the magnitude of an I/Q pair,  $X$  is the mean of the magnitudes for the specified region(s), and  $n$  is the number of data points in the specified region(s).

**PPHase**

Returns the x,y pairs of both rms power (dBm) and arithmetic mean phase (radian) for every specified region and frequency offset (Hz). The number of pairs is defined by the specified number of regions. This parameter can be used for I/Q vector ( $n=0$ ) in Waveform (time domain) measurement and all parameters are specified by data point in [PPHase](#).

The rms power of the specified region may be expressed as:

$$\text{Power} = 10 \times \log [10 \times (\text{RMS I/Q value})] + 10.$$

The RMS I/Q value (peak volts) is:

$$\sqrt{\frac{1}{n} \sum_{X_i \in \text{region}} X_i X_i^*}$$

where  $X_i$  is the complex value representation of an I/Q pair,  $X_i^*$  its conjugate complex number, and  $n$  is the number of I/Q pairs in the specified region.

The arithmetic mean phase of the specified region may be expressed as:


$$\frac{1}{n} \sum_{Y_i \in \text{region}} Y_i$$

where  $Y_i$  is the unwrapped phase of I/Q pair with applying frequency correction and  $n$  is the number of I/Q pairs in the specified region.

The frequency correction is made by the frequency offset calculated by the arithmetic mean of every specified region's frequency offset. Each frequency offset is calculated by the least square method against the unwrapped phase of I/Q pair.


### Sample Trace Data - Constant Envelope

(See below for explanation of variables.)

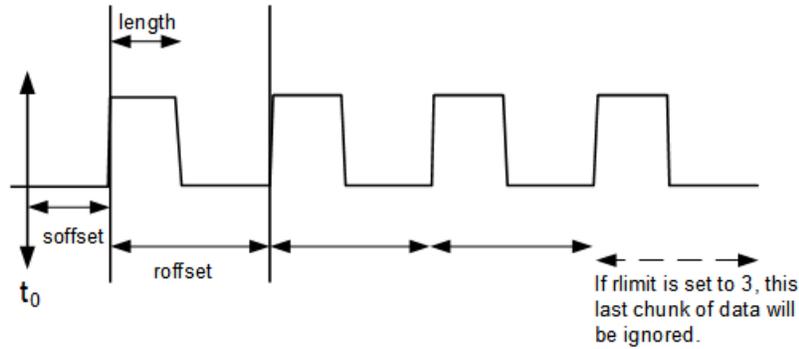

### Sample Trace Data - Not Constant Envelope

(See below for explanation of variables.)

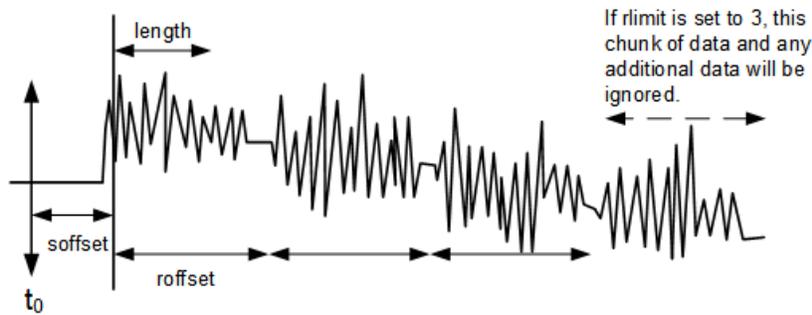

- <soffset> Optional real number, in seconds for time-domain traces, and is a dimensionless index 0 to Npoints - 1, for frequency-domain traces  
 Specifies the amount of data at the beginning of the trace that will be ignored before the decimation process starts. It is the time or frequency change from the start of the trace to the point where you want to start using the data. The default value is zero
- <length> Optional real number, in seconds for time-domain traces, and is a dimensionless index 0 to Npoints - 1, for frequency-domain traces  
 Defines how much data will be compressed into one value. This parameter has a default value equal to the current trace length
- <roffset> Optional real number, in seconds for time-domain traces, and is a dimensionless index 0 to Npoints - 1, for frequency-domain traces  
 Defines the beginning of the next field of trace elements to be compressed. This is relative to the beginning of the previous field. This parameter has a default value equal to the <length> variable. Note that this parameter is used for a completely different purpose when curve fitting (see "CFIT or curve fit" on page 3006 above)

`<rlimit>` Optional integer  
Specifies the number of data items that you want returned. Ignores any additional items beyond that number. You can use the Start offset and the Repeat limit to pick out exactly what part of the data you want to use. The default value is all the data

### 9.3.3.6 Calculate Peaks of Trace Data (Remote Command Only)

Returns a list of all the peaks for the currently selected measurement and sub-opcode `[n]`. The peaks must meet the requirements of the peak threshold and excursion values.

`n` = any valid sub-opcode for the current measurement. See the `:MEASure:<measurement>` command description of your specific measurement for information on the data that can be returned.

The command can only be used with specific sub-opcodes with measurement results that are trace data. Both real and complex traces can be searched, but complex traces are converted to magnitude in dBm. In many measurements the sub-opcode `n = 0`, is the raw trace data, which cannot be searched for peaks, and sub-opcode `n = 1`, is often calculated results values which also cannot be searched for peaks.

This command uses the data setting specified by "[Format Data: Byte Order \(Remote Command Only\)](#)" on page 3005 and "[Format Data: Numeric Data \(Remote Command Only\)](#)" on page 3004, and can return real or ASCII data. If the format is set to `INT, 32`, it returns `REAL, 32` data.

The command has four types of parameters:

1. Threshold (in dBm)
2. Excursion (in dB)
3. Sorting order (amplitude, frequency, time)
4. Optional in some measurements: Display line use (all, > display line, < display line)

Remote Command	<p>For Swept SA measurement:</p> <pre>:CALCulate:DATA[1] 2 ... 6:PEAKs? &lt;threshold&gt;,&lt;excursion&gt;[,AMPLitude   FREQuency   TIME[,ALL   GTDLine   LTDLine]]</pre> <p>For most other measurements:</p> <pre>:CALCulate:DATA[1] 2 ... 6:PEAKs? &lt;threshold&gt;,&lt;excursion&gt;[,AMPLitude   FREQuency   TIME]</pre>
Notes	Parameters:

---

<b>&lt;n&gt;</b>	The trace that will be used: <b>[1] 2 ... 6</b>
<b>&lt;threshold&gt;</b>	The level below which trace data peaks are ignored  Note that the threshold value is required and is always used as a peak criterion. To effectively disable the threshold criterion for this command, provide a substantially low threshold value such as -200 dBm  Note also that the threshold value used in this command is independent of and has no effect on the threshold value stored under the Peak Criteria menu
<b>&lt;excursion&gt;</b>	The minimum amplitude variation (rise and fall) required for a signal to be identified as peak  Note that the excursion value is required and is always used as a peak criterion. To effectively disable the excursion criterion for this command, provide the minimum value of 0.0 dB  Note also that the excursion value used in this command is independent of and has no effect on the excursion value stored under the Peak Criteria menu

Values must be provided for threshold and excursion. The sorting and display line parameters are optional (defaults are **AMPLitude** and **ALL**)

Note that there is always a Y-axis value for the display line, regardless of whether the display line state is on or off. It is the current Y-axis value of the display line which is used by this command to determine whether a peak should be reported

Sorting order:

---

<b>AMPLitude</b>	Lists the peaks in order of descending amplitude, with the highest peak first If this optional parameter not sent, this is the default
<b>FREQuency</b>	Lists the peaks in order of occurrence, left to right across the x-axis
<b>TIME</b>	Lists the peaks in order of occurrence, left to right across the x-axis

Peaks vs. Display Line:

---

<b>ALL</b>	Lists all of the peaks found (default if optional parameter not sent)
<b>GTDLIne</b>	Lists all of the peaks found above the display line

Greater than display line

---

<b>LTDLine</b>	Lists all of the peaks found below the display line
----------------	---

Less than display line

For example, for Swept SA measurement in Spectrum Analyzer Mode:

**:CALC:DATA4:PEAK? -40,10,FREQ,GTDL**

Identifies the peaks of trace 4 that are above -40 dBm, with excursions of at least 10 dB. The peaks are returned in order of increasing frequency, starting with the lowest frequency. Only the peaks that are above the display line are returned

Query Results:

---

If `:FORMat:DATA REAL,32` is selected, returns a list of floating-point numbers. The first value in the list is the number of peak points that are in the following list. A peak point consists of two values: a peak amplitude followed by its corresponding frequency (or time)

If no peaks are found, the peak list consists of only the number of peaks, (0)

### 9.3.3.7 Smooth Trace Data (Remote Command Only)

Included for ESA compatibility. Not recommended for new designs. Use `:CALCulate:DATA:COMPRESS` instead.

Smooths the trace according to the number of points specified in `:TRACe:MATH:SMOoth:POINTs`. There is no equivalent front panel function.

The purpose of this function is to perform a spatial video averaging, as compared to the temporal version supplied by the video-average command

`[ :SENSe]:AVERage:TYPE VIDEo`. The functions of `:TRACe:MATH:SMOoth <trace>` and `[ :SENSe]:AVERage:TYPE VIDEo|POWer` are not interchangeable.


---

Backwards Compatibility      `:TRACe:MATH:SMOoth TRACE1 | ... | TRACE6`  
SCPI

Each point value is replaced with the average of the values of the selected number of points, with half of those points located on each side of any particular point (when possible). Refer to the illustration below, which shows a 401 point trace with a smoothing number of 31. Think of the trace points as “buckets” of data. To smooth (arbitrary) point 273, the instrument averages buckets 258 through 288 and applies that value to point 273.

Increasing the number of points increases smoothing at the cost of decreasing resolution.

The amount of smoothing decreases at the end points. Because `:TRACe:MATH:SMOoth <trace>` averages values that occur before and after the data point in time, display irregularities can be caused at the start and stop frequencies. To avoid possible irregularities (signal distortion) at the ends of the trace, use small values for the smooth parameter.

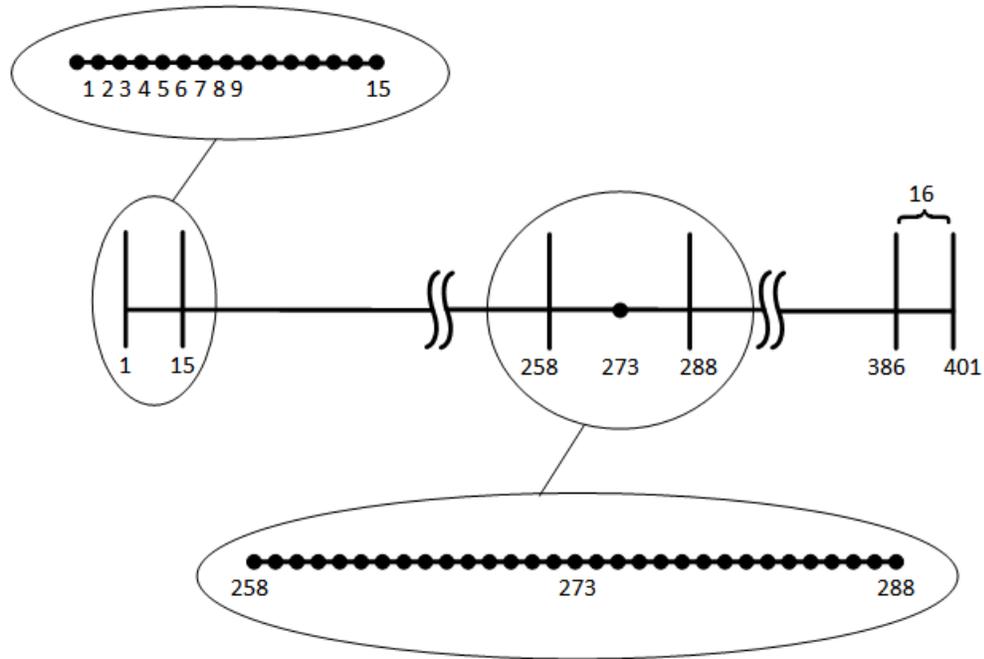

#### Smoothing With 401 Trace Points and 31 Smoothing Points

Refer to the illustration above for a discussion of this end-point smoothing phenomena. With 31 smoothing points and a 401 point trace, point 16 will be the first point to have full 31-bucket smoothing. Likewise, point 386 will be the last point with full 31-bucket smoothing. Under the conditions stated, points 2 through 15 will be smoothed as follows: Point 2 is derived from averaging buckets 1 through 3. Point 3 is derived from averaging buckets 1 through 5, Point 4 is derived from averaging buckets 1 through 7, and so forth until point 16 is reached. The quantity of buckets used for the smoothing running average increases at the rate of 2 buckets per point, from point 1 to point  $([\text{smoothing number}+1]/2)$ , at which time the full number of smoothing points is utilized. The same characteristic occurs at the completion of the trace, beginning at point 386, beyond which the number of averaging buckets begins to decrease until point 401 is reached.

By replacing the value of each point in a trace with the average of the values of a number of points centered about that point, any rapid variations in noise or signals are smoothed into more gradual variations. It thereby performs a function similar to reducing the video bandwidth without the corresponding changes in sweep time; as such, frequency resolution is decreased. Also, signal peaks are reduced with large smoothing values. This can cause the amplitude to appear to be less than its actual value.

#### 9.3.3.8 Number of Points for Smoothing (Remote Command Only)

Included for ESA compatibility. Not recommended for new designs. Use `:CALCulate:DATA:COMPRESS` instead.

Specifies the number of points that will be smoothed. Increasing the number of points increases smoothing at the cost of decreasing resolution. If the number of points is an even number, then the number of points is increased by one. If the number of points is larger than the number of sweep points, then the number of sweep points is used, unless the number of sweep points is even, in which case the number of points will be the sweep points minus one. The number of points smoothed is always an odd number.

Example	<code>:TRAC:MATH:SMO:POIN 501</code>
Notes	Only odd values are allowed If an even value of <code>&lt;integer&gt;</code> is specified, adds 1 unless <code>&lt;integer&gt;</code> = number of sweep points, in which case subtract 1 Used with <code>TRACe:MATH:SMOoth</code>
Preset	11
Min	3
Max	Number of sweep points
Backwards Compatibility SCPI	<code>:TRACe:MATH:SMOoth:POINts &lt;integer&gt;</code> <code>:TRACe:MATH:SMOoth:POINts?</code>

### 9.3.3.9 Mean Trace Data (Remote Command Only)

Included for ESA compatibility. Not recommended for new designs. Use `:CALCulate:DATA:COMPRESS` instead.

Returns the mean of the amplitudes of the trace amplitude elements in measurement units.

Example	<code>:TRAC:MATH:MEAN? TRACE2</code>
Backwards Compatibility SCPI	<code>:TRACe:MATH:MEAN? TRACE1   ...   TRACE6</code>

## 9.4 Status Register System & STATus Subsystem


This section provides an overview of the X-Series SCPI status register system, and how to manage the registers. For detailed programming information on each status register, see ["Status Subsystem Registers and Commands" on page 3025](#).

The SCPI **STATus** Subsystem allows you to monitor a number of status conditions within the instrument through the use of a hierarchy of status registers containing bits which go true or false depending on various conditions.

### 9.4.1 Status Register System Diagram

The diagram below provides a top-level overview of all the Status Registers and their interconnections.

To navigate to detailed information about each Register, click on a register name:

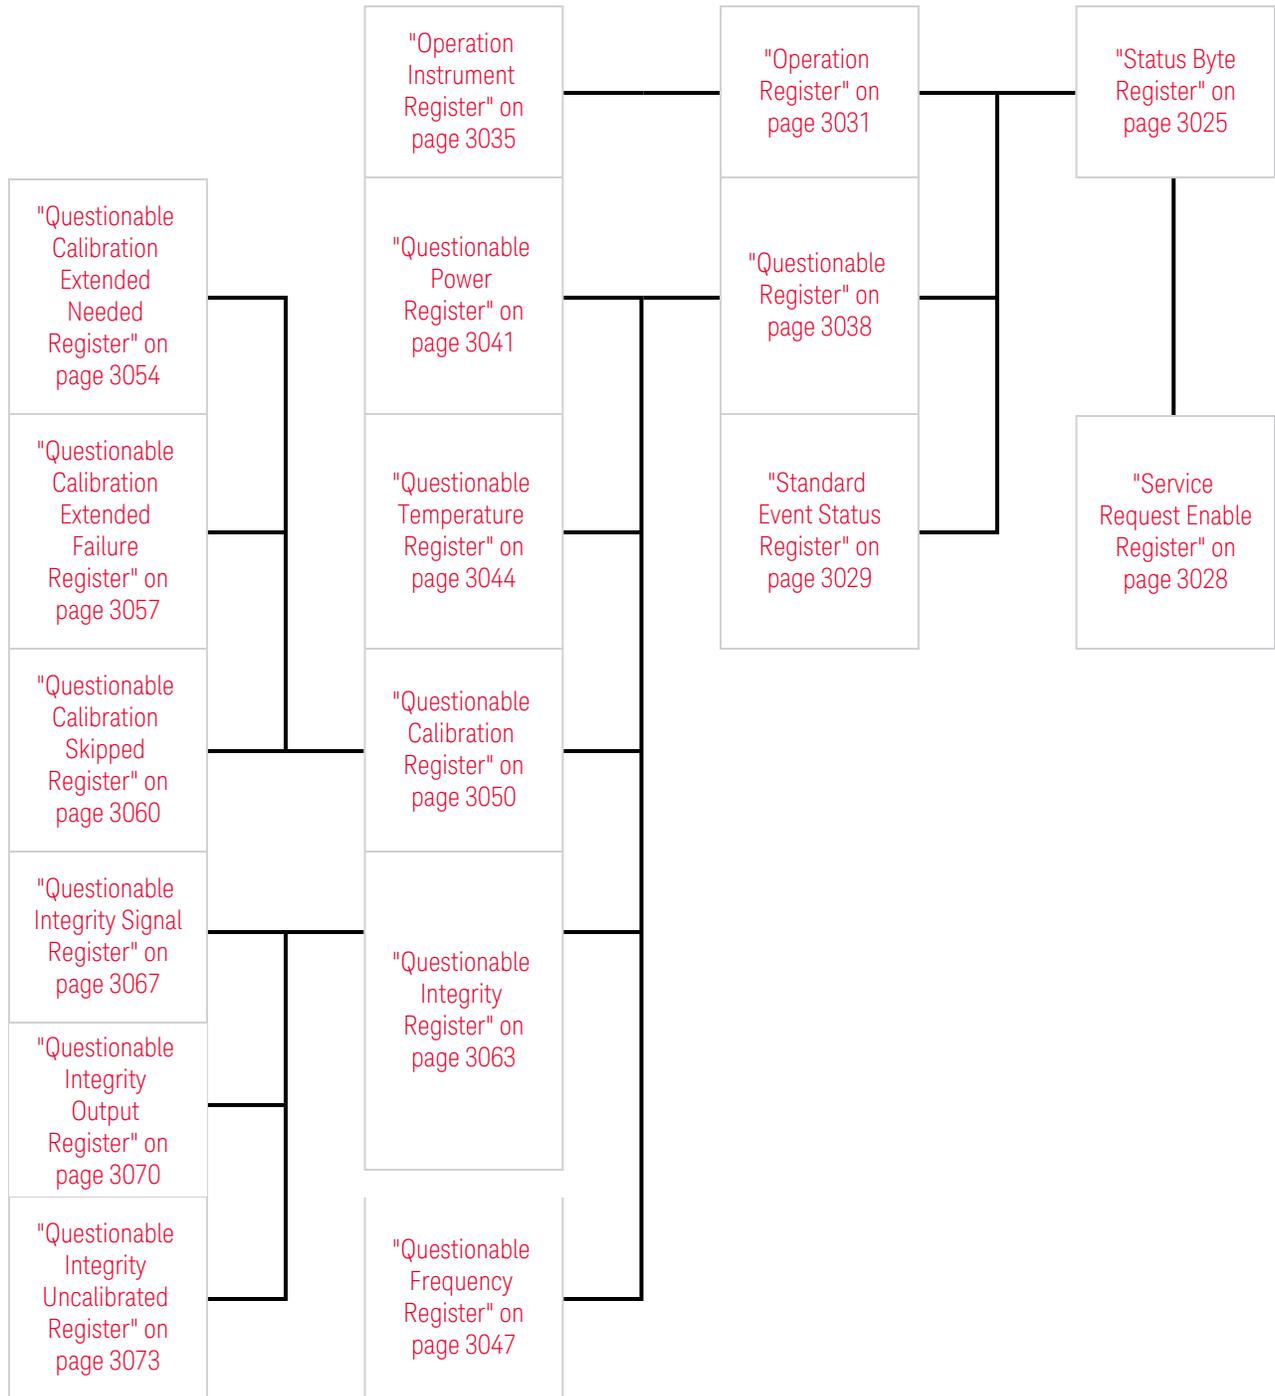

## Detailed System Diagram

As from the **X-Apps 2023** update, the fully-detailed system diagram that previously appeared here is still available, but, for improved readability, it is now published as a separate high-resolution PDF. You can download the document from Keysight's web site at:

<http://literature.cdn.keysight.com/litweb/pdf/N9040-90056.pdf>

### 9.4.2 Status Register Hierarchy

The Status Register system contains multiple registers, arranged in a hierarchy. The lower-level registers propagate their data to the higher-level registers in the data structures by means of summary bits.


The "**Status Byte Register**" on page 3025 is at the top of the hierarchy and contains general status information for the instrument's events and conditions. All other individual registers are used to determine the specific events or conditions.

The "**Operation Register**" on page 3031 and "**Questionable Register**" on page 3038 are sets of registers that monitor the overall instrument condition. They are accessed using **:STATus:OPERation** and **:STATus:QUEStionable** commands in the **STATus** subsystem. Each composite status register set consists of five sub-registers:

1	Condition Register	Reports the real-time state of the signals monitored by this register set. There is no latching or buffering for a condition register
2	Positive Transition Register	Transition Filter Register Controls which signals will set a bit in the event register when the signal makes a low to high transition (when the condition bit changes from 0 to 1)
3	Negative Transition Register	Transition Filter Register Controls which signals will set a bit in the event register when the signal makes a high to low transition (when the condition bit changes from 1 to 0)
4	Event Register	Latches any signal state changes, in the way specified by the filter registers. Bits in the event register are never cleared by signal state changes. Event registers are cleared when read. They are also cleared by *CLS and by presetting the instrument
5	Event Enable Register	Controls which of the bits, being set in the event register, will be summarized as a single output for the register set. Summary bits are then used by the next higher register

Each status register produces a summary message bit.

The diagram below shows how the sub-registers relate to each other.

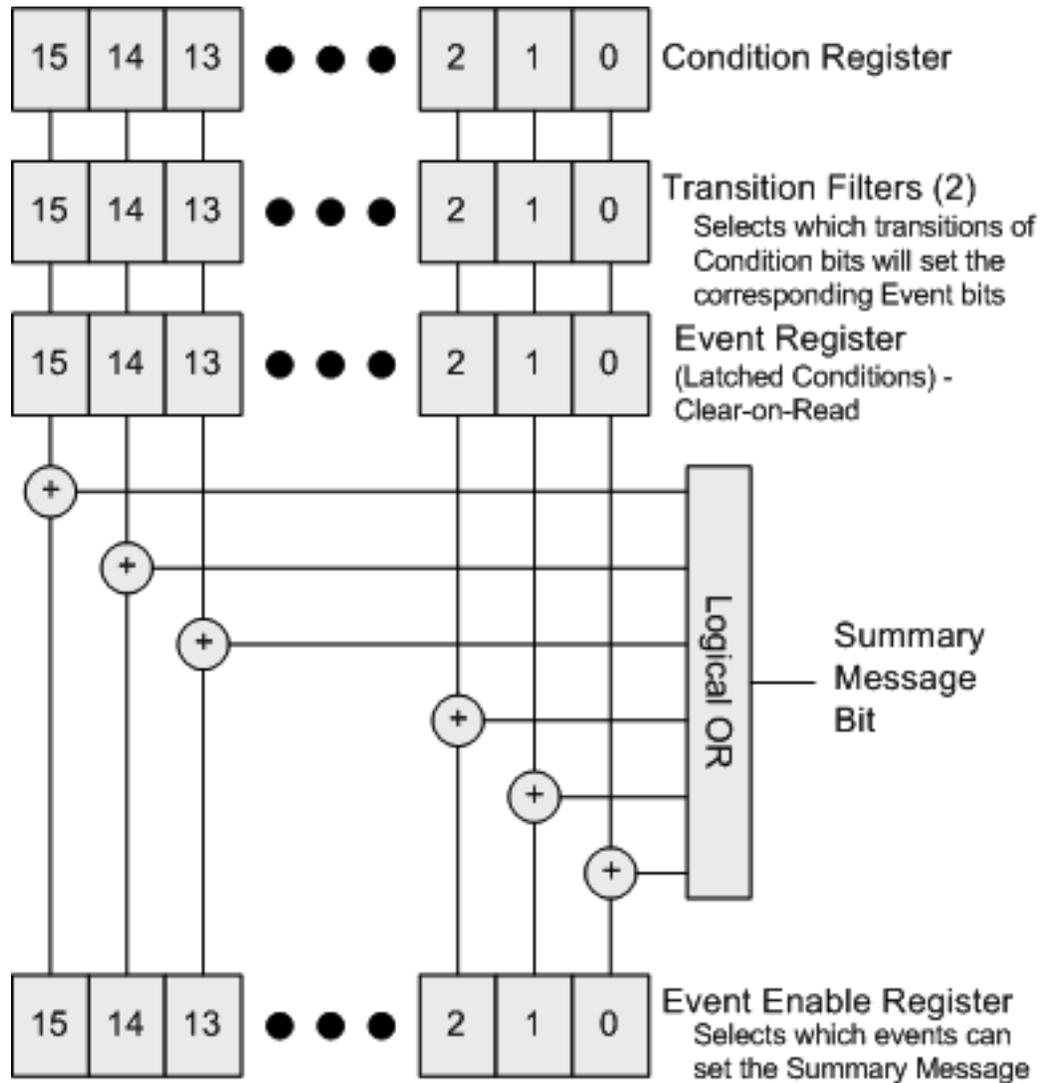

The settings of the Transition Filter registers determine whether or not a bit set in a Condition register ripples through to the Event register, as follows:

- If a bit is set in the Positive Transition register, then the corresponding bit in the Event register is set when the condition bit goes from low to high (false to true, off to on)
- Conversely, if a bit is set in the Negative Transition register then the Event register bit is set when the condition bit goes from high to low
- If *both* Transition Filter registers are set true, then the event bit for that condition is set whenever there is any change in the bit. If an event bit is set, the Event Enable register determines whether or not it will **OR** into the summary bit that is sent to the next level of register. If this bit is set, then the corresponding event bit will be included

Note that the Event register is "Clear-on-Read": when any bit is read, it is automatically cleared.

### Questionable Registers

These registers report abnormal operating conditions. The status register hierarchy is:

- The summary outputs from the six [QUESTIONable:<keyword>](#) detail registers are inputs to the ["Questionable Register" on page 3038](#)
- The summary output from the ["Questionable Register" on page 3038](#) is an input to the Status Byte Register
- The summary output from the is an input to the ["Operation Register" on page 3031](#). The inputs to the ["Operation Condition Query" on page 3032](#) Register indicate the real time state of the instrument. The ["Operation Event Query" on page 3033](#) Register summary output is an input to the Status Byte Register

Note that, in E4406A only, the ["Operation Enable" on page 3033](#) Register has an additional function. It is **ANDed** with the ["Operation Condition Query" on page 3032](#) Register to determine the instrument busy state, which is checked by ["\\*OPC? - Operation Complete" on page 2991](#) and ["\\*WAI - Wait-to-Continue" on page 2995](#). If the **ANDed** result is non-zero, the instrument is considered busy.

### 9.4.3 Status Register SCPI Commands

Monitoring of instrument conditions is done at the highest level using the following IEEE 488.2 common commands.

For complete command descriptions, see ["IEEE 488.2 Common Commands" on page 2988](#). Individual status registers can be set and queried using the commands described in ["Status Subsystem Registers and Commands" on page 3025](#).

<a href="#">*CLS</a>	Clear Status	Clears the status byte by emptying the error queue and clearing all the event registers
<a href="#">*ESE</a>	Event Status	Sets and queries the bits in the enable register part of the standard event status register
<a href="#">*ESE?</a>	Enable	
<a href="#">*ESR?</a>	Event Status Register	Queries and clears the event register part of the standard event status register
<a href="#">*OPC</a>	Operation	Sets the standard event status register to monitor the completion of all commands. The query stops any new commands from being processed until the current processing is complete, then returns a '1'
<a href="#">*OPC?</a>	Complete	
<a href="#">*PSC</a>	Power-on	Sets the power-on state so that it clears the service request enable register and the event status enable register at power on
<a href="#">*PSC?</a>	State Clear	

*SRE	Service Request Enable	Sets and queries the value of the service request enable register
*SRE?		
*STB?	Status Byte	Queries the value of the status byte register without erasing its contents

## 9.4.4 How to Use Status Registers

A program often needs to be able to detect and manage error conditions or changes in instrument status.

There are two methods you can use to programmatically access the information in status registers:

- The "[Polling Method](#)" on page 3021
- The "[Service Request \(SRQ\) Method](#)" on page 3022

The Polling Method works well if you do not need to know about changes the moment they occur. To detect a change using this method, the program must repeatedly read the registers.

The SRQ Method should be used if you must know immediately when a condition changes.

Either method allows you to monitor one or more conditions.

### 9.4.4.1 Polling Method

In this method, the instrument has a passive role. It only tells the controller that conditions have changed when the controller asks the right question.

Use this method when:

- your programming language/development environment does not support SRQ interrupts
- you want to write a simple, single-purpose program and don't want the added complexity of setting up an SRQ handler

To monitor a condition:

- Determine which register contains the bit that reports the condition
- Send the unique SCPI query to read that register
- Examine the bit to see if the condition has changed

## Monitoring Options

You can monitor conditions in various ways:

- |   |   |   |
|---|---|---|
| 1 | Check the current instrument hardware and firmware status | Do this by querying the condition registers, which continuously monitor status. These registers represent the current state of the instrument. Bits in a condition register are updated in real time<br>When the condition monitored by a particular bit becomes true, the bit is set to 1. When the condition becomes false, the bit is reset to 0   |
| 2 | Monitor a particular condition (bit)                      | You can enable a particular bit(s), using the <a href="#">"Standard Event Status Enable Register" on page 3030</a> . The instrument will then monitor that particular condition. If the bit becomes true (0 to 1 transition) in the Event Register, it will stay set until the Event Register is cleared. Querying the Event Register allows you to detect that this condition occurred, even if the condition no longer exists. The Event Register can only be cleared by querying it, or by sending <code>*CLS</code>                                 |
| 3 | Monitor a particular type of change in a condition (bit)  | By default, the Transition Registers are set if the condition goes from 0 to 1 (false to true, or a positive transition), but you can change this behavior so the selected condition is detected if the bit goes from 1 to 0 (true to false, or a negative transition)<br>You can also detect <i>both</i> types of transitions, or neither<br>If both Transition Registers are set to 0 for a particular bit position, that bit is <i>not</i> set in the <a href="#">"Standard Event Status Enable Register" on page 3030</a> for either type of change |

### 9.4.4.2 Service Request (SRQ) Method

In this method, the instrument takes a more active role, by informing the controller when there has been a condition change, without the controller asking.

Use this method when:

- you need time-critical notification of changes
- you are monitoring more than one device which supports SRQs
- you need to have the controller do something else while waiting
- you can't afford the performance penalty inherent to polling

### Using the Service Request (SRQ) Method

Your language, bus, and programming environment must be able to support SRQ interrupts, for example, BASIC used with VXI-11.3 (GPIB over LAN). When you monitor a condition with the SRQ method, you must:

- Determine which bit monitors the condition
- Determine how that bit reports to the request service (**RQS**) bit of the status byte
- Send SCPI commands to enable the bit that monitors the condition and to enable the summary bits that report the condition to the **RQS** bit
- Enable the controller to respond to service requests

When the condition changes, the instrument sets its **RQS** bit. The controller is informed of the change as soon as it occurs. As a result, the time the controller would otherwise have used to monitor the condition can be used to perform other tasks. Your program determines how the controller responds to the SRQ.

Bit 6 of the "Status Byte Register" on page 3025 is the request service (**RQS**) bit. Use **\*SRE** to configure the **RQS** bit to report changes in instrument status. When such a change occurs, the **RQS** bit is set. It is cleared when the Status Byte Register is queried using **\*SRE?** (with a serial poll.) It can be queried *without* erasing the contents by using **\*STB?**.

When a register being set causes a summary bit in the status byte to change from 0 to 1, the instrument can initiate the service request (SRQ) process. However, the process is only initiated if *both* the following conditions are true:

The corresponding bit of the service request enable register is also set to 1

The instrument does not have a service request pending. (A service request is considered to be pending between the time the instrument's SRQ process is initiated and the time the controller reads the status byte register)

The SRQ process sets the SRQ true. It also sets the status byte's request service (**RQS**) bit to 1. Both actions are necessary to inform the controller that the instrument requires service. Setting the SRQ line *only* informs the controller that some device on the bus requires service. Setting the **RQS** bit allows the controller to determine which instrument requires service.

If your program enables the controller to detect and respond to service requests, it should instruct the controller to perform a serial poll when the SRQ is set true. Each device on the bus returns the contents of its Status Byte Register in response to this poll. The device whose **RQS** bit is set to 1 is the device that requested service.

NOTE

**When you read the instrument's Status Byte Register using a serial poll, the **RQS** bit is reset to 0. Other bits in the register are not affected.**

---

If the status register is configured to SRQ on end-of-measurement, and the measurement is in **Continuous** mode, then restarting a measurement (via **:INIT**) can cause the measuring bit to pulse low. This causes an SRQ even though you have not actually reached the "end-of-measurement" condition. To avoid this:



It is usually a good idea to start by clearing all the status registers, using `*CLS`

Sending `:STAT:QUES:INT:ENAB 1024` lets you monitor only bit 10 events, instead of the default monitoring all the bits in the register. The register default is for positive transition events (0 to 1 transition), that is, when an auto-trigger timeout occurs. If instead, you want to know when the Auto-trigger timeout condition is cleared, then you set `:STAT:QUES:INT:PTR 0` and `:STAT:QUES:INT:NTR 32767`

Now, the only output from the "Questionable Integrity Register" on page 3063 will come from a bit 10 positive transition, and goes to the Integrity Sum bit 9 of the "Questionable Register" on page 3038

If you want only to monitor bit 9 of the same register, send `:STAT:QUES:ENAB 512`

The "Questionable Register" on page 3038 output goes to the "Status Questionable Summary" bit 3 of the "Status Byte Register" on page 3025. The output from this register can be enabled using `*SRE 8`.

Finally, you can use the serial polling functionality available for the particular bus/software that you are using to monitor the Status Byte Register, or you could use `*STB?` to poll the Status Byte Register.

## 9.4.6 Status Subsystem Registers and Commands

The Status Subsystem registers monitor various events and conditions in the instrument. Software written to control the instrument may need to monitor some of these events and conditions.

To set and query status registers, you can use the `STATus` subsystem SCPI commands and queries.

### NOTE

All status register commands are sequential. You can send them in the middle of an ongoing overlapped command to get the current status. You can also send them following a sequential command. In this case, the status register command waits for the completion of the previously-sent sequential command before performing the action.

*Most commands are sequential commands; only a few are overlapped.*

If a command *is* overlapped, then that is explicitly stated in the command description.


---

See also the [Keysight X-Series Signal Analyzers Instrument Messages](#) manual for more detail on the instrument conditions that can cause these bits to be set.

### 9.4.6.1 Status Byte Register

Provides a one-byte overview of the entire `STATus` subsystem. All the other registers funnel into this register via summary bits, as shown in the "Status Register System

Diagram" on page 3016.

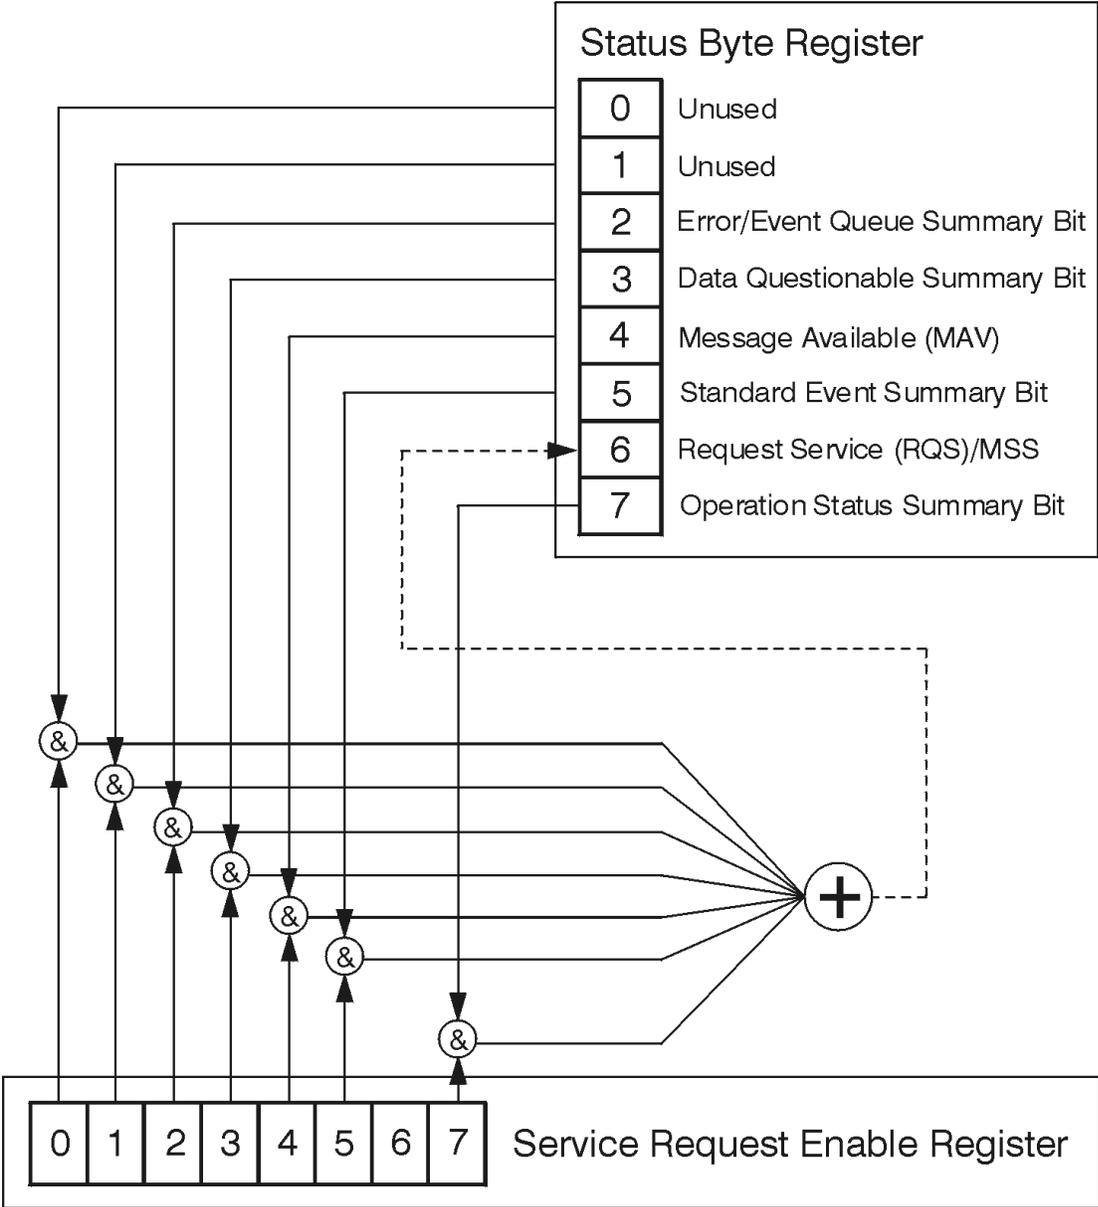

ck776a

Bit Number	7	6	5	4	3	2	1	0
Description	Standard Operation Status Summary Bit	Request Service (RQS) Summary Bit	Standard Event Status Summary Bit	Message Available (MAV)	Data Questionable Status Summary Bit	Error/Event Queue Summary Bit	Unused	Unused

\*STB?

### Status Byte Register

ck725a

Bit	Description
0, 1	These bits are always set to 0
2	A 1 in this bit position indicates that the SCPI error queue is not empty which means that it contains at least one error message
3	A 1 in this bit position indicates that the data questionable summary bit has been set. The data questionable event register can then be read to determine the specific condition that caused this bit to be set
4	A 1 in this bit position indicates that the instrument has data ready in the output queue. There are no lower status groups that provide input to this bit
5	A 1 in this bit position indicates that the standard event summary bit has been set. The standard event status register can then be read to determine the specific event that caused this bit to be set
6	A 1 in this bit position indicates that the instrument has at least one reason to report a status change. This bit is also called the master summary status bit (MSS)
7	A 1 in this bit position indicates that the standard operation summary bit has been set. The standard operation event register can then be read to determine the specific condition that caused this bit to be set

To query the Status Byte Register, send **"\*STB? - Status Byte Query"** on page 2994. The response will be the decimal sum of the bits that are set to 1. For example, if bit number 7 and bit number 3 are set to 1, the decimal sum of the 2 bits is 128 plus 8, so the decimal value 136 is returned.

**\*STB** does *not* clear the status register.

The **RQS** bit is read and reset by a serial poll. The same bit position (**MSS**) is read non-destructively by **\*STB?**. If you serial-poll bit 6, it is read as **RQS**, but if you send **\*STB**, it reads bit 6 as **MSS**. For more information refer to Section 11 of: **IEEE Standard 488.2-1992**

In addition to the Status Byte Register, the status byte group also contains the "Service Request Enable Register" on page 3028, which lets you select which bits in the Status Byte Register will trigger a service request.


### Service Request Enable Register

Enables the desired bits of the Service Request (SRQ) subsystem.

Send **\*SRE <integer>**, where **<integer>** is the sum of the decimal values of the bits you want to enable plus the decimal value of bit 6. For example, assume that you want to enable bit 7 so that whenever the standard operation status register summary bit is set to 1 it will trigger a service request. Send the command **\*SRE 192** (because  $192 = 128 + 64$ ). You must always add 64 (the numeric value of RQS bit 6) to your numeric sum when you enable any bits for a service request.

**\*SRE?** returns the decimal value of the sum of the bits previously enabled with **\*SRE <integer>**.

This register presets to zeros (0).

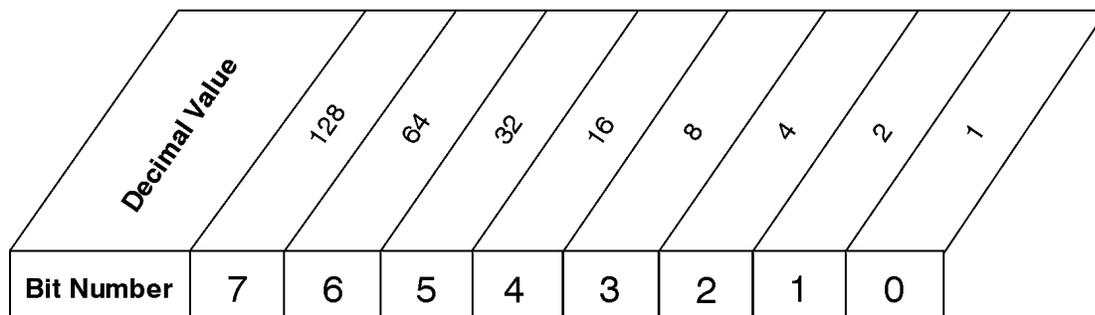

**\*SRE <num>**  
**\*SRE?**

### Service Request Enable Register

ck726a

See also "**\*SRE - Service Request Enable**" on page 2993

### Preset the Status Byte

Sets bits in most of the enable and transition registers to their default state.


- Presets:
- All Transition Filters
- All Enable Registers
- Error/Event Queue Enable

Has no effect on Event Registers, Error/Event QUEue, IEEE 488.2 ESE, and SRE Registers, as described in: [IEEE Standard 488.2-1992](#)

Remote Command :STATus:PRESet

Example :STAT:PRES

### 9.4.6.2 Standard Event Status Register

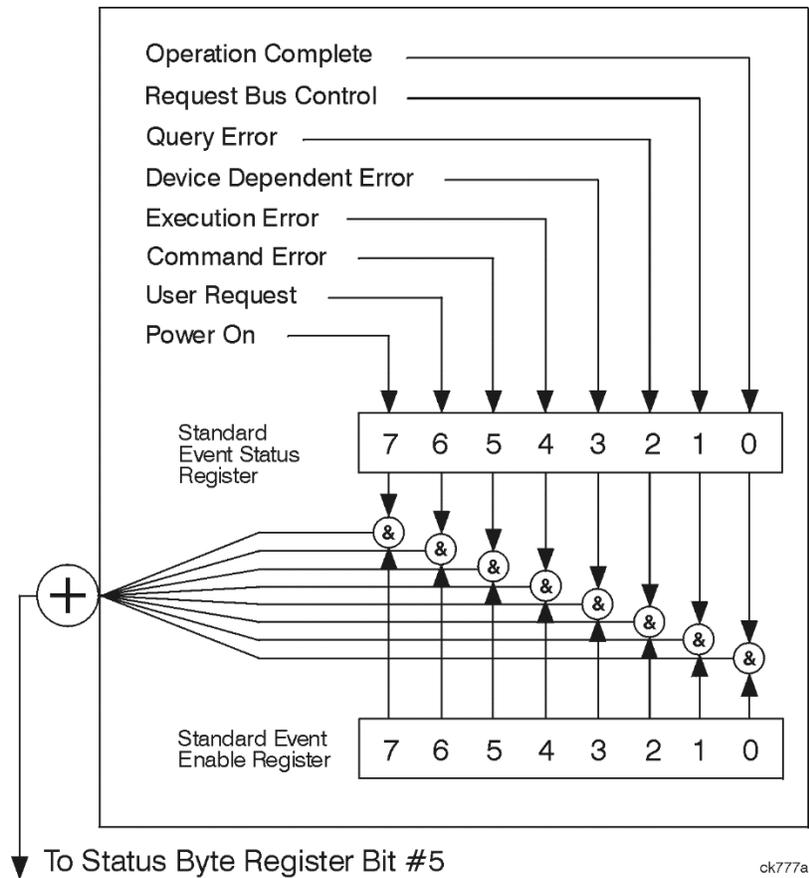


The standard event status register contains the following bits:



register lets you choose which bits in the standard event status register will set the summary bit (bit 5 of the status byte register) to 1. Send `*ESE <integer>`, where `<integer>` is the sum of the decimal values of the bits you want to enable. For example, to enable bit 7 and bit 6 so that whenever either of those bits is set to 1, the standard event status summary bit of the status byte register will be set to 1, send `*ESE 192` (128 + 64). `*ESE?` returns the decimal value of the sum of the bits previously enabled with `*ESE <integer>`.

The standard event status enable register presets to zeros (0).

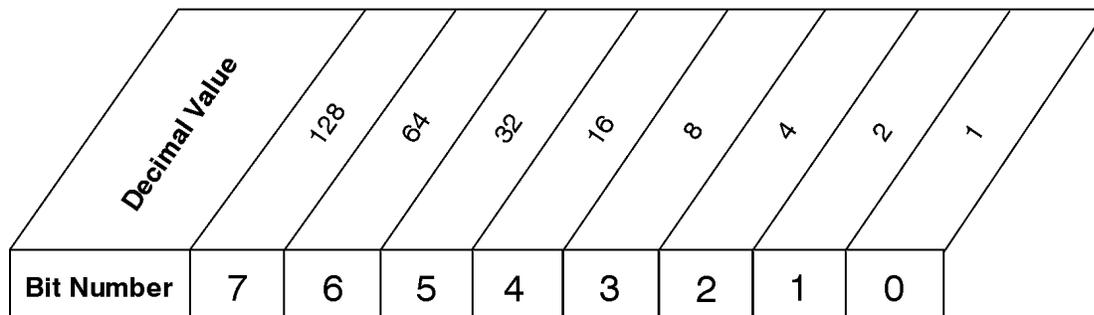

`*ESE <num>`  
`*ESE?`

### Standard Event Status Enable Register


ck728a

See also ["\\*ESE - Standard Event Status Enable" on page 2989](#)

### 9.4.6.3 Operation Register

This register and the ["Questionable Register" on page 3038](#) are sets of registers that monitor the overall instrument condition. They are accessed using `:STATus:OPERation` and `:STATus:QUESTionable`.

This register monitors the current instrument measurement state and various instrument operations for a quick summary of what is happening within the instrument. It checks to see if the instrument is calibrating, sweeping, or waiting for a trigger (see also ["\\*OPC? - Operation Complete" on page 2991](#)).

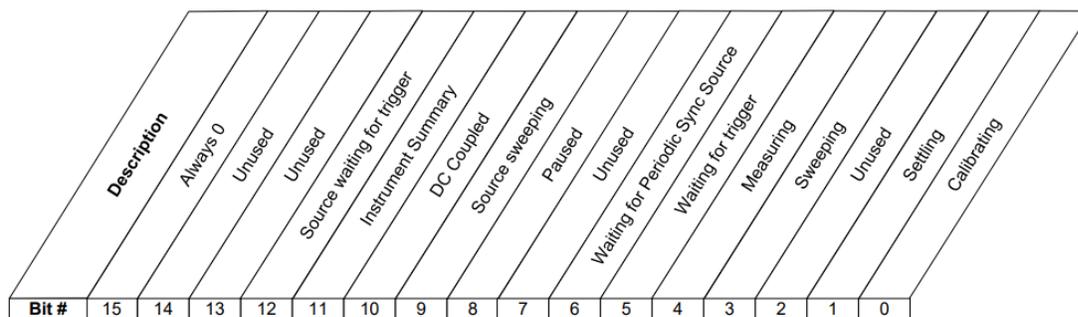

### STATus:OPERation Register

Bit	Condition	Operation
0	Calibrating	The instrument is busy executing its Align Now process
1	Settling	The instrument circuitry is settling
3	Sweeping	The instrument is busy taking a sweep
4	Measuring	The instrument is busy making a measurement. Measurements often require multiple sweeps. They are initiated by user-interface keys or with the <b>MEASure</b> group of commands The bit is valid for most X-Series Modes
5	Waiting for trigger	The instrument is waiting for the trigger conditions to be met, then it will trigger a sweep or measurement
6	Waiting for Periodic Sync Source	The instrument is waiting for the Periodic trigger Sync Source conditions to be met, then the sweep or measurement period will be synchronized
8	Paused	The measurement is paused
9	Source Sweeping	The List Sequencer is running, or Freq Scan results are available The List Sequencer or Waveform Sequences are running, specifically, in VXT models: M9410A/11A/15A/16A, M9410E/11E/15E/16E, E6680A/80E/81A, S9110A/01A/06A/08A/15A/30A, M8920B
10	DC Coupled	The instrument is DC coupled
11	Instrument Summary	The summary bit for the <b>"Operation Instrument Register"</b> on page 3035
12	Source Waiting for Trigger	The built in source is waiting for a trigger

#### Filter Registers

- **"Operation Condition Query"** on page 3032
- **"Operation Enable"** on page 3033
- **"Operation Event Query"** on page 3033
- **"Operation Negative Transition"** on page 3034
- **"Operation Positive Transition"** on page 3034

### Operation Condition Query

Returns the decimal value of the sum of the bits in the Status Operation Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:OPERation:CONDition?</code>
Example	<code>:STAT:OPER:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

## Operation Enable

Determines which bits in the "Operation Event Query" on page 3033 register will set the Operation Status Summary bit (bit 7) in the "Status Byte Register" on page 3025.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

### NOTE

The preset condition is to have all bits in this enable register set to 0. To have any Operation Events reported to the Status Byte Register, one or more bits need to be set to 1.

Remote Command	<code>:STATus:OPERation:ENABle &lt;integer&gt;</code> <code>:STATus:OPERation:ENABle?</code>
Example	<code>:STAT:OPER:ENAB 1</code> Sets the register so that Align Now events will be reported to the Status Byte Register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Operation Event Query

Returns the decimal value of the sum of the bits in the Operation Event register.

### NOTE

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:OPERation[:EVENT]?</code>
Example	<code>:STAT:OPER?</code>

Preset	0
Status Bits/OPC dependencies	Sequential command

### Operation Negative Transition

Determines which bits in the "Operation Condition Query" on page 3032 register will set the corresponding bit in the "Operation Event Query" on page 3033 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:OPERation:NTRansition &lt;integer&gt;</code> <code>:STATus:OPERation:NTRansition?</code>
Example	<code>:STAT:OPER:NTR 1</code> Align Now operation complete will be reported to the Status Byte Register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Operation Positive Transition


Determines which bits in the "Operation Condition Query" on page 3032 register will set the corresponding bit in the "Operation Event Query" on page 3033 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:OPERation:PTRansition &lt;integer&gt;</code> <code>:STATus:OPERation:PTRansition?</code>
Example	<code>:STAT:OPER:PTR 1</code> Align Now operation beginning will be reported to the Status Byte Register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.4 Operation Instrument Register

Monitors instrument-related operations and summarizes them in bit 11 of the "Operation Register" on page 3031.

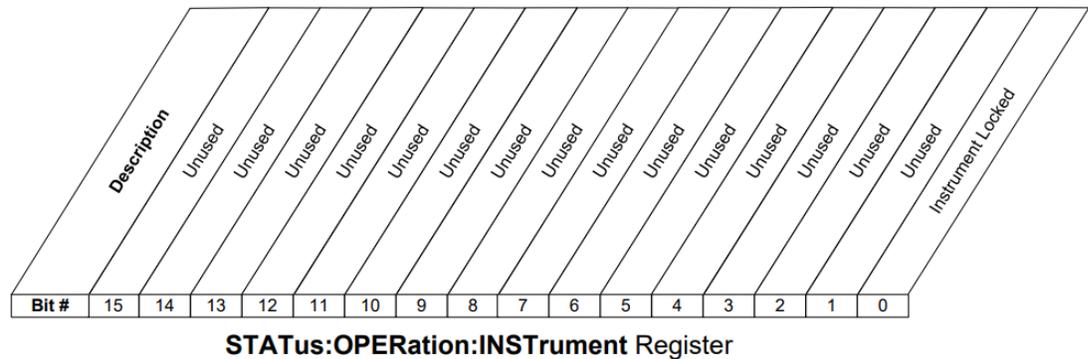

Bit	Condition	Operation
0	Instrument Locked	The instrument is locked

Filter Registers

- "Operation Instrument Condition" on page 3035
- "Operation Instrument Enable" on page 3036
- "Operation Instrument Event Query" on page 3036
- "Operation Instrument Negative Transition" on page 3037
- "Operation Instrument Positive Transition" on page 3037

### Operation Instrument Condition

Returns the decimal value of the sum of the bits in the Status Operation Instrument Condition register.

**NOTE** The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATUS:OPERation:INSTrument:CONDition?
Example	:STAT:OPER:INST:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

## Operation Instrument Enable

Determines which bits in the "Operation Instrument Condition" on page 3035 Register will set bits in the "Operation Instrument Event Query" on page 3036 register, which also sets the Instrument Summary bit (bit 11) in the "Operation Instrument Register" on page 3035.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

**NOTE**

The preset condition is to have all bits in this enable register set to 0. To have any Instrument Events reported to the Status Byte Register, one or more bits need to be set to 1.

Remote Command	<code>:STATus:OPERation:INSTrument:ENABle &lt;integer&gt;</code>
	<code>:STATus:OPERation:INSTrument:ENABle?</code>
Example	<code>:STAT:OPER:INST:ENAB 1</code>
	Sets the register so that Instrument Locked will be reported to the Status Byte Register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Operation Instrument Event Query

Returns the decimal value of the sum of the bits in the Operation Instrument Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:OPERation:INSTrument[:EVENT]?</code>
Example	<code>:STAT:OPER:INST?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

## Operation Instrument Negative Transition

Determines which bits in the "Operation Condition Query" on page 3032 Register will set the corresponding bit in the "Operation Event Query" on page 3033 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:OPERation:INSTrument:NTRansition &lt;integer&gt;</code> <code>:STATus:OPERation:INSTrument:NTRansition?</code>
Example	<code>:STAT:OPER:INST:NTR 1</code> Instrument Locked being cleared will be reported to the Instrument Summary of the Status Operation register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Operation Instrument Positive Transition

Determines which bits in the "Operation Condition Query" on page 3032 Register will set the corresponding bit in the "Operation Event Query" on page 3033 register when the condition register bit has a positive transition (0 to 1).


The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:OPERation:INSTrument:PTRansition &lt;integer&gt;</code> <code>:STATus:OPERation:INSTrument:PTRansition?</code>
Example	<code>:STAT:OPER:INST:PTR 1</code> Instrument Locked being set will be reported to the Instrument Summary of the Status Operation register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.5 Questionable Register

This register and the "Operation Register" on page 3031 monitor the overall instrument condition. They are accessed using :STATus:OPERation and :STATus:QUEStionable.

This register monitors the instrument's condition to see if anything questionable has happened. It detects anything that might cause an error or a bad measurement, such as a hardware problem, an out-of-calibration situation, or a unusual signal. All the bits are summary bits from lower-level event registers.

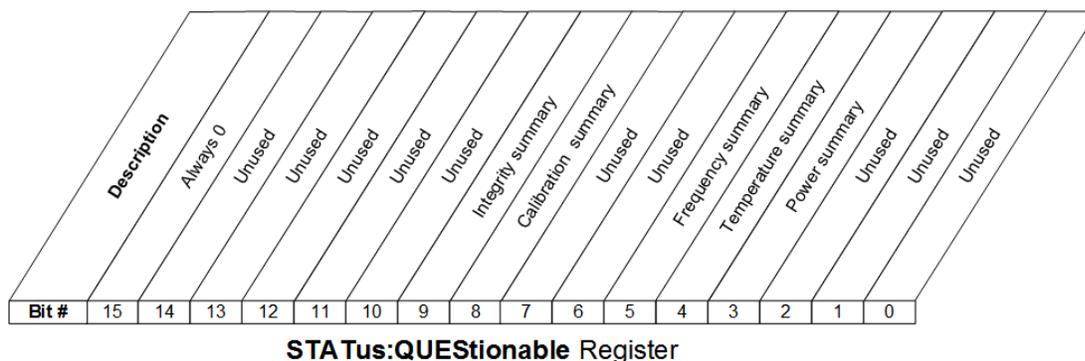

Bit	Condition	Operation
3	Power summary	Summary bit for "Questionable Power Register" on page 3041
4	Temperature summary	Summary bit for "Questionable Temperature Register" on page 3044
5	Frequency summary	Summary bit for "Questionable Frequency Register" on page 3047
8	Calibration summary	Summary bit for "Questionable Calibration Register" on page 3050
9	Integrity summary	Summary bit for "Questionable Integrity Register" on page 3063

#### Filter Registers

- "Questionable Condition" on page 3039
- "Questionable Enable" on page 3039
- "Questionable Event Query" on page 3040
- "Questionable Negative Transition" on page 3040
- "Questionable Positive Transition" on page 3040

## Questionable Condition

Returns the decimal value of the sum of the bits in the Questionable Condition register.

**NOTE** The data in this register is continuously updated and reflects current conditions.

Remote Command	<code>:STATus:QUEStionable:CONDition?</code>
Example	<code>:STAT:QUES:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Enable

Determines which bits in the "Questionable Event Query" on page 3040 Register will set the Questionable Status Summary bit (bit3) in the "Status Byte Register" on page 3025.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

**NOTE** The preset condition is all bits in this enable register set to 0. To report any Questionable Events to the Status Byte Register, one or more bits need to be set to 1. The "Standard Event Status Register" on page 3029 should be queried after each measurement to check the Questionable Status Summary (bit 3). If it is equal to 1, a condition during the test may have made the test results invalid. If it is equal to 0, this indicates that no hardware problem or measurement problem was detected by the analyzer.

Remote Command	<code>:STATus:QUEStionable:ENABle &lt;integer&gt;</code> <code>:STATus:QUEStionable:ENABle?</code> <code>:STATus:OPERation:ENABle &lt;integer&gt;</code> <code>:STATus:OPERation:ENABle?</code>
Example	<code>:STAT:QUES:ENAB 16</code> Sets the register so that questionable temperature events will be reported to the Status Byte Register
Preset	0
Min	0
Max	32767
Status Bits/OPC	Sequential command

dependencies

## Questionable Event Query

Returns the decimal value of the sum of the bits in the Questionable Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUEStionable[:EVENT]?</code>
Example	<code>:STAT:QUES?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Negative Transition

Determines which bits in the "Questionable Condition" on page 3039 Register will set the corresponding bit in the "Questionable Event Query" on page 3040 Register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:NTRansition &lt;integer&gt;</code> <code>:STATus:QUEStionable:NTRansition?</code>
Example	<code>:STAT:QUES:NTR 16</code> Temperature summary 'questionable cleared' will be reported to the Status Byte Register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Questionable Positive Transition


Determines which bits in the "Questionable Condition" on page 3039 Register will set the corresponding bit in the "Questionable Event Query" on page 3040 Register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:PTRansition &lt;integer&gt;</code> <code>:STATus:QUESTIONable:PTRansition?</code>
Example	<code>:STAT:QUES:PTR 16</code> Temperature summary 'questionable asserted' will be reported to the Status Byte Register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.6 Questionable Power Register

Monitors power-related conditions within the instrument and summarizes them in bit 3 of the "Questionable Register" on page 3038.

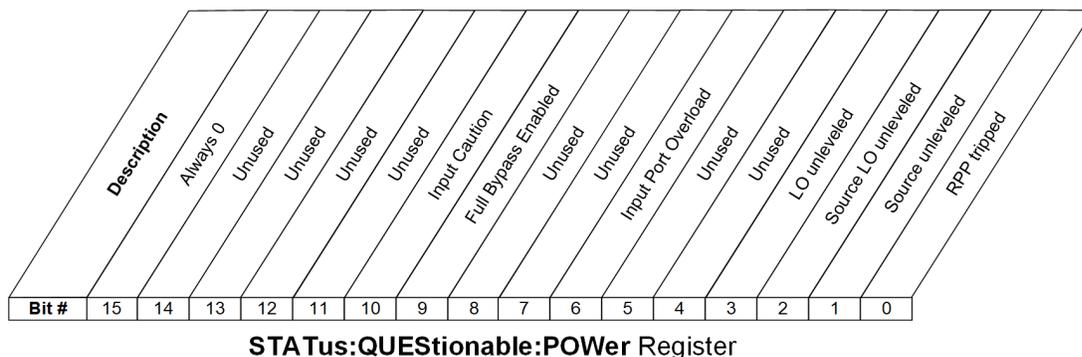

Bit	Condition	Operation
0	RPP tripped	(not currently in use)
1	Source Unleveled	The built-in source is not properly leveled
2	Source LO Unleveled	(not currently in use)
3	LO Unleveled	(not currently in use)
6	Input Port Overload	A power overload condition exists at an input port
9	Full Bypass Enabled	Frontend circuitry is bypassed, use caution to protect the mixer
10	Input Caution	Input circuitry is configured such that care is required to prevent damage

Filter Registers

- "Questionable Power Condition" on page 3042
- "Questionable Power Enable" on page 3042
- "Questionable Power Event Query" on page 3043
- "Questionable Power Negative Transition" on page 3043
- "Questionable Power Positive Transition" on page 3043

### Questionable Power Condition

Returns the decimal value of the sum of the bits in the Questionable Power Condition register.

**NOTE** The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUESTionable:POWer:CONDition?
Example	:STAT:QUES:POW:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Power Enable

Determines which bits in the "Questionable Power Condition" on page 3042 Register will set bits in the Questionable Power Event register, which also sets the Power Summary bit (bit 3) in the "Questionable Register" on page 3038.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

Remote Command	:STATus:QUESTionable:POWer:ENABle <integer>
Example	:STAT:QUES:POW:ENAB 2
	Source Unlevelled will be reported to the Power Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Questionable Power Event Query

Returns the decimal value of the sum of the bits in the Questionable Power Event Query register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	:STATus:QUESTionable:POWer[:EVENT]?
Example	:STAT:QUES:POW?
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Power Negative Transition

Determines which bits in the "Questionable Power Condition" on page 3042 register will set the corresponding bit in the "Questionable Power Event Query" on page 3043 register when the condition register bit has a negative transition (1 to 0).

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:POWer:NTRansition <integer> :STATus:QUESTionable:POWer:NTRansition?
Example	:STAT:QUES:POW:NTR 2 Source Unlevelled being cleared will be reported to the Power Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Questionable Power Positive Transition


Determines which bits in the "Questionable Power Condition" on page 3042 register will set the corresponding bit in the "Questionable Power Event Query" on page 3043 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:POWer:PTRansition &lt;integer&gt;</code>
	<code>:STATus:QUEStionable:POWer:PTRansition?&gt;</code>
Example	<code>:STAT:QUES:POW:PTR 32</code> Source Unlevelled being set will be reported to the Power Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.7 Questionable Temperature Register

Monitors temperature-related conditions within the instrument and summarizes them in bit 4 of the "Questionable Register" on page 3038.

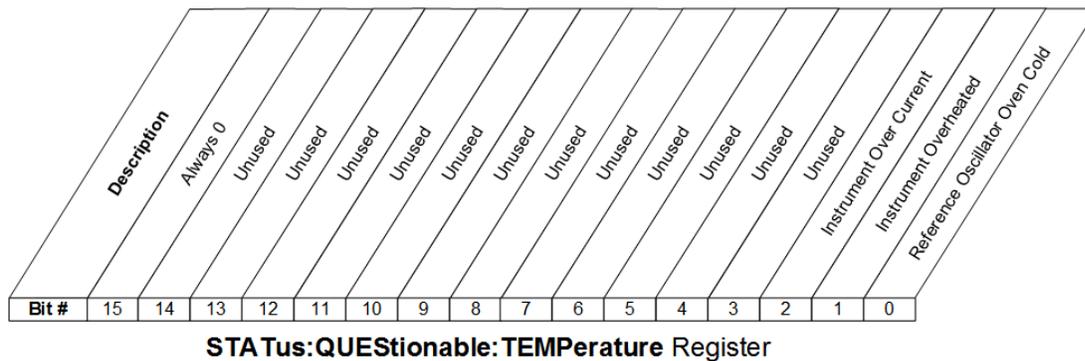

Bit	Condition	Operation
0	Reference Oscillator Oven Cold	(not currently in use)
1	Instrument overheated (over temperature)	Excessive heat has been detected in some part of the instrument
2	Instrument over current	Excessive heat has been detected in some part of the instrument, the instrument should be restarted

Filter Registers

- "Questionable Temperature Condition" on page 3045
- "Questionable Temperature Enable" on page 3045

- "Questionable Temperature Event Query" on page 3046
- "Questionable Temperature Negative Transition" on page 3046
- "Questionable Temperature Positive Transition" on page 3046

## Questionable Temperature Condition

Returns the decimal value of the sum of the bits in the Questionable Temperature Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUEStionable:TEMPerature:CONDition?
Example	:STAT:QUES:TEMP:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Temperature Enable

Determines which bits in the "Questionable Temperature Condition" on page 3045 Register will set bits in the "Questionable Temperature Event Query" on page 3046 register, which also sets the Temperature Summary bit (bit 4) in the "Questionable Register" on page 3038.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

Remote Command	:STATus:QUEStionable:TEMPerature:ENABle <integer> :STATus:QUEStionable:TEMPerature:ENABle?
Example	:STAT:QUES:TEMP:ENAB 2 Instrument Overheated will be reported to the Temperature Summary of the Questionable Register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Questionable Temperature Event Query

Returns the decimal value of the sum of the bits in the Questionable Temperature Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	:STATus:QuesTionable:TEMPerature[:EVENT]?
Example	:STAT:QUES:TEMP?
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Temperature Negative Transition

Determines which bits in the "Questionable Temperature Condition" on page 3045 Register will set bits in the "Questionable Temperature Event Query" on page 3046 register, when the condition register bit has a negative transition (1 to 0).

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QuesTionable:TEMPerature:NTRansition <integer> :STATus:QuesTionable:TEMPerature:NTRansition?
Example	:STAT:QUES:TEMP:NTR 2 Instrument Overheated being cleared will be reported to the Temperature Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Questionable Temperature Positive Transition


Determines which bits in the "Questionable Temperature Condition" on page 3045 Register will set bits in the "Questionable Temperature Event Query" on page 3046 register, when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:TEMPerature:PTRansition &lt;integer&gt;</code> <code>:STATus:QUESTionable:TEMPerature:PTRansition?</code>
Example	<code>:STAT:QUES:TEMP:PTR 2</code> Instrument Overheated being set will be reported to the Temperature Summary of the Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.8 Questionable Frequency Register

Monitors frequency-related conditions within the instrument and summarizes them in bit 5 of the "Questionable Register" on page 3038.

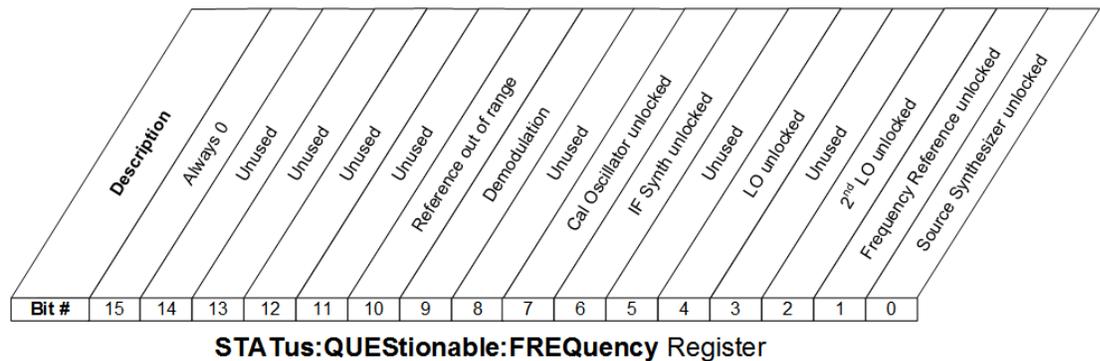

Bit	Condition	Operation
0	Source Synth Unlocked	The synthesizer in the built-in source is not locked
1	Frequency Reference Unlocked	The instrument's frequency reference is unlocked
2	2 <sup>nd</sup> LO Unlocked	The instrument's second LO (local oscillator) is unlocked
4	LO Unlocked	The instrument's main LO (local oscillator) is unlocked
6	IF Synth Unlocked	The synthesizer in the IF is not locked
7	Cal Osc Unlocked	The oscillator used for internal calibrations is not locked
9	Demodulation	Demodulation cannot be performed due to an out of range frequency

Bit	Condition	Operation
10	Reference missing or out of range	The signal being fed to a reference input is missing or too high or low in frequency for the reference to lock

#### Filter Registers

- "Questionable Frequency Condition" on page 3048
- "Questionable Frequency Enable" on page 3048
- "Questionable Frequency Event Query" on page 3049
- "Questionable Frequency Negative Transition" on page 3049
- "Questionable Frequency Positive Transition" on page 3050

### Questionable Frequency Condition

Returns the decimal value of the sum of the bits in the Questionable Frequency Condition register.

NOTE

The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUEStionable:FREQuency:CONDition?
Example	:STAT:QUES:FREQ:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Frequency Enable

Determines which bits in the "Questionable Frequency Condition" on page 3048 Register will set bits in the "Questionable Temperature Event Query" on page 3046 register, which also sets the Frequency Summary bit (bit 5) in the "Questionable Register" on page 3038.

The variable `<integer>` is the sum of the decimal values of the bits you want to enable.

Remote Command	:STATus:QUEStionable:FREQuency:ENABle <integer>
Example	:STAT:QUES:FREQ:ENAB 2
	Frequency Reference Unlocked will be reported to the Frequency Summary of the Status Questionable

	register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Frequency Event Query

Returns the decimal value of the sum of the bits in the Questionable Frequency Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:FREQuency[:EVENT]?</code>
Example	<code>:STAT:QUES:FREQ?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Frequency Negative Transition

Determines which bits in the "Questionable Frequency Condition" on page 3048 register will set the corresponding bit in the "Questionable Frequency Event Query" on page 3049 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:FREQuency:NTRansition &lt;integer&gt;</code> <code>:STATus:QUESTionable:FREQuency:NTRansition?</code>
Example	<code>:STAT:QUES:FREQ:NTR 2</code> Frequency Reference 'regained lock' will be reported to the Frequency Summary of the Status Questionable register
Preset	0
Min	0
Max	32767

Status Bits/OPC dependencies Sequential command

### Questionable Frequency Positive Transition


Determines which bits in the "Questionable Frequency Condition" on page 3048 register will set the corresponding bit in the "Questionable Frequency Event Query" on page 3049 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:FREQUENCY:PTRansition &lt;integer&gt;</code>
Example	<code>:STAT:QUES:FREQ:PTR 2</code> Frequency Reference 'became unlocked' will be reported to the Frequency Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.9 Questionable Calibration Register

Monitors calibration-related conditions within the instrument and summarizes them in bit 8 of the "Questionable Register" on page 3038. Three of the bits are summary bits from lower-level event registers.

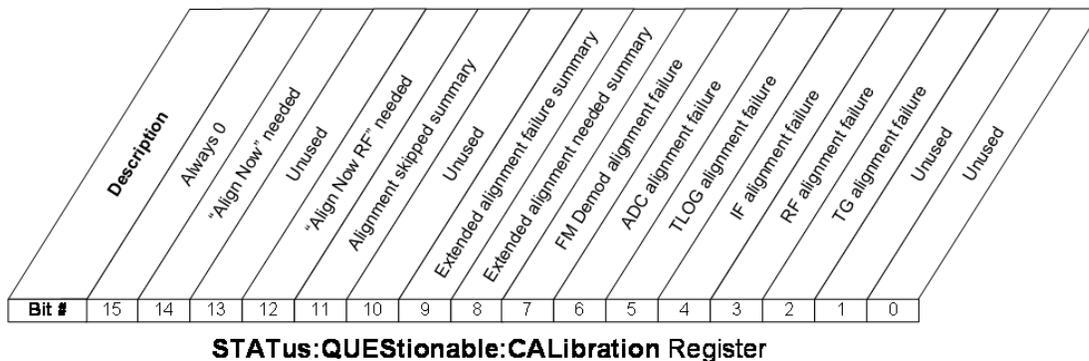

Bit	Condition	Operation
2	TG Alignment Failure	The Tracking Generator failed to align properly
3	RF Alignment Failure	The RF section (frontend) failed to align properly
4	IF Alignment Failure	The IF section failed to align properly
5	LO Alignment Failure	The LO (local oscillator) failed to align properly
6	ADC Alignment Failure	The ADC section failed to align properly
7	FM Demod Alignment Failure	The FM Demod section failed to align properly
8	Extended Align Needed Summary	Summary bit for "Questionable Calibration Extended Needed Register" on page 3054
9	Extended Align Failure Summary	Summary bit for "Questionable Calibration Extended Failure Register" on page 3057
11	Align Skipped Summary	Summary bit for "Questionable Calibration Skipped Register" on page 3060
12	"Align Now RF" required	Go to the System, Alignments, Align Now menu and perform an "Align Now RF"
14	"Align Now" required	Go to the System, Alignments, Align Now menu and perform an "Align Now All" or an "Align Now Expired"

#### Filter Registers

- "Questionable Calibration Condition" on page 3051
- "Questionable Calibration Enable" on page 3052
- "Questionable Calibration Event Query" on page 3052
- "Questionable Calibration Negative Transition" on page 3053
- "Questionable Calibration Positive Transition" on page 3053

### Questionable Calibration Condition

Returns the decimal value of the sum of the bits in the Questionable Calibration Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUEStionable:CALibration:CONDition?
Example	:STAT:QUES:CAL:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Enable

Determines which bits in the "Questionable Calibration Condition" on page 3051 Register will set bits in the "Questionable Calibration Event Query" on page 3052 register, which also sets the Calibration Summary bit (bit 8) in the "Questionable Register" on page 3038.

The variable <integer> is the sum of the decimal values of the bits you want to enable.

Remote Command	:STATus:QUEStionable:CALibration:ENABle <integer> :STATus:QUEStionable:CALibration:ENABle?
Example	:STAT:QUES:CAL:ENAB 16384 Can be used to query if an alignment is needed, if you have turned off the automatic alignment process
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Event Query

Returns the decimal value of the sum of the bits in the Questionable Calibration Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	:STATus:QUEStionable:CALibration[:EVENT]?
Example	:STAT:QUES:CAL?
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Negative Transition

Determines which bits in the "Questionable Calibration Condition" on page 3051 register will set the corresponding bit in the "Questionable Calibration Event Query" on page 3052 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:NTRansition &lt;integer&gt;</code> <code>:STATus:QUESTionable:CALibration:NTRansition?</code>
Example	<code>:STAT:QUES:CAL:NTR 16384</code> "Align All Now Needed" being cleared will be reported to the Calibration Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Positive Transition


Determines which bits in the "Questionable Calibration Condition" on page 3051 register will set the corresponding bit in the "Questionable Calibration Event Query" on page 3052 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:PTRansition &lt;integer&gt;</code> <code>:STATus:QUESTionable:CALibration:PTRansition?</code>
Example	<code>:STAT:QUES:CAL:PTR 16384</code> "Align All Now Needed" being set will be reported to the Calibration Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.10 Questionable Calibration Extended Needed Register

Monitors conditions that occur because a calibration or alignment is required to guarantee accurate measurements. It summarizes them in bit 8 of the "Questionable Calibration Register" on page 3050.

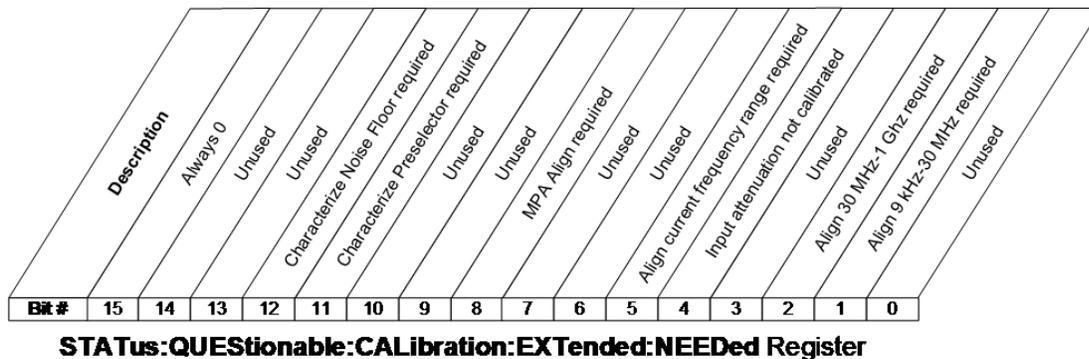

Bit	Condition	Operation
1	Align 9kHz-30MHz required	EMI receiver alignment required, 9kHz-30 MHz (conducted band)
2	Align 30MHz-1GHz required	EMI receiver alignment required, 30 MHz-1 GHz (radiated band)
4	Input Attenuation not calibrated	The input attenuator is uncalibrated
5	Align current frequency range required	Alignment for current set frequency range is needed. It is suggested to process Align Selected Freq Range for the frequency range in use
8	MPA Align required	The Multiport Adaptor must be calibrated (EXT only)
11	Characterize Preselector required	Go to the System, Alignments, Advanced menu and perform a "Characterize Preselector"
12	Characterize Noise Floor required	Go to the System, Alignments, Advanced menu and perform a "Characterize Noise Floor"

#### Filter Registers

- "Questionable Calibration Extended Needed Condition" on page 3055
- "Questionable Calibration Extended Needed Enable" on page 3055
- "Questionable Calibration Extended Needed Event Query" on page 3056

- "Questionable Calibration Extended Needed Negative Transition" on page 3056
- "Questionable Calibration Extended Needed Positive Transition" on page 3056

### Questionable Calibration Extended Needed Condition

Returns the decimal value of the sum of the bits in the Questionable Calibration Extended Needed Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUESTionable:CALibration:EXTended:NEEDed:CONDition?
Example	:STAT:QUES:CAL:EXT:NEED:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Extended Needed Enable

Determines which bits in the "Questionable Calibration Extended Needed Condition" on page 3055 will set bits in the "Questionable Calibration Extended Needed Event Query" on page 3056 register, which also sets bit 14 of the "Questionable Calibration Register" on page 3050.

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:CALibration:EXTended:NEEDed:ENABle <integer> :STATus:QUESTionable:CALibration:EXTended:NEEDed:ENABle?
Example	:STAT:QUES:CAL:EXT:NEED:ENAB 2 Can be used to query if an EMI conducted alignment is needed
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Extended Needed Event Query

Returns the decimal value of the sum of the bits in the Questionable Calibration Extended Needed Event register.

**NOTE** The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	:STATus:QUESTionable:CALibration:EXTended:NEEDed[:EVENT]?
Example	:STAT:QUES:CAL:EXT:NEED?
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Extended Needed Negative Transition

Determines which bits in the "Questionable Calibration Extended Needed Condition" on page 3055 register will set the corresponding bit in the "Questionable Calibration Extended Needed Event Query" on page 3056 register when the condition register bit has a negative transition (1 to 0).

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:CALibration:EXTended:NEEDed:NTRansition <integer> :STATus:QUESTionable:CALibration:EXTended:NEEDed:NTRansition?
Example	:STAT:QUES:CAL:EXT:NEED:NTR 2 Conducted alignment required bit being cleared will be reported
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Extended Needed Positive Transition

Determines which bits in the "Questionable Calibration Extended Needed Condition" on page 3055 register will set the corresponding bit in the "Questionable Calibration

Extended Needed Event Query" on page 3056 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:CALibration:EXTended:NEEDED:PTRansition &lt;integer&gt;</code> <code>:STATus:QUESTIONable:CALibration:EXTended:NEEDED:PTRansition?</code>
Example	<code>:STAT:QUES:CAL:EXT:NEED:PTR 2</code> Conducted alignment required bit being set will be reported
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

#### 9.4.6.11 Questionable Calibration Extended Failure Register

Monitors conditions that occur because a calibration or alignment has failed to complete properly. It summarizes them in bit 9 of the "Questionable Calibration Register" on page 3050.

Bit #	Description
15	Always 0
14	Misc/System Alignment Failure
13	Unused
12	Unused
11	RCal Multiple Groups Applied
10	RCal Calibrations Missing, Part of Trace
9	RCal Multiple Calibrations Applied, Part of Trace
8	RCal Apply Warning, Check RCal Status
7	MPAdapter Preamp Charact Failure
6	Unused
5	Align Selected Freq Range failed
4	Unused
3	Unused
2	Characterize Preselector Failure
1	Unused
0	Unused

**STATus:QUESTIONable:CALibration:EXTended:FAILURE Register**

Bit	Condition	Operation
2	Characterize Preselector Failure	The preselector characterization failed
5	Align Selected Freq Range failed	The alignment for selected frequency range failed
8	MPAdapter Preamp Charact Failure	The Multiport Adaptor must be calibrated (EXT only)
9	RCal Apply Warning, Check RCal Status	The calibration request sent to the RCal module failed

Bit	Condition	Operation
10	RCal Multiple Calibrations Applied, Part of Trace	More than one calibration is being applied to part of the trace for current measurement
11	RCal Calibrations Missing, Part of Trace	The calibration being applied is not being applied to all of the trace for the current measurement
12	RCal Multiple Groups Applied	More than one calibrated rows are being applied to the current measurement
14	Misc/System Alignment Failure	Miscellaneous/System alignments have failed

#### Filter Registers

- ["Questionable Calibration Extended Failure Condition" on page 3058](#)
- ["Questionable Calibration Extended Failure Enable" on page 3058](#)
- ["Questionable Calibration Extended Failure Event Query" on page 3059](#)
- ["Questionable Calibration Extended Failure Negative Transition" on page 3059](#)
- ["Questionable Calibration Extended Failure Positive Transition" on page 3060](#)

### Questionable Calibration Extended Failure Condition

Returns the decimal value of the sum of the bits in the Questionable Calibration Extended Failure Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QESTionable:CALibration:EXTended:FAILure:CONDition?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Extended Failure Enable

Determines which bits in the ["Questionable Calibration Extended Failure Condition" on page 3058](#) Register will set bits in the ["Questionable Calibration Extended Failure Event Query" on page 3059](#) register, which also sets bit 9 of the ["Questionable Calibration Register" on page 3050](#).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:EXTended:FAILure:ENABle &lt;integer&gt;</code> <code>:STATus:QUESTionable:CALibration:EXTended:FAILure:ENABle?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL:ENAB 1</code> Can be used to query if an EMI conducted alignment failed
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Extended Failure Event Query

Returns the decimal value of the sum of the bits in the Questionable Calibration Extended Failure Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:CALibration:EXTended:FAILure[:EVENT]?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Extended Failure Negative Transition

Determines which bits in the "Questionable Calibration Extended Failure Condition" on page 3058 register will set the corresponding bit in the "Questionable Calibration Extended Failure Event Query" on page 3059 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:EXTended:FAILure:NTRansition &lt;integer&gt;</code> <code>:STATus:QUESTionable:CALibration:EXTended:FAILure:NTRansition?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL:NTR 1</code>

	Conducted alignment failed bit being cleared will be reported
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Extended Failure Positive Transition


Determines which bits in the "Questionable Calibration Extended Failure Condition" on page 3058 register will set the corresponding bit in the "Questionable Calibration Extended Failure Event Query" on page 3059 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:CALibration:EXTEnded:FAILure:PTRansition &lt;integer&gt;</code> <code>:STATus:QUEStionable:CALibration:EXTEnded:FAILure:PTRansition?</code>
Example	<code>:STAT:QUES:CAL:EXT:FAIL:PTR 1</code> Conducted alignment failed bit being set will be reported
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.12 Questionable Calibration Skipped Register

Monitors conditions that occur because a calibration or alignment has been skipped due to various settings or conditions. It summarizes them in bit 11 of the "Questionable Calibration Register" on page 3050.

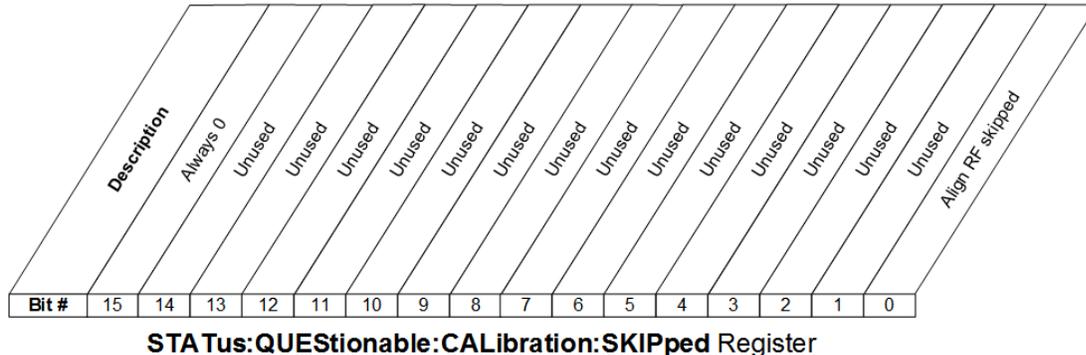

Bit	Condition	Operation
0	Align RF skipped	During an alignment, the calibration of the RF section (frontend) of the instrument was not performed. This can be caused by an interfering user signal present at the RF Input See "Align Now" on page 2351, "Align Now All" on page 2353

#### Filter Registers

- "Questionable Calibration Skipped Condition" on page 3061
- "Questionable Calibration Skipped Enable" on page 3062
- "Questionable Calibration Skipped Event Query" on page 3062
- "Questionable Calibration Skipped Negative Transition" on page 3062
- "Questionable Calibration Skipped Positive Transition" on page 3063

### Questionable Calibration Skipped Condition

Returns the decimal value of the sum of the bits in the Questionable Calibration Skipped Condition register.

**NOTE** The data in this register is continuously updated and reflects the current conditions.

Remote Command :STATus:QUESTIONable:CALibration:SKIPPed:CONDition?

Example :STAT:QUES:CAL:SKIP:COND?

Preset 0

Status Bits/OPC dependencies Sequential command

### Questionable Calibration Skipped Enable

Determines which bits in the "Questionable Calibration Skipped Condition" on page 3061 Register will set bits in the "Questionable Calibration Skipped Event Query" on page 3062 register, which also sets bit 11 of the "Questionable Calibration Register" on page 3050.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:CALibration:SKIPped:ENABle &lt;integer&gt;</code>
	<code>:STATus:QUESTionable:CALibration:SKIPped:ENABle?</code>
Example	<code>:STAT:QUES:CAL:SKIP:ENAB 1</code> Can be used to query if an RF alignment skipped condition is detected
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Skipped Event Query

Returns the decimal value of the sum of the bits in the Questionable Calibration Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:CALibration:SKIPped[:EVENT]?</code>
Example	<code>:STAT:QUES:CAL:SKIP?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Skipped Negative Transition

Determines which bits in the "Questionable Calibration Skipped Condition" on page 3061 register will set the corresponding bit in the "Questionable Calibration Skipped

[Event Query" on page 3062](#) register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:CALibration:SKIPPed:NTRansition &lt;integer&gt;</code> <code>:STATus:QUESTIONable:CALibration:SKIPPed:NTRansition?</code>
Example	<code>:STAT:QUES:CAL:SKIP:NTR 1</code> RF Align Skipped bit being cleared will be reported
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Calibration Skipped Positive Transition

Determines which bits in the ["Questionable Calibration Skipped Condition" on page 3061](#) register will set the corresponding bit in the ["Questionable Calibration Skipped Event Query" on page 3062](#) register when the condition register bit has a positive transition (0 to 1).


The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:CALibration:SKIPPed:PTRansition &lt;integer&gt;</code> <code>:STATus:QUESTIONable:CALibration:SKIPPed:PTRansition?</code>
Example	<code>:STAT:QUES:CAL:SKIP:PTR 1</code> RF Align Skipped bit being set will be reported
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### 9.4.6.13 Questionable Integrity Register

Monitors measurement integrity-related conditions within the instrument and summarizes them in bit 9 of the ["Questionable Register" on page 3038](#). Two of the bits are summary bits from lower-level event registers.

9 Programming the Instrument  
 9.4 Status Register System & STATus Subsystem

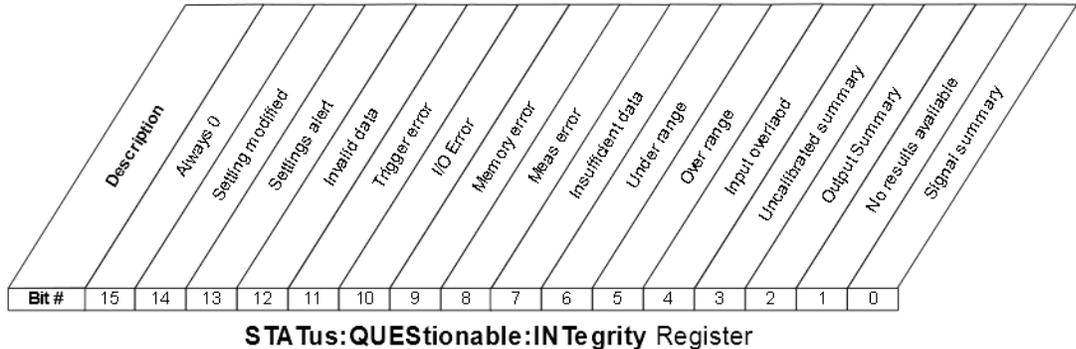

Bit	Condition	Operation
0	Signal Summary	The summary bit for the "Questionable Integrity Signal Register" on page 3067
1	No Result	The current measurement is incompatible with a setting or combination of settings, such as the selected Input, Radio Standard, etc.
2	Output Summary	The summary bit for the "Questionable Integrity Output Register" on page 3070
3	Uncalibrated Summary	The summary bit for the "Questionable Integrity Uncalibrated Register" on page 3073
4	Input Overload	A signal overload condition exists
5	Over Range	The signal at the input for this measurement is too high. You should increase the attenuation or decrease the signal level
6	Under Range	The signal at the input for this measurement is too low. You should decrease the attenuation or increase the signal level
7	Insufficient Data	Signal or settings conditions did not allow enough data to be taken during an acquisition for a valid measurement
8	Meas Error	(not currently in use)
9	Memory Error	There is not enough memory to perform the desired operation
10	I/O Error	I/O settings are preventing communication with an instrument or peripheral
11	Trigger Error	Signal or settings conditions did not allow enough data to be taken during an acquisition for a valid measurement
12	Invalid data	The Invalid Data indicator (* in upper right of display) is on, indicating that onscreen data may be stale and not match the current settings
13	Settings Alert	Settings are not right for a valid measurement, but the instrument is nonetheless allowing a measurement to be taken
14	Setting Modified	Settings are not right for a valid measurement, and the instrument is using different settings than the ones you entered in order to take a measurement

Filter Registers

- "Questionable Integrity Condition" on page 3065
- "Questionable Integrity Enable" on page 3065
- "Questionable Integrity Event Query" on page 3066
- "Questionable Integrity Negative Transition" on page 3066
- "Questionable Integrity Positive Transition" on page 3066

## Questionable Integrity Condition

Returns the decimal value of the sum of the bits in the Questionable Integrity Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUESTionable:INTEgrity:CONDition?
Example	:STAT:QUES:INT:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Integrity Enable

Determines which bits in the "Questionable Integrity Condition" on page 3065 Register will set bits in the "Questionable Integrity Event Query" on page 3066 register, which also sets the Integrity Summary bit (bit 9) in the "Questionable Register" on page 3038.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:INTEgrity:ENABle <integer> :STATus:QUESTionable:INTEgrity:ENABle?
Example	:STAT:QUES:INT:ENAB 8 Uncalibrated Summary will be reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Questionable Integrity Event Query

Returns the decimal value of the sum of the bits in the Questionable Integrity Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	:STATus:QuesTionable:INTEgrity[:EVENT]?
Example	:STAT:QUES:INT?
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Integrity Negative Transition

Determines which bits in the "Questionable Integrity Condition" on page 3065 register will set the corresponding bit in the "Questionable Integrity Event Query" on page 3066 register when the condition register bit has a negative transition (1 to 0).

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QuesTionable:INTEgrity:NTRansition <integer> :STATus:QuesTionable:INTEgrity:NTRansition?
Example	:STAT:QUES:INT:NTR 8 Uncalibrated Summary being cleared will be reported to the Integrity Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Questionable Integrity Positive Transition


Determines which bits in the "Questionable Integrity Condition" on page 3065 register will set the corresponding bit in the "Questionable Integrity Event Query" on page 3066 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:INTEgrity:PTRansition &lt;integer&gt;</code> <code>:STATus:QUEStionable:INTEgrity:PTRansition?</code>
Example	<code>:STAT:QUES:INT:PTR 8</code> Uncalibrated Summary being set will be reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

#### 9.4.6.14 Questionable Integrity Signal Register

Monitors conditions that occur because a measurement may not be able to return an accurate or valid result due to signal conditions. It summarizes them in bit 0 of the "Questionable Integrity Register" on page 3063.

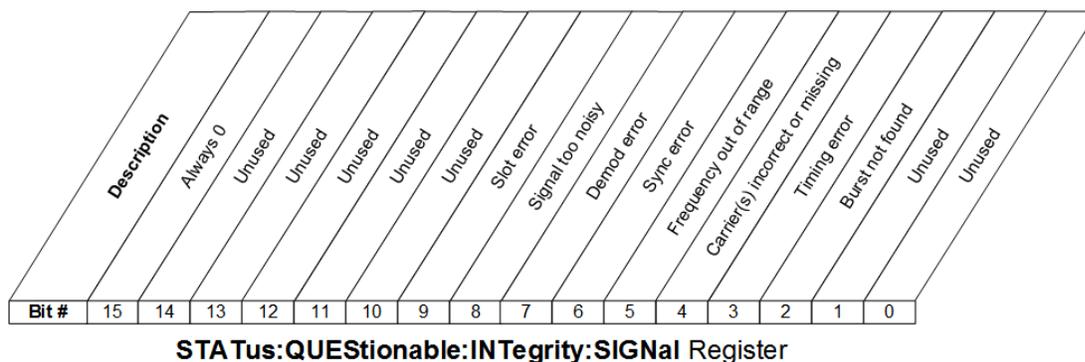

Bit	Condition	Operation
2	Burst not found	The instrument is expecting a bursted signal but such a signal cannot be detected because of inappropriate parameter settings or incorrect signal content
3	Timing Error	The instrument cannot establish appropriate timing from the signal
4	Carrier(s) incorrect or missing	The instrument cannot find the expected carrier(s) within the frequency ranges in which it is looking
5	Frequency out of range	One or more system or signal input frequencies are out of range
6	Sync error	The instrument cannot establish sync with the measured signal
7	Demod error	The instrument cannot demodulate the signal due to inappropriate

Bit	Condition	Operation
		signal or settings conditions
8	Signal Too Noisy	The instrument cannot measure the desired signal because it is too noisy
9	Slot Error	No valid signal slot found in captured data

#### Filter Registers

- ["Questionable Integrity Signal Condition" on page 3068](#)
- ["Questionable Integrity Signal Enable" on page 3068](#)
- ["Questionable Integrity Signal Event Query" on page 3069](#)
- ["Questionable Integrity Signal Negative Transition" on page 3069](#)
- ["Questionable Integrity Signal Positive Transition" on page 3070](#)

### Questionable Integrity Signal Condition

Returns the decimal value of the sum of the bits in the Questionable Integrity Signal Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:SIGNal:CONDition?</code>
Example	<code>:STAT:QUES:INT:SIGN:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Signal Enable

Determines which bits in the ["Questionable Integrity Signal Condition" on page 3068](#) Register will set bits in the ["Questionable Integrity Signal Event Query" on page 3069](#) register, which also sets the Integrity Summary bit (bit 9) in the ["Questionable Register" on page 3038](#).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote	<code>:STATus:QUESTionable:INTEgrity:SIGNal:ENABLE &lt;integer&gt;</code>
--------	---

Command	<code>:STATus:QUESTionable:INTEgrity:SIGNal:ENABle?</code>
Example	<code>:STAT:QUES:INT:SIGN:ENAB 4</code> Burst Not Found will be reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Signal Event Query

Returns the decimal value of the sum of the bits in the Questionable Integrity Signal Event register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:SIGNal[:EVENT]?</code>
Example	<code>:STAT:QUES:INT:SIGN?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Signal Negative Transition

Determines which bits in the "Questionable Integrity Signal Condition" on page 3068 register will set the corresponding bit in the "Questionable Integrity Signal Event Query" on page 3069 register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:SIGNal:NTRansition &lt;integer&gt;</code> <code>:STATus:QUESTionable:INTEgrity:SIGNal:NTRansition?</code>
Example	<code>:STAT:QUES:INT:SIGN:NTR 4</code> Burst not found being cleared will be reported to the Integrity Summary of the Status Questionable register
Preset	0

Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Signal Positive Transition


Determines which bits in the "Questionable Integrity Signal Condition" on page 3068 register will set the corresponding bit in the "Questionable Integrity Signal Event Query" on page 3069 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUEStionable:INTEgrity:SIGNal:PTRansition &lt;integer&gt;</code> <code>:STATus:QUEStionable:INTEgrity:SIGNal:PTRansition?</code>
Example	<code>:STAT:QUES:INT:SIGN:PTR 4</code> Burst not found being set will be reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

#### 9.4.6.15 Questionable Integrity Output Register

Monitors conditions that occur in connection status currently limited to ODI streaming . It summarizes them in bit 2 of the "Questionable Integrity Register" on page 3063.

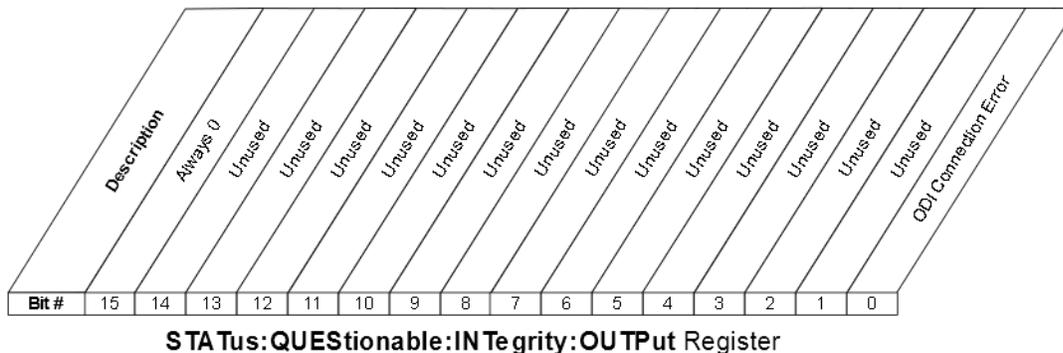

Bit	Condition	Operation
0	ODI Connection Error	ODI Connection Error This bit is never triggered, only its aliases are

#### Filter Registers

- "Questionable Integrity Output Condition" on page 3071
- "Questionable Integrity Output Enable" on page 3071
- "Questionable Integrity Output Event Query" on page 3072
- "Questionable Integrity Output Negative Transition" on page 3072
- "Questionable Integrity Output Positive Transition" on page 3073

### Questionable Integrity Output Condition

Returns the decimal value of the sum of the bits in the Questionable Integrity Output Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	:STATus:QUESTionable:INTEgrity:OUTPut:CONDition?
Example	:STAT:QUES:INT:OUTP:COND?
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Output Enable

Determines which bits in the "Questionable Integrity Output Condition" on page 3071 register will set the corresponding bit in the "Questionable Integrity Output Event Query" on page 3072 register, which also sets the Data Output Summary bit (bit 2) in the "Questionable Integrity Register" on page 3063.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:INTEgrity:OUTPut:ENABLE :STATus:QUESTionable:INTEgrity:OUTPut:ENABLE?
Example	:STAT:QUES:INT:OUTP:ENAB 1

	Oversweep (Meas Uncal) is reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Output Event Query

Returns the decimal value of the sum of the bits in the "Questionable Integrity Output Condition" on page 3071 register.

**NOTE** The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	:STATus:QUESTionable:INTEgrity:OUTPut[:EVENT]?
Example	:STAT:QUES:INT:OUTP?
Preset	0
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Output Negative Transition

Determines which bits in the "Questionable Integrity Output Condition" on page 3071 register will set the corresponding bit in the "Questionable Integrity Output Event Query" on page 3072 register when the condition register bit has a negative transition (1 to 0).

The variable <integer> is the sum of the decimal values of the bits that you want to enable.

Remote Command	:STATus:QUESTionable:INTEgrity:OUTPut:NTRansition <integer> :STATus:QUESTionable:INTEgrity:OUTPut:NTRansition?
Example	:STAT:QUES:INT:OUTP:NTR 1
	Oversweep cleared is reported to the Integrity Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Output Positive Transition


Determines which bits in the "Questionable Integrity Output Condition" on page 3071 register will set the corresponding bit in the "Questionable Integrity Output Event Query" on page 3072 register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTIONable:INTEgrity:OUTPut:PTRansition &lt;integer&gt;</code> <code>:STATus:QUESTIONable:INTEgrity:OUTPut:PTRansition?</code>
Example	<code>:STAT:QUES:INT:OUTP:PTR 1</code> Oversweep set is reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

#### 9.4.6.16 Questionable Integrity Uncalibrated Register

Monitors conditions that occur because a measurement may not be able to return an accurate or valid result due to a mismatch between instrument settings and the signal, placing the instrument in an uncalibrated state for that signal. It summarizes them in bit 3 of the "Questionable Integrity Register" on page 3063.

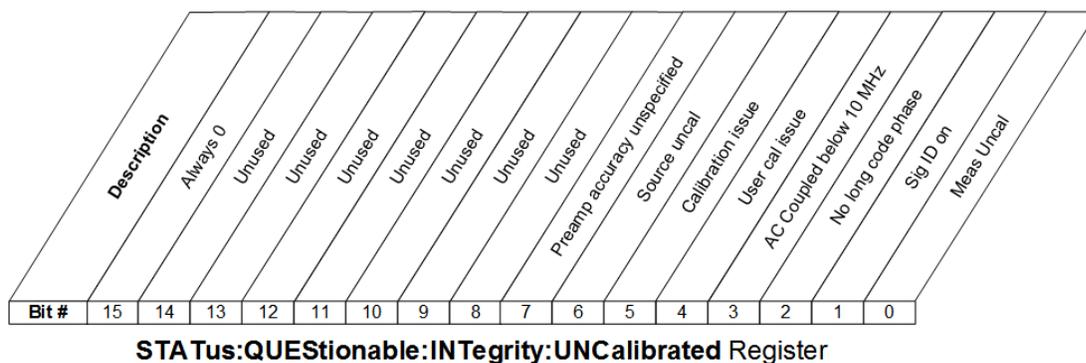

Bit	Condition	Operation
0	Meas Uncal	A Meas Uncal warning is being displayed; generally this means the sweep time must be reduced or the RBW increased
1	Signal ID on	In external mixing, the Sig ID function is on, which will impact the

Bit	Condition	Operation
		trace results
2	No Long Code Phase	The long code phase that identifies an access channel cannot be found (WCDMA)
3	AC coupled: Accy unspec'd <10 MHz	The instrument is AC coupled but is operating below 10 MHz, where the blocking capacitor will impact measurement accuracy
4	User cal issue	In noise figure measurements, the User Cal has not been performed or has been invalidated
5	Calibration issue	In noise figure measurements, one or more calibration or measurement frequency point exceeds the currently loaded Cal or Meas ENR Table frequency ranges
6	Source uncal	While using a Tracking Source, settings are putting it into an uncalibrated operational state
7	Preamp accuracy unspecified below XX MHz	The preamp is being used but is operating below frequencies for which its accuracy is specified

#### Filter Registers

- ["Questionable Integrity Uncalibrated Condition" on page 3074](#)
- ["Questionable Integrity Uncalibrated Enable" on page 3075](#)
- ["Questionable Integrity Uncalibrated Event Query" on page 3075](#)
- ["Questionable Integrity Uncalibrated Negative Transition" on page 3075](#)
- ["Questionable Integrity Uncalibrated Positive Transition" on page 3076](#)

### Questionable Integrity Uncalibrated Condition

Returns the decimal value of the sum of the bits in the Questionable Integrity Uncalibrated Condition register.

**NOTE**

The data in this register is continuously updated and reflects the current conditions.

Remote Command	<code>:STATus:QUESTionable:INTegrity:UNCalibrated:CONDition?</code>
Example	<code>:STAT:QUES:INT:UNC:COND?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Integrity Uncalibrated Enable

Determines which bits in the "Questionable Integrity Uncalibrated Condition" on page 3074 Register will set bits in the "Questionable Integrity Uncalibrated Event Query" on page 3075 register, which also sets the Data Uncalibrated Summary bit (bit 3) in the "Questionable Integrity Register" on page 3063.

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated:ENABle</code>
Example	<code>:STAT:QUES:INT:UNC:ENAB 1</code> Oversweep (Meas Uncal) is reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## Questionable Integrity Uncalibrated Event Query

Returns the decimal value of the sum of the bits in the "Questionable Integrity Uncalibrated Condition" on page 3074 register.

**NOTE**

The register requires that the associated PTRansition or NTRansition filters be set before a condition register bit can set a bit in the event register. The data in this register is latched until it is queried. Once queried, the register is cleared.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated[:EVENT]?</code>
Example	<code>:STAT:QUES:INT:UNC?</code>
Preset	0
Status Bits/OPC dependencies	Sequential command

## Questionable Integrity Uncalibrated Negative Transition

Determines which bits in the "Questionable Integrity Uncalibrated Condition" on page 3074 register will set the corresponding bit in the "Questionable Integrity

**Uncalibrated Event Query" on page 3075** register when the condition register bit has a negative transition (1 to 0).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated:NTRansition &lt;integer&gt;</code> <code>:STATus:QUESTionable:INTEgrity:UNCalibrated:NTRansition?</code>
Example	<code>:STAT:QUES:INT:UNC:NTR 1</code> Oversweep cleared is reported to the Integrity Summary of the Status Questionable register
Preset	0
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

### Questionable Integrity Uncalibrated Positive Transition

Determines which bits in the **"Questionable Integrity Uncalibrated Condition" on page 3074** register will set the corresponding bit in the **"Questionable Integrity Uncalibrated Event Query" on page 3075** register when the condition register bit has a positive transition (0 to 1).

The variable `<integer>` is the sum of the decimal values of the bits that you want to enable.

Remote Command	<code>:STATus:QUESTionable:INTEgrity:UNCalibrated:PTRansition &lt;integer&gt;</code> <code>:STATus:QUESTionable:INTEgrity:UNCalibrated:PTRansition?</code>
Example	<code>:STAT:QUES:INT:UNC:PTR 1</code> Oversweep set is reported to the Integrity Summary of the Status Questionable register
Preset	32767
Min	0
Max	32767
Status Bits/OPC dependencies	Sequential command

## 10 Hardware-Accelerated Fast Power Measurement (Remote Command Only)

The **Fast Power** option (FP2) enables very fast channel power measurements for instruments with the prerequisite hardware (DP2 and/or B40). It accomplishes this by performing real-time overlapped FFTs at the hardware layer, using software for basic post-processing before returning the result. The upshot of this approach is improved throughput for user applications that require many sequential power measurements.

The analysis bandwidth of FP2 may be limited by the licenses in the instrument.

NOTE

**FP2 is remote-only, which means the instrument does not switch to any particular Mode or measurement. FP2 commands can be sent while another application is in use on the front panel.**

---

Each Fast Power measurement can be predefined using an array index, and up to 1000 measurements can be stored. In the following documentation, instances of [1,2,...,999] can be substituted with a particular measurement index, for example, `:CALC:FPOW:POW1?`, `:CALC:FPOW:POW2?`, `:CALC:FPOW:POW134?`. In this way, power measurements can be defined one time in a batch, and then executed multiple times without having to redefine them, similar to “list mode” on other measurements.

In addition to basic channel power measurements, there are several other measurement “functions” for each channel, including peak power, peak frequency, and power spectral density.

## 10.1 Reset Fast Power Measurement (Remote Command Only)

Resets the measurement configuration to the defaults.

---

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:RESet</code>
----------------	---

---

Example	<code>:CALC:FPOW:POW1:RES</code>
---------	----------------------------------

---

Notes	Option FP2 is required
-------	------------------------

## 10.2 Reset Fast Power Measurement (Remote Command Only)

Resets the measurement configuration to the defaults.

Remote Command	<code>:CALCulate:FPOW:POW[1,2,...,999]:RESet</code>
Example	<code>:CALC:FPOW:POW1:RES</code>
Notes	Option FP2 is required

### 10.2.1 Acquisition Time

Example	<code>:CALC:FPOW:POW1:DEF "AcquisitionTime=0.002"</code>
Notes	Sets the time in which the entire spectrum is measured. An increase in the acquisition time yields an improvement in measurement repeatability
Preset	0.001 s
Range	0 s to 1 s

### 10.2.2 Center Frequency

Example	<code>:CALC:FPOW:POW1:DEF "CenterFrequency=2e9"</code>
Notes	Sets the frequency in which the measurement is centered around. <a href="#">"Channel Offset Frequency Array" on page 3087</a> is calculated relative to the center frequency
Preset	1 GHz
Range	0 Hz to maximum instrument frequency

### 10.2.3 DC Coupled

Example	<code>:CALC:FPOW:POW1:DEF "DCCoupled=True"</code>				
Notes	Lets you specify whether the DC blocking capacitor is utilized. Set to <code>True</code> when measuring frequencies below 10 MHz				
Preset	<code>False</code>				
Range	<table border="0"> <tr> <td><code>True</code></td> <td>DC Coupled</td> </tr> <tr> <td><code>False</code></td> <td>AC Coupled</td> </tr> </table>	<code>True</code>	DC Coupled	<code>False</code>	AC Coupled
<code>True</code>	DC Coupled				
<code>False</code>	AC Coupled				

## 10.2.4 Detector Type

Example	<code>:CALC:FPOW:POW1:DEF "DetectorType=Peak"</code>
Notes	Option FP2 is required Lets you specify whether an RMS average or peak value is used during the measurement
Preset	<code>RmsAverage</code>
Range	<code>RmsAverage, Peak</code>

## 10.2.5 Do Noise Correction

Example	<code>:CALC:FPOW:POW1:DEF "DoNoiseCorrection=True"</code>
Notes	When noise correction is enabled, the linear noise power contributed by the instrument is subtracted from all measurements. This effectively lowers the noise floor of the instrument  When noise correction is enabled, the first measurement for a given set of input parameters will take extra time. This is because the instrument takes an extra acquisition with the RF input disconnected from the instrument's front end to measure the noise of just the instrument. The measured noise floor is stored in a cache so the noise acquisition will occur only once for the same state settings. In other words, if noise correction was turned on and the instrument made an acquisition at frequency A, then frequency B, and back again to frequency A, the hidden initial noise floor acquisition would only occur for the first acquisition at frequency A and the cached noise floor would be used the second time frequency A was measured
Preset	<code>False</code>
Range	<code>True</code> Enable noise correction <code>False</code> Disable noise correction

## 10.2.6 Do Spur Suppression

Example	<code>:CALC:FPOW:POW1:DEF "DoSpurSuppression=True"</code>
Notes	When measuring very low-level signals, or when large out-of-band inputs are input into the instrument, sometimes unwanted spurs and residuals can appear in the measured spectrum. Spur suppression is a method to help minimize the levels of these internally generated spurs and residuals  When spur suppression is enabled, the instrument will automatically take two acquisitions using two different internal analog LO frequencies. The FFT spectrums from both acquisitions are combined by taking the minimum power between both traces on a per FFT bin basis. External signals will have the same amplitude for both traces and therefore will return the expected amplitudes. However, low level spurs and residuals generated internally to the instrument tend to move to different FFT bins depending on the internal analog LO frequency used, and therefore tend to be suppressed using this spur suppression method

	Because two acquisitions, rather than a single acquisition, are made when spur suppression is enabled, the measurement time will always be slower when spur suppression is enabled	
Preset	False	
Range	True	Enable spur suppression
	False	Disable spur suppression

### 10.2.7 Electronic Attenuator Bypass

Example	:CALC:FPOW:POW1:DEF "ElecAttBypass =False"	
Notes	Lets you either utilize or bypass the electronic attenuator. The electronic attenuator is only available for frequencies up to 3.6 GHz. Set to True when using frequencies above 3.6 GHz. Set to False when using the preamp	
Preset	True	
Range	True	Bypass electronic attenuator
	False	Use electronic attenuator

### 10.2.8 Electronic Attenuation

Example	:CALC:FPOW:POW1:DEF "ElecAttenuation=10"	
Notes	Option EA3 is required The electronic attenuation value parameter sets the amount of electrical attenuation from 0 to 24 dB (1 dB steps) Set <code>ElecAttBypass = False</code> to make sure the electronic attenuator path is enabled	
Preset	0 dB	
Range	0 – 24 dB (1 dB steps)	

### 10.2.9 External Reference Frequency

Example	:CALC:FPOW:POW1:DEF "ExternalReferenceFrequency=10"	
Notes	This is the user-specified frequency of the external reference. Used when "Frequency Reference Source" on page 3082 is set to <code>ExternalFrequencyReference</code> , or <code>AutoExternalFrequencyReference</code> when the external source is present. Unused if <code>FrequencyReferenceSource</code> is set to <code>InternalFrequencyReference</code>	
Preset	10 MHz	

## 10.2.10 Frequency Reference Source

Example	<code>:CALC:FPOW:POW1:DEF "FrequencyReferenceSource= InternalFrequencyReference"</code>
Notes	Specifies which frequency reference source should be used for this request: <ul style="list-style-type: none"><li>- If <code>ExternalFrequencyReference</code> is selected and no external reference is present, the frequency reference unlocks but the data acquisition will continue</li><li>- If <code>AutoExternalFrequencyReference</code> is selected, the hardware senses whether an external source is present before starting the data acquisition. If no external source is present then the internal source is selected, and the data acquisition will continue</li></ul>
Preset	<code>InternalFrequencyReference</code>
Range	<code>InternalFrequencyReference, ExternalFrequencyReference, AutoExternalFrequencyReference</code>

## 10.2.11 IF Gain

Example	<code>:CALC:FPOW:POW1:DEF "IFGain=10"</code>
Notes	Lets you specify the gain at the IF stage anywhere from -6 to 16 dB (1 dB steps). This is an advanced feature; for most cases this should remain at its default value of 0 dB
Preset	0 dB
Range	-6 – 16 dB (1 dB steps)

## 10.2.12 IF Type

Example	<code>:CALC:FPOW:POW1:DEF "IFType=B25M"</code>
Notes	Lets you select between different IF paths. For example, if the signal is less than 25 MHz wide, then you can select the B25M path to take advantage of additional filtering on this analog IF path
Preset	<code>B40M</code>
Range	<code>B10M, B25M, B40M</code>

## 10.2.13 Include Power Spectrum

Example	<code>:CALC:FPOW:POW1:DEF "IncludePowerSpectrum=True"</code>
Notes	Lets you read data on the entire spectrum for diagnostic purposes. It is not recommended for production use For details of the binary format of the response, see <a href="#">"Diagnostic Binary Read Fast Power Measurement (Remote Command Only)" on page 3095</a>

Preset	False	
Range	True	Returns both channel power and full power spectrum
	False	Returns only channel power

### 10.2.14 Mechanical Attenuation

Example	:CALC:FPOW:POW1:DEF "MechAttenuation=10"	
Notes	Sets the amount of mechanical attenuation anywhere from 0 to 70 dB (2 dB steps)	
Preset	0 dB	
Range	0 – 70 dB (2 dB steps)	

### 10.2.15 Preamp Mode

Example	:CALC:FPOW:POW1:DEF "PreAmpMode=Low"	
Notes	<p>The license for the appropriate preamp is required</p> <p>Specifies whether the preamps are being utilized. <b>Low</b> allows any preamps up to 3.6 GHz, and <b>Full</b> allows all licensed preamps. Set <b>ElecAttBypass = True</b> to utilize any preamps (see "<a href="#">Electronic Attenuator Bypass</a>" on page 3081)</p>	
Preset	Off	
Range	Off, Low, Full	

### 10.2.16 Resolution Bandwidth Mode

Example	:CALC:FPOW:POW1:DEF "PreAmpMode=Low"	
Notes	<p>Lets you specify whether the RBW filter is automatically or manually set. The <b>BestSpeed</b> value minimizes measurement time, while the <b>Narrowest</b> value minimizes RBW size (minimum of two FFT bins per RBW)</p> <p>To manually specify an RBW, set this parameter to <b>Explicit</b>, and set "<a href="#">Resolution Bandwidth</a>" on page 3084 to the desired value</p>	
Preset	BestSpeed	
Range	BestSpeed, Narrowest, Explicit	

### 10.2.17 Resolution Bandwidth

---

Example	<code>:CALC:FPOW:POW1:DEF "ResolutionBW=25e3"</code>
Notes	Sets the 3-dB bandwidth of the RBW filter. "Resolution Bandwidth Mode" on page 3083 must be set to <b>Explicit</b> to manually set the RBW
Preset	0 Hz

---

### 10.2.18 Trigger Delay

---

Example	<code>:CALC:FPOW:POW1:DEF "TriggerDelay=0.025"</code>
Notes	Sets the time after an external trigger is detected until the measurement is performed
Preset	0 s
Range	0 – 1 s

---

### 10.2.19 Trigger Level

---

Example	<code>:CALC:FPOW:POW1:DEF "TriggerLevel=2"</code>
Notes	Sets the voltage value at which an external trigger is detected
Preset	1.2 V
Range	-5 to 5 V

---

### 10.2.20 Trigger Slope

---

Example	<code>:CALC:FPOW:POW1:DEF "TriggerSlope=Negative"</code>
Notes	Specifies the direction of the edge trigger voltage for detection
Preset	<b>Positive</b>
Range	<b>Positive, Negative</b>

---

### 10.2.21 Trigger Source

---

Example	<code>:CALC:FPOW:POW1:DEF "TriggerSource=Ext1"</code>
Notes	Lets you select whether the measurement triggers freely, or is controlled by an external input Ext1 and Ext2 correspond to Trigger 1 In and Trigger 2 In, respectively
Preset	<b>Free</b>
Range	<b>Free, Ext1, Ext2</b>

---

### 10.2.22 Trigger Timeout

Example	<code>:CALC:FPOW:POW1:DEF "TriggerTimeout=0.1"</code>
Notes	Sets the time in which the instrument will wait for a trigger before automatically performing the measurement
Preset	1 s
Range	0 – 1 s

### 10.2.23 Signal Input

Example	<code>:CALC:FPOW:POW1:DEF "SignalInput=Fp50MHzCW"</code>
Notes	Lets you select between using the main RF input or the internal instrument reference CW signal of 50 MHz
Preset	<code>FpMainRf</code>
Range	<code>FpMainRf, Fp50MHzCW</code>

### 10.2.24 Use Preselector

Example	<code>:CALC:FPOW:POW1:DEF "UsePreSelector=True"</code>				
Notes	Lets you either utilize or bypass the front-end tunable filter at frequencies above 3.6 GHz. For frequencies below 3.6 GHz, the preselector is automatically bypassed, so you do not need to set this parameter to <code>False</code> in those cases				
Preset	<code>False</code>				
Range	<table border="0"> <tr> <td><code>True</code></td> <td>Use preselector above 3.6 GHz</td> </tr> <tr> <td><code>False</code></td> <td>Preselector bypassed</td> </tr> </table>	<code>True</code>	Use preselector above 3.6 GHz	<code>False</code>	Preselector bypassed
<code>True</code>	Use preselector above 3.6 GHz				
<code>False</code>	Preselector bypassed				

### 10.2.25 Channel Bandwidth Array

Example	<code>:CALC:FPOW:POW1:DEF "Bandwidth=[3.84e6, 5e6, 3.84e6]"</code>
Notes	Defines the bandwidth of each channel that will be measured All array parameters should have the same number of elements. Alternatively, if all the elements are the same value, a single number with no square brackets can be used to define the parameter
Preset	<code>[1e6]</code>
Range	0 to 40 MHz

## 10.2.26 Channel Filter Type Array

Example	<code>:CALC:FPOW:POW1:DEF "FilterType=[RRC, IBW, RRC]"</code>
Notes	Lets you select either an integration bandwidth (IBW) filter, or a root-raised-cosine (RRC) filter. The integration bandwidth filter weighs all frequencies within the bandwidth equally. The root-raised-cosine filter has an associated shape parameter, defined by the FilterAlpha parameter  All array parameters should have the same number of elements. Alternatively, if all the elements are the same value, a single value with no square brackets can be used to define the parameter
Preset	<code>[IBW]</code>
Range	<code>IBW, RRC</code>

## 10.2.27 Channel Filter Alpha Array

Example	<code>:CALC:FPOW:POW1:DEF "FilterAlpha=[0.5, 0.0, 0.5]"</code>
Notes	Lets you adjust the alpha value associated with the root-raised-cosine (RRC) filter type. Set <code>FilterType</code> to <code>RRC</code> to utilize this parameter  All array parameters should have the same number of elements. Alternatively, if all the elements are the same value, a single number with no square brackets can be used to define the parameter
Preset	<code>[0.22]</code>
Range	<code>0.0 - 1.0</code>

## 10.2.28 Channel Measurement Function Array

Example	<code>:CALC:FPOW:POW1:DEF "Function=[BandPower, PeakPower, BandPower]"</code>
Notes	Defines what measurement is being made for each individually-specified channel. For details, see <a href="#">"Parameter Options" on page 3086</a>  All array parameters should have the same number of elements  Alternatively, if all the elements are the same value, a single value with no square brackets can be used to define the parameter
Preset	<code>BandPower</code>
Range	<code>BandPower, BandDensity, PeakPower, PeakFrequency, XdBBandwidth, OccupiedBandwidth</code>

### Parameter Options

Option	Description	Unit
<code>BandPower</code>	Total power within the specified bandwidth of the	<code>dBm</code>

Option	Description	Unit
	channel	
<b>BandDensity</b>	Total power density within the specified bandwidth of the channel	dBm/Hz
<b>PeakPower</b>	The peak power value within the specified bandwidth of the channel	dBm
<b>PeakFrequency</b>	The frequency that corresponds to the peak power value within the specified bandwidth of the channel. This frequency is relative to the center frequency	Hz
<b>XdBBandwidth</b>	The half power (-3.01 dB) bandwidth of the highest amplitude signal that resides within the channel dB is configurable using " <a href="#">Channel x-dB Bandwidth Array</a> " on page 3088	Hz
<b>OccupiedBandwidth</b>	The bandwidth at which 99% of the total power resides within the channel Percentage is configurable using " <a href="#">Channel Occupied Bandwidth Percent Array</a> " on page 3087	Hz

### 10.2.29 Channel Offset Frequency Array

Example	<code>:CALC:FPOW:POW1:DEF "OffsetFrequency=[-5e6, 0, 5e6]"</code>
Notes	Defines the difference between the center frequency to the center frequency of each channel All array parameters should have the same number of elements
Preset	[0]
Range	0 to 20 MHz

### 10.2.30 Channel Occupied Bandwidth Percent Array

Example	<code>:CALC:FPOW:POW1:DEF "OccupiedBandwidthPercent =[0.95, 0.95, 0.95]"</code>
Notes	Only applies to channels whose " <a href="#">Channel Measurement Function Array</a> " on page 3086 is set to <b>OccupiedBandwidth</b> . The occupied bandwidth percent parameter specifies the percent of total power in these channels. The valid range for this parameter is 0.0 to 1.0, where 1.0 represents 100%. The default for this parameter is 0.99, which will return the bandwidth that contains 99% of the total channel power
Preset	[0.99]
Range	0 – 1.0

### 10.2.31 Channel x-dB Bandwidth Array

Example	<code>:CALC:FPOW:POW1:DEF " XdBBandwidth =[-6.02, -3.01, -1.0]"</code>
Notes	Only applies to channels whose "Channel Measurement Function Array" on page 3086 is set to <code>XdBBandwidth</code> . The X dB bandwidth parameter is used to specify the power relative to the peak channel power over which the bandwidth is calculated. The parameter value must be a negative number
Preset	<code>[-3.01]</code>
Range	-200 to 0 dB

## 10.3 Define Fast Power Measurement Query (Remote Command Only)

Retrieves a list of all defined parameters in an ASCII string format

The following is an example of returned results:

```
"DCCoupled=False,ElecAttBypass=True,ElecAttenuation=0,IFGain=0,MechAttenuation=0,PreAmpMode=Off,PreSelectorOffset=0,UsePreSelector=False,ExternalReferenceFrequency=10000000,FrequencyReferenceSource=AutoExternalFrequencyReference,IFType=B40M,LOMode=SLW,SignalInput=FpMainRf,AcquisitionTime=0.001,CenterFrequency=100000000,ResolutionBW=0,ResolutionBWMode=BestSpeed,DetectorType=RmsAverage,Bandwidth=[1000000],OffsetFrequency=[0],Function=[BandPower],FilterType=[IBW],FilterAlpha=[0.22],OccupiedBandwidthPercent=[0.99],XdBBandwidth=[3.01],DoNoiseCorrection=False,DoSpurSuppression=False,MeasurementMethod=HardwareFFT,IncludePowerSpectrum=False,TriggerDelay=0,TriggerLevel=1.2,TriggerSlope=Positive,TriggerSource=Free,TriggerTimeout=1,Trigger1Output=Off,Trigger1OutputPolarity=Positive,Trigger2Output=Off,Trigger2OutputPolarity=Positive"
```

Remote Command	:CALCulate:FPOWer:POWer[1,2,...,999]:DEFine?
Example	:CALC:FPOW:POW1:DEF?
Notes	Retrieves a list of all defined parameters in an ASCII format

## 10.4 Configure Fast Power Measurement (Remote Command Only)

Begins hardware setup and returns immediately, with no acquisition made. This can be used in parallel with other hardware operations to effectively hide the hardware setup time.

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:CONFigure</code>
Example	<code>:CALC:FPOW:POW1:CONF</code>
Notes	Option FP2 is required

## 10.5 Initiate Fast Power Measurement (Remote Command Only)

Begins an acquisition and returns immediately. The results of the measurement can be retrieved using `:FETCh`.

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:INITiate</code>
Example	<code>:CALC:FPOW:POW1:INIT</code>
Notes	Option FP2 is required

## 10.6 Fetch Fast Power Measurement (Remote Command Only)

Used to retrieve the results of an acquisition initiated by `:INIT`. The returned results are in *ASCII string* format. The string begins and ends with quotation marks.

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:FETCh?</code>
Example	<code>:CALC:FPOW:POW1:FETC?</code>
Notes	<p>Option FP2 is required</p> <p>Returns m comma-separated ASCII values, where m corresponds to the number of bandwidths defined</p> <ol style="list-style-type: none"><li>1. Declared function return in the 1st specified channel</li><li>2. Declared function return in the 2nd specified channel</li></ol> <p>...</p> <p>m. Declared function return in the last specified channel</p> <p>The <code>INIT</code> and <code>FETC?</code> command sequence has the same effect as a single <code>CALC:FPOW:POW[n]?</code> query. Units of the returned values depend on "<a href="#">Channel Measurement Function Array</a>" on page 3086 for each channel</p>

## 10.7 Execute Fast Power Measurement (Remote Command Only)

Shorthand for `:INIT` immediately followed by `:FETC?`. The returned results are in *ASCII string* format. The string begins and ends with quotation marks.

---

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]?</code>
Example	<code>:CALC:FPOW:POW1?</code>
Notes	Option FP2 is required For return format, see notes for <a href="#">"Fetch Fast Power Measurement (Remote Command Only)"</a> on page 3092

---

## 10.8 Binary Read Fast Power Measurement (Remote Command Only)

Shorthand for `:INIT` immediately followed by `:FETC?`. The returned results are in *binary format*.

---

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:READ?</code> <code>:CALCulate:FPOWer:POWer[1,2,...,999]:READ1?</code>
Example	<code>:CALC:FPOW:POW1:READ?</code> <code>:CALC:FPOW:POW1:READ1?</code>
Notes	Option FP2 is required Returns m 4-byte floating point binary values (Little-Endian), where m corresponds to the number of bandwidths defined

---

## 10.9 Diagnostic Binary Read Fast Power Measurement (Remote Command Only)

Shorthand for `:INIT` immediately followed by `:FETC?`. The returned results are in *binary format*. This command is used primarily for diagnostic purposes, to test for ADC overloads and to visibly inspect the spectrum.

Remote Command	<code>:CALCulate:FPOWer:POWer[1,2,...,999]:READ2?</code>
Example	<code>:CALC:FPOW:POW1:READ2?</code>
Notes	<p>Option FP2 is required</p> <p>Note that Spectrum data is only returned if <code>IncludePowerSpectrum</code> is set to <code>True</code> (see "<a href="#">Include Power Spectrum</a>" on page 3082). If <code>IncludePowerSpectrum</code> is <code>False</code>, the number of spectrum points is zero (0)</p> <p>Units of the returned values are dependent on the <code>Function</code> parameter per channel (e.g. dBm for <code>BandPower</code>, Hz for <code>PeakFrequency</code>)</p> <p>Returns binary data (Little-Endian) that contains information on m amount of channels, along with ADC over range and full spectrum data</p> <p>The following is the binary format of the response</p> <p><b>Bandwidth Return Value</b></p> <ol style="list-style-type: none"> <li>1. Number of channels specified, m [4-byte int]</li> <li>2. Declared function result for the 1st specified channel [4-byte float]</li> <li>3. Declared function result for the 2nd specified channel [4-byte float]</li> <li>...</li> <li>(m + 1). Declared function result for the last (mth) specified channel [4-byte float]</li> </ol> <p><b>ADC Over Range</b></p> <ol style="list-style-type: none"> <li>1. ADC over-range occurred (1: true, 0: false) [2 byte short]</li> </ol> <p><b>Spectrum Data</b></p> <ol style="list-style-type: none"> <li>1. Number of points in the spectrum data, k [4-byte int]</li> <li>2. Start frequency of spectrum data (Hz) [8-byte double]</li> <li>3. Step frequency of spectrum data (Hz) [8-byte double]</li> <li>4. FFT bin at 1st point (dBm) [4-byte float]</li> <li>5. FFT bin at 2nd point (dBm) [4-byte float]</li> <li>...</li> <li>(k + 3). FFT bin at last (kth) point (dBm) [4-byte float]</li> </ol>

